

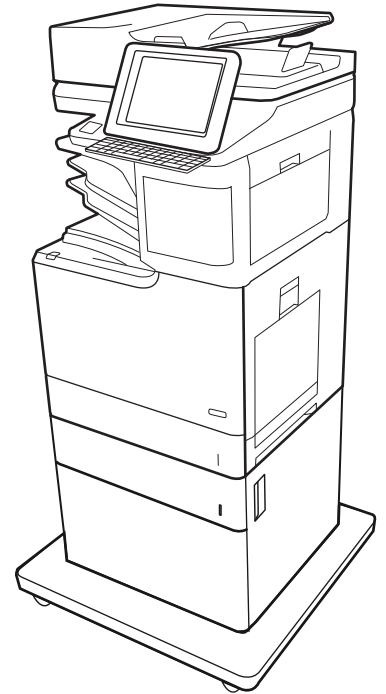
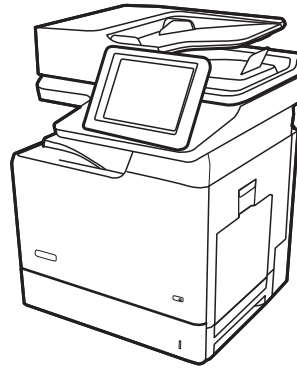


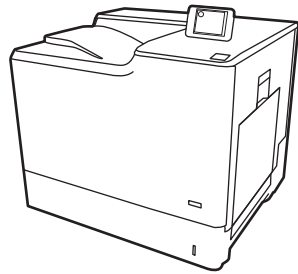

HP Color LaserJet Enterprise M652, M653  
HP Color LaserJet Managed E65050, E65060  
HP Color LaserJet Managed E65150, E65160  
HP Color LaserJet Enterprise MFP M681, M682  
HP Color LaserJet Managed MFP E67550, E67560  
HP Color LaserJet Managed MFP E67650, E67660

Service manual: Repair

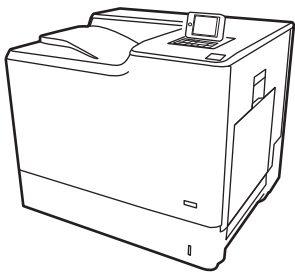

[www.hp.com/videos/LaserJet](http://www.hp.com/videos/LaserJet)  
[www.hp.com/support/colorlj652](http://www.hp.com/support/colorlj652)  
[www.hp.com/support/colorlj653](http://www.hp.com/support/colorlj653)  
[www.hp.com/support/ljE65050](http://www.hp.com/support/ljE65050)  
[www.hp.com/support/ljE65060](http://www.hp.com/support/ljE65060)  
[www.hp.com/support/colorljE65150](http://www.hp.com/support/colorljE65150)  
[www.hp.com/support/colorljE65160](http://www.hp.com/support/colorljE65160)

[www.hp.com/support/colorljM681MFP](http://www.hp.com/support/colorljM681MFP)  
[www.hp.com/support/colorljM682MFP](http://www.hp.com/support/colorljM682MFP)  
[www.hp.com/support/ljE67550MFP](http://www.hp.com/support/ljE67550MFP)  
[www.hp.com/support/ljE67560MFP](http://www.hp.com/support/ljE67560MFP)  
[www.hp.com/support/colorljE67650MFP](http://www.hp.com/support/colorljE67650MFP)  
[www.hp.com/support/colorljE67660MFP](http://www.hp.com/support/colorljE67660MFP)







HP Color LaserJet Enterprise M652, M653

HP Color LaserJet Managed E65050, E65060

HP Color LaserJet Managed E65150, E65160

HP Color LaserJet Enterprise MFP M681, M682

HP Color LaserJet Managed MFP E67550, E67560

HP Color LaserJet Managed MFP E67650, E67660

Service manual: Repair

## Copyright and License

© Copyright 2019 HP Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.


The information contained herein is subject to change without notice.


The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.


Edition 5, 10/2019

## Conventions used in this guide

---


 **TIP:** Helpful hints or shortcuts.

 **NOTE:** Information that explains a concept or how to complete a task.

 **Reinstallation tip:** Reinstallation helpful hints, shortcuts, or considerations.

 **IMPORTANT:** Information that help the user to avoid potential printer error conditions.

 **CAUTION:** Procedures that the user must follow to avoid losing data or damaging the printer.

 **WARNING!** Procedures that the user must follow to avoid personal injury, catastrophic loss of data, or extensive damage to the printer.

---



## HP service and support

Learn about HP access to additional service and support information.

### Additional service and support for channel partners

Channel partners, go to [partner.hp.com](https://partner.hp.com), and then use the steps below to access the HP Web-based Interactive Search Engine (WISE).

#### Access WISE for Channel partners

1. Select **Services & Support**, and then select **Services Delivery**.
2. Select **Technical Support**, and then select **Technical Documentation**.

### Find information about the following topics

- Service manuals
- Service advisories
- Up-to-date control panel message (CPMD) troubleshooting
- Install and configur
- Printer specification
- Solutions for printer issues and emerging issues
- Remove and replace part instructions and videos
- Warranty and regulatory information

### Additional service and support for HP internal personnel

HP internal personnel, go to one of the following Web-based Interactive Search Engine (WISE) sites:

#### Americas (AMS)

- <https://support.hp.com/wise/home/ams-en> WISE - English
- <https://support.hp.com/wise/home/ams-es> WISE - Spanish
- <https://support.hp.com/wise/home/ams-pt> WISE - Portuguese
- <https://support.hp.com/wise/home/ams-fr> WISE - French

#### Asia Pacific / Japan (APJ)

- <https://support.hp.com/wise/home/apj-en> WISE - English
- <https://support.hp.com/wise/home/apj-ja> WISE - Japanese
- <https://support.hp.com/wise/home/apj-ko> WISE - Korean
- <https://support.hp.com/wise/home/apj-zh-Hans> WISE - Chinese (Simplified)

- <https://support.hp.com/wise/home/apj-zh-HantWISE> - Chinese (traditional)
- <https://support.hp.com/wise/home/apj-thWISE> - Thai

**Europe / Middle East / Africa (EMEA)**

- <https://support.hp.com/wise/home/emea-enWISE> - English

---

# Table of contents

<b>1 Removal and replacement .....</b>	<b>1</b>
HP service and support .....	2
Additional service and support for channel partners .....	2
Additional service and support for HP internal personnel .....	2
Removal and replacement strategy .....	3
Introduction .....	3
Considerations during removal and replacement .....	3
Electrostatic discharge .....	4
Required tools .....	4
Fasteners used in this printer .....	5
Service approach .....	6
Before performing service .....	6
After performing service .....	6
Post service tests .....	6
Print quality test .....	6
Copy-quality test (M681/M682/E67550/E67560/E67650/E67660 models) .....	6
Fax-quality test (M681/M682/E67550/E67560/E67650/E67660 models) .....	7
Parts removal orientation .....	7
Removal and replacement procedures .....	8
Customer self-repair (CSR) A parts and assemblies .....	8
Install accessory: 1x550-sheet paper feeder .....	9
Introduction .....	9
Step 1: Unpack the accessory .....	9
Step 2: Install the 1x550-sheet paper feeder .....	10
Install accessory: 1x550-sheet paper feeder with stand .....	14
Introduction .....	14
Step 1: Unpack the accessory .....	14
Step 2: Install the 1x550-sheet paper feeder with stand .....	15
Install accessory: 3x550-sheet paper feeder with stand .....	19
Introduction .....	19
Step 1: Unpack the accessory .....	19
Step 2: Install the 3x550-sheet paper feeder with stand .....	20

Install accessory: 2,550-sheet paper feeder with stand .....	26
Introduction .....	26
Step 1: Unpack the accessory .....	26
Step 2: Install the 2,550-sheet paper feeder with stand .....	27
Install accessory: Jetdirect USB wireless print server .....	35
Introduction .....	35
Step 1: Unpack the accessory .....	35
Step 2: Install the Jetdirect USB wireless print server .....	35
Install accessory: Jetdirect USB wireless print server with NFC .....	42
Introduction .....	42
Step 1: Unpack the accessory .....	42
Step 2: Install the Jetdirect USB wireless print server with NFC .....	43
Install accessory: Trusted platform module (TPM) .....	48
Introduction .....	48
Step 1: Remove the formatter cover .....	49
Step 2: Remove the TPM .....	49
Step 3: Unpack the accessory .....	50
Step 4: Install the TPM .....	50
Step 5: Install the formatter cover .....	51
Install accessory: Internal USB ports .....	53
Introduction .....	53
Step 1: Remove the formatter cover .....	54
Step 2: Unpack the accessory .....	54
Step 3: Install the internal USB ports .....	54
Step 4: Install the formatter cover .....	57
Install accessory: Foreign interface harness (FIH) .....	58
Introduction .....	58
Step 1: Unpack the accessory .....	58
Step 2: Install the foreign interface harness (FIH) .....	58
Removal and replacement: Staple cartridge and carrier (Flow M681z/Flow M682z/ Flow E67660z) .....	60
Introduction .....	60
Step 1: Remove the staple cartridge and carrier .....	60
Step 2: Unpack the replacement assembly .....	62
Step 3: Install the staple cartridge .....	62
Removal and replacement: embedded MultiMedia Card (eMMC) .....	64
Introduction .....	64
Step 1: Remove the formatter cover .....	65
Step 2: Remove the embedded MultiMedia Card (eMMC) .....	65
Step 3: Unpack the replacement assembly .....	66
Step 4: Install the eMMC .....	66



Step 5: Install the formatter cover .....	67
Step 6: Reinstall the printer firmwar .....	68
Removal and replacement: Hard disk drive (HDD) .....	69
Introduction .....	69
Step 1: Remove the formatter cover .....	70
Step 2: Remove the hard disk drive (HDD; M653dh/M681/M682/ E67550/E67560/E67650/E67660) .....	70
Step 3: Unpack the replacement assembly .....	71
Step 4: Install the HDD .....	71
Step 5: Install the formatter cover .....	73
Step 6: Reinstall the printer firmwar .....	73
Removal and replacement: Dual in-line memory module (DIMM) .....	75
Introduction .....	75
Step 1: Remove the formatter cover .....	76
Step 2: Remove the hard disk drive (HDD; M653dh/M681/M682/ E67550/E67560/E67650/E67660) .....	76
Step 3: Remove the dual in-line memory module (DIMM) .....	77
Step 4: Unpack the replacement assembly .....	79
Step 5: Install the DIMM .....	79
Step 6: Install the HDD .....	80
Step 7: Install the formatter cover .....	82
Removal and replacement: Fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z) .....	83
Introduction .....	83
Step 1: Remove the formatter cover .....	84
Step 2: Remove the fax PCA .....	84
Step 3: Unpack the replacement assembly .....	85
Step 4: Install the fax PCA .....	86
Step 5: Install the formatter cover .....	86
Removal and replacement: Document feeder rollers .....	87
Introduction .....	87
Step 1: Remove the document feeder rollers .....	87
Step 2: Unpack the replacement assembly .....	90
Step 3: Install the document feeder rollers .....	91
Removal and replacement: Document feeder separation roller cover .....	95
Introduction .....	95
Step 1: Remove the document feeder separation roller cover .....	95
Step 2: Unpack the replacement assembly .....	97
Step 3: Install the document feeder separation roller cover .....	97
Removal and replacement: Secondary transfer roller .....	100
Introduction .....	100
Step 1: Remove the secondary transfer roller .....	100

Step 2: Unpack the replacement assembly .....	102
Step 3: Install the secondary transfer roller .....	102
Removal and replacement: Intermediate transfer belt (ITB) .....	105
Introduction .....	105
Step 1: Remove the intermediate transfer belt (ITB) .....	105
Step 2: Unpack the replacement assembly .....	108
Step 3: Install the ITB .....	108
Removal and replacement: Control panels (M652/M653/E65050/E65060/E65150/ E65160) .....	113
Introduction .....	113
Step 1: Remove the control panel .....	114
Step 2: Unpack the replacement assembly .....	116
Step 3: Install the control panel .....	117
Removal and replacement: Fuser .....	120
Introduction .....	120
Step 1: Remove the fuser .....	120
Step 2: Unpack the replacement assembly .....	121
Step 3: Install the fuser .....	122
Removal and replacement: White backing .....	124
Introduction .....	124
Step 1: Remove the white backing .....	124
Step 2: Unpack the replacement assembly .....	125
Step 3: Install the white backing .....	126
Removal and replacement: Toner cartridges .....	132
Introduction .....	132
Step 1: Remove a toner cartridge .....	133
Step 2: Unpack the replacement assembly .....	133
Step 3: Install a toner cartridge .....	134
Removal and replacement: Toner collection unit (TCU) .....	136
Introduction .....	136
Step 1: Remove the TCU .....	136
Step 2: Unpack the replacement assembly .....	138
Step 3: Install the TCU .....	138
Removal and replacement: Keyboard (Flow M681z/Flow M682z/Flow E67660z) .....	141
Introduction .....	141
Step 1: Remove the keyboard .....	142
Step 2: Unpack the replacement assembly .....	145
Step 3: Install the keyboard .....	145
Install: Keyboard overlay (Flow M681z/Flow M682z/Flow E67660z) .....	150
Introduction .....	150
Step 1: Unpack the keyboard overlay .....	151

Step 2: Install the keyboard overlay .....	151
Customer self-repair (CSR) B parts and assemblies .....	154
Removal and replacement: Control panel (M681/M682/E67550/E67560/E67650/ E67660) .....	155
Introduction .....	155
Step 1: Remove the control panel .....	155
Step 2: Unpack the replacement assembly .....	159
Step 3: Install the control panel .....	159
Removal and replacement: Trays 2 and 3 pickup and separation rollers .....	165
Introduction .....	165
Step 1: Remove the Tray 2 pickup rollers .....	166
Step 2: Remove the Tray 3 pickup rollers .....	169
Step 3: Remove the Tray 2 or 3 separation rollers .....	171
Step 4: Unpack the replacement assemblies .....	173
Step 5: Install the Tray 2 or 3 separation rollers .....	173
Step 6: Install the Tray 3 pickup rollers .....	174
Step 7: Install the Tray 2 pickup rollers .....	177
Removal and replacement: Trays 3–5 paper feeder stand pickup and separation rollers .....	180
Introduction .....	180
Step 1: Remove the Trays 3–5 paper feeder stand pickup and separation rollers .....	180
Step 2: Unpack the replacement assembly .....	188
Step 3: Install the Trays 3–5 paper feeder stand pickup and separation rollers .....	189
Field replaceable units (FRUs) .....	198
Removal and replacement: External panels, covers, and doors .....	198
Removal and replacement: Formatter cover .....	199
Removal and replacement: Face-down front cover (M681dn/M681/ M682dn/Flow M681f/E67650dh) .....	201
Removal and replacement: Top cover (M681dn/M681/M682dn/Flow M681f/E67650dh) .....	219
Removal and replacement: Right cover (M681dn/M681/M682dn/Flow M681f/E67650dh) .....	238
Removal and replacement: Front cover (M681dn/M681/M682dn/Flow M681f/E67650dh) .....	257
Removal and replacement: Face-down cover (M681dn/M681/M682dn/ Flow M681f/E67650dh) .....	276
Removal and replacement: Rear upper cover (M681dn/M681/M682dn/ Flow M681f/E67650dh) .....	297
Removal and replacement: Main cover (M681dn/M681/M682dn/Flow M681f/E67650dh) .....	300

Removal and replacement: Front door .....	321
Removal and replacement: Right door .....	327
Removal and replacement: Left door .....	332
Removal and replacement: Top cover (M652/M653/E65050/E65060/ E65150/E65160) .....	336
Removal and replacement: Left rear cover .....	343
Removal and replacement: Output bin .....	346
Removal and replacement: Rear cover .....	383
Removal and replacement: Right rear cover .....	387
Removal and replacement: Right handle .....	392
Removal and replacement: Left handle .....	398
Removal and replacement: Document feeder and image scanner assemblies (M681/M682/E67550/E67560/E67650/E67660) .....	404
Removal and replacement: Document feeder .....	405
Removal and replacement: Document feeder hinges .....	411
Removal and replacement: Image scanner assembly .....	418
Removal and replacement: Scanner control board .....	443
Removal and replacement: 3-bin stapler/stacker (Flow M681z/Flow M682z/Flow E67660z) .....	447
Removal and replacement: Stapler/stacker (Flow M681z/Flow M682z/ Flow E67660z) .....	448
Removal and replacement: Rear cover (3-bin stapler/stacker) .....	469
Removal and replacement: Right door (3-bin stapler/stacker) .....	472
Removal and replacement: Right upper cover (3-bin stapler/stacker) .....	476
Removal and replacement: Staple door (3-bin stapler/stacker) .....	478
Removal and replacement: Staple cover (3-bin stapler/stacker) .....	481
Removal and replacement: Stapler .....	485
Removal and replacement: Right front cover (3-bin stapler/stacker) .....	491
Removal and replacement: Rear inner cover (3-bin stapler/stacker) .....	496
Removal and replacement: Right corner cover (3-bin stapler/stacker) .....	500
Removal and replacement: Jogger cover (3-bin stapler/stacker) .....	504
Removal and replacement: Staple rear cover (3-bin stapler/stacker) .....	511
Removal and replacement: Right lower cover (3-bin stapler/stacker) .....	518
Removal and replacement: Staple door lock arm (3-bin stapler/stacker) ..	526
Removal and replacement: Tray assembly (3-bin stapler/stacker) .....	531
Removal and replacement: Tray pin (3-bin stapler/stacker) .....	535
Removal and replacement: Jogger (3-bin stapler/stacker) .....	539
Removal and replacement: Stacking wall cover (3-bin stapler/stacker) .....	549
Removal and replacement: Upper feed assembly (3-bin stapler/stacker) ..	562
Removal and replacement: Fan (3-bin stapler/stacker) .....	573
Removal and replacement: Lower feed assembly (3-bin stapler/stacker) ..	577

Removal and replacement: Solenoid assembly (3-bin stapler/stacker) .....	595
Removal and replacement: Microswitch (3-bin stapler/stacker) .....	609
Removal and replacement: Feed motor (3-bin stapler/stacker) .....	622
Removal and replacement: Controller PCA (3-bin stapler/stacker) .....	627
Removal and replacement: Internal parts and assemblies .....	631
Removal and replacement: Tray 1 pickup roller .....	633
Removal and replacement: Tray 1 separation roller .....	637
Removal and replacement: Formatter .....	642
Removal and replacement: Pre-exposure PCA assembly (black) .....	649
Removal and replacement: Pre-exposure PCA assembly (cyan, magenta, or yellow) .....	660
Removal and replacement: Power switch PCA .....	671
Removal and replacement: Left upper front and left upper rear fans .....	682
Removal and replacement: Toner carry assembly .....	726
Removal and replacement: Estrangement detect PCA .....	770
Removal and replacement: Environmental sensor PCA .....	811
Removal and replacement: Cartridge fan .....	818
Removal and replacement: Front fan .....	826
Removal and replacement: Power supply fan .....	836
Removal and replacement: DC controller PCA .....	842
Removal and replacement: Low-voltage power supply (LVPS) .....	847
Removal and replacement: Lower high-voltage power supply (HVPS) .....	854
Removal and replacement: Upper high-voltage power supply (HVPS) .....	861
Removal and replacement: Rear fan .....	907
Removal and replacement: Lifter drive assembly .....	955
Removal and replacement: Laser scanner .....	963
Removal and replacement: Drum motor 1 .....	969
Removal and replacement: Drum motor 2 .....	1016
Removal and replacement: Drum motor 3 .....	1027
Removal and replacement: Main drive assembly .....	1038
Removal and replacement: Fuser motor .....	1094
Removal and replacement: Fuser drive assembly .....	1106
Removal and replacement: Developer alienation motor .....	1159
Removal and replacement: Pickup motor .....	1165
Removal and replacement: Delivery assembly (M652/M653/E65050/ E65060/E65150/E65160) .....	1171
Removal and replacement: Delivery assembly (M681/M682/E67550/ E67560/E67650/E67660) .....	1187
Removal and replacement: Secondary transfer assembly .....	1224
Removal and replacement: Registration assembly .....	1229
Removal and replacement: Registration density sensor .....	1241

Removal and replacement: Feed roller assembly .....	1254
Removal and replacement: Pickup assembly .....	1277
Removal and replacement: Drawer connector and holder .....	1301
Removal and replacement: Trays .....	1309
Removal and replacement: Tray 2 and optional 550-sheet Trays 3–5 .....	1310
Removal and replacement: Tray 4 (2,500-sheet paper feeder with stand) .....	1313
Removal and replacement: Input accessories .....	1316
Removal and replacement: 550-sheet paper feeder .....	1317
Removal and replacement: 1x550-sheet paper feeder with stand .....	1392
Removal and replacement: 3x550-sheet paper feeder with stand .....	1470
Removal and replacement: 2,550-sheet paper feeder with stand .....	1563
<b>2 Parts and diagrams .....</b>	<b>1647</b>
Related documentation and software .....	1648
Order parts, accessories, and supplies .....	1649
Ordering .....	1649
Orderable parts .....	1649
Supplies and accessories .....	1649
Customer self-repair parts .....	1651
Related documentation and software .....	1652
Assembly locations .....	1653
Product front view (M681/M682/E67550/E67560/E67650/E67660 models) .....	1654
Product back view (M681/M682/E67550/E67560/E67650/E67660 models) .....	1656
Product front view (M681/M682/E67550/E67560/E67650/E67660 models) .....	1657
Product back view (M652/M653/E65050/E65060/E65150/E65160 models) .....	1658
How to use the parts lists and diagrams .....	1659
Parts and diagrams: Document feeder and scanner whole units .....	1660
Parts and diagrams: Covers .....	1662
Covers (M652/M653/E65050/E65060/E65150/E65160) .....	1662
Covers (M681/M682/E67550/E67560/E67650/E67660) .....	1664
Parts and diagrams: Internal components .....	1666
Internal components (1 of 6) .....	1666
Internal components (2 of 6) .....	1668
Internal components (3 of 6) .....	1670
Internal components (4 of 6) .....	1672
Internal components (5 of 6) .....	1674
Internal components (6 of 6) .....	1676
Parts and diagrams: Accessories .....	1678
Parts and diagrams: Input devices .....	1678
Parts and diagrams: 550-sheet paper feeder .....	1678

550-sheet paper feeder covers .....	1678
550-sheet paper feeder main body .....	1680
Parts and diagrams: 1x550-sheet feeder and stand .....	1682
1x550-sheet paper feeder covers .....	1682
1x550-sheet paper feeder main body .....	1684
Parts and diagrams: 3x550-sheet feeder and stand .....	1686
3x550-sheet paper feeder covers .....	1686
3x550-sheet paper feeder main body .....	1688
Parts and diagrams: HCI .....	1690
HCI covers .....	1690
HCI main body .....	1692
Parts and diagrams: Stapler/stacker assembly (M681/M682/E67550/E67560/E67650/E67660 models only) .....	1694
Parts and diagrams: 2-bin stapler/stacker with offse .....	1694
Stapler/stacker covers .....	1694
Stapler/stacker main body .....	1696
Alphabetical parts list .....	1698
Numerical parts list .....	1711
<b>Appendix A Revision history .....</b>	<b>1725</b>
Revision history .....	1726
<b>Index .....</b>	<b>1727</b>





---

# List of tables

Table 2-1	Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) .....	1661
Table 2-2	Covers (M652/M653/E65050/E65060/E65150/E65160) .....	1663
Table 2-3	Covers (M681/M682/E67550/E67560/E67650/E67660) .....	1665
Table 2-4	Internal components (1 of 6) .....	1667
Table 2-5	Internal components (2 of 6) .....	1669
Table 2-6	Internal components (3 of 6) .....	1671
Table 2-7	Internal components (4 of 6) .....	1673
Table 2-8	Internal components (5 of 6) .....	1675
Table 2-9	Internal components (6 of 6) .....	1677
Table 2-10	550-sheet paper feeder covers .....	1679
Table 2-11	550-sheet paper feeder main body .....	1681
Table 2-12	1x550-sheet paper feeder covers .....	1683
Table 2-13	1x550-sheet paper feeder main body .....	1685
Table 2-14	3x550-sheet paper feeder covers .....	1687
Table 2-15	3x550-sheet paper feeder main body .....	1689
Table 2-16	HCI covers .....	1691
Table 2-17	HCI main body .....	1693
Table 2-18	Stapler/stacker covers .....	1695
Table 2-19	Stapler/stacker main body .....	1697
Table A-1	Revision history .....	1726



---

# List of figure

Figure 1-1	Screwdrivers .....	5
Figure 1-2	Screw size chart .....	5
Figure 1-3	Unplug all of the cables .....	10
Figure 1-4	Place the printer on the paper feeder .....	10
Figure 1-5	Engage two locks .....	11
Figure 1-6	Open the paper guides .....	11
Figure 1-7	Load paper into the tray .....	12
Figure 1-8	Adjust the paper guides .....	12
Figure 1-9	Remove the paper tray number indicator .....	13
Figure 1-10	Install the paper tray .....	13
Figure 1-11	Unplug all of the cables .....	15
Figure 1-12	Place the printer on the paper feeder .....	15
Figure 1-13	Engage one lock .....	16
Figure 1-14	Remove the orange shipping lock .....	16
Figure 1-15	Open the paper guides .....	17
Figure 1-16	Load paper into the tray .....	17
Figure 1-17	Adjust the paper guides .....	18
Figure 1-18	Remove the paper tray number indicator .....	18
Figure 1-19	Install the paper tray .....	18
Figure 1-20	Unplug all of the cables .....	20
Figure 1-21	Place the printer on the paper feeder .....	20
Figure 1-22	Engage one lock .....	21
Figure 1-23	Remove the paper tray .....	21
Figure 1-24	Remove the orange shipping lock .....	22
Figure 1-25	Open the paper guides .....	22
Figure 1-26	Load paper into the tray .....	23
Figure 1-27	Adjust the paper guides .....	23
Figure 1-28	Remove the paper tray number indicator .....	23
Figure 1-29	Install the paper tray .....	24
Figure 1-30	Position the wheels .....	24
Figure 1-31	Install the caster covers .....	24
Figure 1-32	Lower the legs .....	25

Figure 1-33	Unplug all of the cables .....	27
Figure 1-34	Place the printer on the paper feeder .....	27
Figure 1-35	Engage one lock .....	28
Figure 1-36	Remove the orange shipping lock .....	28
Figure 1-37	Open the paper guides .....	29
Figure 1-38	Load paper into the tray .....	29
Figure 1-39	Adjust the paper guides .....	30
Figure 1-40	Remove the paper tray number indicator .....	30
Figure 1-41	Install the paper tray .....	31
Figure 1-42	Open the lower paper tray .....	31
Figure 1-43	Remove the shipping lock .....	32
Figure 1-44	Remove all of the packing material .....	32
Figure 1-45	Move the size-selector lever .....	32
Figure 1-46	Load paper into the tray .....	33
Figure 1-47	Close the paper tray .....	33
Figure 1-48	Lower the legs .....	34
Figure 1-49	Attach fastener strips .....	36
Figure 1-50	Attach the print server to the wall .....	37
Figure 1-51	Attach fastener strips .....	38
Figure 1-52	Attach the print server to the printer .....	38
Figure 1-53	Attach the USB cable to the print server .....	39
Figure 1-54	Attach the USB cable to the printer .....	39
Figure 1-55	Attach the USB and network cables to the print server .....	40
Figure 1-56	Attach the USB cable to the printer .....	41
Figure 1-57	Attach the Ethernet cable to the network .....	41
Figure 1-58	Connect the power cable .....	41
Figure 1-59	Locate the HIP .....	43
Figure 1-60	Remove the HIP cover .....	43
Figure 1-61	Connect the USB cable to the print server .....	44
Figure 1-62	Connect the USB cable to the printer .....	44
Figure 1-63	Install the clips .....	44
Figure 1-64	Install the print server .....	45
Figure 1-65	Connect the USB cable to the print server .....	45
Figure 1-66	Attach the accessory cover .....	46
Figure 1-67	Attach the print server to the printer .....	47
Figure 1-68	Remove the formatter cover .....	49
Figure 1-69	Remove the TPM .....	50
Figure 1-70	TPM location .....	50
Figure 1-71	Align the connectors .....	51
Figure 1-72	Install the TPM .....	51
Figure 1-73	Install the formatter cover .....	52

Figure 1-74	Remove the formatter cover .....	54
Figure 1-75	Select accessory kit items .....	55
Figure 1-76	Mount the PCA on the PCA mounting cradle and snap it in place .....	55
Figure 1-77	Connect the cable .....	56
Figure 1-78	Mount the assembly on the sheet metal hooks .....	56
Figure 1-79	Connect the cable .....	57
Figure 1-80	Install the formatter cover .....	57
Figure 1-81	Plug the FIH cable into the printer USB port .....	59
Figure 1-82	Release the staple cartridge refill .....	62
Figure 1-83	Install the staple cartridge refill .....	63
Figure 1-84	Remove the formatter cover .....	65
Figure 1-85	Remove the eMMC .....	65
Figure 1-86	Align the connectors .....	67
Figure 1-87	Install the eMMC .....	67
Figure 1-88	Install the formatter cover .....	68
Figure 1-89	Remove the formatter cover .....	70
Figure 1-90	Release the HDD .....	70
Figure 1-91	Remove the HDD .....	71
Figure 1-92	Locate the slot in the sheet metal .....	72
Figure 1-93	Install the HDD .....	72
Figure 1-94	Check the HDD connector .....	73
Figure 1-95	Install the formatter cover .....	73
Figure 1-96	Remove the formatter cover .....	76
Figure 1-97	Release the HDD .....	77
Figure 1-98	Remove the HDD .....	77
Figure 1-99	Locate the DIMM .....	78
Figure 1-100	Release two locking arms .....	78
Figure 1-101	Remove the DIMM .....	79
Figure 1-102	Insert the DIMM .....	80
Figure 1-103	Install the DIMM .....	80
Figure 1-104	Locate the slot in the sheet metal .....	81
Figure 1-105	Install the HDD .....	81
Figure 1-106	Check the HDD connector .....	82
Figure 1-107	Install the formatter cover .....	82
Figure 1-108	Remove the formatter cover .....	84
Figure 1-109	Locate the fax PCA .....	84
Figure 1-110	Remove the fax PCA .....	85
Figure 1-111	Install the fax PCA .....	86
Figure 1-112	Install the formatter cover .....	86
Figure 1-113	Open the document feeder cover .....	88
Figure 1-114	Rotate the blue locking lever down .....	88

Figure 1-115	Slide the locking lever toward the front .....	89
Figure 1-116	Remove the pick roller .....	89
Figure 1-117	Open the separation roller cover .....	90
Figure 1-118	Remove the separation roller cover .....	90
Figure 1-119	Install the separation roller .....	91
Figure 1-120	Close the roller cover .....	92
Figure 1-121	Install the pick roller .....	92
Figure 1-122	Slide the locking lever toward the back .....	93
Figure 1-123	Rotate the pick roller up and slide the blue locking lever towards the back .....	93
Figure 1-124	Rotate the blue locking lever up .....	94
Figure 1-125	Close the document feeder cover .....	94
Figure 1-126	Open the document feeder cover .....	96
Figure 1-127	Open the separation roller cover .....	96
Figure 1-128	Remove the separation roller .....	97
Figure 1-129	Install the separation roller cover .....	98
Figure 1-130	Close the roller cover .....	98
Figure 1-131	Close the document feeder cover .....	99
Figure 1-132	Open the right door .....	101
Figure 1-133	Lift the left edge .....	101
Figure 1-134	Remove the transfer roller .....	102
Figure 1-135	Insert the right end into the holder .....	103
Figure 1-136	Install the transfer roller .....	103
Figure 1-137	Close the right door .....	104
Figure 1-138	Open the right door .....	106
Figure 1-139	Lower the transfer assembly .....	106
Figure 1-140	Grasp the two blue handles .....	107
Figure 1-141	Pull the ITB partially out of the printer .....	107
Figure 1-142	Remove the ITB .....	108
Figure 1-143	Remove the protective fil .....	109
Figure 1-144	Remove all packing materials .....	109
Figure 1-145	Align the ITB .....	110
Figure 1-146	Remove the orange handles .....	110
Figure 1-147	Push the ITB into the printer .....	111
Figure 1-148	Make sure the ITB clicks into place .....	111
Figure 1-149	Close the right door .....	112
Figure 1-150	Tilt the control panel up .....	114
Figure 1-151	Remove the cover .....	114
Figure 1-152	Remove one thumbscrew .....	115
Figure 1-153	Release the control panel .....	115
Figure 1-154	Disconnect two connectors .....	116
Figure 1-155	Remove the control panel .....	116

Figure 1-156	Connect two connectors .....	117
Figure 1-157	Install the tabs .....	118
Figure 1-158	Install one thumbscrew .....	118
Figure 1-159	Install the cover .....	119
Figure 1-160	Open the right door .....	121
Figure 1-161	Remove the fuser .....	121
Figure 1-162	Install the fuser .....	122
Figure 1-163	Close the right door .....	123
Figure 1-164	Open the document feeder .....	125
Figure 1-165	Remove the white backing .....	125
Figure 1-166	Verify spring positions .....	126
Figure 1-167	Install seven clips .....	127
Figure 1-168	Press on each clip .....	127
Figure 1-169	Remove an adhesive square .....	128
Figure 1-170	Attach adhesive squares .....	128
Figure 1-171	Remove the protective fil .....	129
Figure 1-172	Position the white backing .....	129
Figure 1-173	Close the document feeder .....	130
Figure 1-174	Open the document feeder .....	130
Figure 1-175	Press on the white backing .....	131
Figure 1-176	Close the document feeder .....	131
Figure 1-177	Open the front door .....	133
Figure 1-178	Remove the toner cartridge .....	133
Figure 1-179	Rock the toner cartridge .....	134
Figure 1-180	Install the toner cartridge .....	135
Figure 1-181	Close the front door .....	135
Figure 1-182	Open the front door .....	137
Figure 1-183	Open the left door .....	137
Figure 1-184	Remove the TCU .....	138
Figure 1-185	Install the TCU .....	139
Figure 1-186	Close the left door .....	139
Figure 1-187	Close the front door .....	140
Figure 1-188	Tilt the control panel and open the document feeder .....	142
Figure 1-189	Release five tabs .....	142
Figure 1-190	Remove the cover .....	143
Figure 1-191	Disconnect the keyboard flat cable .....	143
Figure 1-192	Slide the keyboard tray out .....	144
Figure 1-193	Release two tabs .....	144
Figure 1-194	Remove the keyboard .....	145
Figure 1-195	Position the flat cable in the slot .....	146
Figure 1-196	Slide the keyboard tray into the slot .....	146

Figure 1-197	Check the keyboard fla cable .....	147
Figure 1-198	Connect the keyboard fla cable .....	147
Figure 1-199	Install the cover .....	148
Figure 1-200	Install fiv tabs .....	148
Figure 1-201	Close the document feeder .....	149
Figure 1-202	Slide the keyboard tray out .....	151
Figure 1-203	Remove the backing .....	151
Figure 1-204	Position the keyboard overlay .....	152
Figure 1-205	Apply the keyboard overlay .....	152
Figure 1-206	Apply the keyboard overlay .....	153
Figure 1-207	Tilt the control panel forward and open the document feeder .....	156
Figure 1-208	Release fiv tabs .....	156
Figure 1-209	Remove the cover .....	157
Figure 1-210	Disconnect the keyboard fla cable (keyboard models only) .....	157
Figure 1-211	Disconnect connectors .....	158
Figure 1-212	Remove three thumbscrews .....	158
Figure 1-213	Remove the control panel .....	159
Figure 1-214	Tilt the control panel .....	160
Figure 1-215	Install the control panel .....	160
Figure 1-216	Install three thumbscrews .....	161
Figure 1-217	Connect connectors .....	161
Figure 1-218	Check the keyboard fla cable (keyboard models only) .....	162
Figure 1-219	Connect the keyboard fla cable (keyboard models only) .....	162
Figure 1-220	Position the cover on the printer .....	163
Figure 1-221	Install fiv tabs .....	163
Figure 1-222	Close the document feeder .....	164
Figure 1-223	Remove Tray 2 .....	166
Figure 1-224	Open the right door .....	166
Figure 1-225	Raise the transfer roller assembly .....	167
Figure 1-226	Lower the outer paper guide .....	167
Figure 1-227	Lower the outer paper guide .....	168
Figure 1-228	Locate the pickup roller assembly .....	168
Figure 1-229	Remove the pickup roller assembly .....	169
Figure 1-230	Remove Tray 3 .....	169
Figure 1-231	Open the Tray 3 right door .....	170
Figure 1-232	Lower the assembly cover .....	170
Figure 1-233	Locate the pickup roller assembly .....	171
Figure 1-234	Remove the pickup roller assembly .....	171
Figure 1-235	Locate the tray separation roller .....	172
Figure 1-236	Release the roller assembly .....	172
Figure 1-237	Remove the roller assembly .....	173



Figure 1-238	Install the roller assembly .....	174
Figure 1-239	Make sure that the roller is seated .....	174
Figure 1-240	Do not remove the orange installation tray .....	175
Figure 1-241	Position the roller .....	175
Figure 1-242	Install the roller assembly .....	176
Figure 1-243	Remove the orange installation tray .....	176
Figure 1-244	Roller correct and incorrect installation .....	177
Figure 1-245	Do not remove the orange installation tray .....	177
Figure 1-246	Position the roller .....	178
Figure 1-247	Install the roller assembly .....	178
Figure 1-248	Remove the orange installation tray .....	179
Figure 1-249	Roller correct and incorrect installation .....	179
Figure 1-250	Open the paper tray .....	181
Figure 1-251	Open the high-capacity paper tray .....	181
Figure 1-252	Open the right door .....	182
Figure 1-253	Lower the feed assembly cover .....	182
Figure 1-254	Remove the tool from the packaging .....	183
Figure 1-255	Locate the separation roller .....	183
Figure 1-256	Install the orange tool .....	184
Figure 1-257	Slide the roller to the left .....	184
Figure 1-258	Remove the separation roller .....	185
Figure 1-259	Remove the orange tool .....	185
Figure 1-260	Locate the pickup and feed rollers .....	186
Figure 1-261	Unlock the pickup and feed rollers .....	186
Figure 1-262	Slide the blue tab left, compressing the left blue post until it clicks .....	187
Figure 1-263	Slightly move the rollers to the right to free them from the blue post .....	187
Figure 1-264	Remove the roller assembly .....	188
Figure 1-265	Lock the left post .....	188
Figure 1-266	White hook installation position .....	189
Figure 1-267	Align the roller assembly .....	190
Figure 1-268	Slide the rollers to the right onto the black shaft .....	190
Figure 1-269	Release the lever .....	191
Figure 1-270	Remove the orange tool .....	191
Figure 1-271	Pivot the tab up and snap it to lock the rollers correctly in place .....	192
Figure 1-272	Roller incorrect and correct installation .....	192
Figure 1-273	Install the orange tool .....	193
Figure 1-274	Position the roller .....	193
Figure 1-275	Check roller alignment .....	194
Figure 1-276	Slide the roller on the metal shaft .....	194
Figure 1-277	Remove the orange tool .....	195
Figure 1-278	Close the feed assembly cover .....	195

Figure 1-279	Close the right door .....	196
Figure 1-280	Close the paper tray .....	196
Figure 1-281	Close the high-capacity paper tray .....	197
Figure 1-282	Remove the formatter cover .....	200
Figure 1-283	Tilt the control panel and open the document feeder .....	202
Figure 1-284	Release five tabs .....	202
Figure 1-285	Remove the cover .....	203
Figure 1-286	Disconnect the keyboard flat cable .....	203
Figure 1-287	Slide the keyboard tray out .....	204
Figure 1-288	Release two tabs .....	204
Figure 1-289	Remove the keyboard .....	205
Figure 1-290	Tilt the control panel forward and open the document feeder .....	205
Figure 1-291	Release five tabs .....	206
Figure 1-292	Remove the cover .....	206
Figure 1-293	Disconnect the keyboard flat cable (keyboard models only) .....	207
Figure 1-294	Disconnect connectors .....	207
Figure 1-295	Remove three thumbscrews .....	208
Figure 1-296	Remove the control panel .....	208
Figure 1-297	Remove the SCB cover .....	209
Figure 1-298	Remove the small cover .....	209
Figure 1-299	Remove the stapler/stacker rear cover .....	210
Figure 1-300	Remove the upper rear cover .....	210
Figure 1-301	Remove the formatter cover .....	211
Figure 1-302	Cable routing for M681dh, M681f, Flow M681f, and E67650dh .....	211
Figure 1-303	Disconnect two connectors .....	212
Figure 1-304	Disconnect five connectors .....	212
Figure 1-305	Disconnect the wireless connector .....	213
Figure 1-306	Release the cables .....	213
Figure 1-307	Remove four screws .....	214
Figure 1-308	Remove three screws .....	214
Figure 1-309	Remove the document feeder and image scanner .....	215
Figure 1-310	Remove the wireless card .....	215
Figure 1-311	Connect the wireless card connector .....	216
Figure 1-312	Reinstall the wireless card .....	216
Figure 1-313	Install the SCB cables .....	217
Figure 1-314	Remove the face-down front cover .....	217
Figure 1-315	Install the cover .....	218
Figure 1-316	Tilt the control panel and open the document feeder .....	220
Figure 1-317	Release five tabs .....	220
Figure 1-318	Remove the cover .....	221
Figure 1-319	Disconnect the keyboard flat cable .....	221

Figure 1-320	Slide the keyboard tray out .....	222
Figure 1-321	Release two tabs .....	222
Figure 1-322	Remove the keyboard .....	223
Figure 1-323	Tilt the control panel forward and open the document feeder .....	223
Figure 1-324	Release five tabs .....	224
Figure 1-325	Remove the cover .....	224
Figure 1-326	Disconnect the keyboard flat cable (keyboard models only) .....	225
Figure 1-327	Disconnect connectors .....	225
Figure 1-328	Remove three thumbscrews .....	226
Figure 1-329	Remove the control panel .....	226
Figure 1-330	Remove the SCB cover .....	227
Figure 1-331	Remove the small cover .....	227
Figure 1-332	Remove the stapler/stacker rear cover .....	228
Figure 1-333	Remove the upper rear cover .....	228
Figure 1-334	Remove the formatter cover .....	229
Figure 1-335	Cable routing for M681dh, M681f, and Flow M681f .....	229
Figure 1-336	Disconnect two connectors .....	230
Figure 1-337	Disconnect five connectors .....	230
Figure 1-338	Disconnect the wireless connector .....	231
Figure 1-339	Release the cables .....	231
Figure 1-340	Remove four screws .....	232
Figure 1-341	Remove three screws .....	232
Figure 1-342	Remove the document feeder and image scanner .....	233
Figure 1-343	Remove the wireless card .....	233
Figure 1-344	Connect the wireless card connector .....	234
Figure 1-345	Reinstall the wireless card .....	234
Figure 1-346	Install the SCB cables .....	235
Figure 1-347	Remove the face-down front cover .....	235
Figure 1-348	Install the cover .....	236
Figure 1-349	Remove the top cover .....	236
Figure 1-350	Tilt the control panel and open the document feeder .....	239
Figure 1-351	Release five tabs .....	239
Figure 1-352	Remove the cover .....	240
Figure 1-353	Disconnect the keyboard flat cable .....	240
Figure 1-354	Slide the keyboard tray out .....	241
Figure 1-355	Release two tabs .....	241
Figure 1-356	Remove the keyboard .....	242
Figure 1-357	Tilt the control panel forward and open the document feeder .....	242
Figure 1-358	Release five tabs .....	243
Figure 1-359	Remove the cover .....	243
Figure 1-360	Disconnect the keyboard flat cable (keyboard models only) .....	244

Figure 1-361	Disconnect connectors .....	244
Figure 1-362	Remove three thumbscrews .....	245
Figure 1-363	Remove the control panel .....	245
Figure 1-364	Remove the SCB cover .....	246
Figure 1-365	Remove the small cover .....	246
Figure 1-366	Remove the stapler/stacker rear cover .....	247
Figure 1-367	Remove the upper rear cover .....	247
Figure 1-368	Remove the formatter cover .....	248
Figure 1-369	Cable routing for M681 dh, M681f, and Flow M681f .....	248
Figure 1-370	Disconnect two connectors .....	249
Figure 1-371	Disconnect five connectors .....	249
Figure 1-372	Disconnect the wireless connector .....	250
Figure 1-373	Release the cables .....	250
Figure 1-374	Remove four screws .....	251
Figure 1-375	Remove three screws .....	251
Figure 1-376	Remove the document feeder and image scanner .....	252
Figure 1-377	Remove the wireless card .....	252
Figure 1-378	Connect the wireless card connector .....	253
Figure 1-379	Reinstall the wireless card .....	253
Figure 1-380	Install the SCB cables .....	254
Figure 1-381	Remove the face-down front cover .....	254
Figure 1-382	Install the cover .....	255
Figure 1-383	Remove the right cover .....	255
Figure 1-384	Tilt the control panel and open the document feeder .....	258
Figure 1-385	Release five tabs .....	258
Figure 1-386	Remove the cover .....	259
Figure 1-387	Disconnect the keyboard flat cable .....	259
Figure 1-388	Slide the keyboard tray out .....	260
Figure 1-389	Release two tabs .....	260
Figure 1-390	Remove the keyboard .....	261
Figure 1-391	Tilt the control panel forward and open the document feeder .....	261
Figure 1-392	Release five tabs .....	262
Figure 1-393	Remove the cover .....	262
Figure 1-394	Disconnect the keyboard flat cable (keyboard models only) .....	263
Figure 1-395	Disconnect connectors .....	263
Figure 1-396	Remove three thumbscrews .....	264
Figure 1-397	Remove the control panel .....	264
Figure 1-398	Remove the SCB cover .....	265
Figure 1-399	Remove the small cover .....	265
Figure 1-400	Remove the stapler/stacker rear cover .....	266
Figure 1-401	Remove the upper rear cover .....	266

Figure 1-402	Remove the formatter cover .....	267
Figure 1-403	Cable routing for M681dh, M681f, and Flow M681f .....	267
Figure 1-404	Disconnect two connectors .....	268
Figure 1-405	Disconnect five connectors .....	268
Figure 1-406	Disconnect the wireless connector .....	269
Figure 1-407	Release the cables .....	269
Figure 1-408	Remove four screws .....	270
Figure 1-409	Remove three screws .....	270
Figure 1-410	Remove the document feeder and image scanner .....	271
Figure 1-411	Remove the wireless card .....	271
Figure 1-412	Connect the wireless card connector .....	272
Figure 1-413	Reinstall the wireless card .....	272
Figure 1-414	Install the SCB cables .....	273
Figure 1-415	Remove the face-down front cover .....	273
Figure 1-416	Install the cover .....	274
Figure 1-417	Remove the top cover .....	274
Figure 1-418	Remove the front cover .....	275
Figure 1-419	Tilt the control panel and open the document feeder .....	277
Figure 1-420	Release five tabs .....	278
Figure 1-421	Remove the cover .....	278
Figure 1-422	Disconnect the keyboard flat cable .....	279
Figure 1-423	Slide the keyboard tray out .....	279
Figure 1-424	Release two tabs .....	280
Figure 1-425	Remove the keyboard .....	280
Figure 1-426	Tilt the control panel forward and open the document feeder .....	281
Figure 1-427	Release five tabs .....	281
Figure 1-428	Remove the cover .....	282
Figure 1-429	Disconnect the keyboard flat cable (keyboard models only) .....	282
Figure 1-430	Disconnect connectors .....	283
Figure 1-431	Remove three thumbscrews .....	283
Figure 1-432	Remove the control panel .....	284
Figure 1-433	Remove the SCB cover .....	284
Figure 1-434	Remove the small cover .....	285
Figure 1-435	Remove the stapler/stacker rear cover .....	285
Figure 1-436	Remove the upper rear cover .....	286
Figure 1-437	Remove the formatter cover .....	286
Figure 1-438	Cable routing for M681dh, M681f, and Flow M681f .....	287
Figure 1-439	Disconnect two connectors .....	287
Figure 1-440	Disconnect five connectors .....	288
Figure 1-441	Disconnect the wireless connector .....	288
Figure 1-442	Release the cables .....	289

Figure 1-443	Remove four screws .....	289
Figure 1-444	Remove three screws .....	290
Figure 1-445	Remove the document feeder and image scanner .....	290
Figure 1-446	Remove the wireless card .....	291
Figure 1-447	Connect the wireless card connector .....	291
Figure 1-448	Reinstall the wireless card .....	292
Figure 1-449	Install the SCB cables .....	292
Figure 1-450	Remove the formatter cover .....	293
Figure 1-451	Remove the face-down front cover .....	293
Figure 1-452	Install the cover .....	294
Figure 1-453	Remove the top cover .....	294
Figure 1-454	Remove the right cover .....	295
Figure 1-455	Remove the front cover .....	295
Figure 1-456	Remove two screws and the face-down cover .....	296
Figure 1-457	Remove two screws .....	298
Figure 1-458	Remove the image scanner back cover .....	298
Figure 1-459	Remove the rear upper cover .....	299
Figure 1-460	Tilt the control panel and open the document feeder .....	301
Figure 1-461	Release five tabs .....	302
Figure 1-462	Remove the cover .....	302
Figure 1-463	Disconnect the keyboard flat cable .....	303
Figure 1-464	Slide the keyboard tray out .....	303
Figure 1-465	Release two tabs .....	304
Figure 1-466	Remove the keyboard .....	304
Figure 1-467	Tilt the control panel forward and open the document feeder .....	305
Figure 1-468	Release five tabs .....	305
Figure 1-469	Remove the cover .....	306
Figure 1-470	Disconnect the keyboard flat cable (keyboard models only) .....	306
Figure 1-471	Disconnect connectors .....	307
Figure 1-472	Remove three thumbscrews .....	307
Figure 1-473	Remove the control panel .....	308
Figure 1-474	Remove the SCB cover .....	308
Figure 1-475	Remove the small cover .....	309
Figure 1-476	Remove the stapler/stacker rear cover .....	309
Figure 1-477	Remove the upper rear cover .....	310
Figure 1-478	Remove the formatter cover .....	310
Figure 1-479	Cable routing for M681dh, M681f, and Flow M681f .....	311
Figure 1-480	Disconnect two connectors .....	311
Figure 1-481	Disconnect five connectors .....	312
Figure 1-482	Disconnect the wireless connector .....	312
Figure 1-483	Release the cables .....	313

Figure 1-484	Remove four screws .....	313
Figure 1-485	Remove three screws .....	314
Figure 1-486	Remove the document feeder and image scanner .....	314
Figure 1-487	Remove the wireless card .....	315
Figure 1-488	Connect the wireless card connector .....	315
Figure 1-489	Reinstall the wireless card .....	316
Figure 1-490	Install the SCB cables .....	316
Figure 1-491	Remove the top cover .....	317
Figure 1-492	Remove the right cover .....	317
Figure 1-493	Remove the front cover .....	318
Figure 1-494	Remove the rear upper cover .....	318
Figure 1-495	Remove two screws and the face-down cover .....	319
Figure 1-496	Remove two screws and release one tab .....	319
Figure 1-497	Remove one screw and the main cover .....	320
Figure 1-498	Release the link arm .....	322
Figure 1-499	Slide the released link arm into the door .....	322
Figure 1-500	Remove the inner cover .....	323
Figure 1-501	Release the hinge .....	323
Figure 1-502	Remove the front door .....	324
Figure 1-503	Reinstall the link arm .....	324
Figure 1-504	Install the right hinge .....	325
Figure 1-505	Install the left hinge .....	325
Figure 1-506	Open the right door .....	328
Figure 1-507	Remove the connector cover .....	328
Figure 1-508	Disconnect two connectors .....	329
Figure 1-509	Remove two screws and release the left link arm .....	329
Figure 1-510	Release the right door strap .....	330
Figure 1-511	Remove the right door .....	330
Figure 1-512	Open the front door .....	333
Figure 1-513	Open the left door .....	333
Figure 1-514	Remove the TCU .....	334
Figure 1-515	Open front door .....	334
Figure 1-516	Remove the left door .....	335
Figure 1-517	Remove the formatter cover .....	337
Figure 1-518	Tilt the control panel up .....	337
Figure 1-519	Remove the cover .....	338
Figure 1-520	Remove one thumbscrew .....	338
Figure 1-521	Release the control panel .....	339
Figure 1-522	Disconnect two connectors .....	339
Figure 1-523	Remove the control panel .....	340
Figure 1-524	Remove the NFC cover .....	340

Figure 1-525	Remove one screw and release one tab .....	341
Figure 1-526	Release two tabs .....	341
Figure 1-527	Remove the top cover .....	342
Figure 1-528	Remove the formatter cover .....	344
Figure 1-529	Remove the left rear cover .....	344
Figure 1-530	Install the left rear cover .....	345
Figure 1-531	Remove the formatter cover .....	347
Figure 1-532	Tilt the control panel and open the document feeder .....	348
Figure 1-533	Release five tabs .....	348
Figure 1-534	Remove the cover .....	349
Figure 1-535	Disconnect the keyboard flat cable .....	349
Figure 1-536	Slide the keyboard tray out .....	350
Figure 1-537	Release two tabs .....	350
Figure 1-538	Remove the keyboard .....	351
Figure 1-539	Tilt the control panel forward and open the document feeder .....	351
Figure 1-540	Release five tabs .....	352
Figure 1-541	Remove the cover .....	352
Figure 1-542	Disconnect the keyboard flat cable (keyboard models only) .....	353
Figure 1-543	Disconnect connectors .....	353
Figure 1-544	Remove three thumbscrews .....	354
Figure 1-545	Remove the control panel .....	354
Figure 1-546	Remove the SCB cover .....	355
Figure 1-547	Remove the small cover .....	355
Figure 1-548	Remove the stapler/stacker rear cover .....	356
Figure 1-549	Remove the upper rear cover .....	356
Figure 1-550	Remove the formatter cover .....	357
Figure 1-551	Cable routing for M681dh, M681f, and Flow M681f .....	357
Figure 1-552	Disconnect two connectors .....	358
Figure 1-553	Disconnect five connectors .....	358
Figure 1-554	Disconnect the wireless connector .....	359
Figure 1-555	Release the cables .....	359
Figure 1-556	Remove four screws .....	360
Figure 1-557	Remove three screws .....	360
Figure 1-558	Remove the document feeder and image scanner .....	361
Figure 1-559	Remove the wireless card .....	361
Figure 1-560	Connect the wireless card connector .....	362
Figure 1-561	Reinstall the wireless card .....	362
Figure 1-562	Install the SCB cables .....	363
Figure 1-563	Open the front door .....	363
Figure 1-564	Open the stapler door .....	364
Figure 1-565	Remove the staple cartridge .....	364



Figure 1-566	Remove one screw .....	365
Figure 1-567	Remove the stapler cover .....	365
Figure 1-568	Remove one screw .....	366
Figure 1-569	Remove the stapler/stacker right upper cover .....	366
Figure 1-570	Remove the stapler rear cover .....	367
Figure 1-571	Remove the stapler/stacker rear corner cover .....	367
Figure 1-572	Remove two screws .....	368
Figure 1-573	Remove the cable guide .....	368
Figure 1-574	Disconnect one connector .....	369
Figure 1-575	Remove two screws .....	369
Figure 1-576	Remove the stapler/stacker .....	370
Figure 1-577	Remove the face-down front cover .....	370
Figure 1-578	Install the cover .....	371
Figure 1-579	Remove the top cover .....	372
Figure 1-580	Remove the right cover .....	372
Figure 1-581	Remove the front cover .....	373
Figure 1-582	Remove the rear upper cover .....	374
Figure 1-583	Remove two screws and the face-down cover .....	374
Figure 1-584	Remove two screws and release one tab .....	375
Figure 1-585	Remove one screw and the main cover .....	375
Figure 1-586	Tilt the control panel up .....	376
Figure 1-587	Remove the cover .....	376
Figure 1-588	Remove one thumbscrew .....	377
Figure 1-589	Release the control panel .....	377
Figure 1-590	Disconnect two connectors .....	378
Figure 1-591	Remove the control panel .....	378
Figure 1-592	Remove the NFC cover .....	379
Figure 1-593	Remove one screw and release one tab .....	379
Figure 1-594	Release two tabs .....	380
Figure 1-595	Remove the top cover .....	380
Figure 1-596	Remove the output bin .....	381
Figure 1-597	Remove the formatter cover .....	384
Figure 1-598	Remove the left rear cover .....	384
Figure 1-599	Install the left rear cover .....	385
Figure 1-600	Remove two screws and the rear cover .....	385
Figure 1-601	Remove the formatter cover .....	388
Figure 1-602	Remove the left rear cover .....	388
Figure 1-603	Install the left rear cover .....	389
Figure 1-604	Remove two screws and the rear cover .....	390
Figure 1-605	Remove one screw and the right rear cover .....	390
Figure 1-606	Remove the formatter cover .....	393

Figure 1-607	Remove the left rear cover .....	393
Figure 1-608	Install the left rear cover .....	394
Figure 1-609	Remove two screws and the rear cover .....	395
Figure 1-610	Remove one screw and the right rear cover .....	395
Figure 1-611	Remove the right handle .....	396
Figure 1-612	Install the right handle .....	396
Figure 1-613	Open the front door .....	399
Figure 1-614	Open the left door .....	399
Figure 1-615	Remove the TCU .....	400
Figure 1-616	Remove the left rear cover .....	400
Figure 1-617	Install the left rear cover .....	401
Figure 1-618	Open front door .....	401
Figure 1-619	Remove the left door .....	402
Figure 1-620	Remove the left handle .....	402
Figure 1-621	Install the left handle .....	403
Figure 1-622	Remove the scanner rear cover .....	406
Figure 1-623	Disconnect three connectors .....	406
Figure 1-624	Remove three screws .....	407
Figure 1-625	Open the document feeder .....	407
Figure 1-626	Tilt and lift the document feeder .....	408
Figure 1-627	Release two tabs .....	408
Figure 1-628	Remove the document feeder .....	409
Figure 1-629	Clean the scanner glass .....	409
Figure 1-630	Remove the scanner rear cover .....	412
Figure 1-631	Disconnect three connectors .....	412
Figure 1-632	Remove three screws .....	413
Figure 1-633	Open the document feeder .....	413
Figure 1-634	Tilt and lift the document feeder .....	414
Figure 1-635	Release two tabs .....	414
Figure 1-636	Remove the document feeder .....	415
Figure 1-637	Clean the scanner glass .....	415
Figure 1-638	Remove eight screws .....	416
Figure 1-639	Note the hinge difference .....	416
Figure 1-640	Remove the scanner rear cover .....	419
Figure 1-641	Disconnect three connectors .....	419
Figure 1-642	Remove three screws .....	420
Figure 1-643	Open the document feeder .....	420
Figure 1-644	Tilt and lift the document feeder .....	421
Figure 1-645	Release two tabs .....	421
Figure 1-646	Remove the document feeder .....	422
Figure 1-647	Clean the scanner glass .....	422

Figure 1-648	Tilt the control panel and open the document feeder .....	423
Figure 1-649	Release five tabs .....	423
Figure 1-650	Remove the cover .....	424
Figure 1-651	Disconnect the keyboard flat cable .....	424
Figure 1-652	Slide the keyboard tray out .....	425
Figure 1-653	Release two tabs .....	425
Figure 1-654	Remove the keyboard .....	426
Figure 1-655	Tilt the control panel forward and open the document feeder .....	426
Figure 1-656	Release five tabs .....	427
Figure 1-657	Remove the cover .....	427
Figure 1-658	Disconnect the keyboard flat cable (keyboard models only) .....	428
Figure 1-659	Disconnect connectors .....	428
Figure 1-660	Remove three thumbscrews .....	429
Figure 1-661	Remove the control panel .....	429
Figure 1-662	Remove the small cover .....	430
Figure 1-663	Remove three screws .....	430
Figure 1-664	Remove the stapler/stacker rear cover .....	431
Figure 1-665	Remove the upper rear cover .....	431
Figure 1-666	Remove the formatter cover .....	432
Figure 1-667	Cable routing for M681dh/M681f/Flow M681f/E67650dh .....	432
Figure 1-668	Disconnect six connectors .....	433
Figure 1-669	Remove one screw and disconnect connectors .....	433
Figure 1-670	Disconnect one connector .....	434
Figure 1-671	Remove the SCB .....	434
Figure 1-672	Disconnect the wireless connector .....	435
Figure 1-673	Release the SCB cables .....	435
Figure 1-674	Thread the cables .....	436
Figure 1-675	Release the formatter cables .....	436
Figure 1-676	Remove four screws .....	437
Figure 1-677	Remove three screws .....	437
Figure 1-678	Remove the image scanner assembly .....	438
Figure 1-679	Position the flat cable .....	438
Figure 1-680	Remove the wireless card .....	439
Figure 1-681	Thread the wireless cable .....	439
Figure 1-682	Connect the wireless card connector .....	440
Figure 1-683	Reinstall the wireless card .....	440
Figure 1-684	Position the flat cable .....	441
Figure 1-685	Clean the scanner glass .....	441
Figure 1-686	Remove two screws .....	444
Figure 1-687	Remove the image scanner back cover .....	444
Figure 1-688	Disconnect connectors and remove two screws .....	445

Figure 1-689	Remove the SCB .....	445
Figure 1-690	Check the cables when installing the SCB .....	446
Figure 1-691	Tilt the control panel forward and open the document feeder .....	449
Figure 1-692	Release five tabs .....	449
Figure 1-693	Remove the cover .....	450
Figure 1-694	Disconnect the keyboard flat cable (keyboard models only) .....	450
Figure 1-695	Disconnect connectors .....	451
Figure 1-696	Remove three thumbscrews .....	451
Figure 1-697	Remove the control panel .....	452
Figure 1-698	Remove the SCB cover .....	452
Figure 1-699	Remove the small cover .....	453
Figure 1-700	Remove the stapler/stacker rear cover .....	453
Figure 1-701	Remove the upper rear cover .....	454
Figure 1-702	Remove the formatter cover .....	454
Figure 1-703	Cable routing for M681dh, M681f, and Flow M681f .....	455
Figure 1-704	Disconnect two connectors .....	455
Figure 1-705	Disconnect five connectors .....	456
Figure 1-706	Disconnect the wireless connector .....	456
Figure 1-707	Release the cables .....	457
Figure 1-708	Remove four screws .....	457
Figure 1-709	Remove three screws .....	458
Figure 1-710	Remove the document feeder and image scanner .....	458
Figure 1-711	Remove the wireless card .....	459
Figure 1-712	Connect the wireless card connector .....	459
Figure 1-713	Reinstall the wireless card .....	460
Figure 1-714	Install the SCB cables .....	460
Figure 1-715	Open the front door .....	461
Figure 1-716	Open the stapler door .....	461
Figure 1-717	Remove the staple cartridge .....	462
Figure 1-718	Remove one screw .....	462
Figure 1-719	Remove the stapler cover .....	463
Figure 1-720	Remove one screw .....	463
Figure 1-721	Remove the stapler/stacker right upper cover .....	464
Figure 1-722	Remove the stapler rear cover .....	464
Figure 1-723	Remove the stapler/stacker rear corner cover .....	465
Figure 1-724	Remove two screws .....	465
Figure 1-725	Remove the cable guide .....	466
Figure 1-726	Disconnect one connector .....	466
Figure 1-727	Remove two screws .....	467
Figure 1-728	Remove the stapler/stacker .....	467
Figure 1-729	Remove two screws .....	470

Figure 1-730	Remove one screw cover .....	470
Figure 1-731	Remove three screws and the rear cover .....	471
Figure 1-732	Raise the feed guide .....	473
Figure 1-733	Remove the left bracket .....	473
Figure 1-734	Remove the right bracket .....	474
Figure 1-735	Remove the right door .....	474
Figure 1-736	Remove the right upper cover .....	477
Figure 1-737	Open the stapler door .....	479
Figure 1-738	Remove the stapler door .....	479
Figure 1-739	Open the front door .....	482
Figure 1-740	Open the stapler door .....	482
Figure 1-741	Remove one screw .....	483
Figure 1-742	Remove the stapler cover. ....	483
Figure 1-743	Position the tab .....	484
Figure 1-744	Release the staple cartridge refil .....	487
Figure 1-745	Open the front door .....	487
Figure 1-746	Open the stapler door .....	488
Figure 1-747	Remove one screw .....	488
Figure 1-748	Remove the stapler cover. ....	489
Figure 1-749	Position the tab .....	489
Figure 1-750	Remove the stapler .....	490
Figure 1-751	Open the front door .....	492
Figure 1-752	Open the stapler door .....	492
Figure 1-753	Remove one screw .....	493
Figure 1-754	Remove the stapler cover. ....	493
Figure 1-755	Position the tab .....	494
Figure 1-756	Remove the right front cover .....	494
Figure 1-757	Remove two screws .....	497
Figure 1-758	Remove one screw cover .....	497
Figure 1-759	Remove three screws and the rear cover .....	498
Figure 1-760	Remove the rear inner cover .....	498
Figure 1-761	Remove two screws .....	501
Figure 1-762	Remove one screw cover .....	501
Figure 1-763	Remove three screws and the rear cover .....	502
Figure 1-764	Remove the right upper cover .....	502
Figure 1-765	Remove the right corner cover .....	503
Figure 1-766	Open the front door .....	505
Figure 1-767	Open the stapler door .....	505
Figure 1-768	Remove one screw .....	506
Figure 1-769	Remove the stapler cover. ....	506
Figure 1-770	Position the tab .....	507

Figure 1-771	Tilt the control panel and open the document feeder .....	507
Figure 1-772	Release five tabs .....	508
Figure 1-773	Remove the cover .....	508
Figure 1-774	Remove one screw .....	509
Figure 1-775	Release one tab .....	509
Figure 1-776	Remove the jogger cover .....	510
Figure 1-777	Open the front door .....	512
Figure 1-778	Open the stapler door .....	512
Figure 1-779	Remove one screw .....	513
Figure 1-780	Remove the stapler cover .....	513
Figure 1-781	Position the tab .....	514
Figure 1-782	Remove two screws .....	514
Figure 1-783	Remove one screw cover .....	515
Figure 1-784	Remove three screws and the rear cover .....	515
Figure 1-785	Remove the right upper cover .....	516
Figure 1-786	Remove the right corner cover .....	516
Figure 1-787	Remove the staple rear cover .....	517
Figure 1-788	Open the front door .....	519
Figure 1-789	Open the stapler door .....	519
Figure 1-790	Remove one screw .....	520
Figure 1-791	Remove the stapler cover .....	520
Figure 1-792	Position the tab .....	521
Figure 1-793	Remove two screws .....	521
Figure 1-794	Remove one screw cover .....	522
Figure 1-795	Remove three screws and the rear cover .....	522
Figure 1-796	Remove the right upper cover .....	523
Figure 1-797	Remove the right corner cover .....	523
Figure 1-798	Remove the staple rear cover .....	524
Figure 1-799	Remove the right lower cover .....	524
Figure 1-800	Open the front door .....	527
Figure 1-801	Open the stapler door .....	527
Figure 1-802	Remove one screw .....	528
Figure 1-803	Remove the stapler cover .....	528
Figure 1-804	Position the tab .....	529
Figure 1-805	Release one tab and slide the lock arm .....	529
Figure 1-806	Remove the staple door lock arm .....	530
Figure 1-807	Remove the front locking pin .....	532
Figure 1-808	Remove the rear locking pin .....	533
Figure 1-809	Remove the tray assembly .....	534
Figure 1-810	Remove the front locking pin .....	536
Figure 1-811	Remove the rear locking pin .....	537

Figure 1-812	Open the front door .....	540
Figure 1-813	Open the stapler door .....	540
Figure 1-814	Remove one screw .....	541
Figure 1-815	Remove the stapler cover .....	541
Figure 1-816	Position the tab .....	542
Figure 1-817	Tilt the control panel and open the document feeder .....	542
Figure 1-818	Release five tabs .....	543
Figure 1-819	Remove the cover .....	543
Figure 1-820	Remove one screw .....	544
Figure 1-821	Release one tab .....	544
Figure 1-822	Remove the jogger cover .....	545
Figure 1-823	Remove two screws .....	545
Figure 1-824	Remove one screw cover .....	546
Figure 1-825	Remove three screws and the rear cover .....	546
Figure 1-826	Disconnect one connector .....	547
Figure 1-827	Remove one screw and the jogger .....	547
Figure 1-828	Remove the front locking pin .....	550
Figure 1-829	Remove the rear locking pin .....	551
Figure 1-830	Remove the tray assembly .....	552
Figure 1-831	Open the front door .....	552
Figure 1-832	Open the stapler door .....	553
Figure 1-833	Remove one screw .....	553
Figure 1-834	Remove the stapler cover .....	554
Figure 1-835	Position the tab .....	554
Figure 1-836	Tilt the control panel and open the document feeder .....	555
Figure 1-837	Release five tabs .....	555
Figure 1-838	Remove the cover .....	556
Figure 1-839	Remove one screw .....	556
Figure 1-840	Release one tab .....	557
Figure 1-841	Remove the jogger cover .....	557
Figure 1-842	Remove two screws .....	558
Figure 1-843	Remove one screw cover .....	558
Figure 1-844	Remove three screws and the rear cover .....	559
Figure 1-845	Remove the rear inner cover .....	559
Figure 1-846	Tab locations .....	560
Figure 1-847	Remove the stacking wall cover .....	560
Figure 1-848	Raise the feed guide .....	563
Figure 1-849	Remove the left bracket .....	563
Figure 1-850	Remove the right bracket .....	564
Figure 1-851	Remove the right door .....	564
Figure 1-852	Open the front door .....	565

Figure 1-853	Open the stapler door .....	565
Figure 1-854	Remove one screw .....	566
Figure 1-855	Remove the stapler cover .....	566
Figure 1-856	Position the tab .....	567
Figure 1-857	Remove the stapler .....	567
Figure 1-858	Remove two screws .....	568
Figure 1-859	Remove one screw cover .....	568
Figure 1-860	Remove three screws and the rear cover .....	569
Figure 1-861	Remove the right upper cover .....	569
Figure 1-862	Remove the right corner cover .....	570
Figure 1-863	Remove the staple rear cover .....	570
Figure 1-864	Disconnect three connectors .....	571
Figure 1-865	Remove the guide .....	571
Figure 1-866	Remove the upper feed assembly .....	572
Figure 1-867	Remove two screws .....	574
Figure 1-868	Remove one screw cover .....	574
Figure 1-869	Remove three screws and the rear cover .....	575
Figure 1-870	Remove the fan holder and fan .....	575
Figure 1-871	Remove the fan .....	576
Figure 1-872	Remove the front locking pin .....	578
Figure 1-873	Remove the rear locking pin .....	579
Figure 1-874	Remove the tray assembly .....	580
Figure 1-875	Raise the feed guide .....	580
Figure 1-876	Remove the left bracket .....	581
Figure 1-877	Remove the right bracket .....	581
Figure 1-878	Remove the right door .....	582
Figure 1-879	Open the front door .....	582
Figure 1-880	Open the stapler door .....	583
Figure 1-881	Remove one screw .....	583
Figure 1-882	Remove the stapler cover .....	584
Figure 1-883	Position the tab .....	584
Figure 1-884	Remove the stapler .....	585
Figure 1-885	Remove two screws .....	585
Figure 1-886	Remove one screw cover .....	586
Figure 1-887	Remove three screws and the rear cover .....	586
Figure 1-888	Remove the rear inner cover .....	587
Figure 1-889	Tab locations .....	587
Figure 1-890	Remove the stacking wall cover .....	588
Figure 1-891	Remove the fan holder and fan .....	588
Figure 1-892	Remove the fan .....	589
Figure 1-893	Remove the right upper cover .....	589



Figure 1-894	Remove the right corner cover .....	590
Figure 1-895	Remove two screws .....	590
Figure 1-896	Remove one screw cover .....	591
Figure 1-897	Remove three screws and the rear cover .....	591
Figure 1-898	Disconnect three connectors .....	592
Figure 1-899	Remove the guide .....	592
Figure 1-900	Remove the upper feed assembly .....	593
Figure 1-901	Remove one screw and disconnect two connectors .....	593
Figure 1-902	Remove the lower feed assembly .....	594
Figure 1-903	Remove the front locking pin .....	596
Figure 1-904	Remove the rear locking pin .....	597
Figure 1-905	Remove the tray assembly .....	598
Figure 1-906	Open the front door .....	598
Figure 1-907	Open the stapler door .....	599
Figure 1-908	Remove one screw .....	599
Figure 1-909	Remove the stapler cover. ....	600
Figure 1-910	Position the tab .....	600
Figure 1-911	Tilt the control panel and open the document feeder .....	601
Figure 1-912	Release five tabs .....	601
Figure 1-913	Remove the cover .....	602
Figure 1-914	Remove one screw .....	602
Figure 1-915	Release one tab .....	603
Figure 1-916	Remove the jogger cover .....	603
Figure 1-917	Remove two screws .....	604
Figure 1-918	Remove one screw cover .....	604
Figure 1-919	Remove three screws and the rear cover .....	605
Figure 1-920	Remove the rear inner cover .....	605
Figure 1-921	Tab locations .....	606
Figure 1-922	Remove the stacking wall cover .....	606
Figure 1-923	Remove one cover and disconnect one connector .....	607
Figure 1-924	Remove the solenoid assembly .....	607
Figure 1-925	Remove the front locking pin .....	610
Figure 1-926	Remove the rear locking pin .....	611
Figure 1-927	Remove the tray assembly .....	612
Figure 1-928	Open the front door .....	612
Figure 1-929	Open the stapler door .....	613
Figure 1-930	Remove one screw .....	613
Figure 1-931	Remove the stapler cover. ....	614
Figure 1-932	Position the tab .....	614
Figure 1-933	Tilt the control panel and open the document feeder .....	615
Figure 1-934	Release five tabs .....	615

Figure 1-935	Remove the cover .....	616
Figure 1-936	Remove one screw .....	616
Figure 1-937	Release one tab .....	617
Figure 1-938	Remove the jogger cover .....	617
Figure 1-939	Remove one cover .....	618
Figure 1-940	Disconnect one connector .....	618
Figure 1-941	Release the guide .....	619
Figure 1-942	Release the microswitch .....	619
Figure 1-943	Disconnect two connectors .....	620
Figure 1-944	Check the silver arm and connector .....	620
Figure 1-945	Remove two screws .....	623
Figure 1-946	Remove one screw cover .....	623
Figure 1-947	Remove three screws and the rear cover .....	624
Figure 1-948	Remove the fan holder and fan .....	624
Figure 1-949	Remove the fan .....	625
Figure 1-950	Remove the feed motor .....	625
Figure 1-951	Remove two screws .....	628
Figure 1-952	Remove one screw cover .....	628
Figure 1-953	Remove three screws and the rear cover .....	629
Figure 1-954	Remove the controller PCA .....	629
Figure 1-955	Open Tray 1 .....	634
Figure 1-956	Release two tabs and remove the cover .....	634
Figure 1-957	Remove the pickup roller .....	635
Figure 1-958	Install the pickup roller .....	635
Figure 1-959	Open Tray 1 .....	638
Figure 1-960	Release two hinge pins .....	638
Figure 1-961	Lower the outer tray .....	639
Figure 1-962	Raise the lifting plate .....	639
Figure 1-963	Open the separation roller door .....	640
Figure 1-964	Locate the tab .....	640
Figure 1-965	Remove the separation roller .....	641
Figure 1-966	Remove the formatter cover .....	643
Figure 1-967	Locate the fax PCA .....	644
Figure 1-968	Remove the fax PCA .....	644
Figure 1-969	Release the HDD .....	645
Figure 1-970	Remove the HDD .....	645
Figure 1-971	Remove the eMMC .....	646
Figure 1-972	Locate the DIMM .....	646
Figure 1-973	Release two locking arms .....	647
Figure 1-974	Remove the DIMM .....	647
Figure 1-975	Remove the formatter .....	648

Figure 1-976	Open the front door .....	650
Figure 1-977	Remove the toner cartridge .....	650
Figure 1-978	Release the link arm .....	651
Figure 1-979	Slide the released link arm into the door .....	651
Figure 1-980	Remove the inner cover .....	652
Figure 1-981	Release the hinge .....	652
Figure 1-982	Remove the front door .....	653
Figure 1-983	Reinstall the link arm .....	653
Figure 1-984	Install the right hinge .....	654
Figure 1-985	Install the left hinge .....	654
Figure 1-986	Release four tabs .....	655
Figure 1-987	Remove the front right inner cover .....	655
Figure 1-988	Remove the front inner cover .....	656
Figure 1-989	Install the front right inner cover .....	656
Figure 1-990	Disconnect one connector and remove one screw .....	657
Figure 1-991	Release the pre-exposure PCA assembly .....	657
Figure 1-992	Remove the pre-exposure PCA assembly .....	658
Figure 1-993	Install the pre-exposure PCA assembly .....	658
Figure 1-994	Open the front door .....	661
Figure 1-995	Remove the toner cartridge .....	661
Figure 1-996	Release the link arm .....	662
Figure 1-997	Slide the released link arm into the door .....	662
Figure 1-998	Remove the inner cover .....	663
Figure 1-999	Release the hinge .....	663
Figure 1-1000	Remove the front door .....	664
Figure 1-1001	Reinstall the link arm .....	664
Figure 1-1002	Install the right hinge .....	665
Figure 1-1003	Install the left hinge .....	665
Figure 1-1004	Release four tabs .....	666
Figure 1-1005	Remove the front right inner cover .....	666
Figure 1-1006	Remove the front inner cover .....	667
Figure 1-1007	Install the front right inner cover .....	667
Figure 1-1008	Disconnect one connector and remove one screw .....	668
Figure 1-1009	Release the pre-exposure PCA assembly .....	668
Figure 1-1010	Remove the pre-exposure PCA assembly .....	669
Figure 1-1011	Install the pre-exposure PCA assembly .....	669
Figure 1-1012	Release the link arm .....	672
Figure 1-1013	Slide the released link arm into the door .....	672
Figure 1-1014	Remove the inner cover .....	673
Figure 1-1015	Release the hinge .....	673
Figure 1-1016	Remove the front door .....	674

Figure 1-1017	Reinstall the link arm .....	674
Figure 1-1018	Install the right hinge .....	675
Figure 1-1019	Install the left hinge .....	675
Figure 1-1020	Release four tabs .....	676
Figure 1-1021	Remove the front right inner cover .....	676
Figure 1-1022	Release two cables .....	677
Figure 1-1023	Release the front switch .....	677
Figure 1-1024	Disconnect two connectors .....	678
Figure 1-1025	Release two cables .....	678
Figure 1-1026	Release the rear switch .....	679
Figure 1-1027	Disconnect two connectors .....	679
Figure 1-1028	Install the switch .....	680
Figure 1-1029	Install the front right inner cover .....	680
Figure 1-1030	Open the front door .....	684
Figure 1-1031	Open the left door .....	684
Figure 1-1032	Remove the TCU .....	685
Figure 1-1033	Tilt the control panel and open the document feeder .....	685
Figure 1-1034	Release five tabs .....	686
Figure 1-1035	Remove the cover .....	686
Figure 1-1036	Disconnect the keyboard flat cable .....	687
Figure 1-1037	Slide the keyboard tray out .....	687
Figure 1-1038	Release two tabs .....	688
Figure 1-1039	Remove the keyboard .....	688
Figure 1-1040	Tilt the control panel forward and open the document feeder .....	689
Figure 1-1041	Release five tabs .....	689
Figure 1-1042	Remove the cover .....	690
Figure 1-1043	Disconnect the keyboard flat cable (keyboard models only) .....	690
Figure 1-1044	Disconnect connectors .....	691
Figure 1-1045	Remove three thumbscrews .....	691
Figure 1-1046	Remove the control panel .....	692
Figure 1-1047	Remove the SCB cover .....	692
Figure 1-1048	Remove the small cover .....	693
Figure 1-1049	Remove the stapler/stacker rear cover .....	693
Figure 1-1050	Remove the upper rear cover .....	694
Figure 1-1051	Remove the formatter cover .....	694
Figure 1-1052	Cable routing for M681dh, M681f, and Flow M681f .....	695
Figure 1-1053	Disconnect two connectors .....	695
Figure 1-1054	Disconnect five connectors .....	696
Figure 1-1055	Disconnect the wireless connector .....	696
Figure 1-1056	Release the cables .....	697
Figure 1-1057	Remove four screws .....	697

Figure 1-1058	Remove three screws .....	698
Figure 1-1059	Remove the document feeder and image scanner .....	698
Figure 1-1060	Remove the wireless card .....	699
Figure 1-1061	Connect the wireless card connector .....	699
Figure 1-1062	Reinstall the wireless card .....	700
Figure 1-1063	Install the SCB cables .....	700
Figure 1-1064	Open the front door .....	701
Figure 1-1065	Open the stapler door .....	701
Figure 1-1066	Remove the staple cartridge .....	702
Figure 1-1067	Remove one screw .....	702
Figure 1-1068	Remove the stapler cover .....	703
Figure 1-1069	Remove one screw .....	703
Figure 1-1070	Remove the stapler/stacker right upper cover .....	704
Figure 1-1071	Remove the stapler rear cover .....	704
Figure 1-1072	Remove the stapler/stacker rear corner cover .....	705
Figure 1-1073	Remove two screws .....	705
Figure 1-1074	Remove the cable guide .....	706
Figure 1-1075	Disconnect one connector .....	706
Figure 1-1076	Remove two screws .....	707
Figure 1-1077	Remove the stapler/stacker .....	707
Figure 1-1078	Remove the face-down front cover .....	708
Figure 1-1079	Install the cover .....	708
Figure 1-1080	Remove the top cover .....	709
Figure 1-1081	Remove the right cover .....	710
Figure 1-1082	Remove the front cover .....	710
Figure 1-1083	Remove the rear upper cover .....	711
Figure 1-1084	Remove two screws and the face-down cover .....	711
Figure 1-1085	Remove two screws and release one tab .....	712
Figure 1-1086	Remove one screw and the main cover .....	712
Figure 1-1087	Tilt the control panel up .....	713
Figure 1-1088	Remove the cover .....	713
Figure 1-1089	Remove one thumbscrew .....	714
Figure 1-1090	Release the control panel .....	714
Figure 1-1091	Disconnect two connectors .....	715
Figure 1-1092	Remove the control panel .....	715
Figure 1-1093	Remove the NFC cover .....	716
Figure 1-1094	Remove one screw and release one tab .....	716
Figure 1-1095	Release two tabs .....	717
Figure 1-1096	Remove the top cover .....	717
Figure 1-1097	Remove the output bin .....	718
Figure 1-1098	Remove the formatter cover .....	719

Figure 1-1099	Open front door .....	719
Figure 1-1100	Remove the left door .....	720
Figure 1-1101	Remove the left rear cover .....	720
Figure 1-1102	Install the left rear cover .....	721
Figure 1-1103	Disconnect three connectors .....	722
Figure 1-1104	Remove the cartridge cover .....	722
Figure 1-1105	Release one tab .....	723
Figure 1-1106	Remove the fan duct .....	723
Figure 1-1107	Remove the left upper front fan .....	724
Figure 1-1108	Remove the left upper rear fan .....	724
Figure 1-1109	Install the fan assembly .....	725
Figure 1-1110	Open the front door .....	728
Figure 1-1111	Open the left door .....	728
Figure 1-1112	Remove the TCU .....	729
Figure 1-1113	Tilt the control panel and open the document feeder .....	729
Figure 1-1114	Release five tabs .....	730
Figure 1-1115	Remove the cover .....	730
Figure 1-1116	Disconnect the keyboard flat cable .....	731
Figure 1-1117	Slide the keyboard tray out .....	731
Figure 1-1118	Release two tabs .....	732
Figure 1-1119	Remove the keyboard .....	732
Figure 1-1120	Tilt the control panel forward and open the document feeder .....	733
Figure 1-1121	Release five tabs .....	733
Figure 1-1122	Remove the cover .....	734
Figure 1-1123	Disconnect the keyboard flat cable (keyboard models only) .....	734
Figure 1-1124	Disconnect connectors .....	735
Figure 1-1125	Remove three thumbscrews .....	735
Figure 1-1126	Remove the control panel .....	736
Figure 1-1127	Remove the SCB cover .....	736
Figure 1-1128	Remove the small cover .....	737
Figure 1-1129	Remove the stapler/stacker rear cover .....	737
Figure 1-1130	Remove the upper rear cover .....	738
Figure 1-1131	Remove the formatter cover .....	738
Figure 1-1132	Cable routing for M681dh, M681f, and Flow M681f .....	739
Figure 1-1133	Disconnect two connectors .....	739
Figure 1-1134	Disconnect five connectors .....	740
Figure 1-1135	Disconnect the wireless connector .....	740
Figure 1-1136	Release the cables .....	741
Figure 1-1137	Remove four screws .....	741
Figure 1-1138	Remove three screws .....	742
Figure 1-1139	Remove the document feeder and image scanner .....	742

Figure 1-1140	Remove the wireless card .....	743
Figure 1-1141	Connect the wireless card connector .....	743
Figure 1-1142	Reinstall the wireless card .....	744
Figure 1-1143	Install the SCB cables .....	744
Figure 1-1144	Open the front door .....	745
Figure 1-1145	Open the stapler door .....	745
Figure 1-1146	Remove the staple cartridge .....	746
Figure 1-1147	Remove one screw .....	746
Figure 1-1148	Remove the stapler cover .....	747
Figure 1-1149	Remove one screw .....	747
Figure 1-1150	Remove the stapler/stacker right upper cover .....	748
Figure 1-1151	Remove the stapler rear cover .....	748
Figure 1-1152	Remove the stapler/stacker rear corner cover .....	749
Figure 1-1153	Remove two screws .....	749
Figure 1-1154	Remove the cable guide .....	750
Figure 1-1155	Disconnect one connector .....	750
Figure 1-1156	Remove two screws .....	751
Figure 1-1157	Remove the stapler/stacker .....	751
Figure 1-1158	Remove the face-down front cover .....	752
Figure 1-1159	Install the cover .....	752
Figure 1-1160	Remove the top cover .....	753
Figure 1-1161	Remove the right cover .....	754
Figure 1-1162	Remove the front cover .....	754
Figure 1-1163	Remove the rear upper cover .....	755
Figure 1-1164	Remove two screws and the face-down cover .....	756
Figure 1-1165	Remove two screws and release one tab .....	756
Figure 1-1166	Remove one screw and the main cover .....	757
Figure 1-1167	Tilt the control panel up .....	757
Figure 1-1168	Remove the cover .....	758
Figure 1-1169	Remove one thumbscrew .....	758
Figure 1-1170	Release the control panel .....	759
Figure 1-1171	Disconnect two connectors .....	759
Figure 1-1172	Remove the control panel .....	760
Figure 1-1173	Remove the NFC cover .....	761
Figure 1-1174	Remove one screw and release one tab .....	761
Figure 1-1175	Release two tabs .....	762
Figure 1-1176	Remove the top cover .....	762
Figure 1-1177	Remove the output bin .....	763
Figure 1-1178	Remove the formatter cover .....	764
Figure 1-1179	Open front door .....	764
Figure 1-1180	Remove the left door .....	765

Figure 1-1181	Disconnect three connectors .....	765
Figure 1-1182	Remove the cartridge panel .....	766
Figure 1-1183	Release the toner carry assembly .....	766
Figure 1-1184	Remove the toner carry assembly .....	767
Figure 1-1185	Align the gears .....	767
Figure 1-1186	Align the tabs .....	768
Figure 1-1187	Install the cartridge panel .....	768
Figure 1-1188	Open the right door .....	771
Figure 1-1189	Remove the fuser .....	772
Figure 1-1190	Tilt the control panel and open the document feeder .....	772
Figure 1-1191	Release five tabs .....	773
Figure 1-1192	Remove the cover .....	773
Figure 1-1193	Disconnect the keyboard flat cable .....	774
Figure 1-1194	Slide the keyboard tray out .....	774
Figure 1-1195	Release two tabs .....	775
Figure 1-1196	Remove the keyboard .....	775
Figure 1-1197	Tilt the control panel forward and open the document feeder .....	776
Figure 1-1198	Release five tabs .....	776
Figure 1-1199	Remove the cover .....	777
Figure 1-1200	Disconnect the keyboard flat cable (keyboard models only) .....	777
Figure 1-1201	Disconnect connectors .....	778
Figure 1-1202	Remove three thumbscrews .....	778
Figure 1-1203	Remove the control panel .....	779
Figure 1-1204	Remove the SCB cover .....	779
Figure 1-1205	Remove the small cover .....	780
Figure 1-1206	Remove the stapler/stacker rear cover .....	780
Figure 1-1207	Remove the upper rear cover .....	781
Figure 1-1208	Remove the formatter cover .....	781
Figure 1-1209	Cable routing for M681dh, M681f, and Flow M681f .....	782
Figure 1-1210	Disconnect two connectors .....	782
Figure 1-1211	Disconnect five connectors .....	783
Figure 1-1212	Disconnect the wireless connector .....	783
Figure 1-1213	Release the cables .....	784
Figure 1-1214	Remove four screws .....	784
Figure 1-1215	Remove three screws .....	785
Figure 1-1216	Remove the document feeder and image scanner .....	785
Figure 1-1217	Remove the wireless card .....	786
Figure 1-1218	Connect the wireless card connector .....	786
Figure 1-1219	Reinstall the wireless card .....	787
Figure 1-1220	Install the SCB cables .....	787
Figure 1-1221	Open the front door .....	788



Figure 1-1222	Open the stapler door .....	788
Figure 1-1223	Remove the staple cartridge .....	789
Figure 1-1224	Remove one screw .....	789
Figure 1-1225	Remove the stapler cover .....	790
Figure 1-1226	Remove one screw .....	790
Figure 1-1227	Remove the stapler/stacker right upper cover .....	791
Figure 1-1228	Remove the stapler rear cover .....	791
Figure 1-1229	Remove the stapler/stacker rear corner cover .....	792
Figure 1-1230	Remove two screws .....	792
Figure 1-1231	Remove the cable guide .....	793
Figure 1-1232	Disconnect one connector .....	793
Figure 1-1233	Remove two screws .....	794
Figure 1-1234	Remove the stapler/stacker .....	794
Figure 1-1235	Remove the face-down front cover .....	795
Figure 1-1236	Install the cover .....	795
Figure 1-1237	Remove the top cover .....	796
Figure 1-1238	Remove the right cover .....	797
Figure 1-1239	Remove the front cover .....	797
Figure 1-1240	Remove the rear upper cover .....	798
Figure 1-1241	Remove two screws and the face-down cover .....	799
Figure 1-1242	Remove two screws and release one tab .....	799
Figure 1-1243	Remove one screw and the main cover .....	800
Figure 1-1244	Tilt the control panel up .....	800
Figure 1-1245	Remove the cover .....	801
Figure 1-1246	Remove one thumbscrew .....	801
Figure 1-1247	Release the control panel .....	802
Figure 1-1248	Disconnect two connectors .....	802
Figure 1-1249	Remove the control panel .....	803
Figure 1-1250	Remove the NFC cover .....	804
Figure 1-1251	Remove one screw and release one tab .....	804
Figure 1-1252	Release two tabs .....	805
Figure 1-1253	Remove the top cover .....	805
Figure 1-1254	Remove the output bin .....	806
Figure 1-1255	Remove the formatter cover .....	807
Figure 1-1256	Release one connector .....	807
Figure 1-1257	Disconnect one connector and release the cable. ....	808
Figure 1-1258	Release one tab and slide the shroud .....	808
Figure 1-1259	Remove the fan shroud .....	809
Figure 1-1260	Release two tabs .....	809
Figure 1-1261	Remove the PCA and disconnect one connector .....	810
Figure 1-1262	Open the front door .....	812

Figure 1-1263	Open the left door .....	812
Figure 1-1264	Remove the TCU .....	813
Figure 1-1265	Remove the left rear cover .....	813
Figure 1-1266	Install the left rear cover .....	814
Figure 1-1267	Open front door .....	814
Figure 1-1268	Remove the left door .....	815
Figure 1-1269	Remove the left handle .....	815
Figure 1-1270	Install the left handle .....	816
Figure 1-1271	Remove the scanner cover .....	816
Figure 1-1272	Remove the environmental sensor .....	817
Figure 1-1273	Open the front door .....	819
Figure 1-1274	Open the left door .....	819
Figure 1-1275	Remove the TCU .....	820
Figure 1-1276	Remove the left rear cover .....	820
Figure 1-1277	Install the left rear cover .....	821
Figure 1-1278	Open front door .....	821
Figure 1-1279	Remove the left door .....	822
Figure 1-1280	Remove the left handle .....	822
Figure 1-1281	Install the left handle .....	823
Figure 1-1282	Remove the scanner cover .....	823
Figure 1-1283	Remove the fan holder .....	824
Figure 1-1284	Remove the cartridge fan from the holder .....	824
Figure 1-1285	Release the link arm .....	827
Figure 1-1286	Slide the released link arm into the door .....	828
Figure 1-1287	Remove the inner cover .....	828
Figure 1-1288	Release the hinge .....	829
Figure 1-1289	Remove the front door .....	829
Figure 1-1290	Reinstall the link arm .....	830
Figure 1-1291	Install the right hinge .....	830
Figure 1-1292	Install the left hinge .....	831
Figure 1-1293	Release four tabs .....	831
Figure 1-1294	Remove the front right inner cover .....	832
Figure 1-1295	Remove the front inner cover .....	832
Figure 1-1296	Install the front right inner cover .....	833
Figure 1-1297	Disconnect three connectors and release cables .....	833
Figure 1-1298	Remove the fan holder .....	834
Figure 1-1299	Remove the front fan .....	834
Figure 1-1300	Remove the formatter cover .....	837
Figure 1-1301	Remove the left rear cover .....	838
Figure 1-1302	Install the left rear cover .....	838
Figure 1-1303	Remove two screws and the rear cover .....	839

Figure 1-1304	Disconnect five connectors and remove two screws .....	839
Figure 1-1305	Remove two handles .....	840
Figure 1-1306	Remove the low-voltage power supply .....	840
Figure 1-1307	Remove the power supply fan .....	841
Figure 1-1308	Remove the formatter cover .....	843
Figure 1-1309	Remove the left rear cover .....	844
Figure 1-1310	Install the left rear cover .....	844
Figure 1-1311	Remove two screws and the rear cover .....	845
Figure 1-1312	Remove the DC controller PCA .....	845
Figure 1-1313	Check the yellow cable .....	846
Figure 1-1314	Remove the formatter cover .....	848
Figure 1-1315	Remove the left rear cover .....	849
Figure 1-1316	Install the left rear cover .....	849
Figure 1-1317	Remove two screws and the rear cover .....	850
Figure 1-1318	Disconnect five connectors and remove two screws .....	850
Figure 1-1319	Remove two handles .....	851
Figure 1-1320	Remove the low-voltage power supply .....	851
Figure 1-1321	Disconnect one connector and remove one screw .....	852
Figure 1-1322	Unhook one spring .....	852
Figure 1-1323	Remove the power supply fan holder and LVPS cover .....	853
Figure 1-1324	Remove the formatter cover .....	855
Figure 1-1325	Remove the left rear cover .....	856
Figure 1-1326	Install the left rear cover .....	856
Figure 1-1327	Remove two screws and the rear cover .....	857
Figure 1-1328	Disconnect five connectors and remove two screws .....	857
Figure 1-1329	Remove two handles .....	858
Figure 1-1330	Remove the low-voltage power supply .....	858
Figure 1-1331	Disconnect one connector .....	859
Figure 1-1332	Remove two screws and release one tab .....	859
Figure 1-1333	Tilt the control panel and open the document feeder .....	863
Figure 1-1334	Release five tabs .....	863
Figure 1-1335	Remove the cover .....	864
Figure 1-1336	Disconnect the keyboard flat cable .....	864
Figure 1-1337	Slide the keyboard tray out .....	865
Figure 1-1338	Release two tabs .....	865
Figure 1-1339	Remove the keyboard .....	866
Figure 1-1340	Tilt the control panel forward and open the document feeder .....	866
Figure 1-1341	Release five tabs .....	867
Figure 1-1342	Remove the cover .....	867
Figure 1-1343	Disconnect the keyboard flat cable (keyboard models only) .....	868
Figure 1-1344	Disconnect connectors .....	868

Figure 1-1345	Remove three thumbscrews .....	869
Figure 1-1346	Remove the control panel .....	869
Figure 1-1347	Remove the SCB cover .....	870
Figure 1-1348	Remove the small cover .....	870
Figure 1-1349	Remove the stapler/stacker rear cover .....	871
Figure 1-1350	Remove the upper rear cover .....	871
Figure 1-1351	Remove the formatter cover .....	872
Figure 1-1352	Cable routing for M681dh, M681f, and Flow M681f .....	872
Figure 1-1353	Disconnect two connectors .....	873
Figure 1-1354	Disconnect five connectors .....	873
Figure 1-1355	Disconnect the wireless connector .....	874
Figure 1-1356	Release the cables .....	874
Figure 1-1357	Remove four screws .....	875
Figure 1-1358	Remove three screws .....	875
Figure 1-1359	Remove the document feeder and image scanner .....	876
Figure 1-1360	Remove the wireless card .....	876
Figure 1-1361	Connect the wireless card connector .....	877
Figure 1-1362	Reinstall the wireless card .....	877
Figure 1-1363	Install the SCB cables .....	878
Figure 1-1364	Open the front door .....	878
Figure 1-1365	Open the stapler door .....	879
Figure 1-1366	Remove the staple cartridge .....	879
Figure 1-1367	Remove one screw .....	880
Figure 1-1368	Remove the stapler cover .....	880
Figure 1-1369	Remove one screw .....	881
Figure 1-1370	Remove the stapler/stacker right upper cover .....	881
Figure 1-1371	Remove the stapler rear cover .....	882
Figure 1-1372	Remove the stapler/stacker rear corner cover .....	882
Figure 1-1373	Remove two screws .....	883
Figure 1-1374	Remove the cable guide .....	883
Figure 1-1375	Disconnect one connector .....	884
Figure 1-1376	Remove two screws .....	884
Figure 1-1377	Remove the stapler/stacker .....	885
Figure 1-1378	Remove the face-down front cover .....	885
Figure 1-1379	Install the cover .....	886
Figure 1-1380	Remove the top cover .....	887
Figure 1-1381	Remove the right cover .....	887
Figure 1-1382	Remove the front cover .....	888
Figure 1-1383	Remove the rear upper cover .....	889
Figure 1-1384	Remove two screws and the face-down cover .....	889
Figure 1-1385	Remove two screws and release one tab .....	890

Figure 1-1386	Remove one screw and the main cover .....	890
Figure 1-1387	Tilt the control panel up .....	891
Figure 1-1388	Remove the cover .....	891
Figure 1-1389	Remove one thumbscrew .....	892
Figure 1-1390	Release the control panel .....	892
Figure 1-1391	Disconnect two connectors .....	893
Figure 1-1392	Remove the control panel .....	893
Figure 1-1393	Remove the NFC cover .....	894
Figure 1-1394	Remove one screw and release one tab .....	894
Figure 1-1395	Release two tabs .....	895
Figure 1-1396	Remove the top cover .....	895
Figure 1-1397	Remove the output bin .....	896
Figure 1-1398	Remove the formatter cover .....	897
Figure 1-1399	Remove the left rear cover .....	897
Figure 1-1400	Install the left rear cover .....	898
Figure 1-1401	Remove two screws and the rear cover .....	898
Figure 1-1402	Locate the fax PCA .....	899
Figure 1-1403	Remove the fax PCA .....	899
Figure 1-1404	Release the HDD .....	900
Figure 1-1405	Remove the HDD .....	900
Figure 1-1406	Remove the formatter .....	901
Figure 1-1407	Disconnect one connector and remove four screws .....	901
Figure 1-1408	Tilt the formatter case .....	902
Figure 1-1409	Remove the cable guide .....	902
Figure 1-1410	Install the cable guide .....	903
Figure 1-1411	Check the IOD cable .....	903
Figure 1-1412	Remove the DC controller PCA .....	904
Figure 1-1413	Check the yellow cable .....	904
Figure 1-1414	Remove the DC controller stay .....	905
Figure 1-1415	Disconnect eight connectors .....	905
Figure 1-1416	Remove the upper HVPS .....	906
Figure 1-1417	Tilt the control panel and open the document feeder .....	909
Figure 1-1418	Release five tabs .....	909
Figure 1-1419	Remove the cover .....	910
Figure 1-1420	Disconnect the keyboard flat cable .....	910
Figure 1-1421	Slide the keyboard tray out .....	911
Figure 1-1422	Release two tabs .....	911
Figure 1-1423	Remove the keyboard .....	912
Figure 1-1424	Tilt the control panel forward and open the document feeder .....	912
Figure 1-1425	Release five tabs .....	913
Figure 1-1426	Remove the cover .....	913

Figure 1-1427	Disconnect the keyboard fl a cable (keyboard models only) .....	914
Figure 1-1428	Disconnect connectors .....	914
Figure 1-1429	Remove three thumbscrews .....	915
Figure 1-1430	Remove the control panel .....	915
Figure 1-1431	Remove the SCB cover .....	916
Figure 1-1432	Remove the small cover .....	916
Figure 1-1433	Remove the stapler/stacker rear cover .....	917
Figure 1-1434	Remove the upper rear cover .....	917
Figure 1-1435	Remove the formatter cover .....	918
Figure 1-1436	Cable routing for M681dh, M681f, and Flow M681f .....	918
Figure 1-1437	Disconnect two connectors .....	919
Figure 1-1438	Disconnect fiv e connectors .....	919
Figure 1-1439	Disconnect the wireless connector .....	920
Figure 1-1440	Release the cables .....	920
Figure 1-1441	Remove four screws .....	921
Figure 1-1442	Remove three screws .....	921
Figure 1-1443	Remove the document feeder and image scanner .....	922
Figure 1-1444	Remove the wireless card .....	922
Figure 1-1445	Connect the wireless card connector .....	923
Figure 1-1446	Reinstall the wireless card .....	923
Figure 1-1447	Install the SCB cables .....	924
Figure 1-1448	Open the front door .....	924
Figure 1-1449	Open the stapler door .....	925
Figure 1-1450	Remove the staple cartridge .....	925
Figure 1-1451	Remove one screw .....	926
Figure 1-1452	Remove the stapler cover .....	926
Figure 1-1453	Remove one screw .....	927
Figure 1-1454	Remove the stapler/stacker right upper cover .....	927
Figure 1-1455	Remove the stapler rear cover .....	928
Figure 1-1456	Remove the stapler/stacker rear corner cover .....	928
Figure 1-1457	Remove two screws .....	929
Figure 1-1458	Remove the cable guide .....	929
Figure 1-1459	Disconnect one connector .....	930
Figure 1-1460	Remove two screws .....	930
Figure 1-1461	Remove the stapler/stacker .....	931
Figure 1-1462	Remove the face-down front cover .....	931
Figure 1-1463	Install the cover .....	932
Figure 1-1464	Remove the top cover .....	933
Figure 1-1465	Remove the right cover .....	933
Figure 1-1466	Remove the front cover .....	934
Figure 1-1467	Remove the rear upper cover .....	935

Figure 1-1468	Remove two screws and the face-down cover .....	935
Figure 1-1469	Remove two screws and release one tab .....	936
Figure 1-1470	Remove one screw and the main cover .....	936
Figure 1-1471	Tilt the control panel up .....	937
Figure 1-1472	Remove the cover .....	937
Figure 1-1473	Remove one thumbscrew .....	938
Figure 1-1474	Release the control panel .....	938
Figure 1-1475	Disconnect two connectors .....	939
Figure 1-1476	Remove the control panel .....	939
Figure 1-1477	Remove the NFC cover .....	940
Figure 1-1478	Remove one screw and release one tab .....	940
Figure 1-1479	Release two tabs .....	941
Figure 1-1480	Remove the top cover .....	941
Figure 1-1481	Remove the output bin .....	942
Figure 1-1482	Remove the formatter cover .....	943
Figure 1-1483	Remove the left rear cover .....	943
Figure 1-1484	Install the left rear cover .....	944
Figure 1-1485	Remove two screws and the rear cover .....	944
Figure 1-1486	Locate the fax PCA .....	945
Figure 1-1487	Remove the fax PCA .....	945
Figure 1-1488	Release the HDD .....	946
Figure 1-1489	Remove the HDD .....	946
Figure 1-1490	Remove the formatter .....	947
Figure 1-1491	Disconnect one connector and remove four screws .....	947
Figure 1-1492	Tilt the formatter case .....	948
Figure 1-1493	Remove the cable guide .....	948
Figure 1-1494	Install the cable guide .....	949
Figure 1-1495	Check the IOD cable .....	949
Figure 1-1496	Remove the DC controller PCA .....	950
Figure 1-1497	Check the yellow cable .....	950
Figure 1-1498	Remove the DC controller stay .....	951
Figure 1-1499	Disconnect eight connectors .....	951
Figure 1-1500	Remove the upper HVPS .....	952
Figure 1-1501	Release the cable .....	952
Figure 1-1502	Remove the fan cover .....	953
Figure 1-1503	Remove the rear fan .....	953
Figure 1-1504	Remove the formatter cover .....	956
Figure 1-1505	Remove the left rear cover .....	957
Figure 1-1506	Install the left rear cover .....	957
Figure 1-1507	Remove two screws and the rear cover .....	958
Figure 1-1508	Disconnect five connectors and remove two screws .....	958

Figure 1-1509	Remove two handles .....	959
Figure 1-1510	Remove the low-voltage power supply .....	959
Figure 1-1511	Disconnect one connector .....	960
Figure 1-1512	Remove two screws and release one tab .....	960
Figure 1-1513	Disconnect two connectors .....	961
Figure 1-1514	Remove the lifter drive assembly .....	961
Figure 1-1515	Position the tab .....	962
Figure 1-1516	Open the front door .....	964
Figure 1-1517	Open the left door .....	964
Figure 1-1518	Remove the TCU .....	965
Figure 1-1519	Open front door .....	965
Figure 1-1520	Remove the left door .....	966
Figure 1-1521	Remove the scanner cover .....	966
Figure 1-1522	Disconnect two connectors and remove one screw .....	967
Figure 1-1523	Remove the laser scanner .....	967
Figure 1-1524	Tilt the control panel and open the document feeder .....	971
Figure 1-1525	Release five tabs .....	971
Figure 1-1526	Remove the cover .....	972
Figure 1-1527	Disconnect the keyboard flat cable .....	972
Figure 1-1528	Slide the keyboard tray out .....	973
Figure 1-1529	Release two tabs .....	973
Figure 1-1530	Remove the keyboard .....	974
Figure 1-1531	Tilt the control panel forward and open the document feeder .....	974
Figure 1-1532	Release five tabs .....	975
Figure 1-1533	Remove the cover .....	975
Figure 1-1534	Disconnect the keyboard flat cable (keyboard models only) .....	976
Figure 1-1535	Disconnect connectors .....	976
Figure 1-1536	Remove three thumbscrews .....	977
Figure 1-1537	Remove the control panel .....	977
Figure 1-1538	Remove the SCB cover .....	978
Figure 1-1539	Remove the small cover .....	978
Figure 1-1540	Remove the stapler/stacker rear cover .....	979
Figure 1-1541	Remove the upper rear cover .....	979
Figure 1-1542	Remove the formatter cover .....	980
Figure 1-1543	Cable routing for M681dh, M681f, and Flow M681f .....	980
Figure 1-1544	Disconnect two connectors .....	981
Figure 1-1545	Disconnect five connectors .....	981
Figure 1-1546	Disconnect the wireless connector .....	982
Figure 1-1547	Release the cables .....	982
Figure 1-1548	Remove four screws .....	983
Figure 1-1549	Remove three screws .....	983



Figure 1-1550	Remove the document feeder and image scanner .....	984
Figure 1-1551	Remove the wireless card .....	984
Figure 1-1552	Connect the wireless card connector .....	985
Figure 1-1553	Reinstall the wireless card .....	985
Figure 1-1554	Install the SCB cables .....	986
Figure 1-1555	Open the front door .....	986
Figure 1-1556	Open the stapler door .....	987
Figure 1-1557	Remove the staple cartridge .....	987
Figure 1-1558	Remove one screw .....	988
Figure 1-1559	Remove the stapler cover .....	988
Figure 1-1560	Remove one screw .....	989
Figure 1-1561	Remove the stapler/stacker right upper cover .....	989
Figure 1-1562	Remove the stapler rear cover .....	990
Figure 1-1563	Remove the stapler/stacker rear corner cover .....	990
Figure 1-1564	Remove two screws .....	991
Figure 1-1565	Remove the cable guide .....	991
Figure 1-1566	Disconnect one connector .....	992
Figure 1-1567	Remove two screws .....	992
Figure 1-1568	Remove the stapler/stacker .....	993
Figure 1-1569	Remove the face-down front cover .....	993
Figure 1-1570	Install the cover .....	994
Figure 1-1571	Remove the top cover .....	995
Figure 1-1572	Remove the right cover .....	995
Figure 1-1573	Remove the front cover .....	996
Figure 1-1574	Remove the rear upper cover .....	997
Figure 1-1575	Remove two screws and the face-down cover .....	997
Figure 1-1576	Remove two screws and release one tab .....	998
Figure 1-1577	Remove one screw and the main cover .....	998
Figure 1-1578	Tilt the control panel up .....	999
Figure 1-1579	Remove the cover .....	999
Figure 1-1580	Remove one thumbscrew .....	1000
Figure 1-1581	Release the control panel .....	1000
Figure 1-1582	Disconnect two connectors .....	1001
Figure 1-1583	Remove the control panel .....	1001
Figure 1-1584	Remove the NFC cover .....	1002
Figure 1-1585	Remove one screw and release one tab .....	1002
Figure 1-1586	Release two tabs .....	1003
Figure 1-1587	Remove the top cover .....	1003
Figure 1-1588	Remove the output bin .....	1004
Figure 1-1589	Remove the formatter cover .....	1005
Figure 1-1590	Remove the left rear cover .....	1005

Figure 1-1591	Install the left rear cover .....	1006
Figure 1-1592	Remove two screws and the rear cover .....	1006
Figure 1-1593	Locate the fax PCA .....	1007
Figure 1-1594	Remove the fax PCA .....	1007
Figure 1-1595	Release the HDD .....	1008
Figure 1-1596	Remove the HDD .....	1008
Figure 1-1597	Remove the formatter .....	1009
Figure 1-1598	Disconnect one connector and remove four screws .....	1009
Figure 1-1599	Tilt the formatter case .....	1010
Figure 1-1600	Remove the cable guide .....	1010
Figure 1-1601	Install the cable guide .....	1011
Figure 1-1602	Check the IOD cable .....	1011
Figure 1-1603	Remove the DC controller PCA .....	1012
Figure 1-1604	Check the yellow cable .....	1012
Figure 1-1605	Remove the DC controller stay .....	1013
Figure 1-1606	Disconnect eight connectors .....	1013
Figure 1-1607	Remove the upper HVPS .....	1014
Figure 1-1608	Remove drum motor 1 .....	1014
Figure 1-1609	Remove the formatter cover .....	1017
Figure 1-1610	Remove the left rear cover .....	1018
Figure 1-1611	Install the left rear cover .....	1018
Figure 1-1612	Remove two screws and the rear cover .....	1019
Figure 1-1613	Locate the fax PCA .....	1019
Figure 1-1614	Remove the fax PCA .....	1020
Figure 1-1615	Release the HDD .....	1020
Figure 1-1616	Remove the HDD .....	1021
Figure 1-1617	Remove the formatter .....	1021
Figure 1-1618	Disconnect one connector and remove four screws .....	1022
Figure 1-1619	Tilt the formatter case .....	1022
Figure 1-1620	Remove the cable guide .....	1023
Figure 1-1621	Install the cable guide .....	1023
Figure 1-1622	Check the IOD cable .....	1024
Figure 1-1623	Remove the DC controller PCA .....	1024
Figure 1-1624	Check the yellow cable .....	1025
Figure 1-1625	Remove the DC controller stay .....	1025
Figure 1-1626	Remove drum motor 2 .....	1026
Figure 1-1627	Remove the formatter cover .....	1028
Figure 1-1628	Remove the left rear cover .....	1029
Figure 1-1629	Install the left rear cover .....	1029
Figure 1-1630	Remove two screws and the rear cover .....	1030
Figure 1-1631	Locate the fax PCA .....	1030

Figure 1-1632	Remove the fax PCA .....	1031
Figure 1-1633	Release the HDD .....	1031
Figure 1-1634	Remove the HDD .....	1032
Figure 1-1635	Remove the formatter .....	1032
Figure 1-1636	Disconnect one connector and remove four screws .....	1033
Figure 1-1637	Tilt the formatter case .....	1033
Figure 1-1638	Remove the cable guide .....	1034
Figure 1-1639	Install the cable guide .....	1034
Figure 1-1640	Check the IOD cable .....	1035
Figure 1-1641	Remove the DC controller PCA .....	1035
Figure 1-1642	Check the yellow cable .....	1036
Figure 1-1643	Remove the DC controller stay .....	1036
Figure 1-1644	Remove drum motor 3 .....	1037
Figure 1-1645	Open the right door .....	1040
Figure 1-1646	Remove the fuser .....	1040
Figure 1-1647	Open the right door .....	1041
Figure 1-1648	Lower the transfer assembly .....	1041
Figure 1-1649	Grasp the two blue handles .....	1042
Figure 1-1650	Pull the ITB partially out of the printer .....	1042
Figure 1-1651	Remove the ITB .....	1043
Figure 1-1652	Tilt the control panel and open the document feeder .....	1043
Figure 1-1653	Release five tabs .....	1044
Figure 1-1654	Remove the cover .....	1044
Figure 1-1655	Disconnect the keyboard flat cable .....	1045
Figure 1-1656	Slide the keyboard tray out .....	1045
Figure 1-1657	Release two tabs .....	1046
Figure 1-1658	Remove the keyboard .....	1046
Figure 1-1659	Tilt the control panel forward and open the document feeder .....	1047
Figure 1-1660	Release five tabs .....	1047
Figure 1-1661	Remove the cover .....	1048
Figure 1-1662	Disconnect the keyboard flat cable (keyboard models only) .....	1048
Figure 1-1663	Disconnect connectors .....	1049
Figure 1-1664	Remove three thumbscrews .....	1049
Figure 1-1665	Remove the control panel .....	1050
Figure 1-1666	Remove the SCB cover .....	1050
Figure 1-1667	Remove the small cover .....	1051
Figure 1-1668	Remove the stapler/stacker rear cover .....	1051
Figure 1-1669	Remove the upper rear cover .....	1052
Figure 1-1670	Remove the formatter cover .....	1052
Figure 1-1671	Cable routing for M681dh, M681f, and Flow M681f .....	1053
Figure 1-1672	Disconnect two connectors .....	1053

Figure 1-1673	Disconnect five connectors .....	1054
Figure 1-1674	Disconnect the wireless connector .....	1054
Figure 1-1675	Release the cables .....	1055
Figure 1-1676	Remove four screws .....	1055
Figure 1-1677	Remove three screws .....	1056
Figure 1-1678	Remove the document feeder and image scanner .....	1056
Figure 1-1679	Remove the wireless card .....	1057
Figure 1-1680	Connect the wireless card connector .....	1057
Figure 1-1681	Reinstall the wireless card .....	1058
Figure 1-1682	Install the SCB cables .....	1058
Figure 1-1683	Open the front door .....	1059
Figure 1-1684	Open the stapler door .....	1059
Figure 1-1685	Remove the staple cartridge .....	1060
Figure 1-1686	Remove one screw .....	1060
Figure 1-1687	Remove the stapler cover .....	1061
Figure 1-1688	Remove one screw .....	1061
Figure 1-1689	Remove the stapler/stacker right upper cover .....	1062
Figure 1-1690	Remove the stapler rear cover .....	1062
Figure 1-1691	Remove the stapler/stacker rear corner cover .....	1063
Figure 1-1692	Remove two screws .....	1063
Figure 1-1693	Remove the cable guide .....	1064
Figure 1-1694	Disconnect one connector .....	1064
Figure 1-1695	Remove two screws .....	1065
Figure 1-1696	Remove the stapler/stacker .....	1065
Figure 1-1697	Remove the face-down front cover .....	1066
Figure 1-1698	Install the cover .....	1066
Figure 1-1699	Remove the top cover .....	1067
Figure 1-1700	Remove the right cover .....	1068
Figure 1-1701	Remove the front cover .....	1068
Figure 1-1702	Remove the rear upper cover .....	1069
Figure 1-1703	Remove two screws and the face-down cover .....	1070
Figure 1-1704	Remove two screws and release one tab .....	1070
Figure 1-1705	Remove one screw and the main cover .....	1071
Figure 1-1706	Tilt the control panel up .....	1071
Figure 1-1707	Remove the cover .....	1072
Figure 1-1708	Remove one thumbscrew .....	1072
Figure 1-1709	Release the control panel .....	1073
Figure 1-1710	Disconnect two connectors .....	1073
Figure 1-1711	Remove the control panel .....	1074
Figure 1-1712	Remove the NFC cover .....	1075
Figure 1-1713	Remove one screw and release one tab .....	1075

Figure 1-1714	Release two tabs .....	1076
Figure 1-1715	Remove the top cover .....	1076
Figure 1-1716	Remove the output bin .....	1077
Figure 1-1717	Remove the formatter cover .....	1078
Figure 1-1718	Remove the left rear cover .....	1078
Figure 1-1719	Install the left rear cover .....	1079
Figure 1-1720	Remove two screws and the rear cover .....	1079
Figure 1-1721	Locate the fax PCA .....	1080
Figure 1-1722	Remove the fax PCA .....	1080
Figure 1-1723	Release the HDD .....	1081
Figure 1-1724	Remove the HDD .....	1081
Figure 1-1725	Remove the formatter .....	1082
Figure 1-1726	Disconnect one connector and remove four screws .....	1082
Figure 1-1727	Tilt the formatter case .....	1083
Figure 1-1728	Remove the cable guide .....	1083
Figure 1-1729	Install the cable guide .....	1084
Figure 1-1730	Check the IOD cable .....	1084
Figure 1-1731	Remove the DC controller PCA .....	1085
Figure 1-1732	Check the yellow cable .....	1085
Figure 1-1733	Remove the DC controller stay .....	1086
Figure 1-1734	Disconnect eight connectors .....	1086
Figure 1-1735	Remove the upper HVPS .....	1087
Figure 1-1736	Disconnect five connectors and remove two screws .....	1087
Figure 1-1737	Remove two handles .....	1088
Figure 1-1738	Remove the low-voltage power supply .....	1088
Figure 1-1739	Disconnect one connector .....	1089
Figure 1-1740	Remove two screws and release one tab .....	1089
Figure 1-1741	Remove the link arm .....	1090
Figure 1-1742	Remove three screws .....	1090
Figure 1-1743	Remove two screws .....	1091
Figure 1-1744	Disconnect five connectors and release cables .....	1091
Figure 1-1745	Remove three screws .....	1092
Figure 1-1746	Disconnect three connectors .....	1092
Figure 1-1747	Alienation lever positions .....	1093
Figure 1-1748	Remove the formatter cover .....	1095
Figure 1-1749	Remove the left rear cover .....	1096
Figure 1-1750	Install the left rear cover .....	1096
Figure 1-1751	Remove two screws and the rear cover .....	1097
Figure 1-1752	Locate the fax PCA .....	1097
Figure 1-1753	Remove the fax PCA .....	1098
Figure 1-1754	Release the HDD .....	1098

Figure 1-1755	Remove the HDD .....	1099
Figure 1-1756	Remove the formatter .....	1099
Figure 1-1757	Disconnect one connector and remove four screws .....	1100
Figure 1-1758	Tilt the formatter case .....	1100
Figure 1-1759	Remove the cable guide .....	1101
Figure 1-1760	Install the cable guide .....	1101
Figure 1-1761	Check the IOD cable .....	1102
Figure 1-1762	Remove the DC controller PCA .....	1102
Figure 1-1763	Check the yellow cable .....	1103
Figure 1-1764	Remove the DC controller stay .....	1103
Figure 1-1765	Remove the fuser motor .....	1104
Figure 1-1766	Reinstall the screws .....	1104
Figure 1-1767	Open the right door .....	1108
Figure 1-1768	Remove the fuser .....	1108
Figure 1-1769	Open the right door .....	1109
Figure 1-1770	Lower the transfer assembly .....	1109
Figure 1-1771	Grasp the two blue handles .....	1110
Figure 1-1772	Pull the ITB partially out of the printer .....	1110
Figure 1-1773	Remove the ITB .....	1111
Figure 1-1774	Tilt the control panel and open the document feeder .....	1111
Figure 1-1775	Release five tabs .....	1112
Figure 1-1776	Remove the cover .....	1112
Figure 1-1777	Disconnect the keyboard flat cable .....	1113
Figure 1-1778	Slide the keyboard tray out .....	1113
Figure 1-1779	Release two tabs .....	1114
Figure 1-1780	Remove the keyboard .....	1114
Figure 1-1781	Tilt the control panel forward and open the document feeder .....	1115
Figure 1-1782	Release five tabs .....	1115
Figure 1-1783	Remove the cover .....	1116
Figure 1-1784	Disconnect the keyboard flat cable (keyboard models only) .....	1116
Figure 1-1785	Disconnect connectors .....	1117
Figure 1-1786	Remove three thumbscrews .....	1117
Figure 1-1787	Remove the control panel .....	1118
Figure 1-1788	Remove the SCB cover .....	1118
Figure 1-1789	Remove the small cover .....	1119
Figure 1-1790	Remove the stapler/stacker rear cover .....	1119
Figure 1-1791	Remove the upper rear cover .....	1120
Figure 1-1792	Remove the formatter cover .....	1120
Figure 1-1793	Cable routing for M681dh, M681f, and Flow M681f .....	1121
Figure 1-1794	Disconnect two connectors .....	1121
Figure 1-1795	Disconnect five connectors .....	1122

Figure 1-1796	Disconnect the wireless connector .....	1122
Figure 1-1797	Release the cables .....	1123
Figure 1-1798	Remove four screws .....	1123
Figure 1-1799	Remove three screws .....	1124
Figure 1-1800	Remove the document feeder and image scanner .....	1124
Figure 1-1801	Remove the wireless card .....	1125
Figure 1-1802	Connect the wireless card connector .....	1125
Figure 1-1803	Reinstall the wireless card .....	1126
Figure 1-1804	Install the SCB cables .....	1126
Figure 1-1805	Open the front door .....	1127
Figure 1-1806	Open the stapler door .....	1127
Figure 1-1807	Remove the staple cartridge .....	1128
Figure 1-1808	Remove one screw .....	1128
Figure 1-1809	Remove the stapler cover .....	1129
Figure 1-1810	Remove one screw .....	1129
Figure 1-1811	Remove the stapler/stacker right upper cover .....	1130
Figure 1-1812	Remove the stapler rear cover .....	1130
Figure 1-1813	Remove the stapler/stacker rear corner cover .....	1131
Figure 1-1814	Remove two screws .....	1131
Figure 1-1815	Remove the cable guide .....	1132
Figure 1-1816	Disconnect one connector .....	1132
Figure 1-1817	Remove two screws .....	1133
Figure 1-1818	Remove the stapler/stacker .....	1133
Figure 1-1819	Remove the face-down front cover .....	1134
Figure 1-1820	Install the cover .....	1134
Figure 1-1821	Remove the top cover .....	1135
Figure 1-1822	Remove the right cover .....	1136
Figure 1-1823	Remove the front cover .....	1136
Figure 1-1824	Remove the rear upper cover .....	1137
Figure 1-1825	Remove two screws and the face-down cover .....	1138
Figure 1-1826	Remove two screws and release one tab .....	1138
Figure 1-1827	Remove one screw and the main cover .....	1139
Figure 1-1828	Tilt the control panel up .....	1139
Figure 1-1829	Remove the cover .....	1140
Figure 1-1830	Remove one thumbscrew .....	1140
Figure 1-1831	Release the control panel .....	1141
Figure 1-1832	Disconnect two connectors .....	1141
Figure 1-1833	Remove the control panel .....	1142
Figure 1-1834	Remove the NFC cover .....	1143
Figure 1-1835	Remove one screw and release one tab .....	1143
Figure 1-1836	Release two tabs .....	1144

Figure 1-1837	Remove the top cover .....	1144
Figure 1-1838	Remove the output bin .....	1145
Figure 1-1839	Remove the formatter cover .....	1146
Figure 1-1840	Remove the left rear cover .....	1146
Figure 1-1841	Install the left rear cover .....	1147
Figure 1-1842	Remove two screws and the rear cover .....	1147
Figure 1-1843	Locate the fax PCA .....	1148
Figure 1-1844	Remove the fax PCA .....	1148
Figure 1-1845	Release the HDD .....	1149
Figure 1-1846	Remove the HDD .....	1149
Figure 1-1847	Remove the formatter .....	1150
Figure 1-1848	Disconnect one connector and remove four screws .....	1150
Figure 1-1849	Tilt the formatter case .....	1151
Figure 1-1850	Remove the cable guide .....	1151
Figure 1-1851	Install the cable guide .....	1152
Figure 1-1852	Check the IOD cable .....	1152
Figure 1-1853	Remove the DC controller PCA .....	1153
Figure 1-1854	Check the yellow cable .....	1153
Figure 1-1855	Remove the DC controller stay .....	1154
Figure 1-1856	Disconnect eight connectors .....	1154
Figure 1-1857	Remove the upper HVPS .....	1155
Figure 1-1858	Remove the connector cover .....	1155
Figure 1-1859	Remove the upper right inner cover .....	1156
Figure 1-1860	Remove three screws and the stay .....	1156
Figure 1-1861	Release the cable guide .....	1157
Figure 1-1862	Remove the fuser drive assembly .....	1157
Figure 1-1863	Remove the formatter cover .....	1160
Figure 1-1864	Remove the left rear cover .....	1161
Figure 1-1865	Install the left rear cover .....	1161
Figure 1-1866	Remove two screws and the rear cover .....	1162
Figure 1-1867	Disconnect five connectors and remove two screws .....	1162
Figure 1-1868	Remove two handles .....	1163
Figure 1-1869	Remove the low-voltage power supply .....	1163
Figure 1-1870	Remove the developer alienation motor .....	1164
Figure 1-1871	Remove the formatter cover .....	1166
Figure 1-1872	Remove the left rear cover .....	1166
Figure 1-1873	Install the left rear cover .....	1167
Figure 1-1874	Remove two screws and the rear cover .....	1167
Figure 1-1875	Disconnect five connectors and remove two screws .....	1168
Figure 1-1876	Remove two handles .....	1168
Figure 1-1877	Remove the low-voltage power supply .....	1169



Figure 1-1878	Remove the pickup motor .....	1169
Figure 1-1879	Tilt the control panel up .....	1172
Figure 1-1880	Remove the cover .....	1172
Figure 1-1881	Remove one thumbscrew .....	1173
Figure 1-1882	Release the control panel .....	1173
Figure 1-1883	Disconnect two connectors .....	1174
Figure 1-1884	Remove the control panel .....	1174
Figure 1-1885	Remove the NFC cover .....	1175
Figure 1-1886	Remove one screw and release one tab .....	1175
Figure 1-1887	Release two tabs .....	1176
Figure 1-1888	Remove the top cover .....	1176
Figure 1-1889	Remove the formatter cover .....	1177
Figure 1-1890	Remove the output bin .....	1178
Figure 1-1891	Open the right door .....	1178
Figure 1-1892	Remove the fuser .....	1179
Figure 1-1893	Release four tabs .....	1179
Figure 1-1894	Remove the front right inner cover .....	1180
Figure 1-1895	Disconnect three connectors and release one boss .....	1180
Figure 1-1896	Remove the cable guide .....	1181
Figure 1-1897	Remove the cable guide .....	1181
Figure 1-1898	Remove four screws and the delivery assembly .....	1182
Figure 1-1899	Position the tab .....	1182
Figure 1-1900	Rotate the upper and lower parts together .....	1183
Figure 1-1901	Connect the upper and lower parts .....	1183
Figure 1-1902	Install the tabs on the lower shield .....	1184
Figure 1-1903	Lower the end .....	1184
Figure 1-1904	Note the keyed shaft .....	1185
Figure 1-1905	Install the hooks in the slots .....	1185
Figure 1-1906	Remove the formatter cover .....	1188
Figure 1-1907	Tilt the control panel and open the document feeder .....	1189
Figure 1-1908	Release five tabs .....	1189
Figure 1-1909	Remove the cover .....	1190
Figure 1-1910	Disconnect the keyboard flat cable .....	1190
Figure 1-1911	Slide the keyboard tray out .....	1191
Figure 1-1912	Release two tabs .....	1191
Figure 1-1913	Remove the keyboard .....	1192
Figure 1-1914	Tilt the control panel forward and open the document feeder .....	1192
Figure 1-1915	Release five tabs .....	1193
Figure 1-1916	Remove the cover .....	1193
Figure 1-1917	Disconnect the keyboard flat cable (keyboard models only) .....	1194
Figure 1-1918	Disconnect connectors .....	1194

Figure 1-1919	Remove three thumbscrews .....	1195
Figure 1-1920	Remove the control panel .....	1195
Figure 1-1921	Remove the SCB cover .....	1196
Figure 1-1922	Remove the small cover .....	1196
Figure 1-1923	Remove the stapler/stacker rear cover .....	1197
Figure 1-1924	Remove the upper rear cover .....	1197
Figure 1-1925	Remove the formatter cover .....	1198
Figure 1-1926	Cable routing for M681dh, M681f, and Flow M681f .....	1198
Figure 1-1927	Disconnect two connectors .....	1199
Figure 1-1928	Disconnect five connectors .....	1199
Figure 1-1929	Disconnect the wireless connector .....	1200
Figure 1-1930	Release the cables .....	1200
Figure 1-1931	Remove four screws .....	1201
Figure 1-1932	Remove three screws .....	1201
Figure 1-1933	Remove the document feeder and image scanner .....	1202
Figure 1-1934	Remove the wireless card .....	1202
Figure 1-1935	Connect the wireless card connector .....	1203
Figure 1-1936	Reinstall the wireless card .....	1203
Figure 1-1937	Install the SCB cables .....	1204
Figure 1-1938	Open the front door .....	1204
Figure 1-1939	Open the stapler door .....	1205
Figure 1-1940	Remove the staple cartridge .....	1205
Figure 1-1941	Remove one screw .....	1206
Figure 1-1942	Remove the stapler cover .....	1206
Figure 1-1943	Remove one screw .....	1207
Figure 1-1944	Remove the stapler/stacker right upper cover .....	1207
Figure 1-1945	Remove the stapler rear cover .....	1208
Figure 1-1946	Remove the stapler/stacker rear corner cover .....	1208
Figure 1-1947	Remove two screws .....	1209
Figure 1-1948	Remove the cable guide .....	1209
Figure 1-1949	Disconnect one connector .....	1210
Figure 1-1950	Remove two screws .....	1210
Figure 1-1951	Remove the stapler/stacker .....	1211
Figure 1-1952	Remove the face-down front cover .....	1211
Figure 1-1953	Install the cover .....	1212
Figure 1-1954	Remove the top cover .....	1212
Figure 1-1955	Remove the right cover .....	1213
Figure 1-1956	Remove the front cover .....	1213
Figure 1-1957	Remove the rear upper cover .....	1214
Figure 1-1958	Remove two screws and the face-down cover .....	1214
Figure 1-1959	Remove two screws and release one tab .....	1215

Figure 1-1960	Remove one screw and the main cover .....	1215
Figure 1-1961	Remove the output bin .....	1216
Figure 1-1962	Open the right door .....	1216
Figure 1-1963	Remove the fuser .....	1217
Figure 1-1964	Release four tabs .....	1217
Figure 1-1965	Remove the front right inner cover .....	1218
Figure 1-1966	Remove two screws .....	1218
Figure 1-1967	Remove two screws and the metal bracket .....	1219
Figure 1-1968	Disconnect three connectors and remove four screws .....	1219
Figure 1-1969	Position the tab .....	1220
Figure 1-1970	Rotate the upper and lower parts together .....	1220
Figure 1-1971	Connect the upper and lower parts .....	1221
Figure 1-1972	Install the tabs on the lower shield .....	1221
Figure 1-1973	Lower the end .....	1222
Figure 1-1974	Note the keyed shaft .....	1222
Figure 1-1975	Install the hooks in the slots .....	1223
Figure 1-1976	Open the right door .....	1225
Figure 1-1977	Lower the secondary transfer .....	1225
Figure 1-1978	Pivot the media detect assembly up .....	1226
Figure 1-1979	Lower the secondary transfer assembly .....	1226
Figure 1-1980	Release the right hinge .....	1227
Figure 1-1981	Release the left side .....	1227
Figure 1-1982	Remove the secondary transfer assembly .....	1228
Figure 1-1983	Open the right door .....	1230
Figure 1-1984	Lower the secondary transfer .....	1230
Figure 1-1985	Pivot the media detect assembly up .....	1231
Figure 1-1986	Lower the secondary transfer assembly .....	1231
Figure 1-1987	Release the right hinge .....	1232
Figure 1-1988	Release the left side .....	1232
Figure 1-1989	Remove the secondary transfer assembly .....	1233
Figure 1-1990	Remove the formatter cover .....	1233
Figure 1-1991	Remove the left rear cover .....	1234
Figure 1-1992	Install the left rear cover .....	1234
Figure 1-1993	Remove two screws and the rear cover .....	1235
Figure 1-1994	Disconnect four connectors .....	1235
Figure 1-1995	Remove the connector cover .....	1236
Figure 1-1996	Release the cable guide .....	1236
Figure 1-1997	Remove the cable guide .....	1237
Figure 1-1998	Remove three screws .....	1237
Figure 1-1999	Release the assembly from the guide pin .....	1238
Figure 1-2000	Remove the registration assembly .....	1238

Figure 1-2001	Install the tabs in the slots .....	1239
Figure 1-2002	Check the tabs .....	1239
Figure 1-2003	Open the right door .....	1242
Figure 1-2004	Lower the secondary transfer .....	1243
Figure 1-2005	Pivot the media detect assembly up .....	1243
Figure 1-2006	Lower the secondary transfer assembly .....	1244
Figure 1-2007	Release the right hinge .....	1244
Figure 1-2008	Release the left side .....	1245
Figure 1-2009	Remove the secondary transfer assembly .....	1245
Figure 1-2010	Remove the formatter cover .....	1246
Figure 1-2011	Remove the left rear cover .....	1246
Figure 1-2012	Install the left rear cover .....	1247
Figure 1-2013	Remove two screws and the rear cover .....	1247
Figure 1-2014	Disconnect four connectors .....	1248
Figure 1-2015	Remove the connector cover .....	1248
Figure 1-2016	Release the cable guide .....	1249
Figure 1-2017	Remove the cable guide .....	1249
Figure 1-2018	Remove three screws .....	1250
Figure 1-2019	Release the assembly from the guide pin .....	1250
Figure 1-2020	Remove the registration assembly .....	1251
Figure 1-2021	Install the tabs in the slots .....	1251
Figure 1-2022	Check the tabs .....	1252
Figure 1-2023	Remove two screws and the registration density sensor .....	1252
Figure 1-2024	Remove the formatter cover .....	1255
Figure 1-2025	Remove the left rear cover .....	1256
Figure 1-2026	Install the left rear cover .....	1256
Figure 1-2027	Remove two screws and the rear cover .....	1257
Figure 1-2028	Remove one screw and the right rear cover .....	1257
Figure 1-2029	Remove the right handle .....	1258
Figure 1-2030	Install the right handle .....	1258
Figure 1-2031	Open the right door .....	1259
Figure 1-2032	Remove the connector cover .....	1259
Figure 1-2033	Disconnect two connectors .....	1260
Figure 1-2034	Remove two screws and release the left link arm .....	1260
Figure 1-2035	Release the right door strap .....	1261
Figure 1-2036	Remove the right door .....	1261
Figure 1-2037	Open the right door .....	1262
Figure 1-2038	Lower the secondary transfer .....	1262
Figure 1-2039	Pivot the media detect assembly up .....	1263
Figure 1-2040	Lower the secondary transfer assembly .....	1263
Figure 1-2041	Release the right hinge .....	1264

Figure 1-2042	Release the left side .....	1264
Figure 1-2043	Remove the secondary transfer assembly .....	1265
Figure 1-2044	Disconnect five connectors and remove two screws .....	1265
Figure 1-2045	Remove two handles .....	1266
Figure 1-2046	Remove the low-voltage power supply .....	1266
Figure 1-2047	Disconnect one connector .....	1267
Figure 1-2048	Remove two screws and release one tab .....	1267
Figure 1-2049	Disconnect four connectors .....	1268
Figure 1-2050	Remove the connector cover .....	1268
Figure 1-2051	Release the cable guide .....	1269
Figure 1-2052	Remove the cable guide .....	1269
Figure 1-2053	Remove three screws .....	1270
Figure 1-2054	Release the assembly from the guide pin .....	1270
Figure 1-2055	Remove the registration assembly .....	1271
Figure 1-2056	Install the tabs in the slots .....	1271
Figure 1-2057	Check the tabs .....	1272
Figure 1-2058	Remove the feed guide .....	1272
Figure 1-2059	Remove the feed guide .....	1273
Figure 1-2060	Remove the feed roller assembly .....	1273
Figure 1-2061	Check the cable routing .....	1274
Figure 1-2062	Position the gear .....	1274
Figure 1-2063	Install the tabs .....	1275
Figure 1-2064	Check the tabs .....	1275
Figure 1-2065	Remove the formatter cover .....	1278
Figure 1-2066	Remove the left rear cover .....	1279
Figure 1-2067	Install the left rear cover .....	1279
Figure 1-2068	Remove two screws and the rear cover .....	1280
Figure 1-2069	Remove one screw and the right rear cover .....	1280
Figure 1-2070	Remove the right handle .....	1281
Figure 1-2071	Install the right handle .....	1281
Figure 1-2072	Open the right door .....	1282
Figure 1-2073	Remove the connector cover .....	1282
Figure 1-2074	Disconnect two connectors .....	1283
Figure 1-2075	Remove two screws and release the left link arm .....	1283
Figure 1-2076	Release the right door strap .....	1284
Figure 1-2077	Remove the right door .....	1284
Figure 1-2078	Open the right door .....	1285
Figure 1-2079	Lower the secondary transfer .....	1285
Figure 1-2080	Pivot the media detect assembly up .....	1286
Figure 1-2081	Lower the secondary transfer assembly .....	1286
Figure 1-2082	Release the right hinge .....	1287

Figure 1-2083	Release the left side .....	1287
Figure 1-2084	Remove the secondary transfer assembly .....	1288
Figure 1-2085	Disconnect five connectors and remove two screws .....	1288
Figure 1-2086	Remove two handles .....	1289
Figure 1-2087	Remove the low-voltage power supply .....	1289
Figure 1-2088	Disconnect one connector .....	1290
Figure 1-2089	Remove two screws and release one tab .....	1290
Figure 1-2090	Disconnect four connectors .....	1291
Figure 1-2091	Remove the connector cover .....	1291
Figure 1-2092	Release the cable guide .....	1292
Figure 1-2093	Remove the cable guide .....	1292
Figure 1-2094	Remove three screws .....	1293
Figure 1-2095	Release the assembly from the guide pin .....	1293
Figure 1-2096	Remove the registration assembly .....	1294
Figure 1-2097	Install the tabs in the slots .....	1294
Figure 1-2098	Check the tabs .....	1295
Figure 1-2099	Remove the feed guide .....	1295
Figure 1-2100	Remove the feed guide .....	1296
Figure 1-2101	Remove the feed roller assembly .....	1296
Figure 1-2102	Check the cable routing .....	1297
Figure 1-2103	Position the gear .....	1297
Figure 1-2104	Install the tabs .....	1298
Figure 1-2105	Check the tabs .....	1298
Figure 1-2106	Remove four screws .....	1299
Figure 1-2107	Remove the pickup assembly .....	1299
Figure 1-2108	Position the shaft and gear .....	1300
Figure 1-2109	Remove the formatter cover .....	1302
Figure 1-2110	Remove the left rear cover .....	1303
Figure 1-2111	Install the left rear cover .....	1303
Figure 1-2112	Remove two screws and the rear cover .....	1304
Figure 1-2113	Disconnect five connectors and remove two screws .....	1304
Figure 1-2114	Remove two handles .....	1305
Figure 1-2115	Remove the low-voltage power supply .....	1305
Figure 1-2116	Disconnect one connector .....	1306
Figure 1-2117	Remove two screws and release one tab .....	1306
Figure 1-2118	Disconnect one connector and remove one screw .....	1307
Figure 1-2119	Remove the connector holder .....	1307
Figure 1-2120	Remove the connector from the holder .....	1308
Figure 1-2121	Pull the tray out .....	1311
Figure 1-2122	Remove the tray .....	1311
Figure 1-2123	Remove Tray 4 .....	1314

Figure 1-2124	Release the link from the door .....	1319
Figure 1-2125	Remove the link .....	1319
Figure 1-2126	Release the link from the door .....	1322
Figure 1-2127	Remove the link .....	1322
Figure 1-2128	Release one tab and remove the right door .....	1323
Figure 1-2129	Remove the rear cover .....	1325
Figure 1-2130	Remove the rear cover .....	1327
Figure 1-2131	Release three tabs and remove the cover .....	1327
Figure 1-2132	Release the link from the door .....	1330
Figure 1-2133	Remove the link .....	1330
Figure 1-2134	Remove two screws and the front inner cover .....	1331
Figure 1-2135	Remove the right lower cover .....	1331
Figure 1-2136	Remove the rear cover .....	1334
Figure 1-2137	Remove the auto-close assembly .....	1334
Figure 1-2138	Remove the rear cover .....	1337
Figure 1-2139	Release the link from the door .....	1338
Figure 1-2140	Remove the link .....	1338
Figure 1-2141	Release one tab and remove the right door .....	1339
Figure 1-2142	Remove two screws and the front inner cover .....	1339
Figure 1-2143	Remove the right lower cover .....	1340
Figure 1-2144	Remove two screws and the hinge .....	1340
Figure 1-2145	Remove four screws and the plate .....	1341
Figure 1-2146	Remove two screws and the drive assembly .....	1341
Figure 1-2147	Remove the rear cover .....	1344
Figure 1-2148	Release the link from the door .....	1345
Figure 1-2149	Remove the link .....	1345
Figure 1-2150	Release one tab and remove the right door .....	1346
Figure 1-2151	Remove two screws and the front inner cover .....	1346
Figure 1-2152	Remove the right lower cover .....	1347
Figure 1-2153	Remove two screws and the hinge .....	1347
Figure 1-2154	Remove four screws and the plate .....	1348
Figure 1-2155	Remove two screws and the drive assembly .....	1348
Figure 1-2156	Disconnect one connector .....	1349
Figure 1-2157	Remove four screws and the plate .....	1349
Figure 1-2158	Disconnect three connectors .....	1350
Figure 1-2159	Remove two screws and the lifter drive assembly .....	1350
Figure 1-2160	Remove the lifter drive frame and gears .....	1351
Figure 1-2161	Remove the rear cover .....	1353
Figure 1-2162	Release the link from the door .....	1354
Figure 1-2163	Remove the link .....	1354
Figure 1-2164	Release one tab and remove the right door .....	1355

Figure 1-2165	Remove two screws and the front inner cover .....	1355
Figure 1-2166	Remove the right lower cover .....	1356
Figure 1-2167	Remove two screws and the hinge .....	1356
Figure 1-2168	Remove four screws and the plate .....	1357
Figure 1-2169	Remove two screws and the drive assembly .....	1357
Figure 1-2170	Disconnect one connector .....	1358
Figure 1-2171	Remove four screws and the plate .....	1358
Figure 1-2172	Disconnect three connectors .....	1359
Figure 1-2173	Remove two screws and the lifter drive assembly .....	1359
Figure 1-2174	Remove the lifter drive frame and gears .....	1360
Figure 1-2175	Open the feed guide .....	1360
Figure 1-2176	Remove one screw and the connector cover .....	1361
Figure 1-2177	Remove the paper feed assembly .....	1361
Figure 1-2178	Remove the rear cover .....	1364
Figure 1-2179	Release the link from the door .....	1365
Figure 1-2180	Remove the link .....	1365
Figure 1-2181	Release one tab and remove the right door .....	1366
Figure 1-2182	Remove two screws and the front inner cover .....	1366
Figure 1-2183	Remove the right lower cover .....	1367
Figure 1-2184	Remove two screws and the hinge .....	1367
Figure 1-2185	Remove four screws and the plate .....	1368
Figure 1-2186	Remove two screws and the drive assembly .....	1368
Figure 1-2187	Disconnect one connector .....	1369
Figure 1-2188	Remove four screws and the plate .....	1369
Figure 1-2189	Disconnect three connectors .....	1370
Figure 1-2190	Remove two screws and the lifter drive assembly .....	1370
Figure 1-2191	Remove the lifter drive frame and gears .....	1371
Figure 1-2192	Open the feed guide .....	1371
Figure 1-2193	Remove one screw and the connector cover .....	1372
Figure 1-2194	Remove the paper feed assembly .....	1372
Figure 1-2195	Remove the paper pickup assembly .....	1373
Figure 1-2196	Remove the gear .....	1373
Figure 1-2197	Remove the rear cover .....	1376
Figure 1-2198	Remove the paper feeder controller PCA .....	1376
Figure 1-2199	Remove the rear cover .....	1379
Figure 1-2200	Disconnect one connector .....	1379
Figure 1-2201	Remove the holder .....	1380
Figure 1-2202	Release the wires .....	1380
Figure 1-2203	Remove the size-detect switch .....	1381
Figure 1-2204	Disconnect one connector .....	1381
Figure 1-2205	Remove the rear cover .....	1384



Figure 1-2206	Disconnect one connector .....	1384
Figure 1-2207	Remove the holder .....	1385
Figure 1-2208	Release two tabs .....	1385
Figure 1-2209	Remove the cable assembly .....	1386
Figure 1-2210	Remove the rear cover .....	1388
Figure 1-2211	Disconnect one connector .....	1388
Figure 1-2212	Remove one screw .....	1389
Figure 1-2213	Remove the drawer holder .....	1389
Figure 1-2214	Release two tabs .....	1390
Figure 1-2215	Remove the cable assembly .....	1390
Figure 1-2216	Remove the left cover .....	1394
Figure 1-2217	Lift the link arm end .....	1396
Figure 1-2218	Remove the link arm .....	1396
Figure 1-2219	Lift the link arm end .....	1399
Figure 1-2220	Remove the link arm .....	1399
Figure 1-2221	Remove the right door .....	1400
Figure 1-2222	Remove one screw .....	1402
Figure 1-2223	Remove the rear cover .....	1402
Figure 1-2224	Remove the front door .....	1405
Figure 1-2225	Remove the left cover .....	1407
Figure 1-2226	Remove the left lower cover .....	1407
Figure 1-2227	Remove one screw .....	1410
Figure 1-2228	Remove the rear cover .....	1410
Figure 1-2229	Remove the front door .....	1411
Figure 1-2230	Remove the right door .....	1411
Figure 1-2231	Remove four screws and the hinge .....	1412
Figure 1-2232	Remove four screws and the inner cover .....	1412
Figure 1-2233	Remove the right lower cover .....	1413
Figure 1-2234	Check spring position .....	1413
Figure 1-2235	Remove one screw .....	1416
Figure 1-2236	Remove the rear cover .....	1416
Figure 1-2237	Remove the front door .....	1417
Figure 1-2238	Remove the right door .....	1417
Figure 1-2239	Remove the left cover .....	1418
Figure 1-2240	Remove the left lower cover .....	1418
Figure 1-2241	Remove four screws and the hinge .....	1419
Figure 1-2242	Remove four screws and the inner cover .....	1419
Figure 1-2243	Remove the right lower cover .....	1420
Figure 1-2244	Check spring position .....	1420
Figure 1-2245	Remove the rear lower cover .....	1421
Figure 1-2246	Remove one screw .....	1423

Figure 1-2247	Remove the rear cover .....	1423
Figure 1-2248	Remove the front door .....	1424
Figure 1-2249	Remove the right door .....	1424
Figure 1-2250	Remove the left cover .....	1425
Figure 1-2251	Remove the left lower cover .....	1425
Figure 1-2252	Remove four screws and the hinge .....	1426
Figure 1-2253	Remove four screws and the inner cover .....	1426
Figure 1-2254	Remove the right lower cover .....	1427
Figure 1-2255	Check spring position .....	1427
Figure 1-2256	Remove the front lower cover .....	1428
Figure 1-2257	Remove one screw .....	1430
Figure 1-2258	Remove the rear cover .....	1430
Figure 1-2259	Remove the right door .....	1431
Figure 1-2260	Remove four screws and the hinge .....	1431
Figure 1-2261	Release two tabs .....	1432
Figure 1-2262	Disconnect one connector .....	1432
Figure 1-2263	Check spring position .....	1433
Figure 1-2264	Remove one screw .....	1435
Figure 1-2265	Remove the rear cover .....	1435
Figure 1-2266	Disconnect two connectors and remove two screws .....	1436
Figure 1-2267	Remove the size sensor .....	1436
Figure 1-2268	Remove one screw .....	1439
Figure 1-2269	Remove the rear cover .....	1439
Figure 1-2270	Disconnect one connector and release retainer .....	1440
Figure 1-2271	Remove one screw .....	1440
Figure 1-2272	Remove the drawer connector holder and cable assembly .....	1441
Figure 1-2273	Release two tabs .....	1441
Figure 1-2274	Remove the cable assembly .....	1442
Figure 1-2275	Remove the auto-close assembly .....	1444
Figure 1-2276	Remove the right door .....	1446
Figure 1-2277	Remove four screws and the hinge .....	1446
Figure 1-2278	Remove the paper pickup assembly .....	1447
Figure 1-2279	Check spring position .....	1447
Figure 1-2280	Remove one screw .....	1450
Figure 1-2281	Remove the rear cover .....	1450
Figure 1-2282	Remove the feed motor .....	1451
Figure 1-2283	Remove one screw .....	1453
Figure 1-2284	Remove the rear cover .....	1453
Figure 1-2285	Remove the feed motor .....	1454
Figure 1-2286	Disconnect three connectors .....	1454
Figure 1-2287	Remove the drive assembly .....	1455

Figure 1-2288	Remove one screw .....	1457
Figure 1-2289	Remove the rear cover .....	1457
Figure 1-2290	Remove the feed motor .....	1458
Figure 1-2291	Disconnect three connectors .....	1458
Figure 1-2292	Remove the drive assembly .....	1459
Figure 1-2293	Disconnect one connector .....	1459
Figure 1-2294	Remove four screws and the pickup alienation holder .....	1460
Figure 1-2295	Remove one screw .....	1462
Figure 1-2296	Remove the rear cover .....	1462
Figure 1-2297	Remove the feed motor .....	1463
Figure 1-2298	Disconnect three connectors .....	1463
Figure 1-2299	Remove the drive assembly .....	1464
Figure 1-2300	Disconnect one connector .....	1464
Figure 1-2301	Remove four screws and the pickup alienation holder .....	1465
Figure 1-2302	Remove three screws and the lifter drive assembly .....	1465
Figure 1-2303	Remove one screw .....	1468
Figure 1-2304	Remove the rear cover .....	1468
Figure 1-2305	Remove the controller PCA .....	1469
Figure 1-2306	Remove the caster cover .....	1472
Figure 1-2307	Position the caster wheel .....	1472
Figure 1-2308	Remove the left cover .....	1475
Figure 1-2309	Lift the link arm end .....	1477
Figure 1-2310	Remove the link arm .....	1477
Figure 1-2311	Lift the link arm end .....	1480
Figure 1-2312	Remove the link arm .....	1480
Figure 1-2313	Remove the right door .....	1481
Figure 1-2314	Remove one screw .....	1483
Figure 1-2315	Remove the rear cover .....	1483
Figure 1-2316	Remove the left cover .....	1486
Figure 1-2317	Remove the left lower cover .....	1486
Figure 1-2318	Remove one screw .....	1489
Figure 1-2319	Remove the rear cover .....	1489
Figure 1-2320	Remove the right door .....	1490
Figure 1-2321	Remove four screws and the hinge .....	1490
Figure 1-2322	Remove two screws and the inner cover .....	1491
Figure 1-2323	Remove the right lower cover .....	1491
Figure 1-2324	Check spring position .....	1492
Figure 1-2325	Remove one screw .....	1494
Figure 1-2326	Remove the rear cover .....	1494
Figure 1-2327	Remove the right door .....	1495
Figure 1-2328	Remove the left cover .....	1495

Figure 1-2329	Remove the left lower cover .....	1496
Figure 1-2330	Remove four screws and the hinge .....	1496
Figure 1-2331	Remove two screws and the inner cover .....	1497
Figure 1-2332	Remove the right lower cover .....	1497
Figure 1-2333	Check spring position .....	1498
Figure 1-2334	Remove the rear lower cover .....	1498
Figure 1-2335	Remove one screw .....	1501
Figure 1-2336	Remove the rear cover .....	1501
Figure 1-2337	Remove the right door .....	1502
Figure 1-2338	Remove the left cover .....	1502
Figure 1-2339	Remove the left lower cover .....	1503
Figure 1-2340	Remove four screws and the hinge .....	1503
Figure 1-2341	Remove two screws and the inner cover .....	1504
Figure 1-2342	Remove the right lower cover .....	1504
Figure 1-2343	Check spring position .....	1505
Figure 1-2344	Remove the front lower cover .....	1505
Figure 1-2345	Remove one screw .....	1508
Figure 1-2346	Remove the rear cover .....	1508
Figure 1-2347	Remove the right door .....	1509
Figure 1-2348	Remove four screws and the hinge .....	1509
Figure 1-2349	Release two tabs .....	1510
Figure 1-2350	Disconnect one connector .....	1510
Figure 1-2351	Check spring position .....	1511
Figure 1-2352	Remove one screw .....	1513
Figure 1-2353	Remove the rear cover .....	1513
Figure 1-2354	Disconnect two connectors and remove two screws .....	1514
Figure 1-2355	Remove the size sensor .....	1514
Figure 1-2356	Remove one screw .....	1517
Figure 1-2357	Remove the rear cover .....	1517
Figure 1-2358	Disconnect one connector and release retainer .....	1518
Figure 1-2359	Remove one screw .....	1518
Figure 1-2360	Remove the drawer connector holder and cable assembly .....	1519
Figure 1-2361	Release two tabs .....	1519
Figure 1-2362	Remove the cable assembly .....	1520
Figure 1-2363	Remove the auto-close assemblies .....	1522
Figure 1-2364	Remove the right door .....	1525
Figure 1-2365	Remove four screws and the hinge .....	1525
Figure 1-2366	Remove the paper pickup assemblies .....	1526
Figure 1-2367	Check spring position .....	1527
Figure 1-2368	Remove one screw .....	1529
Figure 1-2369	Remove the rear cover .....	1529

Figure 1-2370	Remove the feed motors .....	1530
Figure 1-2371	Remove one screw .....	1533
Figure 1-2372	Remove the rear cover .....	1533
Figure 1-2373	Remove the feed motors .....	1534
Figure 1-2374	Disconnect two connectors .....	1535
Figure 1-2375	Remove the drive assembly .....	1535
Figure 1-2376	Remove one screw .....	1538
Figure 1-2377	Remove the rear cover .....	1538
Figure 1-2378	Remove the feed motors .....	1539
Figure 1-2379	Disconnect three connectors .....	1539
Figure 1-2380	Remove the drive assembly .....	1540
Figure 1-2381	Remove one screw .....	1542
Figure 1-2382	Remove the rear cover .....	1542
Figure 1-2383	Remove the feed motors .....	1543
Figure 1-2384	Disconnect two connectors .....	1544
Figure 1-2385	Remove the drive assembly .....	1544
Figure 1-2386	Disconnect three connectors .....	1545
Figure 1-2387	Remove the drive assembly .....	1545
Figure 1-2388	Disconnect one connector .....	1546
Figure 1-2389	Remove four screws and the pickup alienation holder .....	1546
Figure 1-2390	Remove one screw .....	1549
Figure 1-2391	Remove the rear cover .....	1549
Figure 1-2392	Remove the feed motors .....	1550
Figure 1-2393	Disconnect two connectors .....	1551
Figure 1-2394	Remove the drive assembly .....	1551
Figure 1-2395	Disconnect three connectors .....	1552
Figure 1-2396	Remove the drive assembly .....	1552
Figure 1-2397	Disconnect one connector .....	1553
Figure 1-2398	Remove four screws and the pickup alienation holder .....	1553
Figure 1-2399	Remove the lifter drive assembly assemblies .....	1554
Figure 1-2400	Remove one screw .....	1556
Figure 1-2401	Remove the rear cover .....	1556
Figure 1-2402	Remove the feed motors .....	1557
Figure 1-2403	Disconnect two connectors .....	1558
Figure 1-2404	Remove the drive assembly .....	1558
Figure 1-2405	Remove three screws and the lifter drive assembly .....	1559
Figure 1-2406	Remove one screw .....	1561
Figure 1-2407	Remove the rear cover .....	1561
Figure 1-2408	Remove the controller PCA .....	1562
Figure 1-2409	Remove the left cover .....	1565
Figure 1-2410	Lift the link arm end .....	1567

Figure 1-2411	Remove the link arm .....	1567
Figure 1-2412	Lift the link arm end .....	1570
Figure 1-2413	Remove the link arm .....	1570
Figure 1-2414	Remove the right door .....	1571
Figure 1-2415	Remove one screw .....	1573
Figure 1-2416	Remove the rear cover .....	1573
Figure 1-2417	Remove Tray 4 .....	1576
Figure 1-2418	Remove the left cover .....	1577
Figure 1-2419	Remove the left lower cover .....	1577
Figure 1-2420	Remove one screw .....	1580
Figure 1-2421	Remove the rear cover .....	1580
Figure 1-2422	Remove the right door .....	1581
Figure 1-2423	Remove four screws and the hinge .....	1581
Figure 1-2424	Remove two screws and the inner cover .....	1582
Figure 1-2425	Remove the right lower cover .....	1582
Figure 1-2426	Remove one screw .....	1585
Figure 1-2427	Remove the rear cover .....	1585
Figure 1-2428	Remove the right door .....	1586
Figure 1-2429	Remove the left cover .....	1586
Figure 1-2430	Remove the left lower cover .....	1587
Figure 1-2431	Remove four screws and the hinge .....	1587
Figure 1-2432	Remove two screws and the inner cover .....	1588
Figure 1-2433	Remove the right lower cover .....	1588
Figure 1-2434	Remove the rear lower cover .....	1589
Figure 1-2435	Remove one screw .....	1591
Figure 1-2436	Remove the rear cover .....	1591
Figure 1-2437	Remove the right door .....	1592
Figure 1-2438	Remove four screws and the hinge .....	1592
Figure 1-2439	Release two tabs .....	1593
Figure 1-2440	Disconnect one connector .....	1593
Figure 1-2441	Check spring position .....	1594
Figure 1-2442	Remove one screw .....	1596
Figure 1-2443	Remove the rear cover .....	1596
Figure 1-2444	Disconnect two connectors and remove two screws .....	1597
Figure 1-2445	Remove the size sensor .....	1597
Figure 1-2446	Remove Tray 4 .....	1600
Figure 1-2447	Remove one screw .....	1601
Figure 1-2448	Remove the rear cover .....	1601
Figure 1-2449	Disconnect one connector .....	1602
Figure 1-2450	Remove one screw .....	1602
Figure 1-2451	Remove the size sensor .....	1603

Figure 1-2452	Remove one screw .....	1605
Figure 1-2453	Remove the rear cover .....	1605
Figure 1-2454	Disconnect one connector and release retainer .....	1606
Figure 1-2455	Remove one screw .....	1606
Figure 1-2456	Remove the drawer connector holder and cable assembly .....	1607
Figure 1-2457	Release two tabs .....	1607
Figure 1-2458	Remove the cable assembly .....	1608
Figure 1-2459	Remove the auto-close assembly .....	1610
Figure 1-2460	Remove the tray auto-close assembly .....	1612
Figure 1-2461	Remove the right door .....	1614
Figure 1-2462	Remove four screws and the hinge .....	1614
Figure 1-2463	Remove the paper pickup assemblies .....	1615
Figure 1-2464	Remove one screw .....	1617
Figure 1-2465	Remove the rear cover .....	1617
Figure 1-2466	Remove the left cover .....	1618
Figure 1-2467	Disconnect two connectors .....	1618
Figure 1-2468	Remove the tray lifter motor drive assembly .....	1619
Figure 1-2469	Remove one screw .....	1621
Figure 1-2470	Remove the rear cover .....	1621
Figure 1-2471	Remove the feed motors .....	1622
Figure 1-2472	Remove one screw .....	1624
Figure 1-2473	Remove the rear cover .....	1624
Figure 1-2474	Remove the feed motors .....	1625
Figure 1-2475	Disconnect two connectors .....	1625
Figure 1-2476	Remove the drive assembly .....	1626
Figure 1-2477	Remove one screw .....	1628
Figure 1-2478	Remove the rear cover .....	1628
Figure 1-2479	Remove the feed motors .....	1629
Figure 1-2480	Disconnect three connectors .....	1629
Figure 1-2481	Remove the drive assembly .....	1630
Figure 1-2482	Remove one screw .....	1632
Figure 1-2483	Remove the rear cover .....	1632
Figure 1-2484	Remove the feed motors .....	1633
Figure 1-2485	Disconnect two connectors .....	1633
Figure 1-2486	Remove the drive assembly .....	1634
Figure 1-2487	Disconnect three connectors .....	1634
Figure 1-2488	Remove the drive assembly .....	1635
Figure 1-2489	Disconnect one connector .....	1635
Figure 1-2490	Remove four screws and the pickup alienation holder .....	1636
Figure 1-2491	Remove one screw .....	1638
Figure 1-2492	Remove the rear cover .....	1638

Figure 1-2493	Remove the feed motors .....	1639
Figure 1-2494	Disconnect two connectors .....	1639
Figure 1-2495	Remove the drive assembly .....	1640
Figure 1-2496	Disconnect three connectors .....	1640
Figure 1-2497	Remove the drive assembly .....	1641
Figure 1-2498	Disconnect one connector .....	1641
Figure 1-2499	Remove four screws and the pickup alienation holder .....	1642
Figure 1-2500	Remove three screws and the lifter drive assembly .....	1642
Figure 1-2501	Remove one screw .....	1645
Figure 1-2502	Remove the rear cover .....	1645
Figure 1-2503	Remove the controller PCA .....	1646
Figure 2-1	Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 models only)	1660
Figure 2-2	Covers (M652/M653/E65050/E65060/E65150/E65160) .....	1662
Figure 2-3	Covers (M681/M682/E67550/E67560/E67650/E67660) .....	1664
Figure 2-4	Internal components (1 of 6) .....	1666
Figure 2-5	Internal components (2 of 5) .....	1668
Figure 2-6	Internal components (3 of 6) .....	1670
Figure 2-7	Internal components (4 of 6) .....	1672
Figure 2-8	Internal components (5 of 6) .....	1674
Figure 2-9	Internal components (6 of 6) .....	1676
Figure 2-10	550-sheet paper feeder covers .....	1678
Figure 2-11	550-sheet paper feeder main body .....	1680
Figure 2-12	1x550-sheet paper feeder covers .....	1682
Figure 2-13	1x550-sheet paper feeder main body .....	1684
Figure 2-14	3x550-sheet paper feeder covers .....	1686
Figure 2-15	3x550-sheet paper feeder main body .....	1688
Figure 2-16	HCI covers .....	1690
Figure 2-17	HCI main body .....	1692
Figure 2-18	Stapler/stacker covers .....	1694
Figure 2-19	Stapler/stacker main body .....	1696



---

# 1 Removal and replacement

- [HP service and support](#)
- [Removal and replacement strategy](#)
- [Service approach](#)
- [Removal and replacement procedures](#)

# HP service and support

Learn about HP access to additional service and support information.

## Additional service and support for channel partners

Channel partners, go to [partner.hp.com](https://partner.hp.com), and then use the steps below to access the HP Web-based Interactive Search Engine (WISE).

### Access WISE for Channel partners

1. Select **Services & Support**, and then select **Services Delivery**.
2. Select **Technical Support**, and then select **Technical Documentation**.

### Find information about the following topics

- Service manuals
- Service advisories
- Up-to-date control panel message (CPMD) troubleshooting
- Install and configur
- Printer specification
- Solutions for printer issues and emerging issues
- Remove and replace part instructions and videos
- Warranty and regulatory information

## Additional service and support for HP internal personnel

HP internal personnel, go to one of the following Web-based Interactive Search Engine (WISE) sites:

### Americas (AMS)

- <https://support.hp.com/wise/home/ams-enWISE> - English
- <https://support.hp.com/wise/home/ams-esWISE> - Spanish
- <https://support.hp.com/wise/home/ams-ptWISE> - Portuguese
- <https://support.hp.com/wise/home/ams-frWISE> - French

### Asia Pacific / Japan (APJ)

- <https://support.hp.com/wise/home/apj-enWISE> - English
- <https://support.hp.com/wise/home/apj-jaWISE> - Japanese
- <https://support.hp.com/wise/home/apj-koWISE> - Korean
- <https://support.hp.com/wise/home/apj-zh-HansWISE> - Chinese (simplified)

- [https://support.hp.com/wise/home/apj-zh-HantWISE - Chinese \(traditional\)](https://support.hp.com/wise/home/apj-zh-HantWISE - Chinese (traditional))
- <https://support.hp.com/wise/home/apj-thWISE - Thai>

### Europe / Middle East / Africa (EMEA)

- <https://support.hp.com/wise/home/emea-enWISE - English>

## Removal and replacement strategy

### Introduction

The printer uses a field repair strategy. Defective parts are diagnosed and replaced at the Field Replaceable Unit (FRU) assembly level. Repair normally begins by using the printer internal diagnostics and the following two-step process:

1. Isolate the problem to the major system (for example, the network, server, or printer).
2. Identify the cause of failures according to the printer troubleshooting service manual and follow the disassembly procedures to replace the defective parts or the consumable parts.

After locating a faulty part, the printer can usually be repaired at the assembly level by replacing FRUs. Some mechanical assemblies might need to be repaired at the subassembly level. HP does not support replacement of components on the printed circuit assemblies.

The user replaces toner cartridges as they are depleted. Additional instructions about other user-replaceable parts are provided in this section.

The printer tracks the amount of use on the user-replaceable supplies by keeping a page count. The printer prompts the user to replace certain items when a supply is depleted or a specific number of pages has been printed.

Swapping toner cartridges between products might cause a misrepresentation of supply life values and is not recommended.

### Considerations during removal and replacement

This chapter describes the FRUs only.

Replacing FRUs is generally the reverse of removal. Notes are included to provide directions for difficult or critical replacement procedures.


HP does not support repairing individual subassemblies or troubleshooting to the printed-circuit assembly (PCA) component level.

---

**⚠ WARNING!** Never operate or service the printer with the protective cover removed from the laser scanner assembly. The reflected beam, although invisible, can cause damage to the eyes.


The sheet-metal parts can have sharp edges. Be careful when handling sheet-metal parts.

Turn the printer off, wait 5 seconds, and then remove the power cord before attempting to service the printer. *If this warning is not followed, severe injury can result as well as damage to the printer.* The power must be on for certain functional checks during troubleshooting. However, the power cord must be disconnected during parts removal. AC voltage is still present inside the printer when the power switch is in the off position. The power cord must be *disconnected* before servicing the printer.


 **CAUTION:** Incorrectly routed or loose wire harnesses might interfere with other internal components or assemblies and be damaged, pinched, or frayed. Make sure that wire harnesses are correctly routed and retained when installing assemblies.

Do not bend or fold the flexible cables (FFCs) during removal or installation.


Do not expose the toner cartridge, or cartridges, to strong light even for a short time.

 **IMPORTANT:** When an assembly is removed that includes a rating plate or tag (or a printer code label), make sure to transfer the plate or tag (or code label) to the replacement assembly.

Do not replace the formatter, DC controller, memory PCA (island of data), and eMMC PCA or hard-disk drive simultaneously during a single printer servicing. Doing so might cause the printer to become unstable or inoperable.

 **NOTE:** During assembly removal and replacement, or if the printer is moved, remove the toner cartridge or cartridges.



Toner is a non-poisonous substance composed of plastic and a small number of colored components. If toner gets on the skin or clothing, wipe it off with dry tissue paper and wash in cold water. Hot water sets toner and it might be difficult or impossible, to remove. Toner easily breaks down vinyl materials, so avoid letting toner contact vinyl.

 **TIP:** Some figure might show assemblies removed or installed that have not yet been removed or installed at that specific step. However, the procedures are correct for this printer and the target assembly. Always thoroughly read the instructions that accompany each figure

---

## Electrostatic discharge

---


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Look for the ESD reminder when removing printer parts. Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.

Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

---


## Required tools

- #2 Phillips screwdriver with a magnetic tip and a 152-mm (6-in) shaft length
- Small, flat-blade screwdriver
- Needle-nose pliers
- ESD strap (if one is available)
- Penlight

 **CAUTION:** Always use a #2 Phillips screwdriver (callout 1). Do not use a Pozidriv screwdriver (callout 2) or any motorized screwdriver. These can damage screws or screw threads.

---

Figure 1-1 Screwdrivers

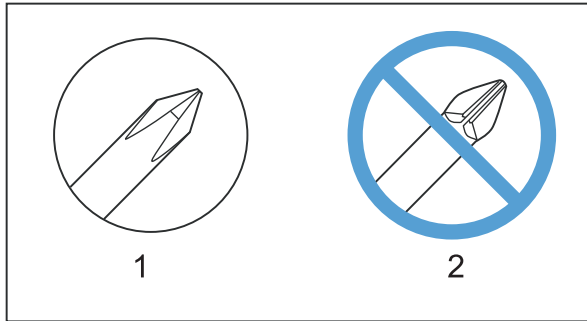

## Fasteners used in this printer

**⚠ WARNING!** Make sure that assemblies are replaced with the correct screw type. Using the incorrect screw (for example, substituting a long screw for the correct shorter screw) can cause damage to the printer or interfere with printer operation. Do not intermix screws that are removed from one assembly with the screws that are removed from another assembly.


**📝 NOTE:** To install a self-tapping screw, first turn it counterclockwise to align it with the existing thread pattern, and then carefully turn it clockwise to tighten. Do not overtighten. If a self-tapping screw hole becomes stripped, repair the screw hole or replace the affected assembly.

Always take note of the length, diameter, color, type, and location of each removed screw. Make sure that screws are installed in their original location during reinstallation.

## Fasteners used in the printer

- Screw, BH M3X10
- Screw, with washer, M3X8
- Screw, D M3X8
- Screw, machine, truss head, M3X6

 
Figure 1-2 Screw size chart

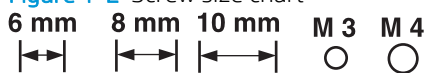

# Service approach

## Before performing service

---

 **WARNING!** Turn the printer off, wait 30 seconds, and then remove the power cord before attempting to service the printer. *If this warning is not followed, severe injury and damage to the printer can result.* The power must be on for certain functional checks during troubleshooting. However, the power to the printer should be disconnected during parts removal.

---

1. Remove all paper.
2. Place the printer on an ESD mat (if available). If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.
3. Remove the toner cartridge or toner cartridges and place a sheet of paper over the exposed drums to protect them from excessive light exposure.
4. Remove the trays.

## After performing service


1. Reinstall the toner cartridge or toner cartridges.
2. Reinstall the trays.
3. Return all paper to the trays.
4. Plug in the power cable and turn on the printer.
5. Perform print-quality tests by printing from a host computer or by printing internal configuration and demo pages.

## Post service tests

### Print quality test

Use the print-quality troubleshooting pages to help diagnose and solve print-quality problems. For more information, see the printer troubleshooting manual.

---

 **NOTE:** To get further assistance in print quality troubleshooting, go to [www.hp.com/support/colorljM652](http://www.hp.com/support/colorljM652), [www.hp.com/support/colorljM653](http://www.hp.com/support/colorljM653), [www.hp.com/support/colorljE65050](http://www.hp.com/support/colorljE65050), [www.hp.com/support/colorljE65060](http://www.hp.com/support/colorljE65060), [www.hp.com/support/colorljE65150](http://www.hp.com/support/colorljE65150), [www.hp.com/support/colorljE65160](http://www.hp.com/support/colorljE65160), [www.hp.com/support/colorljM681MFP](http://www.hp.com/support/colorljM681MFP), [www.hp.com/support/colorljM682MFP](http://www.hp.com/support/colorljM682MFP), [www.hp.com/support/colorljE67550MFP](http://www.hp.com/support/colorljE67550MFP), [www.hp.com/support/colorljE67560MFP](http://www.hp.com/support/colorljE67560MFP), [www.hp.com/support/colorljE67650MFP](http://www.hp.com/support/colorljE67650MFP), or [www.hp.com/support/colorljE67660MFP](http://www.hp.com/support/colorljE67660MFP) and select PQ Troubleshooting Tools.

---

### Copy-quality test (M681/M682/E67550/E67560/E67650/E67660 models)

1. Verify that you have completed the necessary reassembly steps.
2. Ensure that the input tray contains clean, unmarked paper.
3. With the power cord attached, turn on the printer.
4. Verify that the expected start up sounds occur.

5. Print a configuration page, and then verify that the expected printing sounds occur.
6. Place the configuration page in the document feeder, print a copy job, and then verify the results.
7. Place the configuration page on the flatbed glass, print a copy job, and then verify the results.

### Fax-quality test (M681/M682/E67550/E67560/E67650/E67660 models)

1. Place the configuration page in the document feeder.
2. Type a valid fax number, and send the fax job.
3. Verify that the send quality and the receive quality meet expectations.

### Parts removal orientation

For procedures and/or steps that require identifying the right, left, or rear side of the printer, face the front of the printer for correct orientation.

# Removal and replacement procedures

## Customer self-repair (CSR) A parts and assemblies

- [Install accessory: 1x550-sheet paper feeder](#)
- [Install accessory: 1x550-sheet paper feeder with stand](#)
- [Install accessory: 3x550-sheet paper feeder with stand](#)
- [Install accessory: 2,550-sheet paper feeder with stand](#)
- [Install accessory: Jetdirect USB wireless print server](#)
- [Install accessory: Jetdirect USB wireless print server with NFC](#)
- [Install accessory: Trusted platform module \(TPM\)](#)
- [Install accessory: Internal USB ports](#)
- [Install accessory: Foreign interface harness \(FIH\)](#)
- [Removal and replacement: Staple cartridge and carrier \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Removal and replacement: embedded MultiMedia Card \(eMMC\)](#)
- [Removal and replacement: Hard disk drive \(HDD\)](#)
- [Removal and replacement: Dual in-line memory module \(DIMM\)](#)
- [Removal and replacement: Fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Removal and replacement: Document feeder rollers](#)
- [Removal and replacement: Document feeder separation roller cover](#)
- [Removal and replacement: Secondary transfer roller](#)
- [Removal and replacement: Intermediate transfer belt \(ITB\)](#)
- [Removal and replacement: Control panels \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Removal and replacement: Fuser](#)
- [Removal and replacement: White backing](#)
- [Removal and replacement: Toner cartridges](#)
- [Removal and replacement: Toner collection unit \(TCU\)](#)
- [Removal and replacement: Keyboard \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Install: Keyboard overlay \(Flow M681z/Flow M682z/Flow E67660z\)](#)

The CSR level indicates the expected difficulty the customer will experience when removing and replacing an assembly. The CSR A assemblies in this section are easy for the customer to remove and replace.



## Install accessory: 1x550-sheet paper feeder

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the 1x550-sheet paper feeder](#)

### Introduction

This document provides the procedures to install the 1x550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

1x550-sheet paper feeder part number	
P1B09-67901	1x550 sheet feeder

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a page from the feeder to make sure that the printer is functioning correctly.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.


For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the 1x550-sheet paper feeder

**⚠ CAUTION:** Do not extend more than one paper tray at a time. Do not use paper tray as a step. Keep hands out of paper trays when closing. All trays must be closed when moving the printer.


1. Unplug all of the cables attached to the printer.

Figure 1-3 Unplug all of the cables

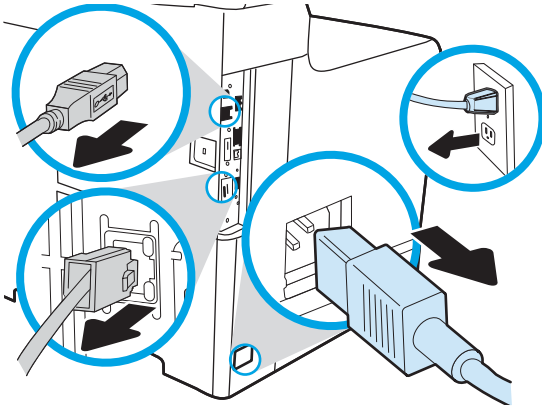


2. Place the paper feeder on a sturdy, level surface. Lift the printer and place it on top of the paper feeder.

Figure 1-4 Place the printer on the paper feeder

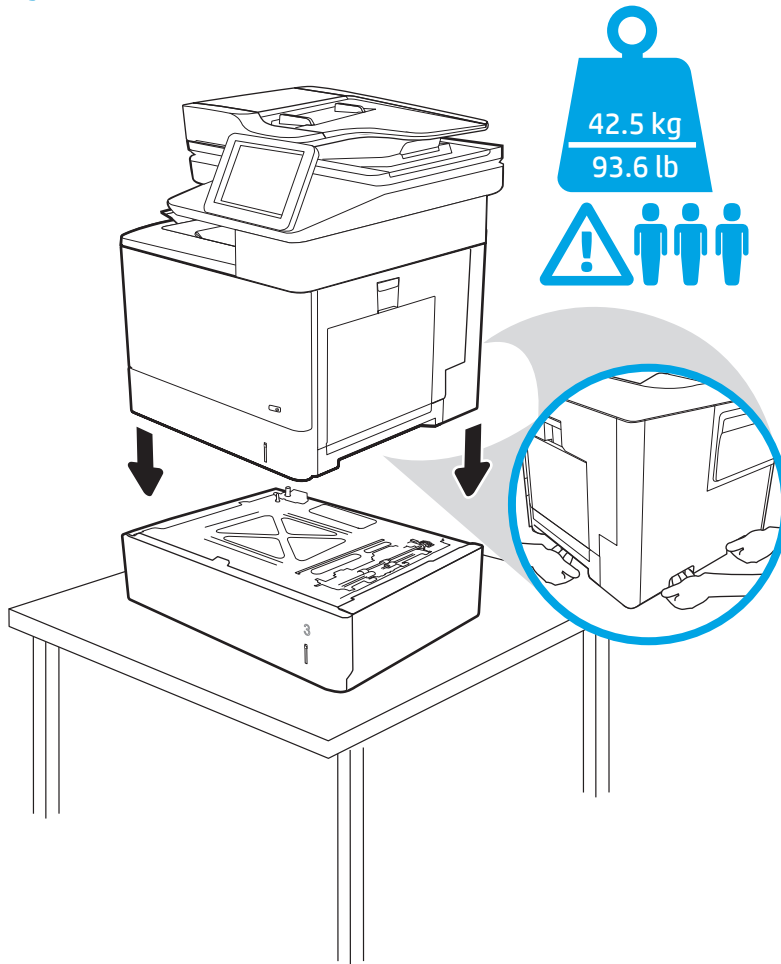


3. Remove the paper tray in the paper feeder, and then engage two locks at the front of the tray opening to secure the printer to the paper feeder.

Figure 1-5 Engage two locks

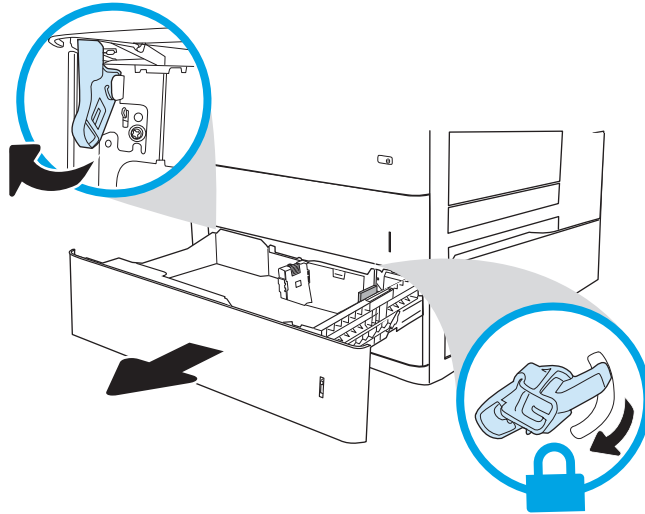


4. Before loading paper, open the paper guides by squeezing the blue adjustment latches and sliding the guides out as far as they will go.

Figure 1-6 Open the paper guides

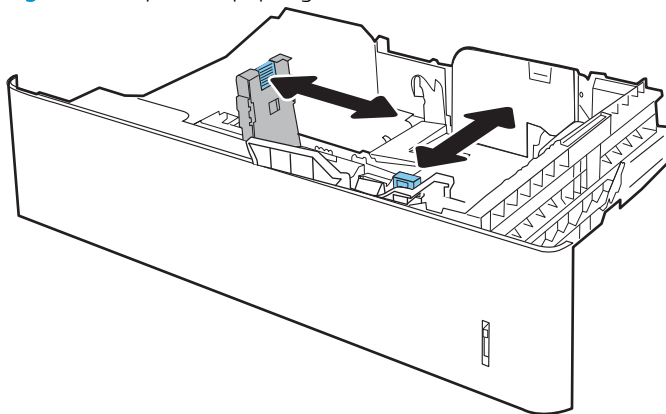


5. Load paper into the tray.

---

 **NOTE:** To prevent jams, do not overfill the tray. Be sure that the top of the stack is below the tray full indicator.

---

**Figure 1-7** Load paper into the tray

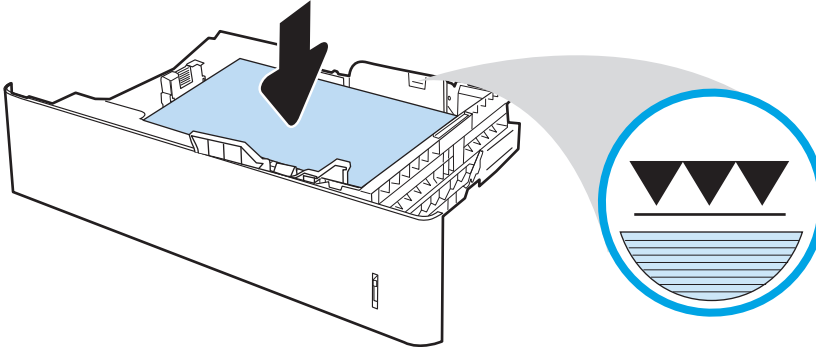


6. Adjust the paper guides so that the guides lightly touch the stack, but do not bend it.

---


 **NOTE:** Do not adjust the paper guides tightly against the paper stack. Adjust them to the indentations or markings in the tray.

---

**Figure 1-8** Adjust the paper guides

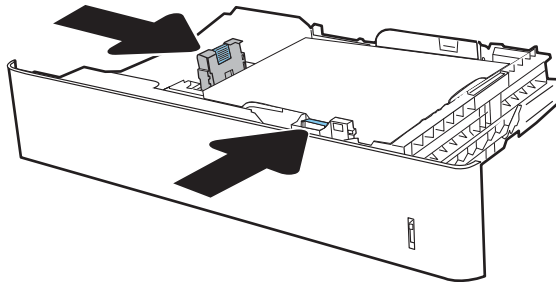


---

 **NOTE:** If the tray requires fixed tray guides installed, move that hardware to the new tray. If necessary, order a new fixed tray guide kit: 3GY25-90908 Kit-Fixed Tray Guide. Only one kit is required per engine.

---


7. If necessary, remove the paper tray number indicator on the tray, and then rotate the indicator so that the tray number correctly reflect the printer's tray configuration. Install the indicator in the tray with the correct tray number facing outward.

**Figure 1-9** Remove the paper tray number indicator

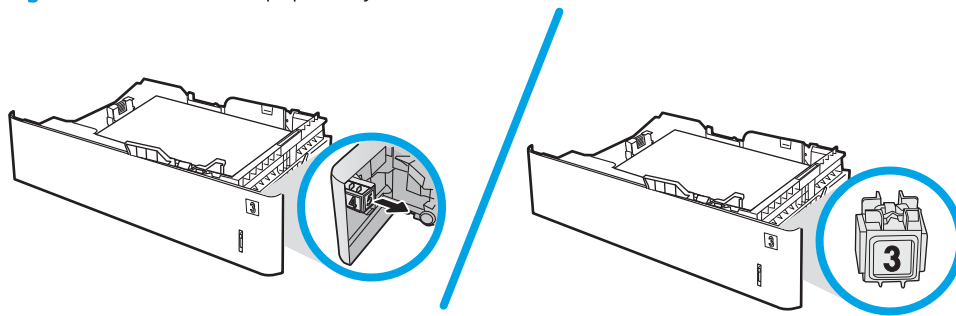

8. Install the paper tray.

**Figure 1-10** Install the paper tray

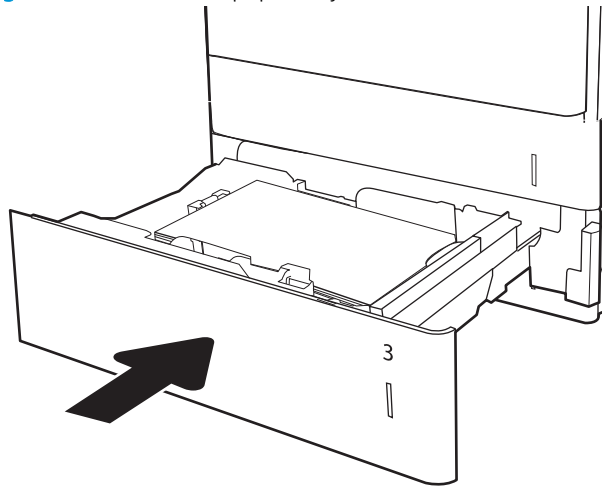

## Install accessory: 1x550-sheet paper feeder with stand

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the 1x550-sheet paper feeder with stand](#)

### Introduction

This document provides the procedures to install the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

1x550-sheet paper feeder with stand part number	
P1B10-67901	1x550 sheet stand

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a page from the feeder to make sure that the printer is functioning correctly.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.


For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the 1x550-sheet paper feeder with stand

**⚠ CAUTION:** Do not extend more than one paper tray at a time. Do not use paper tray as a step. Keep hands out of paper trays when closing. All trays must be closed when moving the printer.


1. Unplug all of the cables attached to the printer.

Figure 1-11 Unplug all of the cables

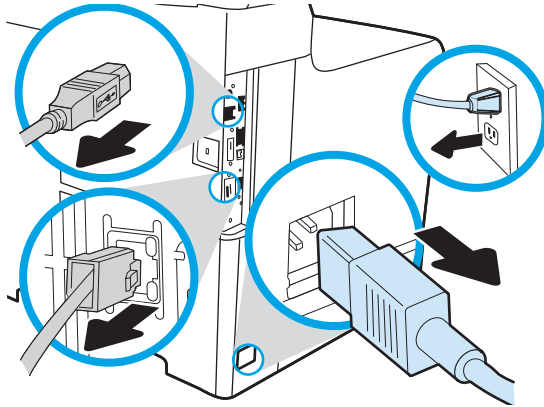


2. Lift the printer and place it on top of the paper feeder.

Figure 1-12 Place the printer on the paper feeder

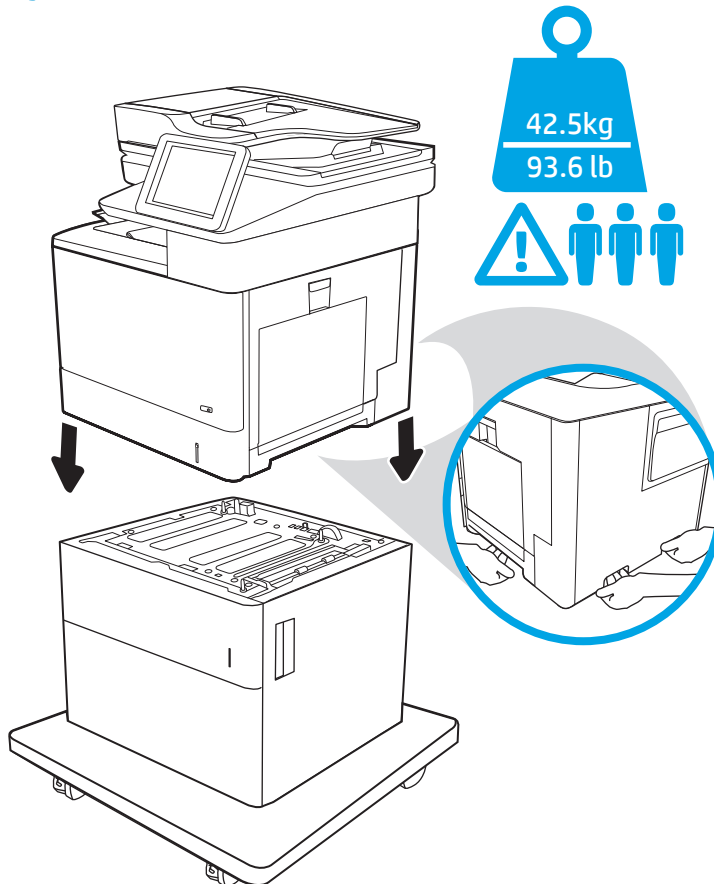


3. Remove the paper tray in the paper feeder, and then engage one lock at the front of the tray opening to secure the printer to the paper feeder.

Figure 1-13 Engage one lock

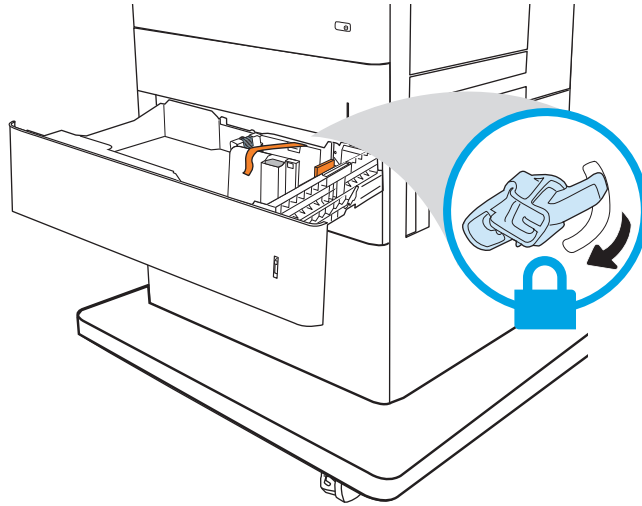

4. Locate the orange shipping lock inside the paper tray. Twist the lock to release it, and then lift it straight up to remove it. Remove all other packing material inside the tray.


Figure 1-14 Remove the orange shipping lock

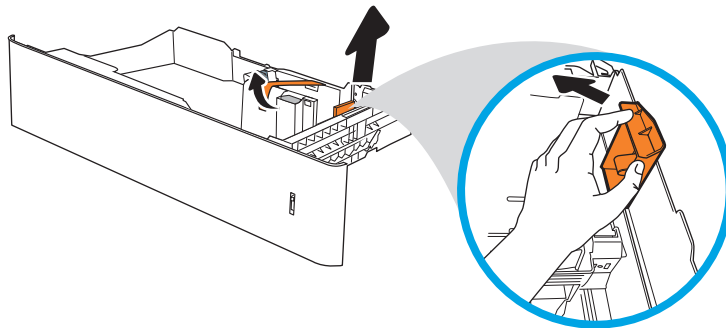




5. Before loading paper, open the paper guides by squeezing the blue adjustment latches and sliding the guides out as far as they will go.

**Figure 1-15** Open the paper guides

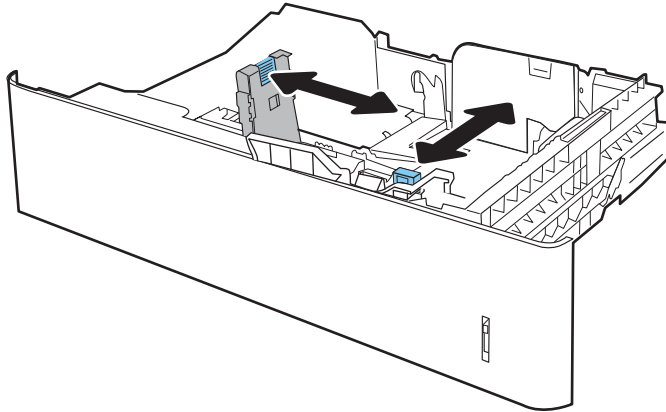


6. Load paper into the tray.

---

 **NOTE:** To prevent jams, do not overfill the tray. Be sure that the top of the stack is below the tray full indicator.

---


**Figure 1-16** Load paper into the tray

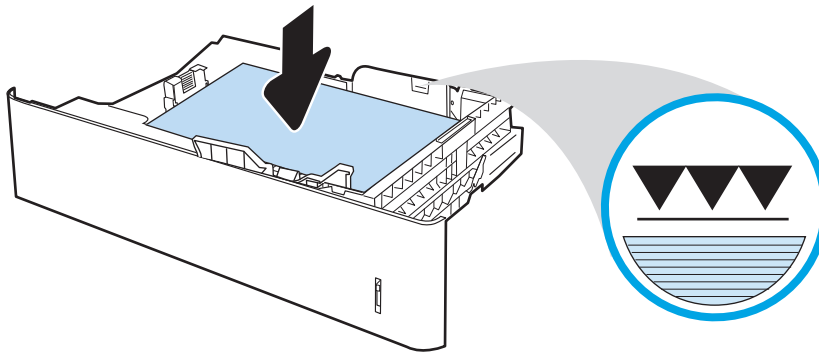

7. Adjust the paper guides so that the guides lightly touch the stack, but do not bend it.


 **NOTE:** Do not adjust the paper guides tightly against the paper stack. Adjust them to the indentations or markings in the tray.

**Figure 1-17** Adjust the paper guides

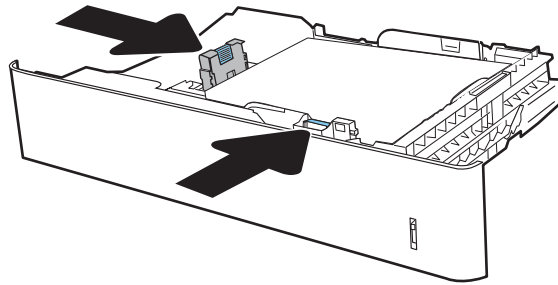


8. If necessary, remove the paper tray number indicator on the tray, and then rotate the indicator so that the tray number correctly reflect the printer's tray configuration. Install the indicator in the tray with the correct tray number facing outward.

**Figure 1-18** Remove the paper tray number indicator

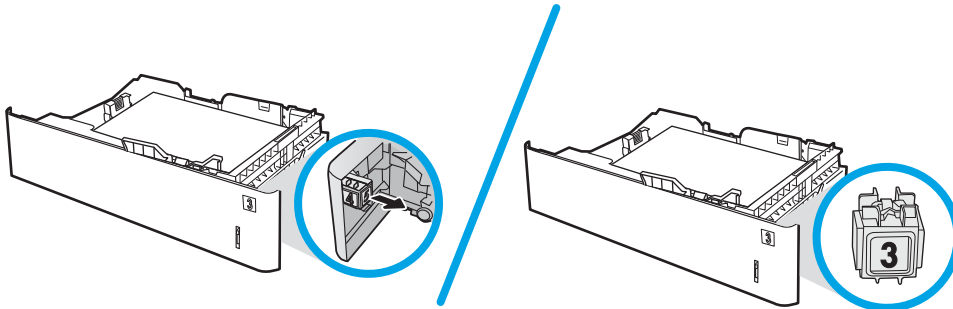

9. Install the paper tray.

**Figure 1-19** Install the paper tray

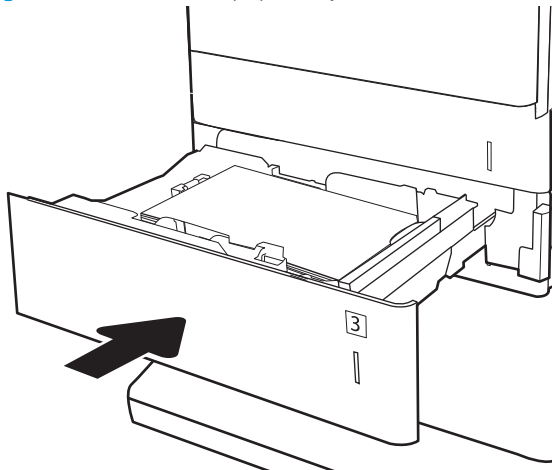

## Install accessory: 3x550-sheet paper feeder with stand

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the 3x550-sheet paper feeder with stand](#)

### Introduction

This document provides the procedures to install the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

3x550-sheet paper feeder with stand part number	
P1B11-67901	3x550 sheet stand

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a page from the feeder to make sure that the printer is functioning correctly.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.


For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the 3x550-sheet paper feeder with stand

**⚠ CAUTION:** Do not extend more than one paper tray at a time. Do not use paper tray as a step. Keep hands out of paper trays when closing. All trays must be closed when moving the printer.


1. Unplug all of the cables attached to the printer.

Figure 1-20 Unplug all of the cables

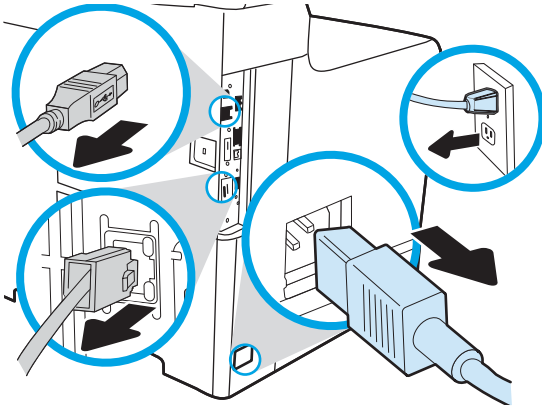


2. Lift the printer and place it on top of the paper feeder.

Figure 1-21 Place the printer on the paper feeder

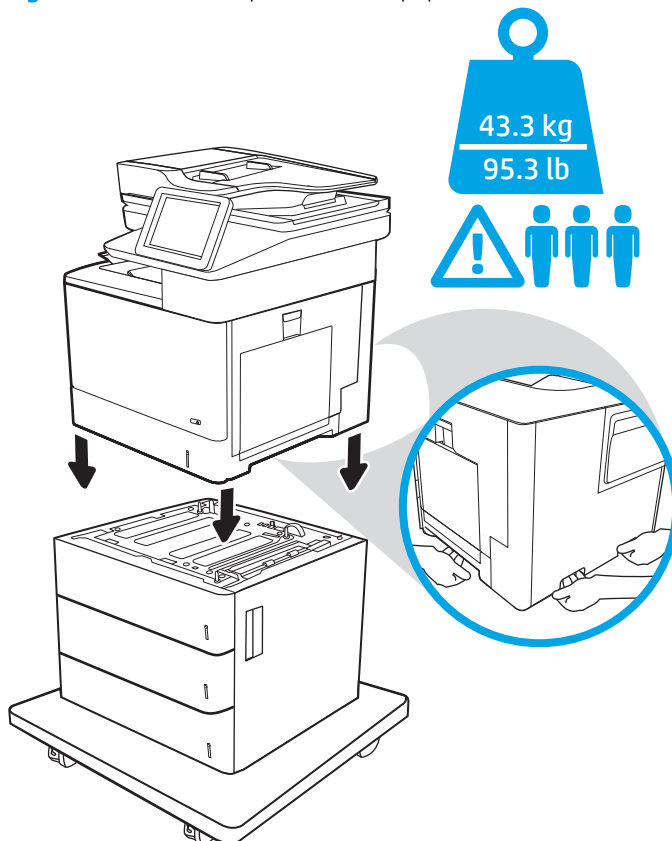


3. Open the top paper tray in the paper feeder, and then engage one lock at the front of the tray opening to secure the printer to the paper feeder.

Figure 1-22 Engage one lock

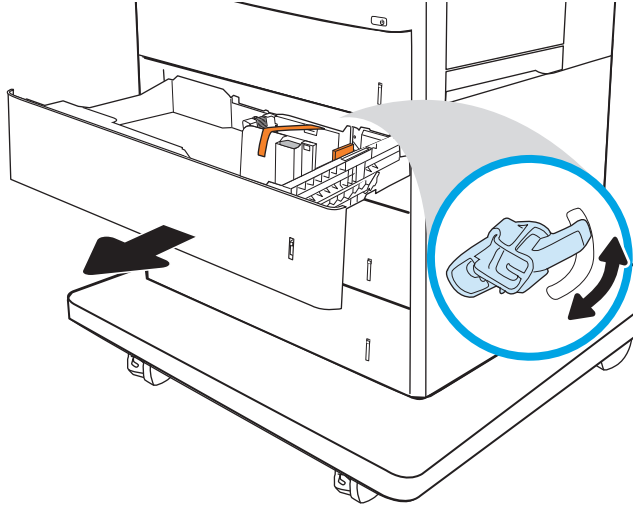


4. Repeat the following steps for each paper tray:
  - a. Remove the paper tray

Figure 1-23 Remove the paper tray

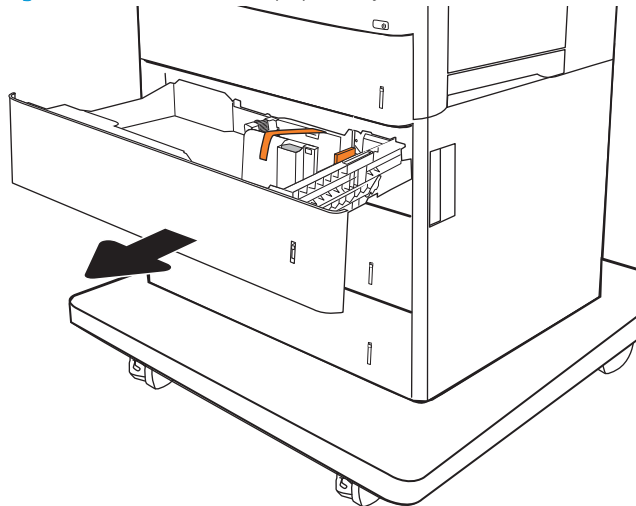


- b. Locate the orange shipping lock inside the paper tray. Twist the lock to release it, and then lift it straight up to remove it. Remove all other packing material inside the tray.

Figure 1-24 Remove the orange shipping lock

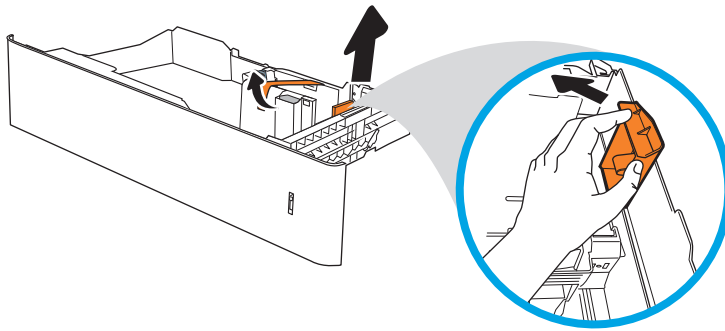


- c. Before loading paper, open the paper guides by squeezing the blue adjustment latches and sliding the guides out as far as they will go.


Figure 1-25 Open the paper guides

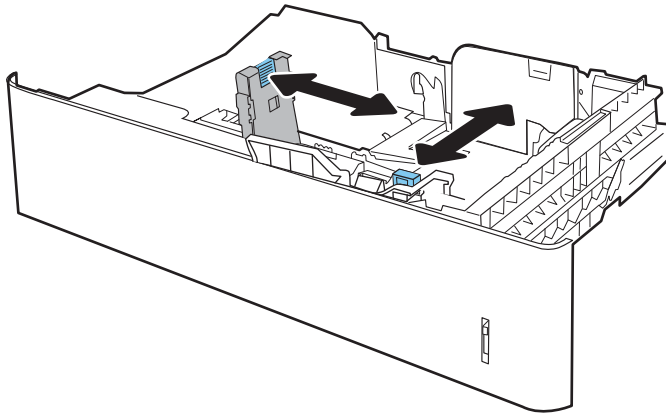

- d. Load paper into the tray.

 **NOTE:** To prevent jams, do not overfill the tray. Be sure that the top of the stack is below the tray full indicator.


**Figure 1-26** Load paper into the tray

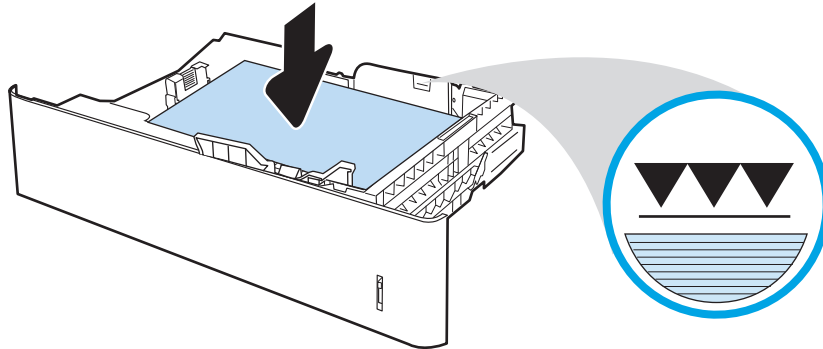

- e. Adjust the paper guides so that the guides lightly touch the stack, but do not bend it.


 **NOTE:** Do not adjust the paper guides tightly against the paper stack. Adjust them to the indentations or markings in the tray.

**Figure 1-27** Adjust the paper guides

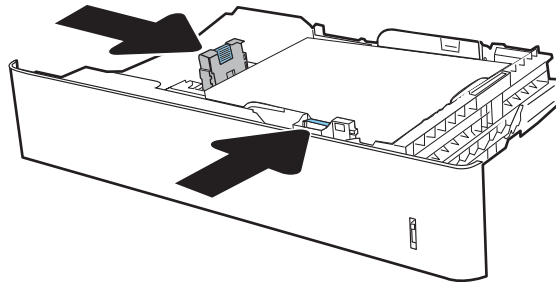


- f. If necessary, remove the paper tray number indicator on the tray, and then rotate the indicator so that the tray number correctly reflects the printer's tray configuration. Install the indicator in the tray with the correct tray number facing outward.

**Figure 1-28** Remove the paper tray number indicator

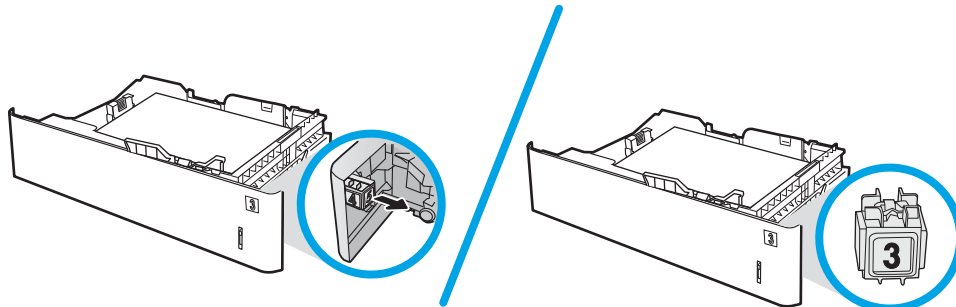


- g. Install the paper tray.

Figure 1-29 Install the paper tray

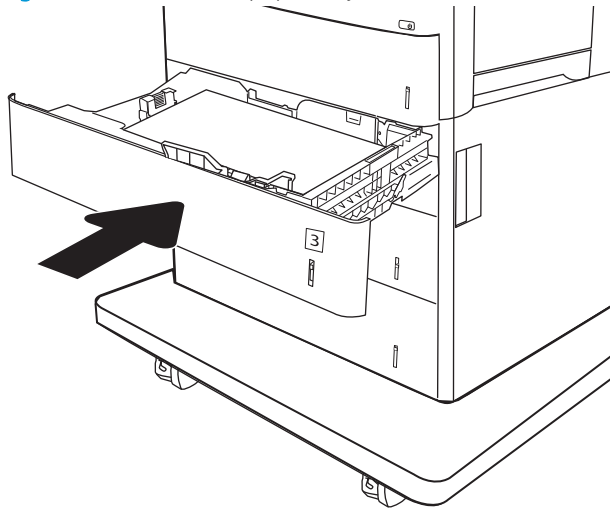


- 5. In preparation for installing the caster covers, at the front of the paper feeder, position the wheels so they face forward.

Figure 1-30 Position the wheels

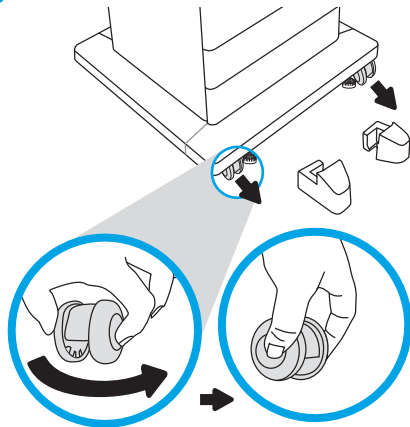

- 6. Position the caster covers, and then slide them toward the paper feeder to install them.


Figure 1-31 Install the caster covers

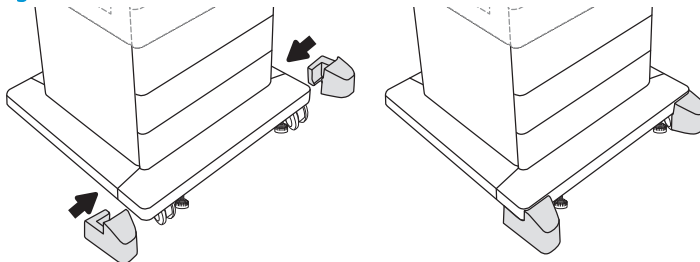



7. Lower the legs on the paper feeder so that they rest securely on the floor

Figure 1-32 Lower the legs

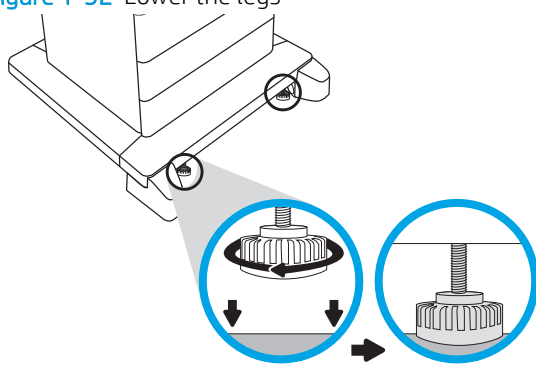


## Install accessory: 2,550-sheet paper feeder with stand

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the 2,550-sheet paper feeder with stand](#)


### Introduction

This document provides the procedures to install the 2,550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

2,550-sheet paper feeder with stand part number	
---	--

P1B12-67901	HCI stand
-------------	-----------

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a page from the feeder to make sure that the printer is functioning correctly.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.


For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the 2,550-sheet paper feeder with stand

**CAUTION:** Do not extend more than one paper tray at a time. Do not use paper tray as a step. Keep hands out of paper trays when closing. All trays must be closed when moving the printer.


1. Unplug all of the cables attached to the printer.

Figure 1-33 Unplug all of the cables

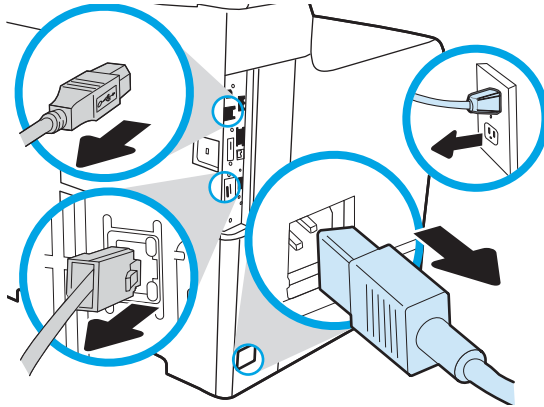


2. Lift the printer and place it on top of the paper feeder.

Figure 1-34 Place the printer on the paper feeder

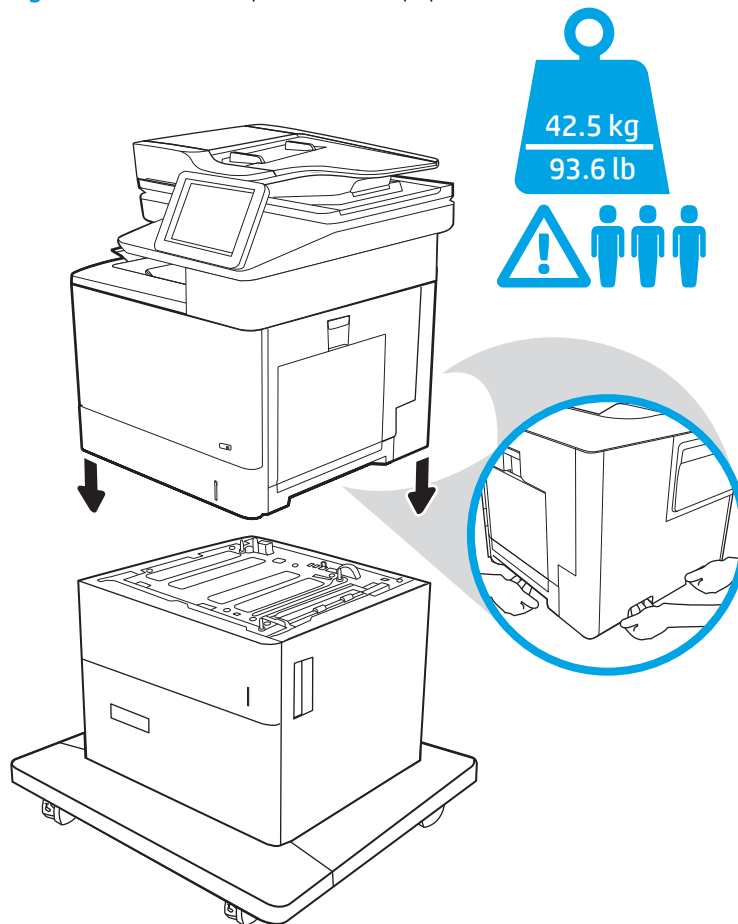


3. Remove the top paper tray in the paper feeder, and then engage one lock at the front of the tray opening to secure the printer to the paper feeder.

Figure 1-35 Engage one lock

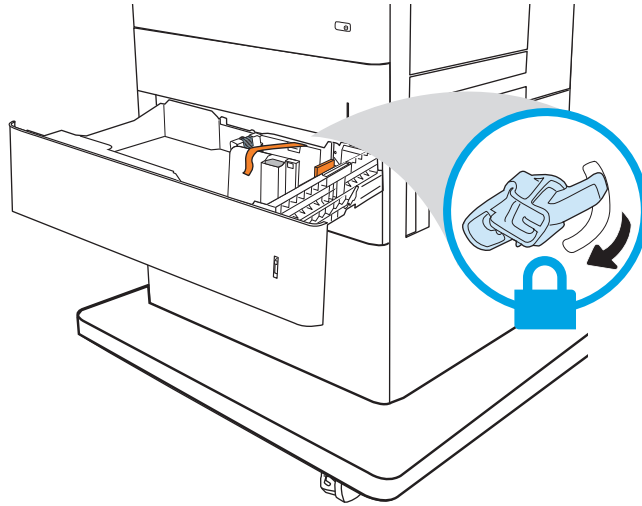


4. Locate the orange shipping lock inside the paper tray. Twist the lock to release it, and then lift it straight up to remove it. Remove all other packing material inside the tray.

Figure 1-36 Remove the orange shipping lock

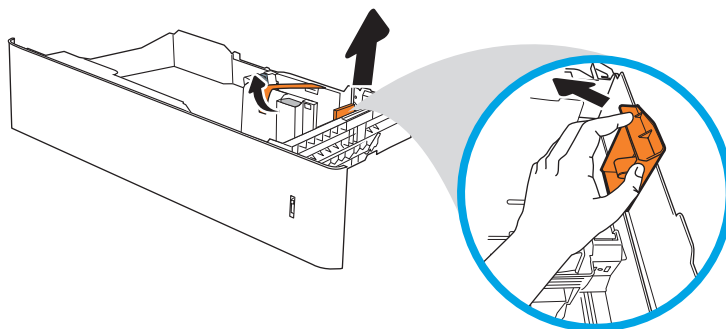


5. Before loading paper, open the paper guides by squeezing the blue adjustment latches and sliding the guides out as far as they will go.

**Figure 1-37** Open the paper guides

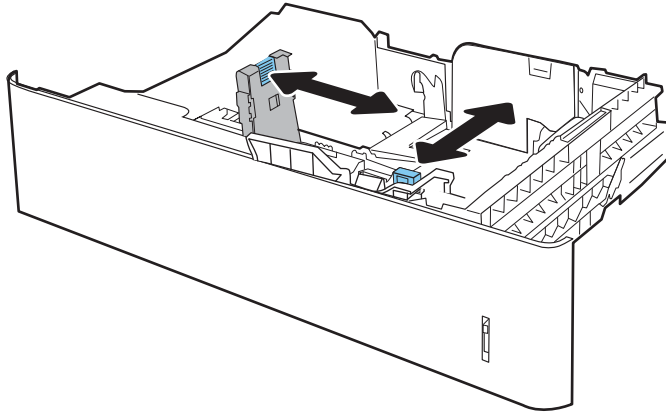


6. Load paper into the tray.

---

 **NOTE:** To prevent jams, do not overfill the tray. Be sure that the top of the stack is below the tray full indicator.

---


**Figure 1-38** Load paper into the tray

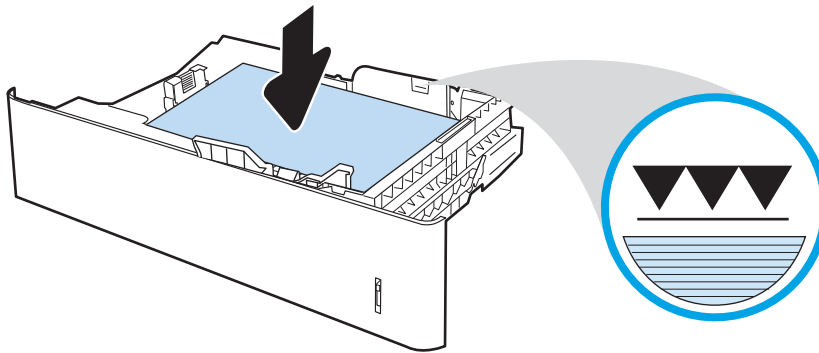

7. Adjust the paper guides so that the guides lightly touch the stack, but do not bend it.


 **NOTE:** Do not adjust the paper guides tightly against the paper stack. Adjust them to the indentations or markings in the tray.

**Figure 1-39** Adjust the paper guides

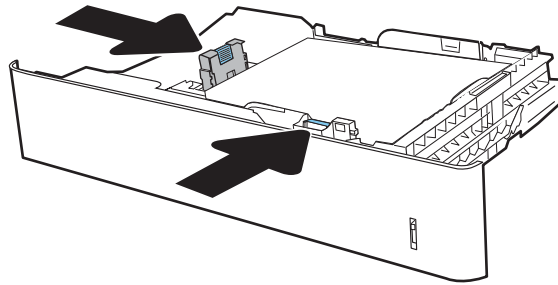


8. If necessary, remove the paper tray number indicator on the tray, and then rotate the indicator so that the tray number correctly reflect the printer's tray configuration. Install the indicator in the tray with the correct tray number facing outward.

**Figure 1-40** Remove the paper tray number indicator

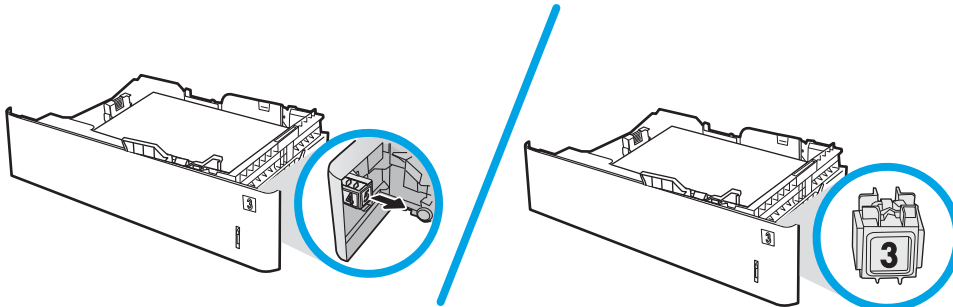


9. Install the paper tray.

Figure 1-41 Install the paper tray

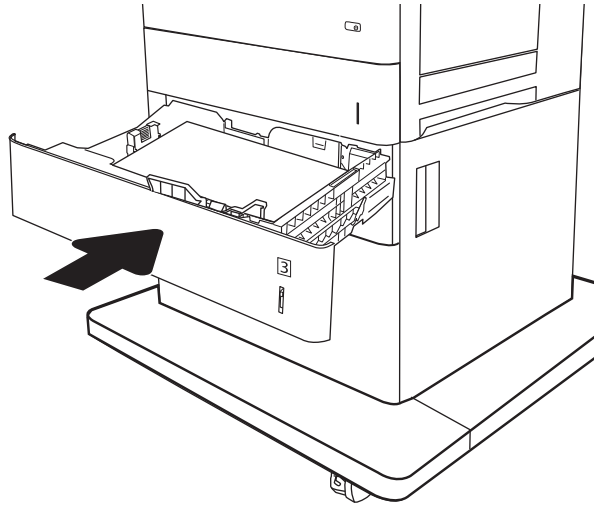


10. Open the lower paper tray and locate the shipping material inside of the tray.

Figure 1-42 Open the lower paper tray

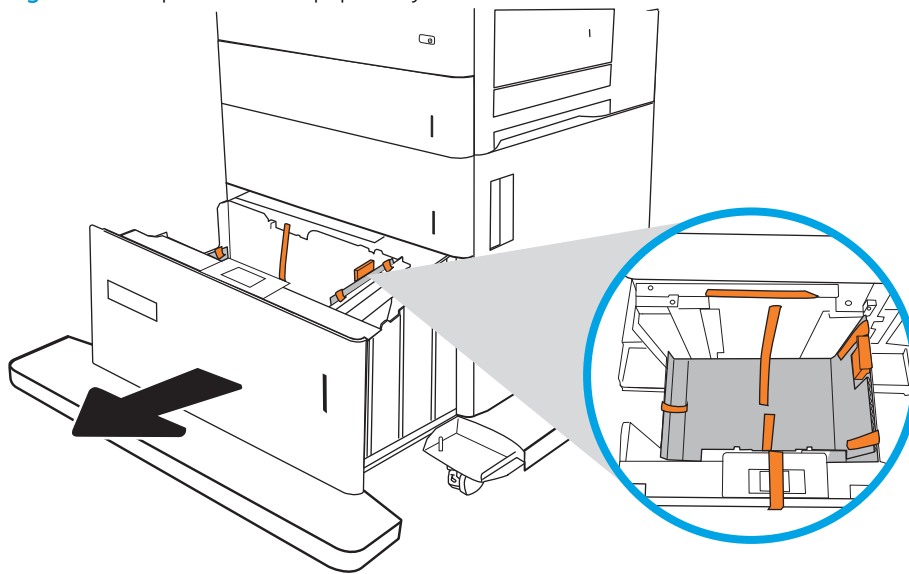


11. Remove the shipping lock inside the tray on the upper right side.

Figure 1-43 Remove the shipping lock

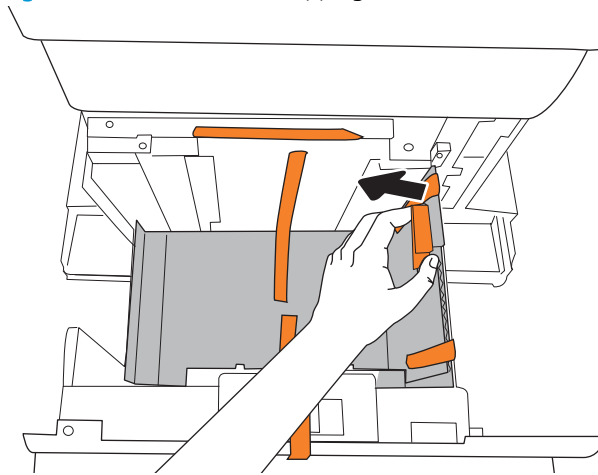


12. Remove all of the packing material inside the tray.

Figure 1-44 Remove all of the packing material

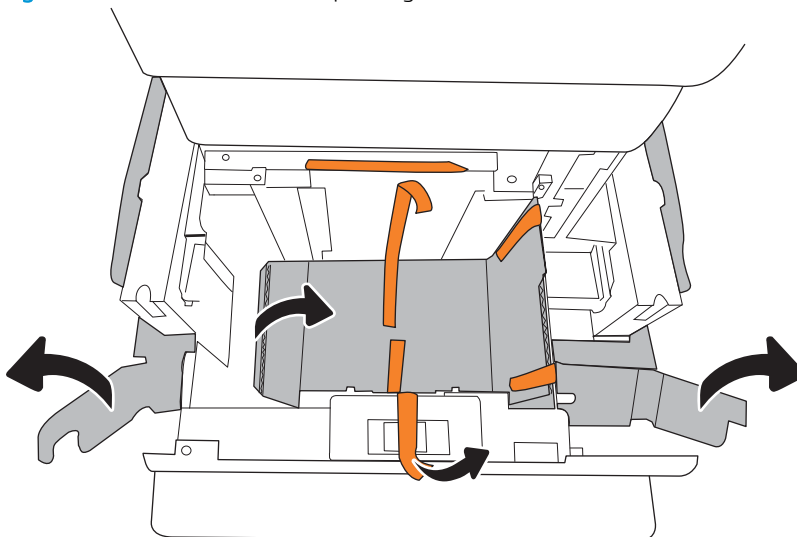

13. Move the size-selector lever to correspond with the size of paper that will be installed in the tray.


Figure 1-45 Move the size-selector lever

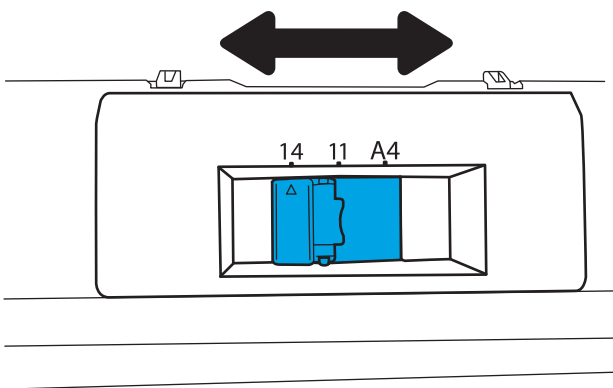




14. Load paper into the tray.

Figure 1-46 Load paper into the tray

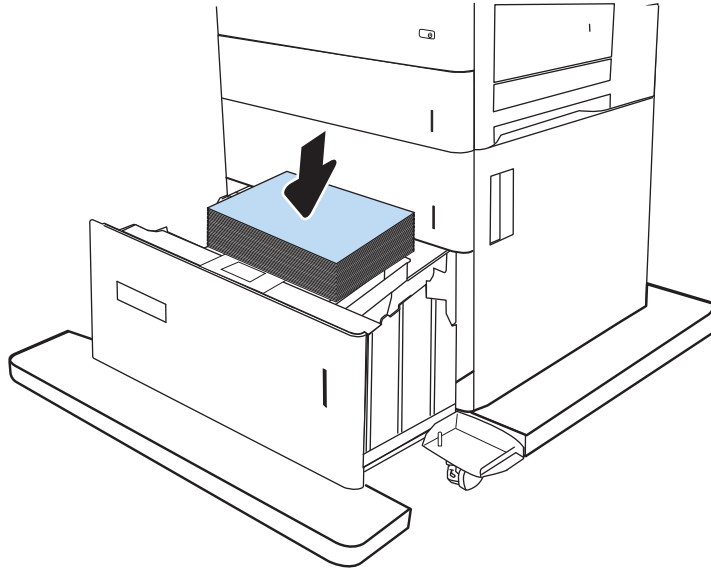


15. Close the paper tray.

Figure 1-47 Close the paper tray

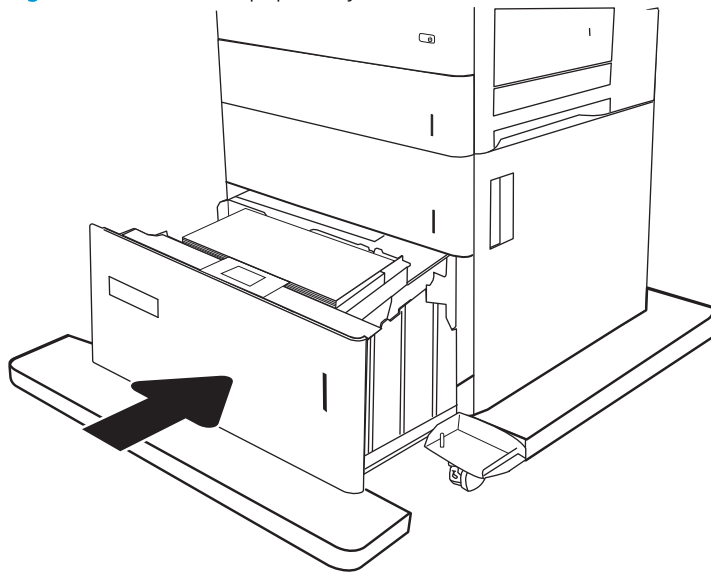

16. Lower the legs on the paper feeder so that they rest securely on the floor

Figure 1-48 Lower the legs

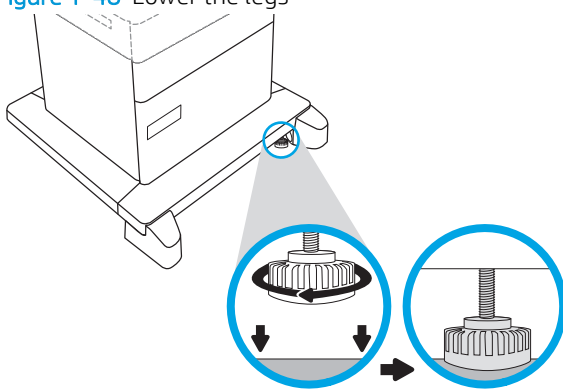

## Install accessory: Jetdirect USB wireless print server

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the Jetdirect USB wireless print server](#)

### Introduction

This document provides the procedures to install the Jetdirect USB wireless print server.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Jetdirect USB wireless print server part number	
J8031-61001	Jetdirect USB wireless print server

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Verify that the host computer can successfully access the printer through the network.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.


For complete information on HP's recycling programs, go to [Product return and recycling](#).

### Step 2: Install the Jetdirect USB wireless print server

1. If the print server will be mounted on the wall, do the following:



- a. Attach one of the fastener strips provided in the kit to the back of the print server. Attach the other fastener strip to a smooth, non-metal wall near the printer.

Figure 1-49 Attach fastener strips

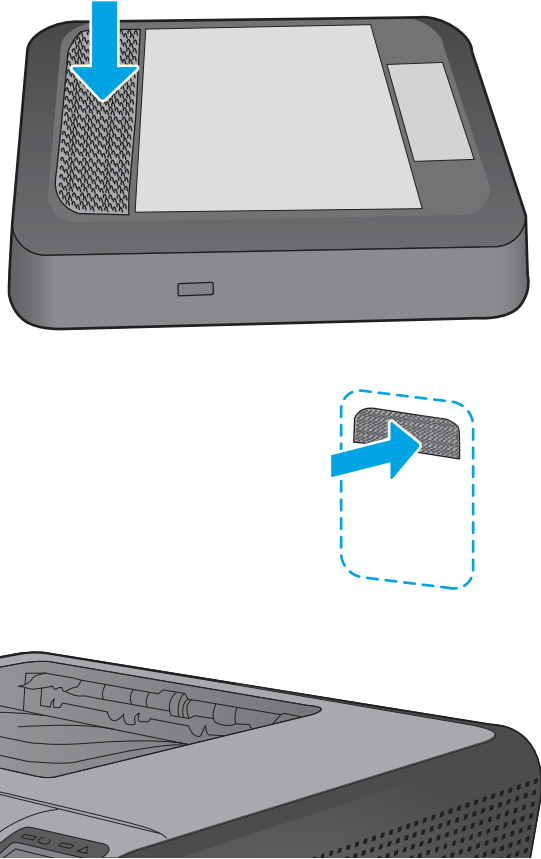



- b. Attach the print server to the fastener strip on the wall.

**Figure 1-50** Attach the print server to the wall

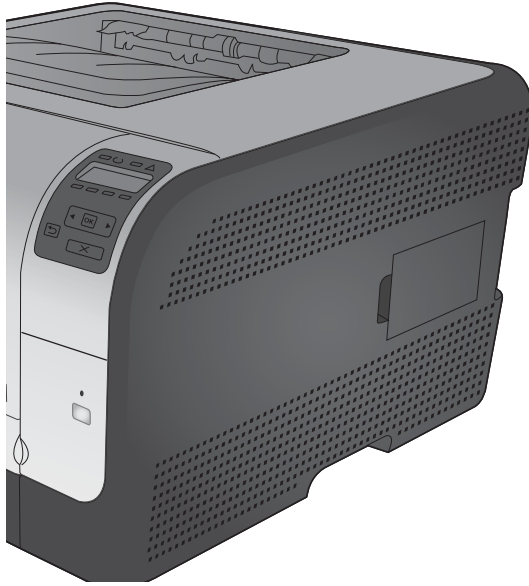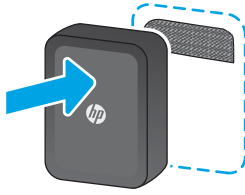


2. If the print server will be mounted on the printer, do the following:
  - a. Attach one of the fastener strips provided in the kit to the back of the print server. Attach the second fastener strip to the location on the printer where the print server will be installed.

Figure 1-51 Attach fastener strips

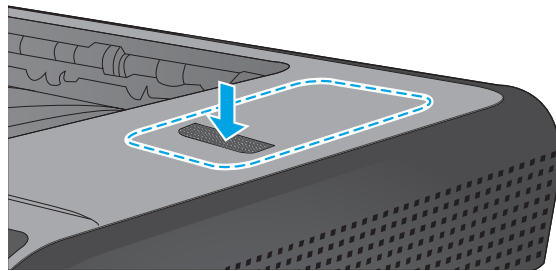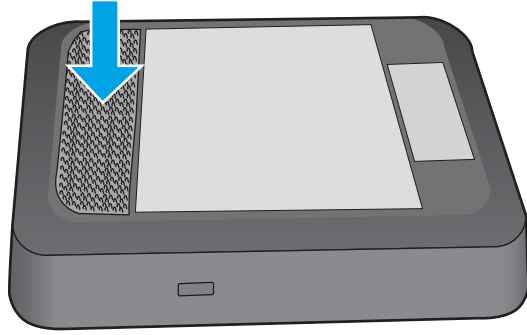


- b. Attach the print server to the fastener strip on the printer.

Figure 1-52 Attach the print server to the printer

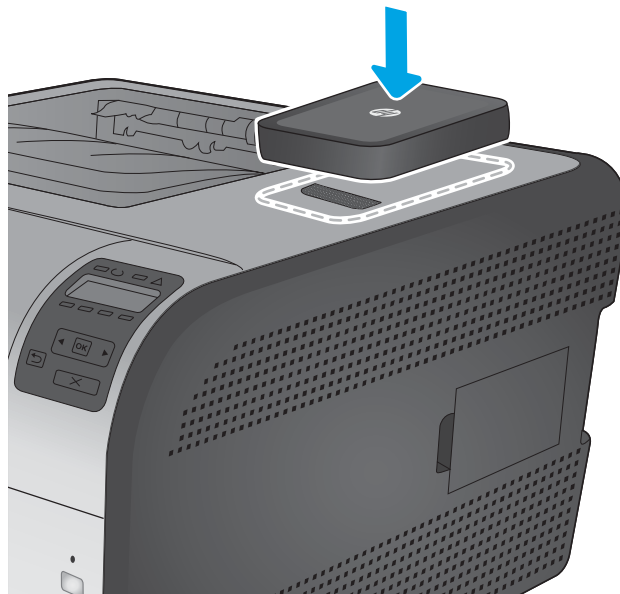


3. If the print server is connected only to the wireless network, do the following:
  - a. Attach the USB Type-B (rounded) end of the cable provided in the kit to the USB port on the back of the printer server.

Figure 1-53 Attach the USB cable to the print server

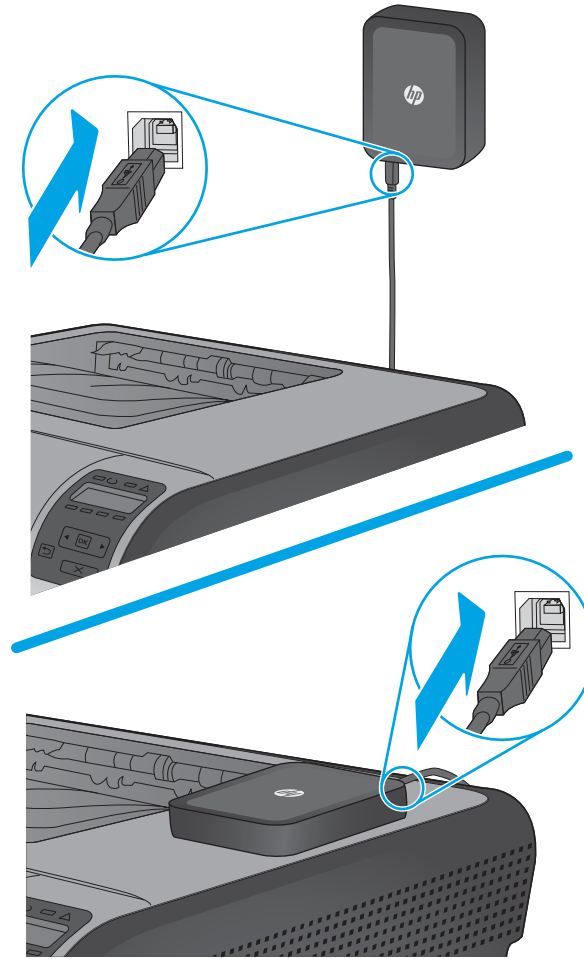


- b. Attach the USB Type-A (flat end of the cable) to the USB accessory port on the printer.

Figure 1-54 Attach the USB cable to the printer

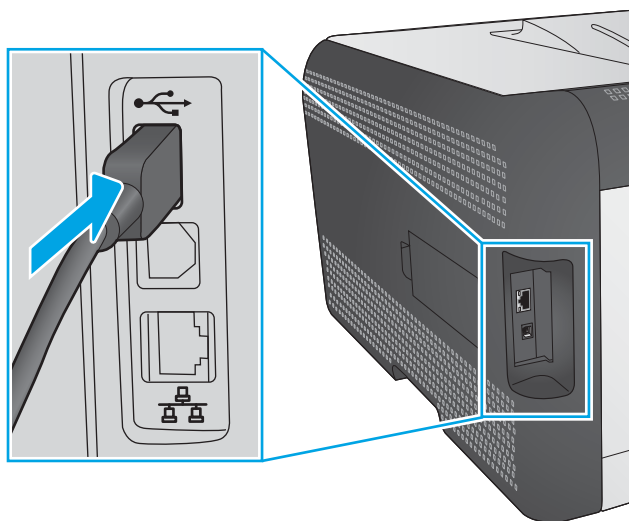

4. If the print server is connected to both the wireless network and the wired network, do the following:


---

 **NOTE:** A wired network connection enables connection to a wireless network/LAN and to one or more wired networks/LANs.

---

- a. Attach the USB Type-B (rounded) end of the cable provided in the kit to the USB port on the back of the printer server. Also attach an Ethernet cable (not provided in the kit) to the Ethernet port on the back of the server.


**Figure 1-55** Attach the USB and network cables to the print server

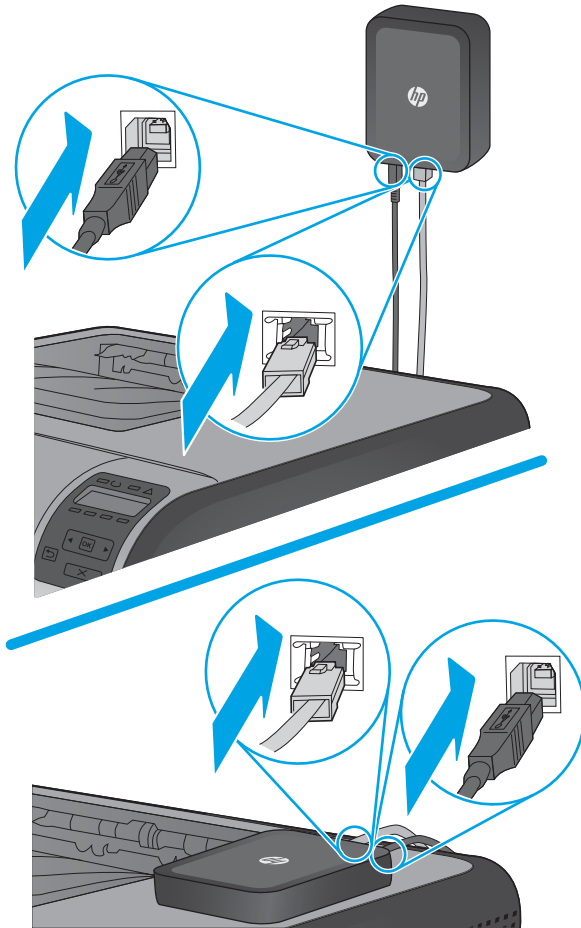




- b. Attach the USB Type-A (flat) end of the cable to the USB accessory port on the printer.

Figure 1-56 Attach the USB cable to the printer

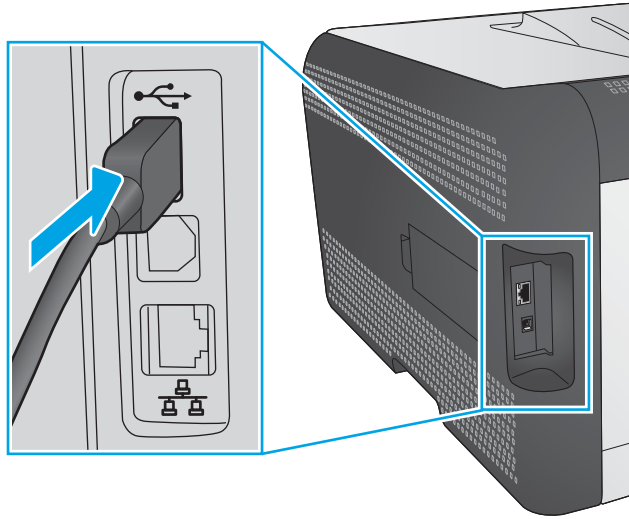


- c. Attach other end of the Ethernet cable to the network.

Figure 1-57 Attach the Ethernet cable to the network

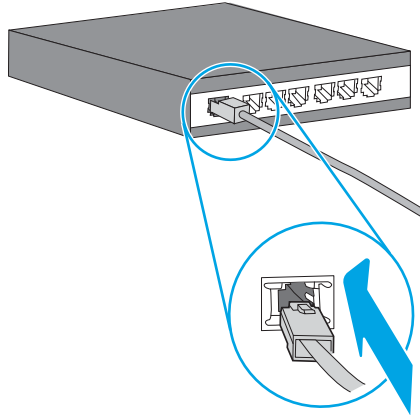

- 5. Attach the power supply cable provided in the kit to the print server, and then connect the power cord to the power source.

Figure 1-58 Connect the power cable

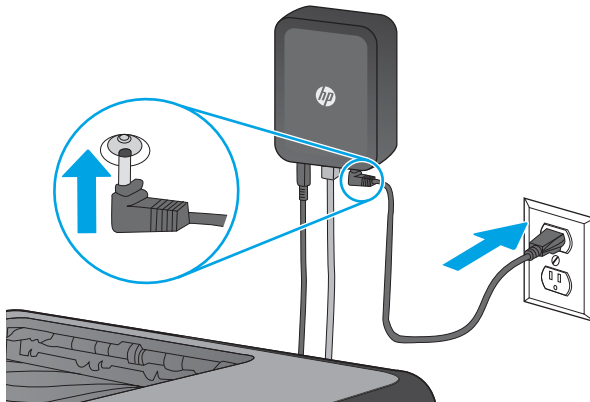


## Install accessory: Jetdirect USB wireless print server with NFC

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the Jetdirect USB wireless print server with NFC](#)


### Introduction

This document provides the procedures to install the Jetdirect USB wireless print server with NFC.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Jetdirect USB wireless print server with NFC part number

---

J8030-61001

Jetdirect USB wireless print server with NFC

---

### Required tools

- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Verify that the host computer can successfully access the printer through the network and that the NFC functionality works correctly.

### Step 1: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.

For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the Jetdirect USB wireless print server with NFC


1. To install the print server in the hardware integration pocket (HIP), do the following:
  - a. Locate the hardware integration pocket (HIP) (callout 1).

Figure 1-59 Locate the HIP




- b. Using a small, flat-blad screwdriver along either short edge, gently pry the HIP cover off

Figure 1-60 Remove the HIP cover

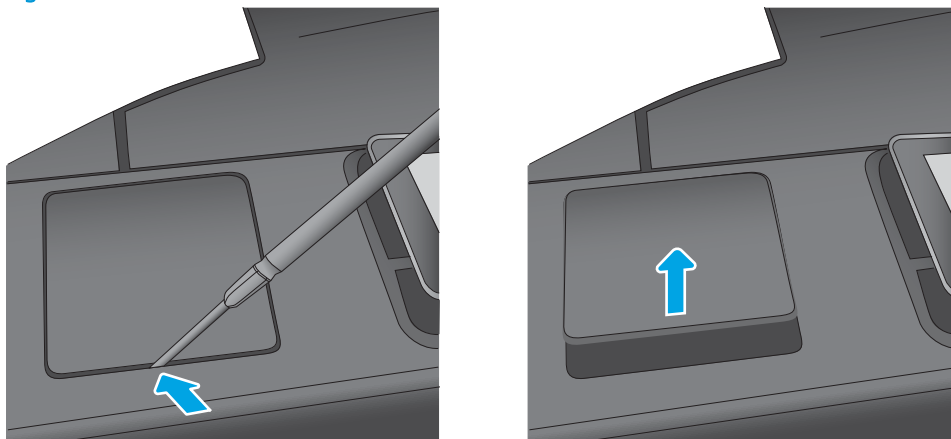


- c. Connect the white connector on the short USB cable provided in the kit to the print server.

Figure 1-61 Connect the USB cable to the print server

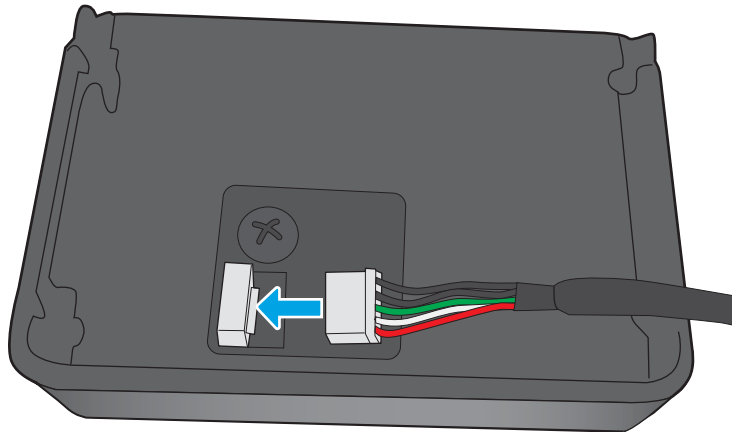


- d. Connect the USB connector on the short USB cable to the socket in the printer's HIP.

Figure 1-62 Connect the USB cable to the printer

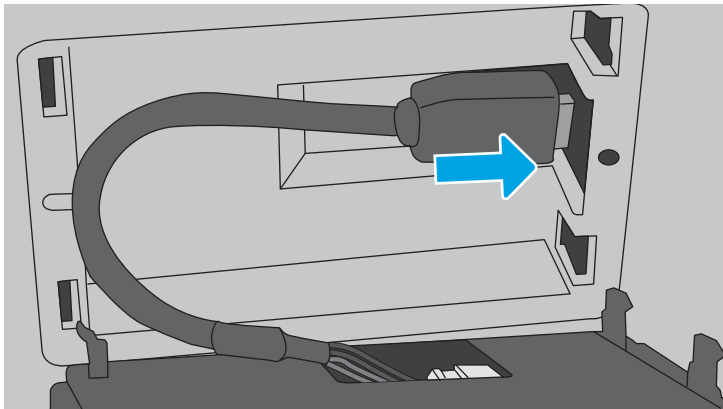


- e. Insert the hook-shaped clips of print server into the HIP recess.

Figure 1-63 Install the clips

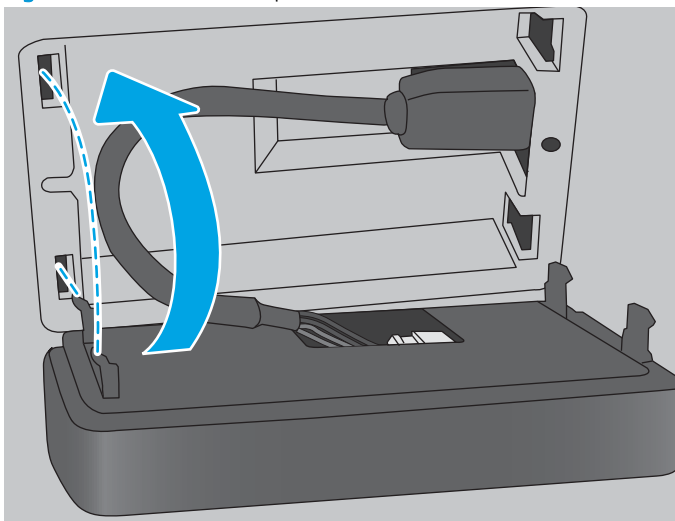


- f. Gently push the print server onto the rounded clips so that it is held securely in place in the HIP.

**Figure 1-64** Install the print server

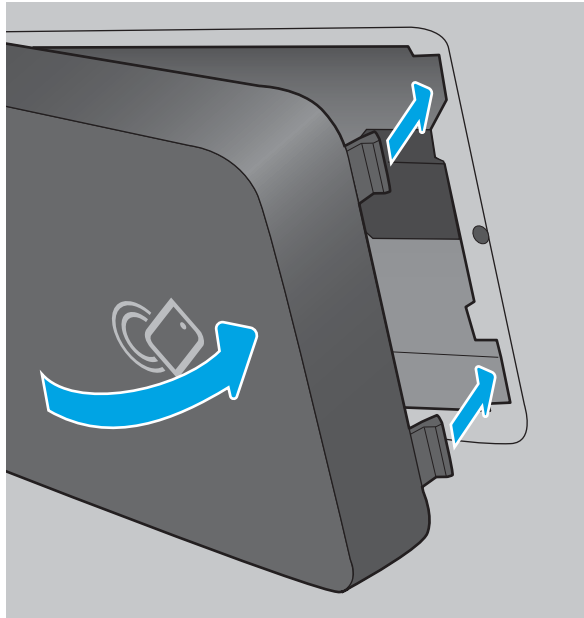


- 2. To install the print server on the outside of the printer, do the following:
  - a. Connect the white connector on the long USB cable provided in the kit to the print server.

**Figure 1-65** Connect the USB cable to the print server

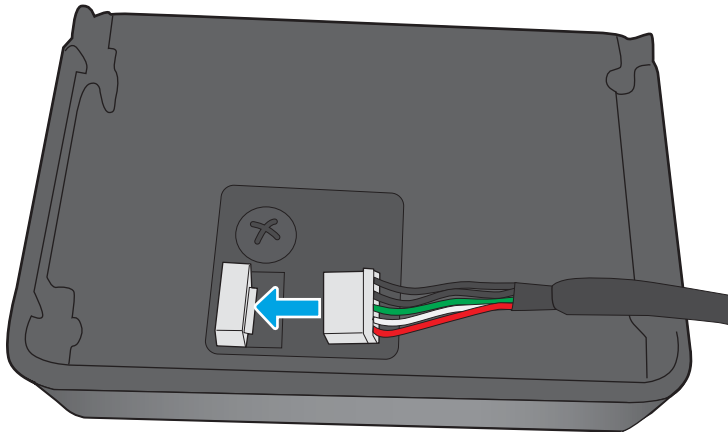


- b. Push the long USB cable into the slot on the accessory cover provided in the kit out (callout 1), and then insert the hook-shaped clips of the print server into the accessory cover (callout 2). Press down to firmly attach the print server to the accessory cover (callout 3).

Figure 1-66 Attach the accessory cover

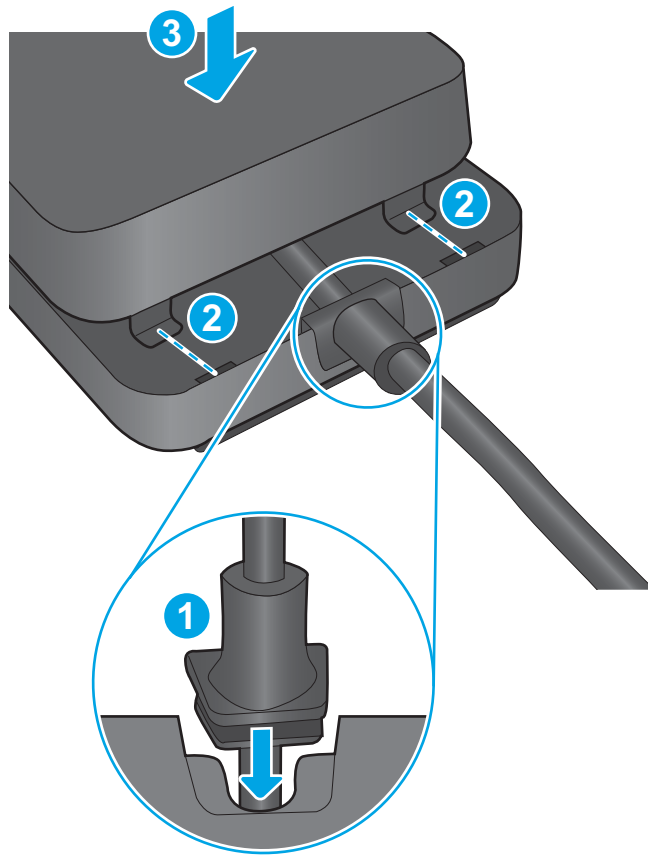

- c. Attach the fastener strips provided in the kit to the bottom of the print server (callout 1). Remove the backing paper in order to attach the bottom set of fastener strips to the top of the printer (callout 2). Place the print server on the printer (callout 3). Connect the USB connector on the long USB cable to the USB accessory port on the printer (callout 4).

Figure 1-67 Attach the print server to the printer

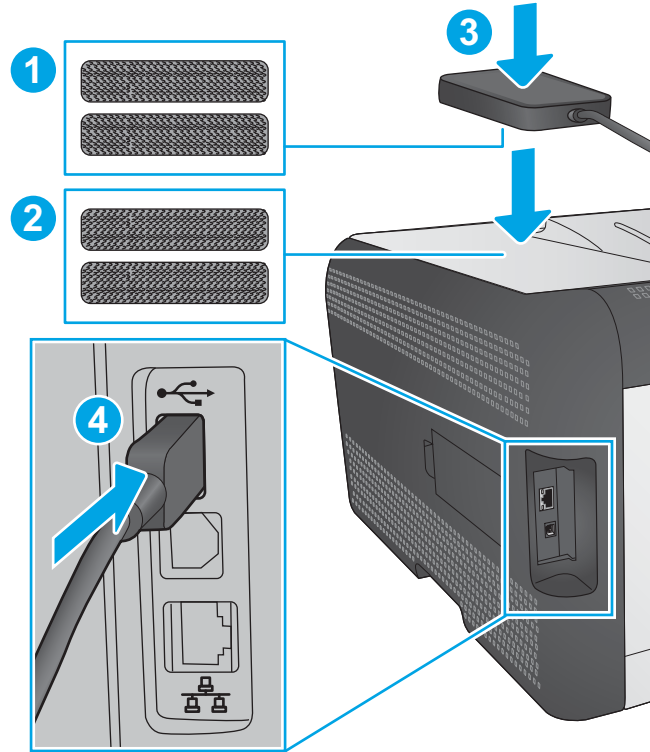

## Install accessory: Trusted platform module (TPM)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the TPM](#)
- [Step 3: Unpack the accessory](#)
- [Step 4: Install the TPM](#)
- [Step 5: Install the formatter cover](#)

### Introduction

This document provides the procedures to install the trusted platform module (TPM).

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Trusted platform module (TPM) part numbers

---

F5562-61001

Trusted platform module (TPM)

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuratio page to make sure that the printer is functioning correctly.



### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.


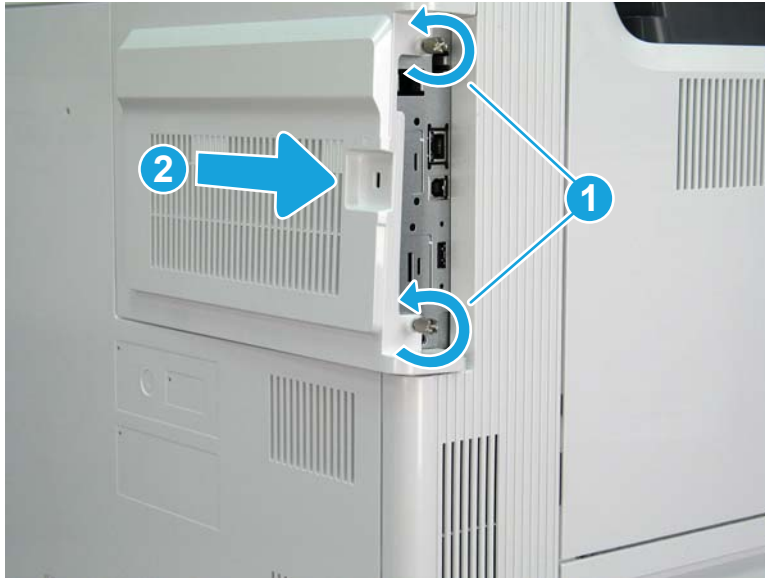
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-68 Remove the formatter cover




### Step 2: Remove the TPM

 **CAUTION:**  ESD sensitive part.

The TPM is available as an accessory for the M652/M653/M681/M682 models, and it is included as a standard component for the E65150/E65160/E67650/E67660 models. If your printer does not have a previously installed TPM, proceed to the next section.

- ▲ Locate the TPM card on the formatter, and then pull it straight out of the formatter to remove it.

Figure 1-69 Remove the TPM

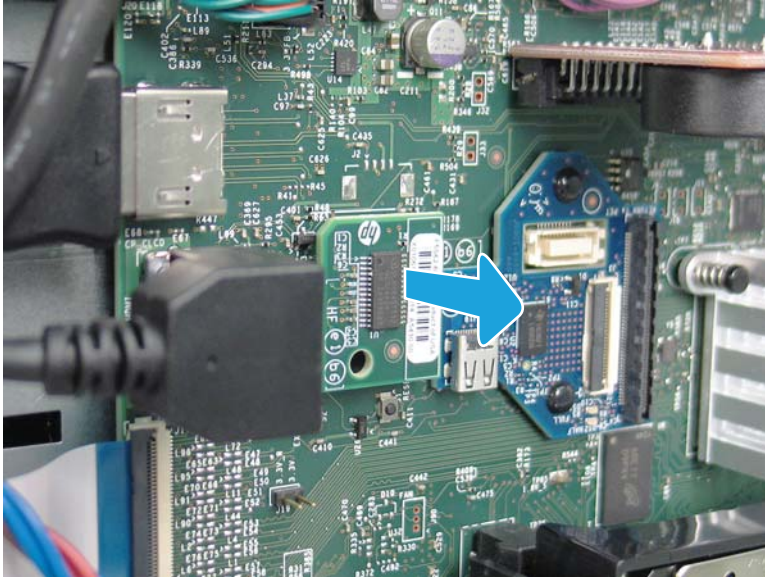

### Step 3: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.

For complete information on HP's recycling programs, go to [Product return and recycling](#).

### Step 4: Install the TPM

 **CAUTION:**  ESD sensitive part.

1. Note the location on the formatter where the TPM will be installed.


Figure 1-70 TPM location



2. Align the connector on the TPM (callout 1) with the connector on the formatter (callout 2).

 **NOTE:** The TPM can only be installed in one direction on the formatter.


Figure 1-71 Align the connectors

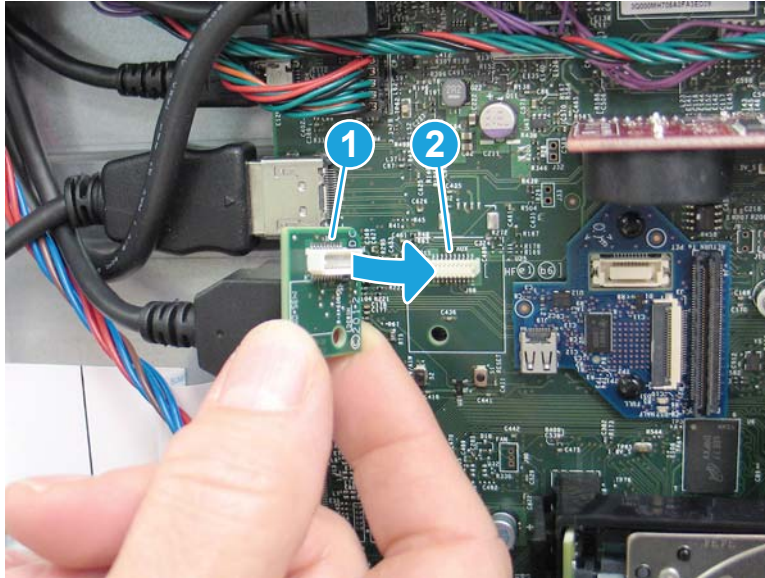

3. Push the TPM onto the formatter to install it.

 **IMPORTANT:** Press on the top part of the TPM to ensure it is fully seated in the connector.


Figure 1-72 Install the TPM

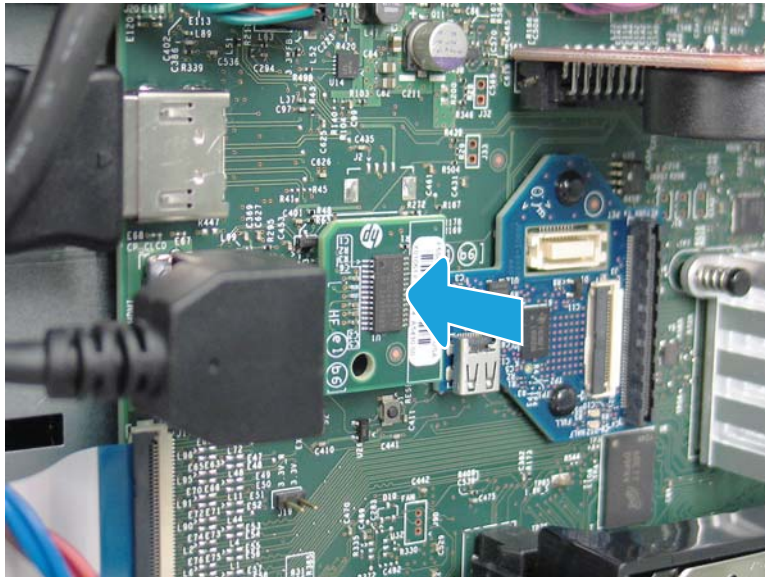

### Step 5: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-73 Install the formatter cover

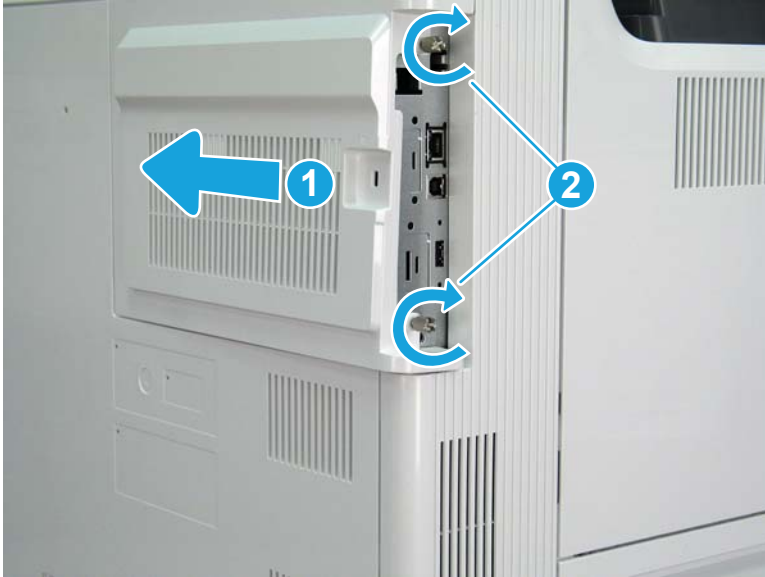

## Install accessory: Internal USB ports

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Unpack the accessory](#)
- [Step 3: Install the internal USB ports](#)
- [Step 4: Install the formatter cover](#)

### Introduction

This document provides the procedures to install the internal USB ports.

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Internal USB ports part numbers	
B5L28-67902	Two internal USB ports

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.


### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-74 Remove the formatter cover

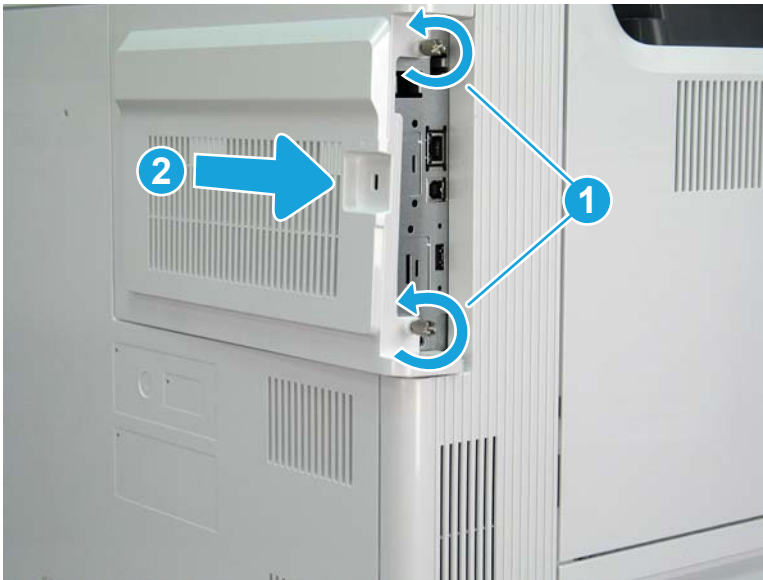

### Step 2: Unpack the accessory

Remove the new part from its package. Save all packaging for recycling.

For complete information on HP's recycling programs, go to [Product return and recycling](#).

### Step 3: Install the internal USB ports


📝 **NOTE:** The M682 is shown in the figure below. The procedure is also correct for the M681/E67550/E67560/E67650/E67660 and M652/M653/E65050/E65060/E65150/E65160 models.

⚠️ **CAUTION:**  ESD sensitive part.

---

1. Remove the following items from the accessory kit:
  - The small PCA board
  - The PCA mounting cradle
  - The shortest single cable (B5L46-60115)


Figure 1-75 Select accessory kit items

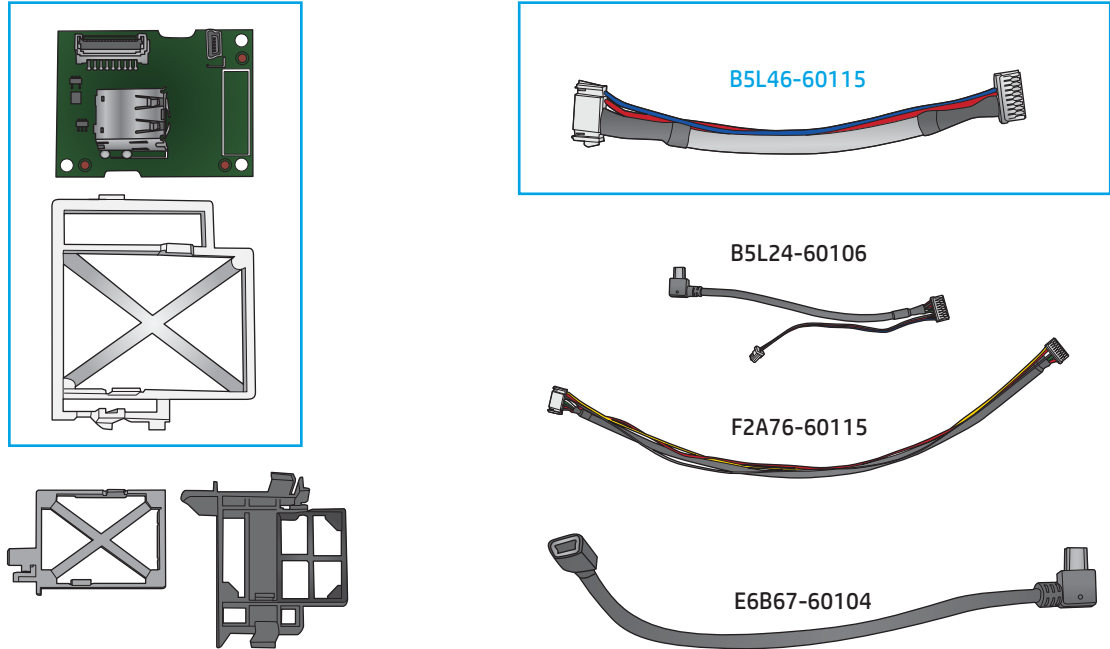

2. Do the following:

- a. Hold the small PCA and the PCA mounting cradle in the correct orientation.
- b. Align the top and bottom cutouts of the PCA on the tabs of the PCA mounting cradle.
- c. Secure the small PCA on the PCA mounting cradle until it snaps in place.


Figure 1-76 Mount the PCA on the PCA mounting cradle and snap it in place

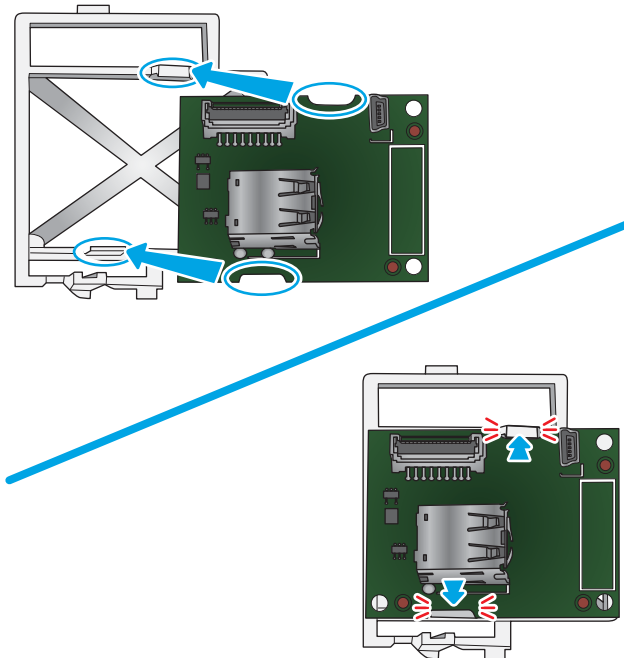




3. Connect the cable to the small PCA.

**Figure 1-77** Connect the cable

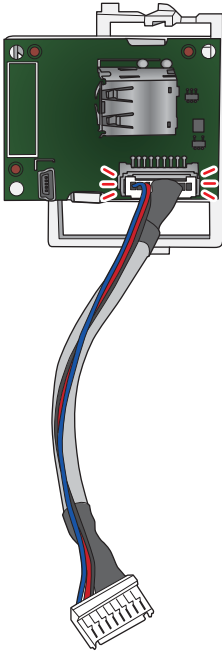

4. Do the following:
  - a. Hold the small PCA attached to the PCA mounting cradle in the correct orientation.
  - b. On the left side of the formatter case area, locate the sheet metal hooks.
  - c. Install the assembly so that the tabs on the PCA mounting cradle slide into the sheet metal hooks.


**Figure 1-78** Mount the assembly on the sheet metal hooks

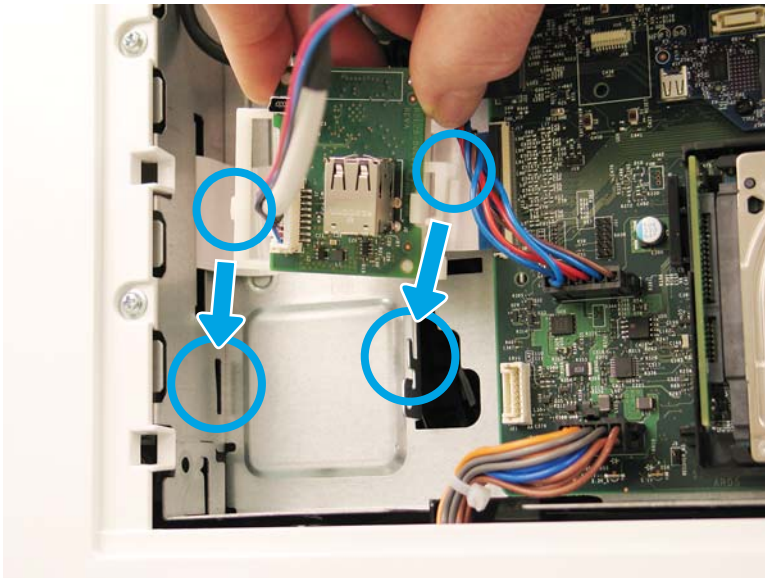



5. Connect the cable to the formatter.


Figure 1-79 Connect the cable

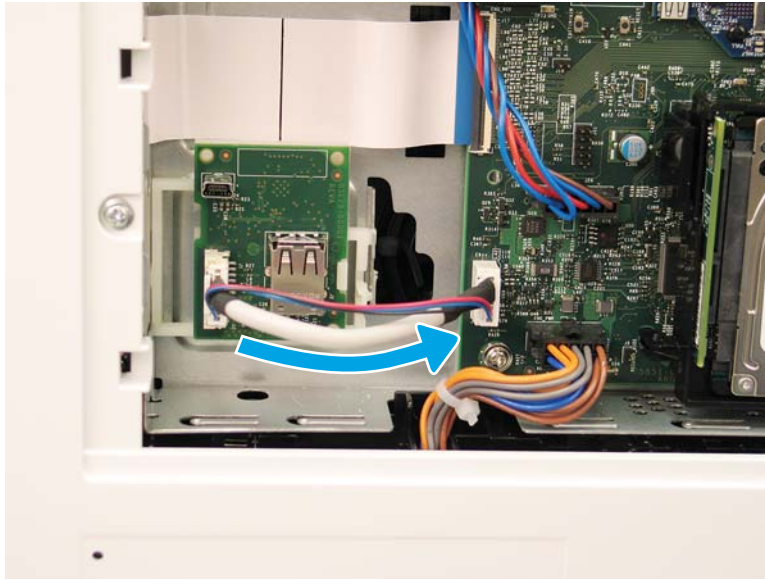

#### Step 4: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-80 Install the formatter cover

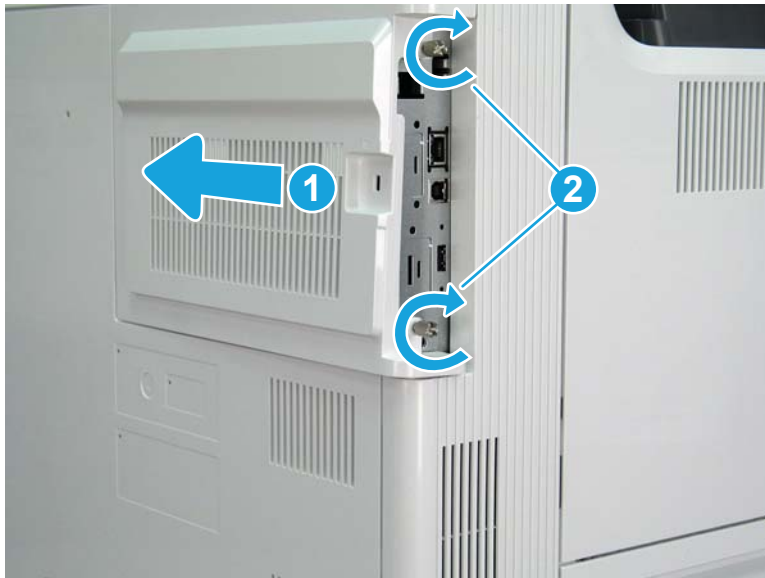

## Install accessory: Foreign interface harness (FIH)

- [Introduction](#)
- [Step 1: Unpack the accessory](#)
- [Step 2: Install the foreign interface harness \(FIH\)](#)

### Introduction

This document provides the procedures to install the foreign interface harness (FIH).

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to

[www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Foreign interface harness (FIH) part number	
B5L31-67902	Foreign interface harness (FIH)

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Unpack the accessory


Remove the new part from its package. Save all packaging for recycling.

For complete information on HP's recycling programs, go to [Product return and recycling](#).

### Step 2: Install the foreign interface harness (FIH)

- ▲ Locate the USB port on the printer, and then plug the USB end of the FIH cable into the printer USB port.

Figure 1-81 Plug the FIH cable into the printer USB port

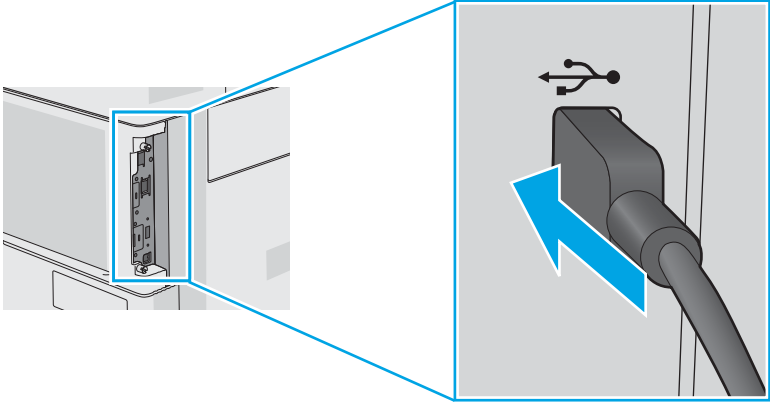


## Removal and replacement: Staple cartridge and carrier (Flow M681z/Flow M682z/Flow E67660z)

- [Introduction](#)
- [Step 1: Remove the staple cartridge and carrier](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the staple cartridge](#)

### Introduction


This document provides the procedures to remove and replace the staple cartridge and carrier.

[Click here to view a video of this procedure](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Staple cartridge and carrier part numbers

---

J8J96A	Staple cartridge refill
B5L46-60102	Staple carrier

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

Print a multiple page document and request that it is stapled. Verify that the document is correctly stapled.


### Step 1: Remove the staple cartridge and carrier

1. Open the staple-cartridge door.

 **NOTE:** Opening the staple-cartridge door disables the stapler.

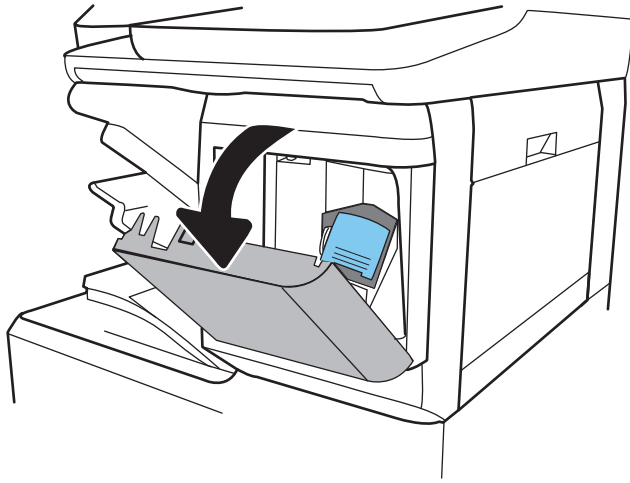


2. Grasp the colored tab on the staple cartridge, and then pull the staple cartridge straight out.

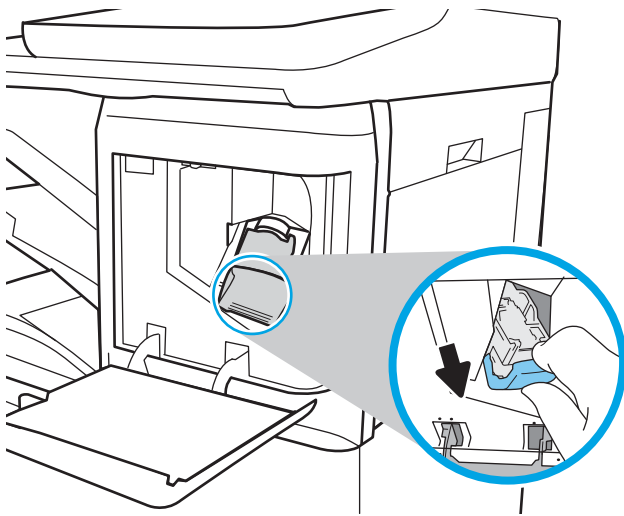

3. Lift two tabs on the staple cartridge, and then lift up to remove the empty staple cartridge from the staple cartridge carriage assembly.

**Figure 1-82** Release the staple cartridge refill

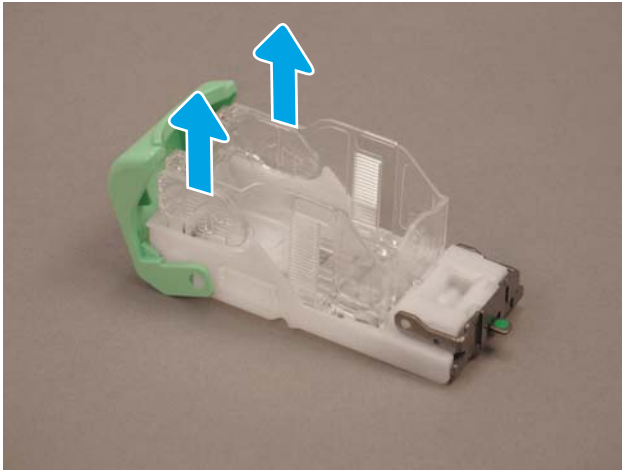

---

 **NOTE:** Do not discard the staple cartridge carriage. It must be reused with the new staple cartridge.

---

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


### Step 3: Install the staple cartridge

1. Insert the new staple cartridge into the staple cartridge carriage.


Figure 1-83 Install the staple cartridge refill

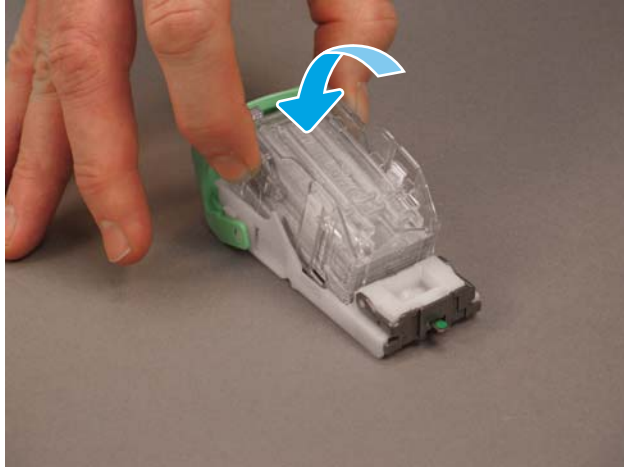

2. Insert the staple cartridge into the stapler and press the colored handle toward the printer until it snaps into place.

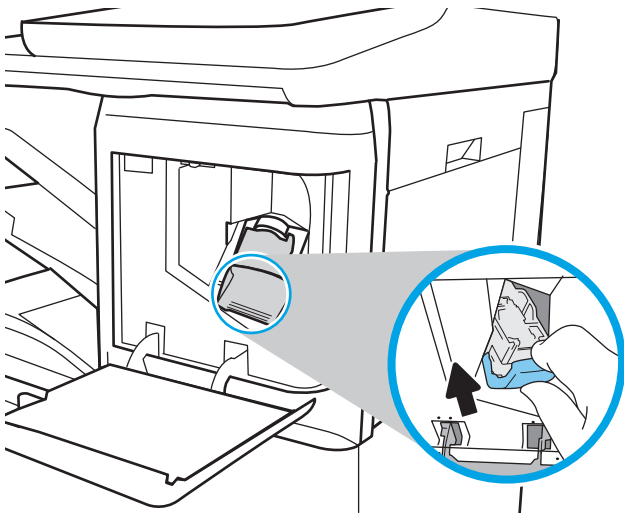

3. Close the staple-cartridge door.

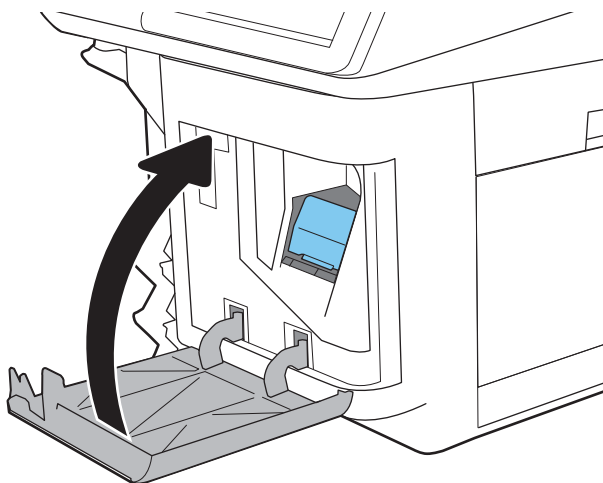

## Removal and replacement: embedded MultiMedia Card (eMMC)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the embedded MultiMedia Card \(eMMC\)](#)
- [Step 3: Unpack the replacement assembly](#)
- [Step 4: Install the eMMC](#)
- [Step 5: Install the formatter cover](#)
- [Step 6: Reinstall the printer firmwar](#)

### Introduction

This document provides the procedures to remove and replace the embedded MultiMedia Card (eMMC).

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### embedded MultiMedia Card (eMMC) part numbers

---

B5L32-60003

8 GB embedded MultiMedia Card (eMMC)

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuratio page to make sure that the printer is functioning correctly.




### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-84 Remove the formatter cover

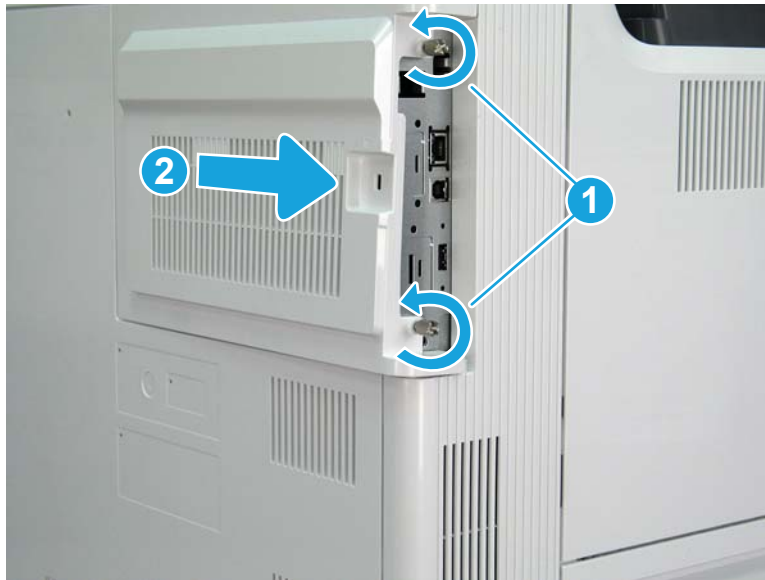


### Step 2: Remove the embedded MultiMedia Card (eMMC)

⚠️ **CAUTION:**  ESD sensitive part.

- ▲ Locate the eMMC component on the formatter, and then pull it straight out of the formatter to remove it.

Figure 1-85 Remove the eMMC

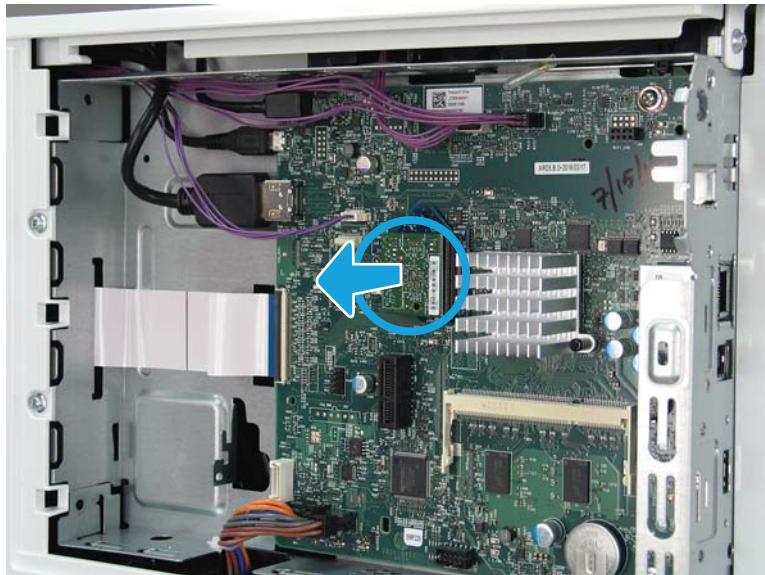


### Step 3: Unpack the replacement assembly

---

 **CAUTION:**  ESD sensitive part.

---



1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 4: Install the eMMC

---

 **CAUTION:**  ESD sensitive part.


---

1. Align the connector on the replacement eMMC (callout 1) with the connector on the formatter (callout 2).

 **NOTE:** The eMMC can only be installed in one direction on the formatter.

---

Figure 1-86 Align the connectors

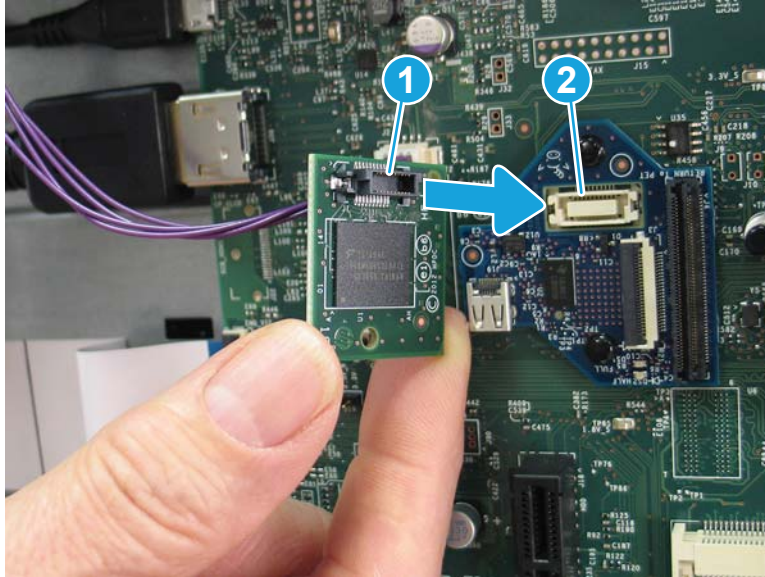

2. Push the eMMC onto the formatter to install it.


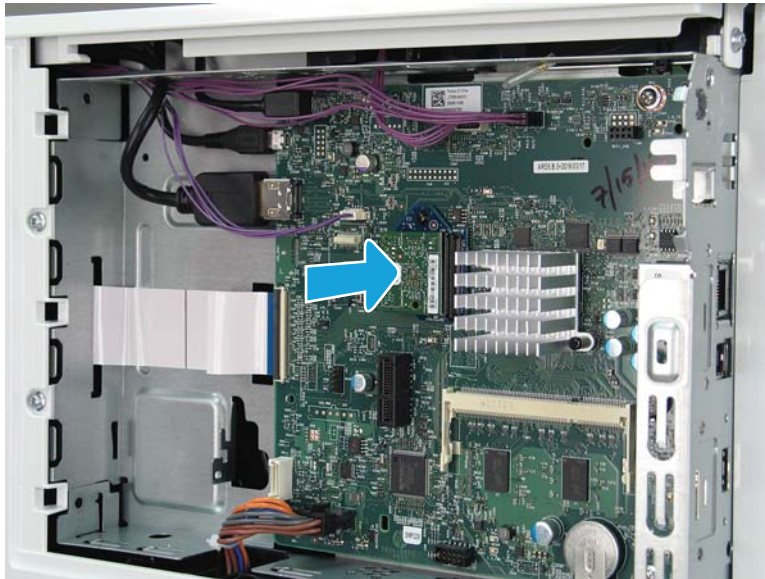
 **IMPORTANT:** Press on the top part of the eMMC to ensure it is fully seated in the connector.


Figure 1-87 Install the eMMC



### Step 5: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-88 Install the formatter cover

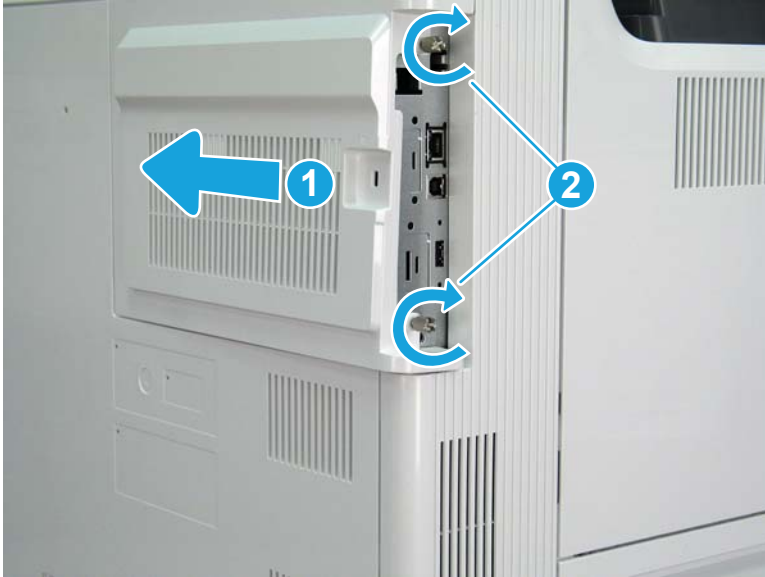

### Step 6: Reinstall the printer firmwar

---

 **NOTE:** If this installation is a replacement eMMC, use the following steps to reinstall the firmware

---

1. Go to [www.hp.com/go/futuresmart](http://www.hp.com/go/futuresmart).
2. Select **Upgrade now**.
3. Find your Enterprise printer model.
4. Select the link to open the firmwar download page.
5. Select **OS Independent** from the list of operating systems.
6. Under the **Firmware** section, fin the fil for multiple operating systems.
7. Select **Download**.

---

 **NOTE:** To view installation instructions, go to [www.hp.com/go/futuresmart](http://www.hp.com/go/futuresmart). Select **Upgrade now**, and then select **How to perform a firmwar update**.

---

## Removal and replacement: Hard disk drive (HDD)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Unpack the replacement assembly](#)
- [Step 4: Install the HDD](#)
- [Step 5: Install the formatter cover](#)
- [Step 6: Reinstall the printer firmwar](#)

### Introduction

This document provides the procedures to remove and replace the hard disk drive (HDD).

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Hard disk drive (HDD) part numbers	
5851-6712	320 GB Hard Disk Drive
B5L29-67903	500 GB Secure Hard Disk Drive

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-89 Remove the formatter cover

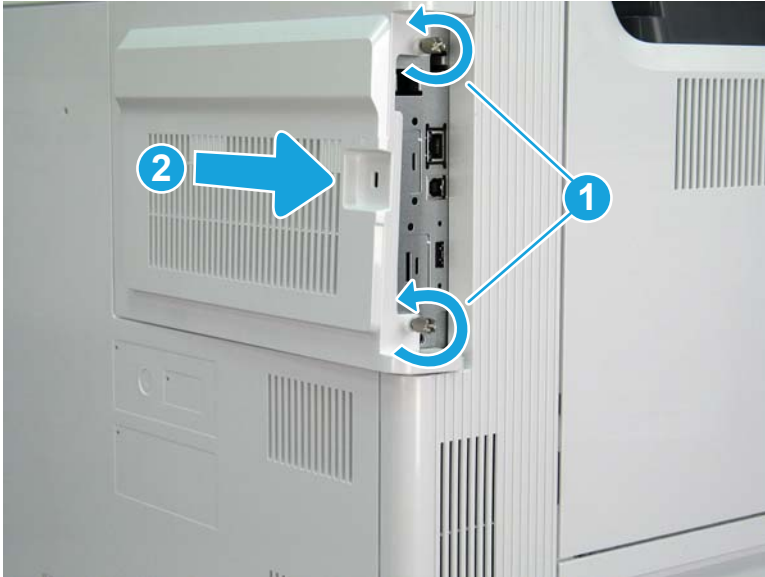

### Step 2: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.


Figure 1-90 Release the HDD

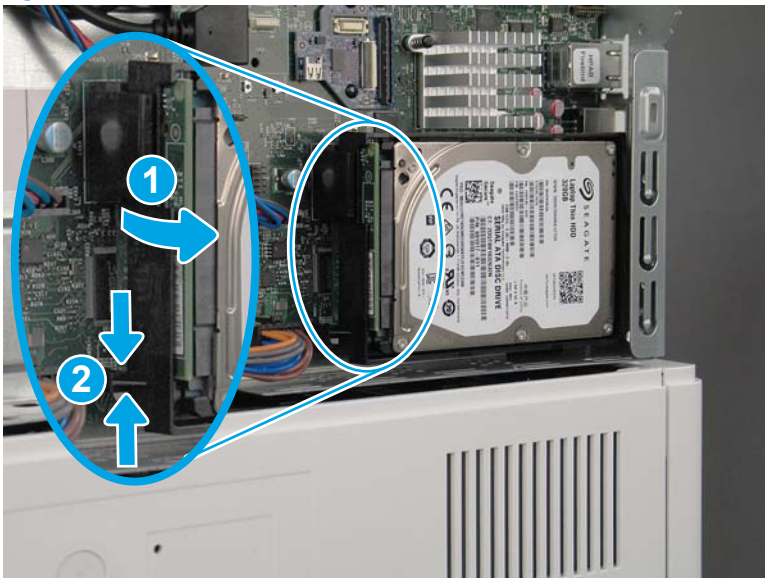



2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-91 Remove the HDD

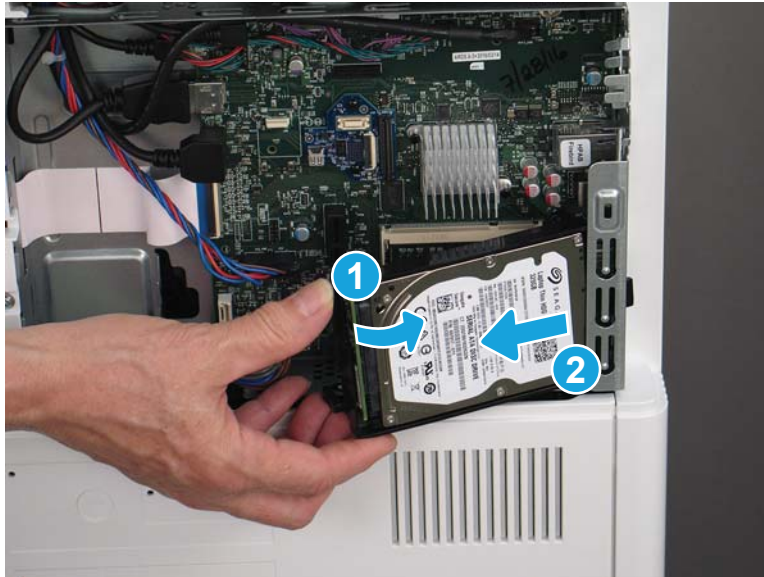



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.


3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 4: Install the HDD

1. Before proceeding, take note of the location of the slot (callout 1) in the sheet-metal where the HDD cradle mounting tab (callout 2) must be installed.

Figure 1-92 Locate the slot in the sheet metal

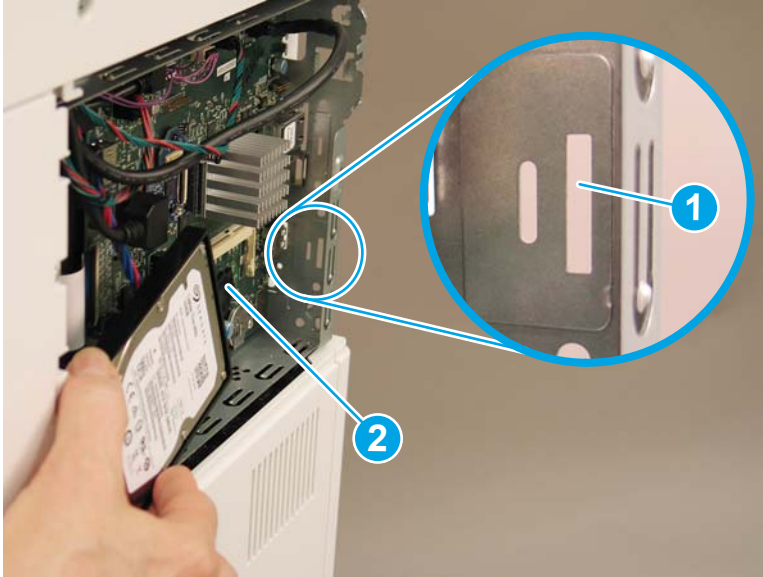

2. Insert the HDD cradle mounting tab in the slot in the sheet-metal, slide the HDD to the right (callout 1) to fully install the tab in the sheet metal, and then rotate the connector end (callout 2) of the HDD toward the formatter.


Figure 1-93 Install the HDD





3. Make sure that the locking connector (callout 1) latches and that the stando (callout 2) engages with the slot in the formatter (it might be necessary to pinch the retainer to engage it with the slot).


Figure 1-94 Check the HDD connector

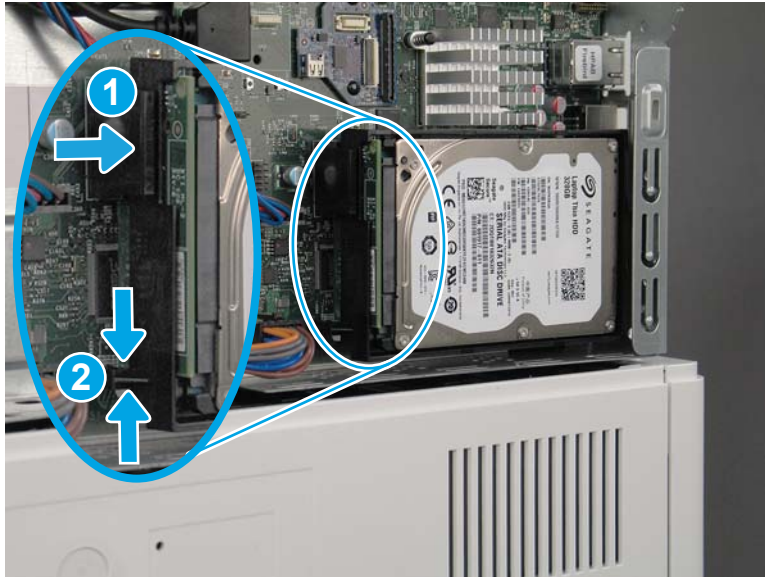


#### Step 5: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-95 Install the formatter cover

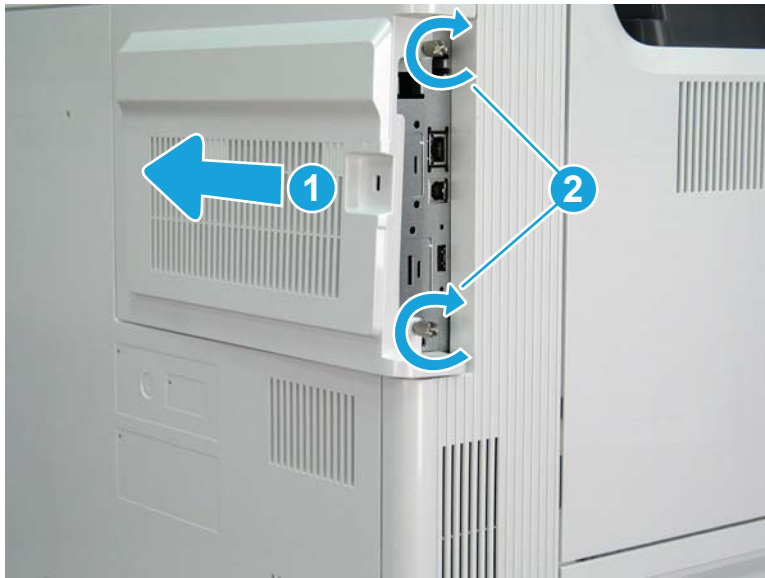

#### Step 6: Reinstall the printer firmwar

 **NOTE:** If this installation is a replacement HDD, use the following steps to reinstall the firmware

1. Go to [www.hp.com/go/futuresmart](http://www.hp.com/go/futuresmart).
2. Select **Upgrade now**.

3. Find your Enterprise printer model.
4. Select the link to open the firmware download page.
5. Select **OS Independent** from the list of operating systems.
6. Under the **Firmware** section, find the file for multiple operating systems.
7. Select **Download**.



**NOTE:** To view installation instructions, go to [www.hp.com/go/futuresmart](http://www.hp.com/go/futuresmart). Select **Upgrade now**, and then select **How to perform a firmware update**.

---

## Removal and replacement: Dual in-line memory module (DIMM)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the dual in-line memory module \(DIMM\)](#)
- [Step 4: Unpack the replacement assembly](#)
- [Step 5: Install the DIMM](#)
- [Step 6: Install the HDD](#)
- [Step 7: Install the formatter cover](#)

### Introduction

This document provides the procedures to remove and replace the dual in-line memory module (DIMM).

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Dual in-line memory module (DIMM) part numbers	
E5K48-67902	1 GB DDR3 SODIMM
E5K49-67901	2 GB DDR3 SODIMM

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-96 Remove the formatter cover

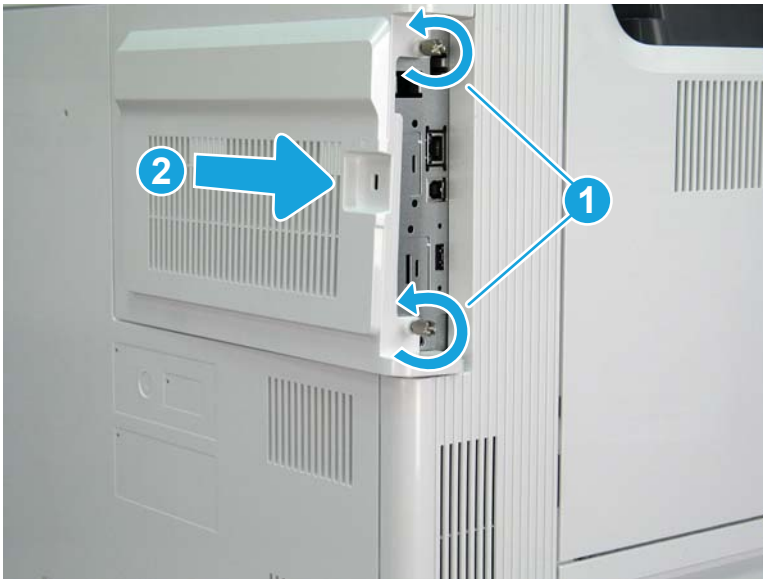

### Step 2: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-97 Release the HDD

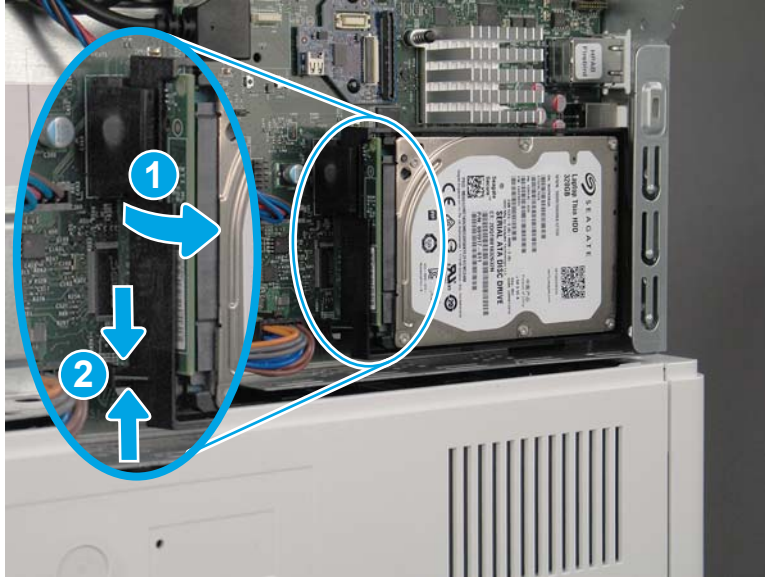

2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-98 Remove the HDD



### Step 3: Remove the dual in-line memory module (DIMM)


1. Locate the DIMM on the formatter.

Figure 1-99 Locate the DIMM



2. Release two locking arms (callout 1), and then allow the edge of the DIMM to rotate away from the holder (callout 2).


Figure 1-100 Release two locking arms

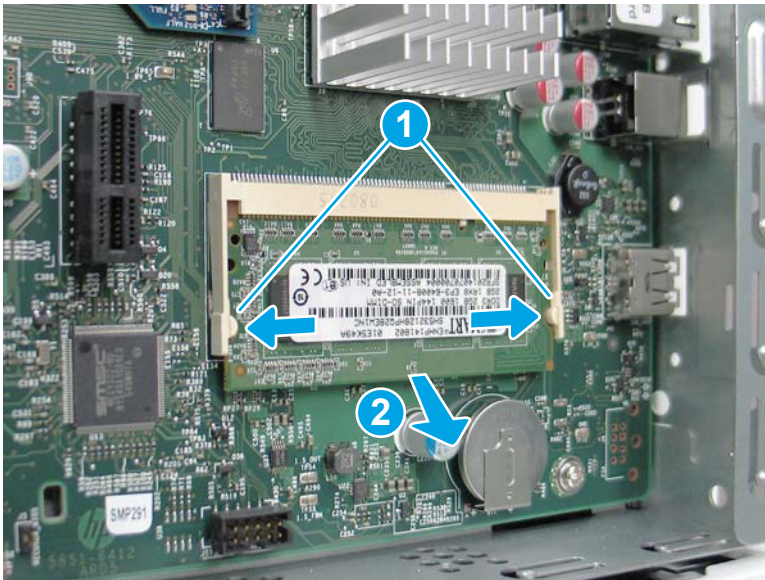



3. Pull the DIMM down and away from the holder to remove it.

**Figure 1-101** Remove the DIMM

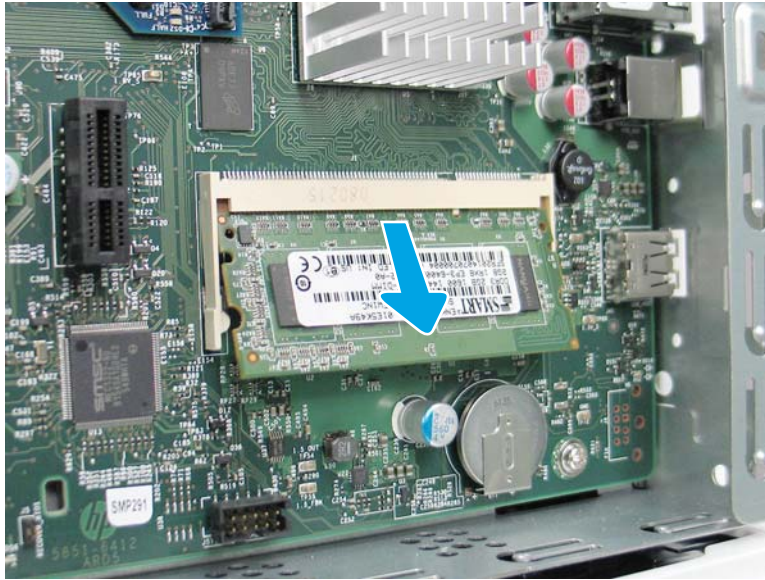



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

#### Step 5: Install the DIMM

1. Insert the top edge of the DIMM in the holder.


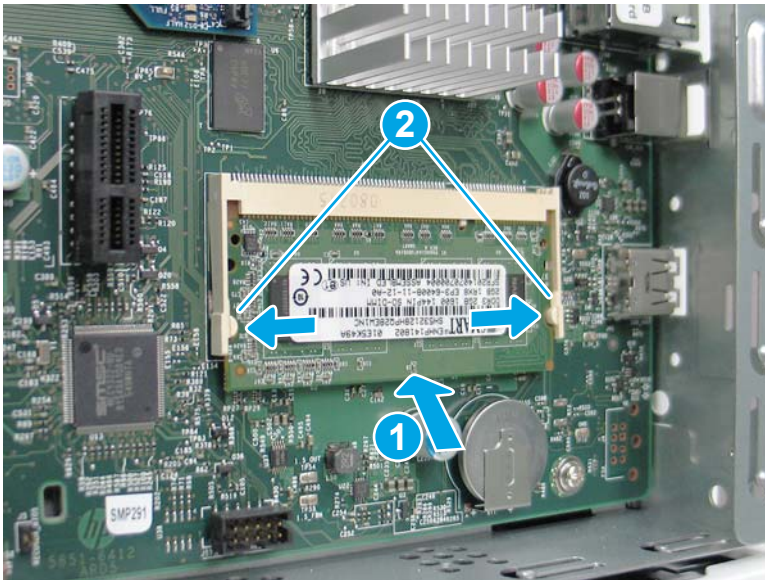
 **TIP:** The DIMM is keyed and can only be inserted in the holder one way.

Figure 1-102 Insert the DIMM



2. Pivot the bottom edge of the DIMM toward the holder (callout 1), and then make sure that the two locking arms snap into place (callout 2).

Figure 1-103 Install the DIMM




### Step 6: Install the HDD

1. Before proceeding, take note of the location of the slot (callout 1) in the sheet-metal where the HDD cradle mounting tab (callout 2) must be installed.




Figure 1-104 Locate the slot in the sheet metal

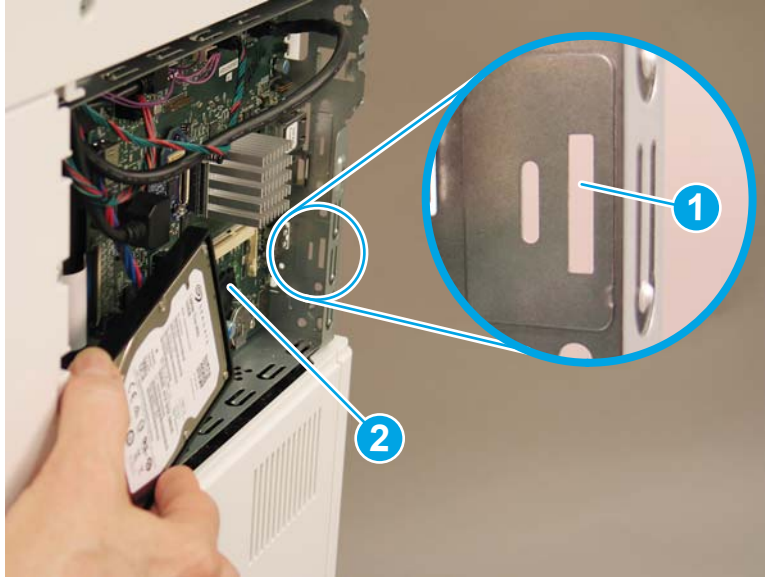


2. Insert the HDD cradle mounting tab in the slot in the sheet metal, slide the HDD to the right (callout 1) to fully install the tab in the sheet metal, and then rotate the connector end (callout 2) of the HDD toward the formatter.

Figure 1-105 Install the HDD

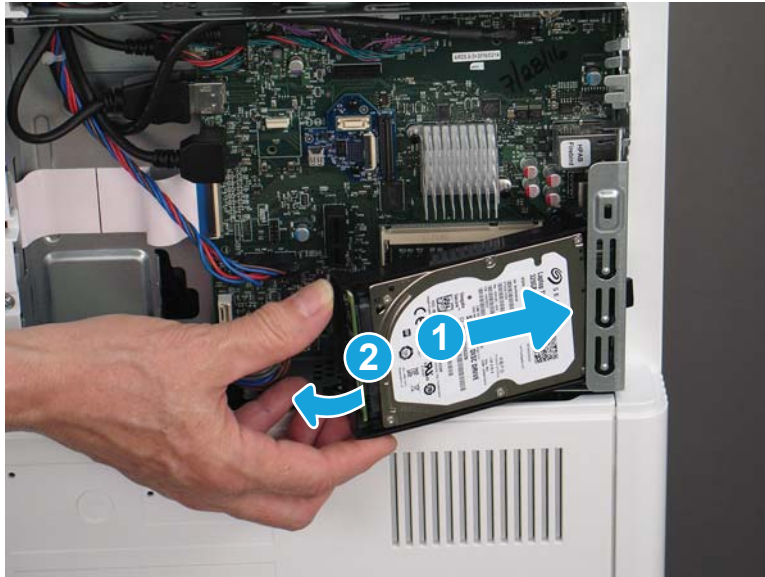

3. Make sure that the locking connector (callout 1) latches and that the stando (callout 2) engages with the slot in the formatter (it might be necessary to pinch the retainer to engage it with the slot).


Figure 1-106 Check the HDD connector

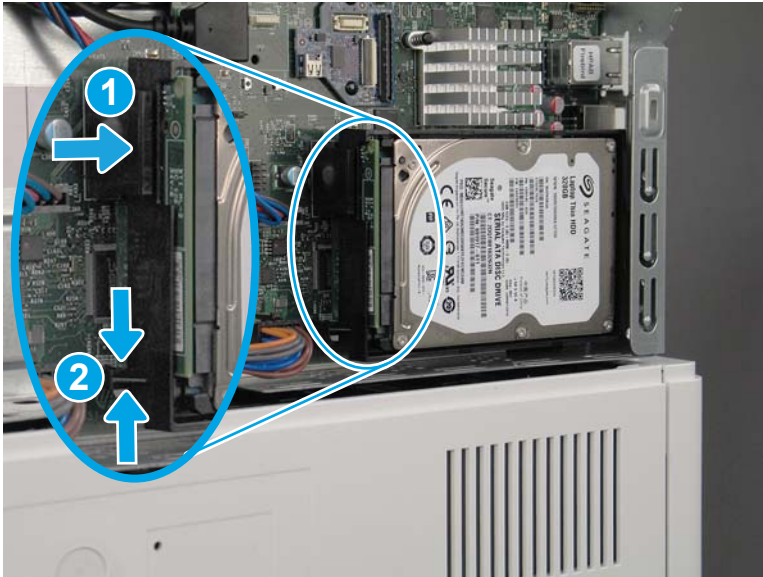

#### Step 7: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-107 Install the formatter cover

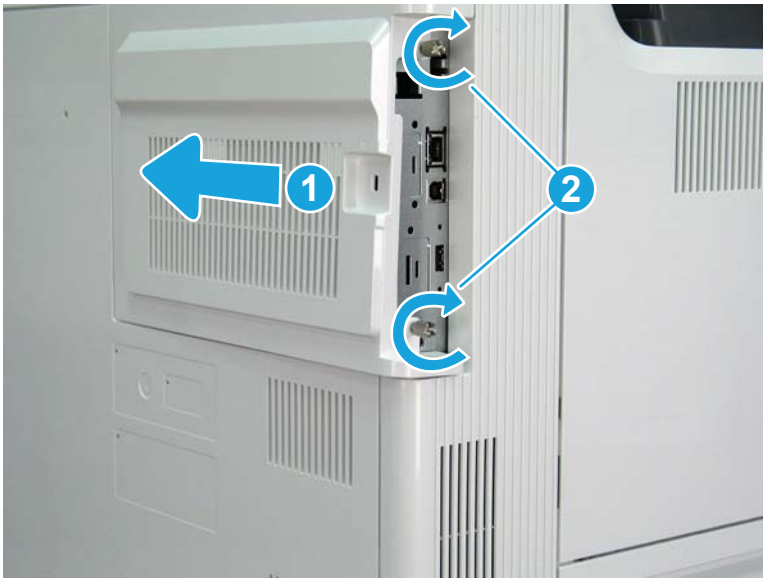

## Removal and replacement: Fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the fax PCA](#)
- [Step 3: Unpack the replacement assembly](#)
- [Step 4: Install the fax PCA](#)
- [Step 5: Install the formatter cover](#)

### Introduction

This document provides the procedures to remove and replace the fax PCA.

[Click here to view a video of this procedure](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Fax PCA part number	
B5L53-67901	Fax PCA

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-108 Remove the formatter cover

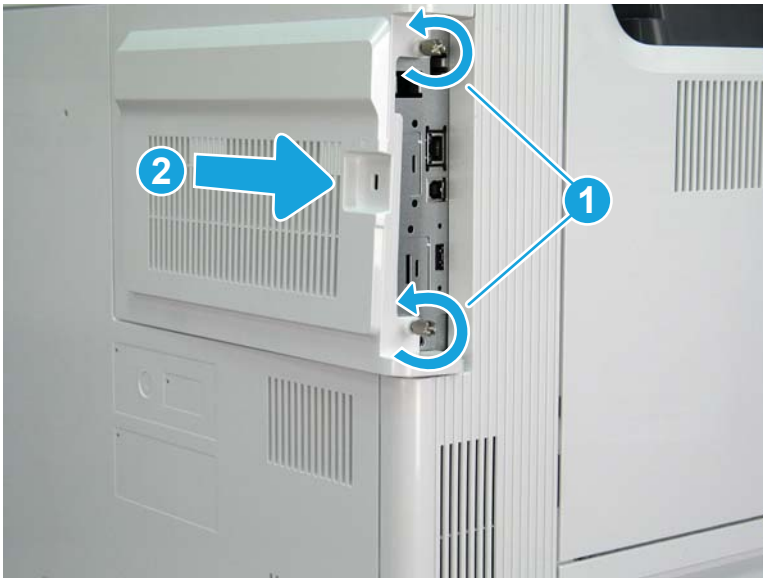

### Step 2: Remove the fax PCA


1. Locate the fax PCA on the formatter.

Figure 1-109 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.

Figure 1-110 Remove the fax PCA

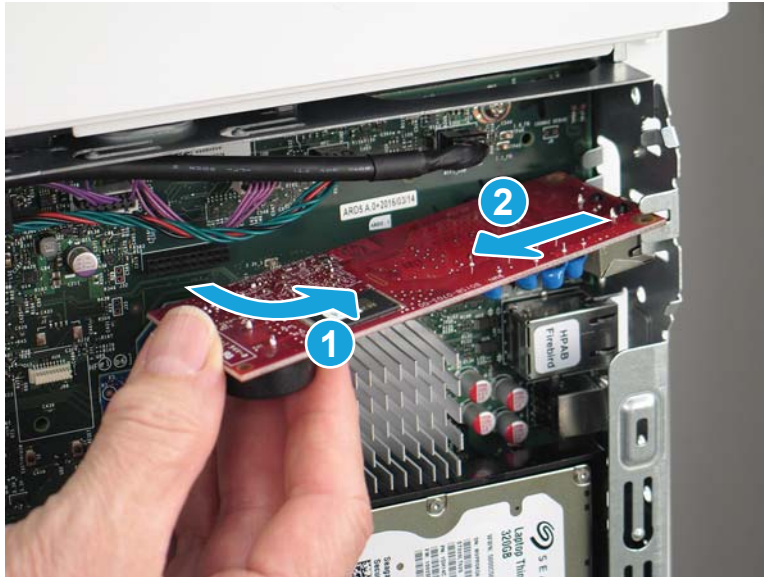



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.


3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

#### Step 4: Install the fax PCA

- ▲ Position the telephone port on the right end of the fax PCA through the sheet metal in the formatter case (callout 1). Rotate the connector end of the fax PCA toward the formatter (callout 2), and then install the connector on the fax PCA into the connector on the formatter.


Figure 1-111 Install the fax PCA

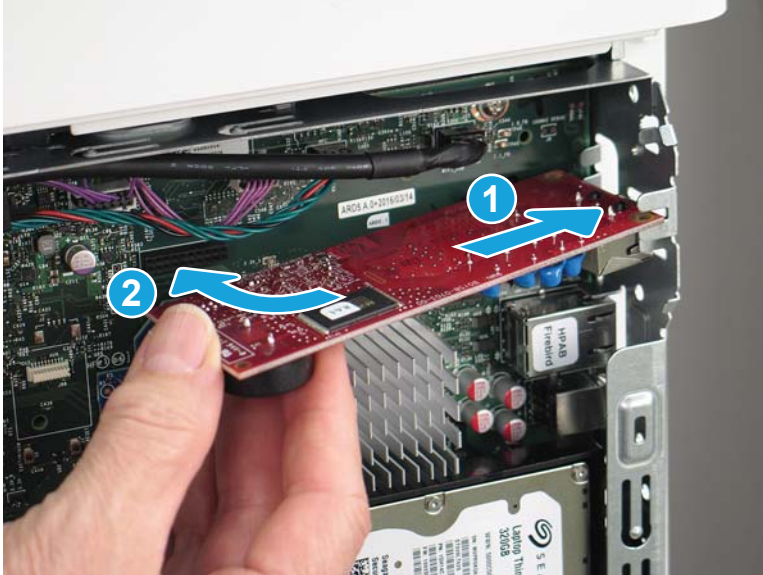

#### Step 5: Install the formatter cover

- ▲ Slide the formatter cover (callout 1) toward the printer to install it, and then tighten two thumbscrews (callout 2).

Figure 1-112 Install the formatter cover

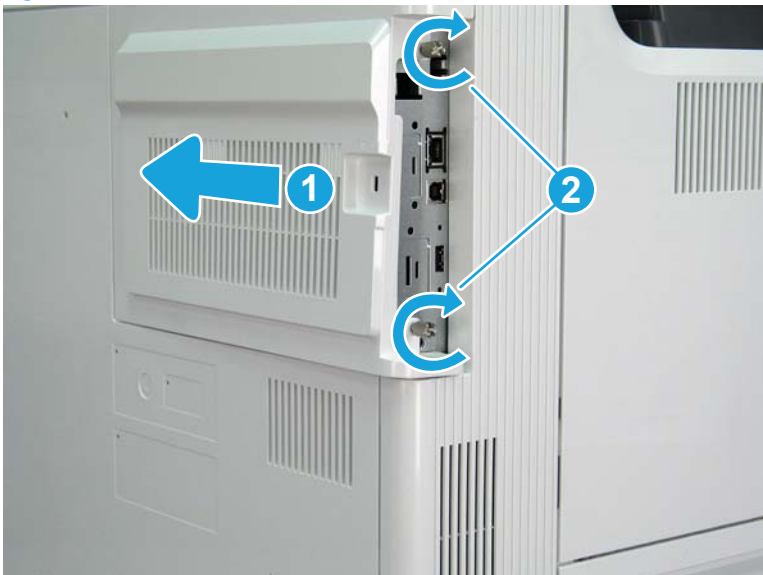



## Removal and replacement: Document feeder rollers

- [Introduction](#)
- [Step 1: Remove the document feeder rollers](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the document feeder rollers](#)

### Introduction

This document provides the procedures to remove and replace the document feeder rollers

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder rollers part number	
5851-7202	Document feeder rollers with instruction guide

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the document feeder rollers


1. Open the document feeder cover.

Figure 1-113 Open the document feeder cover



2. Rotate the blue locking lever down.


Figure 1-114 Rotate the blue locking lever down

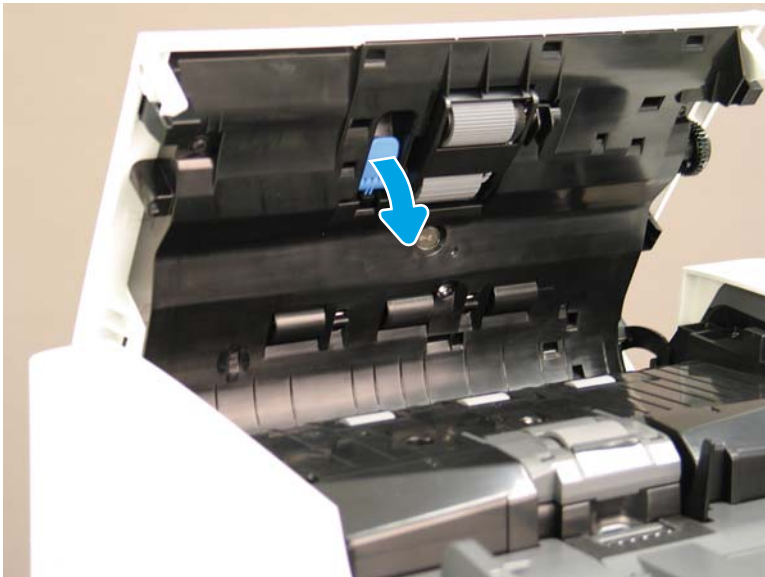




3. Slide the locking lever toward the front of the printer.

Figure 1-115 Slide the locking lever toward the front

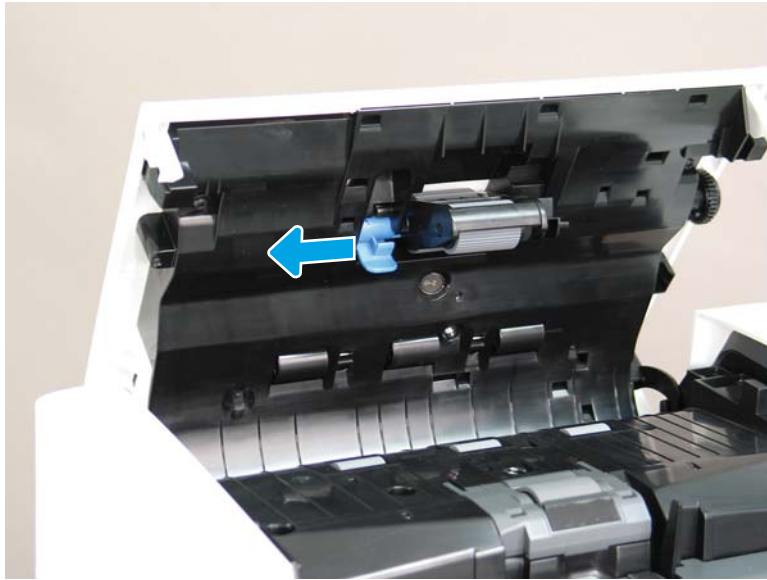


4. Slide the roller to the left (callout 1), and then rotate it away from the document feeder to remove it (callout 2).

Figure 1-116 Remove the pick roller

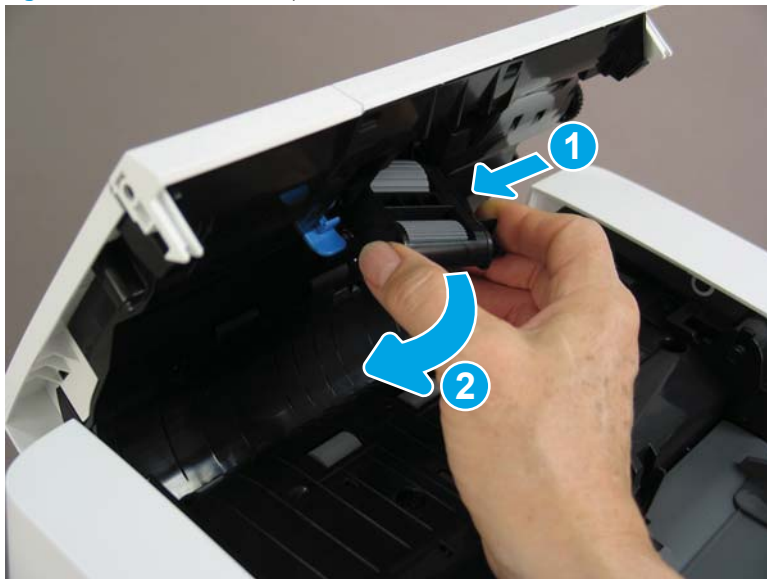


5. Open the document feeder separation roller cover..

Figure 1-117 Open the separation roller cover

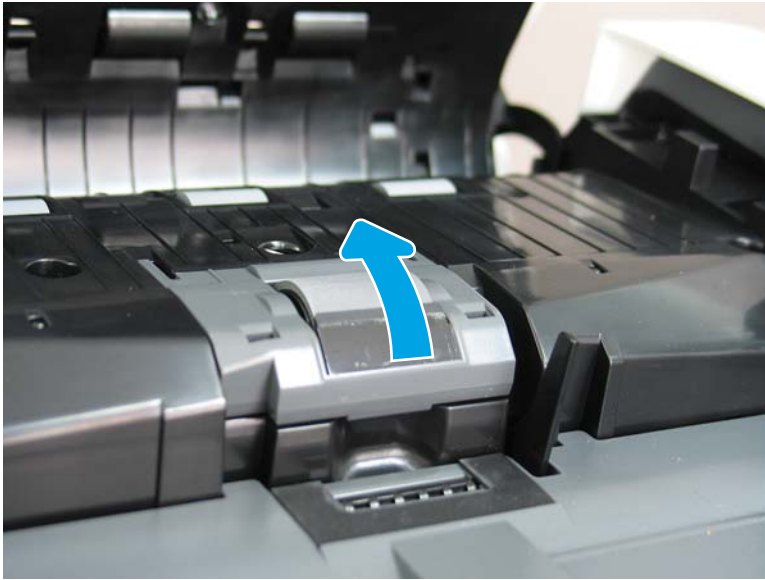

6. Raise the right edge of the separation roller (callout 1), and then slide the roller to the right (callout 2) to remove it.


Figure 1-118 Remove the separation roller cover

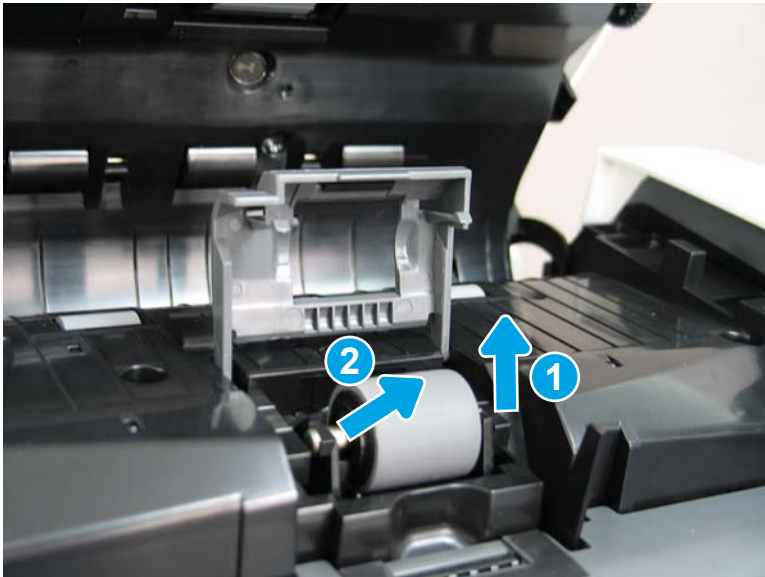

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install the document feeder rollers


1. Install the left end of the replacement separation roller into the holder (callout 1), and then press the right side of the roller down (callout 2).

**Figure 1-119** Install the separation roller

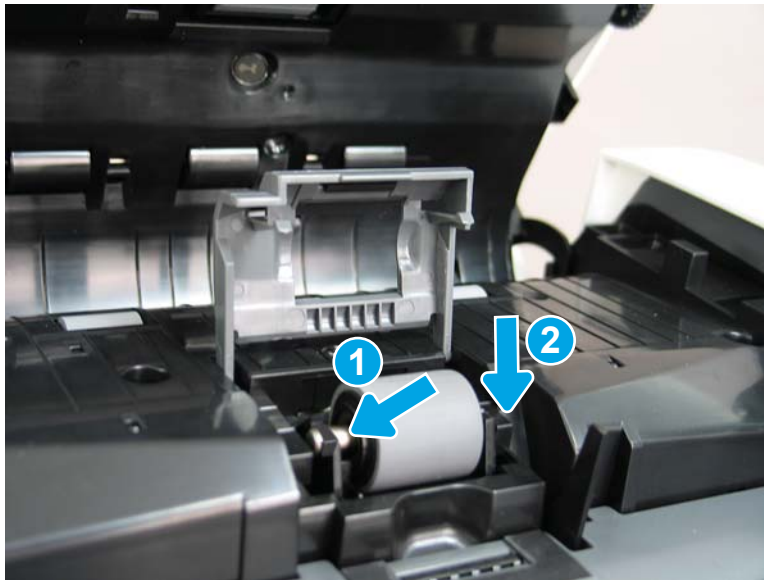


2. Close the roller cover.

Figure 1-120 Close the roller cover

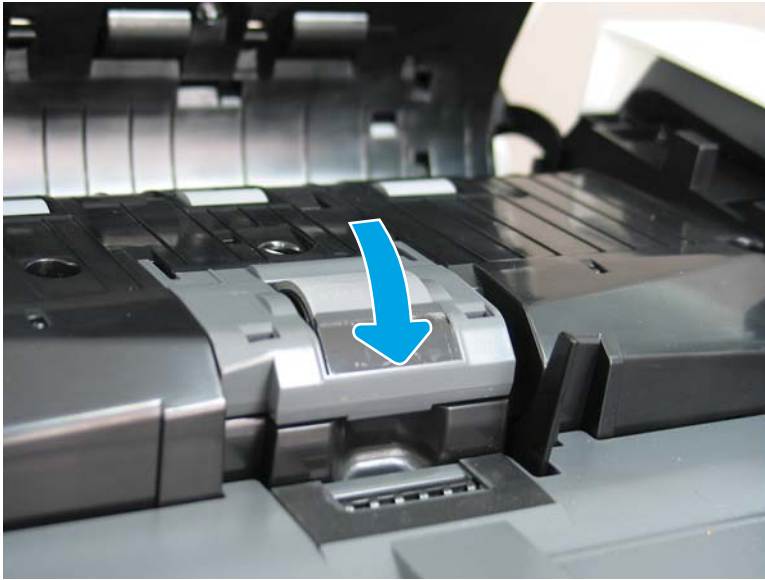


3. Install the tab on the left end of the replacement pick roller assembly into the slot in the document feeder.

Figure 1-121 Install the pick roller

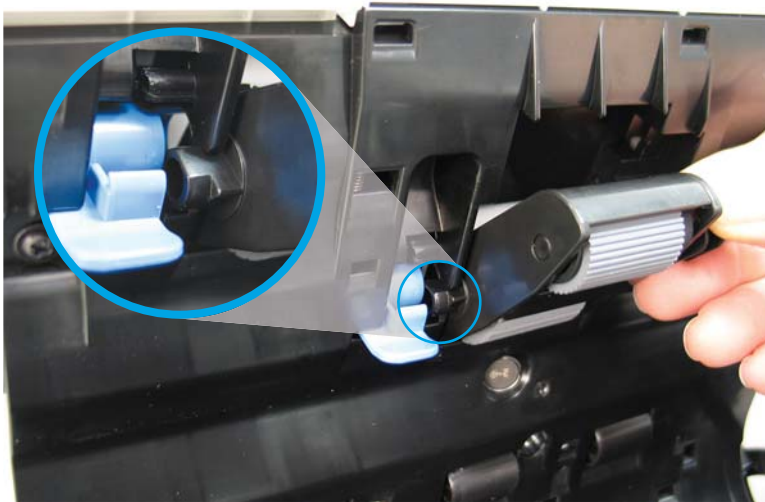


4. Slide the locking lever toward the back of the printer to secure the pick roller.

**Figure 1-122** Slide the locking lever toward the back

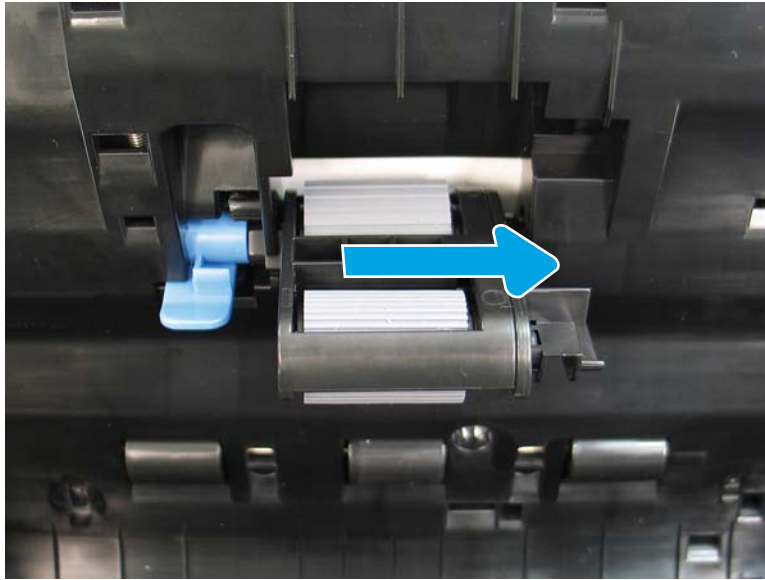


5. Rotate the pick roller assembly up into the holder (callout 1), and then slide the blue locking lever toward the back of the printer (callout 2).

**Figure 1-123** Rotate the pick roller up and slide the blue locking lever towards the back

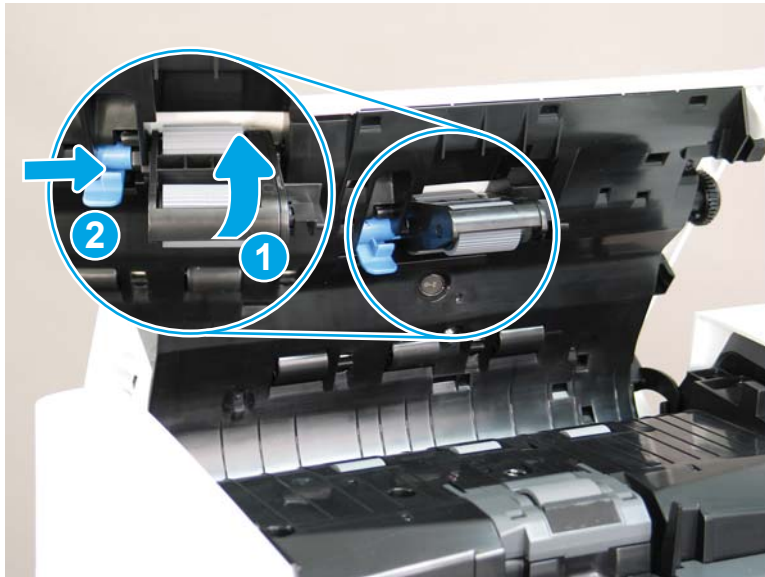

6. Rotate the blue locking lever up.

**Figure 1-124** Rotate the blue locking lever up

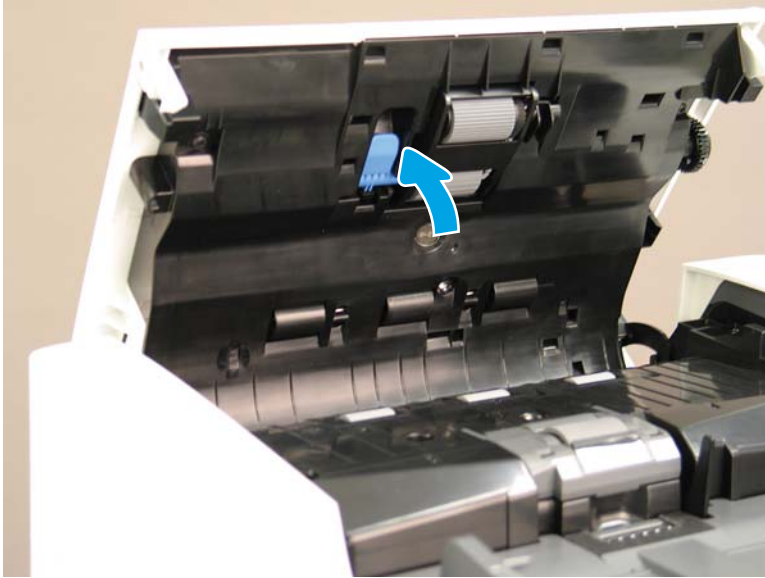

7. Close the document feeder cover.

**Figure 1-125** Close the document feeder cover





## Removal and replacement: Document feeder separation roller cover

- [Introduction](#)
- [Step 1: Remove the document feeder separation roller cover](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the document feeder separation roller cover](#)

### Introduction

This document provides the procedures to remove and replace the document feeder separation roller cover.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder separation roller cover part number	
J1H98-60026	ADF Separation Roller Cover

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the document feeder separation roller cover


1. Open the document feeder cover.

Figure 1-126 Open the document feeder cover



2. Open the document feeder separation roller cover..


Figure 1-127 Open the separation roller cover

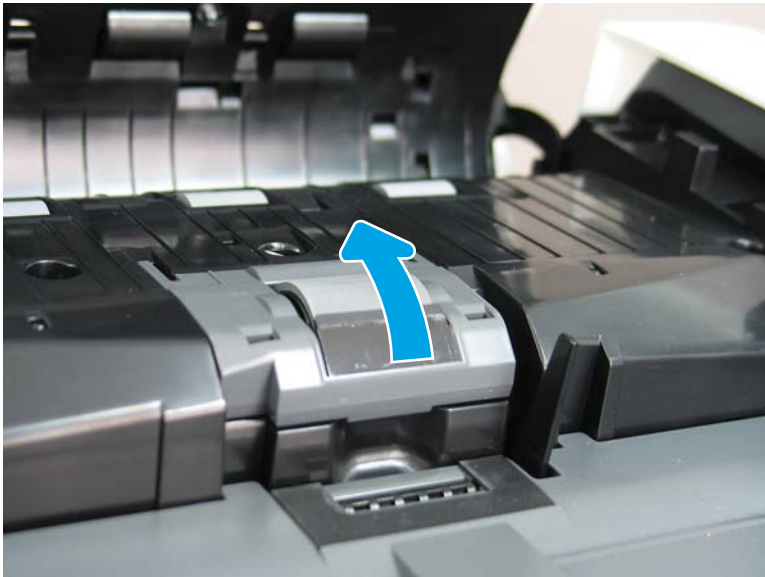



3. Release the hinge pin (callout 1), and then rotate the cover to the right (callout 2) to remove it.

Figure 1-128 Remove the separation roller

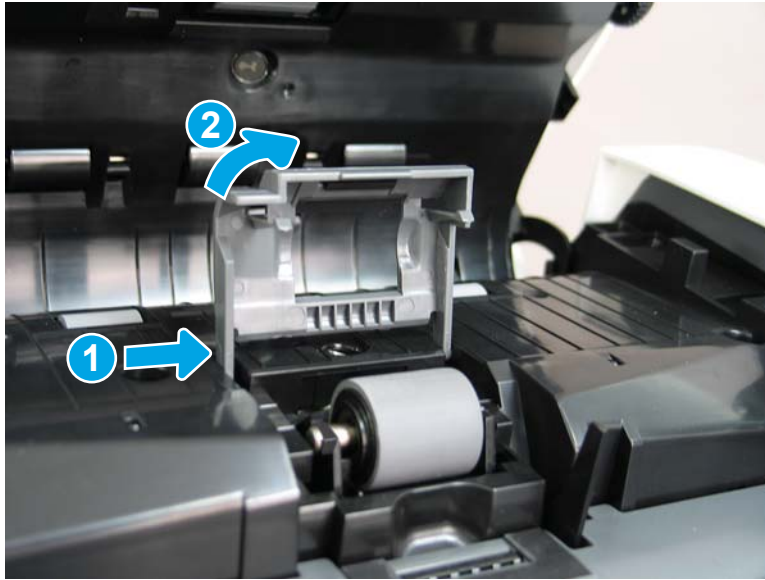



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.


3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the document feeder separation roller cover


1. Position the right side of the cover in the opening in the document feeder (callout 1), and then lower the left side of the cover (callout 2) to install the hinge pin.

Figure 1-129 Install the separation roller cover

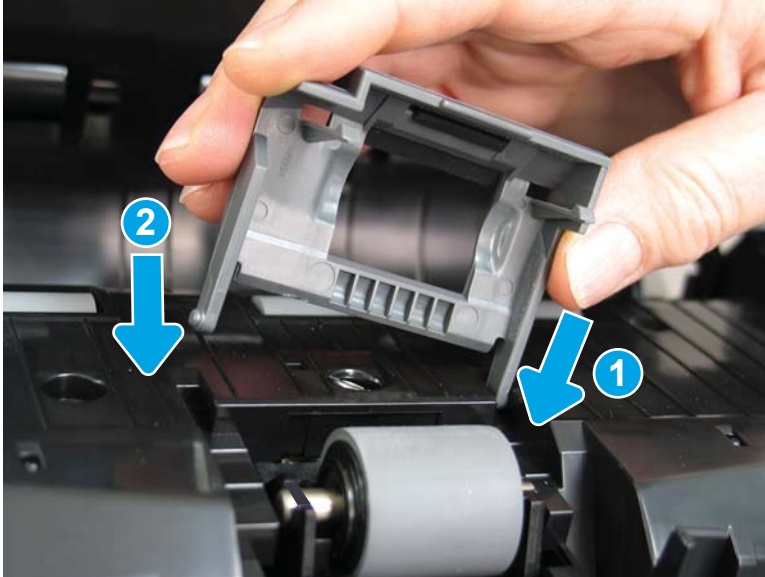

2. Close the roller cover.

Figure 1-130 Close the roller cover

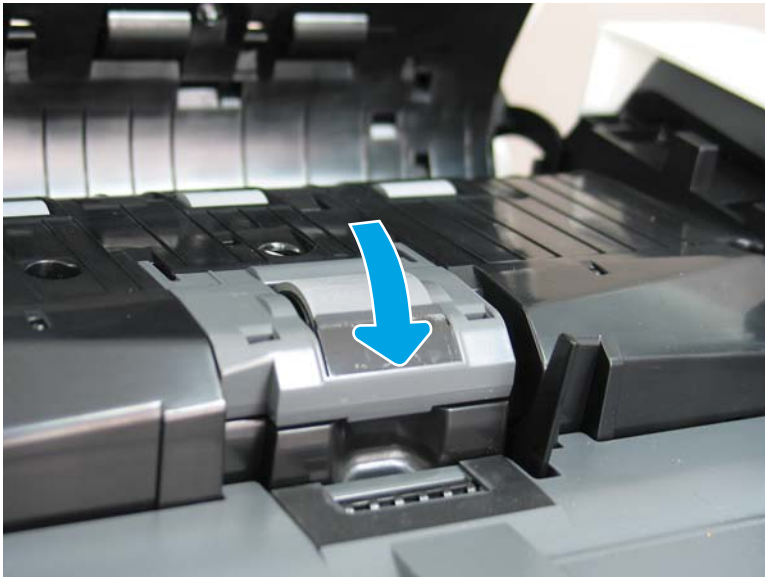

3. Close the document feeder cover.

Figure 1-131 Close the document feeder cover



## Removal and replacement: Secondary transfer roller

- [Introduction](#)
- [Step 1: Remove the secondary transfer roller](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the secondary transfer roller](#)

### Introduction

This document provides the procedures to remove and replace the secondary transfer roller.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Secondary transfer roller part numbers

---

RM2-6561-000CN

Secondary transfer roller

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a page and verify that the print quality is acceptable.

### Step 1: Remove the secondary transfer roller


1. Open the right door.

Figure 1-132 Open the right door




2. Lift up the left edge of the secondary transfer roller.

Figure 1-133 Lift the left edge

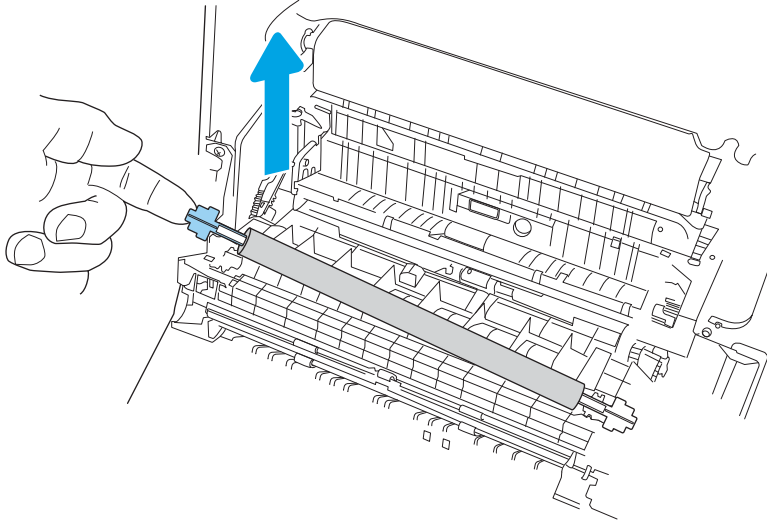

3. Slide the roller up and to the left to remove it from the holder.

**Figure 1-134** Remove the transfer roller

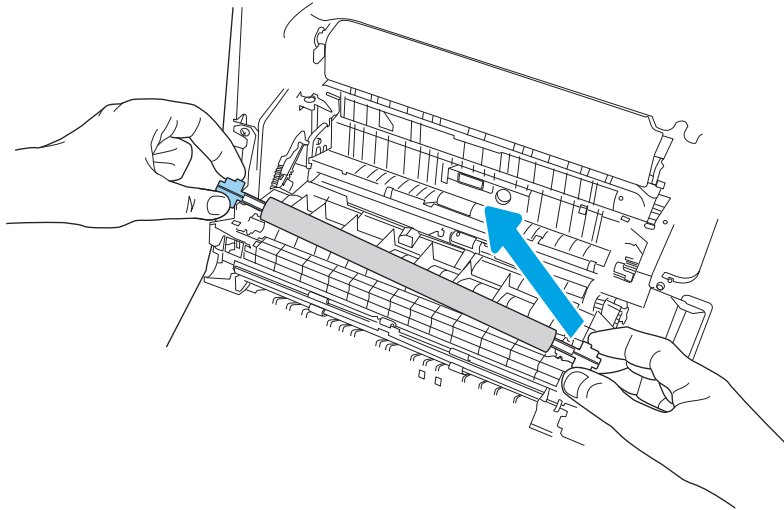

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


### Step 3: Install the secondary transfer roller

1. Insert the right end (white plastic) of the replacement roller into the holder.



**CAUTION:** Do not touch the transfer roller. Skin oils and fingerprint on the roller can cause print-quality problems.

Figure 1-135 Insert the right end into the holder

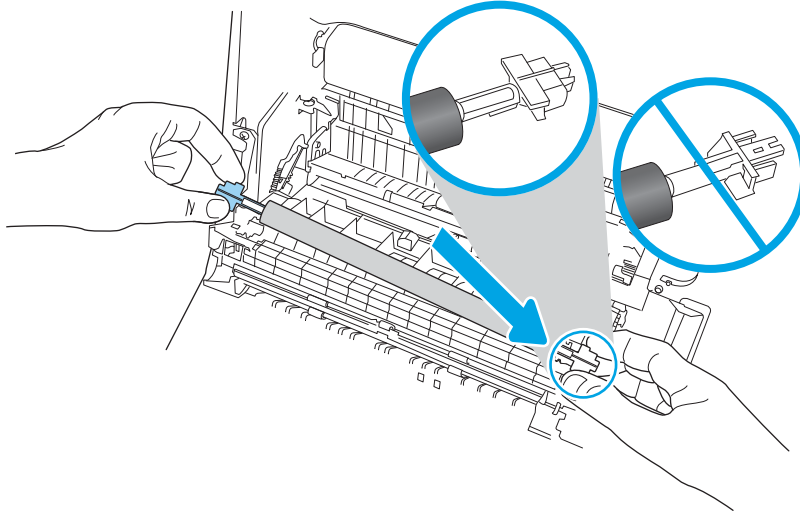

2. Hold the left end of the roller, and then slide the roller to the right (callout 1) to fully install it in the holder. Push down on the left end (blue plastic clip; callout 2) until the roller snaps into place.


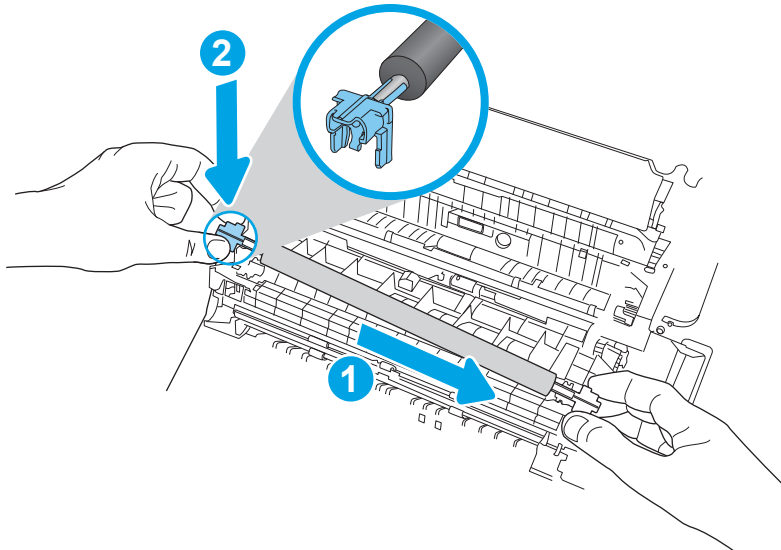
 **IMPORTANT:** Make sure that both ends of the roller assembly are fully seated in the holders.

Figure 1-136 Install the transfer roller



3. Close the right door.

Figure 1-137 Close the right door






## Removal and replacement: Intermediate transfer belt (ITB)

- [Introduction](#)
- [Step 1: Remove the intermediate transfer belt \(ITB\)](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the ITB](#)

### Introduction


This document provides the procedures to remove and replace the intermediate transfer belt.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Intermediate transfer belt part numbers	
P1B93-67901	Intermediate transfer belt

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a page and verify that the print quality is acceptable.

### Step 1: Remove the intermediate transfer belt (ITB)


1. Open the right door.

Figure 1-138 Open the right door




2. Release the blue latch (callout 1), and then lower the transfer assembly (callout 2).

Figure 1-139 Lower the transfer assembly

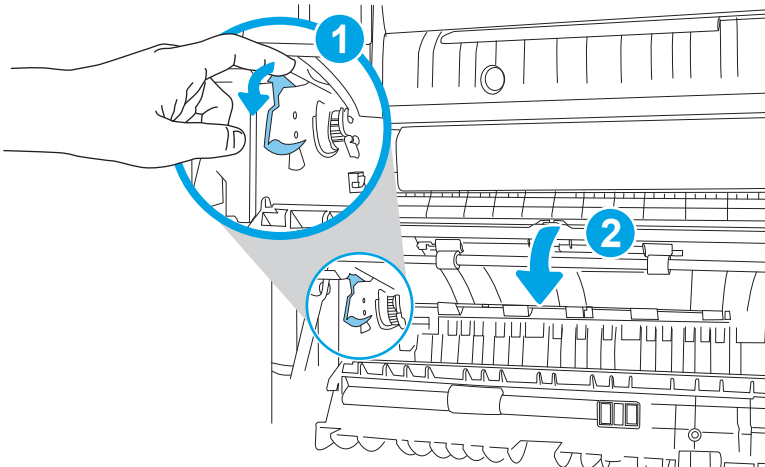


3. Grasp the two blue handles on the ITB.

Figure 1-140 Grasp the two blue handles

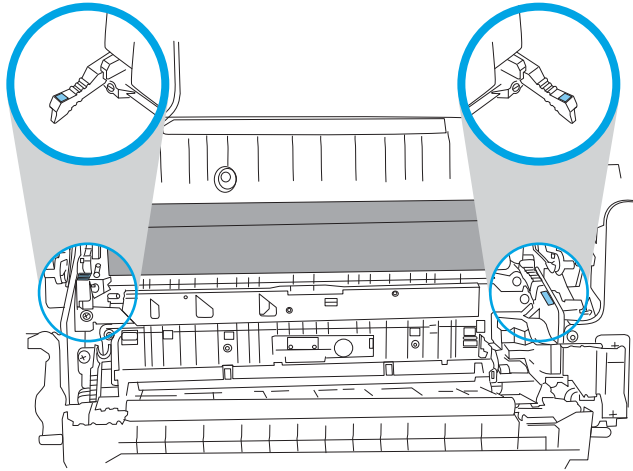


4. Pull the ITB partially out of the printer.

Figure 1-141 Pull the ITB partially out of the printer

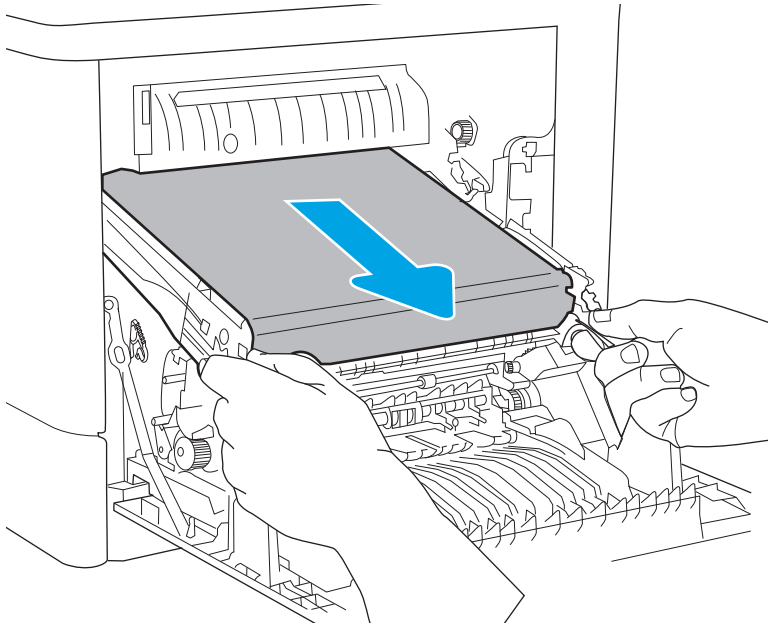

5. Grasp the outside edges of the ITB to support it, and then remove the ITB from the printer.

**Figure 1-142** Remove the ITB

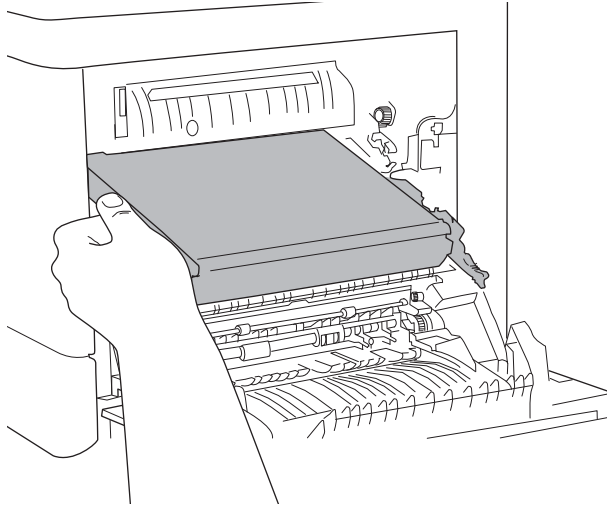

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.




**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the ITB


1. Remove the ITB from the packaging, and then remove the protective film around the ITB.

Figure 1-143 Remove the protective fil

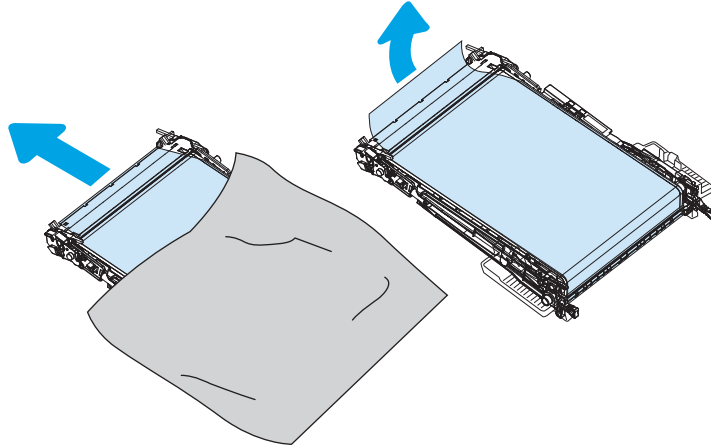


2. Handle the replacement ITB by the orange handles. Do not touch the grey-plastic belt. Skin oils and fingerprint on the belt can cause print-quality problems.

Figure 1-144 Remove all packing materials

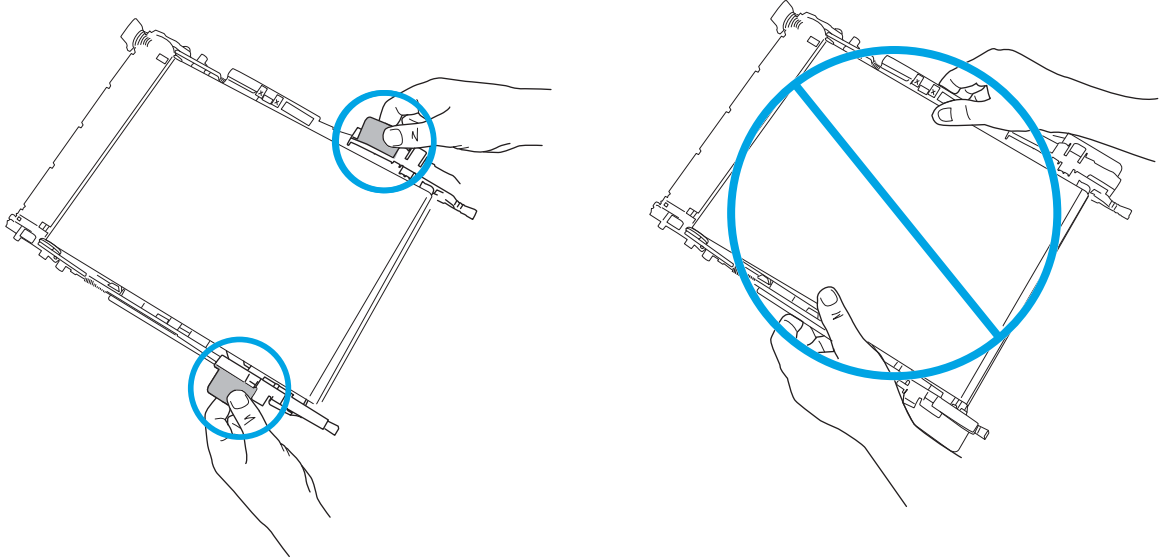

3. Align the ITB with guides inside the printer, and then carefully push it into the printer until the orange handles stop it.


**Figure 1-145** Align the ITB

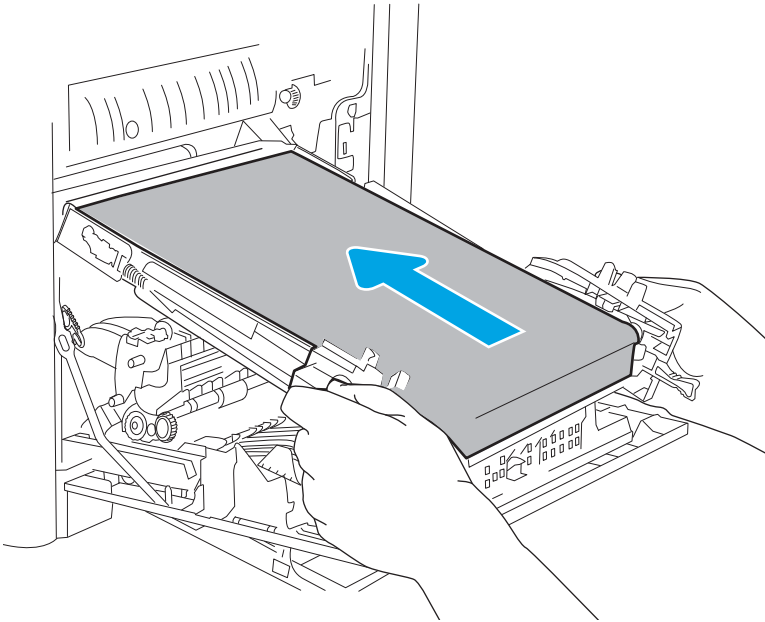

4. Remove the orange handle. Repeat this step for the remaining orange handle.


 **TIP:** HP recommends recycling the plastic handles.

**Figure 1-146** Remove the orange handles

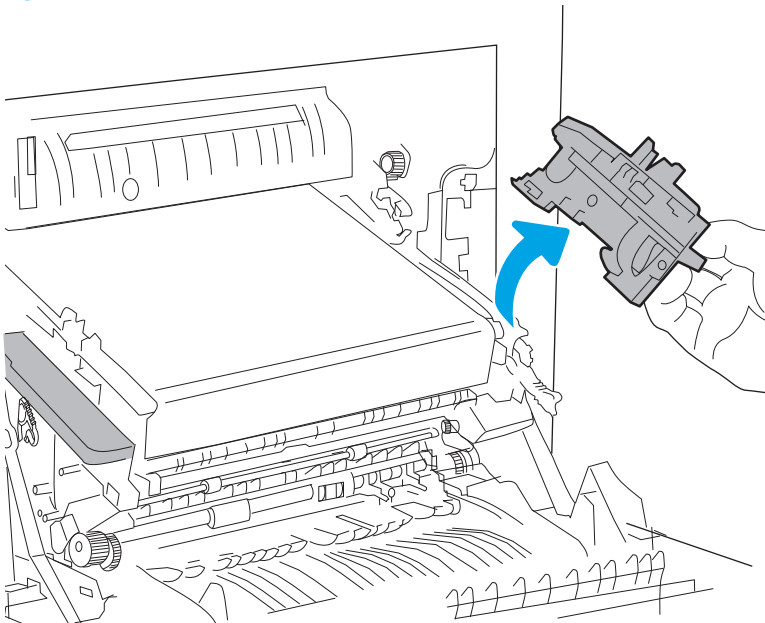


- Using the blue handles, continue to carefully push the ITB into the printer.

**Figure 1-147** Push the ITB into the printer

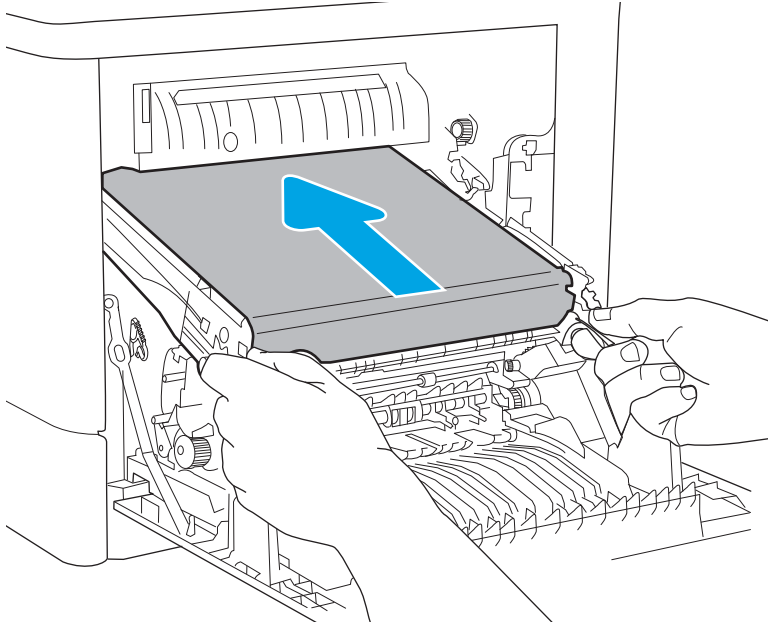

- Continue to push the ITB into the printer until you hear a click, confirming it is fully installed.

**Figure 1-148** Make sure the ITB clicks into place

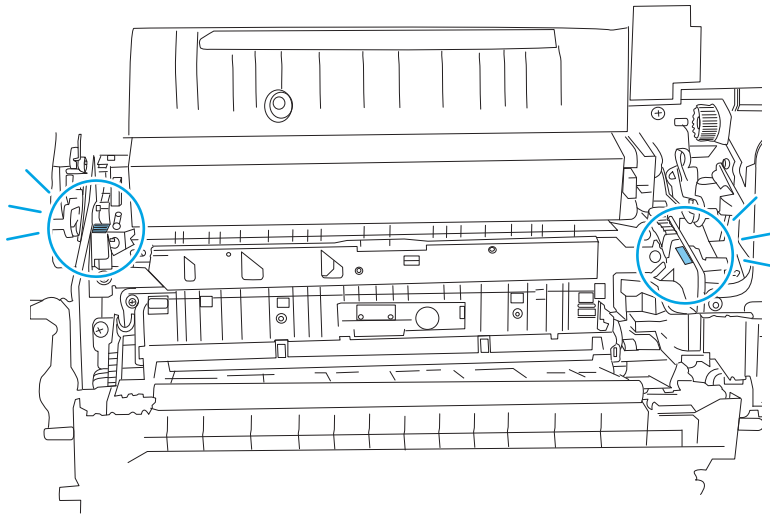

7. Close the right door.

Figure 1-149 Close the right door





## Removal and replacement: Control panels (M652/M653/E65050/E65060/E65150/E65160)

- [Introduction](#)
- [Step 1: Remove the control panel](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the control panel](#)

### Introduction

This document provides the procedures to remove and replace the control panels for the M652/M653/E65050/E65060/E65150/E65160 models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panels (M652/M653/E65050/E65060/E65150/E65160) part numbers	
5851-7252	Control panel (4.3 in display)
5851-7253	Control panel (2.7 in display with keypad)

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Access the menus by using the printer control panel, and then print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the control panel

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-150** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-151** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

Figure 1-152 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-153 Release the control panel

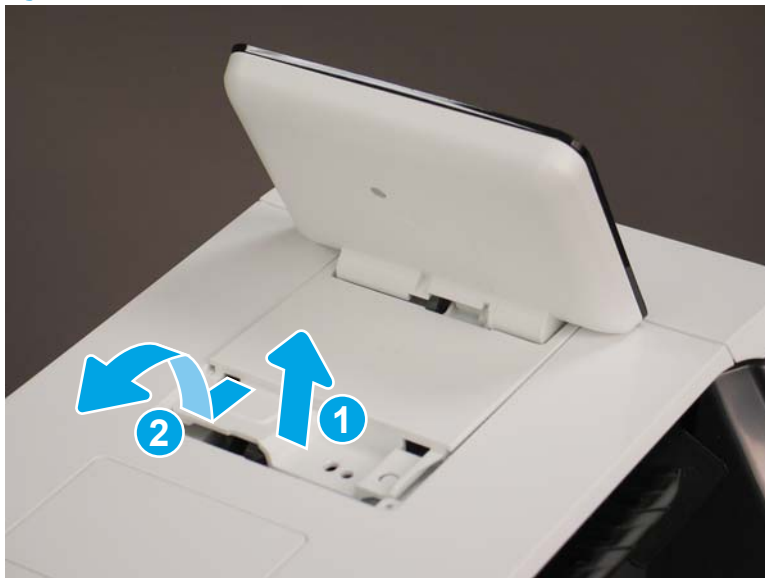

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-154 Disconnect two connectors

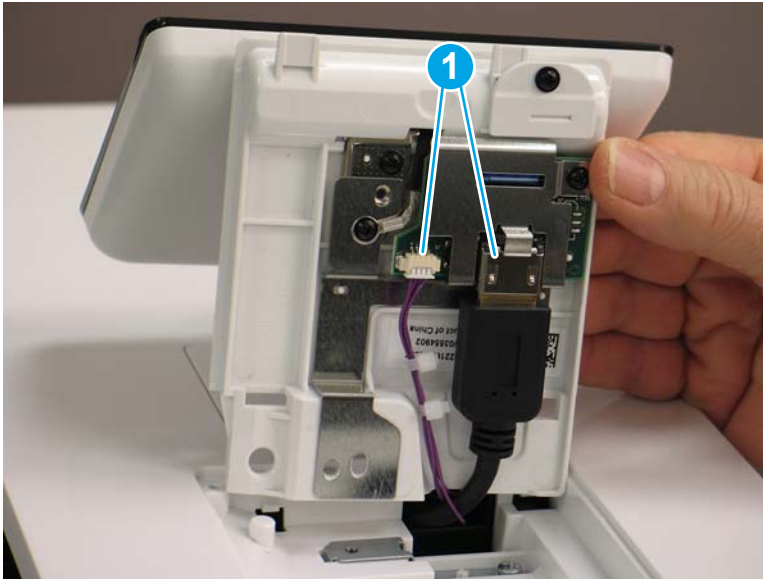

6. Remove the control panel.


Figure 1-155 Remove the control panel



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install the control panel

1. Connect two connectors (callout 1).

**Figure 1-156** Connect two connectors

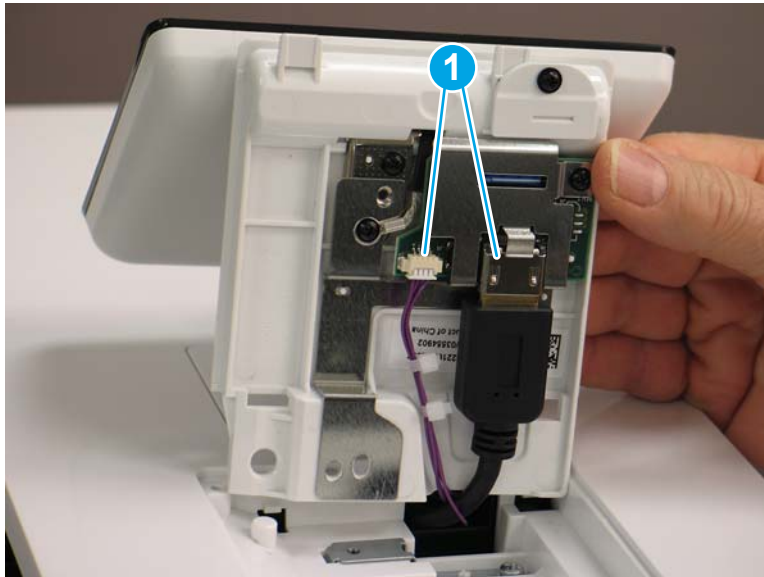


2. Install the tabs on the front of the control panel in the slots on the printer top cover.

Figure 1-157 Install the tabs



3. Lower the back edge of the control panel down (callout 1), and then install one thumbscrew (callout 2).

Figure 1-158 Install one thumbscrew

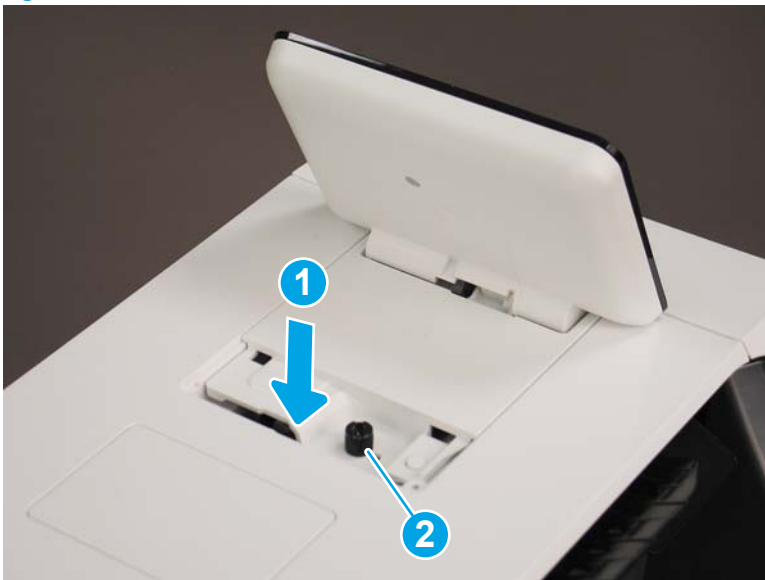

4. Align the tabs on the front of the control panel cover with the slots in the printer, and then pivot the cover down to install it.

Figure 1-159 Install the cover



## Removal and replacement: Fuser

- [Introduction](#)
- [Step 1: Remove the fuser](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the fuser](#)

### Introduction

This document provides the procedures to remove and replace the fuser.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Fuser part numbers

---

RM2-1928-000CN	Fuser kit (110V)
RM2-1929-000CN	Fuser kit (220V)

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a page and make sure that the toner is fused to the page properly.

### Step 1: Remove the fuser

1. Open the right door.

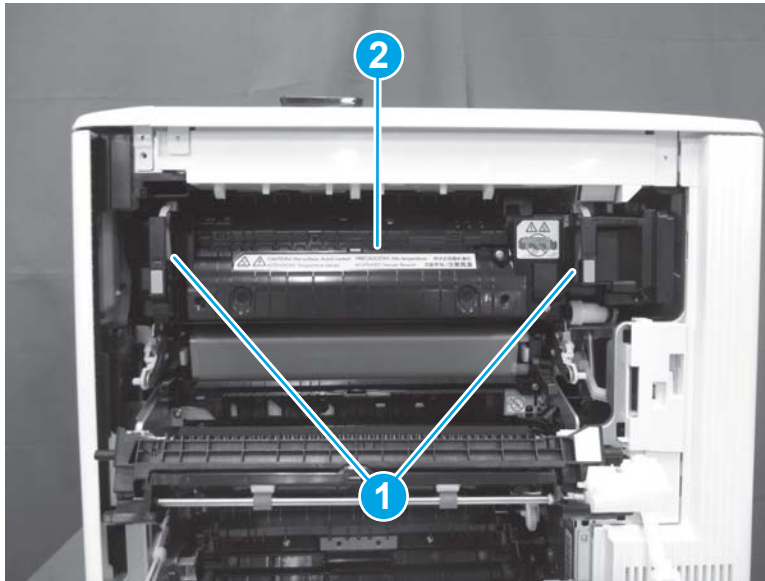


Figure 1-160 Open the right door



2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).

Figure 1-161 Remove the fuser



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install the fuser

1. Grasp the handles (callout 1), and then position the fuser (callout 2) in the printer. Press the fuser toward the printer to install it.

**Figure 1-162** Install the fuser

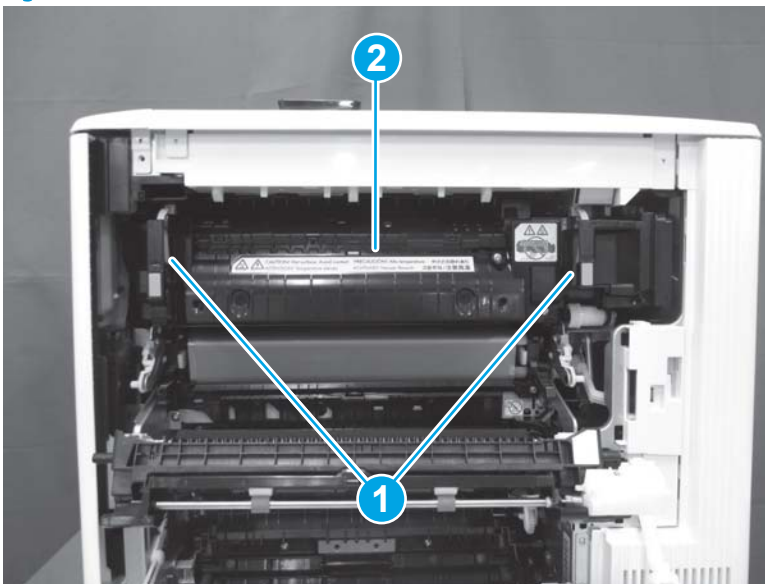

2. Close the right door.

Figure 1-163 Close the right door



## Removal and replacement: White backing

- [Introduction](#)
- [Step 1: Remove the white backing](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the white backing](#)

### Introduction

This document provides the procedures to remove and replace the white backing.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### White backing part numbers

---

5851-7206	White backing A4 kit
5851-7207	White backing retention clips

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the white backing


1. Open the document feeder.

Figure 1-164 Open the document feeder




2. Grasp the edge of the white backing, and then firmly pull it away from the document feeder to remove the backing and the retention clips.

---

 **NOTE:** The clips are still attached to the white backing when it is removed.

---


Figure 1-165 Remove the white backing

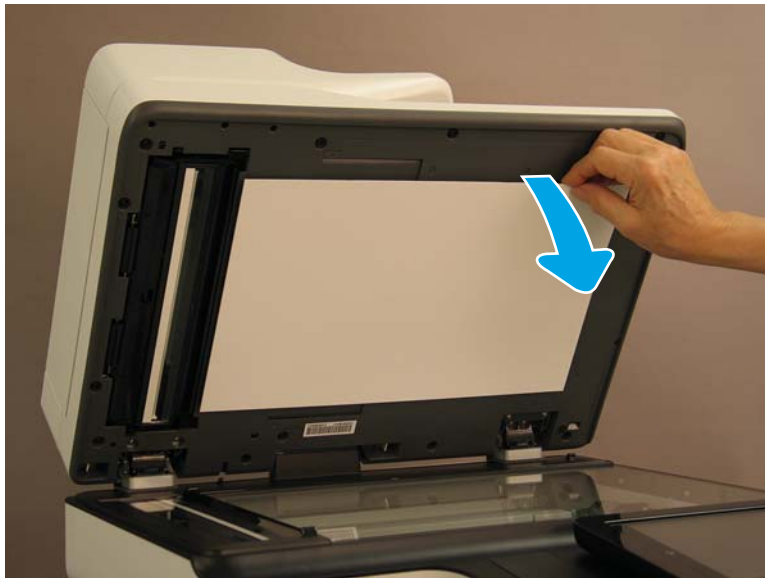

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install the white backing


1. Verify that the springs are positioned correctly on each of the retention clips provided in the replacement kit.

**Figure 1-166** Verify spring positions

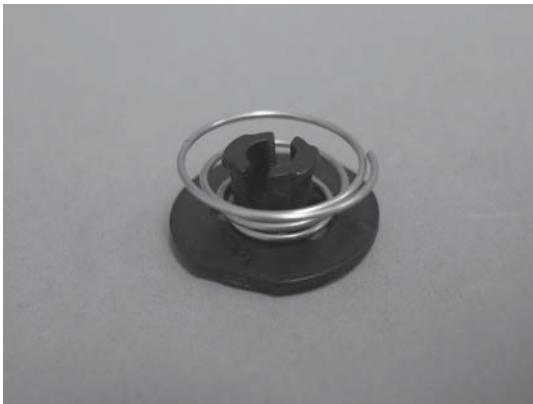

2. In the location where the white backing was removed, install seven retention clips in the document feeder. Align the tabs on the clip with the slots in the document feeder.

Figure 1-167 Install seven clips

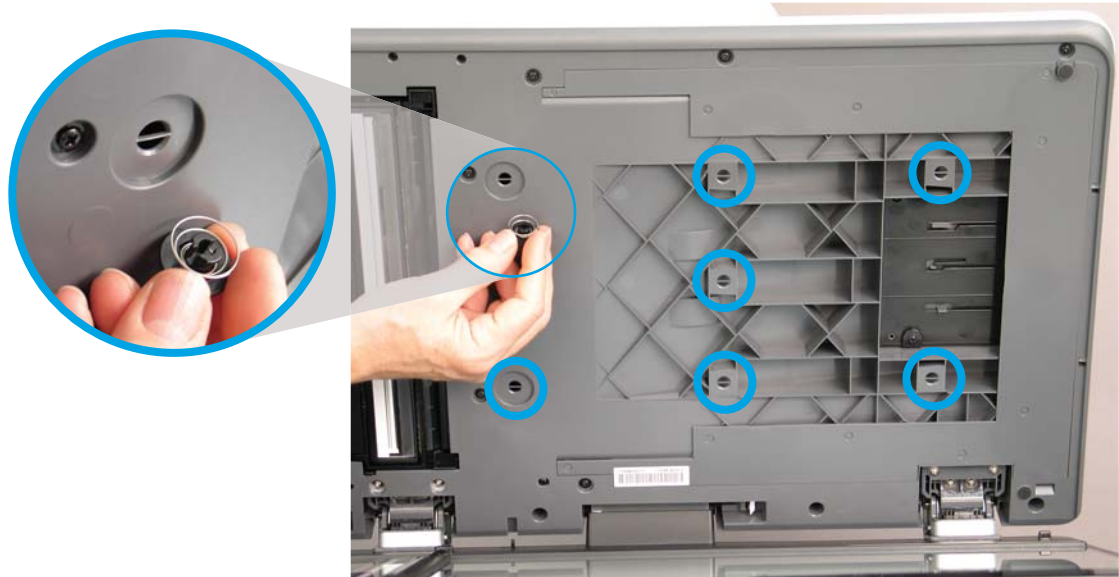

3. Press on each retention clip to make sure that they are fully installed. You will hear an audible click when the clip is correctly installed.


Figure 1-168 Press on each clip



4. Peel an adhesive square off of the backing sheet.

 **NOTE:** Do not remove the protective film of the top of the adhesive square yet.

**Figure 1-169** Remove an adhesive square

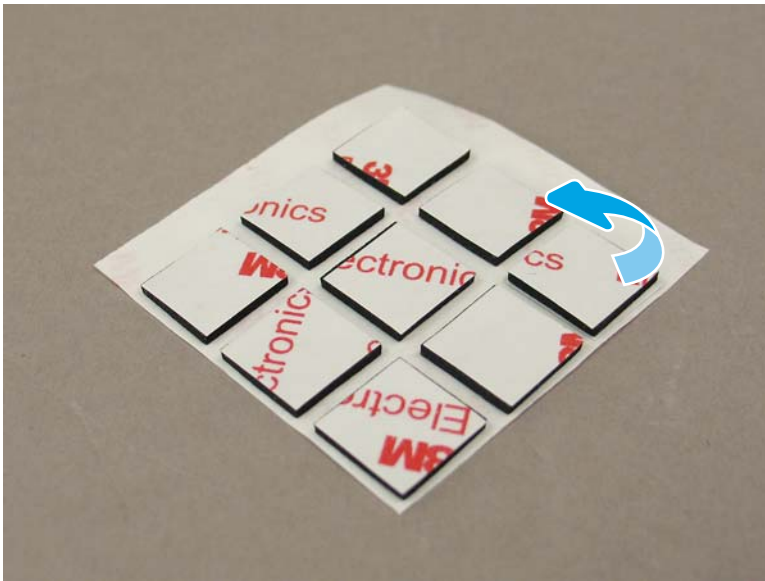

5. Attach an adhesive square to each retention clip on the document feeder.

**Figure 1-170** Attach adhesive squares






6. Remove the protective film of each adhesive square.

Figure 1-171 Remove the protective film




7. Position the white backing on the image scanner glass. Make sure that the corner with the embossed arrow on the backing is positioned against the corner with the white arrow on the scanner.

Figure 1-172 Position the white backing

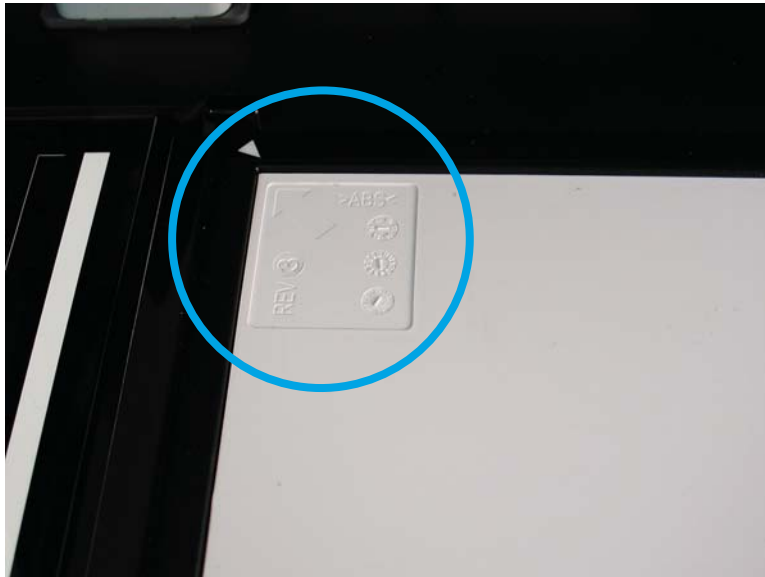

8. Close the document feeder.

Figure 1-173 Close the document feeder

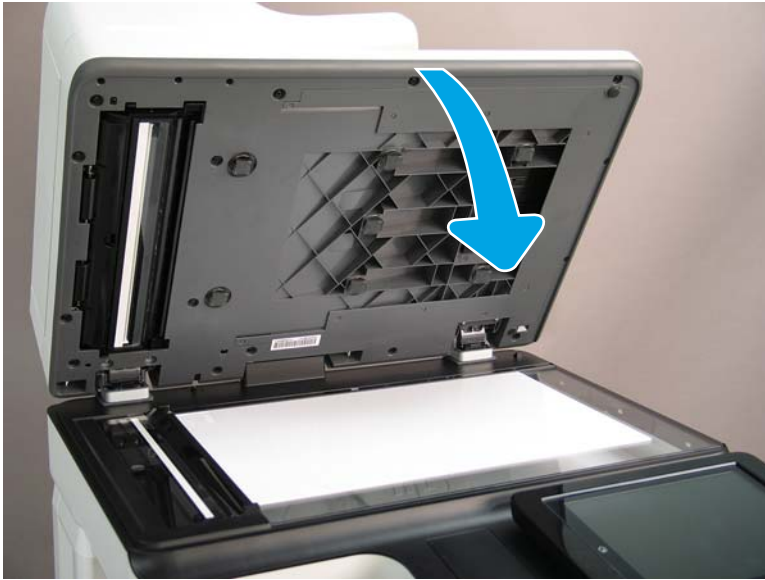


9. Open the document feeder.

Figure 1-174 Open the document feeder



10. Press on the white backing at the location of each retention clip to ensure that the backing is securely attached to the adhesive on the clips.

Figure 1-175 Press on the white backing

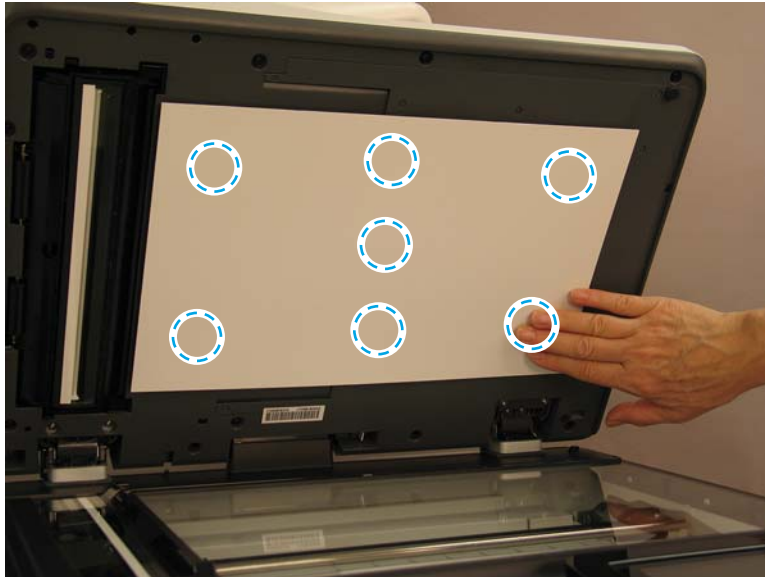

11. Close the document feeder.

Figure 1-176 Close the document feeder



## Removal and replacement: Toner cartridges

- [Introduction](#)
- [Step 1: Remove a toner cartridge](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install a toner cartridge](#)

### Introduction

This document provides the procedures to remove and replace the toner cartridges.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer off

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Toner cartridge part numbers

---

CF450-67901	HP 655A Black Original LaserJet Toner Cartridge (12,500 pages) (M652/M653)
CF451-67901	HP 655A Cyan Original LaserJet Toner Cartridge (10,500 pages) (M652/M653)
CF452-67901	HP 655A Yellow Original LaserJet Toner Cartridge (10,500 pages) (M652/M653)
CF453-67901	HP 655A Magenta Original LaserJet Toner Cartridge (10,500 pages) (M652/M653)
CF460-67901	HP 656X High Yield Black Original LaserJet Toner Cartridge (27,000 pages) (M652/M653)
CF461-67901	HP 656X High Yield Cyan Original LaserJet Toner Cartridge (22,000 pages) (M652/M653)
CF462-67901	HP 656X High Yield Yellow Original LaserJet Toner Cartridge (22,000 pages) (M652/M653)
CF463-67901	HP 656X High Yield Magenta Original LaserJet Toner Cartridge (22,000 pages) (M652/M653)
CF470-67901	HP 657X High Yield Black Original LaserJet Toner Cartridge (27,000 pages) (M681/M682)
CF471-67901	HP 657X High Yield Cyan Original LaserJet Toner Cartridge (27,000 pages) (M681/M682)
CF472-67901	HP 657X High Yield Yellow Original LaserJet Toner Cartridge (27,000 pages) (M681/M682)
CF473-67901	HP 657X High Yield Magenta Original LaserJet Toner Cartridge (27,000 pages) (M681/M682)

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Turn the printer on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove a toner cartridge


1. Open the front door.

Figure 1-177 Open the front door

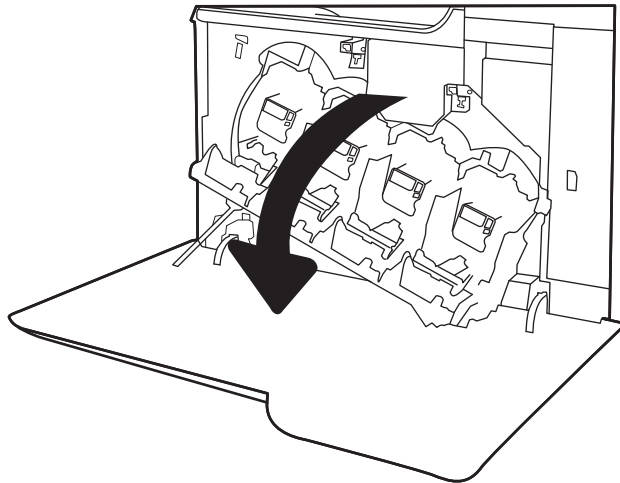

2. Grasp the handle of the used toner cartridge and pull out to remove it.


Figure 1-178 Remove the toner cartridge

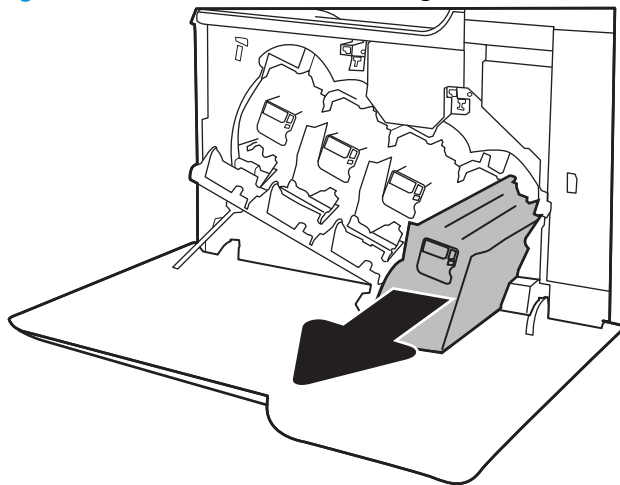

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install a toner cartridge

1. Hold both ends of the toner cartridge and rock it 5-6 times.


**Figure 1-179** Rock the toner cartridge

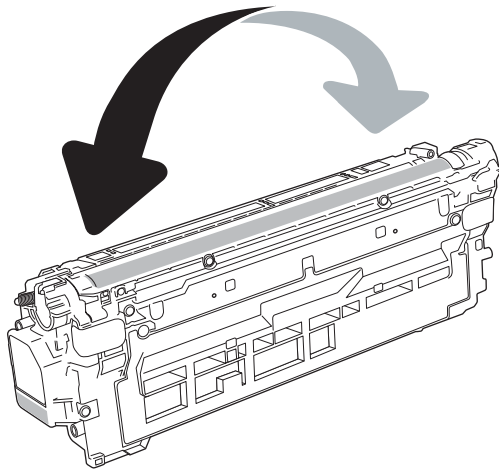

2. Support the toner cartridge underneath with one hand while holding the cartridge handle with the other. Align the toner cartridge with its slot on the shelf, and then insert the toner cartridge into the printer.


 **NOTE:** Avoid touching the green imaging drum. Fingerprints on the imaging drum can cause print defects.

**Figure 1-180** Install the toner cartridge

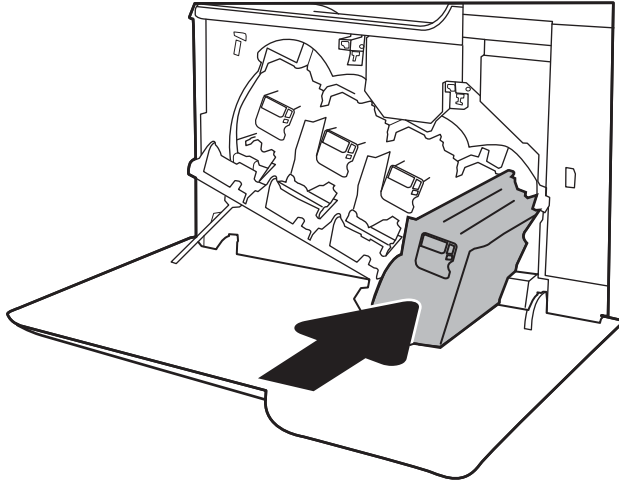

3. Close the front door.

**Figure 1-181** Close the front door

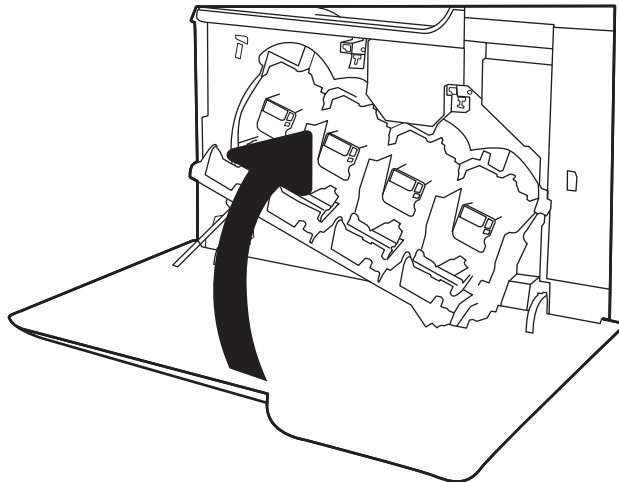


## Removal and replacement: Toner collection unit (TCU)

- [Introduction](#)
- [Step 1: Remove the TCU](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the TCU](#)

### Introduction

This document provides the procedures to remove and replace the toner collection unit (TCU).

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer off

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Toner collection unit part number	
P1B94-67901	Toner collection unit kit

### Required tools

- No special tools are needed to remove or install this assembly.


### After performing service


- Turn the printer on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the TCU


 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

1. Open the front door.




Figure 1-182 Open the front door

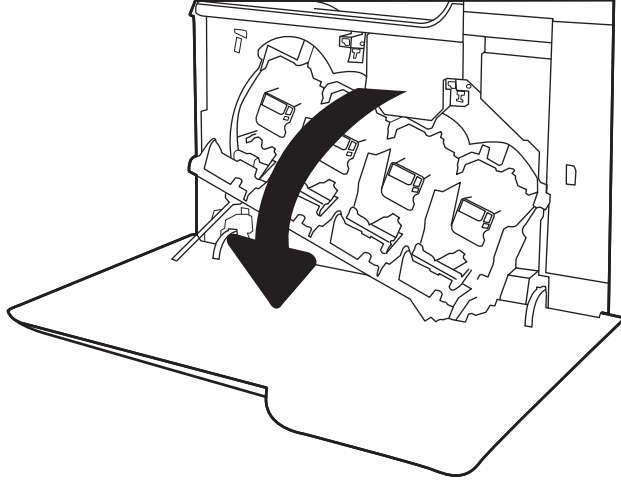


2. Open the left door.

Figure 1-183 Open the left door

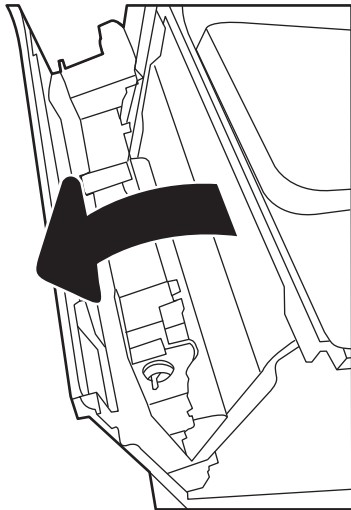

3. Grasp the top of the TCU and remove it from the printer.

Figure 1-184 Remove the TCU

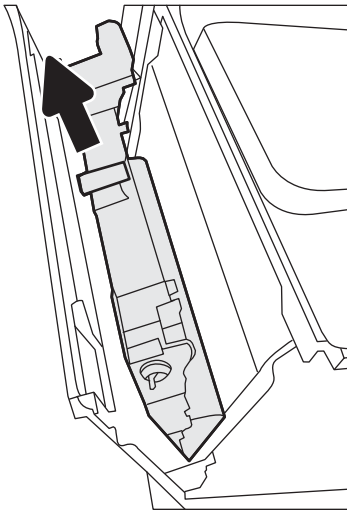

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.




**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Step 3: Install the TCU

1. Install the new unit into the printer. Make sure the TCU is firmly in place.

Figure 1-185 Install the TCU

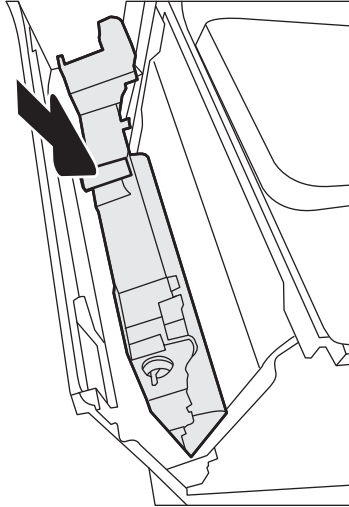


2. Close the left door.

---

 **NOTE:** If the TCU is not installed correctly, the left door does not close completely.


---

Figure 1-186 Close the left door

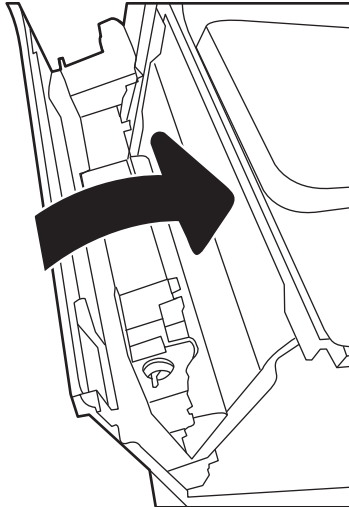

3. Close the front door.

Figure 1-187 Close the front door

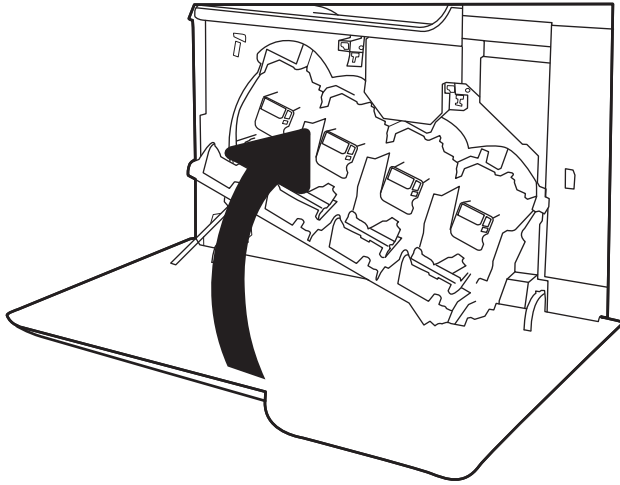

## Removal and replacement: Keyboard (Flow M681z/Flow M682z/Flow E67660z)

- [Introduction](#)
- [Step 1: Remove the keyboard](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the keyboard](#)

### Introduction

This document provides the procedures to remove and replace the keyboard for the Flow M681z/Flow M682z/Flow E67660z models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Keyboard part number	
B5L47-67019	US English keyboard
B5L47-67020	UK English keyboard

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Access the menus by using the printer control panel, and then print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the keyboard

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-188** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

**Figure 1-189** Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-190 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-191 Disconnect the keyboard flat cable

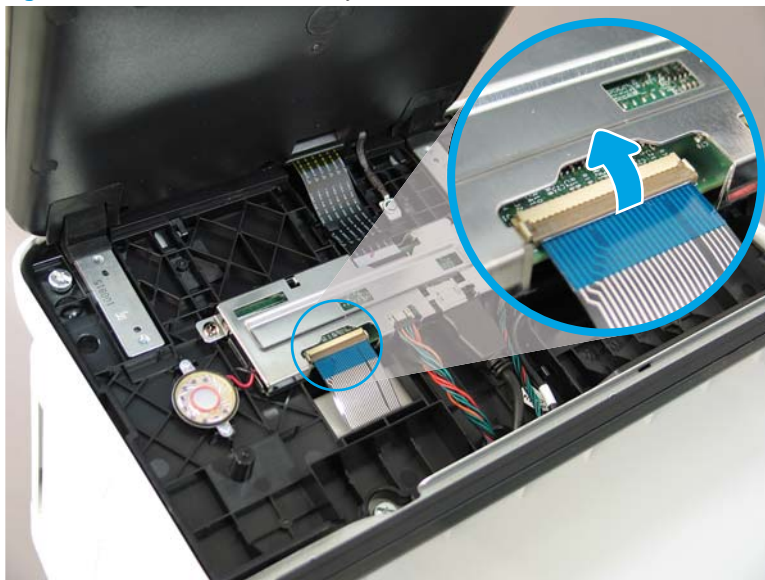

5. Slide the keyboard tray out until it stops.

Figure 1-192 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-193 Release two tabs





7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-194 Remove the keyboard





### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the keyboard

1. Position the flat cable on the keyboard into the keyboard slot.

Figure 1-195 Position the flat cable in the slot




2. Slide the keyboard tray into the slot.

Figure 1-196 Slide the keyboard tray into the slot




3. Make sure to feed the keyboard flat cable (callout 1) through the opening (callout 2) in the control-panel base when installing the keyboard.

**Figure 1-197** Check the keyboard flat cable

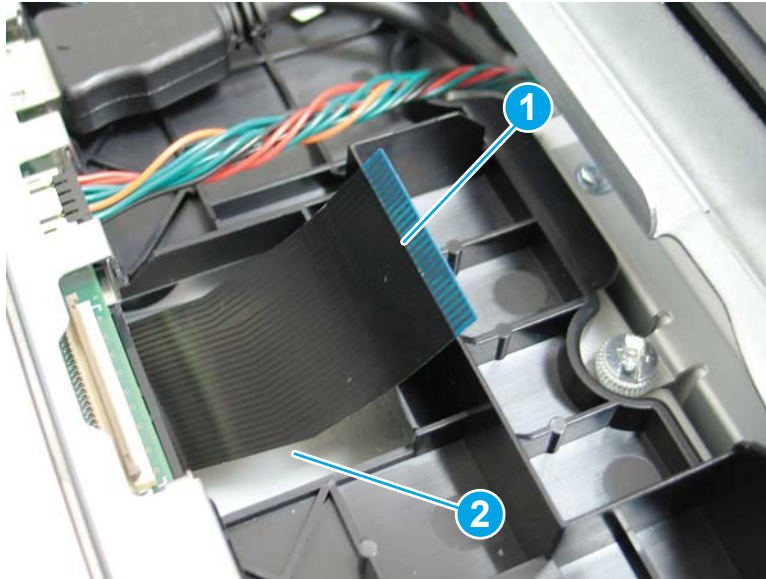


4. Position the keyboard flat cable in the connector, and then close the connector latch to secure it.

 **IMPORTANT:** Slightly tug on the cable to make sure that it is fully captured in the connector.

 **NOTE:** When the connector latch is closed and the cable is correctly installed, the white line on the cable is parallel to the connector latch.

**Figure 1-198** Connect the keyboard flat cable

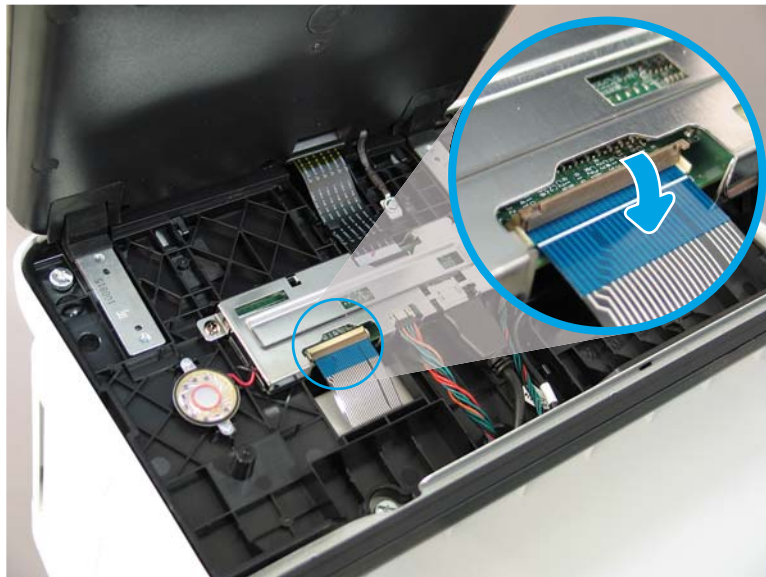

5. Position the control-panel cover on the printer.

Figure 1-199 Install the cover



6. Beginning at the right side of the control-panel cover, install five tabs along the top edge of the cover.


Figure 1-200 Install five tabs



7. Close the document feeder.

---

 **NOTE:** Adjust the control panel to the desired angle.

 **Reinstallation tip:** If the keyboard is unresponsive after turning the printer on, check the flat cable installed in step [6](#). Reinstall the cable if necessary.

---

**Figure 1-201** Close the document feeder




## Install: Keyboard overlay (Flow M681z/Flow M682z/Flow E67660z)


- [Introduction](#)
- [Step 1: Unpack the keyboard overlay](#)
- [Step 2: Install the keyboard overlay](#)

### Introduction

This document provides the procedures to remove and replace the keyboard overlay.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Keyboard overlay part numbers	
5851-6019	Kit - Keyboard Overlay (FR, IT, RU, DE, ES: UK Kybd) (EMEA)
5851-6020	Kit - Keyboard Overlay (FR-CN, ES-LA, ES: US Kybd) (NA)
5851-6021	Kit - Keyboard Overlay (FR-SW, DE-SW, DA: UK Kybd) (EMEA)
5851-6022	Kit - Keyboard Overlay (ZHTW, ZHCN) (AP)
5851-6023	Kit - Keyboard Overlay (ES, PT) (EMEA)
5851-6024	Kit - Keyboard Overlay (JA-KG, JA-KT) (AP)
A7W12-67901	Kit - Keyboard Overlay Chinese
A7W14-67901	Kit - Keyboard Overlay Sweden

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

## Step 1: Unpack the keyboard overlay

Remove the new part from its package. Save all packaging for recycling.

For complete information on HP's recycling programs, go to [Product return and recycling](#).

## Step 2: Install the keyboard overlay

1. Slide the keyboard tray out until it stops.

Figure 1-202 Slide the keyboard tray out




2. Carefully peel the backing from the control panel overlay.

---

**⚠ CAUTION:** Do not touch the adhesive squares and be careful so that the adhesive squares do not come off with the backing.


---

Figure 1-203 Remove the backing

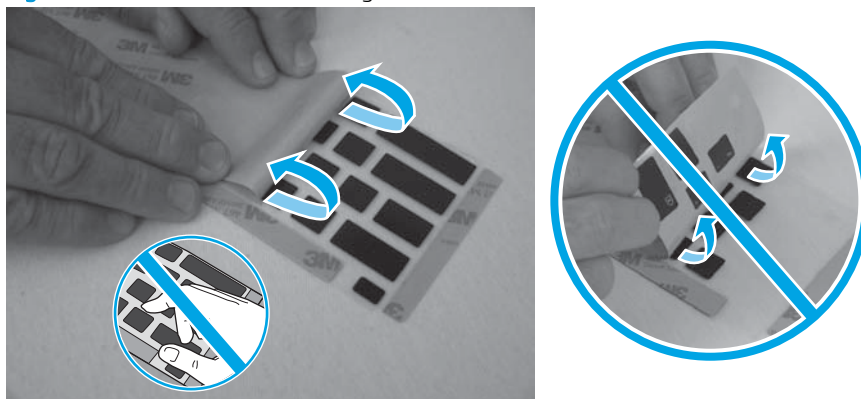




3. Position the keyboard overlay on the keyboard by aligning the upper corners of the overlay with the edges of the keyboard.

 **NOTE:** A different model of keyboard is pictured in the figure below. The procedure is still correct for the Flow M681z/Flow M682z/Flow E67660z models.


**Figure 1-204** Position the keyboard overlay



4. Place one hand under the keyboard and press upward (callout 1). Place the other hand on top of the keyboard and press downward (callout 2). Continue to press while sliding both hands to the right to adhere the keyboard overlay to the keyboard.

 **NOTE:** A different model of keyboard is pictured in the figure below. The procedure is still correct for the Flow M681z/Flow M682z/Flow E67660z models.

**Figure 1-205** Apply the keyboard overlay

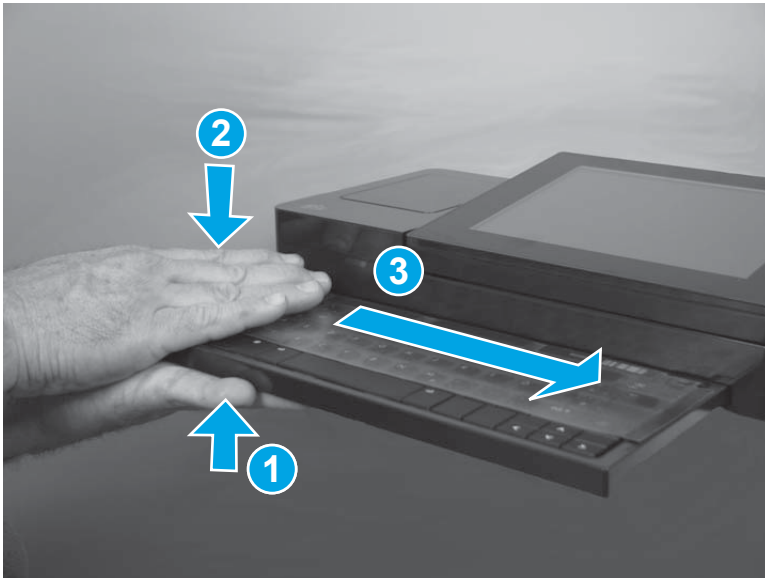




- Carefully remove the protective top sheet from the keyboard overlay.

**CAUTION:** Make sure that the adhesive squares do not come off of the keyboard with the protective sheet.

**NOTE:** A different model of keyboard is pictured in the figure below. The procedure is still correct for the Flow M681z/Flow M682z/Flow E67660z models.

**Figure 1-206** Apply the keyboard overlay

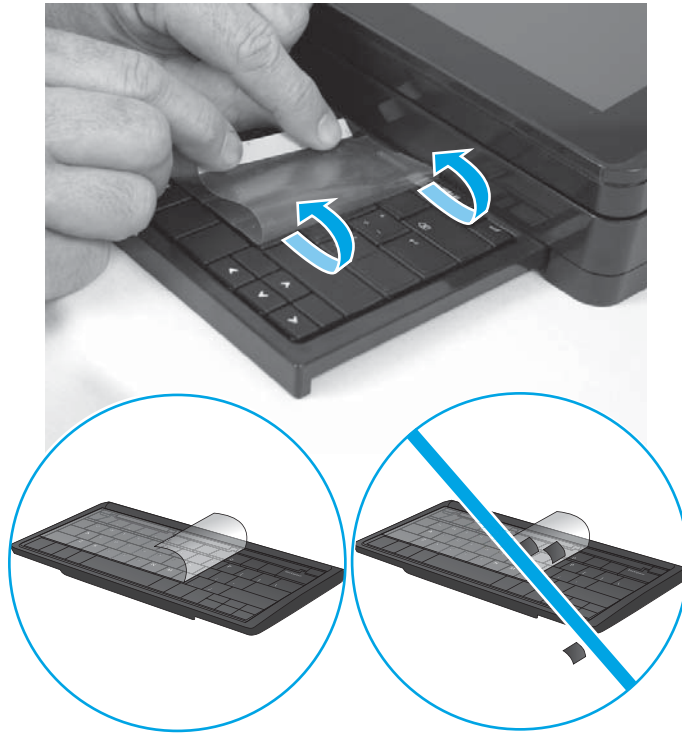

## Customer self-repair (CSR) B parts and assemblies

- [Removal and replacement: Control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Removal and replacement: Trays 2 and 3 pickup and separation rollers](#)
- [Removal and replacement: Trays 3–5 paper feeder stand pickup and separation rollers](#)

The CSR level indicates the expected difficulty the customer will experience when removing and replacing an assembly. The CSR B assemblies in this section might be difficult for the customer to remove and replace.

## Removal and replacement: Control panel (M681/M682/E67550/E67560/E67650/E67660)

- [Introduction](#)
- [Step 1: Remove the control panel](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the control panel](#)

### Introduction

This document provides the procedures to remove and replace the control panel for the M681/M682/E67550/E67560/E67650/E67660 models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Control panel(M681/M682/E67550/E67560/E67650/E67660) part number	
B5L47-67018	Control panel kit

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Access the menus by using the printer control panel, and then print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the control panel

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-207 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-208 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-209 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-210 Disconnect the keyboard flat cable (keyboard models only)

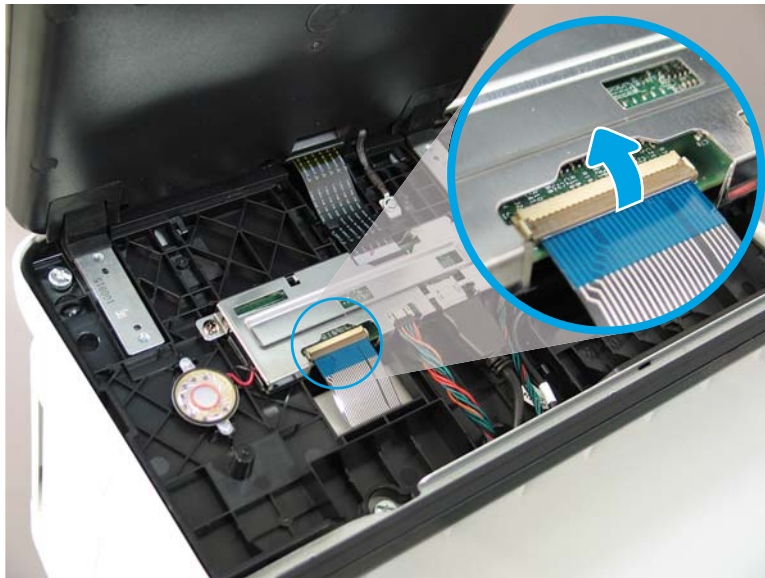


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-211 Disconnect connectors

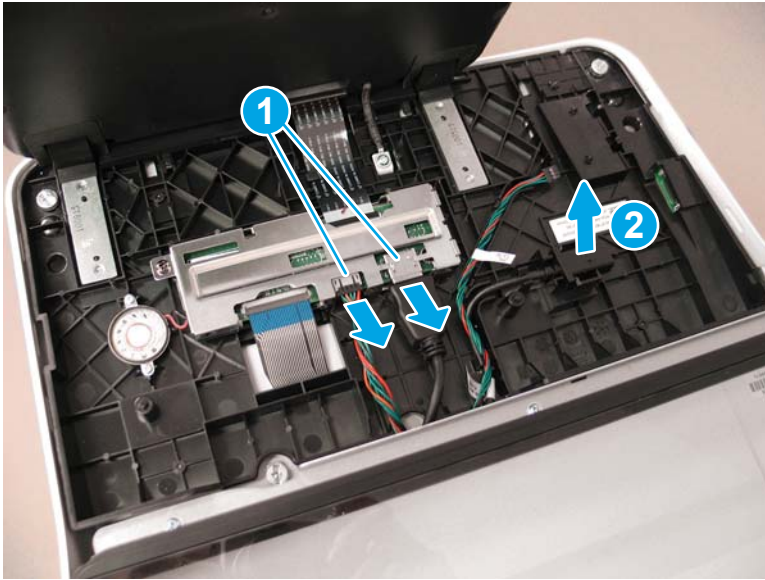


6. Remove three thumbscrews (callout 1).

Figure 1-212 Remove three thumbscrews

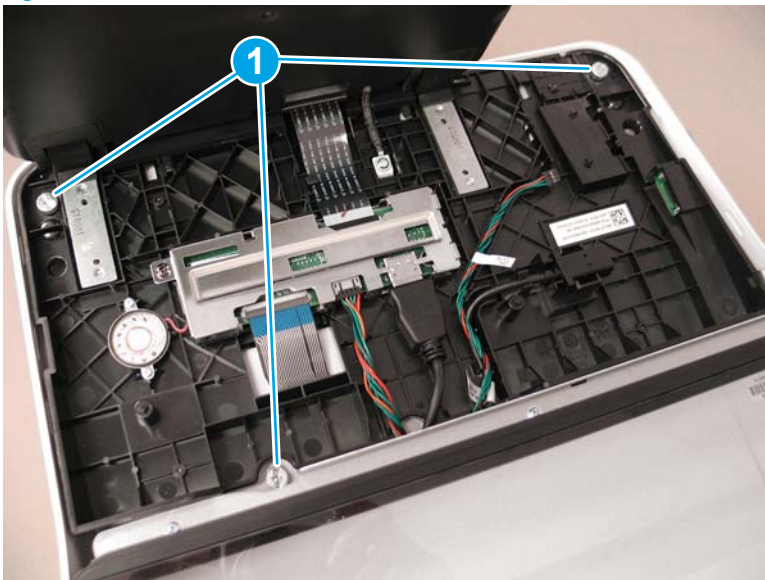

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-213 Remove the control panel

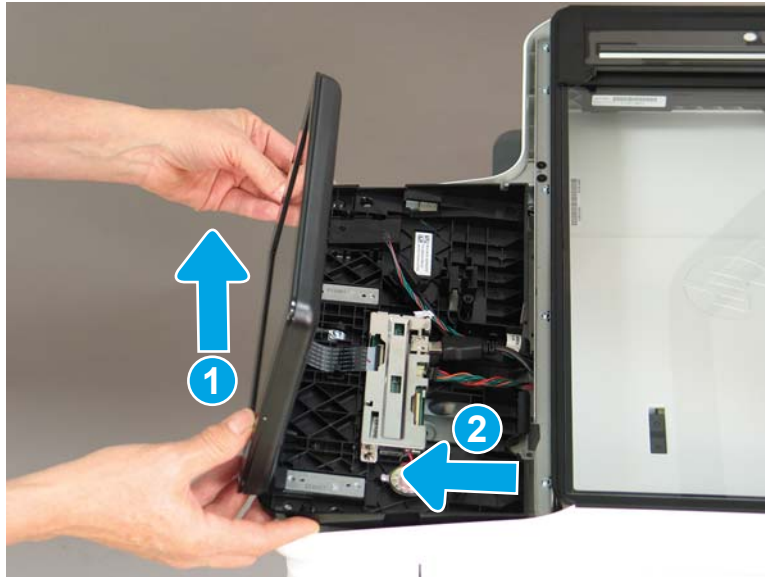



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Step 3: Install the control panel

1. Tilt the replacement control panel away from the base plate.



Figure 1-214 Tilt the control panel

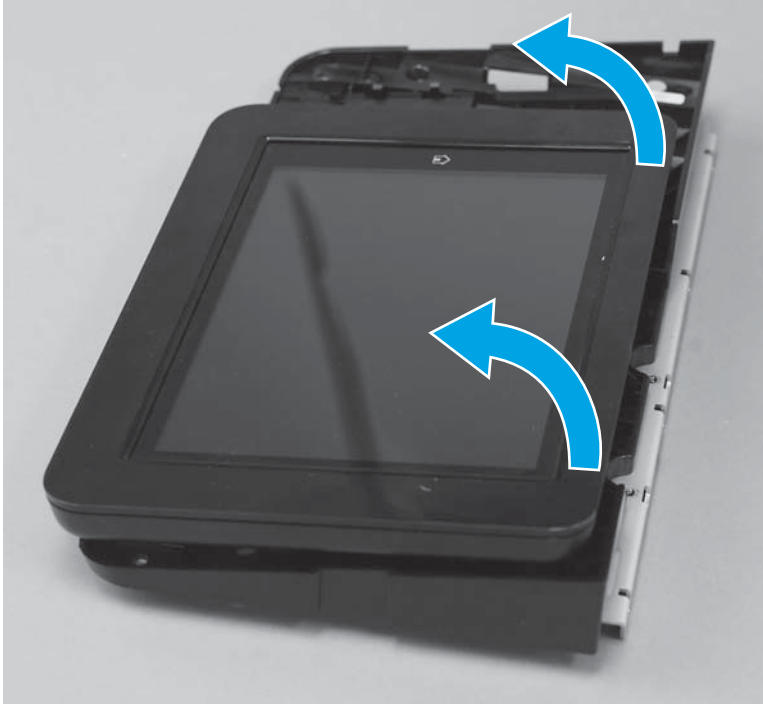


2. Position the rear edge of the control panel in the printer (callout 1), and then lower the front edge down (callout 2) to install it.

 **NOTE:** Make sure that the control panel frame fits under the sheet metal tab on the right rear.

**Keyboard models only:** Make sure that the keyboard flat cable is accessible through the opening in the control panel base before installing the screws in the next step.


Figure 1-215 Install the control panel

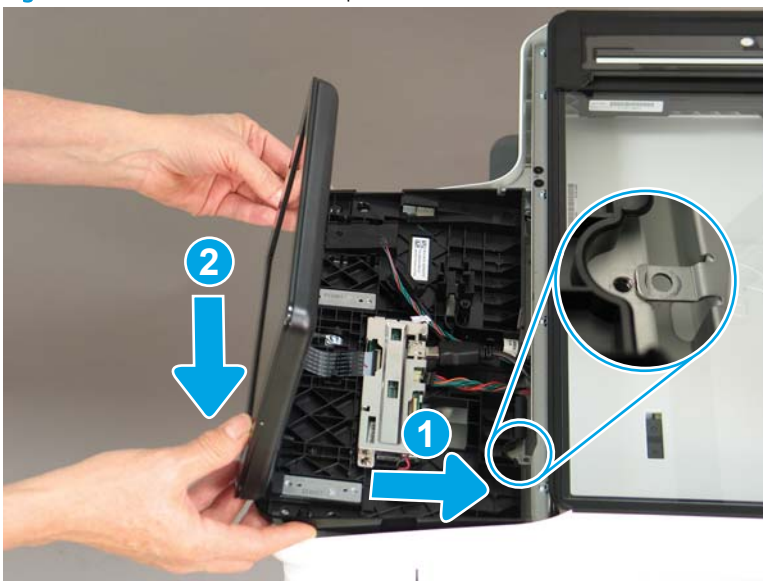




3. Install three thumbscrews (callout 1).

Figure 1-216 Install three thumbscrews

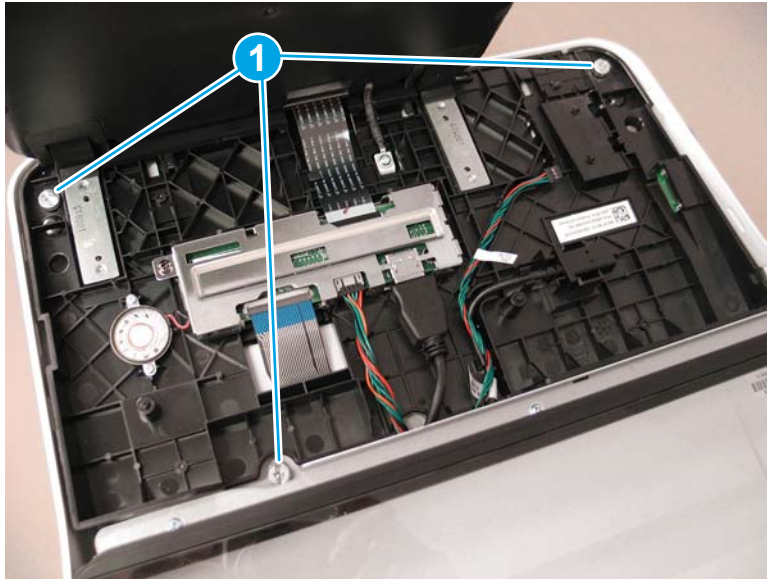


4. Connect two connectors (callout 1) and install the USB cable (callout 2) in the holder.

Figure 1-217 Connect connectors

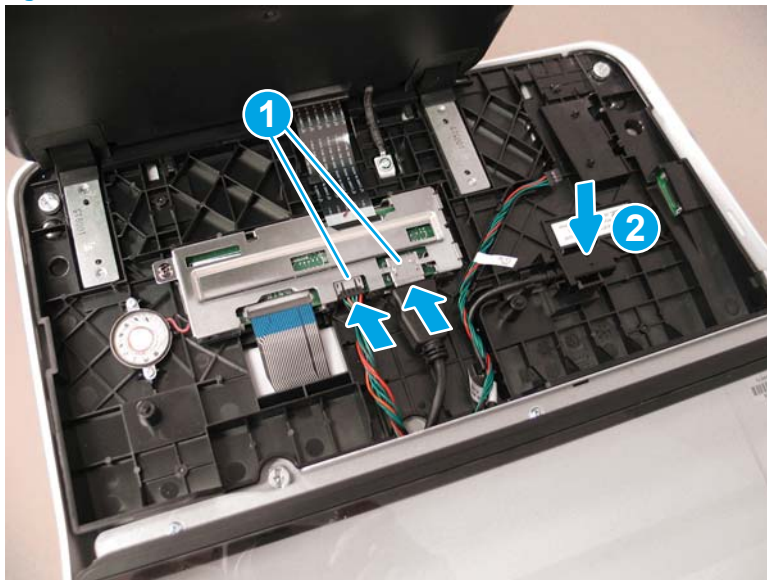


5. **Keyboard models only:** Make sure that the keyboard fl a cable (callout 1) is fed through the opening (callout 2) in the control panel base.

**Figure 1-218** Check the keyboard fl a cable (keyboard models only)

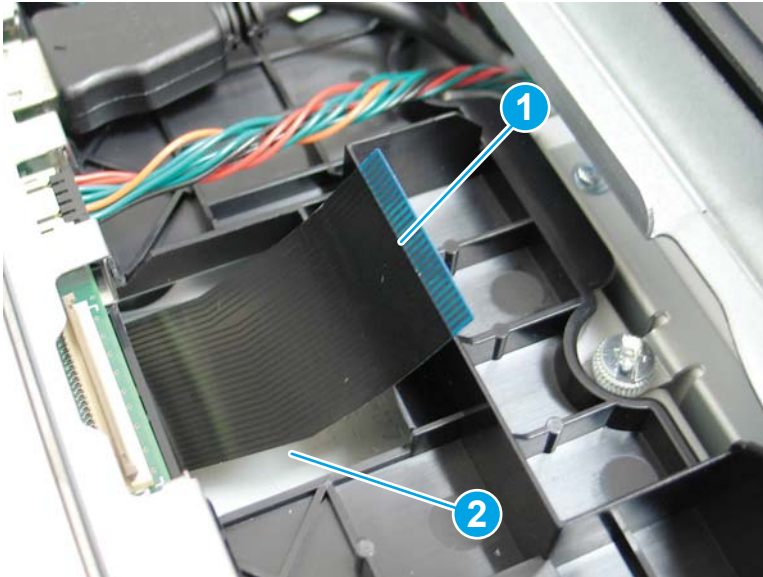

6. **Keyboard models only:** Position the keyboard fl a cable in the connector, and then close the connector latch to secure it.

**Figure 1-219** Connect the keyboard fl a cable (keyboard models only)

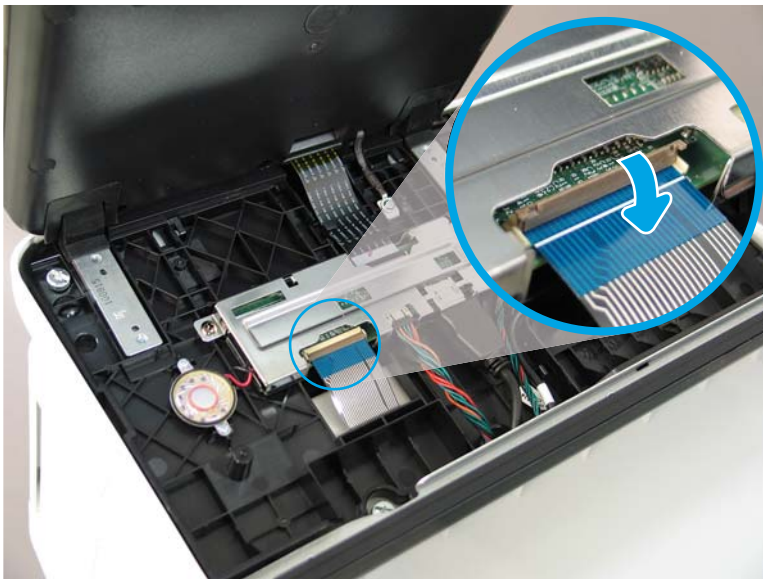

7. Position the control panel cover on the printer.

Figure 1-220 Position the cover on the printer



8. Beginning at the right side of the control panel cover, install five tabs along the top edge of the cover.

Figure 1-221 Install five tabs



9. Close the document feeder.

 **NOTE:** Adjust the control panel to the desired angle.

---

**Keyboard models only:** If the keyboard is unresponsive after turning the printer on, check the flat cable installed in step 6. Reinstall the cable if necessary.

**Figure 1-222** Close the document feeder



## Removal and replacement: Trays 2 and 3 pickup and separation rollers

- [Introduction](#)
- [Step 1: Remove the Tray 2 pickup rollers](#)
- [Step 2: Remove the Tray 3 pickup rollers](#)
- [Step 3: Remove the Tray 2 or 3 separation rollers](#)
- [Step 4: Unpack the replacement assemblies](#)
- [Step 5: Install the Tray 2 or 3 separation rollers](#)
- [Step 6: Install the Tray 3 pickup rollers](#)
- [Step 7: Install the Tray 2 pickup rollers](#)

### Introduction

This document provides the procedures to remove and replace the Trays 2 and 3 pickup and separation rollers.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Trays 2 and 3 pickup and separation rollers part number	
J7Z98-67902	Kit- LJ Trays 2-x Roller

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


No post service test is available for this assembly.

## Step 1: Remove the Tray 2 pickup rollers

1. Open Tray 2 until it stops, and then slightly lift and pull the tray out of the printer.


**⚠ CAUTION:** Do not extend more than one paper tray at a time. Do not use the paper tray as a step. Keep hands out of the paper trays when closing. All trays must be closed when moving the printer.

Figure 1-223 Remove Tray 2

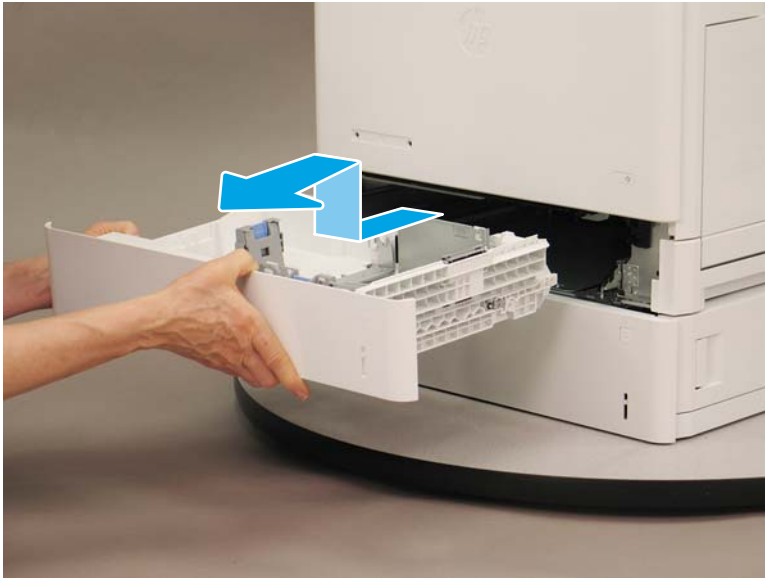

2. Open the right door.


Figure 1-224 Open the right door

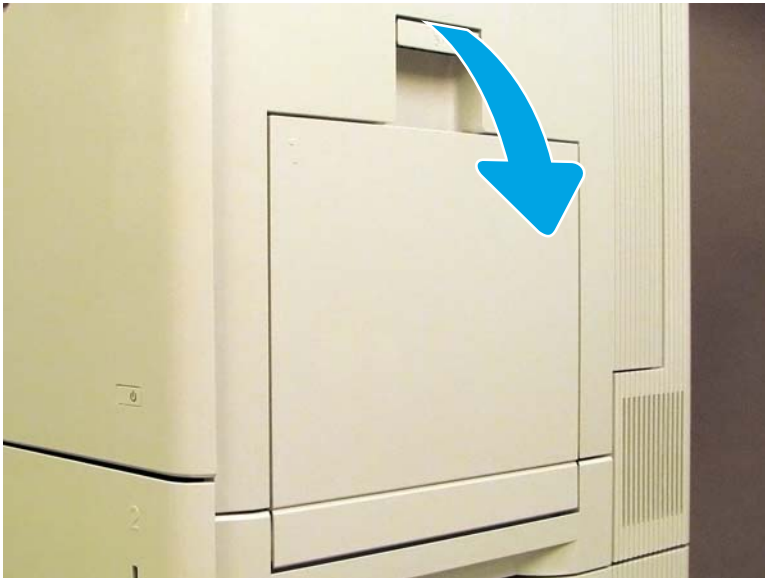



- Carefully raise the transfer roller assembly until it locks in an upright position.

Figure 1-225 Raise the transfer roller assembly

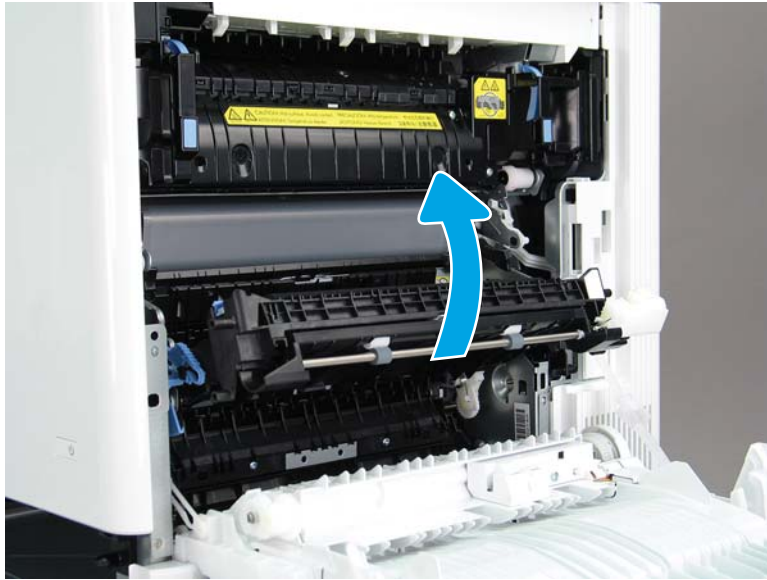


- Lower the outer paper guide.

Figure 1-226 Lower the outer paper guide



5. Lower the inner paper guide.

**Figure 1-227** Lower the outer paper guide

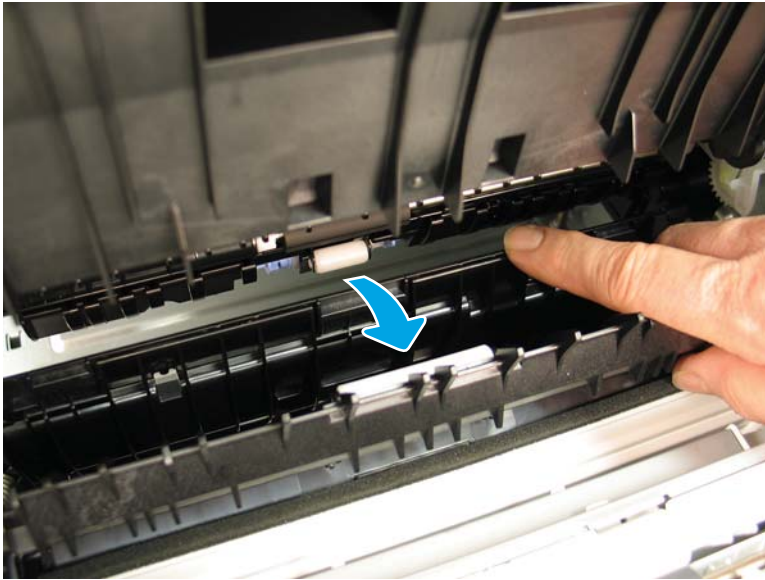

6. Locate the tray pickup roller assembly, consisting of two gray rollers in a blue case.

**Figure 1-228** Locate the pickup roller assembly





7. To remove the roller assembly, hold the rollers with your finger and pull them back towards the front of the printer to compress the spring loaded shaft (callout 1). Rotate the right end of the assembly down (callout 2), and then remove the assembly.

 **IMPORTANT:** The roller assembly must be accessed through the tray opening, while viewing it through the right door opening.

Figure 1-229 Remove the pickup roller assembly



### Step 2: Remove the Tray 3 pickup rollers

1. Open Tray 3 until it stops, and then slightly lift and pull the tray out of the printer.


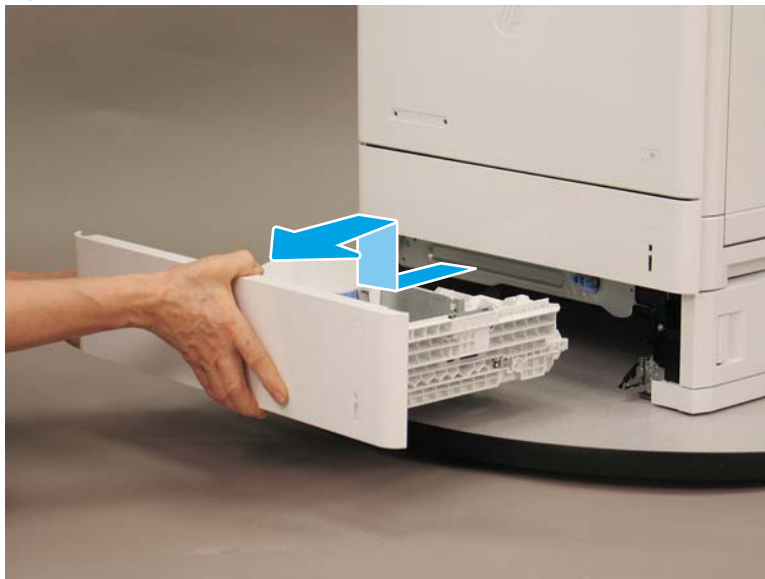
 **CAUTION:** Do not extend more than one paper tray at a time. Do not use the paper tray as a step. Keep hands out of the paper trays when closing. All trays must be closed when moving the printer.

Figure 1-230 Remove Tray 3



2. Open the Tray 3 right door.

Figure 1-231 Open the Tray 3 right door




3. Locate the green tab on the feed assembly cover. Pull down and towards you to release the green tab and lower the assembly cover.

Figure 1-232 Lower the assembly cover



4. Locate the tray pickup roller assembly, consisting of two gray rollers in a blue case.


**Figure 1-233** Locate the pickup roller assembly

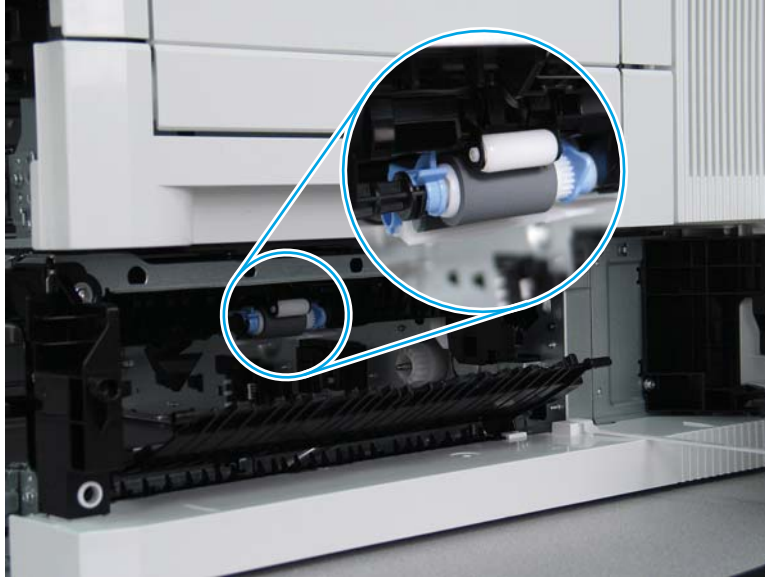

5. To remove the roller assembly, hold the rollers with your finger and pull them back towards the front of the printer to compress the spring loaded shaft (callout 1). Rotate the right end of the assembly down (callout 2), and then remove the assembly.

 **IMPORTANT:** The roller assembly must be accessed through the tray opening, while viewing it through the right door opening.


**Figure 1-234** Remove the pickup roller assembly

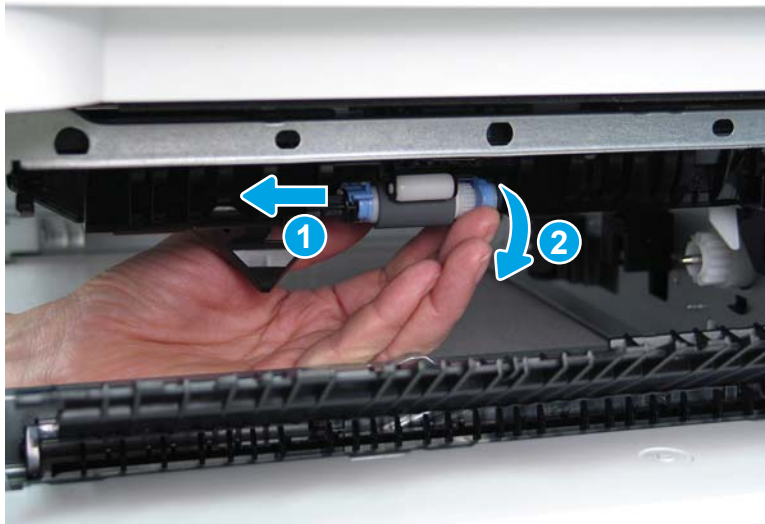

### Step 3: Remove the Tray 2 or 3 separation rollers


1. Locate the tray separation roller in the tray.

Figure 1-235 Locate the tray separation roller

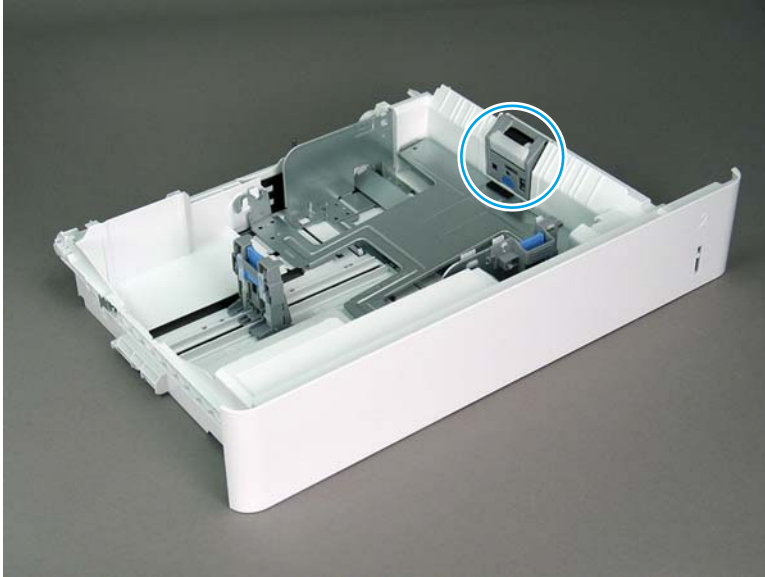

2. Push in on the blue label and push up slightly to release the roller assembly.

Figure 1-236 Release the roller assembly

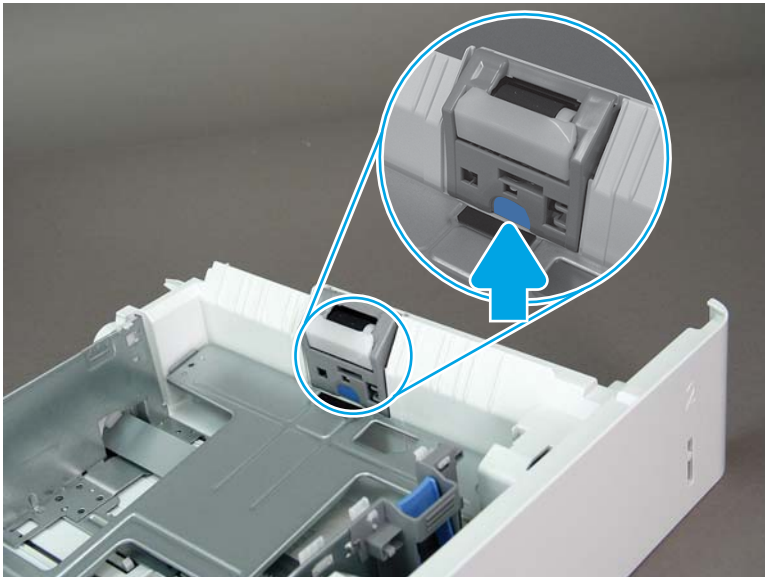

3. Slide the roller assembly straight up to remove it.

**Figure 1-237** Remove the roller assembly





#### Step 4: Unpack the replacement assemblies

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

#### Step 5: Install the Tray 2 or 3 separation rollers


1. Slide the roller assembly straight into the tray to install it.

**Figure 1-238** Install the roller assembly



2. Press down to make sure that the roller assembly snaps into place and is fully seated.

**Figure 1-239** Make sure that the roller is seated

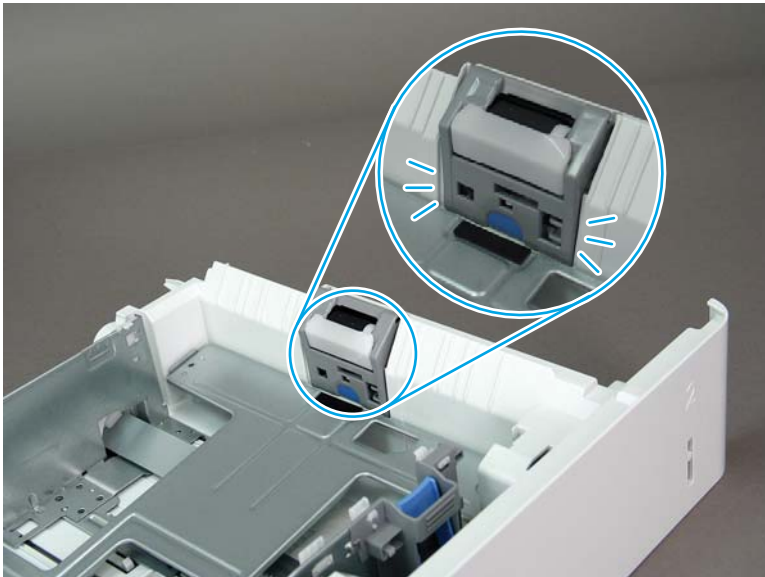

#### Step 6: Install the Tray 3 pickup rollers

1. The roller assembly is in an orange installation tray. Do not remove the orange installation tray until the roller assembly has been installed.



Figure 1-240 Do not remove the orange installation tray



2. In the printer, position the roller assembly so that the blue, spring-loaded shaft fits into the opening on the left side of the roller assembly (callout 1). With the shaft in the opening, pull toward the front of the printer to compress the shaft, and then pivot the right end of the assembly up (callout 2).


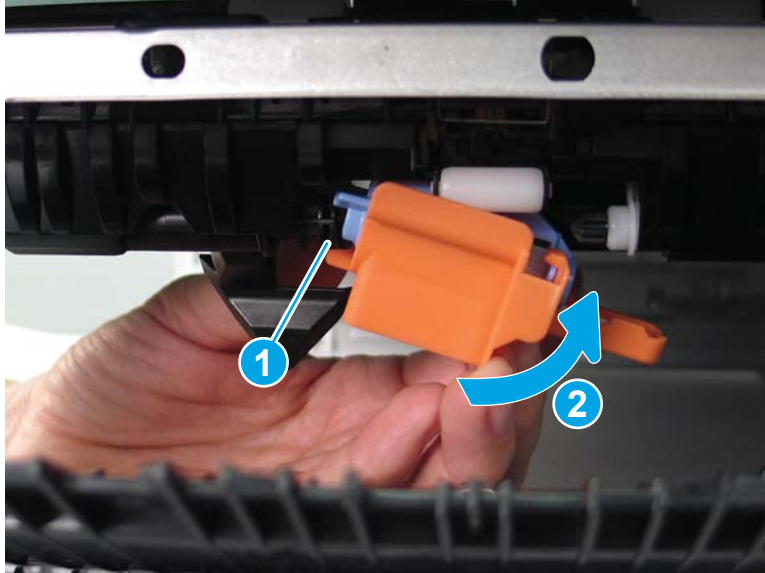
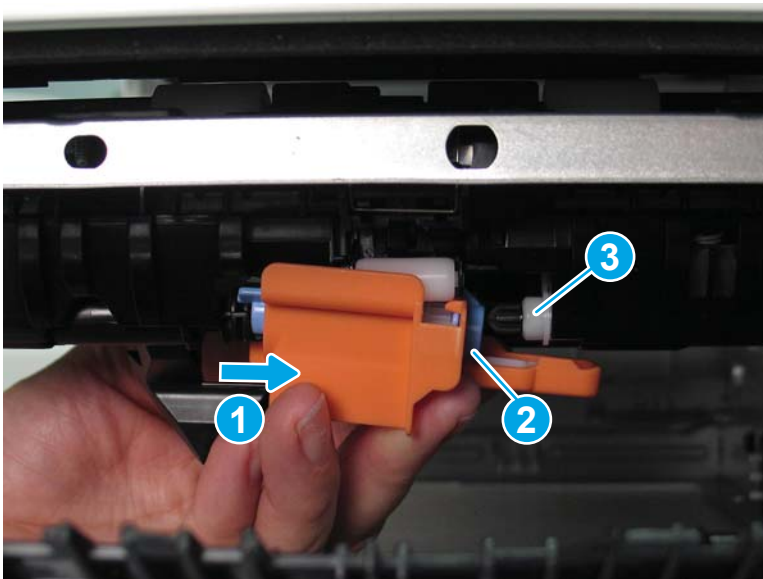
 **IMPORTANT:** The roller must be accessed through the tray opening, while viewing it through the right door opening.

Figure 1-241 Position the roller




3. While holding the roller assembly in place against the printer, carefully allow the spring-loaded shaft to push the roller assembly forward (callout 1) until the front side (callout 2) comes to rest on a black shaft (callout 3). Gently move the assembly side to side to ensure both ends of the roller assembly are seated.

Figure 1-242 Install the roller assembly



4. Gently pinch and twist the orange installation tray, and then pull downward to remove it from the roller assembly.

Figure 1-243 Remove the orange installation tray

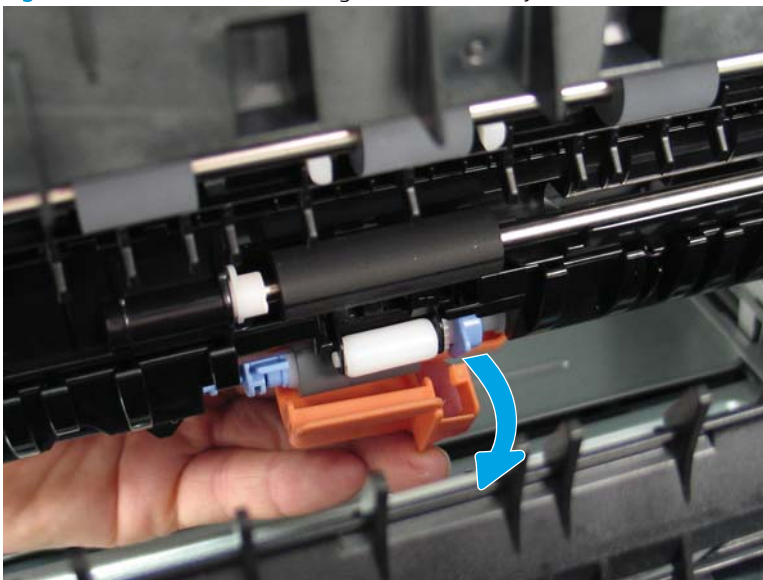



5. Look inside the printer through the tray opening and make sure that the roller assembly is correctly installed. It must not hang down into the tray opening. If the roller hangs down into the tray cavity, remove it, reinstall it in the orange installation tray, and then reinstall it in the printer.

**CAUTION:** If the roller assembly is not correctly installed, it might be damaged when the tray is installed.

Figure 1-244 Roller correct and incorrect installation



### Step 7: Install the Tray 2 pickup rollers

1. The roller assembly is in an orange installation tray. Do not remove the orange installation tray until the roller assembly has been installed.

Figure 1-245 Do not remove the orange installation tray



2. In the printer, position the roller assembly so that the blue, spring-loaded shaft fit into the opening on the left side of the roller assembly (callout 1). With the shaft in the opening, pull toward the front of the printer to compress the shaft, and then pivot the right end of the assembly up (callout 2).


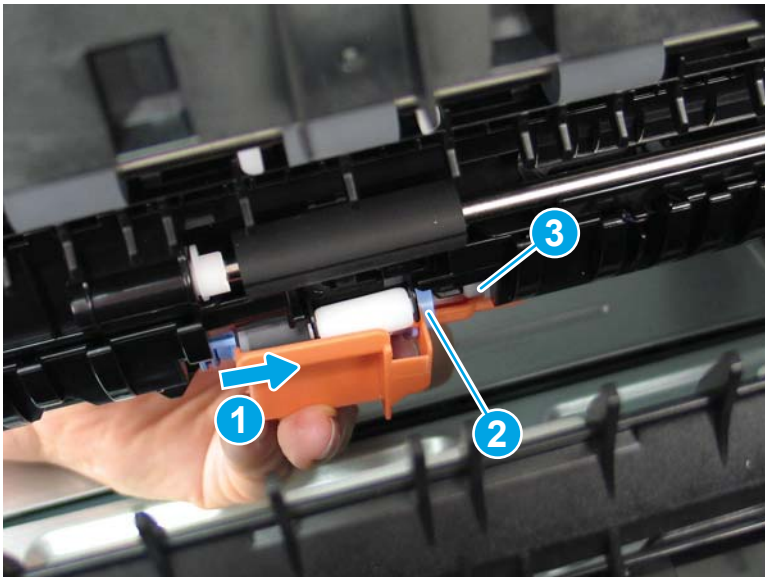
 **IMPORTANT:** The roller must be accessed through the tray opening, while viewing it through the right door opening.

Figure 1-246 Position the roller




3. While holding the roller assembly in place against the printer, carefully allow the spring-loaded shaft to push the roller assembly forward (callout 1) until the front side (callout 2) comes to rest on a black shaft (callout 3). Gently move the assembly side to side to ensure both ends of the roller assembly are seated.

Figure 1-247 Install the roller assembly



4. Gently pinch and twist the orange installation tray, and then pull downward to remove it from the roller assembly.

Figure 1-248 Remove the orange installation tray

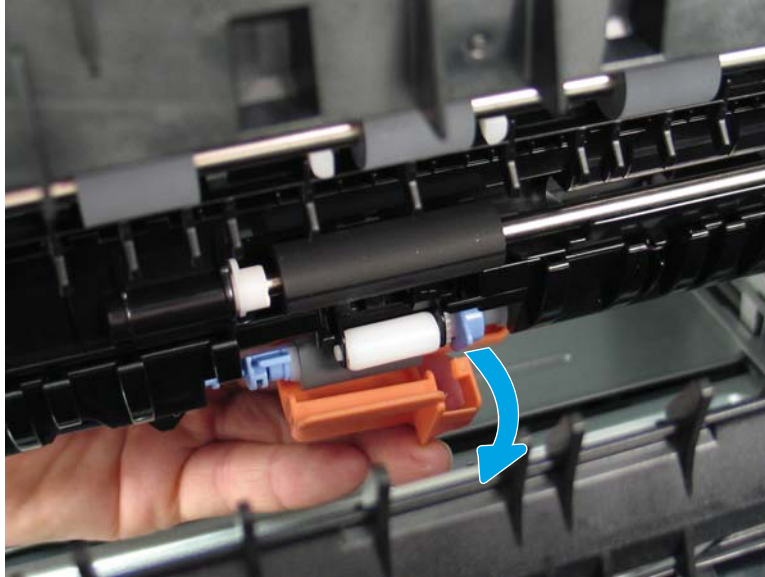

5. Look inside the printer through the tray opening and make sure that the roller assembly is correctly installed. It must not hang down into the tray opening. If the roller hangs down into the tray cavity, remove it, reinstall it in the orange installation tray, and then reinstall it in the printer.

**⚠ CAUTION:** If the roller assembly is not correctly installed, it might be damaged when the tray is installed.

Figure 1-249 Roller correct and incorrect installation




## Removal and replacement: Trays 3–5 paper feeder stand pickup and separation rollers

- [Introduction](#)
- [Step 1: Remove the Trays 3–5 paper feeder stand pickup and separation rollers](#)
- [Step 2: Unpack the replacement assembly](#)
- [Step 3: Install the Trays 3–5 paper feeder stand pickup and separation rollers](#)

### Introduction

This document provides the procedures to remove and replace the Trays 3–5 paper feeder stand pickup and separation rollers.


---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Trays 3–5 paper feeder stand pickup and separation rollers part number	
J7Z98-67902	Kit- LJ Trays 2-x Roller

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the Trays 3–5 paper feeder stand pickup and separation rollers

1. Do one of the following:
  - a. Open the paper tray.

**⚠ CAUTION:** Do not extend more than one paper tray at a time. Do not use the paper tray as a step. Keep hands out of the paper trays when closing. All trays must be closed when moving the printer.

**Figure 1-250** Open the paper tray



- b. Open the high-capacity paper tray.

**Figure 1-251** Open the high-capacity paper tray




2. Open the right door of the paper feeder

Figure 1-252 Open the right door



3. Locate the green tab on the feed assembly cover. Release the tab to lower the assembly cover.


Figure 1-253 Lower the feed assembly cover

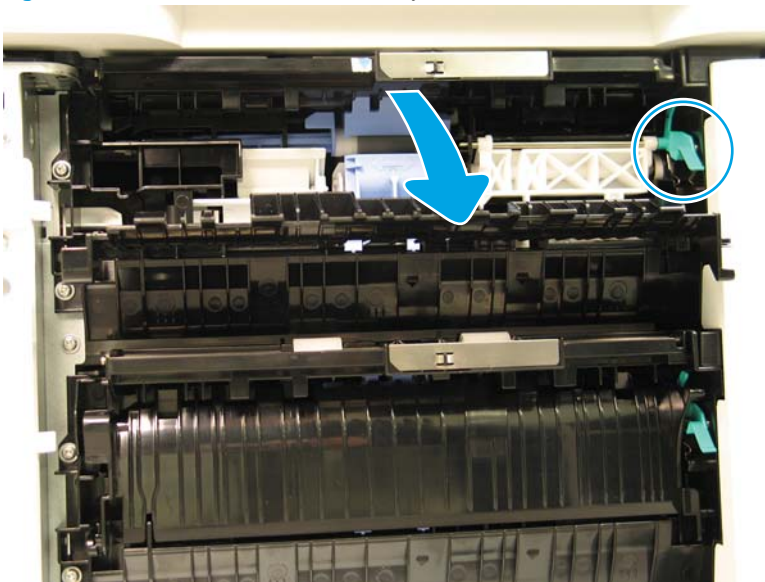




4. Remove the orange separation roller tool from the packaging.

Figure 1-254 Remove the tool from the packaging

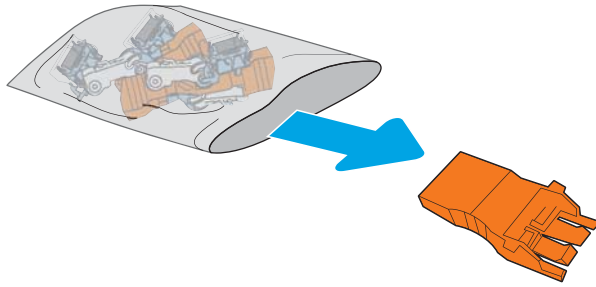

5. Locate the separation roller.

Figure 1-255 Locate the separation roller

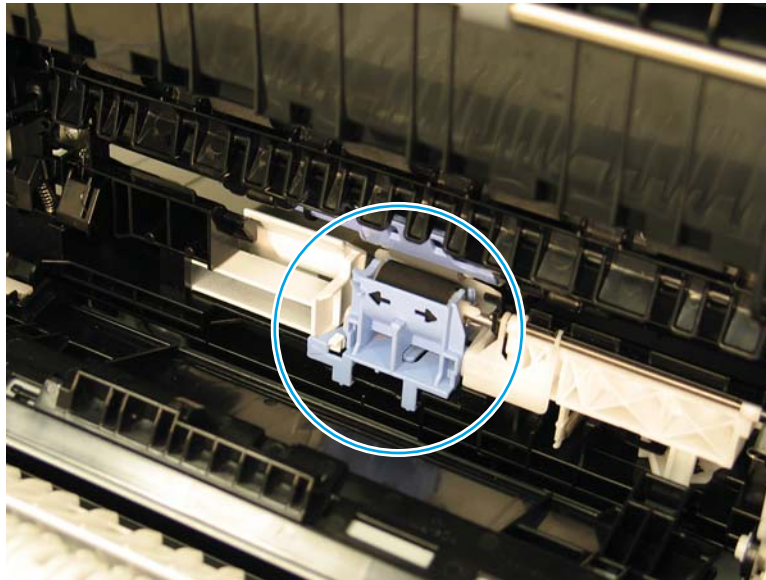

6. Install the orange tool in the separation roller until it snaps into place.

Figure 1-256 Install the orange tool



7. Slide the roller to the left.


Figure 1-257 Slide the roller to the left






8. Tilt the end of the tool down (callout 1), and then pull straight out of the printer (callout 2) to remove the separation roller.

Figure 1-258 Remove the separation roller

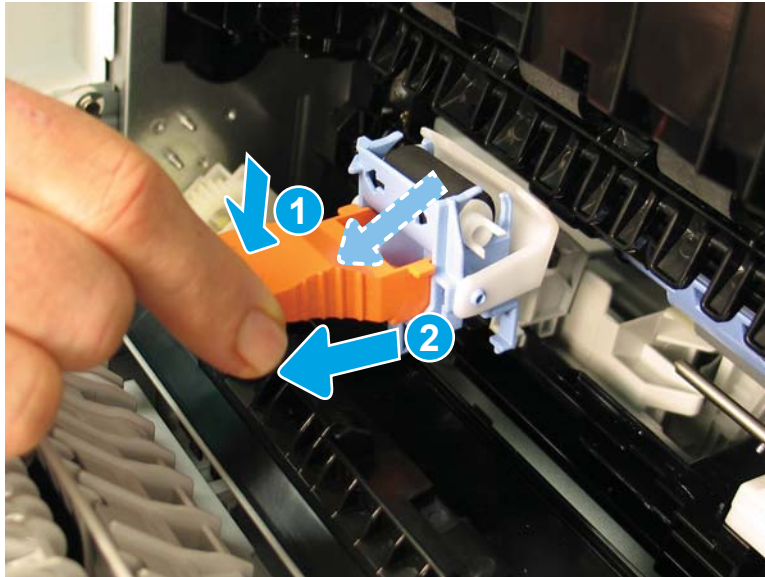


9. Remove the orange tool from the separation roller.

---

 **NOTE:** The tool will be used to install the new separation roller.


---

Figure 1-259 Remove the orange tool

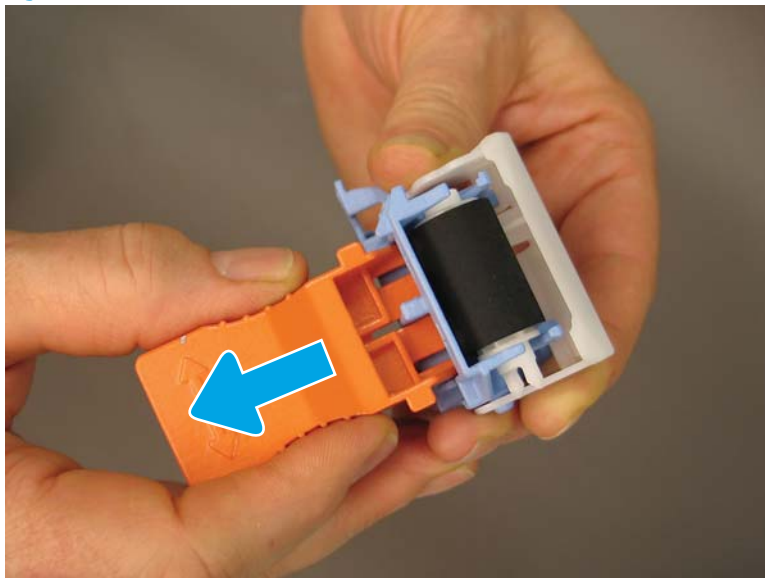


10. Locate the pickup and feed rollers.

**Figure 1-260** Locate the pickup and feed rollers

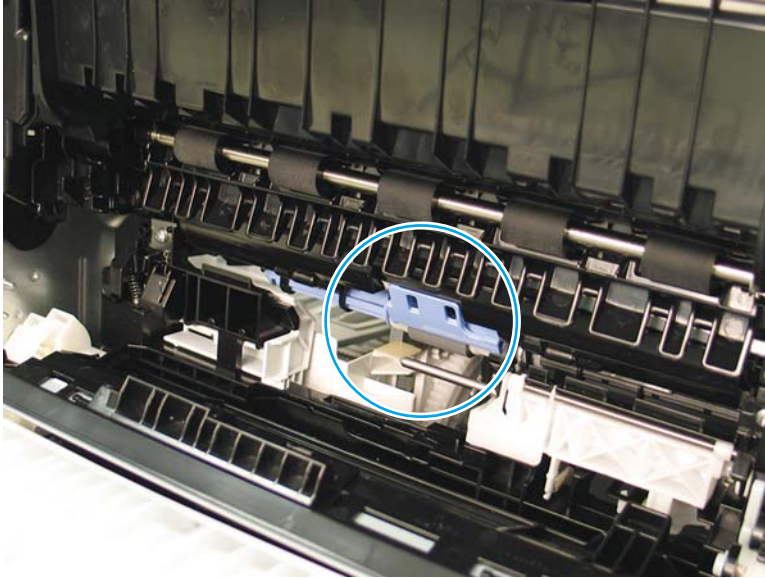


11. Locate and pull down the blue tab to unlock the pickup and feed rollers.

**Figure 1-261** Unlock the pickup and feed rollers

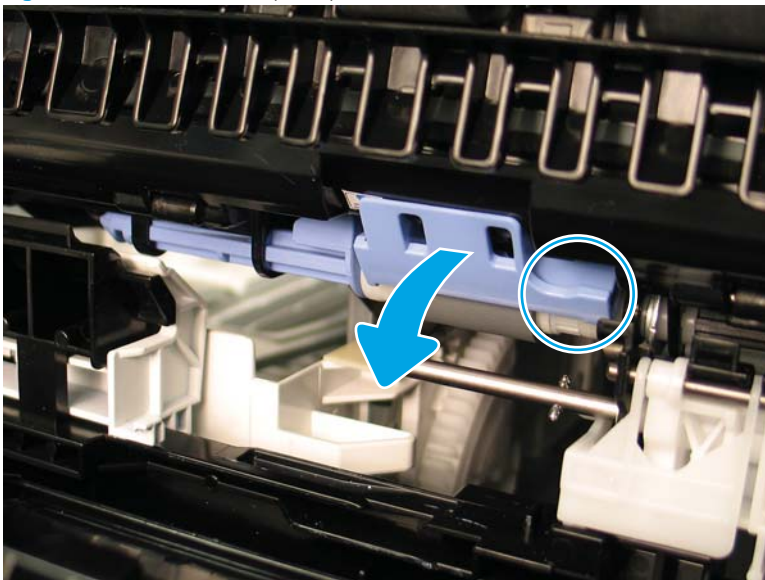


12. Use the blue tab as a handle to slide the rollers to the left to compress the left blue post until it clicks into place.

**Figure 1-262** Slide the blue tab left, compressing the left blue post until it clicks

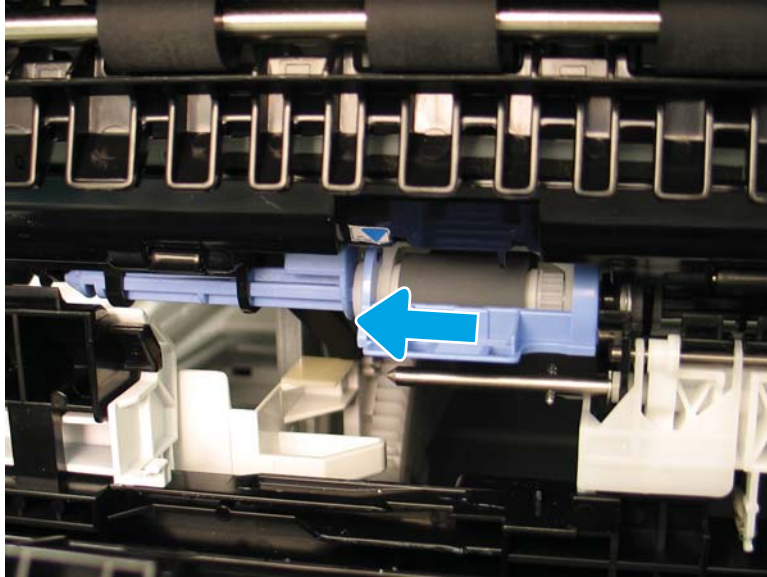


13. Slightly move the rollers to the right to free them from the blue post. Make sure that the roller is clear of the black post on the right.

**Figure 1-263** Slightly move the rollers to the right to free them from the blue post

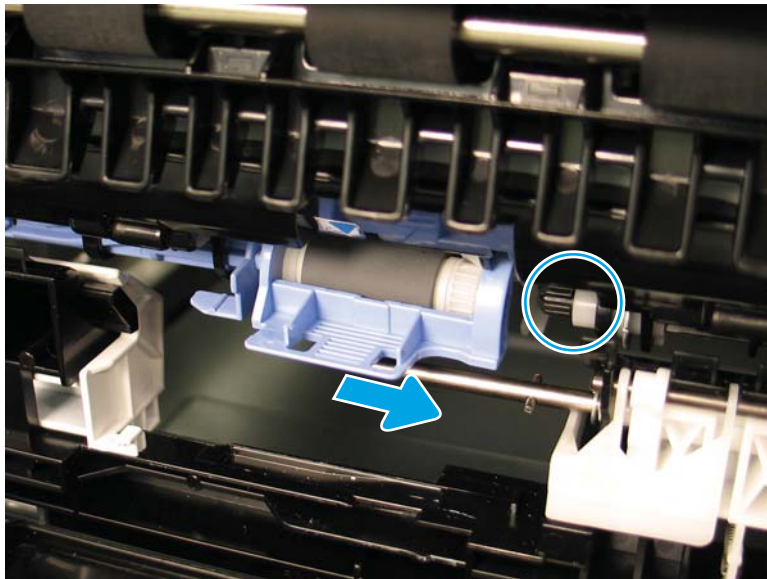


14. Slightly lift up the front of the roller assembly (callout 1), and then pull the assembly away from the printer (callout 2) to remove it.

Figure 1-264 Remove the roller assembly

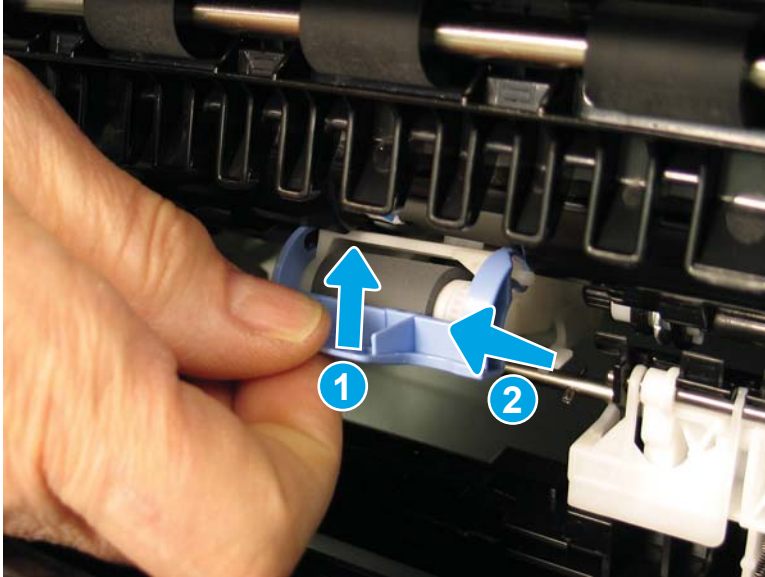

15. If the left post does not stay in the locked position, press the end of the post left until it clicks into place.

Figure 1-265 Lock the left post

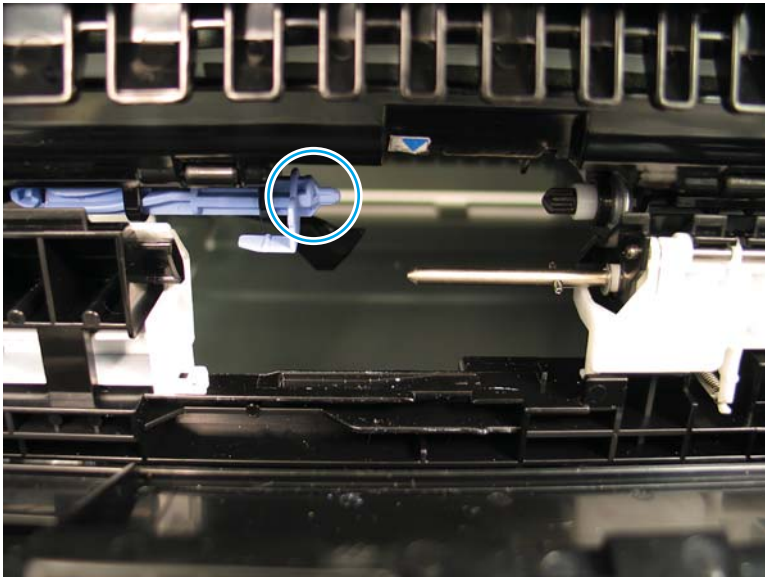


## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.





---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Step 3: Install the Trays 3–5 paper feeder stand pickup and separation rollers


1. The white hook on the top of the roller assembly (callout 1) will hook onto a sheet metal plate (callout 2) when installed correctly.

**Figure 1-266** White hook installation position

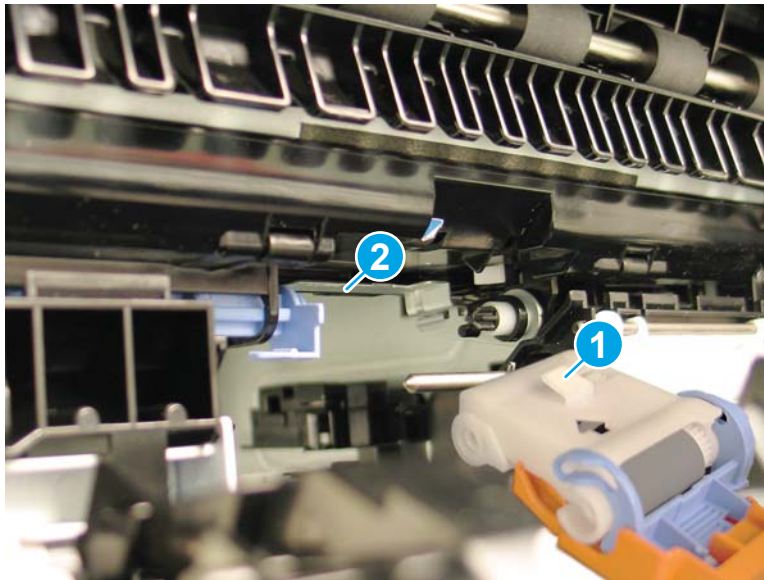


2. Align the arrow on the roller assembly with the arrow in the printer, and then slide the rollers into the printer.

**Figure 1-267** Align the roller assembly

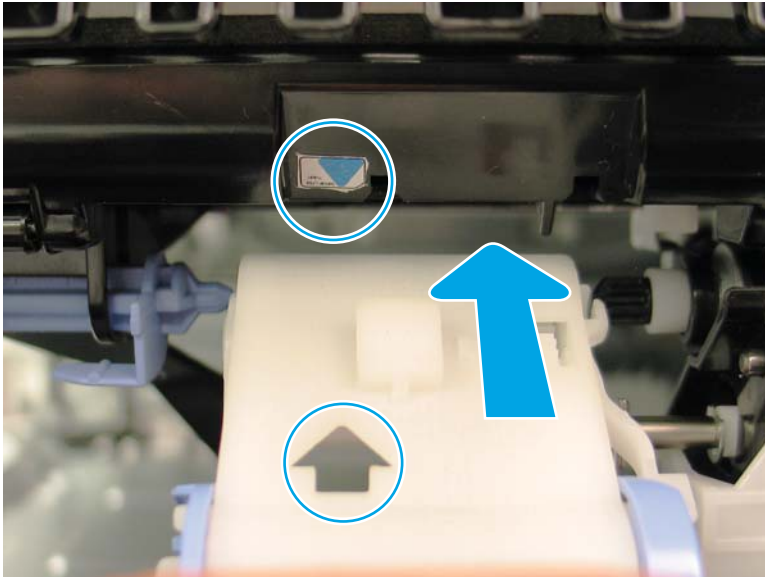


3. Slide the rollers to the right onto the black shaft.

**Figure 1-268** Slide the rollers to the right onto the black shaft

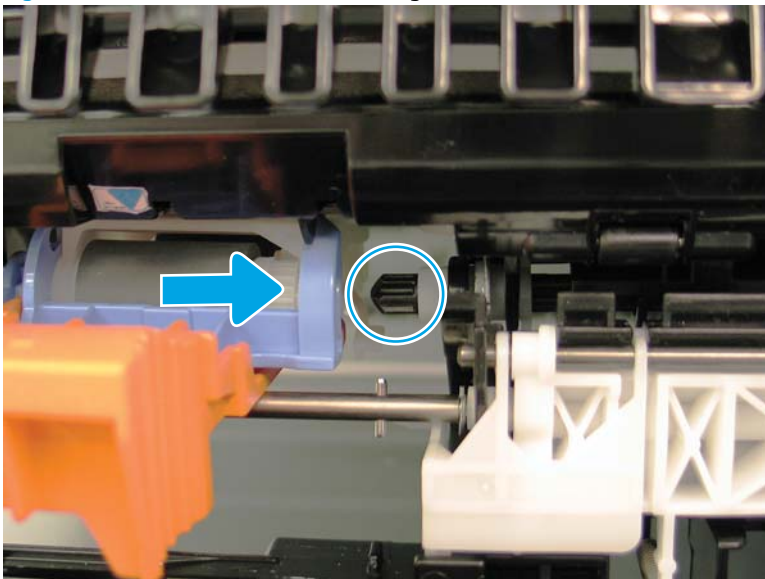


4. Locate the lever on the blue shaft on the left, and then release the lever by pressing upward. The blue shaft should spring to the right to click into position to hold the rollers in place.

Figure 1-269 Release the lever

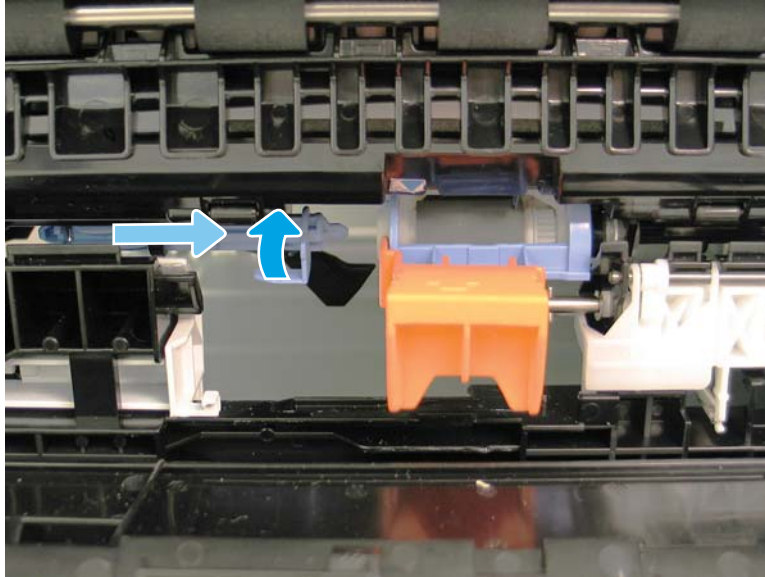



5. Remove the orange tool from the roller assembly by pulling it away from the printer.

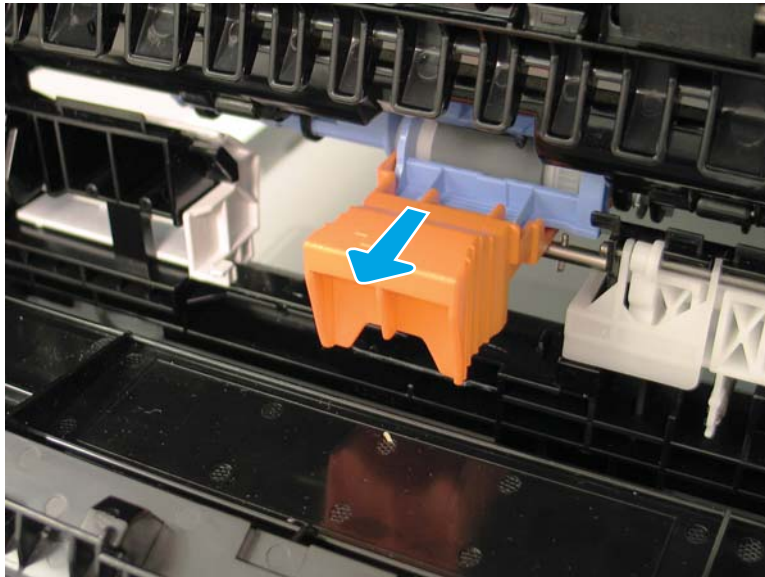Figure 1-270 Remove the orange tool




- Pivot the tab up and snap it into place against the rollers to correctly lock the rollers in place.

 **NOTE:** The blue arrow on the printer is hidden when the cover is correctly snapped into place.


 **NOTE:** If the rollers are hanging, or at an angle, they are not installed correctly. Make sure that the hook on the top of the rollers is attached to the metal chassis plate inside the printer. If the rollers are not installed correctly, go back to step 16 and reinstall the assembly.

**Figure 1-271** Pivot the tab up and snap it to lock the rollers correctly in place

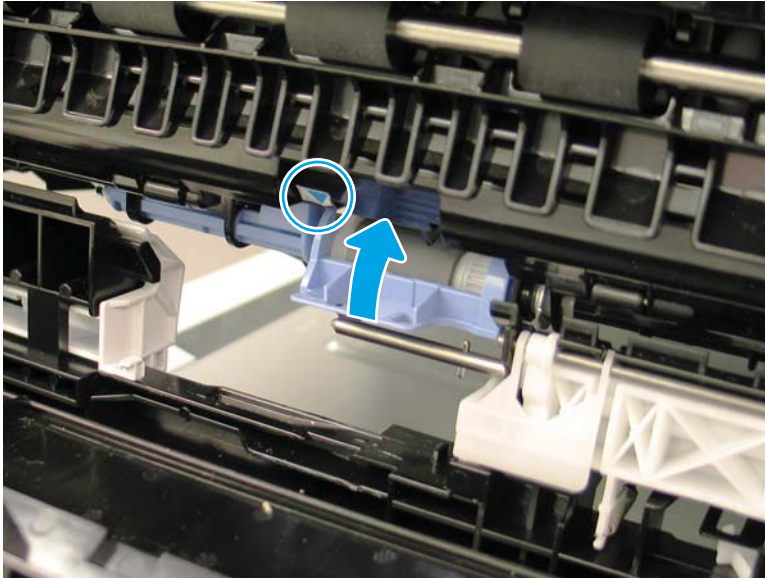

- If the rollers are hanging, or at an angle, they are not installed correctly. Make sure that the hook on the top of the rollers is attached to the metal chassis plate inside the printer. If the rollers are not installed correctly, go back to step 2 and reinstall the assembly.

**Figure 1-272** Roller incorrect and correct installation

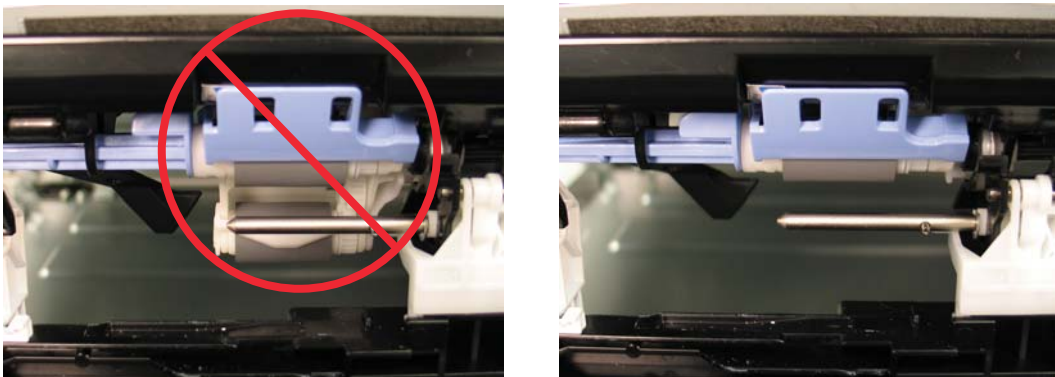




8. Install the orange separation roller tool onto the replacement separation roller.


 **NOTE:** The tool will snap into place when it is fully installed.

**Figure 1-273** Install the orange tool

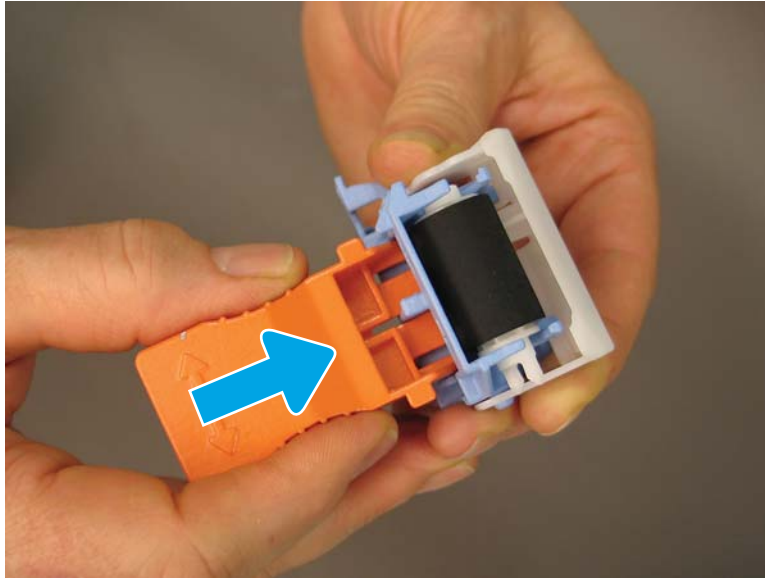


9. Tilt the orange tool slightly away from the printer, and then install the roller into the printer so that the opening in the roller (callout 1) fit over the white tab (callout 2) on the printer rail.

**Figure 1-274** Position the roller

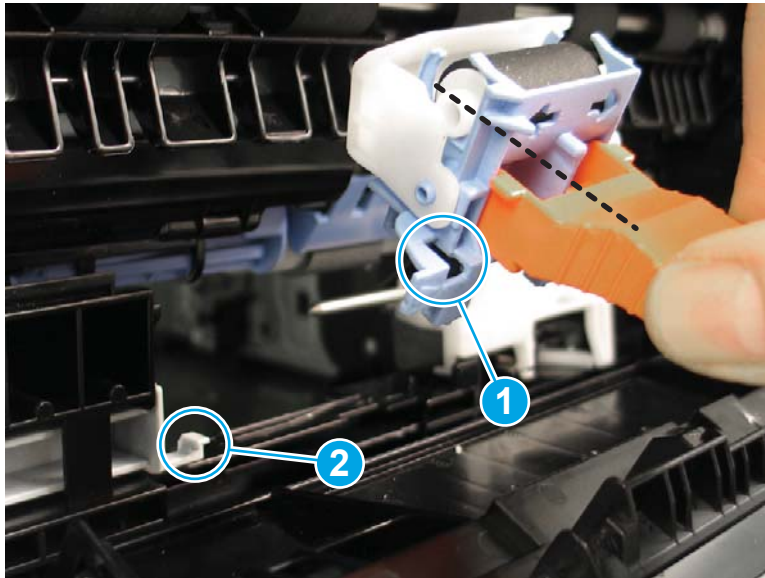


10. When installed correctly, the embossed arrow on the roller case aligns with the white tab on the rail.

Figure 1-275 Check roller alignment

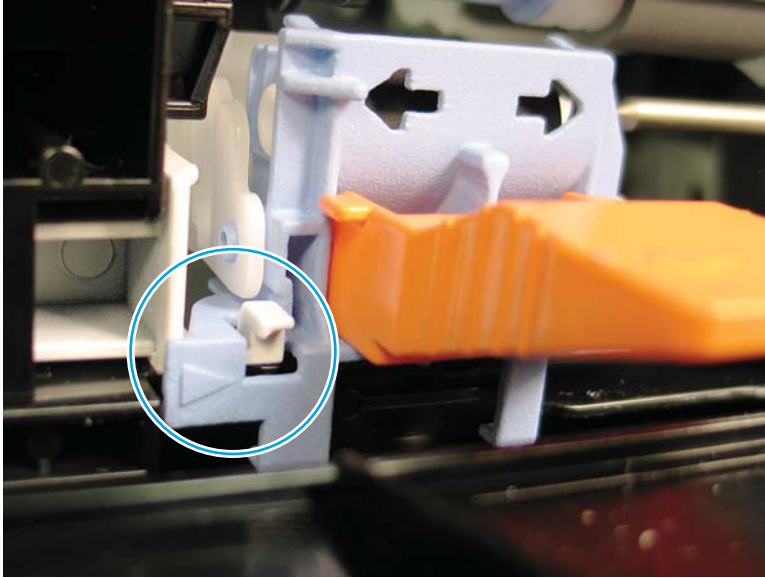


11. Align the center of the roller with the end of the metal shaft. Slide the roller to the right onto the metal shaft until it snaps into place.

Figure 1-276 Slide the roller on the metal shaft

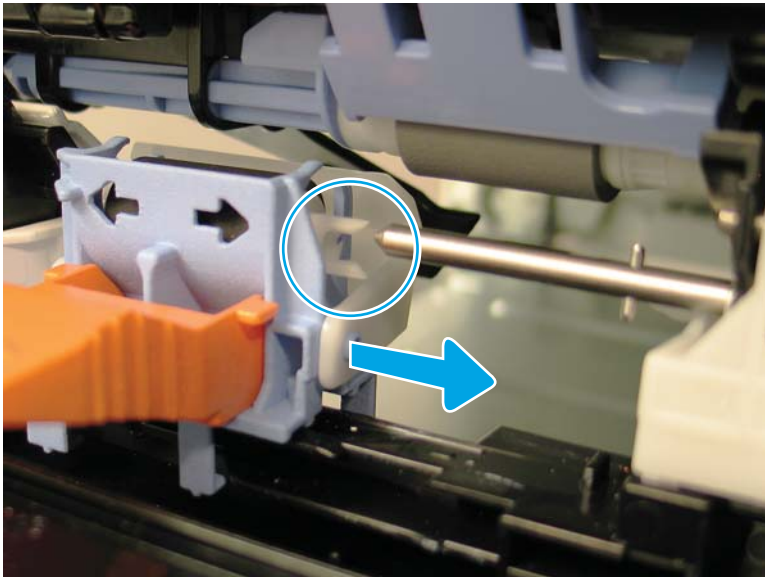

12. Remove the orange tool by pulling it away from the printer.

Figure 1-277 Remove the orange tool

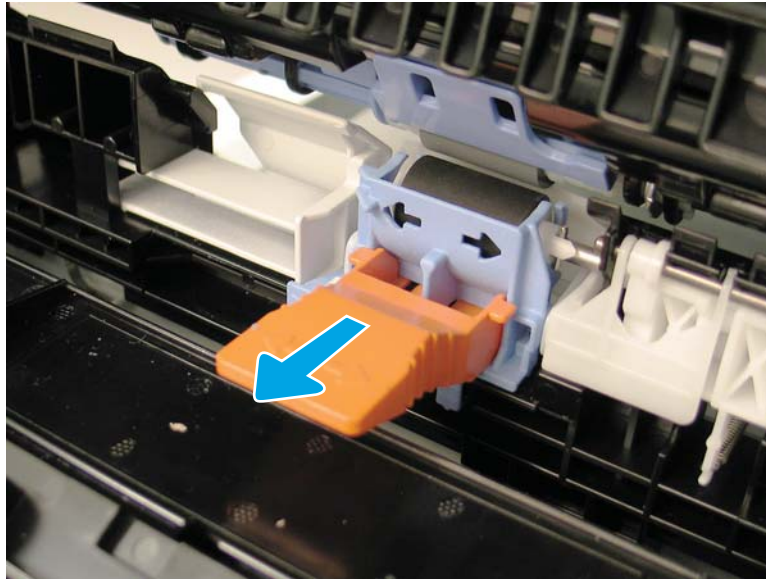

13. Close the feed assembly cover.

Figure 1-278 Close the feed assembly cover



14. Close the right door of the paper feeder.

Figure 1-279 Close the right door



15. Do one of the following:

- a. Close the paper tray.

Figure 1-280 Close the paper tray



- b. Close the high-capacity paper tray.

**Figure 1-281** Close the high-capacity paper tray



## Field replaceable units (FRUs)

### Removal and replacement: External panels, covers, and doors

- [Removal and replacement: Formatter cover](#)
- [Removal and replacement: Face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Removal and replacement: Front door](#)
- [Removal and replacement: Right door](#)
- [Removal and replacement: Left door](#)
- [Removal and replacement: Top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Removal and replacement: Left rear cover](#)
- [Removal and replacement: Output bin](#)
- [Removal and replacement: Rear cover](#)
- [Removal and replacement: Right rear cover](#)
- [Removal and replacement: Right handle](#)
- [Removal and replacement: Left handle](#)


## Removal and replacement: Formatter cover

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the formatter cover.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off
- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Formatter cover part number	
RM2-6657-000CN	Formatter cover

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-282 Remove the formatter cover

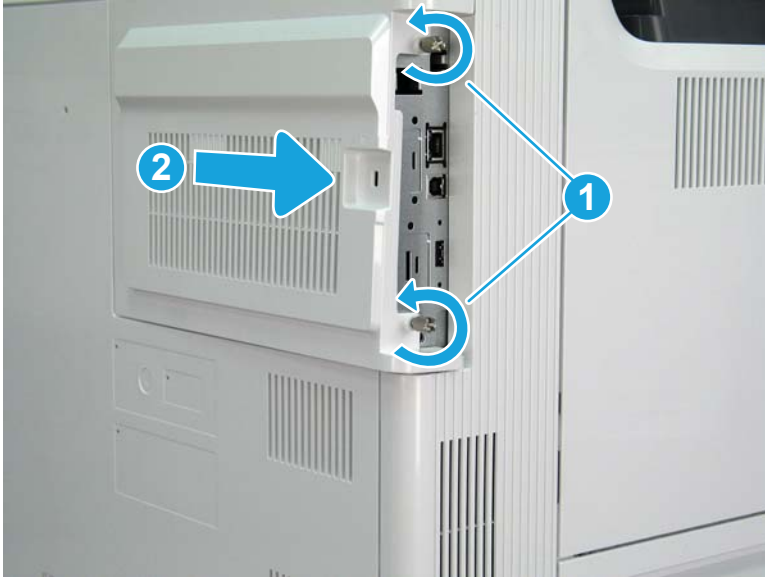

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Face-down front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)


- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the face-down front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh).

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Face-down front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh) part number	
RC5-1842-000CN	Face-down front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681z/Flow M682z/Flow E67660z)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-283 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-284 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-285 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-286 Disconnect the keyboard flat cable

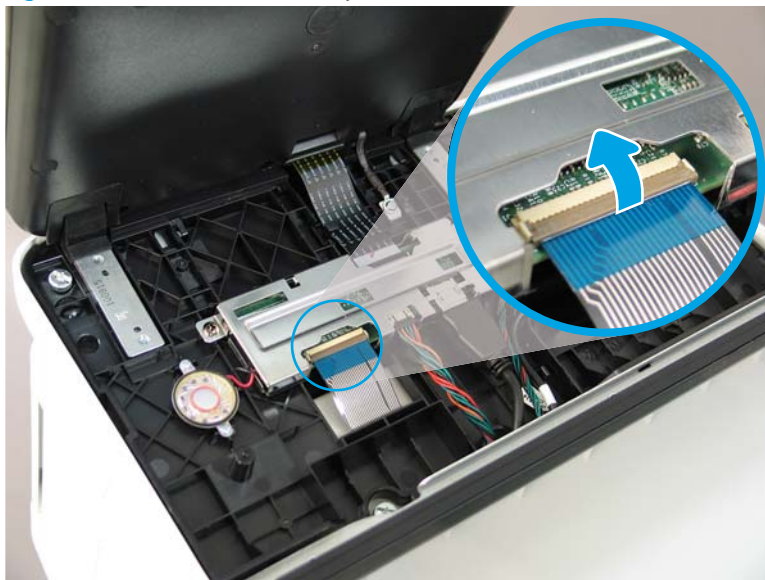

5. Slide the keyboard tray out until it stops.

**Figure 1-287** Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

**Figure 1-288** Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-289 Remove the keyboard



**Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-290 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-291 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.


Figure 1-292 Remove the cover






4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-293** Disconnect the keyboard flat cable (keyboard models only)

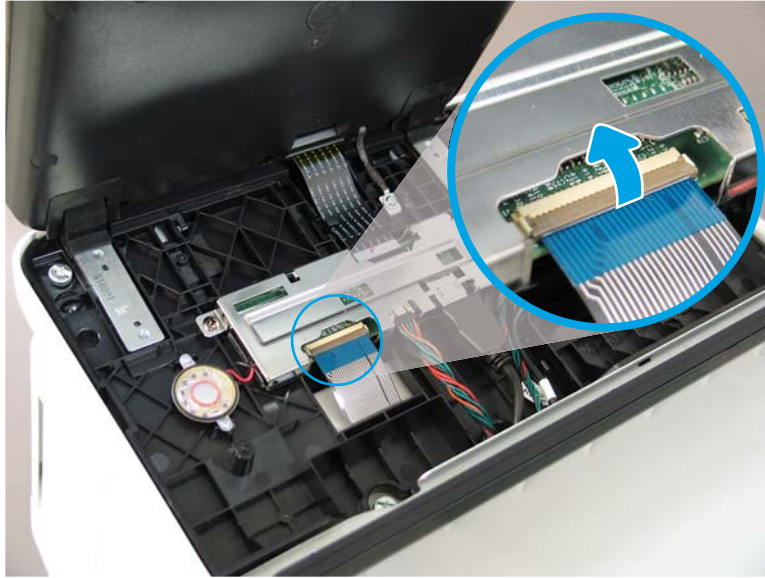


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-294** Disconnect connectors

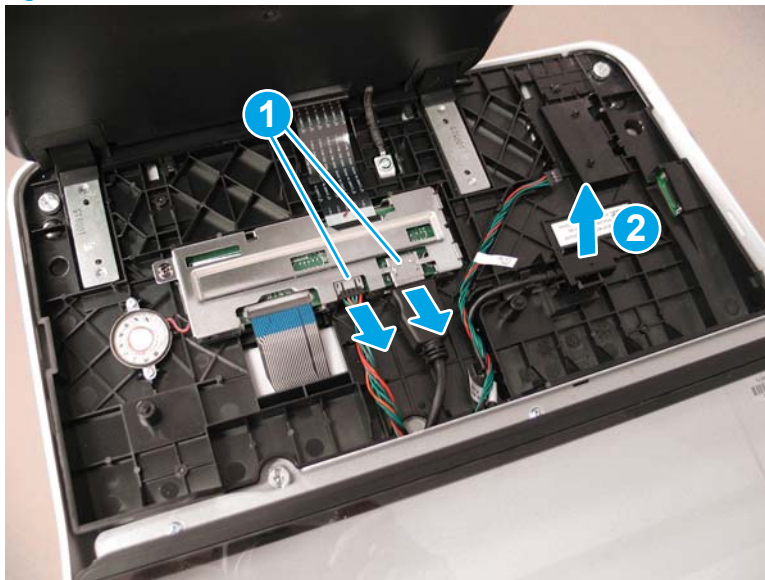


6. Remove three thumbscrews (callout 1).

Figure 1-295 Remove three thumbscrews

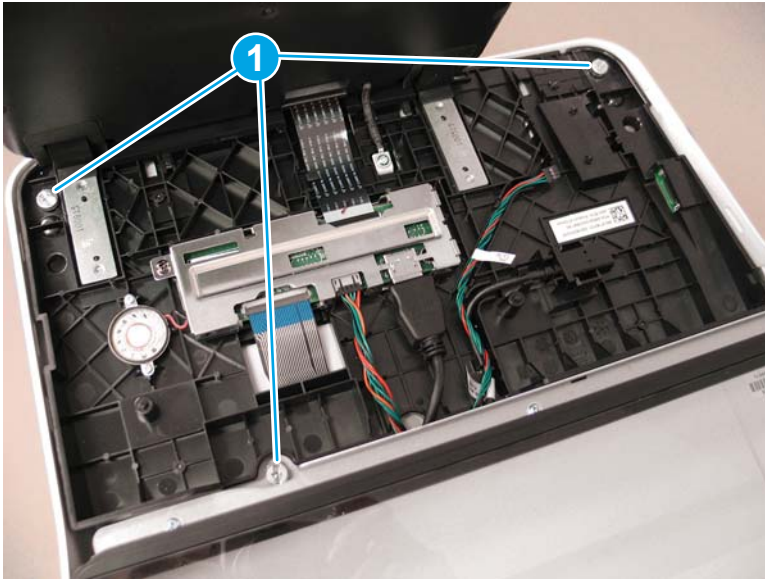

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-296 Remove the control panel

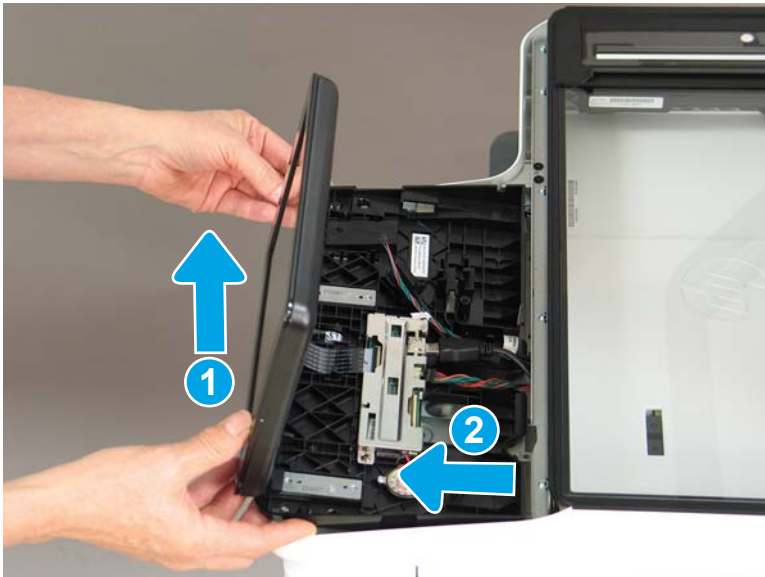


### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).



Figure 1-297 Remove the SCB cover

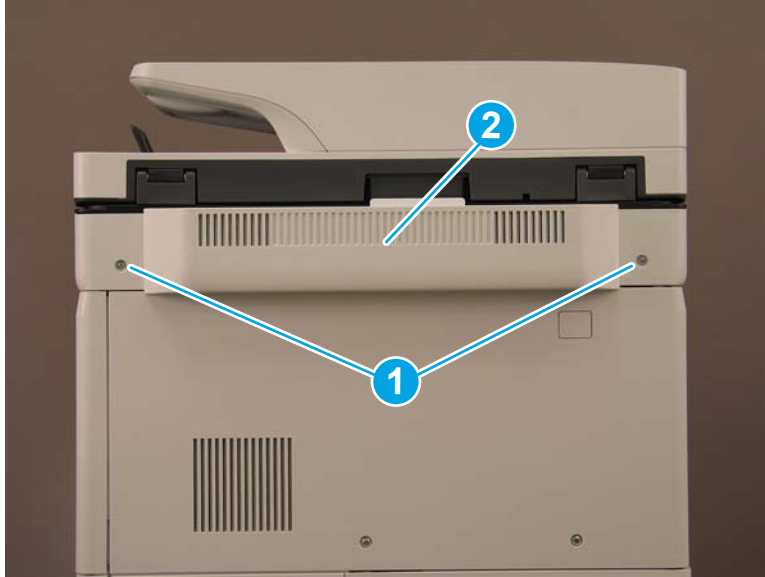


2. Flow M681z/Flow M682z/Flow E67660z models only: Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-298 Remove the small cover




- b. **Flow M681z/Flow M682z/Flow E67660z models only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-299** Remove the stapler/stacker rear cover

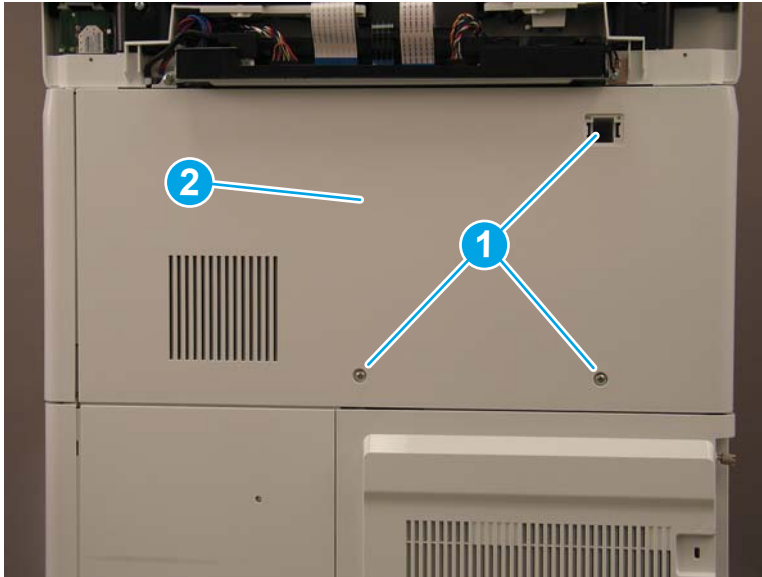


3. **M681dh/M681f/M682dh/Flow M681f/E67650dh models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

**Figure 1-300** Remove the upper rear cover

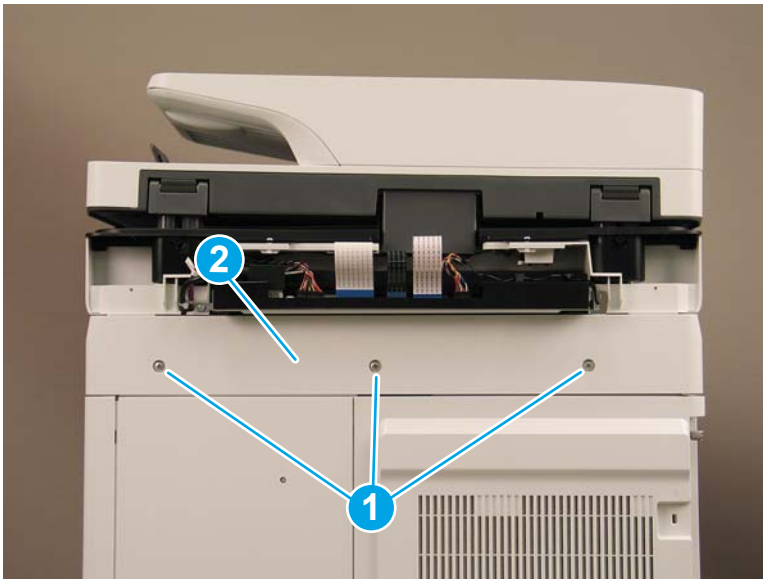

- Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-301** Remove the formatter cover

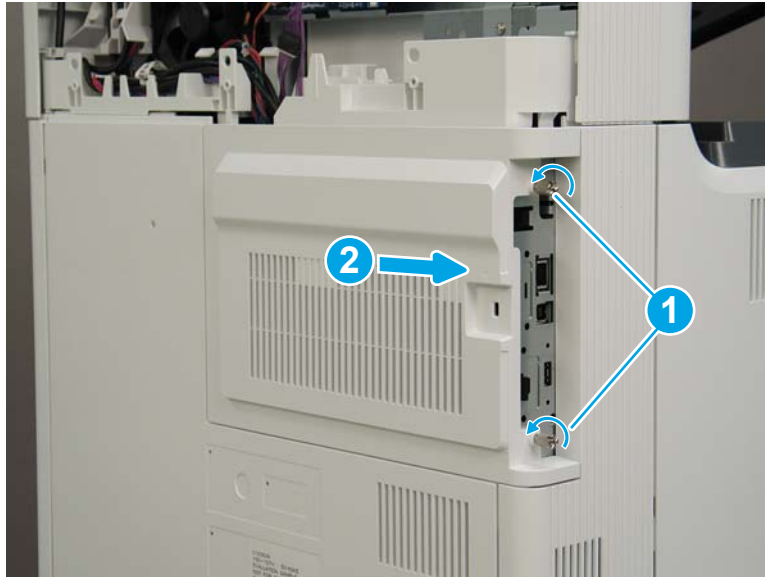


- The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, Flow M681f, and E67650dh models is different the removal procedures are the same for all models.

**Figure 1-302** Cable routing for M681dh, M681f, Flow M681f, and E67650dh



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-303 Disconnect two connectors

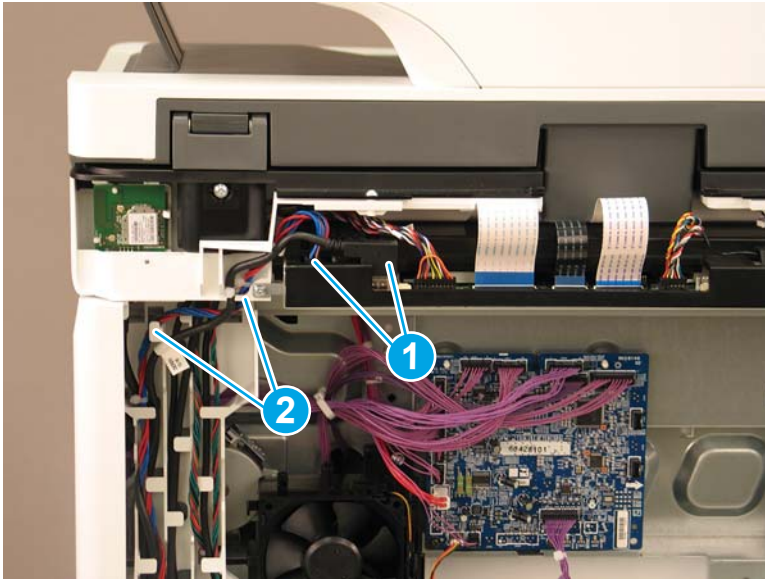


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-304 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-305 Disconnect the wireless connector

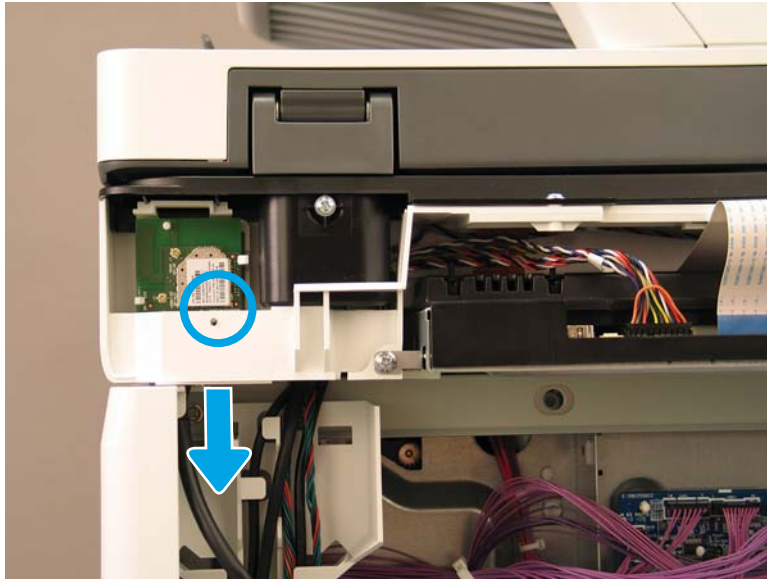

9. Release all of the cables from the cable guides (callout 1).


Figure 1-306 Release the cables

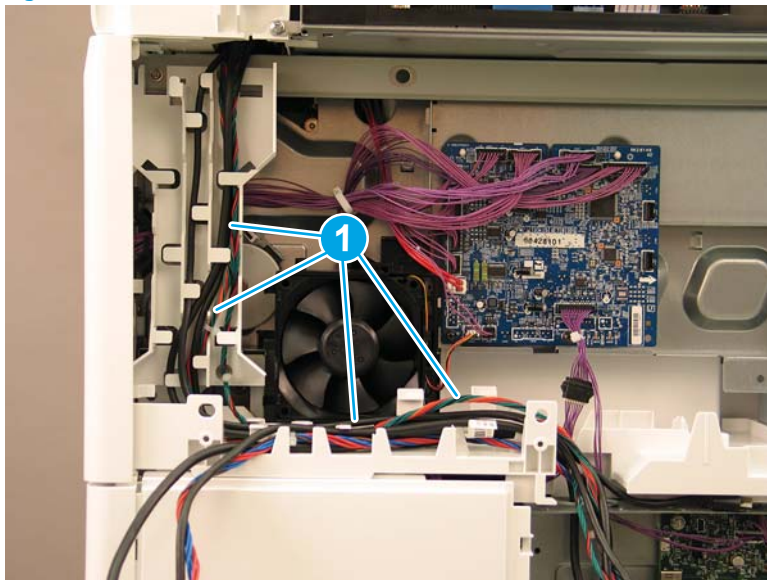




10. At the back of the printer, remove four screws (callout 1).

Figure 1-307 Remove four screws

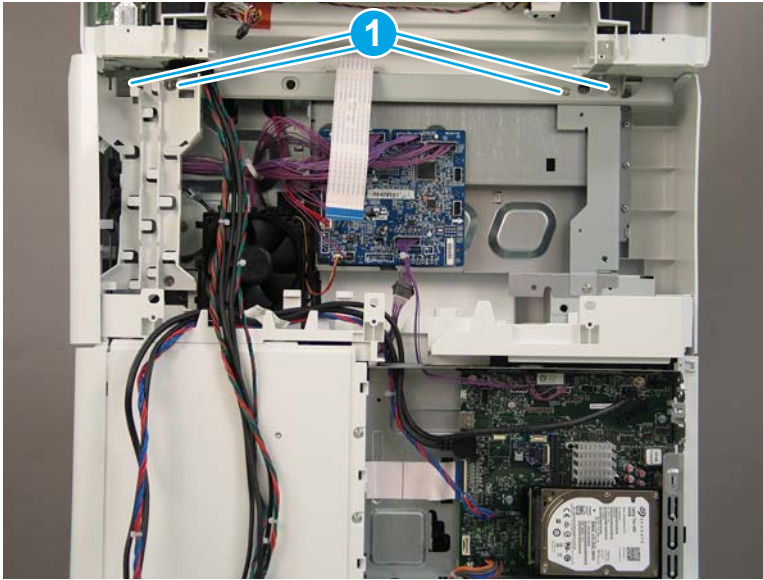

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z/Flow M682z/Flow E67660z only:** Remove one self-tapping screw (callout 2).

Figure 1-308 Remove three screws

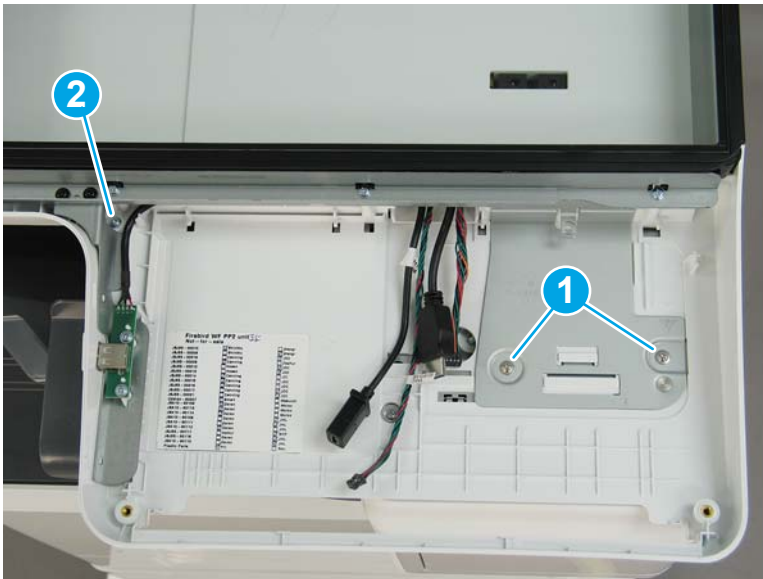

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-309** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-310** Remove the wireless card

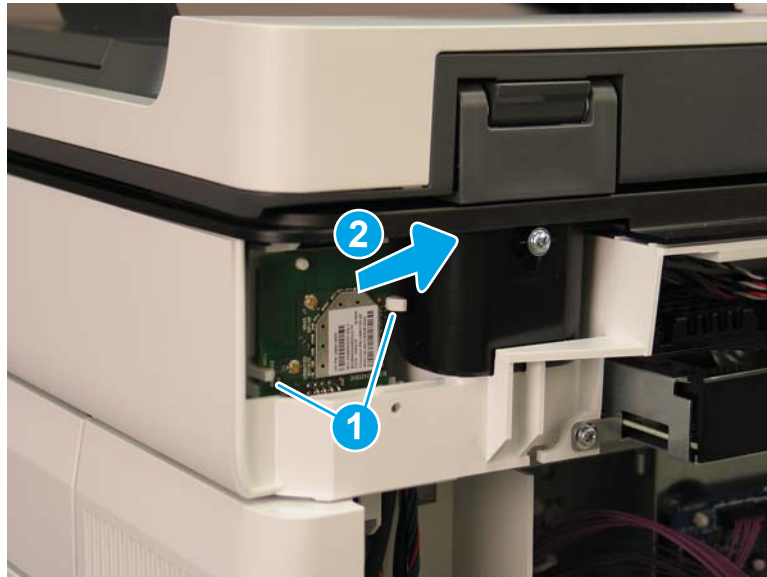


- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-311** Connect the wireless card connector



- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).


**Figure 1-312** Reinstall the wireless card

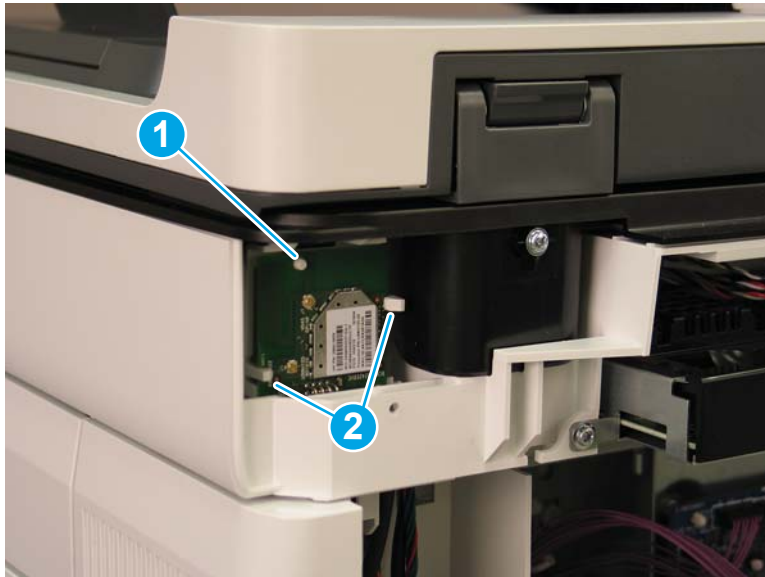



- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).


**Figure 1-313** Install the SCB cables

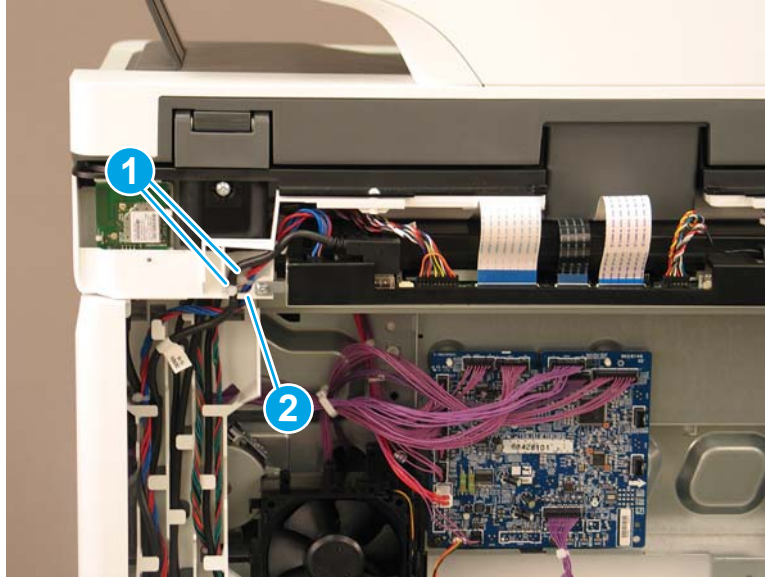

**Step 4: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-314** Remove the face-down front cover

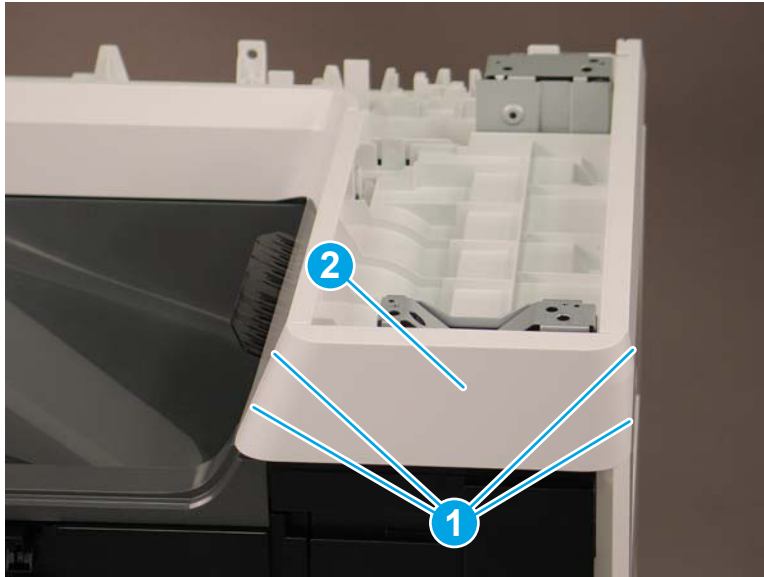


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

Figure 1-315 Install the cover

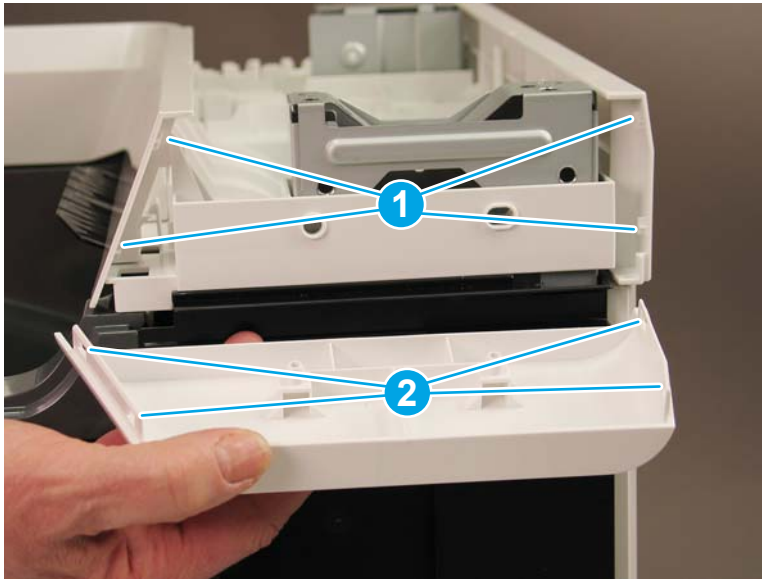



### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


## Removal and replacement: Top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/E67660z\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 5: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh).

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Top cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number	
RC4-6865-000CN	Top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/E67660z)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-316** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

**Figure 1-317** Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-318 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-319 Disconnect the keyboard flat cable

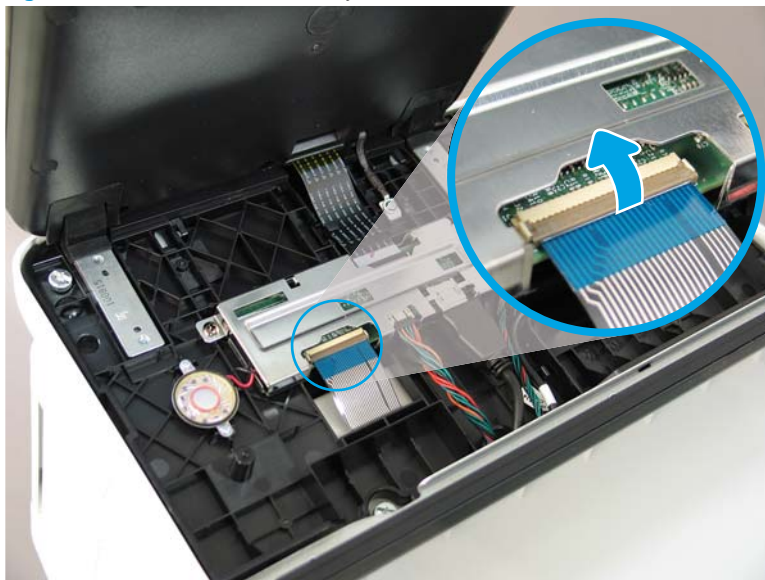

5. Slide the keyboard tray out until it stops.

**Figure 1-320** Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

**Figure 1-321** Release two tabs





7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-322 Remove the keyboard



**Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-323 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-324 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.


Figure 1-325 Remove the cover






4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard fl a cable.

**Figure 1-326** Disconnect the keyboard fl a cable (keyboard models only)

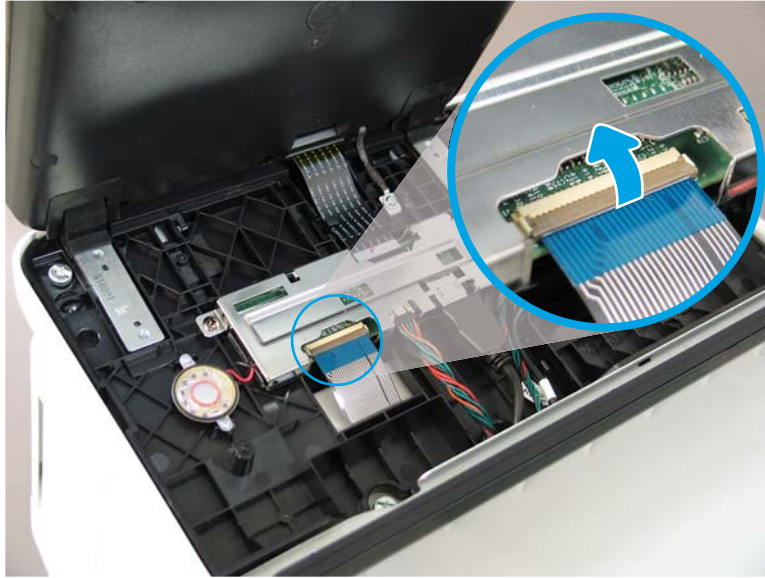


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-327** Disconnect connectors

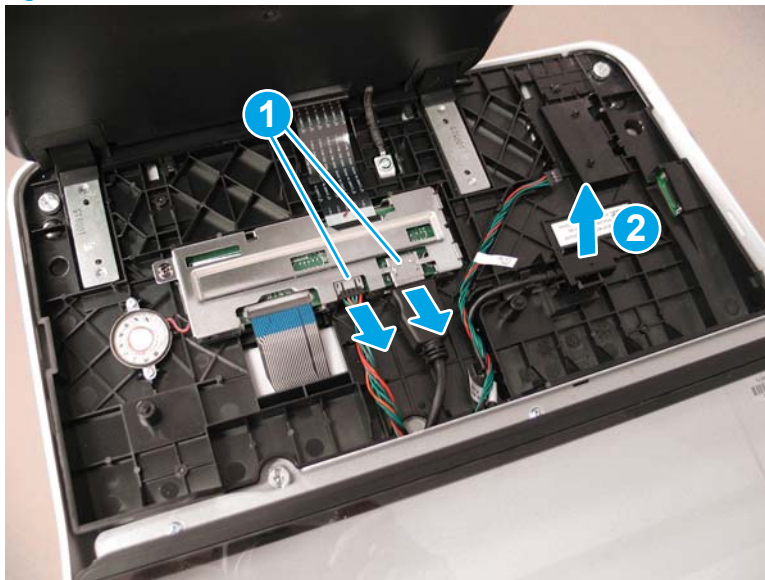


6. Remove three thumbscrews (callout 1).

Figure 1-328 Remove three thumbscrews

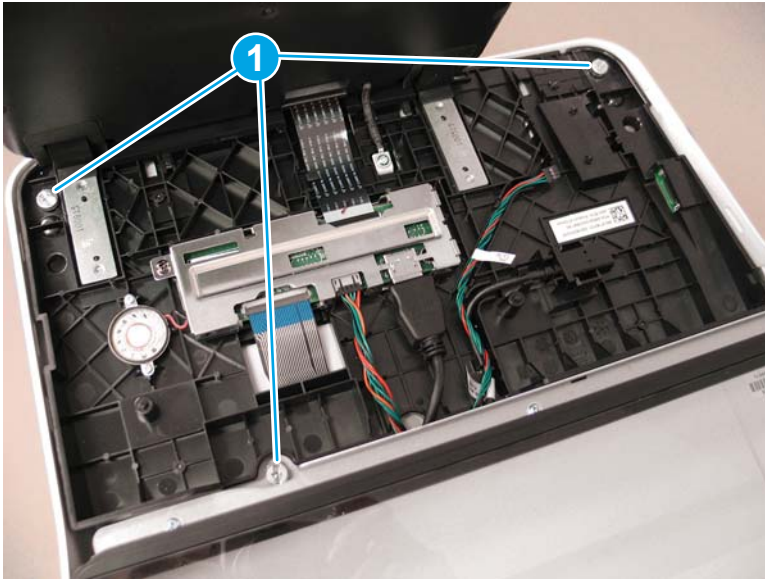

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


Figure 1-329 Remove the control panel

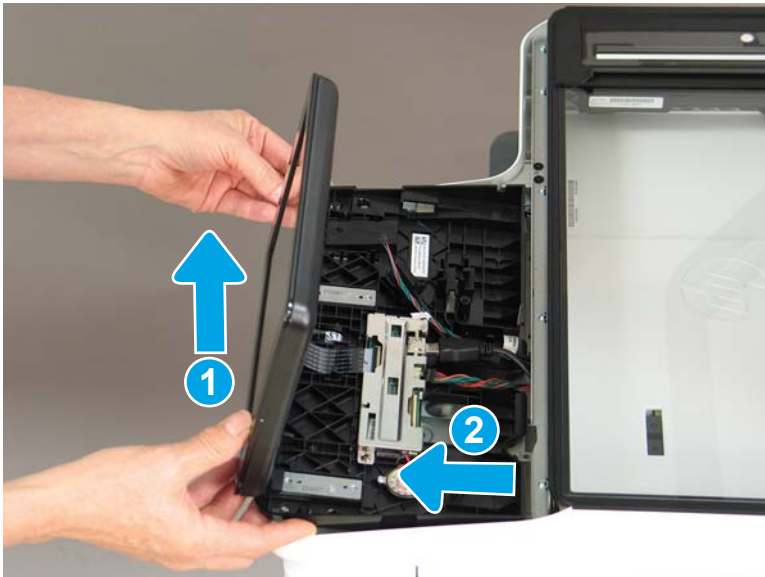

### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-330 Remove the SCB cover

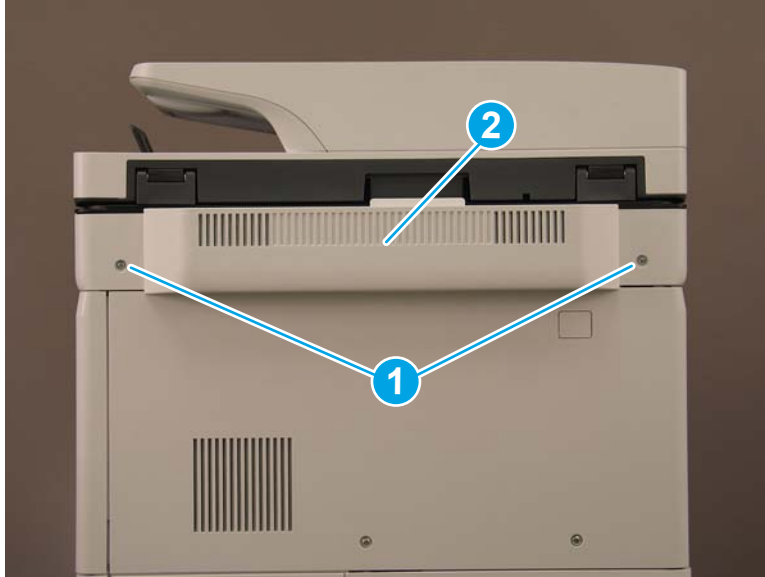


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-331 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-332** Remove the stapler/stacker rear cover

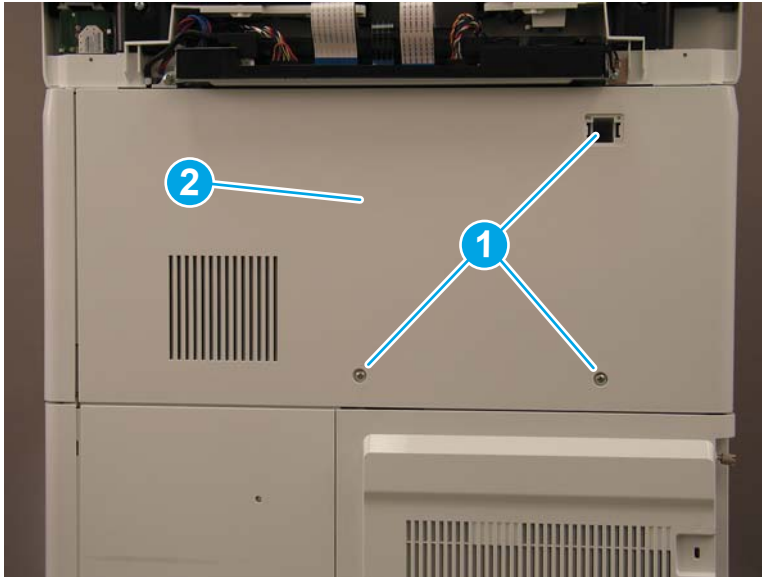


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

**Figure 1-333** Remove the upper rear cover

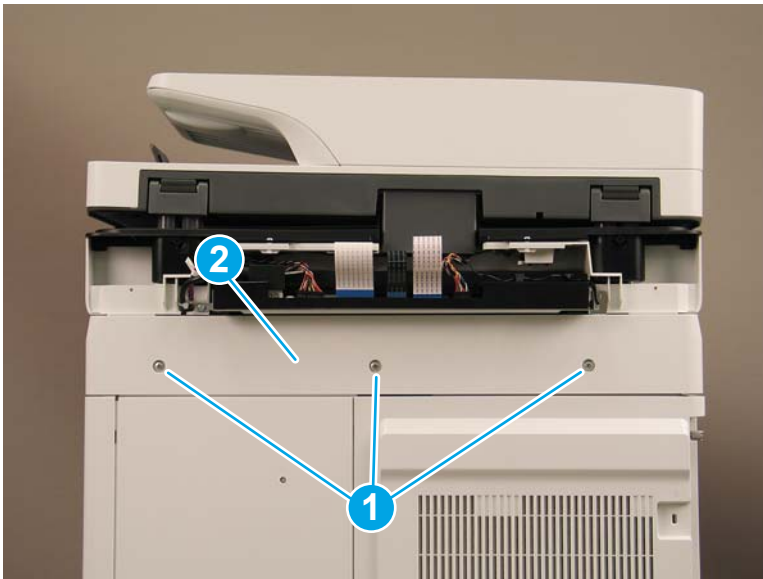

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-334 Remove the formatter cover

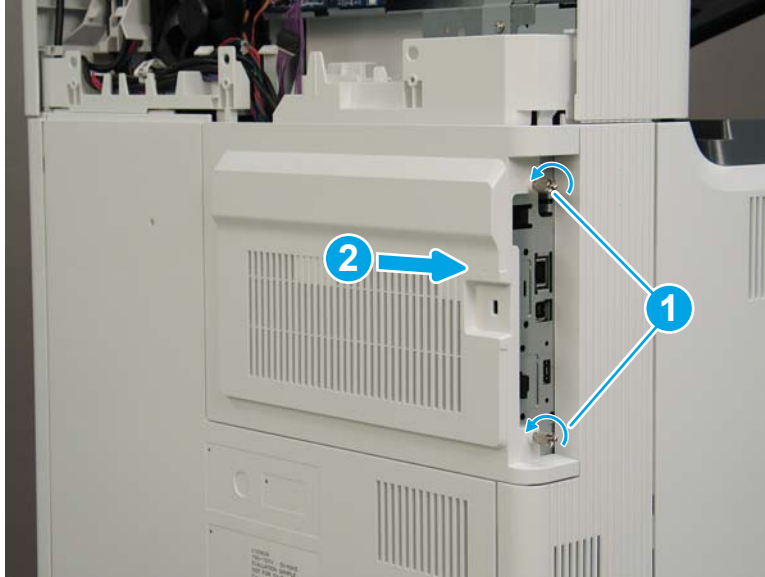

5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.


Figure 1-335 Cable routing for M681dh, M681f, and Flow M681f





6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-336 Disconnect two connectors

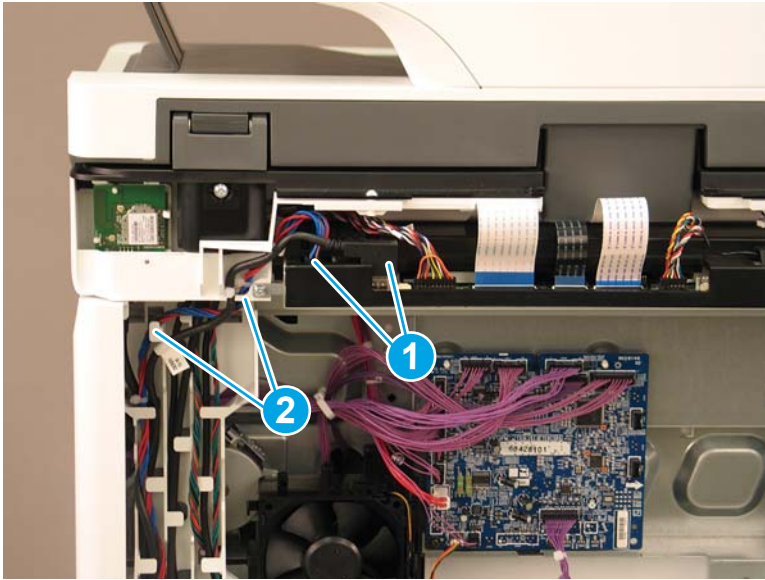


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-337 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

**Figure 1-338** Disconnect the wireless connector

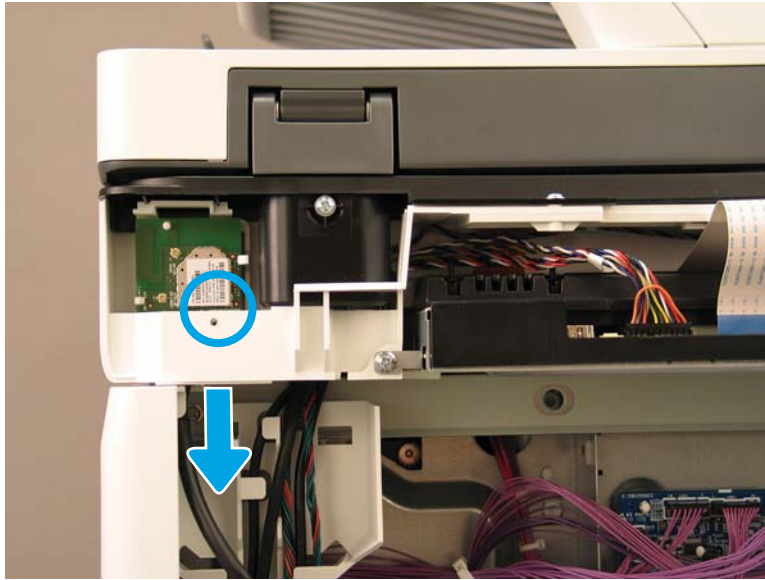


9. Release all of the cables from the cable guides (callout 1).

**Figure 1-339** Release the cables

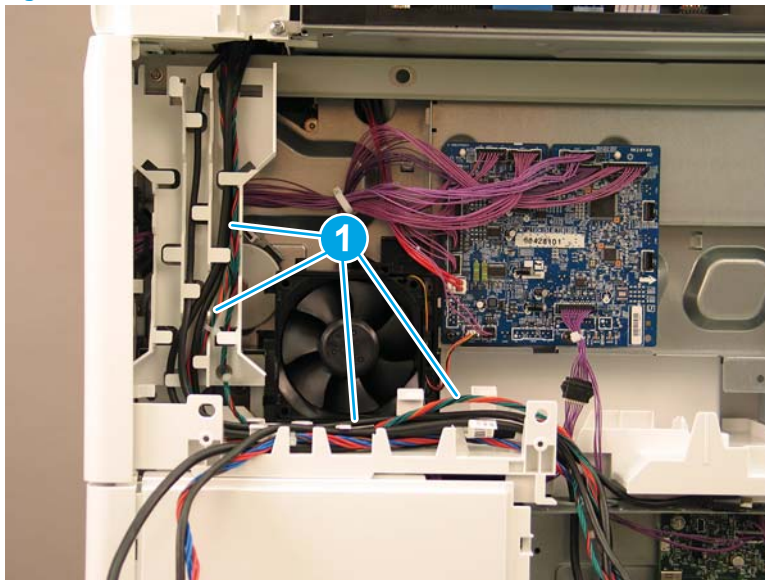


10. At the back of the printer, remove four screws (callout 1).

Figure 1-340 Remove four screws

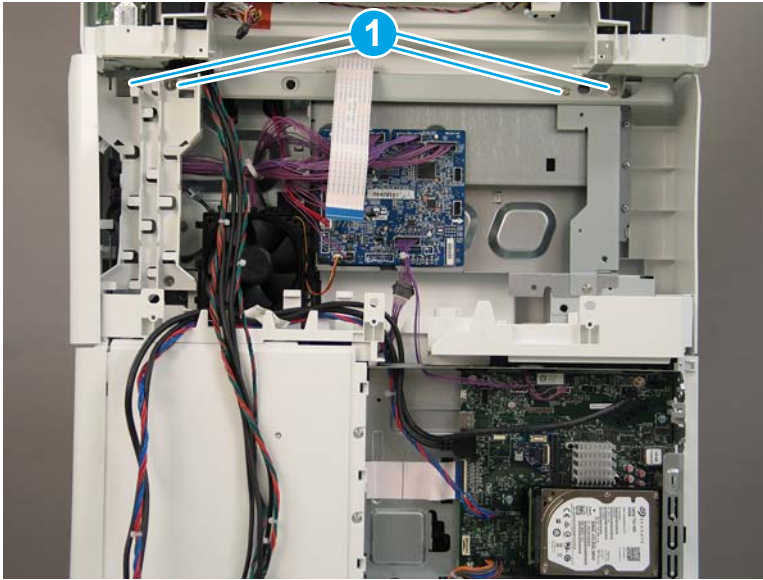

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-341 Remove three screws

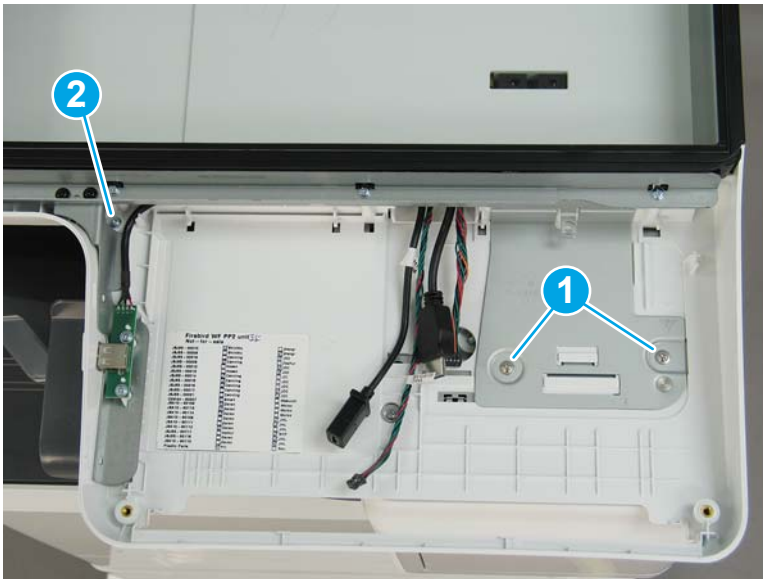



12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-342** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-343** Remove the wireless card

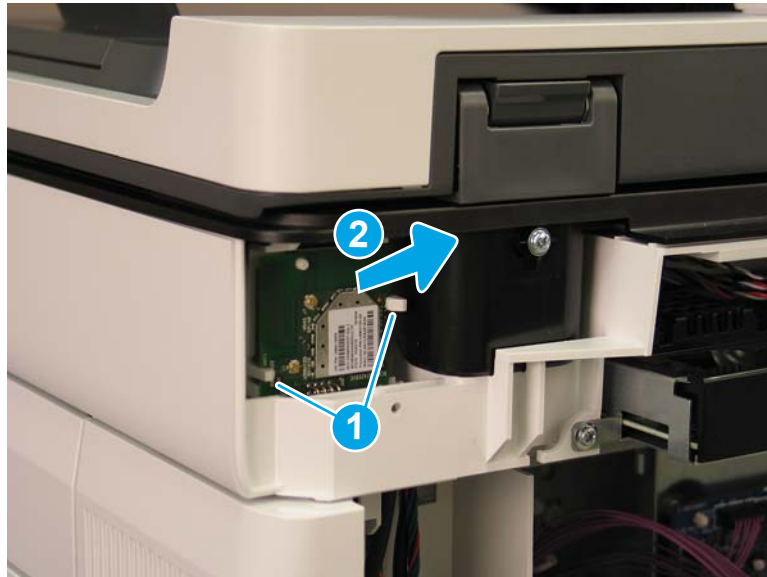


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-344 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-345 Reinstall the wireless card

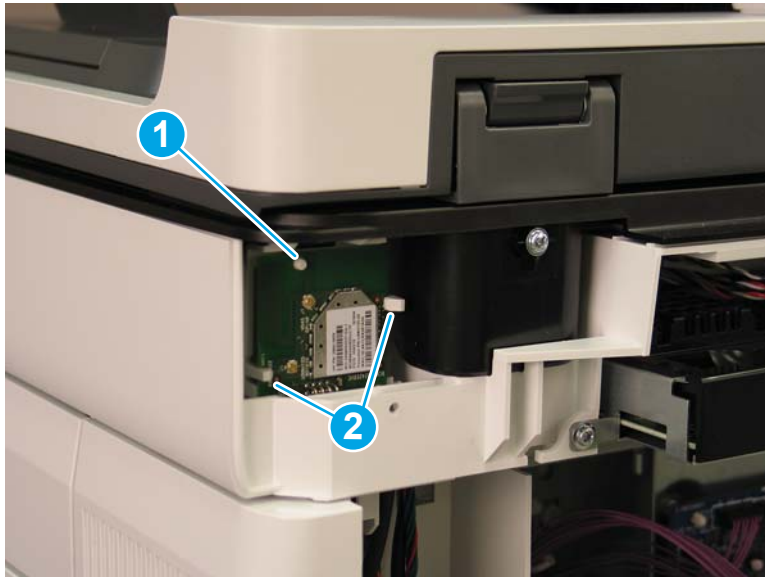

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).


**Figure 1-346** Install the SCB cables

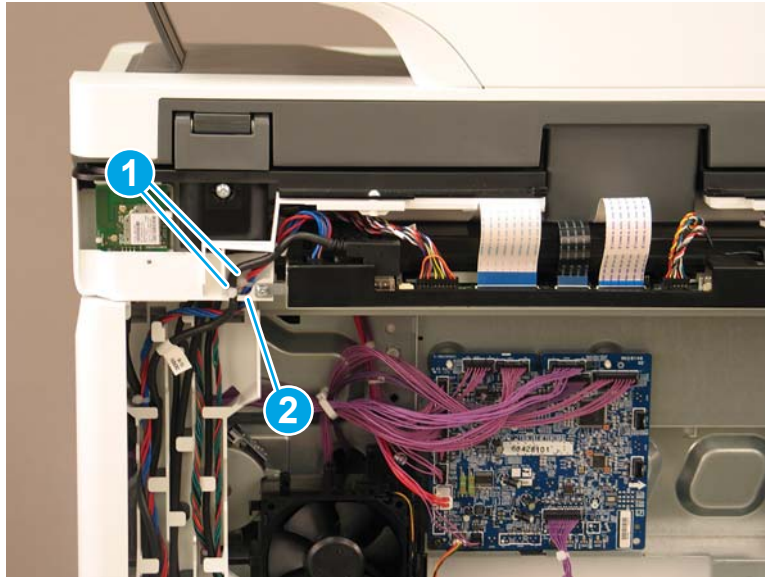

**Step 4: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-347** Remove the face-down front cover

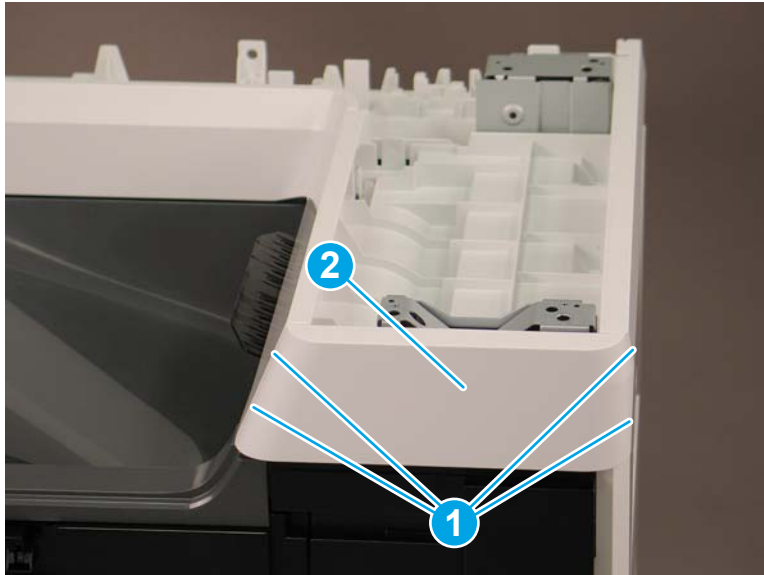


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

Figure 1-348 Install the cover

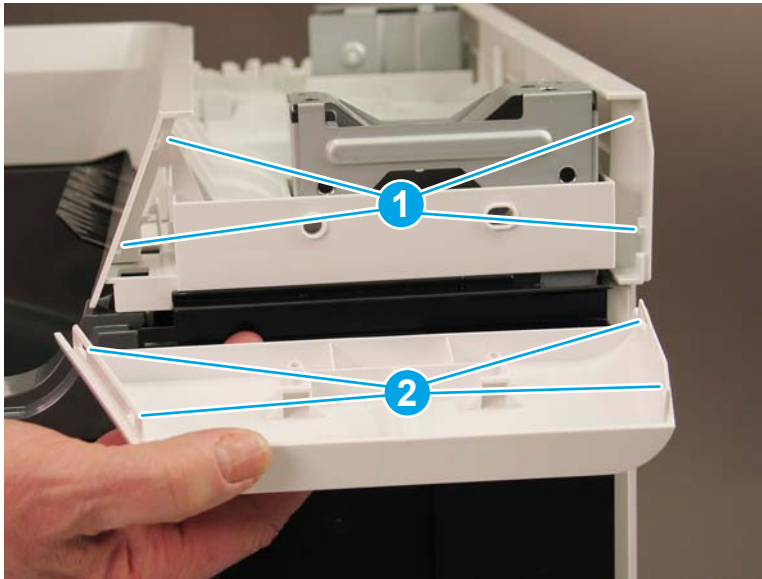


### Step 5: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-349 Remove the top cover

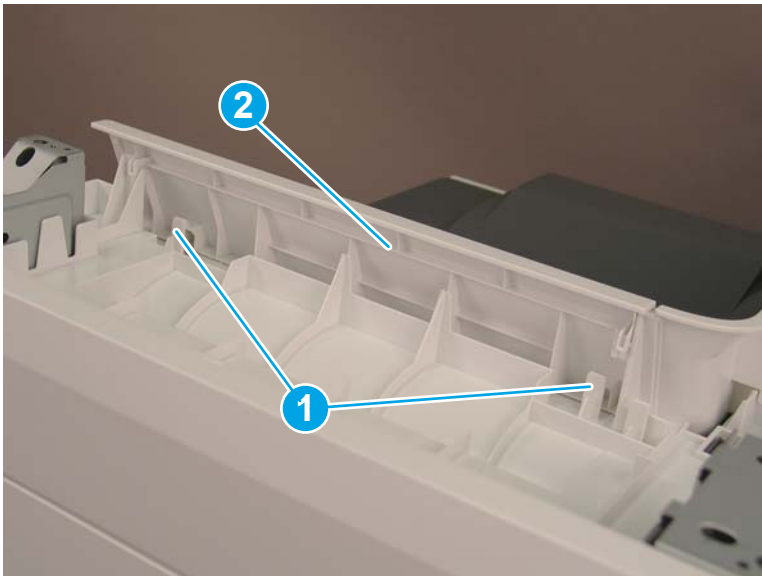

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 5: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh).


[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number	
--	--

---

RCS-1843-000CN
----------------

Right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)
--

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681z/Flow M682z/Flow E67660z)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-350 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-351 Release five tabs






3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-352 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-353 Disconnect the keyboard flat cable

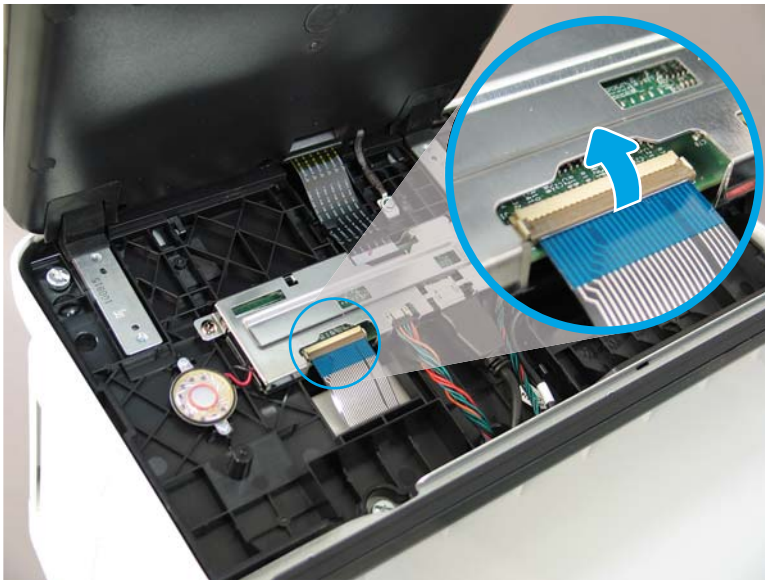



5. Slide the keyboard tray out until it stops.

Figure 1-354 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-355 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

**Figure 1-356** Remove the keyboard



**Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

**Figure 1-357** Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-358 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-359 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-360** Disconnect the keyboard flat cable (keyboard models only)

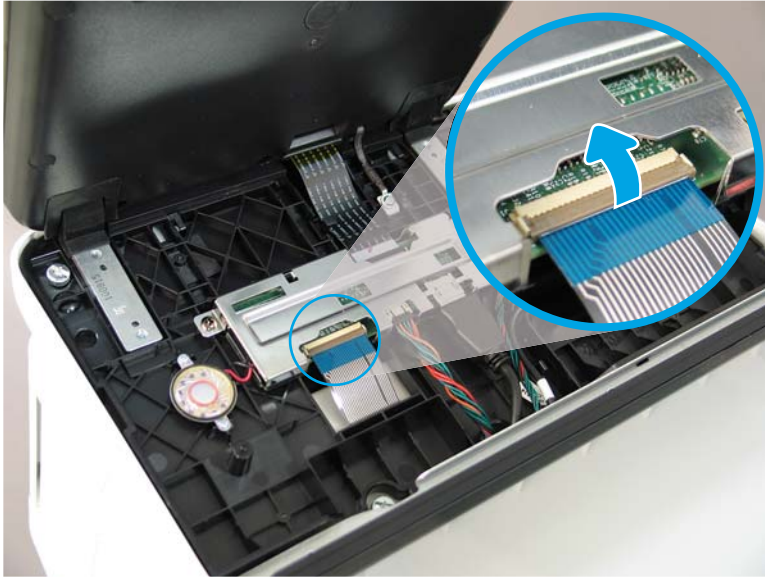


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-361** Disconnect connectors

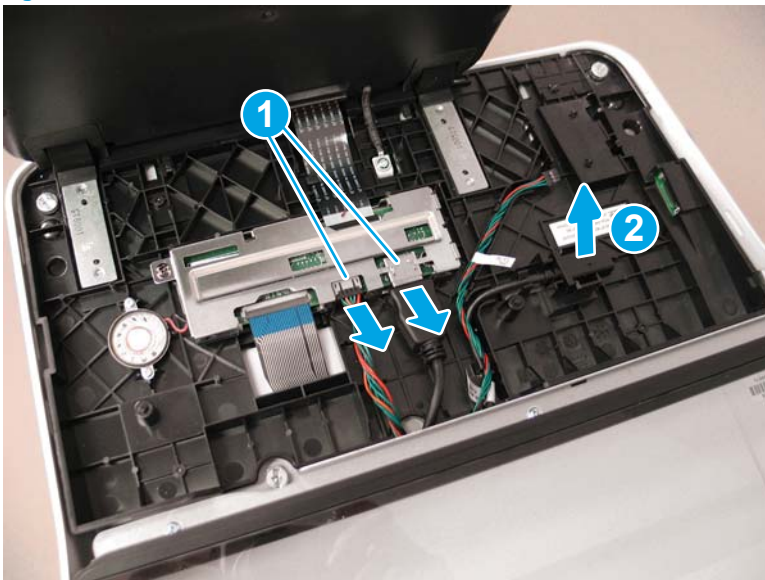


6. Remove three thumbscrews (callout 1).

Figure 1-362 Remove three thumbscrews

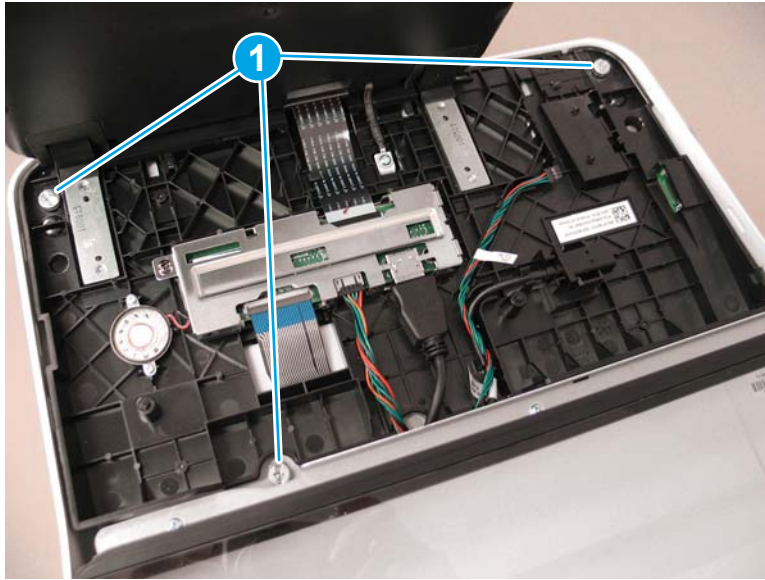

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


Figure 1-363 Remove the control panel

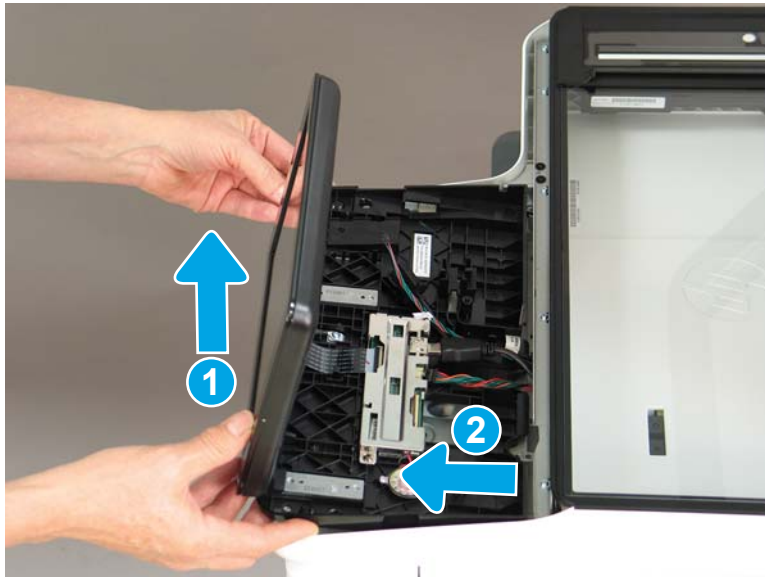

### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-364 Remove the SCB cover

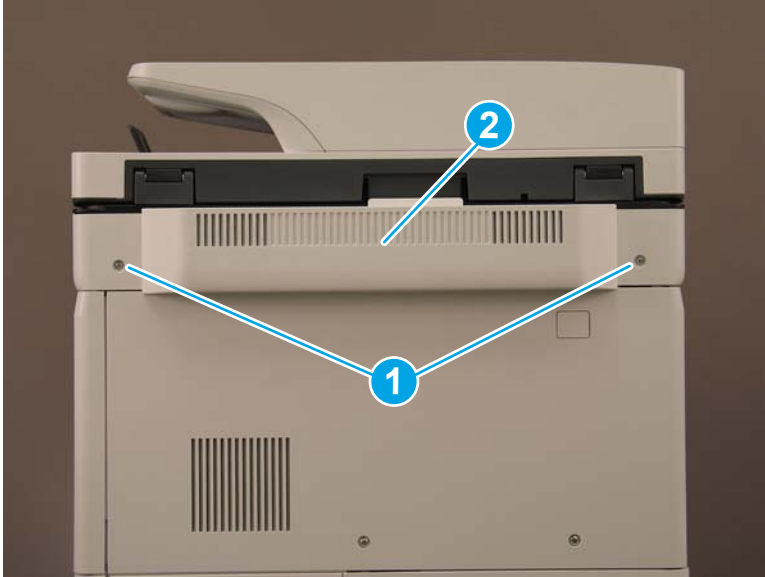

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).


Figure 1-365 Remove the small cover






- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-366 Remove the stapler/stacker rear cover

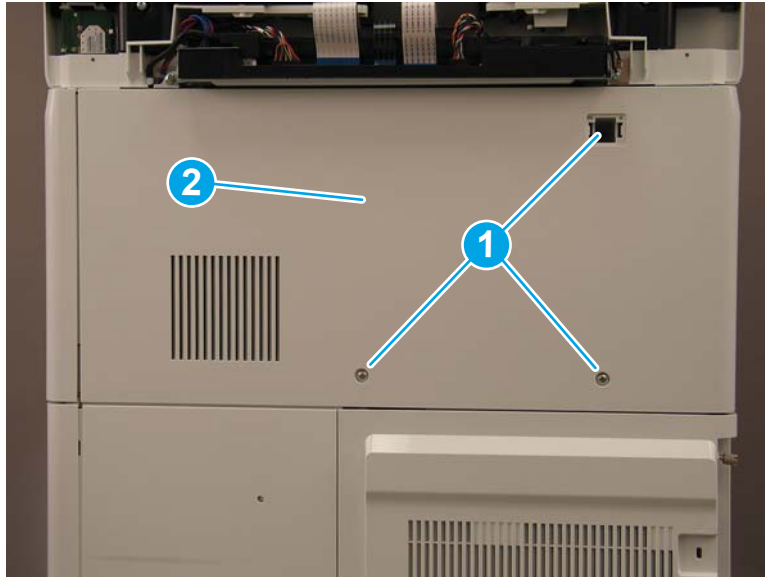


- 3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-367 Remove the upper rear cover

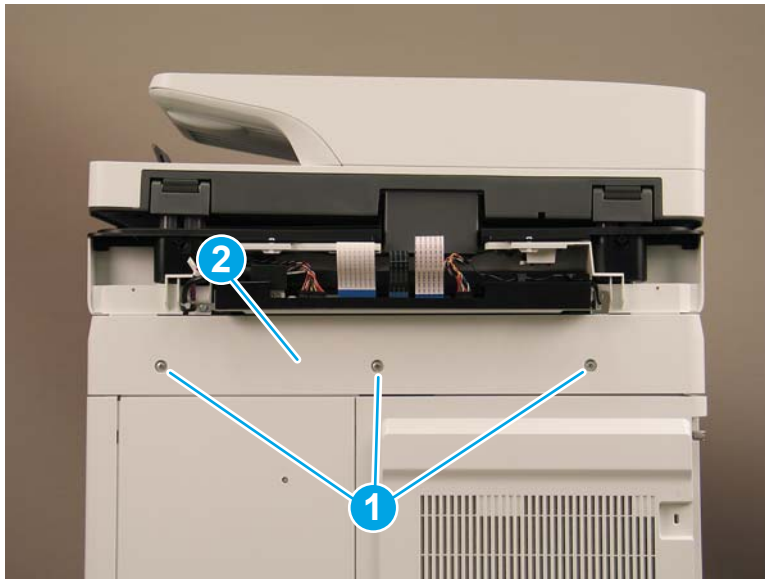


4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-368** Remove the formatter cover

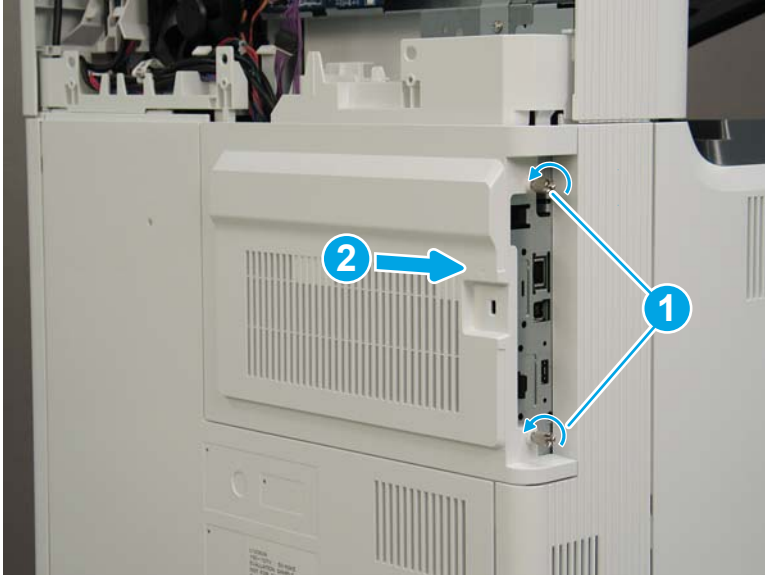

5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.


**Figure 1-369** Cable routing for M681dh, M681f, and Flow M681f

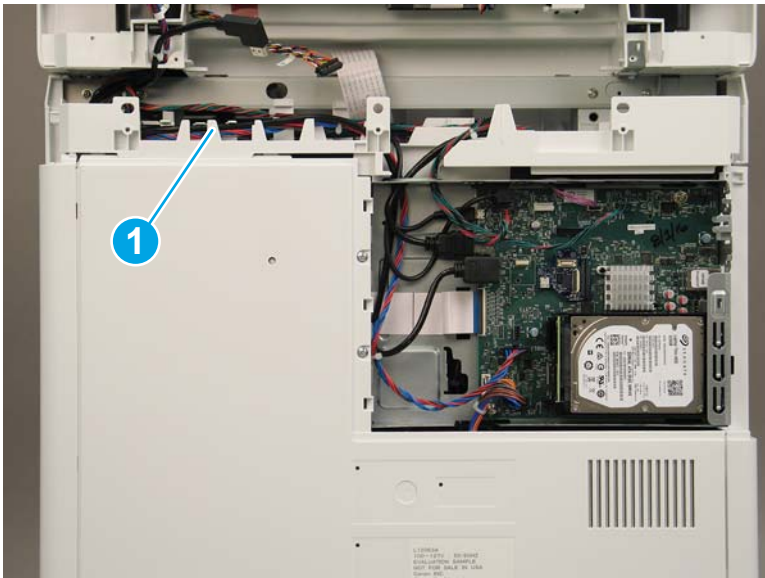



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-370 Disconnect two connectors

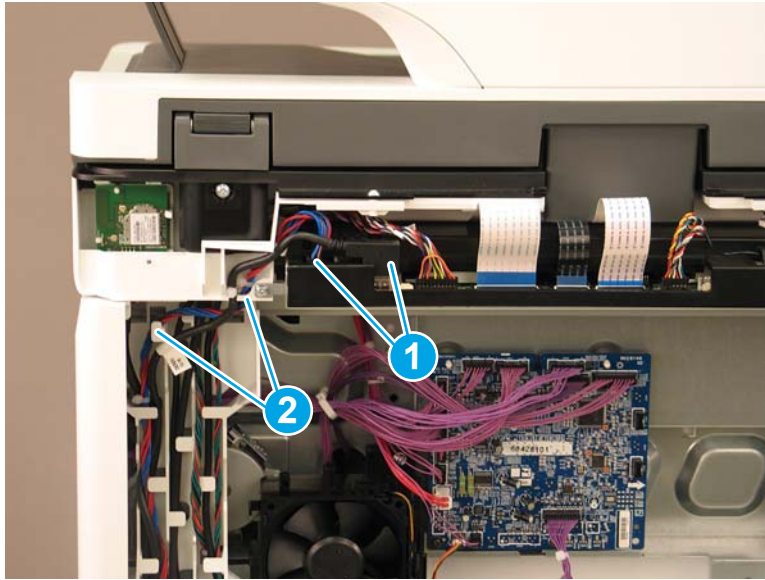


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-371 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

**Figure 1-372** Disconnect the wireless connector

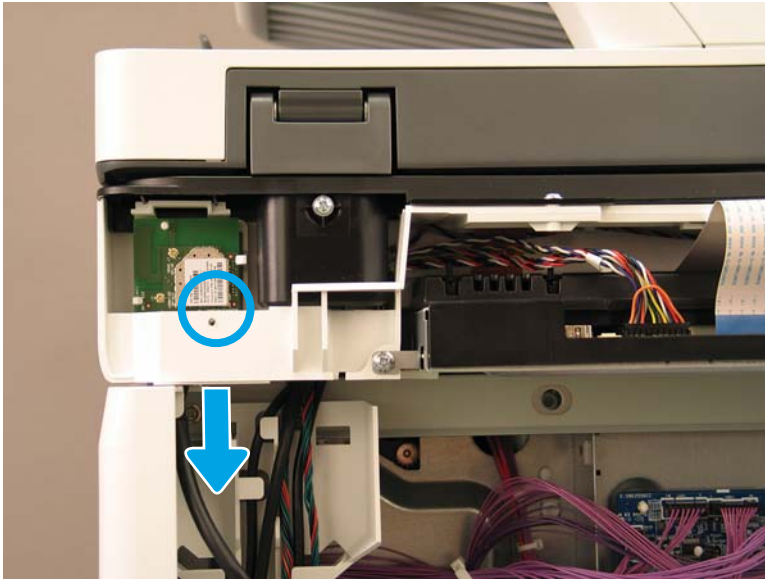


9. Release all of the cables from the cable guides (callout 1).

**Figure 1-373** Release the cables

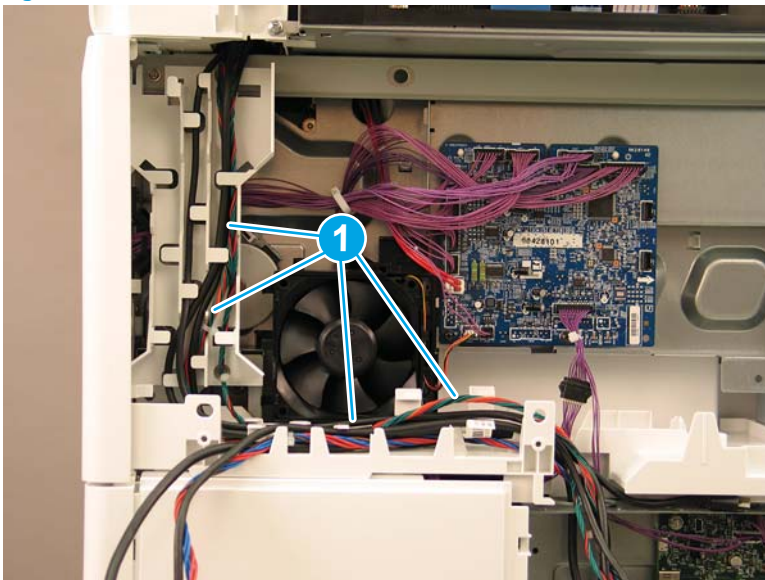


10. At the back of the printer, remove four screws (callout 1).

Figure 1-374 Remove four screws

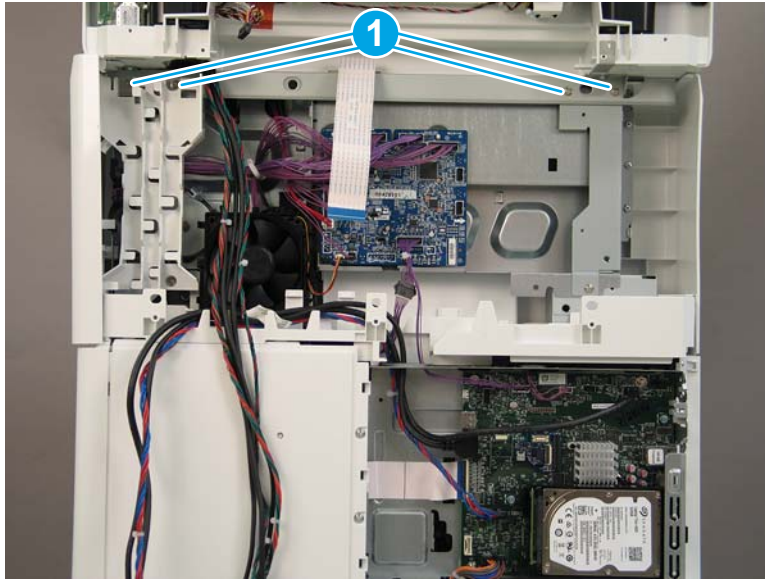

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-375 Remove three screws

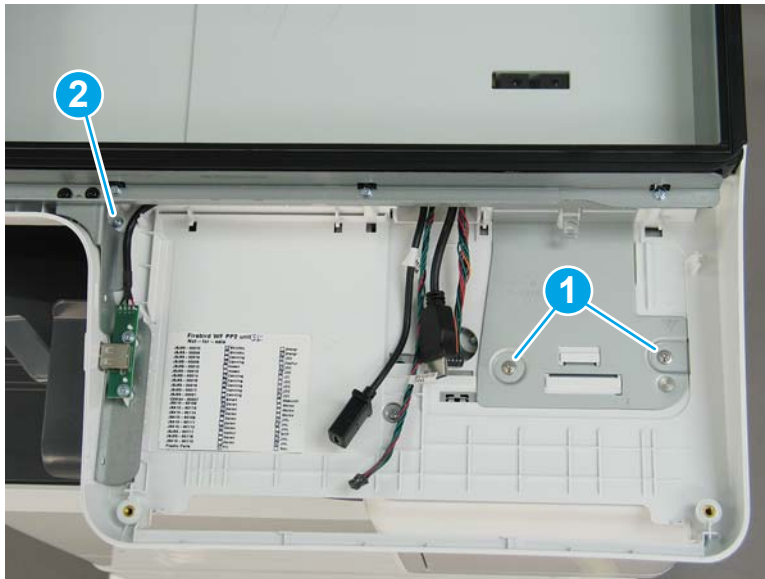

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-376** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-377** Remove the wireless card

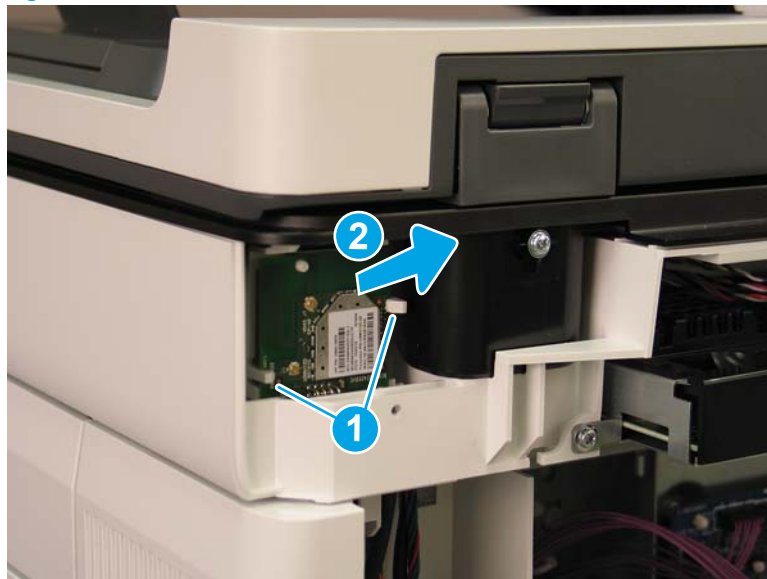


- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-378** Connect the wireless card connector



- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).


**Figure 1-379** Reinstall the wireless card

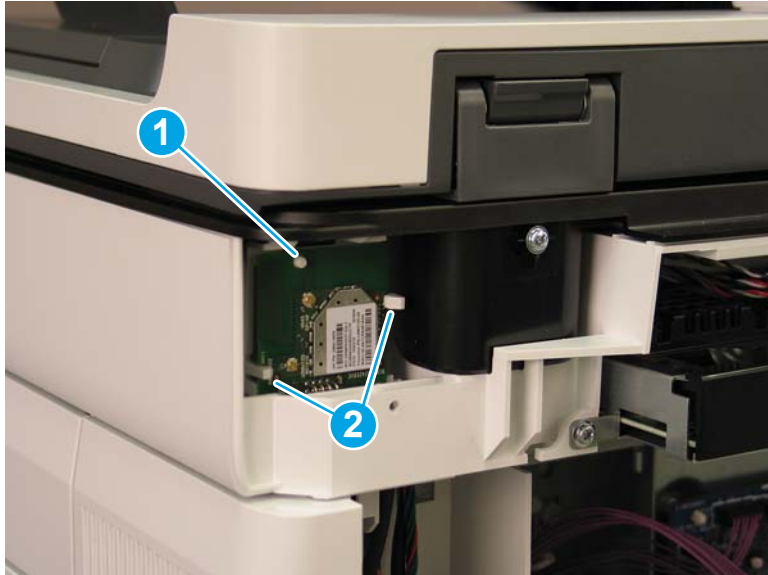



- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).


**Figure 1-380** Install the SCB cables

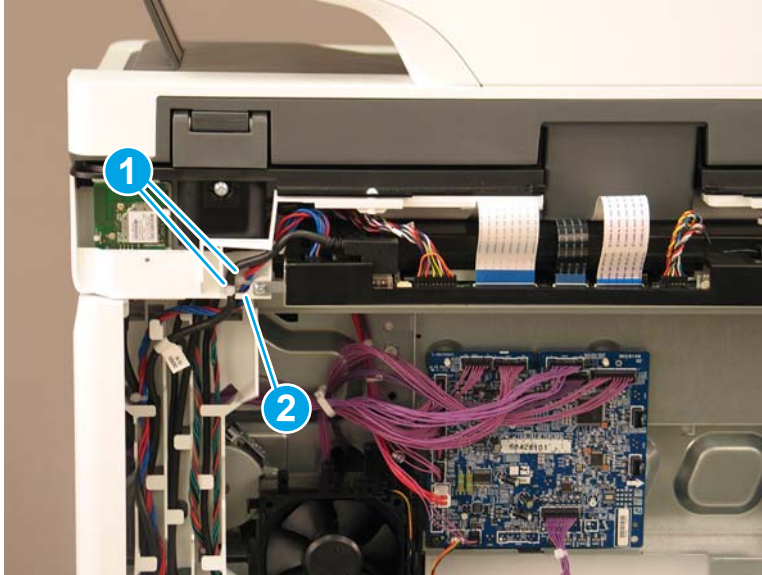

**Step 4: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-381** Remove the face-down front cover

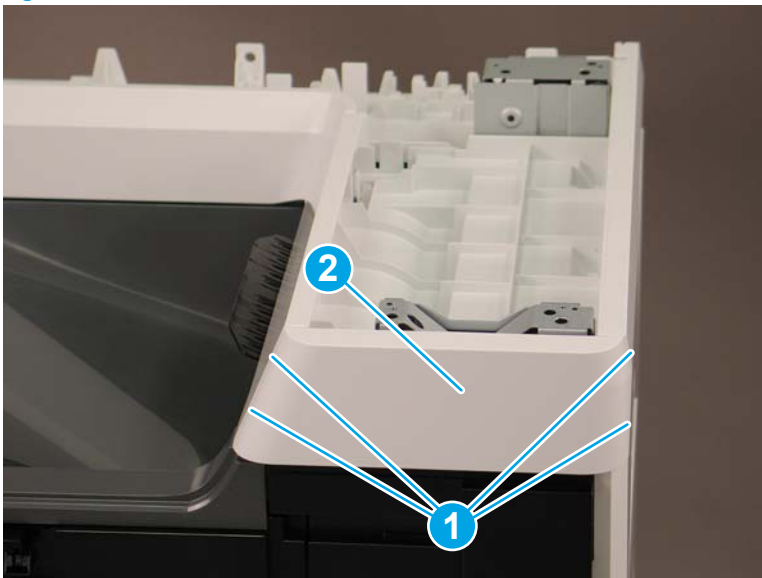


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

Figure 1-382 Install the cover

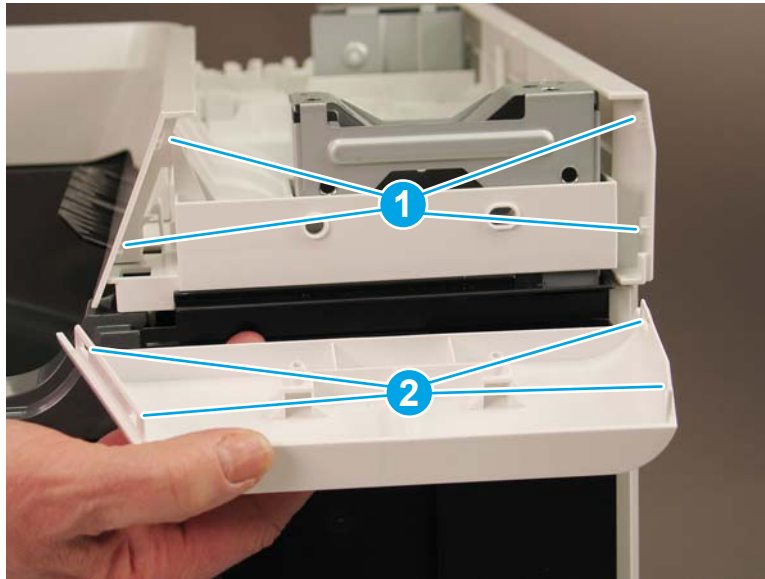


### Step 5: Remove the right cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-383 Remove the right cover

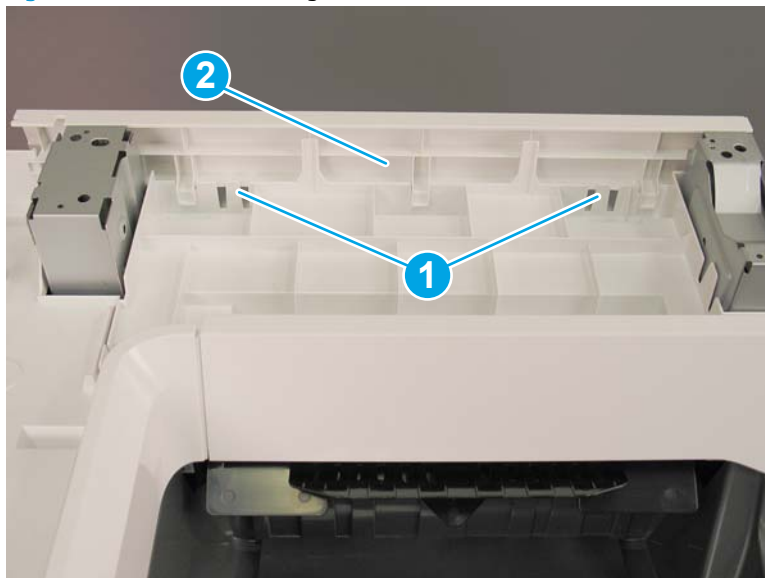

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660z\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 5: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6 Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7 Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the top front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh).

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Top front cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number	
RC4-6860-000CN	Front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660z)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-384** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

**Figure 1-385** Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-386 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-387 Disconnect the keyboard flat cable

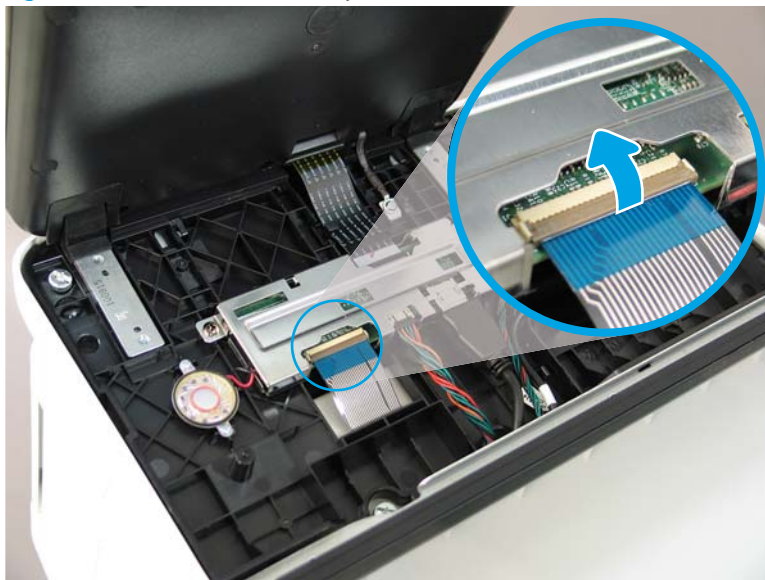

5. Slide the keyboard tray out until it stops.

**Figure 1-388** Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

**Figure 1-389** Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-390 Remove the keyboard



**Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-391 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-392 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.


Figure 1-393 Remove the cover






4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard fl a cable.

**Figure 1-394** Disconnect the keyboard fl a cable (keyboard models only)

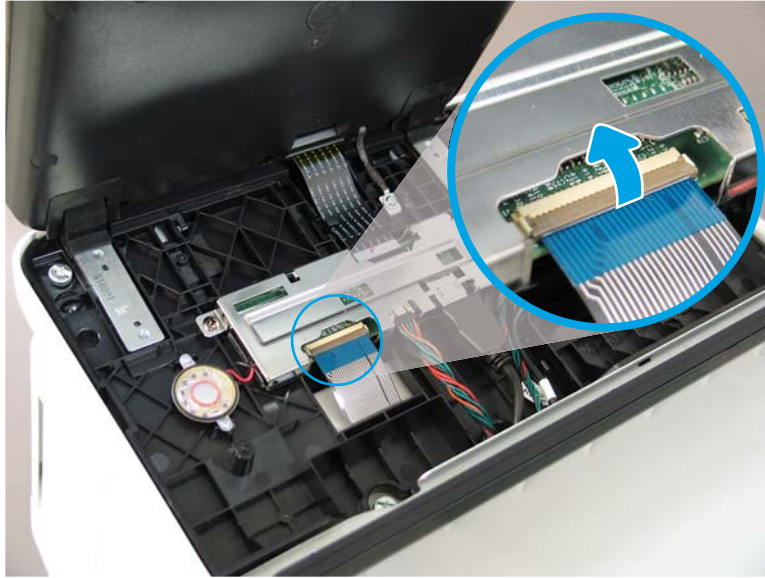


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-395** Disconnect connectors

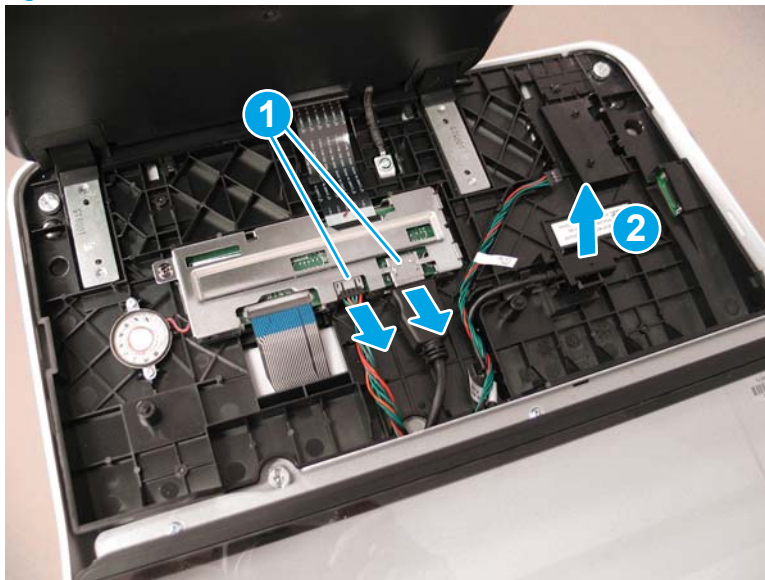


6. Remove three thumbscrews (callout 1).

Figure 1-396 Remove three thumbscrews

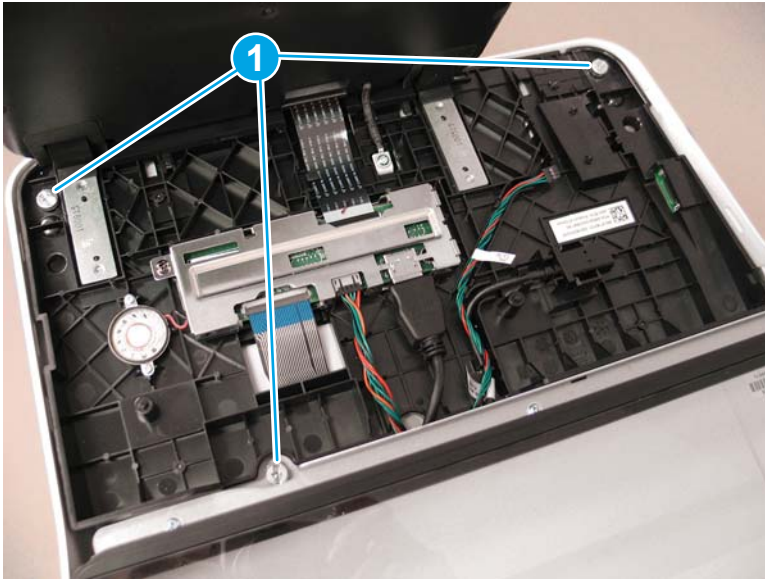

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-397 Remove the control panel

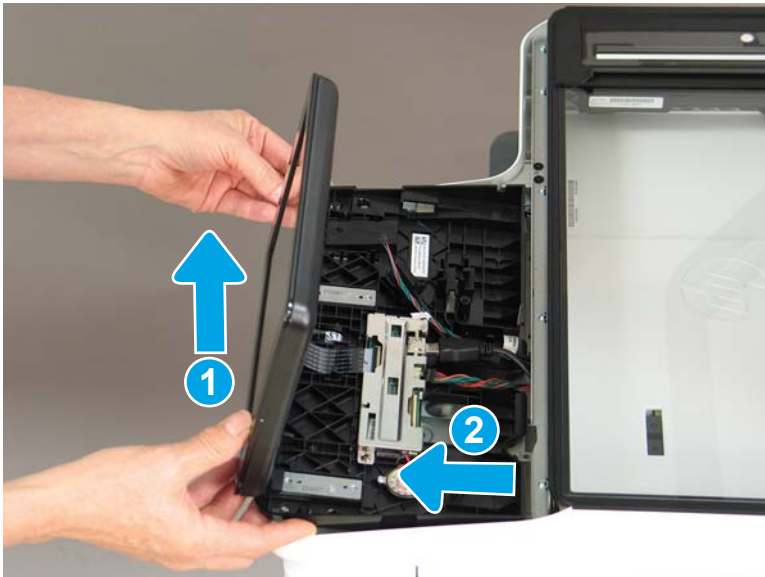


### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).



Figure 1-398 Remove the SCB cover

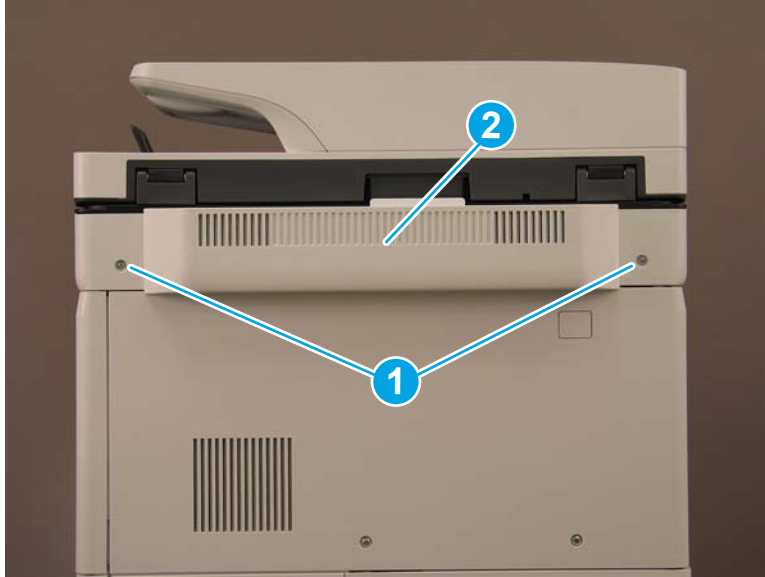


2. Flow M681z and Flow M682z models only: Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-399 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-400 Remove the stapler/stacker rear cover

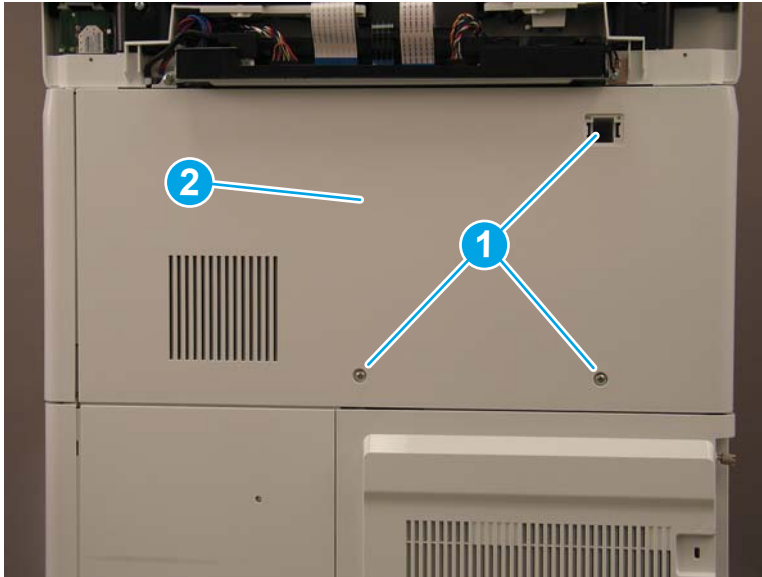


- 3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-401 Remove the upper rear cover

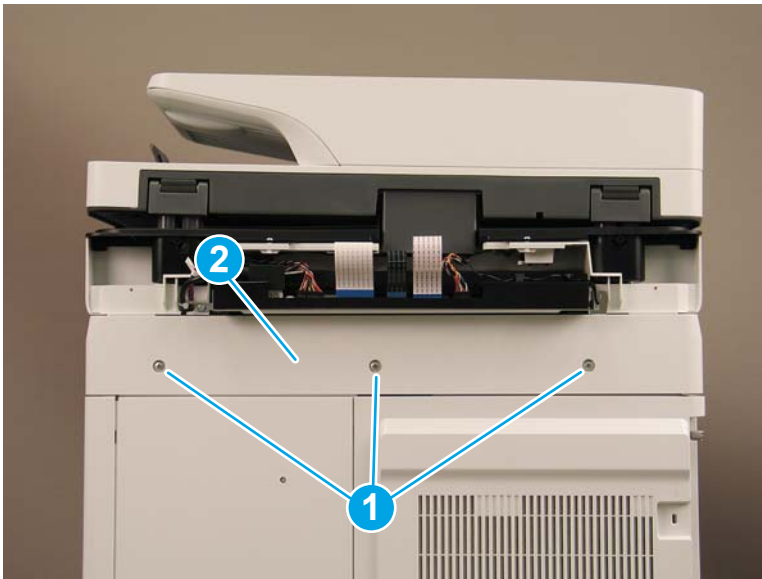

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-402 Remove the formatter cover

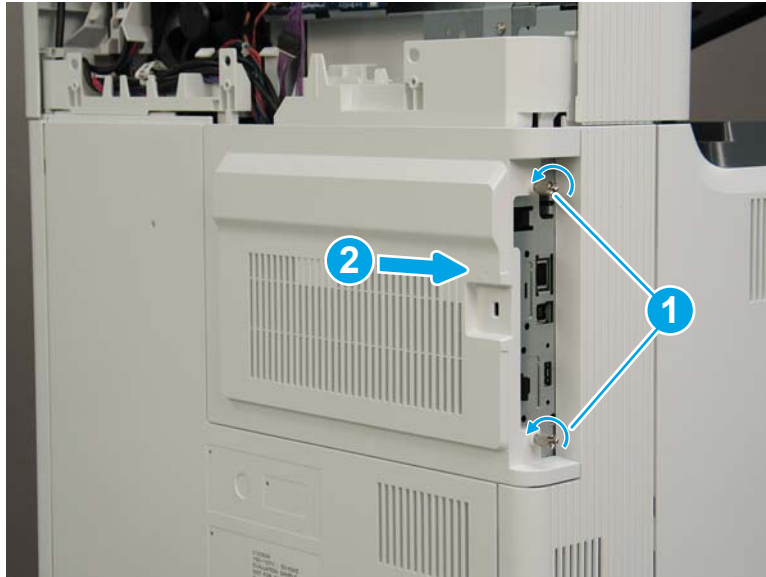


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-403 Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-404 Disconnect two connectors

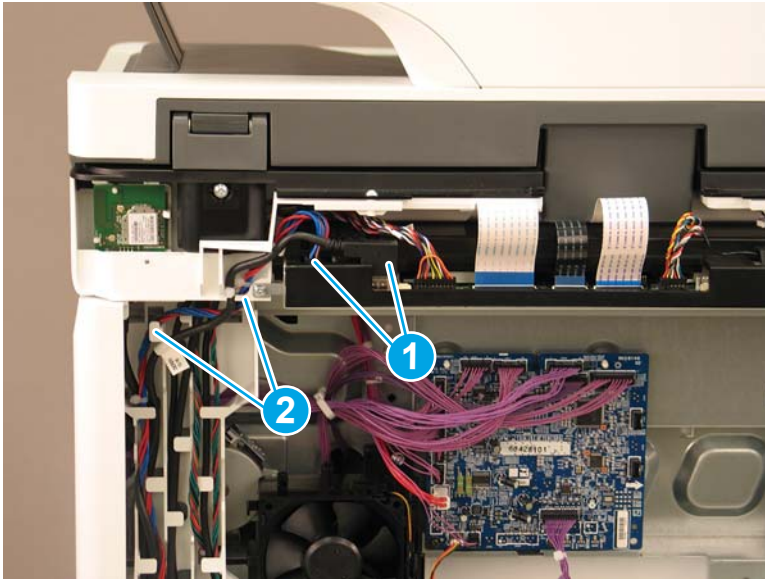


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-405 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-406 Disconnect the wireless connector

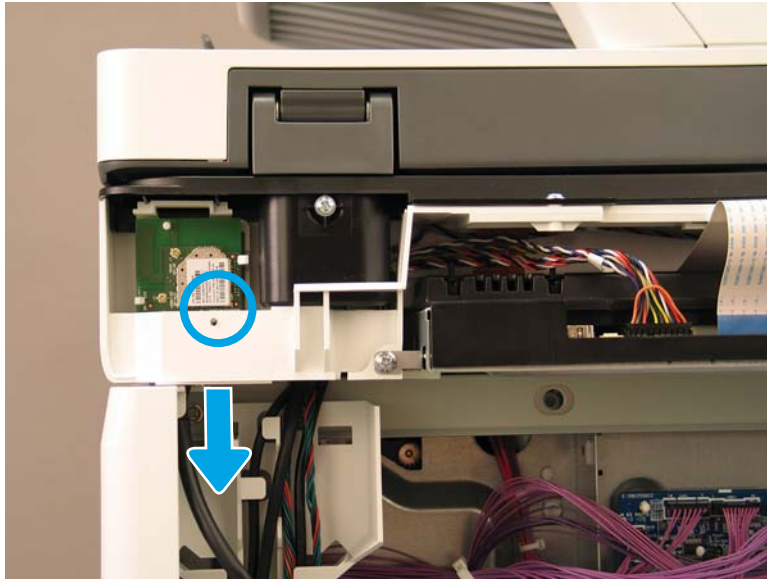

9. Release all of the cables from the cable guides (callout 1).


Figure 1-407 Release the cables

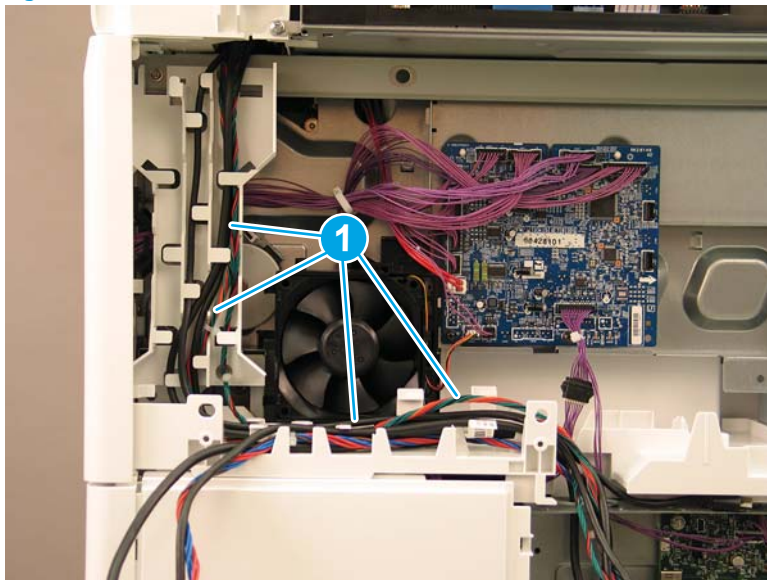




10. At the back of the printer, remove four screws (callout 1).

Figure 1-408 Remove four screws

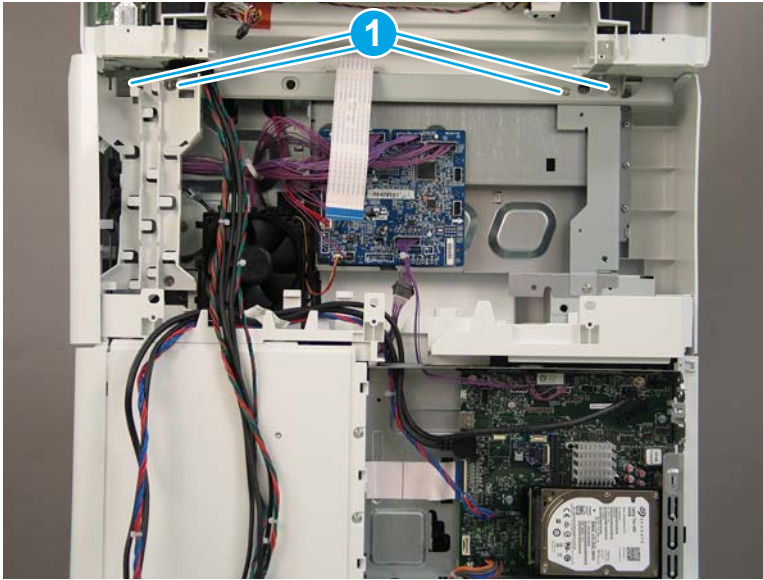

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-409 Remove three screws

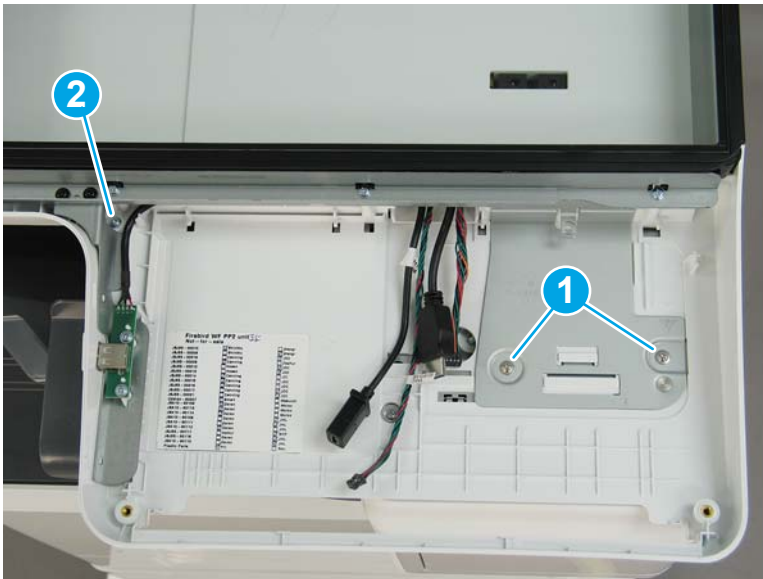

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-410** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-411** Remove the wireless card

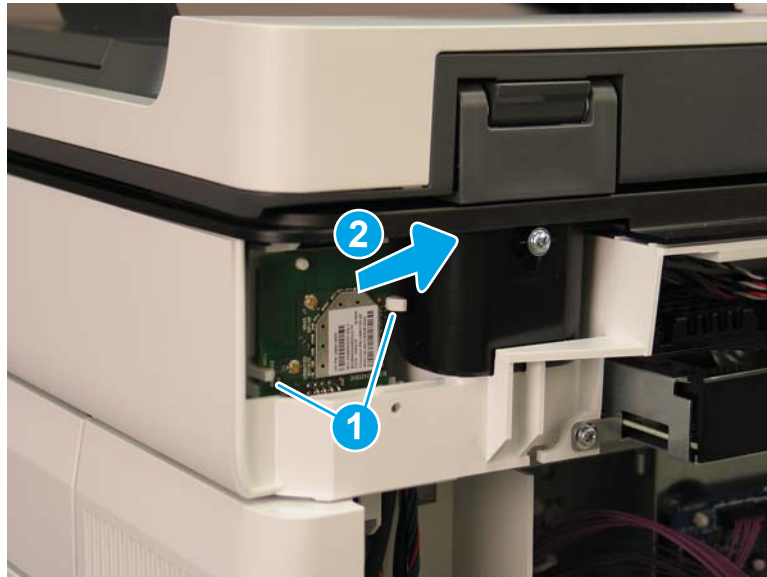


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-412 Connect the wireless card connector



- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).


Figure 1-413 Reinstall the wireless card

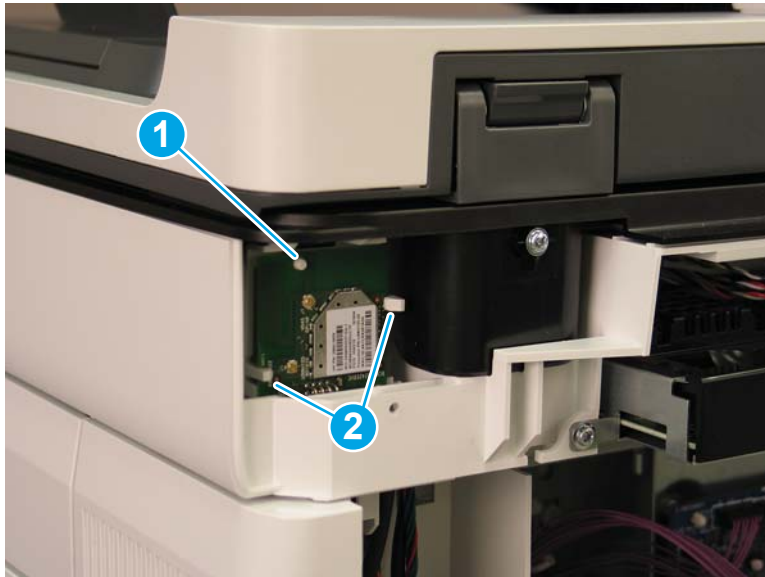



- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).


Figure 1-414 Install the SCB cables

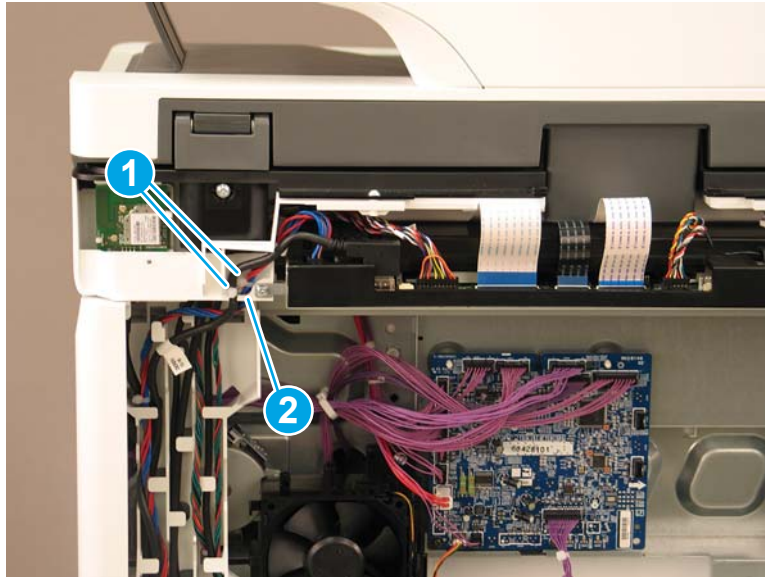

Step 4: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

Figure 1-415 Remove the face-down front cover

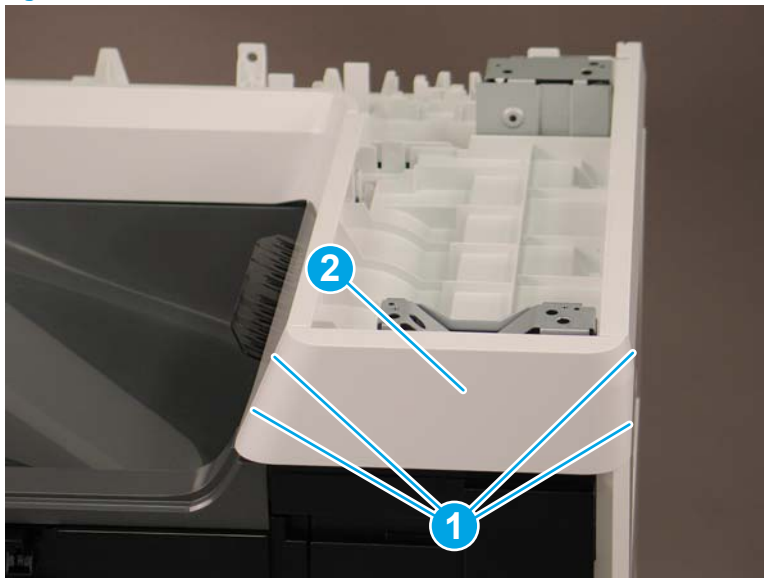


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

Figure 1-416 Install the cover

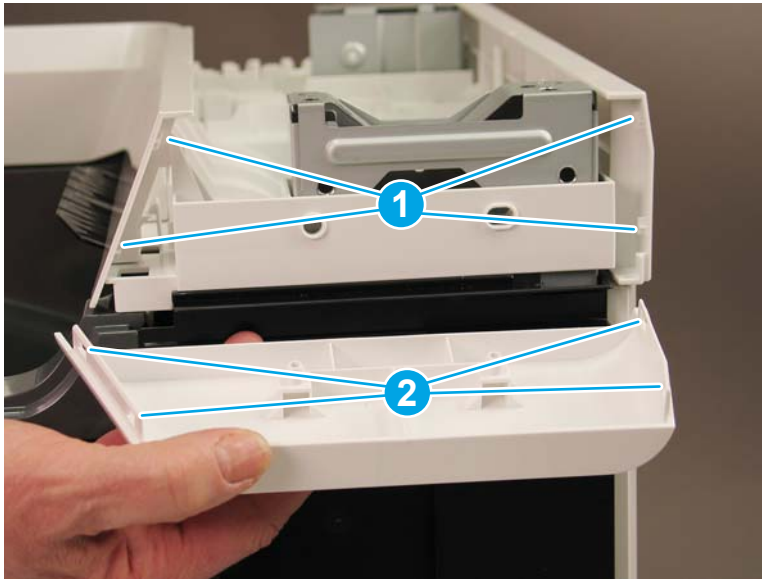


### Step 5: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-417 Remove the top cover

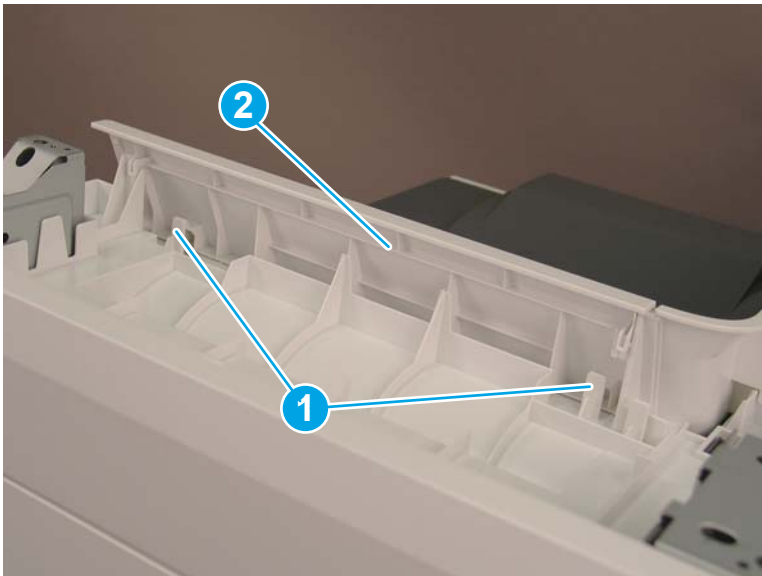

### Step 6 Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


- ▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-418** Remove the front cover

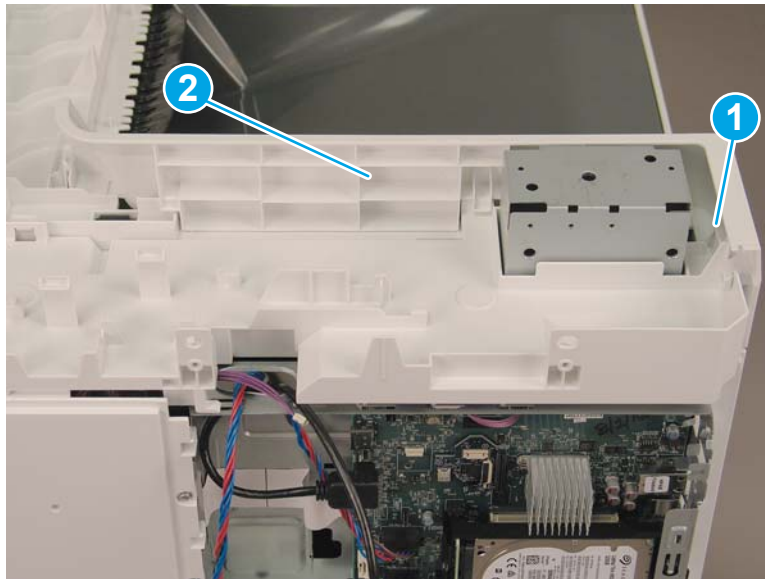

### Step 7 Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the formatter cover](#)
- [Step 5: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh).

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number

---

RC4-6860-000CN

Face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-419** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-420 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-421 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-422 Disconnect the keyboard flat cable

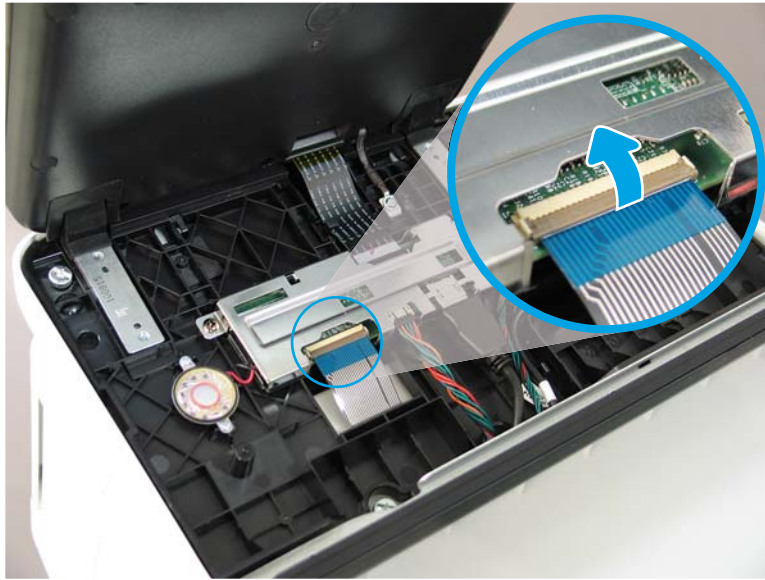

5. Slide the keyboard tray out until it stops.

Figure 1-423 Slide the keyboard tray out





6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-424 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-425 Remove the keyboard



#### Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).



Figure 1-426 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-427 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-428 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-429 Disconnect the keyboard flat cable (keyboard models only)

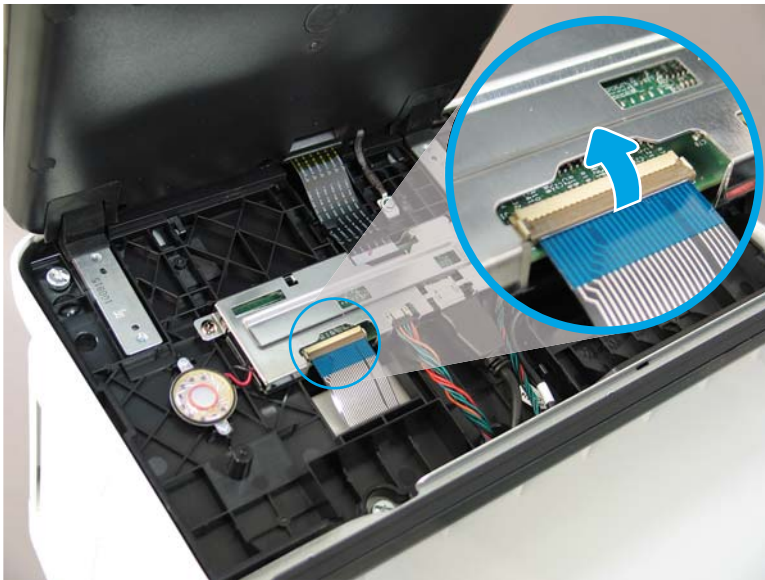


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-430 Disconnect connectors

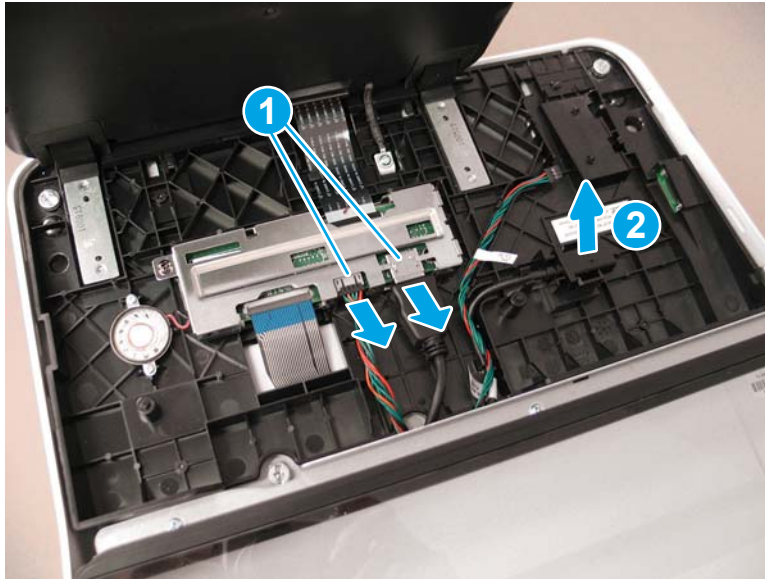


6. Remove three thumbscrews (callout 1).

Figure 1-431 Remove three thumbscrews

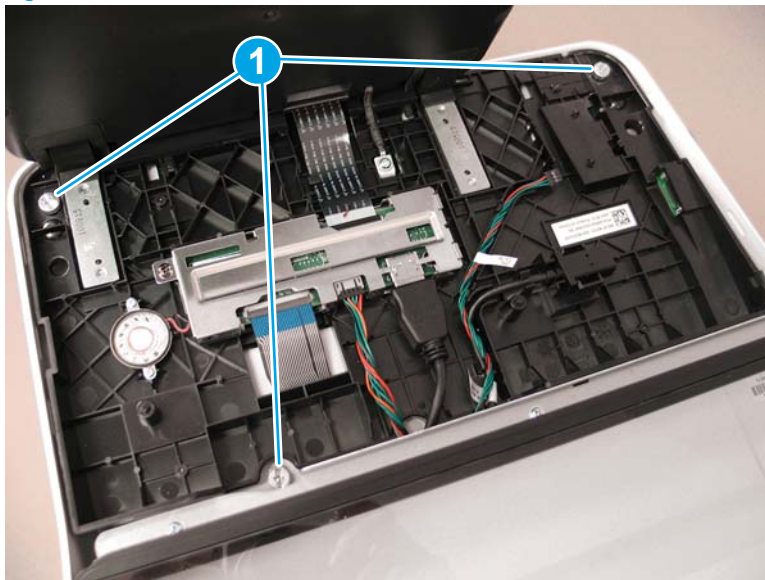

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


Figure 1-432 Remove the control panel

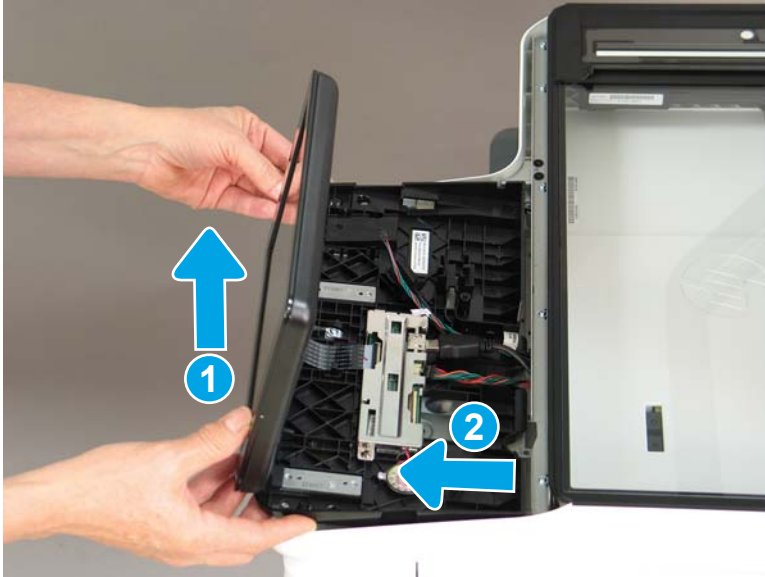

Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-433 Remove the SCB cover

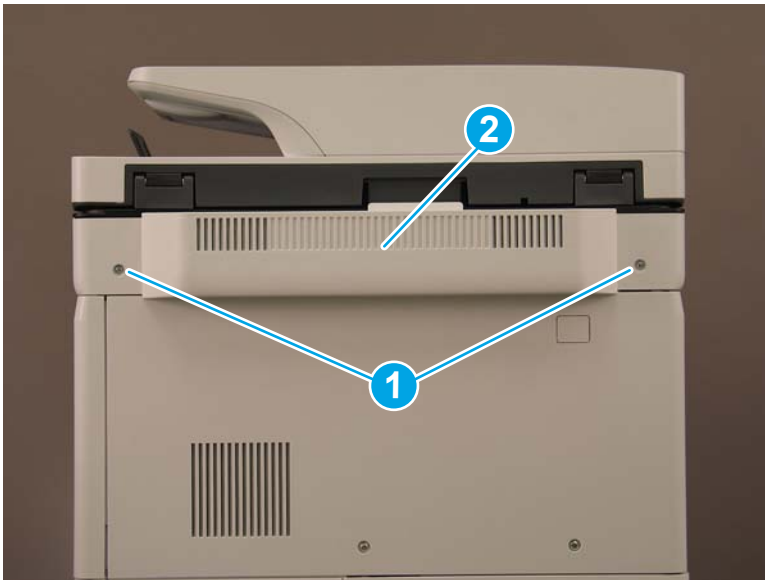


2. Flow M681z and Flow M682z models only: Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-434 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-435 Remove the stapler/stacker rear cover

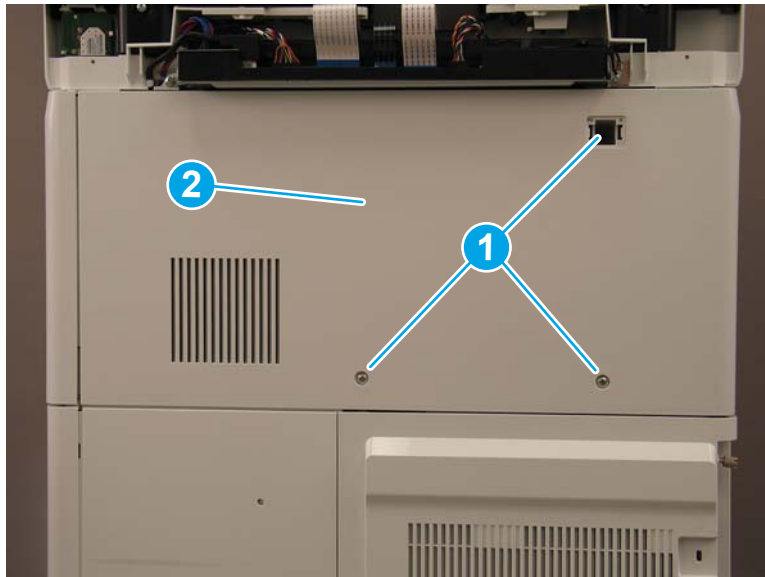


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-436 Remove the upper rear cover

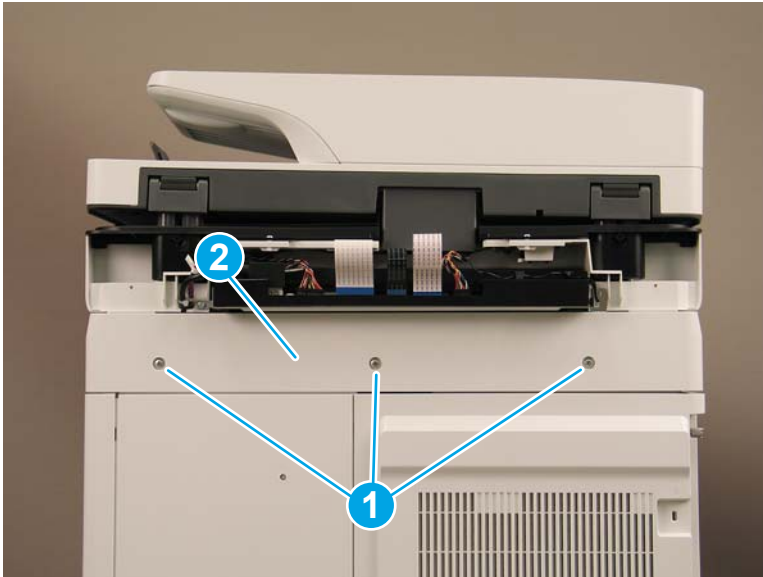

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-437 Remove the formatter cover

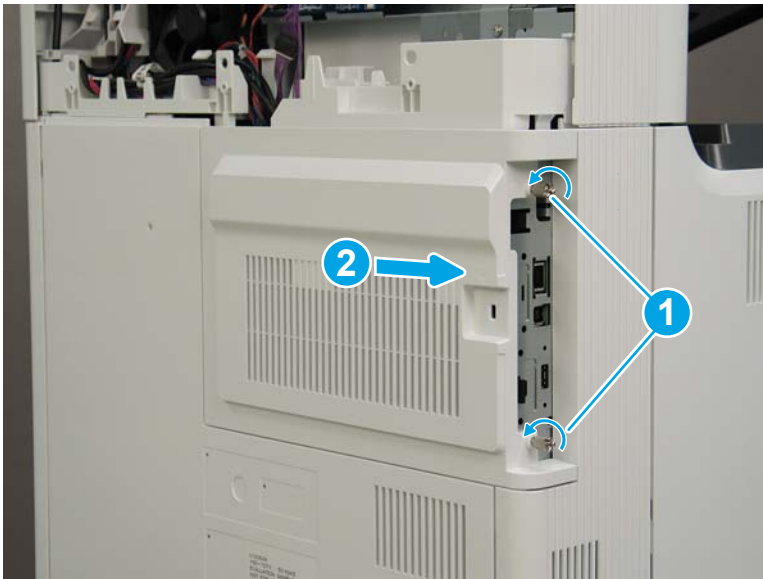




5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-438 Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-439 Disconnect two connectors

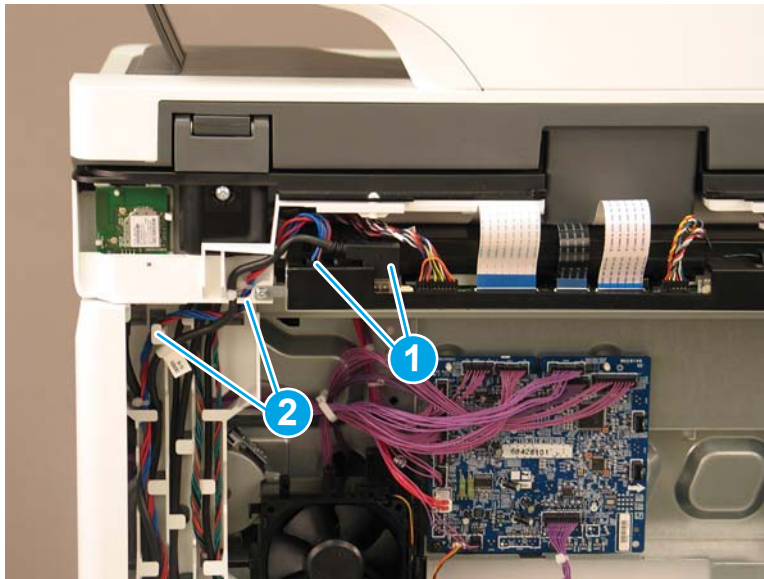


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-440 Disconnect five connectors



8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.


Figure 1-441 Disconnect the wireless connector

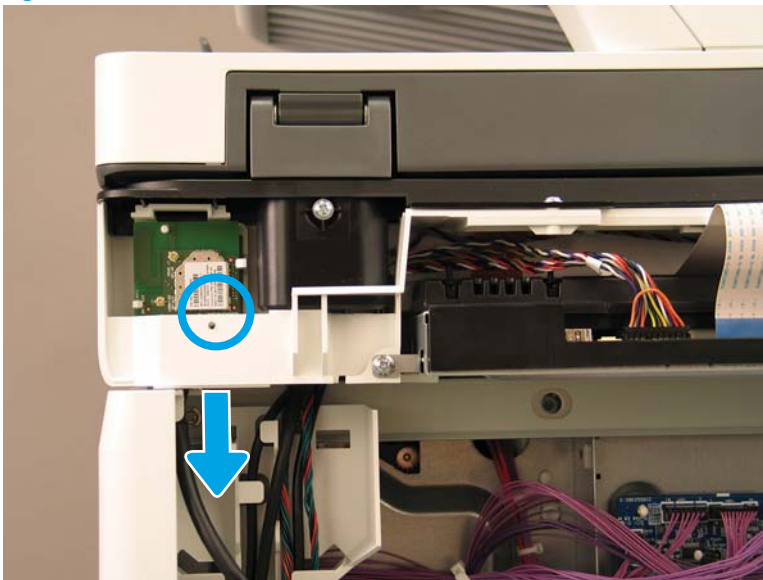




9. Release all of the cables from the cable guides (callout 1).

Figure 1-442 Release the cables

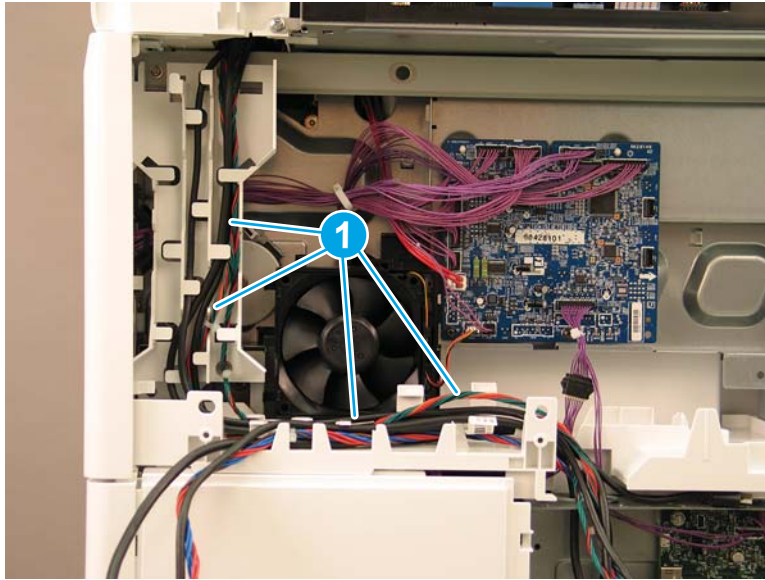


10. At the back of the printer, remove four screws (callout 1).

Figure 1-443 Remove four screws

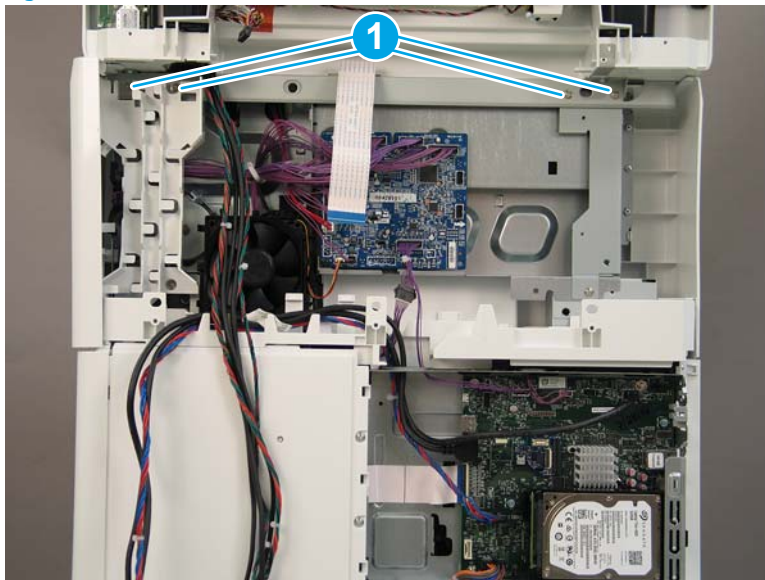

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-444 Remove three screws

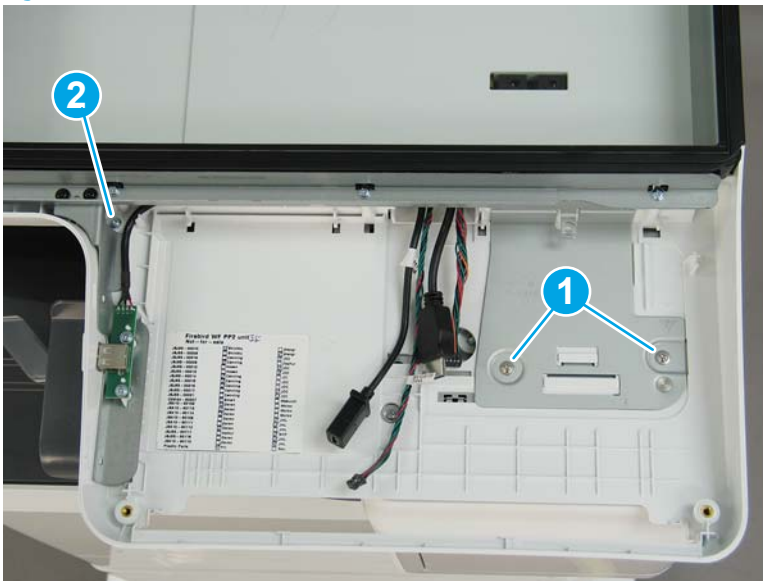

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-445 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-446 Remove the wireless card

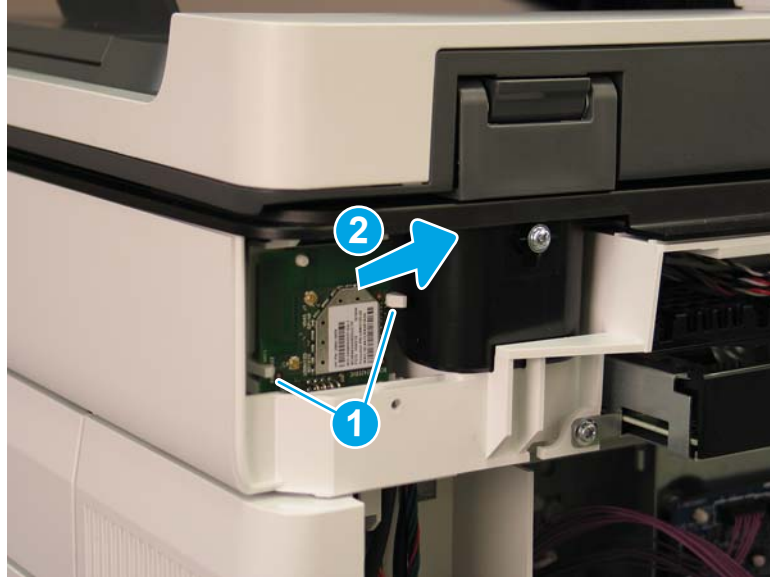


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-447 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-448 Reinstall the wireless card

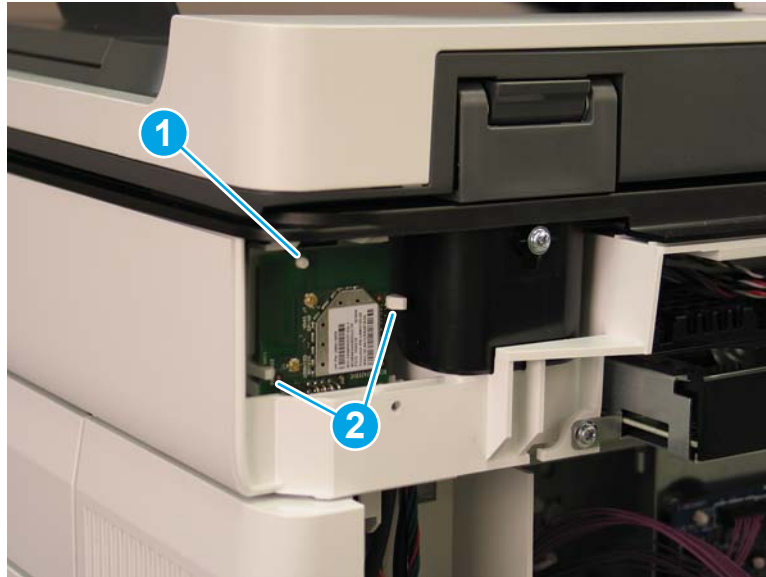

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-449 Install the SCB cables

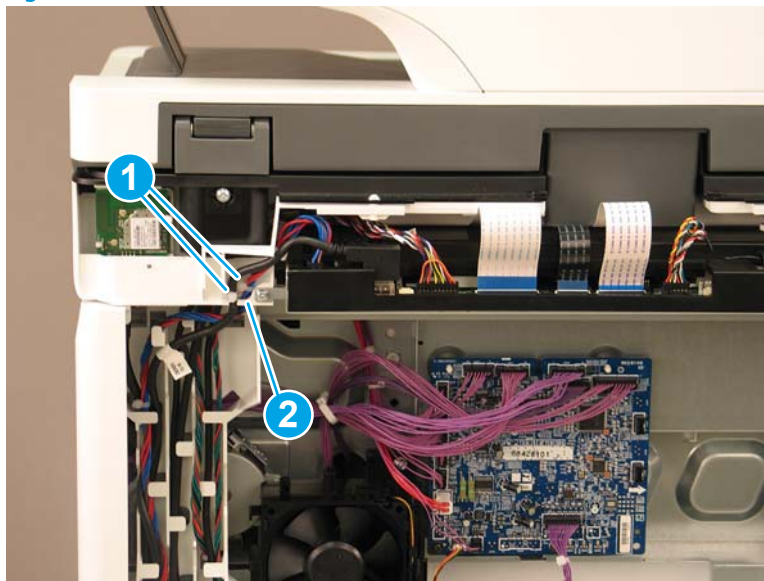

#### Step 4: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-450 Remove the formatter cover

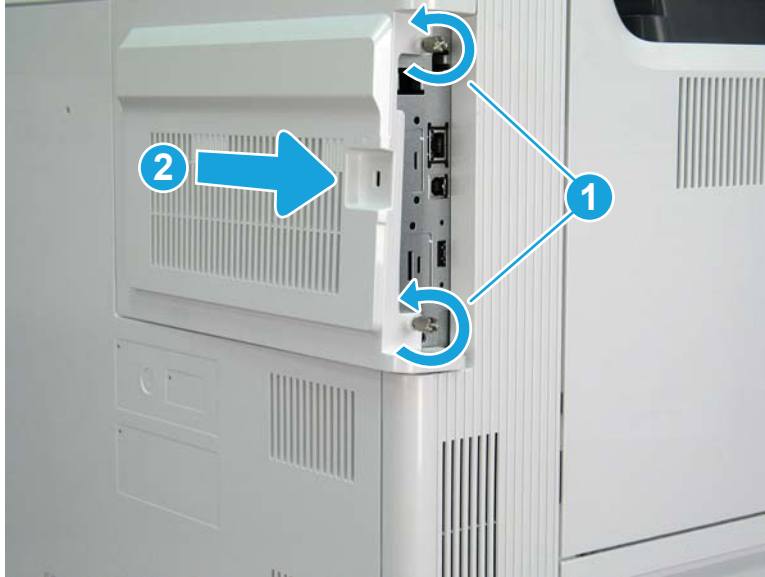

Step 5: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

Figure 1-451 Remove the face-down front cover

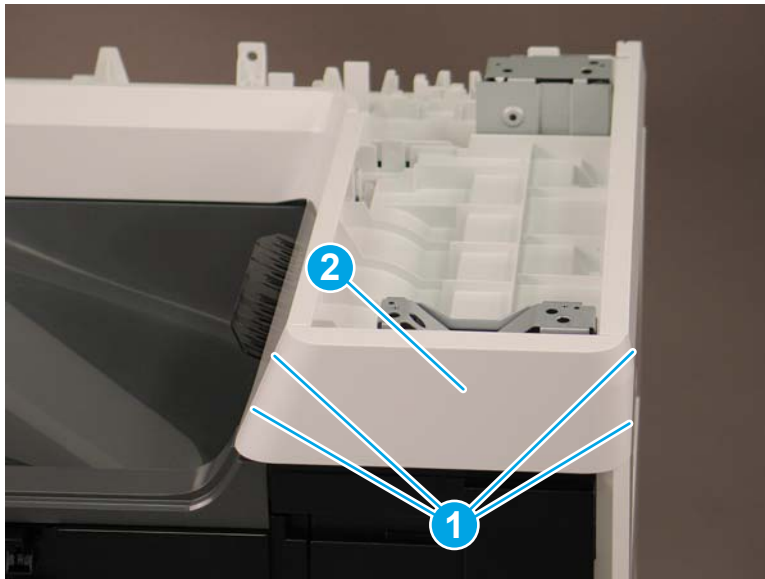

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

**Special installation instructions: Face-down front cover**

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.



Figure 1-452 Install the cover

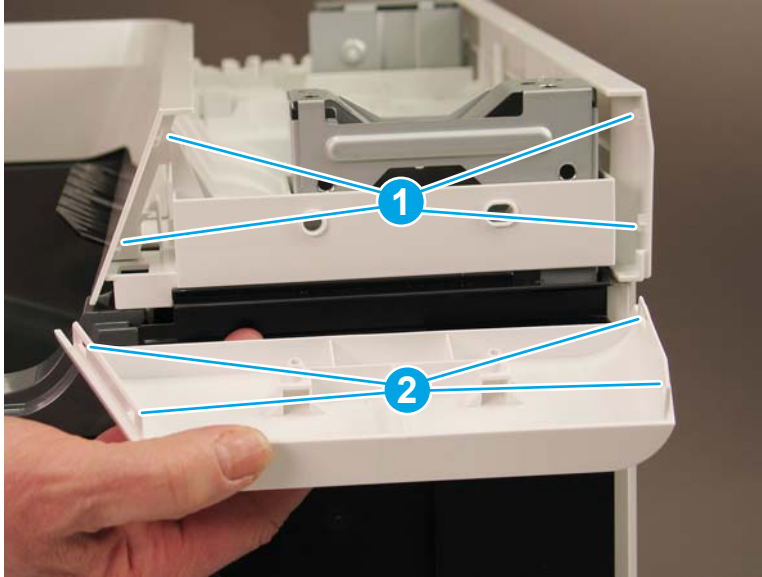


**Step 6: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-453 Remove the top cover

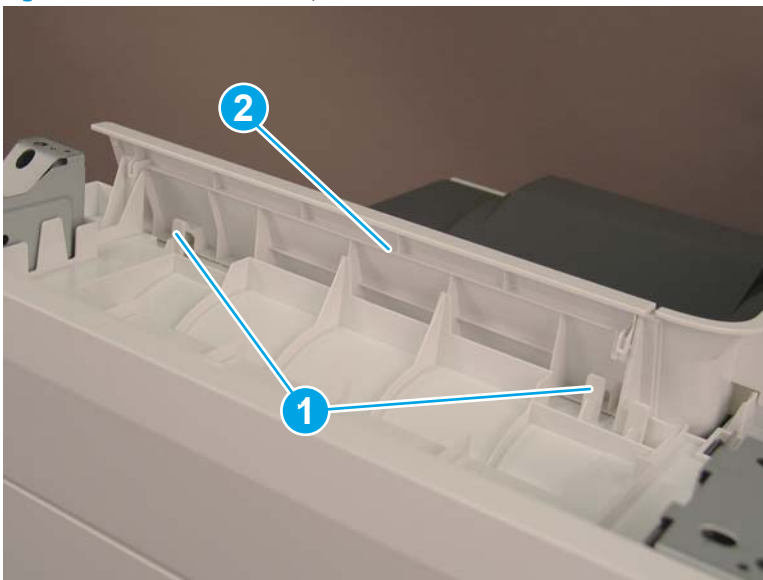


**Step 7: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-454 Remove the right cover

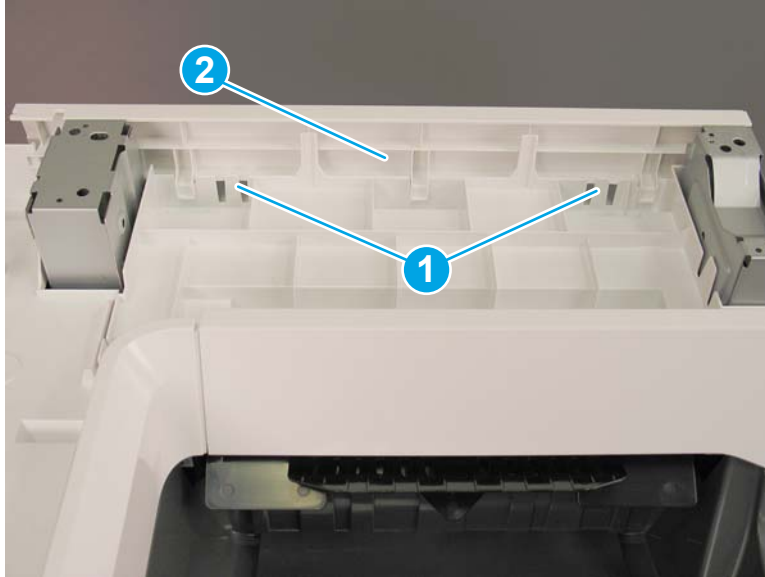


**Step 8: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-455 Remove the front cover

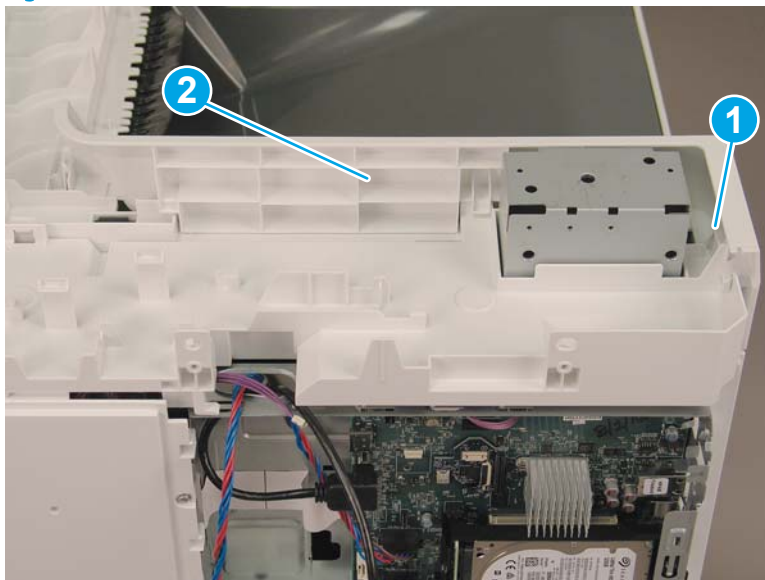


**Step 9: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-456 Remove two screws and the face-down cover

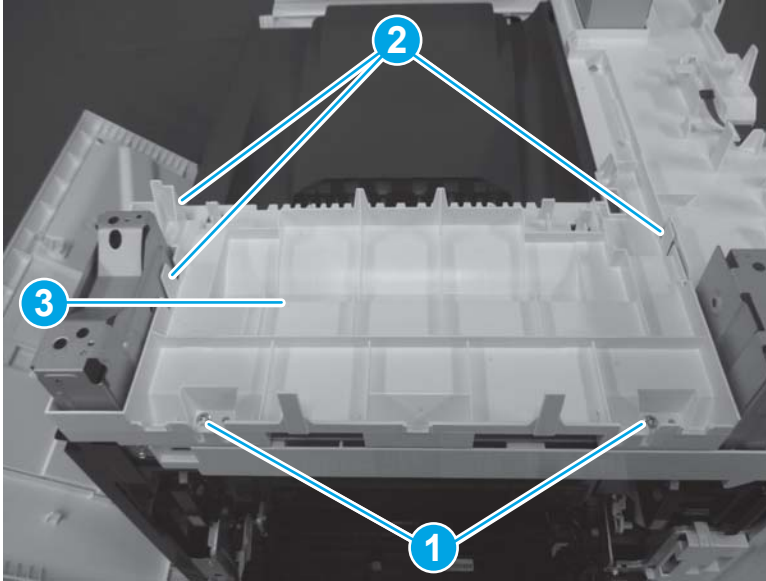



### Step 10: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.




## Removal and replacement: Rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the image scanner rear cover \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 2: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 2: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh).

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number	
RC4-6862-000CN	Rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the image scanner rear cover (M681/M682/E67550/E67560/E67650/E67660)

1. At the back of the printer, remove two screws (callout 1).

Figure 1-457 Remove two screws

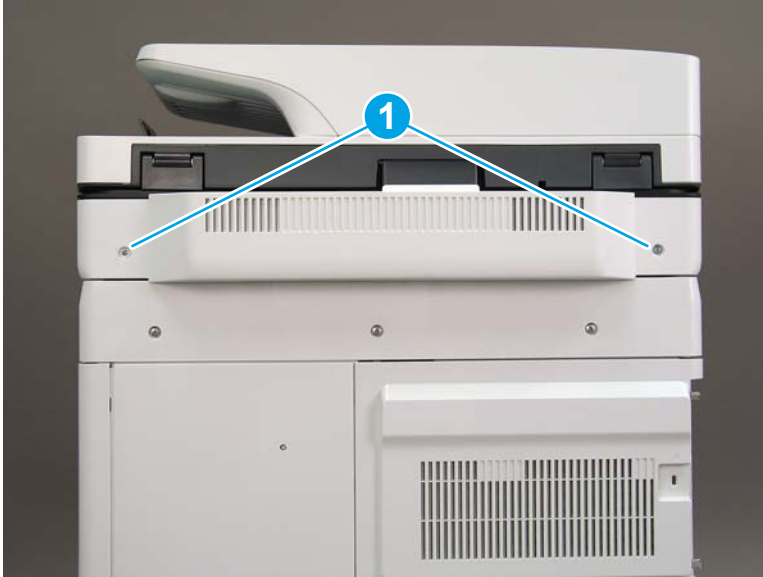

2. Rotate the image scanner back cover up to remove it.

Figure 1-458 Remove the image scanner back cover




### Step 2: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-459 Remove the rear upper cover

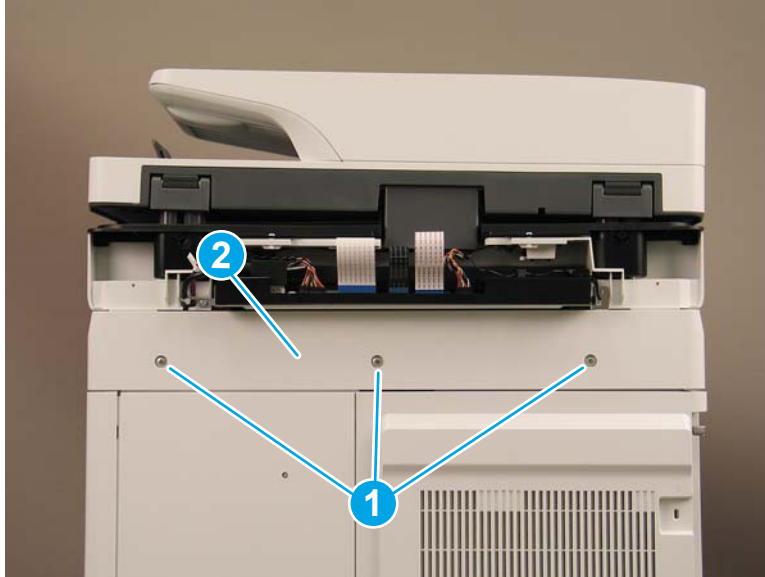

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 5: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh).

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Main cover (M681dn/M681/M682dn/Flow M681f/E67650dh) part number

---

RC4-6860-000CN

Main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-460** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-461 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-462 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-463 Disconnect the keyboard flat cable

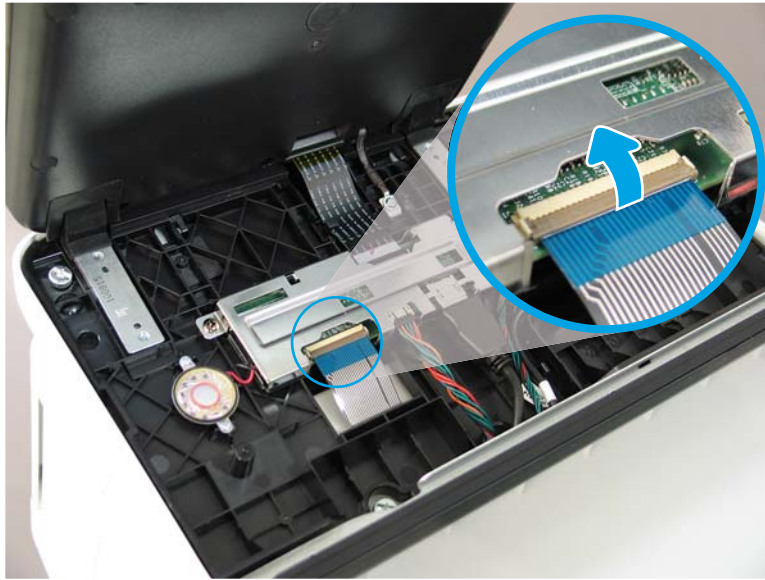

5. Slide the keyboard tray out until it stops.

Figure 1-464 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-465 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-466 Remove the keyboard



#### Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).



Figure 1-467 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-468 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-469 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-470 Disconnect the keyboard flat cable (keyboard models only)

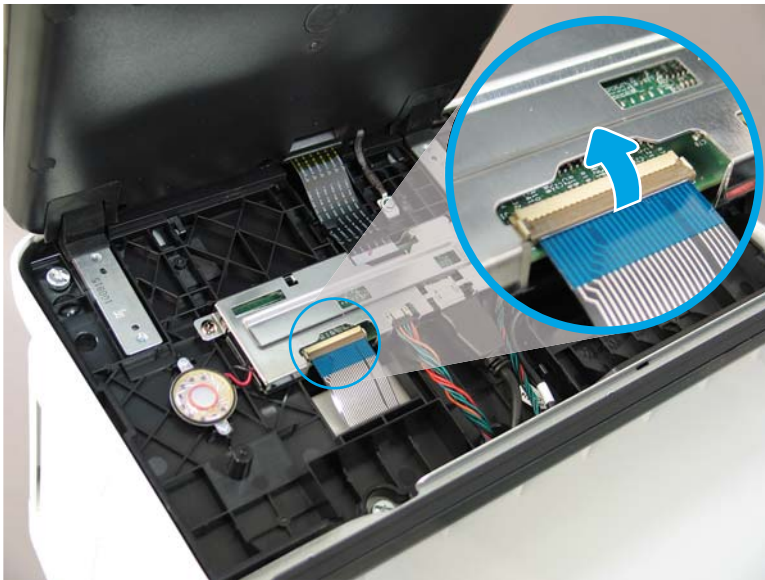


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-471 Disconnect connectors

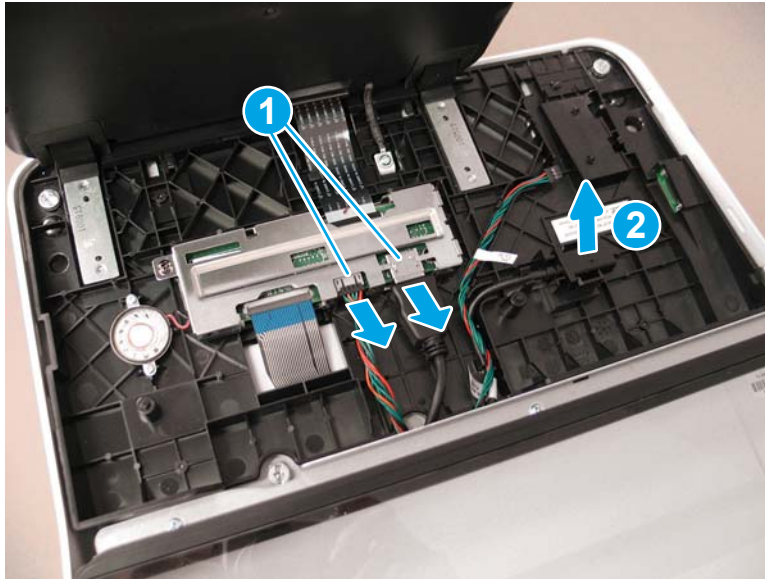


6. Remove three thumbscrews (callout 1).

Figure 1-472 Remove three thumbscrews

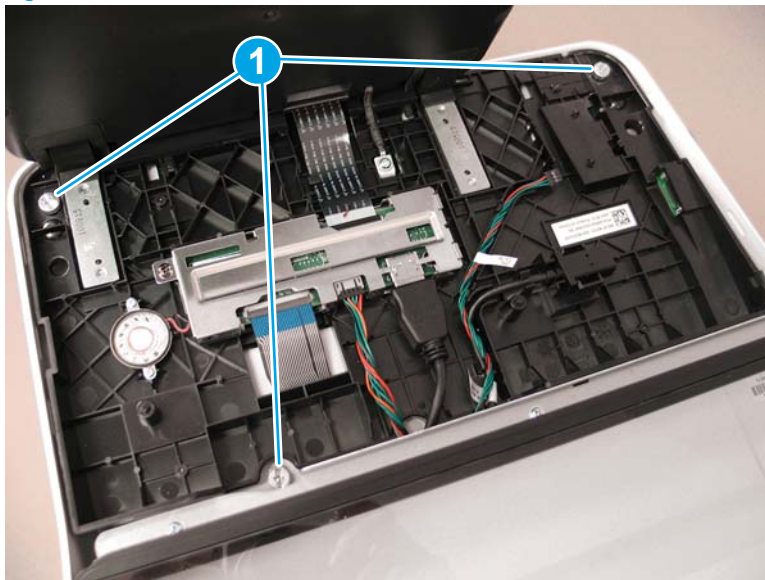

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


Figure 1-473 Remove the control panel

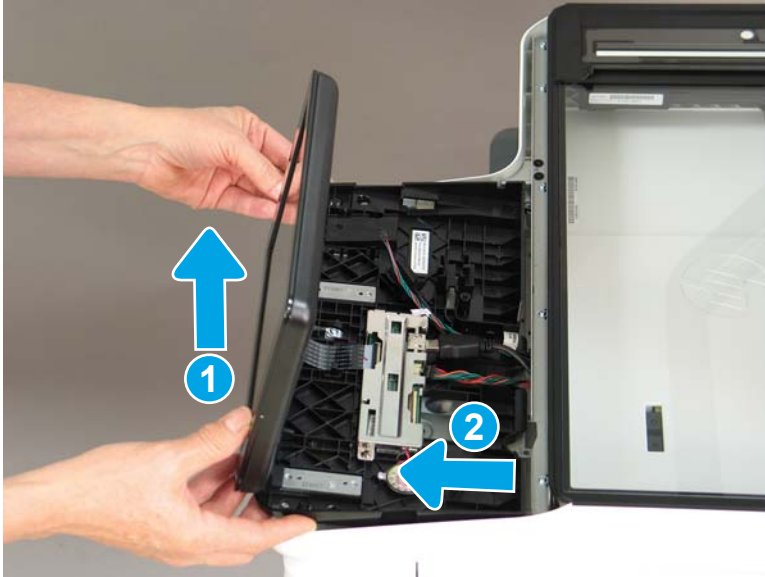

**Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)**

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-474 Remove the SCB cover

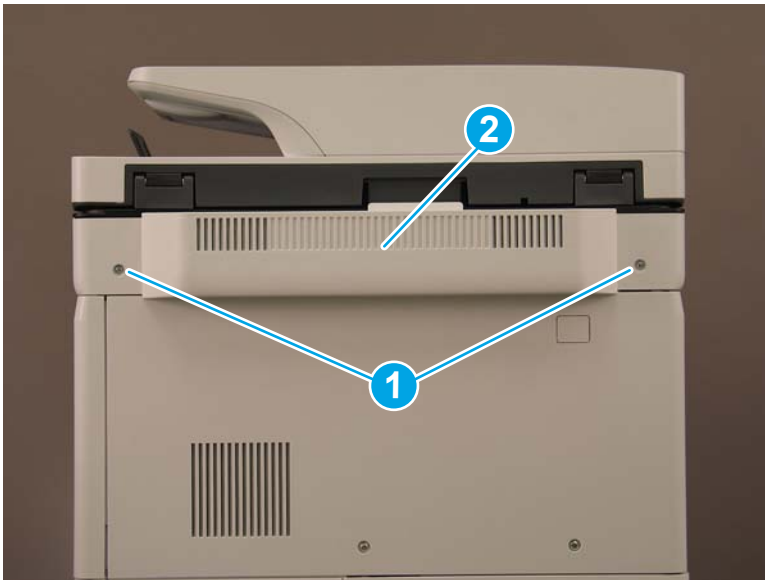


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-475 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-476 Remove the stapler/stacker rear cover

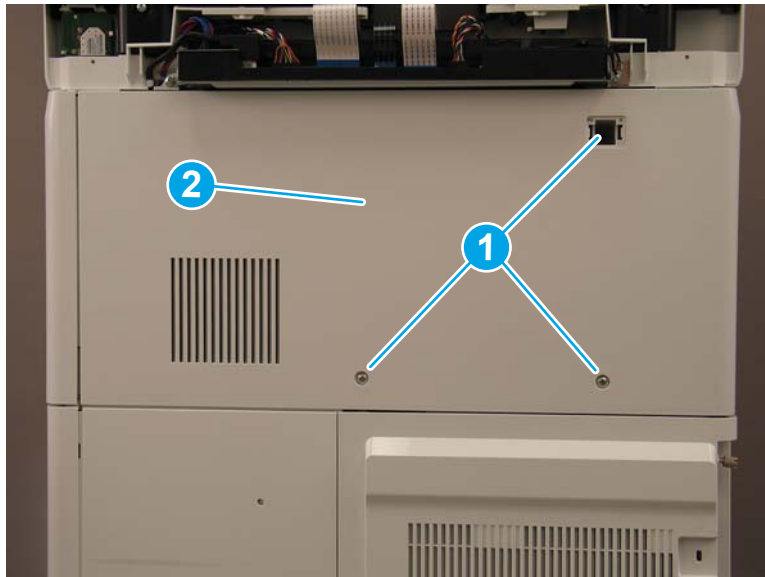


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-477 Remove the upper rear cover

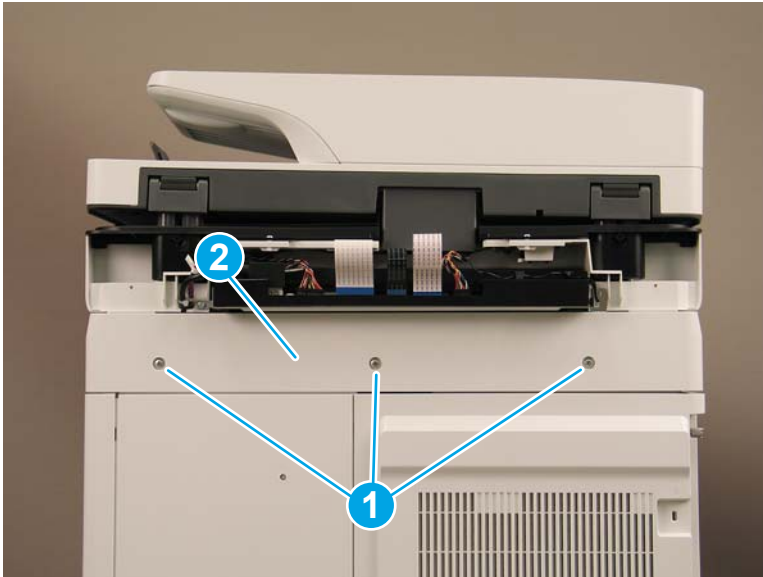

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).


Figure 1-478 Remove the formatter cover

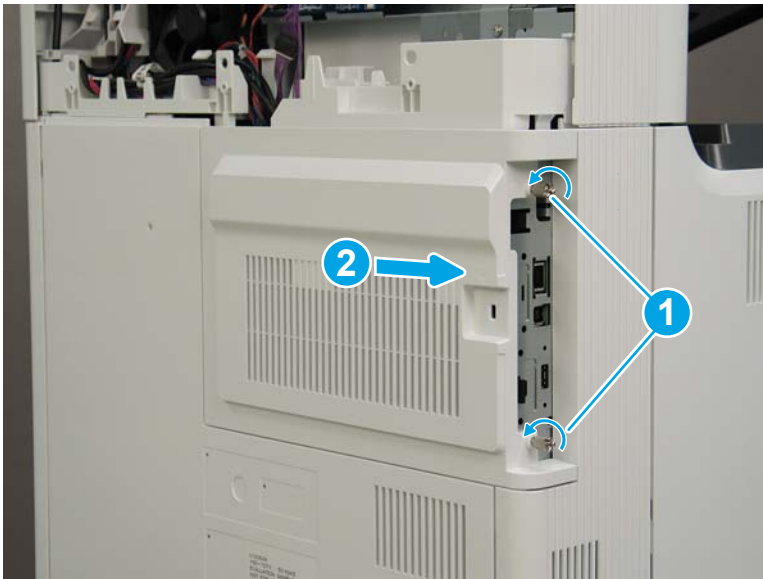




5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-479 Cable routing for M681dh, M681f, and Flow M681f

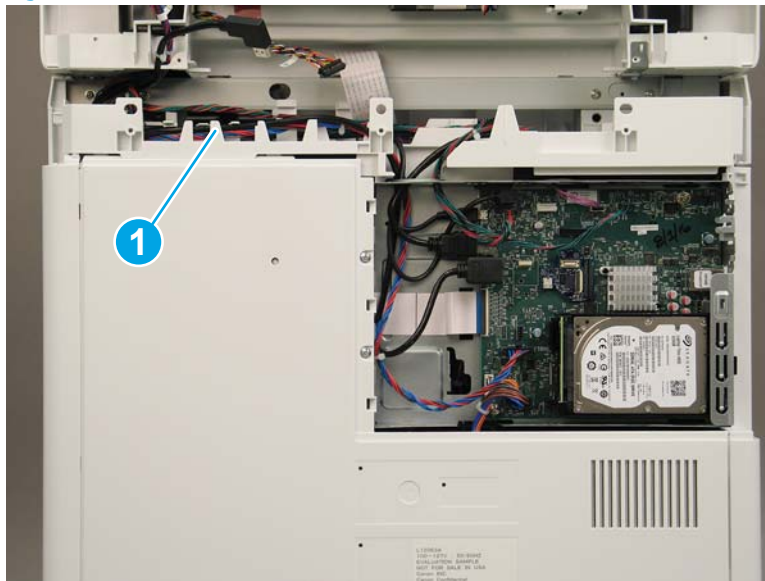

6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-480 Disconnect two connectors

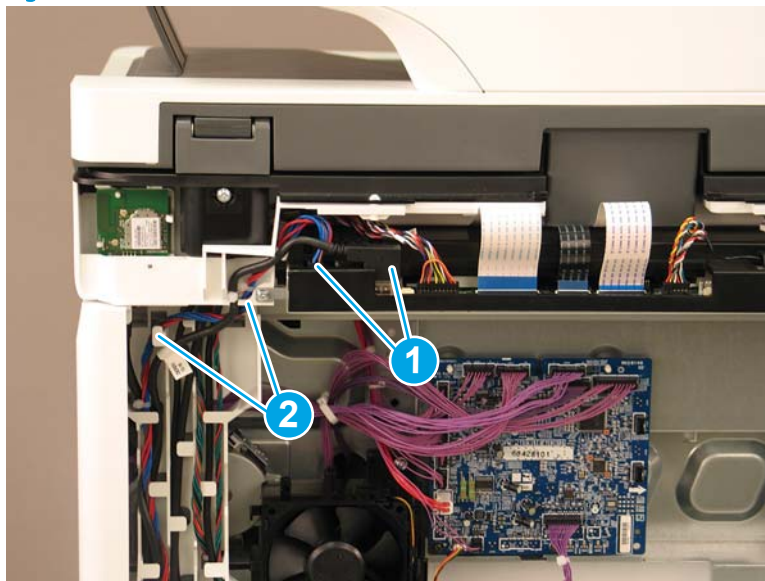


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-481 Disconnect five connectors



8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.


Figure 1-482 Disconnect the wireless connector

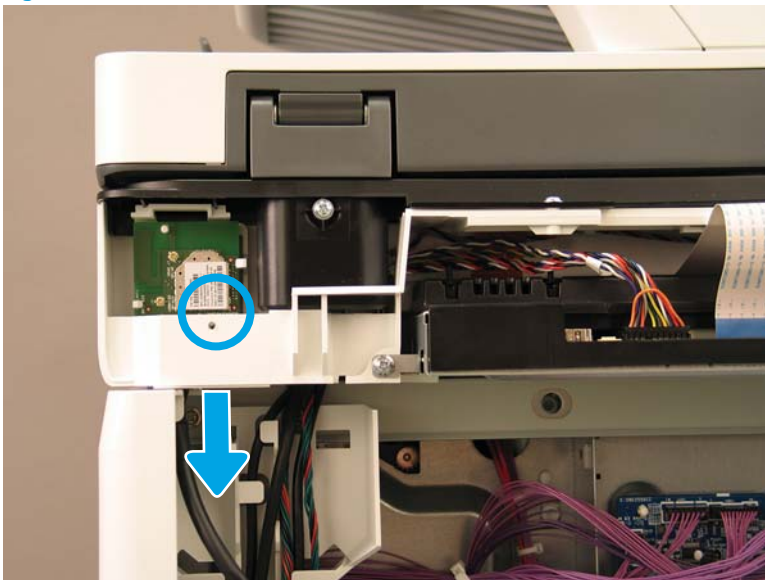




9. Release all of the cables from the cable guides (callout 1).

Figure 1-483 Release the cables

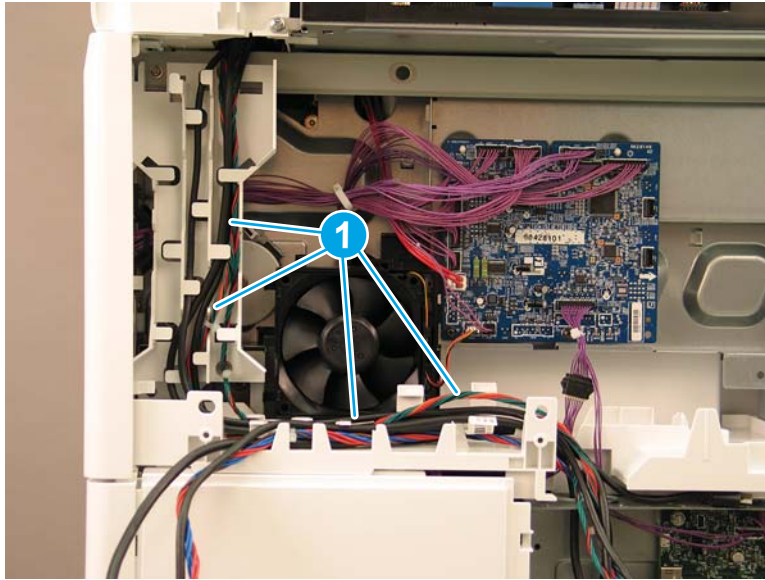


10. At the back of the printer, remove four screws (callout 1).

Figure 1-484 Remove four screws

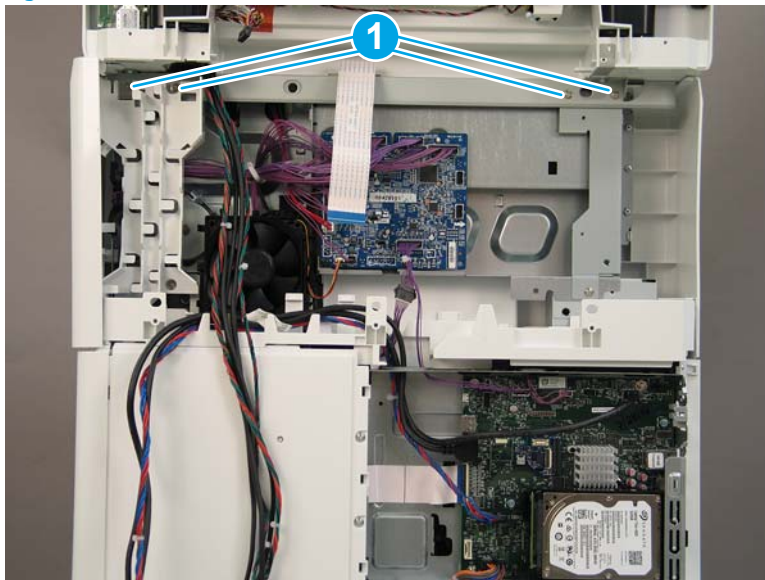

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-485 Remove three screws

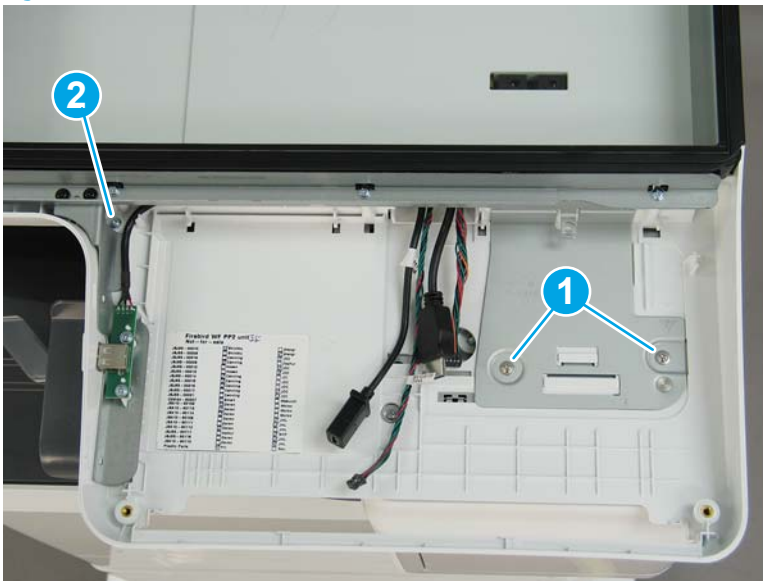

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-486 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-487 Remove the wireless card

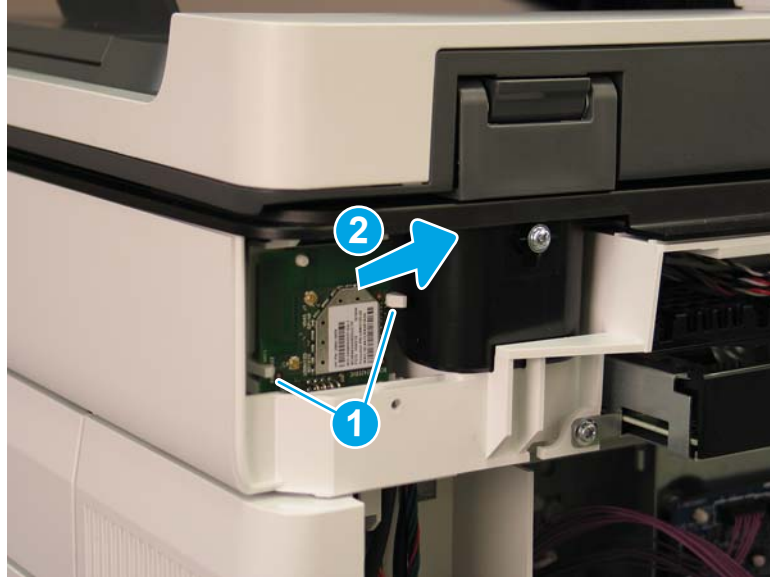


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-488 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-489 Reinstall the wireless card

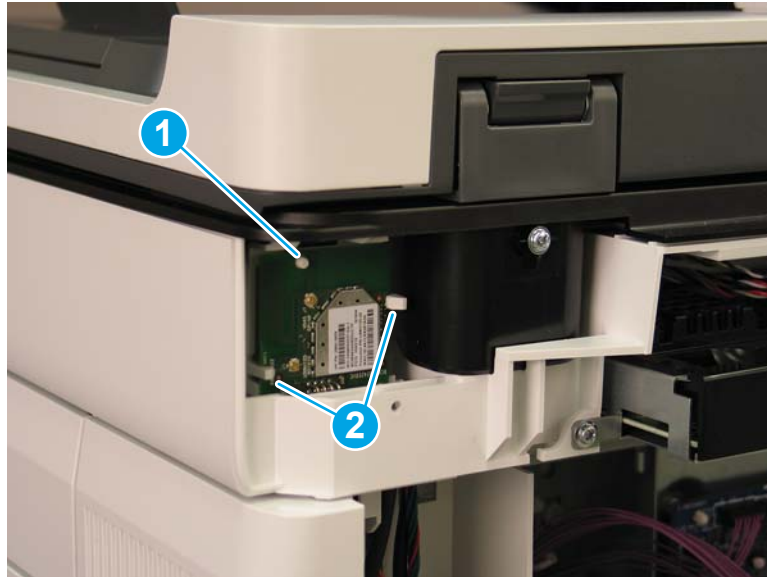

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-490 Install the SCB cables

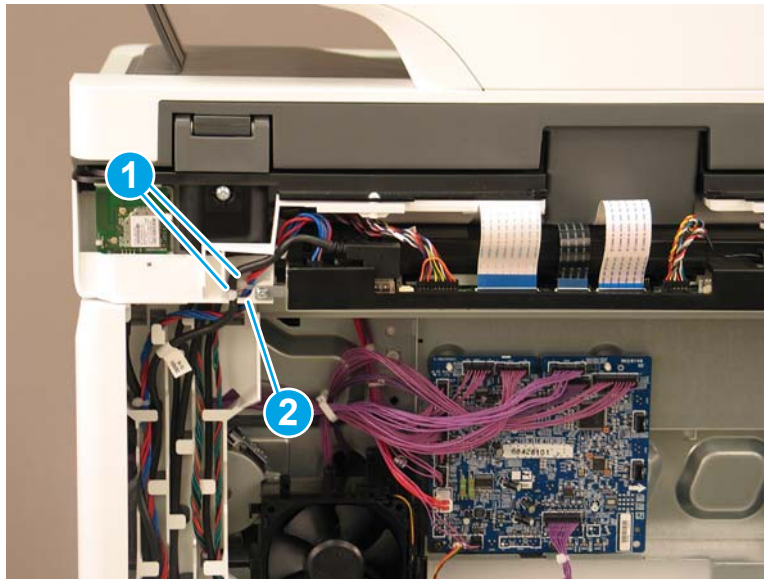


#### Step 4: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-491 Remove the top cover

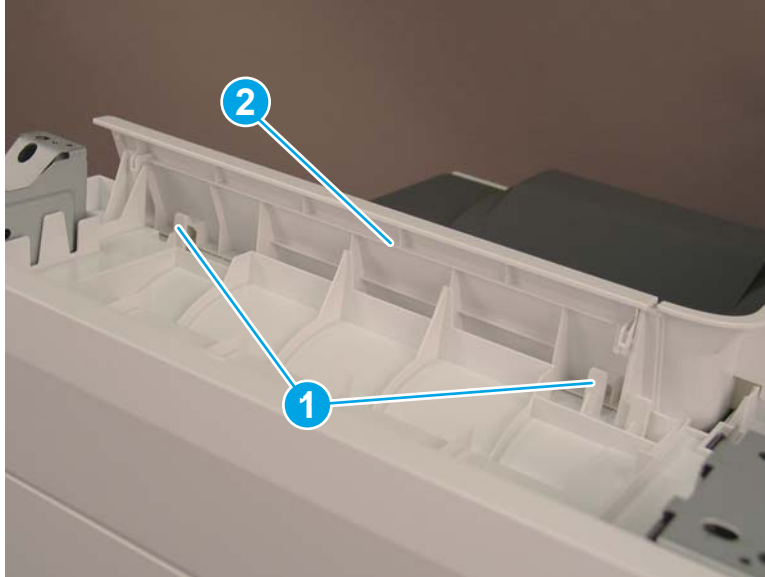


**Step 5: Remove the right cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-492 Remove the right cover

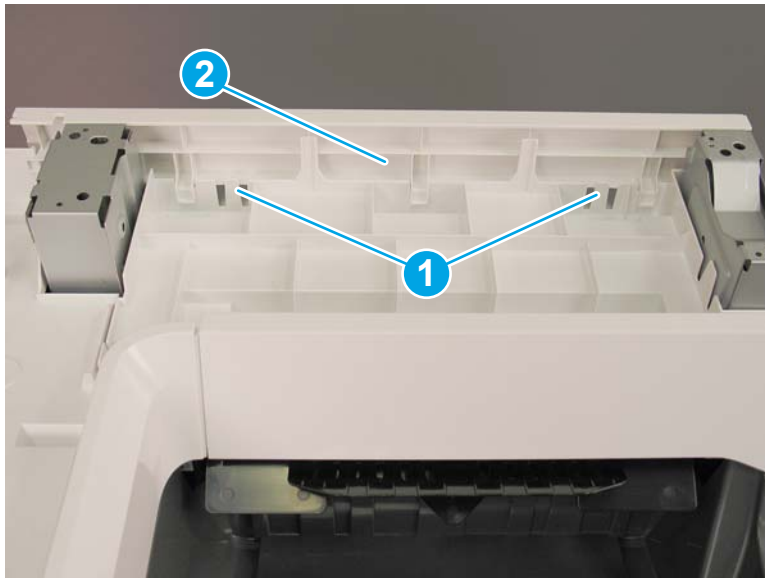


**Step 6: Remove the front cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)**

- ▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-493 Remove the front cover

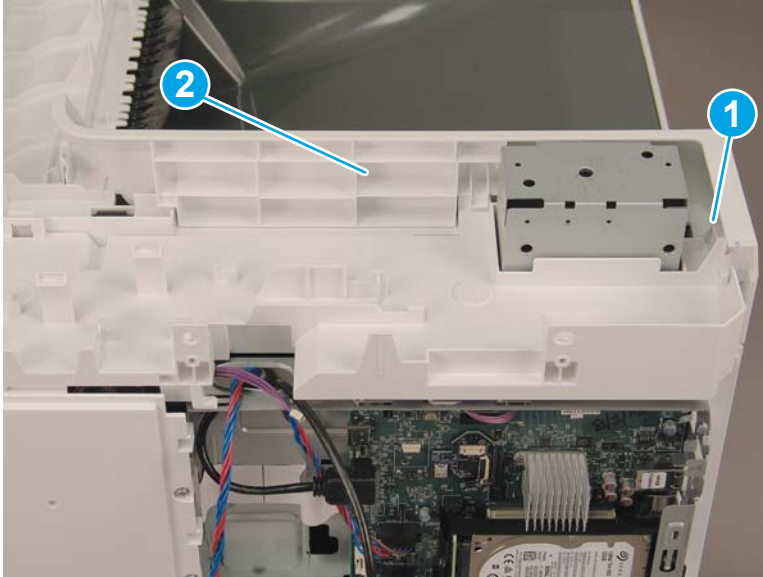


Step 7: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-494 Remove the rear upper cover

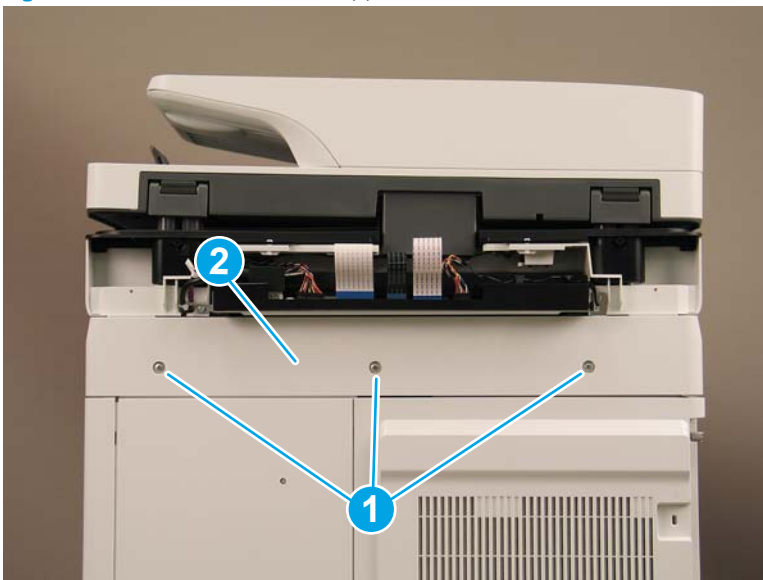


Step 8: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-495 Remove two screws and the face-down cover

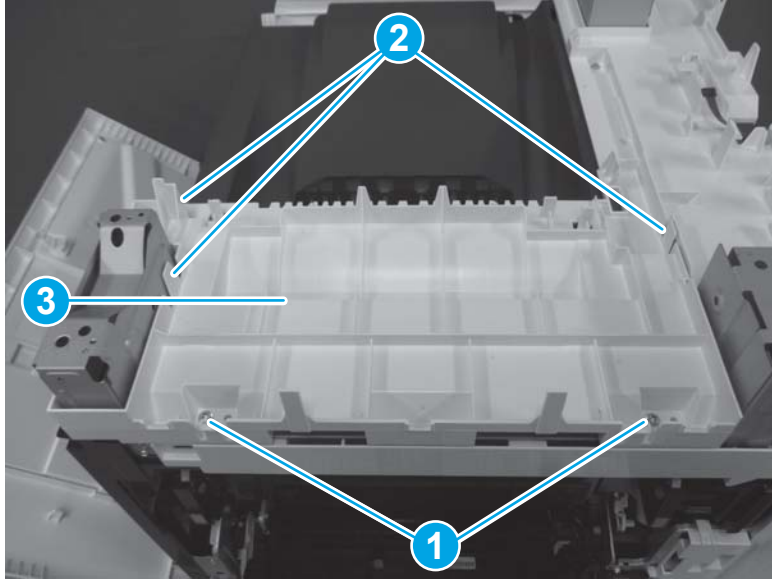


**Step 9: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

1. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-496 Remove two screws and release one tab

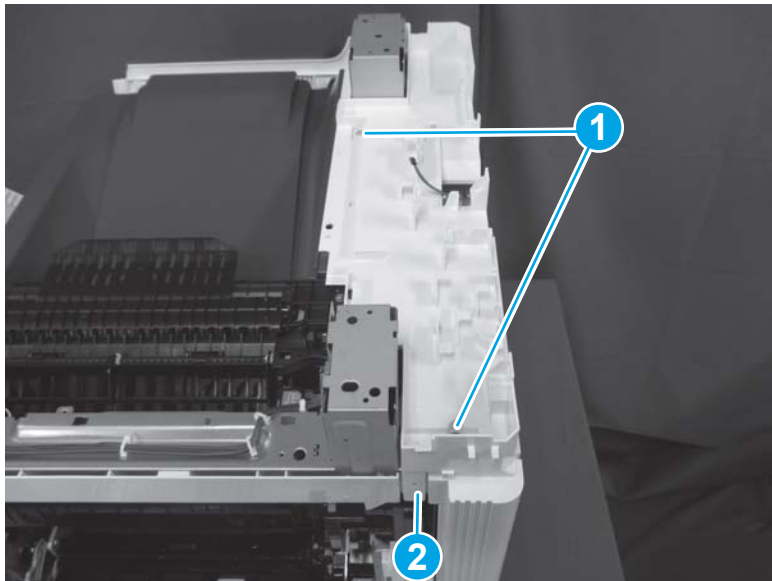

2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-497** Remove one screw and the main cover

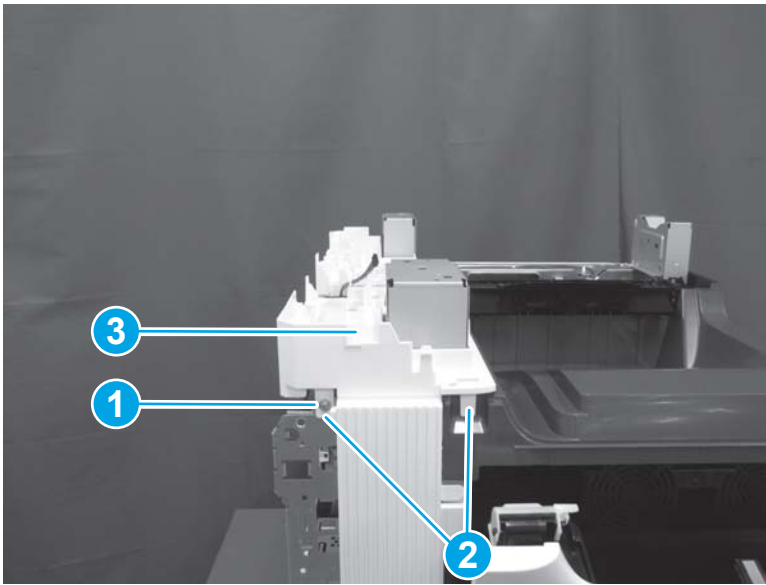



### Step 10: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.



## Removal and replacement: Front door

- [Introduction](#)
- [Step 1: Remove the front door](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front door.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Front door part number	
RM2-6658-000CN	Front door

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.


## Step 1: Remove the front door

1. Remove Tray 2.
2. Open the following doors:

 **Reinstallation tip:** The left door must be closed first in order to close the front door.


- Front door
  - Left door
3. Hold the black shutter to one side, release one tab (callout 1), and then slide the link arm (callout 2) up to release it from the sheet metal.

**Figure 1-498** Release the link arm

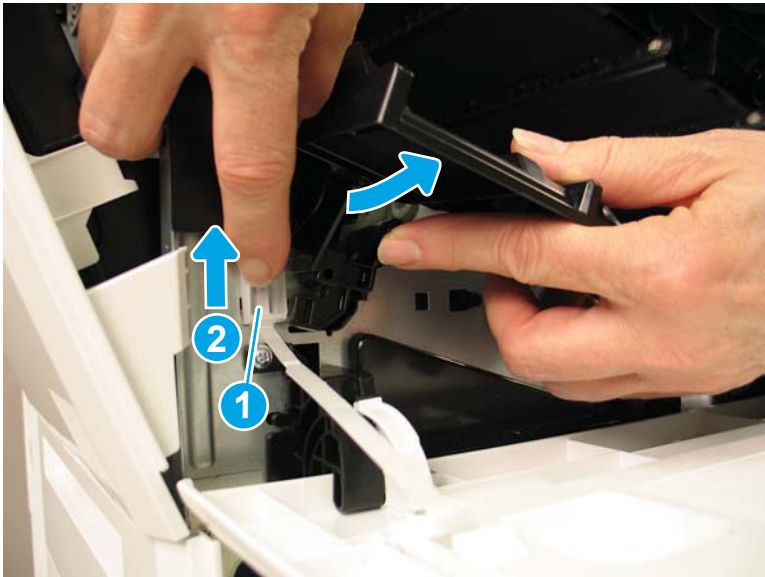

4. Slide the released link arm into the door.


**Figure 1-499** Slide the released link arm into the door

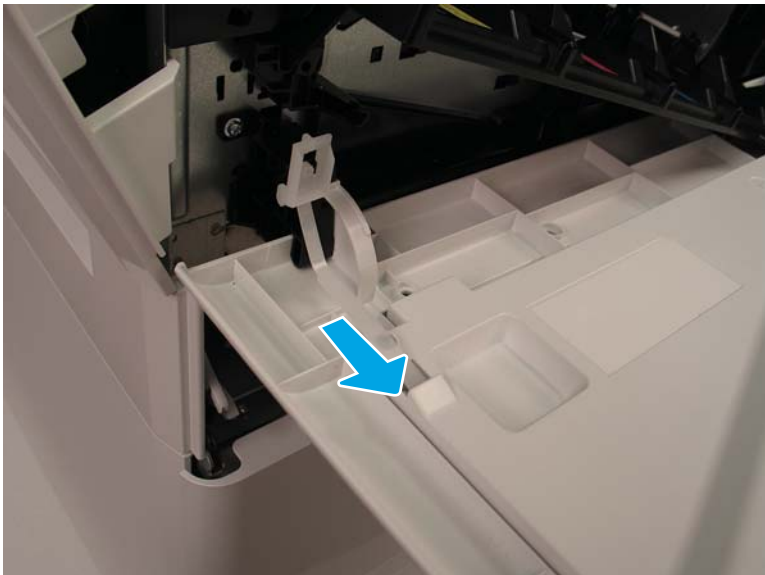

5. Remove four screws (callout 1), release three tabs (callout 2), and then remove the inner cover.

**CAUTION:** Use care when removing the inner cover. The black cartridge door is spring-loaded and may close abruptly when released from the inner cover.


Figure 1-500 Remove the inner cover

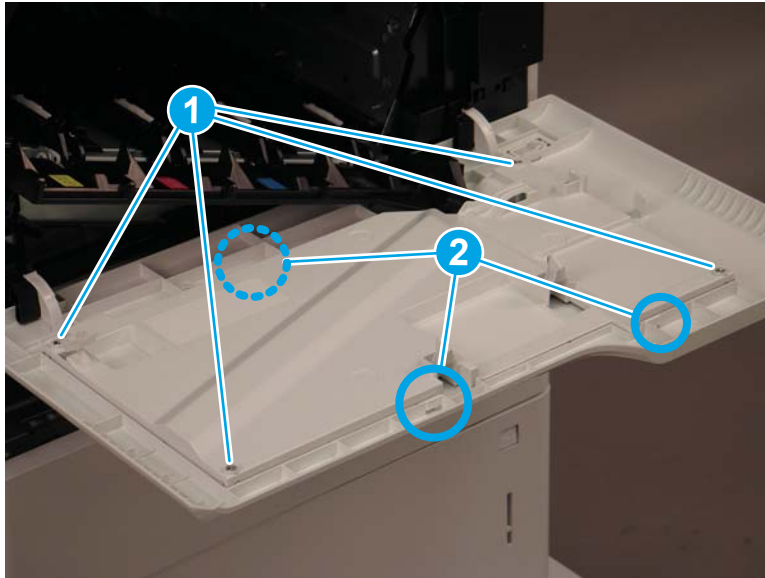

6. Remove one screw (callout 1), and then release one boss (callout 2). Slide the hinge (callout 3) up to release it.


**TIP:** Use a flat-blad screwdriver to release the boss, and then lift upwards on the corner of the door.

Figure 1-501 Release the hinge

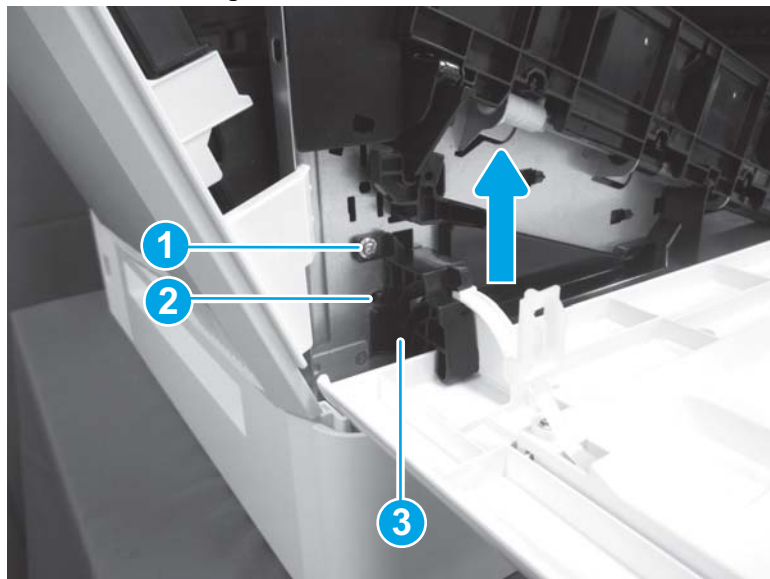


- Slide the front door (callout 1) to the right to remove it.

 **NOTE:** Remove the hinge (callout 2) and the link arm (callout 3) from the front door and install them on the replacement front door.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-502** Remove the front door

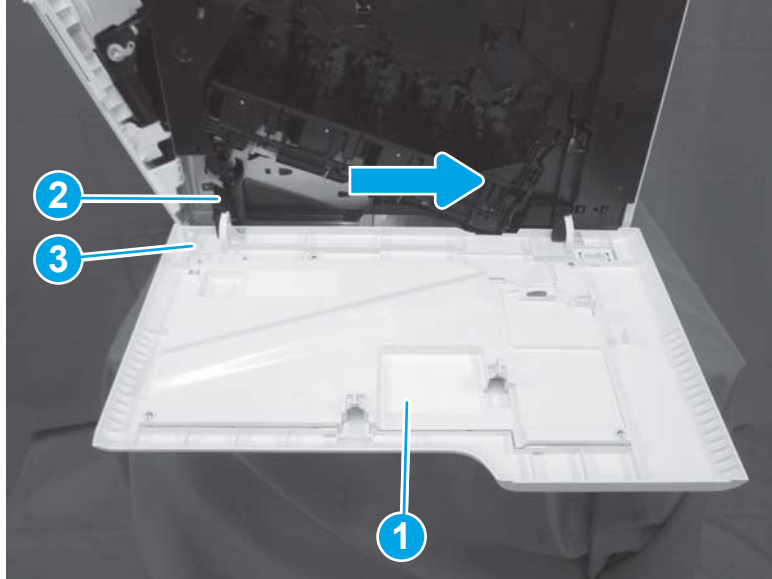

- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

**Special installation instructions: Front door**


- If the link arm becomes dislodged from the inner cover, reinstall it as shown in the figure below.

**Figure 1-503** Reinstall the link arm




- b. Install the right side of the door first. Position the edge of the door (callout 1) over the black lip (callout 2), and then slide the right hinge into the black arm (callout 3).

**Figure 1-504** Install the right hinge

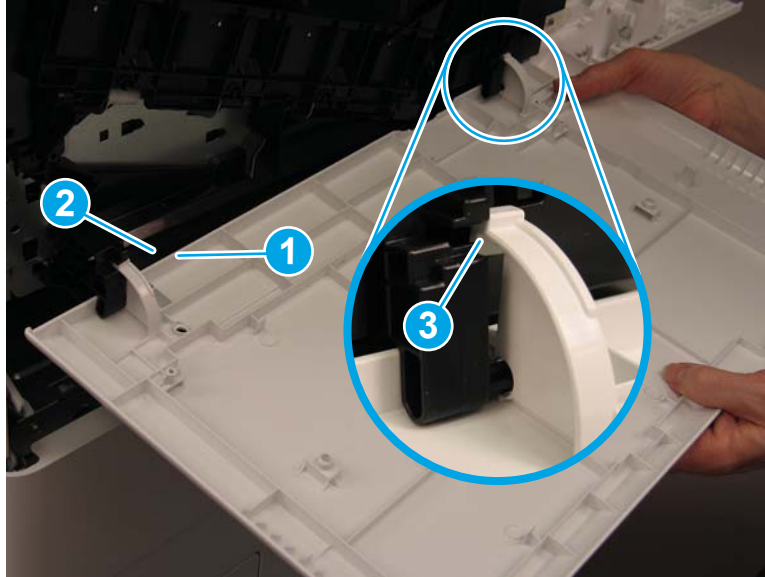

- c. When reinstalling the left hinge, install the tabs (callout 1) on the hinge in the slots (callout 2) in the printer. Press down to lock the hinge in place.


**Figure 1-505** Install the left hinge

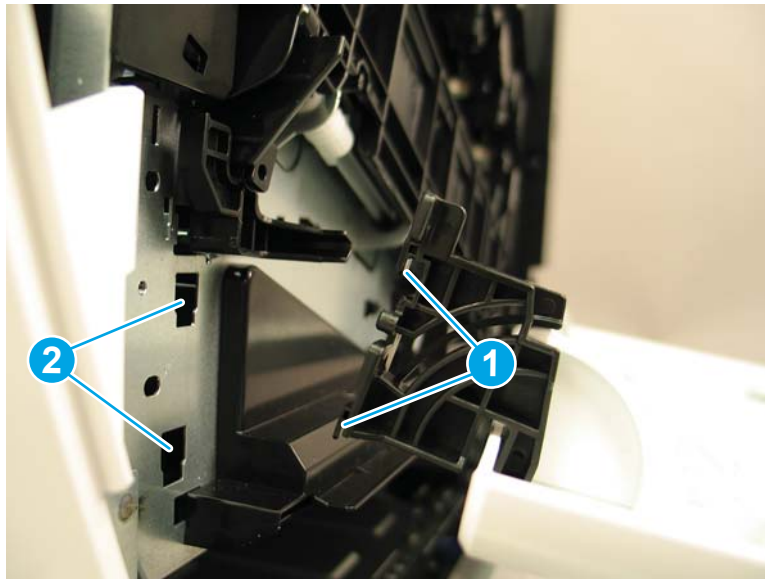

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right door

- [Introduction](#)
- [Step 1: Remove the right door](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door part number	
RM2-6622-000CN	Right door

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door


1. Open the right door.

Figure 1-506 Open the right door



2. Release two tabs (callout 1), and then remove the connector cover (callout 2).

Figure 1-507 Remove the connector cover

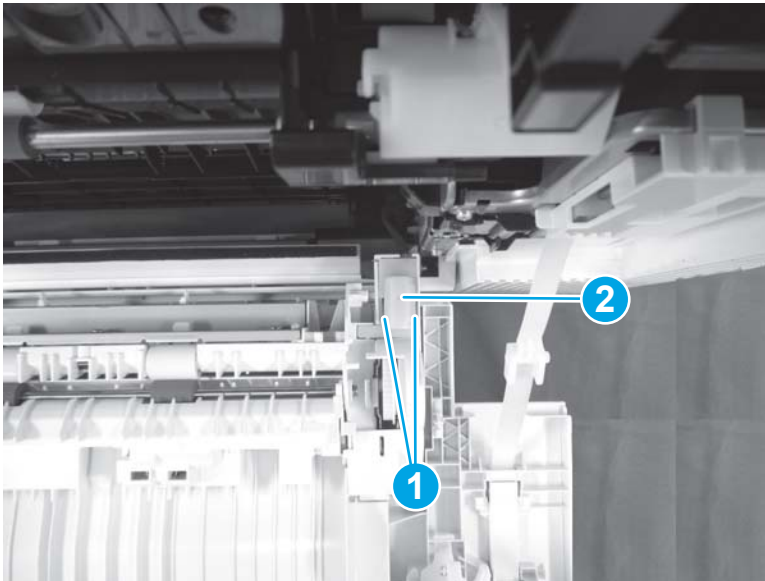




3. Disconnect two connectors (callout 1).

 **NOTE:** Disconnect the connectors on the side closest to the printer


Figure 1-508 Disconnect two connectors

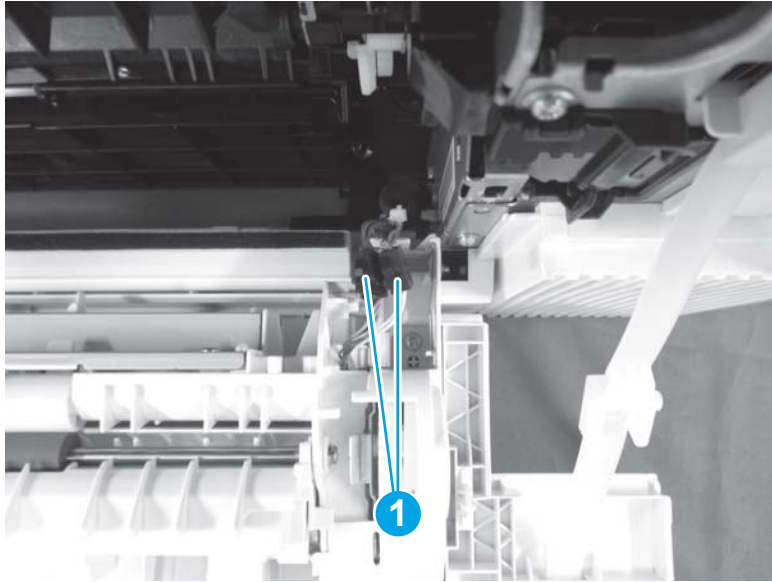

4. Remove two screws (callout 1), and then release the left link arm (callout 2) from the right door.


 **CAUTION:** The left link arm is under tension. Hold onto the part when removing the screws and release it slowly to avoid damaging the printer or losing the screws.

Figure 1-509 Remove two screws and release the left link arm

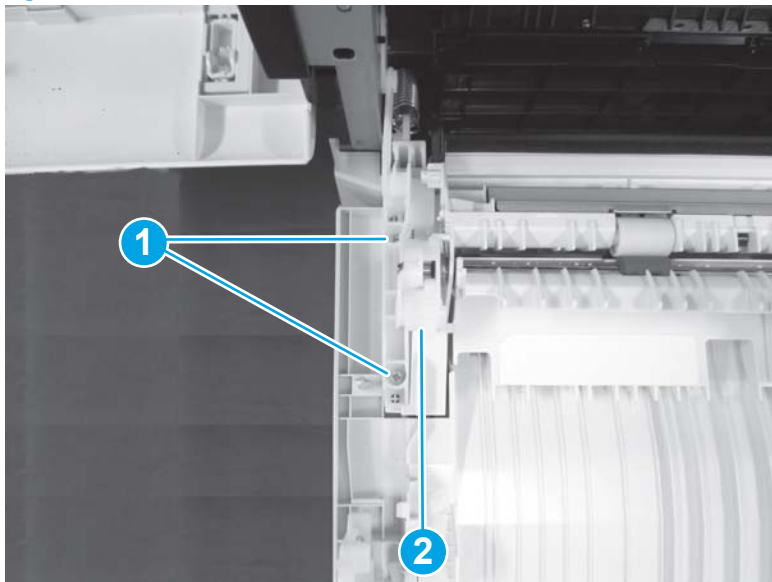


5. Release two bosses (callout 1), and then release the right door strap (callout 2).

Figure 1-510 Release the right door strap

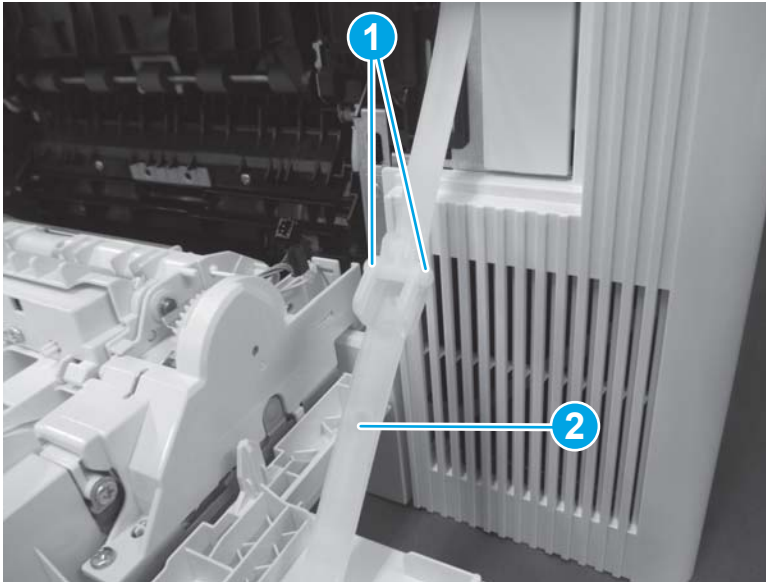


6. Slide the right door (callout 1) to the left to remove it.

 **Reinstallation tip:** The left hinge can be moved to the left, away from the door assembly, to allow correctly positioning the molded door assembly parts. Place the hinge back into position to align with the alignment pins, and then reattach.

 **CAUTION:** The left hinge is under tension. Use care when moving it so it does not release suddenly and damage the printer.


Figure 1-511 Remove the right door

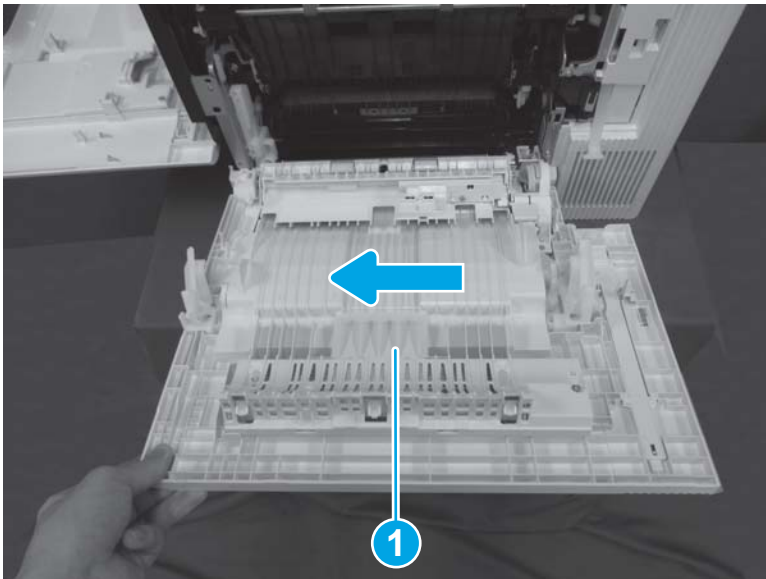

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left door

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the left door](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left door.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left door part number	
RL2-1500-000CN	Left door

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service


#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.


## Step 1: Remove the toner collection unit (TCU)

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


1. Open the front door.

Figure 1-512 Open the front door

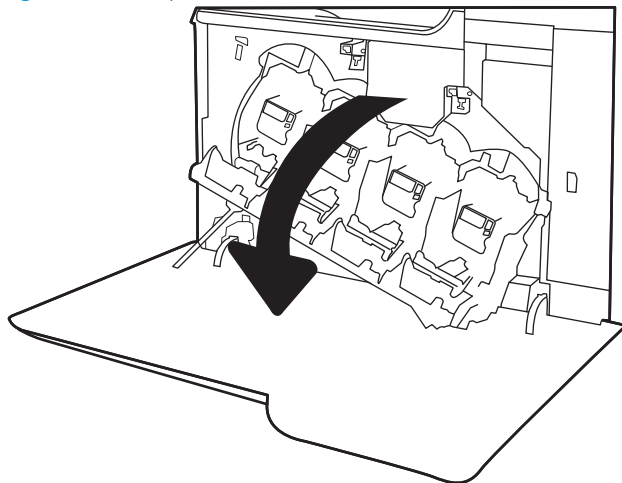


2. Open the left door.

Figure 1-513 Open the left door

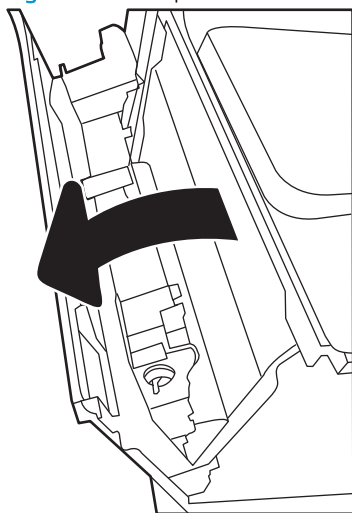

3. Grasp the top of the TCU and remove it from the printer.

Figure 1-514 Remove the TCU

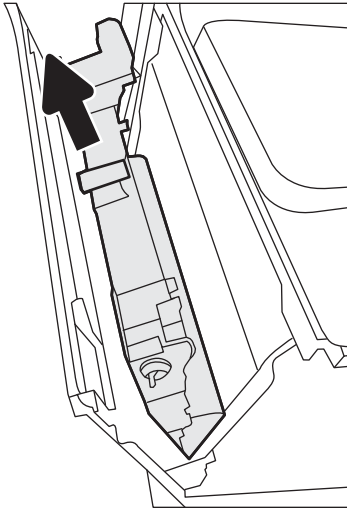

### Step 2: Remove the left door


1. Open front door.


Figure 1-515 Open front door



2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.


---

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-516 Remove the left door

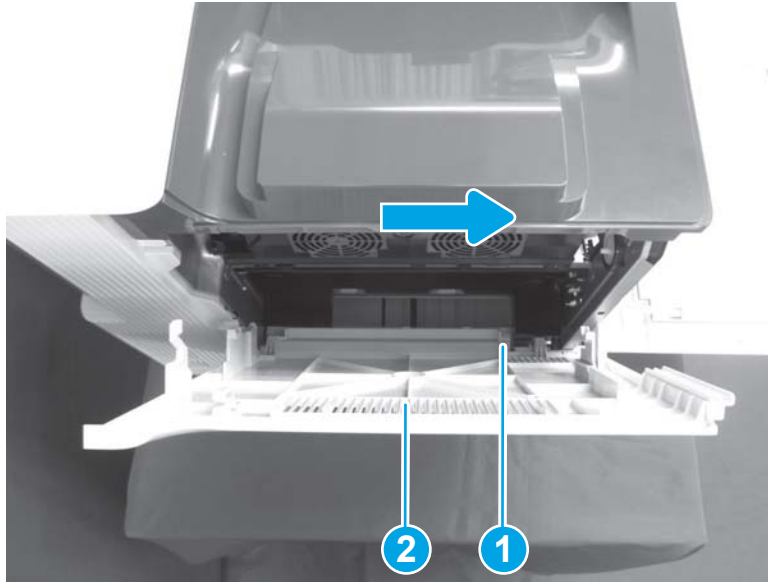

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Top cover (M652/M653/E65050/E65060/E65150/E65160)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 3: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the top cover for the M652/M653/E65050/E65060/E65150/E65160 models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Top cover (M652/M653/E65050/E65060/E65150/E65160) part number

---

RC4-6429-000CN

Top cover (M652/M653/E65050/E65060/E65150/E65160)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.




---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-517** Remove the formatter cover

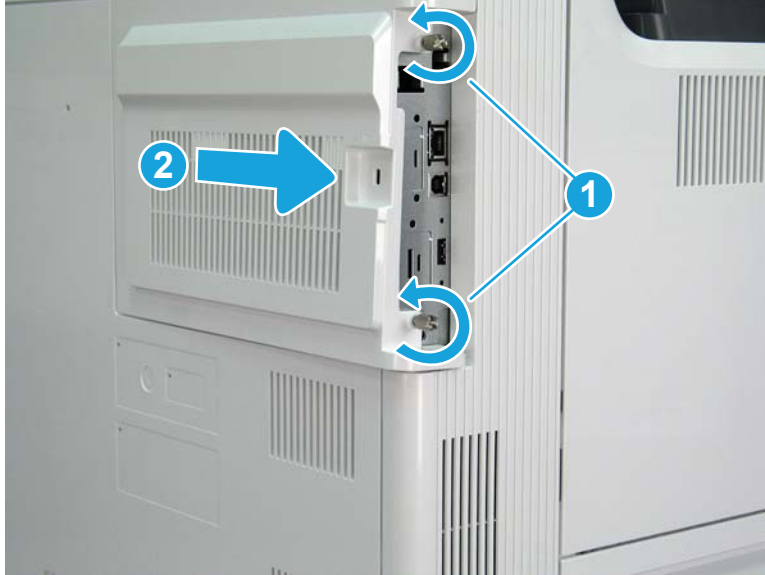

**Step 2: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)**

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

---

1. Tilt the control panel to the fully raised position.

**Figure 1-518** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

Figure 1-519 Remove the cover



3. Remove one thumbscrew (callout 1)

---

 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.


---

Figure 1-520 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-521 Release the control panel

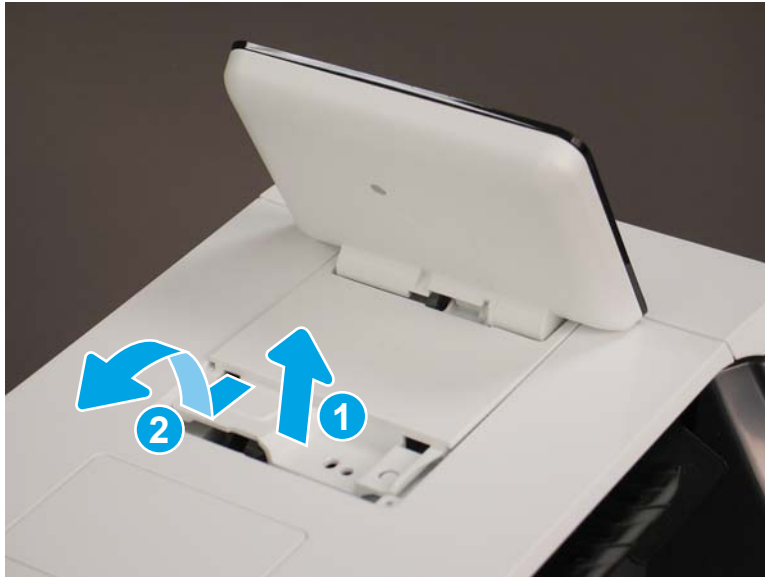

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-522 Disconnect two connectors

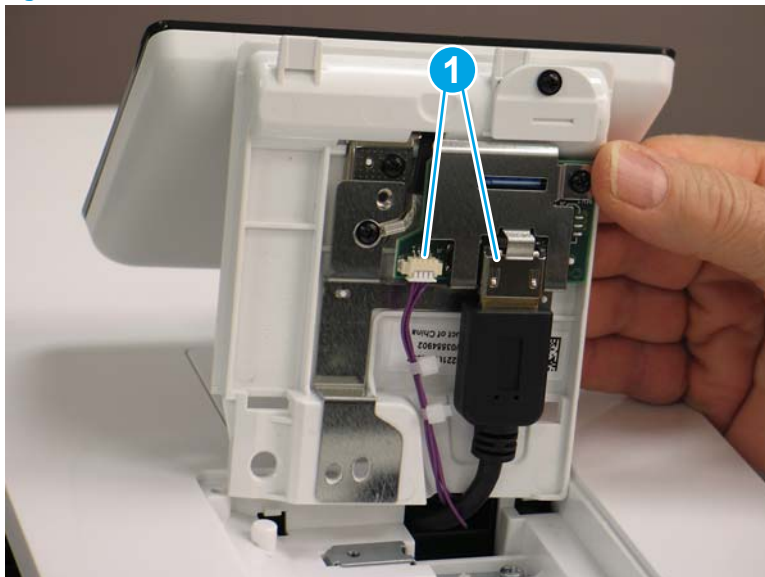

6. Remove the control panel.


Figure 1-523 Remove the control panel



Step 3: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)


1. Open the following doors:
  - Front door
  - Left door
  - Right door
2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-524 Remove the NFC cover

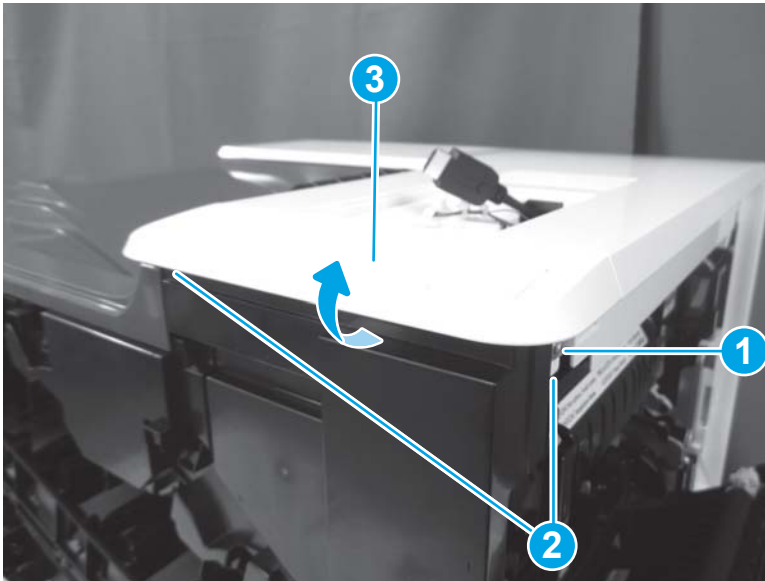


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-525 Remove one screw and release one tab

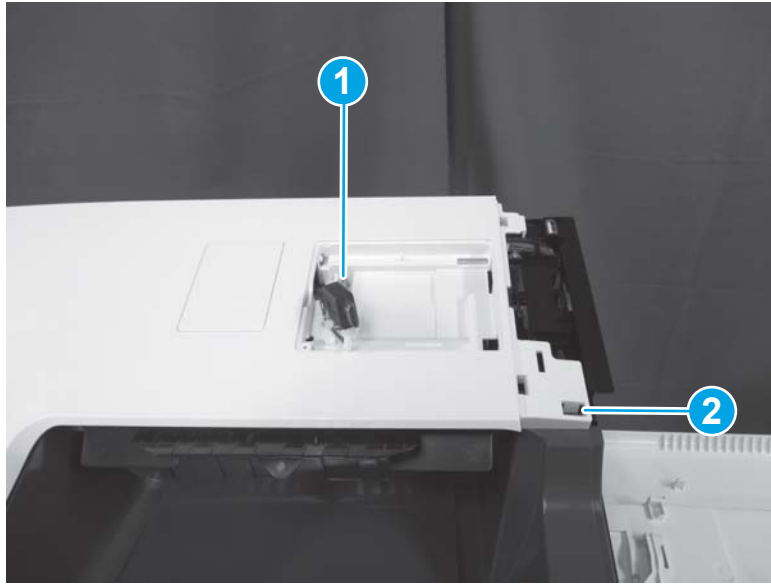


4. Release two tabs (callout 1).

Figure 1-526 Release two tabs

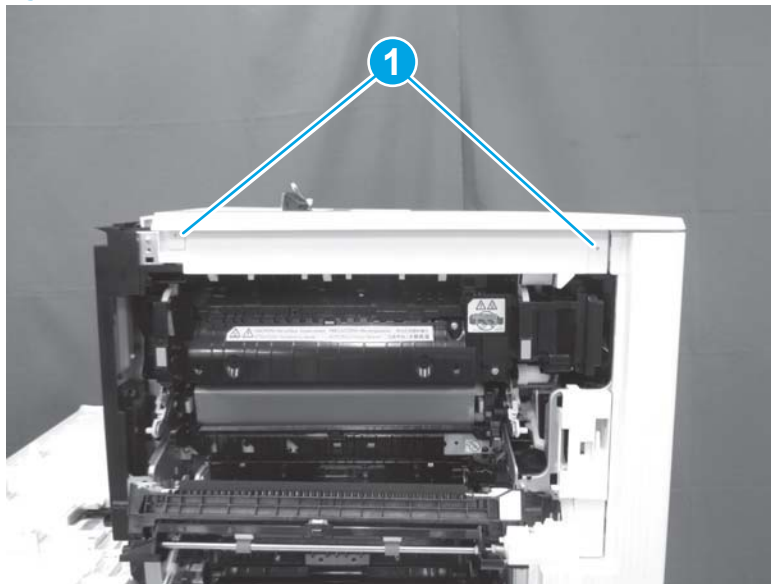


5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-527** Remove the top cover

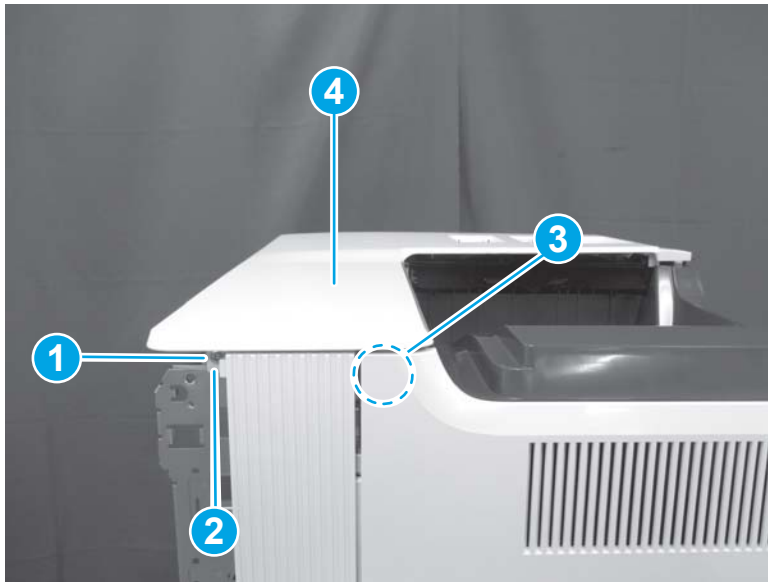

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left rear cover

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the left rear cover.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)


M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left rear cover part number	
RC4-6858-000CN	Left rear cover

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-528 Remove the formatter cover

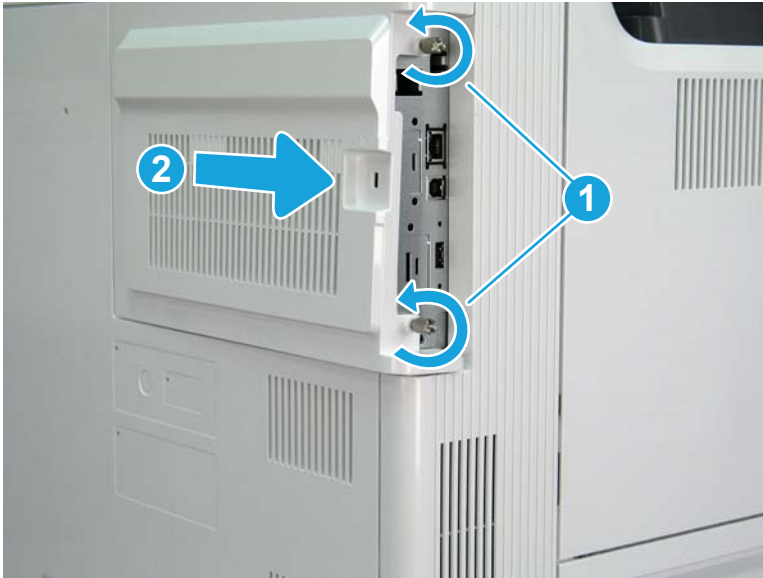

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-529 Remove the left rear cover

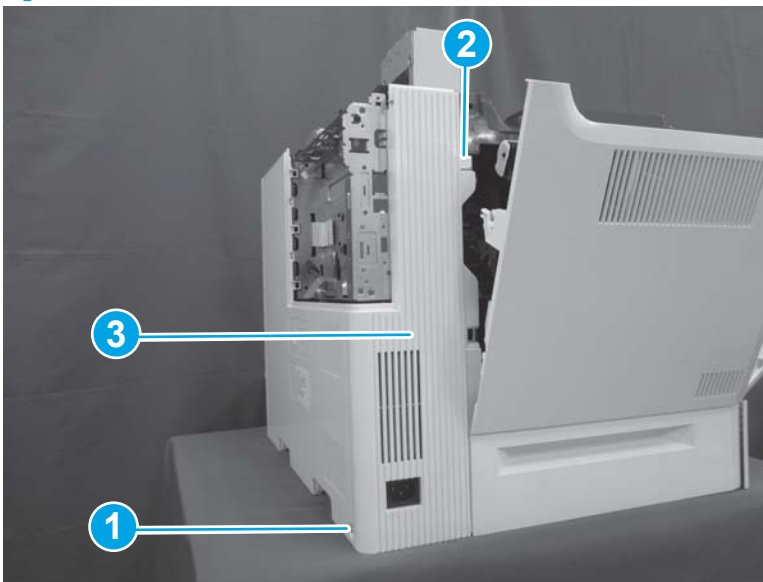

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


📝 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-530 Install the left rear cover

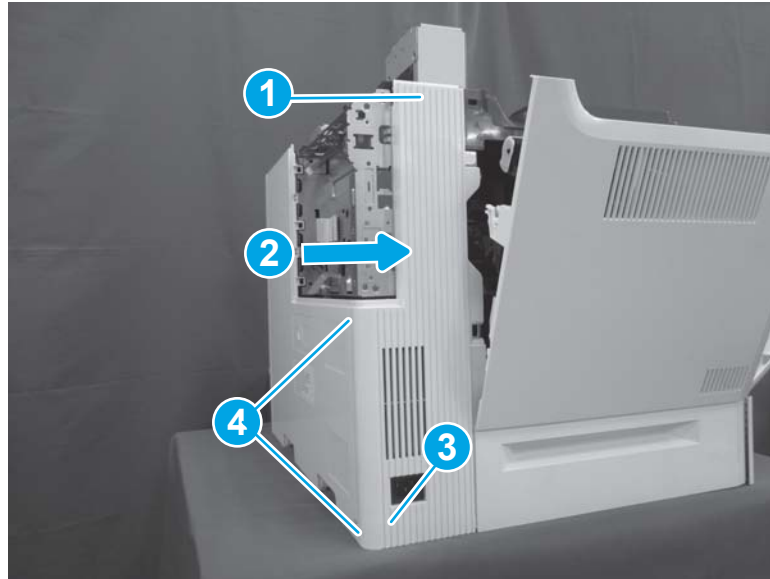

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Output bin

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 6: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the output bin](#)
- [Step 16: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the output bin.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



---

**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.



---

**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Output bin part number	
RM2-1953-000CN	Output bin

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-531 Remove the formatter cover

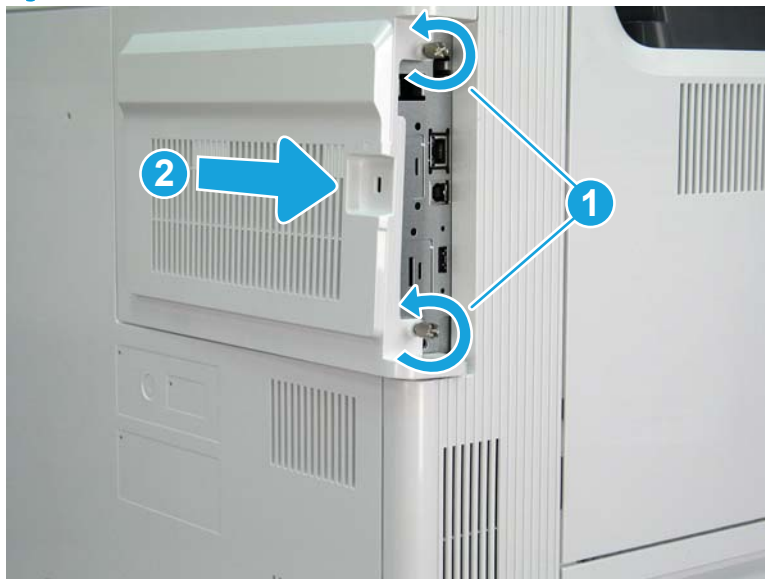

### Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

---

📝 **NOTE:** This step is for the M681/M682/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160/E67650 models, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

---

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-532 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-533 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-534 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-535 Disconnect the keyboard flat cable

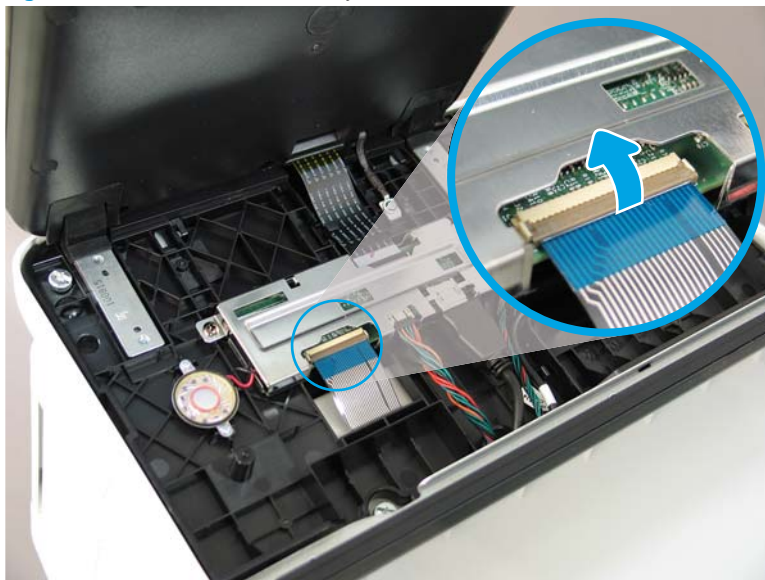

5. Slide the keyboard tray out until it stops.

**Figure 1-536** Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

**Figure 1-537** Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

**Figure 1-538** Remove the keyboard



### Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

**Figure 1-539** Tilt the control panel forward and open the document feeder





2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-540 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.


Figure 1-541 Remove the cover






4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-542 Disconnect the keyboard flat cable (keyboard models only)

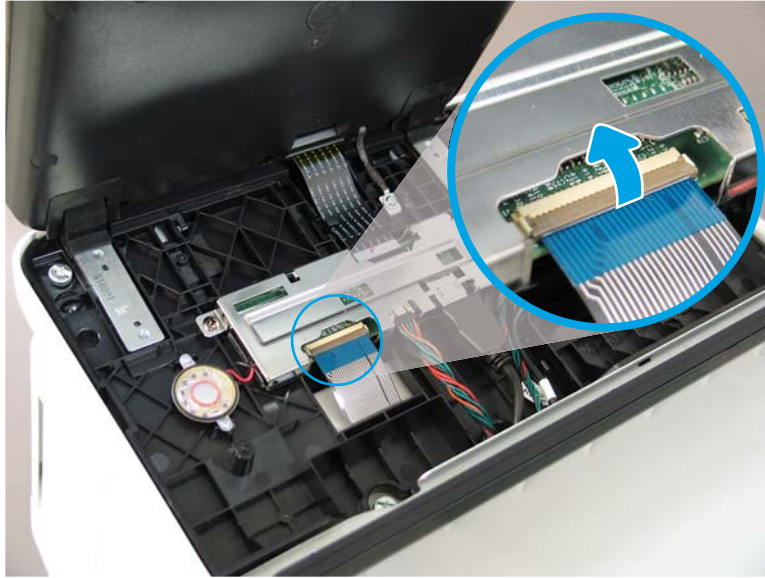


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-543 Disconnect connectors

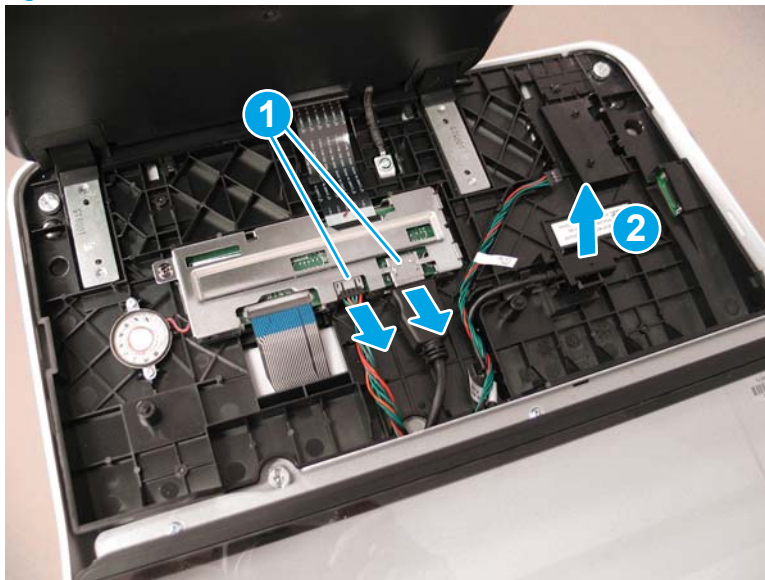


6. Remove three thumbscrews (callout 1).

Figure 1-544 Remove three thumbscrews

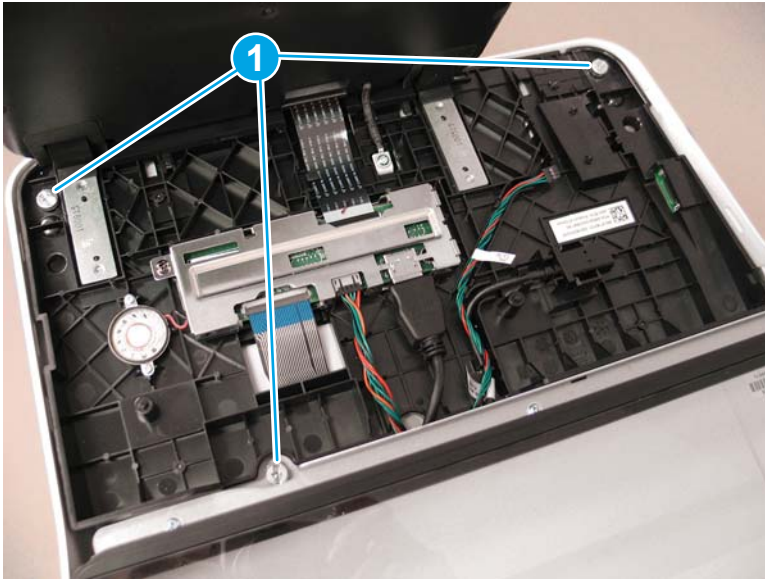

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-545 Remove the control panel

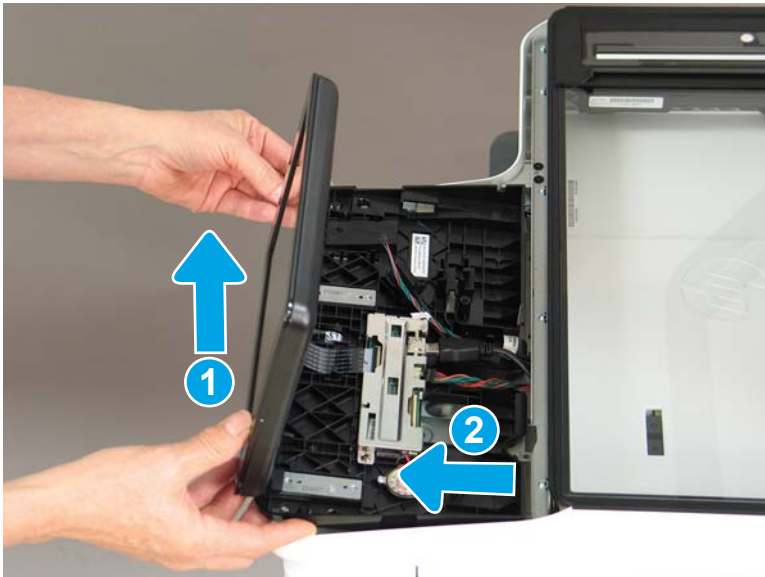


#### Step 4: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

**NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-546 Remove the SCB cover

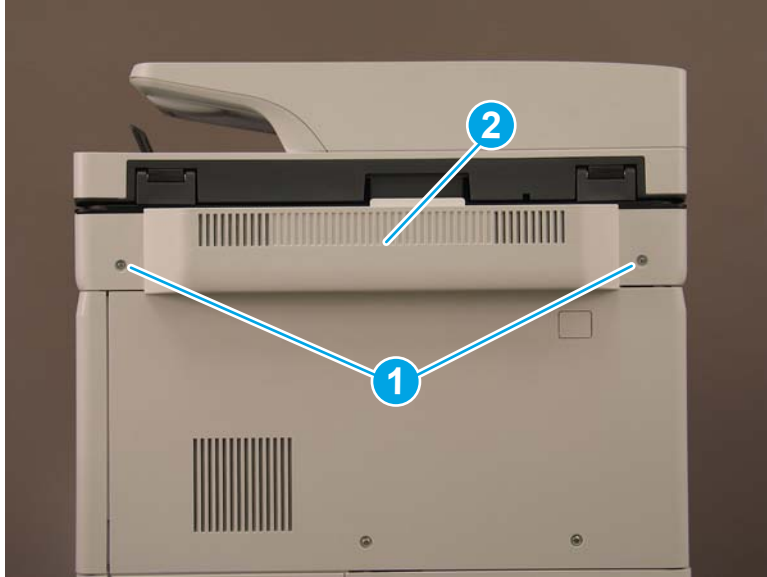


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-547 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-548** Remove the stapler/stacker rear cover

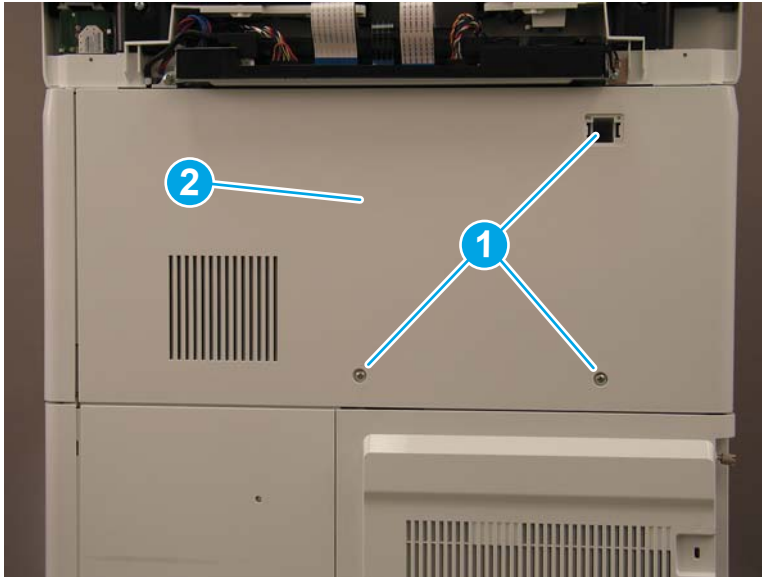


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

**Figure 1-549** Remove the upper rear cover

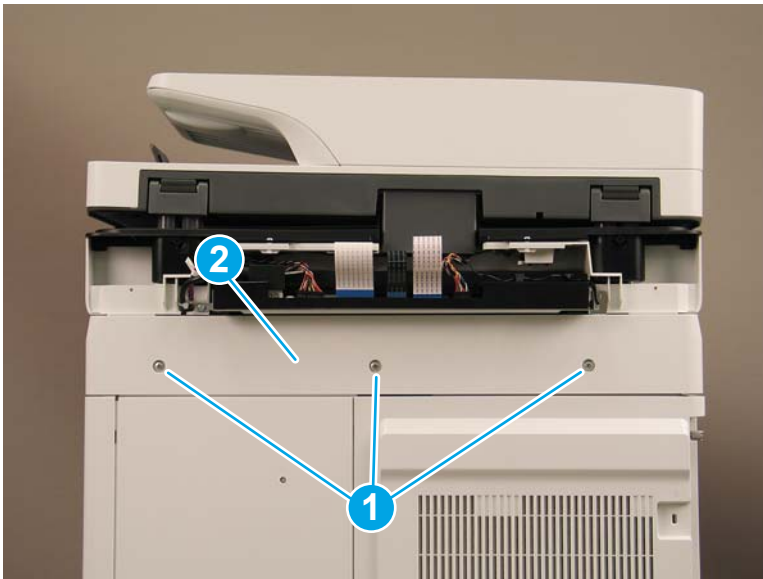

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-550 Remove the formatter cover

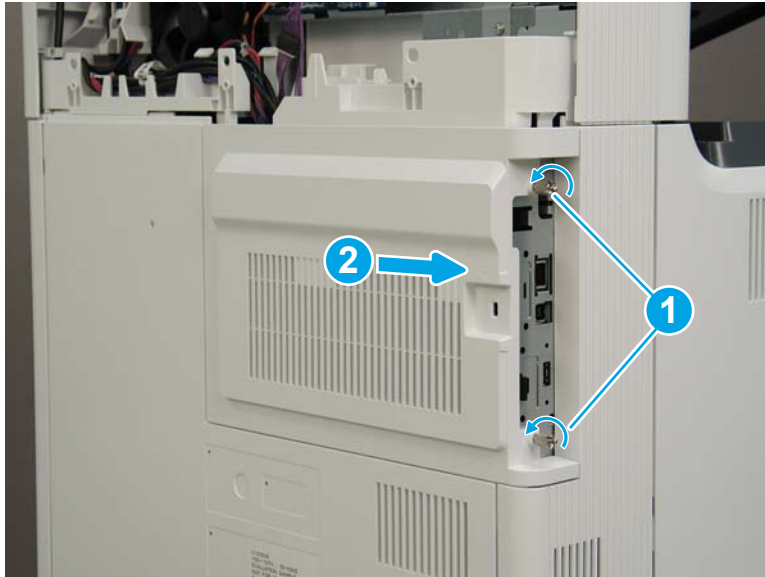

5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.


Figure 1-551 Cable routing for M681dh, M681f, and Flow M681f





6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-552 Disconnect two connectors

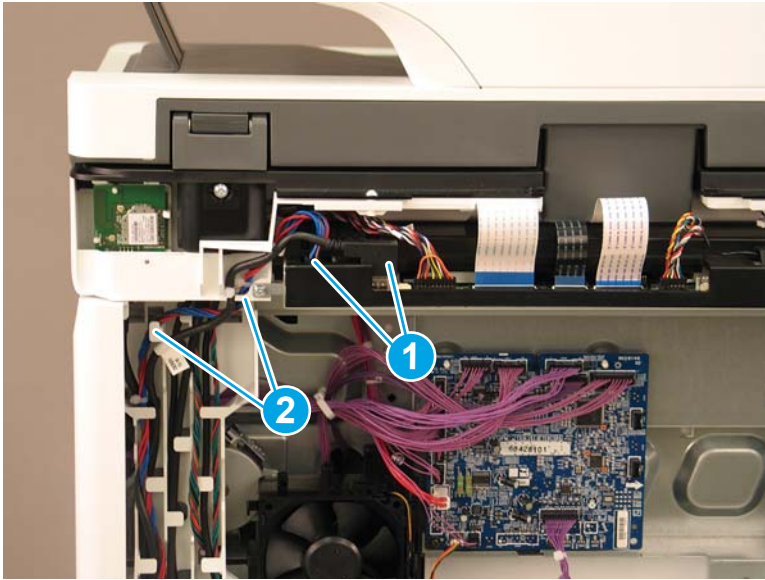


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-553 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

**Figure 1-554** Disconnect the wireless connector

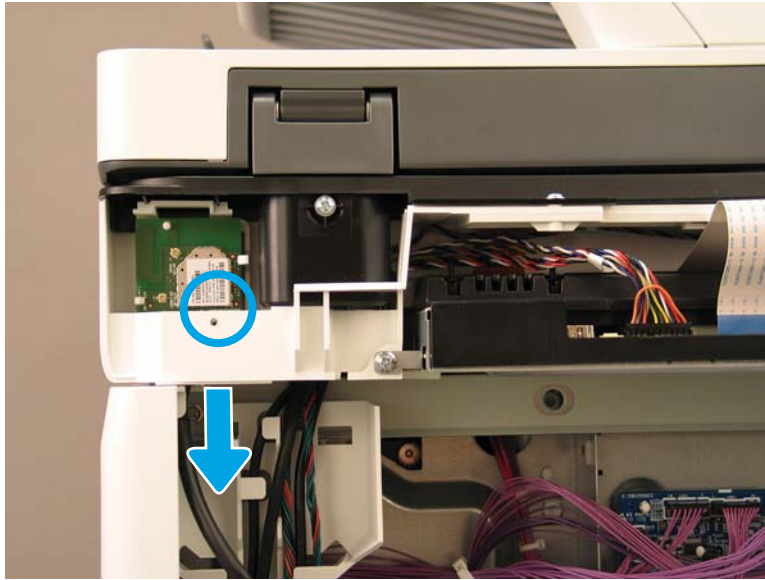


9. Release all of the cables from the cable guides (callout 1).

**Figure 1-555** Release the cables

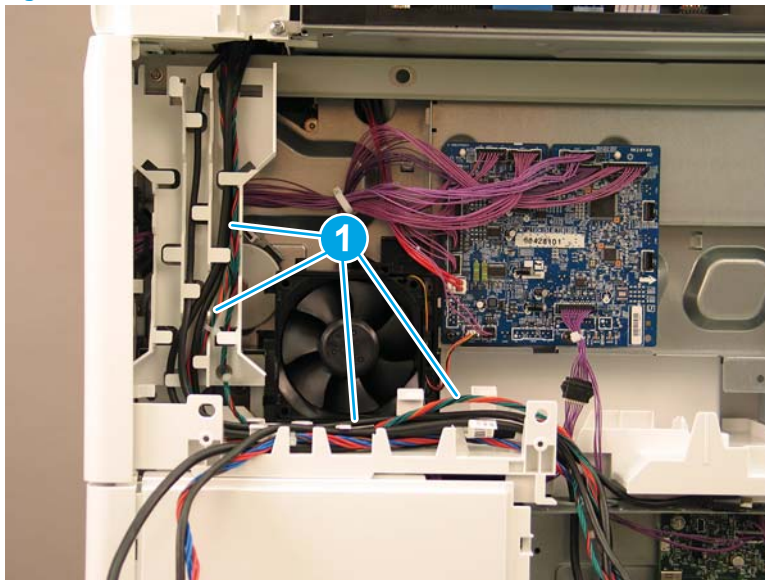


10. At the back of the printer, remove four screws (callout 1).

Figure 1-556 Remove four screws

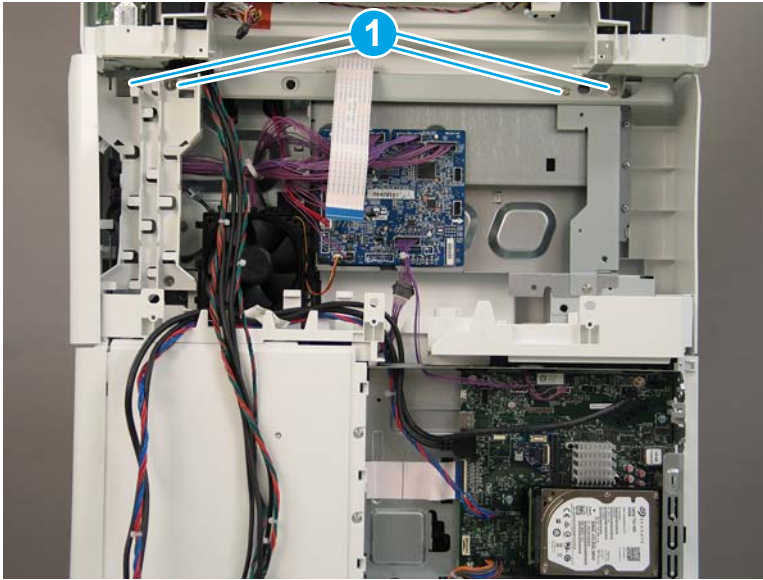

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-557 Remove three screws

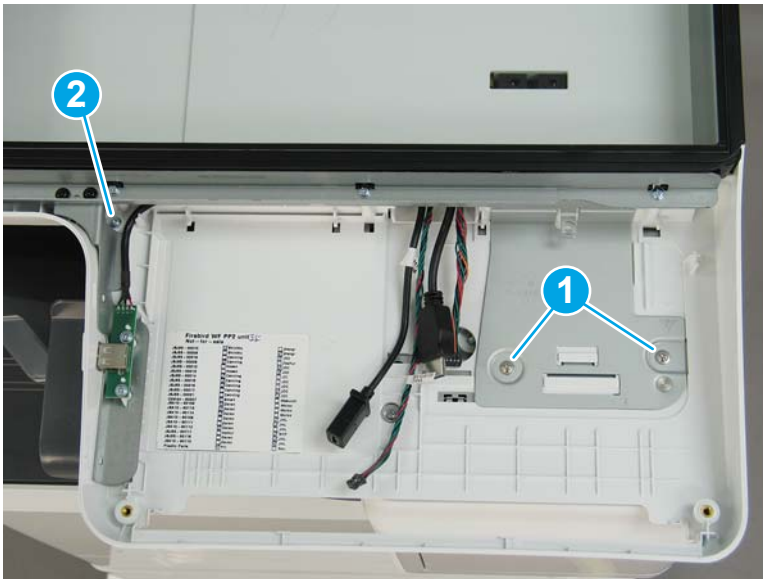



12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-558** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-559** Remove the wireless card

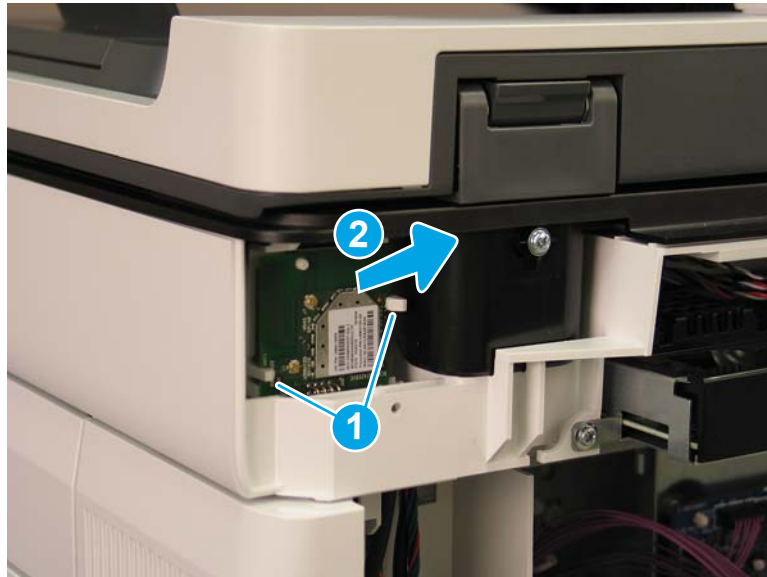


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-560 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-561 Reinstall the wireless card

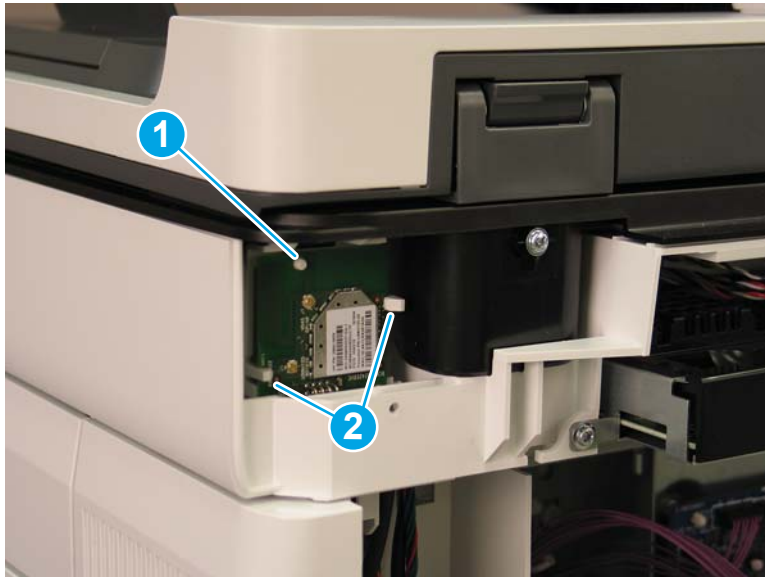


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

**Figure 1-562** Install the SCB cables

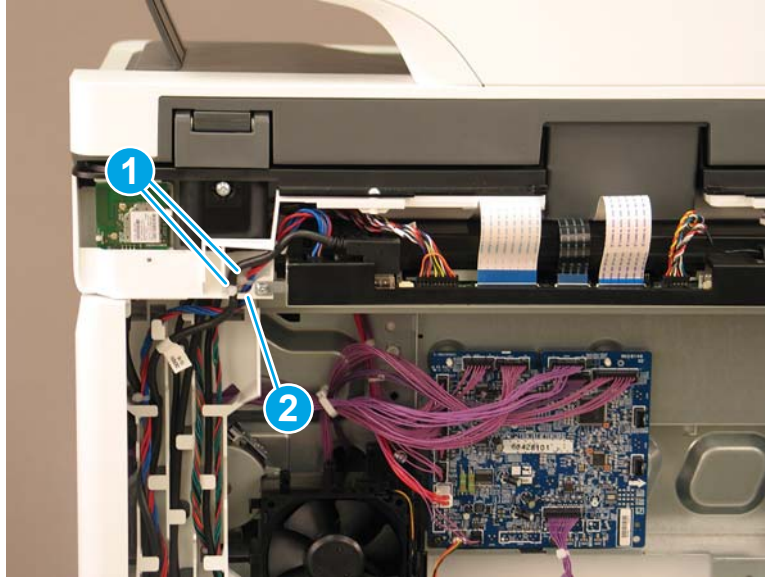

#### Step 5: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 376


1. Open the front door.

**Figure 1-563** Open the front door




2. Open the stapler door.

Figure 1-564 Open the stapler door

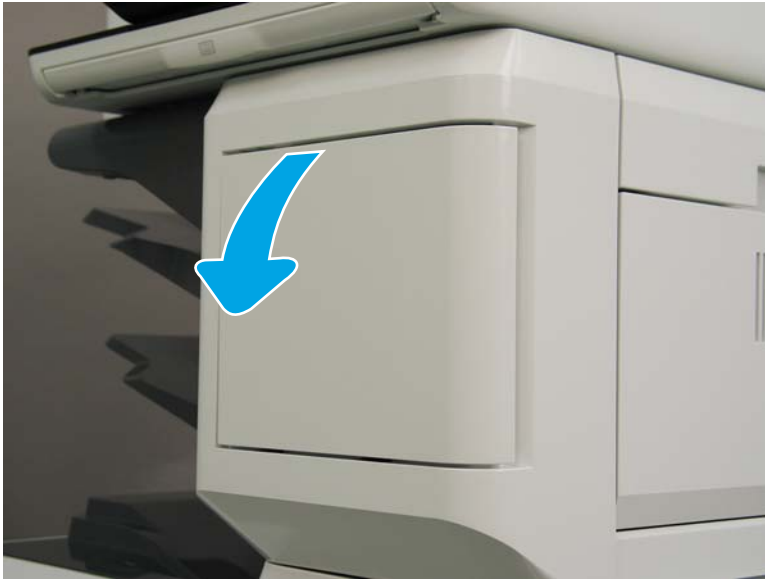

3. Release the latch, and then remove the staple cartridge.

Figure 1-565 Remove the staple cartridge

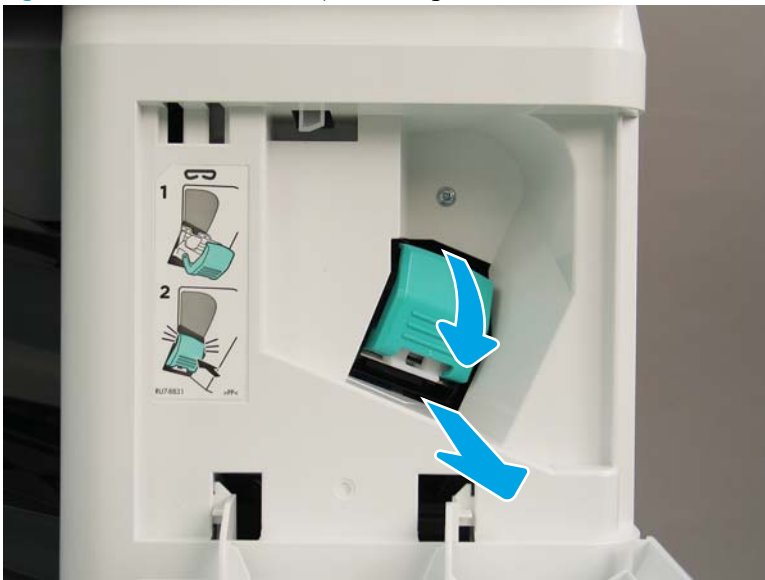

4. Remove one screw (callout 1).

Figure 1-566 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-567 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-568 Remove one screw

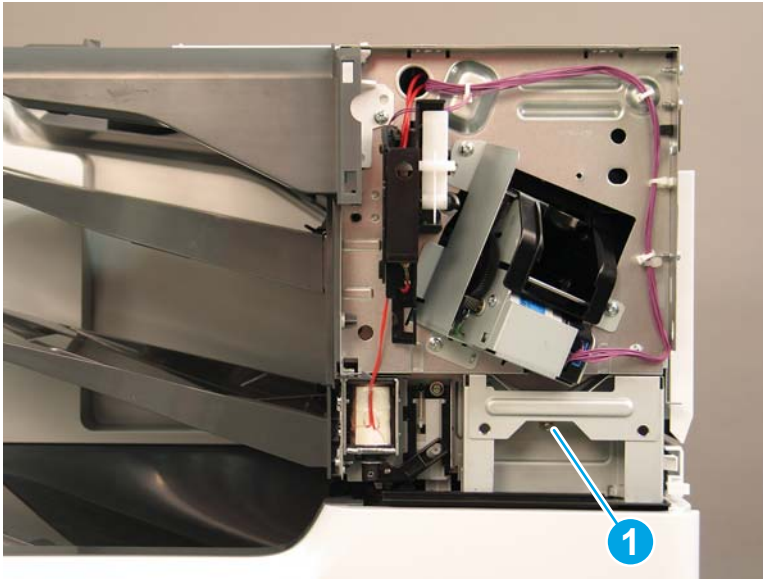


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-569 Remove the stapler/stacker right upper cover

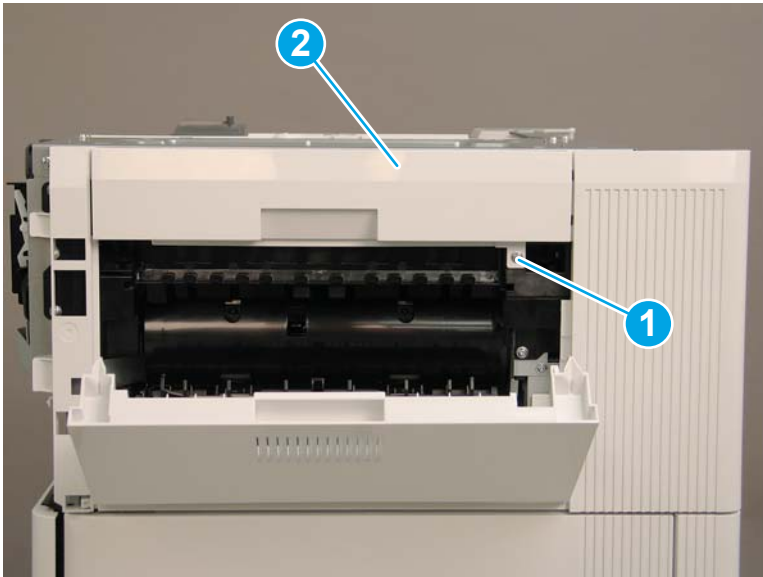


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-570 Remove the stapler rear cover

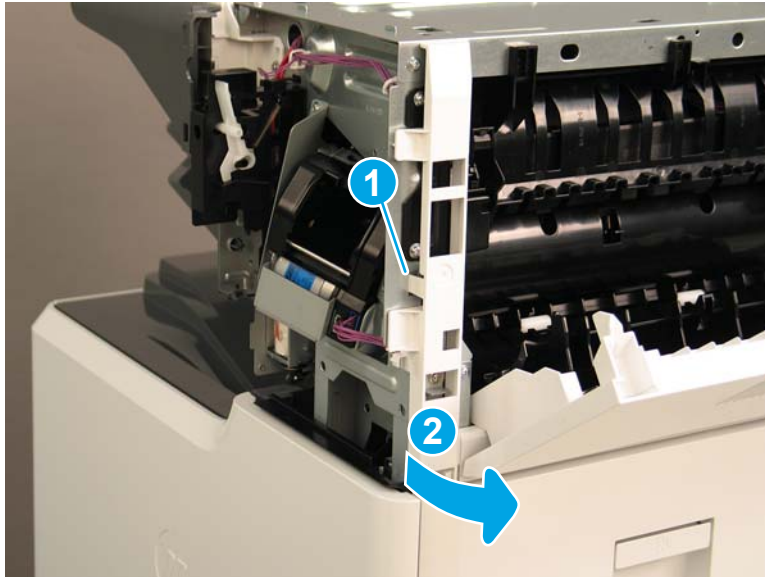

9. Pull the stapler/stacker rear corner cover away from the printer to remove it.


Figure 1-571 Remove the stapler/stacker rear corner cover

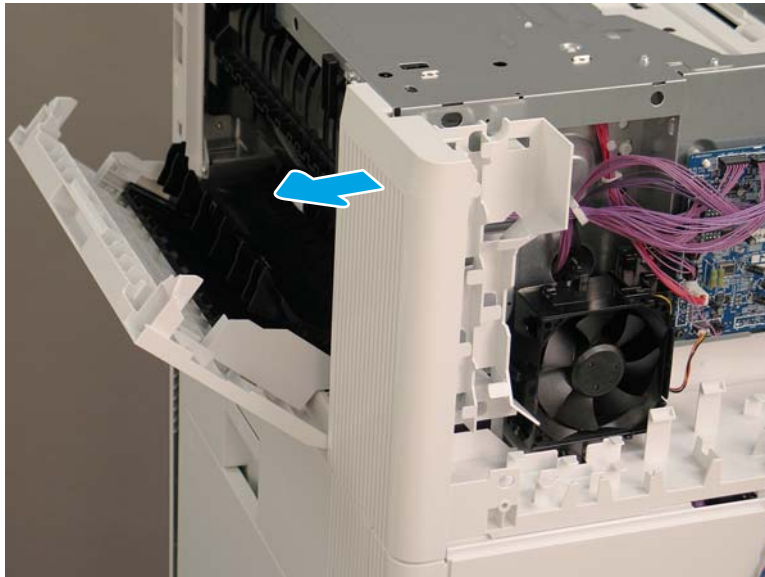




10. Remove two screws (callout 1).

Figure 1-572 Remove two screws

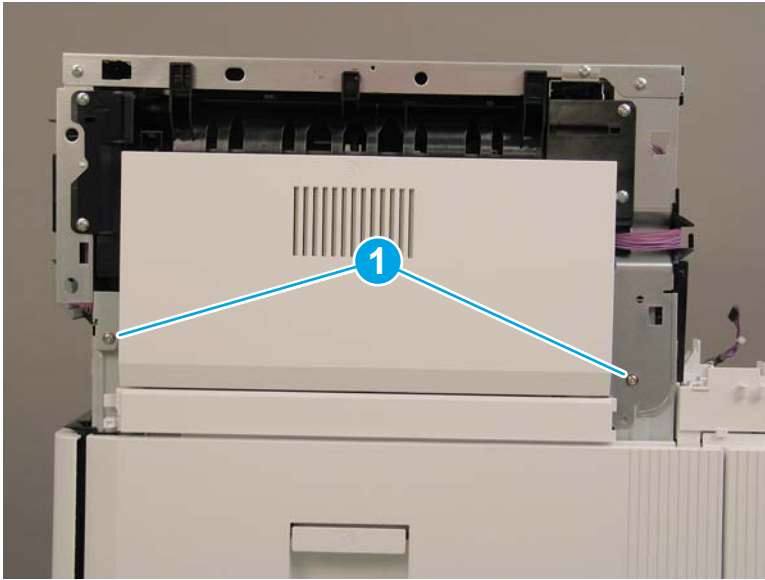

11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).


Figure 1-573 Remove the cable guide

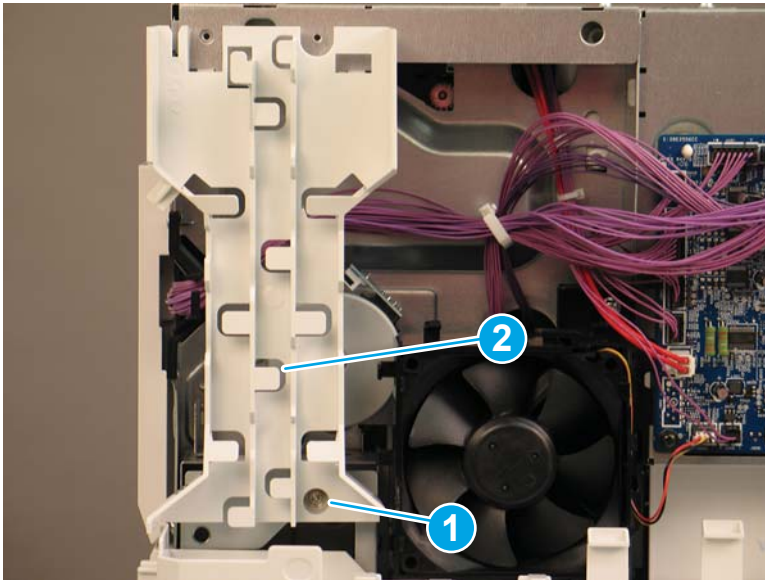



12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-574 Disconnect one connector

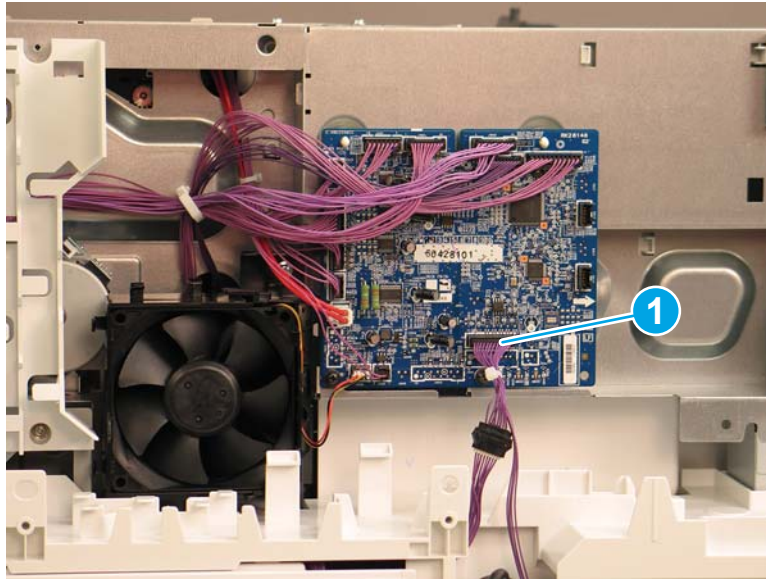

13. Remove two screws (callout 1).


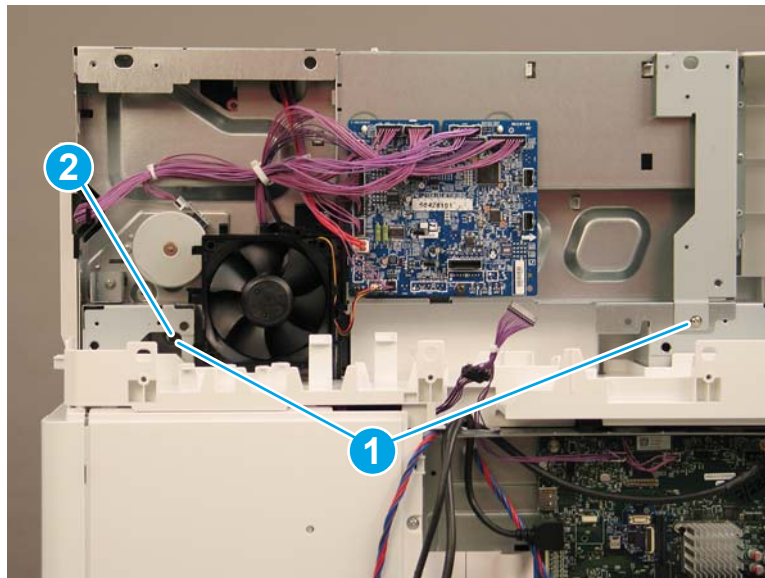

 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.


Figure 1-575 Remove two screws




14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-576** Remove the stapler/stacker

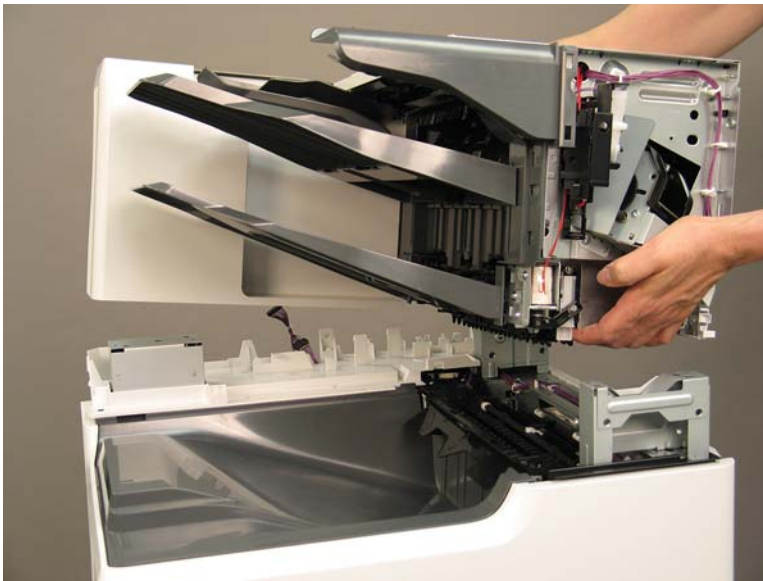


**Step 6: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-577** Remove the face-down front cover

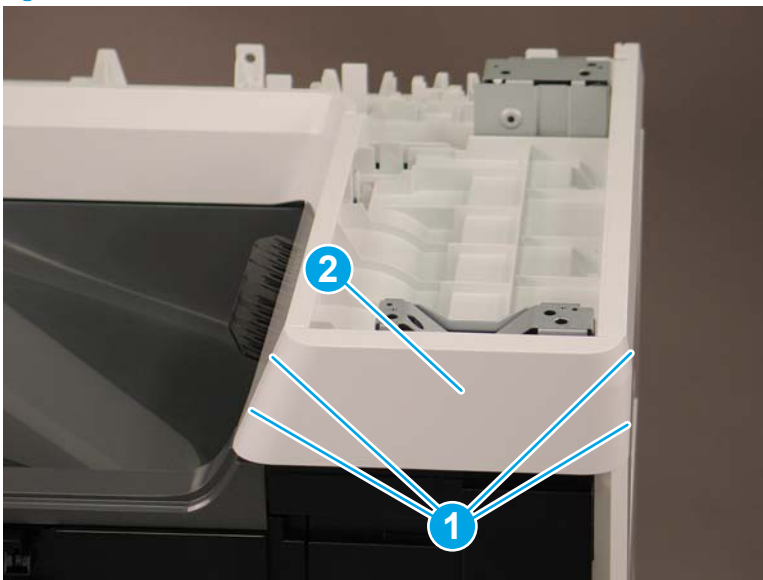

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Special installation instructions: Face-down front cover**


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-578** Install the cover

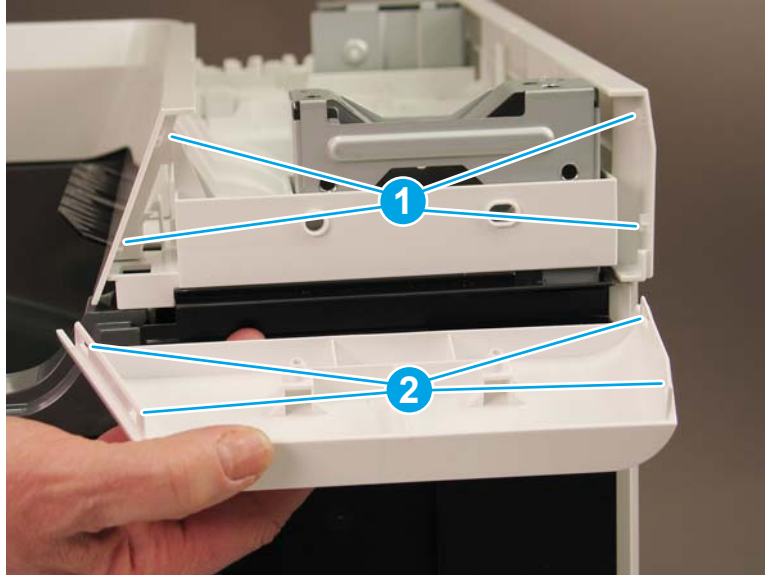

**Step 7: Remove the top cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)**


---

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

---


- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

---


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-579 Remove the top cover

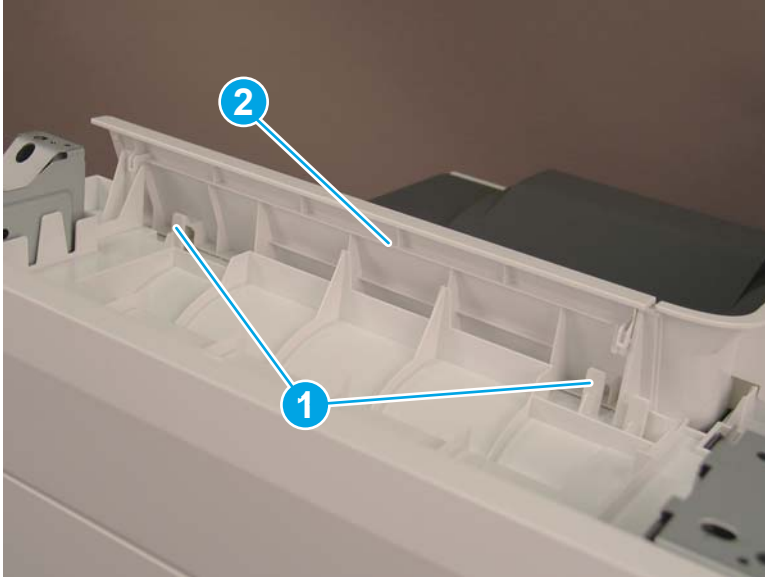

Step 8: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


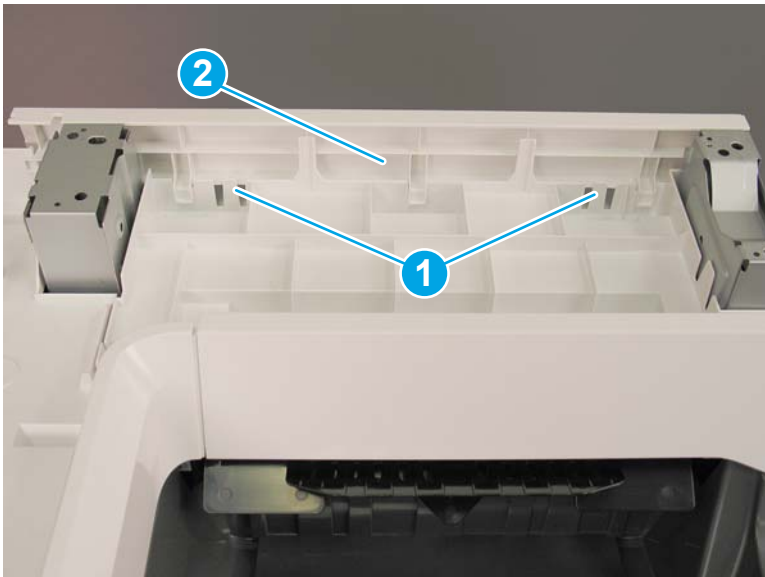

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-580 Remove the right cover




### Step 9: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)


▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-581 Remove the front cover

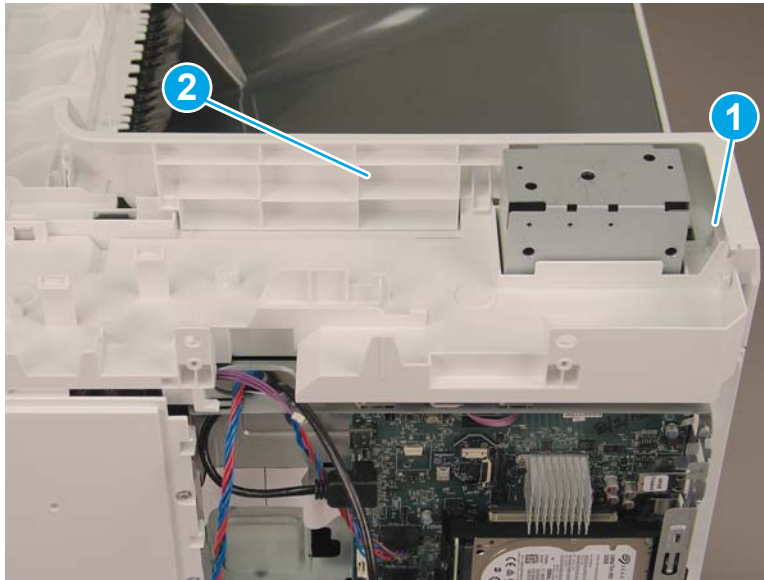

### Step 10: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).


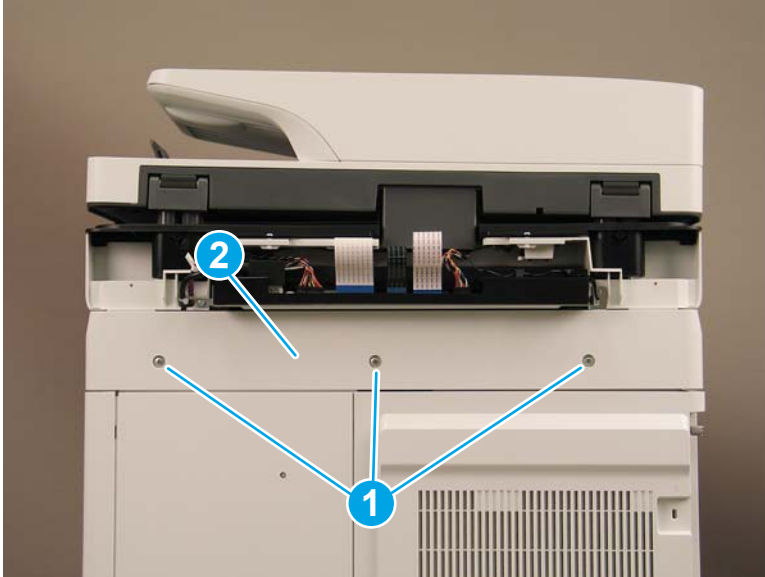

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-582 Remove the rear upper cover



Step 11: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 376

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


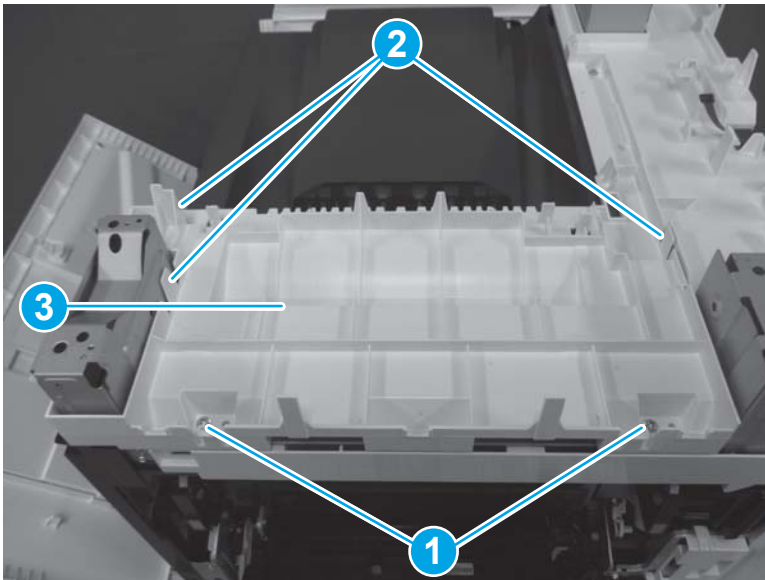

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-583 Remove two screws and the face-down cover






## Step 12: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 376](#)

1. Remove two screws (callout 1), and then release one tab (callout 2).


**Figure 1-584** Remove two screws and release one tab

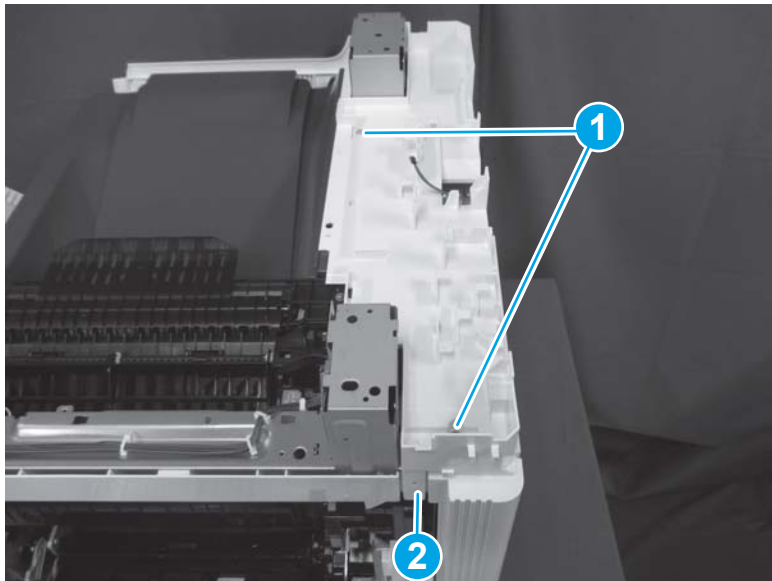


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-585** Remove one screw and the main cover

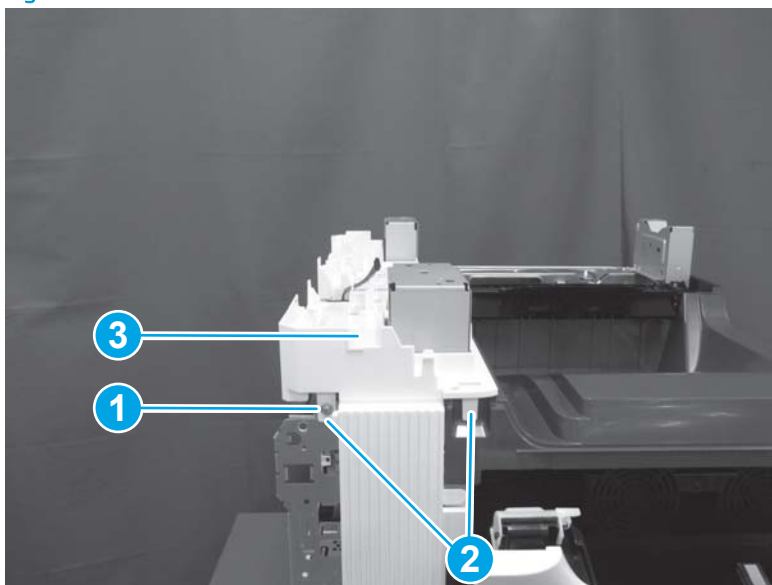

### Step 13: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 380](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-586** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-587** Remove the cover





3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-588** Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

**Figure 1-589** Release the control panel

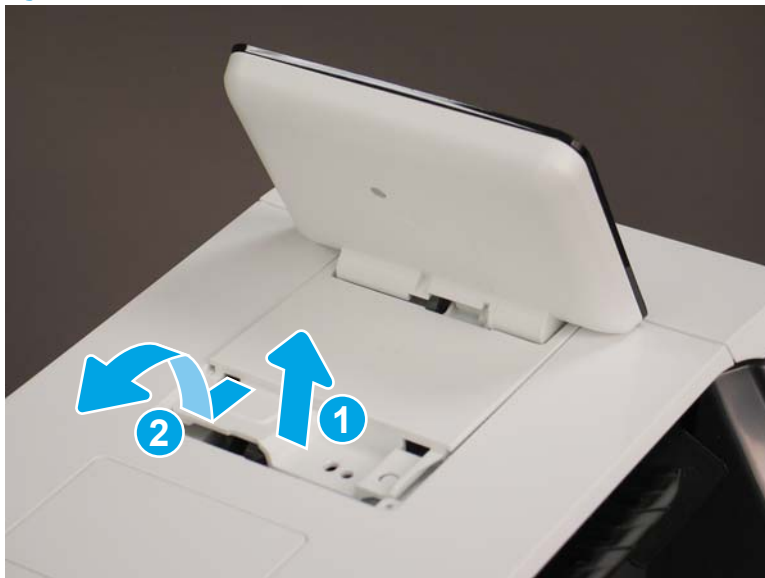

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-590** Disconnect two connectors

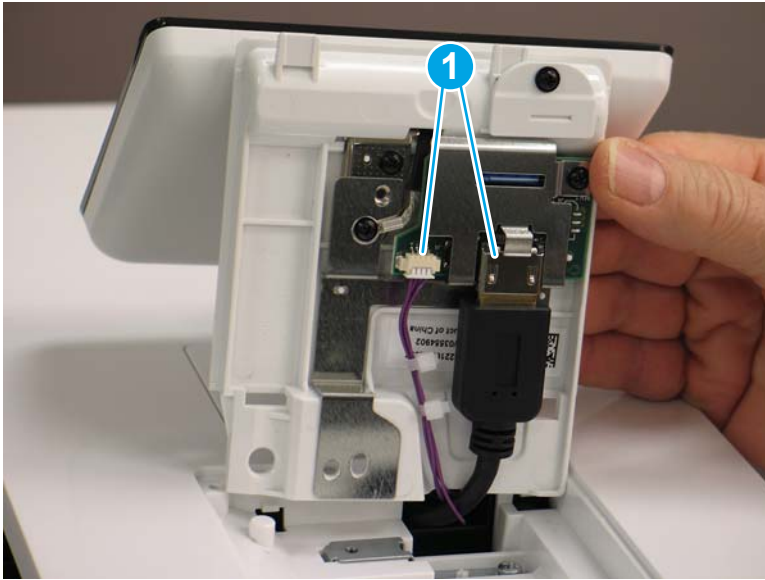


6. Remove the control panel.

**Figure 1-591** Remove the control panel




#### Step 14: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 380](#)

1. Open the following doors:


- Front door
  - Left door
  - Right door
2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-592 Remove the NFC cover

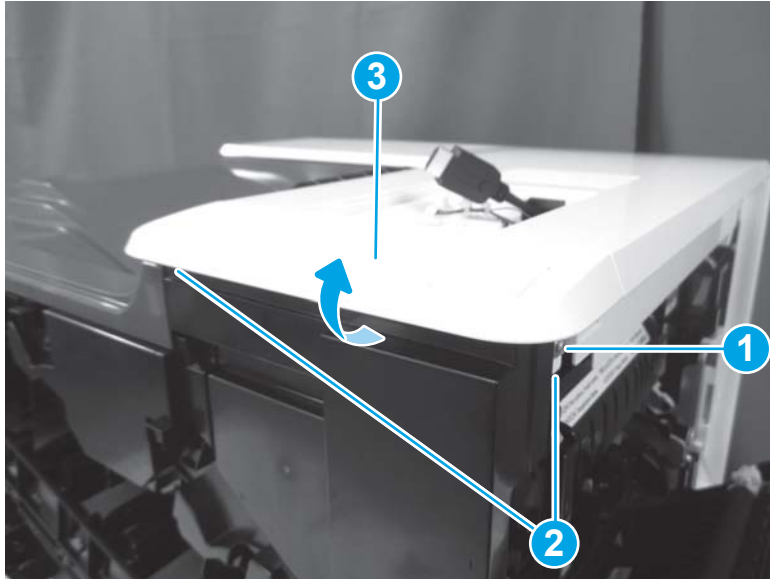


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-593 Remove one screw and release one tab

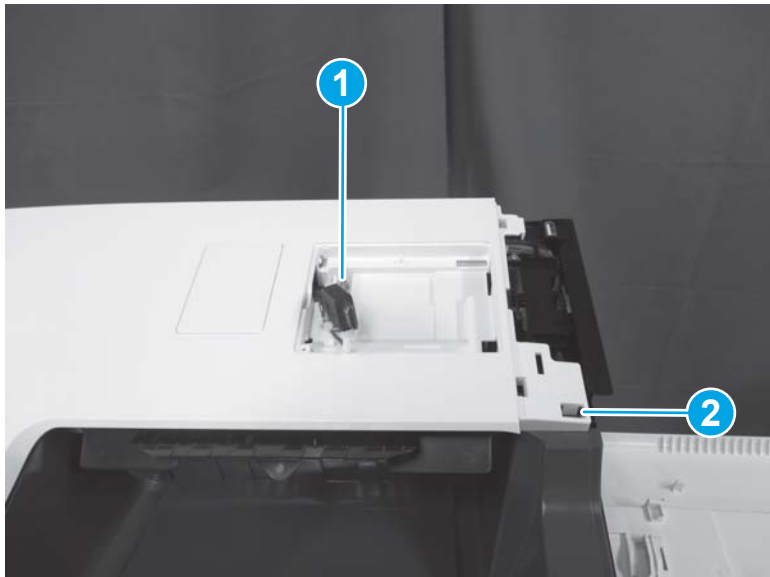

4. Release two tabs (callout 1).

Figure 1-594 Release two tabs

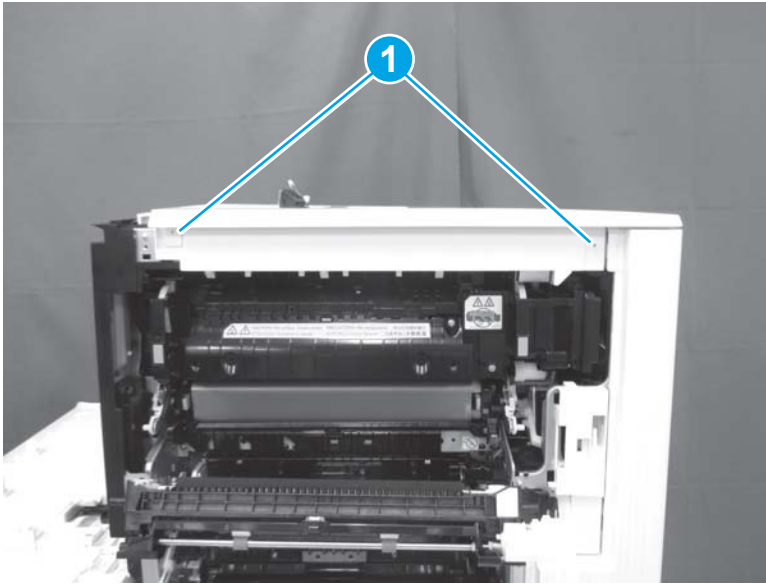


5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-595 Remove the top cover

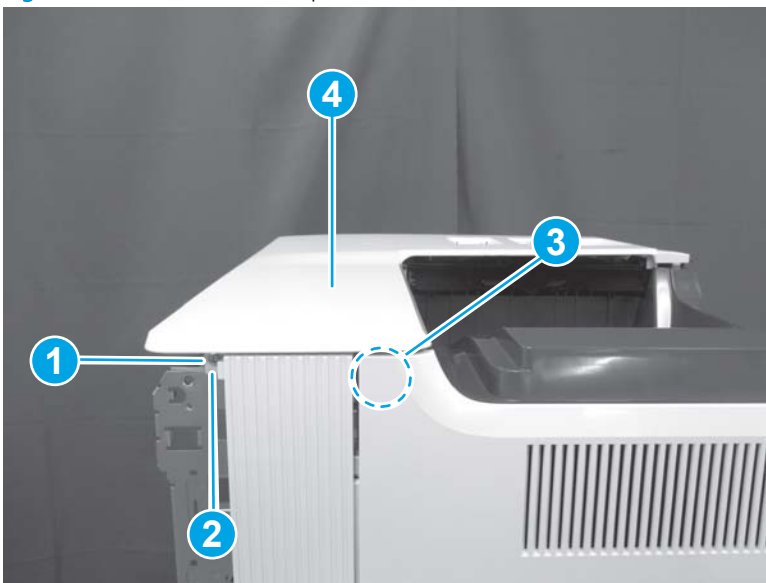


### Step 15: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


**Figure 1-596** Remove the output bin

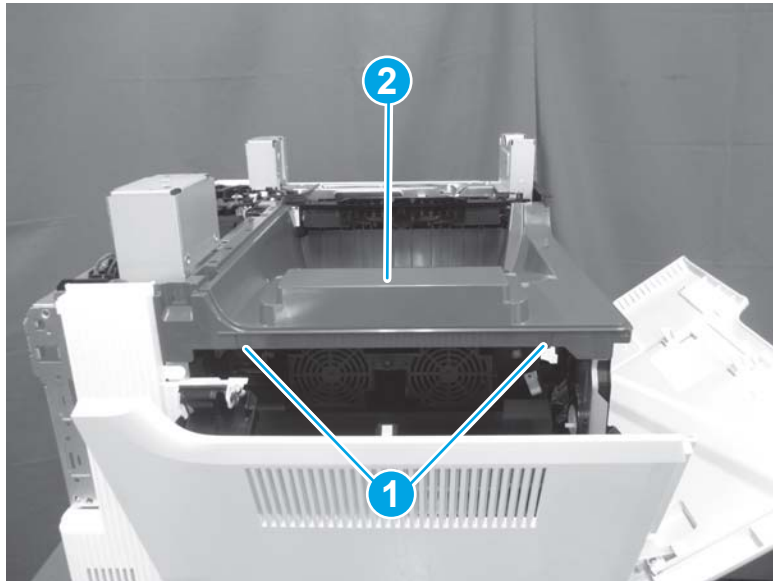

#### Step 16: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear cover

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear cover part number	
RM2-1951-000CN	Rear cover

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-597 Remove the formatter cover

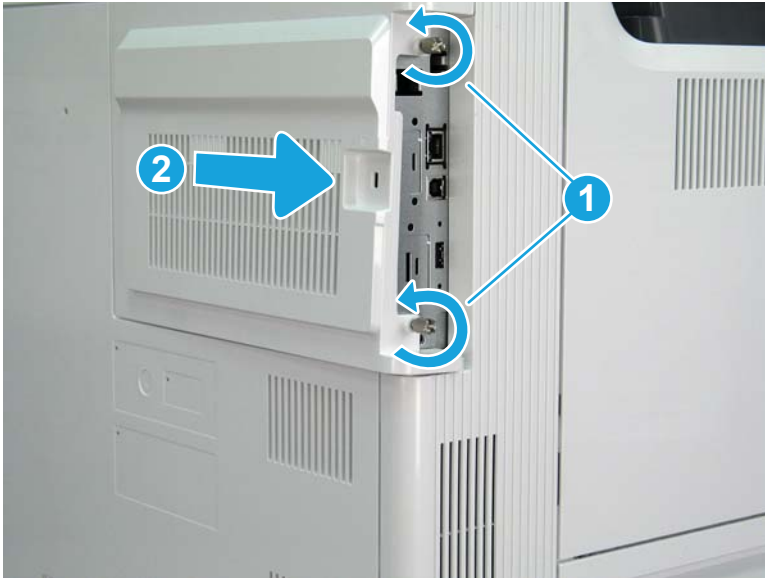

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-598 Remove the left rear cover

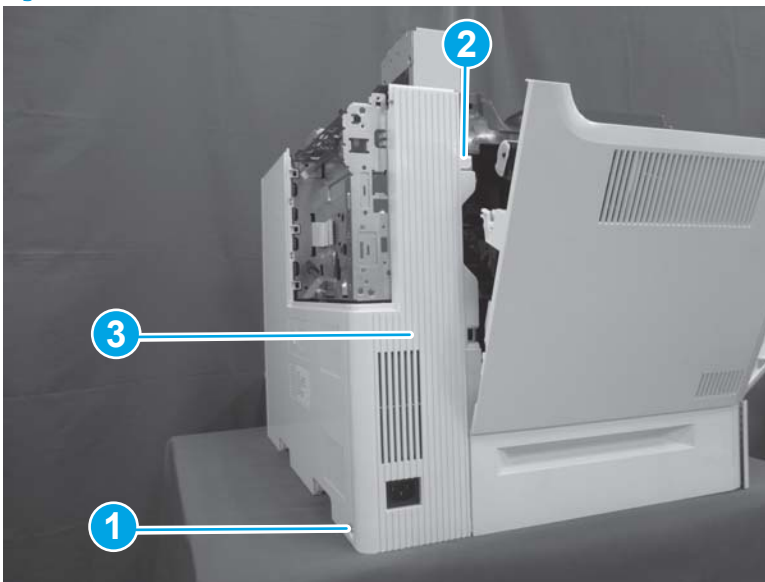

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


📝 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-599 Install the left rear cover

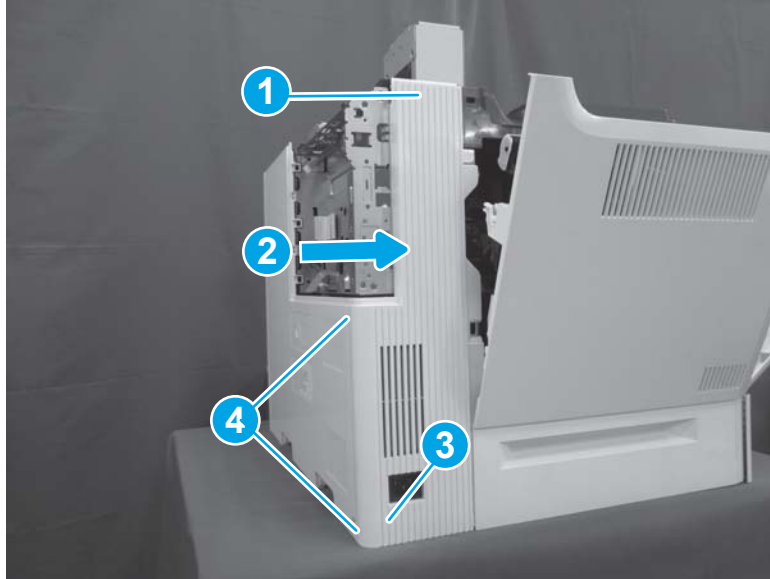


### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-600 Remove two screws and the rear cover

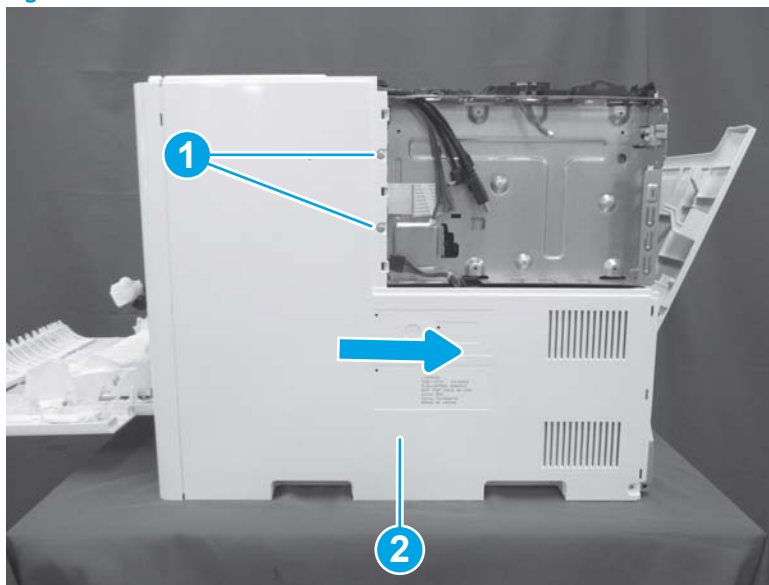

### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right rear cover

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the right rear cover](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right rear cover.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right rear cover part number	
RC4-6425-000CN	Right rear cover

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-601 Remove the formatter cover

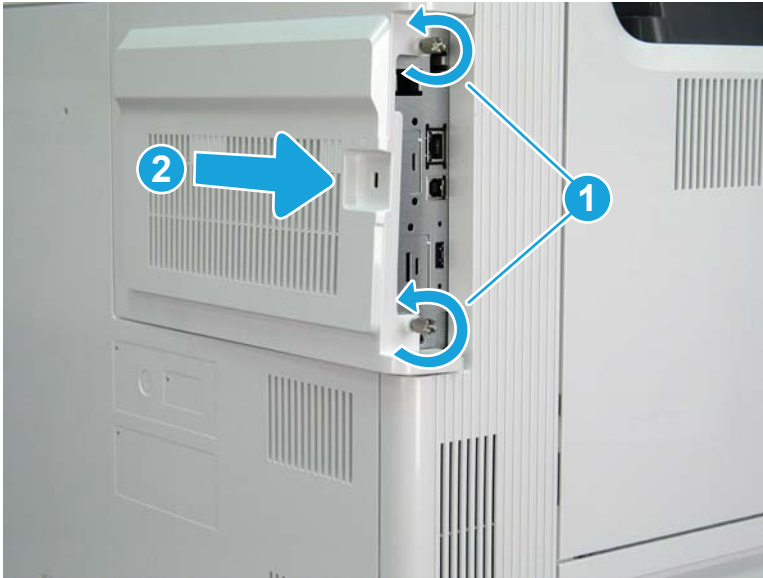

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-602 Remove the left rear cover

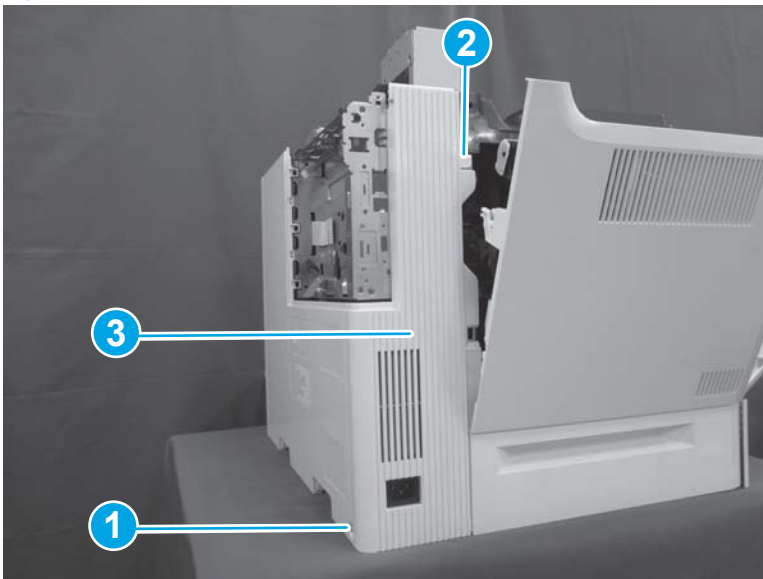

- Reverse the removal steps to install the assembly. Also use the following special installation instructions.




**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

**Figure 1-603** Install the left rear cover

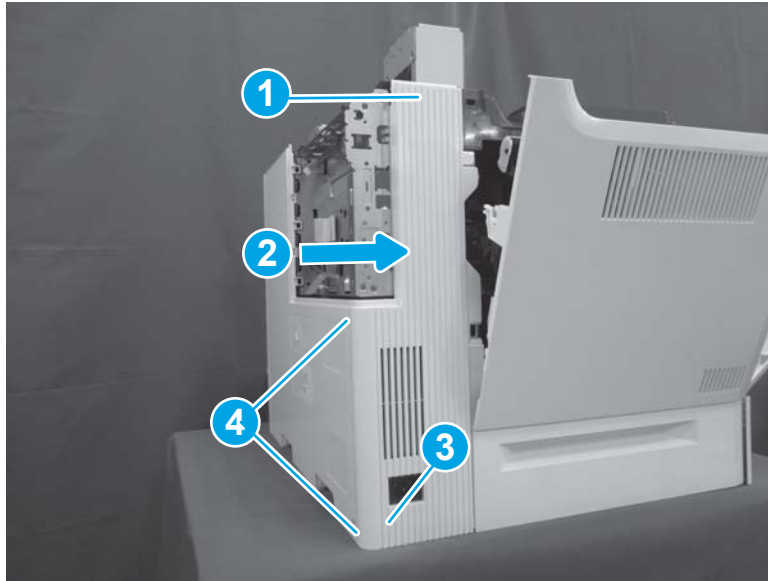


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.



**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-604 Remove two screws and the rear cover

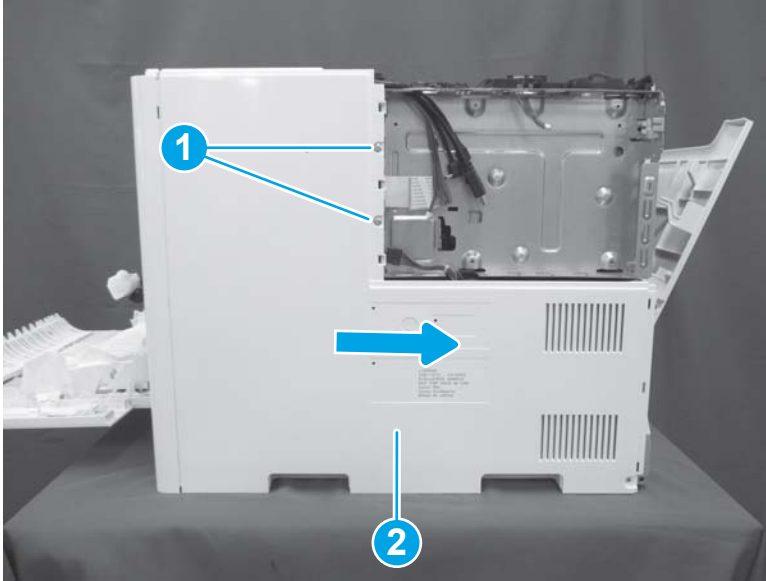


#### Step 4: Remove the right rear cover

- ▲ Remove one screw (callout 1), and then slide the right rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-605 Remove one screw and the right rear cover

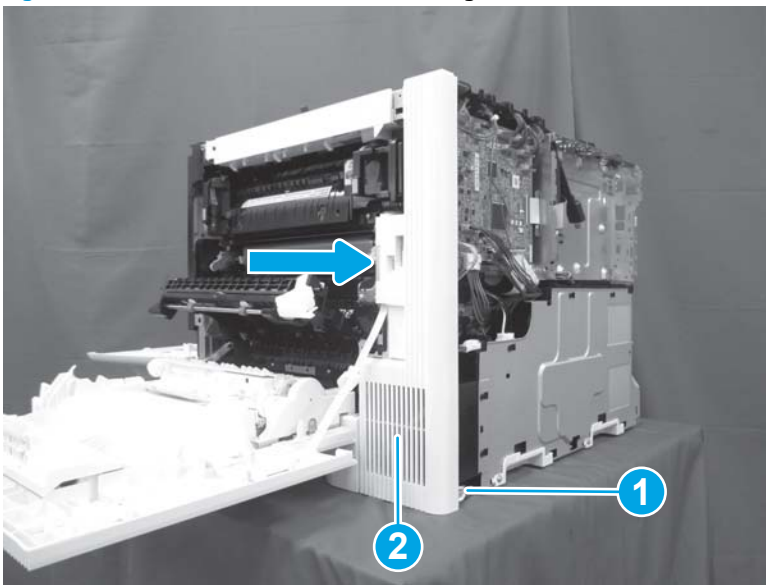

#### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right handle

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the right rear cover](#)
- [Step 5: Remove the right handle](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right handle.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)


---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right handle part number	
RM2-6659-000CN	Right handle

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.



## Post service test


No post service test is available for this assembly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-606 Remove the formatter cover

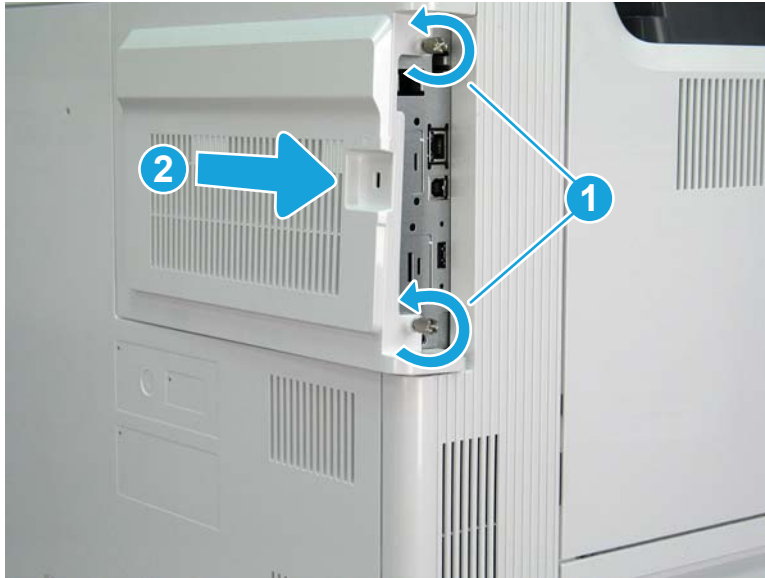

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-607 Remove the left rear cover

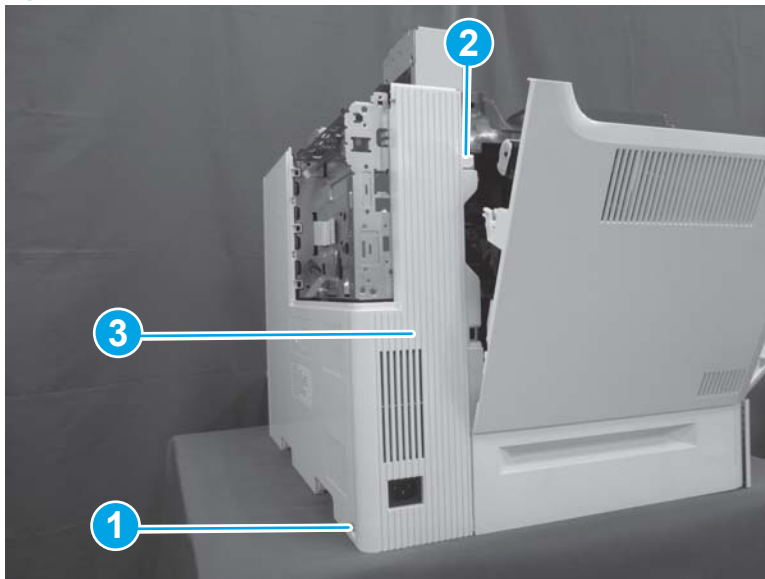


- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

**Figure 1-608** Install the left rear cover

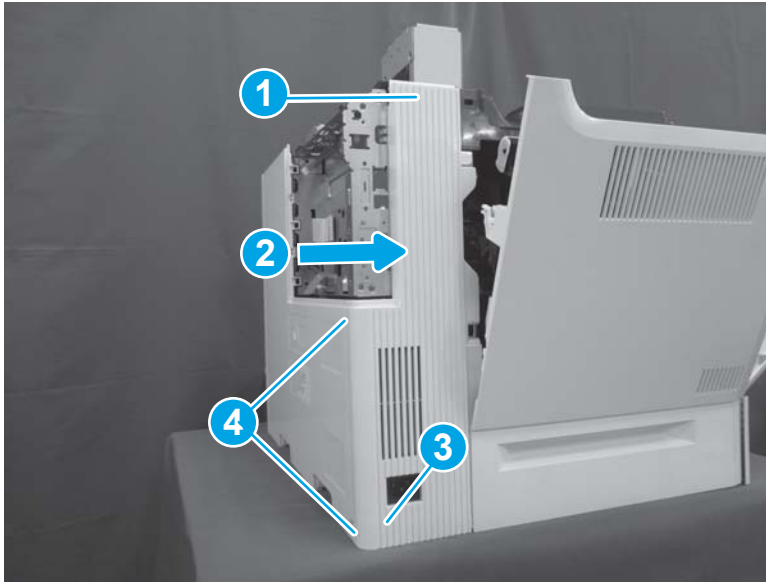


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-609 Remove two screws and the rear cover

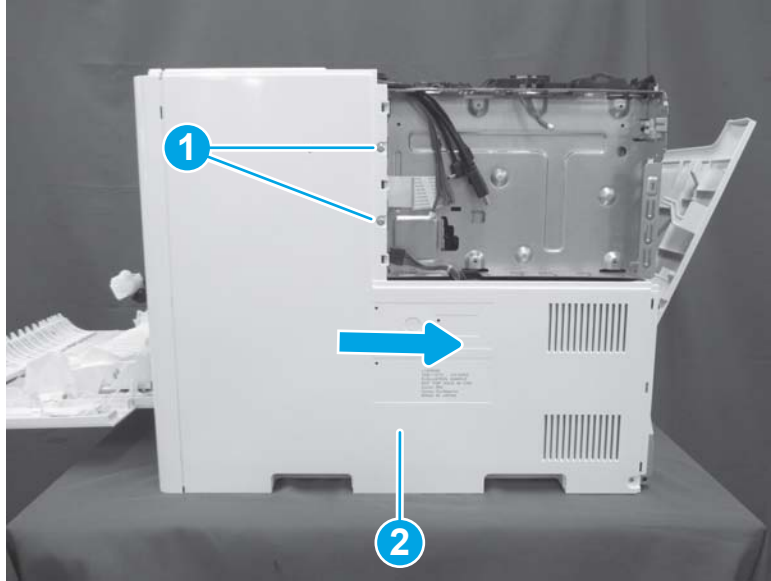


#### Step 4: Remove the right rear cover

- ▲ Remove one screw (callout 1), and then slide the right rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-610 Remove one screw and the right rear cover

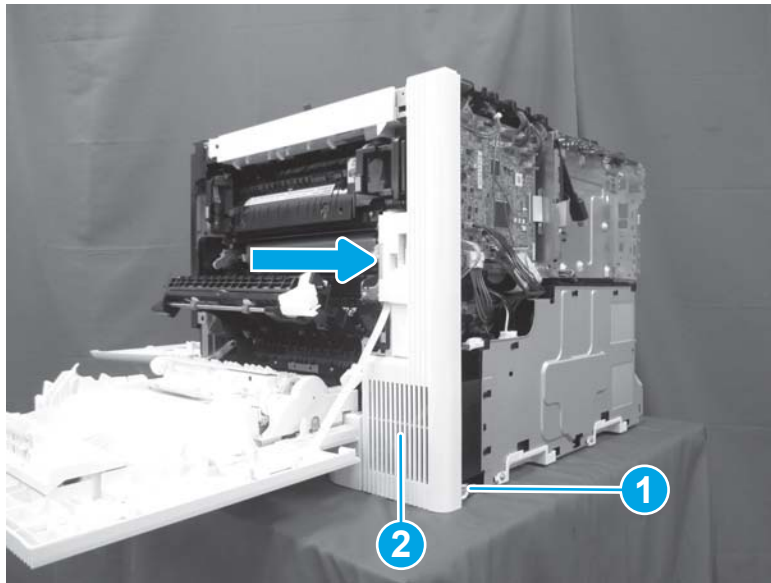

#### Step 5: Remove the right handle

1. Release one boss (callout 1), and then slide the right handle (callout 2) to the left to remove it.

Figure 1-611 Remove the right handle

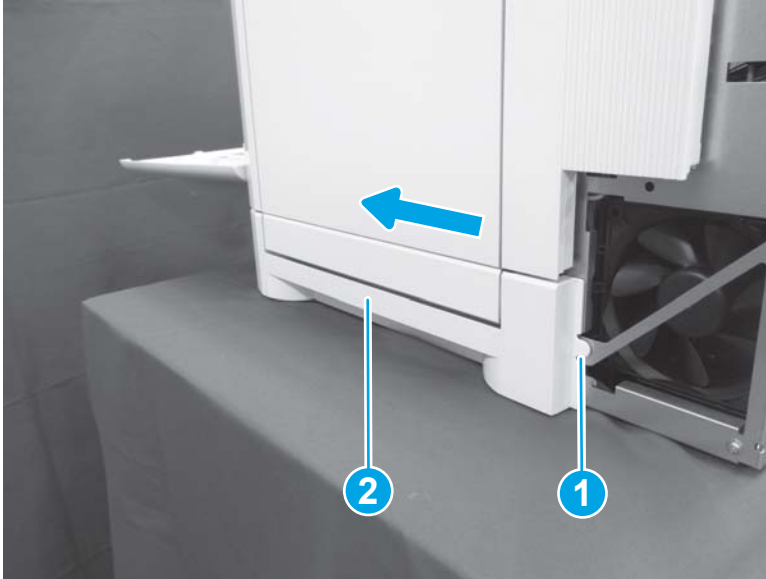


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right handle

- ▲ When reinstalling the right handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the lower, right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.


Figure 1-612 Install the right handle

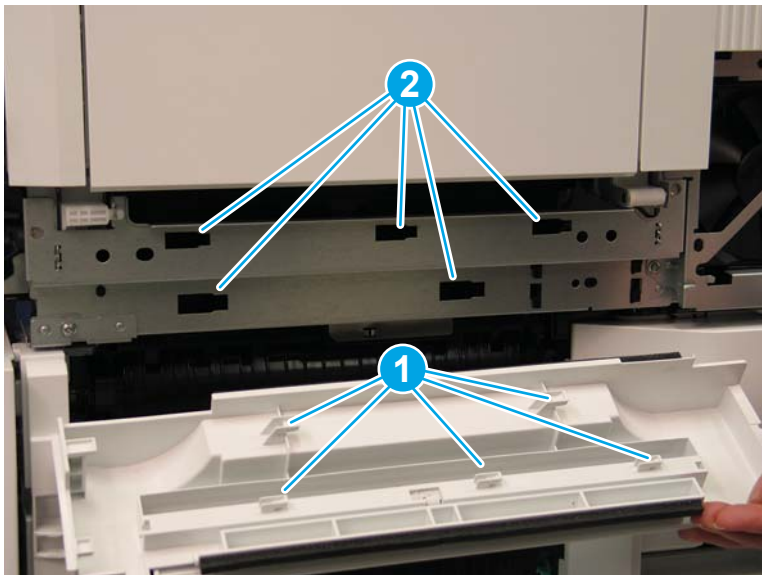

#### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left handle

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the left door](#)
- [Step 4: Remove the left handle](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left handle.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left handle part number	
RM2-1958-000CN	Left handle

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service


#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

No post service test is available for this assembly.


### Step 1: Remove the toner collection unit (TCU)

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


1. Open the front door.

Figure 1-613 Open the front door

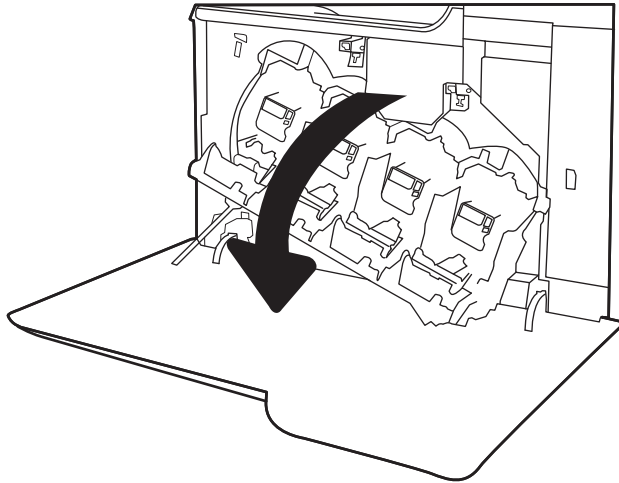


2. Open the left door.

Figure 1-614 Open the left door

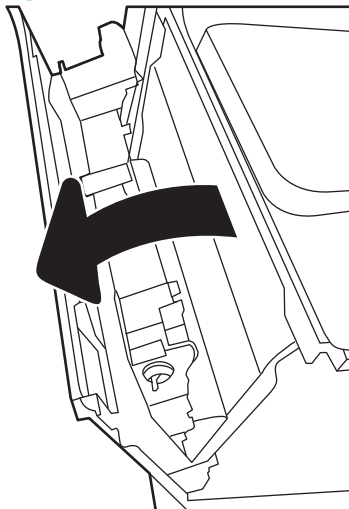

3. Grasp the top of the TCU and remove it from the printer.


Figure 1-615 Remove the TCU

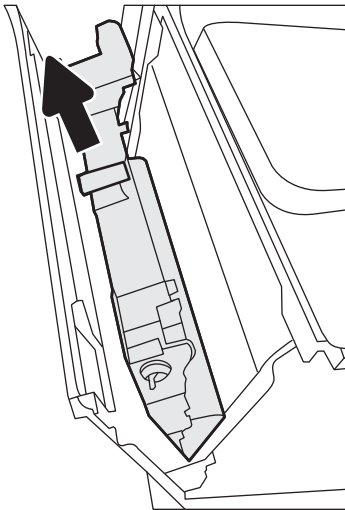

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-616 Remove the left rear cover

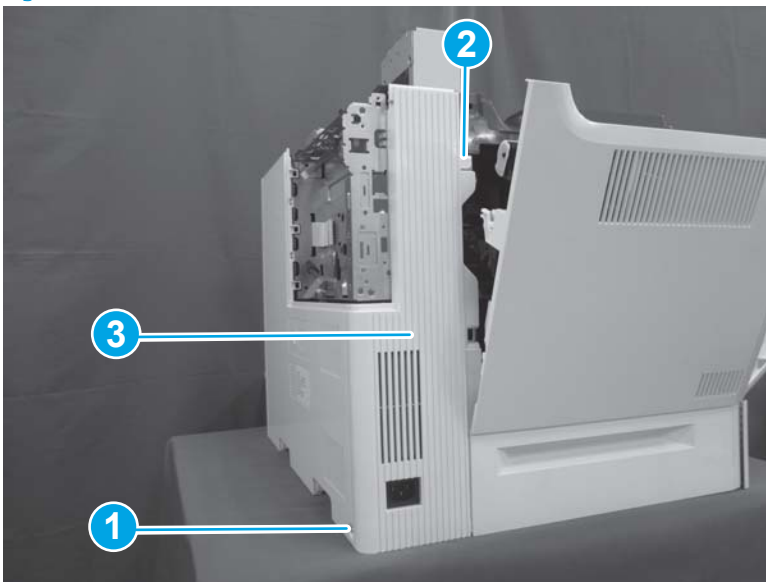

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.



Figure 1-617 Install the left rear cover

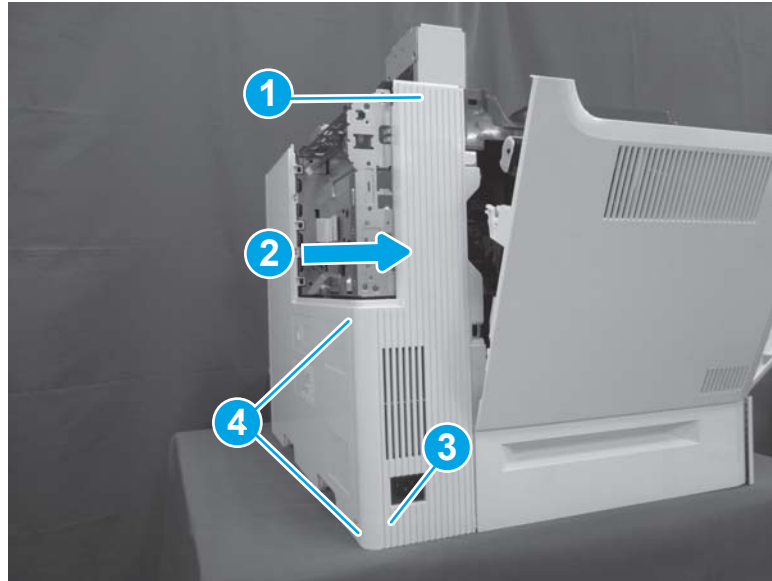

**Step 3: Remove the left door**


1. Open front door.


Figure 1-618 Open front door



2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.


---

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-619** Remove the left door

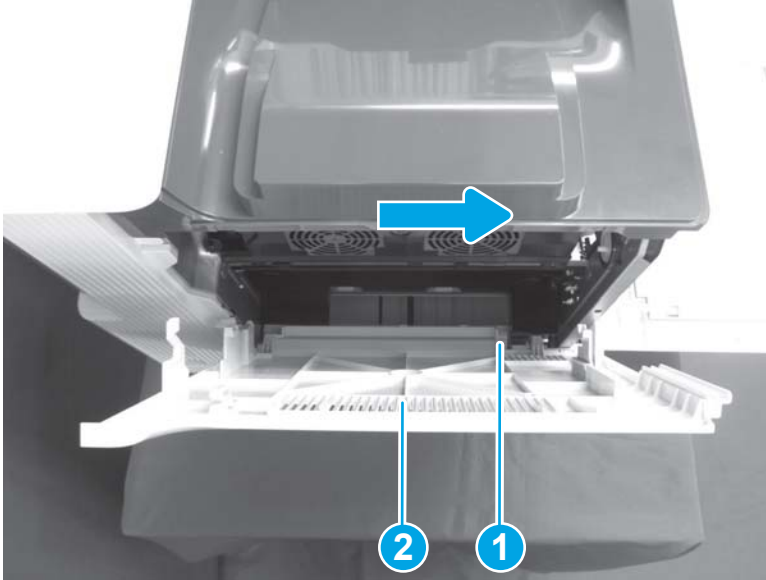

#### Step 4: Remove the left handle

1. Release one tab (callout 1), and then gently lift the left side of the handle away from the sheet metal. Slide the left handle (callout 2) toward the front of the printer to remove it.

**Figure 1-620** Remove the left handle

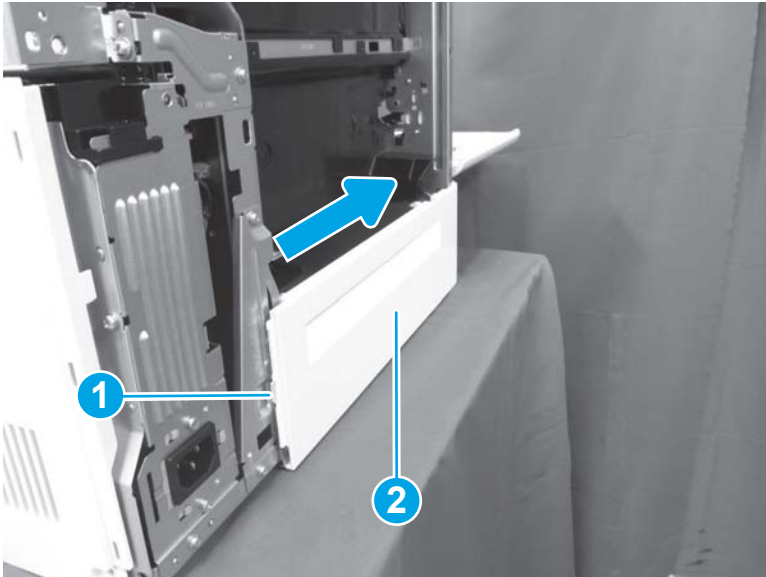

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

### Special installation instructions: Left handle

- ▲ When reinstalling the left handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.

Figure 1-621 Install the left handle

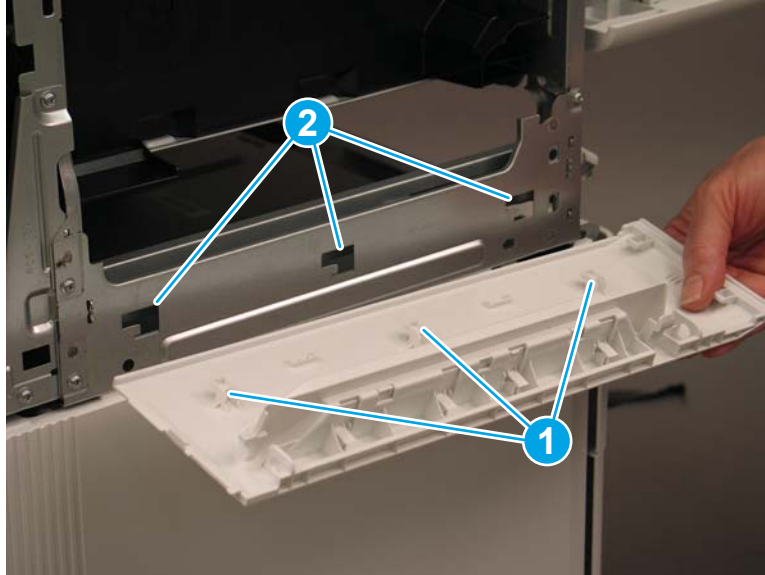



### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Document feeder and image scanner assemblies (M681/M682/E67550/E67560/E67650/E67660)


- [Removal and replacement: Document feeder](#)
- [Removal and replacement: Document feeder hinges](#)
- [Removal and replacement: Image scanner assembly](#)
- [Removal and replacement: Scanner control board](#)

## Removal and replacement: Document feeder

- [Introduction](#)
- [Step 1: Remove the document feeder](#)
- [Step 2: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the document feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder part numbers	
5851-7203	ADF whole unit kit (enterprise)
5851-7204	ADF whole unit kit (workflow)

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

Place a document in the document feeder and scan it. Verify that the document feeder works correctly.

### Step 1: Remove the document feeder


1. At the back of the printer, remove two screws (callout 1), and then remove the scanner rear cover (callout 2).

Figure 1-622 Remove the scanner rear cover

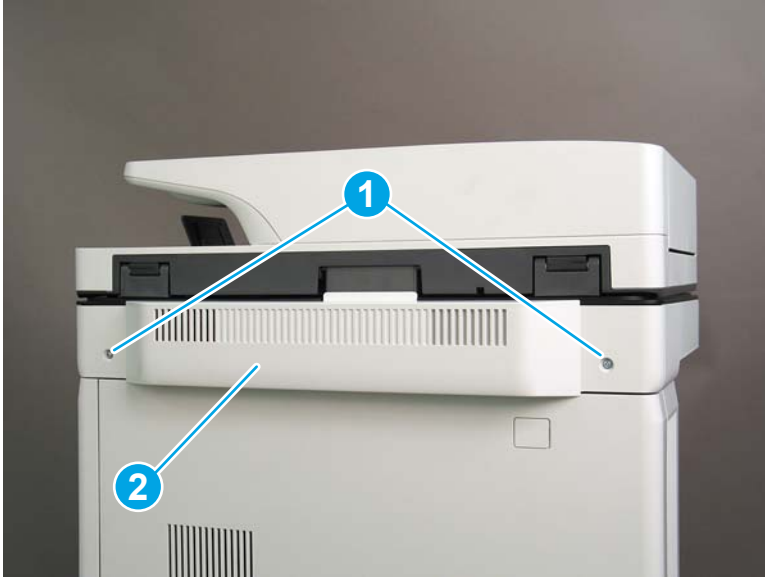


2. Lift the latches up toward the back of the document feeder to release two flat cables (callout 1), and then disconnect one connector (callout 2).

---

 **Reinstallation tip:** When reinstalling the flat cables, lift the latches, install the cables, and then lower the latches to secure the cables.


---

Figure 1-623 Disconnect three connectors

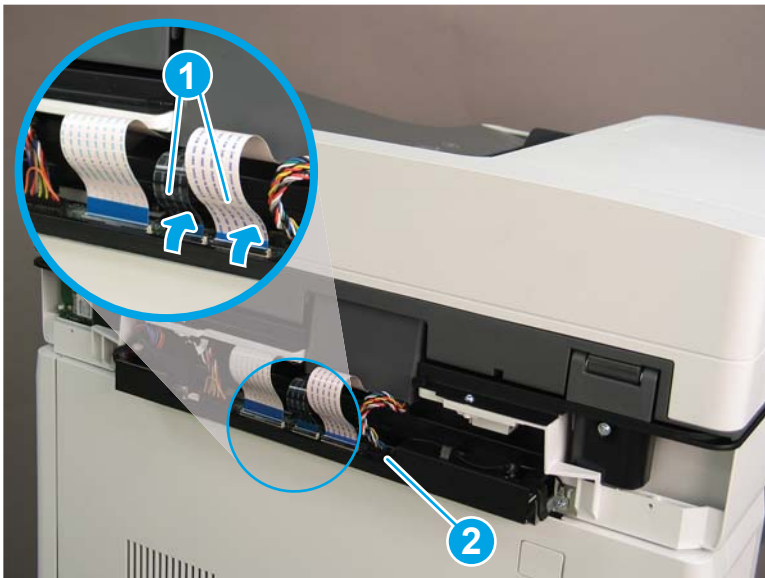

3. Remove two screws (callout 1). Release one ground screw (callout 2), and then release the ground wire (callout 3) from the cable guide.

Figure 1-624 Remove three screws

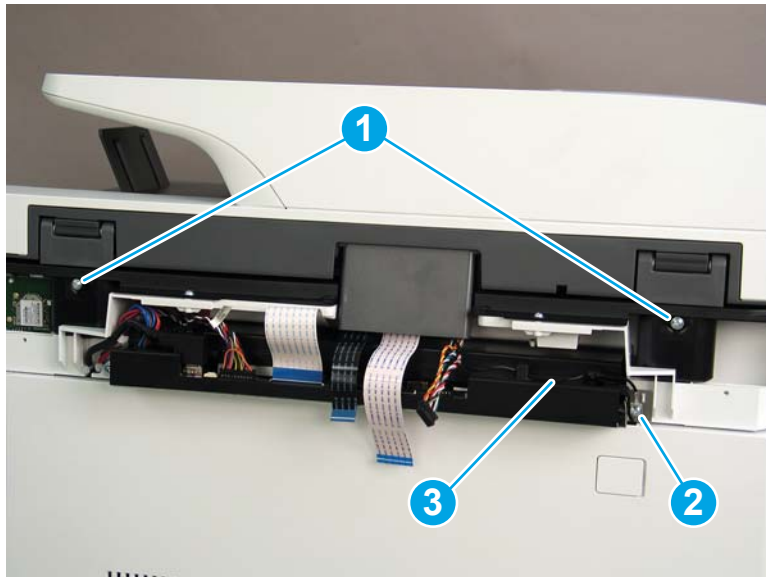

4. Open the document feeder.

Figure 1-625 Open the document feeder




5. Tilt the document feeder back until it stops (callout 1), and then lift it up until it stops (callout 2).

Figure 1-626 Tilt and lift the document feeder



6. Support the left side of the document feeder with one hand, and then use a small, flat-blad screwdriver to release two tabs on the document feeder hinges.

 **TIP:** Release the right hinge first


 **NOTE:** The tabs are located on the front side (scanner flatbed glass) of the hinges.

Figure 1-627 Release two tabs





- Lift the document feeder up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-628** Remove the document feeder




- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: Document feeder

- ▲ After installing the replacement document feeder, clean the scanner glass and the document feeder strips with a soft cloth or sponge that has been moistened with nonabrasive glass cleaner. Dry the glass and white plastic parts with a chamois or a cellulose sponge to prevent spotting.

 **CAUTION:** Do not use abrasives, acetone, benzene, ammonia, ethyl alcohol, or carbon tetrachloride on any part of the printer; these can damage the printer. Do not place liquids directly on the glass or platen. They might seep and damage the printer.


**Figure 1-629** Clean the scanner glass

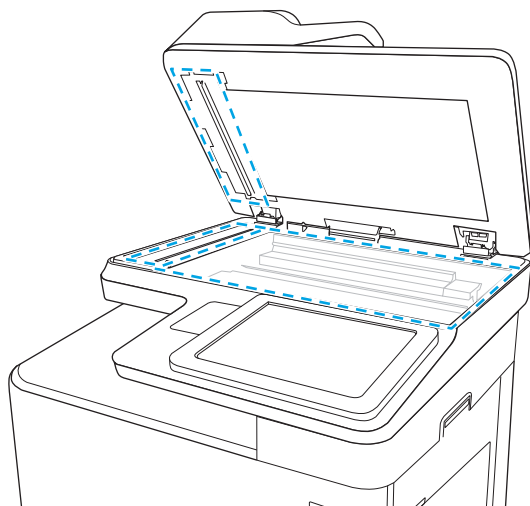

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Document feeder hinges

- [Introduction](#)
- [Step 1: Remove the document feeder](#)
- [Step 2: Remove the document feeder hinges](#)
- [Step 3: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the document feeder hinges.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Document feeder hinges part numbers	
J1H98-60028	ADF right hinge
J1H98-60027	ADF left hinge

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

Place a document in the document feeder and scan it. Verify that the document feeder works correctly.

### Step 1: Remove the document feeder

1. At the back of the printer, remove two screws (callout 1), and then remove the scanner rear cover (callout 2).

Figure 1-630 Remove the scanner rear cover

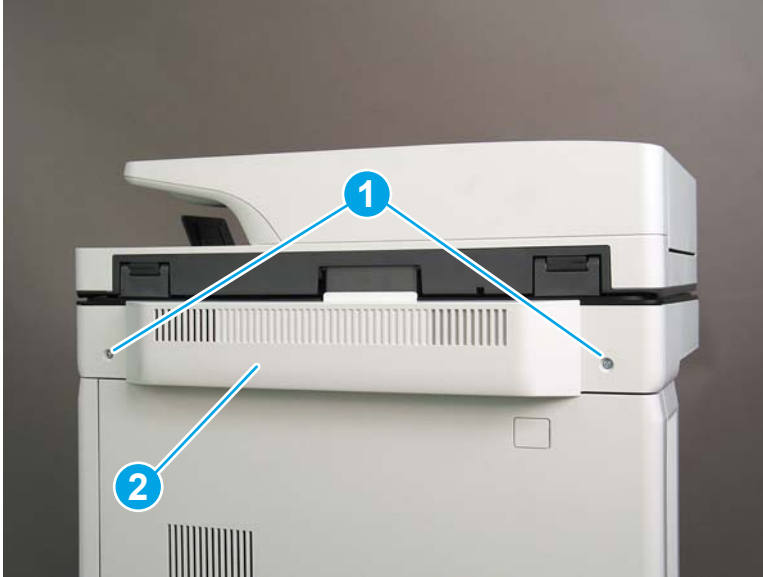


2. Lift the latches up toward the back of the document feeder to release two flat cables (callout 1), and then disconnect one connector (callout 2).

---

 **Reinstallation tip:** When reinstalling the flat cables, lift the latches, install the cables, and then lower the latches to secure the cables.


---

Figure 1-631 Disconnect three connectors

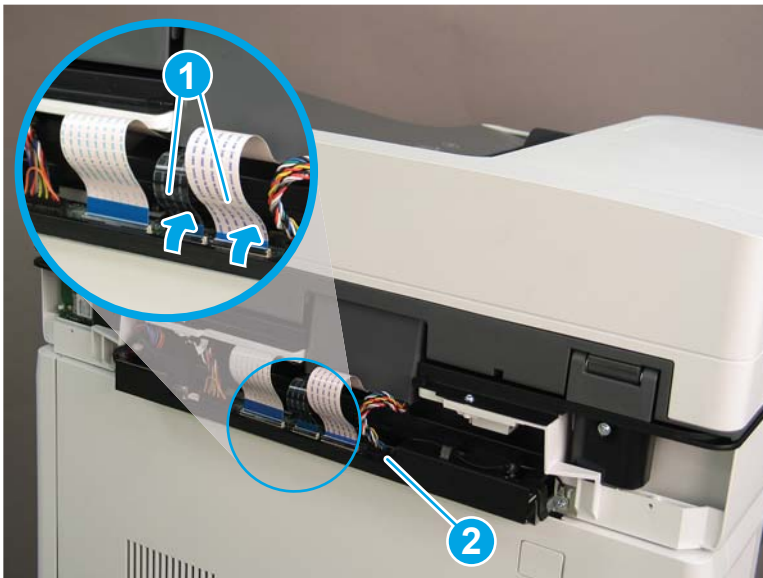

3. Remove two screws (callout 1). Release one ground screw (callout 2), and then release the ground wire (callout 3) from the cable guide.

Figure 1-632 Remove three screws

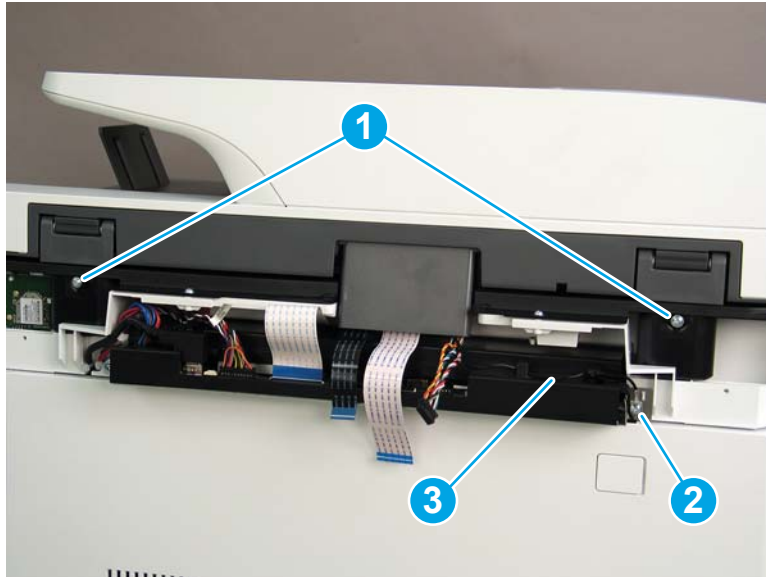

4. Open the document feeder.

Figure 1-633 Open the document feeder




5. Tilt the document feeder back until it stops (callout 1), and then lift it up until it stops (callout 2).

Figure 1-634 Tilt and lift the document feeder



6. Support the left side of the document feeder with one hand, and then use a small, flat-blad screwdriver to release two tabs on the document feeder hinges.


 **TIP:** Release the right hinge first

 **NOTE:** The tabs are located on the front side (scanner flatbed glass) of the hinges.

Figure 1-635 Release two tabs



- Lift the document feeder up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-636** Remove the document feeder




- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: Document feeder

- ▲ After installing the replacement document feeder, clean the scanner glass and the document feeder strips with a soft cloth or sponge that has been moistened with nonabrasive glass cleaner. Dry the glass and white plastic parts with a chamois or a cellulose sponge to prevent spotting.

 **CAUTION:** Do not use abrasives, acetone, benzene, ammonia, ethyl alcohol, or carbon tetrachloride on any part of the printer; these can damage the printer. Do not place liquids directly on the glass or platen. They might seep and damage the printer.


**Figure 1-637** Clean the scanner glass

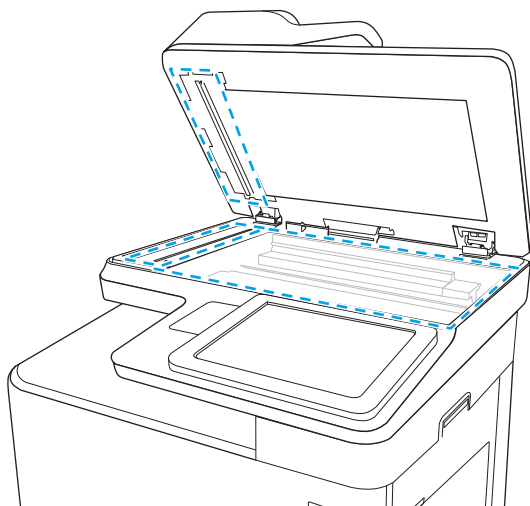


## Step 2: Remove the document feeder hinges

1. Lay the document feeder on a flat surface so that the white backing is facing up. Remove four screws on each hinge (callout 1), and then remove the hinges.

Figure 1-638 Remove eight screws

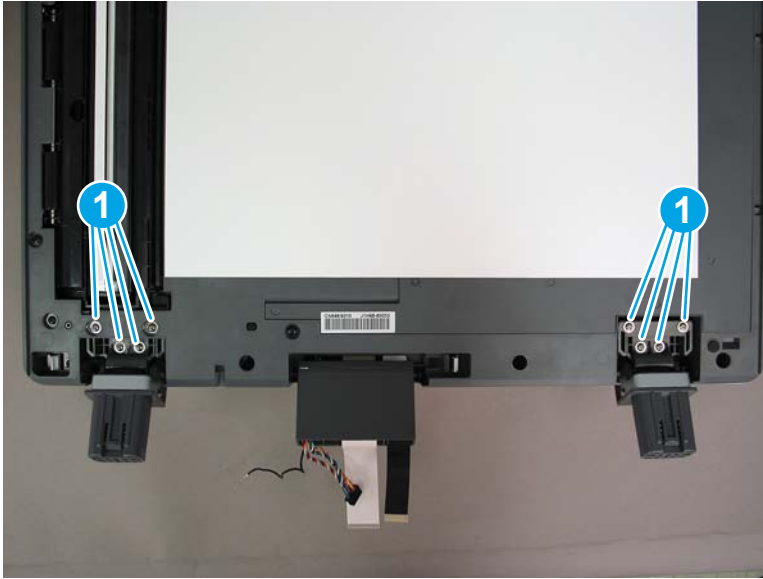


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Document feeder hinges

- ▲ When installing the new hinges, note that the hinges are not identical. The left hinge has a brush attached to it (callout 1).

Figure 1-639 Note the hinge difference

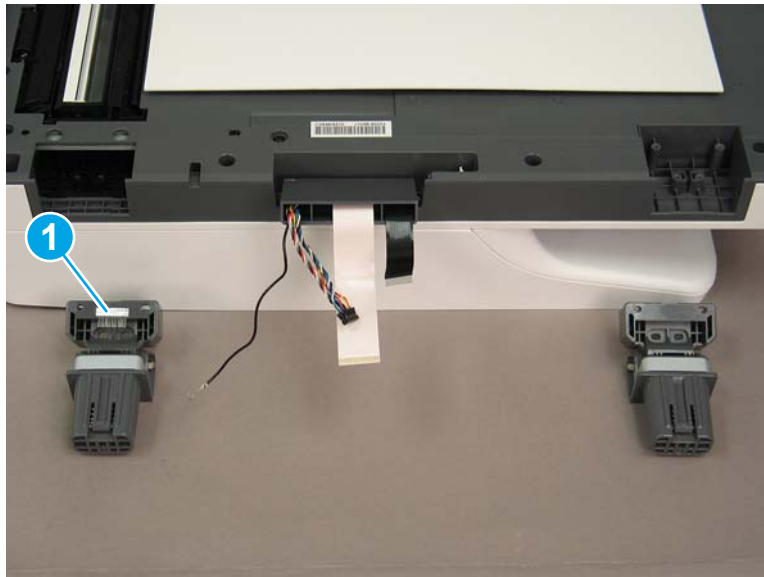



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Image scanner assembly

- [Introduction](#)
- [Step 1: Remove the document feeder \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the image scanner assembly \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the image scanner assembly.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Image scanner assembly part number	
J8A10-67901	Image scanner whole unit

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Place a document on the scanner glass and scan it. Verify the document scanned correctly.

#### Step 1: Remove the document feeder (M681/M682/E67550/E67560/E67650/E67660)

1. At the back of the printer, remove two screws (callout 1), and then remove the scanner rear cover (callout 2).

Figure 1-640 Remove the scanner rear cover



2. Lift the latches up toward the back of the document feeder to release two flat cables (callout 1), and then disconnect one connector (callout 2).


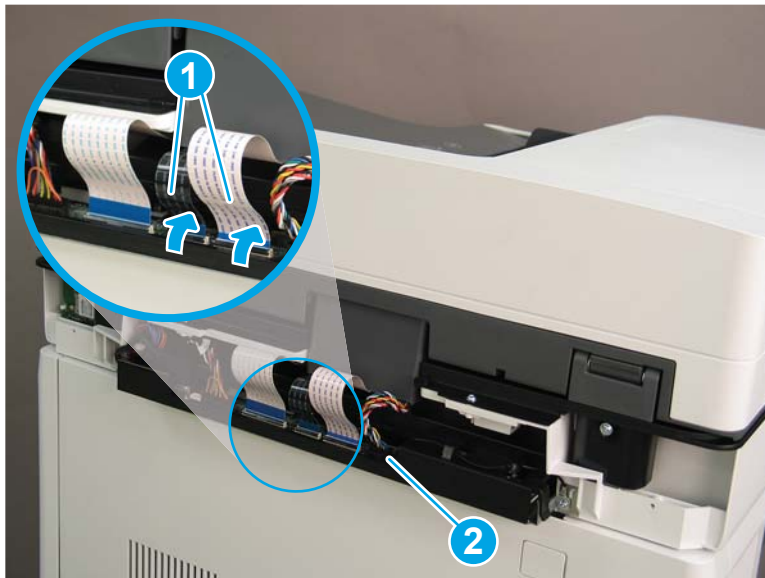
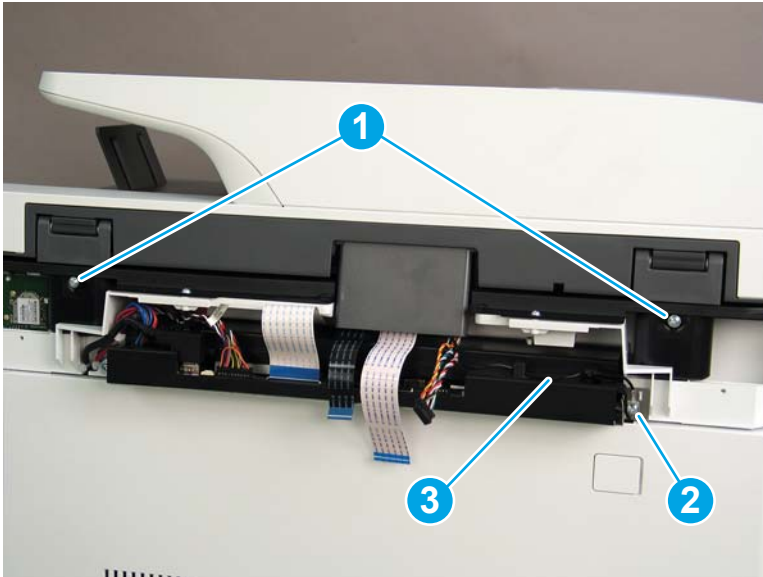
 **Reinstallation tip:** When reinstalling the flat cables, lift the latches, install the cables, and then lower the latches to secure the cables.

Figure 1-641 Disconnect three connectors



3. Remove two screws (callout 1). Release one ground screw (callout 2), and then release the ground wire (callout 3) from the cable guide.

Figure 1-642 Remove three screws



4. Open the document feeder.

Figure 1-643 Open the document feeder




5. Tilt the document feeder back until it stops (callout 1), and then lift it up until it stops (callout 2).

Figure 1-644 Tilt and lift the document feeder



6. Support the left side of the document feeder with one hand, and then use a small, flat-blade screwdriver to release two tabs on the document feeder hinges.


 **TIP:** Release the right hinge first

 **NOTE:** The tabs are located on the front side (scanner flatbed glass) of the hinges.

Figure 1-645 Release two tabs



7. Lift the document feeder up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-646** Remove the document feeder




8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder**

- ▲ After installing the replacement document feeder, clean the scanner glass and the document feeder strips with a soft cloth or sponge that has been moistened with nonabrasive glass cleaner. Dry the glass and white plastic parts with a chamois or a cellulose sponge to prevent spotting.

 **CAUTION:** Do not use abrasives, acetone, benzene, ammonia, ethyl alcohol, or carbon tetrachloride on any part of the printer; these can damage the printer. Do not place liquids directly on the glass or platen. They might seep and damage the printer.

**Figure 1-647** Clean the scanner glass

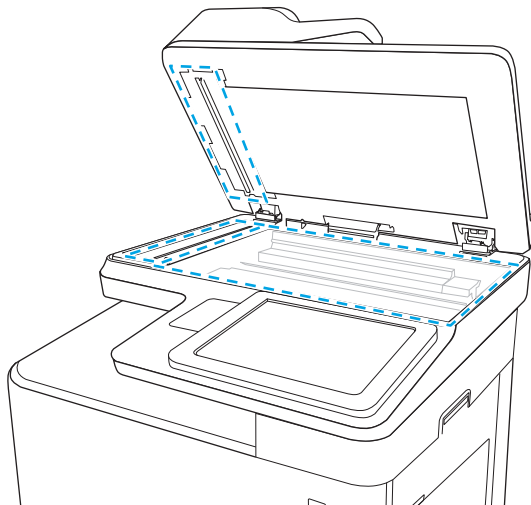

## Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-648 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-649 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-650 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-651 Disconnect the keyboard flat cable

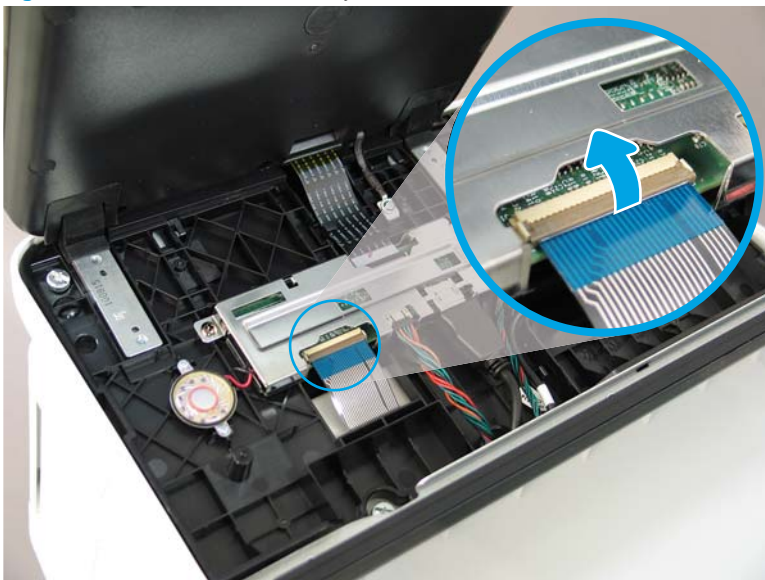



5. Slide the keyboard tray out until it stops.

Figure 1-652 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-653 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-654 Remove the keyboard



**Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-655 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-656 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-657 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-658** Disconnect the keyboard flat cable (keyboard models only)

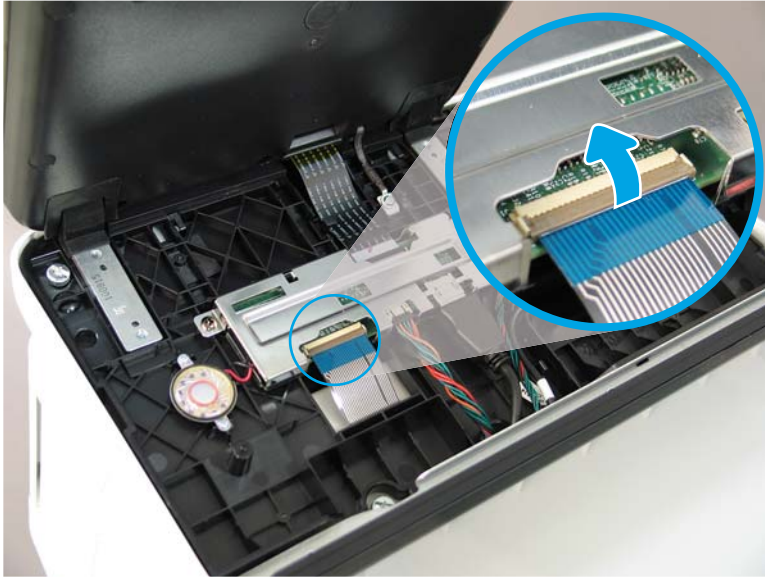


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-659** Disconnect connectors

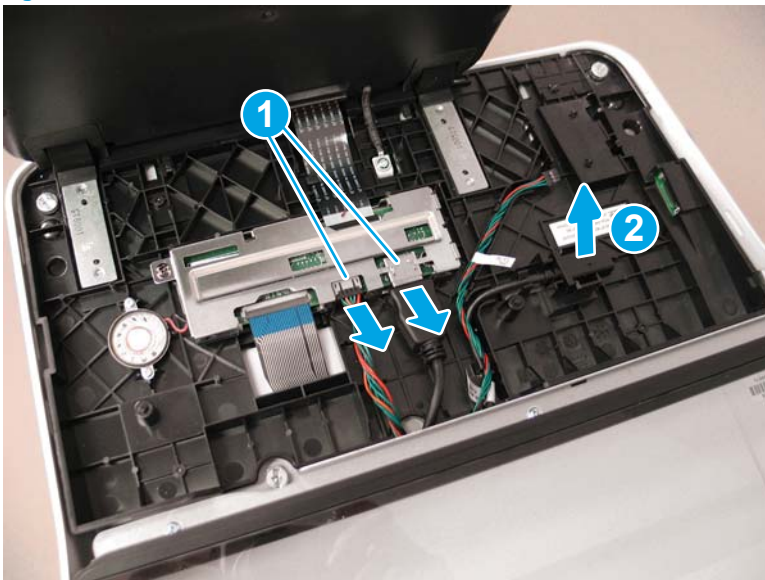


6. Remove three thumbscrews (callout 1).

Figure 1-660 Remove three thumbscrews

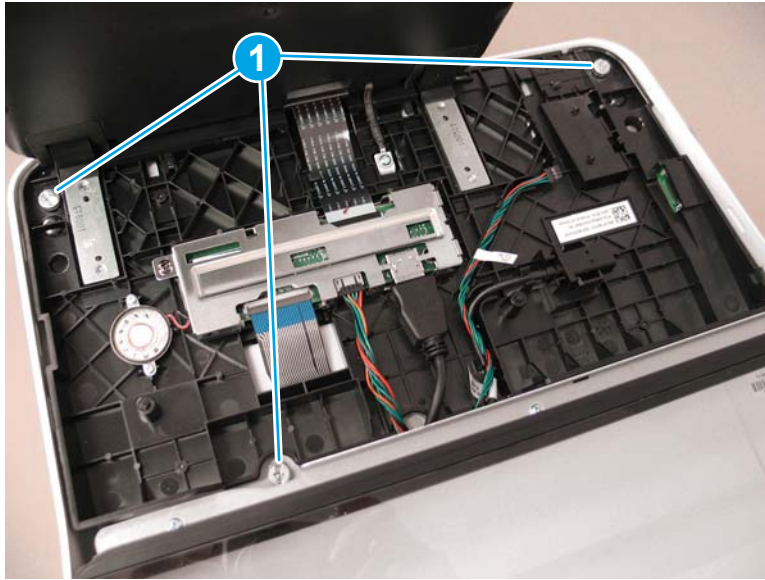

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-661 Remove the control panel

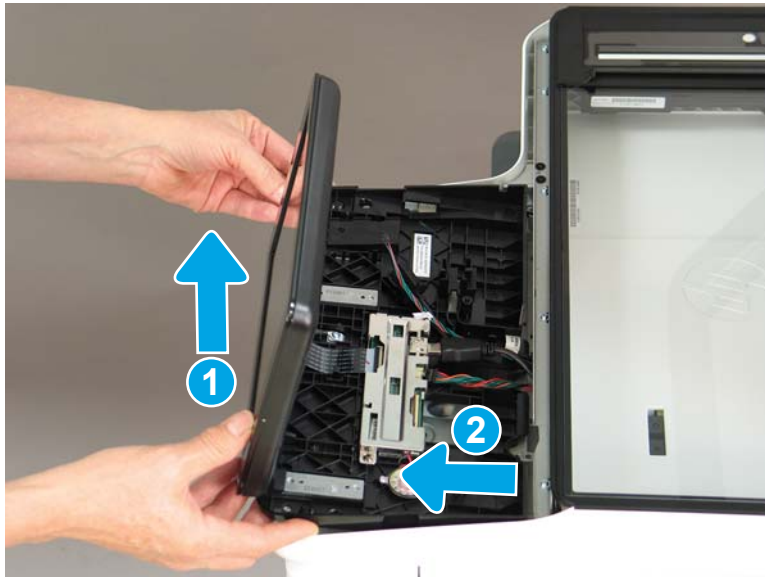

#### Step 4: Remove the image scanner assembly (M681/M682/E67550/E67560/E67650/E67660)


1. **Flow models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-662 Remove the small cover



- b. Remove three screws (callout 1).


Figure 1-663 Remove three screws

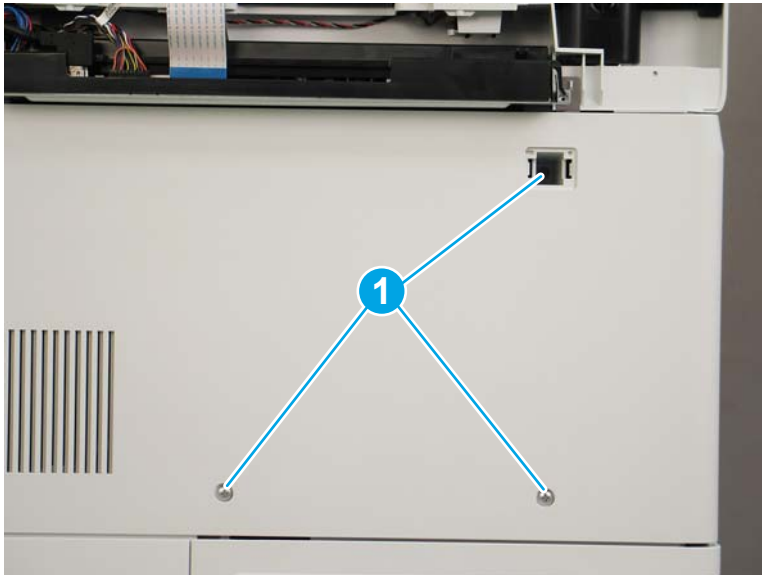




- c. Rotate the stapler/stacker rear cover away from the printer to remove it.

**Figure 1-664** Remove the stapler/stacker rear cover

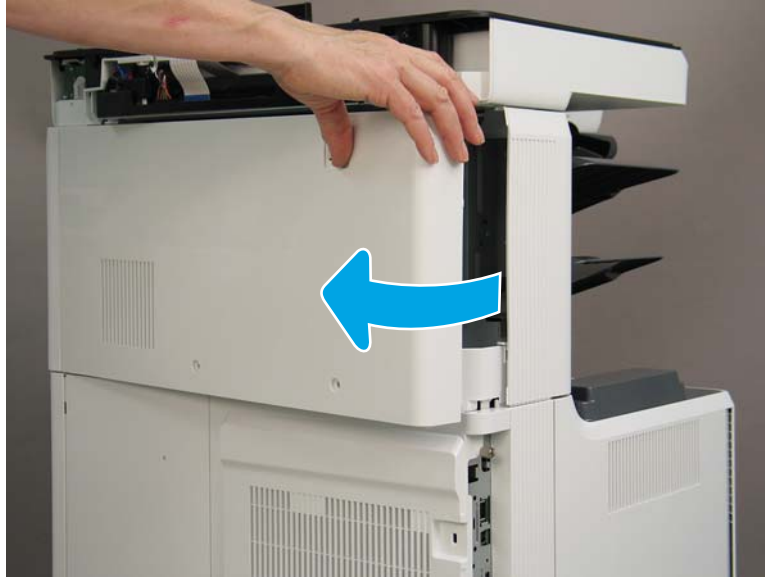


2. **M681dh, M681f, M682dh, Flow M681f, and E67650dh models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

**Figure 1-665** Remove the upper rear cover

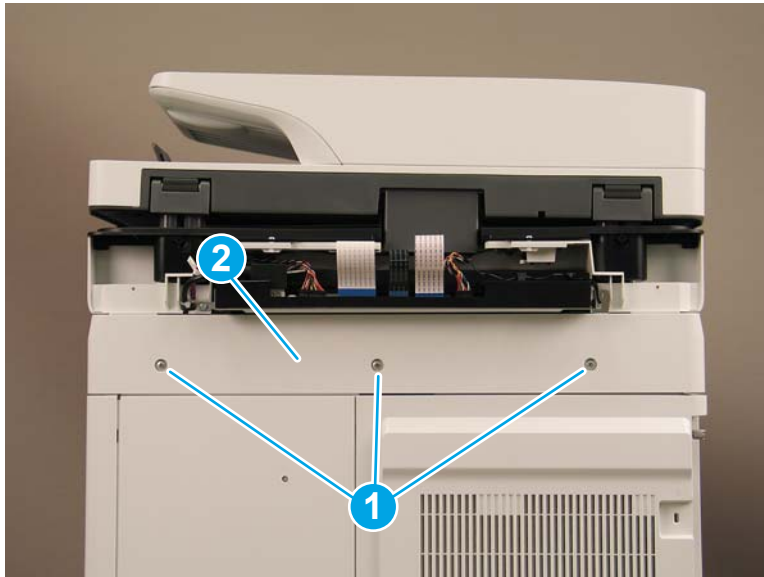


3. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-666** Remove the formatter cover

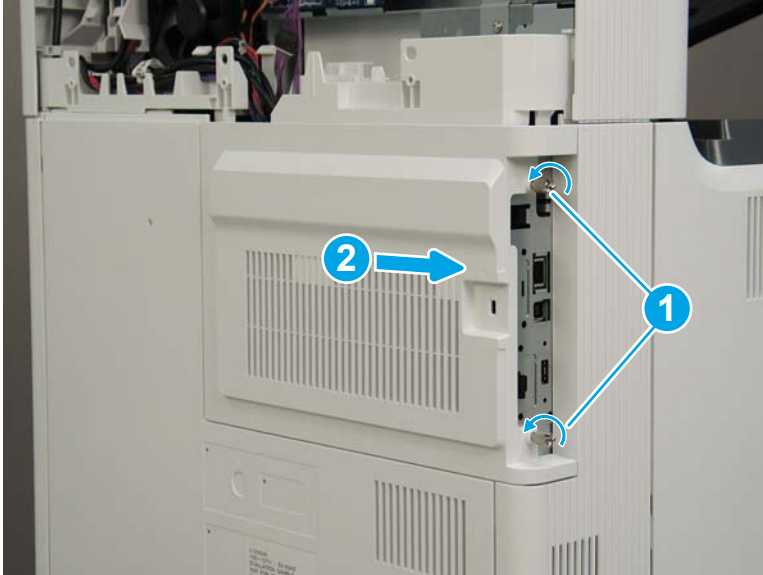

4. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, Flow M681f, and E67650dh models is different the removal procedures are the same for all models.

**Figure 1-667** Cable routing for M681dh/M681f/Flow M681f/E67650dh

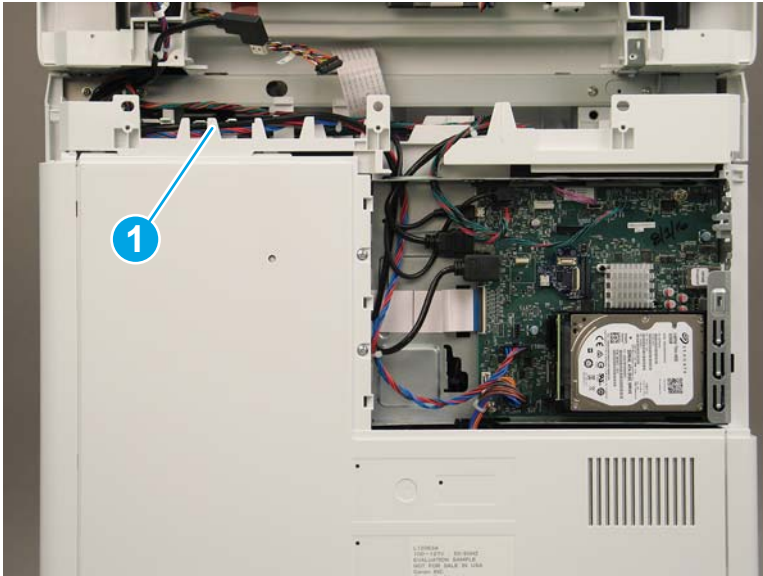



5. Disconnect five connectors on the formatter (callout 1).

Figure 1-668 Disconnect six connectors




6. Remove one screw (callout 1). Lift the latch on the flat cable connector to release the cable and then disconnect three connectors (callout 2). Slide the scanner control board (SCB) slightly away from the printer (callout 3), but do not completely remove it.


**⚠ CAUTION:** Do not completely remove the SCB. It is still connected to the printer.

**💡 Reinstallation tip:** When reinstalling the flat cable, lift the latch, install the cable, and then lower the latch to secure the cable.


Figure 1-669 Remove one screw and disconnect connectors

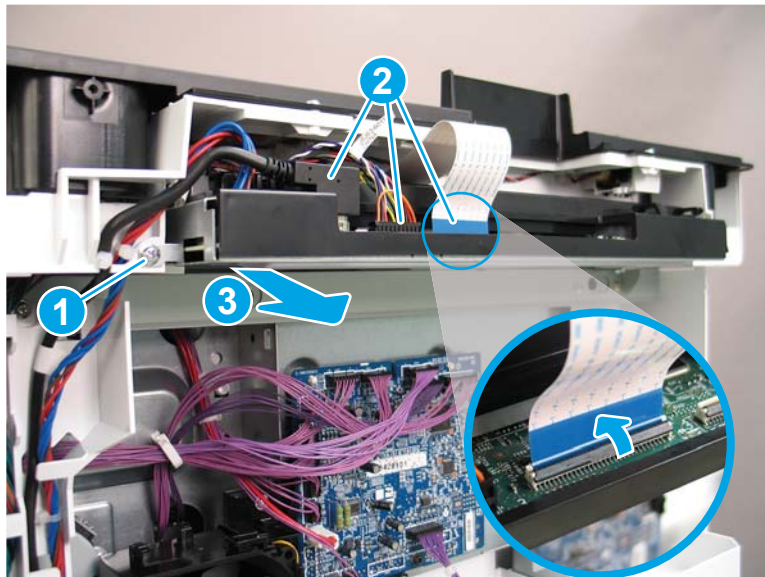

7. Release the locking tab, and then disconnect the connector.

 **Reinstallation tip:** When installing the image scanner, connect this cable first before sliding the SCB board into the scanner.

**Figure 1-670** Disconnect one connector

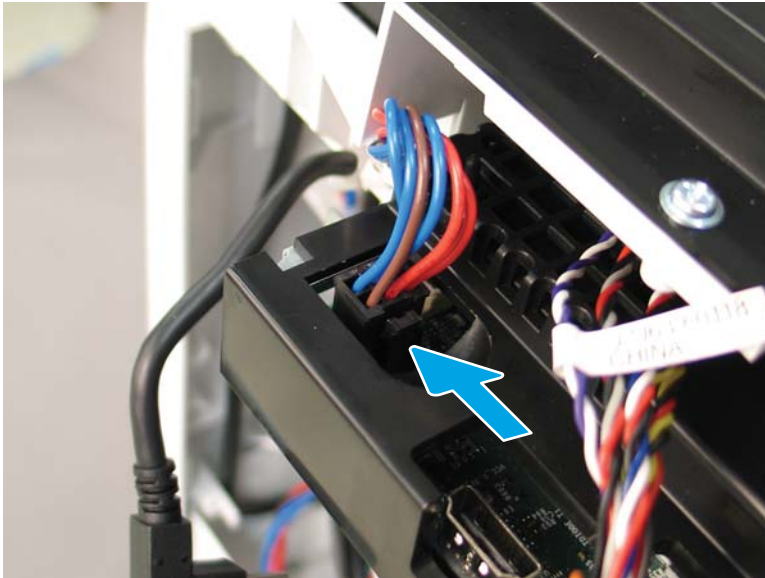


8. Slide the SCB away from the printer to remove it.

**Figure 1-671** Remove the SCB




9. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

**Figure 1-672** Disconnect the wireless connector

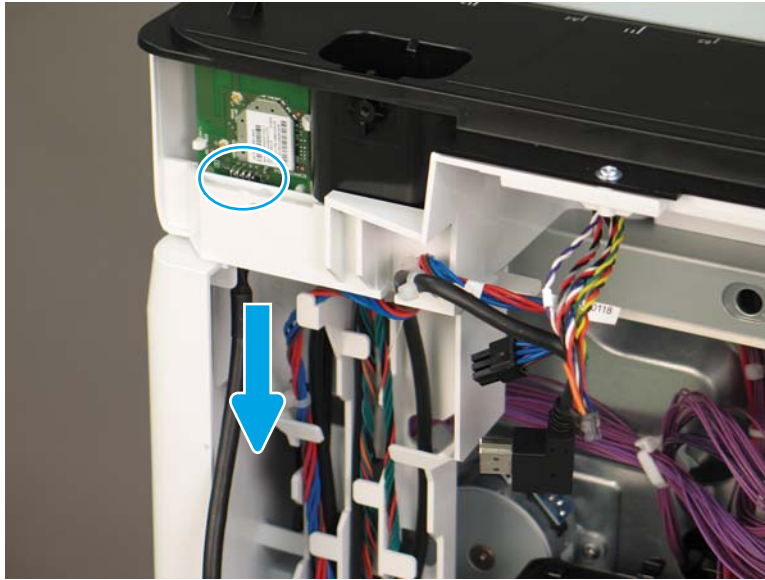

10. Release the SCB cables (callout 1) from the cable guides (callout 2).

**Figure 1-673** Release the SCB cables

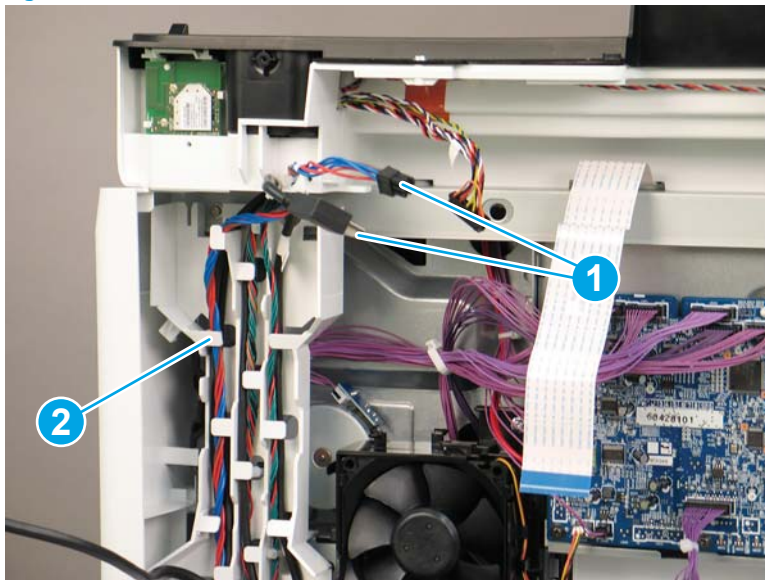


11. Allow the SCB cables and the wireless cable (Flow M682z only) to hang down without releasing them further (callout 1). Thread the disconnected formatter cables up through the opening in the top of the formatter case (callout 2).

Figure 1-674 Thread the cables



12. Release the formatter cables from the cable guides (callout 1).


Figure 1-675 Release the formatter cables

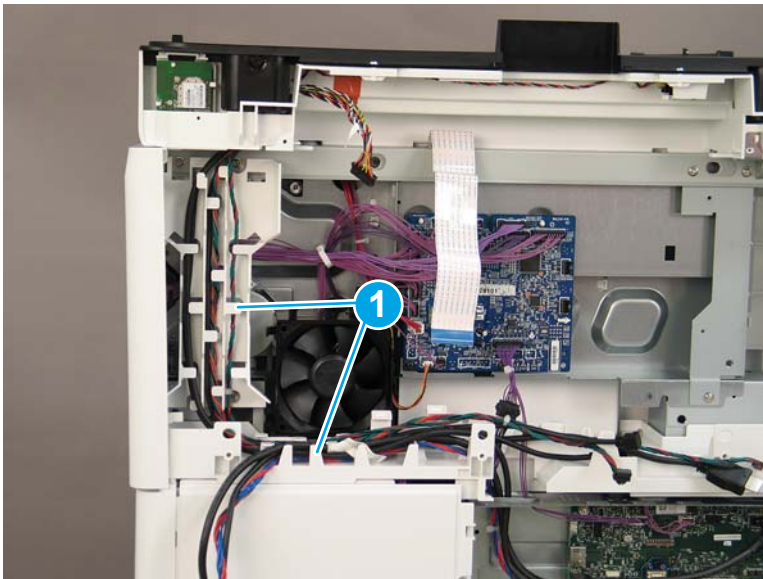




13. At the back of the printer, remove four screws (callout 1).

Figure 1-676 Remove four screws

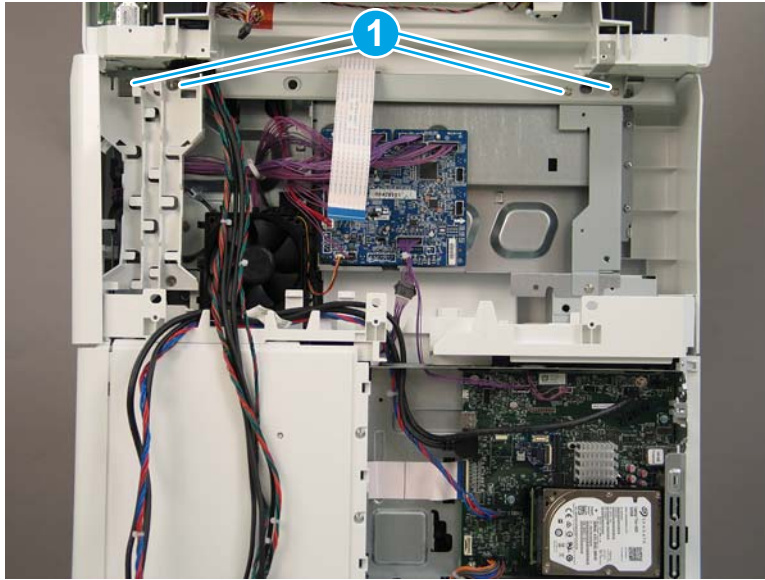

14. All M681/M682/E67550/E67560/E67650/E67660 models: On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z/Flow M682z/Flow E67660z only:** Remove one self-tapping screw (callout 2).

Figure 1-677 Remove three screws

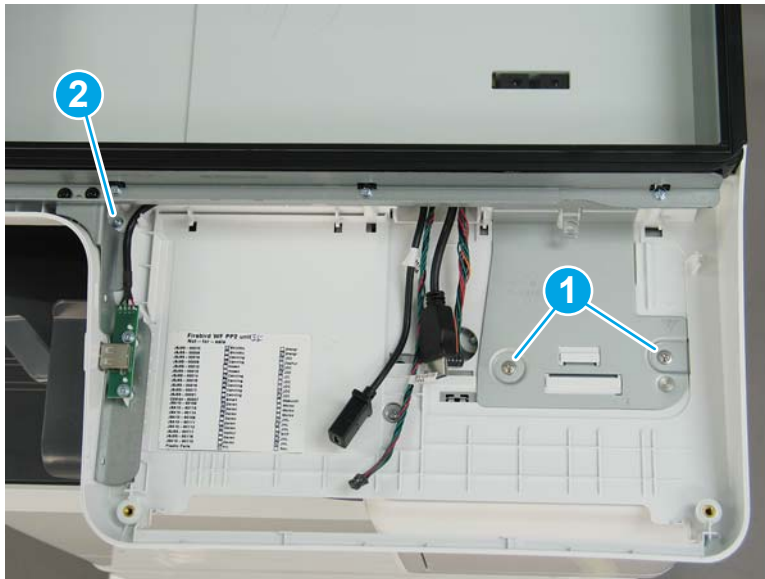

15. Lift the image scanner assembly off of the printer to remove it.

 **IMPORTANT:** Make sure that all cables are released and free from the printer before lifting the image scanner assembly.

**Figure 1-678** Remove the image scanner assembly




16. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Image scanner assembly**


- a. When reinstalling the SCB, make sure that the flat cable (callout 1) is positioned on top of the SCB (callout 2) before sliding it into place.

**Figure 1-679** Position the flat cable

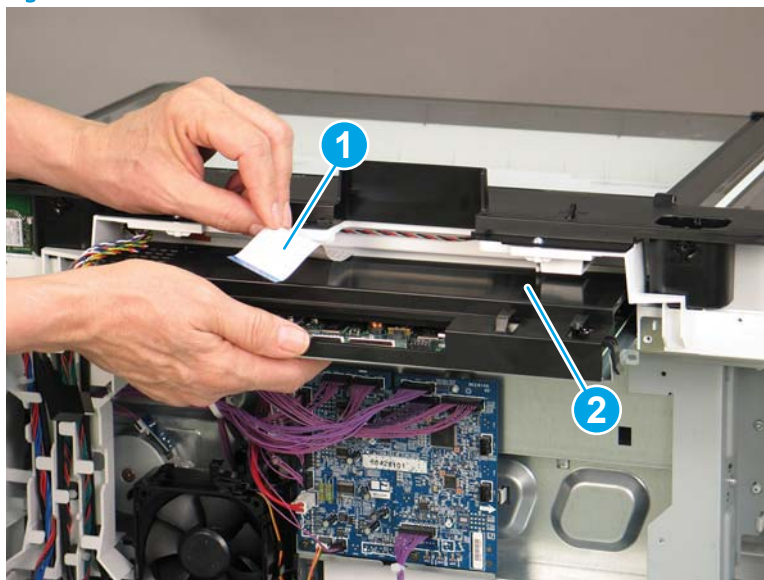


- b. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-680 Remove the wireless card

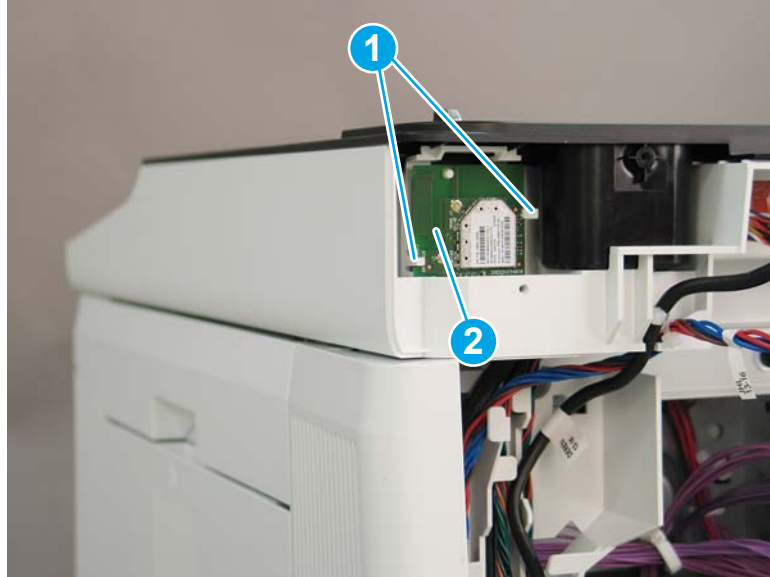


- ii. Thread the wireless cable up through the opening in the image scanner..

Figure 1-681 Thread the wireless cable

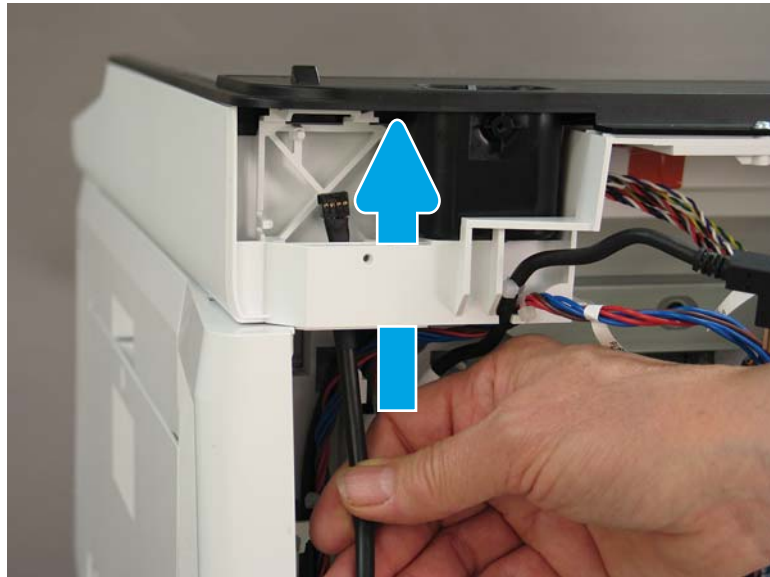


- iii. Connect the cable to the wireless card (callout 1).

Figure 1-682 Connect the wireless card connector

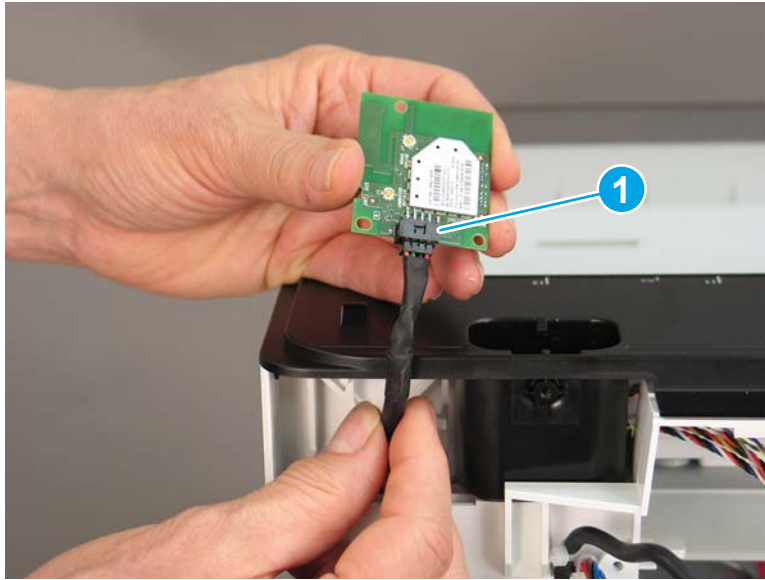


- iv. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-683 Reinstall the wireless card

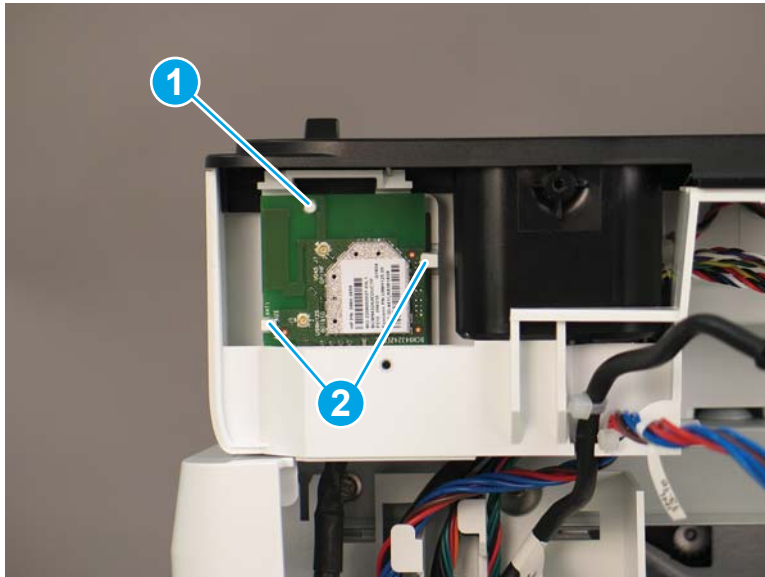





- c. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


**Figure 1-684** Position the flat cable

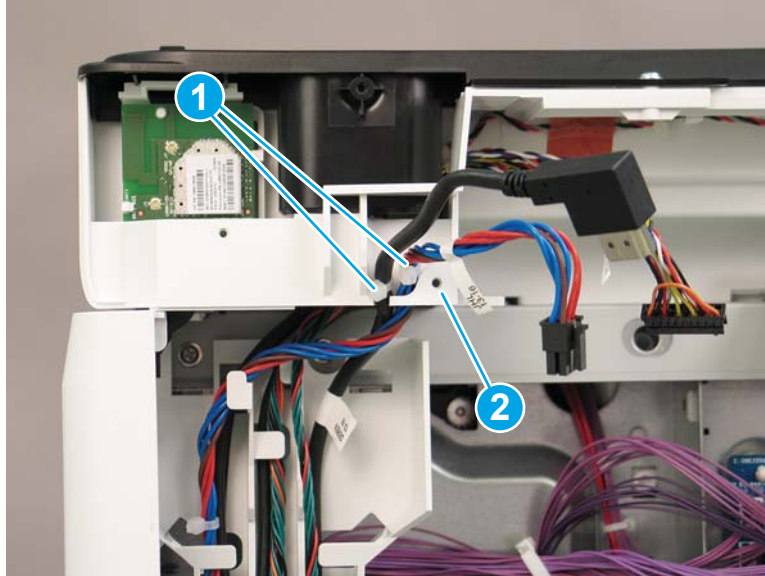

- d. After installing the replacement image scanner, clean the scanner glass and the document feeder strips with a soft cloth or sponge that has been moistened with nonabrasive glass cleaner. Dry the glass and white plastic parts with a chamois or a cellulose sponge to prevent spotting.

 **CAUTION:** Do not use abrasives, acetone, benzene, ammonia, ethyl alcohol, or carbon tetrachloride on any part of the printer; these can damage the printer. Do not place liquids directly on the glass or platen. They might seep and damage the printer.

**Figure 1-685** Clean the scanner glass

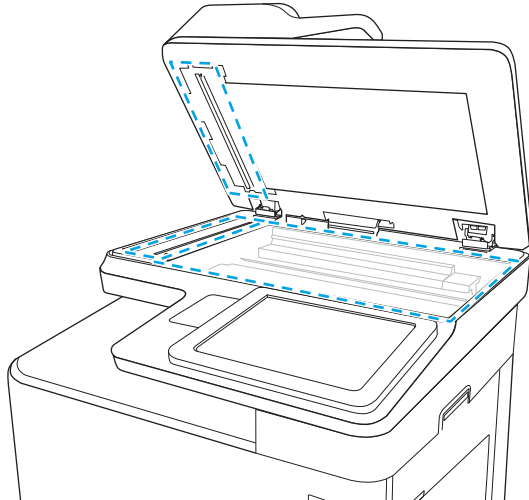

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Scanner control board

- [Introduction](#)
- [Step 1: Remove the image scanner rear cover](#)
- [Step 2: Remove the scanner control board \(SCB\)](#)
- [Step 3: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the scanner control board (SCB).

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Scanner control board part numbers	
5851-7208	Scanner control board (M681dh, M681f)
5851-7209	Scanner control board (Flow M681f, Flow M681z, Flow M682z)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

Place a document on the scanner glass and scan it. Verify the document scanned correctly.

### Step 1: Remove the image scanner rear cover

1. At the back of the printer, remove two screws (callout 1).

Figure 1-686 Remove two screws

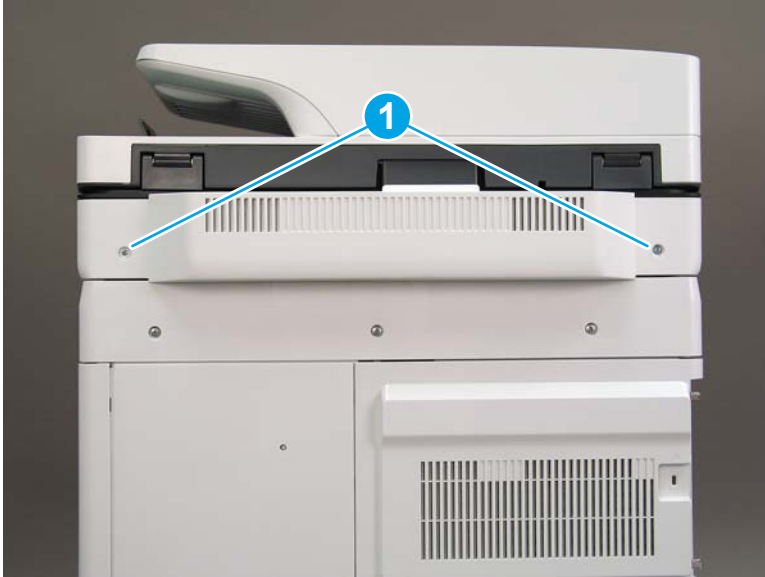

2. Rotate the image scanner back cover up to remove it.


Figure 1-687 Remove the image scanner back cover



### Step 2: Remove the scanner control board (SCB)


1. Lift the latches to release three flat cables (callout 1), and then disconnect them. Disconnect three connectors (callout 2). Remove one screw to release a grounding wire (callout 3), and then remove one screw on the left side of the SCB (callout 4).

Figure 1-688 Disconnect connectors and remove two screws

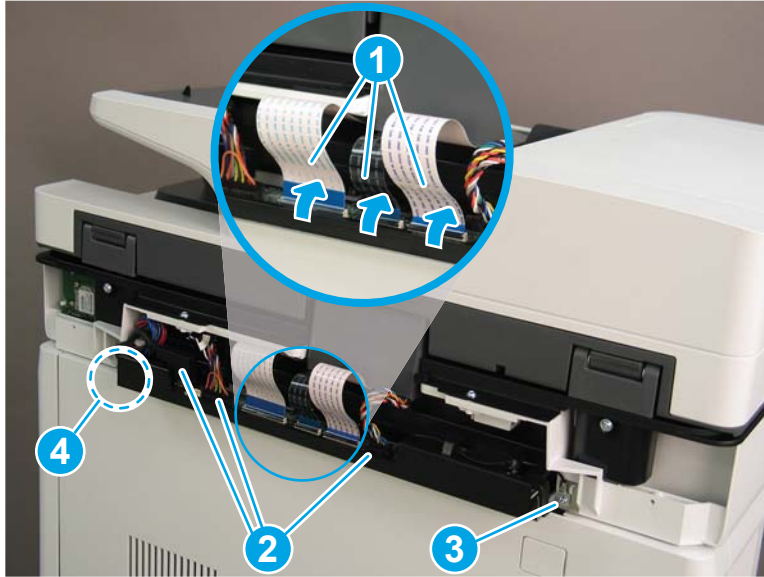

2. Partially slide the SCB out of the printer, and then release the locking tab to disconnect one connector (callout 1). Slide the SCB out of the printer to remove it (callout 2).

Figure 1-689 Remove the SCB

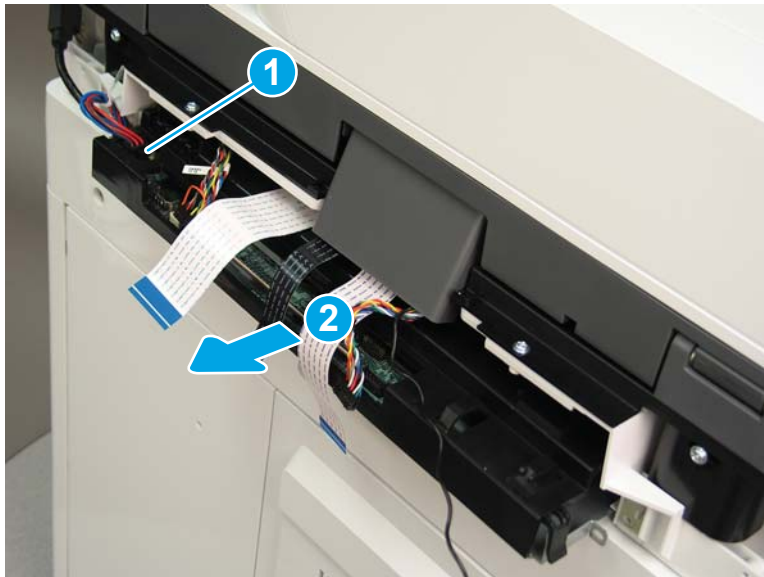

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: Scanner control board

- ▲ When reinstalling the SCB, make sure all of the cables are positioned on top of the SCB before sliding it into the printer.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-690 Check the cables when installing the SCB





### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: 3-bin stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)


- [Removal and replacement: Stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Removal and replacement: Rear cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Right door \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Right upper cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Staple door \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Staple cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Stapler](#)
- [Removal and replacement: Right front cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Rear inner cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Right corner cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Jogger cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Staple rear cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Right lower cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Staple door lock arm \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Tray assembly \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Tray pin \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Jogger \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Stacking wall cover \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Upper feed assembly \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Fan \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Lower feed assembly \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Solenoid assembly \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Microswitch \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Feed motor \(3-bin stapler/stacker\)](#)
- [Removal and replacement: Controller PCA \(3-bin stapler/stacker\)](#)

## Removal and replacement: Stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

- [Introduction](#)
- [Step 1: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 2: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the stapler/stacker](#)
- [Step 4: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Stapler/stacker part number	
P1B13-67901	2-bin stapler/stacker

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Send a print job to the printer requiring stapling and collation to verify that the stapler/stacker correctly functions.

### Step 1: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).



Figure 1-691 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-692 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-693 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-694 Disconnect the keyboard flat cable (keyboard models only)

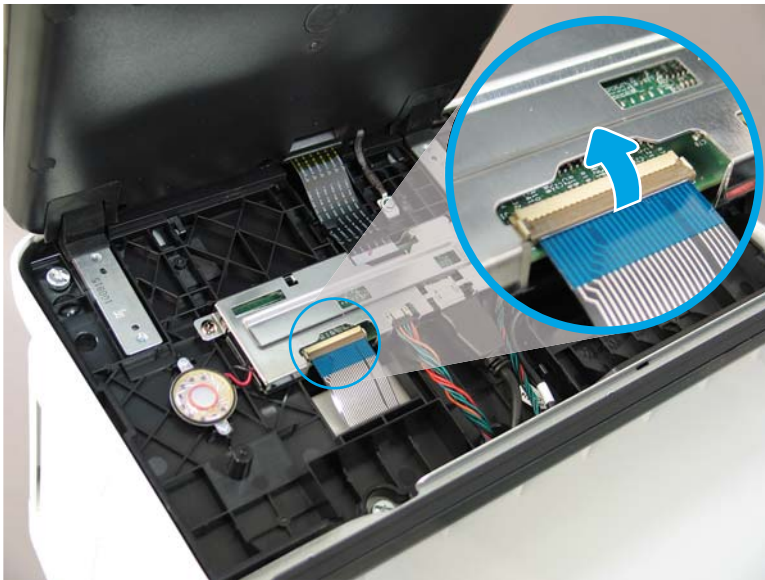


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-695 Disconnect connectors

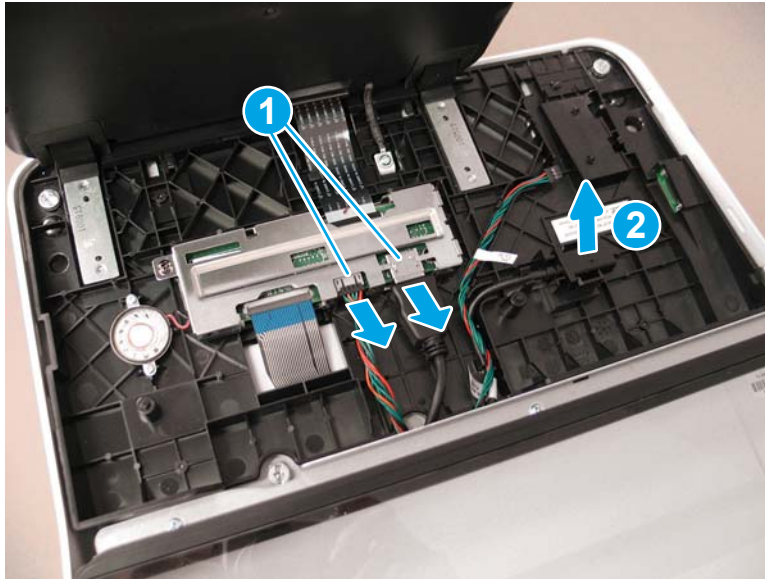


6. Remove three thumbscrews (callout 1).

Figure 1-696 Remove three thumbscrews

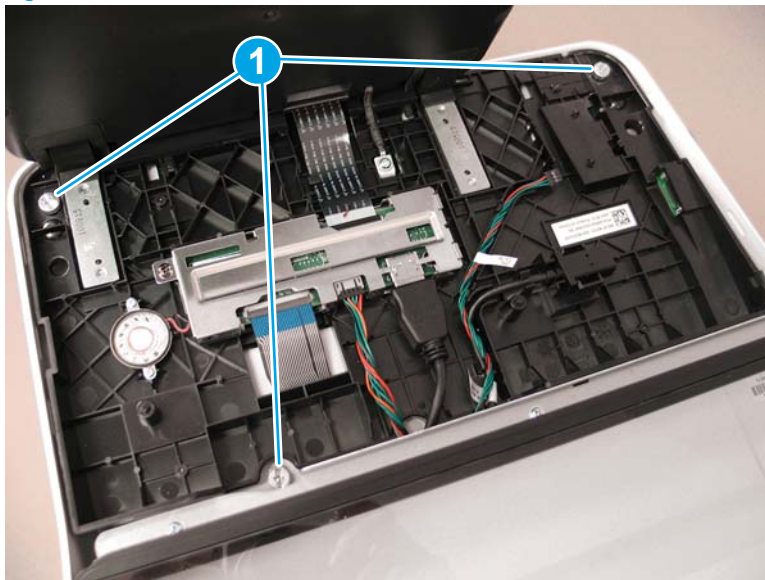

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


**Figure 1-697** Remove the control panel

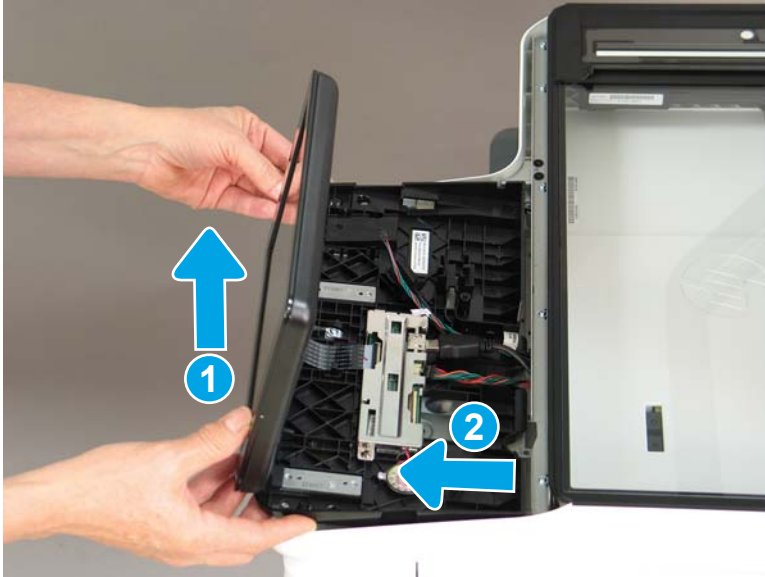

**Step 2: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)**

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

**Figure 1-698** Remove the SCB cover

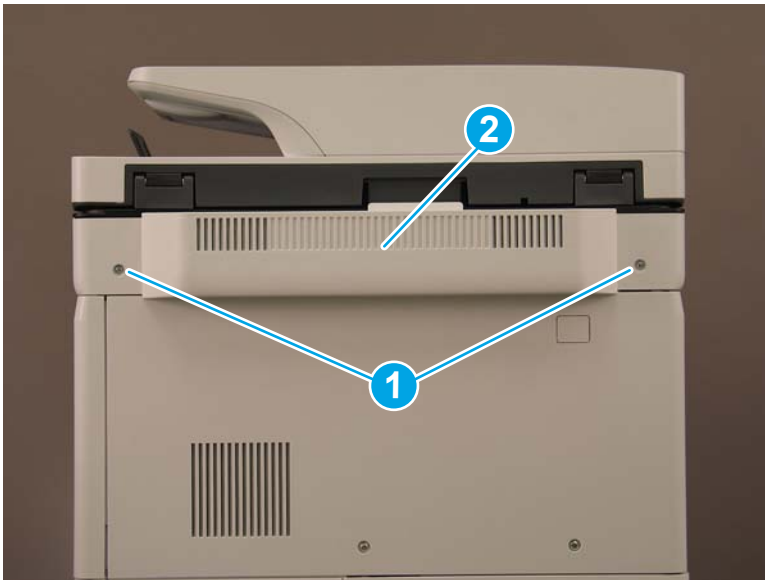


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-699 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-700 Remove the stapler/stacker rear cover

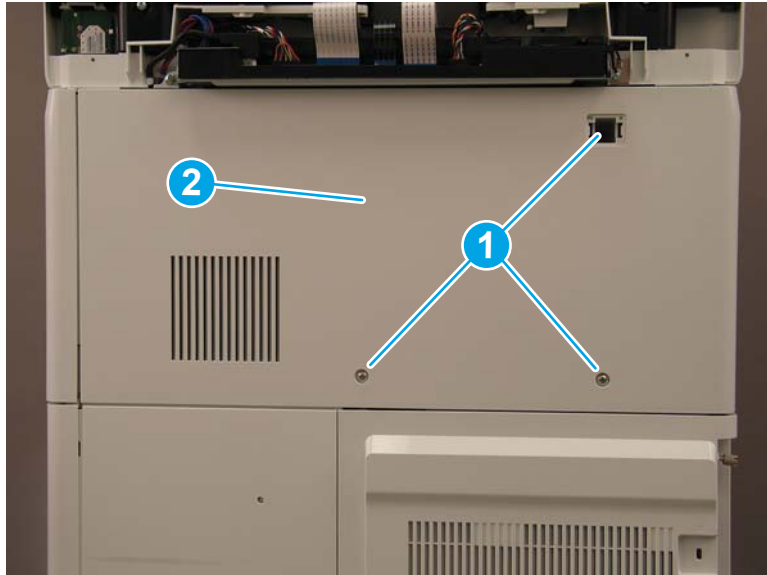


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-701 Remove the upper rear cover

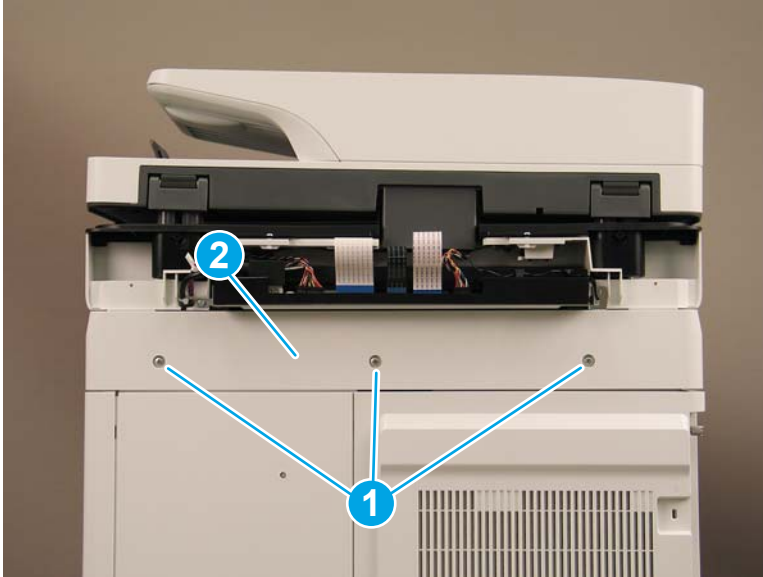

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-702 Remove the formatter cover

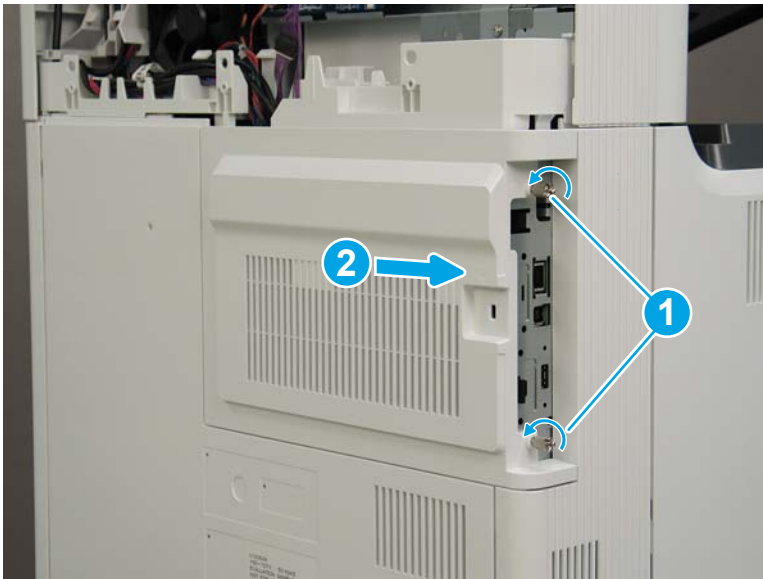




5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

**Figure 1-703** Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

**Figure 1-704** Disconnect two connectors

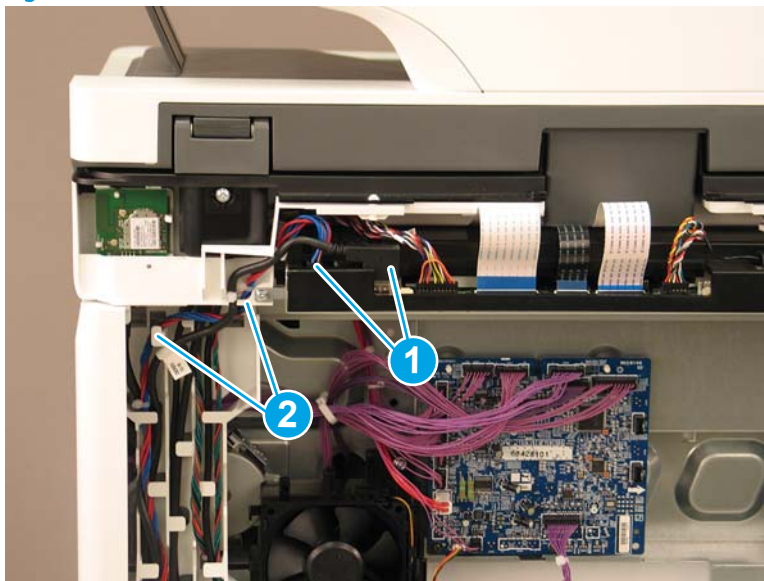


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-705 Disconnect five connectors



8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.


Figure 1-706 Disconnect the wireless connector

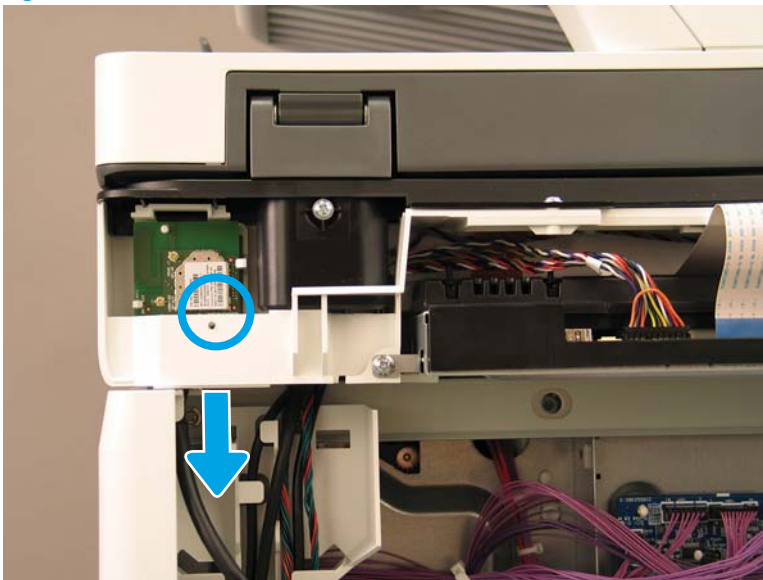




9. Release all of the cables from the cable guides (callout 1).

Figure 1-707 Release the cables

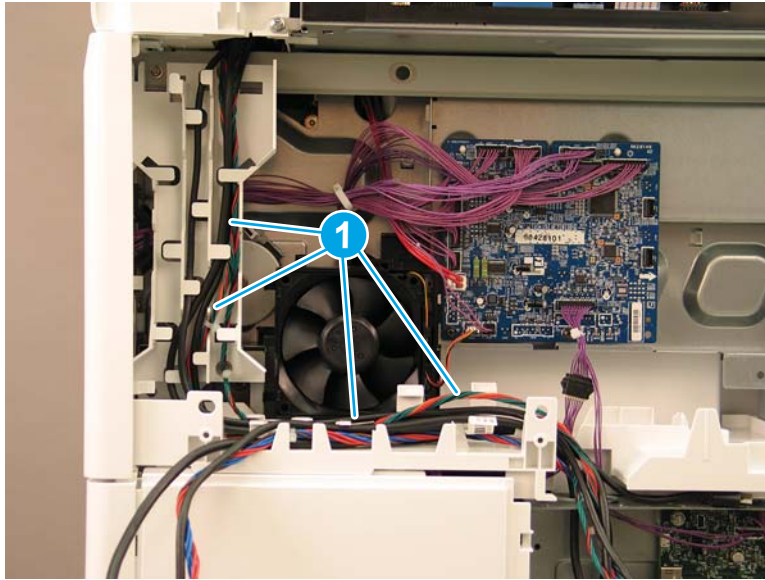


10. At the back of the printer, remove four screws (callout 1).

Figure 1-708 Remove four screws

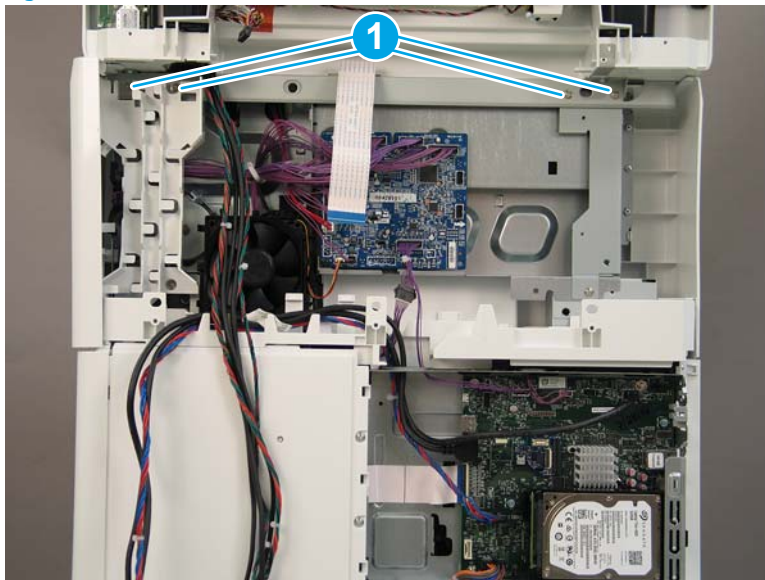

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

**Figure 1-709** Remove three screws

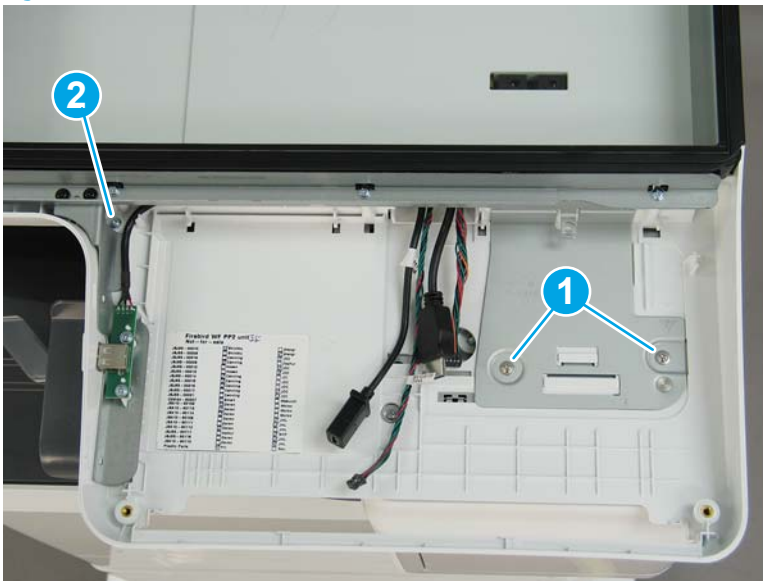

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-710** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-711 Remove the wireless card

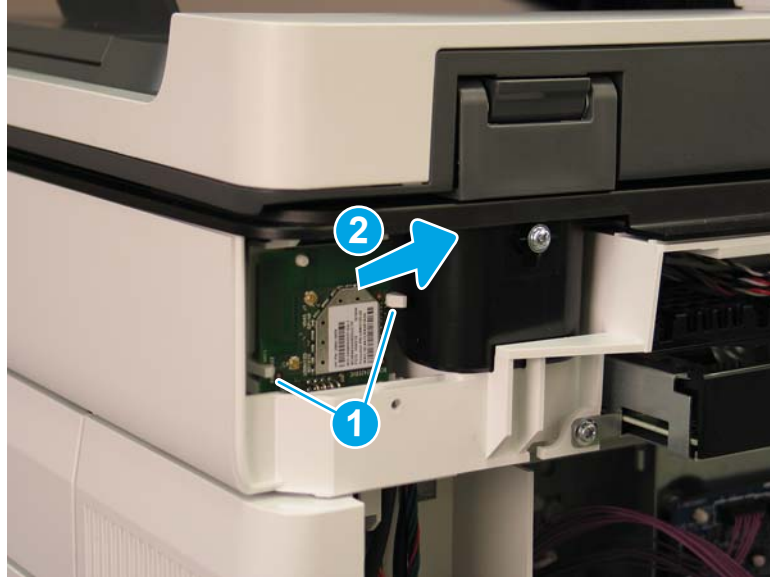


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-712 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-713 Reinstall the wireless card

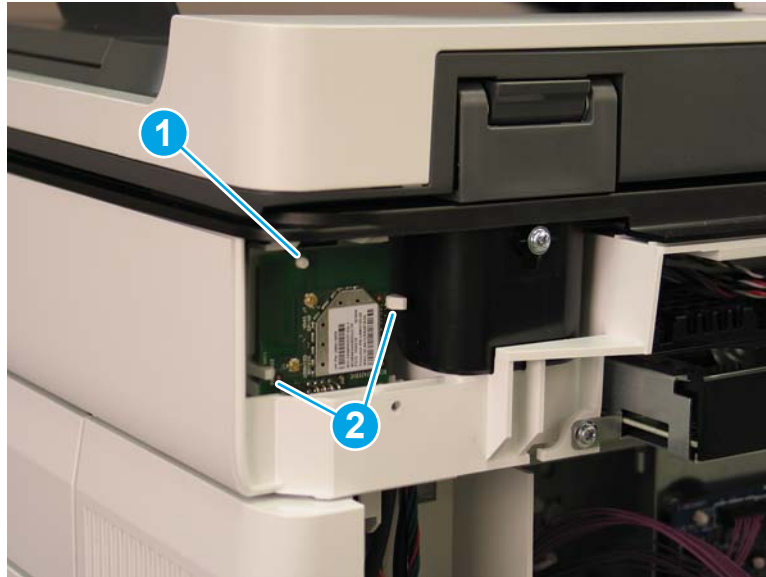

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-714 Install the SCB cables

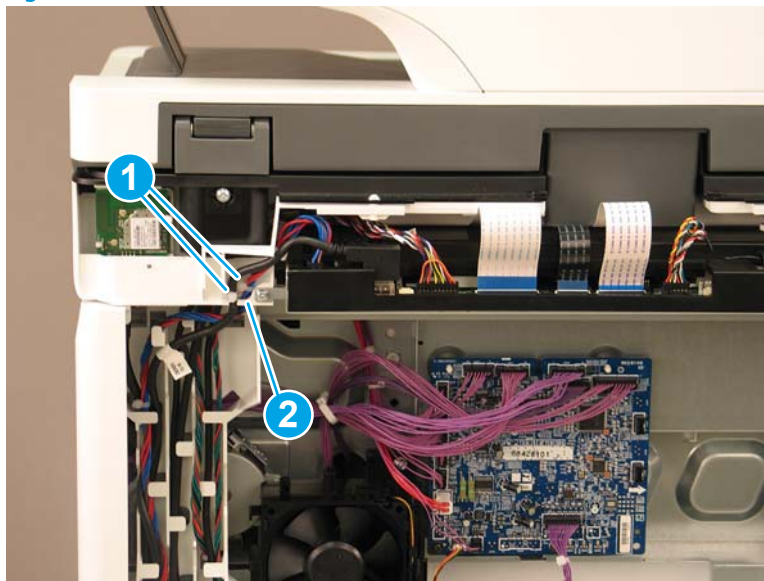

### Step 3: Remove the stapler/stacker


1. Open the front door.

Figure 1-715 Open the front door




2. Open the stapler door.

Figure 1-716 Open the stapler door

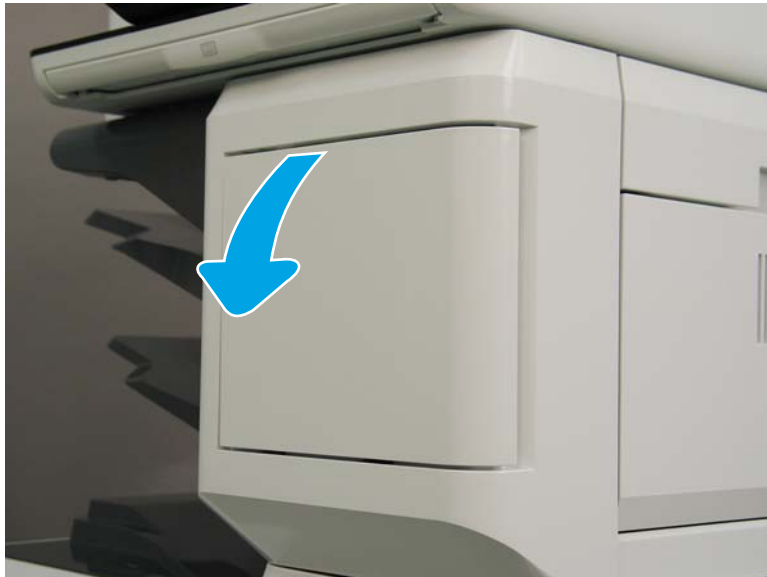


3. Release the latch, and then remove the staple cartridge.

Figure 1-717 Remove the staple cartridge

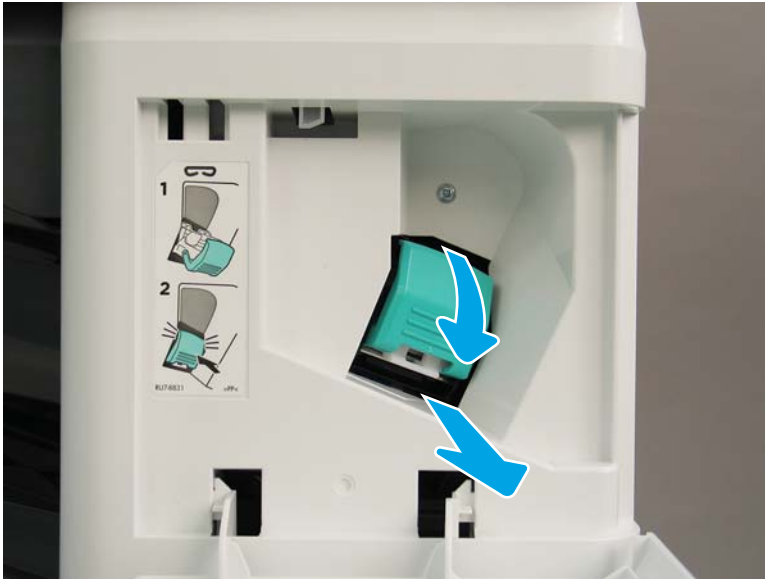

4. Remove one screw (callout 1).

Figure 1-718 Remove one screw

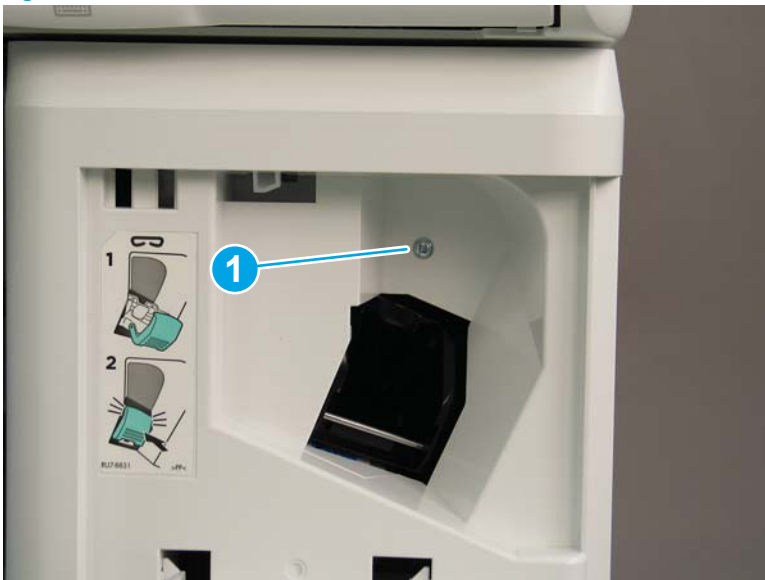




5. Rotate the stapler cover to the right to remove it.

Figure 1-719 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-720 Remove one screw

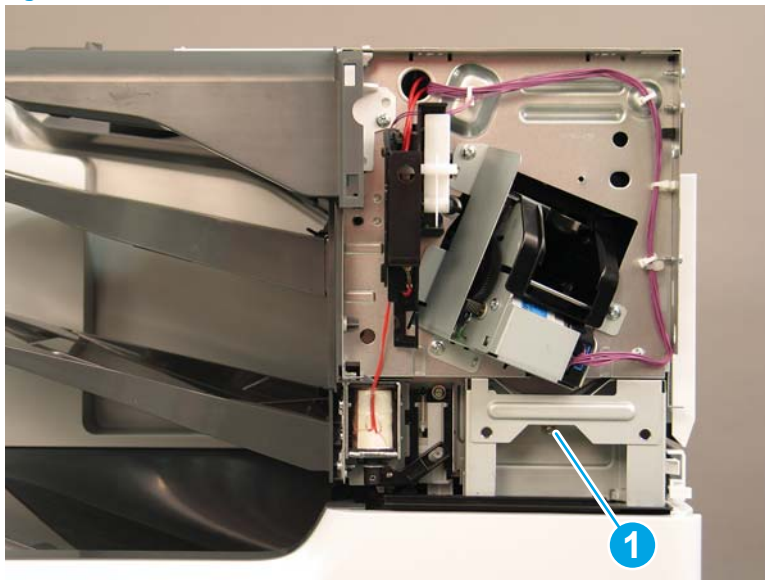


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

**Figure 1-721** Remove the stapler/stacker right upper cover

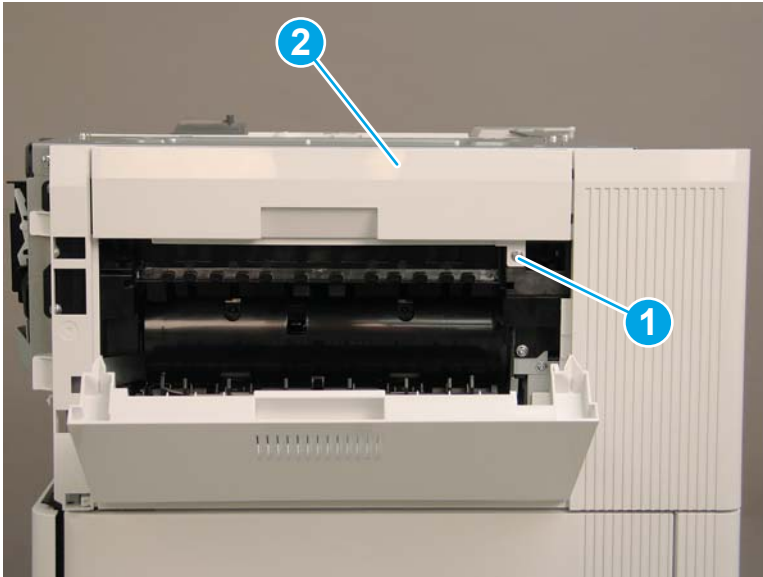

8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.


**Figure 1-722** Remove the stapler rear cover

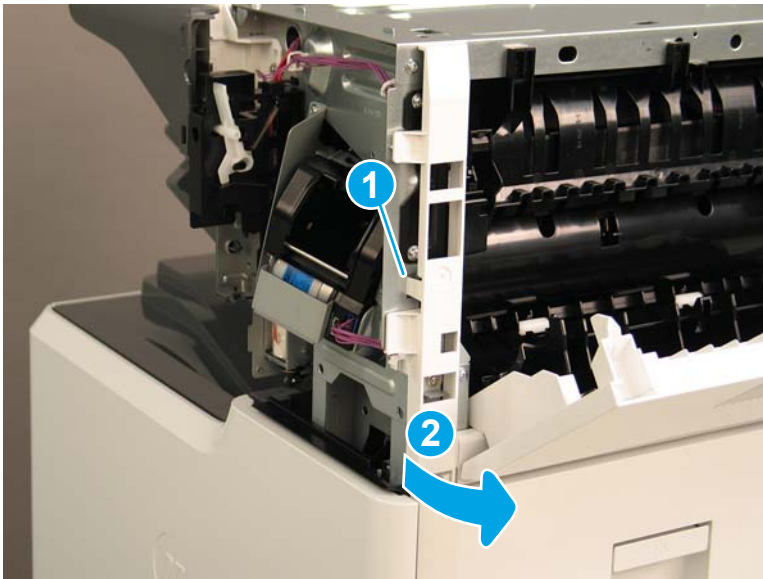




9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-723 Remove the stapler/stacker rear corner cover

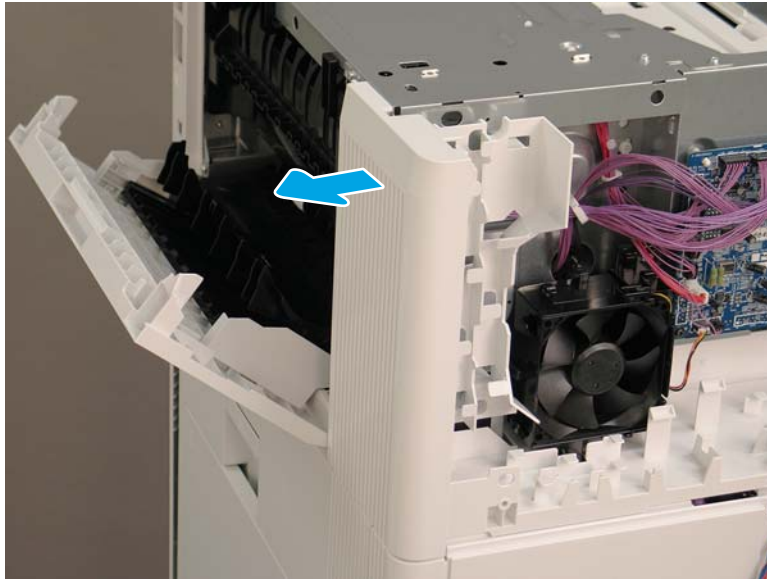


10. Remove two screws (callout 1).

Figure 1-724 Remove two screws

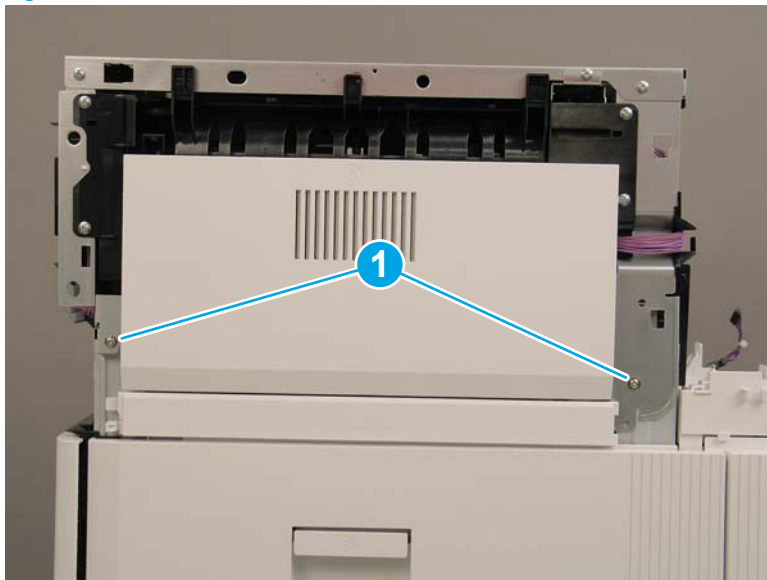


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-725 Remove the cable guide

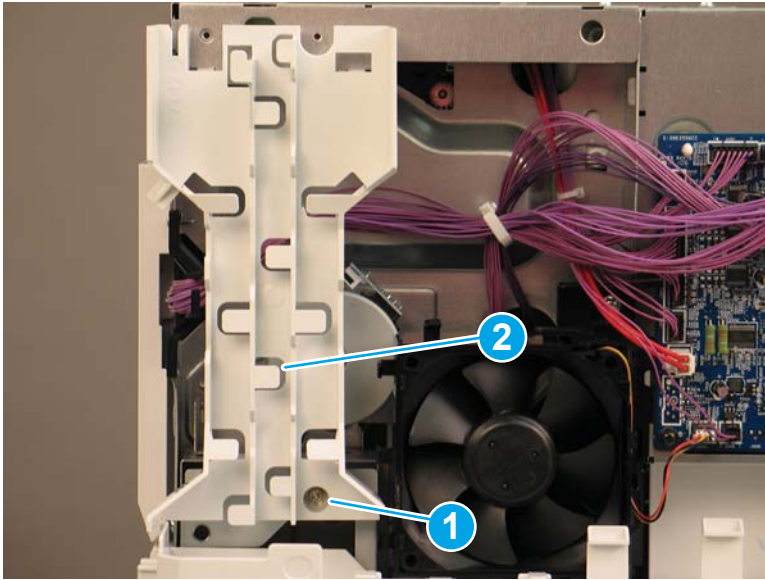

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-726 Disconnect one connector

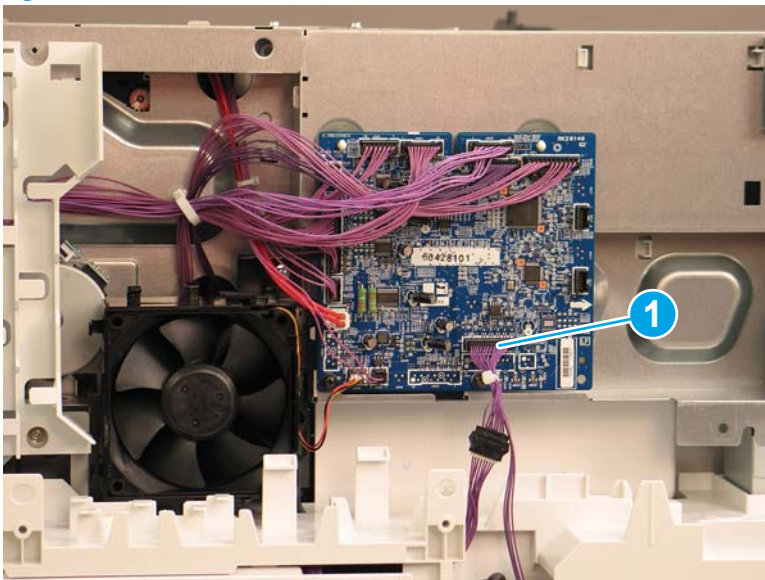

13. Remove two screws (callout 1).


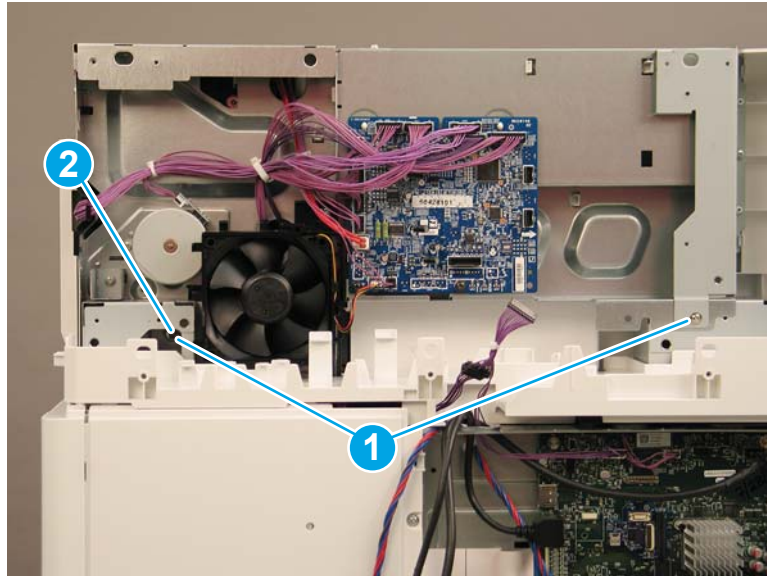
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-727 Remove two screws



14. Lift the stapler/stacker away from the printer.


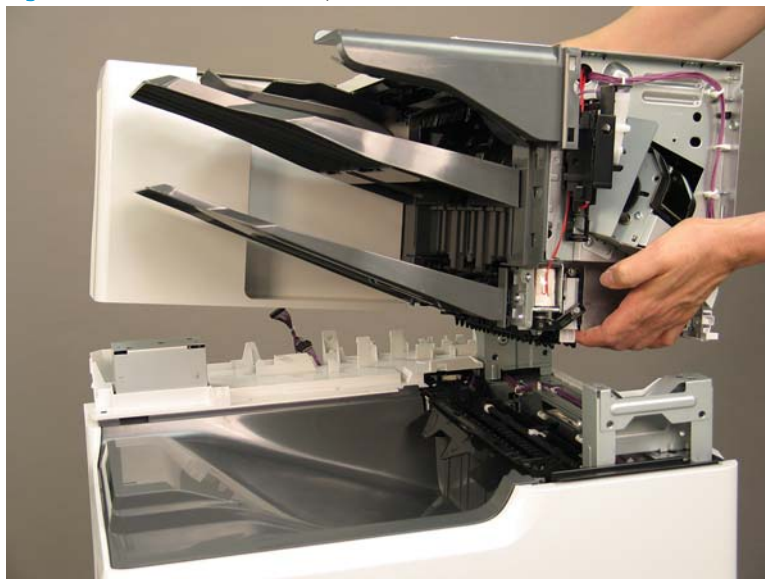
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-728 Remove the stapler/stacker



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Rear cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear cover (3-bin stapler/stacker) part number	
RC4-7406-000CN	Cover, rear front

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-729 Remove two screws

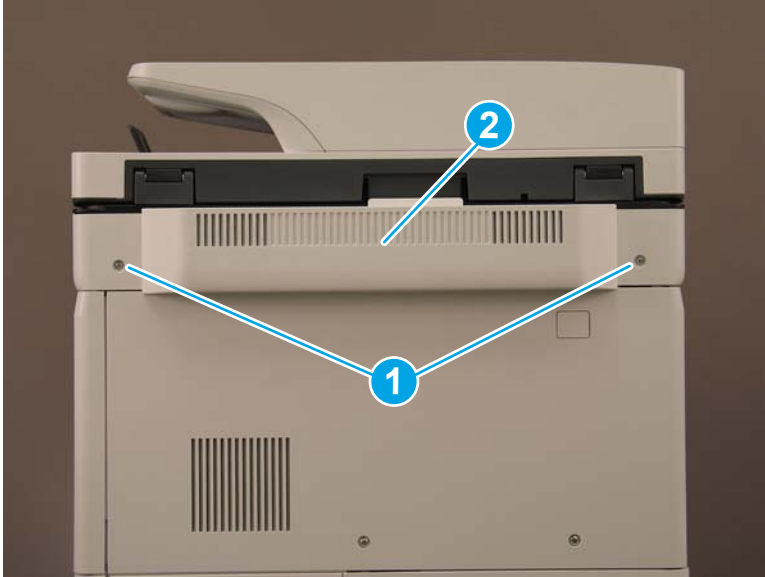


2. Remove one screw cover (callout 1).


Figure 1-730 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-731** Remove three screws and the rear cover

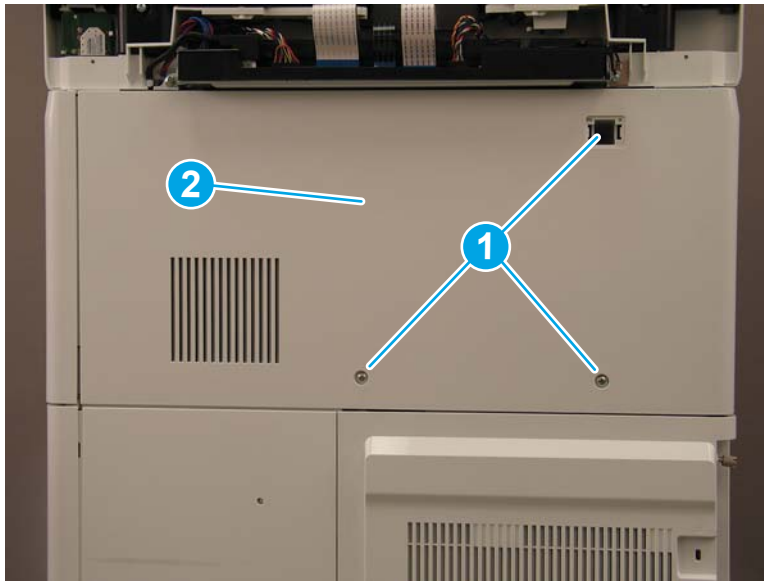



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Right door (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the right door \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Right door (3-bin stapler/stacker) part number

---

RM2-6807-000CN

Right door assembly

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.


### Step 1: Remove the right door (3-bin stapler/stacker)

1. Open the right door.




2. Release two shafts (callout 1), and then raise the feed guide (callout 2).

Figure 1-732 Raise the feed guide

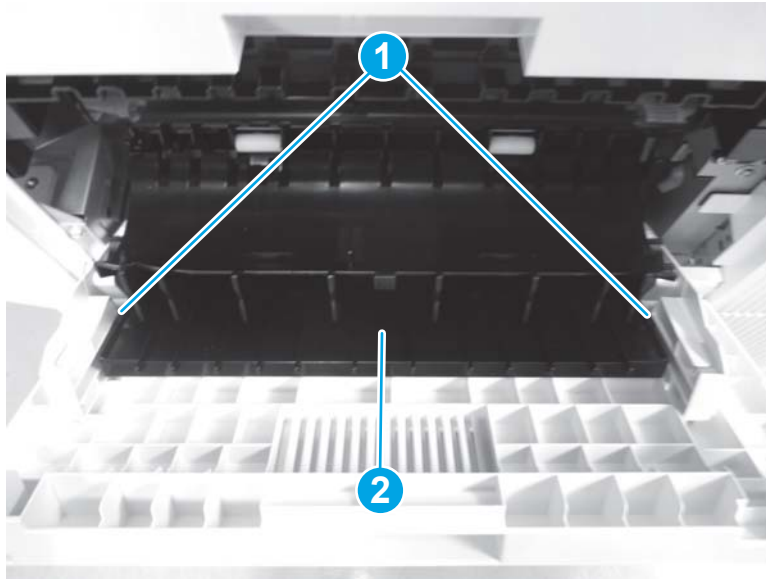


3. On the left side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the right to remove it.

Figure 1-733 Remove the left bracket

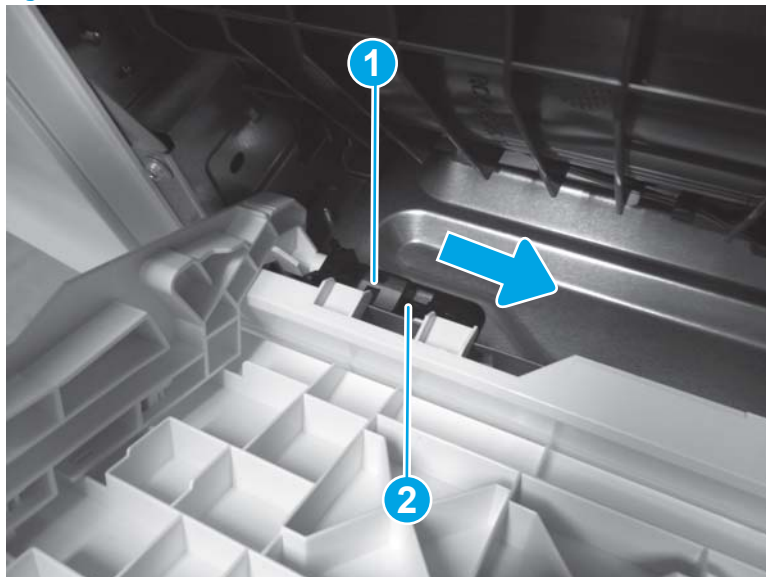


4. On the right side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the left to remove it.

**Figure 1-734** Remove the right bracket

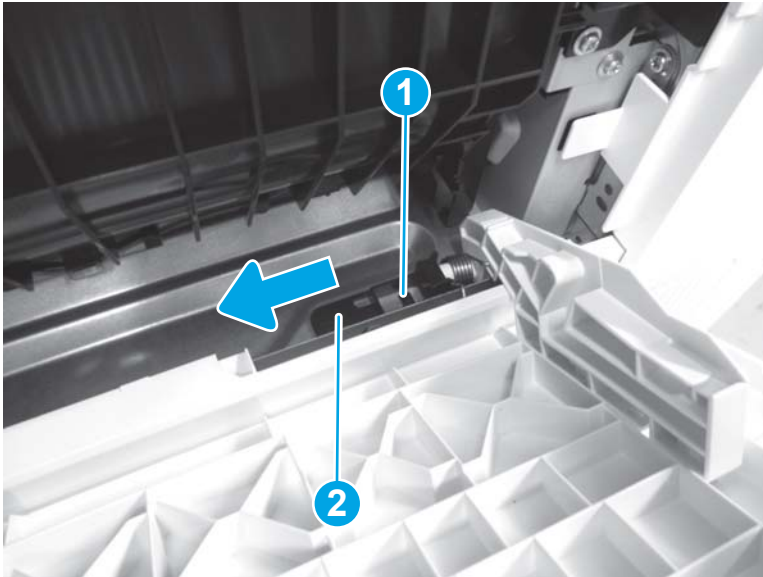


5. Release the left hinge pin (callout 1), and then slide the door to the left to release the right hinge pin (callout 2).

 **NOTE:** The spring on the right hinge pin (callout 2) is not captive. Do not lose the spring.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-735** Remove the right door

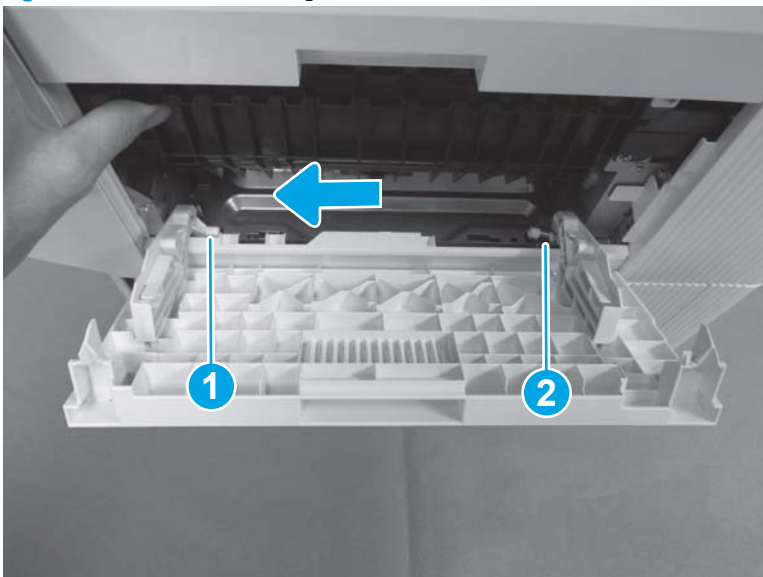

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right upper cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right upper cover on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right upper cover (3-bin stapler/stacker) part number	
---	--

---

RC4-7409-000CN	Cover, right upper
----------------	--------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.


### Step 1: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.

2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-736** Remove the right upper cover

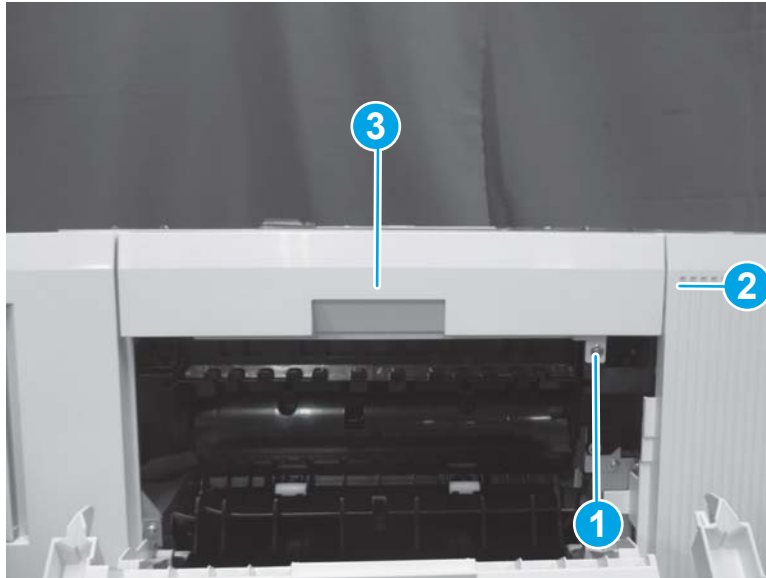



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Staple door (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the staple door \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the stapler door.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Stapler door part number	
RC4-9575-000CN	Stapler door

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple door (3-bin stapler/stacker)

1. Open the stapler door.

Figure 1-737 Open the stapler door

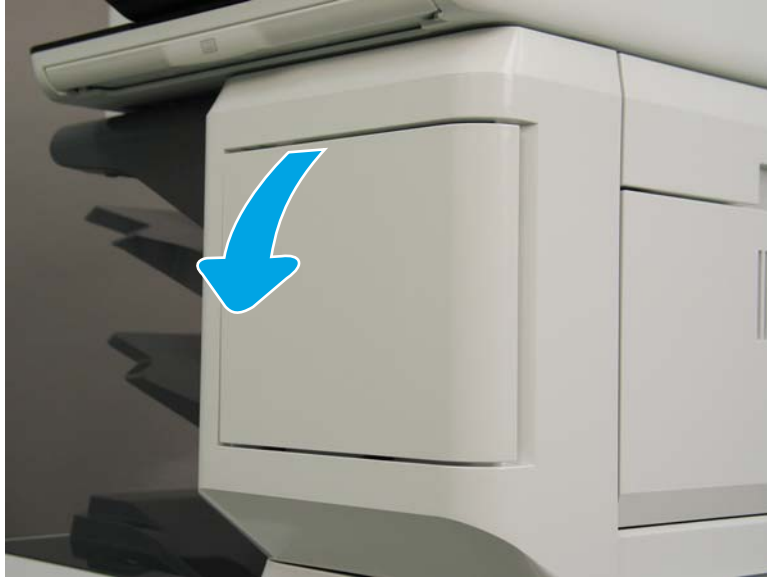

2. Press inward to release two hinge pins (callout 1), and then pull the stapler door away from the printer (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-738 Remove the stapler door



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Staple cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the stapler cover.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Stapler cover part number	
RC4-7405-000CN	Stapler cover

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

Figure 1-739 Open the front door



2. Open the stapler door.

Figure 1-740 Open the stapler door

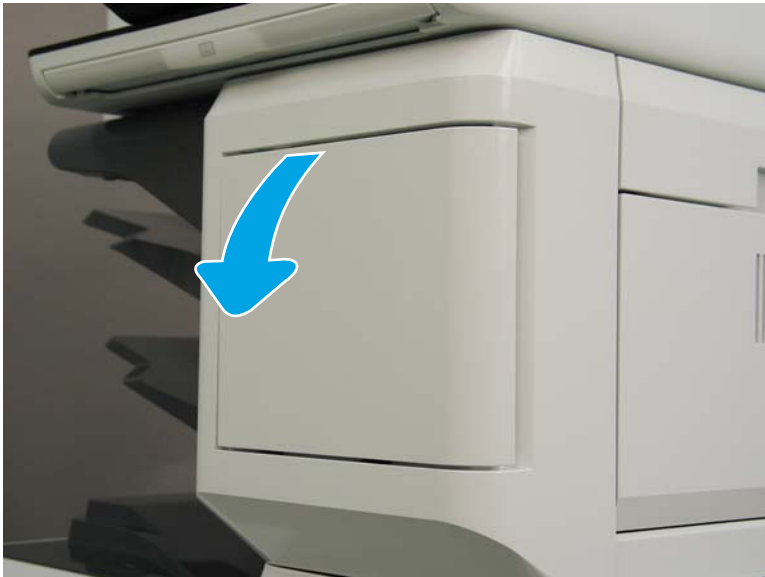

3. Remove one screw (callout 1).

Figure 1-741 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-742 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

**Special installation instructions: Stapler cover**

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-743 Position the tab



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Stapler

- [Introduction](#)
- [Step 1: Remove the staple cartridge](#)
- [Step 2: Remove the stapler cover](#)
- [Step 3: Remove the stapler](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the stapler.

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Stapler part number	
RM2-1193-000CN	Stapler assembly

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a multi-page document and select the stapling option. Verify that the document is correctly stapled.


### Step 1: Remove the staple cartridge

1. Open the staple-cartridge door.


---

 **NOTE:** Opening the staple-cartridge door disables the stapler.

---

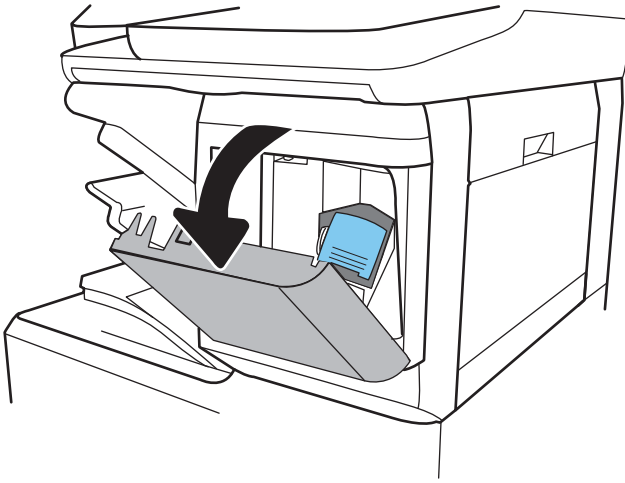


2. Grasp the colored tab on the staple cartridge, and then pull the staple cartridge straight out.

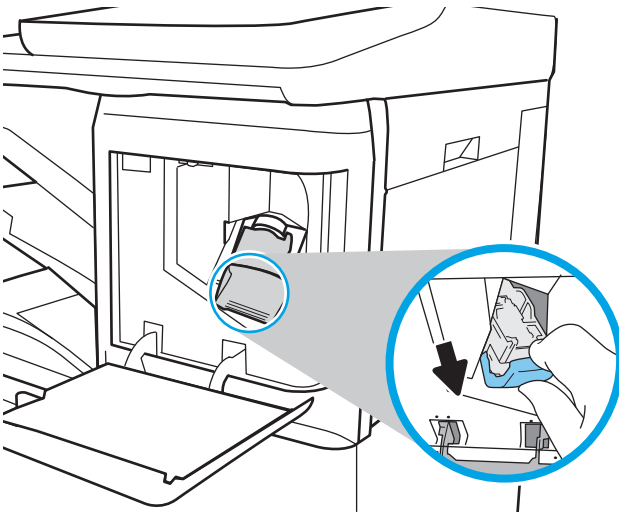

3. Press the end of the staple cartridge refill closest to the green handle down to release it (callout 1), and then rotate the refill away from the carrier (callout 2) to remove it.

Figure 1-744 Release the staple cartridge refill

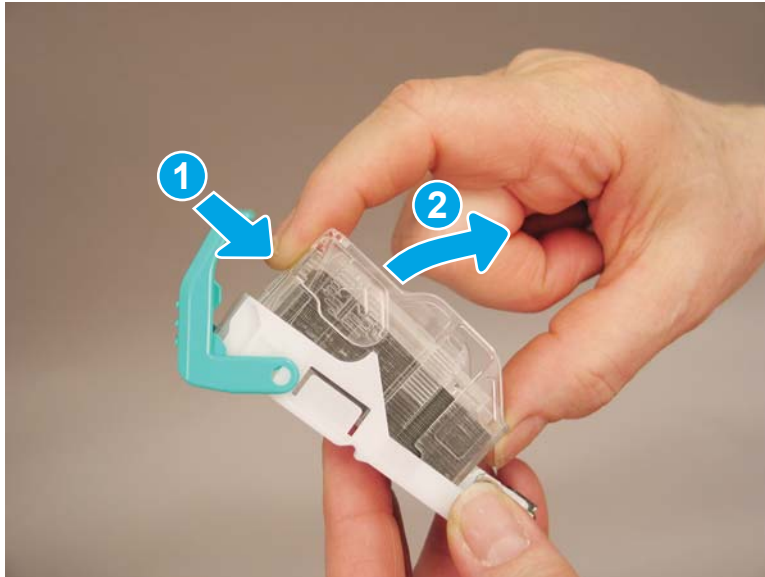

#### Step 2: Remove the stapler cover


1. Open the front door.

Figure 1-745 Open the front door




2. Open the stapler door.

Figure 1-746 Open the stapler door

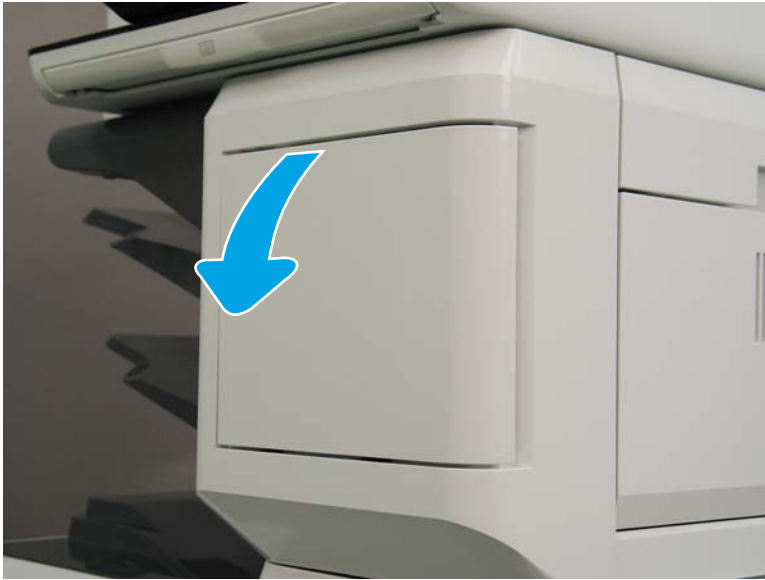

3. Remove one screw (callout 1).

Figure 1-747 Remove one screw

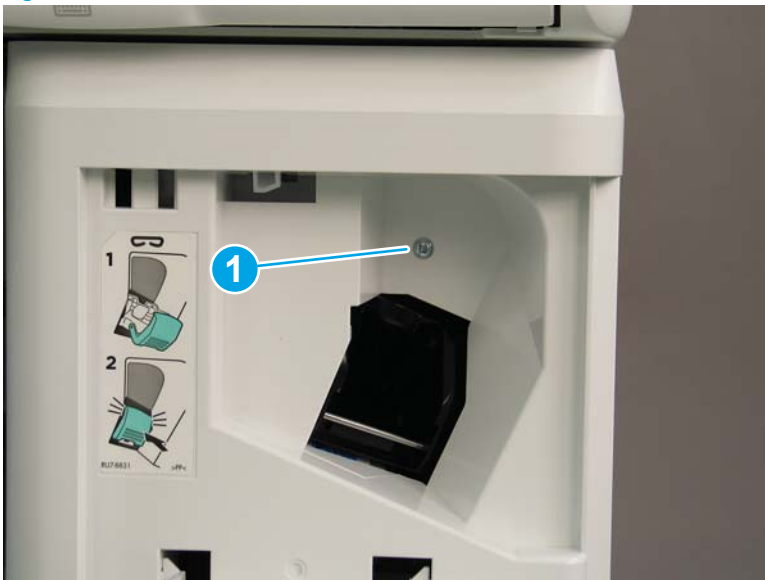



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-748 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.


Figure 1-749 Position the tab

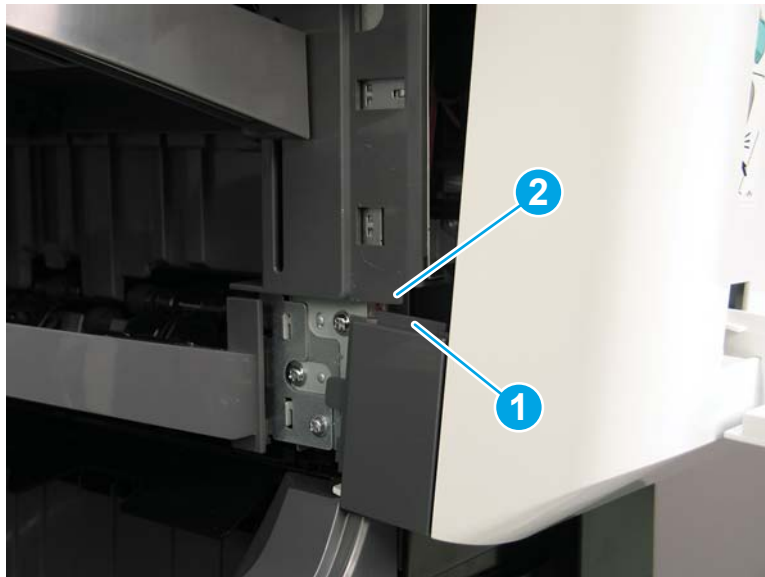

### Step 3: Remove the stapler


- ▲ Disconnect two connectors (callout 1), remove three screws (callout 2), and then lift the stapler away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


---

**Figure 1-750** Remove the stapler

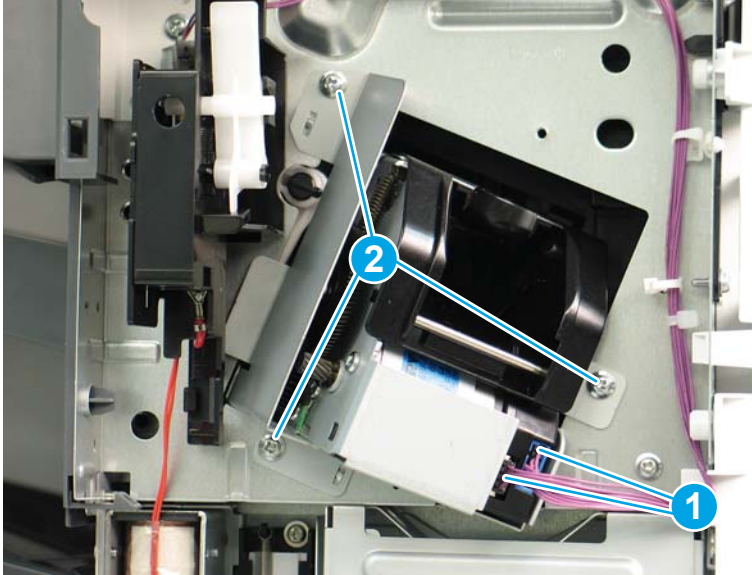

#### Step 4: Unpack the replacement assembly



1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Right front cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the stapler cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the right front cover \(3-bin stapler/stacker\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right front cover on the 3-bin stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right front cover (3-bin stapler/stacker) part number	
RC4-9586-000CN	Cover, right front

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the stapler cover (3-bin stapler/stacker)

1. Open the front door.

Figure 1-751 Open the front door



2. Open the stapler door.

Figure 1-752 Open the stapler door



3. Remove one screw (callout 1).

Figure 1-753 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-754 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Special installation instructions: Stapler cover**

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-755 Position the tab

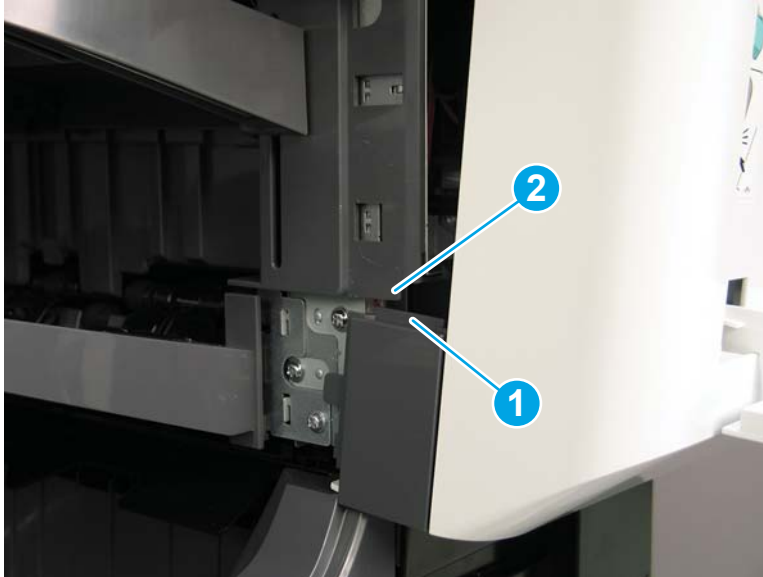


### Step 2: Remove the right front cover (3-bin stapler/stacker)

- ▲ On the back of the staple cover, remove one screw (callout 1), and then remove the right front cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-756 Remove the right front cover

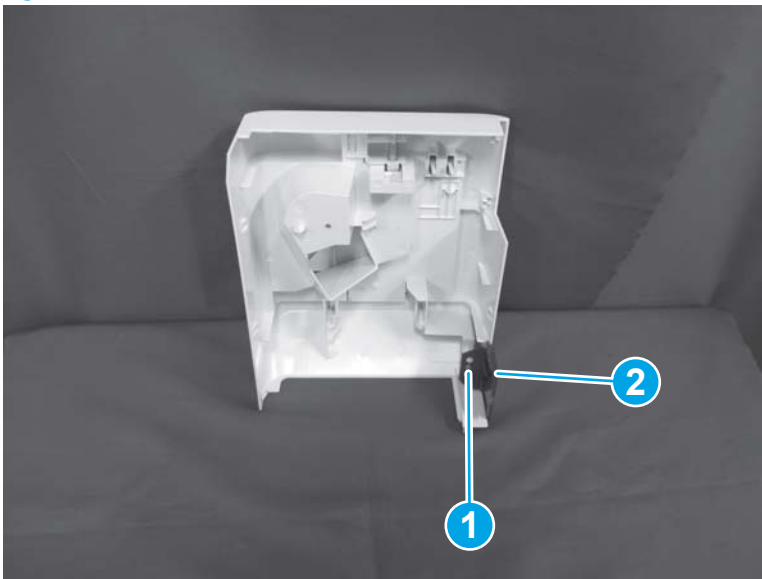

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Rear inner cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the rear inner cover \(3-bin stapler/stacker\)](#)
- [Step 3: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the rear inner cover on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear inner cover (3-bin stapler/stacker) part number	
RC4-7407-000CN	Cover, rear inner

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).



Figure 1-757 Remove two screws

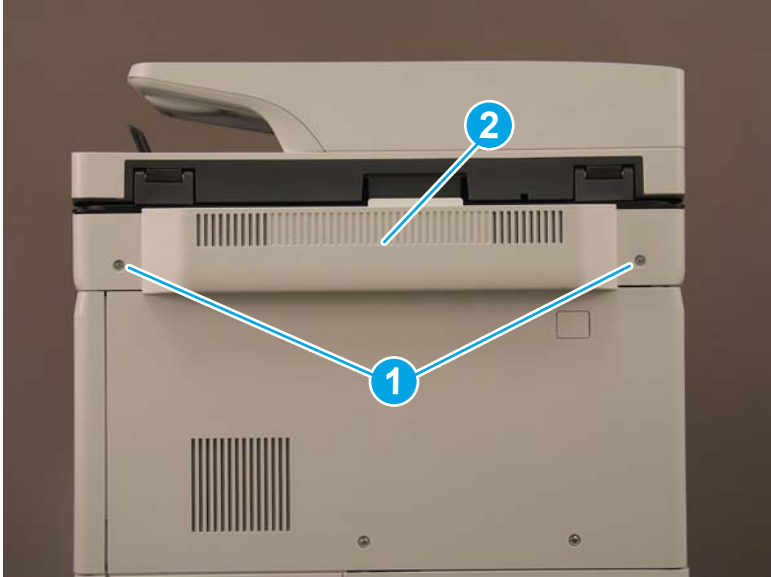


- 2. Remove one screw cover (callout 1).


Figure 1-758 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-759** Remove three screws and the rear cover

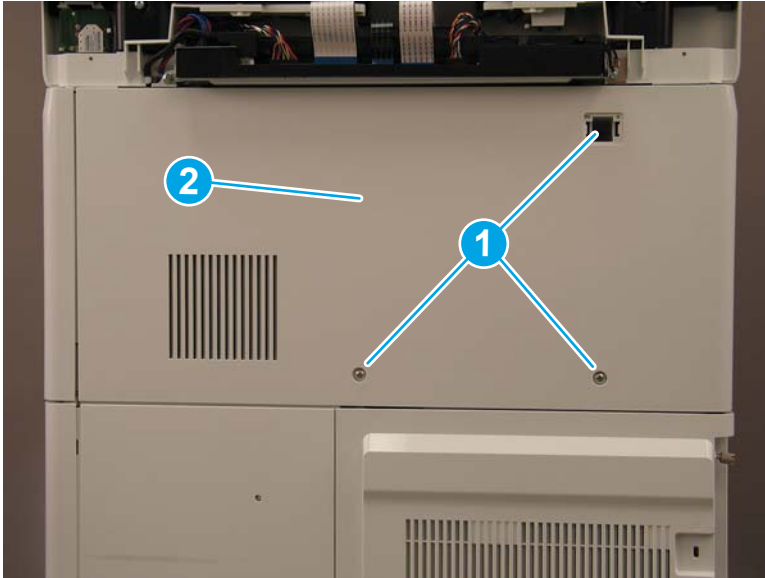


### Step 2: Remove the rear inner cover (3-bin stapler/stacker)

- ▲ Remove one screw (callout 1), release three tabs (callout 2), and then remove the rear inner cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-760** Remove the rear inner cover

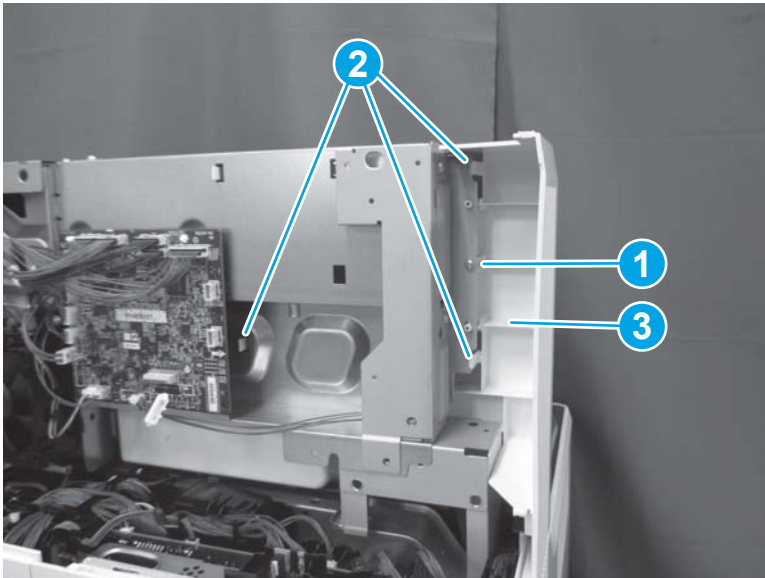

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right corner cover (3-bin stapler/stacker)


- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the right corner cover \(3-bin stapler/stacker\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right corner cover on the 3-bin stapler/stacker.


[Click here to view a video of this procedure.](#)

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Right corner cover (3-bin stapler/stacker) part number

---

RC4-7408-000CN	Cover, rear corner
----------------	--------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-761 Remove two screws

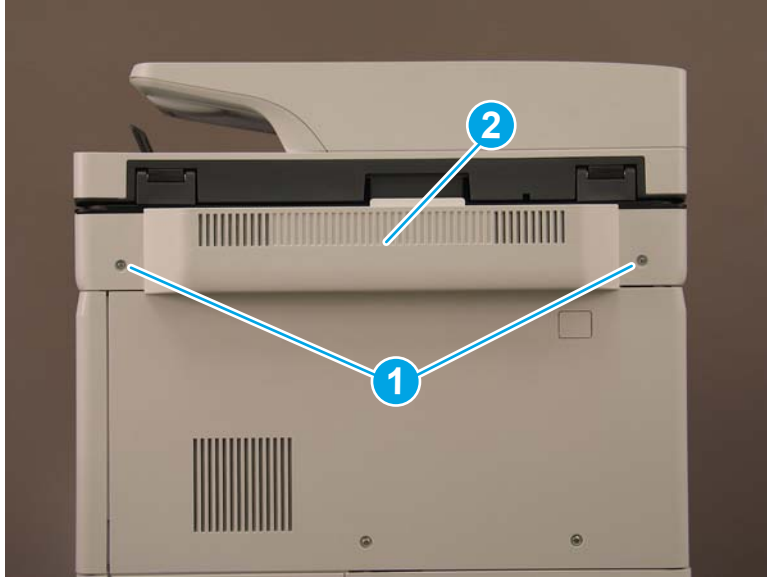


2. Remove one screw cover (callout 1).


Figure 1-762 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-763** Remove three screws and the rear cover

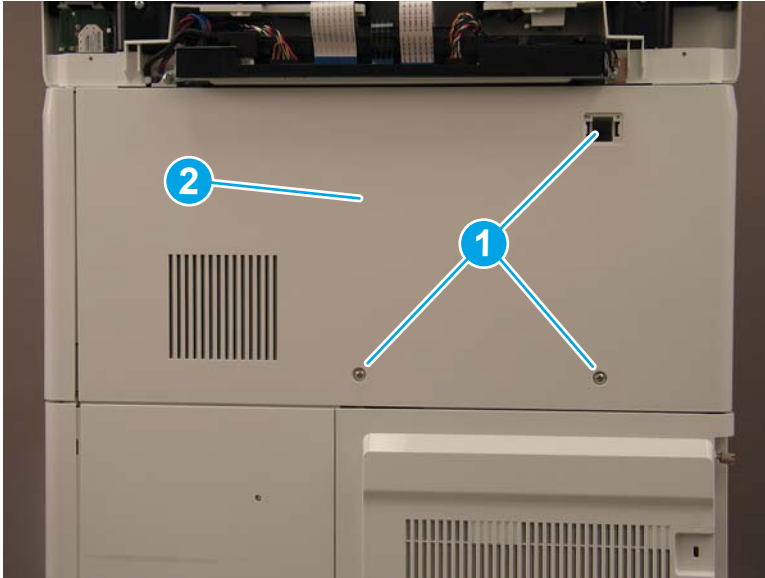


#### Step 2: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.
2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-764** Remove the right upper cover

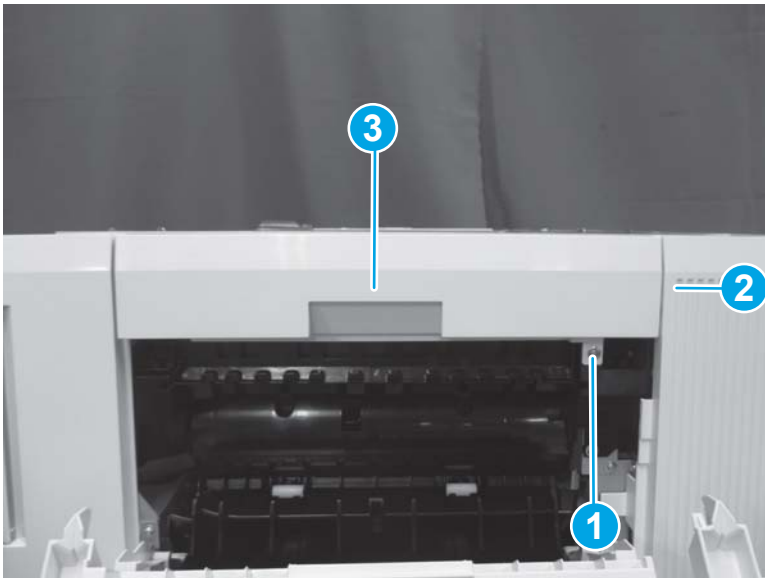

### Step 3: Remove the right corner cover (3-bin stapler/stacker)

- ▲ Release two tabs (callout 1), and then remove the right corner cover (callout 2).


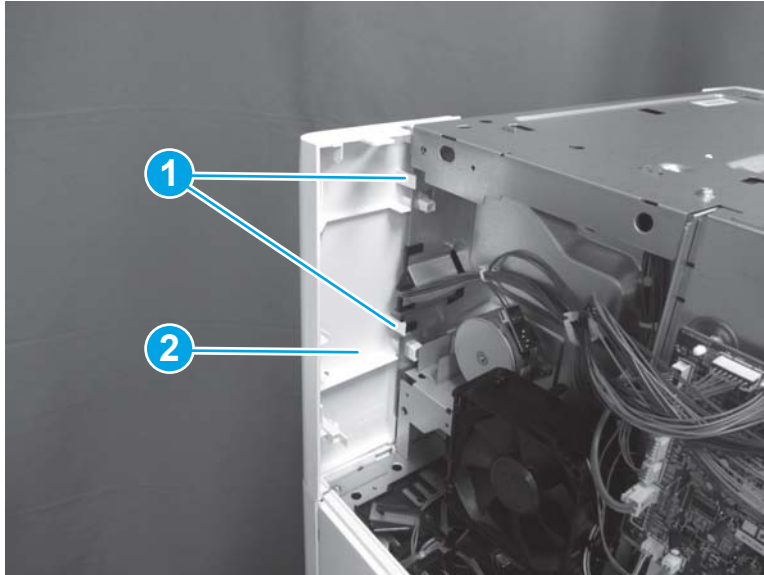
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-765 Remove the right corner cover





### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


## Removal and replacement: Jogger cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the stapler cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the jogger cover \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)


### Introduction

This document provides the procedures to remove and replace the jogger cover on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Jogger cover (3-bin stapler/stacker) part number	
RC4-7411-000CN	Cover, jogger

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the stapler cover (3-bin stapler/stacker)

1. Open the front door.

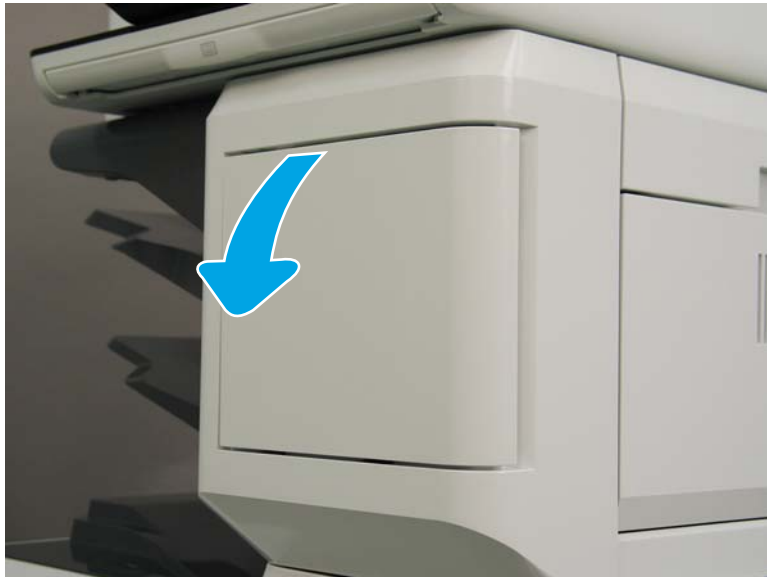


Figure 1-766 Open the front door



2. Open the stapler door.

Figure 1-767 Open the stapler door



3. Remove one screw (callout 1).

Figure 1-768 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-769 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Special installation instructions: Stapler cover**

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-770 Position the tab

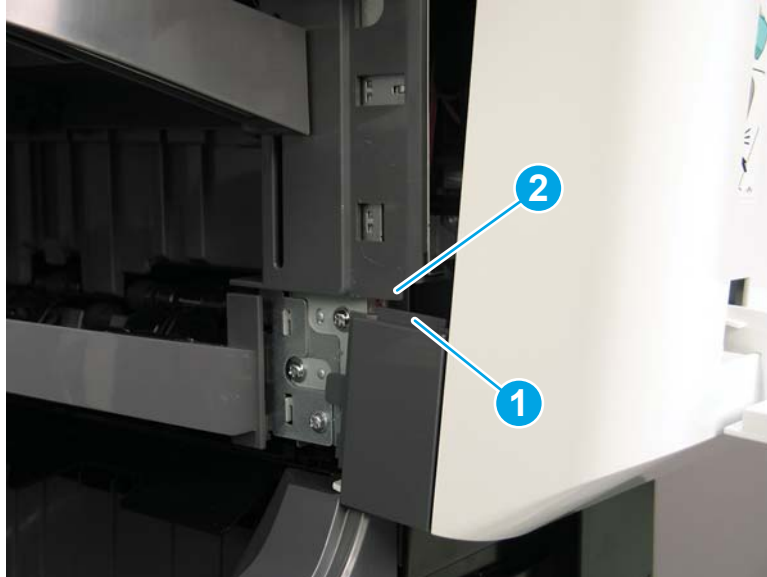

**Step 2: Remove the jogger cover (3-bin stapler/stacker)**

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-771 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-772 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-773 Remove the cover



4. Use a thin-shaft, magnetized screwdriver to remove one screw (callout 1).


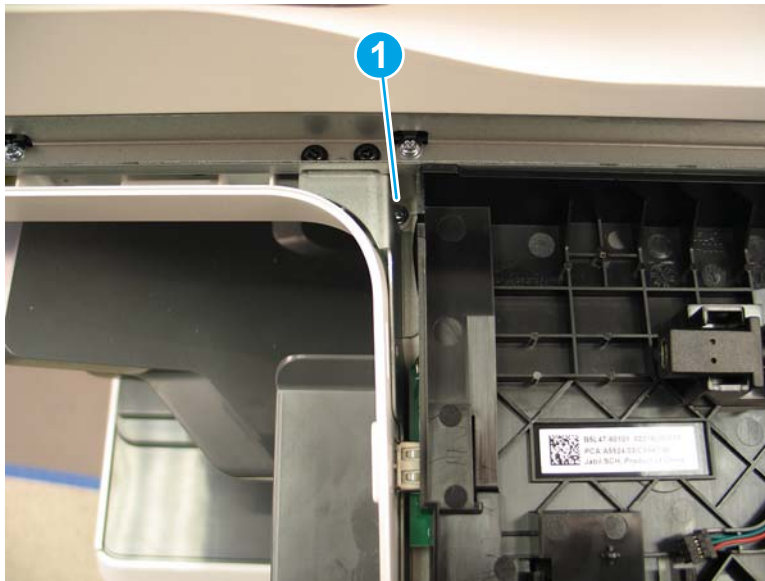
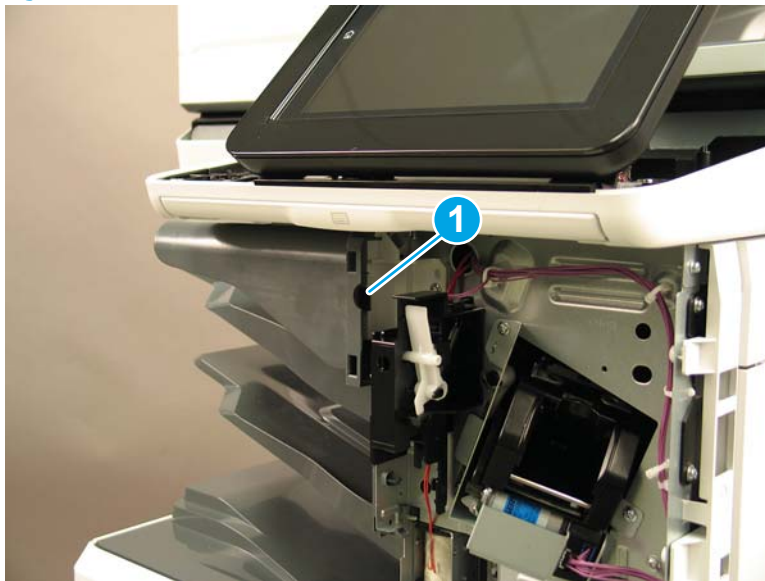
 **TIP:** If necessary, remove the control panel to gain better access to this screw.

Figure 1-774 Remove one screw




5. Release one tab (callout 1).

Figure 1-775 Release one tab




6. Slide the jogger cover to the left to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-776** Remove the jogger cover

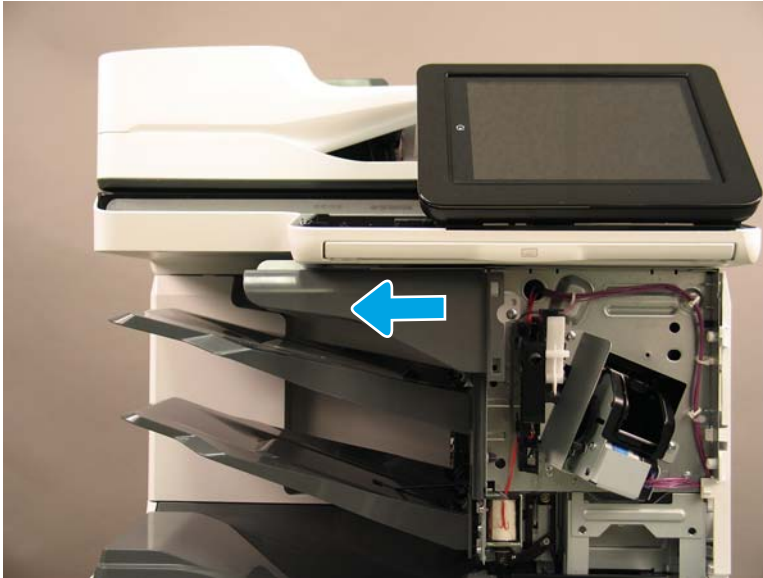

## Step 2: Unpack the replacement assembly



1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Staple rear cover (3-bin stapler/stacker)


- [Introduction](#)
- [Step 1: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the right corner cover \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the staple rear cover \(3-bin stapler/stacker\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the staple rear cover on the 3-bin stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  -  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Staple rear cover (3-bin stapler/stacker) part number	
RC4-7412-000CN	Cover, staple rear

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

Figure 1-777 Open the front door



2. Open the stapler door.


Figure 1-778 Open the stapler door

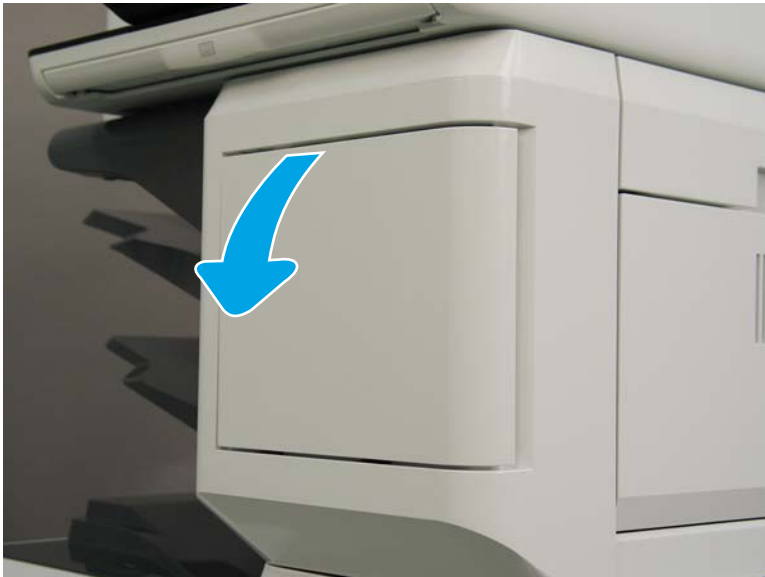



3. Remove one screw (callout 1).

Figure 1-779 Remove one screw

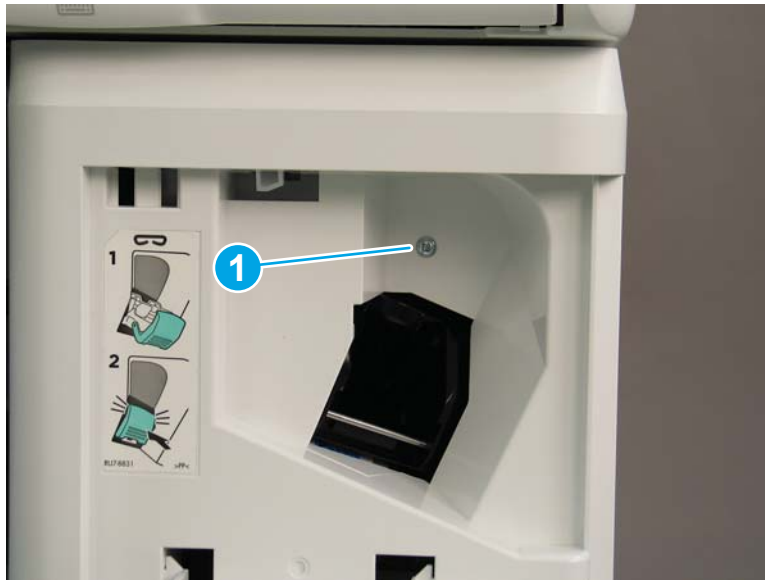

4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-780 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.


Figure 1-781 Position the tab



Step 2: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-782 Remove two screws

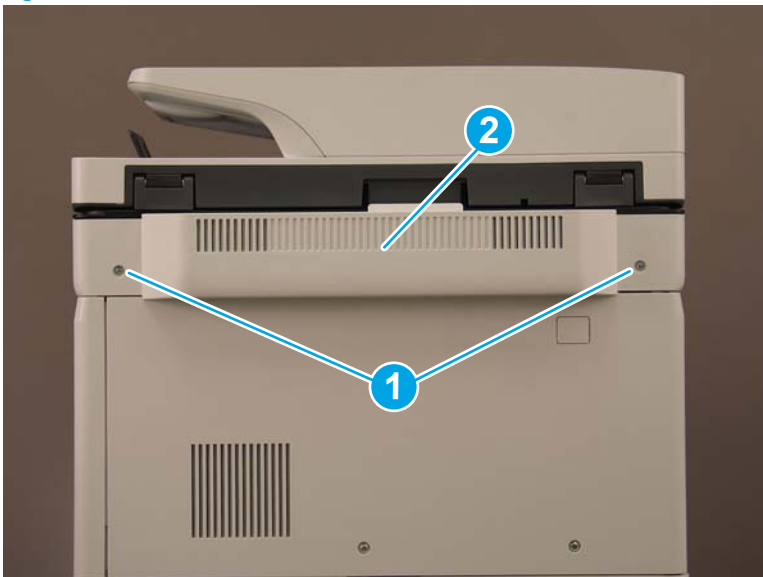

2. Remove one screw cover (callout 1).

Figure 1-783 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


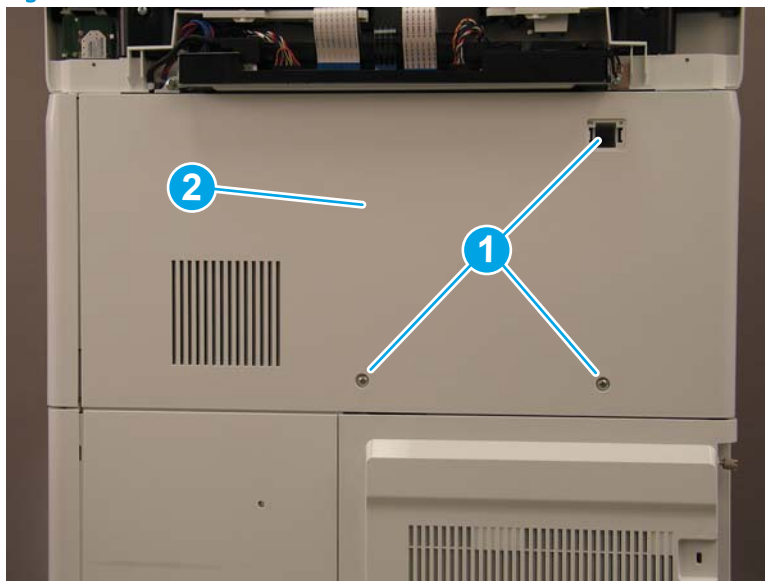
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-784 Remove three screws and the rear cover




### Step 3: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.

2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-785** Remove the right upper cover

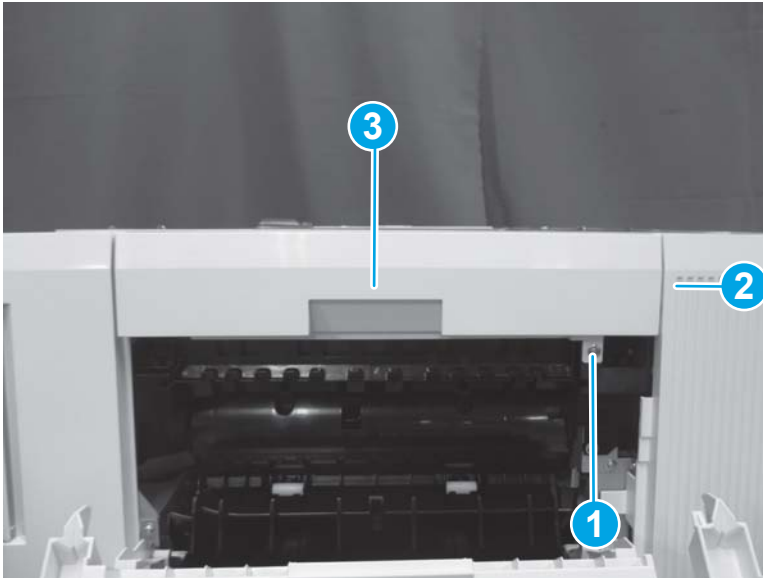


#### Step 4: Remove the right corner cover (3-bin stapler/stacker)

- ▲ Release two tabs (callout 1), and then remove the right corner cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-786** Remove the right corner cover

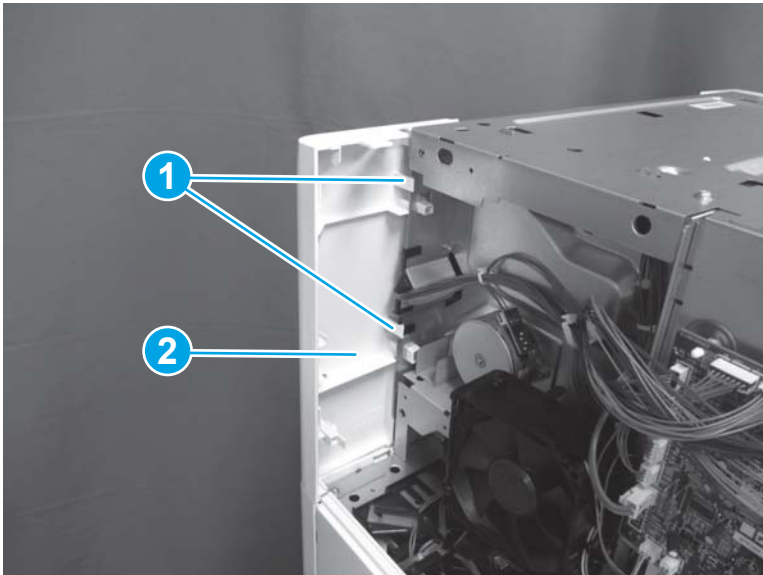

#### Step 5: Remove the staple rear cover (3-bin stapler/stacker)


- ▲ Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-787** Remove the staple rear cover

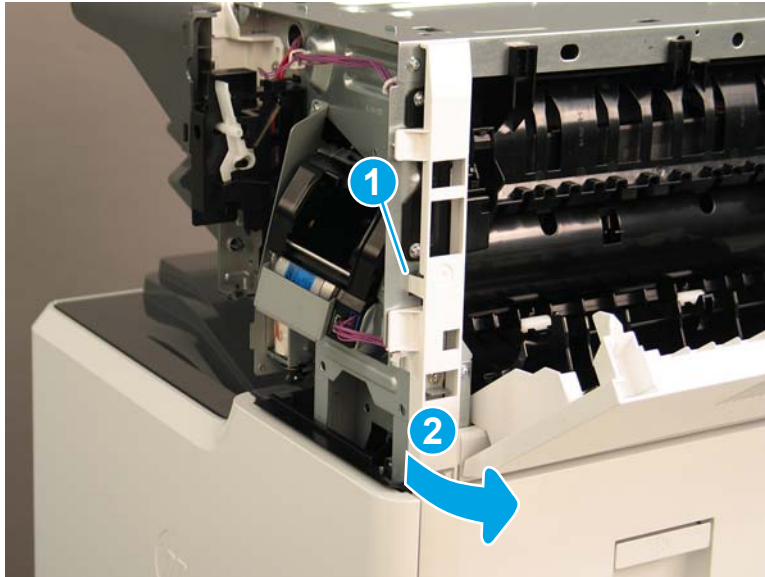

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right lower cover (3-bin stapler/stacker)


- [Introduction](#)
- [Step 1: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the right corner cover \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the staple rear cover \(3-bin stapler/stacker\)](#)
- [Step 6: Remove the right lower cover \(3-bin stapler/stacker\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right lower cover on the 3-bin stapler/stacker.


[Click here to view a video of this procedure.](#)

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Right lower cover (3-bin stapler/stacker) part number

---

RC4-9439-000CN	Cover, right lower
----------------	--------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

Figure 1-788 Open the front door



2. Open the stapler door.

Figure 1-789 Open the stapler door

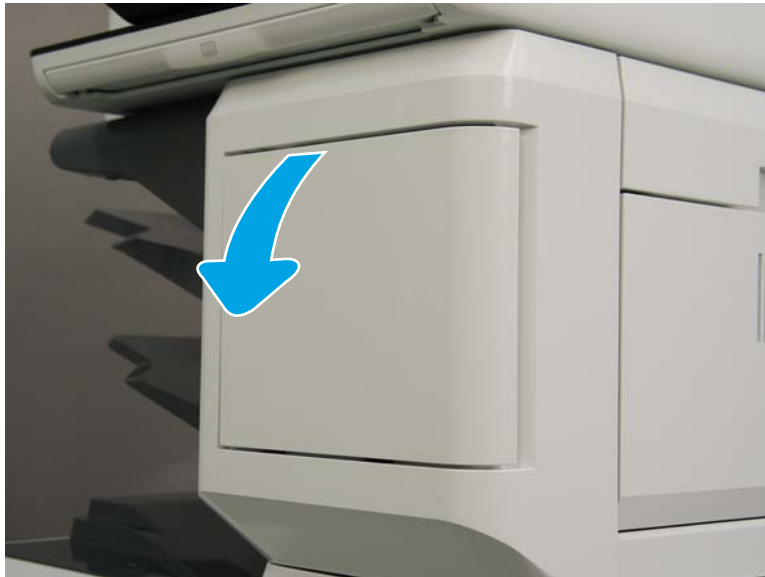

3. Remove one screw (callout 1).

**Figure 1-790** Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

**Figure 1-791** Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


---

**Special installation instructions: Stapler cover**

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.




Figure 1-792 Position the tab

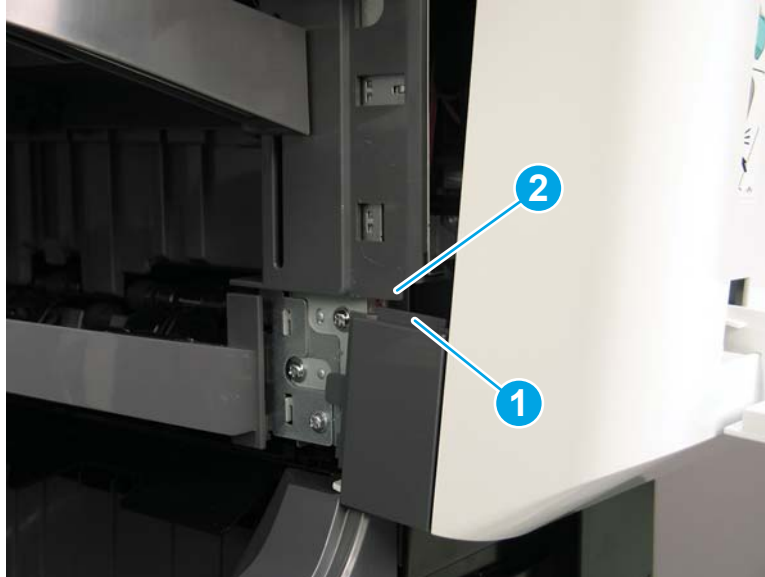

**Step 2: Remove the rear cover (3-bin stapler/stacker)**


1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-793 Remove two screws

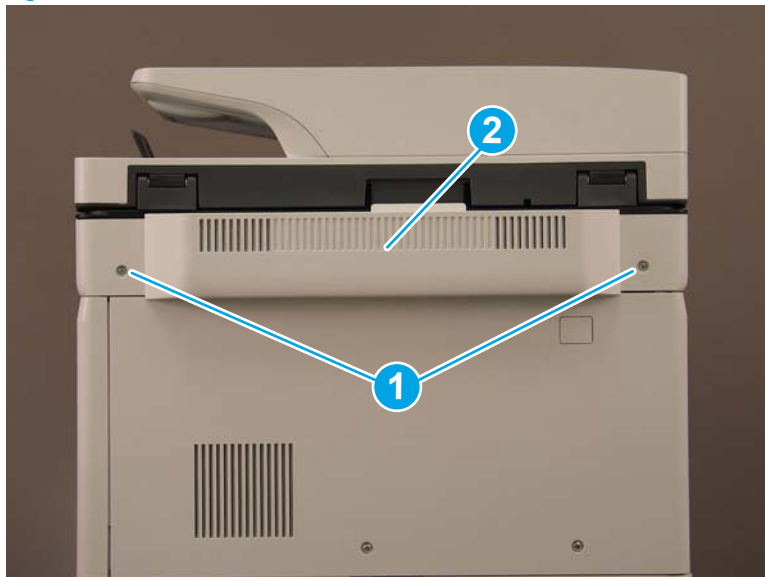

2. Remove one screw cover (callout 1).

Figure 1-794 Remove one screw cover

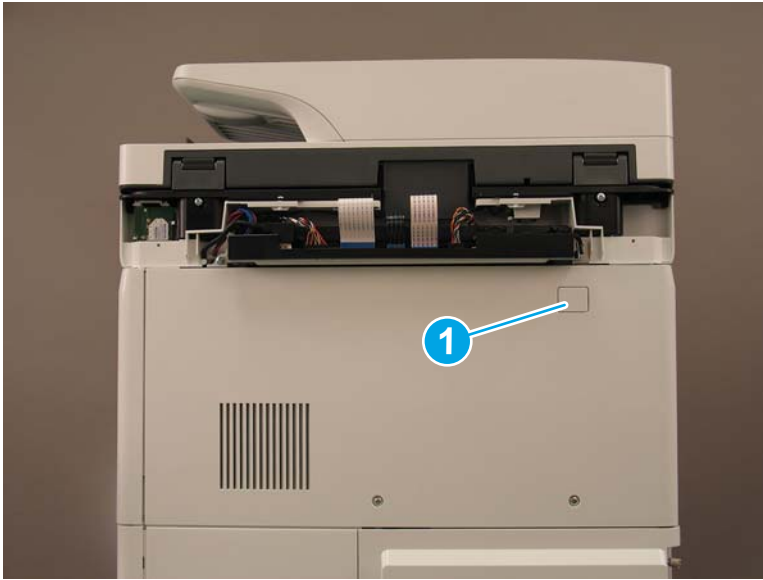

3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


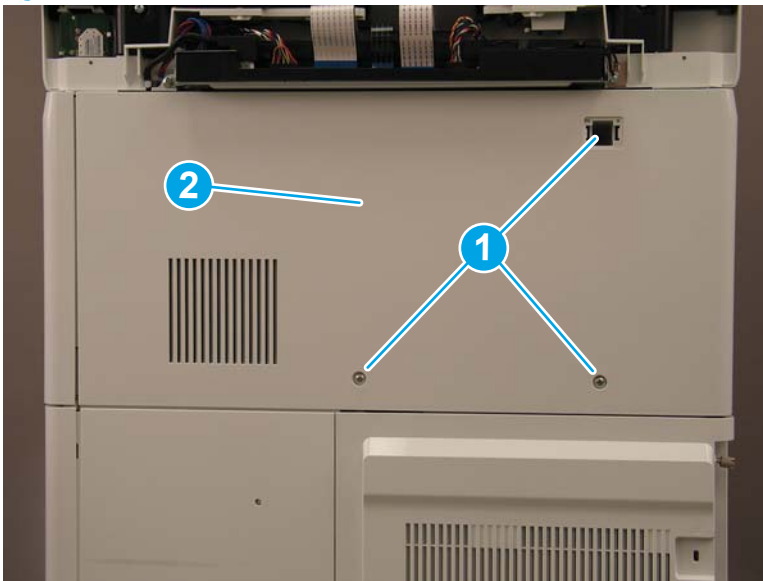
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-795 Remove three screws and the rear cover




### Step 3: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.

2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-796** Remove the right upper cover

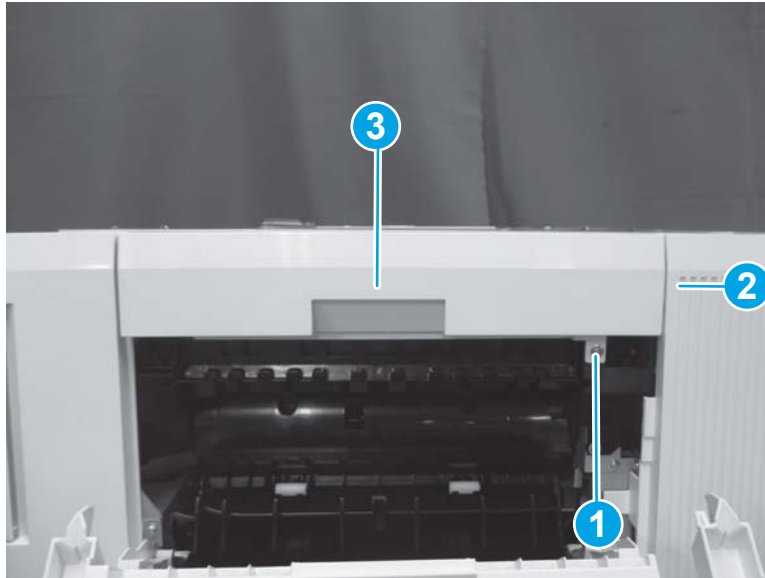


#### Step 4: Remove the right corner cover (3-bin stapler/stacker)

- ▲ Release two tabs (callout 1), and then remove the right corner cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-797** Remove the right corner cover

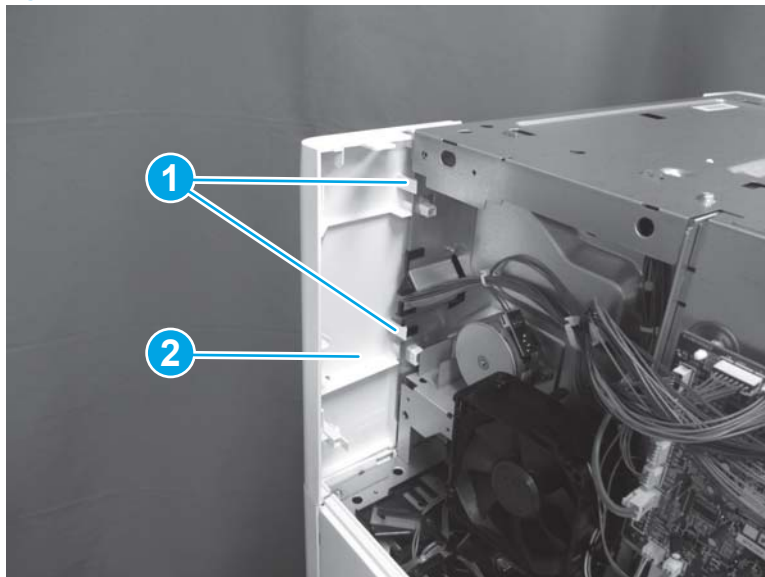

#### Step 5: Remove the staple rear cover (3-bin stapler/stacker)


- ▲ Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-798** Remove the staple rear cover

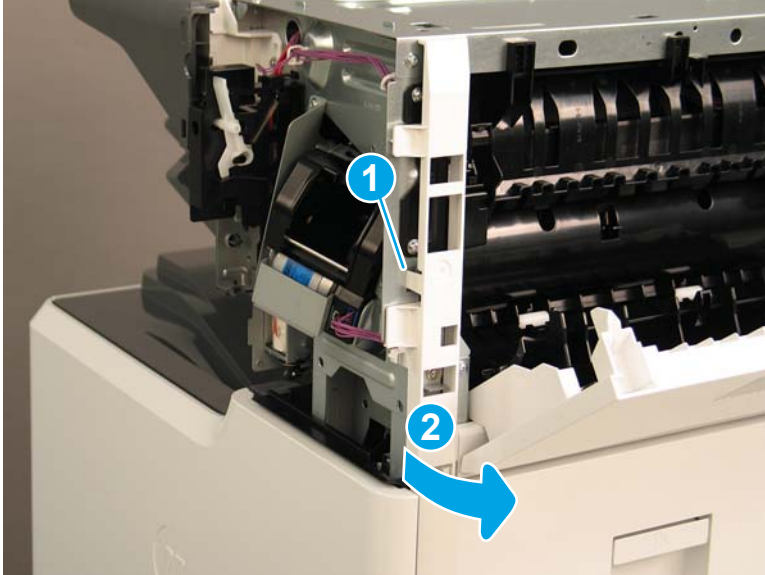

**Step 6: Remove the right lower cover (3-bin stapler/stacker)**


- ▲ Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the back of the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-799** Remove the right lower cover

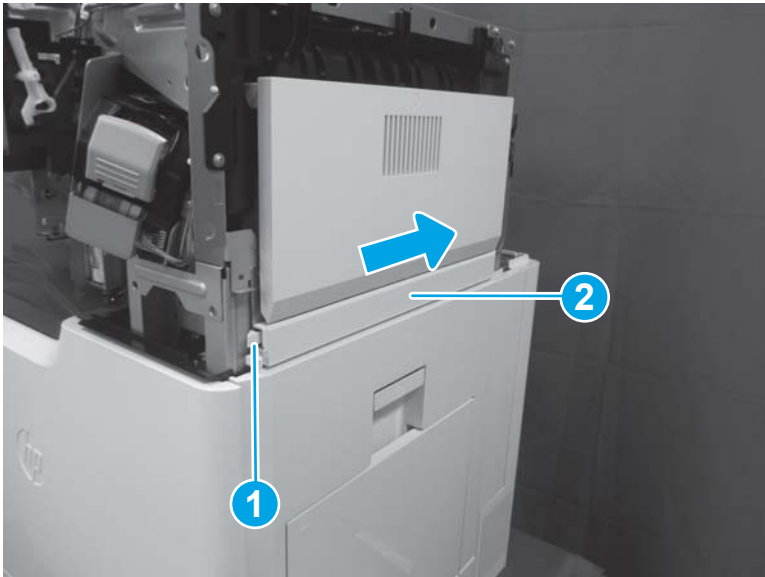

**Step 7: Unpack the replacement assembly**

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Staple door lock arm (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the staple door lock arm \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the staple door lock arm on the 3-bin stapler/stacker.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Staple door lock arm (3-bin stapler/stacker) part number	
--	--

---

RC4-9576-000CN	Arm, staple door lock
----------------	-----------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple cover (3-bin stapler/stacker)

1. Open the front door.

Figure 1-800 Open the front door



2. Open the stapler door.

Figure 1-801 Open the stapler door



3. Remove one screw (callout 1).

Figure 1-802 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-803 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


---

**Special installation instructions: Stapler cover**

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.




Figure 1-804 Position the tab

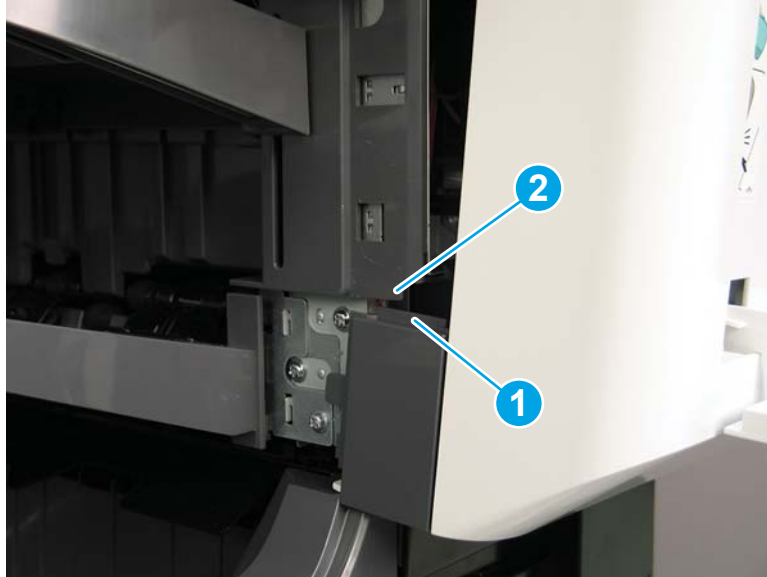


**Step 2: Remove the staple door lock arm (3-bin stapler/stacker)**

1. On the back of the staple cover, release one tab (callout 1), and then slide the lock arm up to release it.


Figure 1-805 Release one tab and slide the lock arm

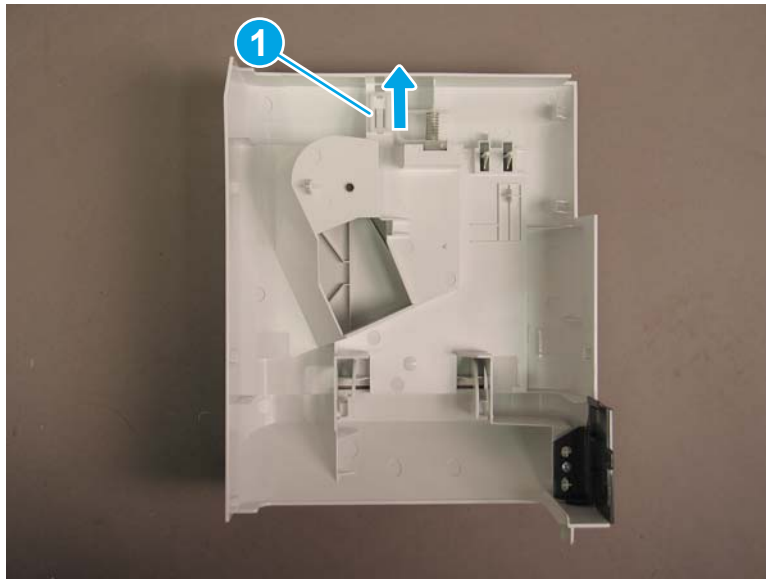

2. Squeeze the edges of the lock arm (callout 1) to compress the spring and release the tab, and then rotate the lock arm away from the staple cover to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-806** Remove the staple door lock arm

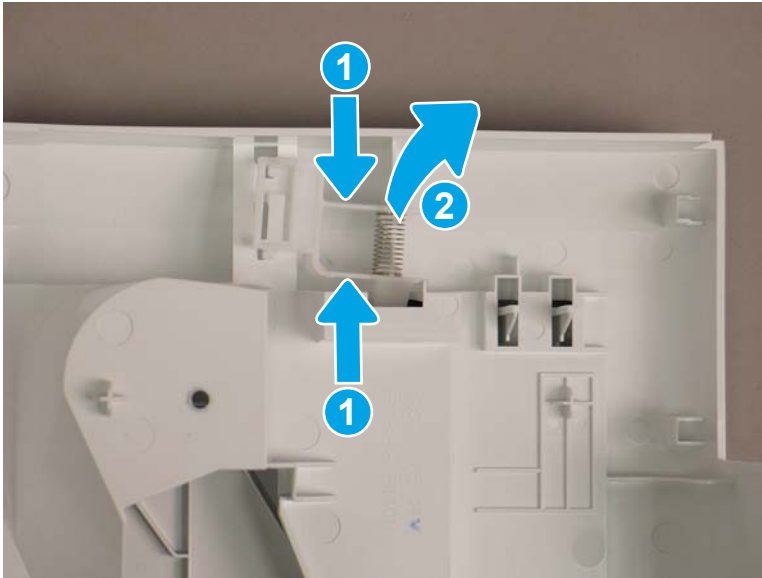



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Tray assembly (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray assembly \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the tray assembly on the 3-bin stapler/stacker.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Tray assembly (3-bin stapler/stacker) part number	
RM2-1196-000CN	Tray assembly

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray assembly (3-bin stapler/stacker)


1. Release one boss (callout 1), rotate the front locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-807 Remove the front locking pin

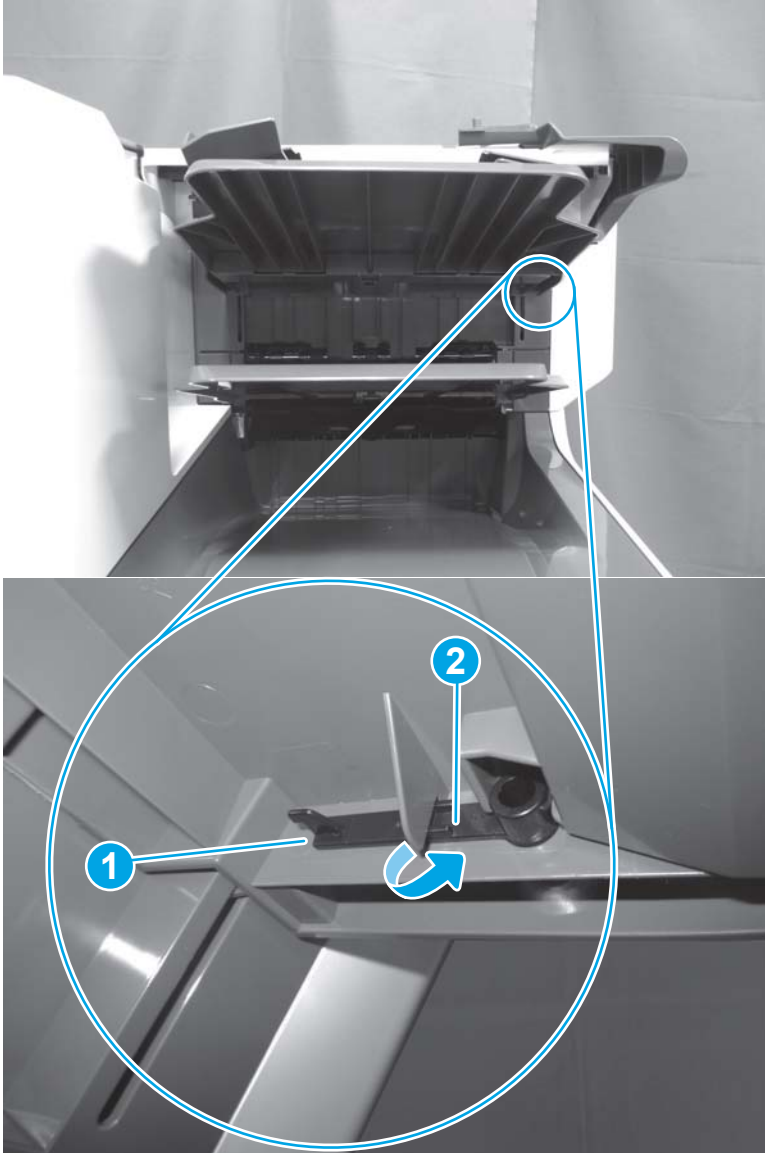


2. Release one boss (callout 1), rotate the rear locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-808 Remove the rear locking pin

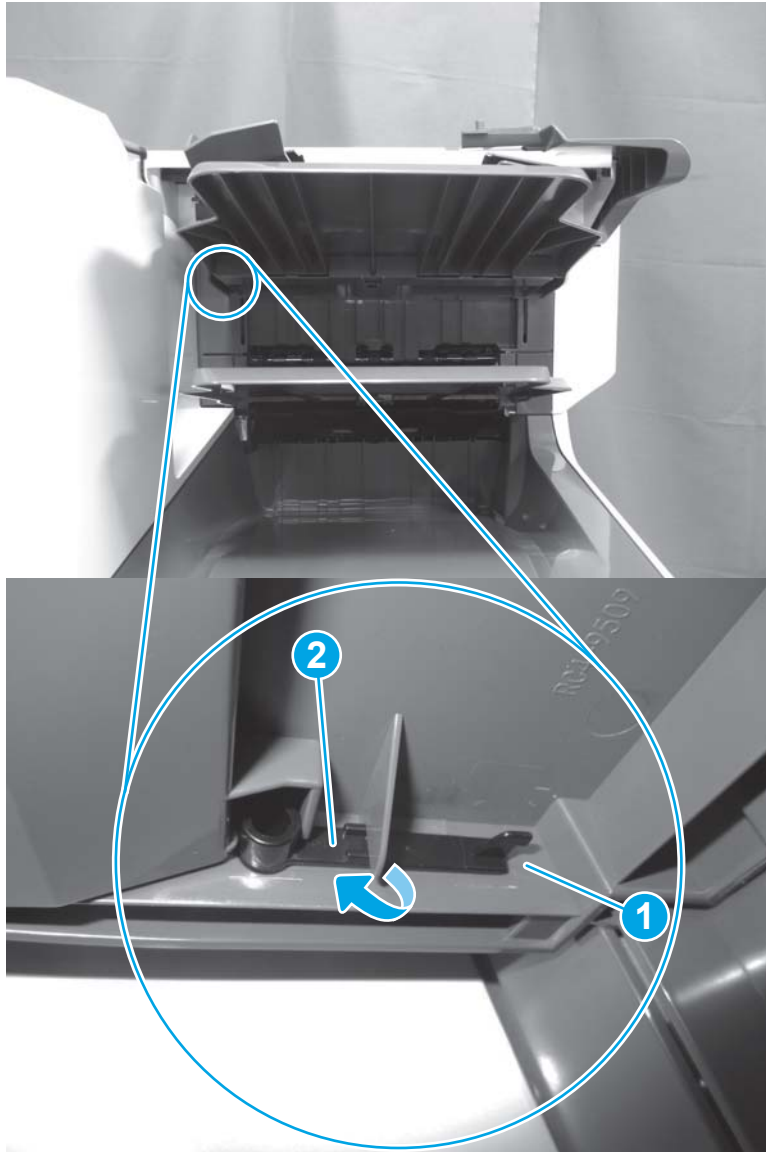


3. Lift the tray assembly (callout 1) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-809** Remove the tray assembly

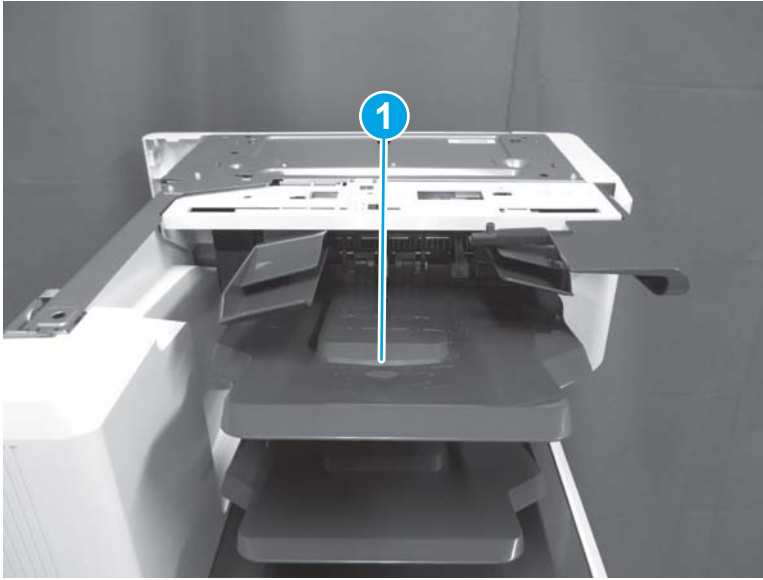

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Tray pin (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray pin \(3-bin stapler/stacker\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the tray pin on the 3-bin stapler/stacker.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Tray pin (3-bin stapler/stacker) part number	
RC5-0353-000CN	Pin, tray fixe

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray pin (3-bin stapler/stacker)


1. To remove the front locking pin, release one boss (callout 1), rotate the locking pin (callout 2) down to release it, and then remove the locking pin.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


---

Figure 1-810 Remove the front locking pin

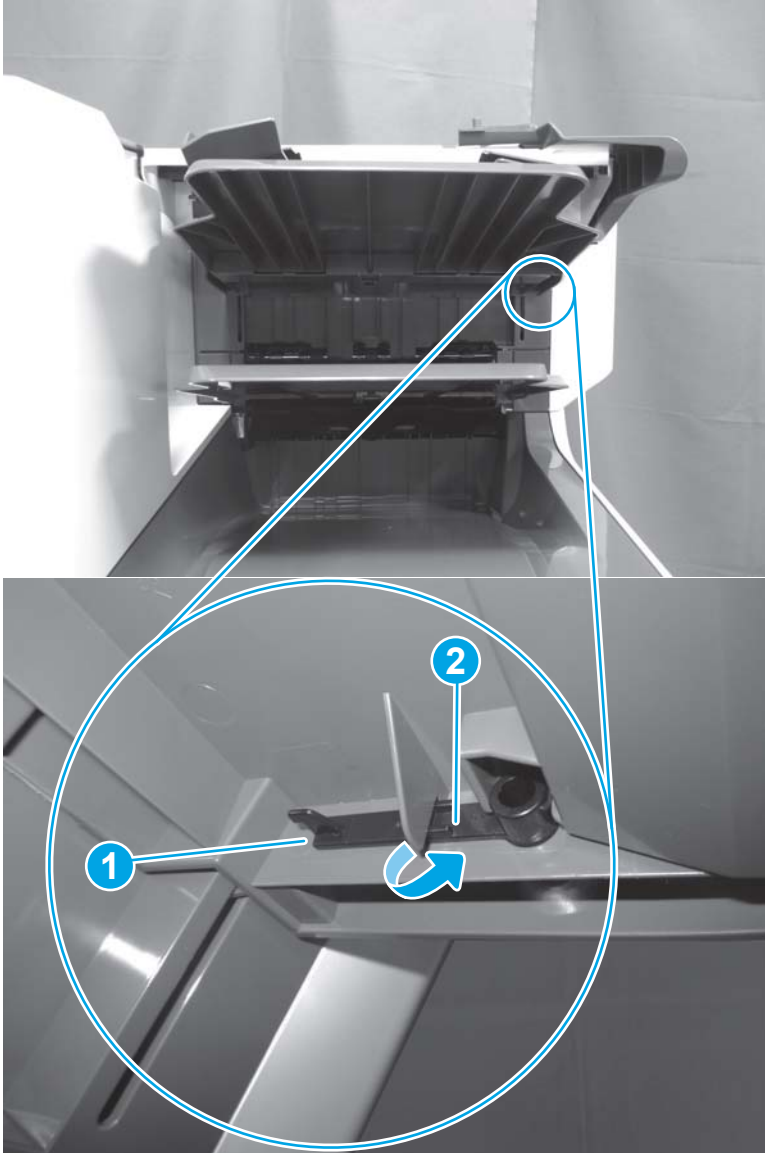




2. To remove the rear locking pin, release one boss (callout 1), rotate the locking pin (callout 2) down to release it, and then remove the locking pin.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-811** Remove the rear locking pin

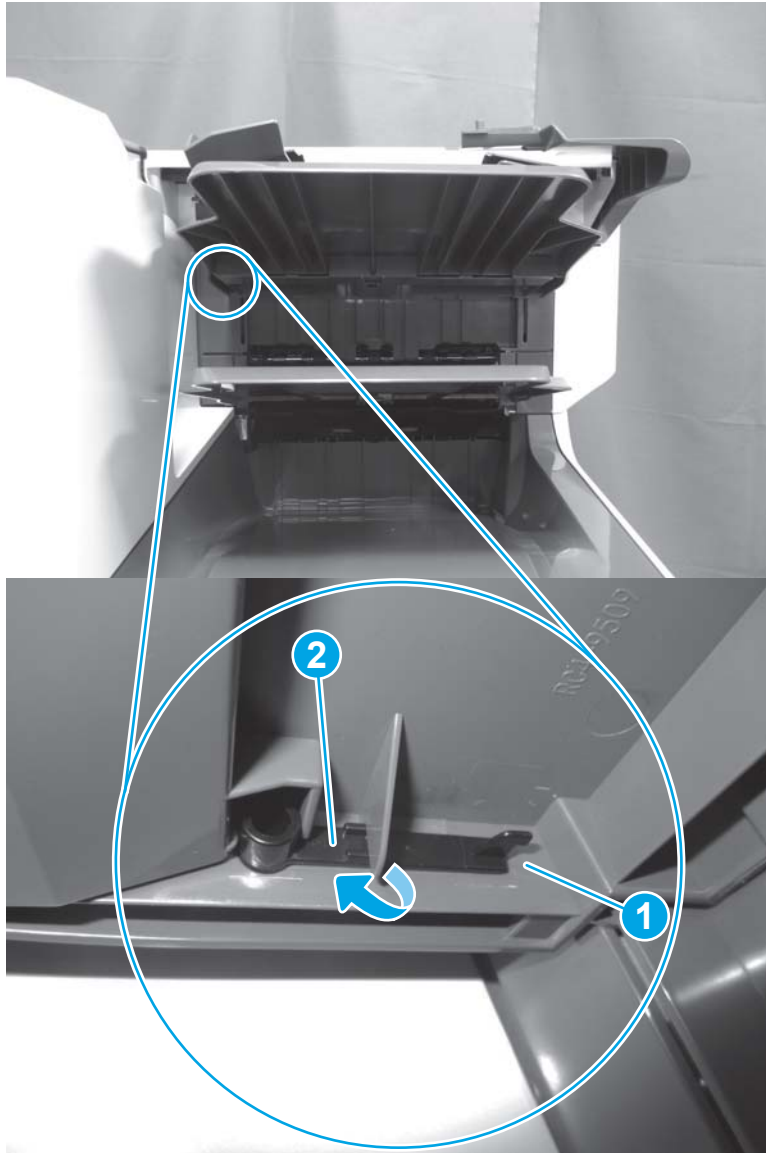

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Jogger (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the jogger cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the jogger \(3-bin stapler/stacker\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the jogger on the 3-bin stapler/stacker.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Jogger (3-bin stapler/stacker) part number	
RM2-1066-000CN	Jog assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the staple cover (3-bin stapler/stacker)

1. Open the front door.

Figure 1-812 Open the front door



2. Open the stapler door.

Figure 1-813 Open the stapler door



3. Remove one screw (callout 1).

Figure 1-814 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-815 Remove the stapler cover.




5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-816 Position the tab

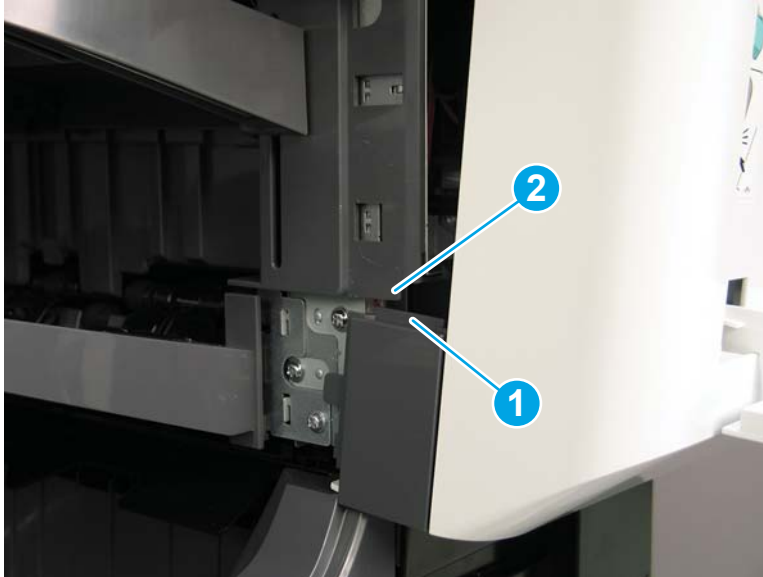

Step 2: Remove the jogger cover (3-bin stapler/stacker)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-817 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-818 Release five tabs



3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.


Figure 1-819 Remove the cover



4. Use a thin-shaft, magnetized screwdriver to remove one screw (callout 1).


 **TIP:** If necessary, remove the control panel to gain better access to this screw.

**Figure 1-820** Remove one screw

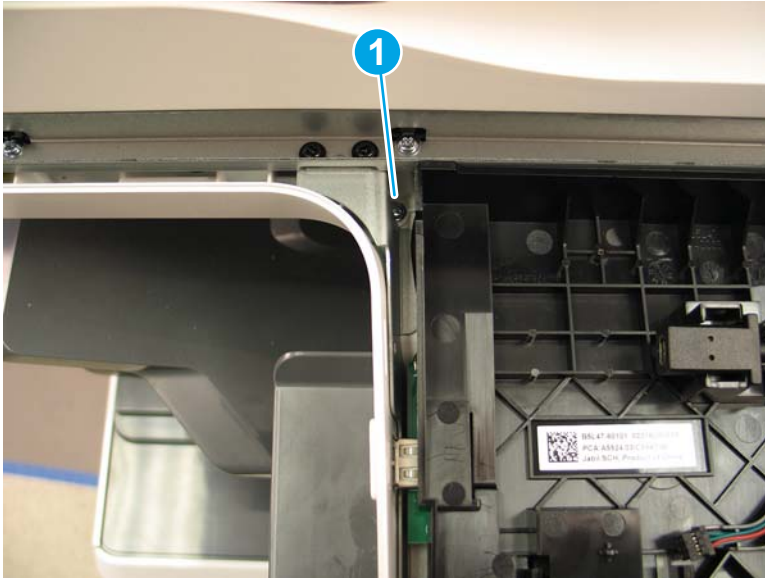


5. Release one tab (callout 1).

**Figure 1-821** Release one tab

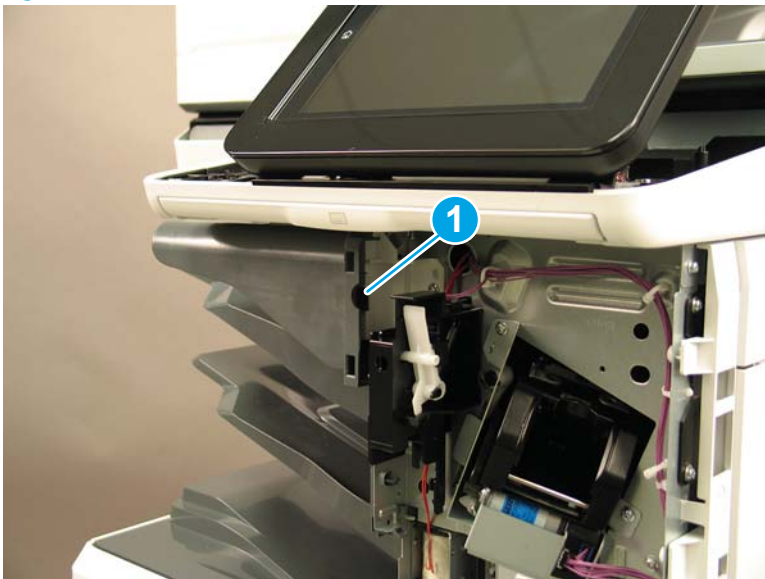




- Slide the jogger cover to the left to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-822** Remove the jogger cover

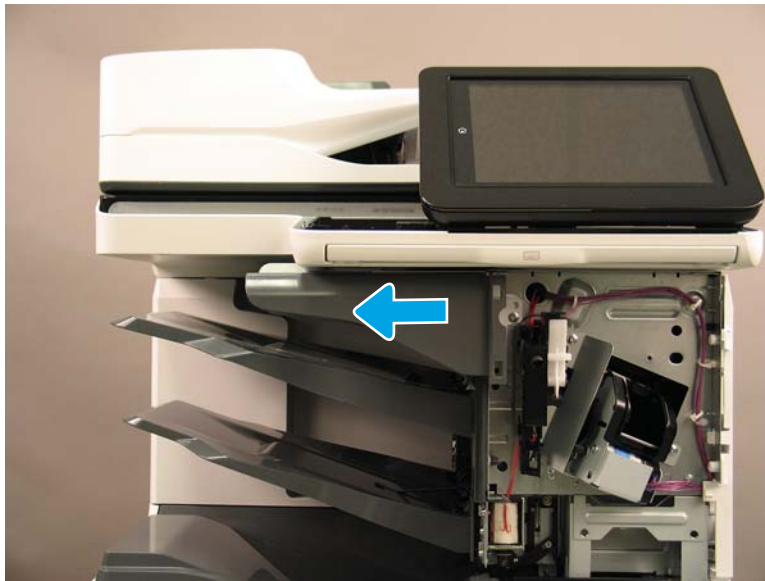

### Step 3: Remove the rear cover (3-bin stapler/stacker)


- At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

**Figure 1-823** Remove two screws

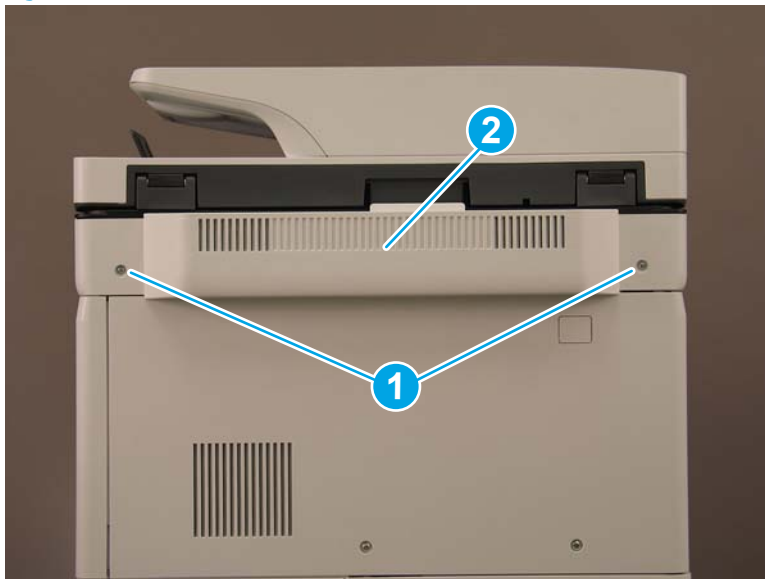

2. Remove one screw cover (callout 1).

Figure 1-824 Remove one screw cover

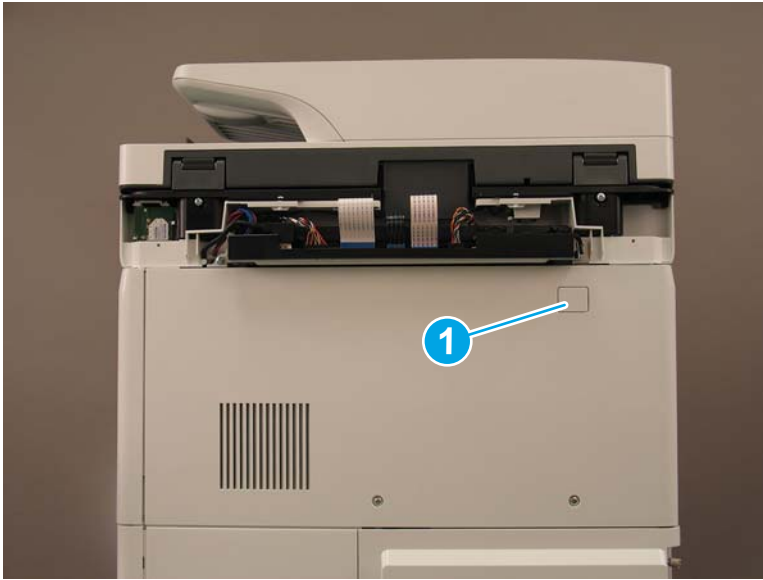

3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


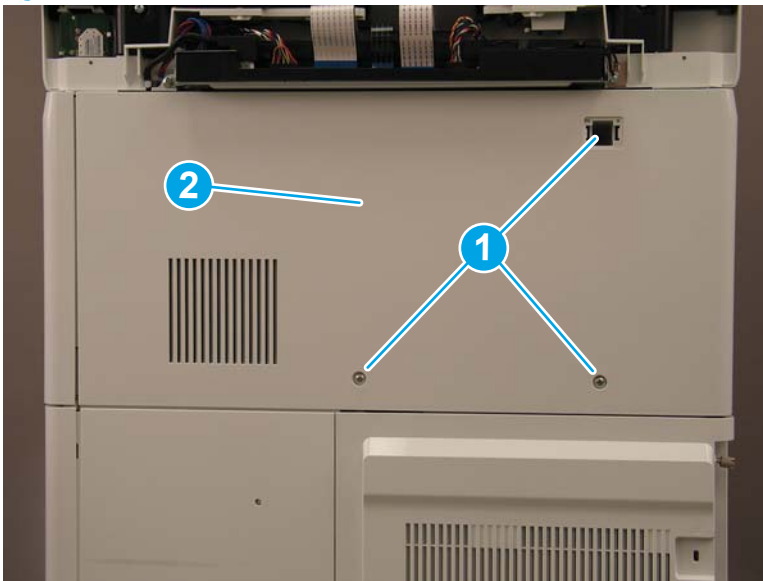
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-825 Remove three screws and the rear cover



#### Step 4: Remove the jogger (3-bin stapler/stacker)

1. At the rear of the 3-bin stapler/stacker, disconnect one connector (callout 1), and then release the cable (callout 2) from the retainer (callout 3).

Figure 1-826 Disconnect one connector

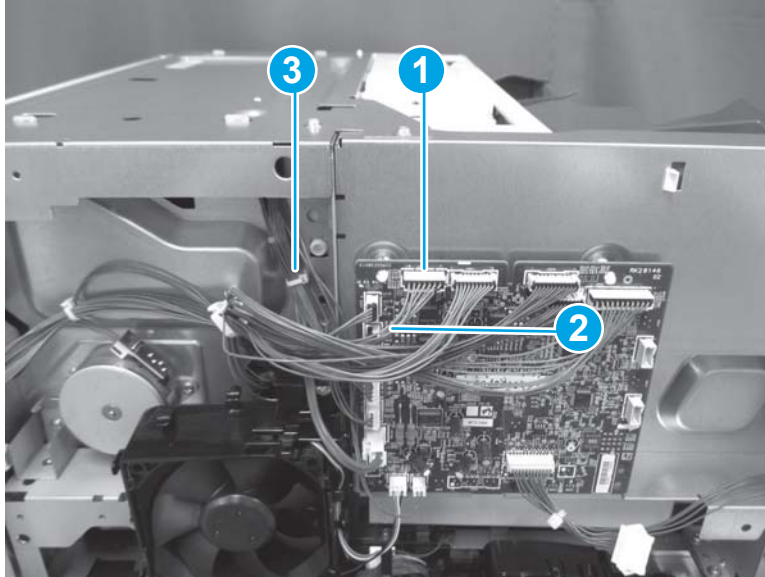

2. At the front of the 3-bin stapler/stacker, remove one screw (callout 1), and then slide the jogger (callout 2) away from the stapler/stacker to remove it.


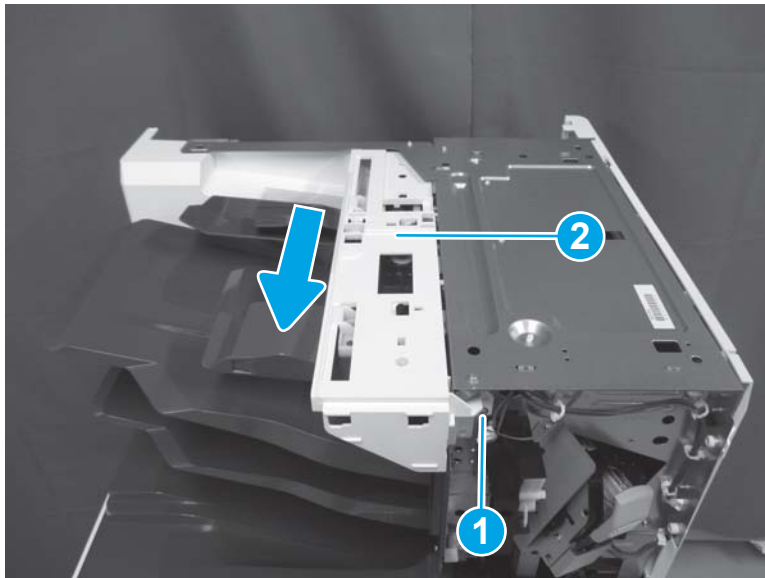
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-827 Remove one screw and the jogger



#### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Stacking wall cover (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray assembly \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the jogger cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the rear inner cover \(3-bin stapler/stacker\)](#)
- [Step 6: Remove the stacking wall cover \(3-bin stapler/stacker\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the stacking wall cover on the 3-bin stapler/stacker.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Stacking wall cover (3-bin stapler/stacker) part number	
RM2-1057-000CN	Stacking wall assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray assembly (3-bin stapler/stacker)


1. Release one boss (callout 1), rotate the front locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-828 Remove the front locking pin

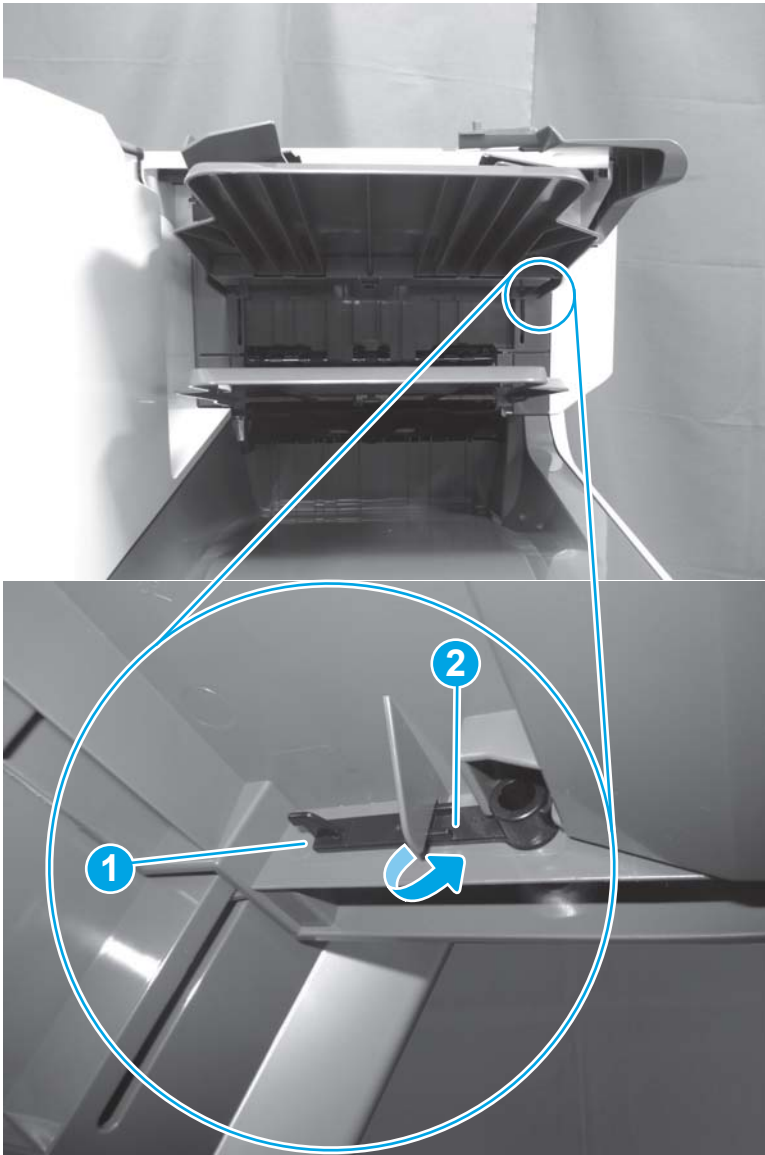


2. Release one boss (callout 1), rotate the rear locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-829 Remove the rear locking pin

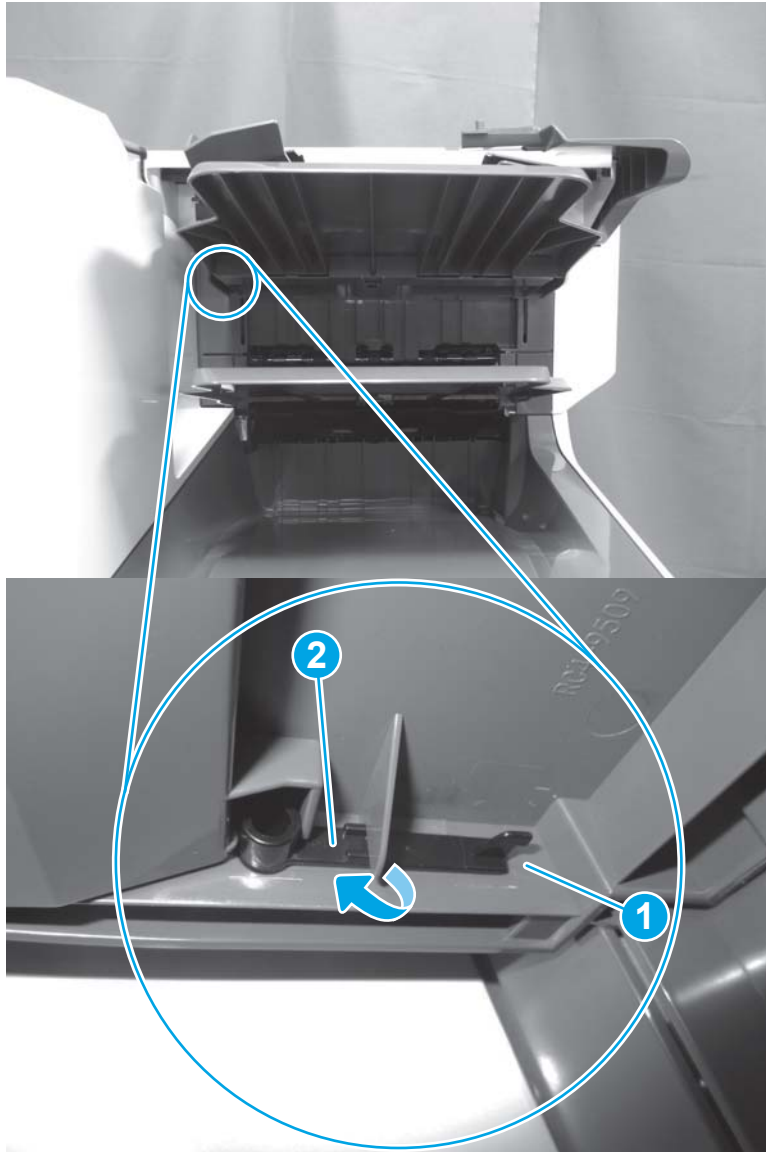


3. Lift the tray assembly (callout 1) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-830** Remove the tray assembly

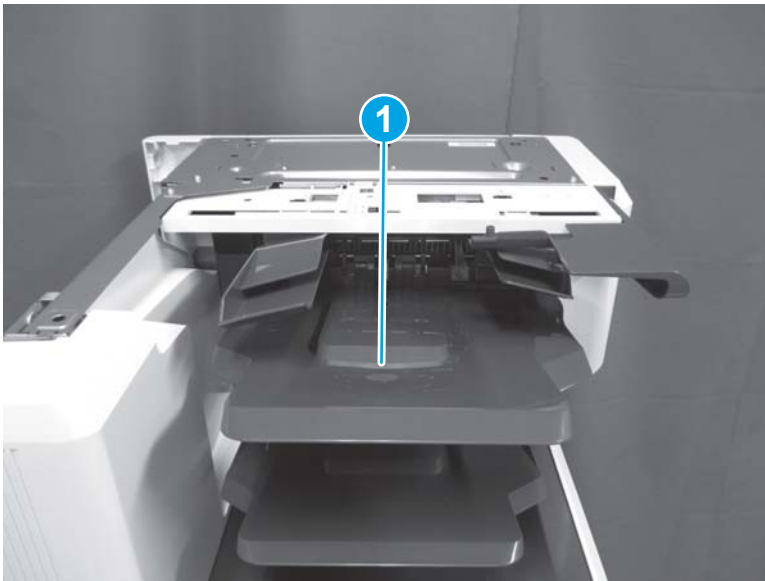

#### Step 2: Remove the staple cover (3-bin stapler/stacker)

1. Open the front door.


**Figure 1-831** Open the front door






2. Open the stapler door.

Figure 1-832 Open the stapler door

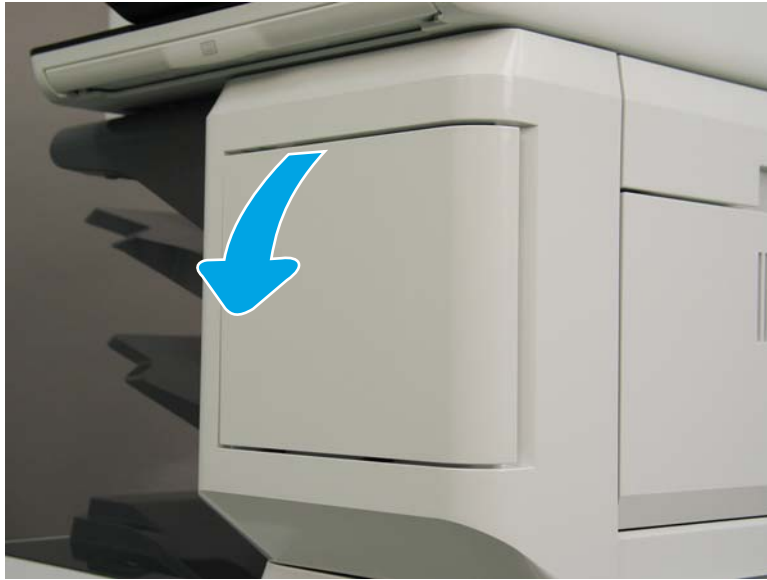


3. Remove one screw (callout 1).

Figure 1-833 Remove one screw

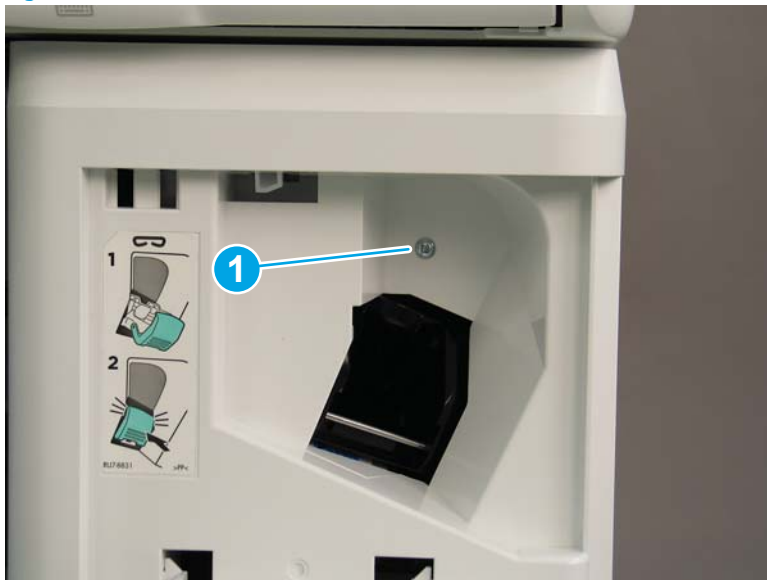

4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-834 Remove the stapler cover.

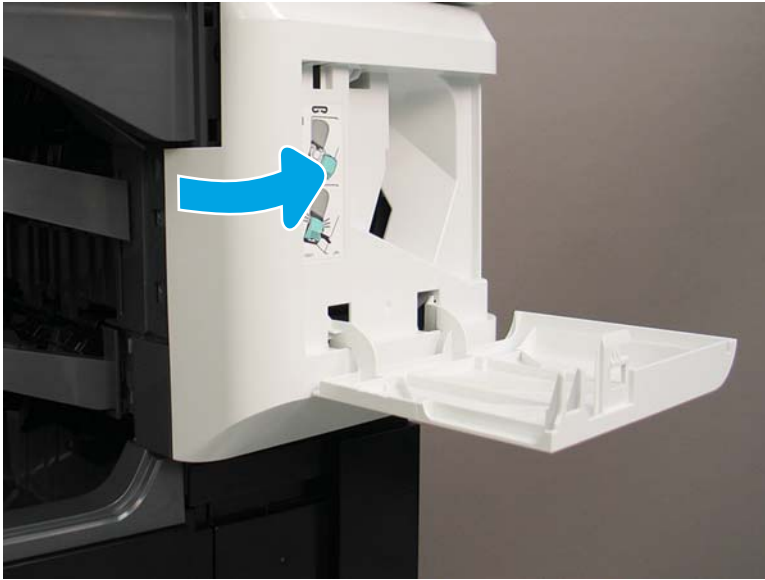

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-835 Position the tab

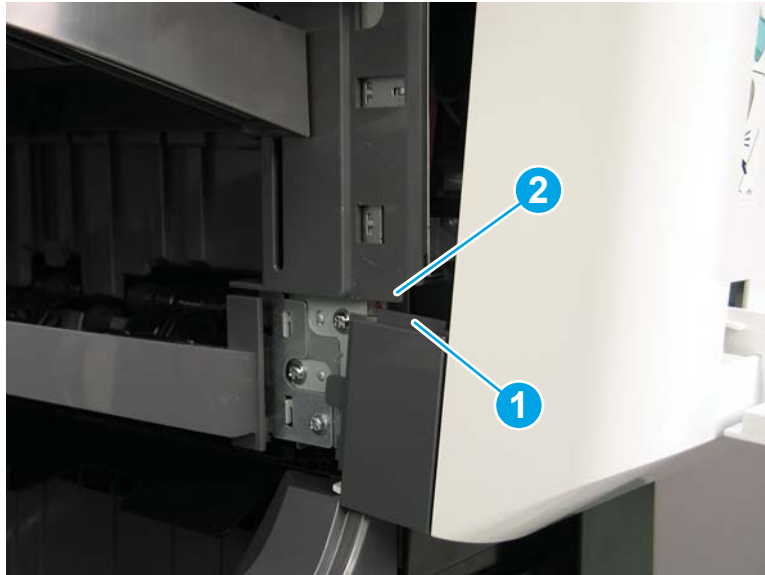

#### Step 3: Remove the jogger cover (3-bin stapler/stacker)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-836 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-837 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-838 Remove the cover




4. Use a thin-shaft, magnetized screwdriver to remove one screw (callout 1).

---

 **TIP:** If necessary, remove the control panel to gain better access to this screw.


---

Figure 1-839 Remove one screw

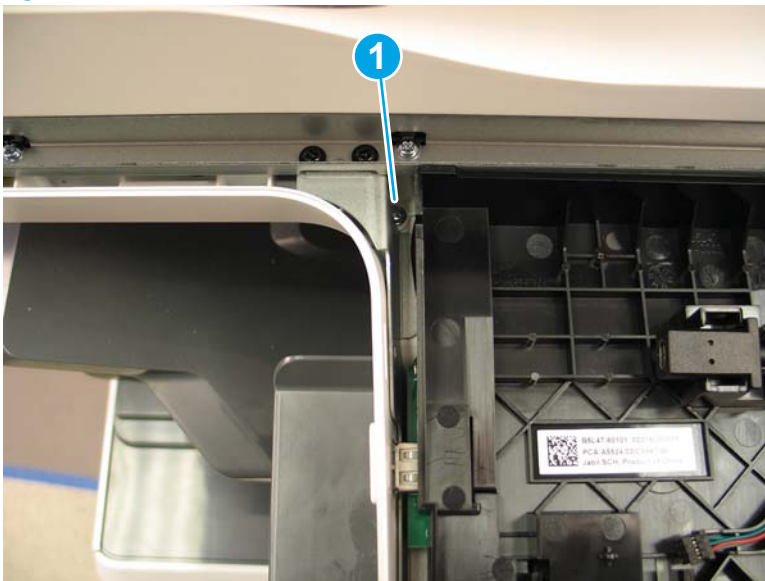

5. Release one tab (callout 1).

Figure 1-840 Release one tab

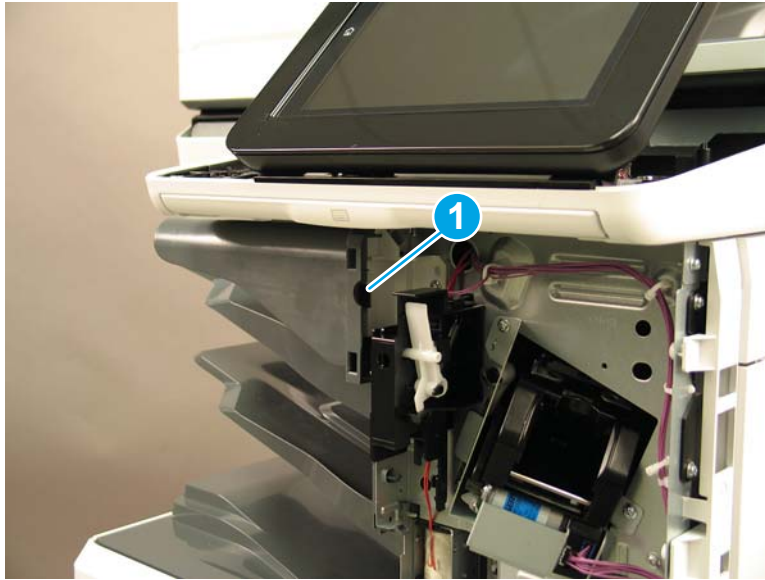

6. Slide the jogger cover to the left to remove it.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-841 Remove the jogger cover



#### Step 4: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-842 Remove two screws

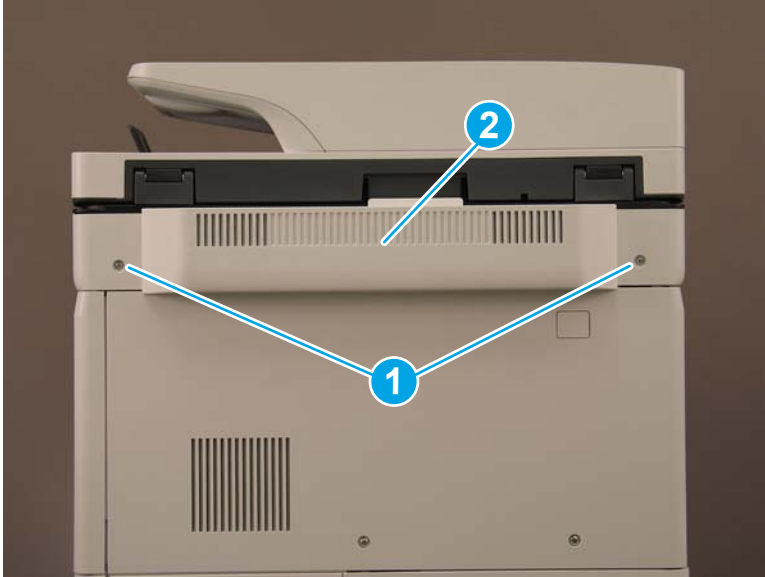


2. Remove one screw cover (callout 1).


Figure 1-843 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-844** Remove three screws and the rear cover

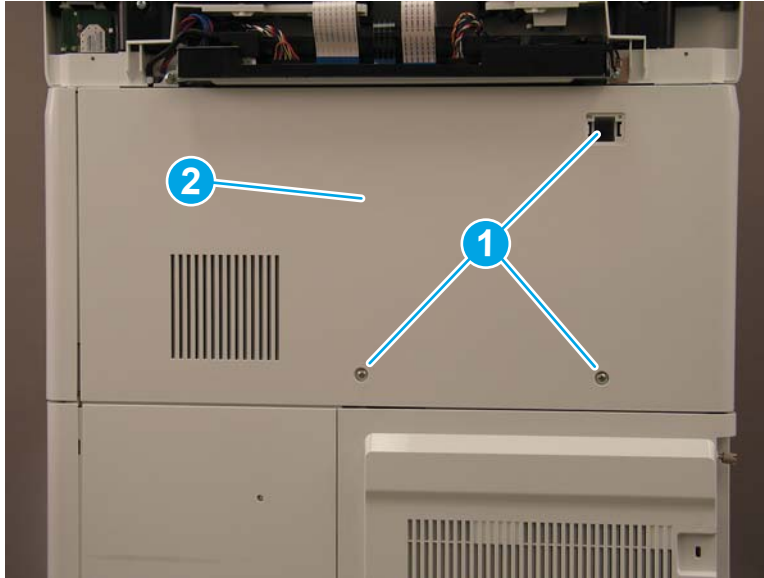


#### Step 5: Remove the rear inner cover (3-bin stapler/stacker)

- ▲ Remove one screw (callout 1), release three tabs (callout 2), and then remove the rear inner cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-845** Remove the rear inner cover

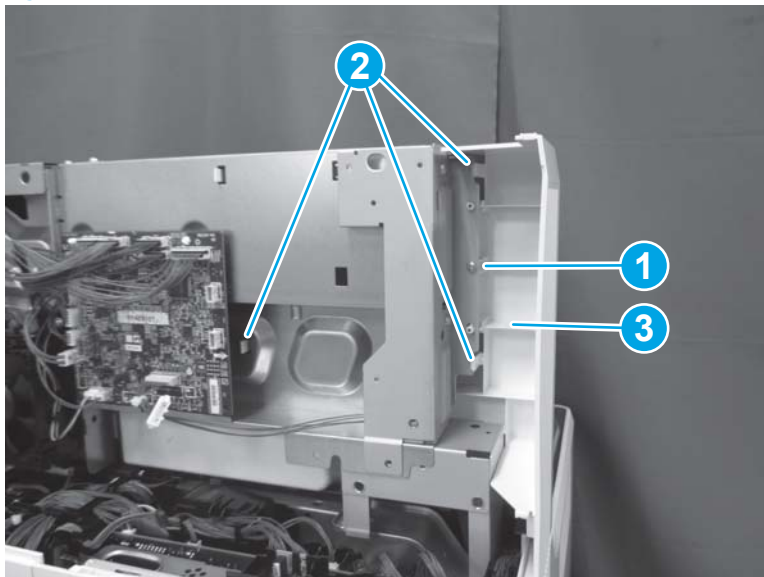


#### Step 6: Remove the stacking wall cover (3-bin stapler/stacker)

1. Before removing the stacking wall cover, note the location of the two tabs (callout 1) on the back of the cover.




Figure 1-846 Tab locations

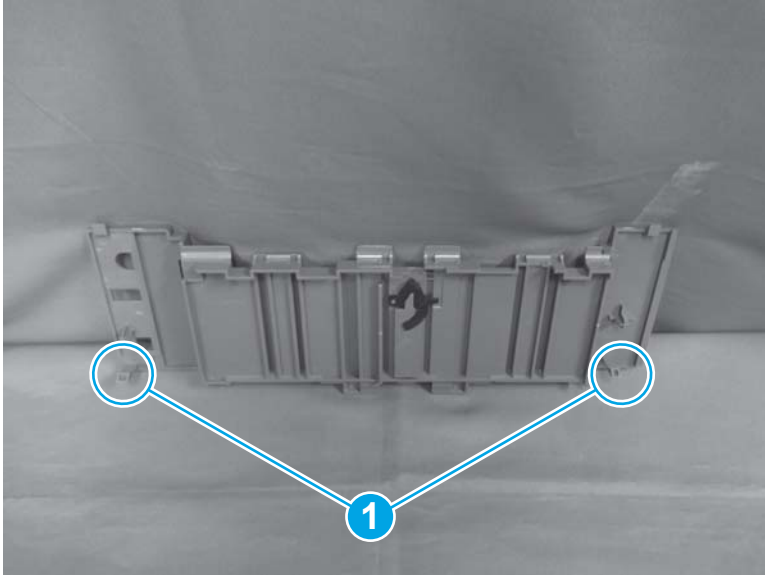

2. Release two tabs (callout 1), and then remove the stacking wall cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-847 Remove the stacking wall cover

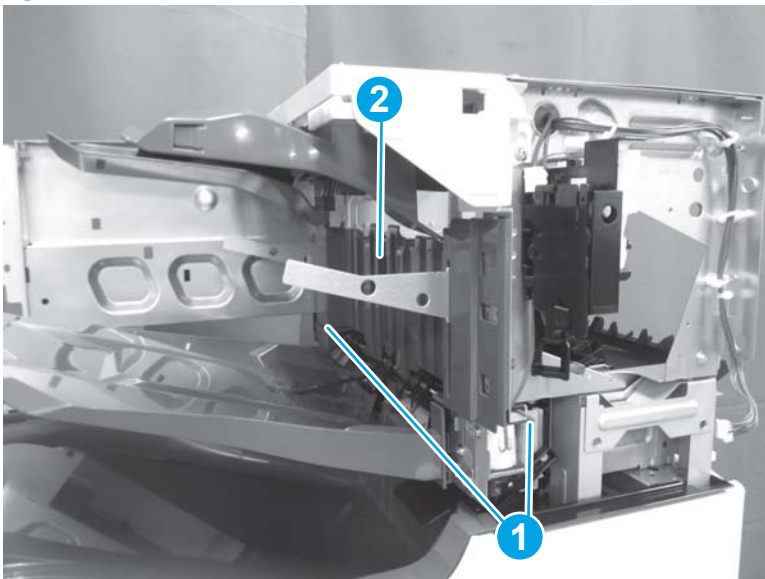


### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Upper feed assembly (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the right door \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the stapler \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 6: Remove the right corner cover \(3-bin stapler/stacker\)](#)
- [Step 7: Remove the staple rear cover \(3-bin stapler/stacker\)](#)
- [Step 8: Remove the upper feed assembly \(3-bin stapler/stacker\)](#)
- [Step 9: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the upper feed assembly on the 3-bin stapler/stacker.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Upper feed assembly (3-bin stapler/stacker) part number

---

RM2-6810-000CN

Upper paper feed assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door (3-bin stapler/stacker)


1. Open the right door.
2. Release two shafts (callout 1), and then raise the feed guide (callout 2).

Figure 1-848 Raise the feed guide

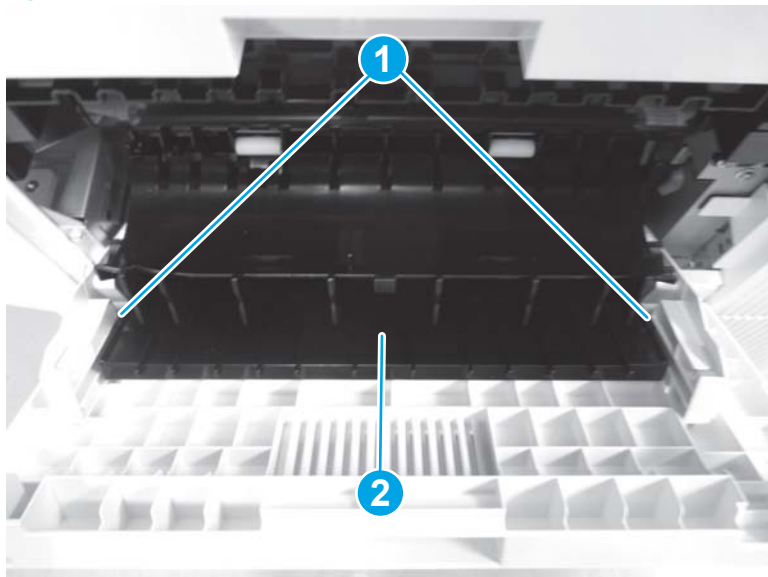


3. On the left side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the right to remove it.

Figure 1-849 Remove the left bracket

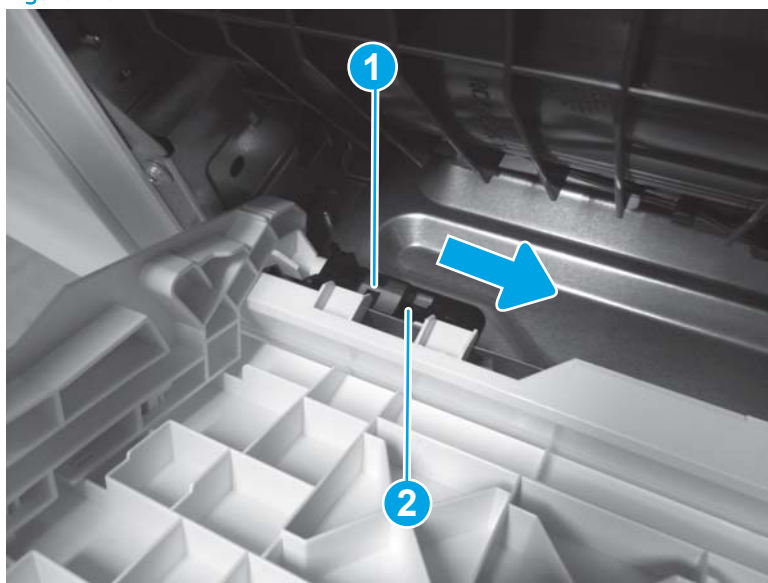

4. On the right side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the left to remove it.

**Figure 1-850** Remove the right bracket

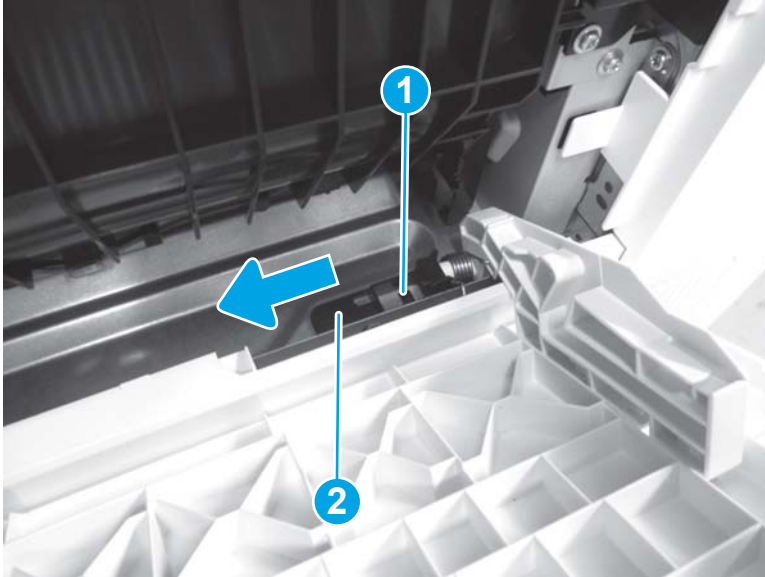


5. Release the left hinge pin (callout 1), and then slide the door to the left to release the right hinge pin (callout 2).

 **NOTE:** The spring on the right hinge pin (callout 2) is not captive. Do not lose the spring.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-851** Remove the right door

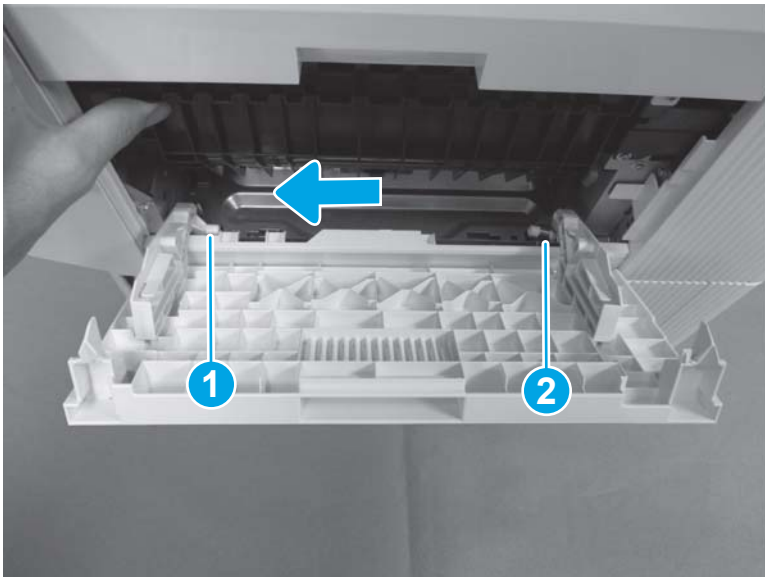

### Step 2: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

Figure 1-852 Open the front door



2. Open the stapler door.

Figure 1-853 Open the stapler door

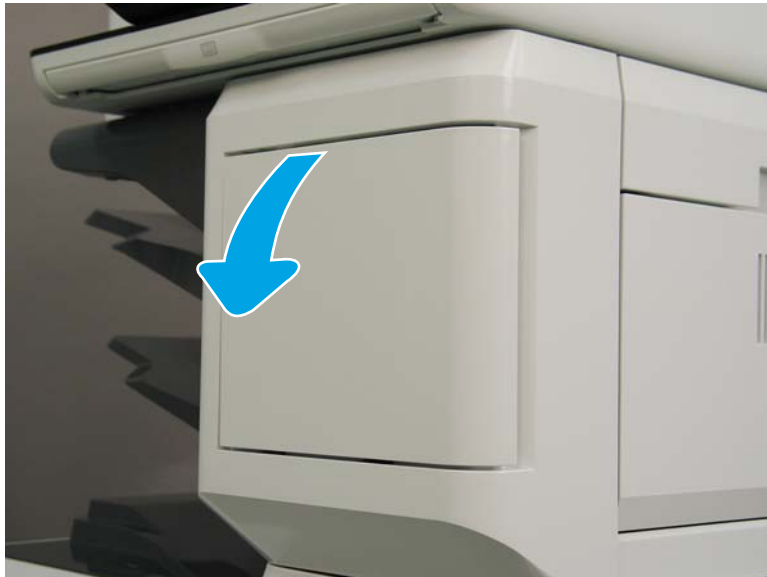

3. Remove one screw (callout 1).

Figure 1-854 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-855 Remove the stapler cover.



5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

Figure 1-856 Position the tab

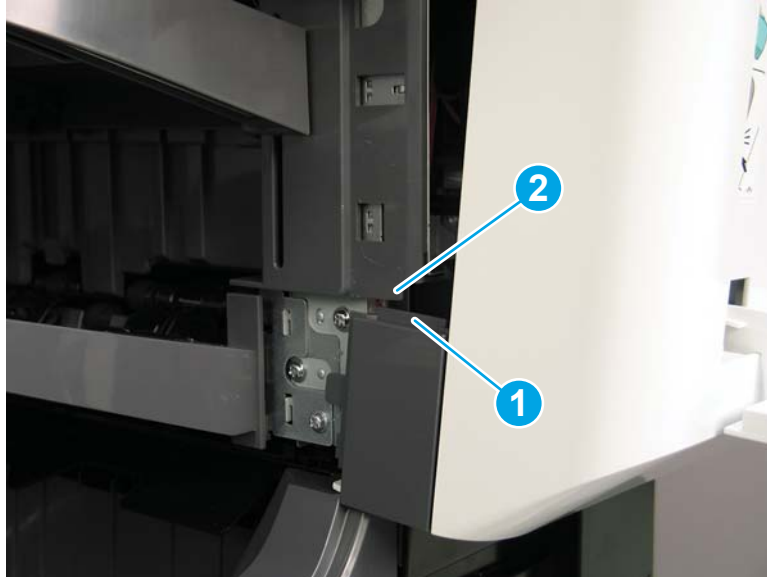

### Step 3: Remove the stapler (3-bin stapler/stacker)

- ▲ Disconnect two connectors (callout 1), remove three screws (callout 2), and then lift the stapler away from the printer to remove it.


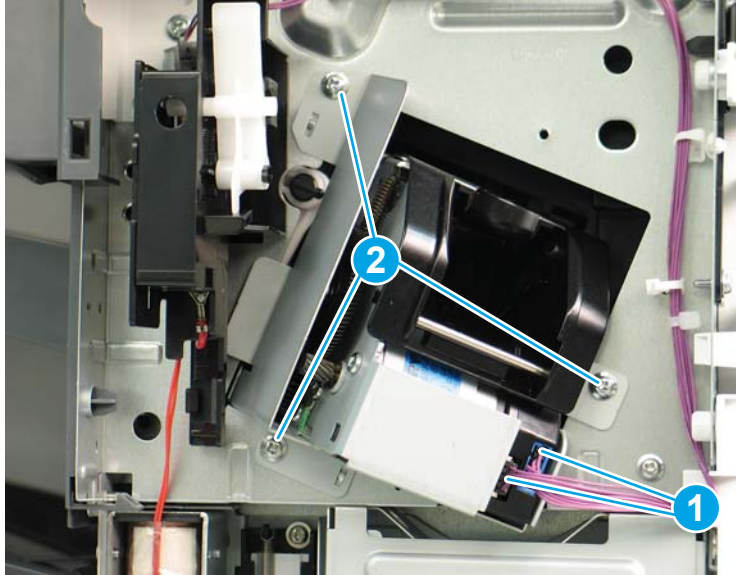
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-857 Remove the stapler



### Step 4: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-858 Remove two screws

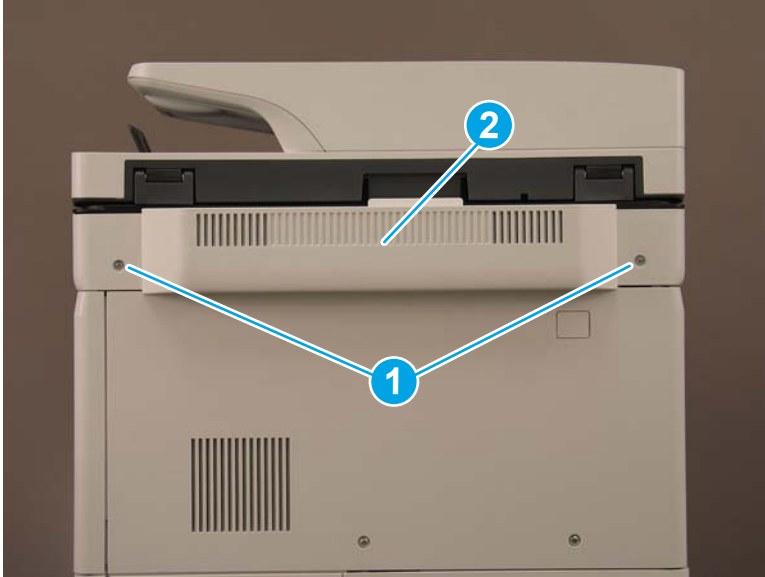

2. Remove one screw cover (callout 1).

Figure 1-859 Remove one screw cover






3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-860** Remove three screws and the rear cover

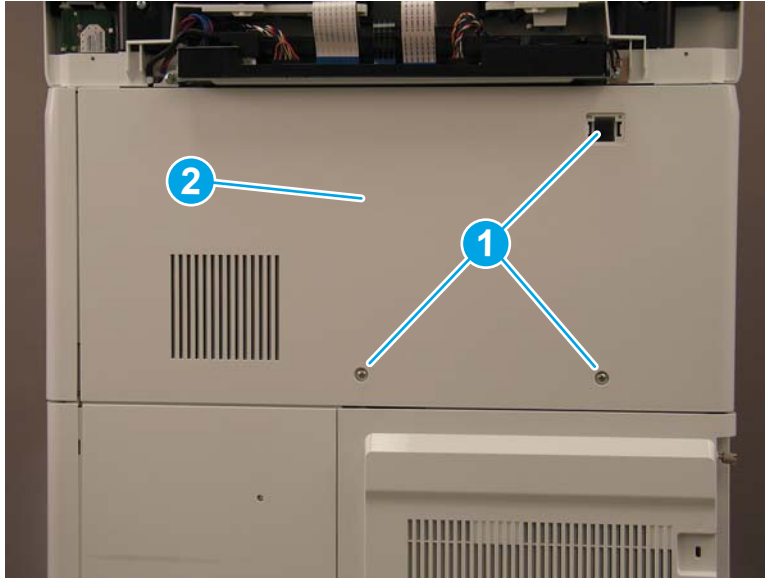


#### Step 5: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.
2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-861** Remove the right upper cover

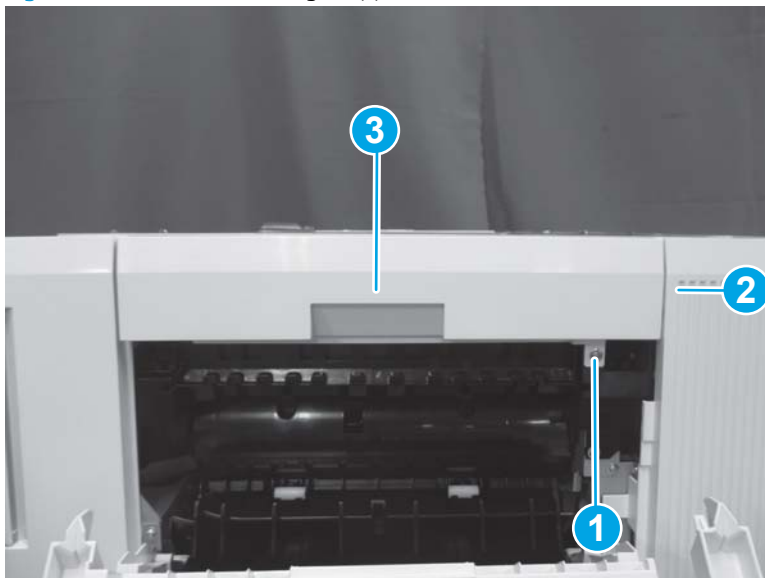


### Step 6: Remove the right corner cover (3-bin stapler/stacker)

- ▲ Release two tabs (callout 1), and then remove the right corner cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-862 Remove the right corner cover

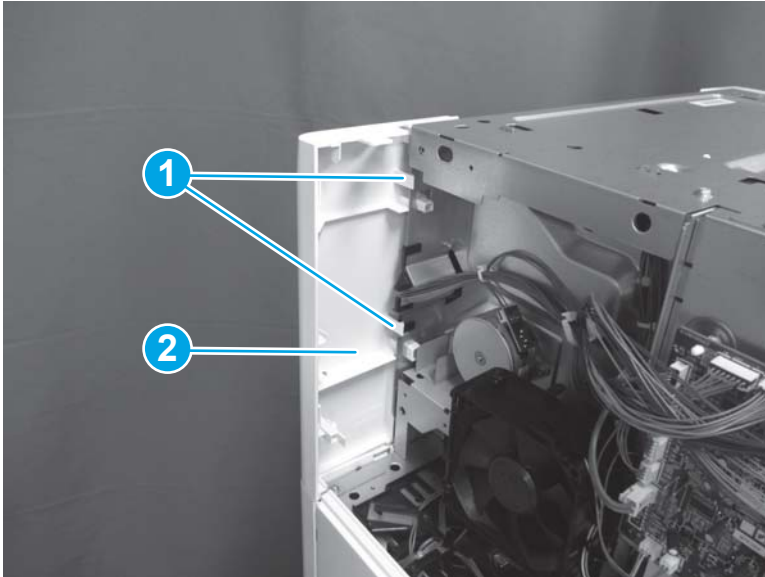


### Step 7: Remove the staple rear cover (3-bin stapler/stacker)

- ▲ Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-863 Remove the staple rear cover

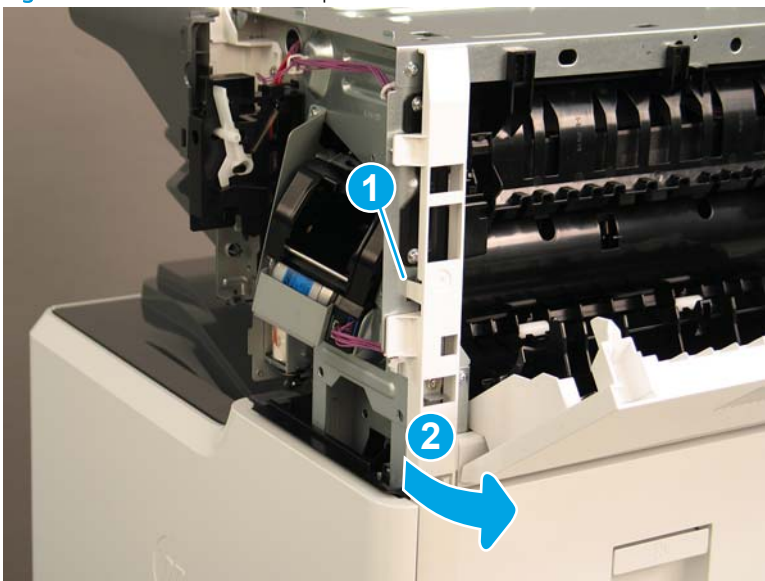

## Step 8: Remove the upper feed assembly (3-bin stapler/stacker)


1. At the rear of the 3-bin stapler/stacker, disconnect three connectors (callout 1), and then release the cables (callout 2) from the retainers (callout 3).

Figure 1-864 Disconnect three connectors

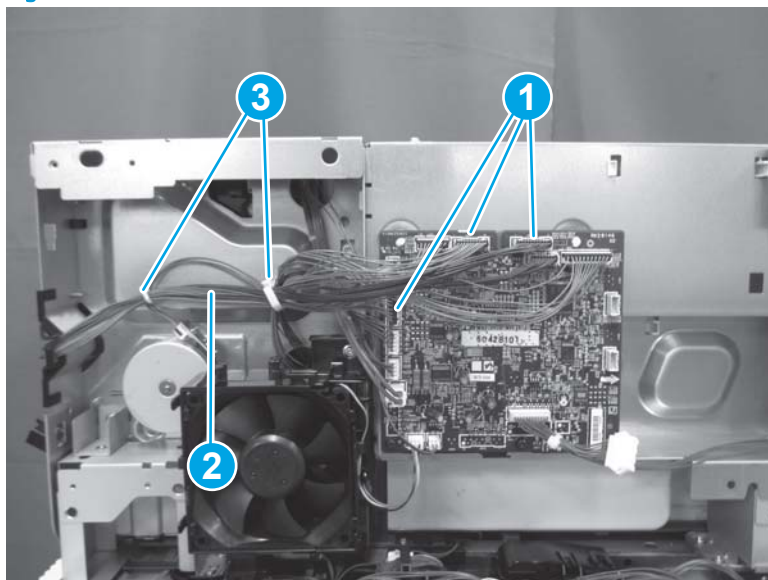


2. Release one tab (callout 1), and then remove the guide (callout 2).


Figure 1-865 Remove the guide

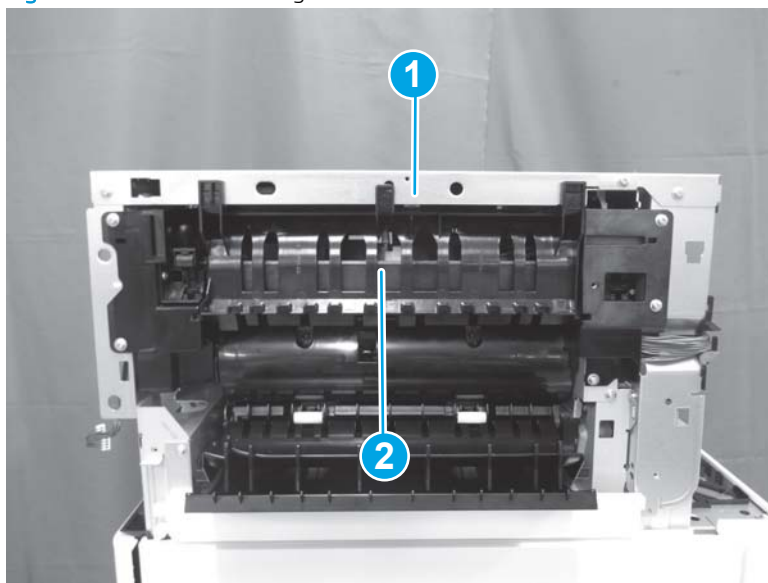

3. Remove six screws (callout 1), and then remove the upper feed assembly (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-866** Remove the upper feed assembly

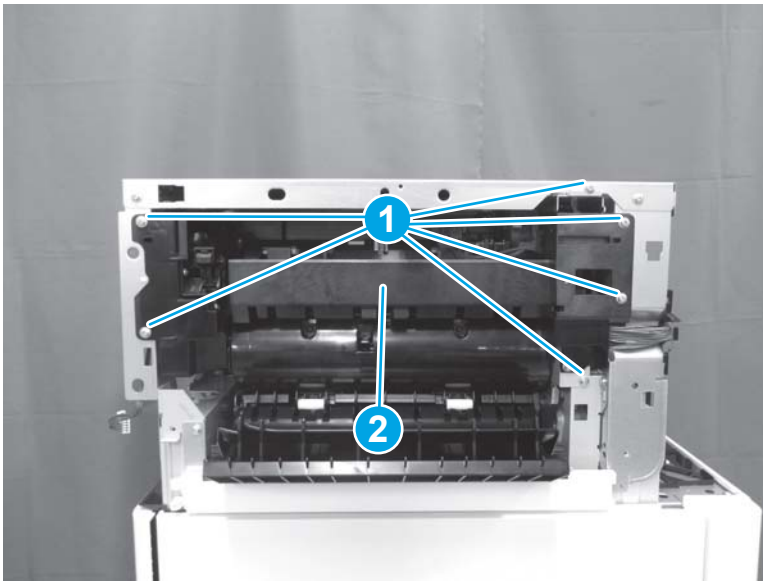



### Step 9: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Fan (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the fan \(3-bin stapler/stacker\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the fan on the 3-bin stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Fan (3-bin stapler/stacker) part number	
RK2-8153-000CN	Fan

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-867 Remove two screws

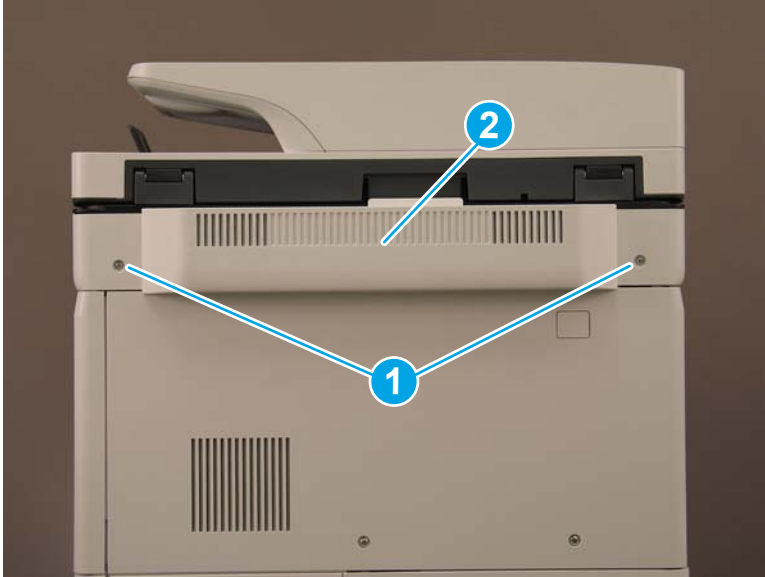


2. Remove one screw cover (callout 1).


Figure 1-868 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-869** Remove three screws and the rear cover

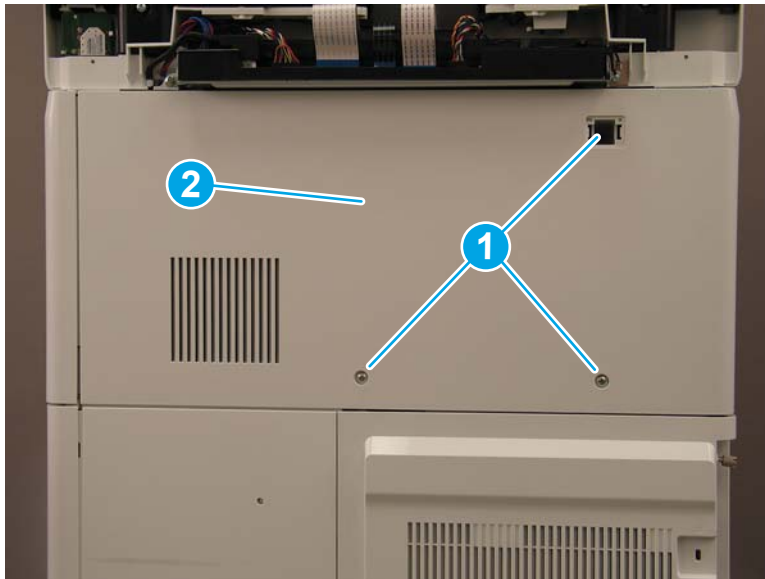


#### Step 2: Remove the fan (3-bin stapler/stacker)

1. Disconnect one connector (callout 1), remove one screw (callout 2), and then remove the fan (callout 3) together with the fan holder (callout 4).


**Figure 1-870** Remove the fan holder and fan

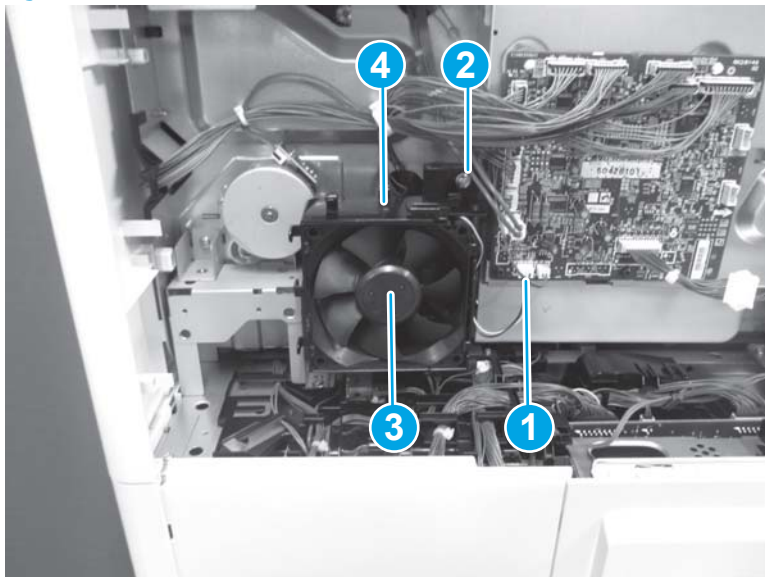

2. Release two tabs (callout 1), and then remove the fan (callout 2) from the holder (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-871** Remove the fan

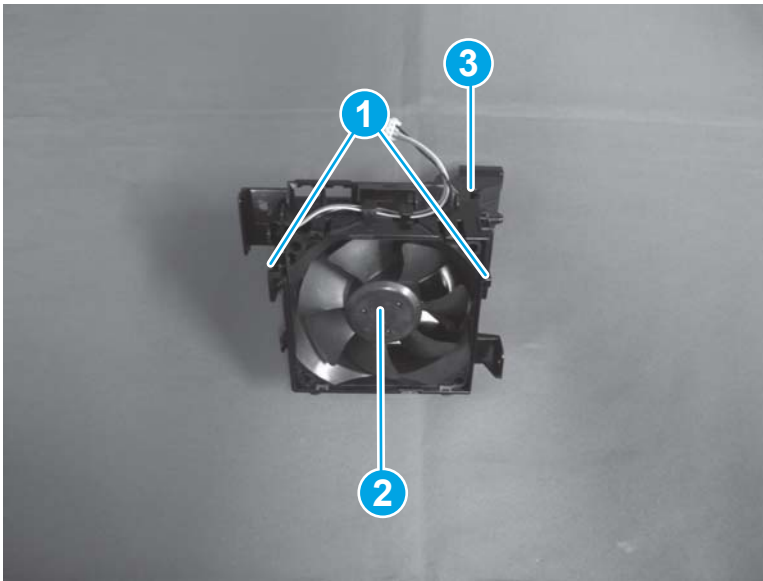



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.



## Removal and replacement: Lower feed assembly (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray assembly \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the right door \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the stapler \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 6: Remove the rear inner cover \(3-bin stapler/stacker\)](#)
- [Step 7: Remove the stacking wall cover \(3-bin stapler/stacker\)](#)
- [Step 8: Remove the fan \(3-bin stapler/stacker\)](#)
- [Step 9: Remove the right upper cover \(3-bin stapler/stacker\)](#)
- [Step 10: Remove the right corner cover \(3-bin stapler/stacker\)](#)
- [Step 11: Remove the staple rear cover \(3-bin stapler/stacker\)](#)
- [Step 12: Remove the upper feed assembly \(3-bin stapler/stacker\)](#)
- [Step 13: Remove the lower feed assembly \(3-bin stapler/stacker\)](#)
- [Step 14: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lower feed assembly on the 3-bin stapler/stacker.



---

**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray assembly (3-bin stapler/stacker)


1. Release one boss (callout 1), rotate the front locking pin (callout 2) down to release it, and then remove the locking pin.

**Figure 1-872** Remove the front locking pin

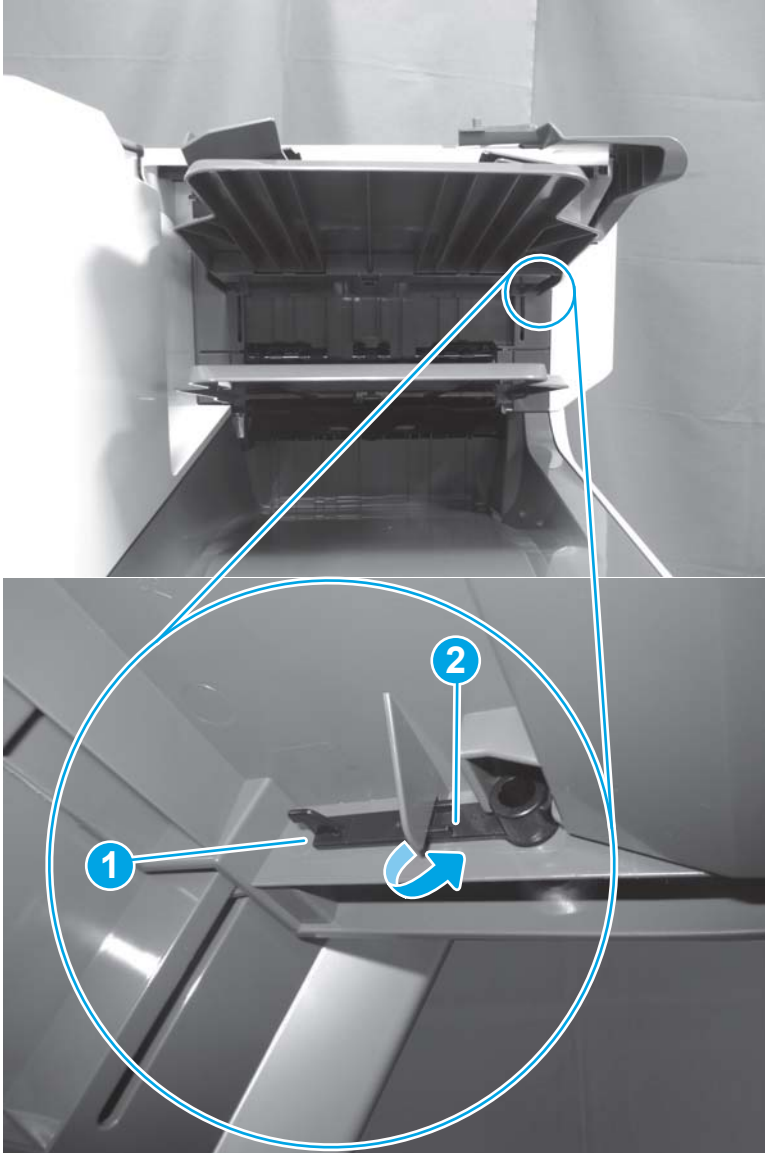


2. Release one boss (callout 1), rotate the rear locking pin (callout 2) down to release it, and then remove the locking pin.


Figure 1-873 Remove the rear locking pin

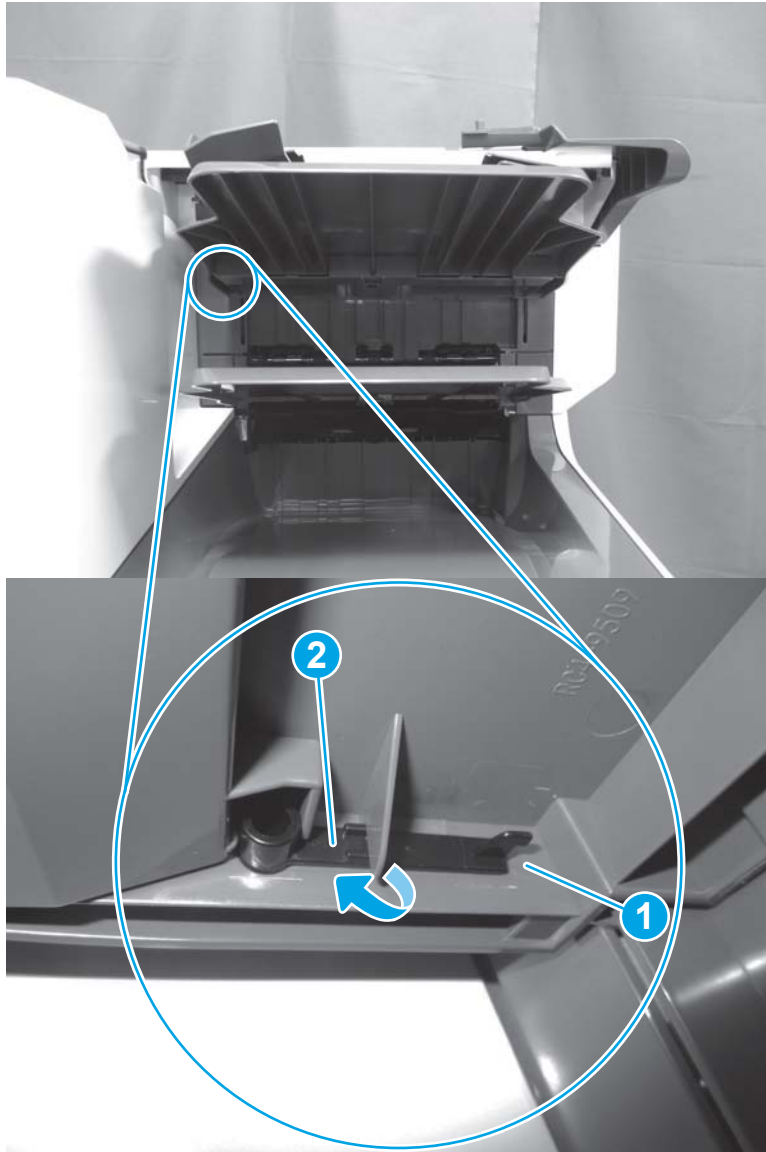

3. Lift the tray assembly (callout 1) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-874** Remove the tray assembly

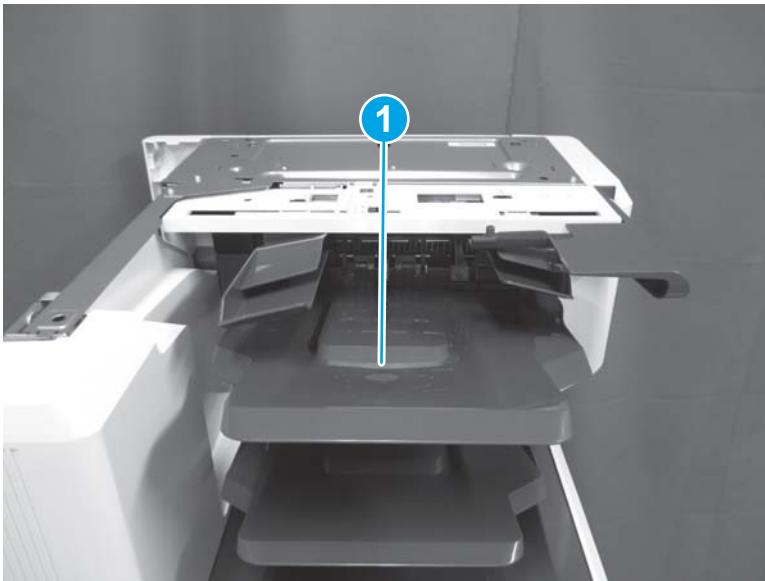

#### Step 2: Remove the right door (3-bin stapler/stacker)


1. Open the right door.
2. Release two shafts (callout 1), and then raise the feed guide (callout 2).

**Figure 1-875** Raise the feed guide

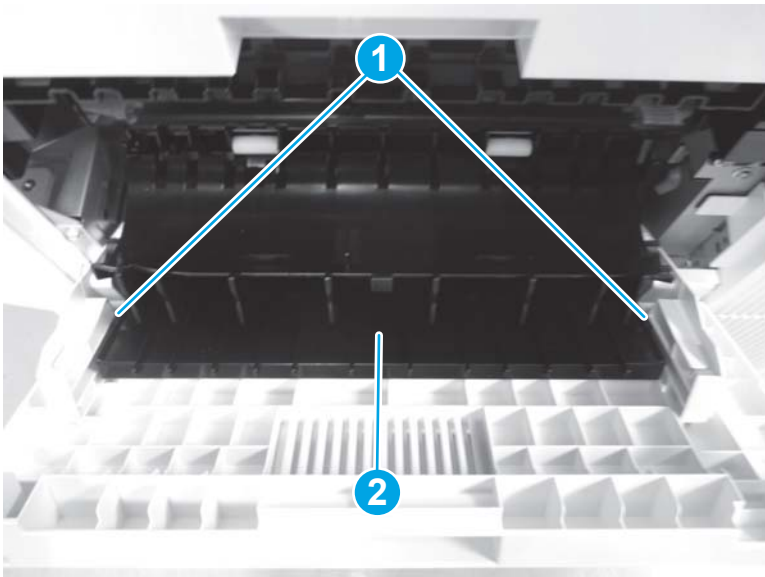


3. On the left side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the right to remove it.

Figure 1-876 Remove the left bracket

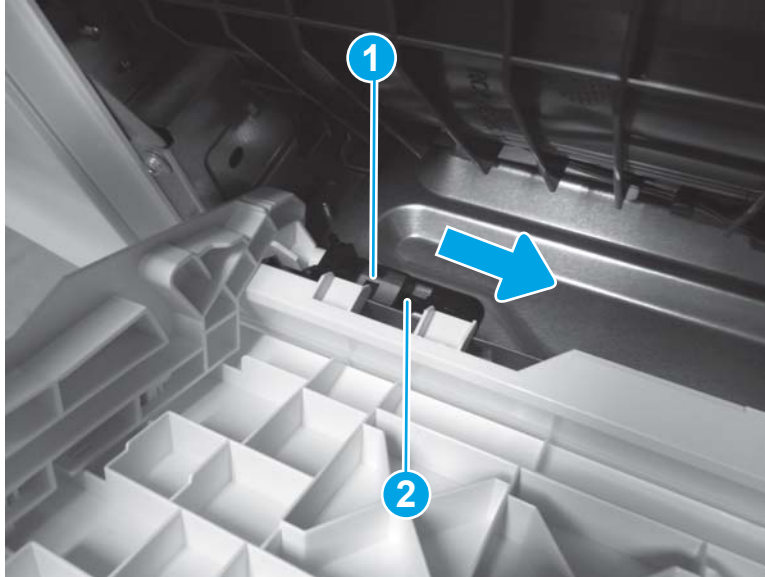



4. On the right side of the door, release one tab (callout 1), and then slide the bracket (callout 2) to the left to remove it.

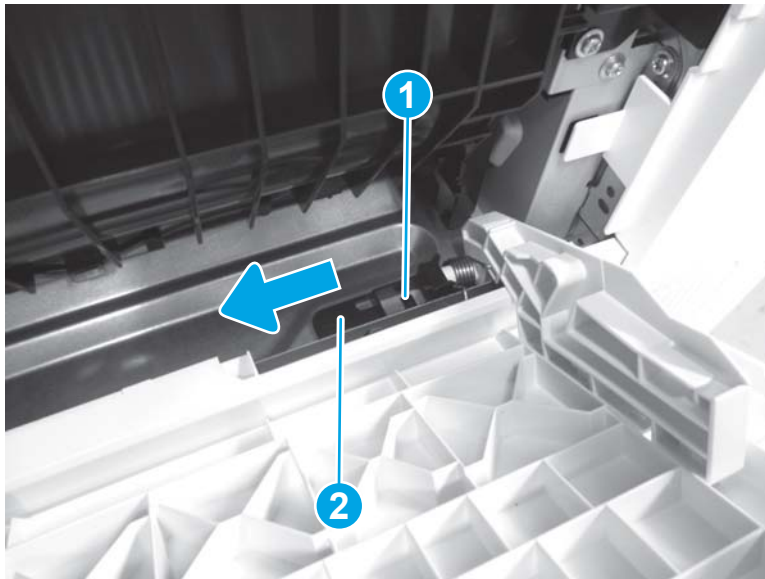Figure 1-877 Remove the right bracket




5. Release the left hinge pin (callout 1), and then slide the door to the left to release the right hinge pin (callout 2).

 **NOTE:** The spring on the right hinge pin (callout 2) is not captive. Do not lose the spring.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-878** Remove the right door

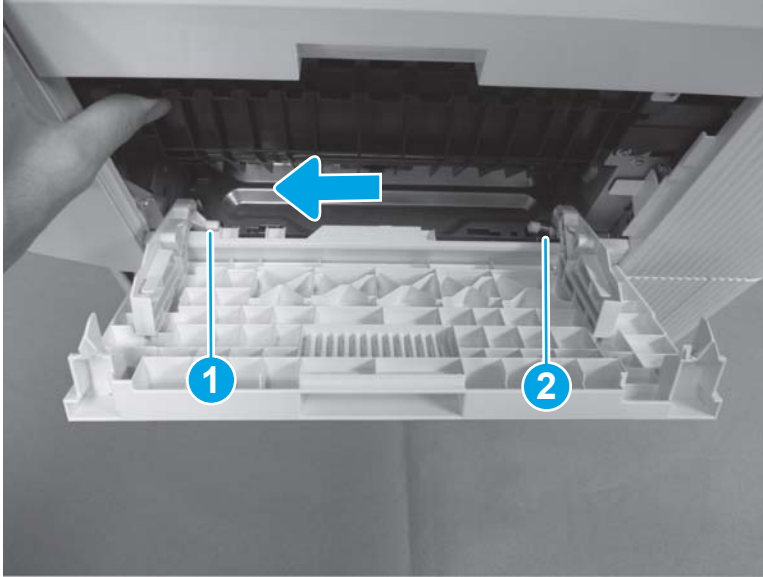

### Step 3: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

**Figure 1-879** Open the front door



2. Open the stapler door.

Figure 1-880 Open the stapler door

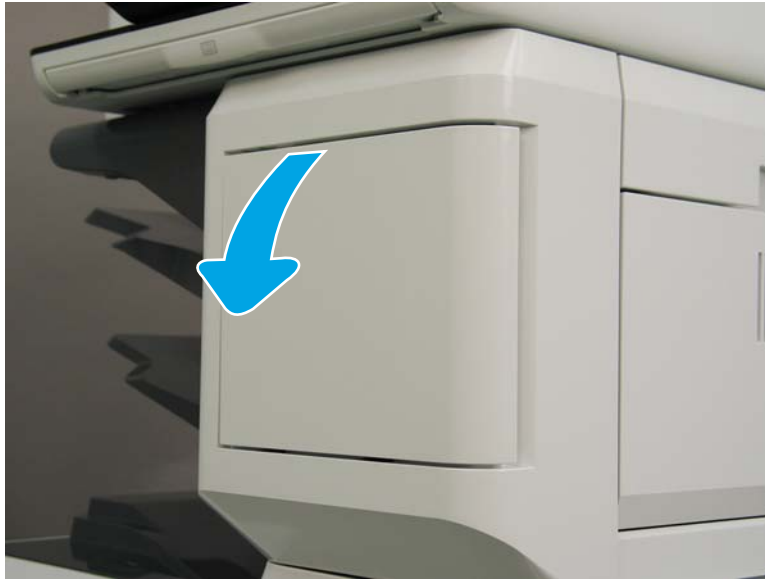


3. Remove one screw (callout 1).

Figure 1-881 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

Figure 1-882 Remove the stapler cover.

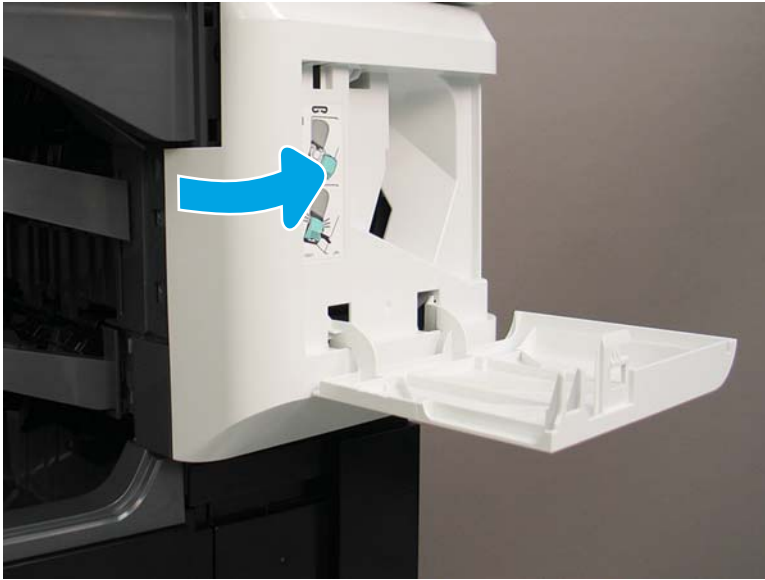

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.


Figure 1-883 Position the tab

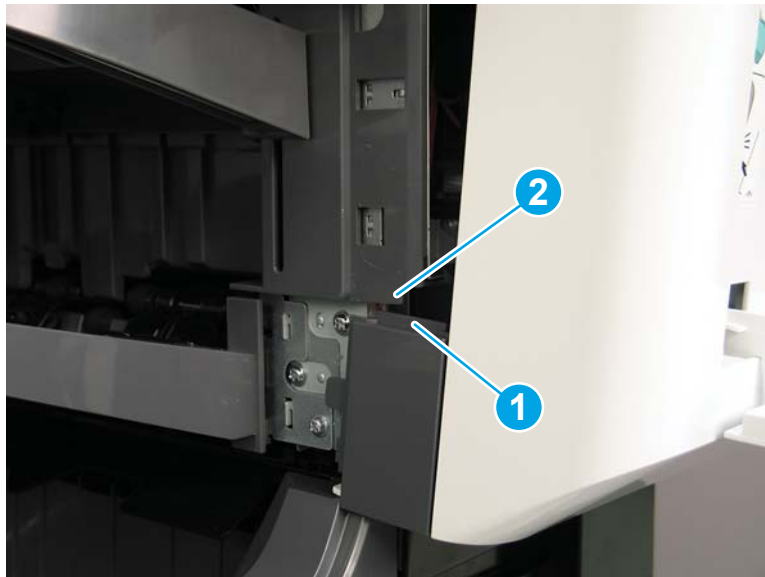


#### Step 4: Remove the stapler (3-bin stapler/stacker)

- ▲ Disconnect two connectors (callout 1), remove three screws (callout 2), and then lift the stapler away from the printer to remove it.



 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-884** Remove the stapler

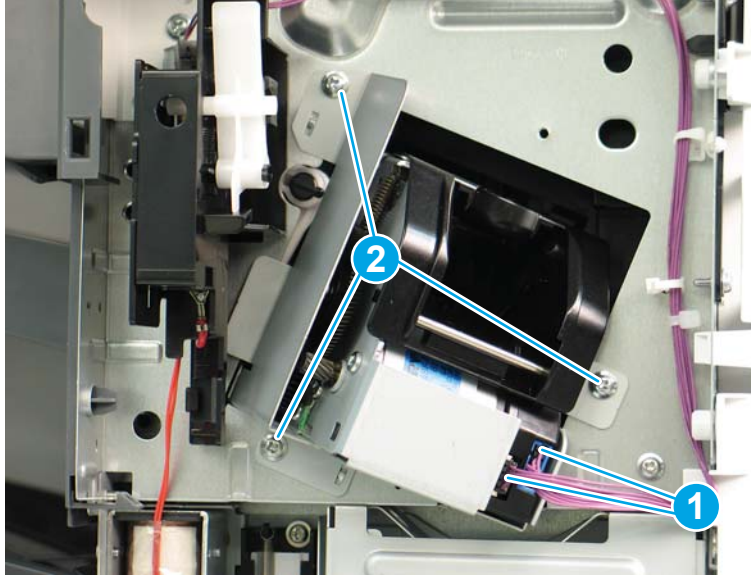

**Step 5: Remove the rear cover (3-bin stapler/stacker)**


1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

**Figure 1-885** Remove two screws

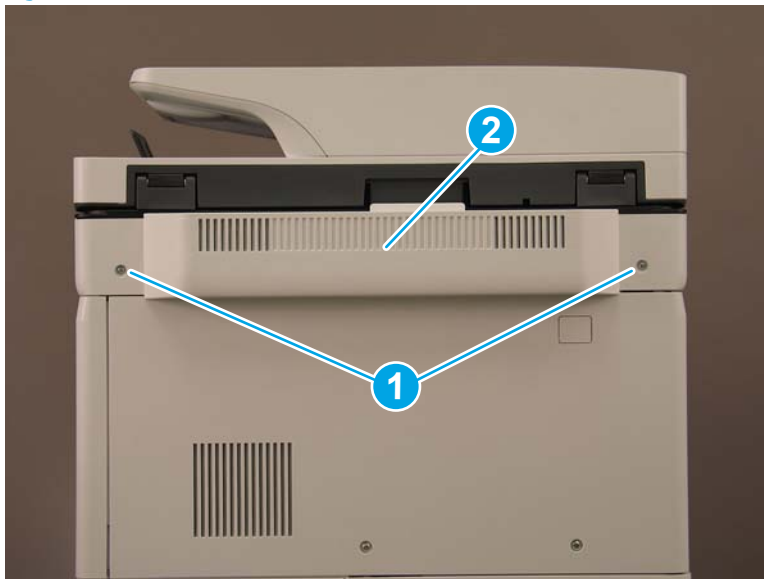

2. Remove one screw cover (callout 1).

Figure 1-886 Remove one screw cover

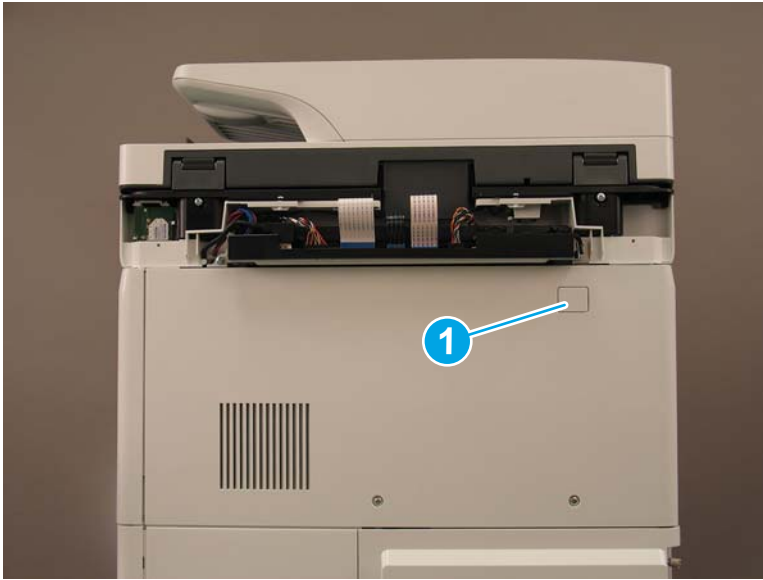

3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


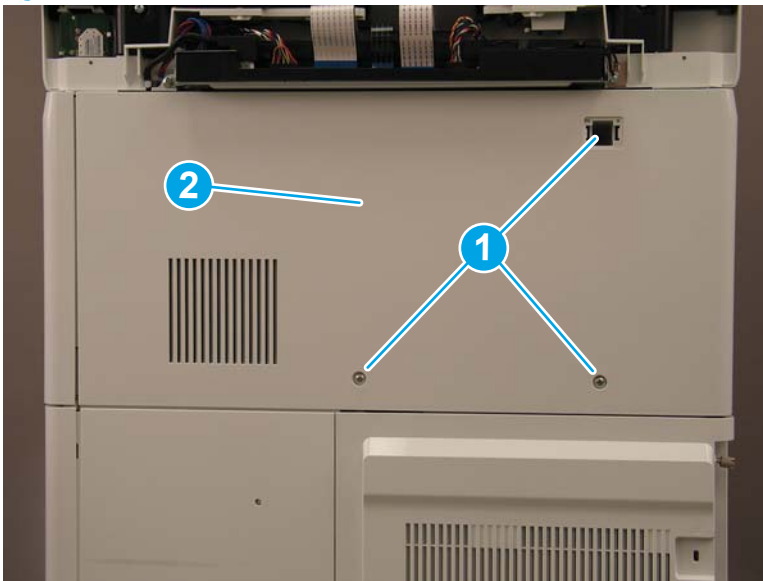
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-887 Remove three screws and the rear cover




#### Step 6: Remove the rear inner cover (3-bin stapler/stacker)

- ▲ Remove one screw (callout 1), release three tabs (callout 2), and then remove the rear inner cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-888 Remove the rear inner cover

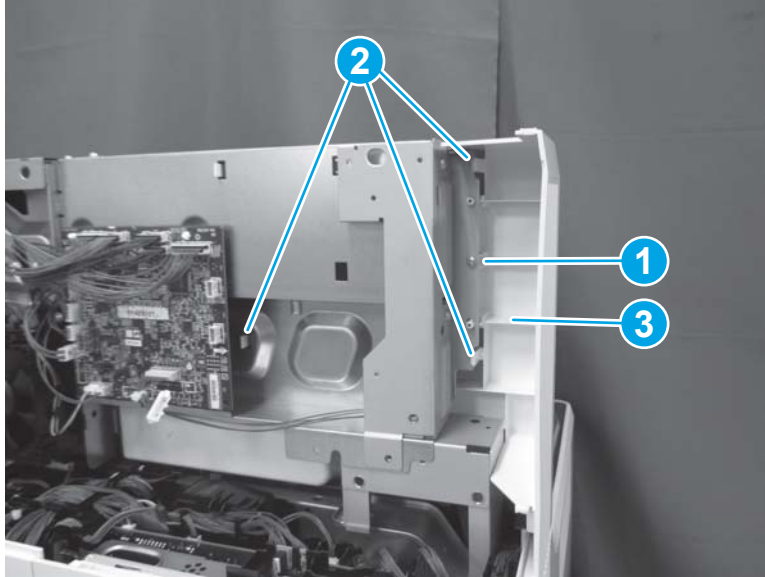


Step 7: Remove the stacking wall cover (3-bin stapler/stacker)

1. Before removing the stacking wall cover, note the location of the two tabs (callout 1) on the back of the cover.


Figure 1-889 Tab locations

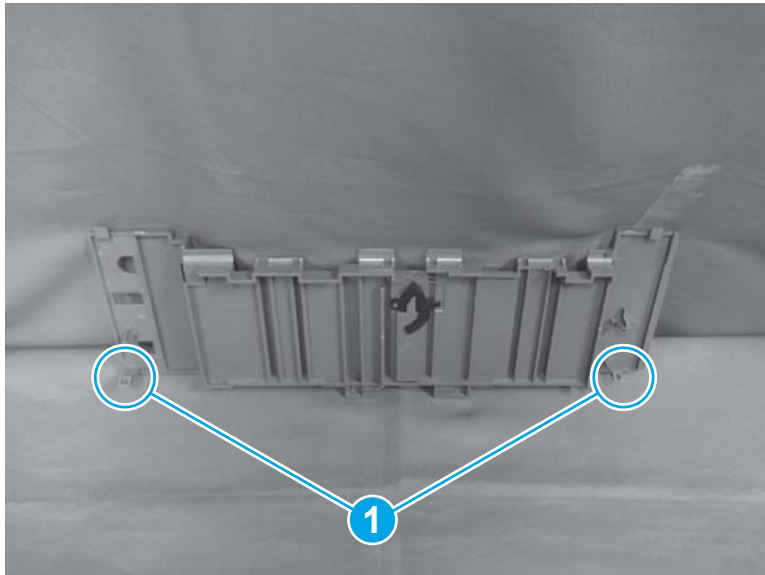

2. Release two tabs (callout 1), and then remove the stacking wall cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-890** Remove the stacking wall cover

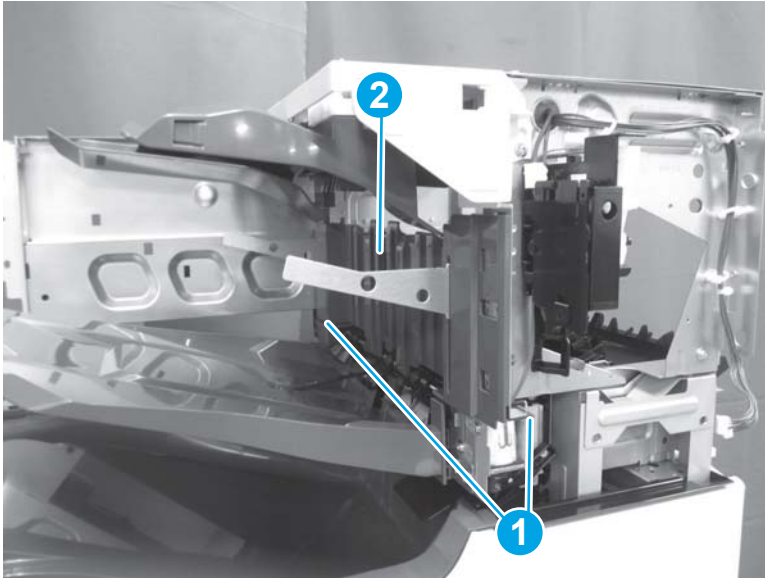


#### Step 8: Remove the fan (3-bin stapler/stacker)

1. Disconnect one connector (callout 1), remove one screw (callout 2), and then remove the fan (callout 3) together with the fan holder (callout 4).


**Figure 1-891** Remove the fan holder and fan

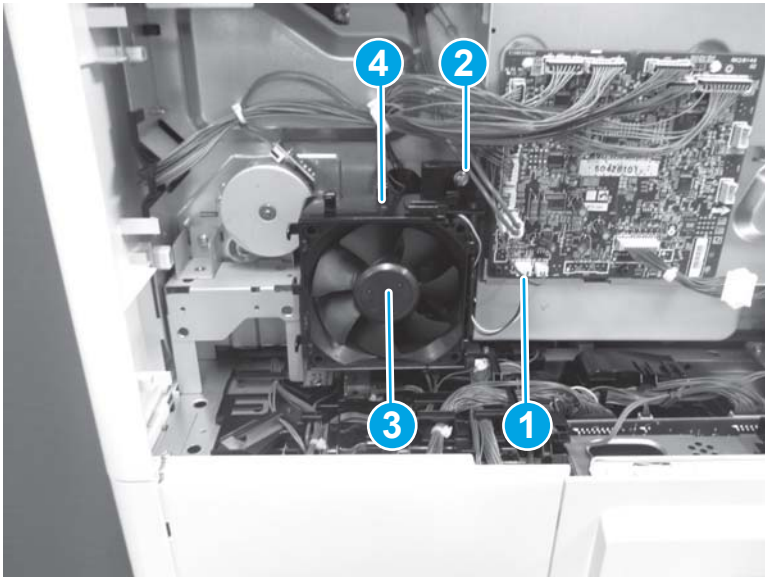

2. Release two tabs (callout 1), and then remove the fan (callout 2) from the holder (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-892** Remove the fan

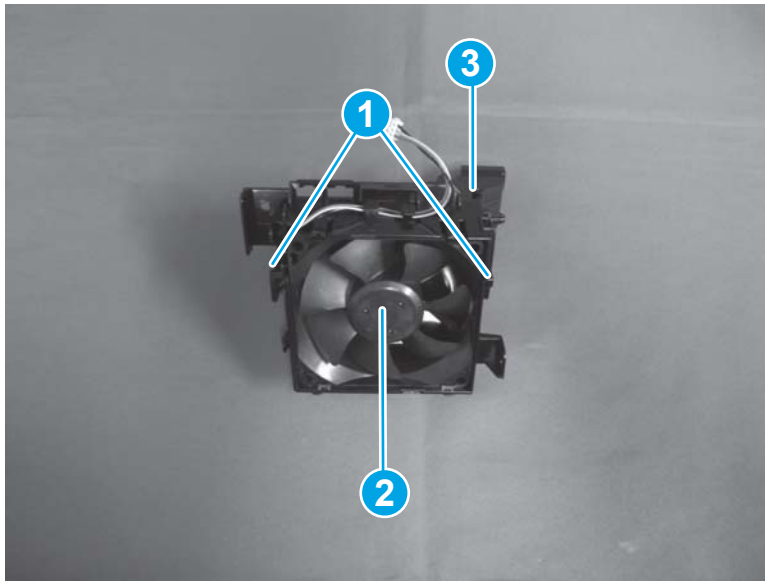


#### Step 9: Remove the right upper cover (3-bin stapler/stacker)

1. Open the right door.
2. Remove one screw (callout 1), release one tab (callout 2), and then remove the right upper cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-893** Remove the right upper cover

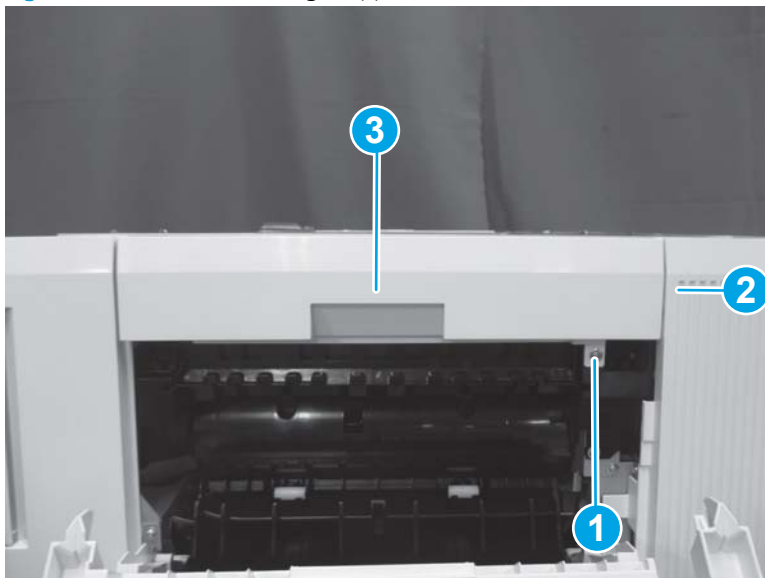


### Step 10: Remove the right corner cover (3-bin stapler/stacker)

- ▲ Release two tabs (callout 1), and then remove the right corner cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-894 Remove the right corner cover

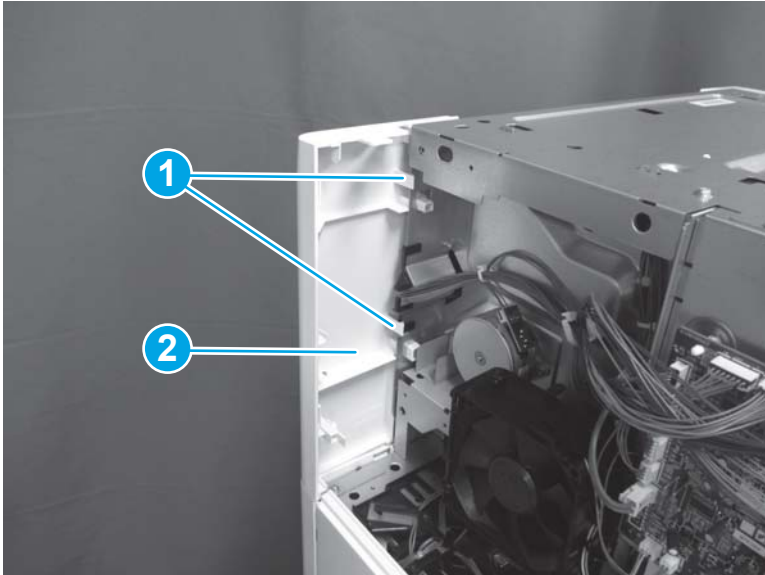

### Step 11: Remove the staple rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-895 Remove two screws

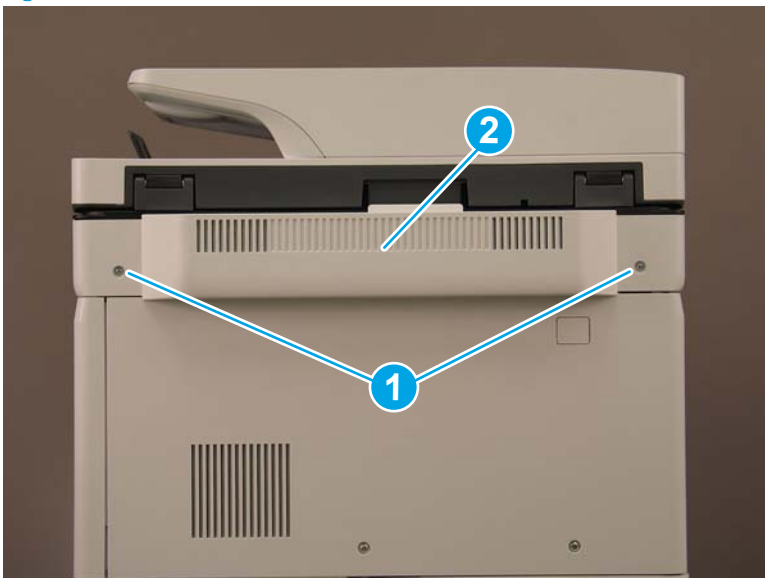

2. Remove one screw cover (callout 1).

Figure 1-896 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).


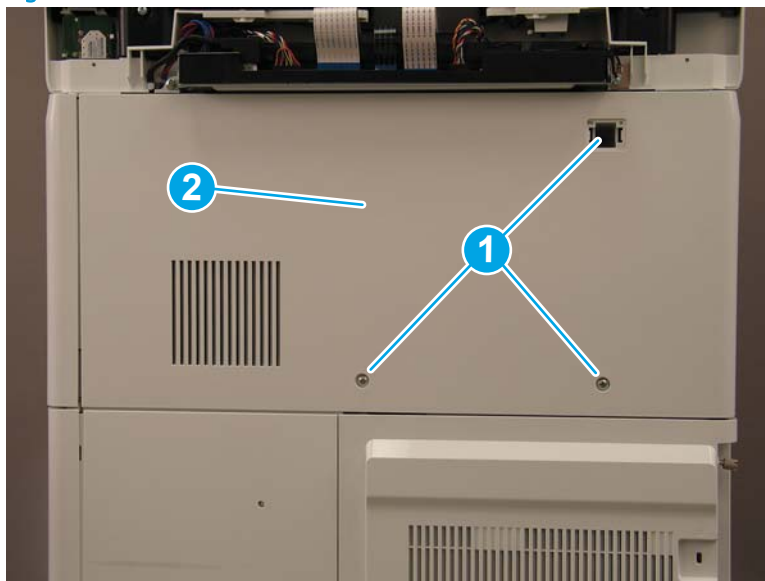
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-897 Remove three screws and the rear cover




### Step 12: Remove the upper feed assembly (3-bin stapler/stacker)

1. At the rear of the 3-bin stapler/stacker, disconnect three connectors (callout 1), and then release the cables (callout 2) from the retainers (callout 3).




Figure 1-898 Disconnect three connectors

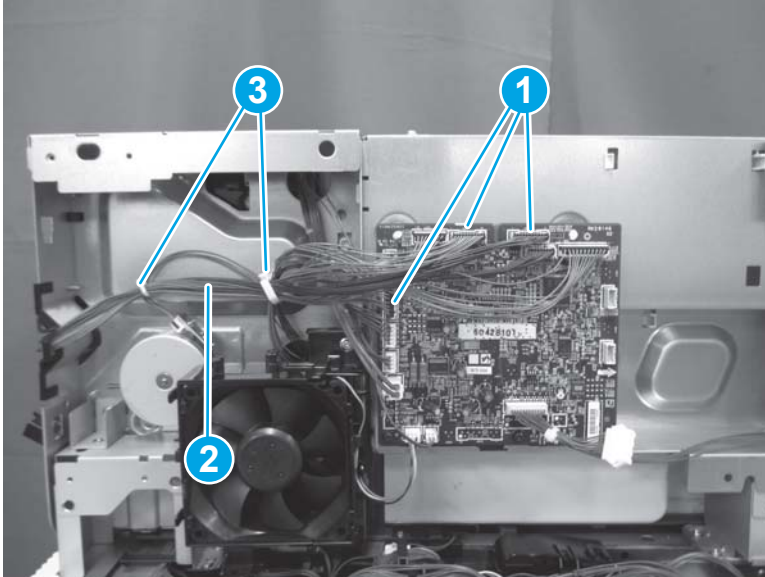


2. Release one tab (callout 1), and then remove the guide (callout 2).

Figure 1-899 Remove the guide

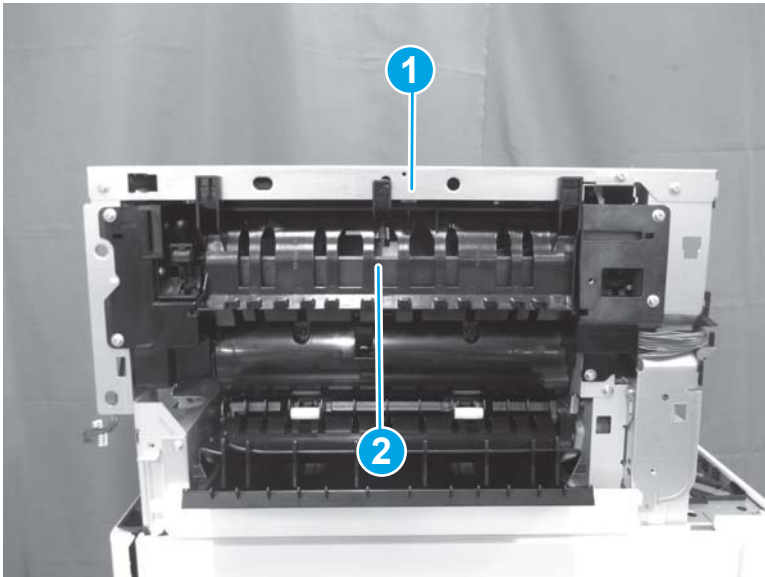




3. Remove six screws (callout 1), and then remove the upper feed assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-900** Remove the upper feed assembly

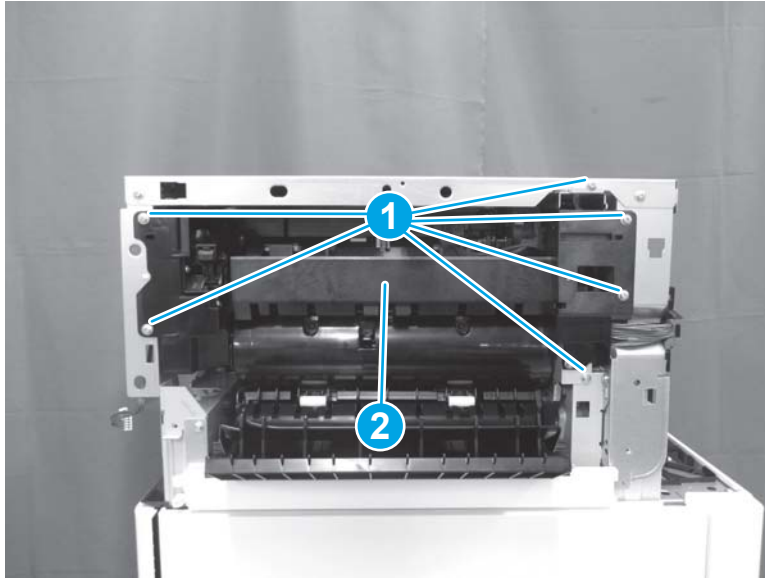


**Step 13: Remove the lower feed assembly (3-bin stapler/stacker)**

1. Remove one screw (callout 1), disconnect two connectors (callout 2), and then release the cable (callout 3) from the retainer (callout 4).


**Figure 1-901** Remove one screw and disconnect two connectors

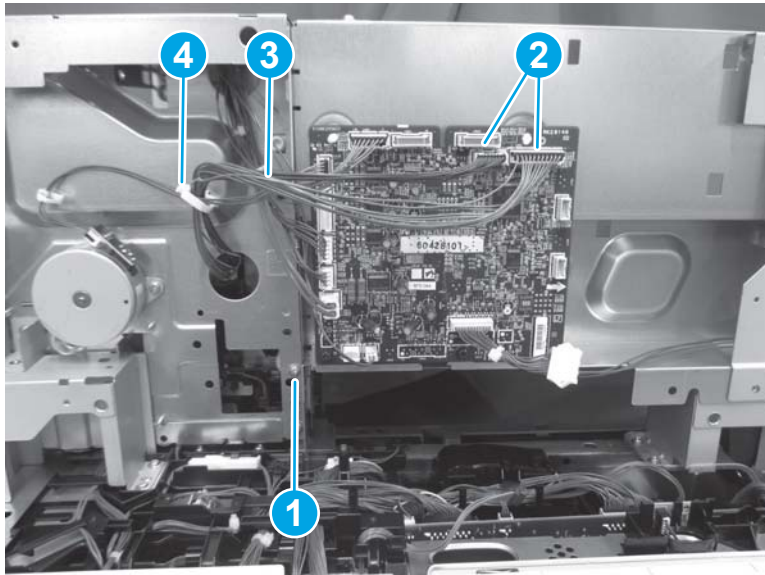

2. Remove three screws (callout 1), and then remove the lower feed assembly (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-902** Remove the lower feed assembly

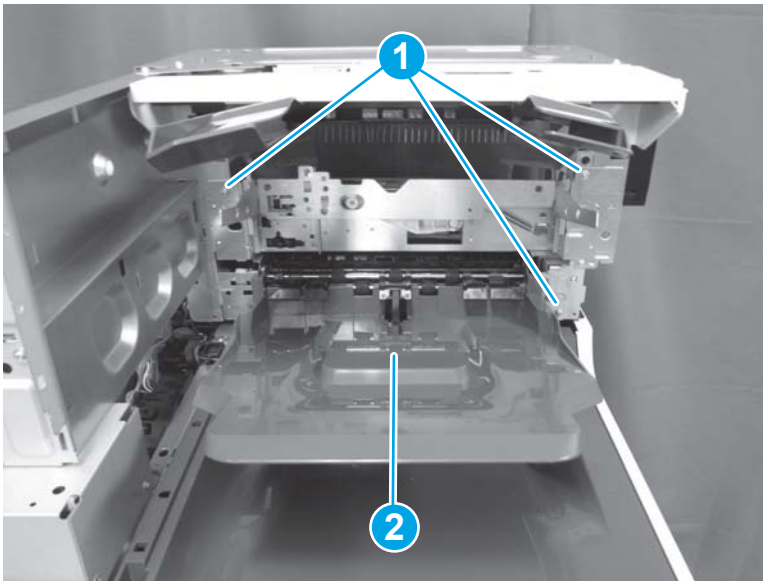



#### Step 14: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


## Removal and replacement: Solenoid assembly (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray assembly \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the jogger cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 5: Remove the rear inner cover \(3-bin stapler/stacker\)](#)
- [Step 6: Remove the stacking wall cover \(3-bin stapler/stacker\)](#)
- [Step 7: Remove the solenoid assembly \(3-bin stapler/stacker\)](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the solenoid assembly on the 3-bin stapler/stacker.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Solenoid assembly (3-bin stapler/stacker) part number	
RM2-1040-000CN	Solenoid assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray assembly (3-bin stapler/stacker)


1. Release one boss (callout 1), rotate the front locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-903 Remove the front locking pin

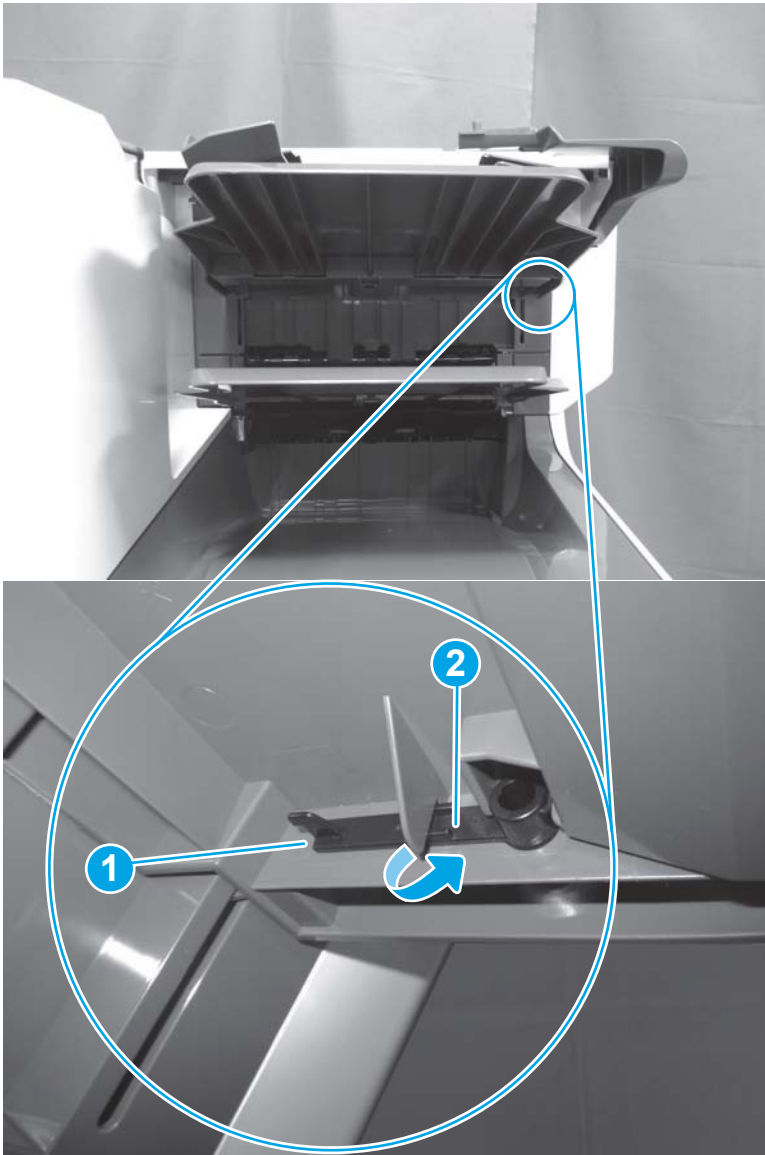


2. Release one boss (callout 1), rotate the rear locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-904 Remove the rear locking pin

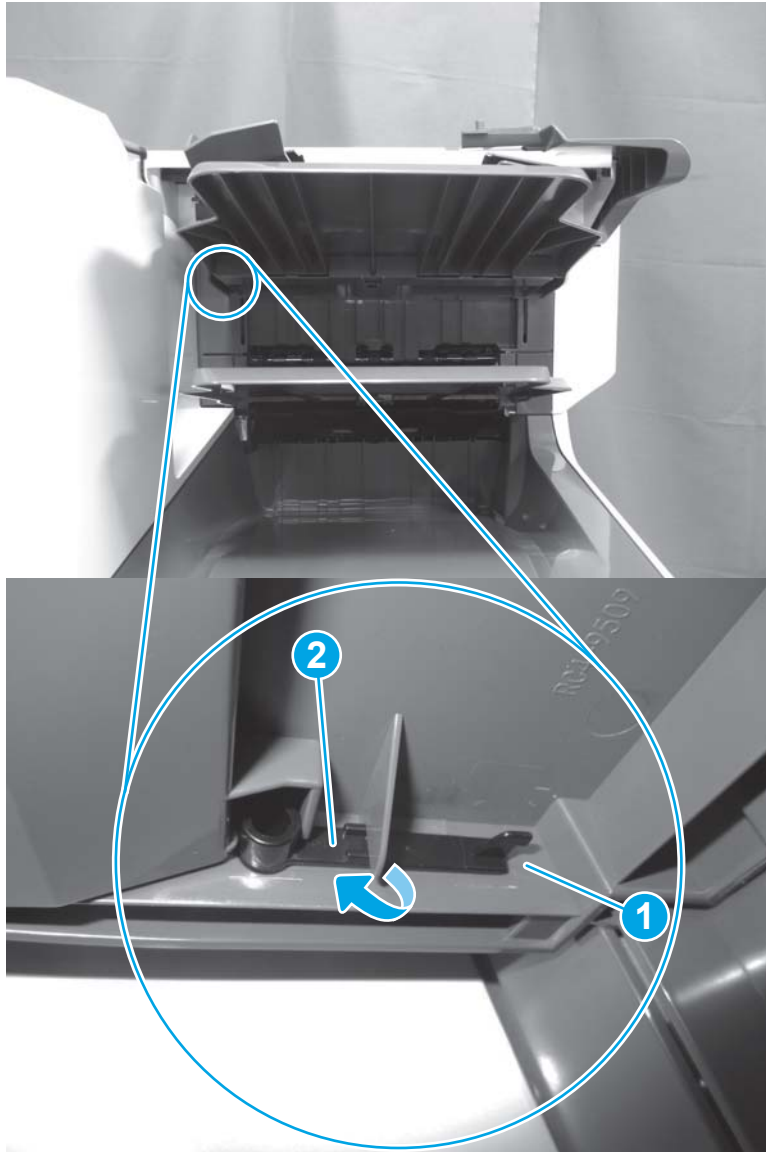


3. Lift the tray assembly (callout 1) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-905** Remove the tray assembly

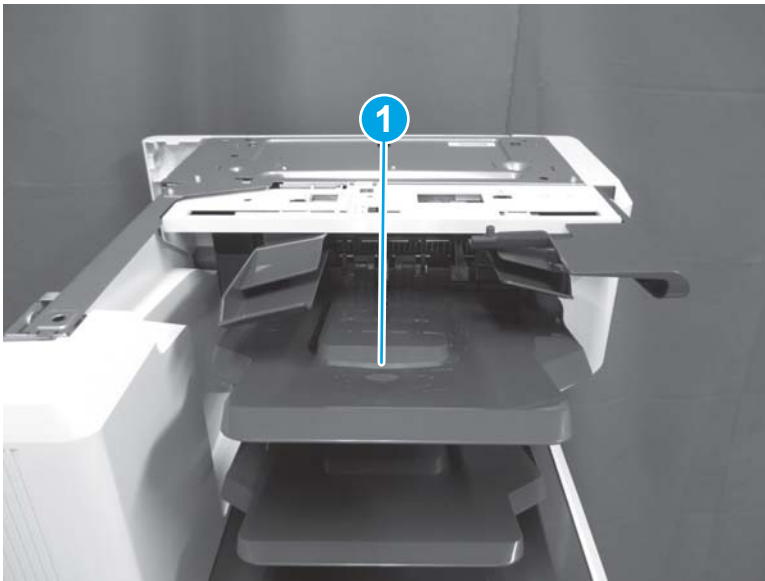

#### Step 2: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

**Figure 1-906** Open the front door



2. Open the stapler door.

Figure 1-907 Open the stapler door

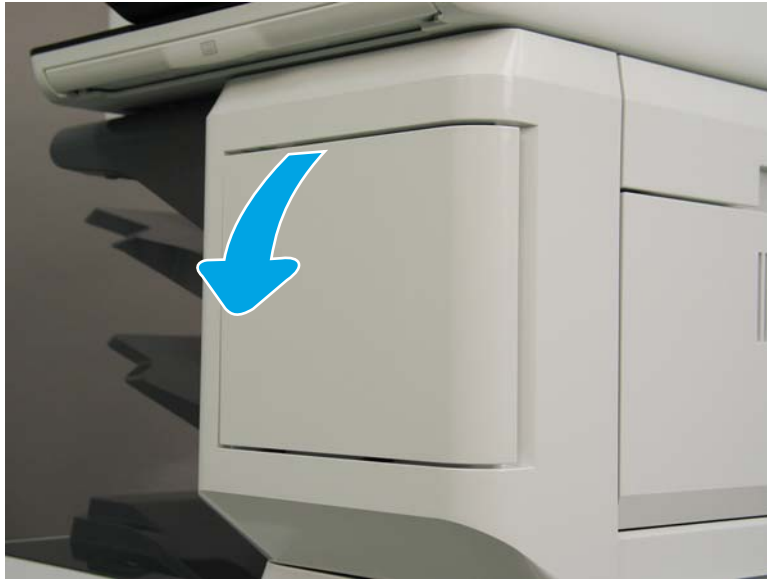


3. Remove one screw (callout 1).

Figure 1-908 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

**Figure 1-909** Remove the stapler cover.

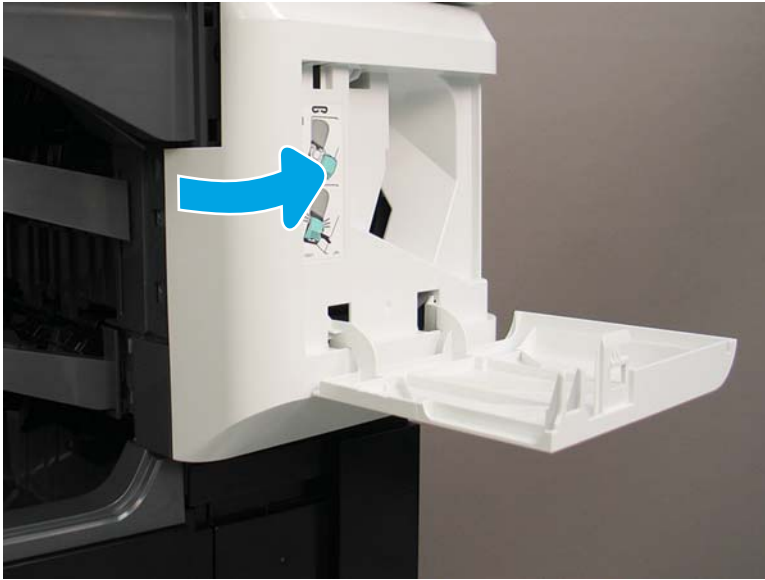

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

**Figure 1-910** Position the tab

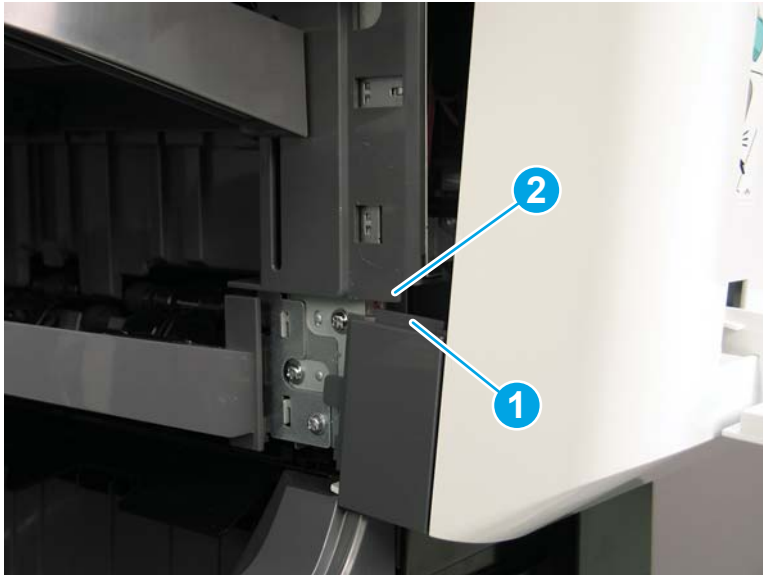

#### Step 3: Remove the jogger cover (3-bin stapler/stacker)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).



Figure 1-911 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-912 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-913 Remove the cover




4. Use a thin-shaft, magnetized screwdriver to remove one screw (callout 1).

---

 **TIP:** If necessary, remove the control panel to gain better access to this screw.


---

Figure 1-914 Remove one screw

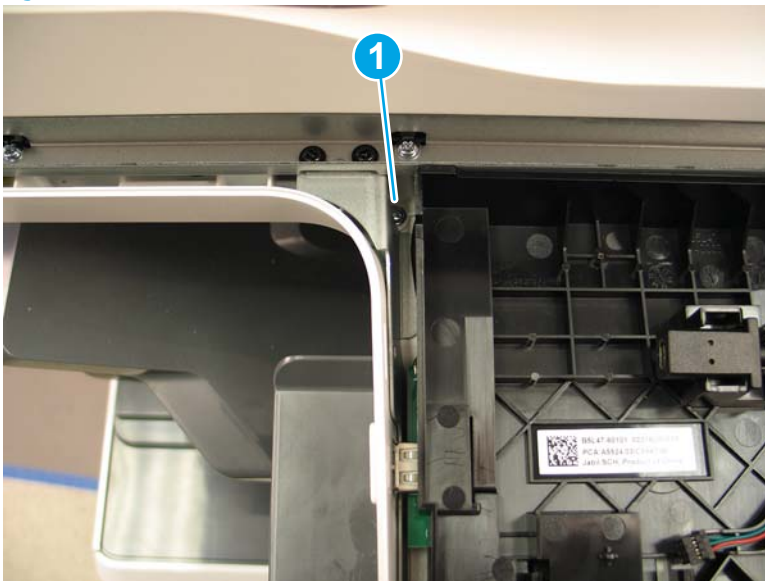

5. Release one tab (callout 1).

Figure 1-915 Release one tab

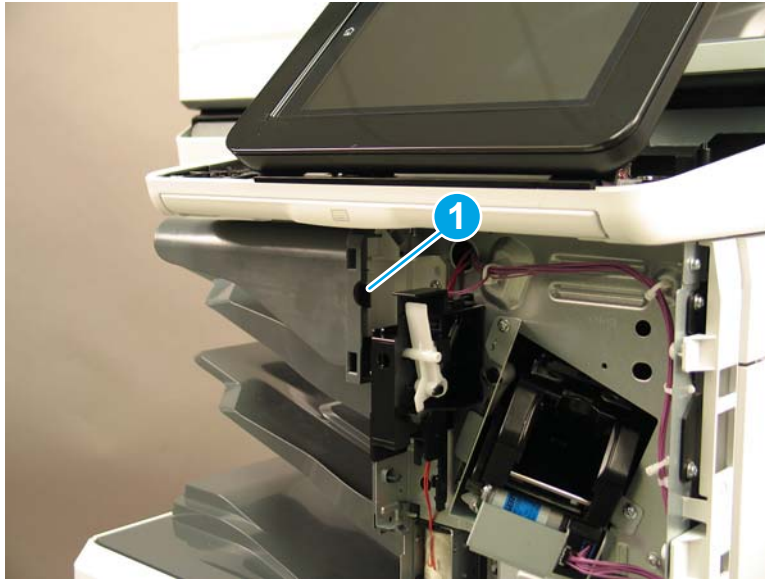

6. Slide the jogger cover to the left to remove it.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-916 Remove the jogger cover



#### Step 4: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-917 Remove two screws

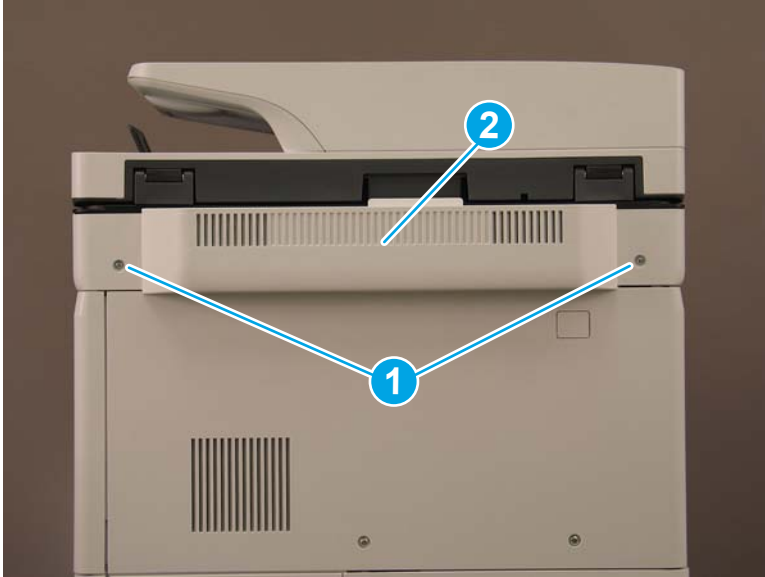

2. Remove one screw cover (callout 1).


Figure 1-918 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-919** Remove three screws and the rear cover

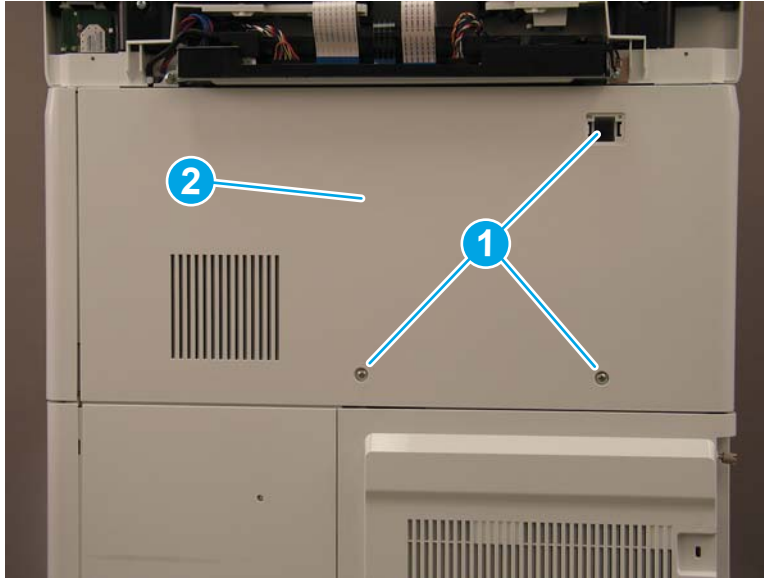


#### Step 5: Remove the rear inner cover (3-bin stapler/stacker)

- ▲ Remove one screw (callout 1), release three tabs (callout 2), and then remove the rear inner cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-920** Remove the rear inner cover

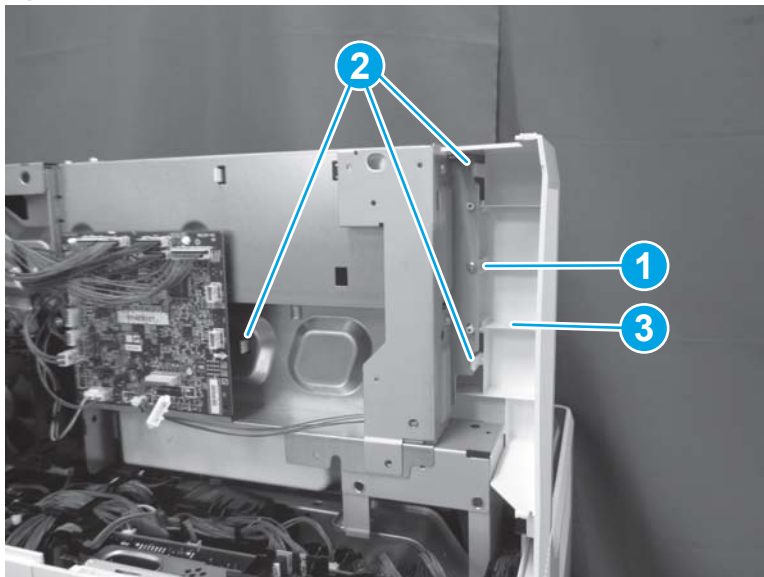

#### Step 6: Remove the stacking wall cover (3-bin stapler/stacker)


1. Before removing the stacking wall cover, note the location of the two tabs (callout 1) on the back of the cover.

Figure 1-921 Tab locations

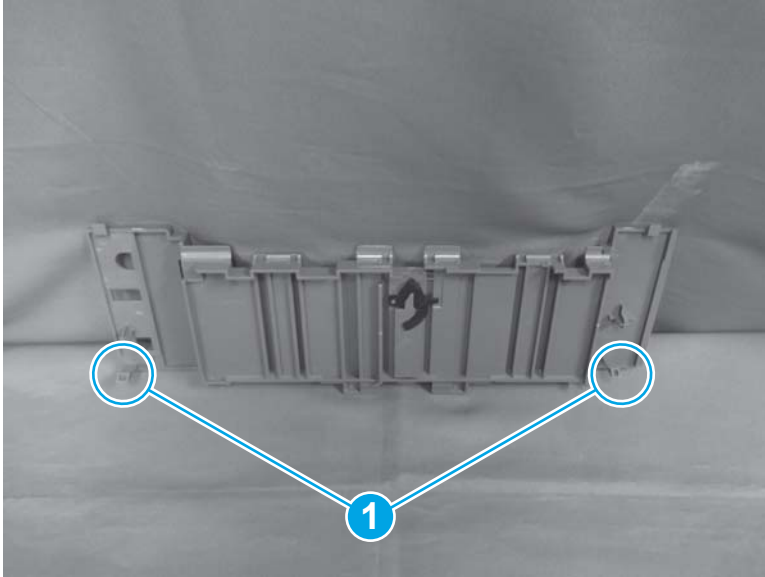


2. Release two tabs (callout 1), and then remove the stacking wall cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-922 Remove the stacking wall cover

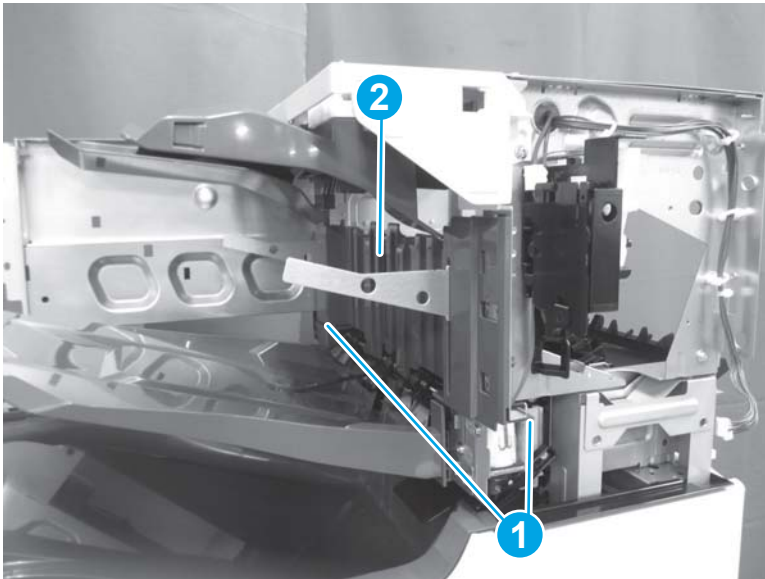

#### Step 7: Remove the solenoid assembly (3-bin stapler/stacker)

1. Remove one cover (callout 1), release the cables (callout 2) from the retainer (callout 3), and then disconnect one connector (callout 4).

Figure 1-923 Remove one cover and disconnect one connector

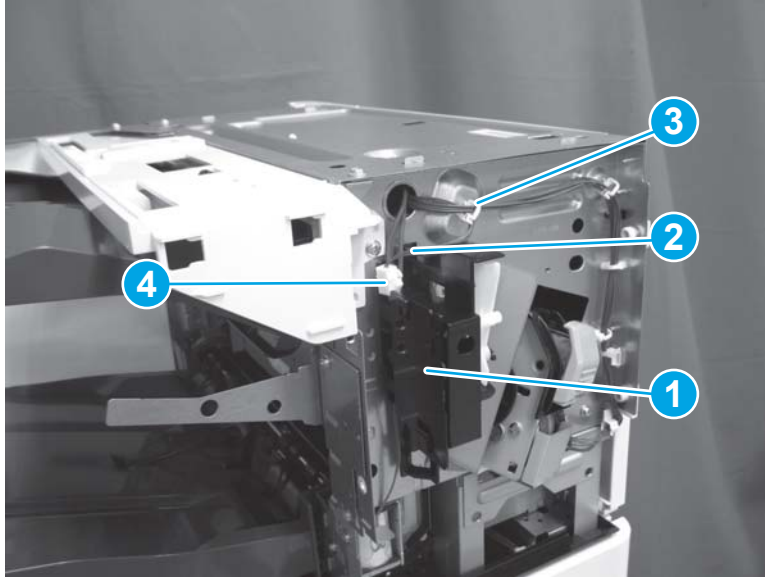


2. Remove three screws (callout 1), and then remove the solenoid assembly (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-924 Remove the solenoid assembly

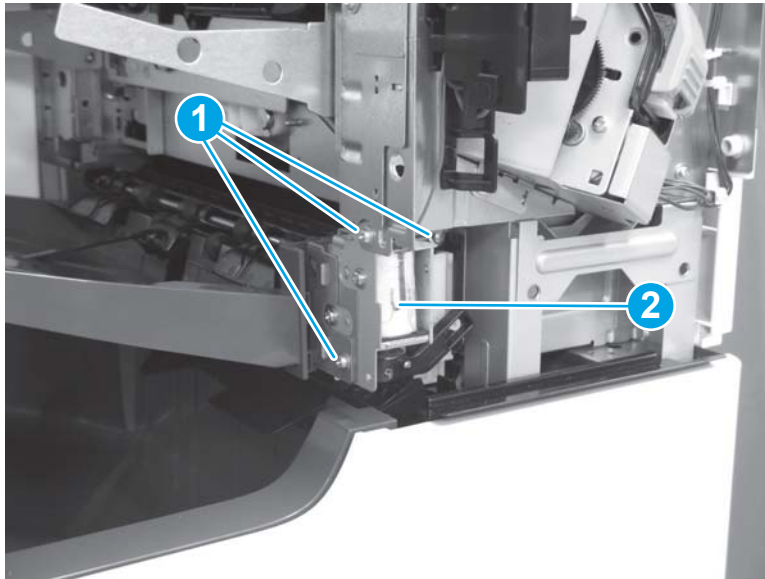


#### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Microswitch (3-bin stapler/stacker)

- [Introduction](#)
- [Step 1: Remove the tray assembly \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the staple cover \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the jogger cover \(3-bin stapler/stacker\)](#)
- [Step 4: Remove the microswitch \(3-bin stapler/stacker\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the microswitch on the 3-bin stapler/stacker.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Microswitch (3-bin stapler/stacker) part number	
WC4-5171-000CN	Microswitch

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the tray assembly (3-bin stapler/stacker)


1. Release one boss (callout 1), rotate the front locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-925 Remove the front locking pin

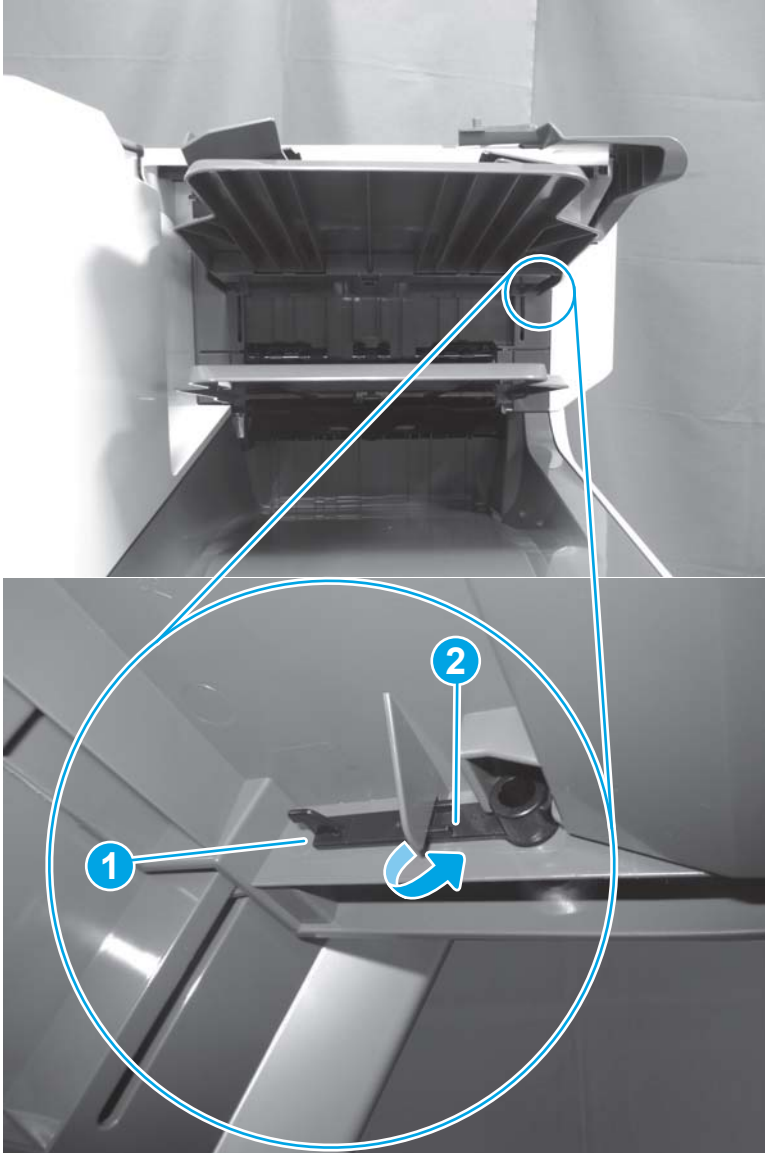


2. Release one boss (callout 1), rotate the rear locking pin (callout 2) down to release it, and then remove the locking pin.

Figure 1-926 Remove the rear locking pin

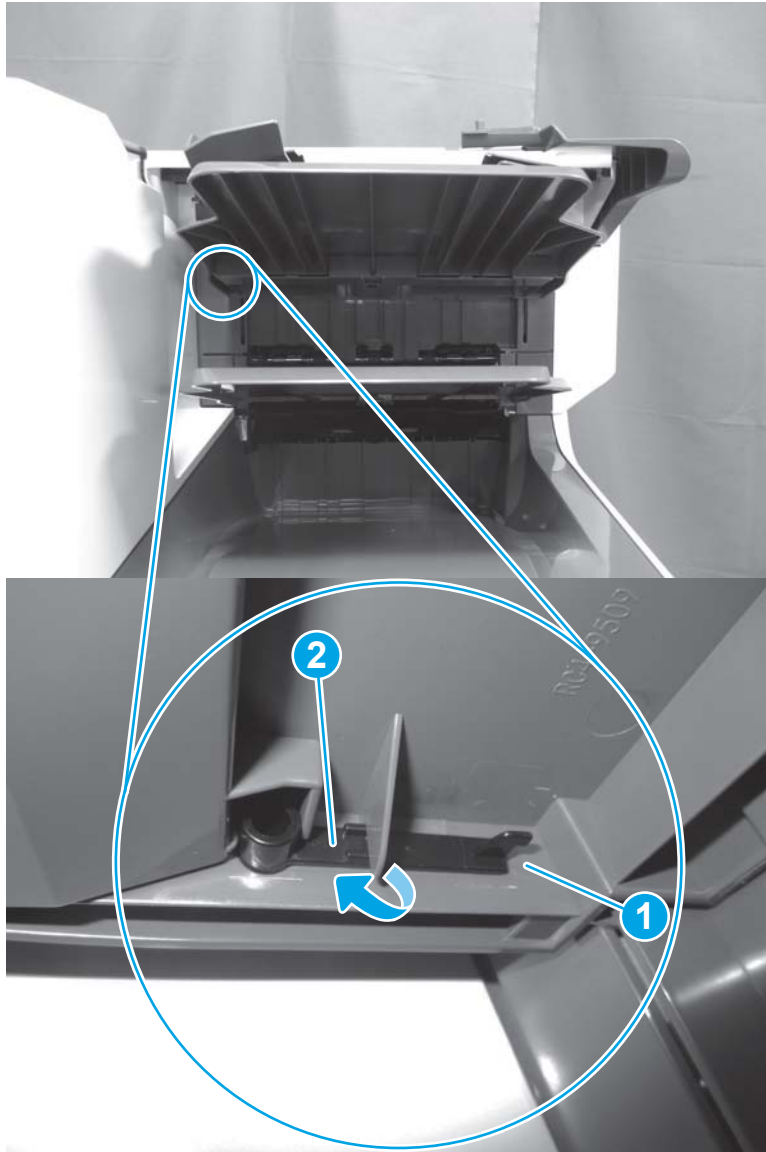


3. Lift the tray assembly (callout 1) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-927** Remove the tray assembly

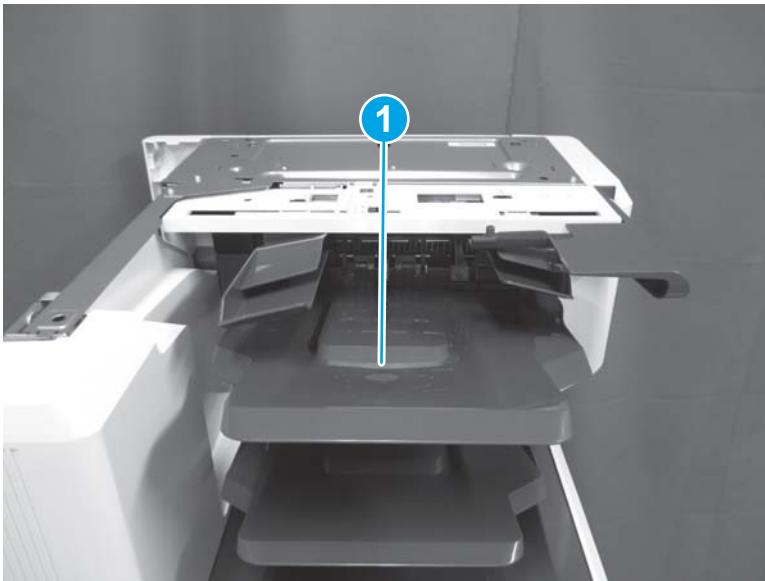

#### Step 2: Remove the staple cover (3-bin stapler/stacker)


1. Open the front door.

**Figure 1-928** Open the front door



2. Open the stapler door.

Figure 1-929 Open the stapler door

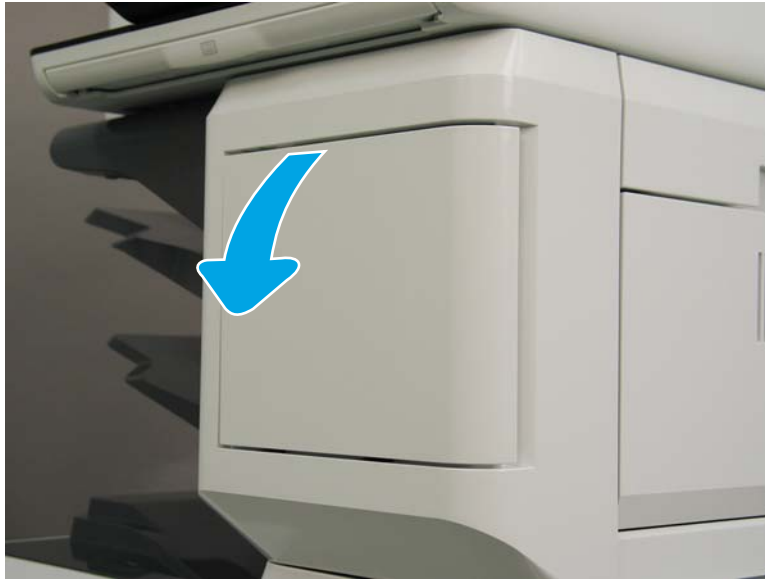


3. Remove one screw (callout 1).

Figure 1-930 Remove one screw



4. Release one tab on the left side of the cover, and then rotate it away from the printer to remove it.

**Figure 1-931** Remove the stapler cover.

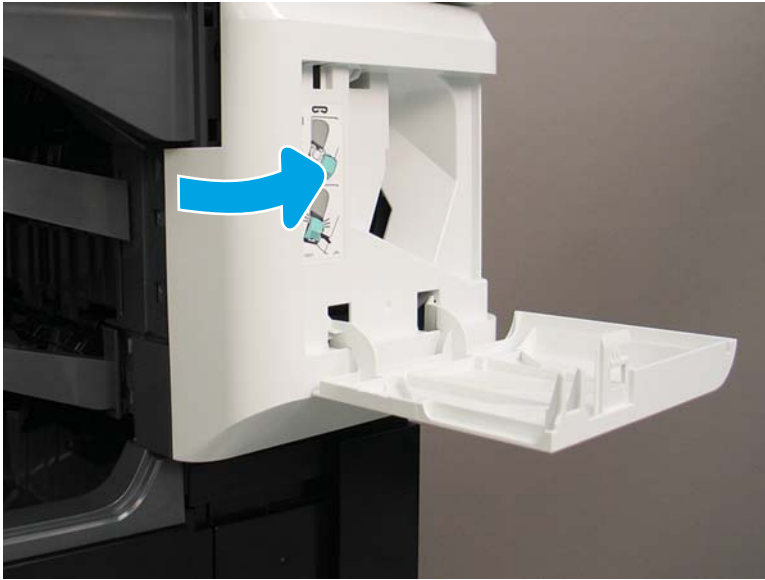

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Stapler cover

- ▲ When reinstalling the stapler cover, position the tab on the cover (callout 1) behind the edge of the cover (callout 2) on the printer.

**Figure 1-932** Position the tab

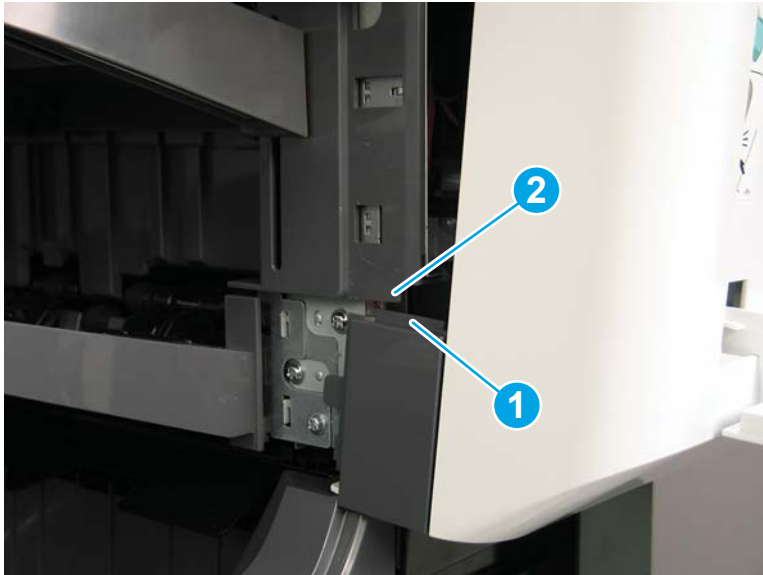

#### Step 3: Remove the jogger cover (3-bin stapler/stacker)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-933 Tilt the control panel and open the document feeder



- 2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-934 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-935 Remove the cover




4. Use a thin-shaft, magnetized screwdriver to remove one screw (callout 1).

---

 **TIP:** If necessary, remove the control panel to gain better access to this screw.

---


Figure 1-936 Remove one screw

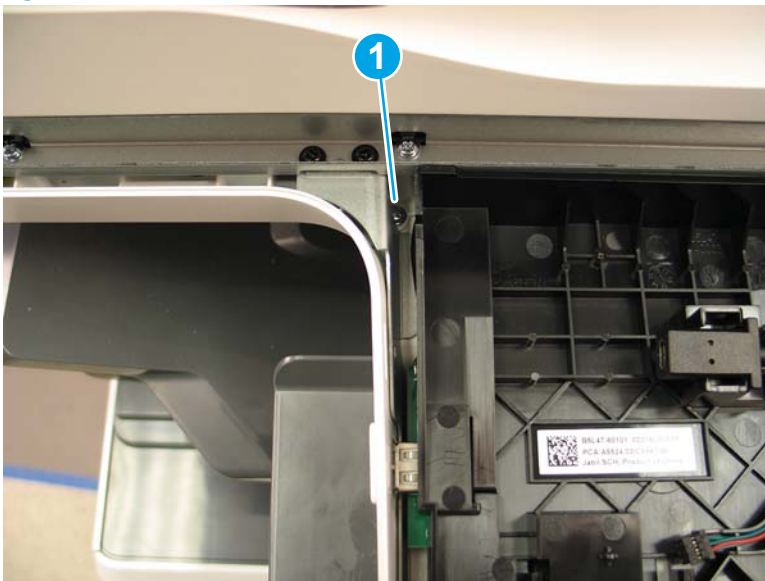



5. Release one tab (callout 1).

Figure 1-937 Release one tab

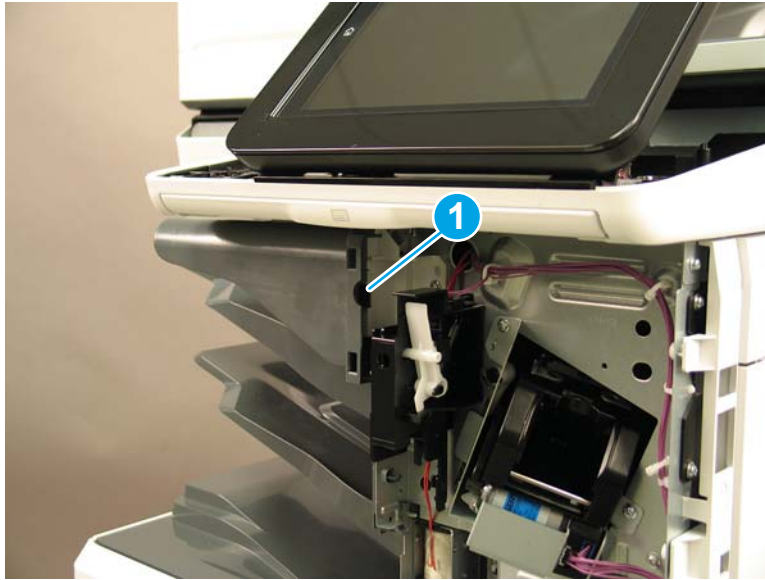

6. Slide the jogger cover to the left to remove it.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-938 Remove the jogger cover



#### Step 4: Remove the microswitch (3-bin stapler/stacker)


1. Release one tab (callout 1), and then slide the cover up (callout 2) to remove it.

Figure 1-939 Remove one cover

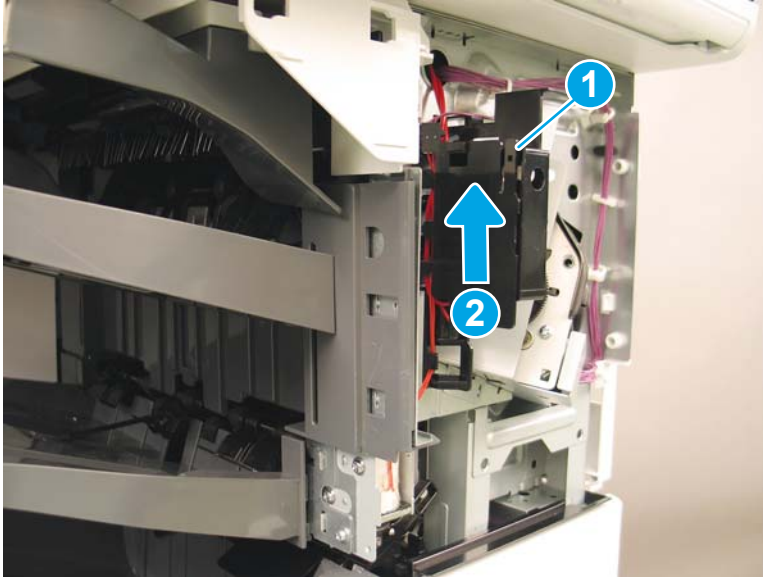


2. Release one retainer (callout 1), disconnect one connector (callout 2), and then release the wire harness from the guides (callout 3).

Figure 1-940 Disconnect one connector

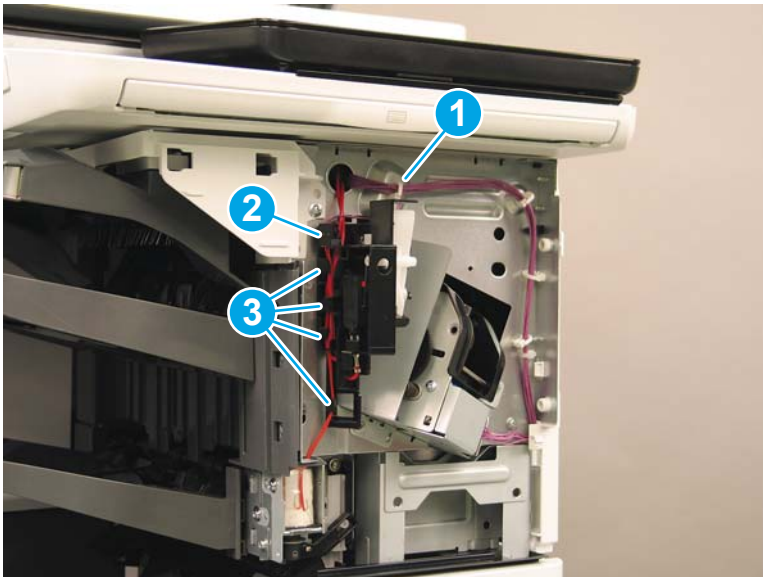


3. Remove one screw (callout 1), release one tab (callout 2), and then slide the guide up (callout 3) to release it from the sheet-metal frame.

Figure 1-941 Release the guide

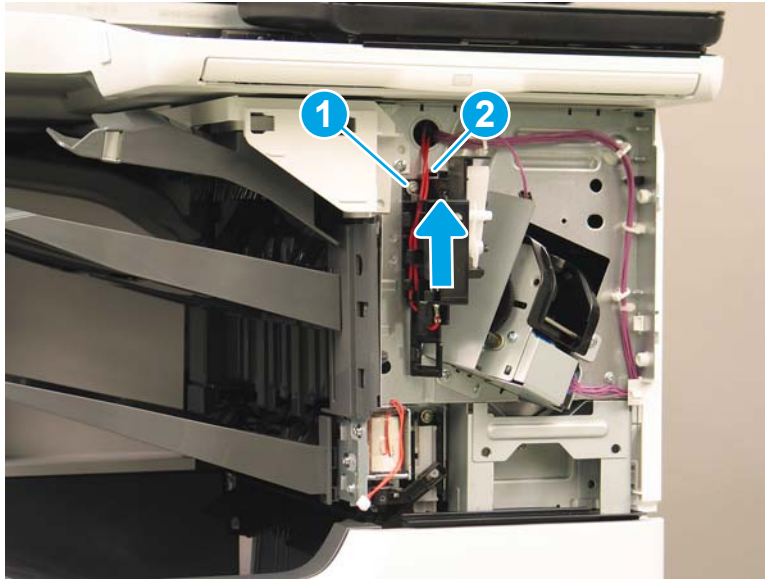


4. Release the cables (callout 1) from the guides (callout 2), and then release one tab (callout 3) to release the microswitch from the guide.

Figure 1-942 Release the microswitch

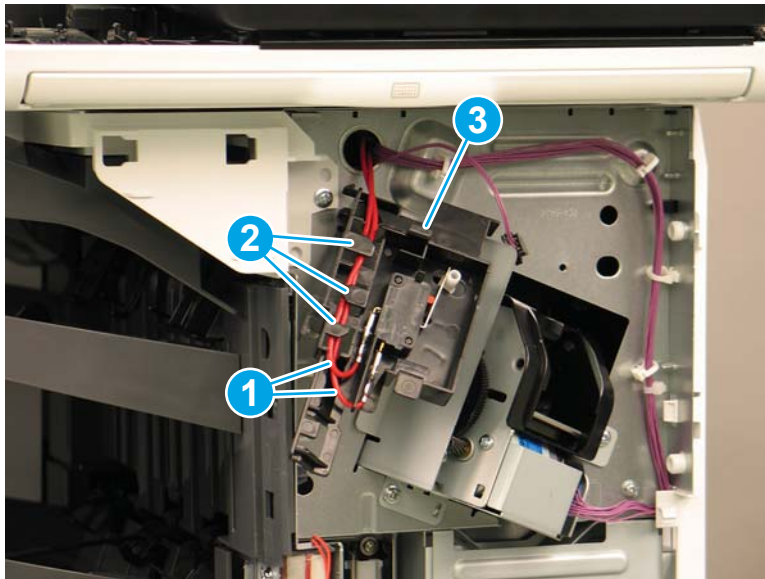

5. Disconnect two connectors (callout 1).

Figure 1-943 Disconnect two connectors

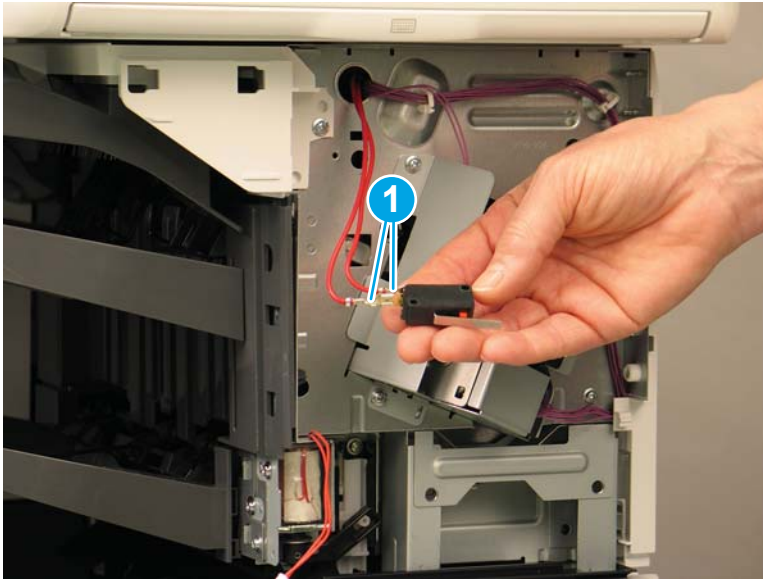

6. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Microswitch (3-bin stapler/stacker)

- ▲ When reinstalling the microswitch, make sure that the silver arm (callout 1) is positioned correctly against the white shaft. Also, make sure that the shorter cable (callout 2) is connected to the upper connector.


Figure 1-944 Check the silver arm and connector

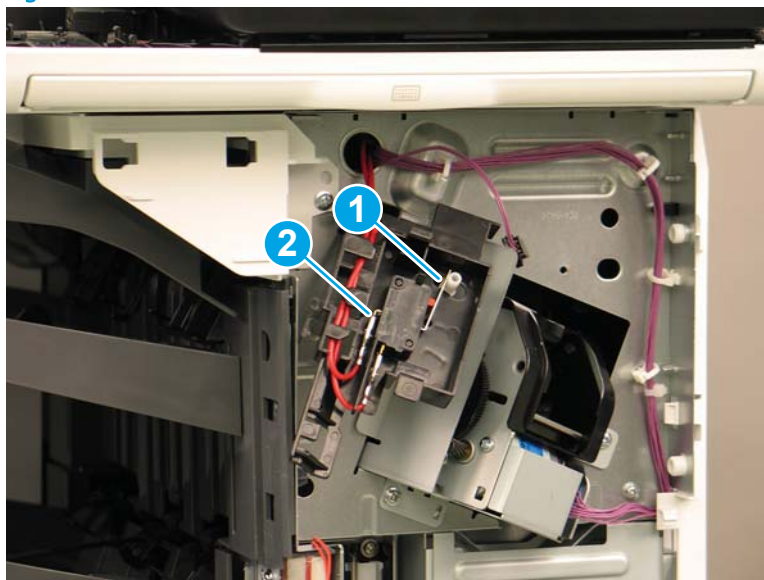

#### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Feed motor (3-bin stapler/stacker)


- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the fan \(3-bin stapler/stacker\)](#)
- [Step 3: Remove the feed motor \(3-bin stapler/stacker\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the feed motor on the 3-bin stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Feed motor (3-bin stapler/stacker) part number	
RK2-8149-000CN	Motor, stepping, DC

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).



Figure 1-945 Remove two screws

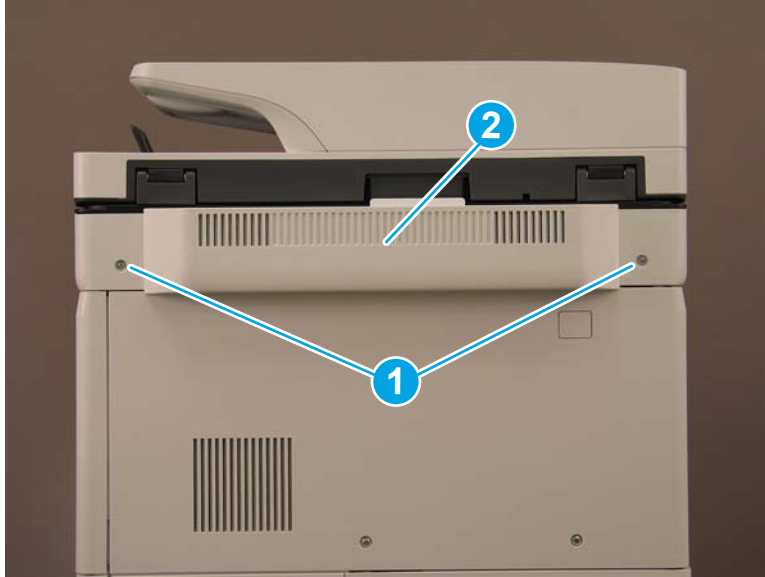


2. Remove one screw cover (callout 1).


Figure 1-946 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-947** Remove three screws and the rear cover

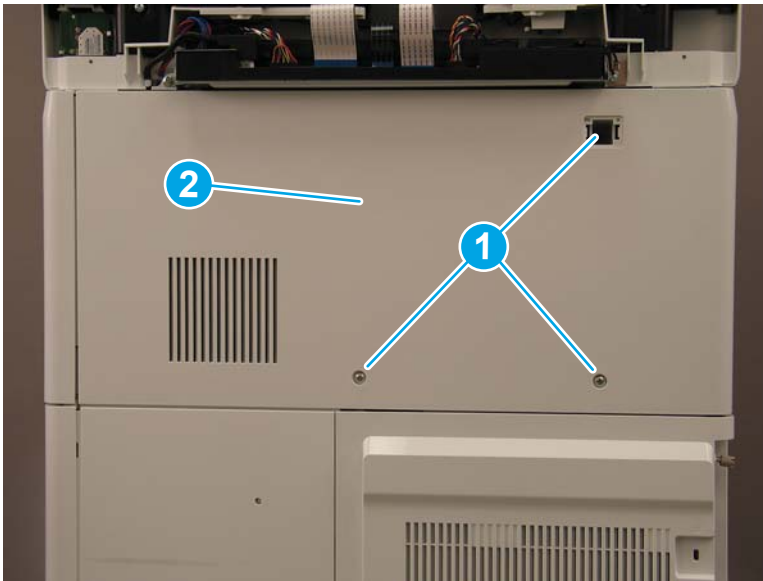

#### Step 2: Remove the fan (3-bin stapler/stacker)


1. Disconnect one connector (callout 1), remove one screw (callout 2), and then remove the fan (callout 3) together with the fan holder (callout 4).

**Figure 1-948** Remove the fan holder and fan

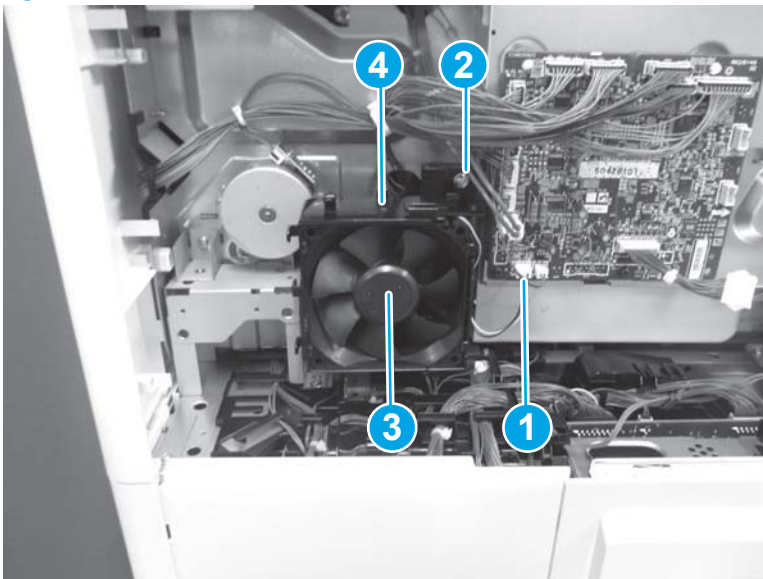




2. Release two tabs (callout 1), and then remove the fan (callout 2) from the holder (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-949** Remove the fan

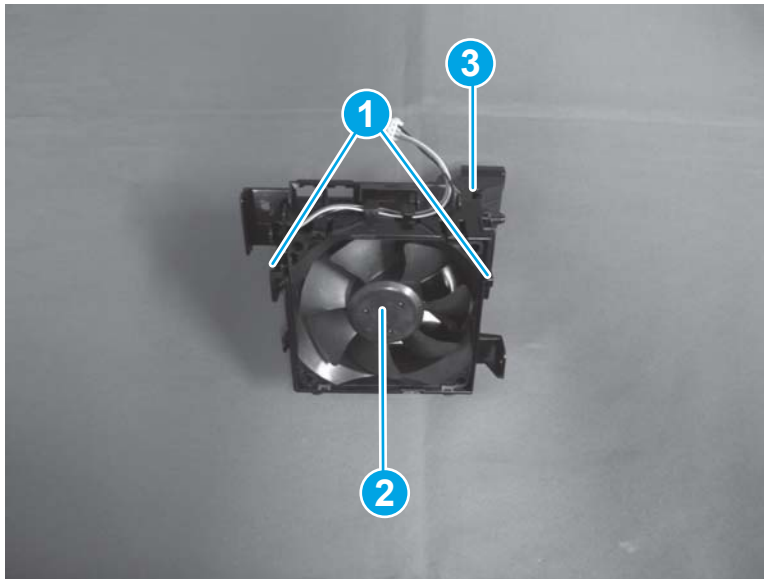


### Step 3: Remove the feed motor (3-bin stapler/stacker)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-950** Remove the feed motor

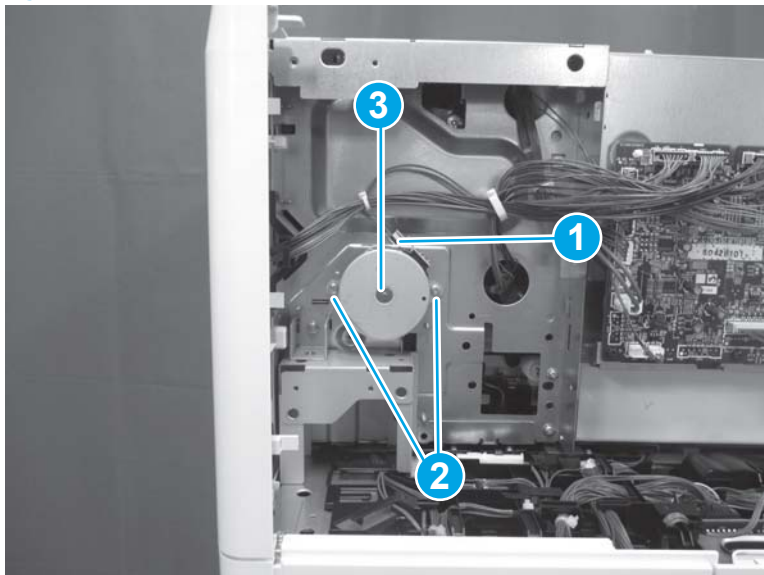

### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Controller PCA (3-bin stapler/stacker)


- [Introduction](#)
- [Step 1: Remove the rear cover \(3-bin stapler/stacker\)](#)
- [Step 2: Remove the controller PCA \(3-bin stapler/stacker\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the controller PCA on the 3-bin stapler/stacker.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.  
 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Controller PCA (3-bin stapler/stacker) part number	
RM2-8689-000CN	Staple stacker PCB assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3-bin stapler/stacker)

1. At the back of the printer, remove two screws (callout 1), and then remove the image scanner rear cover (callout 2).

Figure 1-951 Remove two screws

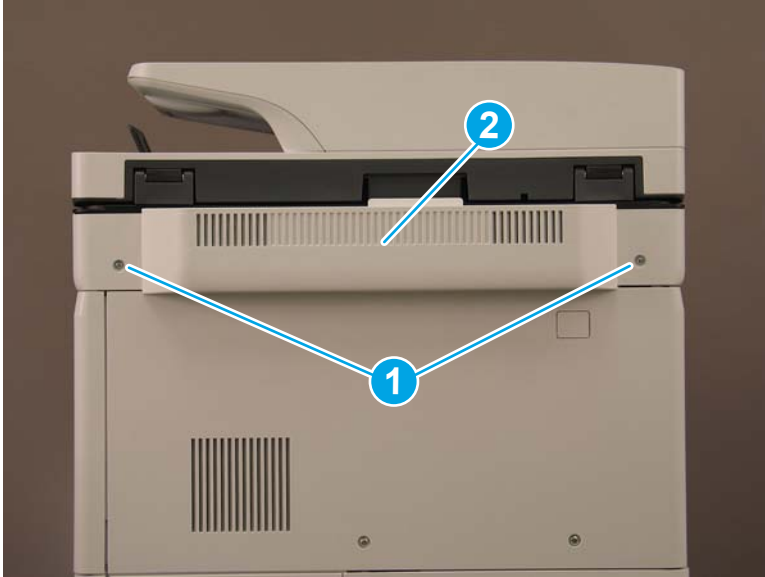

2. Remove one screw cover (callout 1).


Figure 1-952 Remove one screw cover



3. Remove three screws (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-953** Remove three screws and the rear cover

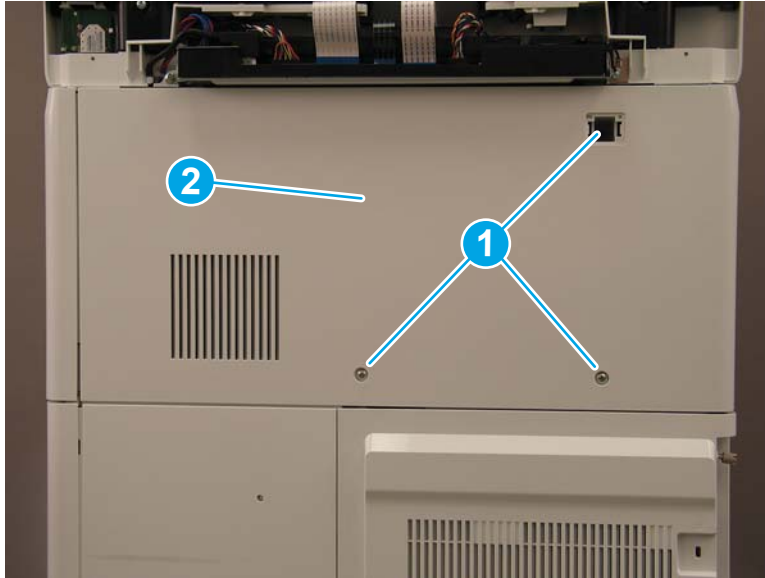


### Step 2: Remove the controller PCA (3-bin stapler/stacker)

- ▲ Disconnect all of the connectors on the controller PCA. Remove one screw (callout 1), release two tabs (callout 2), and then remove the controller PCA (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-954** Remove the controller PCA

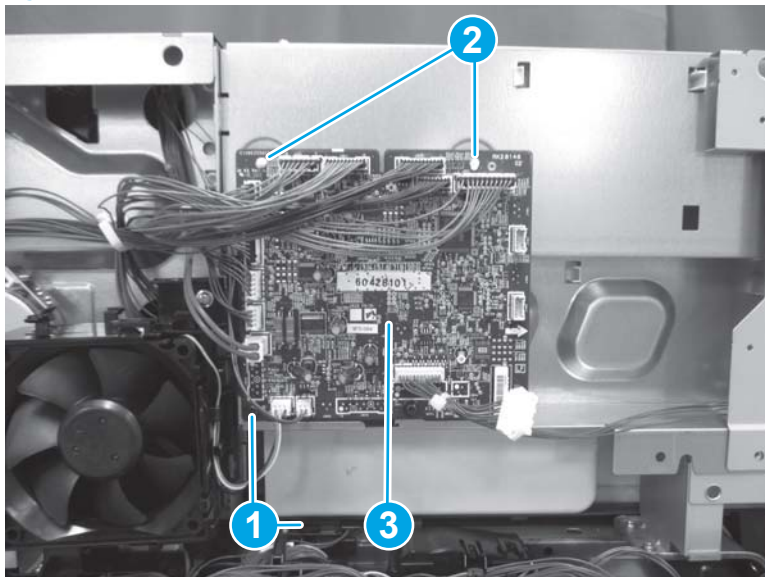

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Internal parts and assemblies

- [Removal and replacement: Tray 1 pickup roller](#)
- [Removal and replacement: Tray 1 separation roller](#)
- [Removal and replacement: Formatter](#)
- [Removal and replacement: Pre-exposure PCA assembly \(black\)](#)
- [Removal and replacement: Pre-exposure PCA assembly \(cyan, magenta, or yellow\)](#)
- [Removal and replacement: Power switch PCA](#)
- [Removal and replacement: Left upper front and left upper rear fans](#)
- [Removal and replacement: Toner carry assembly](#)
- [Removal and replacement: Estrangement detect PCA](#)
- [Removal and replacement: Environmental sensor PCA](#)
- [Removal and replacement: Cartridge fan](#)
- [Removal and replacement: Front fan](#)
- [Removal and replacement: Power supply fan](#)
- [Removal and replacement: DC controller PCA](#)
- [Removal and replacement: Low-voltage power supply \(LVPS\)](#)
- [Removal and replacement: Lower high-voltage power supply \(HVPS\)](#)
- [Removal and replacement: Upper high-voltage power supply \(HVPS\)](#)
- [Removal and replacement: Rear fan](#)
- [Removal and replacement: Lifter drive assembly](#)
- [Removal and replacement: Laser scanner](#)
- [Removal and replacement: Drum motor 1](#)
- [Removal and replacement: Drum motor 2](#)
- [Removal and replacement: Drum motor 3](#)
- [Removal and replacement: Main drive assembly](#)
- [Removal and replacement: Fuser motor](#)
- [Removal and replacement: Fuser drive assembly](#)
- [Removal and replacement: Developer alienation motor](#)
- [Removal and replacement: Pickup motor](#)
- [Removal and replacement: Delivery assembly \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Removal and replacement: Delivery assembly \(M681/M682/E67550/E67560/E67650/E67660\)](#)

- [Removal and replacement: Secondary transfer assembly](#)
- [Removal and replacement: Registration assembly](#)
- [Removal and replacement: Registration density sensor](#)
- [Removal and replacement: Feed roller assembly](#)
- [Removal and replacement: Pickup assembly](#)
- [Removal and replacement: Drawer connector and holder](#)



## Removal and replacement: Tray 1 pickup roller

- [Introduction](#)
- [Step 1: Remove the Tray 1 pickup roller](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the Tray 1 pickup roller.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Tray 1 pickup roller part number	
RL2-0034-000CN	Tray 1 pickup roller

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a document and select Tray 1 as the source. Verify that the paper correctly picks from Tray 1

### Step 1: Remove the Tray 1 pickup roller


1. Open Tray 1.

Figure 1-955 Open Tray 1




2. Place a finger in the center notch and gently pull down to release two tabs (callout 1) and remove the cover (callout 2).

Figure 1-956 Release two tabs and remove the cover

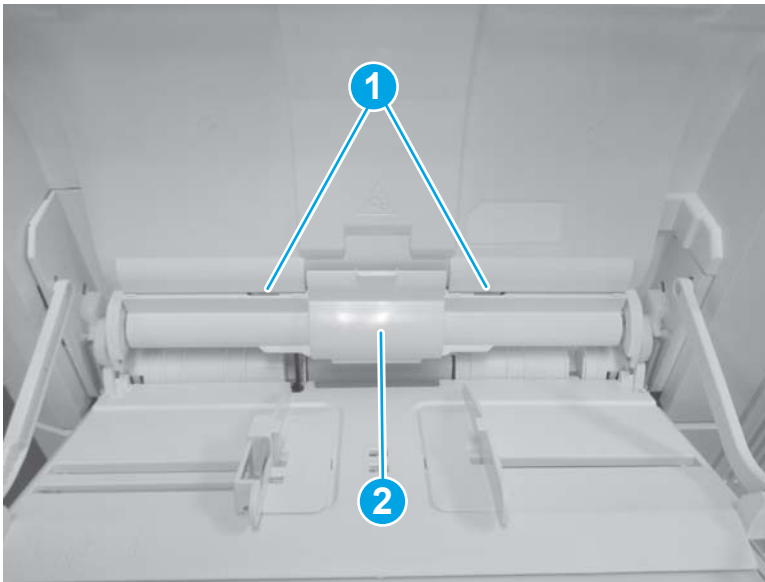

3. Use a small, flat-blad screwdriver to release two tabs (callout 1), and then use the screwdriver to gently pry and lift the roller (callout 2) up and out of the printer.

Figure 1-957 Remove the pickup roller

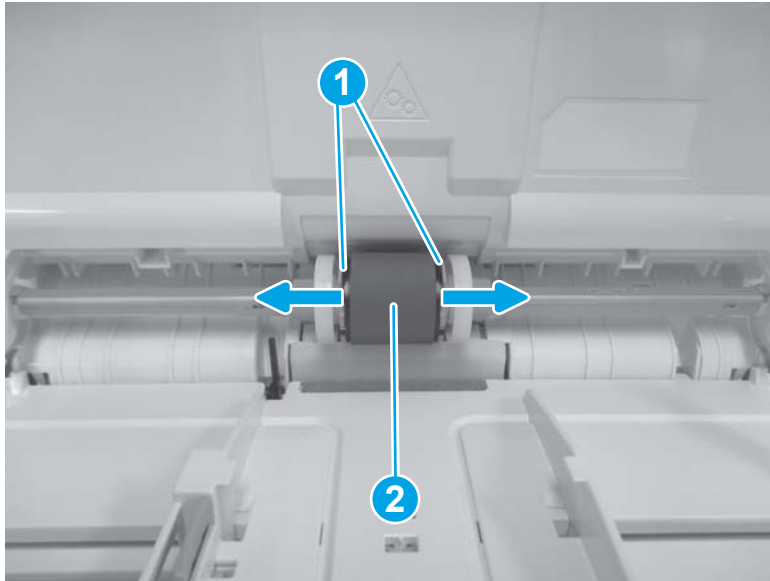


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Tray 1 pickup roller

- ▲ When installing the new roller, align the tabs (callout 1) on the roller with the slots (callout 2) in the printer.


Figure 1-958 Install the pickup roller

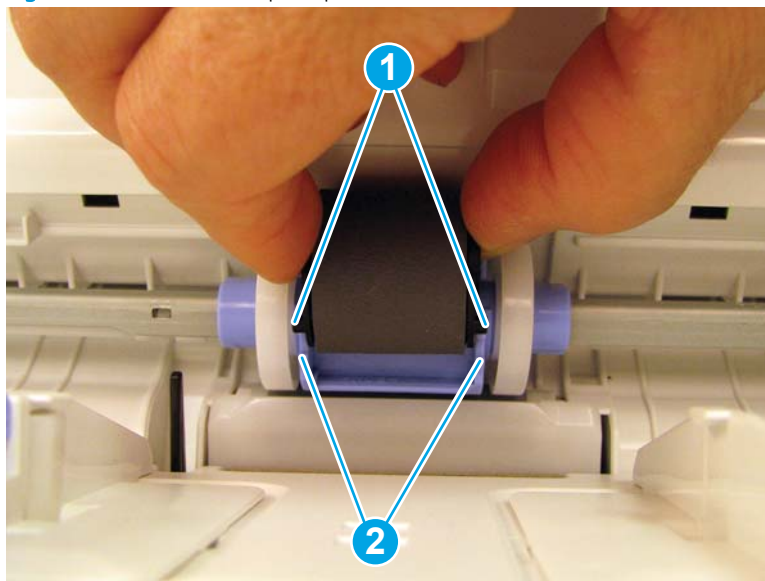

#### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Tray 1 separation roller

- [Introduction](#)
- [Step 1: Remove the Tray 1 separation roller](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the Tray 1 separation roller.

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Tray 1 separation roller part number	
RL2-0079-000CN	Tray 1 separation roller

### Required tools

- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Print a document and select Tray 1 as the source. Verify that the paper correctly picks from Tray 1

### Step 1: Remove the Tray 1 separation roller

1. Open Tray 1.


Figure 1-959 Open Tray 1



2. Slightly flex the slot guides to release two hinge pins (callout 1) from the guides.


**⚠ CAUTION:** Support Tray 1 while releasing the hinge pins. The tray will drop and damage the printer if it is not supported.

Figure 1-960 Release two hinge pins

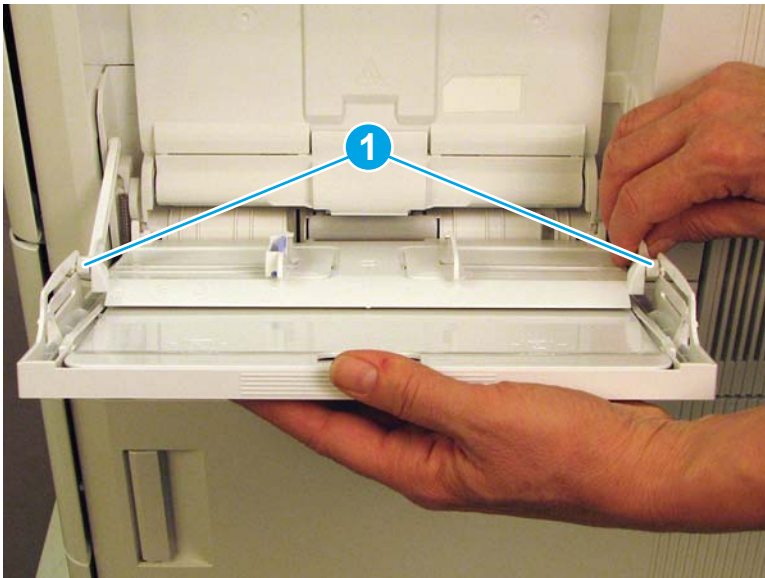

- Carefully lower the outer tray.

Figure 1-961 Lower the outer tray

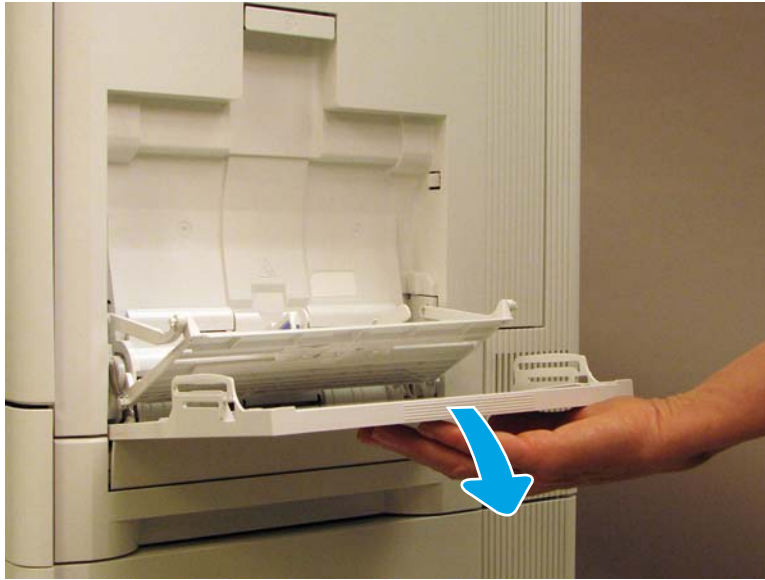

- Raise the lifting plate up until it stays in position next to the printer.


Figure 1-962 Raise the lifting plate



5. Release two tabs (callout 1), and then open the separation roller door (callout 2).


**⚠ CAUTION:** Use care when working in this area. The hinge pins on the outer door assembly are fragile and can easily break. Do not exert any pressure on the door assembly.

Figure 1-963 Open the separation roller door

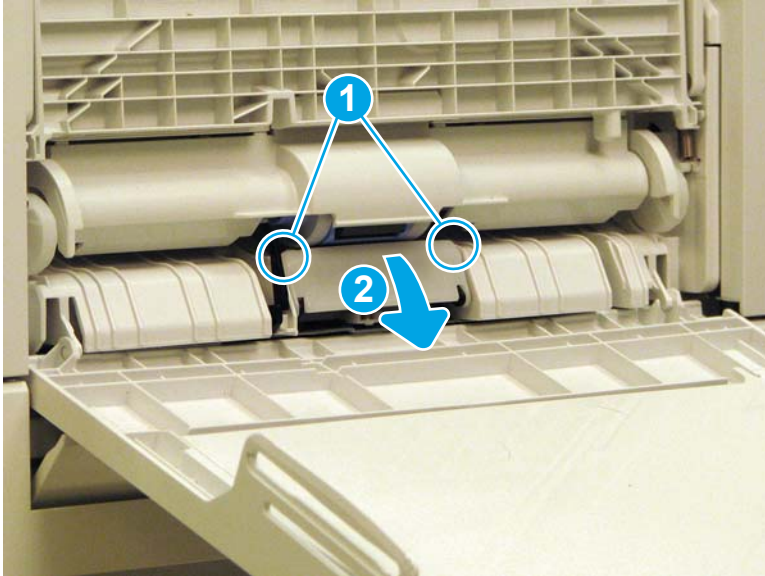


6. Locate the tab (callout 1) on the left end of the roller.

Figure 1-964 Locate the tab

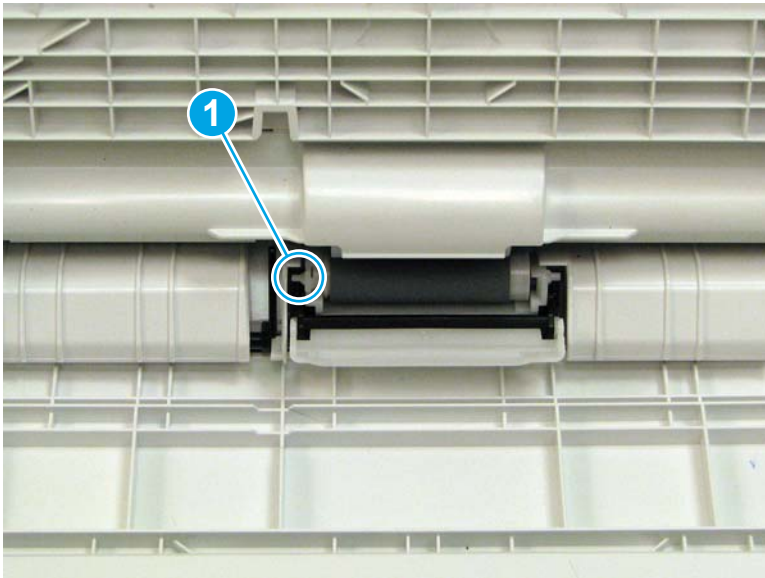




7. Use a small, flat-blade screwdriver to apply pressure to the left side of the roller, and then gently pry it away from the printer. Hold pressure on the roller until it clears the tab and the tray assembly.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-965** Remove the separation roller

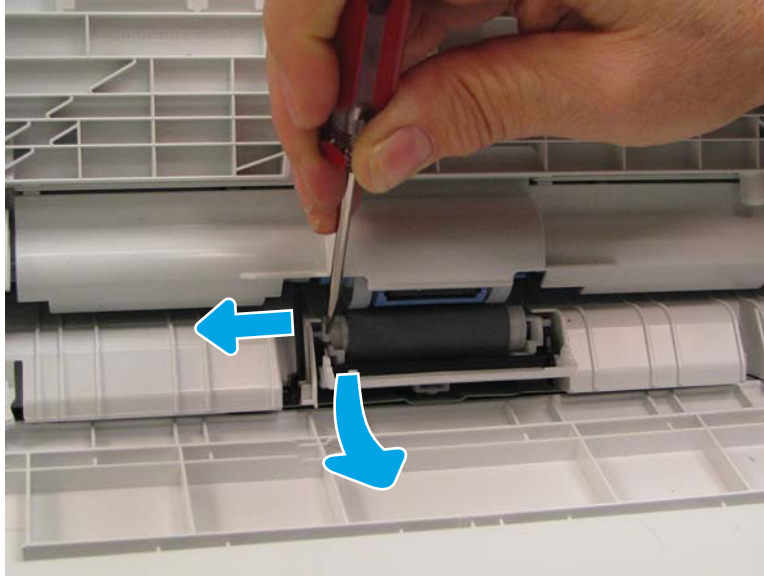



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Formatter

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 3: Remove the hard disk drive \(HDD; M653dh/M681/M682\)](#)
- [Step 4: Remove the embedded MultiMedia Card \(eMMC; M652/M653\)](#)
- [Step 5: Remove the optional dual in-line memory module \(DIMM\)](#)
- [Step 6: Remove the formatter](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the formatter.

M652/M653:

[Click here to view a video of this procedure.](#)

M681/M682:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Formatter part number	
J7Z98-60001	Formatter kit (M652/M653)
J7Z98-67904	Formatter kit (M652/M653; India/China)
J8A10-60001	Formatter kit (M681/M682)
J8A10-67902	Formatter kit (M681/M682; India/China)

**NOTE** When replacing the formatter in an E60155/60165/60175 or E62655/62665/62675 a new TPM module will also need to be replaced. TPM modules cannot be transferred between the formatters.

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-966 Remove the formatter cover

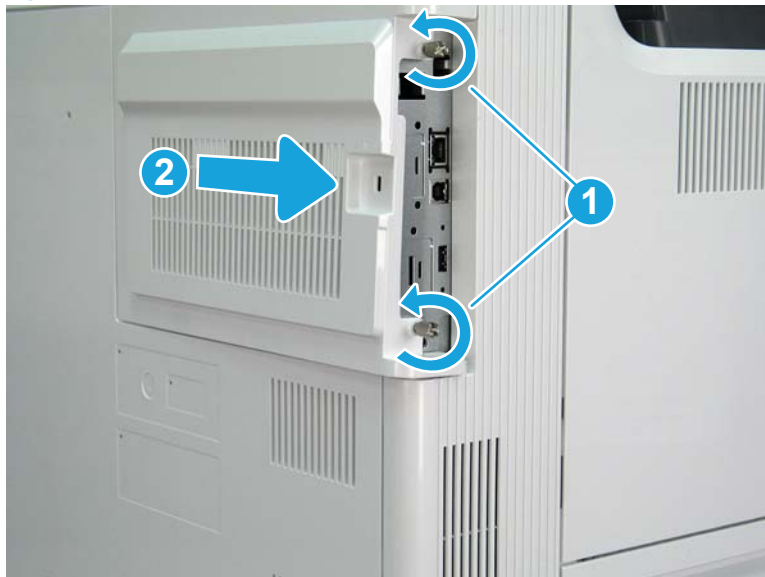

### Step 2: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)


1. Locate the fax PCA on the formatter.

Figure 1-967 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-968 Remove the fax PCA

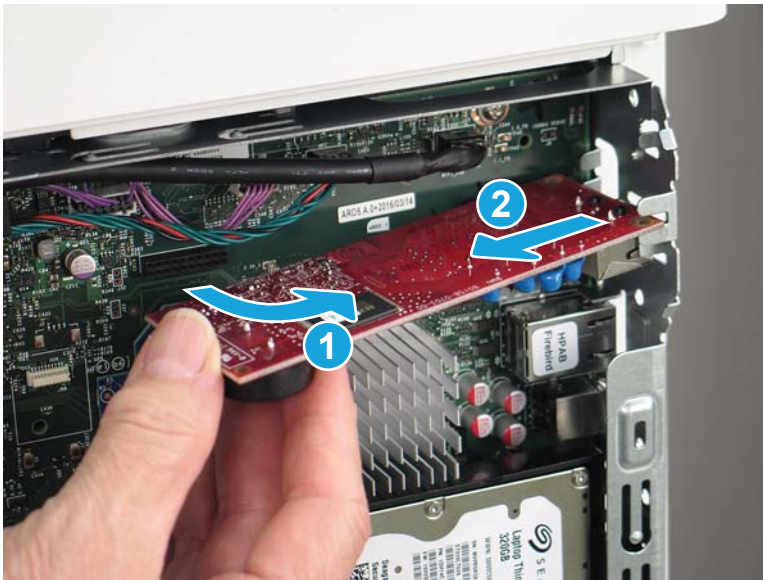

### Step 3: Remove the hard disk drive (HDD; M653dh/M681/M682)

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-969 Release the HDD

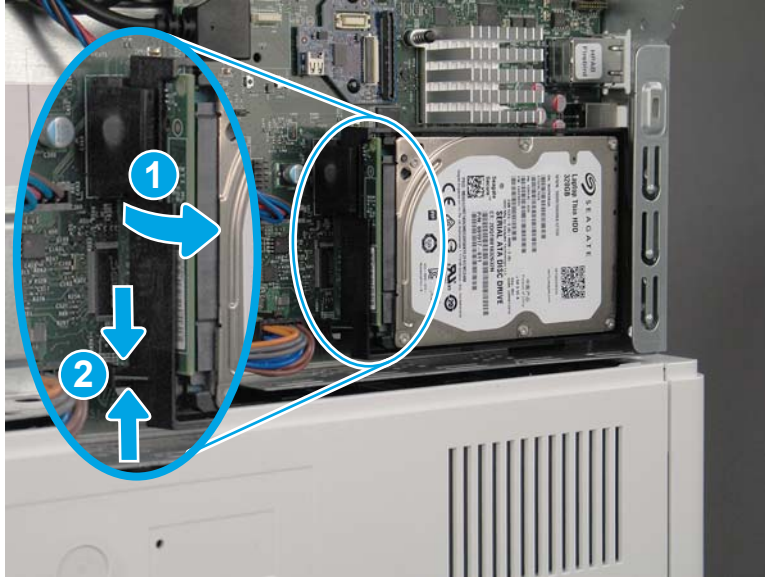

2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-970 Remove the HDD



#### Step 4: Remove the embedded MultiMedia Card (eMMC; M652/M653)

 **CAUTION:**  ESD sensitive part.

- ▲ Locate the eMMC component on the formatter, and then pull it straight off of the formatter to remove it.



Figure 1-971 Remove the eMMC



Step 5: Remove the optional dual in-line memory module (DIMM)


1. Locate the DIMM on the formatter.

Figure 1-972 Locate the DIMM




2. Release two locking arms (callout 1), and then allow the edge of the DIMM to rotate away from the holder (callout 2).

Figure 1-973 Release two locking arms

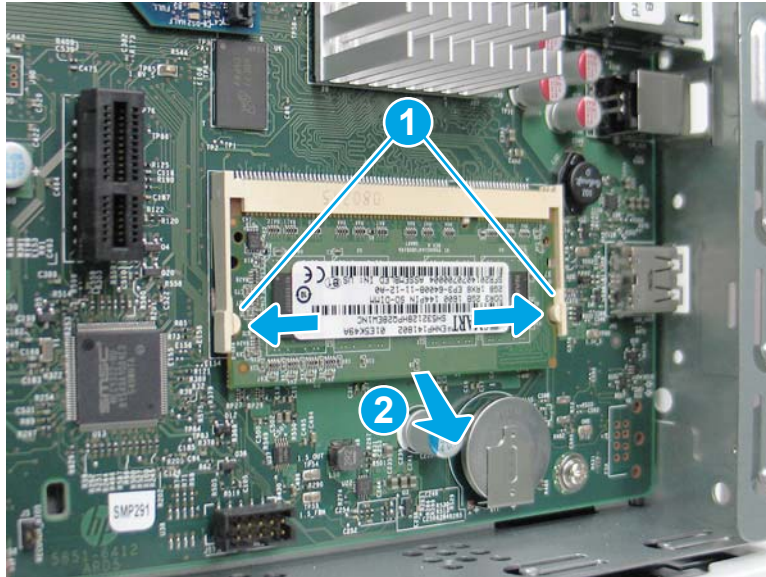


3. Pull the DIMM down and away from the holder to remove it.

Figure 1-974 Remove the DIMM

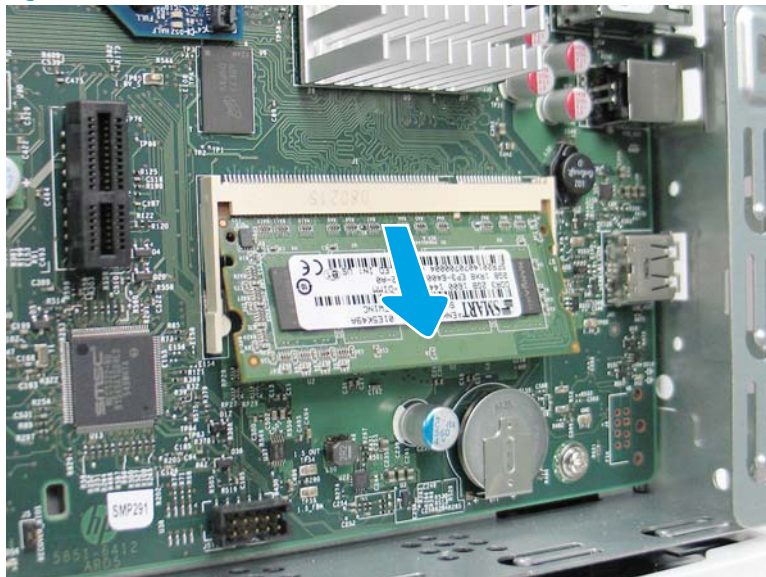


## Step 6: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-975 Remove the formatter

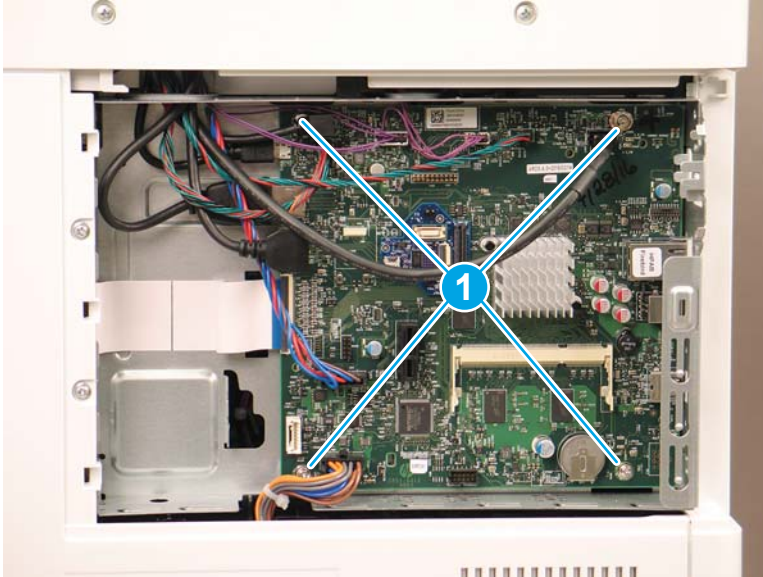



### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.



## Removal and replacement: Pre-exposure PCA assembly (black)

- [Introduction](#)
- [Step 1: Remove the toner cartridges](#)
- [Step 2: Remove the front door](#)
- [Step 3: Remove the front inner covers](#)
- [Step 4: Remove the pre-exposure PCA assembly \(black\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pre-exposure PCA assembly (black).


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Pre-exposure PCA assembly (black) part number	
RM3-7047-000CN	Pre-exposure PCA assembly (black)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the toner cartridges


1. Open the front door.

**Figure 1-976** Open the front door

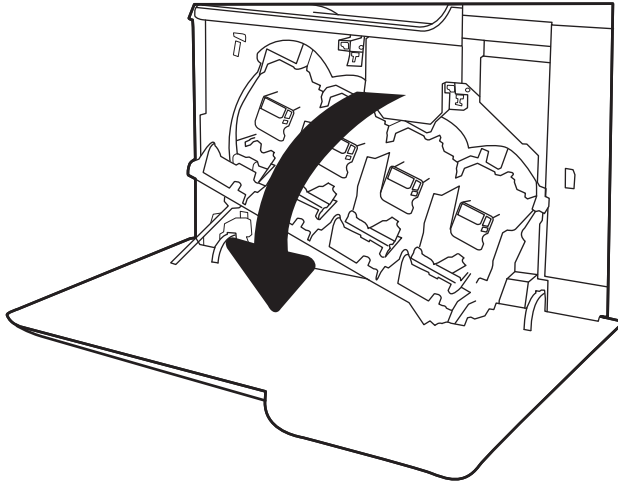


2. Grasp the handle of the used toner cartridge and pull out to remove it.

**Figure 1-977** Remove the toner cartridge

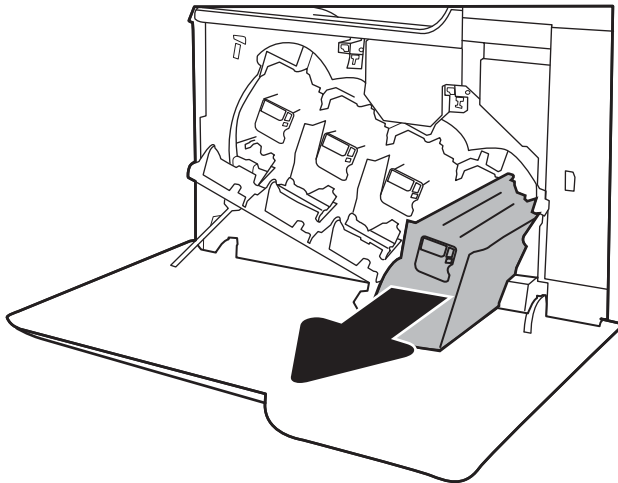

### Step 2: Remove the front door


1. Remove Tray 2.
2. Open the following doors:

 **Reinstallation tip:** The left door must be closed first in order to close the front door.

- Front door
- Left door


3. Hold the black shutter to one side, release one tab (callout 1), and then slide the link arm (callout 2) up to release it from the sheet metal.

Figure 1-978 Release the link arm

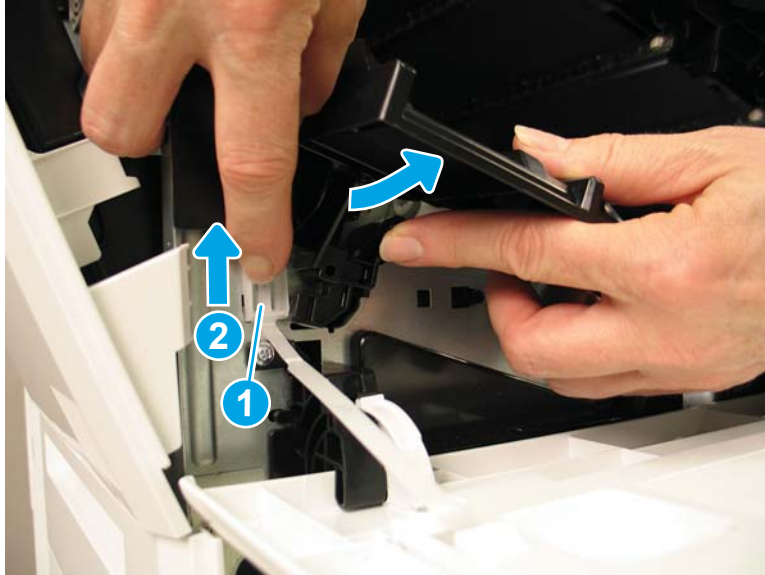

4. Slide the released link arm into the door.


Figure 1-979 Slide the released link arm into the door

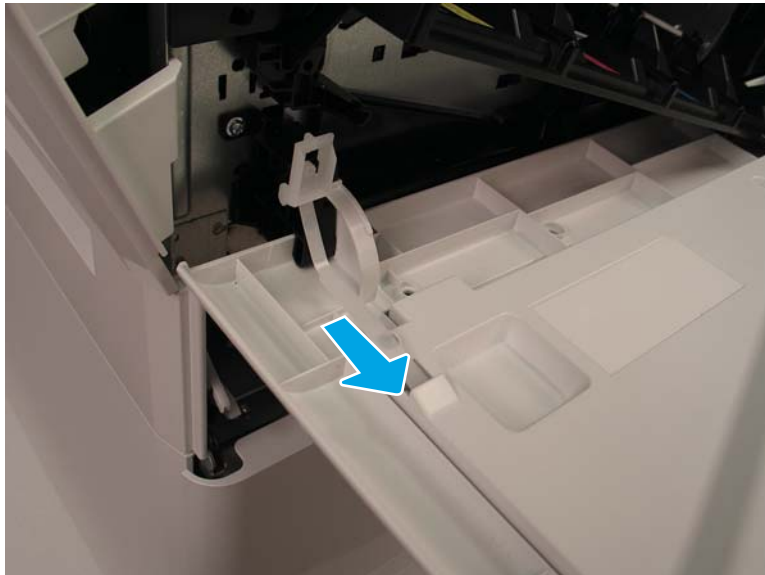

5. Remove four screws (callout 1), release three tabs (callout 2), and then remove the inner cover.

**⚠ CAUTION:** Use care when removing the inner cover. The black cartridge door is spring-loaded and may close abruptly when released from the inner cover.


Figure 1-980 Remove the inner cover

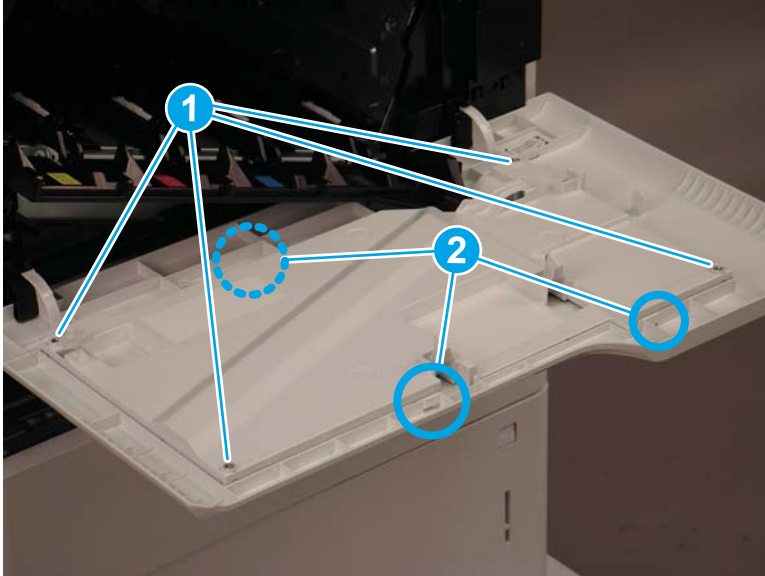

6. Remove one screw (callout 1), and then release one boss (callout 2). Slide the hinge (callout 3) up to release it.


**💡 TIP:** Use a flat-blade screwdriver to release the boss, and then lift upwards on the corner of the door.

Figure 1-981 Release the hinge

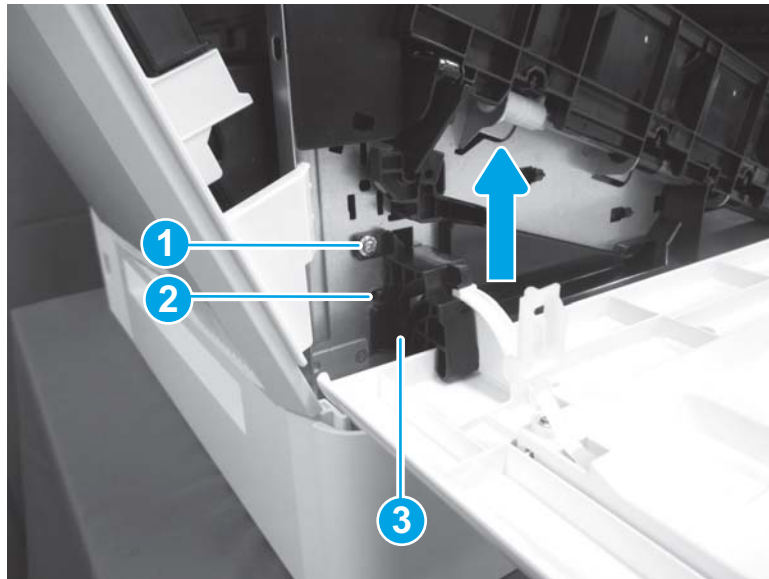

- Slide the front door (callout 1) to the right to remove it.


---

 **NOTE:** Remove the hinge (callout 2) and the link arm (callout 3) from the front door and install them on the replacement front door.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-982** Remove the front door

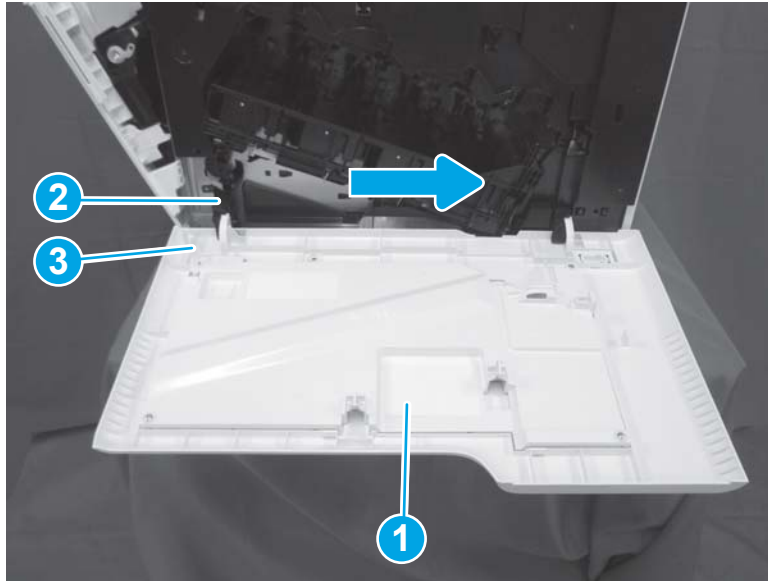

- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Front door


- If the link arm becomes dislodged from the inner cover, reinstall it as shown in the figure below.

**Figure 1-983** Reinstall the link arm




- b. Install the right side of the door first. Position the edge of the door (callout 1) over the black lip (callout 2), and then slide the right hinge into the black arm (callout 3).

Figure 1-984 Install the right hinge

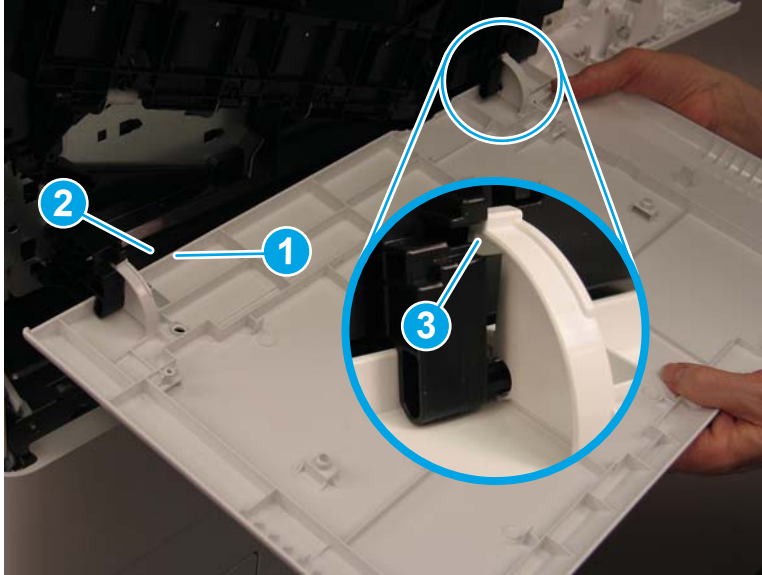

- c. When reinstalling the left hinge, install the tabs (callout 1) on the hinge in the slots (callout 2) in the printer. Press down to lock the hinge in place.

Figure 1-985 Install the left hinge

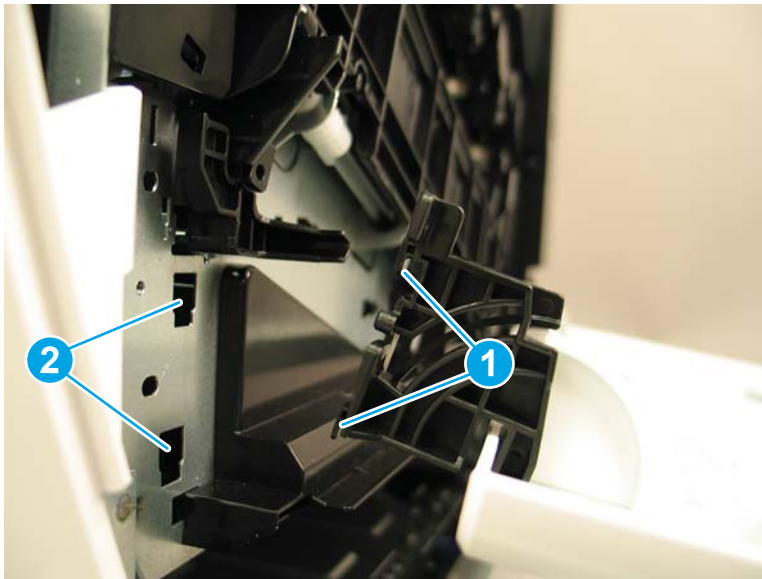


### Step 3: Remove the front inner covers

1. Open the following doors:
  - Right door
  - Left door

2. Release four tabs (callout 1).

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

**Figure 1-986** Release four tabs

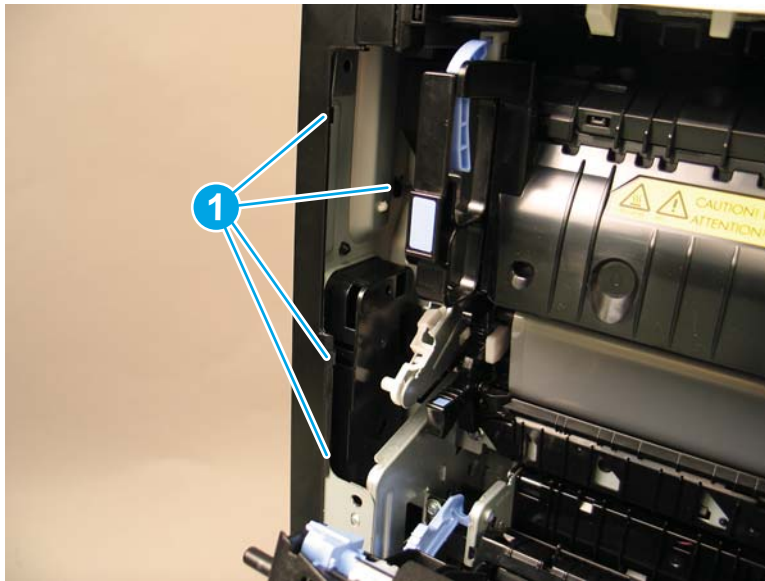


3. Release four bosses (callout 1), and then remove the front right inner cover (callout 2).

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

**TIP:** Push on the back side of the cover for easy release.


**Figure 1-987** Remove the front right inner cover

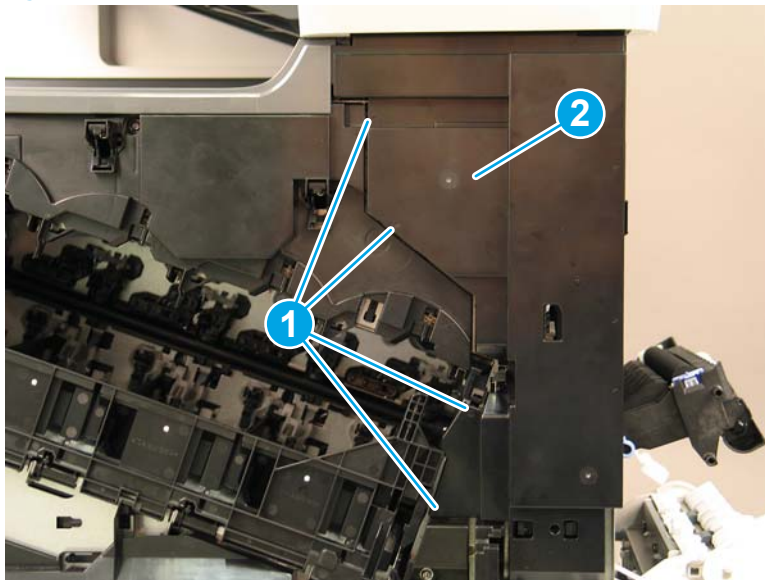



4. Remove one screw (callout 1). Carefully pull the right side of the cover down and away from the printer to release one boss (callout 2). Continue to pull the cover away from the sheet metal to release the second boss (callout 3), and then remove the cover.

**Figure 1-988** Remove the front inner cover

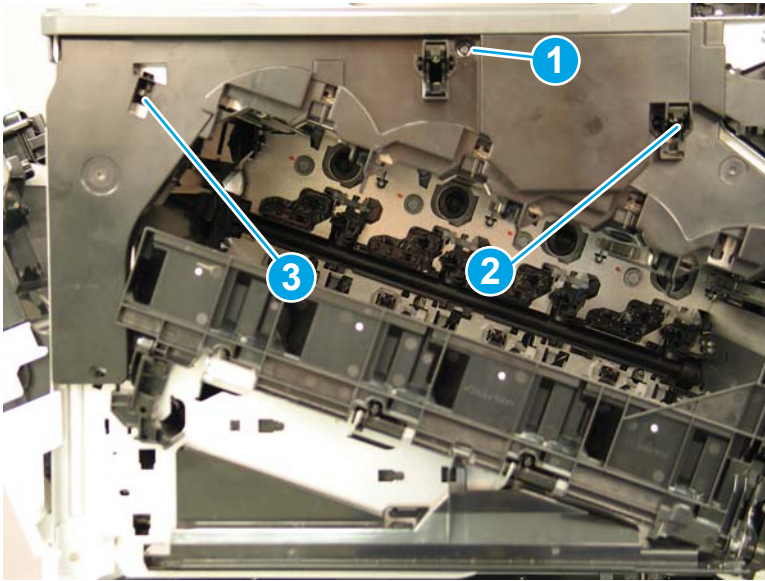

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

#### Special installation instructions: Front inner covers

- ▲ When reinstalling the front right inner cover, position the upper left edges of the cover (callout 1) under the edges of the printer covers (callout 2).


**Figure 1-989** Install the front right inner cover

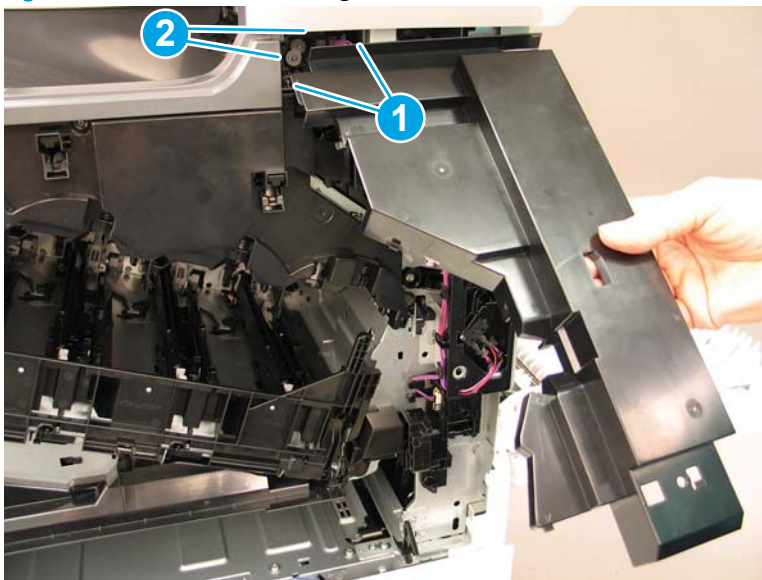




#### Step 4: Remove the pre-exposure PCA assembly (black)

1. Lower the black cartridge shutter (previously connected to the front door) all the way down to keep it out of the way.
2. Disconnect one connector (callout 1), and then remove one screw (callout 2).


 **Reinstallation tip:** When reinstalling the screw, do not press too hard or apply pressure from the back side to avoid bending the sheet metal.

**Figure 1-990** Disconnect one connector and remove one screw

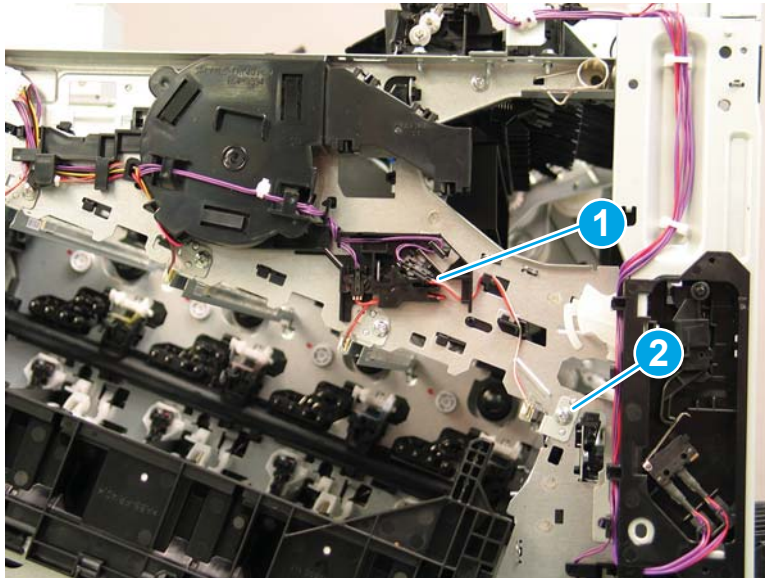

3. Pivot the outer end of the assembly left (callout 1) until it is almost in the center of the printer. Rock the end of the assembly still attached to the printer up and down several times to release the sheet metal tabs. Pull the assembly away from the printer (callout 2) to release it.


**Figure 1-991** Release the pre-exposure PCA assembly

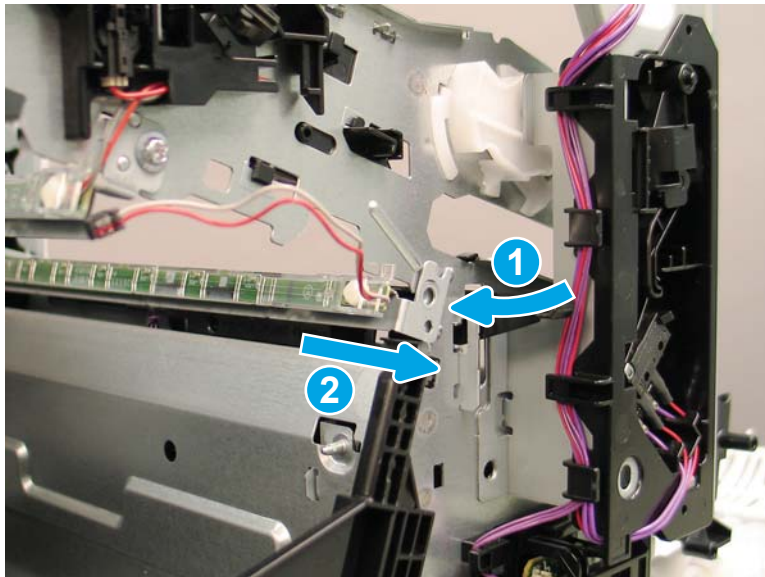

4. Remove the pre-exposure PCA assembly.

 **Reinstallation tip:** When reinstalling the PCA, refer to the figure in Step 1 to verify that the cables are routed correctly.

**Figure 1-992** Remove the pre-exposure PCA assembly

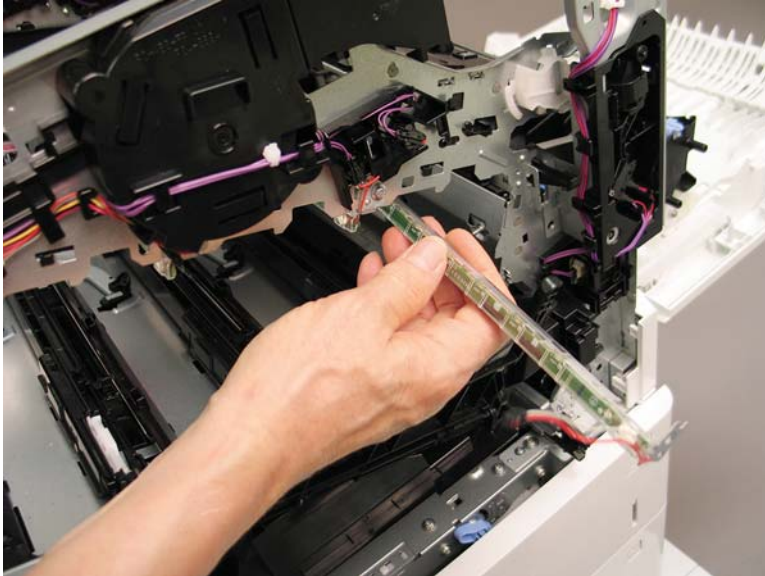


5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Pre-exposure PCA assembly (black)**

- ▲ When reinstalling the pre-exposure PCA assembly, make sure that the metal tabs at the end of the assembly (callout 1) install in the openings in the sheet metal (callout 2).

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

**Figure 1-993** Install the pre-exposure PCA assembly

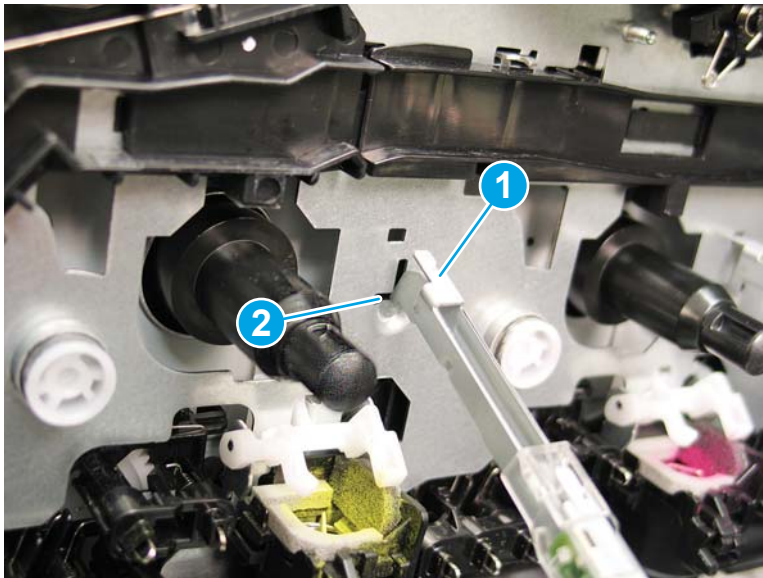

## Step 5: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Pre-exposure PCA assembly (cyan, magenta, or yellow)

- [Introduction](#)
- [Step 1: Remove the toner cartridges](#)
- [Step 2: Remove the front door](#)
- [Step 3: Remove the front inner covers](#)
- [Step 4: Remove the pre-exposure PCA assembly \(cyan, magenta, or yellow\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pre-exposure PCA assembly (cyan, magenta, or yellow).

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



---

**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.



---

**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Pre-exposure PCA assembly (cyan, magenta, or yellow) part number	
RM3-7047-000CN	Pre-exposure PCA assembly (cyan, magenta, or yellow)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


## Post service test

No post service test is available for this assembly.

### Step 1: Remove the toner cartridges


1. Open the front door.

Figure 1-994 Open the front door

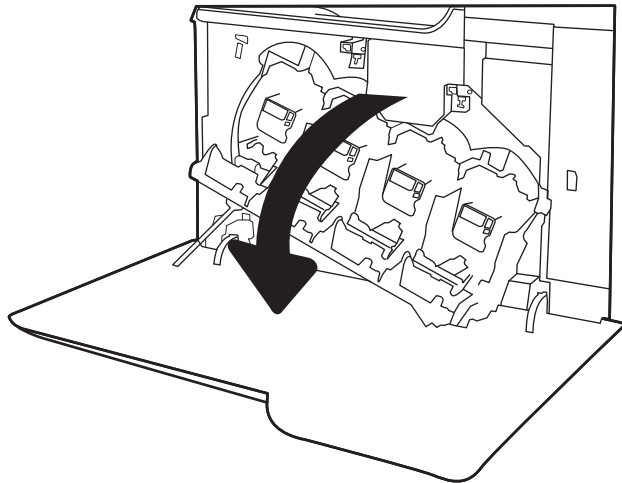


2. Grasp the handle of the used toner cartridge and pull out to remove it.

Figure 1-995 Remove the toner cartridge

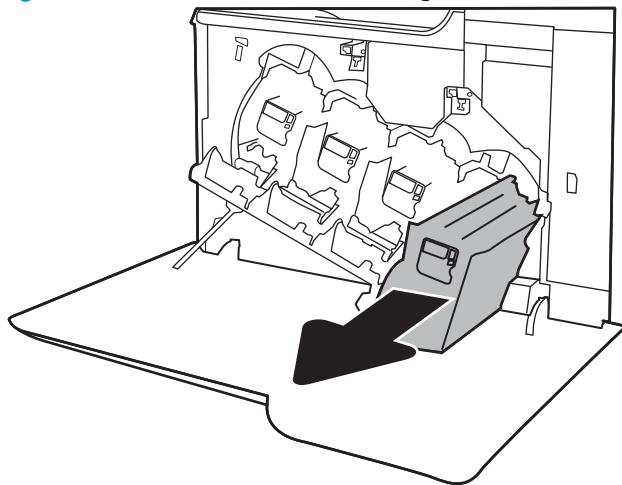

### Step 2: Remove the front door


1. Remove Tray 2.
2. Open the following doors:

 **Reinstallation tip:** The left door must be closed first in order to close the front door.

- Front door
- Left door


3. Hold the black shutter to one side, release one tab (callout 1), and then slide the link arm (callout 2) up to release it from the sheet metal.

Figure 1-996 Release the link arm

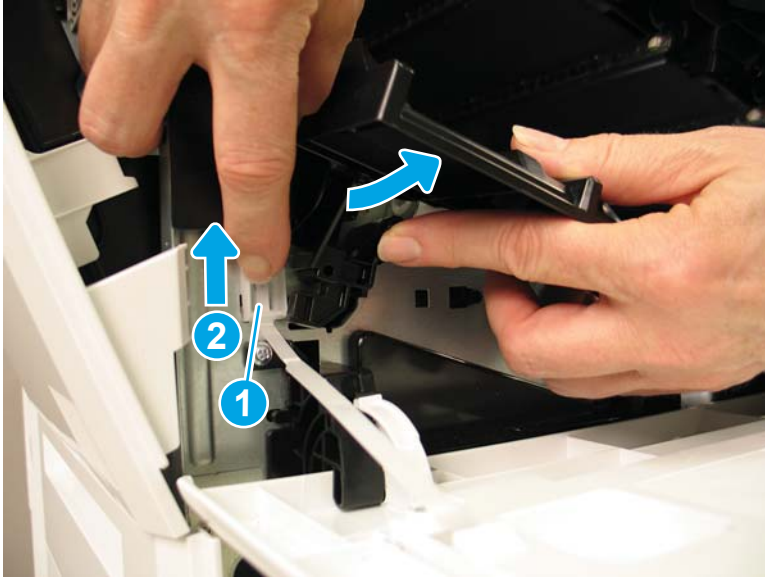

4. Slide the released link arm into the door.

Figure 1-997 Slide the released link arm into the door

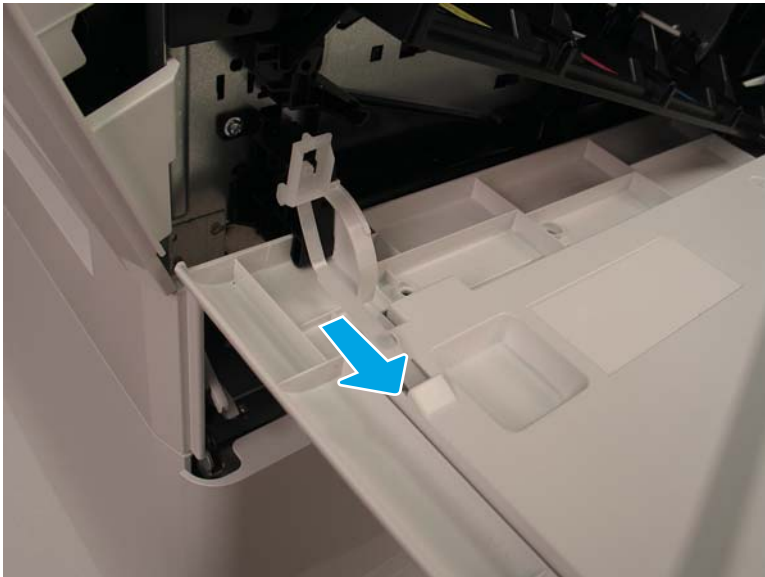




5. Remove four screws (callout 1), release three tabs (callout 2), and then remove the inner cover.

**CAUTION:** Use care when removing the inner cover. The black cartridge door is spring-loaded and may close abruptly when released from the inner cover.


Figure 1-998 Remove the inner cover

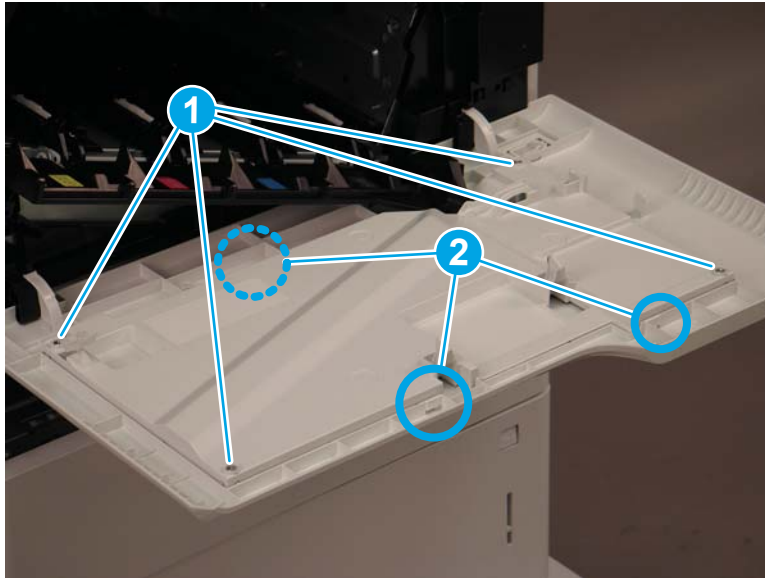


6. Remove one screw (callout 1), and then release one boss (callout 2). Slide the hinge (callout 3) up to release it.


**TIP:** Use a flat-blad screwdriver to release the boss, and then lift upwards on the corner of the door.

Figure 1-999 Release the hinge

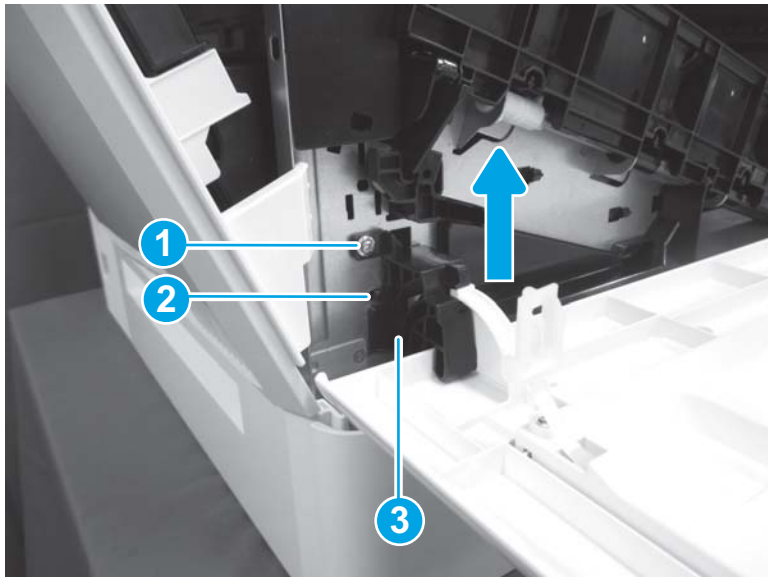


- Slide the front door (callout 1) to the right to remove it.

 **NOTE:** Remove the hinge (callout 2) and the link arm (callout 3) from the front door and install them on the replacement front door.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1000** Remove the front door

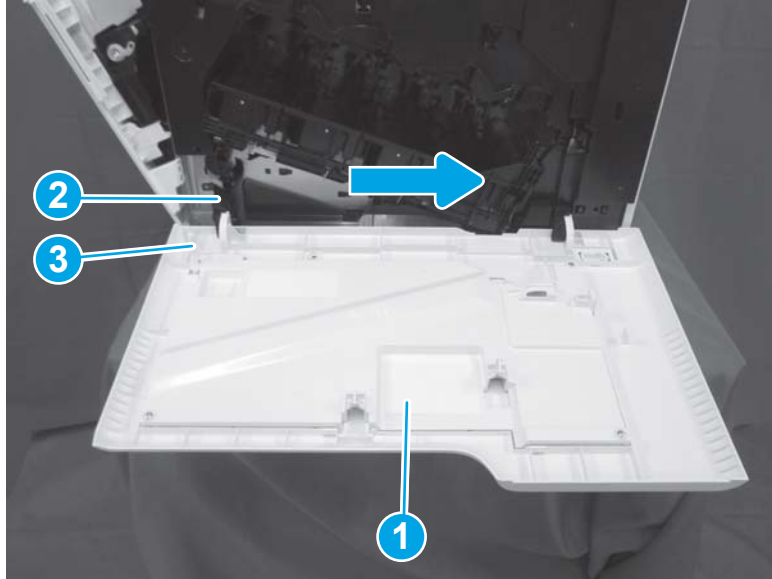

- Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Front door

- If the link arm becomes dislodged from the inner cover, reinstall it as shown in the figure below.


**Figure 1-1001** Reinstall the link arm






- b. Install the right side of the door first. Position the edge of the door (callout 1) over the black lip (callout 2), and then slide the right hinge into the black arm (callout 3).

**Figure 1-1002** Install the right hinge

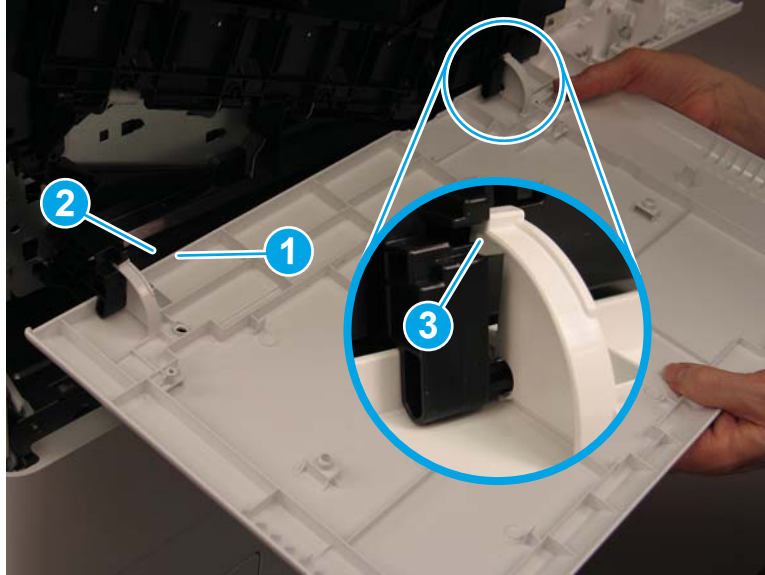

- c. When reinstalling the left hinge, install the tabs (callout 1) on the hinge in the slots (callout 2) in the printer. Press down to lock the hinge in place.

**Figure 1-1003** Install the left hinge

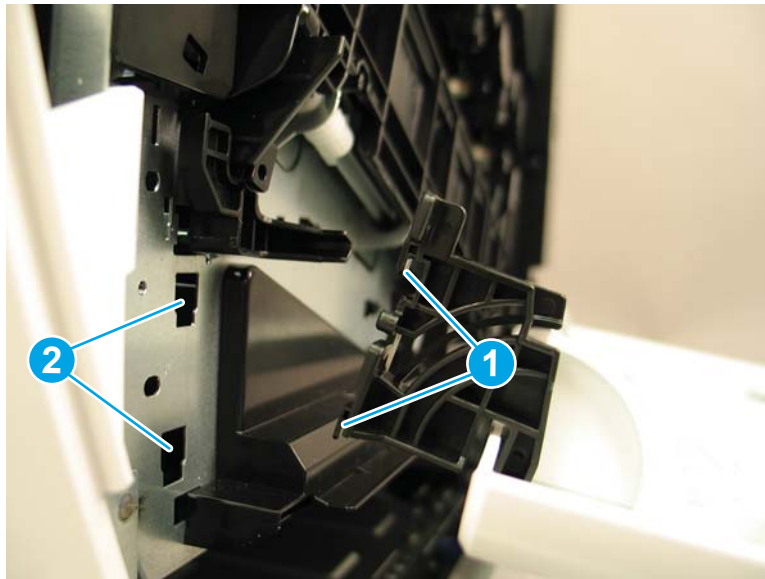

### Step 3: Remove the front inner covers

1. Open the following doors:
  - Right door
  - Left door


2. Release four tabs (callout 1).

---

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

---

**Figure 1-1004** Release four tabs

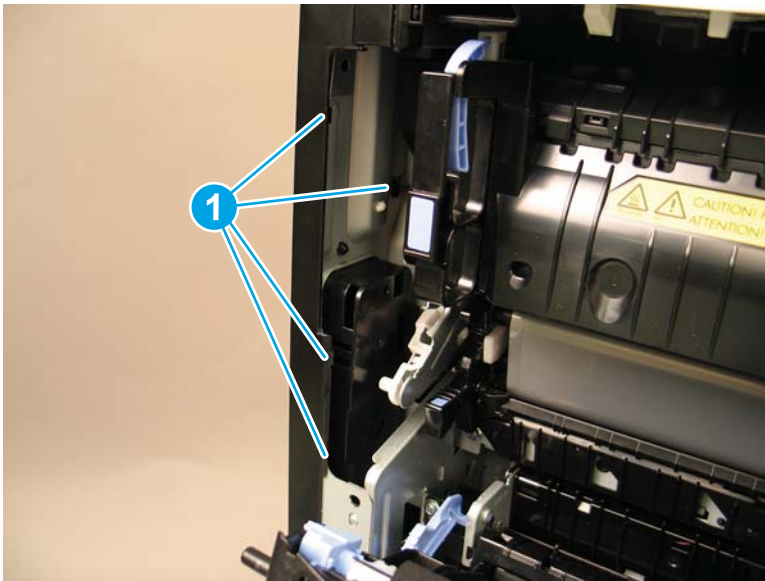

3. Release four bosses (callout 1), and then remove the front right inner cover (callout 2).


---

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

**TIP:** Push on the back side of the cover for easy release.


---

**Figure 1-1005** Remove the front right inner cover

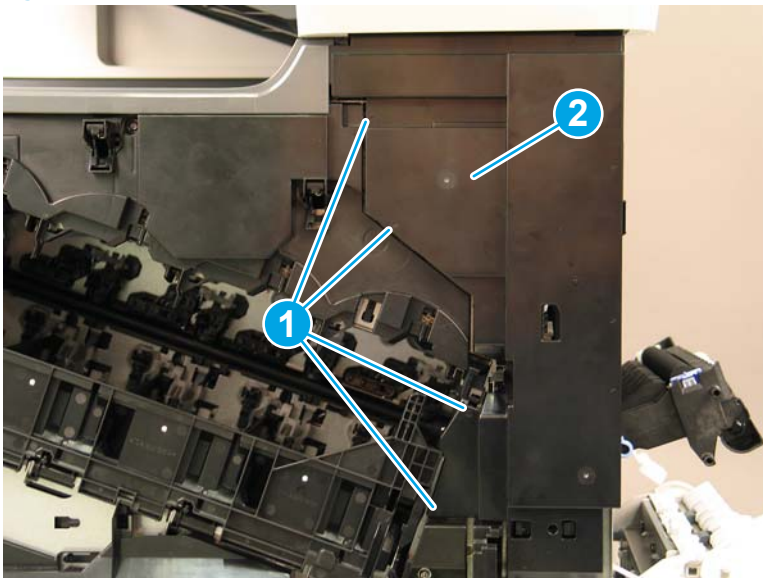


4. Remove one screw (callout 1). Carefully pull the right side of the cover down and away from the printer to release one boss (callout 2). Continue to pull the cover away from the sheet metal to release the second boss (callout 3), and then remove the cover.

Figure 1-1006 Remove the front inner cover

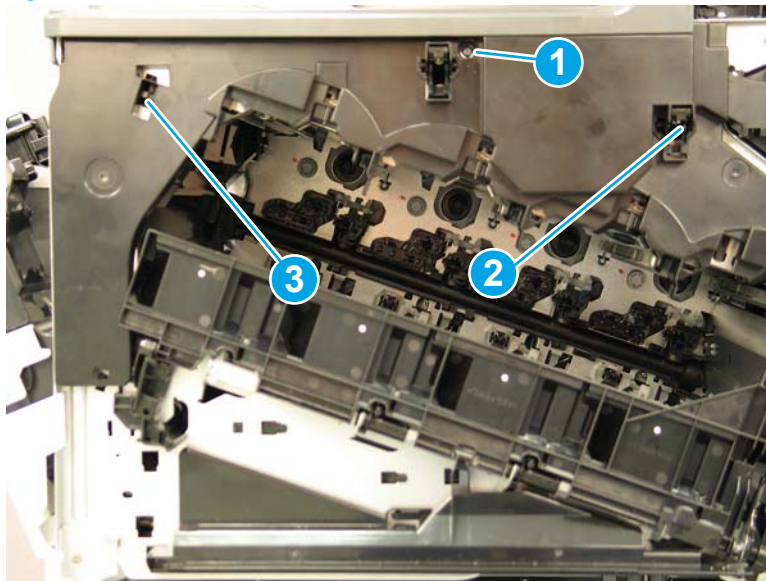

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

#### Special installation instructions: Front inner covers


- ▲ When reinstalling the front right inner cover, position the upper left edges of the cover (callout 1) under the edges of the printer covers (callout 2).

Figure 1-1007 Install the front right inner cover

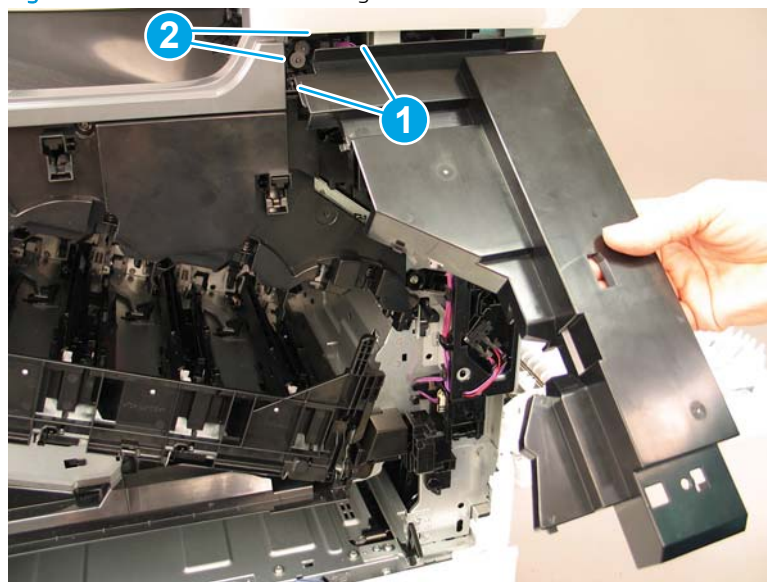


#### Step 4: Remove the pre-exposure PCA assembly (cyan, magenta, or yellow)

1. Lower the black cartridge shutter (previously connected to the front door) all the way down to keep it out of the way.
2. If replacing the **yellow** pre-exposure PCA assembly, disconnect one connector and remove one screw (callout 1). If replacing the **magenta** pre-exposure PCA assembly, disconnect one connector and remove one screw (callout 2). If replacing the **cyan** pre-exposure PCA assembly, disconnect one connector and remove one screw (callout 3).


 **Reinstallation tip:** When reinstalling the screws, do not press too hard or apply pressure from the back side to avoid bending the sheet metal.

**Figure 1-1008** Disconnect one connector and remove one screw

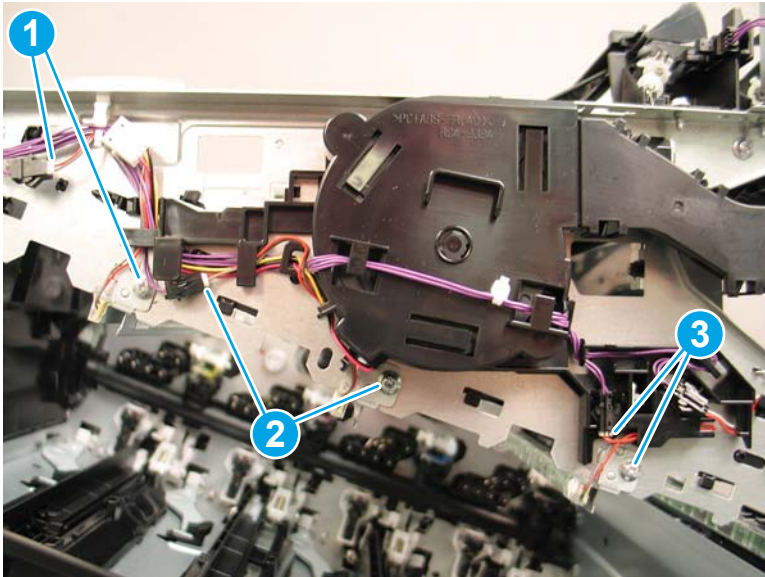


3. Rotate the end of the assembly down (callout 1), and then pull the assembly away from the printer (callout 2) to release it.

**Figure 1-1009** Release the pre-exposure PCA assembly

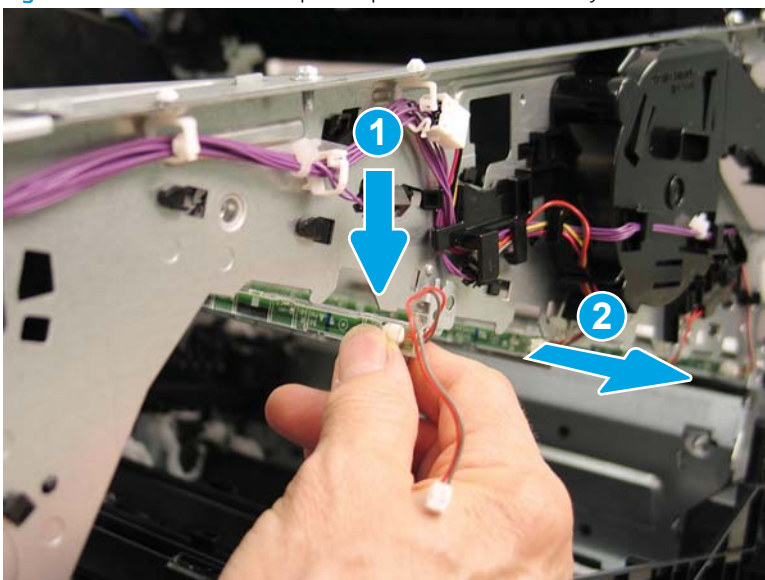




4. Remove the pre-exposure PCA assembly.

 **Reinstallation tip:** When reinstalling the PCA, refer to the figure in Step 1 to verify that the cables are routed correctly.

**Figure 1-1010** Remove the pre-exposure PCA assembly

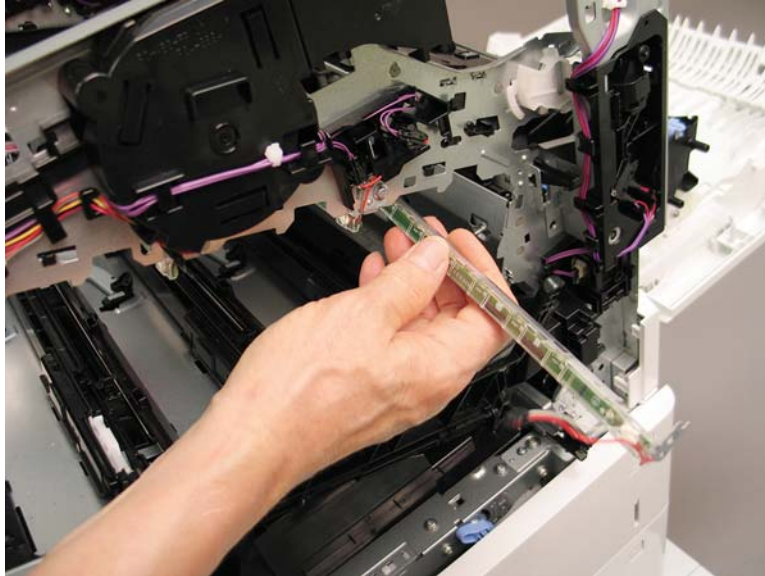


5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Pre-exposure PCA assembly (cyan, magenta, or yellow)**

- ▲ When reinstalling the pre-exposure PCA assembly, make sure that the metal tabs at the end of the assembly (callout 1) install in the openings in the sheet metal (callout 2).

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


**Figure 1-1011** Install the pre-exposure PCA assembly

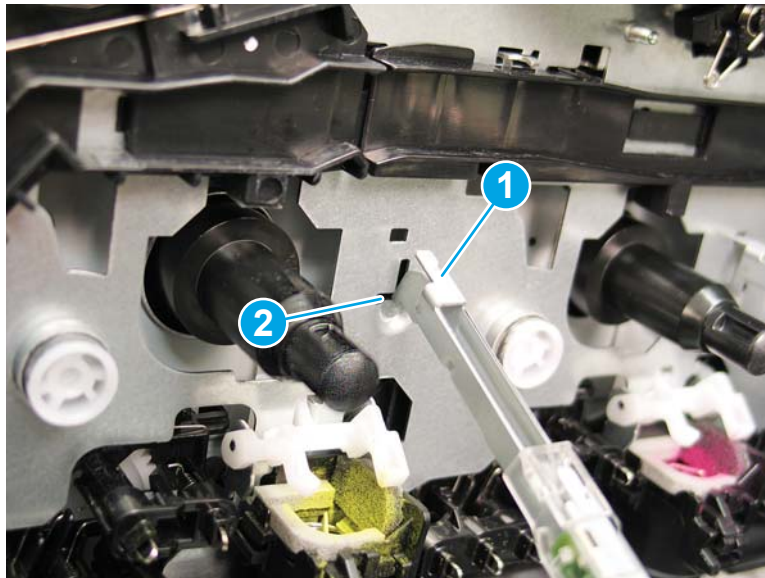

## Step 5: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Power switch PCA

- [Introduction](#)
- [Step 1: Remove the front door](#)
- [Step 2: Remove the power switch PCA](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the power switch PCA.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)


M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Power switch PCA part number	
RK2-0535-000CN	Switch, power PCA

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.


## Step 1: Remove the front door

1. Remove Tray 2.
2. Open the following doors:

 **Reinstallation tip:** The left door must be closed first in order to close the front door.


- Front door
  - Left door
3. Hold the black shutter to one side, release one tab (callout 1), and then slide the link arm (callout 2) up to release it from the sheet metal.

**Figure 1-1012** Release the link arm

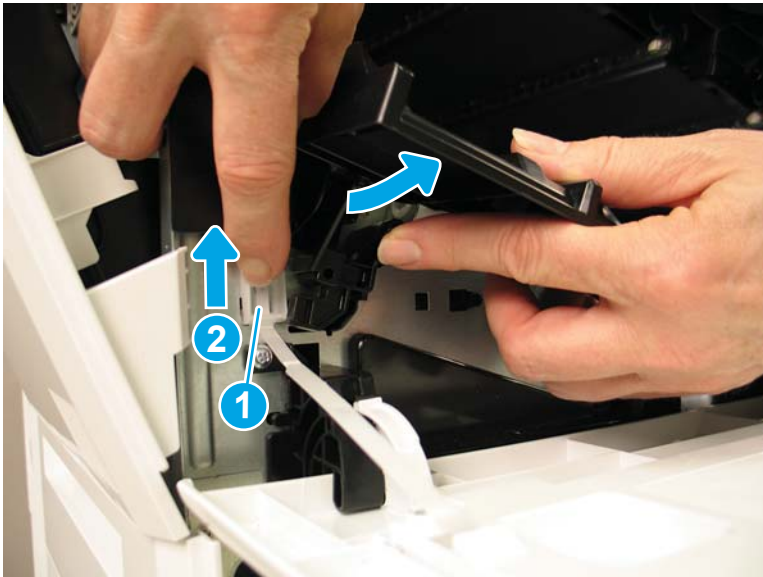

4. Slide the released link arm into the door.

**Figure 1-1013** Slide the released link arm into the door

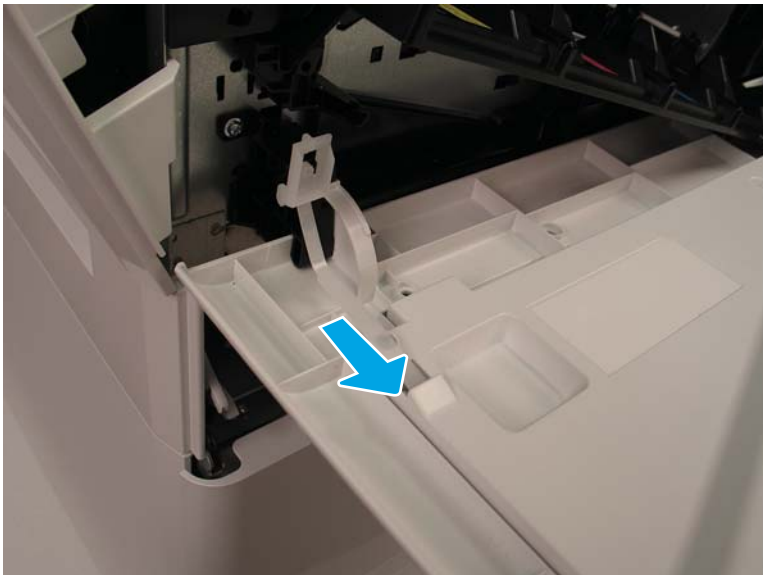




5. Remove four screws (callout 1), release three tabs (callout 2), and then remove the inner cover.

**CAUTION:** Use care when removing the inner cover. The black cartridge door is spring-loaded and may close abruptly when released from the inner cover.


Figure 1-1014 Remove the inner cover

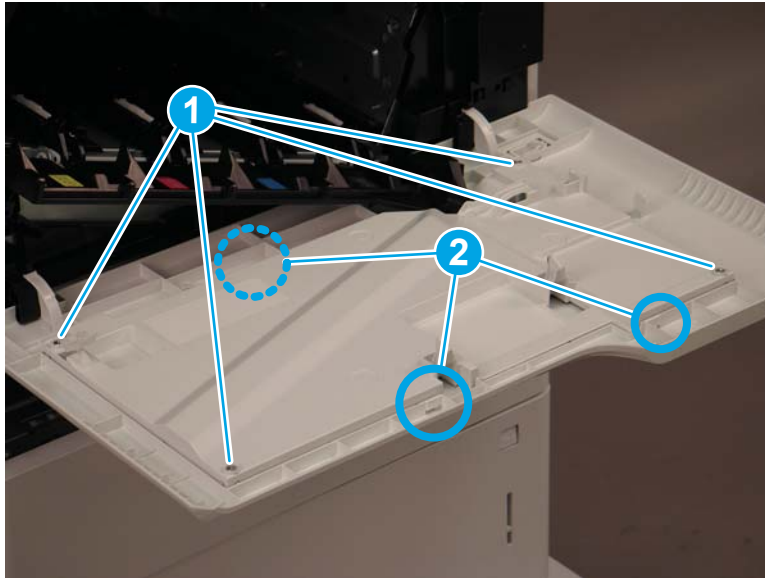


6. Remove one screw (callout 1), and then release one boss (callout 2). Slide the hinge (callout 3) up to release it.


**TIP:** Use a flat-blad screwdriver to release the boss, and then lift upwards on the corner of the door.

Figure 1-1015 Release the hinge

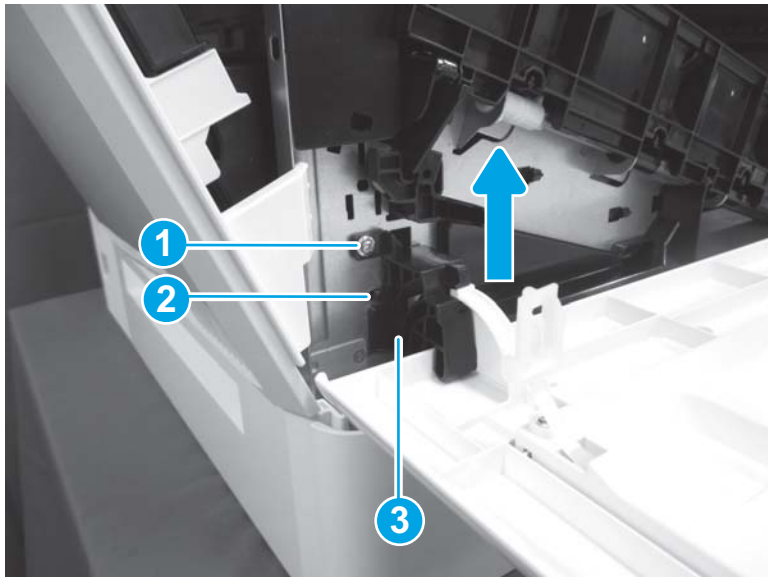


7. Slide the front door (callout 1) to the right to remove it.

 **NOTE:** Remove the hinge (callout 2) and the link arm (callout 3) from the front door and install them on the replacement front door.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1016** Remove the front door

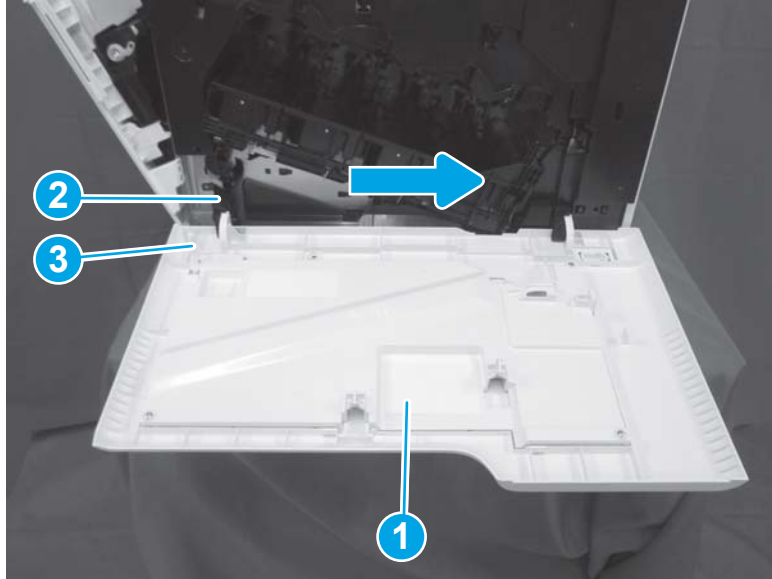

8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Front door


- a. If the link arm becomes dislodged from the inner cover, reinstall it as shown in the figure below.

**Figure 1-1017** Reinstall the link arm




- b. Install the right side of the door first. Position the edge of the door (callout 1) over the black lip (callout 2), and then slide the right hinge into the black arm (callout 3).

**Figure 1-1018** Install the right hinge

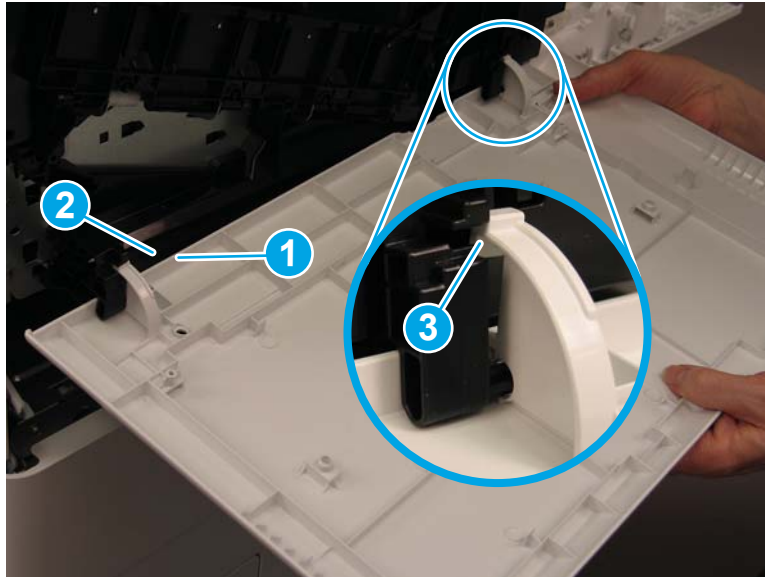

- c. When reinstalling the left hinge, install the tabs (callout 1) on the hinge in the slots (callout 2) in the printer. Press down to lock the hinge in place.


**Figure 1-1019** Install the left hinge

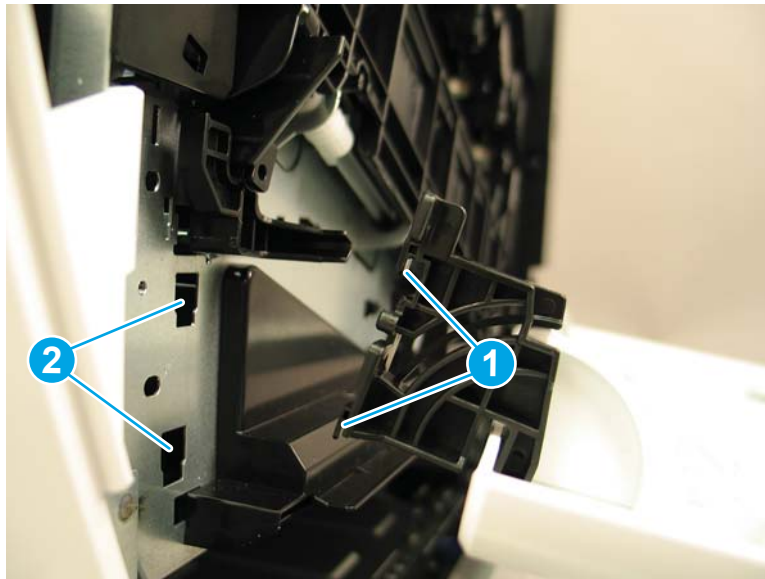

## Step 2: Remove the power switch PCA

---

 **NOTE:** HP recommends replacing both switches at the same time.

 **NOTE:** The front inner cover is missing in some of the figure below. However, it is not necessary to remove this cover to remove the switch.

---


1. Open the following doors:

- Right door
- Left door

2. Release four tabs (callout 1).

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

**Figure 1-1020** Release four tabs

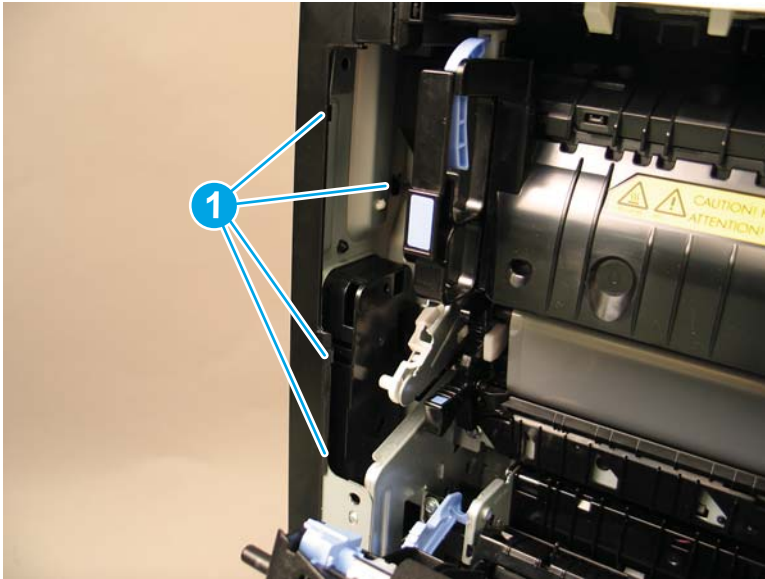


3. Release four bosses (callout 1), and then remove the front right inner cover (callout 2).

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.


**TIP:** Push on the back side of the cover for easy release.

**Figure 1-1021** Remove the front right inner cover

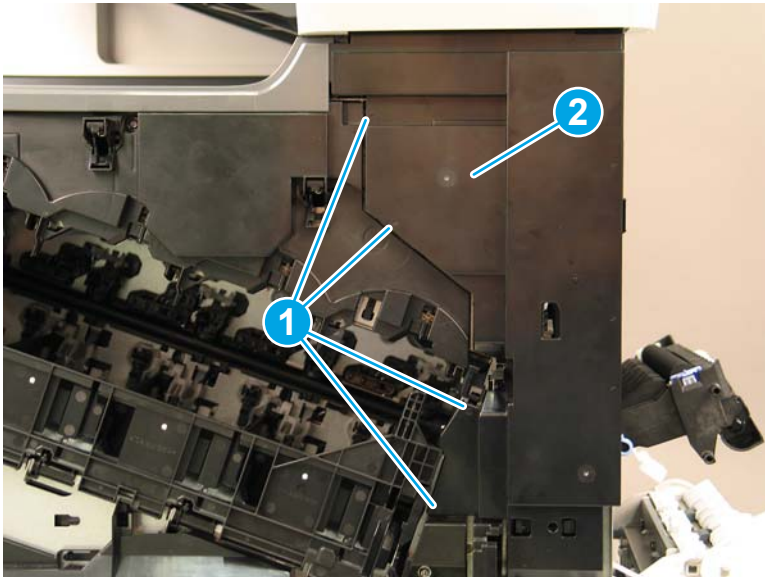


4. Release two cables (callout 1) from two hooks (callout 2).

Figure 1-1022 Release two cables

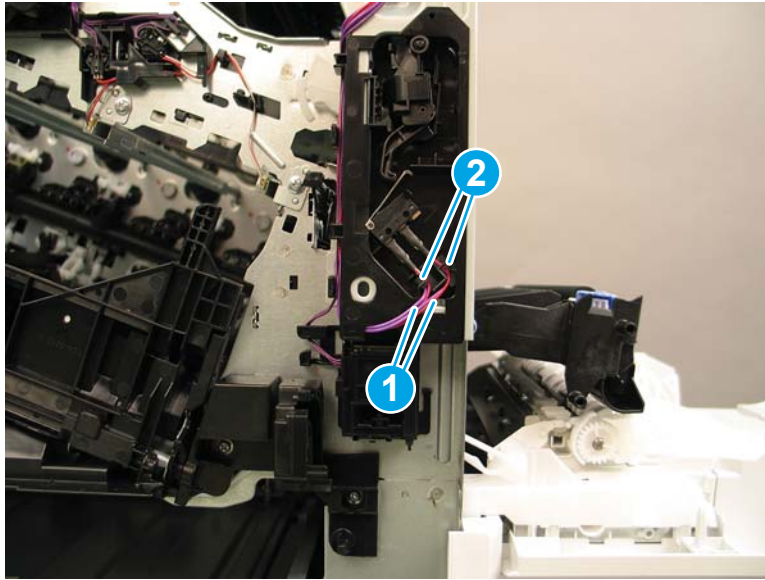


5. Release one tab (callout 1) and raise one hook (callout 2) to release the front switch.

Figure 1-1023 Release the front switch

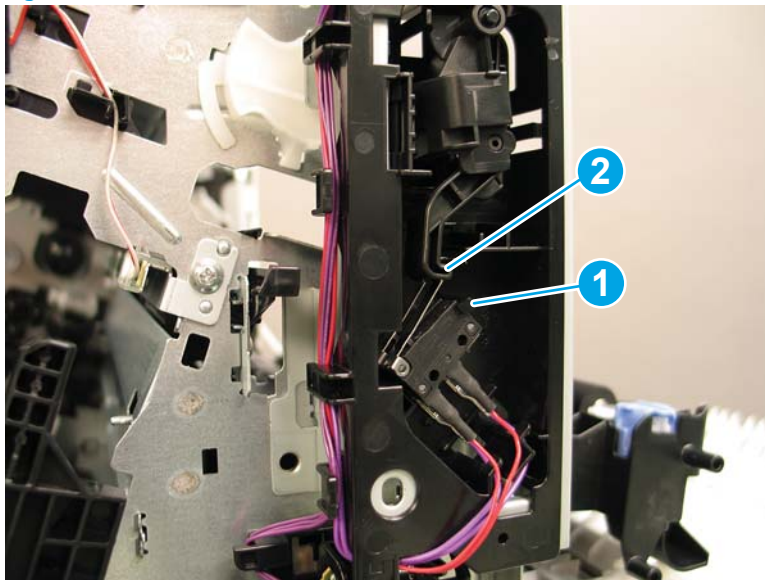




6. Remove the front switch, and then disconnect two connectors.


 **Reinstallation tip:** Make sure that the red cables are reattached to the front switch.

**Figure 1-1024** Disconnect two connectors

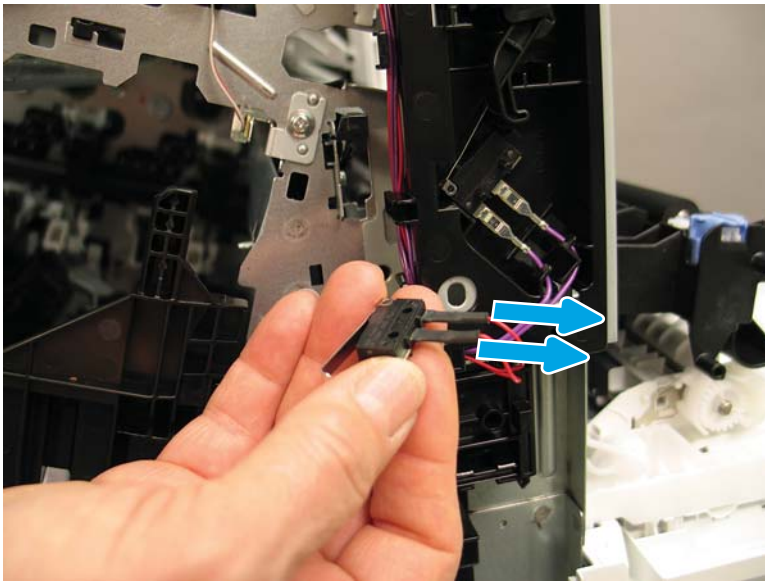


7. To remove the rear switch, release two cables (callout 1) from two hooks (callout 2).

**Figure 1-1025** Release two cables

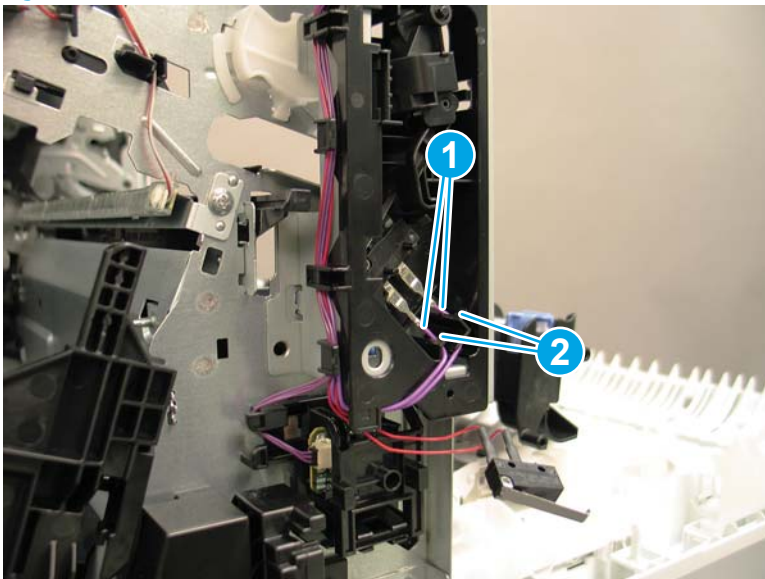

8. Release one tab (callout 1) and raise one hook (callout 2) to release the rear switch.


Figure 1-1026 Release the rear switch

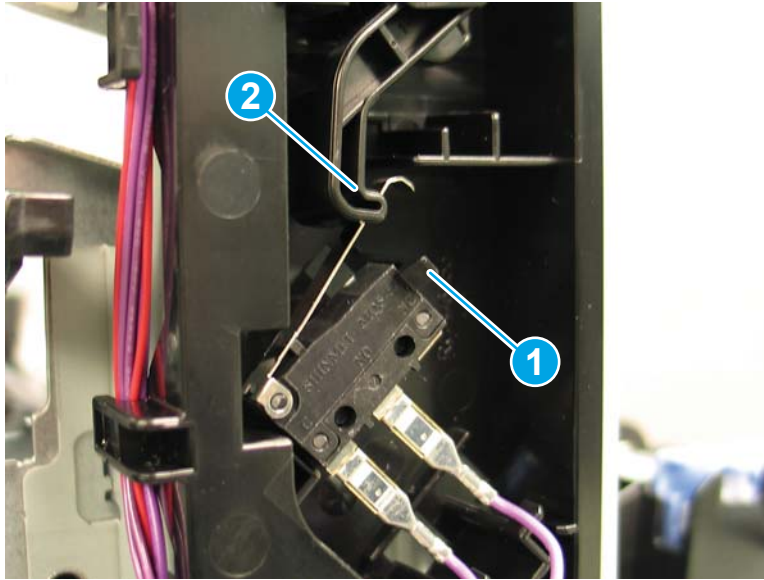

9. Remove the rear switch, and then disconnect two connectors.

 **Reinstallation tip:** Make sure that the purple cables are reattached to the rear switch.

Figure 1-1027 Disconnect two connectors

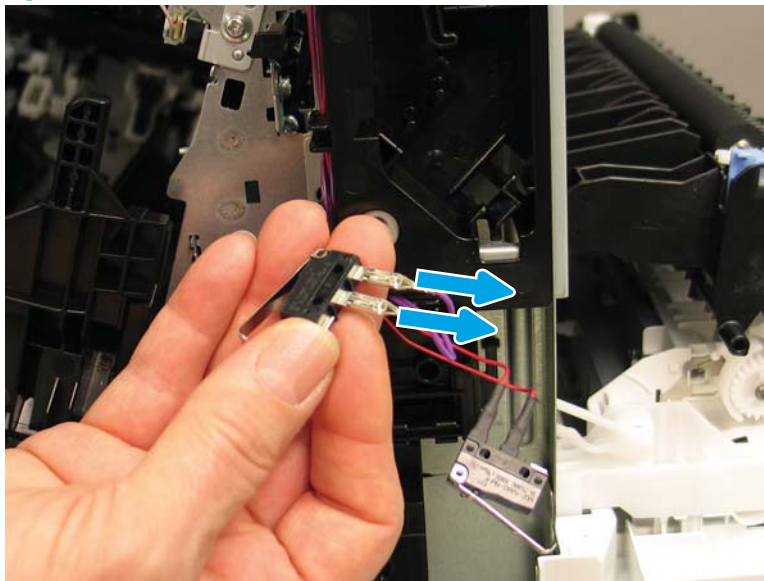


10. Reverse the removal steps to install the assemblies. Also use the following special installation instructions.

**Special installation instructions: Switch**

- a. When reinstalling a switch, make sure that the silver hook on the switch (callout 1) is installed behind the plastic hook (callout 2) in the printer.


Figure 1-1028 Install the switch

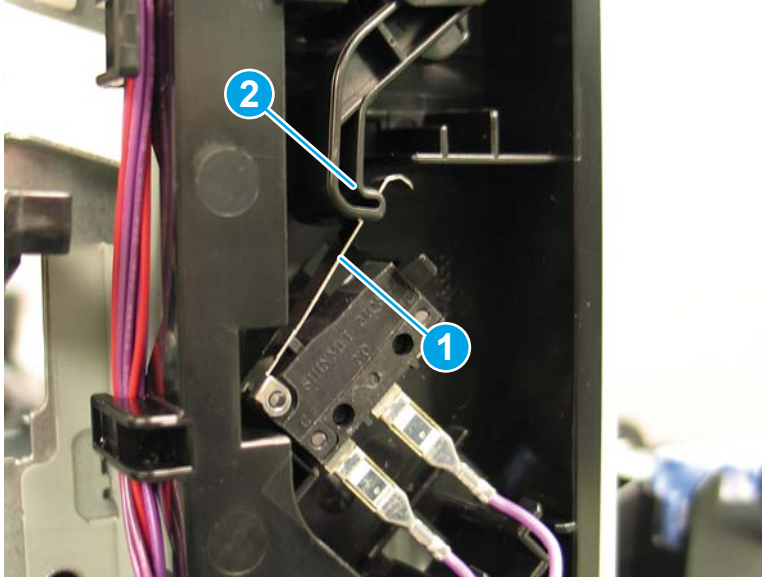

- b. When reinstalling the front right inner cover, position the upper left edges of the cover (callout 1) under the edges of the printer covers (callout 2).

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-1029 Install the front right inner cover

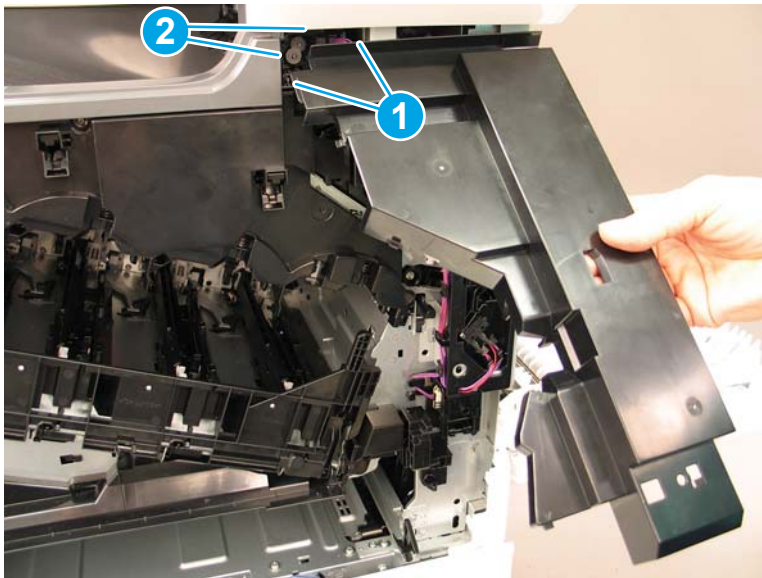


### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left upper front and left upper rear fans

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 6: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the output bin](#)
- [Step 16: Remove the formatter cover](#)
- [Step 17: Remove the left door](#)
- [Step 18: Remove the left rear cover](#)
- [Step 19: Remove the left upper front and left upper rear fans](#)
- [Step 20: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left upper front and left upper rear fans.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)




**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Left upper front and left upper rear fans part numbers	
RK2-7951-000CN	Left upper front fan
RK2-7949-000CN	Left upper rear fan

---

## Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


## Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the toner collection unit (TCU)

---


 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

---


1. Open the front door.

Figure 1-1030 Open the front door

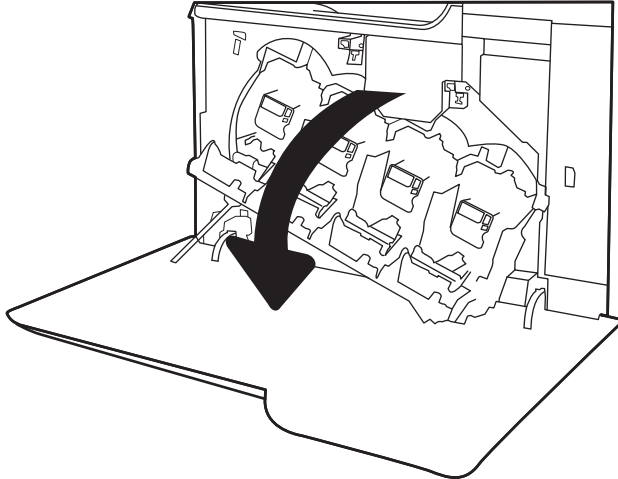


2. Open the left door.

Figure 1-1031 Open the left door

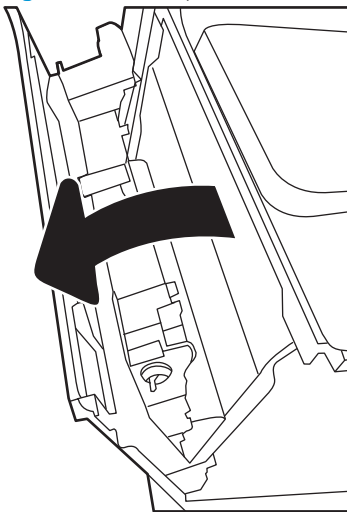

3. Grasp the top of the TCU and remove it from the printer.

Figure 1-1032 Remove the TCU

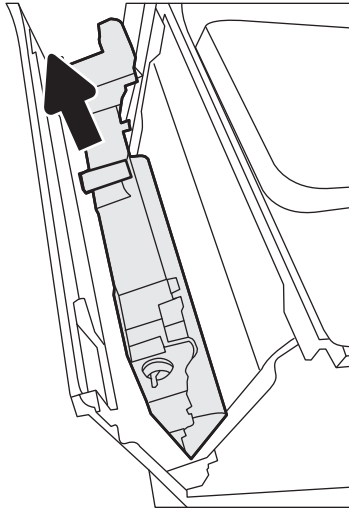

#### Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1033 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1034 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1035 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1036 Disconnect the keyboard flat cable

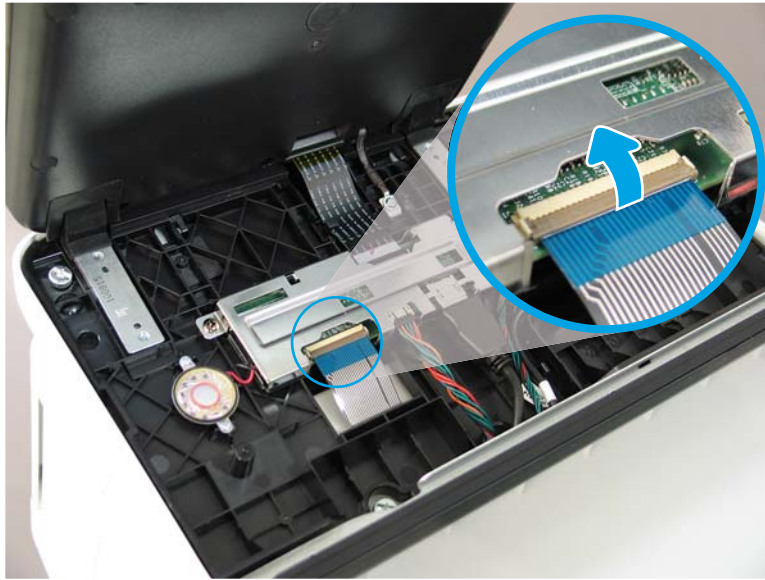

5. Slide the keyboard tray out until it stops.

Figure 1-1037 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1038 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1039 Remove the keyboard



### Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).



Figure 1-1040 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1041 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1042 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-1043 Disconnect the keyboard flat cable (keyboard models only)

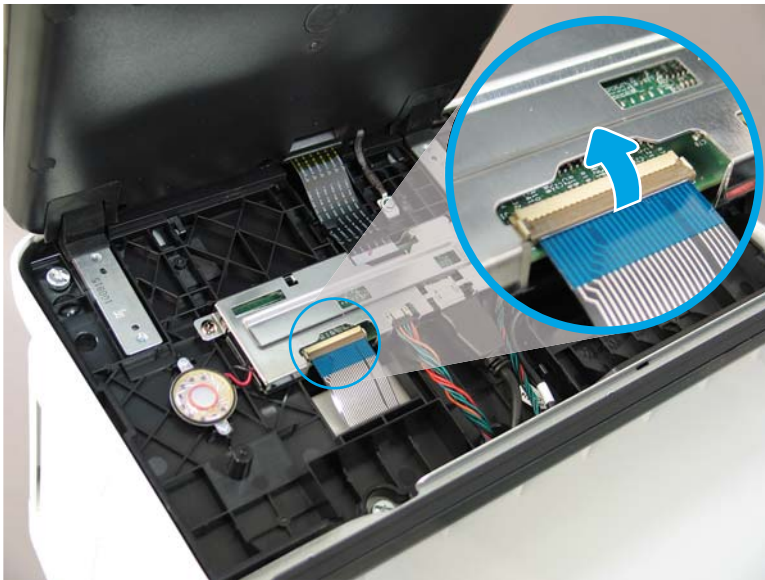


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-1044 Disconnect connectors

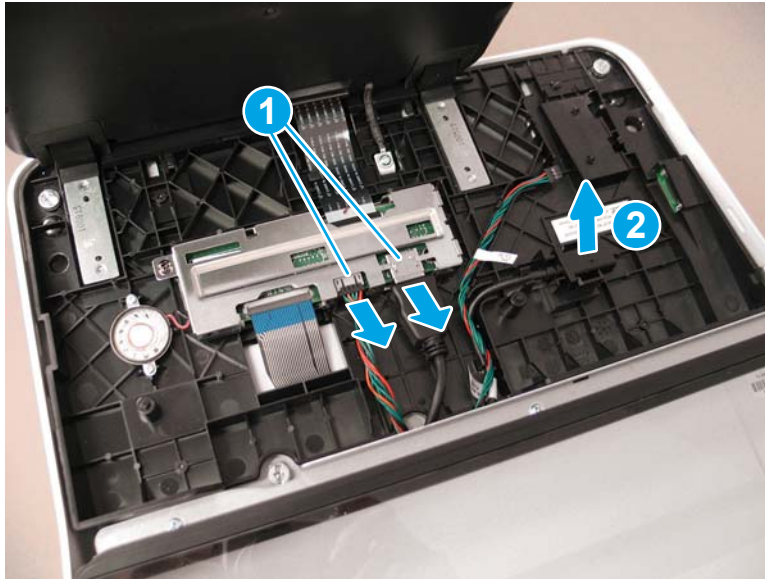


6. Remove three thumbscrews (callout 1).

Figure 1-1045 Remove three thumbscrews

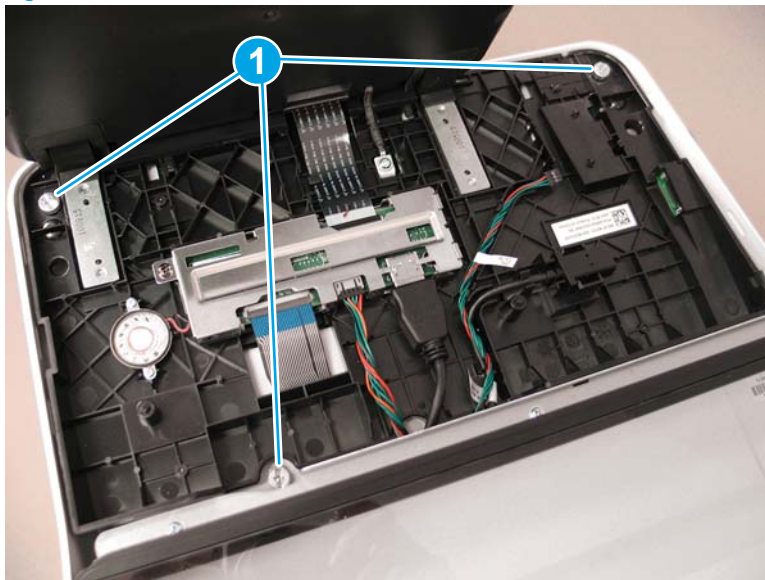

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1046 Remove the control panel

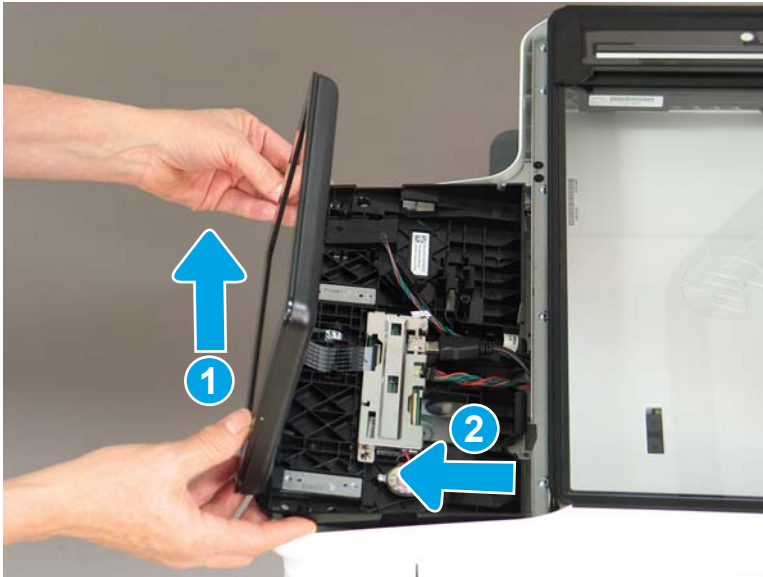


#### Step 4: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1047 Remove the SCB cover

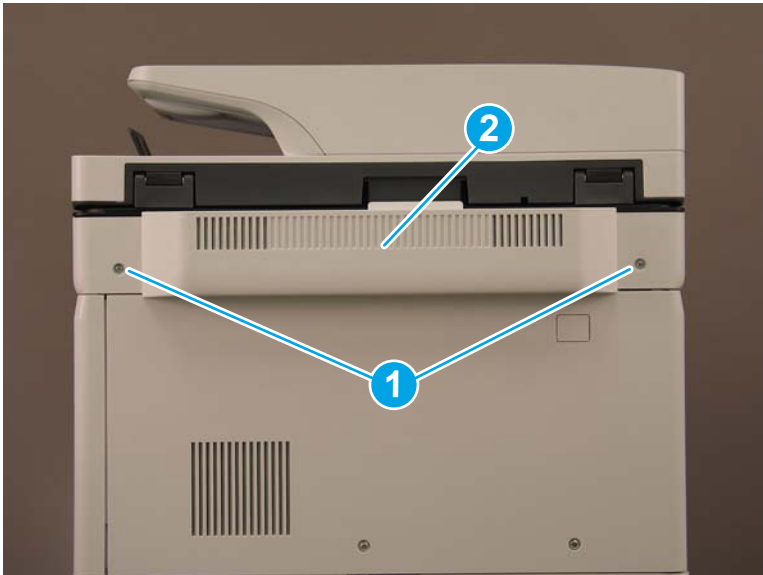


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-1048 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-1049 Remove the stapler/stacker rear cover

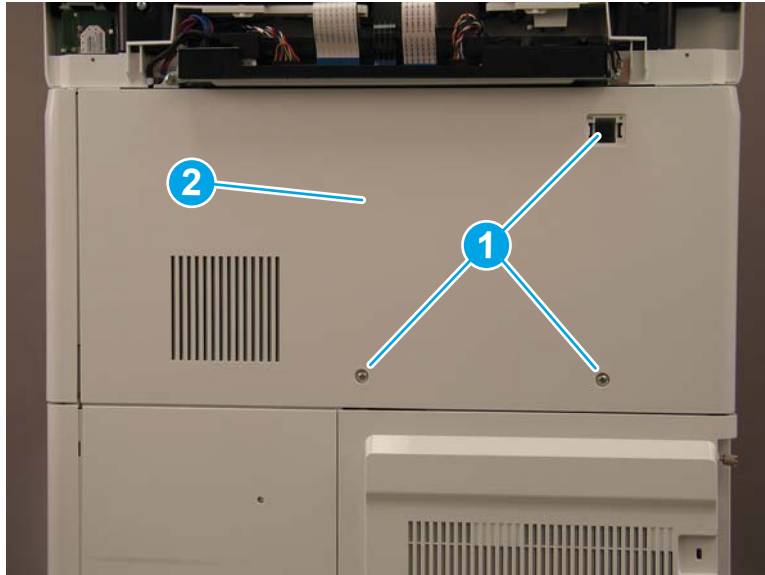


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-1050 Remove the upper rear cover

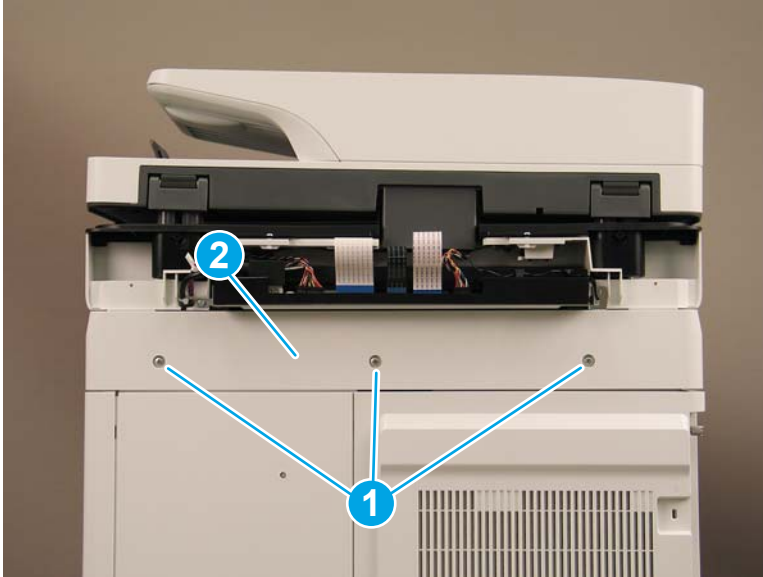

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-1051 Remove the formatter cover

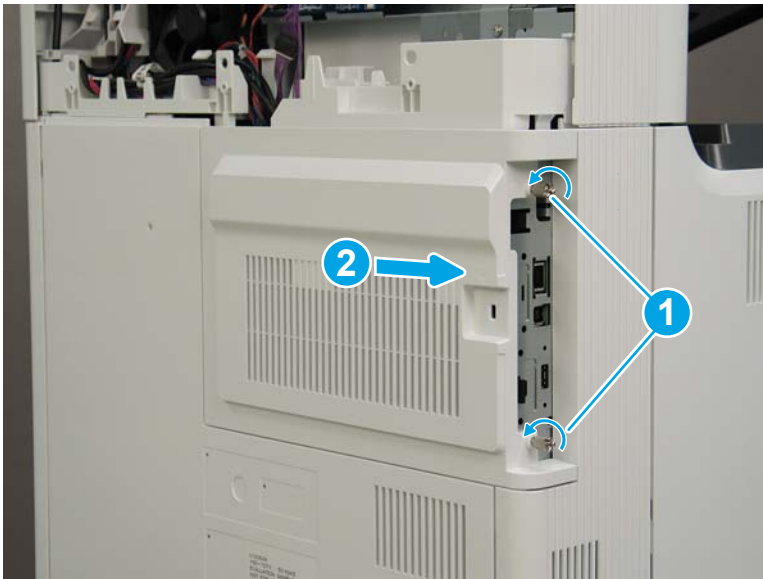




5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-1052 Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1053 Disconnect two connectors

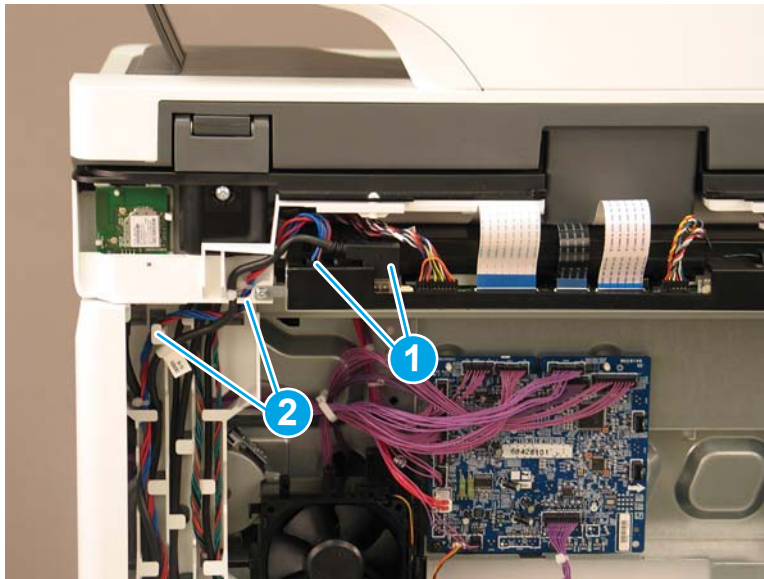


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1054 Disconnect five connectors



8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.


Figure 1-1055 Disconnect the wireless connector

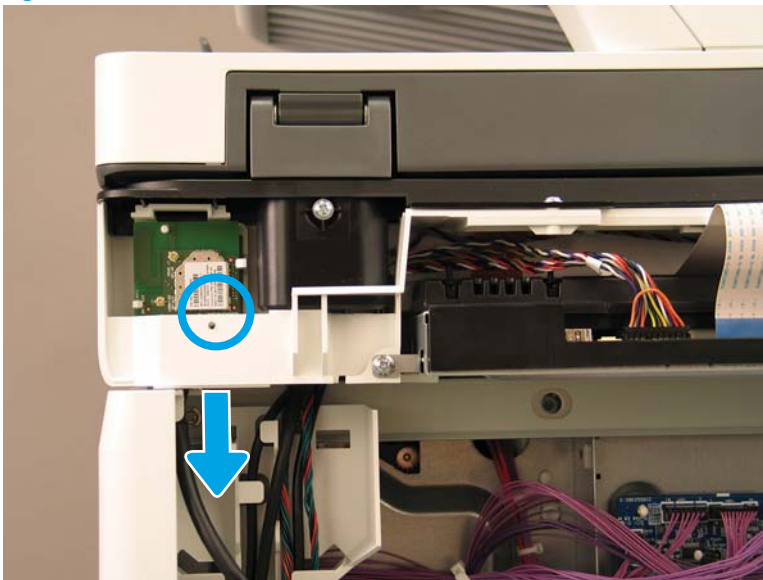




9. Release all of the cables from the cable guides (callout 1).

Figure 1-1056 Release the cables

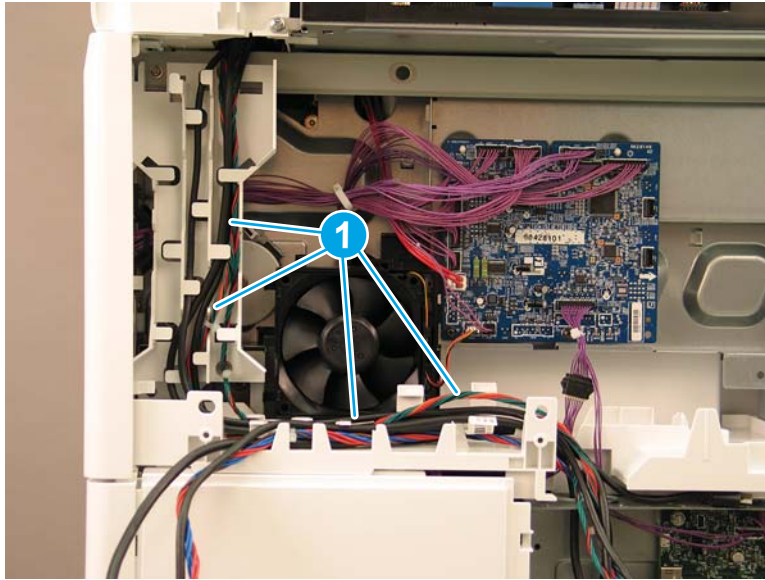


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1057 Remove four screws

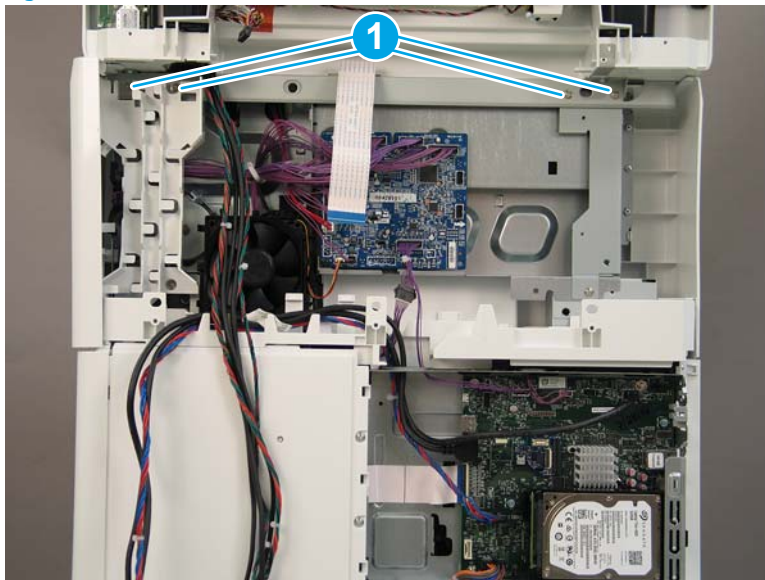

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1058 Remove three screws

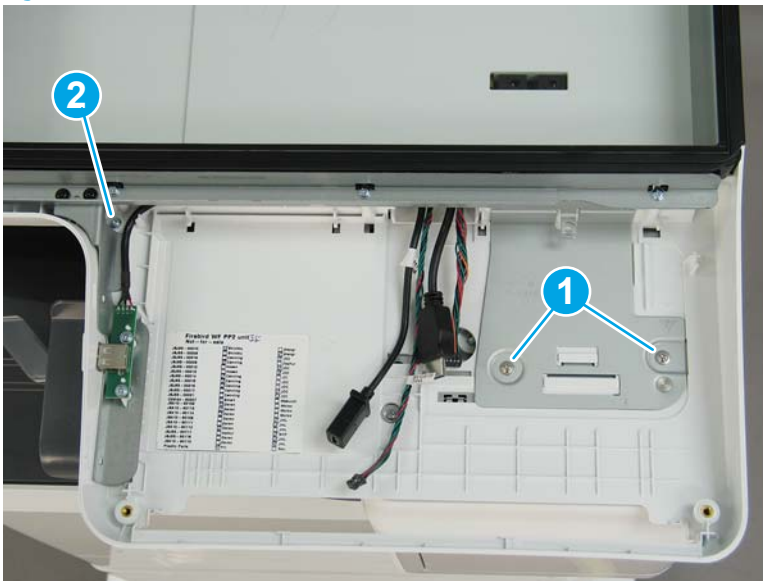

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-1059 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-1060 Remove the wireless card

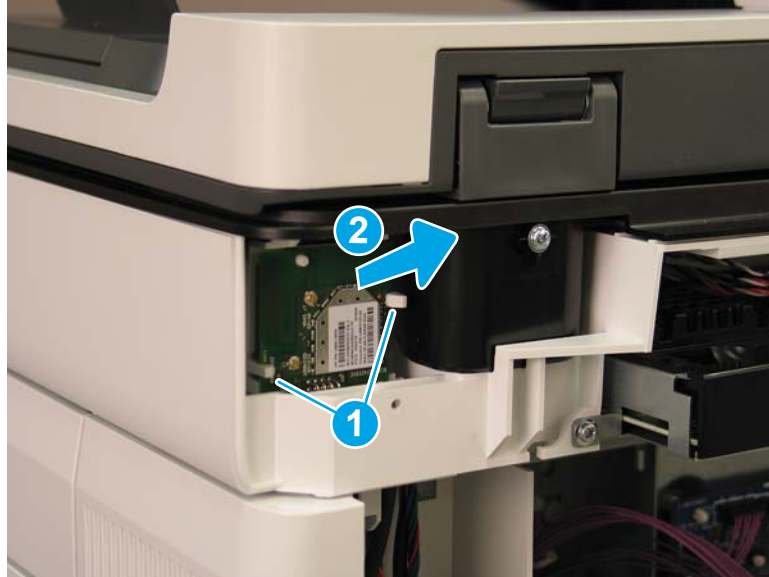


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-1061 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

**Figure 1-1062** Reinstall the wireless card

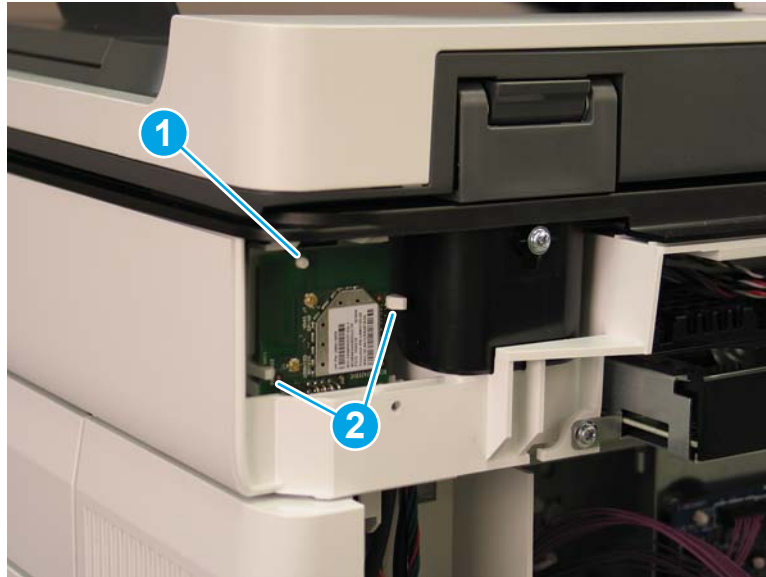

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

**Figure 1-1063** Install the SCB cables

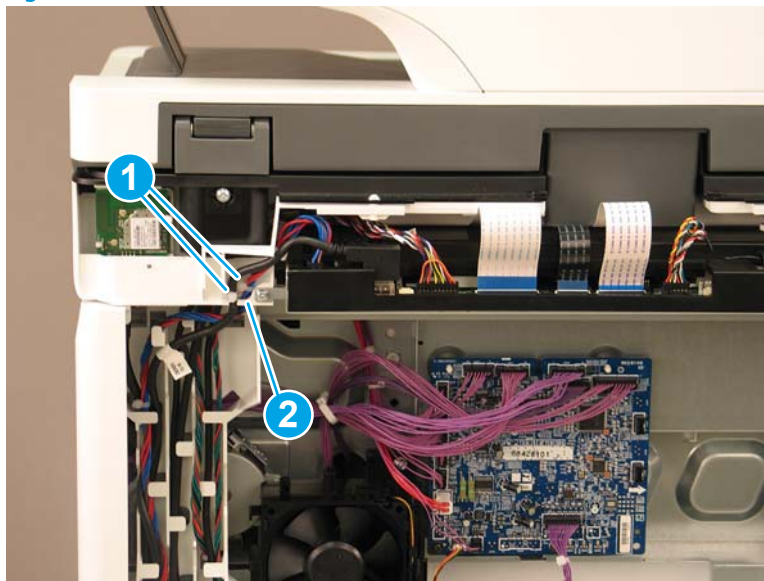

#### Step 5: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)


1. Open the front door.

Figure 1-1064 Open the front door




2. Open the stapler door.

Figure 1-1065 Open the stapler door

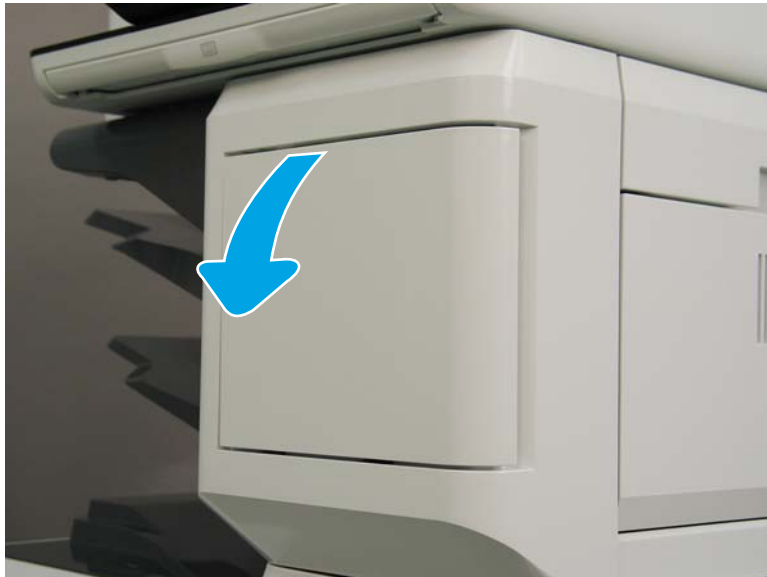


3. Release the latch, and then remove the staple cartridge.

Figure 1-1066 Remove the staple cartridge

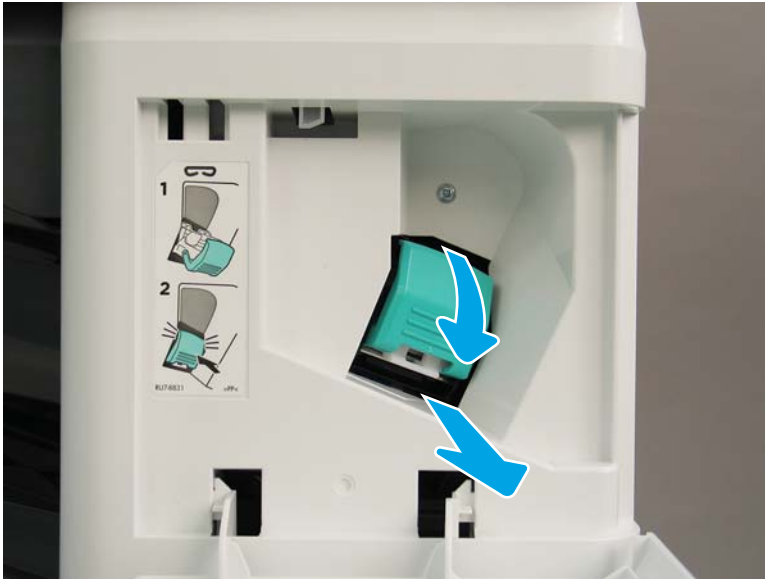

4. Remove one screw (callout 1).

Figure 1-1067 Remove one screw

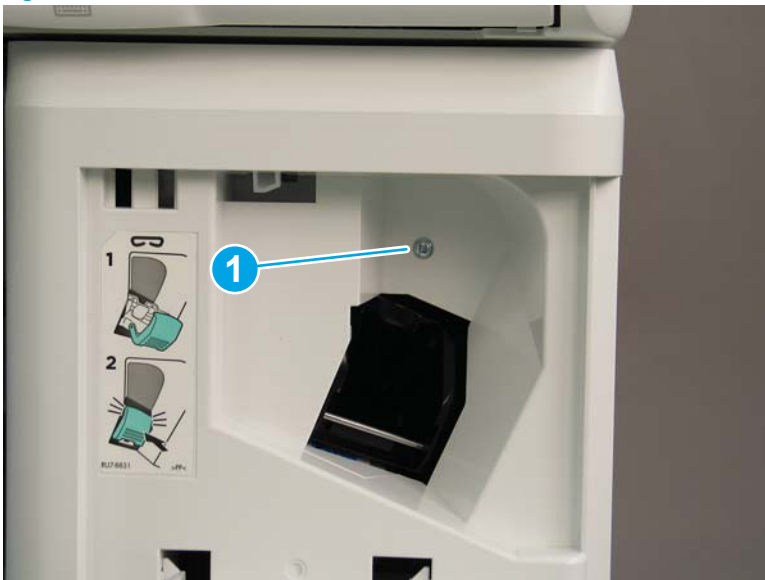




5. Rotate the stapler cover to the right to remove it.

Figure 1-1068 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1069 Remove one screw

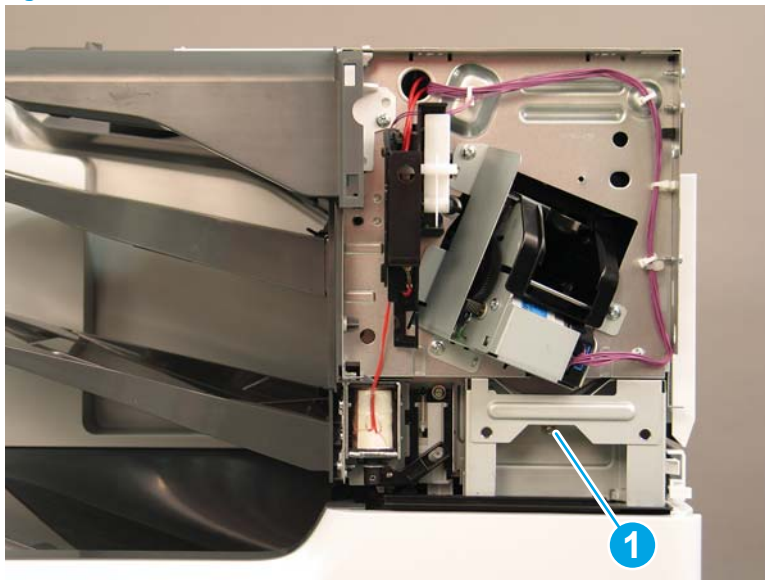


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1070 Remove the stapler/stacker right upper cover

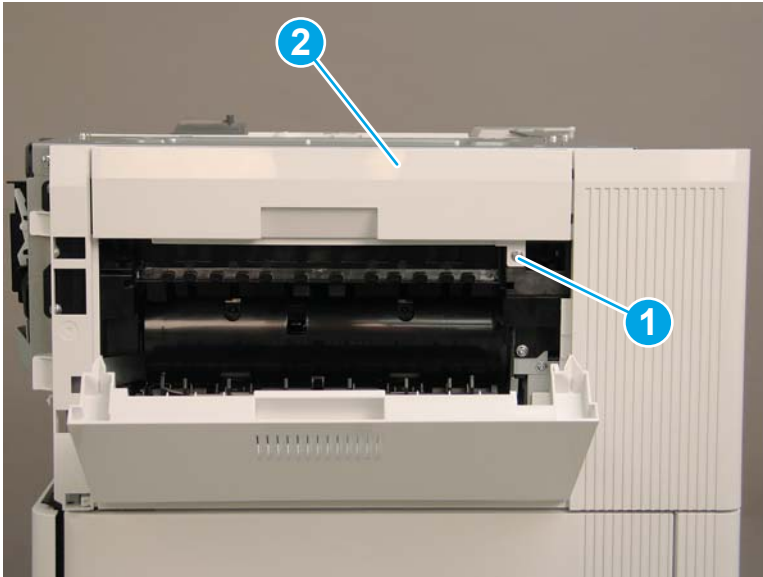

8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.


Figure 1-1071 Remove the stapler rear cover

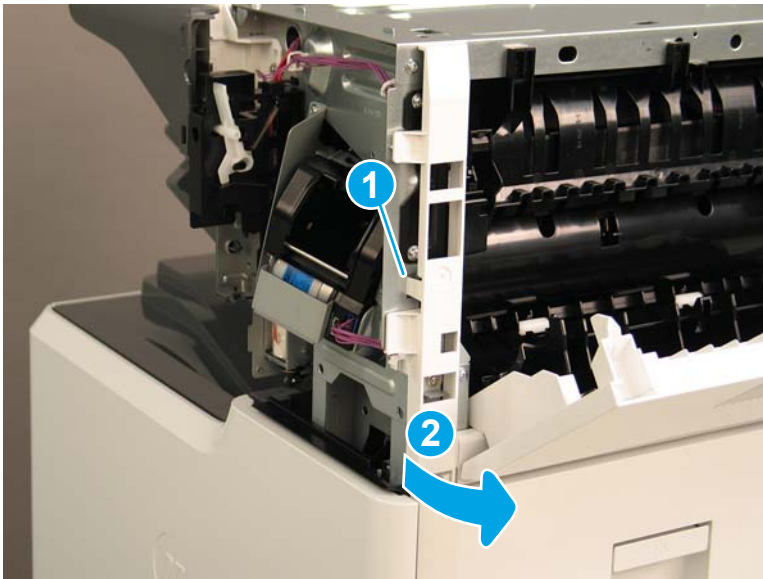




9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1072 Remove the stapler/stacker rear corner cover

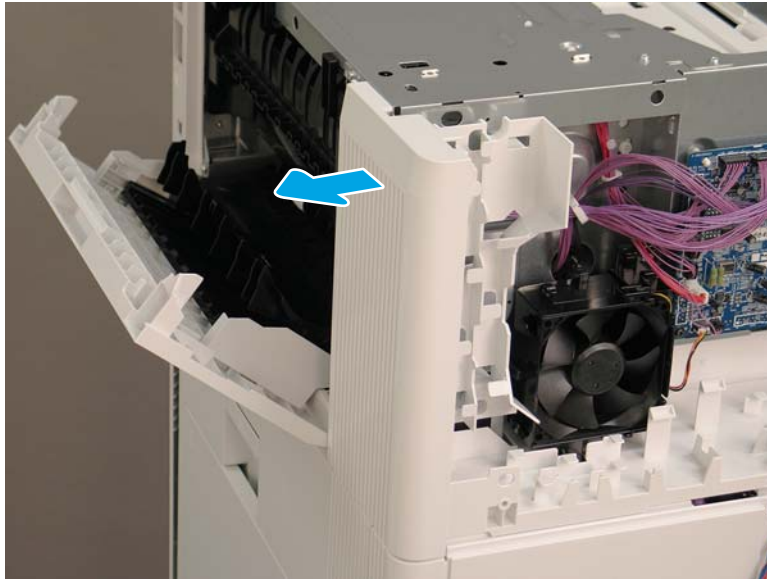


10. Remove two screws (callout 1).

Figure 1-1073 Remove two screws

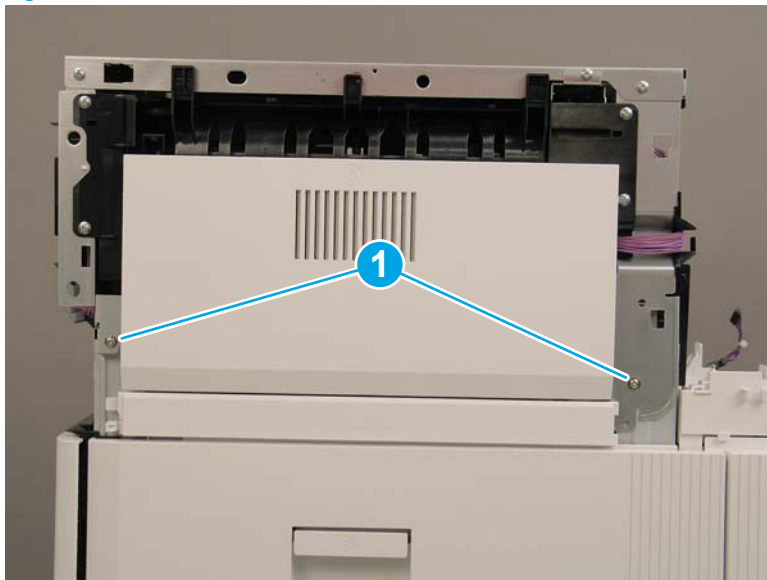


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1074 Remove the cable guide

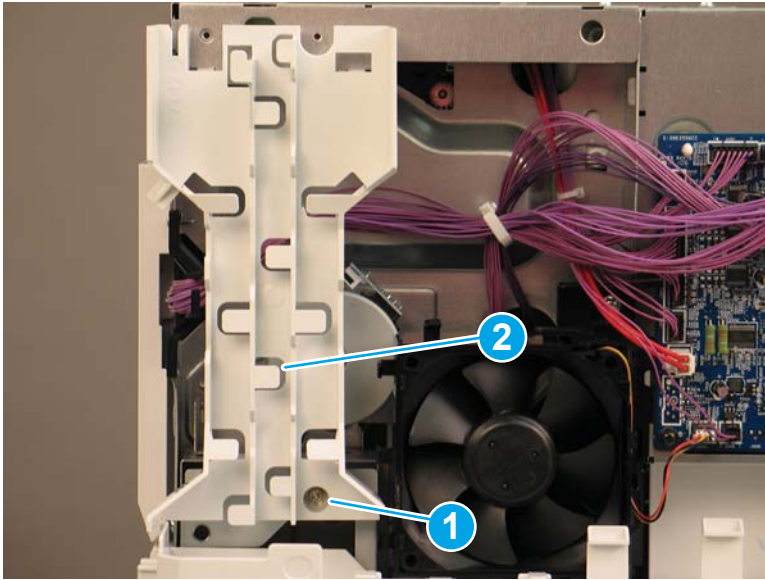

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1075 Disconnect one connector

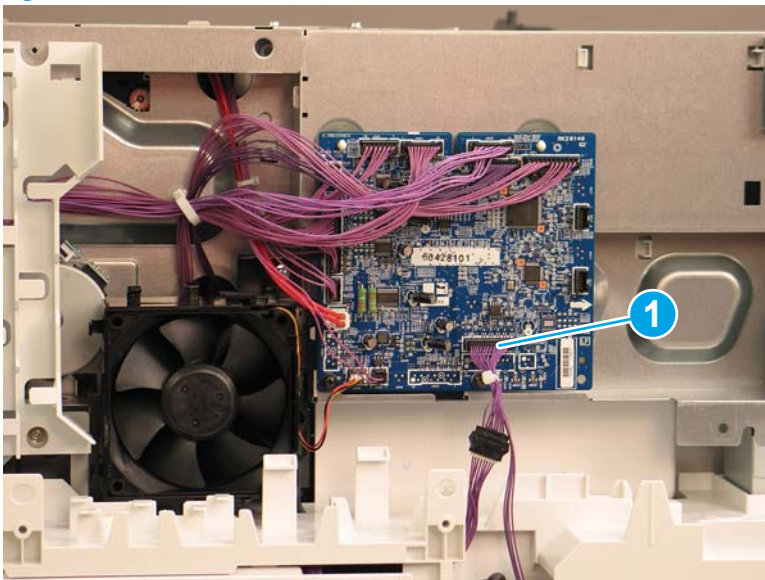

13. Remove two screws (callout 1).


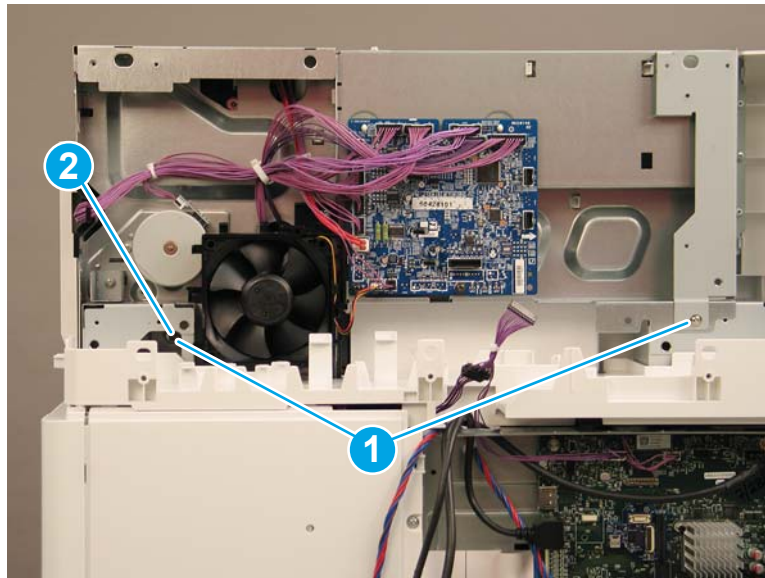
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.


Figure 1-1076 Remove two screws



14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1077 Remove the stapler/stacker

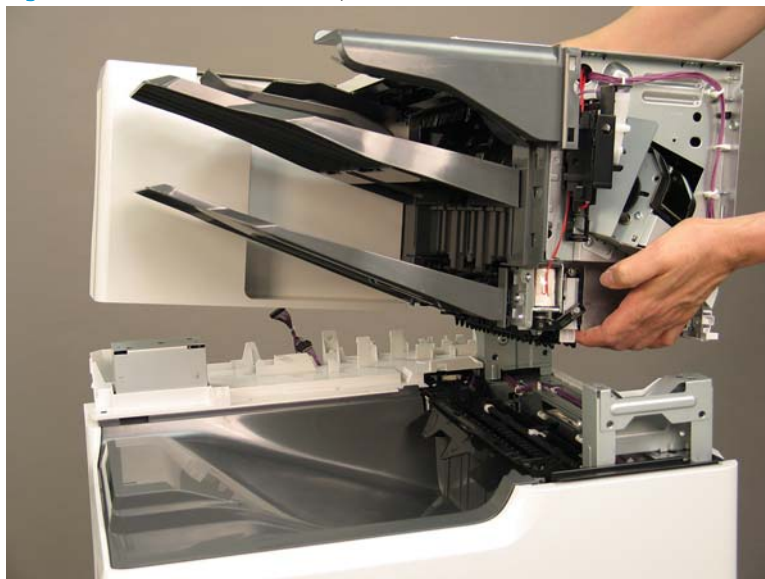


#### Step 6: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1078** Remove the face-down front cover

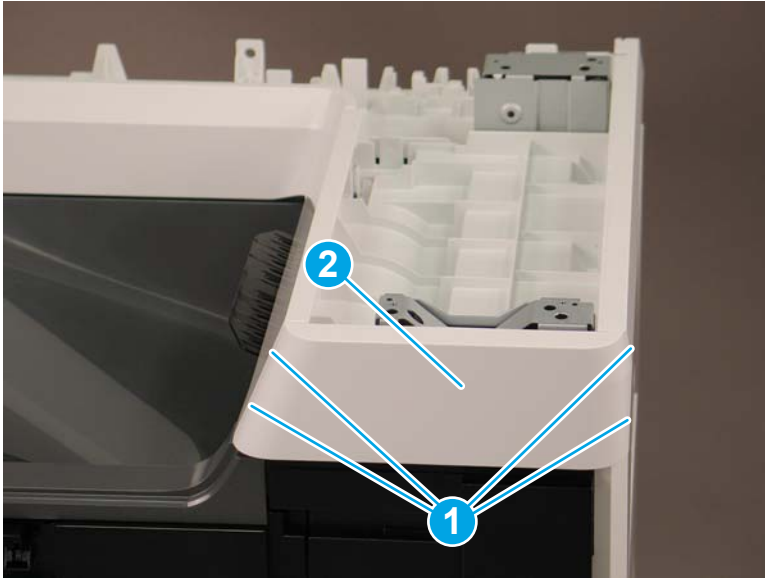


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1079** Install the cover

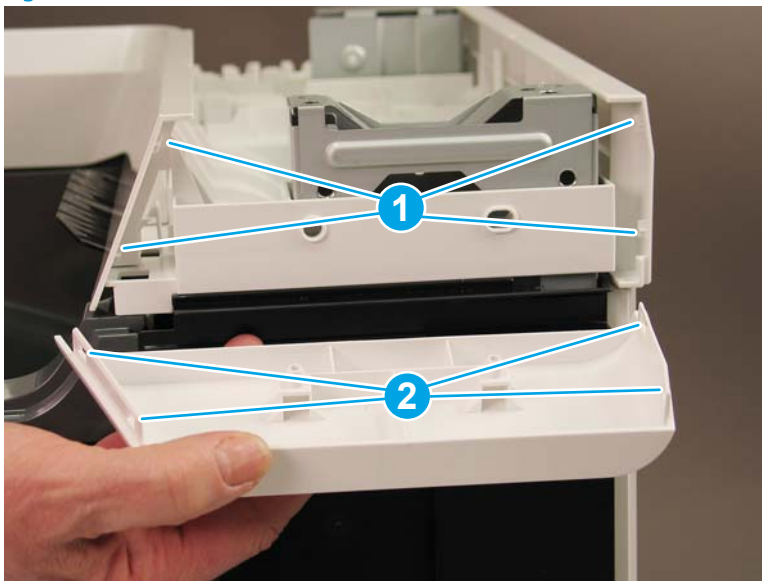

### Step 7: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1080 Remove the top cover

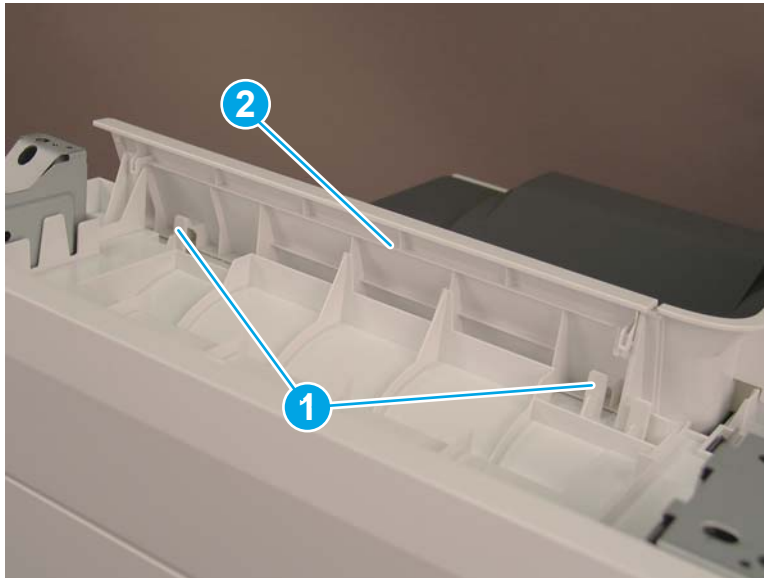

### Step 8: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)


- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---



Figure 1-1081 Remove the right cover

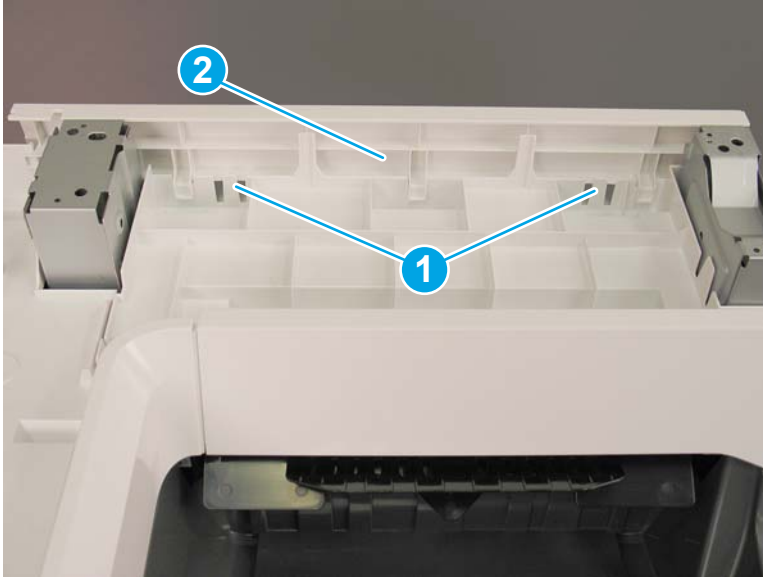


**Step 9: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

- ▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1082 Remove the front cover

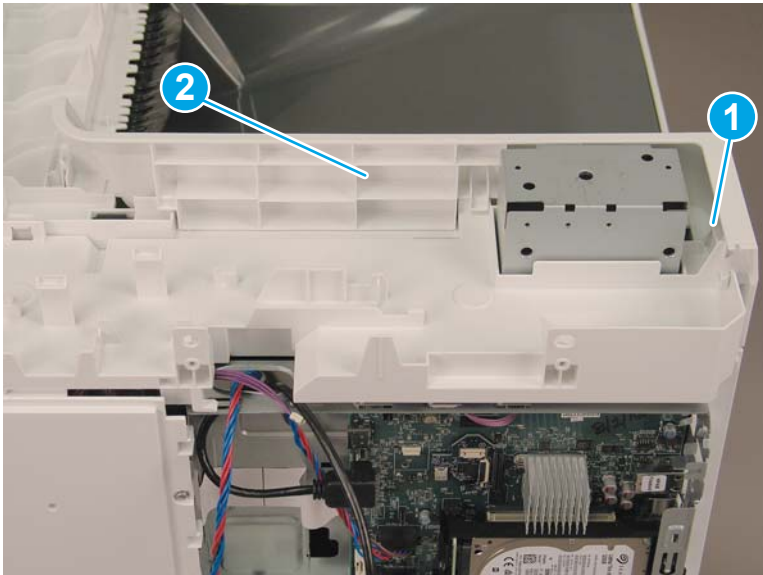


**Step 10: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

- ▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1083** Remove the rear upper cover

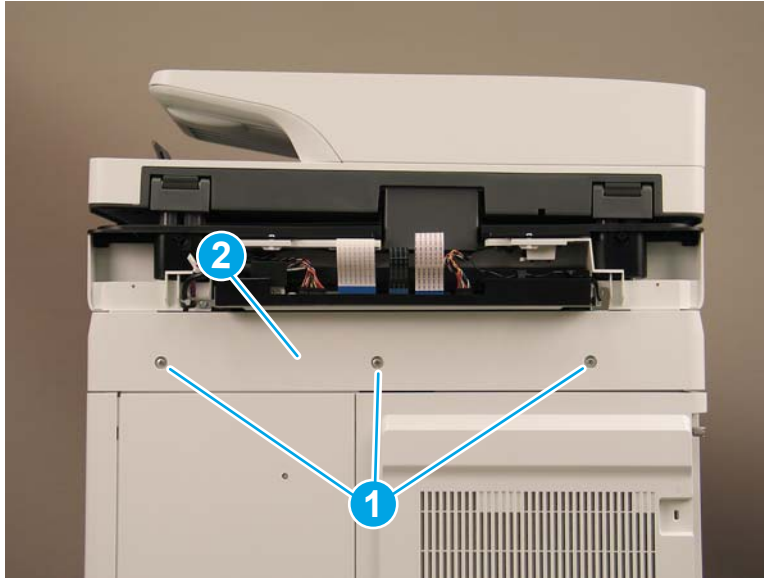


**Step 11: Remove the face-down cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)**

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1084** Remove two screws and the face-down cover

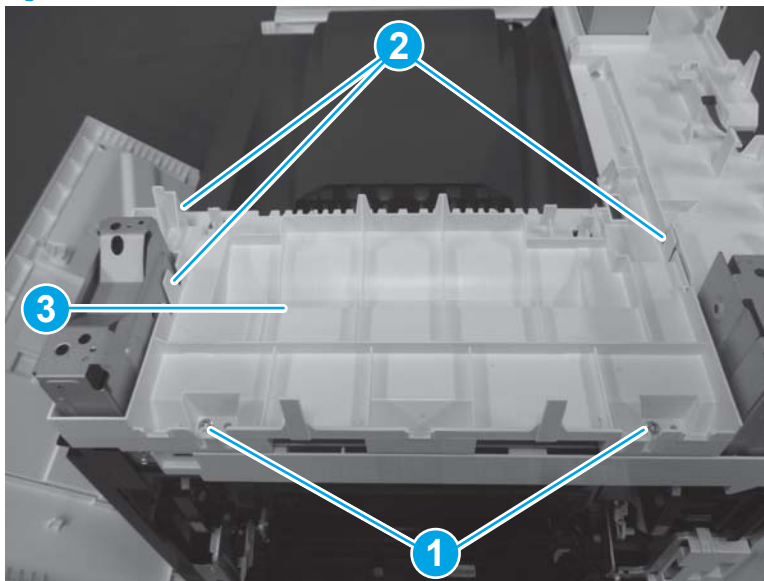


## Step 12: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 713](#)

1. Remove two screws (callout 1), and then release one tab (callout 2).


**Figure 1-1085** Remove two screws and release one tab

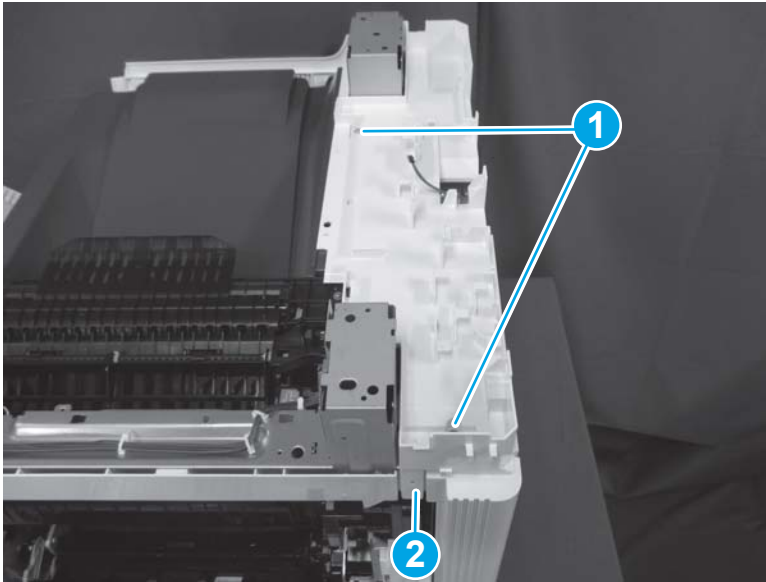

2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1086** Remove one screw and the main cover

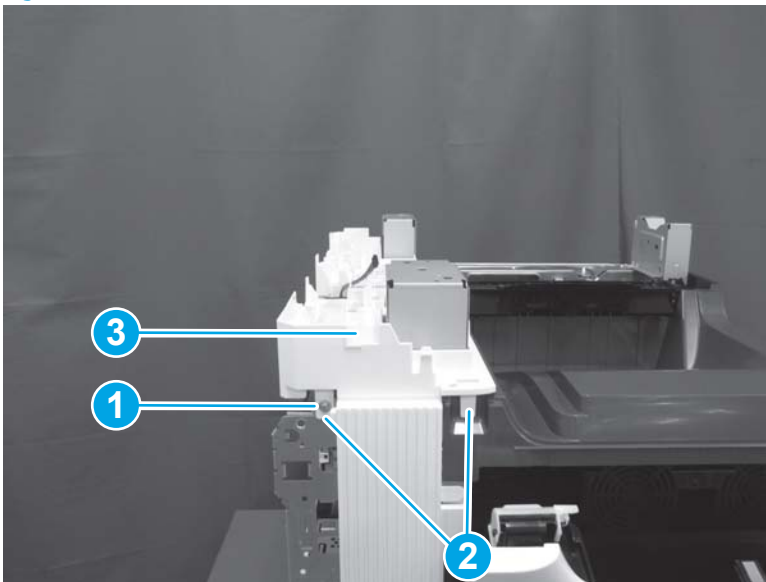



### Step 13: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 717](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1087** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-1088** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-1089** Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

**Figure 1-1090** Release the control panel

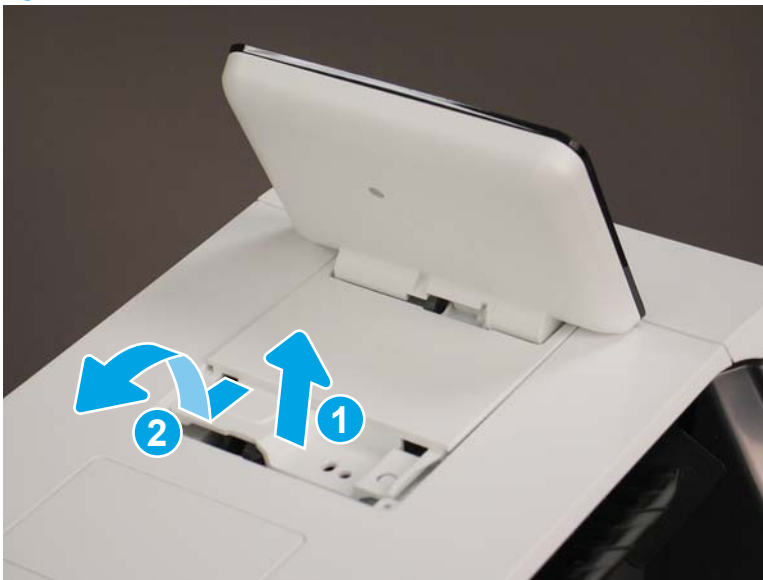

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-1091** Disconnect two connectors

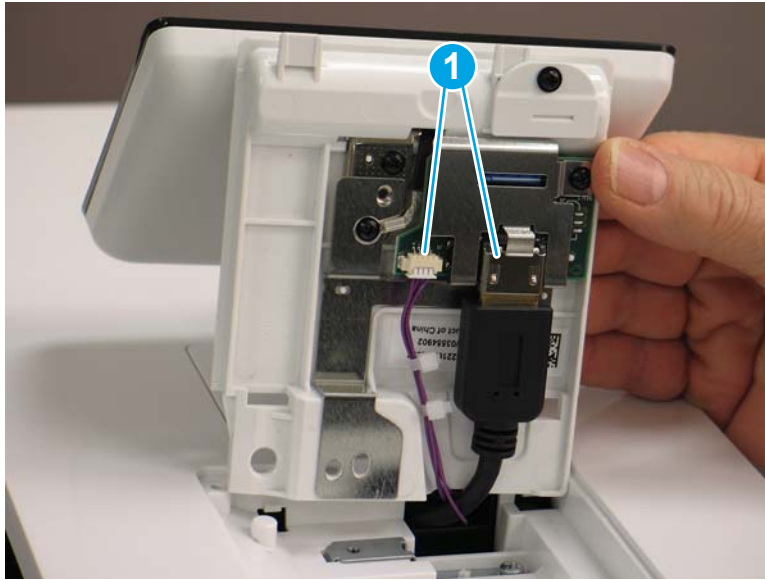


6. Remove the control panel.

**Figure 1-1092** Remove the control panel




#### Step 14: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 717](#)

1. Open the following doors:


- Front door
  - Left door
  - Right door
2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1093 Remove the NFC cover

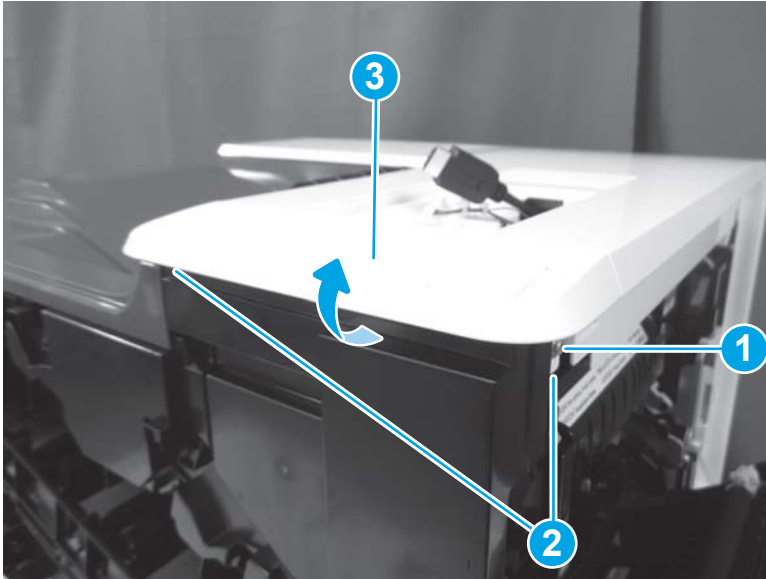


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1094 Remove one screw and release one tab

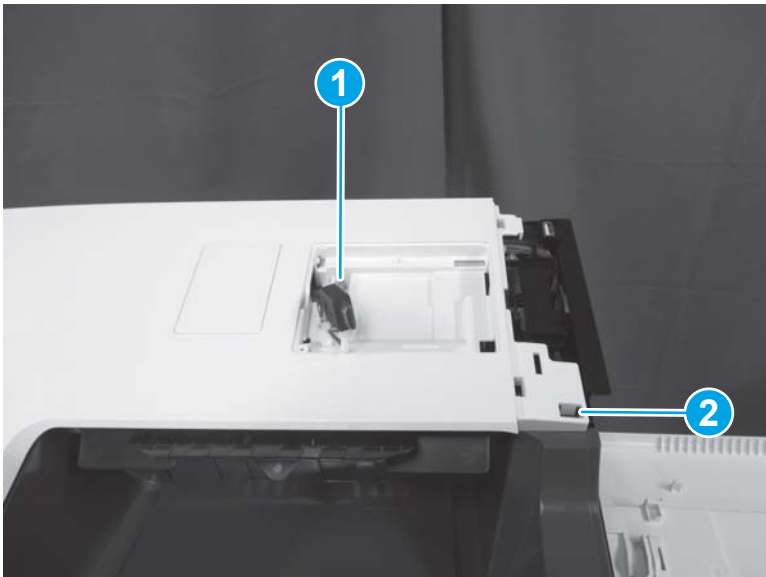

4. Release two tabs (callout 1).

Figure 1-1095 Release two tabs

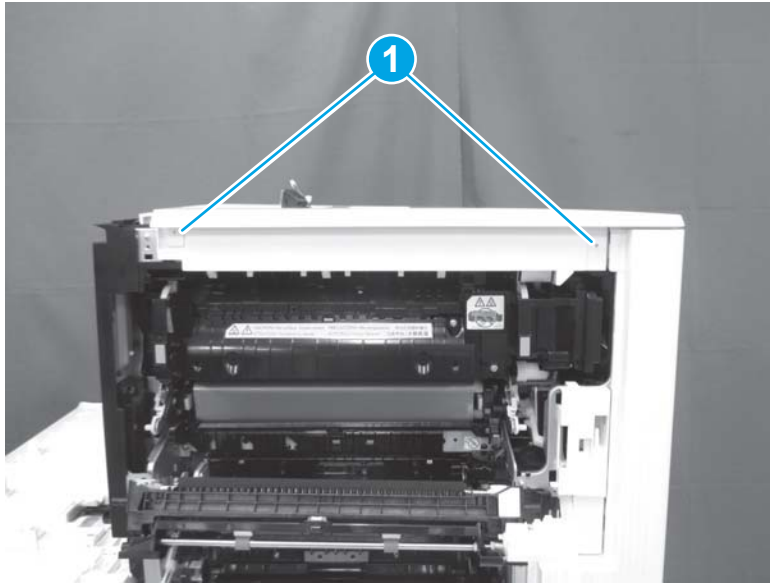

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


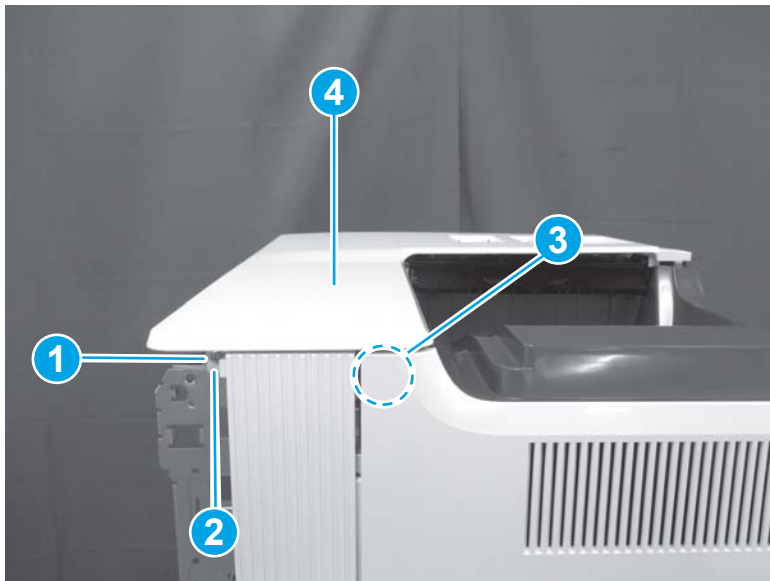
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1096 Remove the top cover




### Step 15: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


Figure 1-1097 Remove the output bin

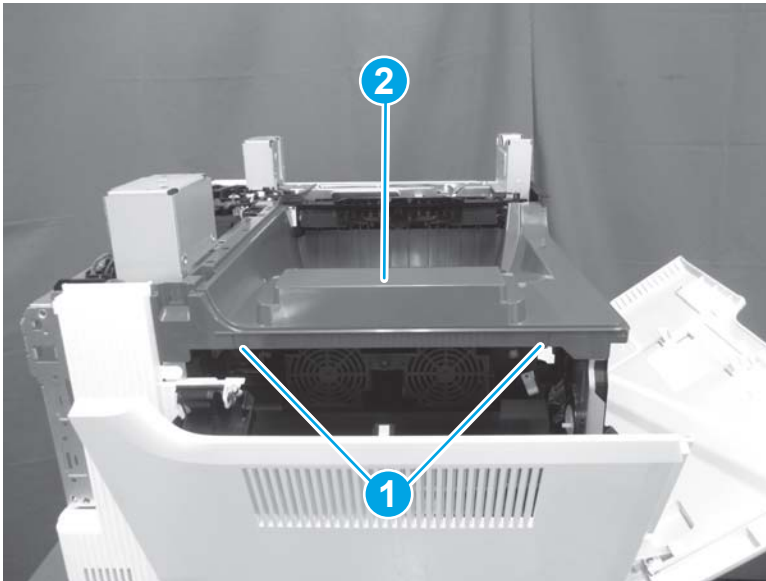

### Step 16: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1098 Remove the formatter cover

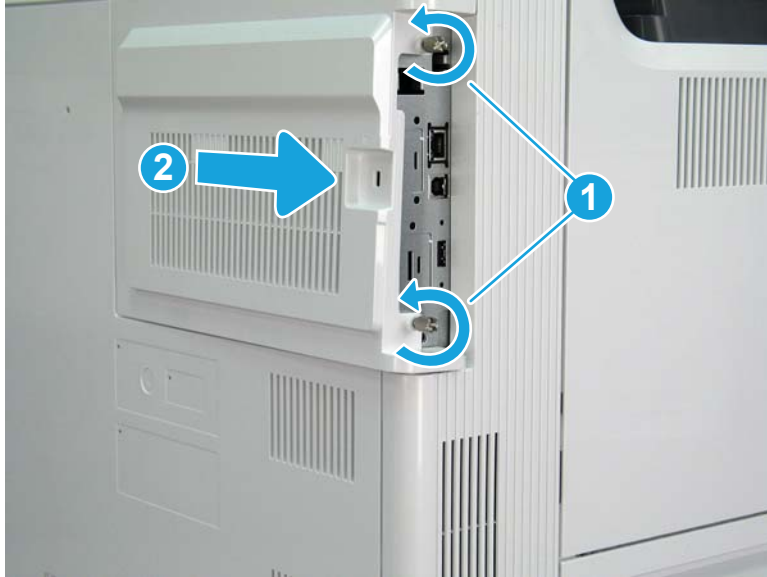


Step 17: Remove the left door


1. Open front door.

Figure 1-1099 Open front door




2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1100** Remove the left door

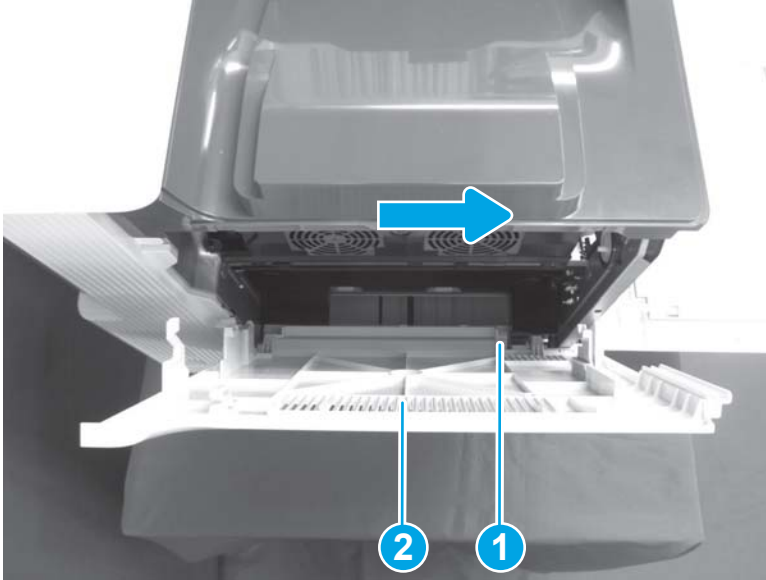

#### Step 18: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

**Figure 1-1101** Remove the left rear cover

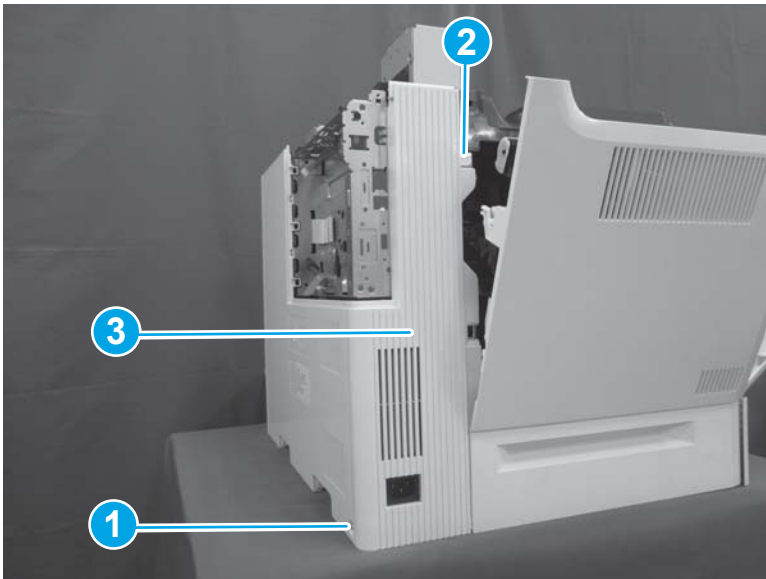

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1102 Install the left rear cover

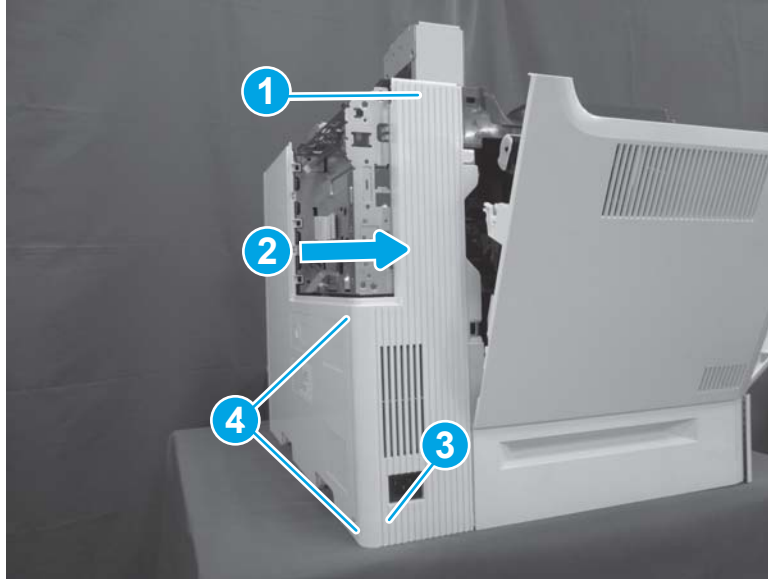


### Step 19: Remove the left upper front and left upper rear fans

1. Disconnect three connectors (callout 1), open two retainers (callout 2), and then release the cable (callout 3) from the retainers.

---


 **NOTE:** Leave the black junction connectors attached to the cables on the printer.

 **Reinstallation tip:** The two connectors on the left are both three-pin connectors. Make sure that the cables are connected to the correct connector.

**Reinstallation tip:** Make sure that the black junction connectors (callout 1) remain on the cables attached to the printer. These connectors are not provided on the new part.


---

Figure 1-1103 Disconnect three connectors

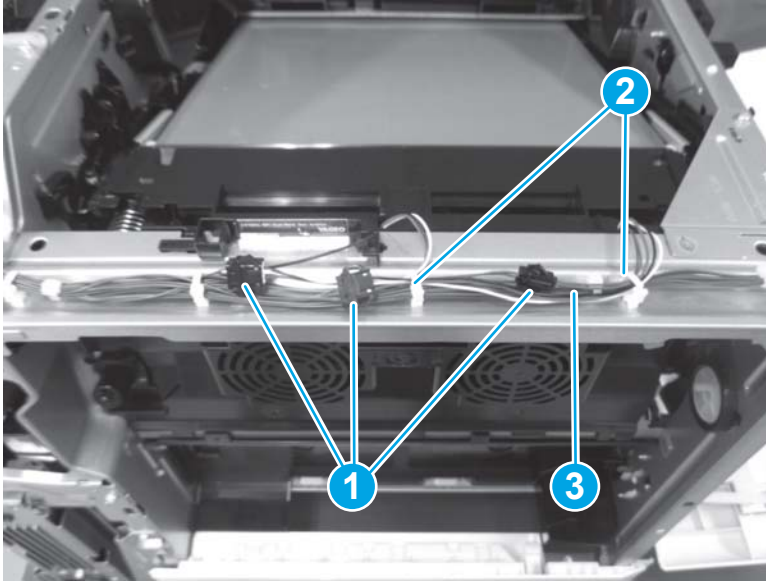


2. Release two tabs (callout 1). Slide the cartridge cover (callout 2) left, and then pull it away from the printer to remove it.

Figure 1-1104 Remove the cartridge cover

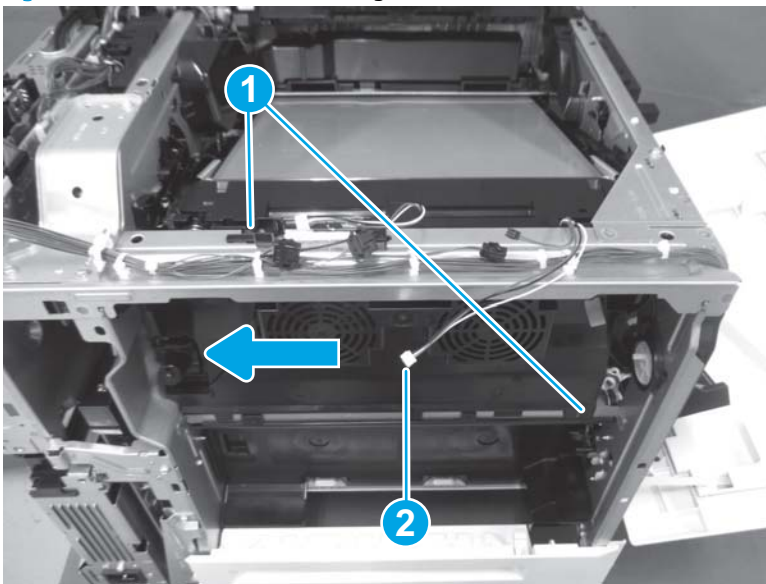


3. Release one tab (callout 1).

Figure 1-1105 Release one tab

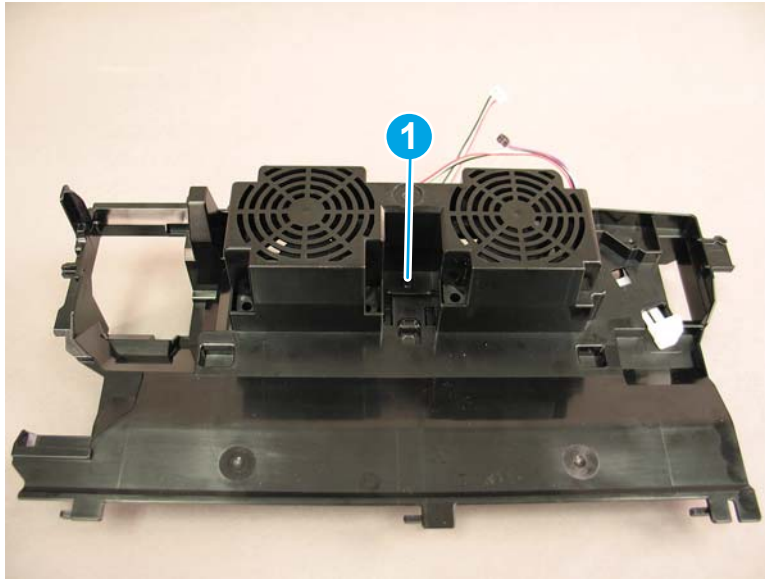


4. Turn the assembly over, and then remove the fan duct (callout 1).

Figure 1-1106 Remove the fan duct

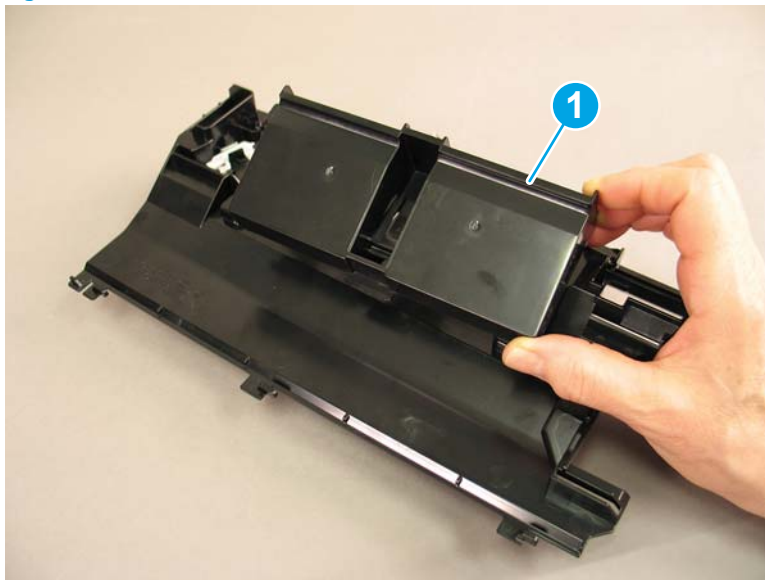


5. Use a small, flat-blad screwdriver to gently twist and release three tabs (callout 1), and then remove the left upper front fan (callout 2).

**Figure 1-1107** Remove the left upper front fan

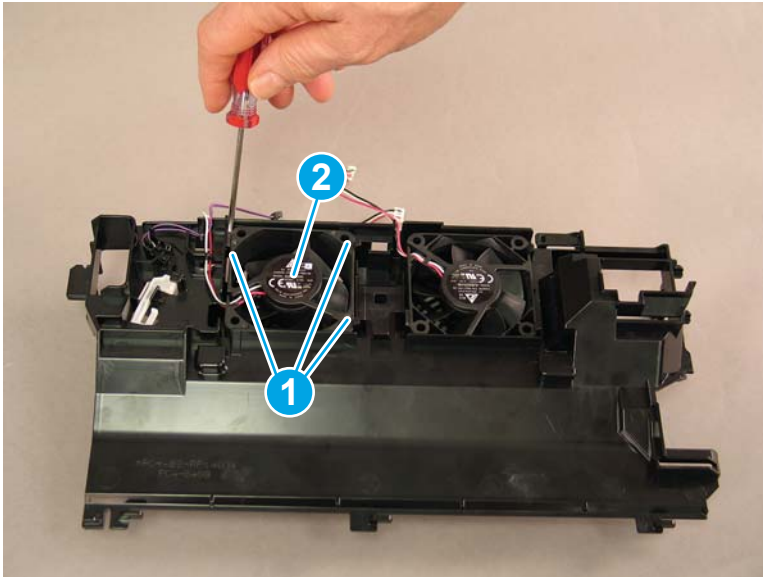

6. Use a small, flat-blad screwdriver to gently twist and release three tabs (callout 1), and then remove the left upper rear fan (callout 2).

**Figure 1-1108** Remove the left upper rear fan

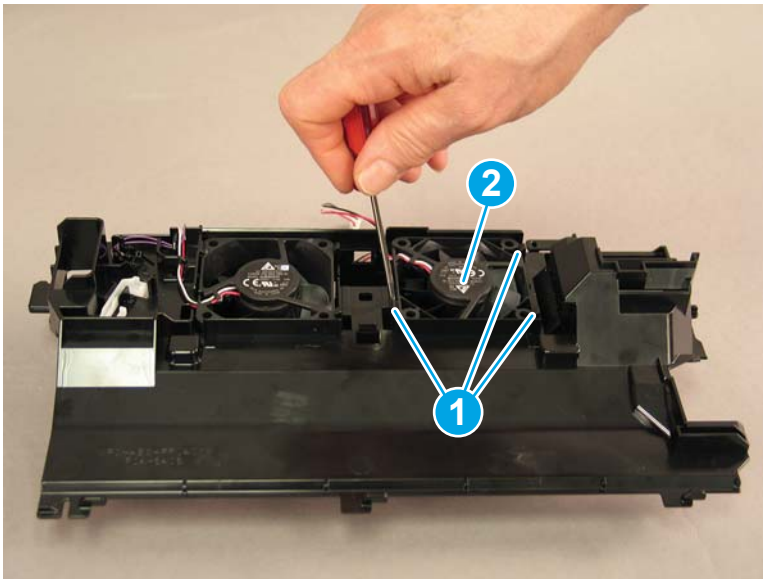

7. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Left upper front and left upper rear fans**


- ▲ Install the right side of the fan assembly first. Position the tab (callout 1) on the fan assembly into the slot (callout 2) in the sheet metal frame.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

Figure 1-1109 Install the fan assembly

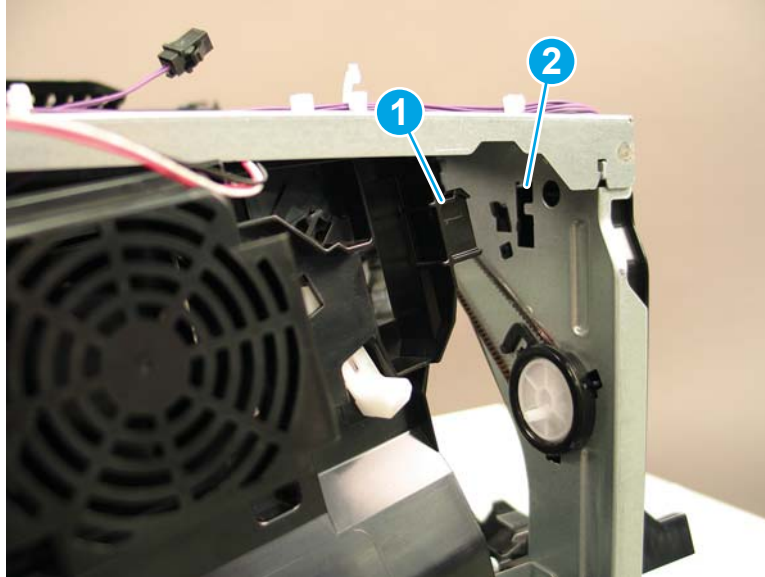

### Step 20: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Toner carry assembly

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 6: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the output bin](#)
- [Step 16: Remove the formatter cover](#)
- [Step 17: Remove the left door](#)
- [Step 18: Remove the toner carry assembly](#)
- [Step 19: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the toner carry assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)




**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Toner carry assembly part number	
RM2-6620-000CN	Toner carry assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Needle-nose pliers

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test


Print a color page, and then remove the print cartridges. Look inside the printer and verify that no loose toner is present.


### Step 1: Remove the toner collection unit (TCU)

---

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#).

---


 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.

---


1. Open the front door.

Figure 1-1110 Open the front door

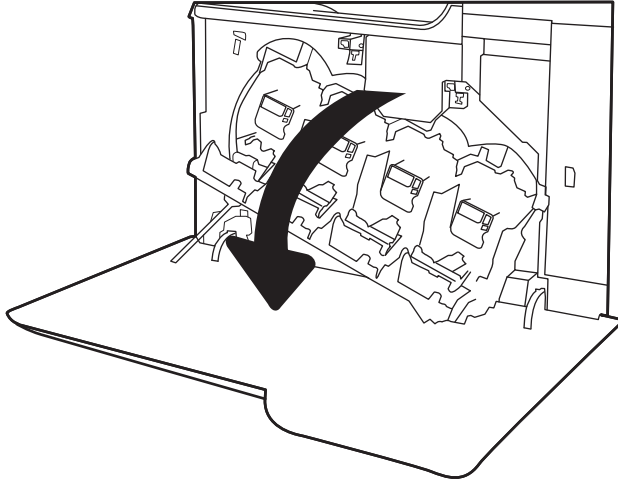

2. Open the left door.


Figure 1-1111 Open the left door

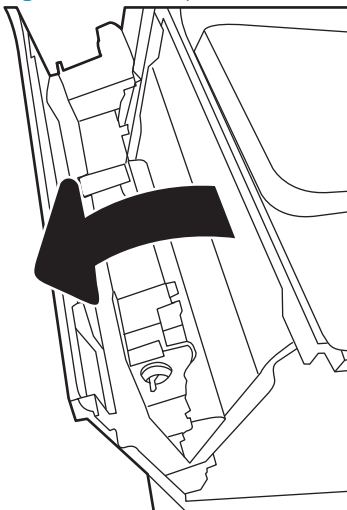




3. Grasp the top of the TCU and remove it from the printer.

Figure 1-1112 Remove the TCU

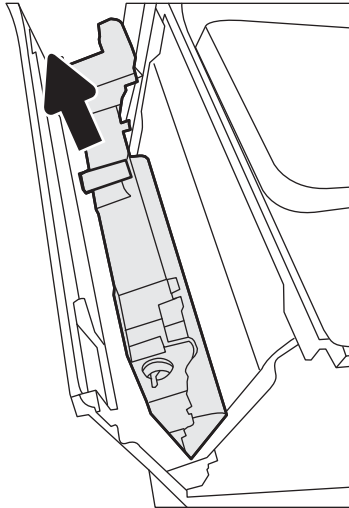

### Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#).

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1113 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1114 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1115 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1116 Disconnect the keyboard flat cable

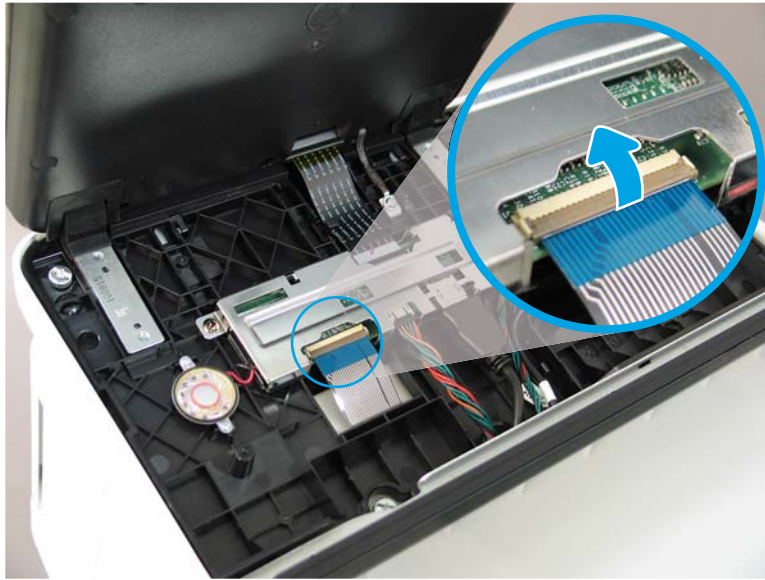

5. Slide the keyboard tray out until it stops.

Figure 1-1117 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1118 Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1119 Remove the keyboard



### Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#).

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1120 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1121 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1122 Remove the cover



4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.


Figure 1-1123 Disconnect the keyboard flat cable (keyboard models only)

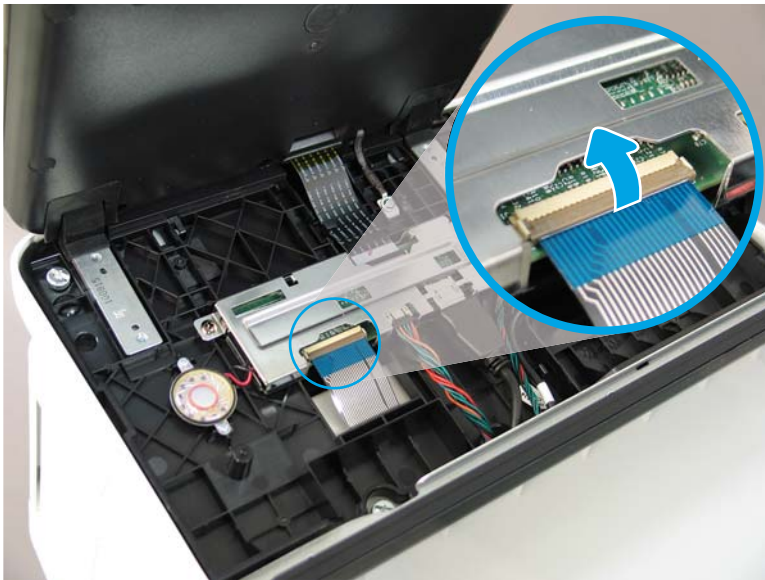




5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-1124 Disconnect connectors

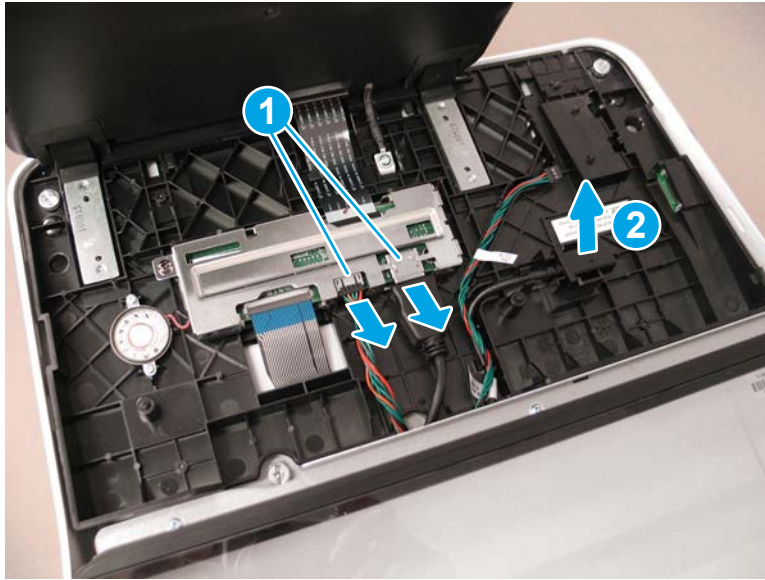


6. Remove three thumbscrews (callout 1).

Figure 1-1125 Remove three thumbscrews

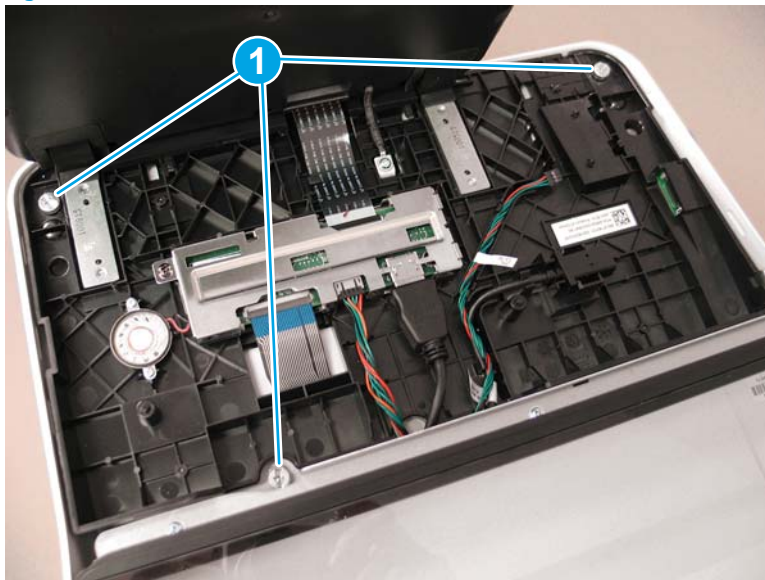


7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1126 Remove the control panel

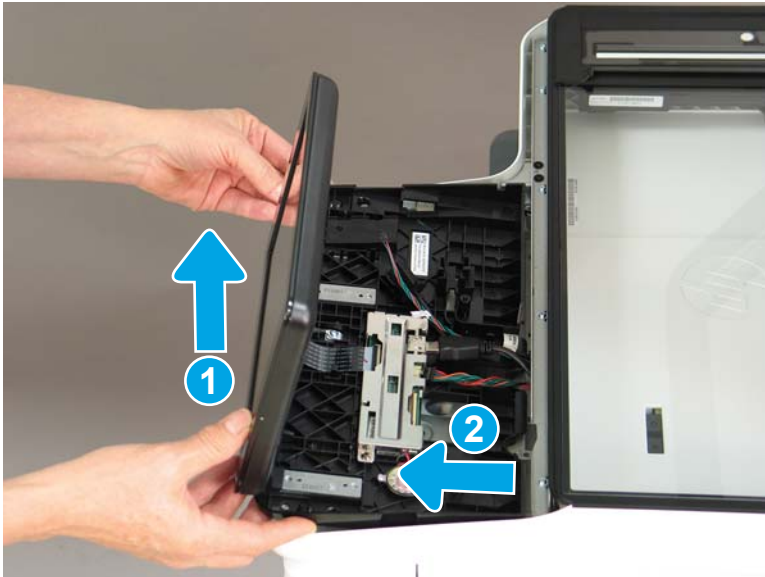


#### Step 4: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1127 Remove the SCB cover

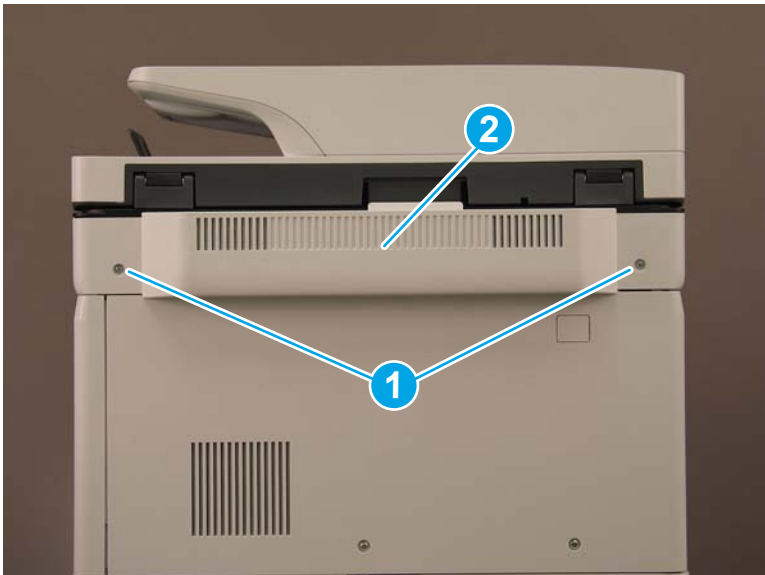

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

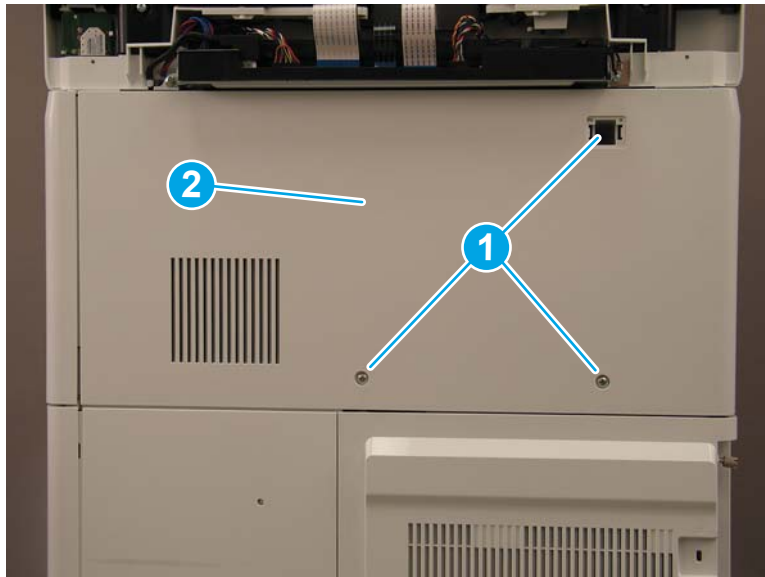


Figure 1-1128 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-1129 Remove the stapler/stacker rear cover




3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-1130 Remove the upper rear cover

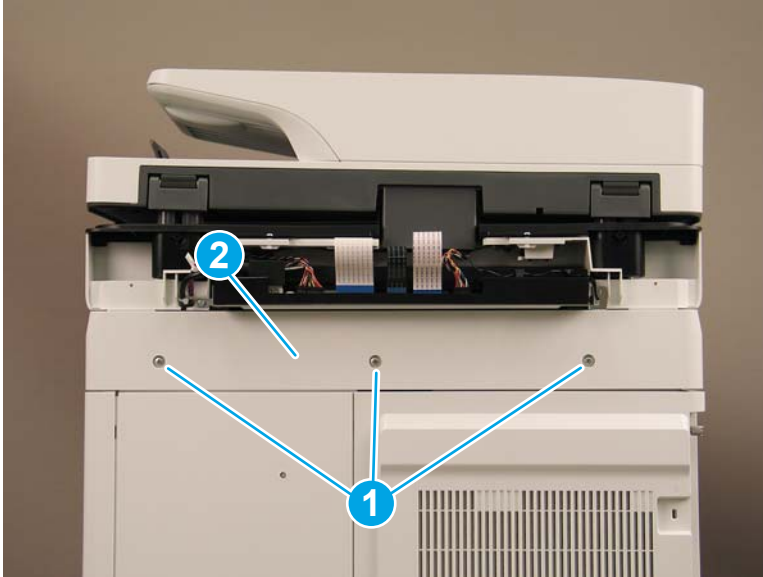


4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-1131 Remove the formatter cover

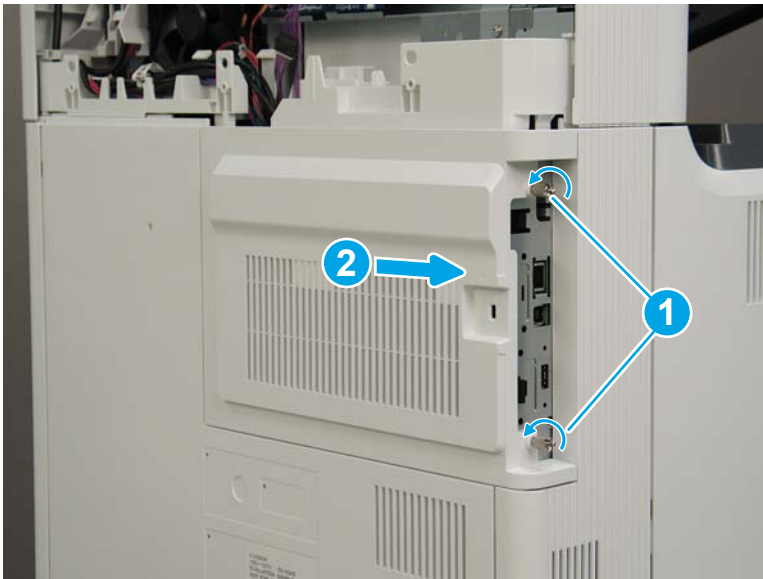


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-1132 Cable routing for M681dh, M681f, and Flow M681f

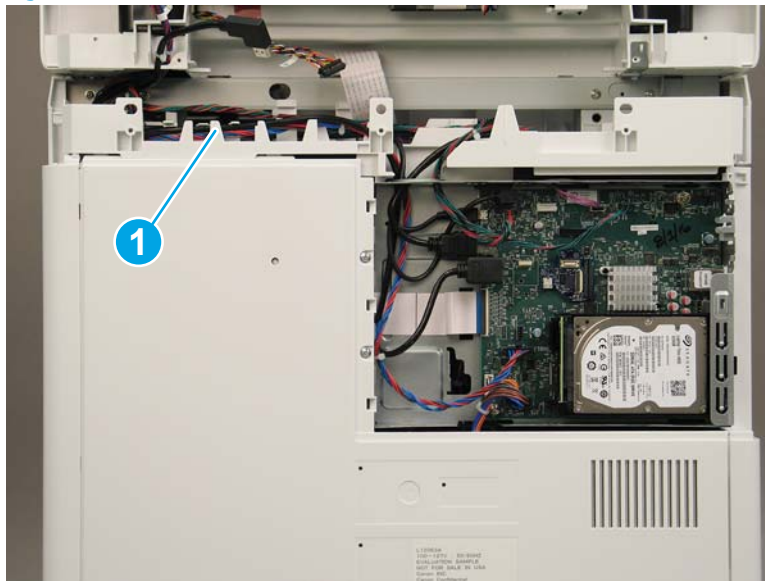

6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1133 Disconnect two connectors

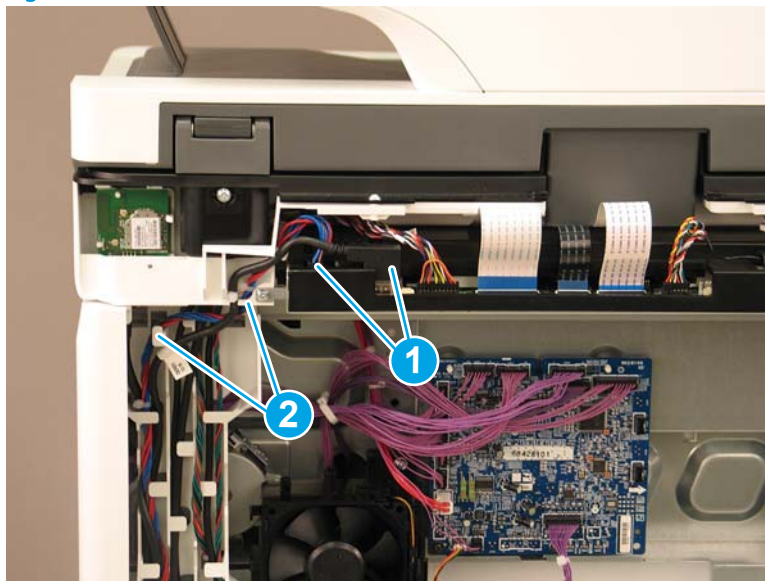


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1134 Disconnect five connectors




8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1135 Disconnect the wireless connector

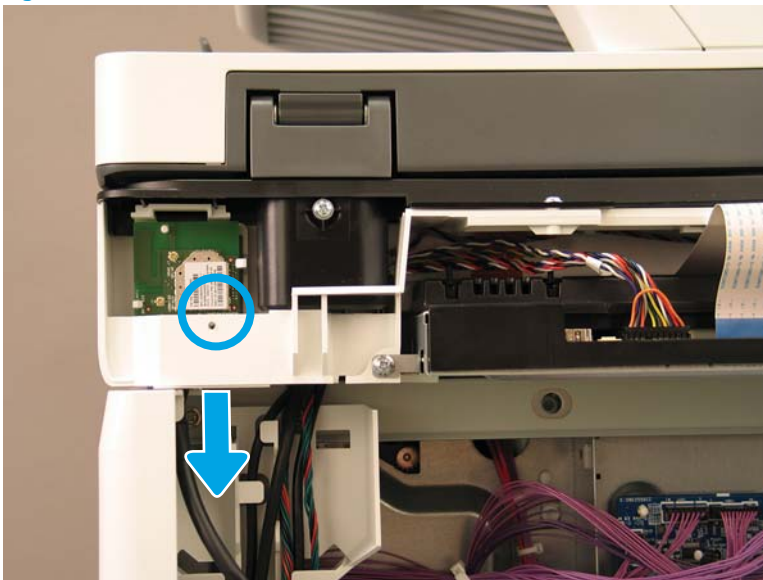


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1136 Release the cables

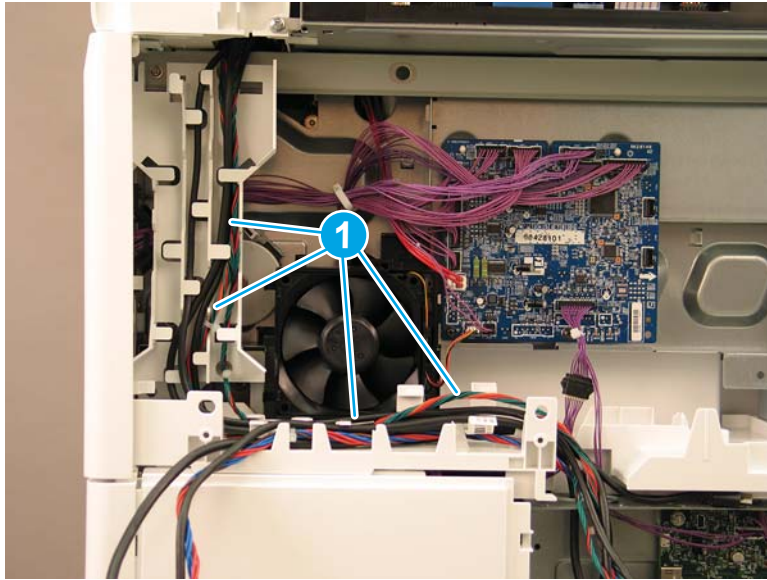

10. At the back of the printer, remove four screws (callout 1).


Figure 1-1137 Remove four screws

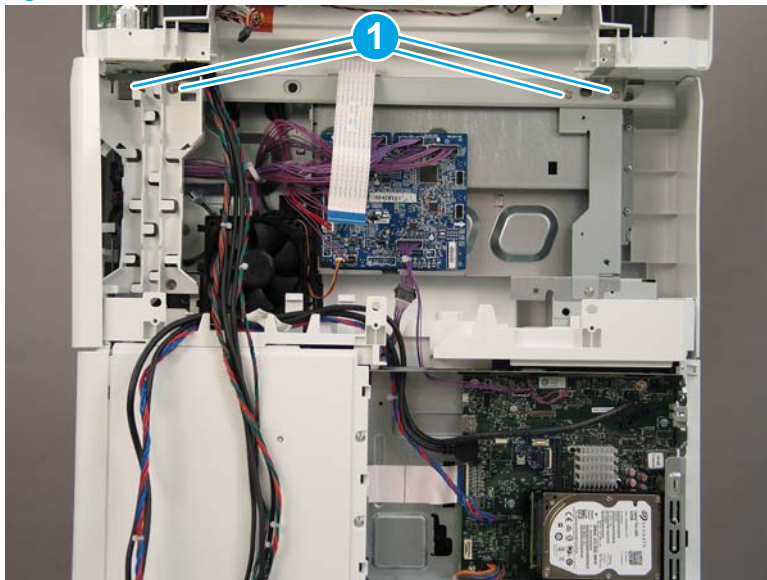



11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1138 Remove three screws

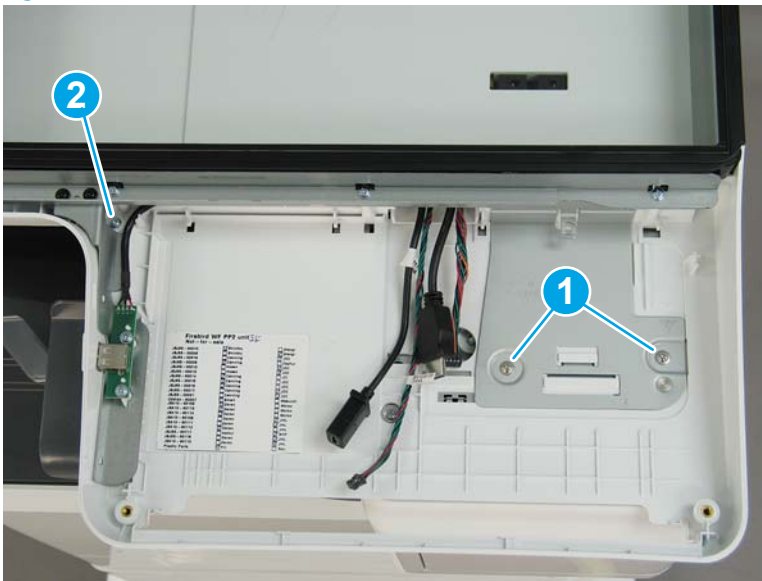

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-1139 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-1140 Remove the wireless card

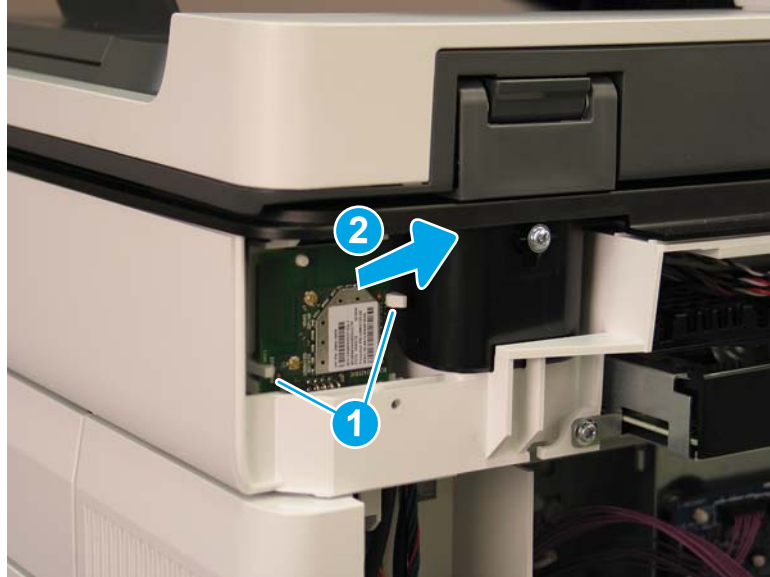


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-1141 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-1142 Reinstall the wireless card

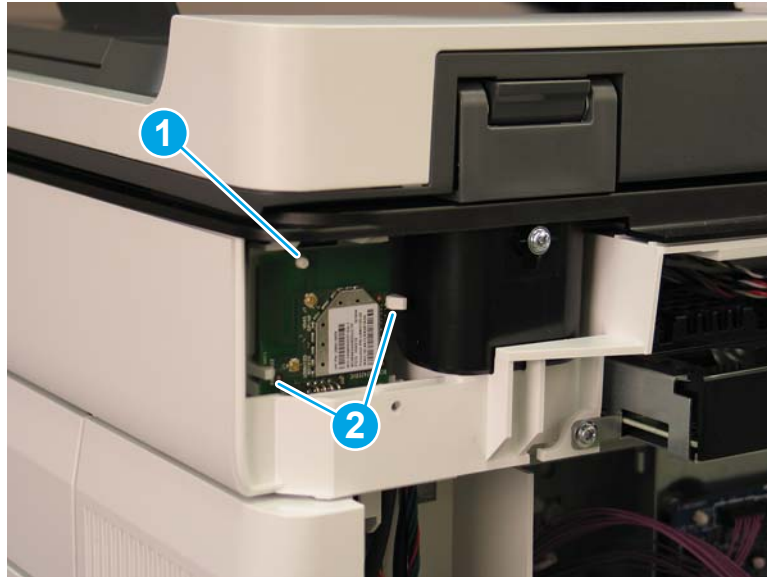


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1143 Install the SCB cables

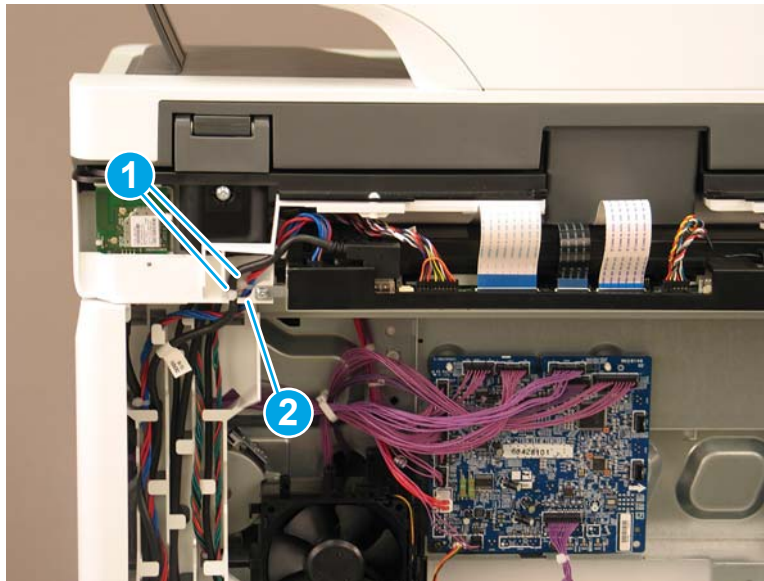

#### Step 5: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)

1. Open the front door.

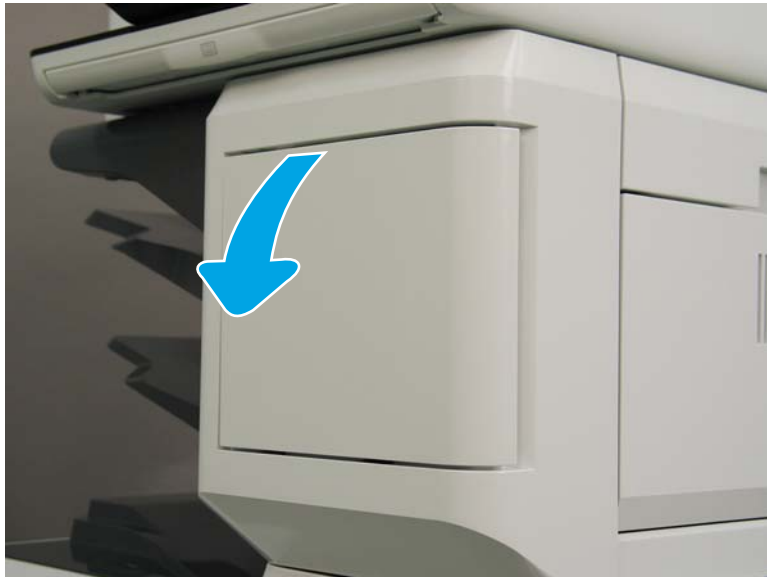


Figure 1-1144 Open the front door




2. Open the stapler door.

Figure 1-1145 Open the stapler door




3. Release the latch, and then remove the staple cartridge.

Figure 1-1146 Remove the staple cartridge

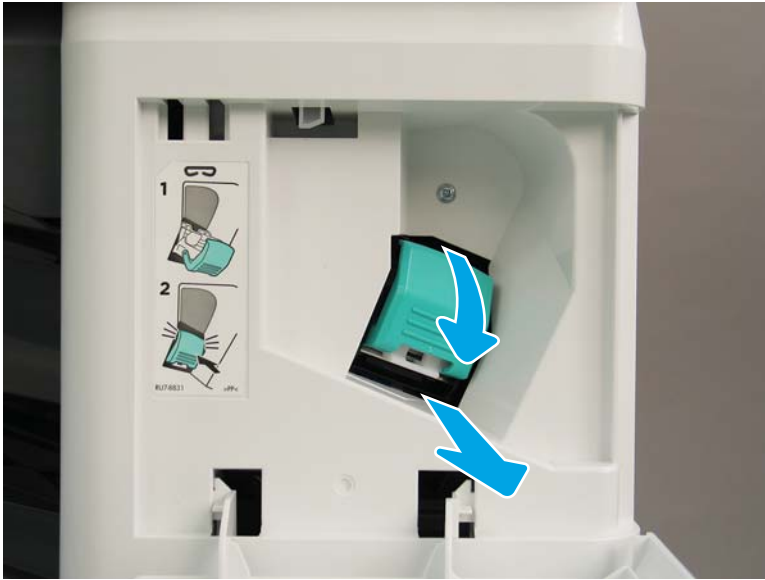

4. Remove one screw (callout 1).

Figure 1-1147 Remove one screw

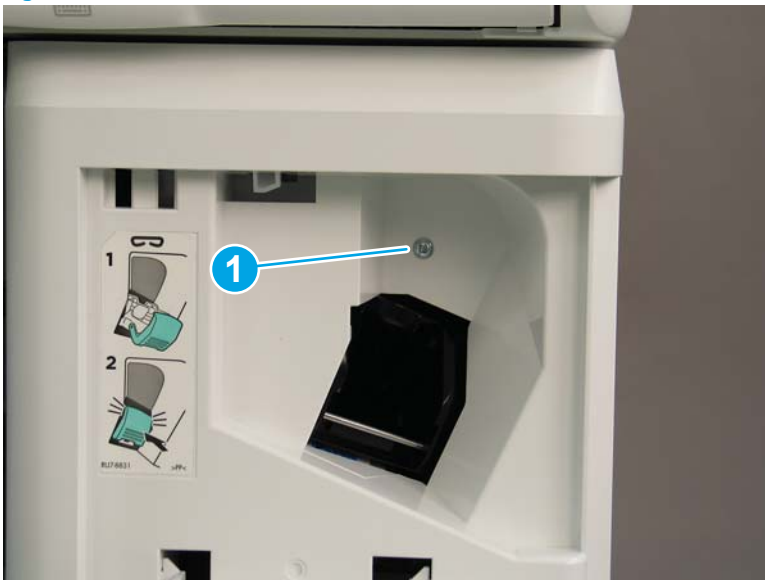


5. Rotate the stapler cover to the right to remove it.

Figure 1-1148 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1149 Remove one screw

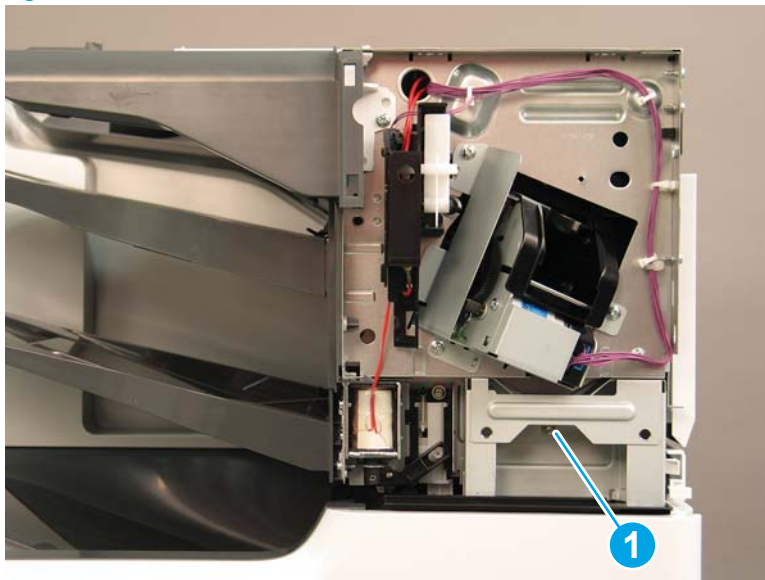


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1150 Remove the stapler/stacker right upper cover

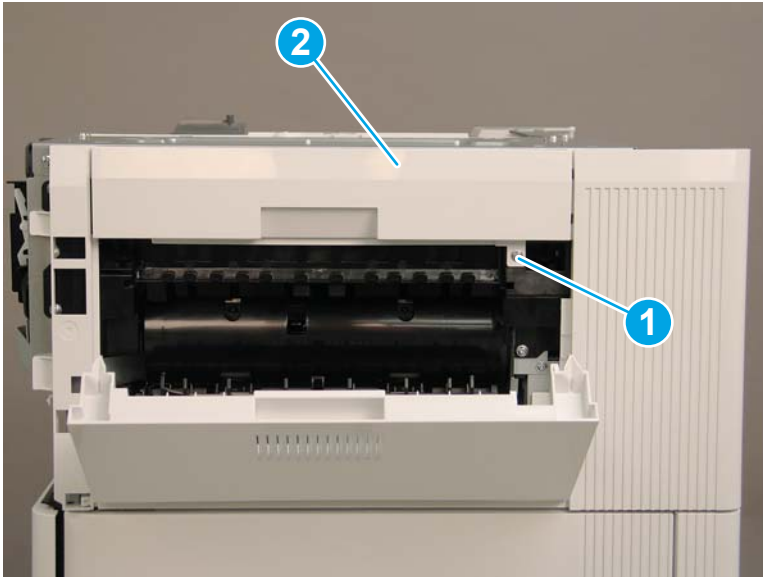


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1151 Remove the stapler rear cover

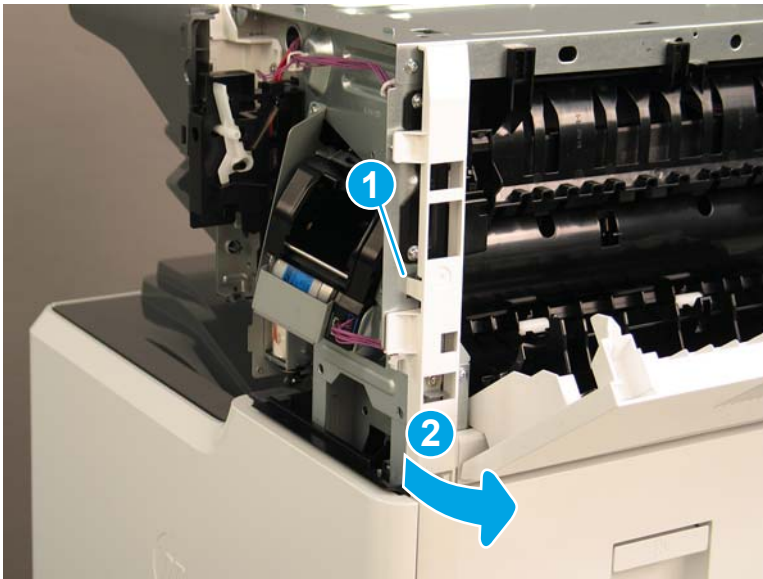


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1152 Remove the stapler/stacker rear corner cover

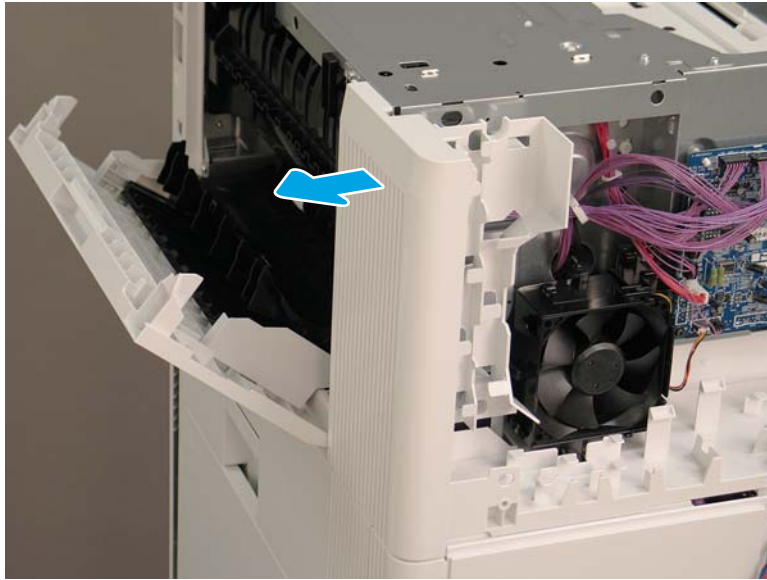


10. Remove two screws (callout 1).

Figure 1-1153 Remove two screws

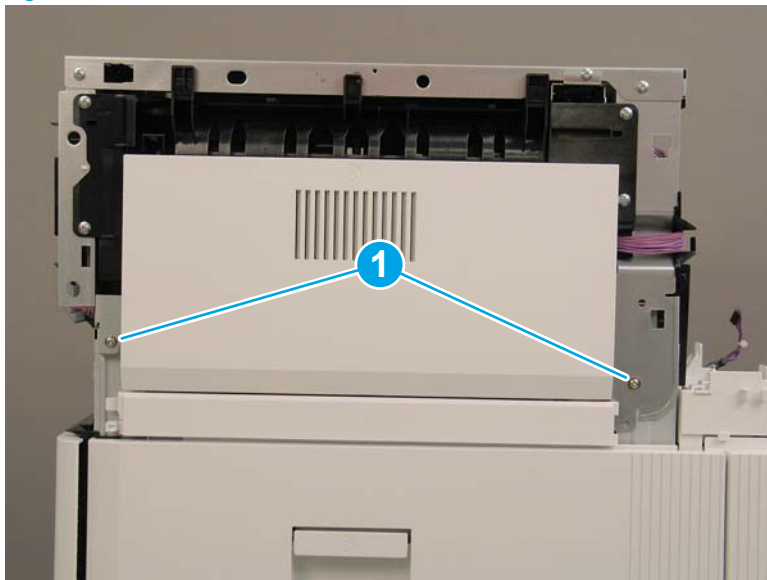


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1154 Remove the cable guide

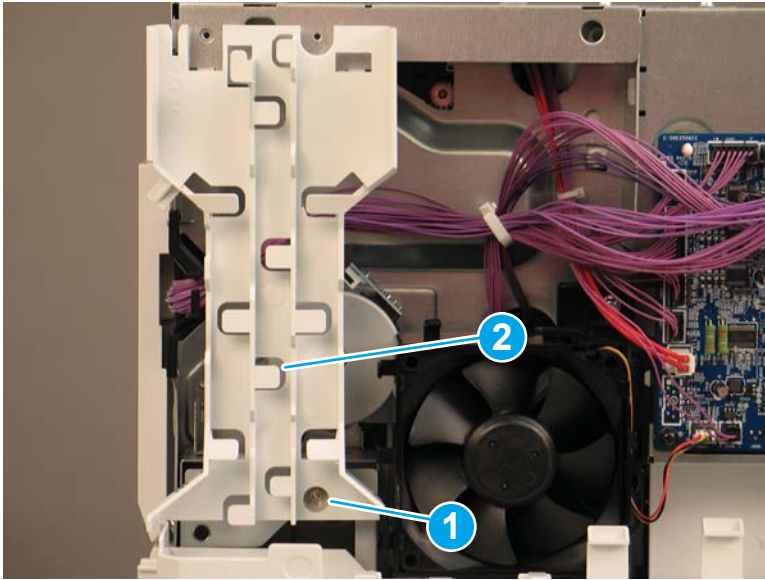

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1155 Disconnect one connector

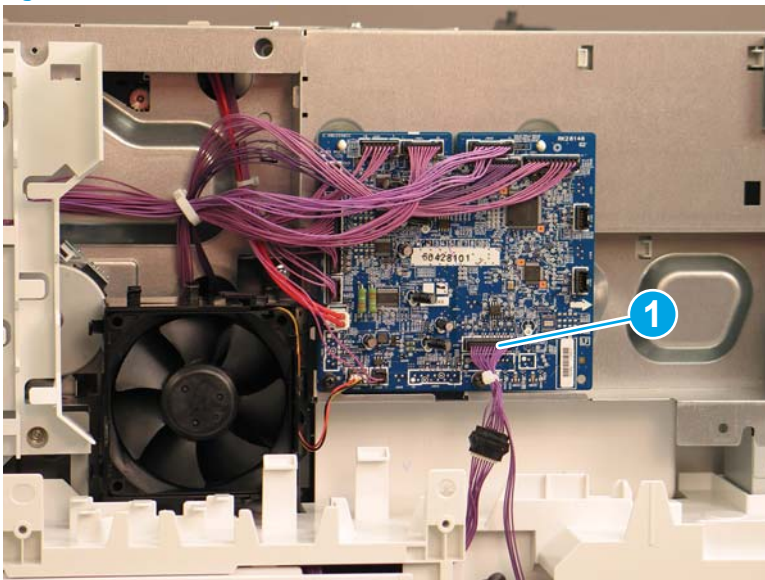



13. Remove two screws (callout 1).


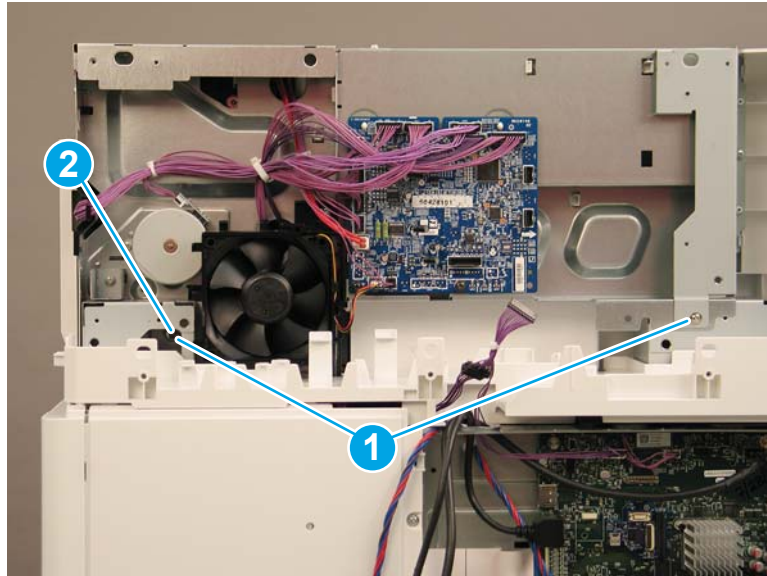
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1156 Remove two screws



14. Lift the stapler/stacker away from the printer.


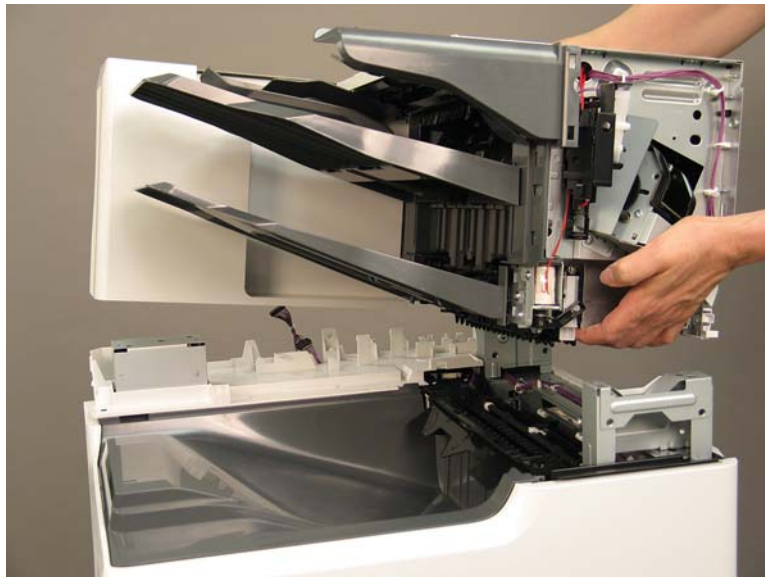

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1157 Remove the stapler/stacker




#### Step 6: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1158** Remove the face-down front cover

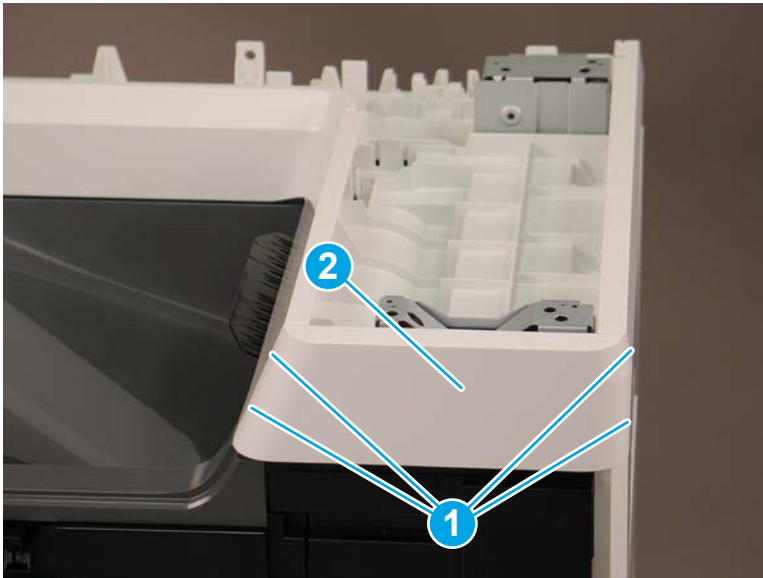

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Face-down front cover


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1159** Install the cover

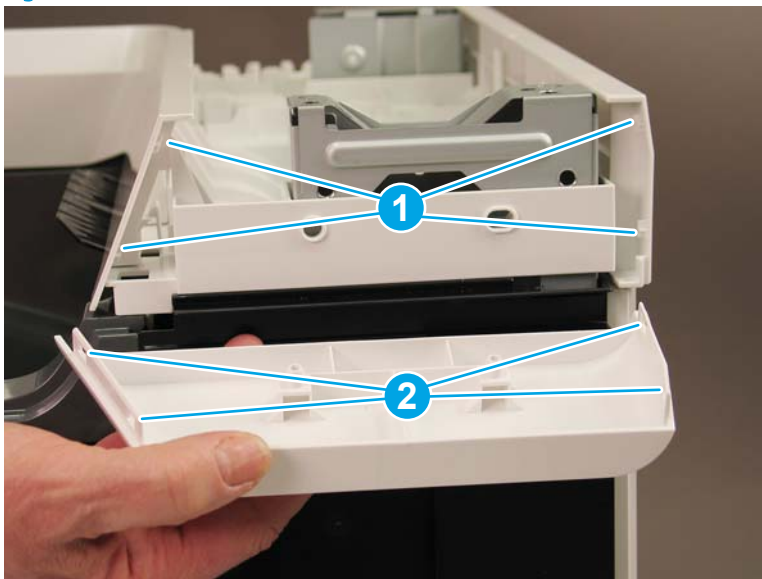



### Step 7: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)

▲ Release two tabs (callout 1), and then remove the top cover (callout 2).


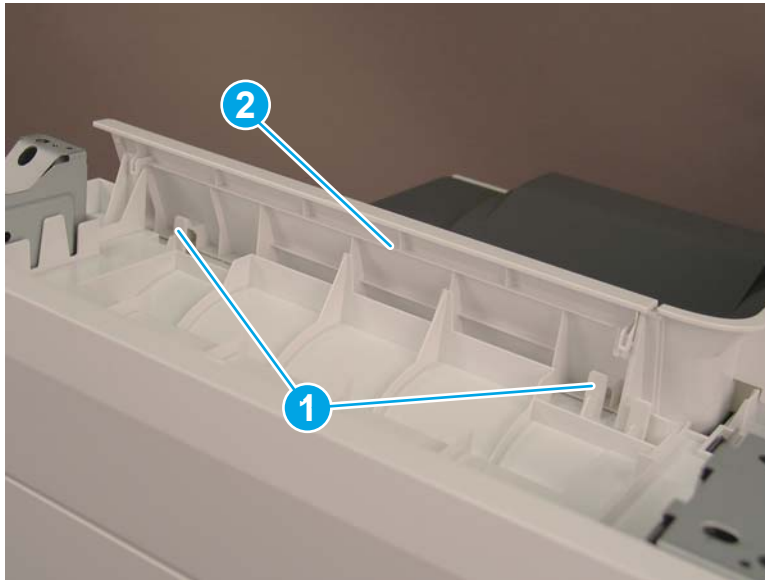

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1160 Remove the top cover



### Step 8: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)

▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


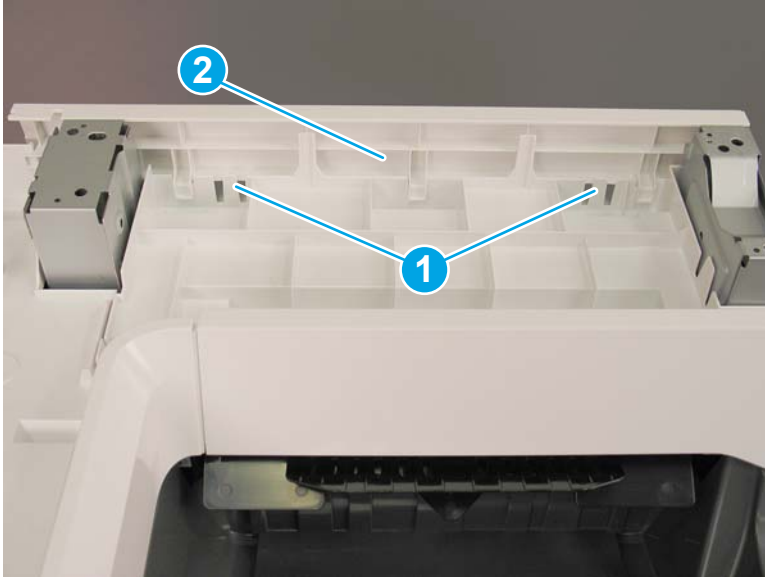

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1161 Remove the right cover



Step 9: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 757

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


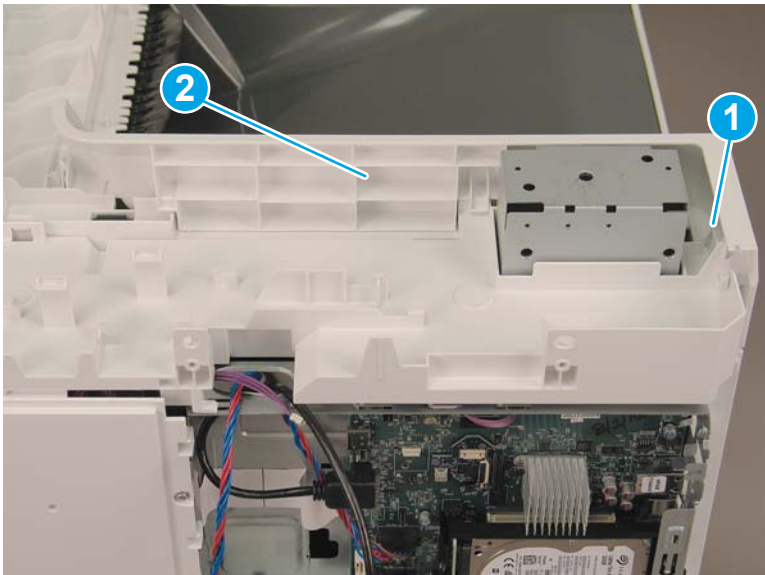

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1162 Remove the front cover




### Step 10: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)


▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1163 Remove the rear upper cover

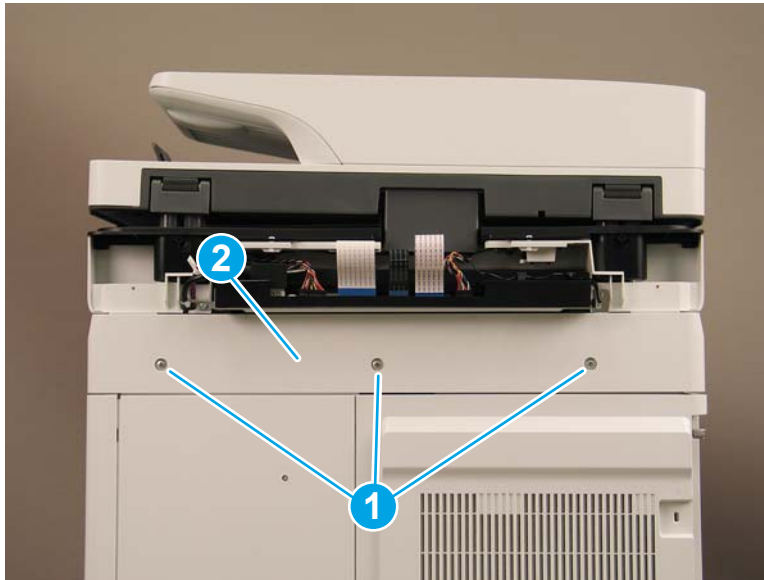


### Step 11: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)


▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1164 Remove two screws and the face-down cover

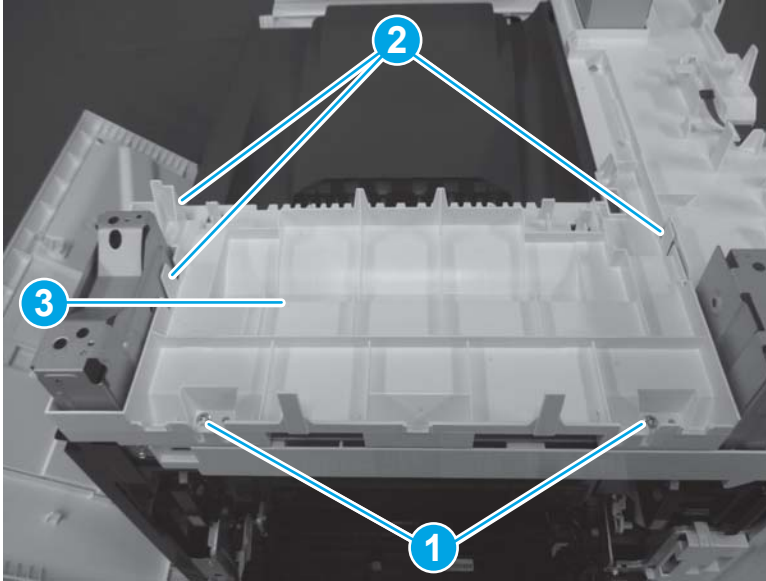


Step 12: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 757](#)


1. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-1165 Remove two screws and release one tab

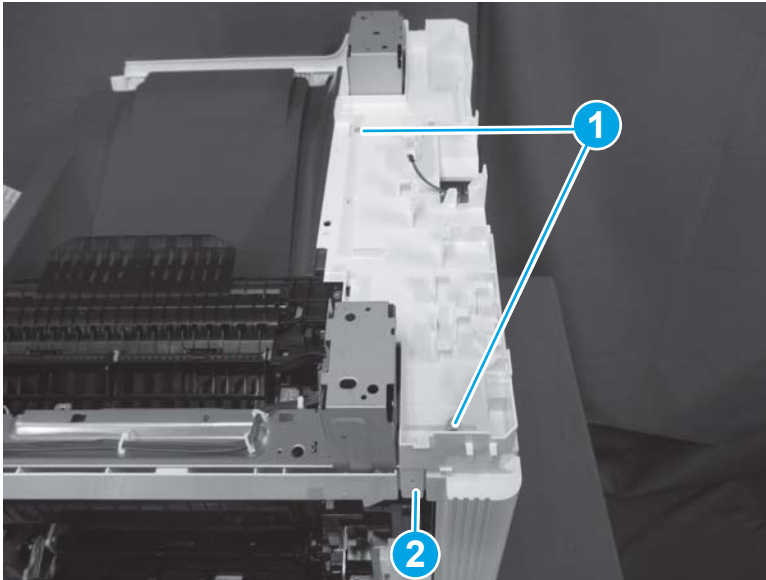


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


---

**Figure 1-1166** Remove one screw and the main cover

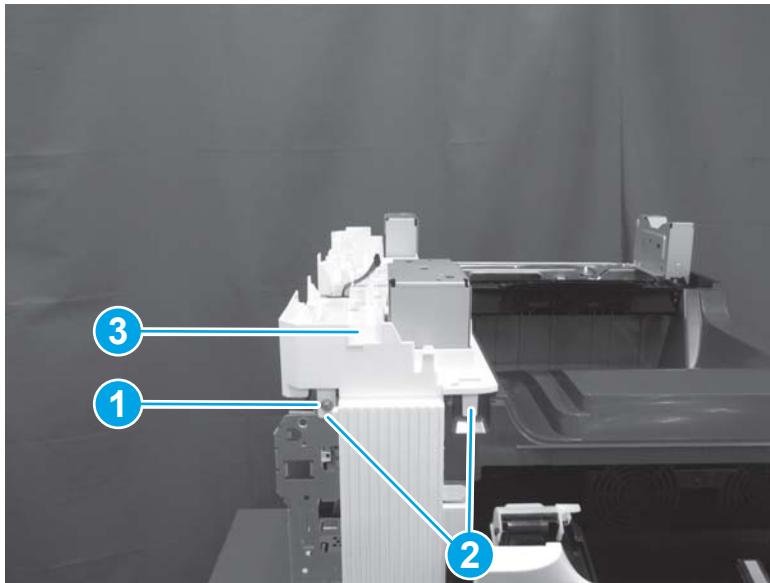

### Step 13: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

---

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 762](#)

---

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

---

1. Tilt the control panel to the fully raised position.

**Figure 1-1167** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

Figure 1-1168 Remove the cover



3. Remove one thumbscrew (callout 1)

---

 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.


---

Figure 1-1169 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-1170 Release the control panel

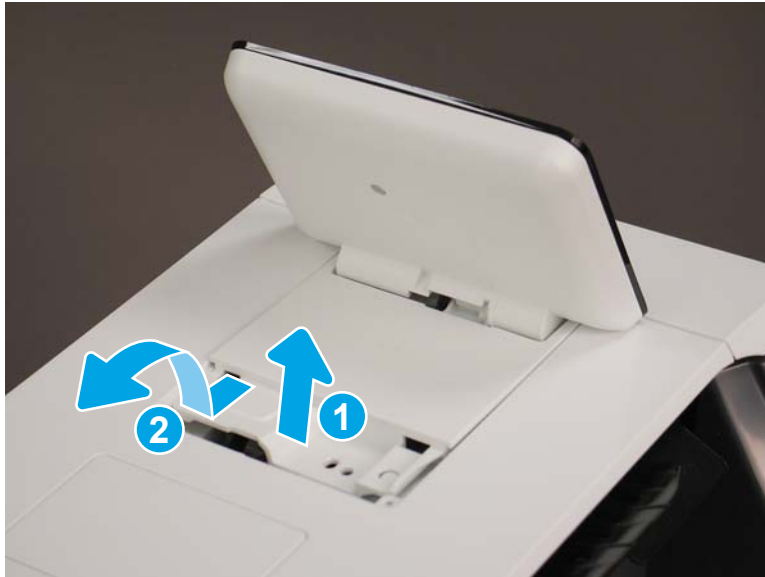

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-1171 Disconnect two connectors

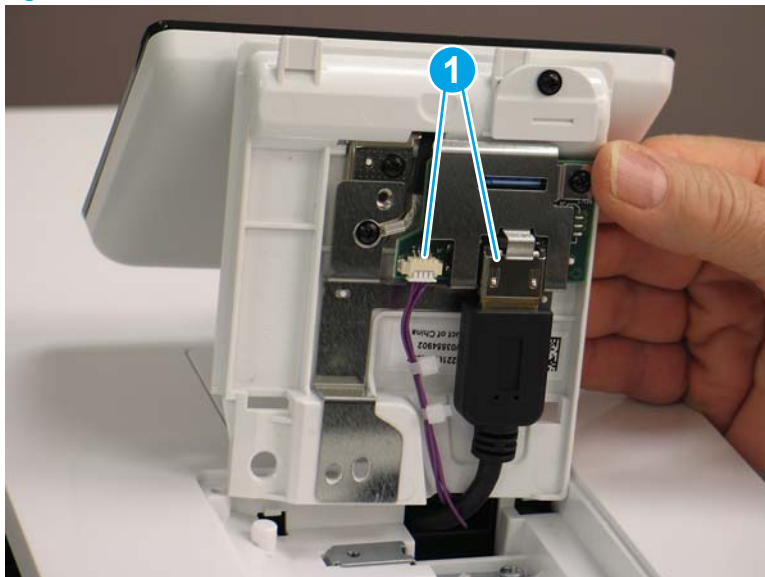


6. Remove the control panel.

**Figure 1-1172** Remove the control panel



**Step 14: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)**

---

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660, skip this step and go to [Step 15: Remove the output bin on page 762](#)


---

1. Open the following doors:
  - Front door
  - Left door
  - Right door




2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1173 Remove the NFC cover

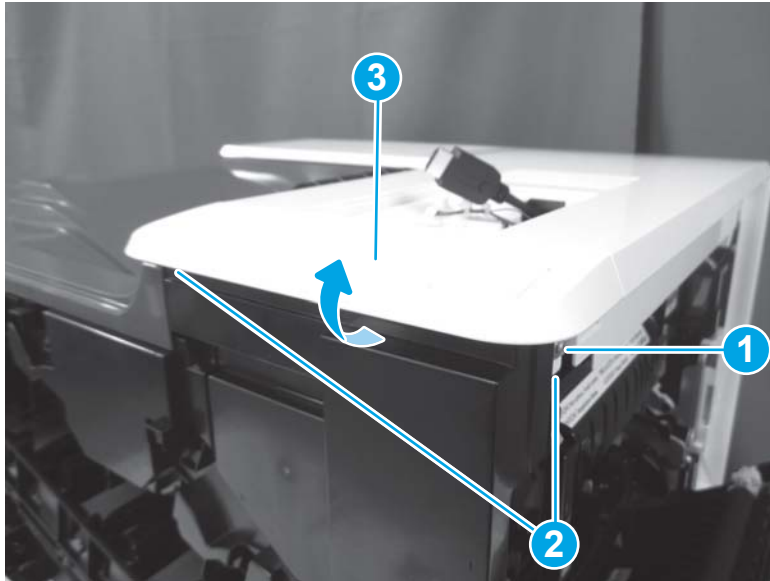


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1174 Remove one screw and release one tab

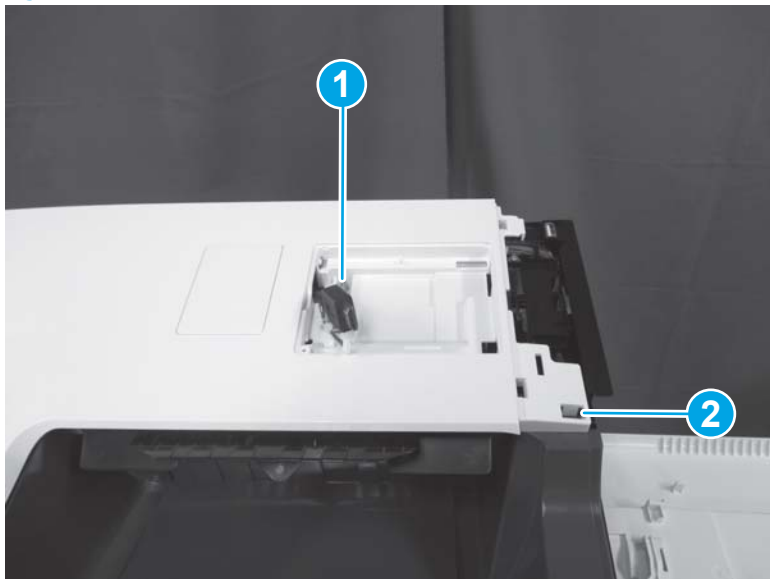

4. Release two tabs (callout 1).

Figure 1-1175 Release two tabs

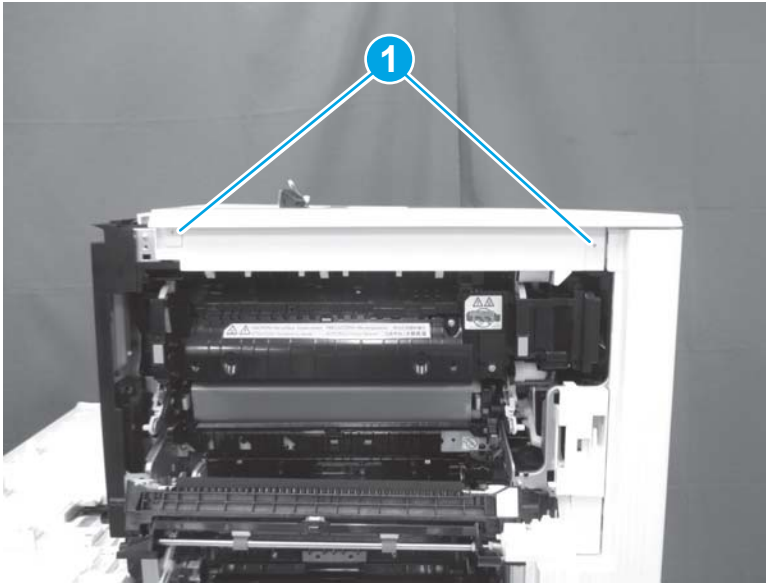

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


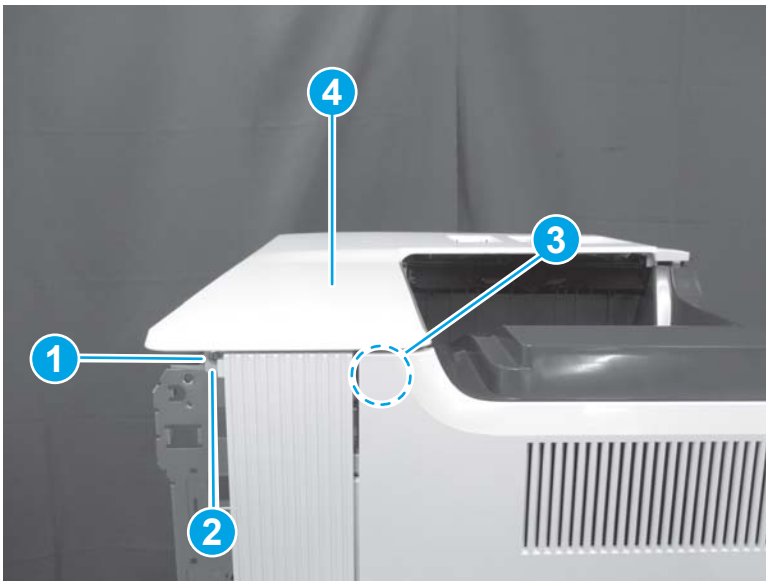
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1176 Remove the top cover




### Step 15: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---

Figure 1-1177 Remove the output bin

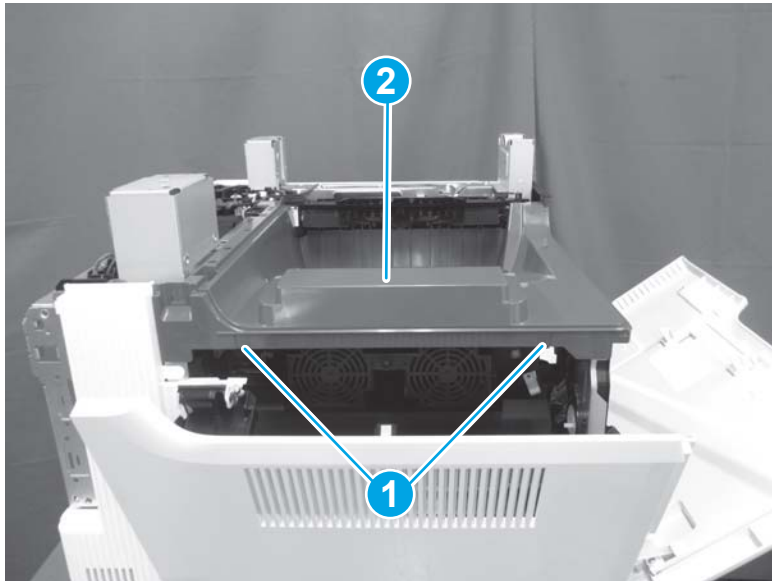

#### Step 16: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1178 Remove the formatter cover

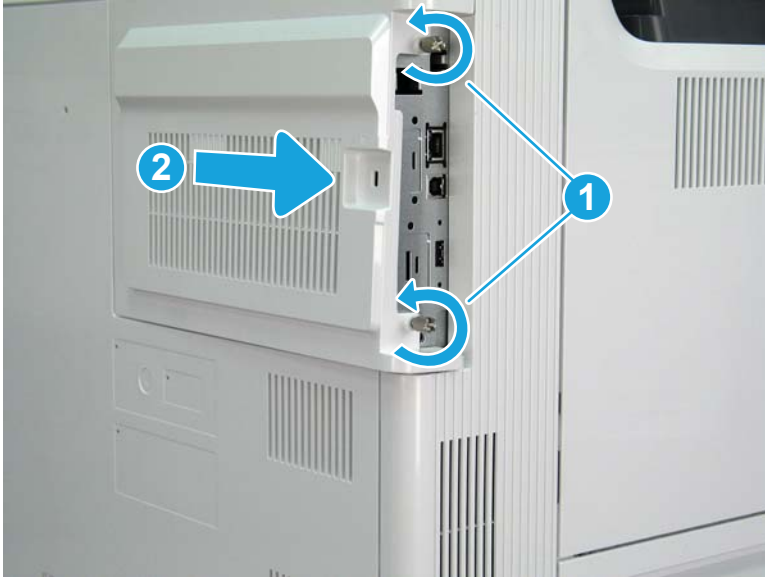


Step 17: Remove the left door

1. Open front door.

Figure 1-1179 Open front door




2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1180 Remove the left door

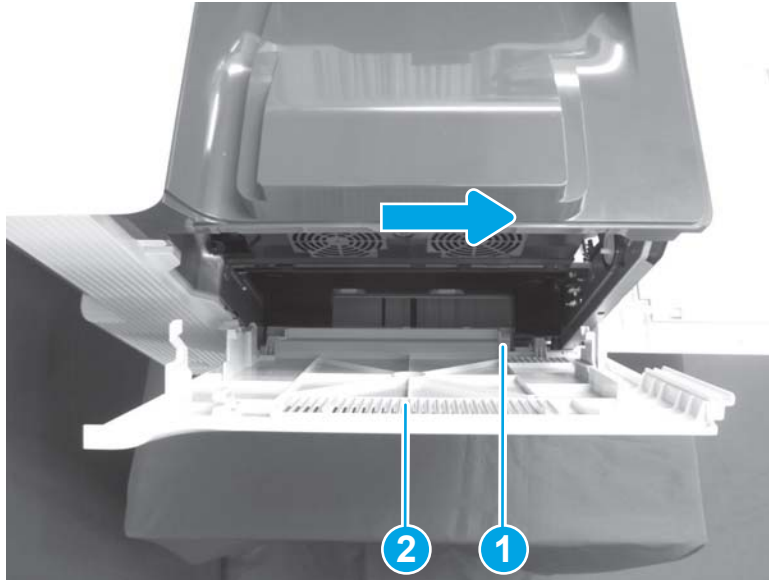

#### Step 18: Remove the toner carry assembly


1. Disconnect three connectors (callout 1), and then release the cables from two retainers (callout 2).

Figure 1-1181 Disconnect three connectors

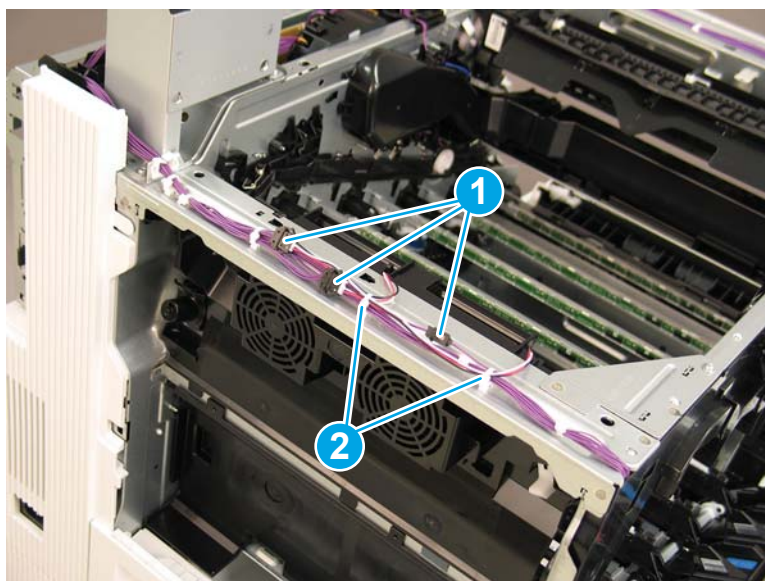

2. Release two tabs (callout 1). Make sure that the top edge of the panel is below the sheet metal frame (callout 2). Release the left side of the panel (callout 3), and then slide the cartridge panel to the left (callout 4) to remove it.


Figure 1-1182 Remove the cartridge panel

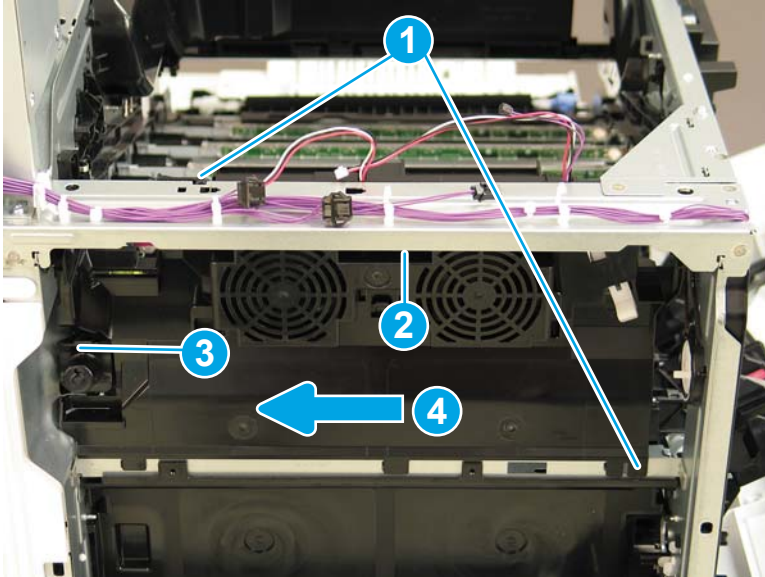

3. Inside the printer, release one tab (callout 1), and then slide the toner carry assembly toward the left door opening (callout 2).

 **TIP:** Use a pair of needle-nose pliers to lightly pull the tab away from the printer.

Figure 1-1183 Release the toner carry assembly

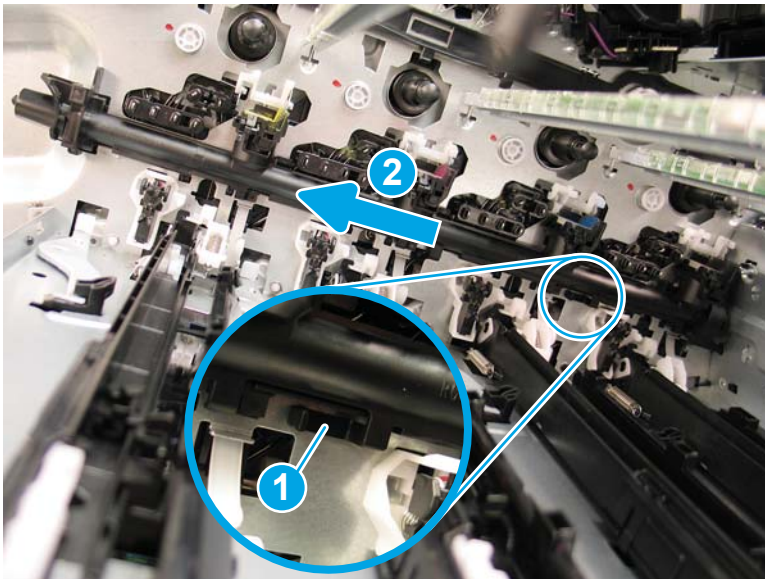



4. Remove the toner carry assembly.

 **IMPORTANT:** Keep the toner carry assembly in an upright position to avoid spilling toner.

**Figure 1-1184** Remove the toner carry assembly




5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Toner carry assembly**


- a. When reinstalling the toner carry assembly, make sure that the tab on the gear at the end of the assembly (callout 1) aligns with the opening (callout 2) next to the gear in the printer.

**Figure 1-1185** Align the gears

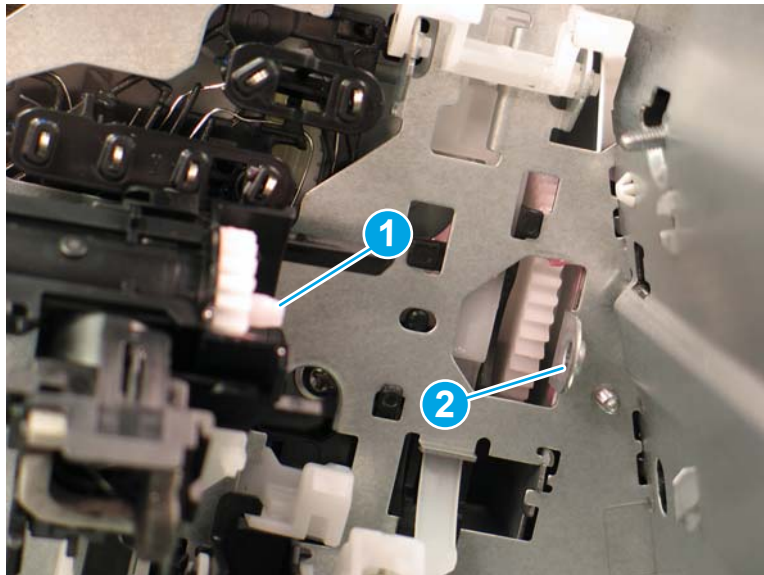

- b. Align the tabs (callout 1) on the toner carry assembly with the slots (callout 2) in the printer, and then slide the assembly toward the right of the printer to install it.

Figure 1-1186 Align the tabs

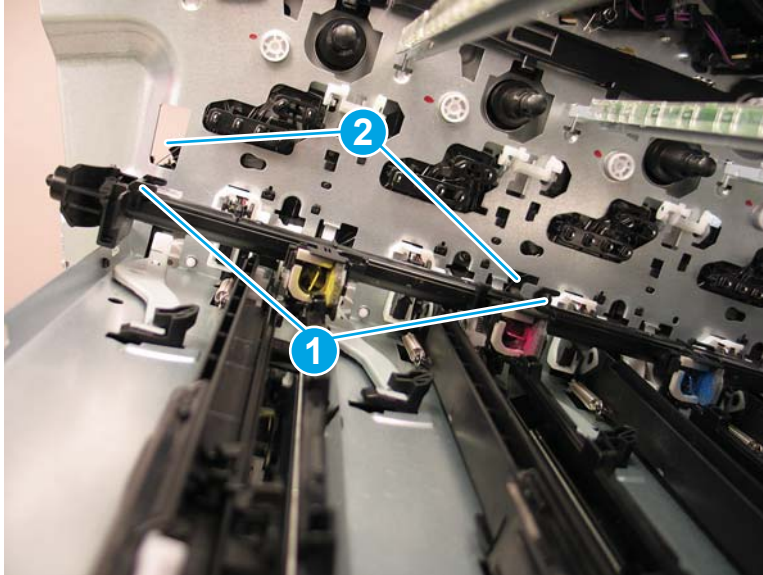


- c. Install the right side of the cartridge panel first. Position the tab (callout 1) on the cartridge panel into the slot (callout 2) in the sheet metal frame.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

Figure 1-1187 Install the cartridge panel

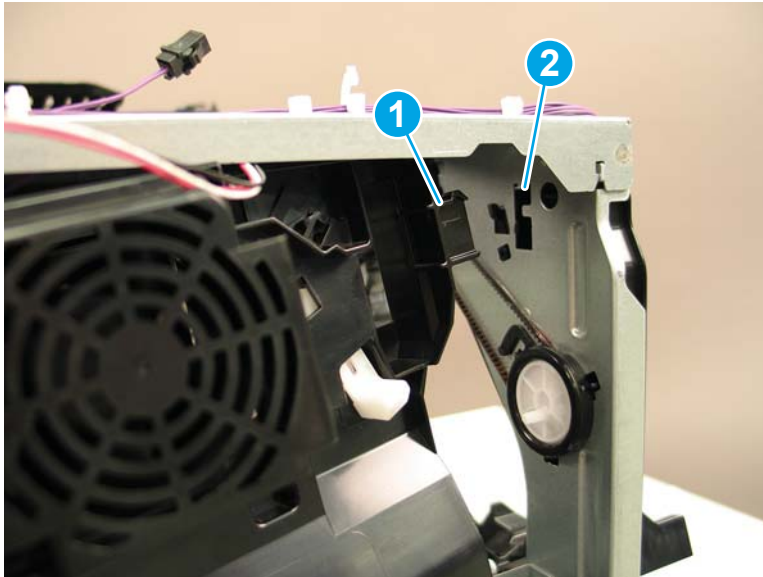


### Step 19: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Estrangement detect PCA

- [Introduction](#)
- [Step 1: Remove the fuser](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 6: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the output bin](#)
- [Step 16: Remove the formatter cover](#)
- [Step 17: Remove the estrangement detect PCA](#)
- [Step 18: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the estrangement detect PCA.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



---

**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Estrangement detect PCA part number	
RM2-7157-000CN	Estrangement detect PCA

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the fuser


1. Open the right door.

**Figure 1-1188** Open the right door




2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).

Figure 1-1189 Remove the fuser

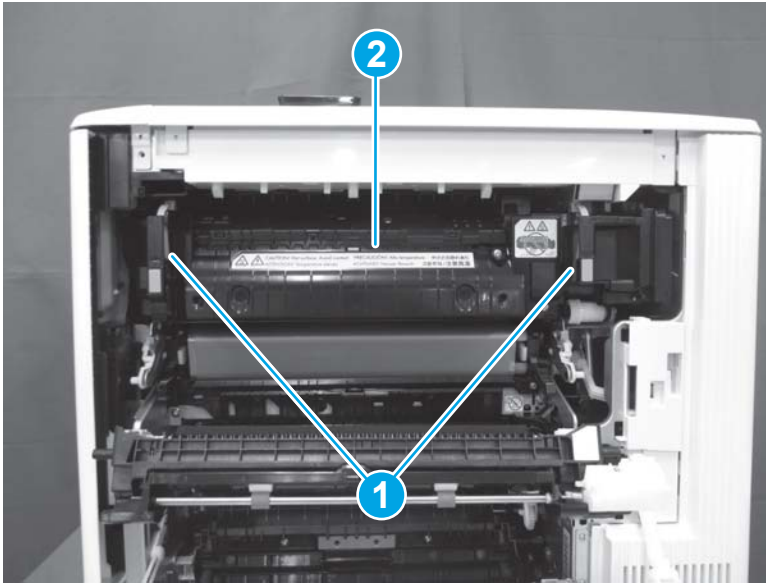

#### Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1190 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1191 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1192 Remove the cover



4. Open the connector latch to release the keyboard flex cable.

**Figure 1-1193** Disconnect the keyboard flex cable

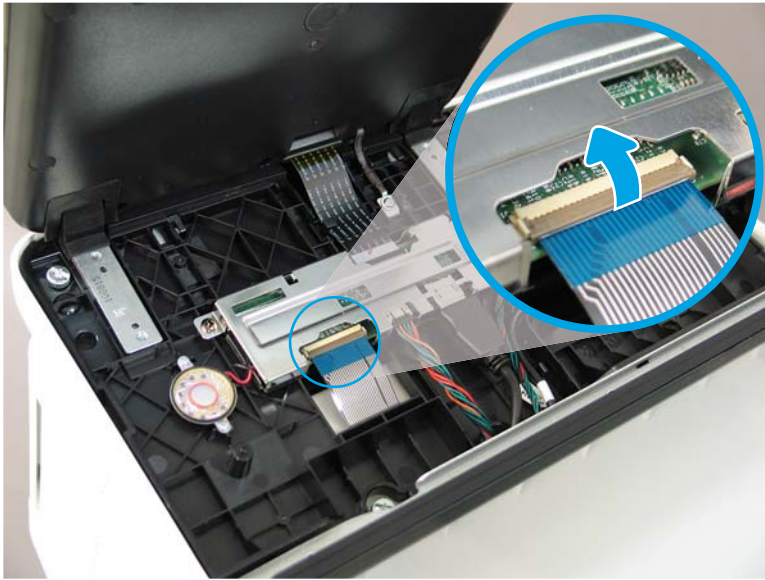

5. Slide the keyboard tray out until it stops.

**Figure 1-1194** Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1195 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1196 Remove the keyboard



### Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1197 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1198 Release five tabs






3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1199 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-1200 Disconnect the keyboard flat cable (keyboard models only)

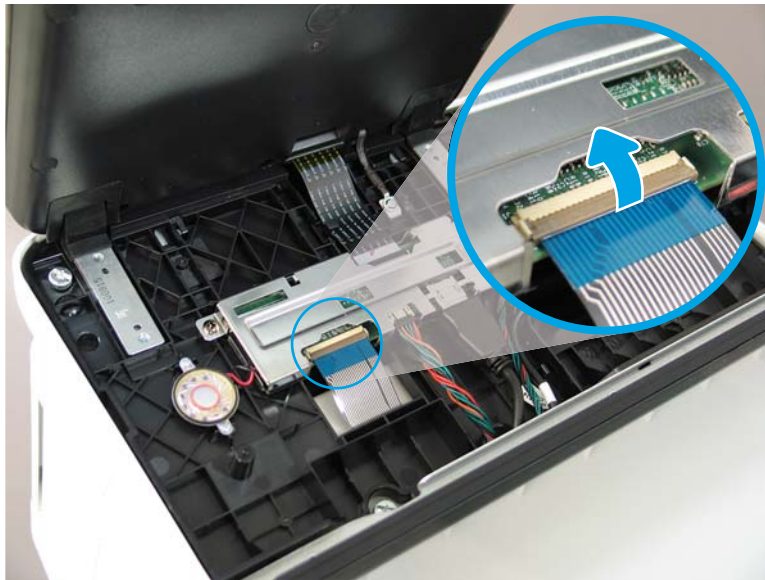


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-1201 Disconnect connectors

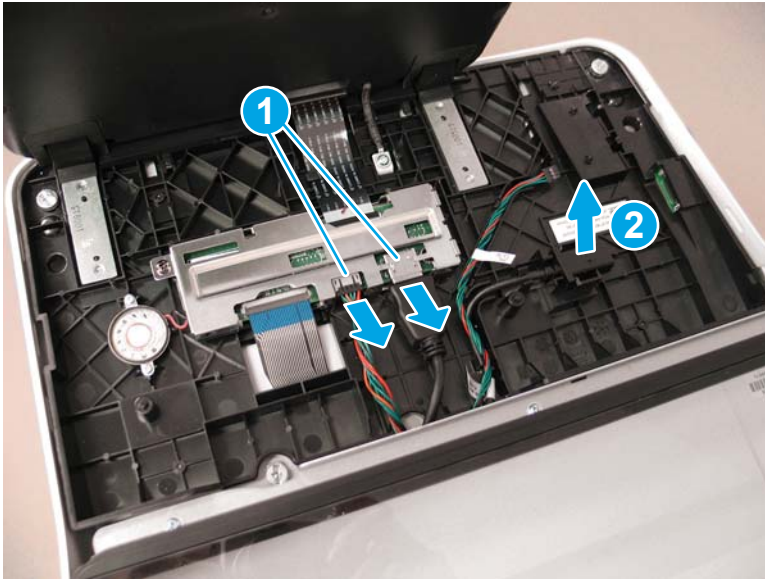


6. Remove three thumbscrews (callout 1).

Figure 1-1202 Remove three thumbscrews

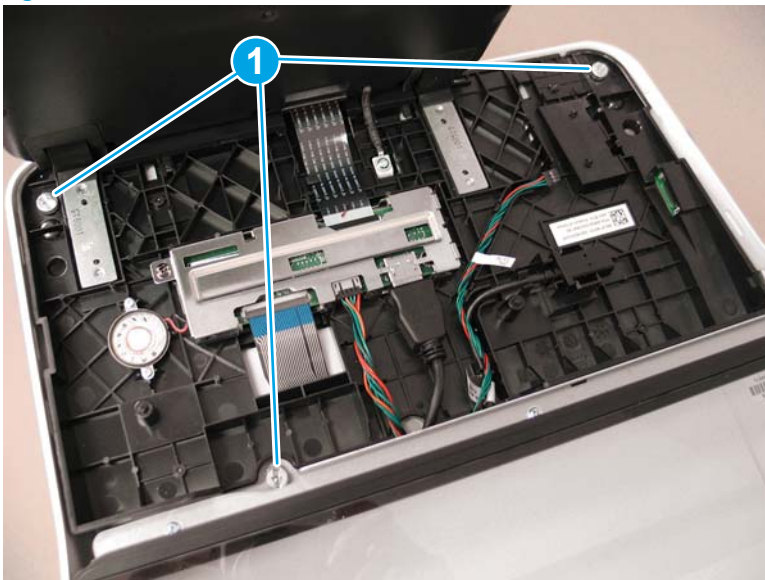


7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1203 Remove the control panel

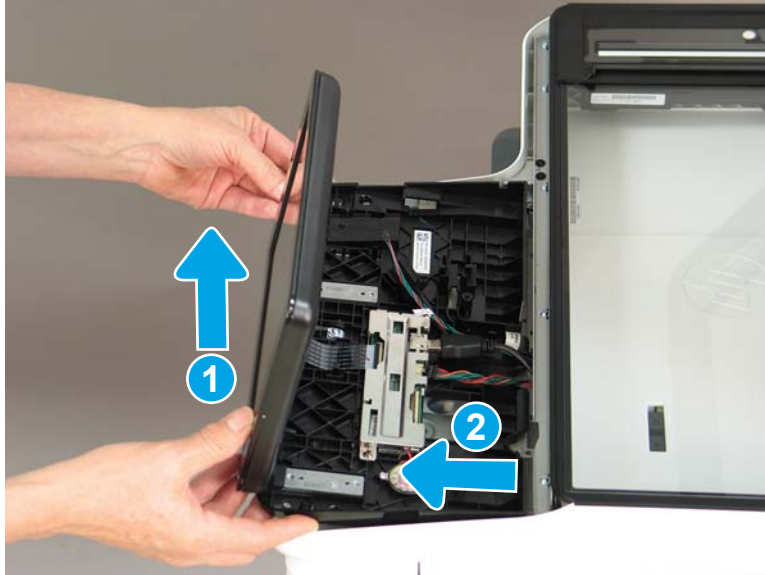


#### Step 4: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1204 Remove the SCB cover

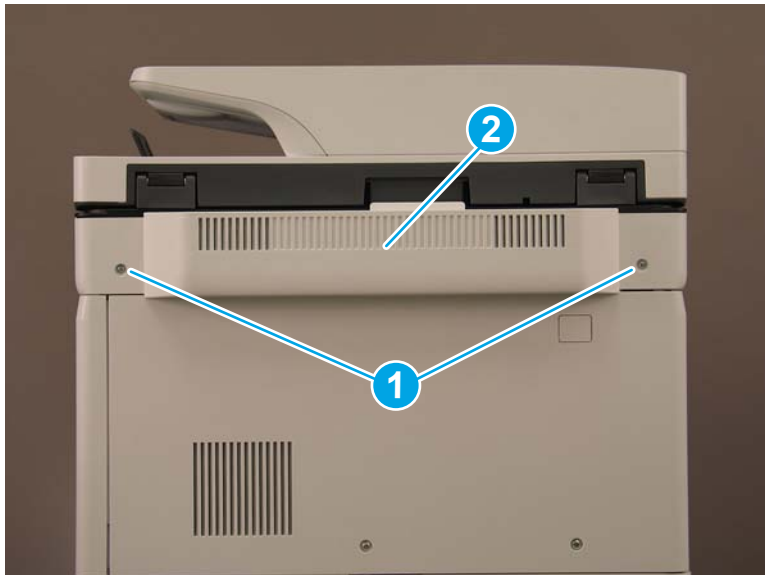


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-1205 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-1206 Remove the stapler/stacker rear cover

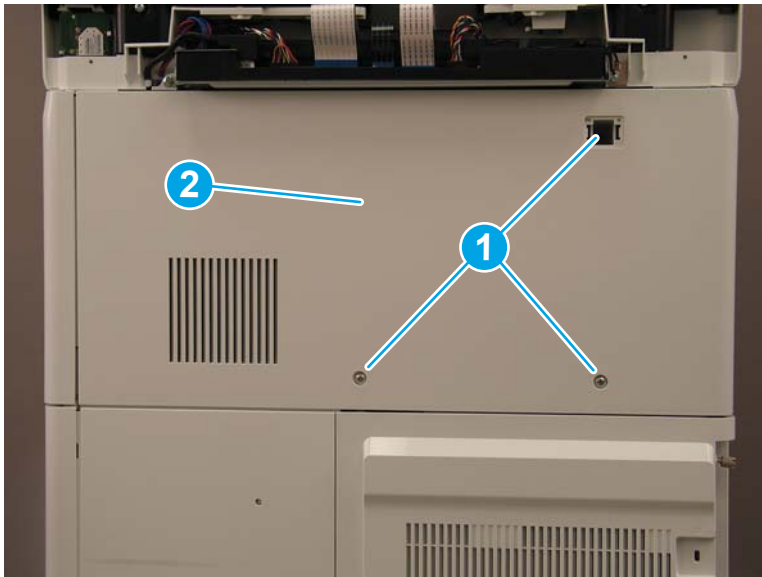


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-1207 Remove the upper rear cover

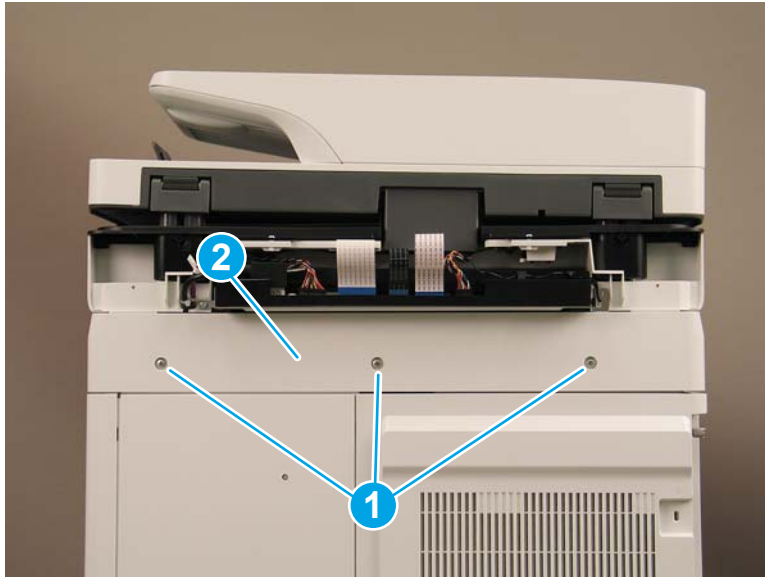


4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-1208 Remove the formatter cover

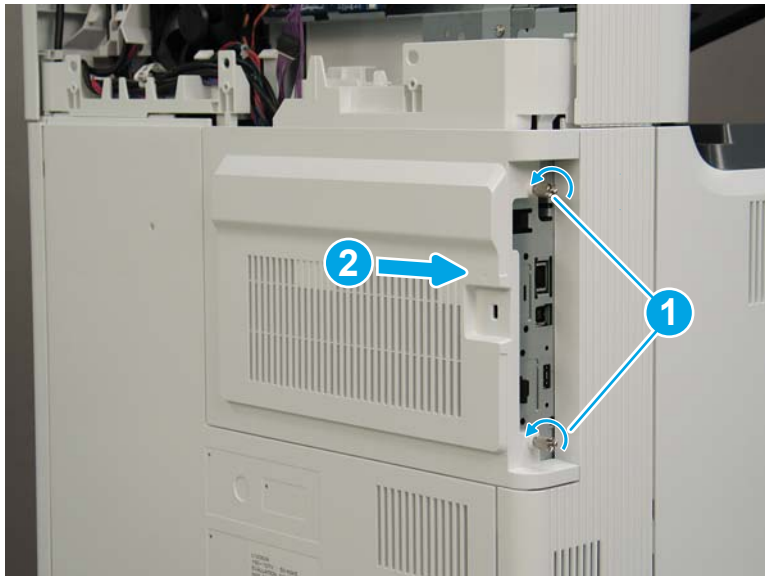


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

**Figure 1-1209** Cable routing for M681dh, M681f, and Flow M681f

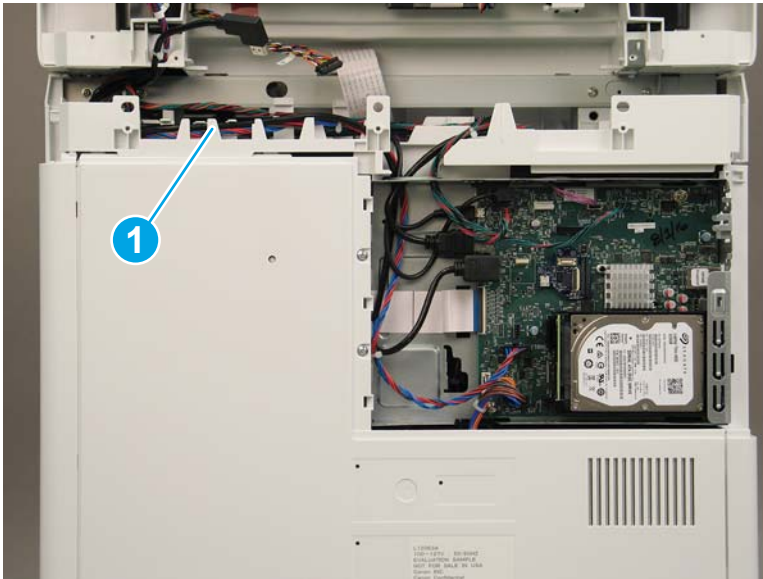

6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

**Figure 1-1210** Disconnect two connectors

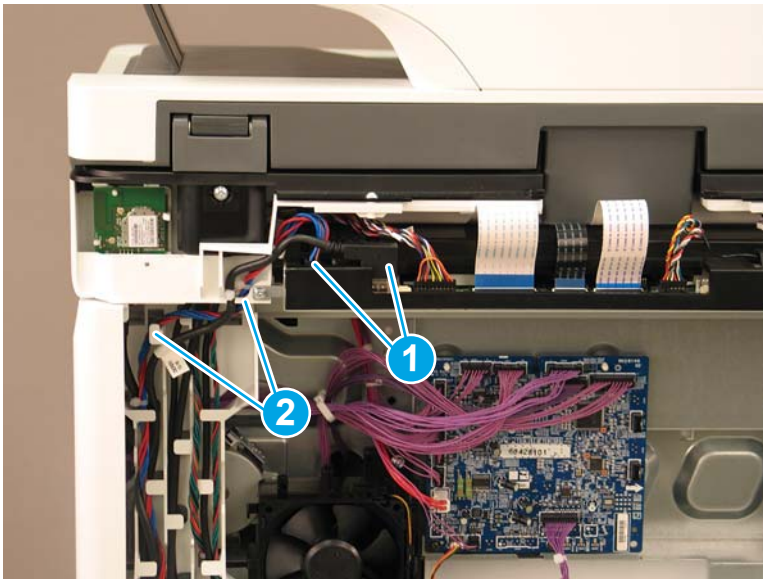




7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1211 Disconnect five connectors




8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1212 Disconnect the wireless connector

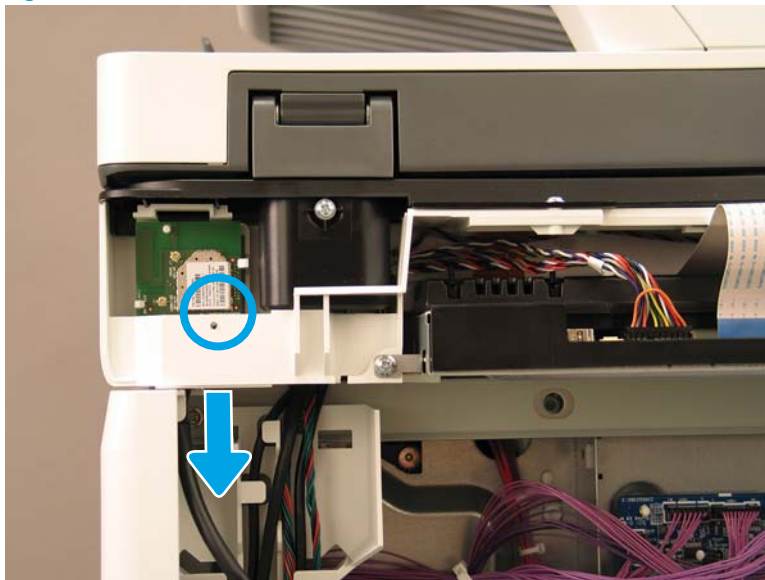


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1213 Release the cables

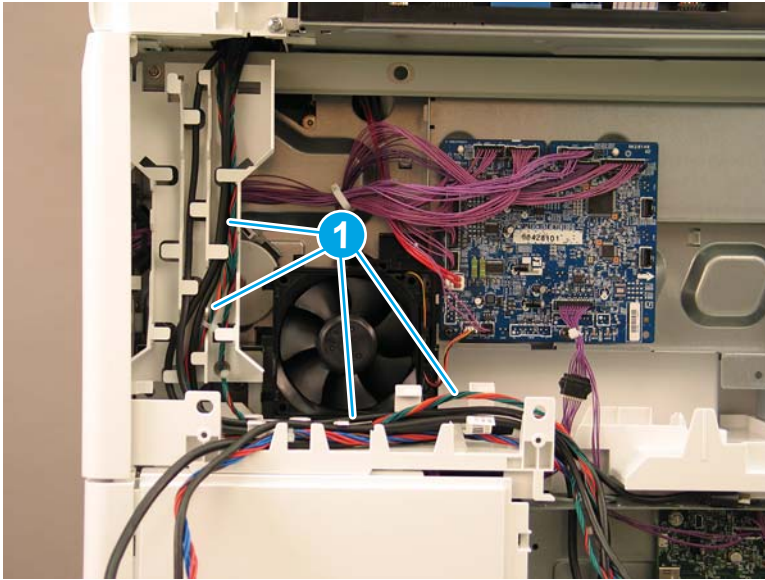

10. At the back of the printer, remove four screws (callout 1).


Figure 1-1214 Remove four screws

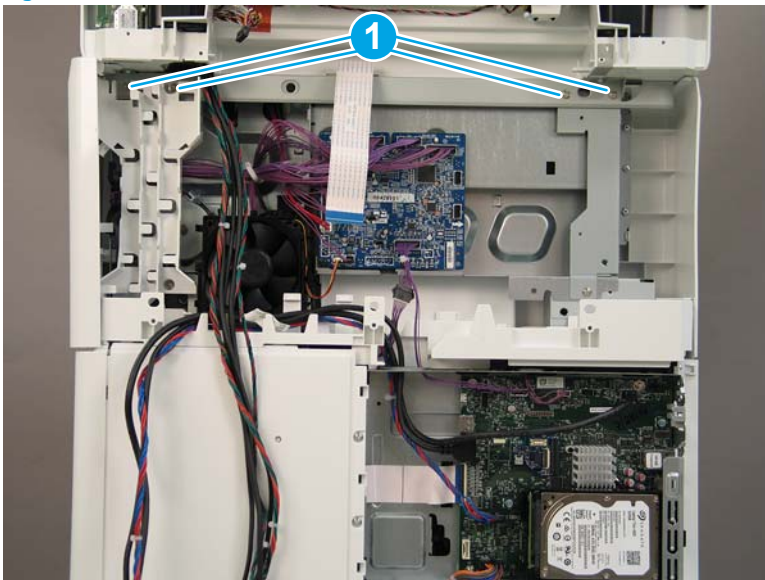



11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1215 Remove three screws

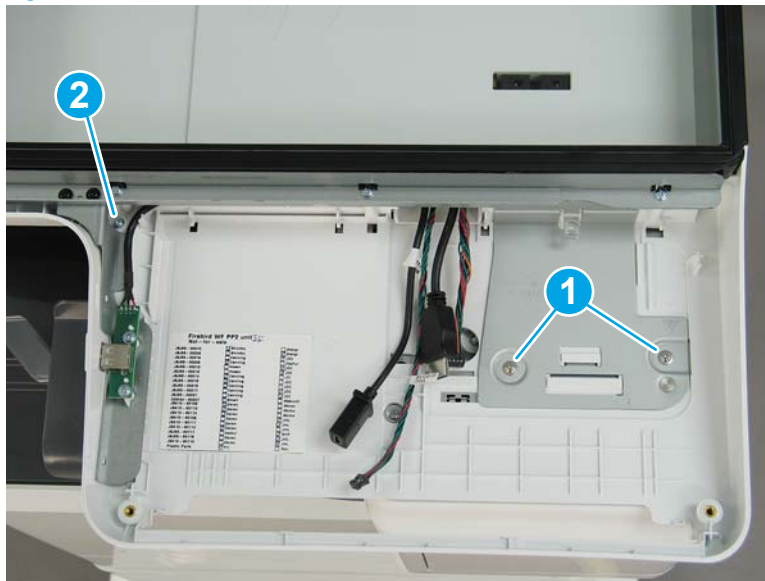

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-1216 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-1217 Remove the wireless card

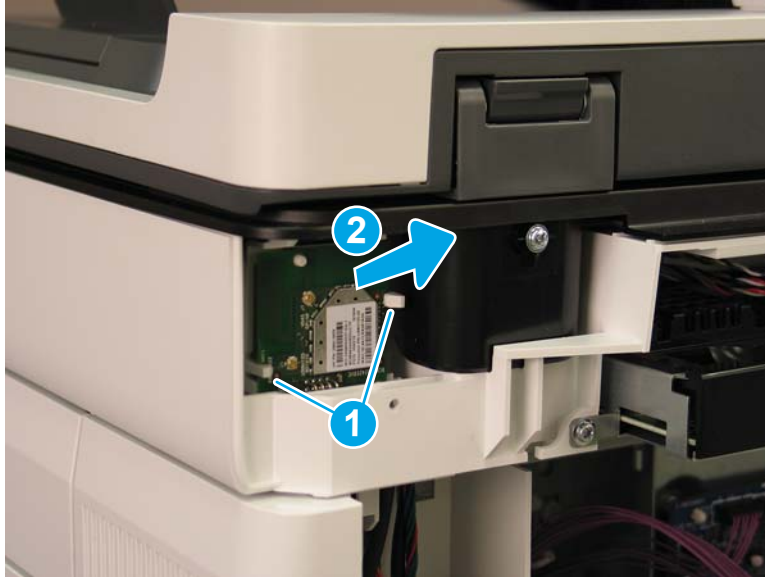


- ii. Connect the cable to the wireless card (callout 1).

Figure 1-1218 Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

**Figure 1-1219** Reinstall the wireless card

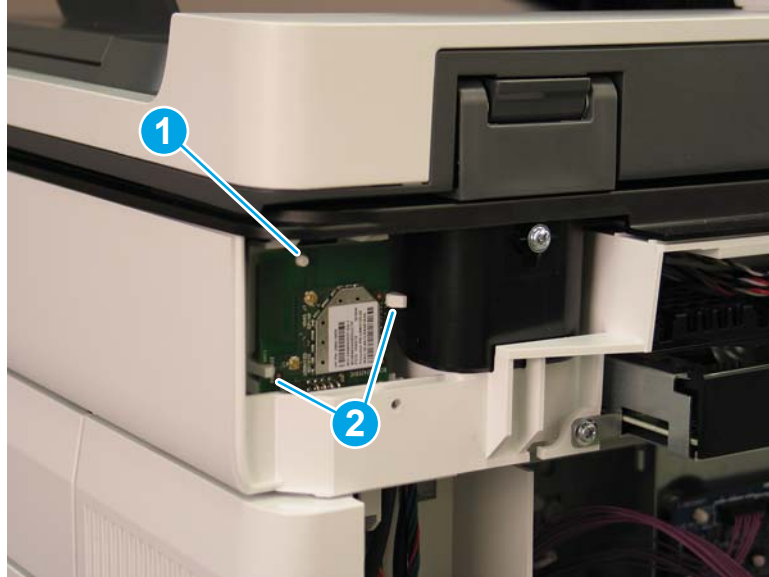


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

**Figure 1-1220** Install the SCB cables

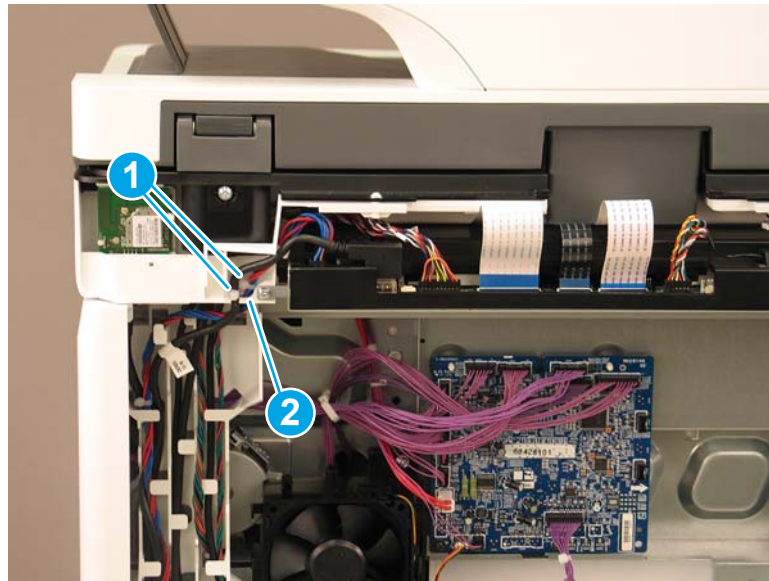

#### Step 5: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. Open the front door.

Figure 1-1221 Open the front door




2. Open the stapler door.

Figure 1-1222 Open the stapler door



3. Release the latch, and then remove the staple cartridge.

Figure 1-1223 Remove the staple cartridge

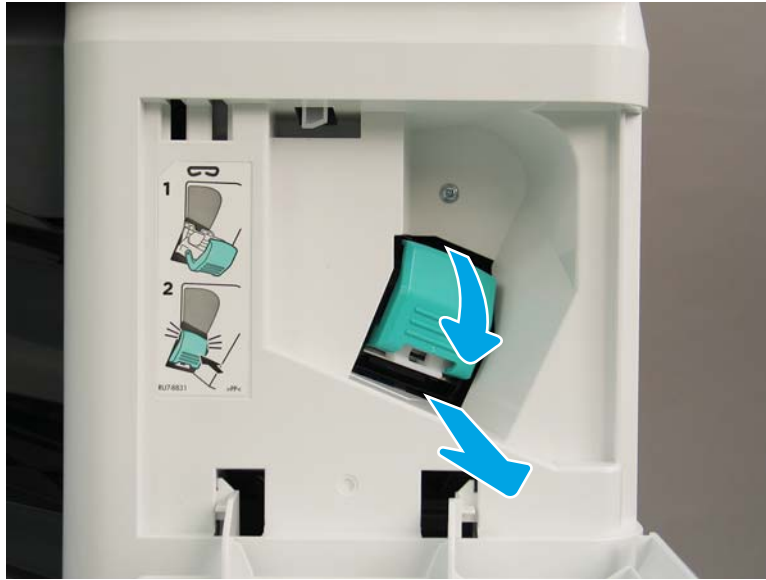


4. Remove one screw (callout 1).

Figure 1-1224 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-1225 Remove the stapler cover

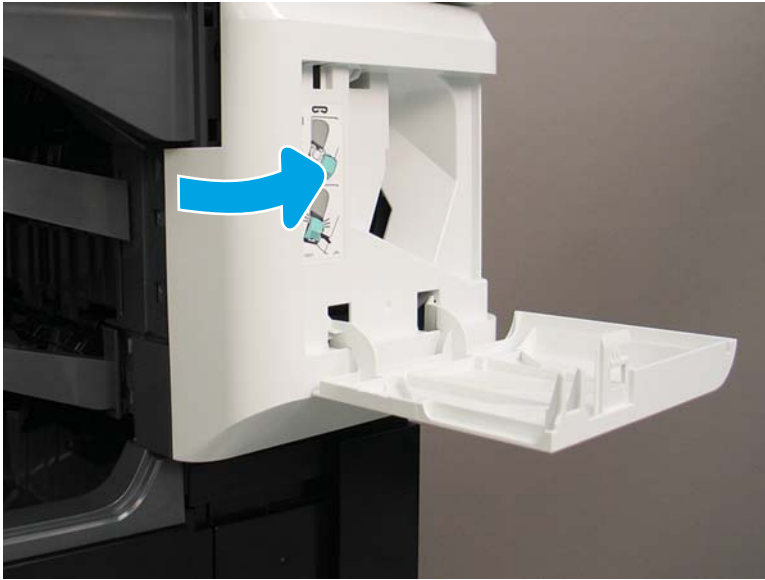


6. Remove one screw (callout 1).

Figure 1-1226 Remove one screw

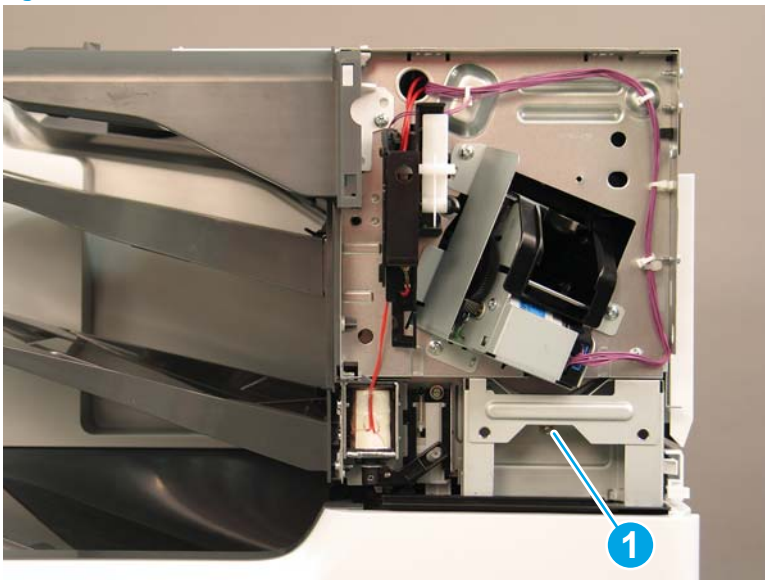


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1227 Remove the stapler/stacker right upper cover

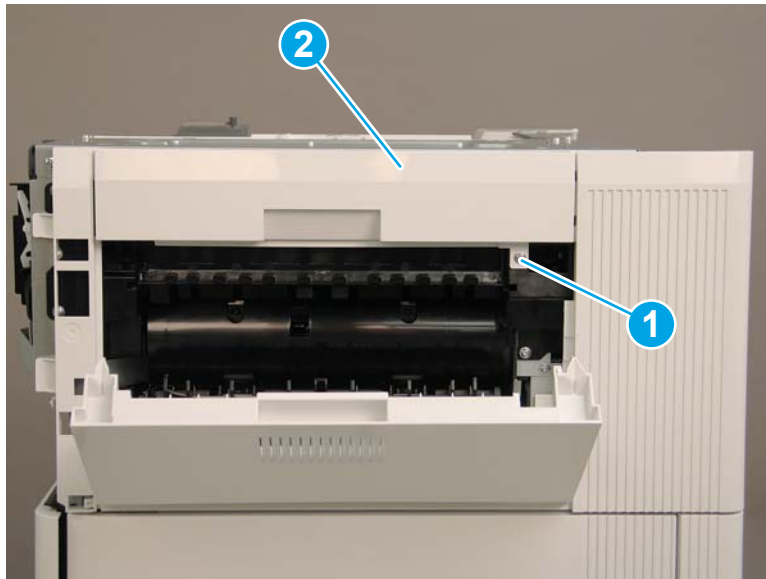

8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.


Figure 1-1228 Remove the stapler rear cover

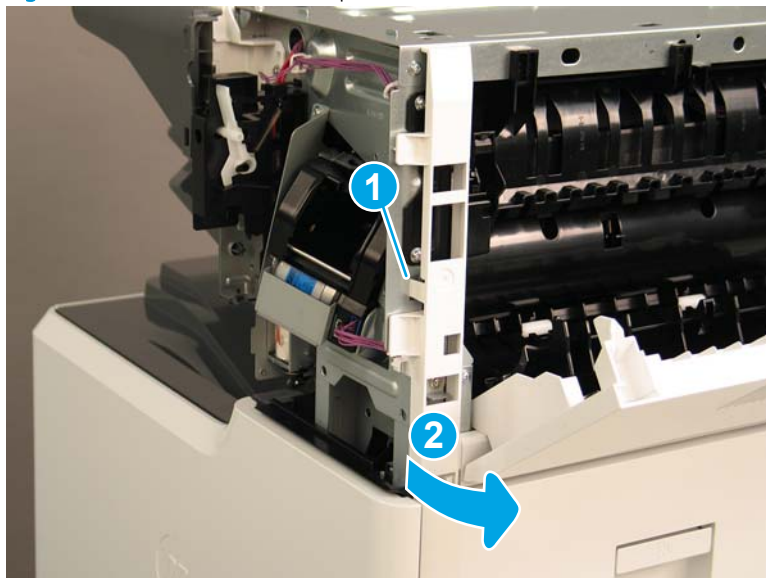




9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1229 Remove the stapler/stacker rear corner cover

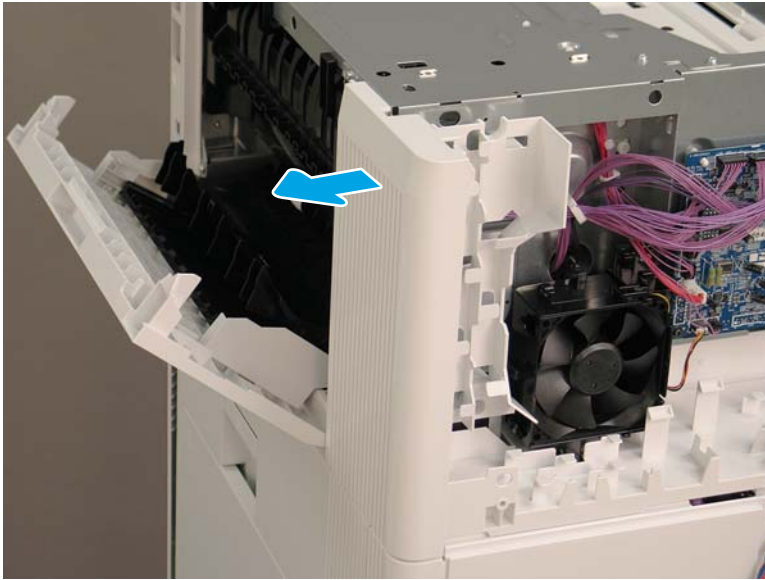

10. Remove two screws (callout 1).


Figure 1-1230 Remove two screws

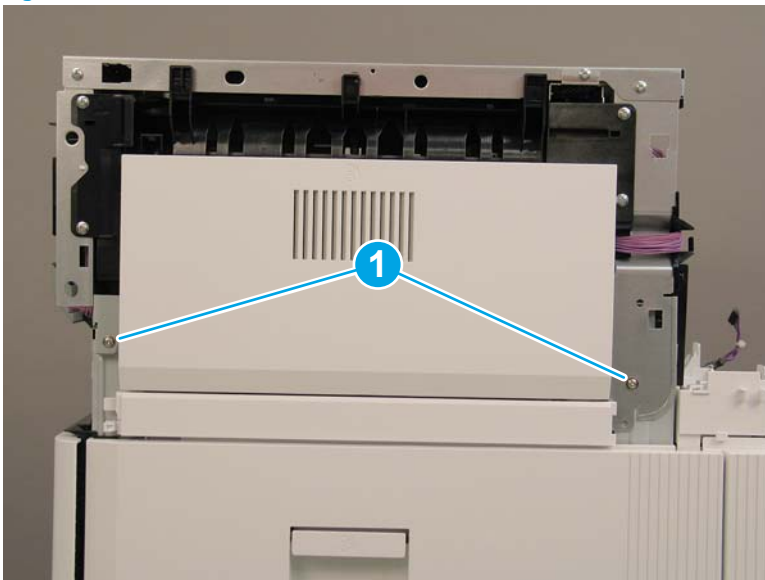




11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1231 Remove the cable guide

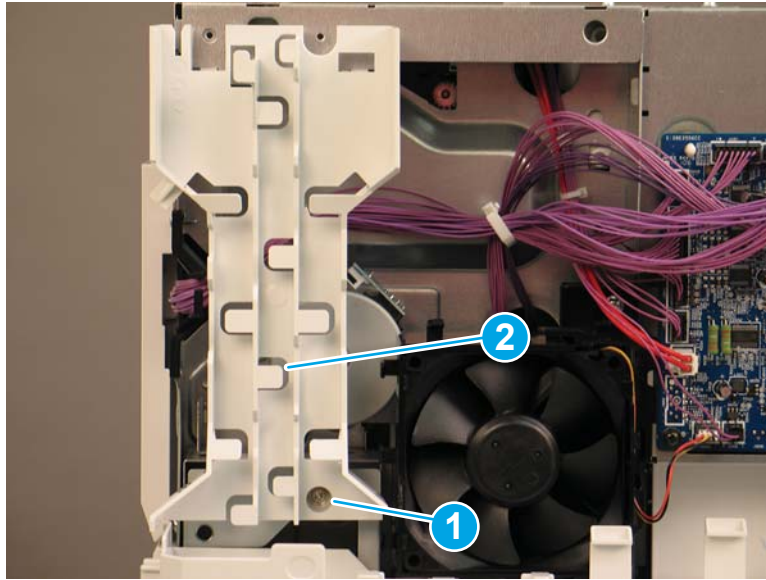

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1232 Disconnect one connector

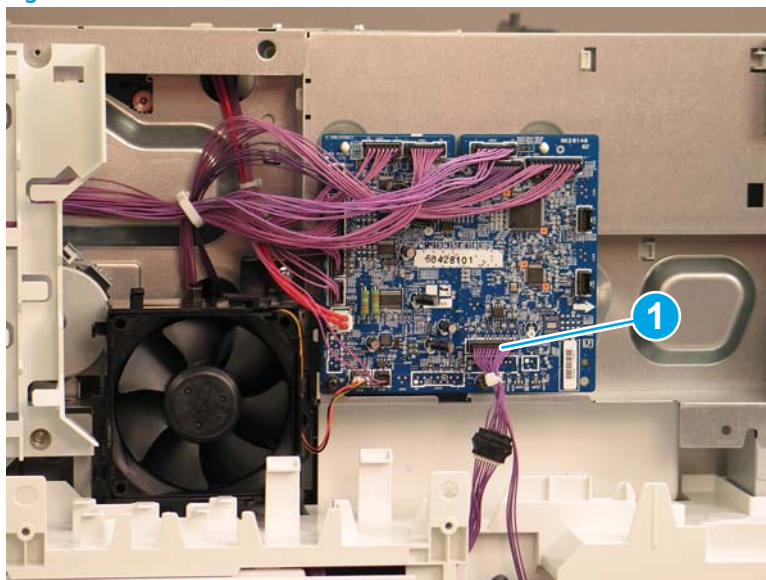

13. Remove two screws (callout 1).


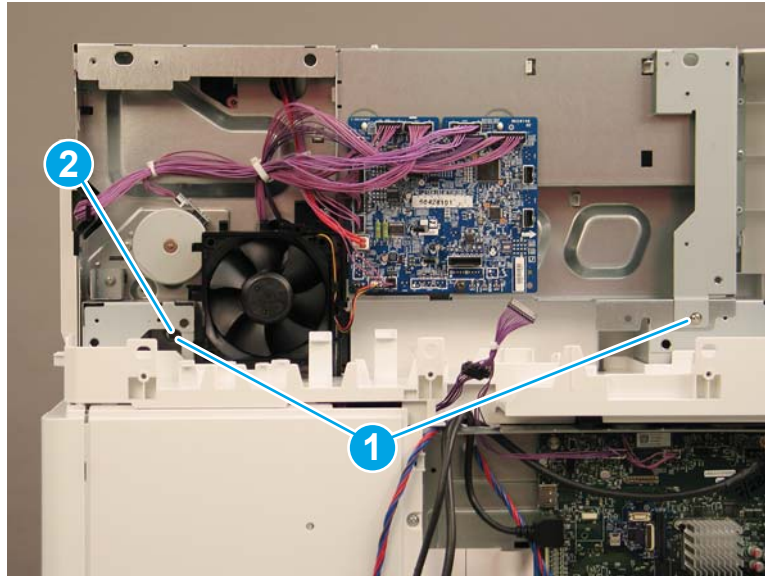
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1233 Remove two screws



14. Lift the stapler/stacker away from the printer.


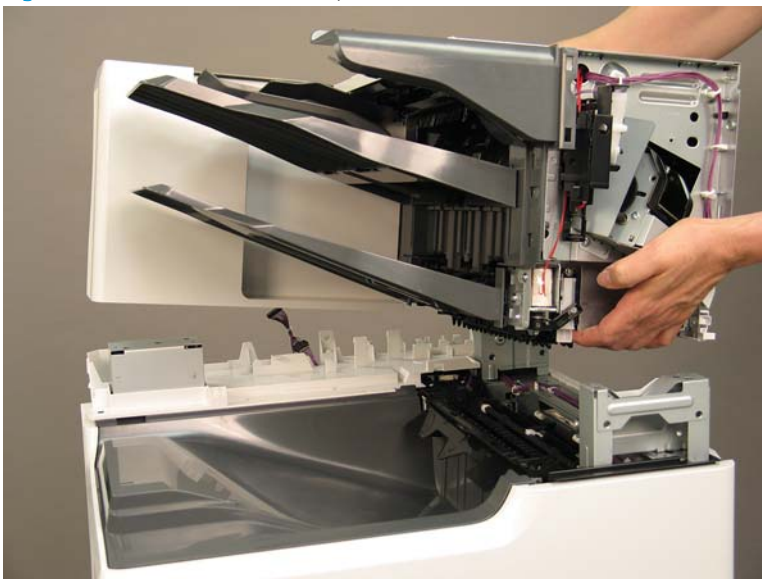

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1234 Remove the stapler/stacker




#### Step 6: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1235** Remove the face-down front cover

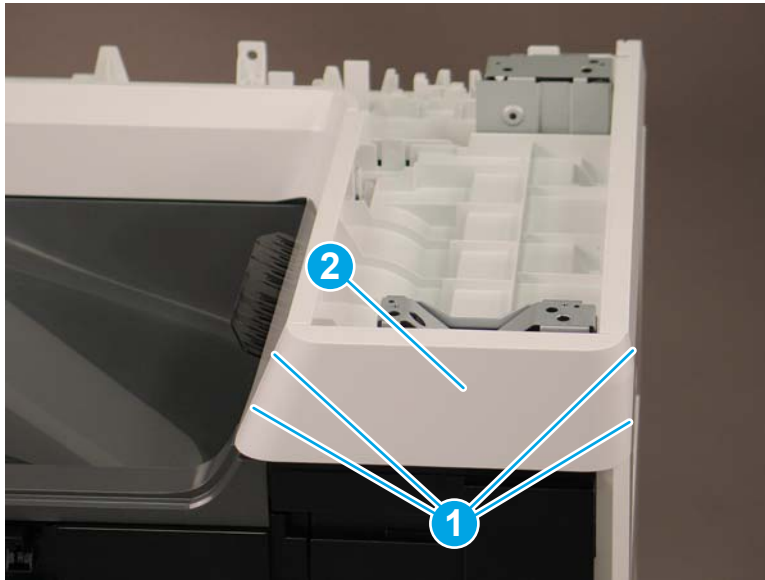


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


#### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1236** Install the cover

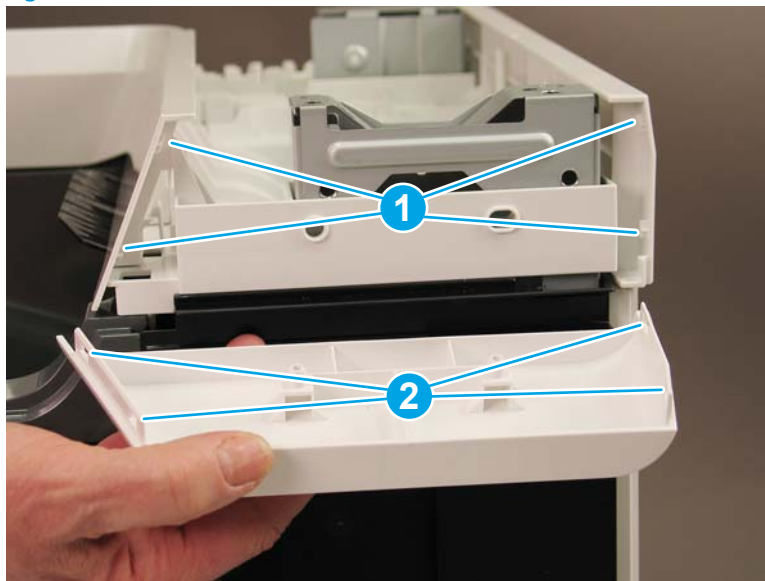


### Step 7: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)


▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1237** Remove the top cover

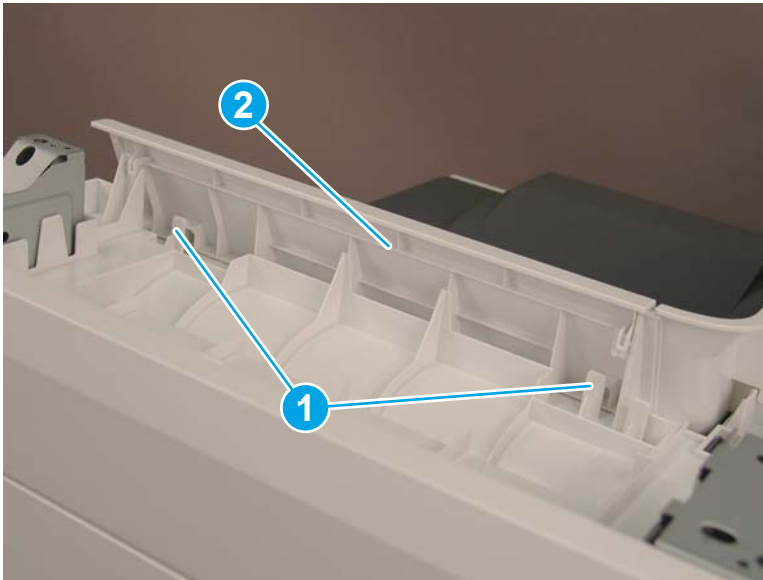

### Step 8: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


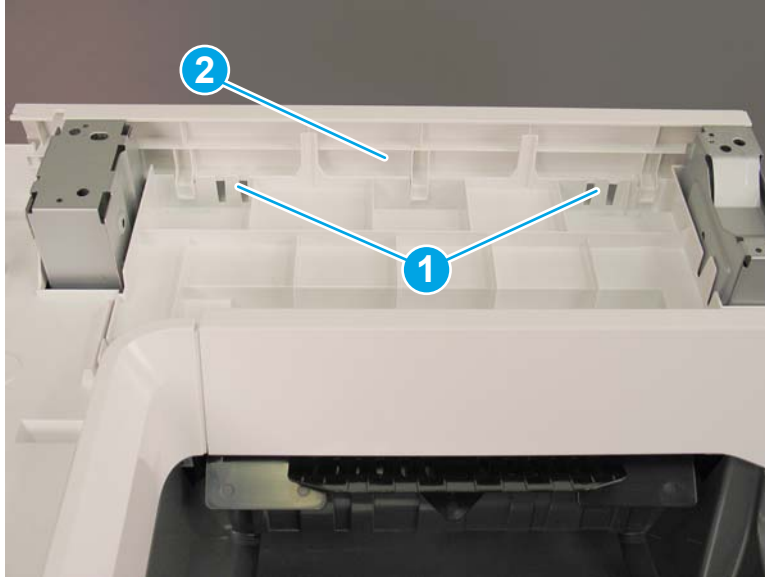

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1238 Remove the right cover




Step 9: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1239 Remove the front cover

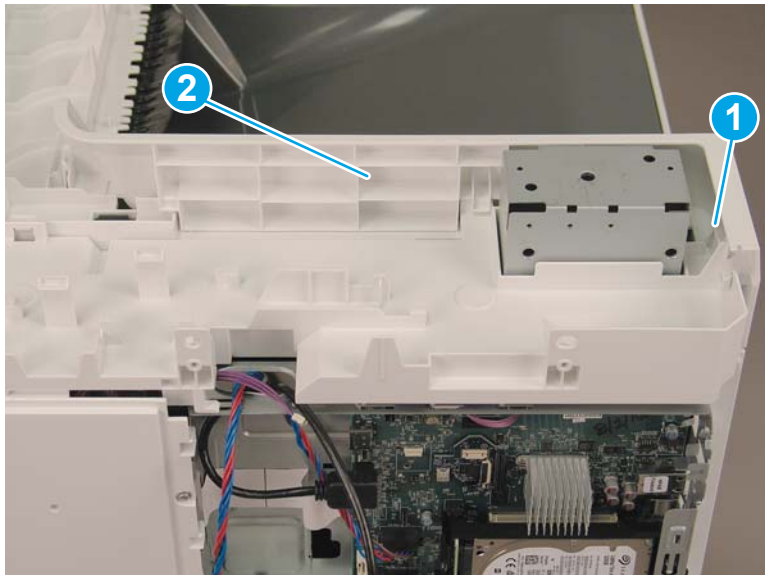


### Step 10: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)


▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1240 Remove the rear upper cover

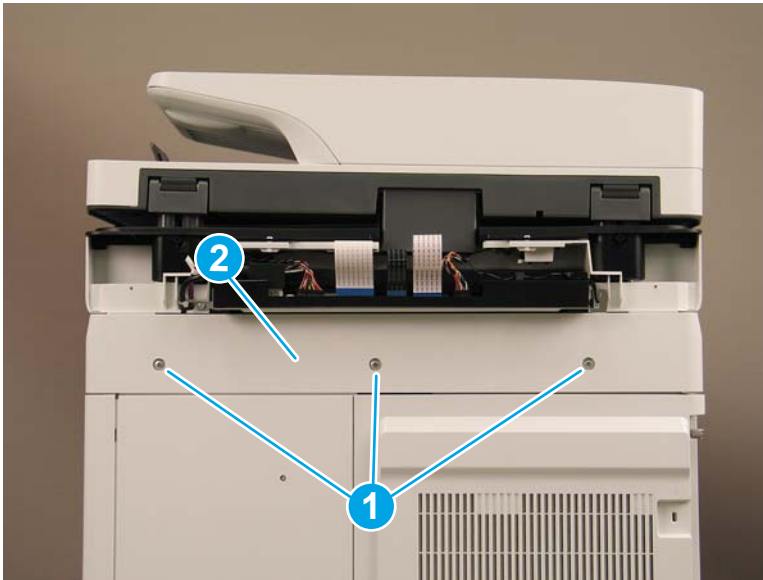

### Step 11: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


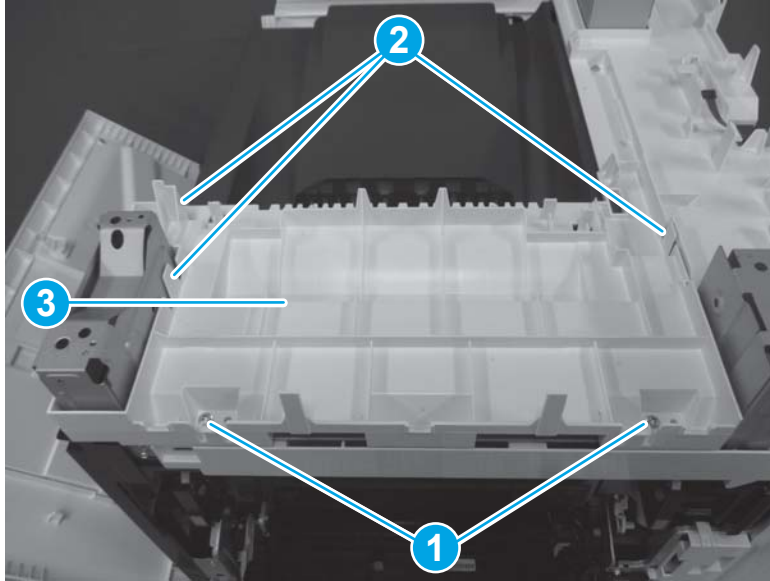

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-1241 Remove two screws and the face-down cover




Step 12: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 13: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 800](#)

1. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-1242 Remove two screws and release one tab

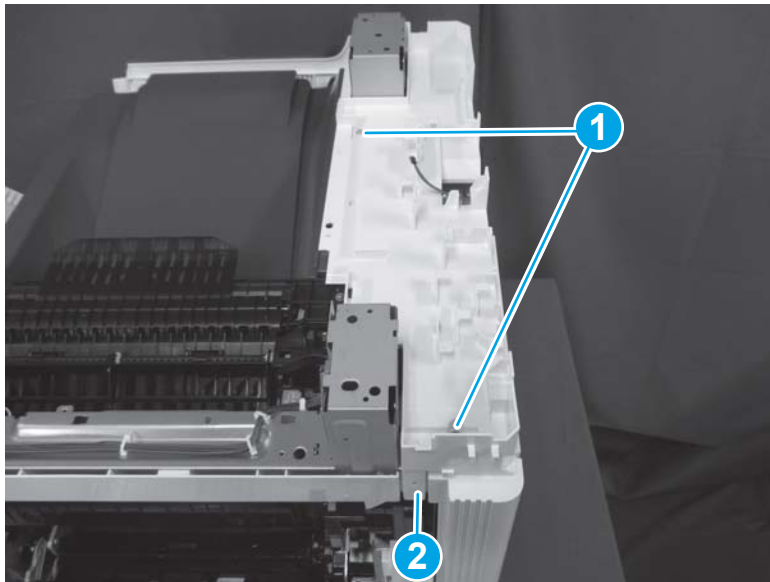


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1243** Remove one screw and the main cover

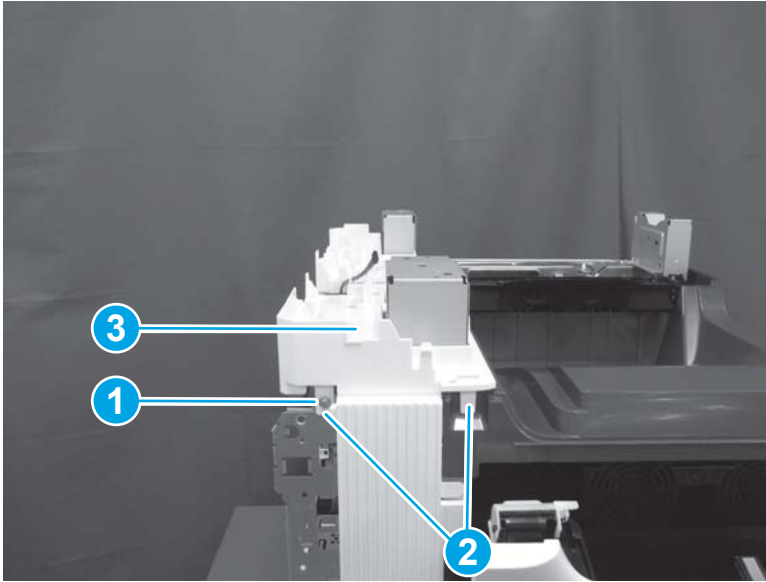

### Step 13: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 805](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1244** Tilt the control panel up





2. Use a coin to release the cover, and then remove the cover.

Figure 1-1245 Remove the cover



3. Remove one thumbscrew (callout 1)

---

 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.


---

Figure 1-1246 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-1247 Release the control panel

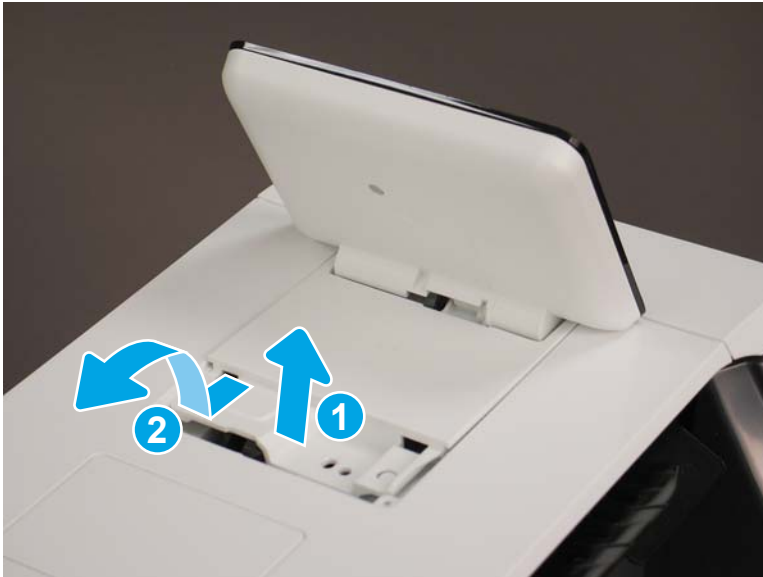

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-1248 Disconnect two connectors

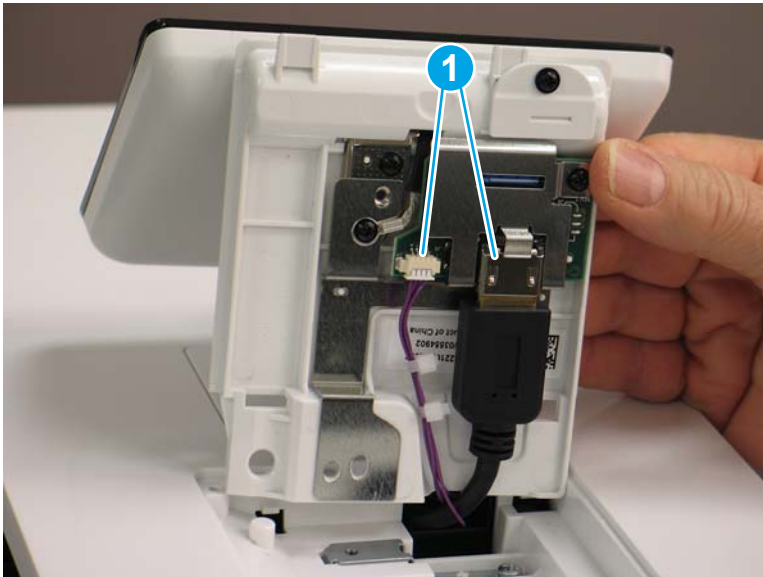


6. Remove the control panel.

**Figure 1-1249** Remove the control panel




#### Step 14: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 15: Remove the output bin on page 805](#)

1. Open the following doors:
  - Front door
  - Left door
  - Right door


2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1250 Remove the NFC cover

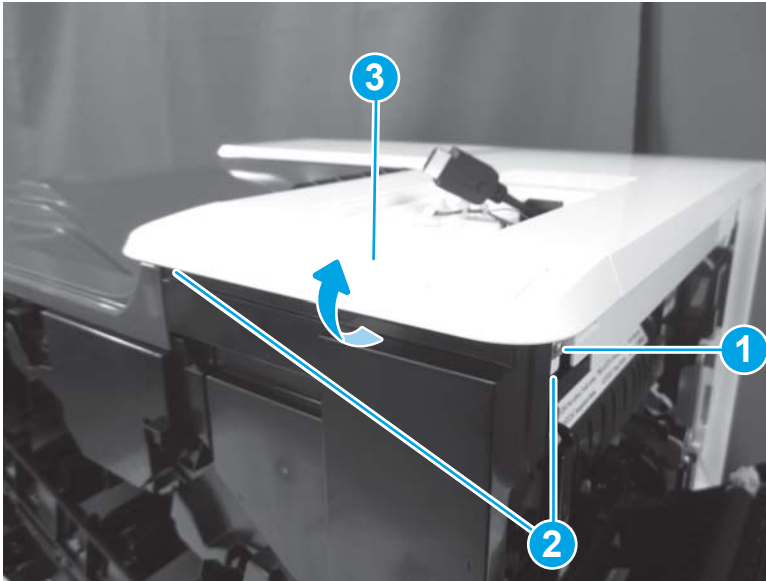


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1251 Remove one screw and release one tab

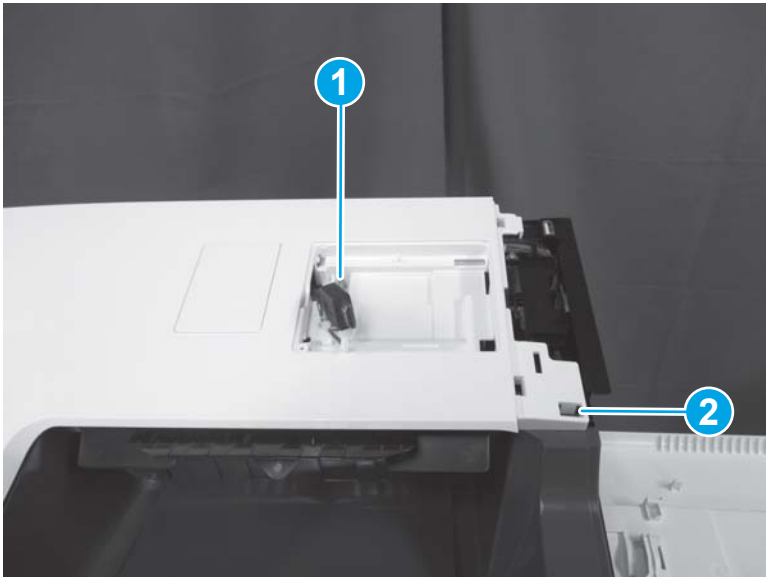

4. Release two tabs (callout 1).

Figure 1-1252 Release two tabs

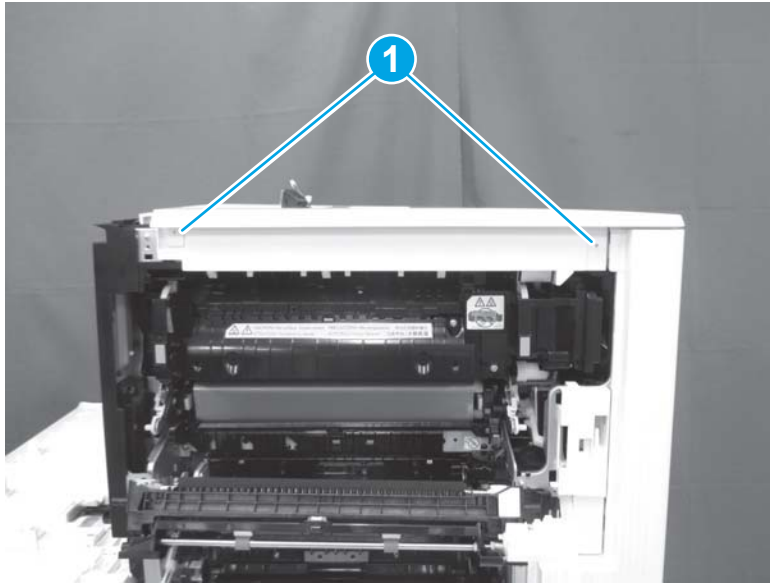

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


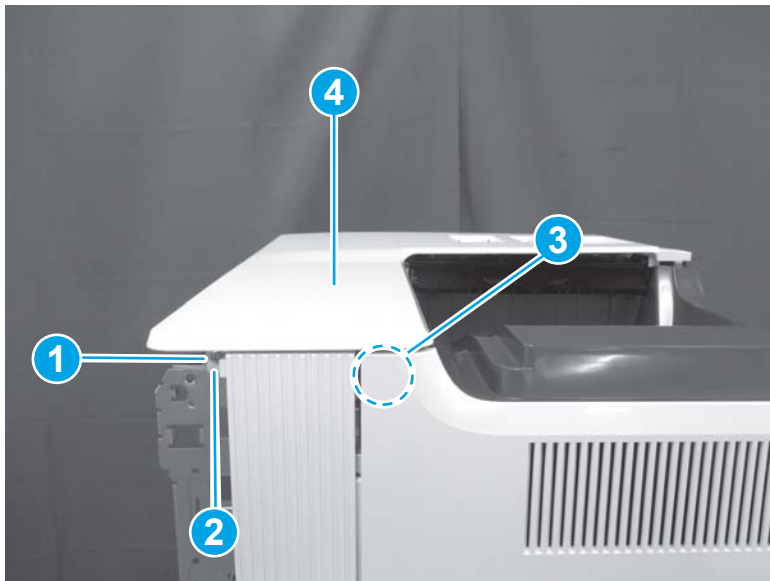
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1253 Remove the top cover




### Step 15: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


Figure 1-1254 Remove the output bin

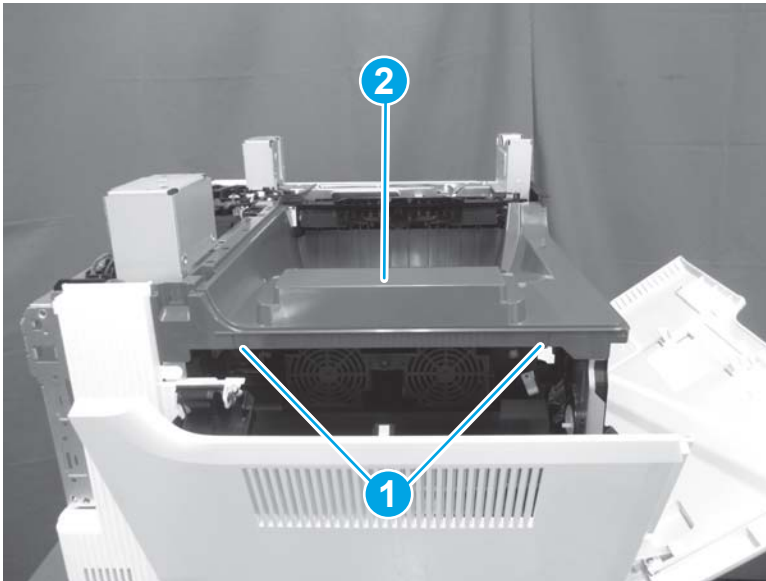

### Step 16: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1255 Remove the formatter cover

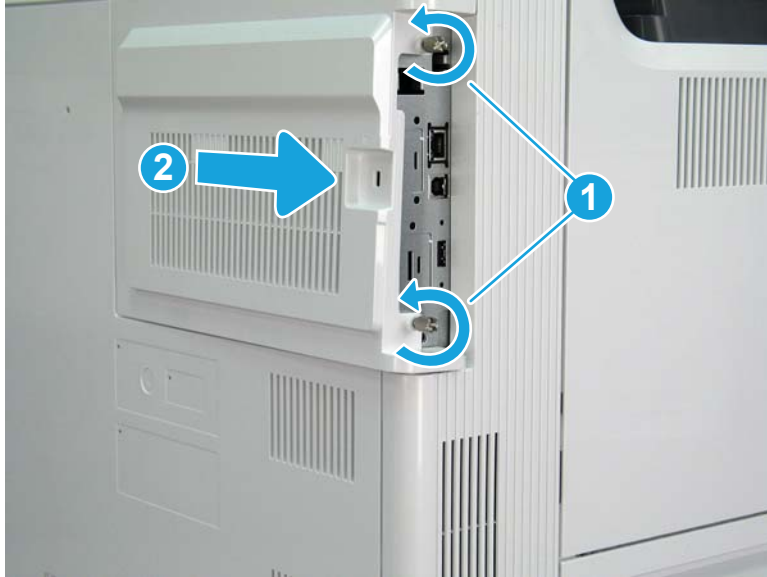

Step 17: Remove the estrangement detect PCA

1. Release one connector (callout 1) from a retainer.


Figure 1-1256 Release one connector

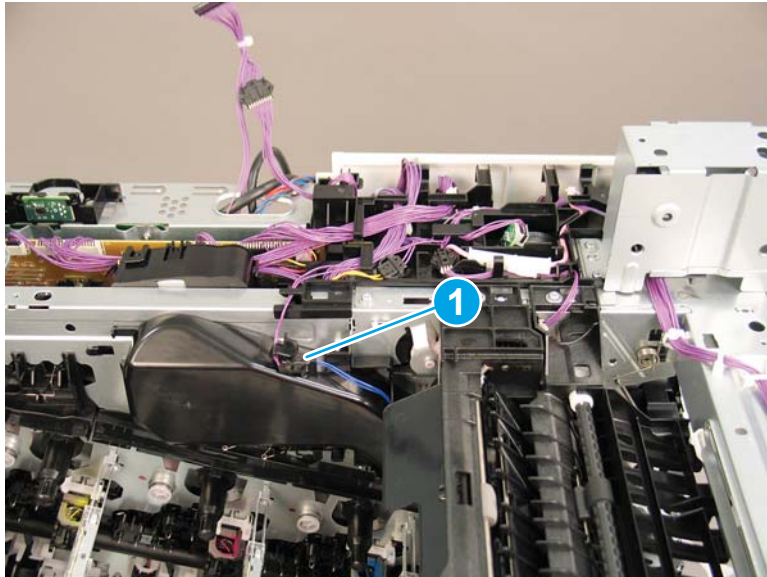




2. Disconnect one connector (callout 1), and then release the cable from the guide (callout 2).

**Figure 1-1257** Disconnect one connector and release the cable.

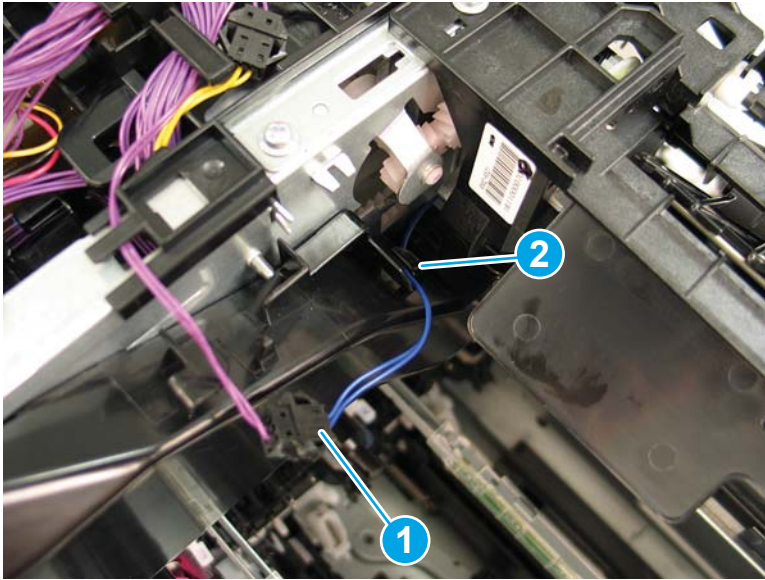

3. Release one tab (callout 1), and then slide the fan shroud to the left (callout 2).


**Figure 1-1258** Release one tab and slide the shroud

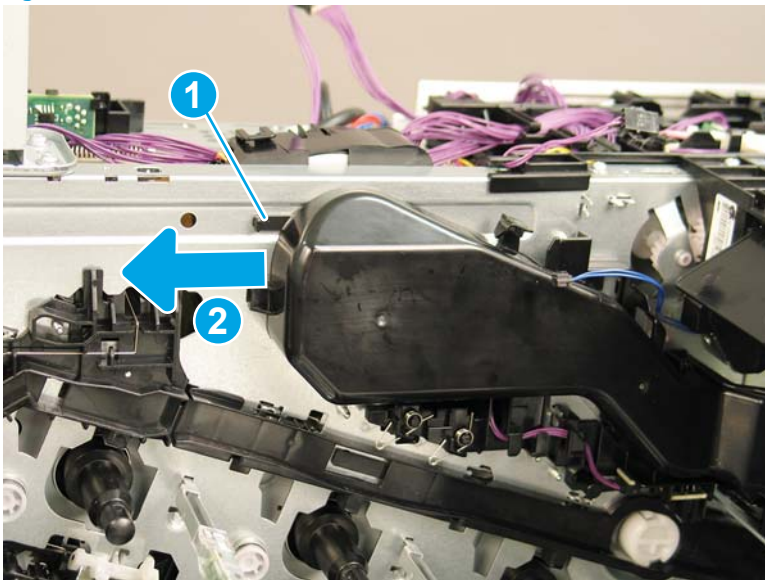



4. Rotate the fan shroud away from the printer to remove it.

Figure 1-1259 Remove the fan shroud

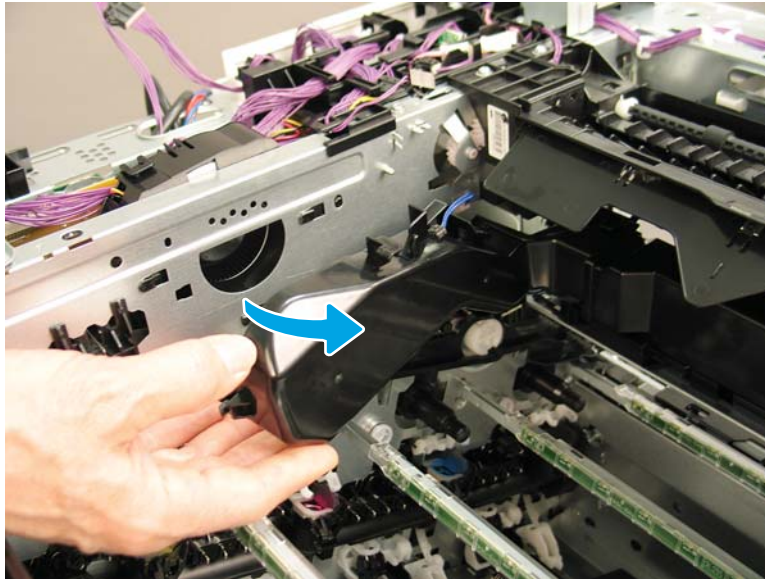

5. Release two tabs (callout 1).


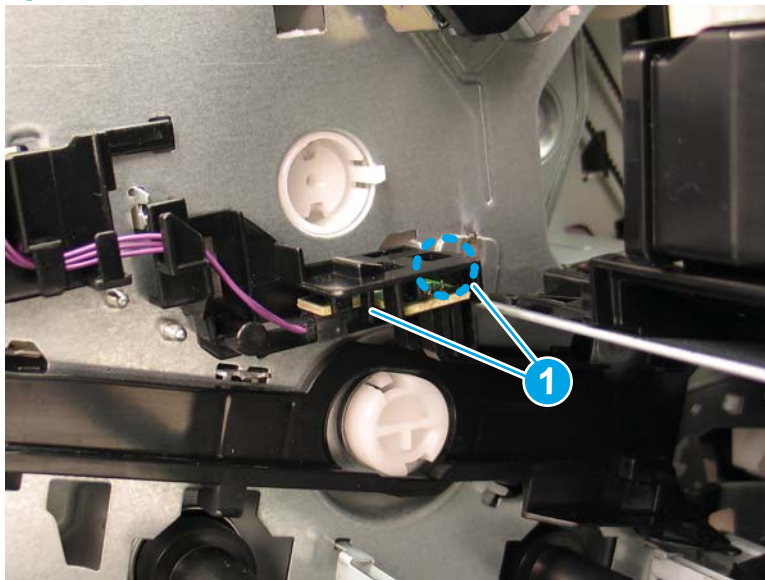
 **TIP:** Carefully slide a small, flat-blad screwdriver on the right side of the PCA to gently release the right tab.

Figure 1-1260 Release two tabs




6. Remove the estrangement detect PCA, and then disconnect one connector (callout 1).

 **Reinstallation tip:** Connect the connector to the replacement part before installing the PCA in the holder.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1261** Remove the PCA and disconnect one connector

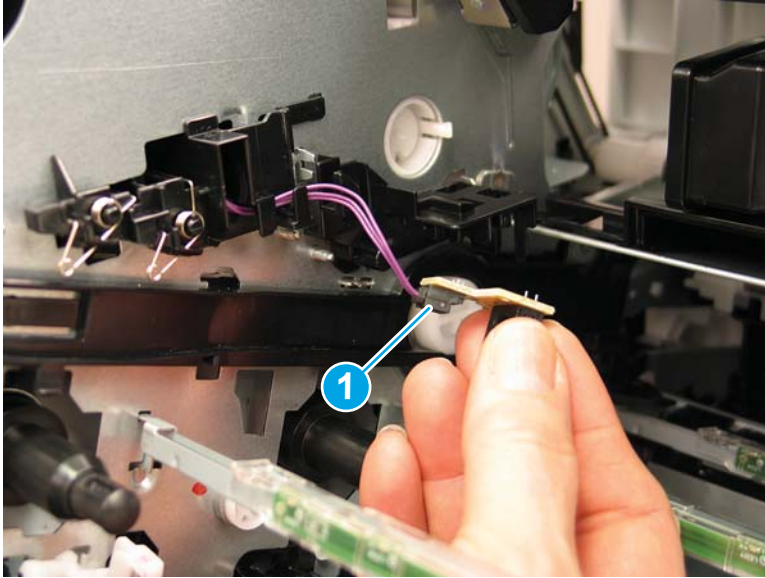



### Step 18: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Environmental sensor PCA

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the left door](#)
- [Step 4: Remove the left handle](#)
- [Step 5: Remove the environmental sensor PCA](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the environmental sensor PCA.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Environmental sensor PCA part number	
RM2-8440-000CN	Environmental sensor PCA

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuratio page to make sure that the printer is functioning correctly.


### Step 1: Remove the toner collection unit (TCU)

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


1. Open the front door.

Figure 1-1262 Open the front door

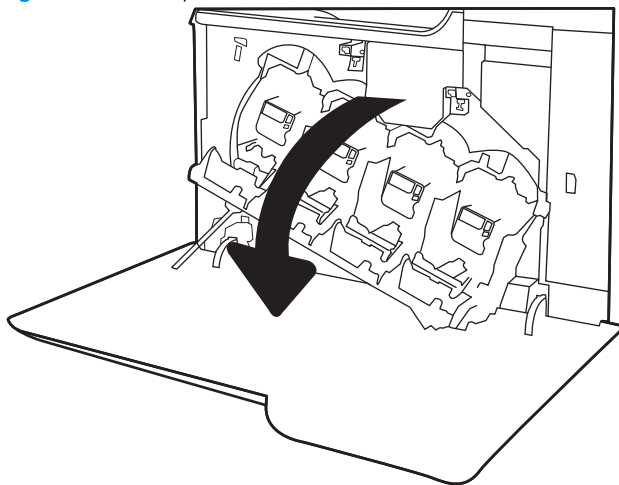


2. Open the left door.

Figure 1-1263 Open the left door

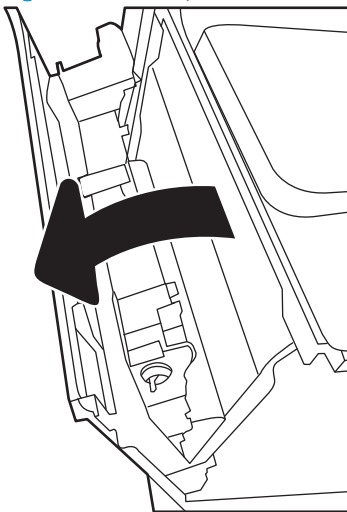

3. Grasp the top of the TCU and remove it from the printer.


Figure 1-1264 Remove the TCU

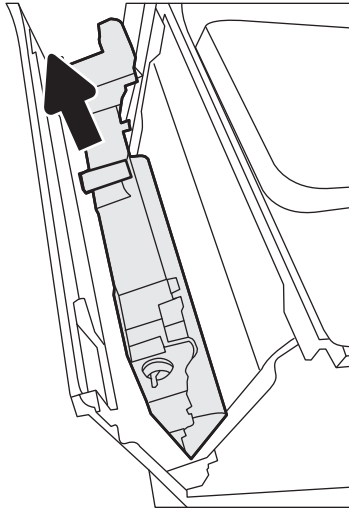

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1265 Remove the left rear cover

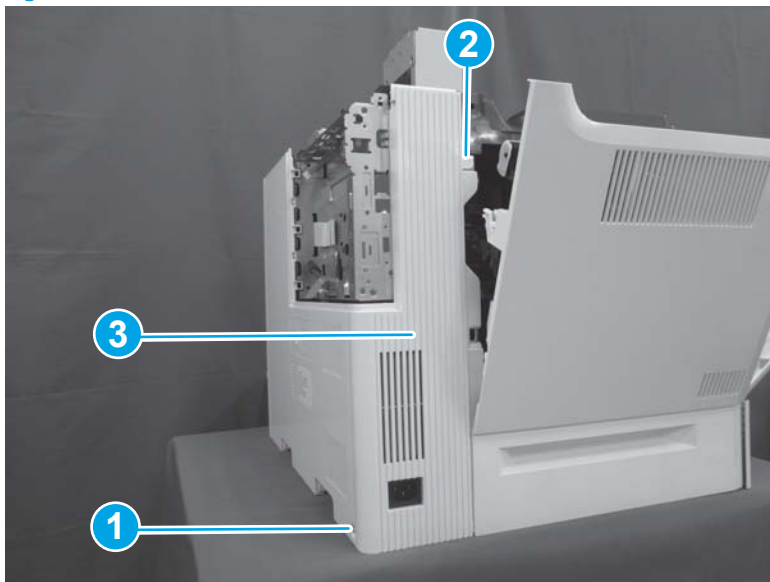


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1266 Install the left rear cover

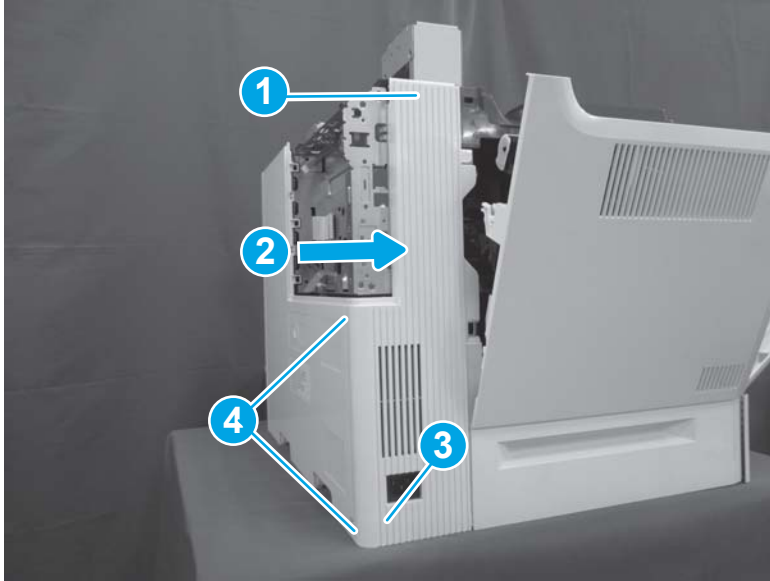


Step 3: Remove the left door

1. Open front door.

Figure 1-1267 Open front door



2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.


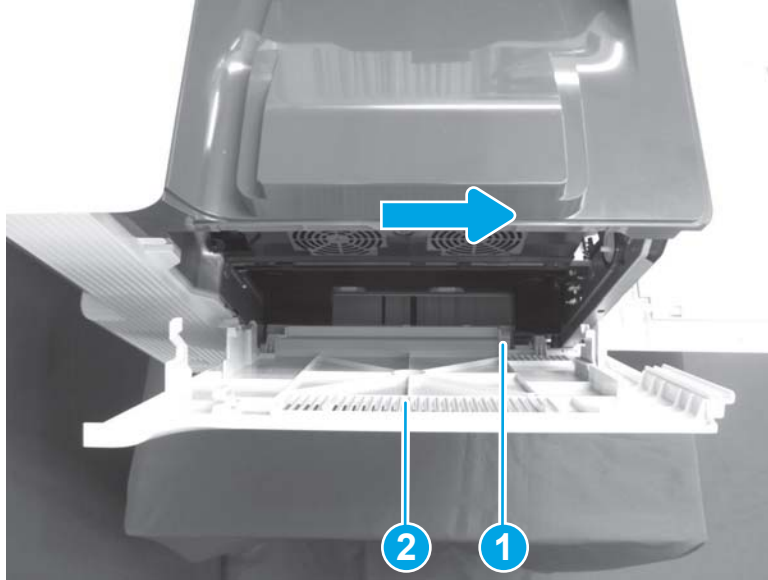
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1268 Remove the left door



#### Step 4: Remove the left handle

1. Release one tab (callout 1), and then gently lift the left side of the handle away from the sheet metal. Slide the left handle (callout 2) toward the front of the printer to remove it.

Figure 1-1269 Remove the left handle

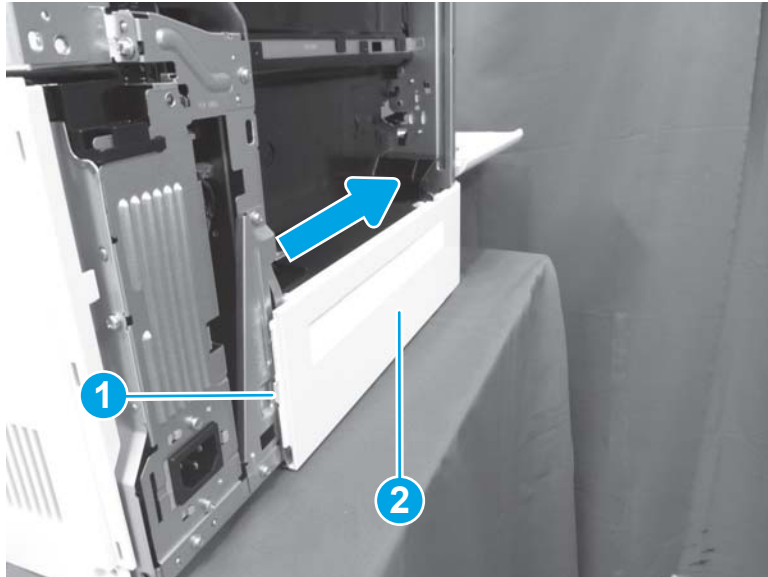

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



### Special installation instructions: Left handle

- ▲ When reinstalling the left handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.


Figure 1-1270 Install the left handle

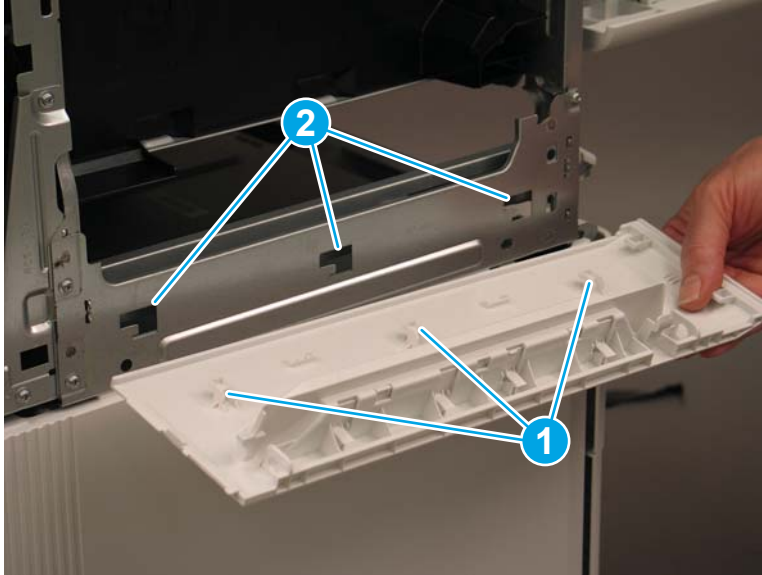

### Step 5: Remove the environmental sensor PCA


1. Release four tabs (callout 1). Release one boss (callout 2), pivot the left side of the cover away from the printer, and then remove the scanner cover (callout 3).

Figure 1-1271 Remove the scanner cover

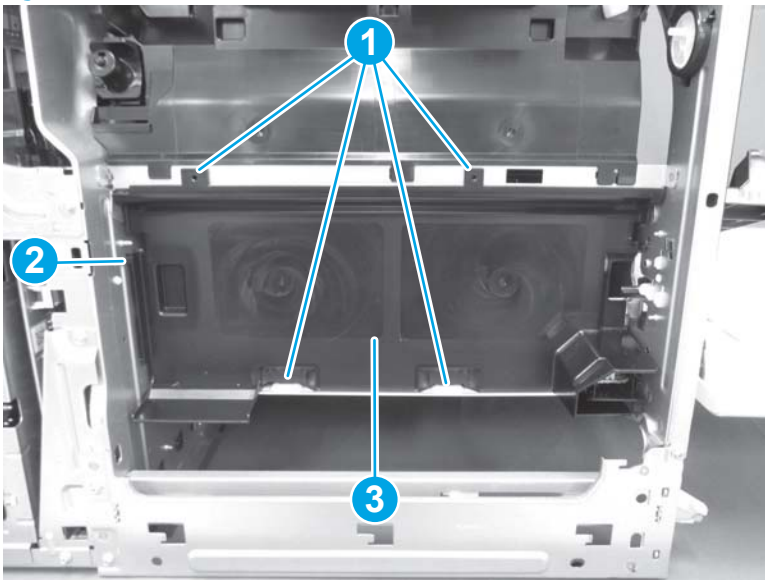




2. Release the environmental sensor (callout 1) from the printer, and then disconnect one connector (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1272** Remove the environmental sensor

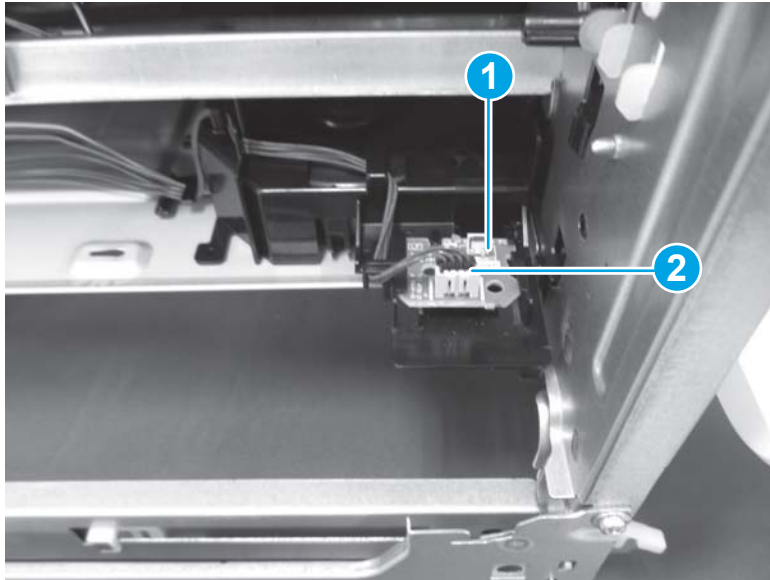



### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Cartridge fan

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the left door](#)
- [Step 4: Remove the left handle](#)
- [Step 5: Remove the cartridge fan](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the cartridge fan.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Cartridge fan part number	
RK2-6124-000CN	Cartridge fan

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.


### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuratio page to make sure that the printer is functioning correctly.


## Step 1: Remove the toner collection unit (TCU)

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


1. Open the front door.

**Figure 1-1273** Open the front door

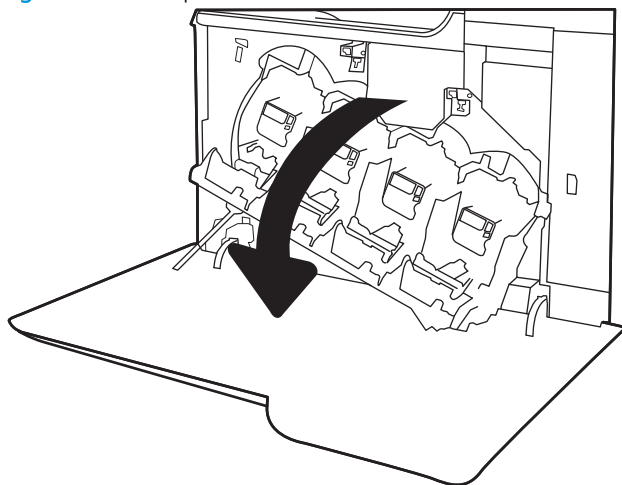


2. Open the left door.

**Figure 1-1274** Open the left door

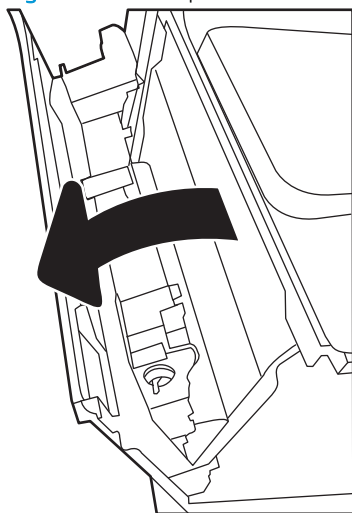

3. Grasp the top of the TCU and remove it from the printer.


Figure 1-1275 Remove the TCU

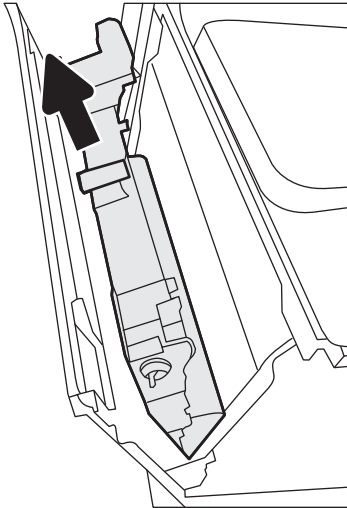

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1276 Remove the left rear cover

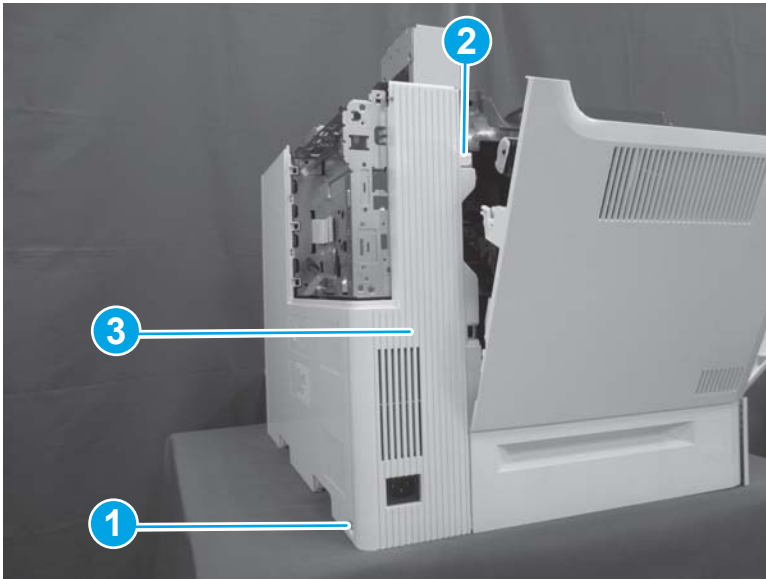


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1277 Install the left rear cover

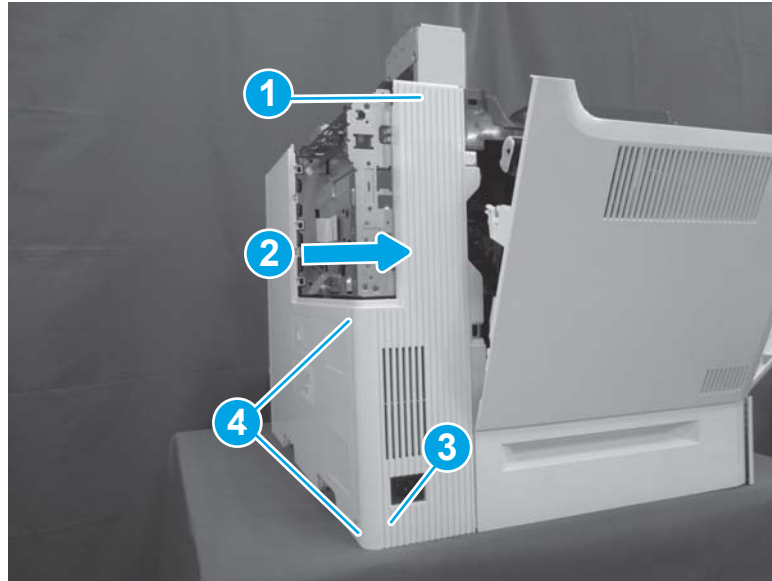

### Step 3: Remove the left door


1. Open front door.


Figure 1-1278 Open front door



2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.


---

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-1279** Remove the left door

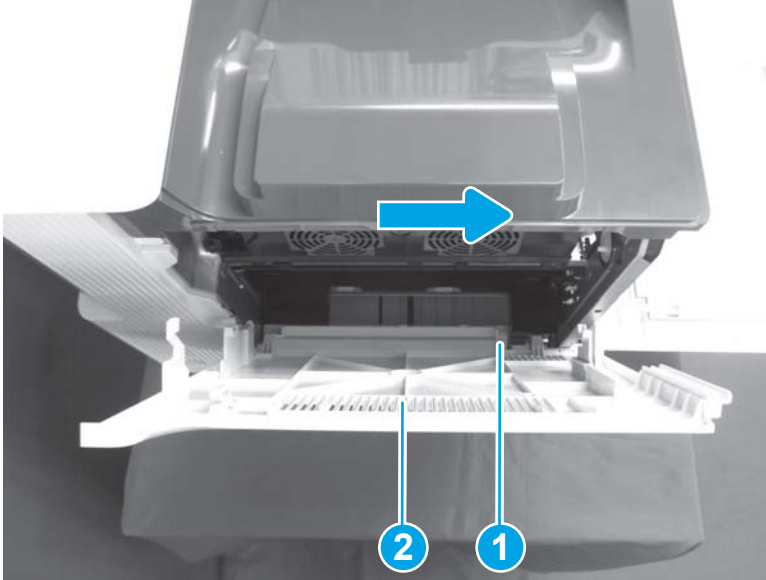

#### Step 4: Remove the left handle

1. Release one tab (callout 1), and then gently lift the left side of the handle away from the sheet metal. Slide the left handle (callout 2) toward the front of the printer to remove it.

**Figure 1-1280** Remove the left handle

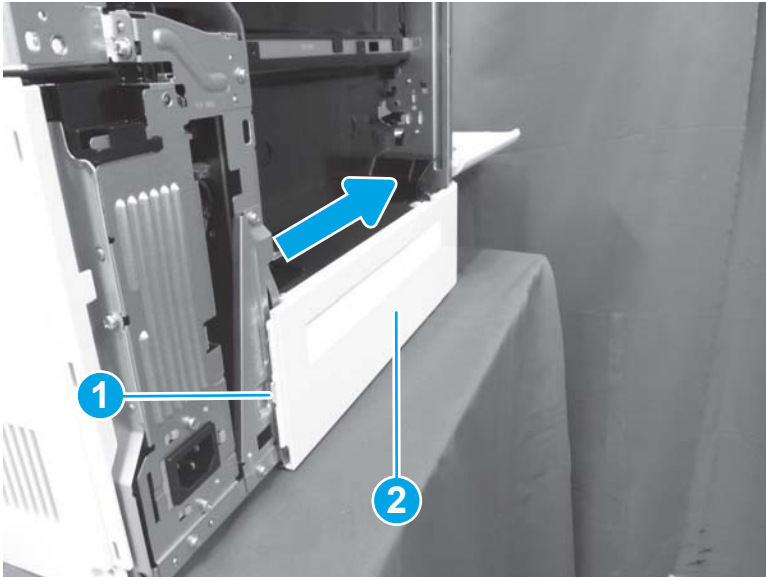

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

### Special installation instructions: Left handle

- ▲ When reinstalling the left handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.


Figure 1-1281 Install the left handle

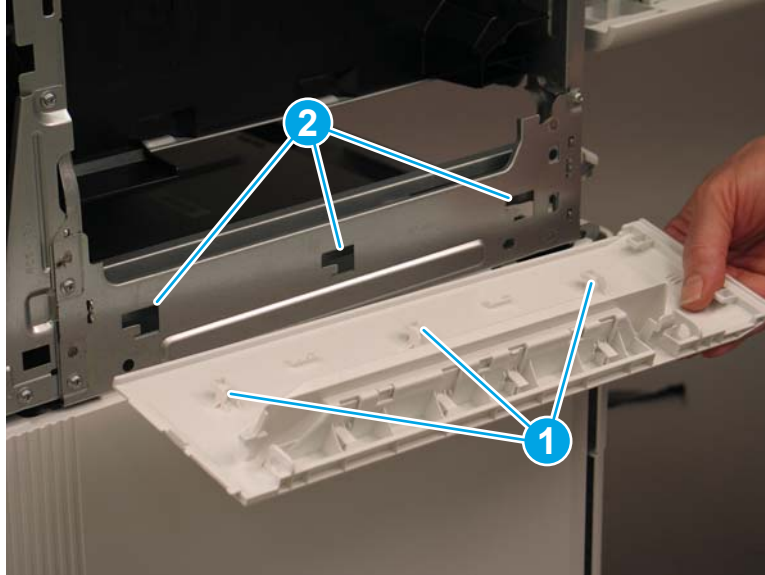

### Step 5: Remove the cartridge fan


1. Release four tabs (callout 1). Release one boss (callout 2), pivot the left side of the cover away from the printer, and then remove the scanner cover (callout 3).

Figure 1-1282 Remove the scanner cover

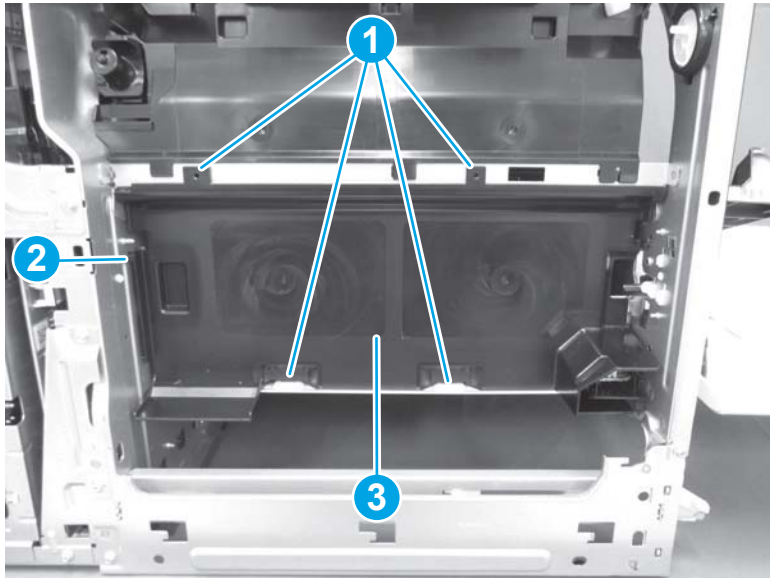

2. Disconnect two connectors (callout 1), and then release the cable (callout 2) from the cable guide (callout 3). Release two bosses (callout 4), and then slide the fan holder (callout 5) towards the front of the printer to release tension on the holder. Slide the fan holder towards the left side of the printer to remove it.

Figure 1-1283 Remove the fan holder

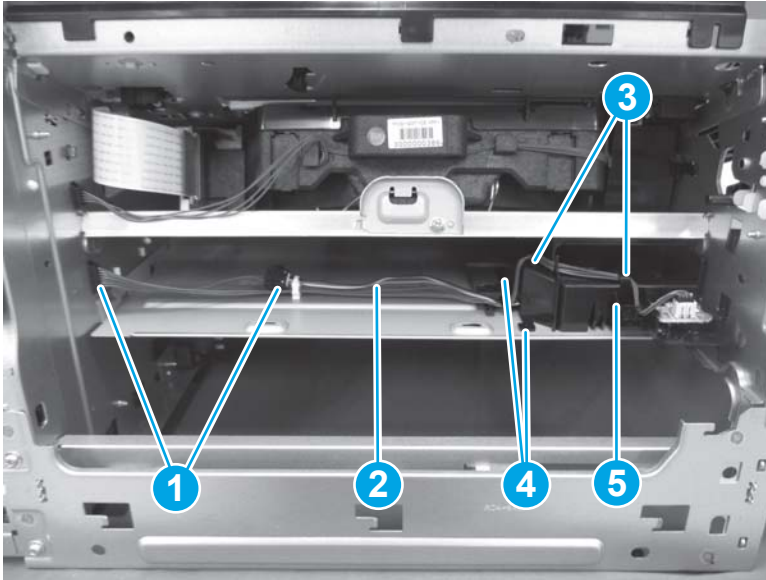


3. Release three tabs (callout 1), and then remove the cartridge fan (callout 2) from the fan holder (callout 3).

 **TIP:** Insert a finger between the fan and the housing and push from the back side to pop the fan out of the housing.

**Reinstallation tip:** If you are replacing the fan and holder, remove the environmental PCA and install it on the replacement part.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1284 Remove the cartridge fan from the holder

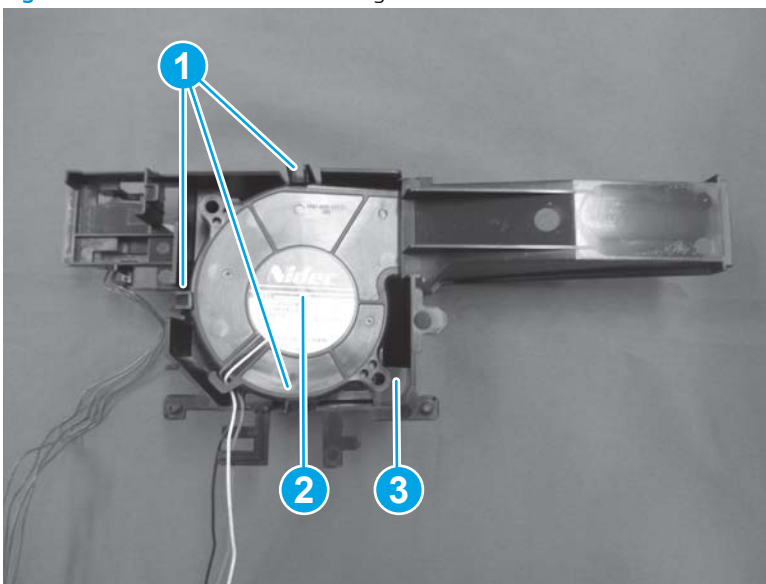



## Step 6: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Front fan

- [Introduction](#)
- [Step 1: Remove the front door](#)
- [Step 2: Remove the front inner covers](#)
- [Step 3: Remove the front fan](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front fan.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to

[www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Front fan part number

---

RK2-6124-000CN

Front fan

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the front door

1. Remove Tray 2.


2. Open the following doors:

 **Reinstallation tip:** The left door must be closed first in order to close the front door.

- Front door
- Left door


3. Hold the black shutter to one side, release one tab (callout 1), and then slide the link arm (callout 2) up to release it from the sheet metal.

**Figure 1-1285** Release the link arm

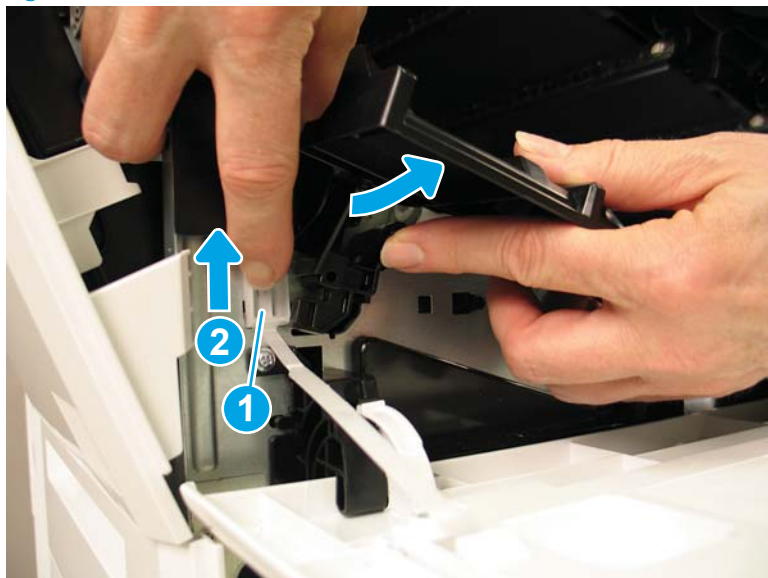

- Slide the released link arm into the door.

**Figure 1-1286** Slide the released link arm into the door

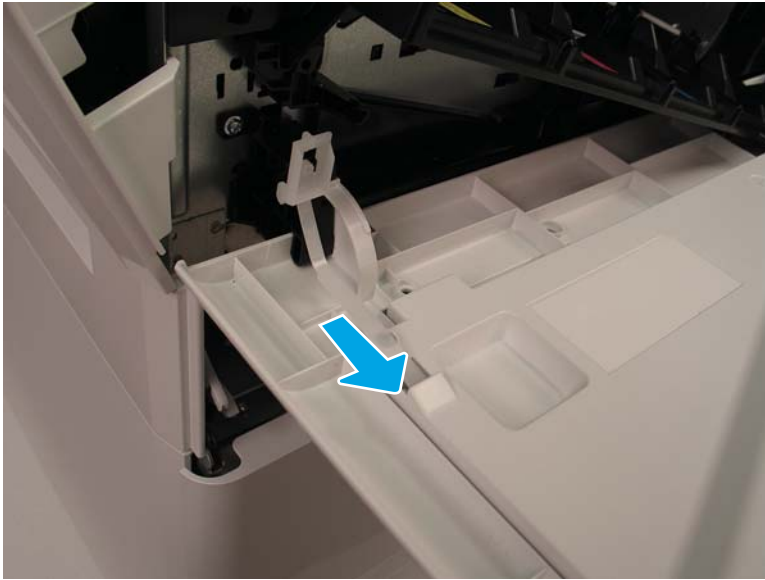


- Remove four screws (callout 1), release three tabs (callout 2), and then remove the inner cover.

---

**⚠ CAUTION:** Use care when removing the inner cover. The black cartridge door is spring-loaded and may close abruptly when released from the inner cover.

---

**Figure 1-1287** Remove the inner cover

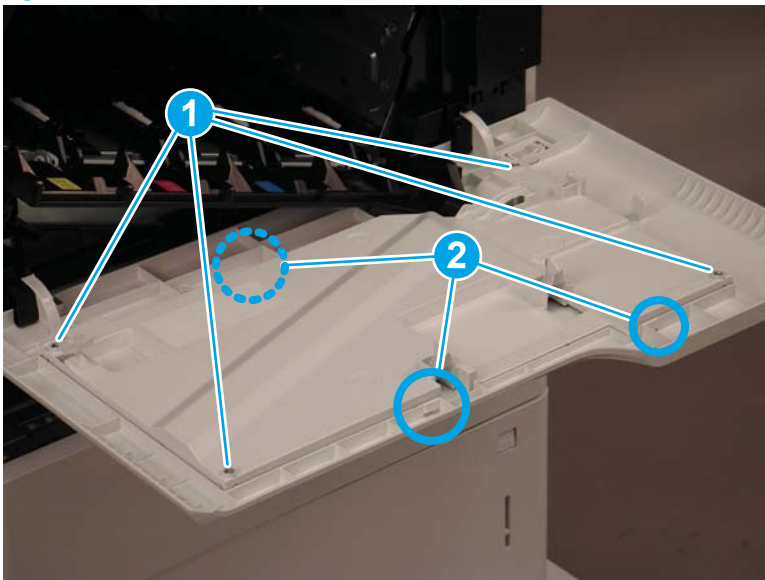

6. Remove one screw (callout 1), and then release one boss (callout 2). Slide the hinge (callout 3) up to release it.


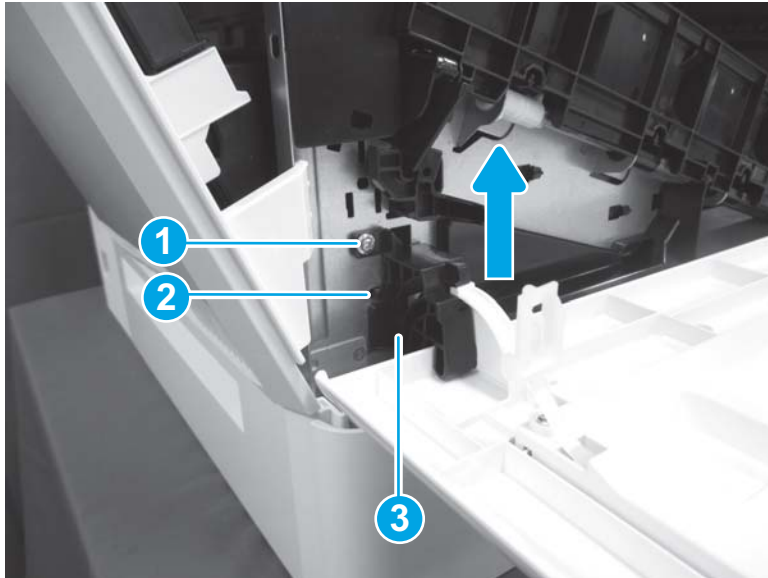

 **TIP:** Use a flat-blad screwdriver to release the boss, and then lift upwards on the corner of the door.

Figure 1-1288 Release the hinge



7. Slide the front door (callout 1) to the right to remove it.

 **NOTE:** Remove the hinge (callout 2) and the link arm (callout 3) from the front door and install them on the replacement front door.


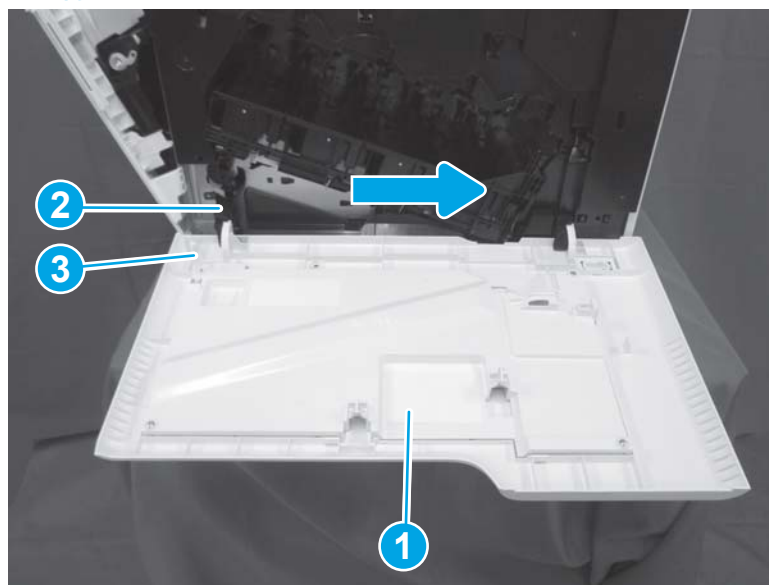
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1289 Remove the front door



8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Front door


- a. If the link arm becomes dislodged from the inner cover, reinstall it as shown in the figure below.

Figure 1-1290 Reinstall the link arm




- b. Install the right side of the door first. Position the edge of the door (callout 1) over the black lip (callout 2), and then slide the right hinge into the black arm (callout 3).

Figure 1-1291 Install the right hinge

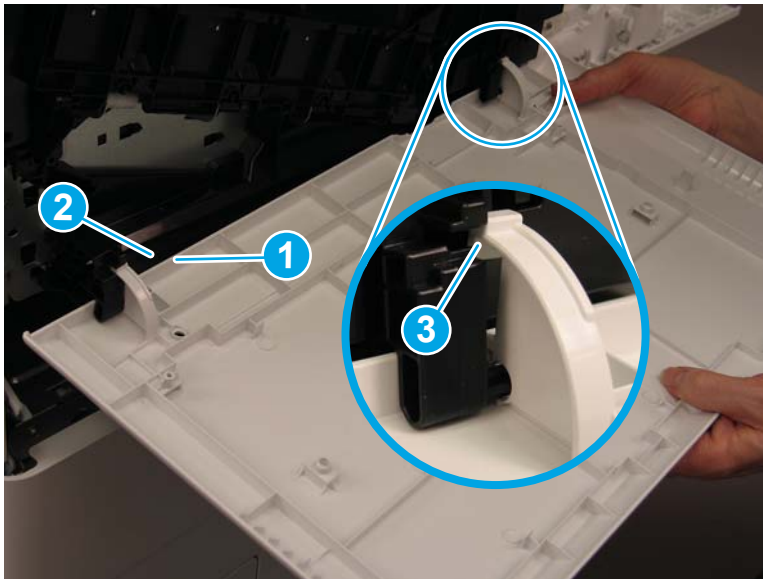

- c. When reinstalling the left hinge, install the tabs (callout 1) on the hinge in the slots (callout 2) in the printer. Press down to lock the hinge in place.

**Figure 1-1292** Install the left hinge

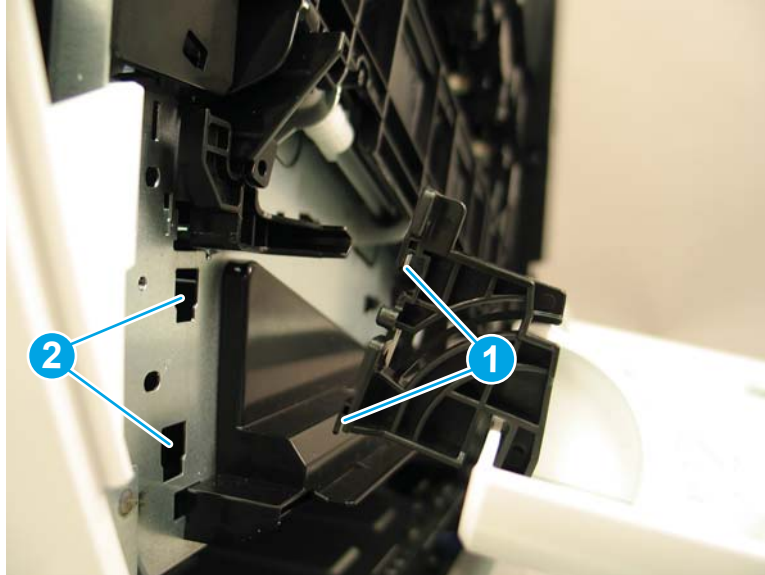

### Step 2: Remove the front inner covers


1. Open the following doors:
  - Right door
  - Left door
2. Release four tabs (callout 1).

---

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.

---

**Figure 1-1293** Release four tabs

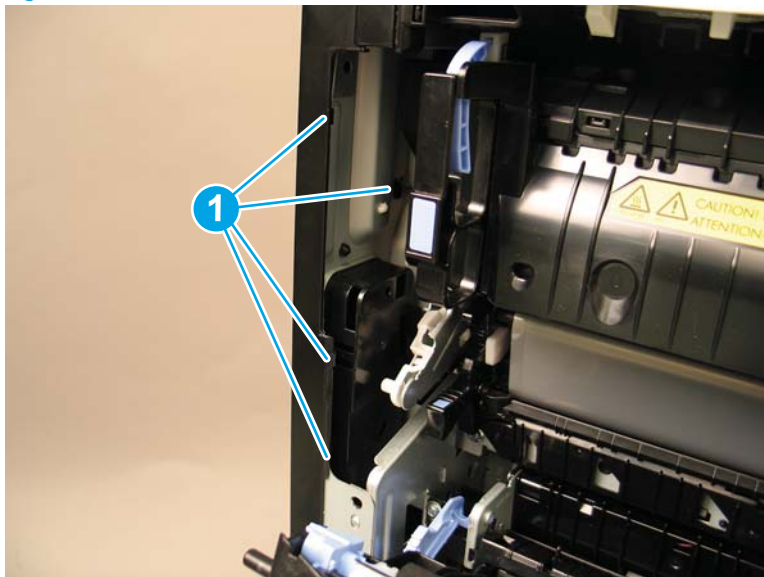




3. Release four bosses (callout 1), and then remove the front right inner cover (callout 2).

 **TIP:** Small, embossed arrows on the front of the cover indicate where the release tabs may be found.


**TIP:** Push on the back side of the cover for easy release.

**Figure 1-1294** Remove the front right inner cover

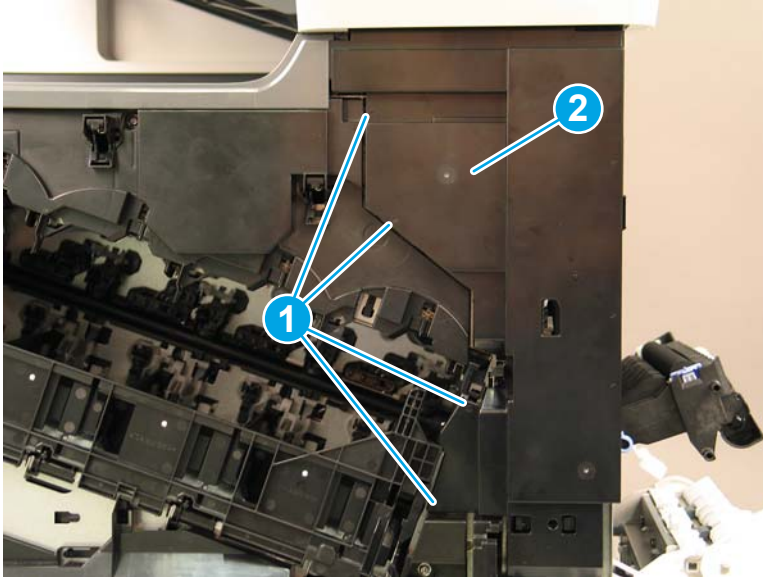

4. Remove one screw (callout 1). Carefully pull the right side of the cover down and away from the printer to release one boss (callout 2). Continue to pull the cover away from the sheet metal to release the second boss (callout 3), and then remove the cover.

**Figure 1-1295** Remove the front inner cover

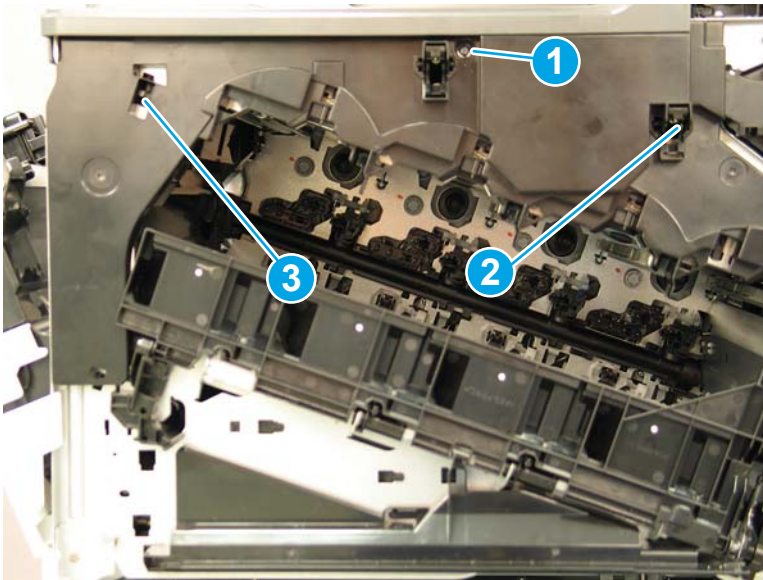

5. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.



### Special installation instructions: Front inner covers

- ▲ When reinstalling the front right inner cover, position the upper left edges of the cover (callout 1) under the edges of the printer covers (callout 2).


Figure 1-1296 Install the front right inner cover

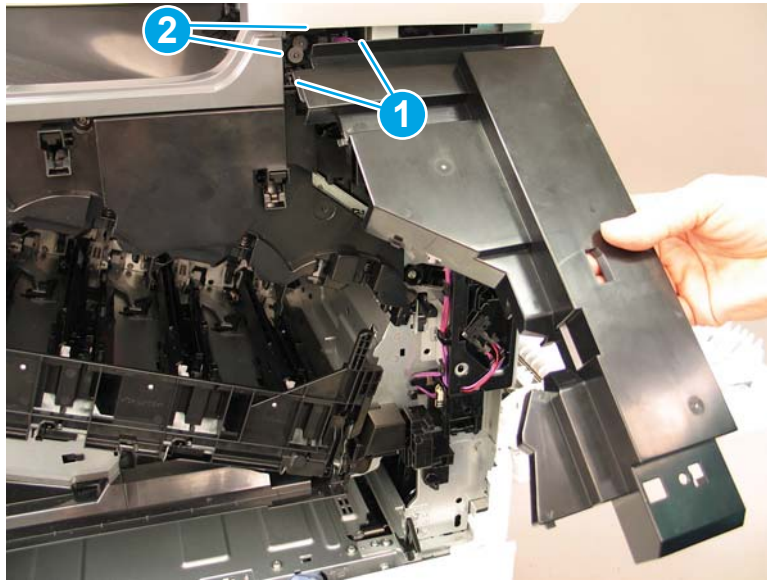

### Step 3: Remove the front fan


1. Disconnect three connectors (callout 1), and then release the cable from the cable guides (callout 2).

Figure 1-1297 Disconnect three connectors and release cables

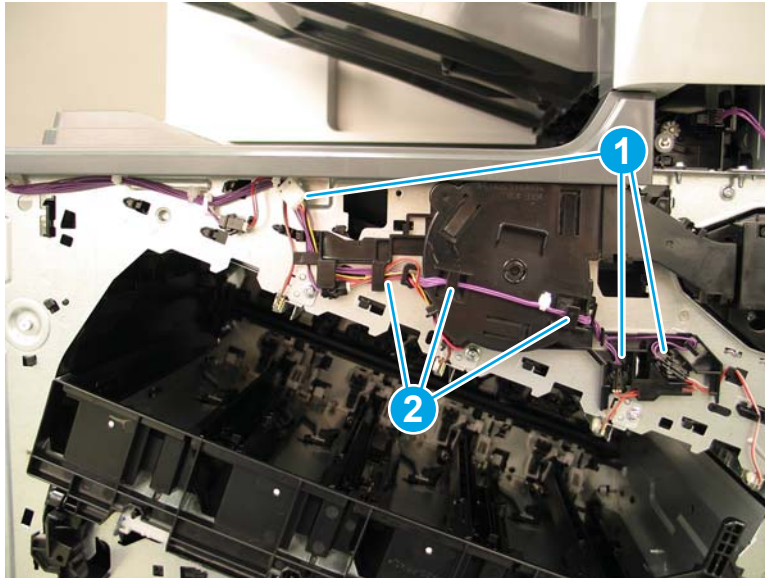


2. Insert a small, flat-blade screwdriver between the fan holder and the sheet metal (callout 1) to release the fan holder. Slide the fan holder to the left (callout 2) to remove it.

Figure 1-1298 Remove the fan holder

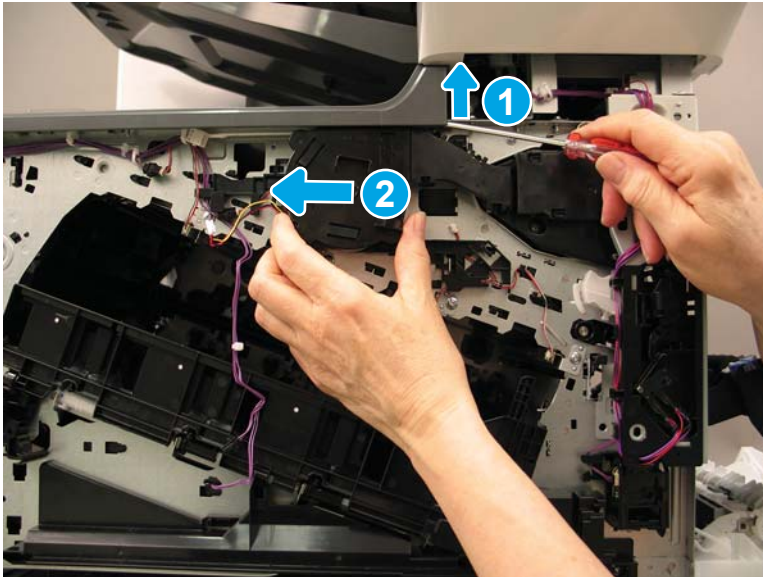


3. Remove the front fan (callout 1) from the fan holder (callout 2).

 **Reinstallation tip:** Make sure that the cables are routed correctly to avoid pinching. Refer to the figure in Step 5 for correct cable routing.

**Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1299 Remove the front fan

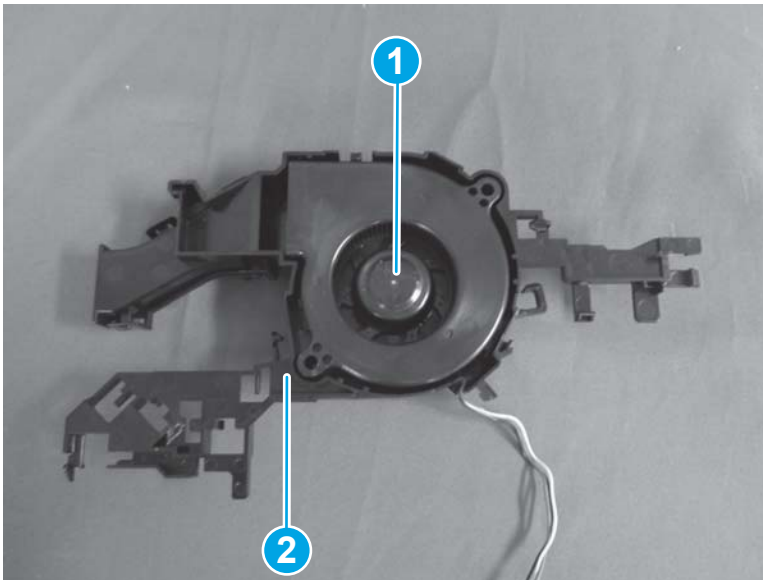

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Power supply fan

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the power supply fan](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the power supply fan.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Power supply fan part number

---

RK2-7953-000CN

Power supply fan

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1300 Remove the formatter cover

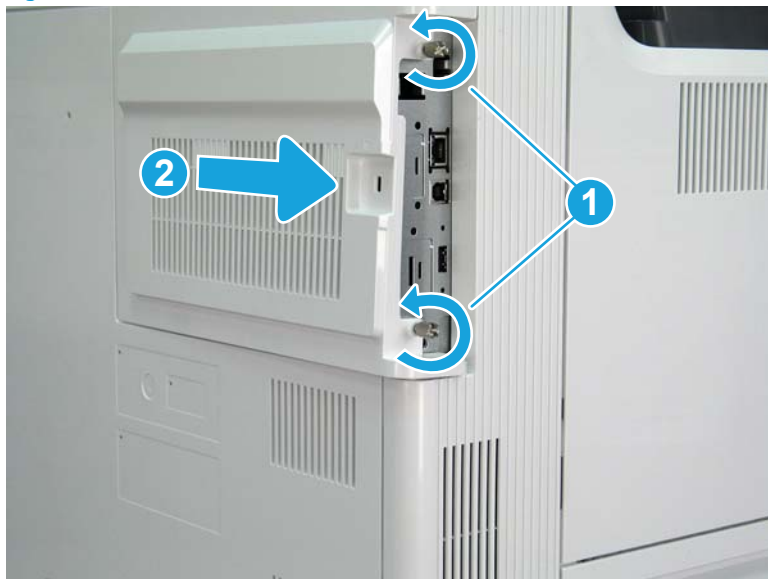

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1301 Remove the left rear cover

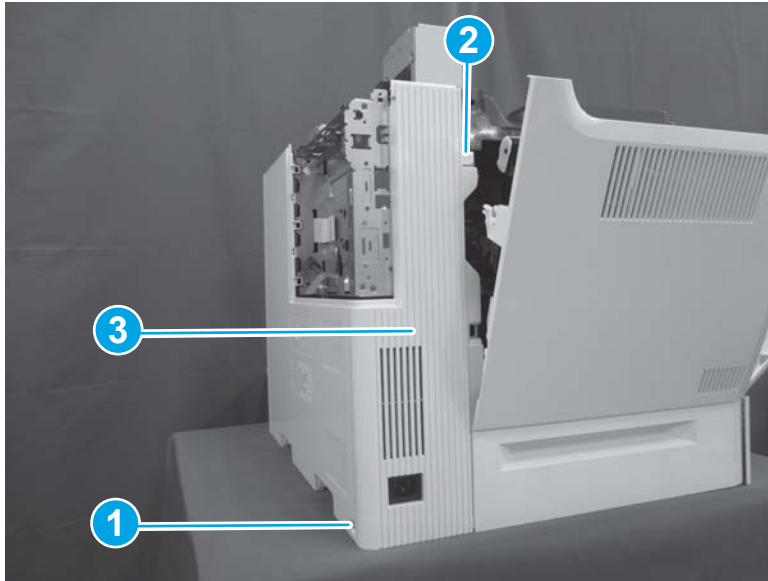


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1302 Install the left rear cover

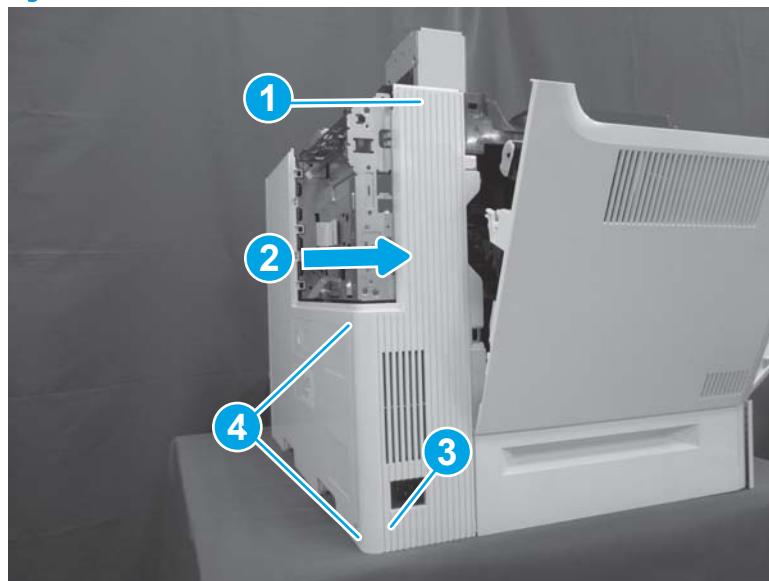


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1303** Remove two screws and the rear cover

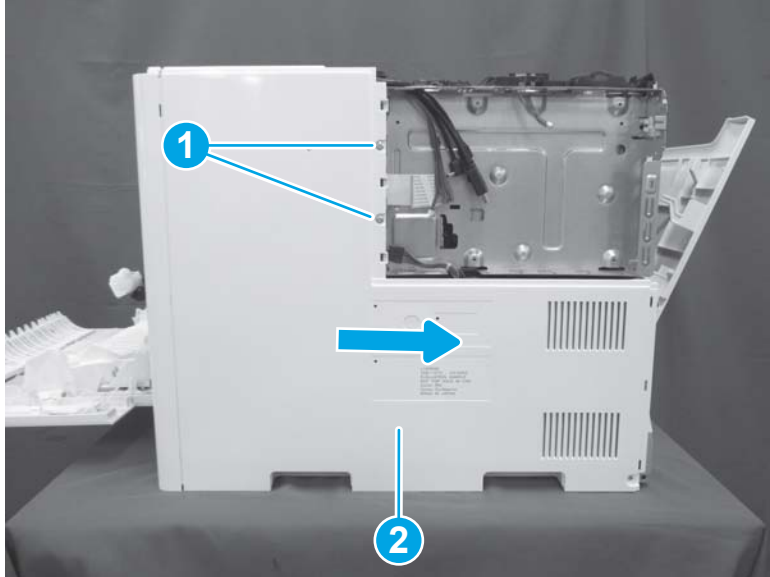

**Step 4: Remove the low-voltage power supply (LVPS) and fan**

1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).


**Figure 1-1304** Disconnect five connectors and remove two screws

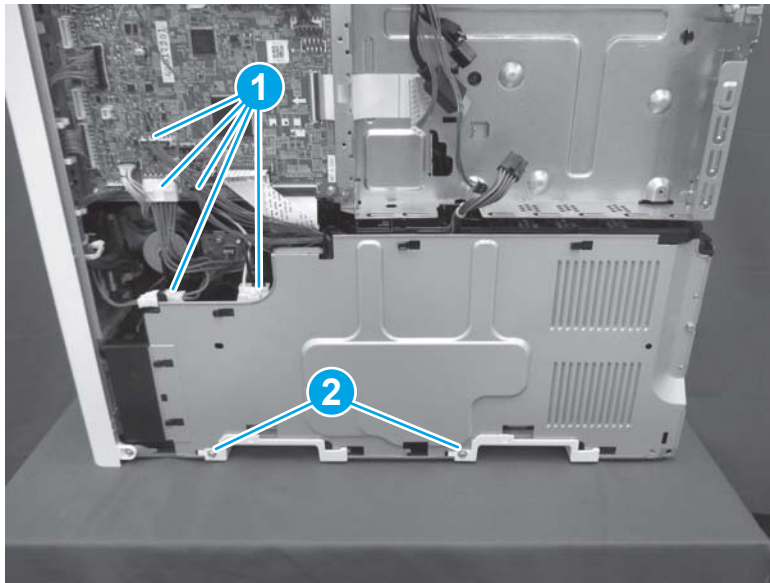



2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1305 Remove two handles

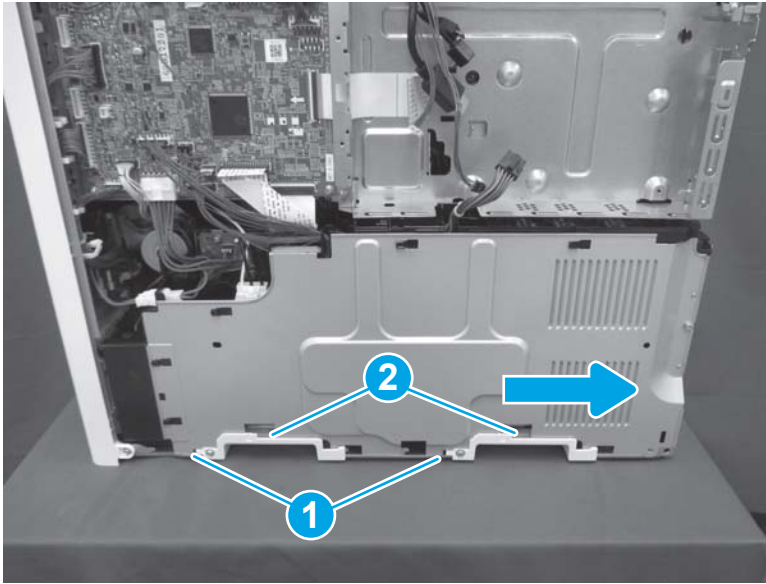

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


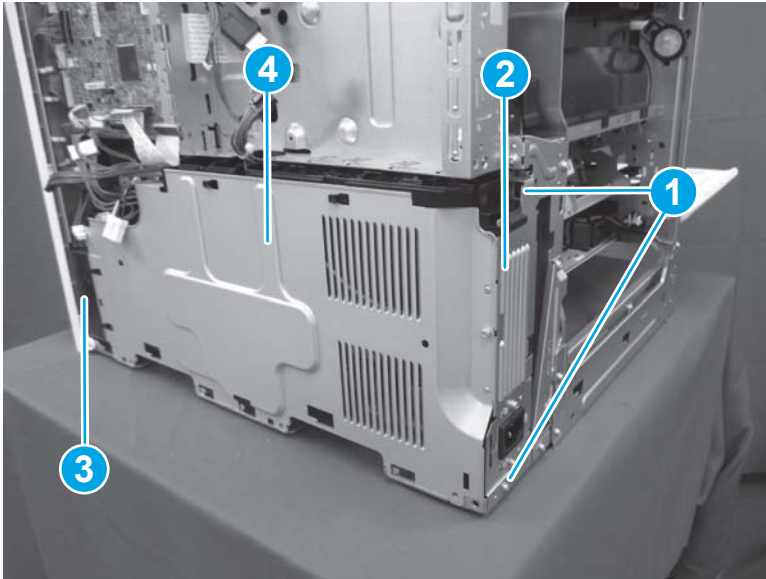
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.

Figure 1-1306 Remove the low-voltage power supply




#### Step 5: Remove the power supply fan

- ▲ Disconnect one connector (callout 1), release three tabs (callout 2), and then remove the power supply fan (callout 3) from the fan holder (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-1307 Remove the power supply fan

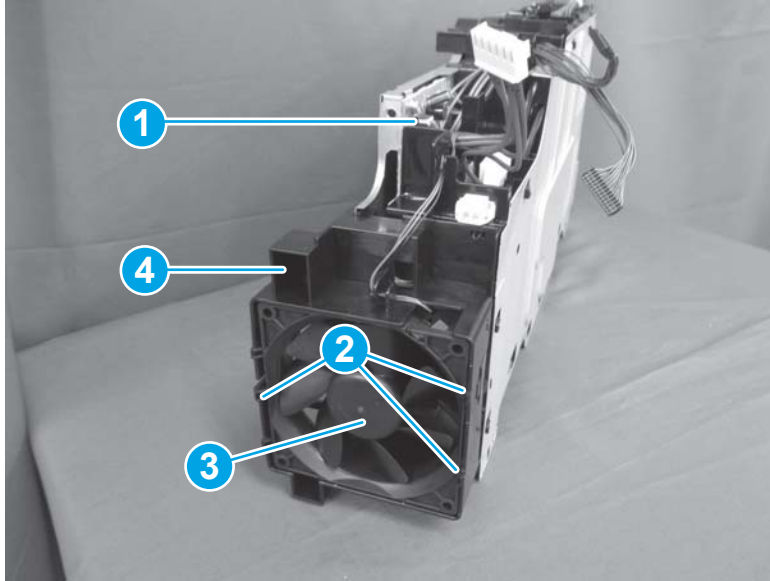

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: DC controller PCA

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the DC controller PCA](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the DC controller PCA.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

DC controller PCA part number	
RM3-7030-000CN	DC controller PCA (M652/M653/E65050/E65060/E65150/E65160)
RM3-7031-000CN	DC controller PCA (M681/M682/E67550/E67560/E67650/E67660)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.


## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1308** Remove the formatter cover

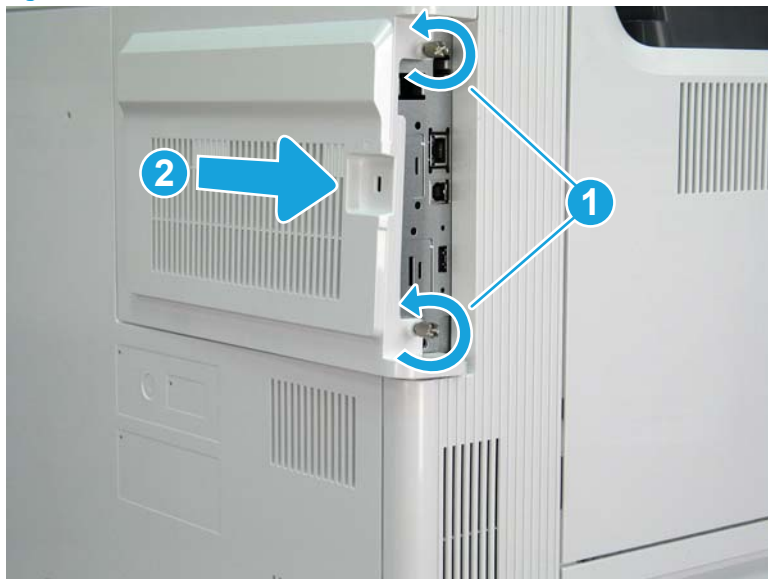

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1309 Remove the left rear cover

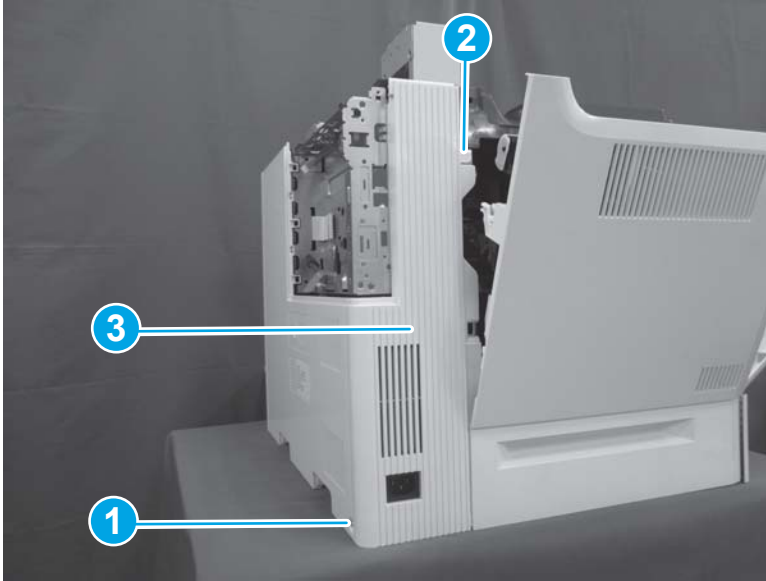


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1310 Install the left rear cover

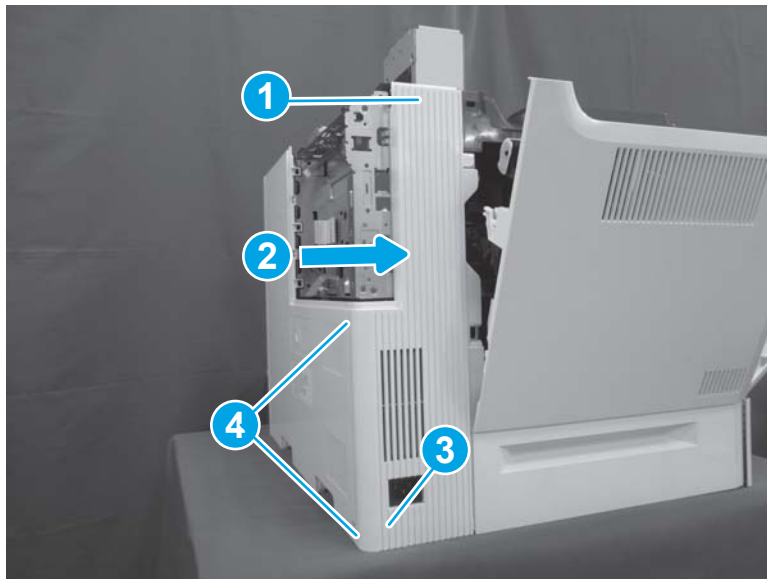


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1311** Remove two screws and the rear cover

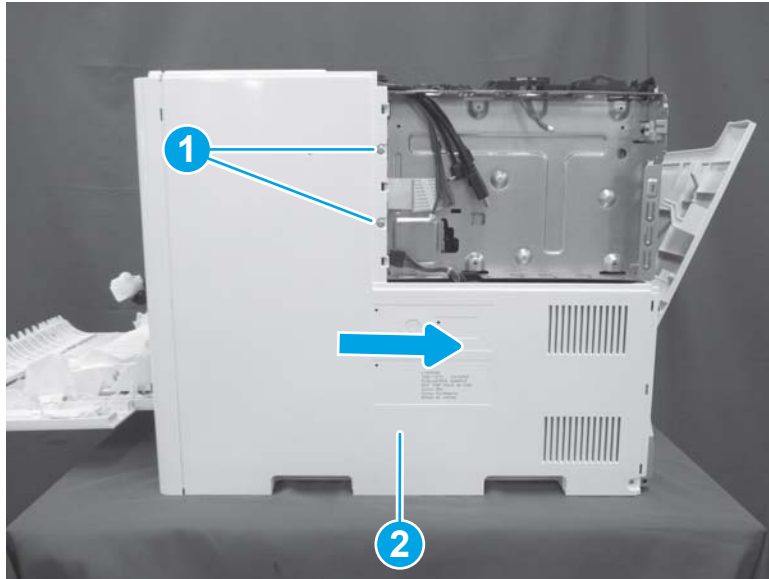

#### Step 4: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

**Figure 1-1312** Remove the DC controller PCA

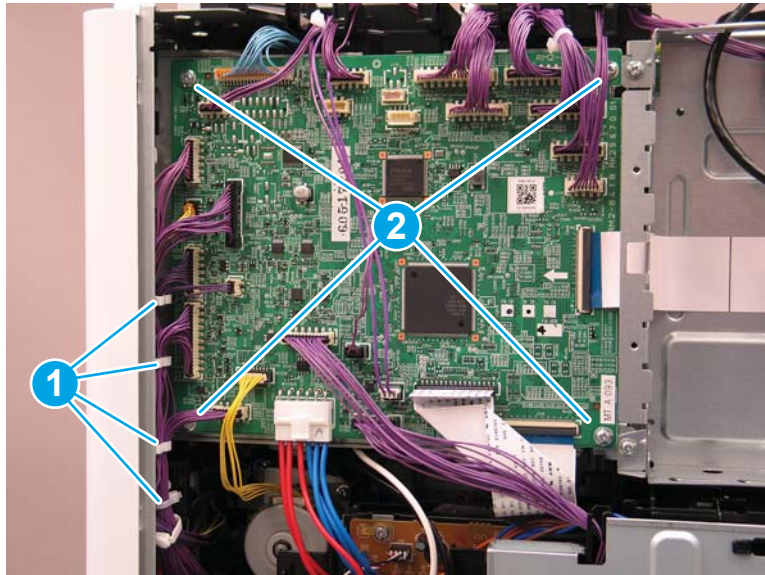


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-1313 Check the yellow cable

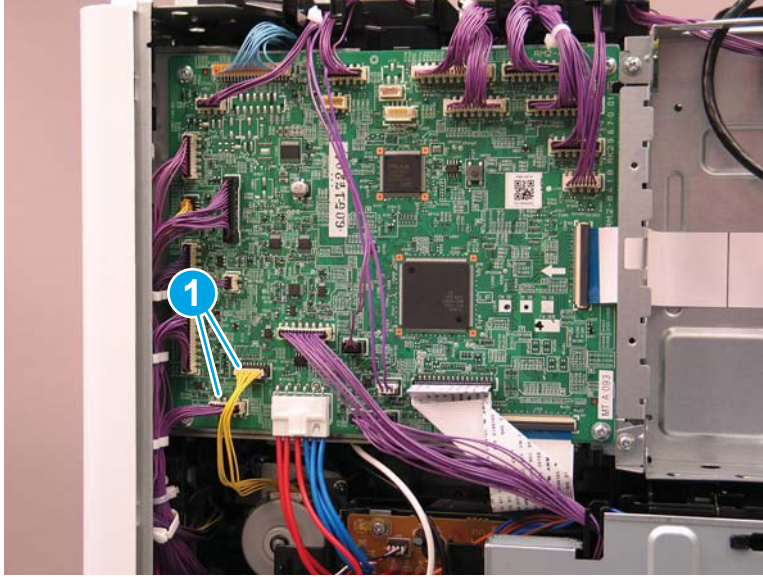

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Low-voltage power supply (LVPS)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the low-voltage power supply \(LVPS\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the low-voltage power supply (LVPS).


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Low-voltage power supply part number	
RM2-8421-000CN	Low-voltage power supply (110V-127V)
RM2-8422-000CN	Low-voltage power supply (220V-240V)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1314 Remove the formatter cover

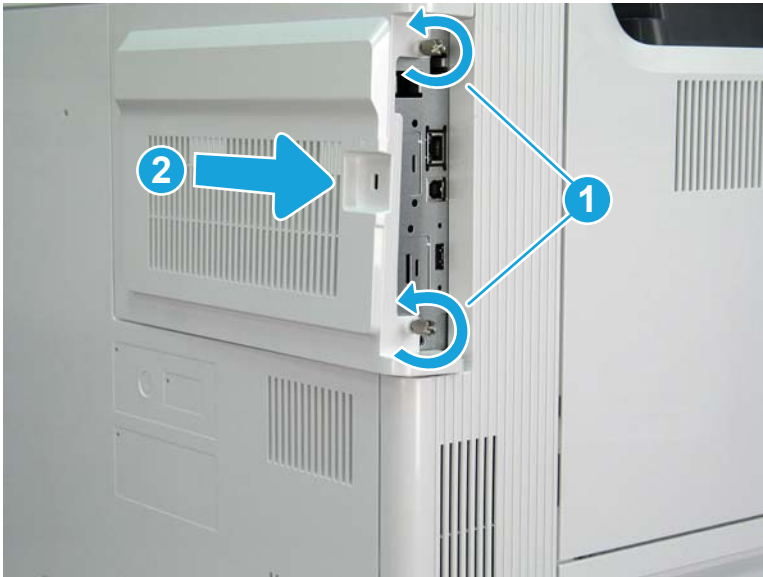


### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).



Figure 1-1315 Remove the left rear cover

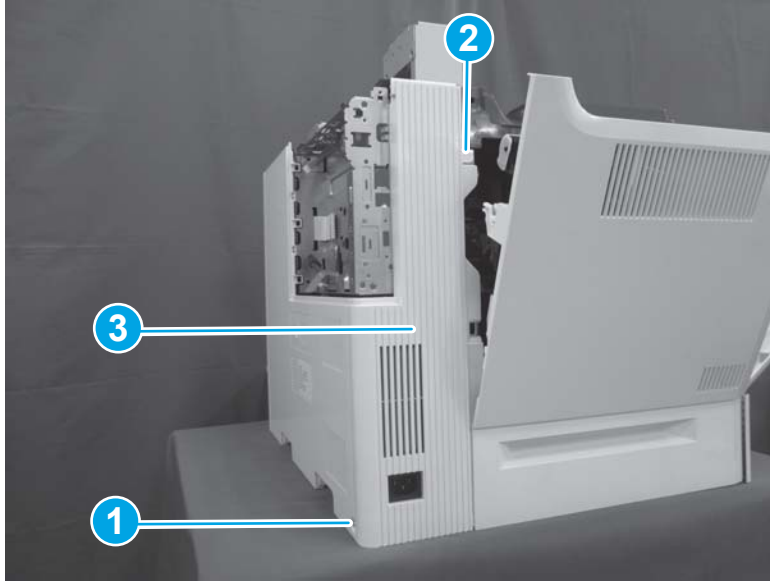


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1316 Install the left rear cover

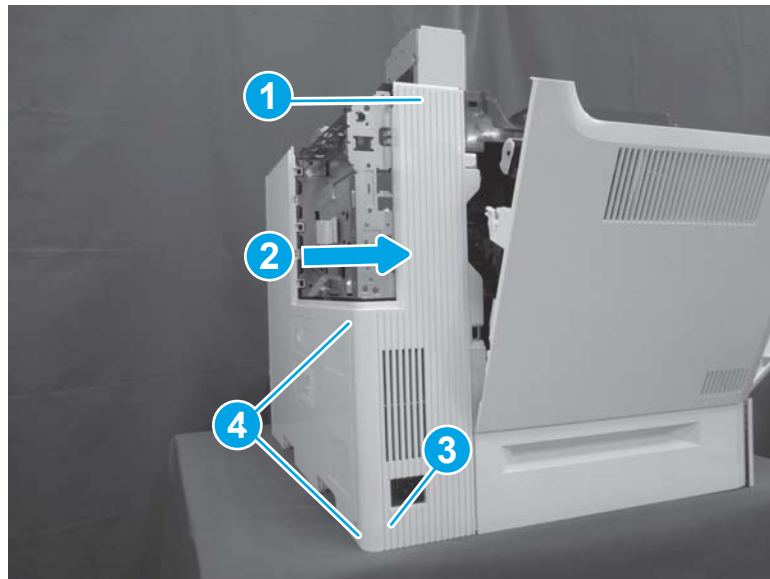


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1317** Remove two screws and the rear cover

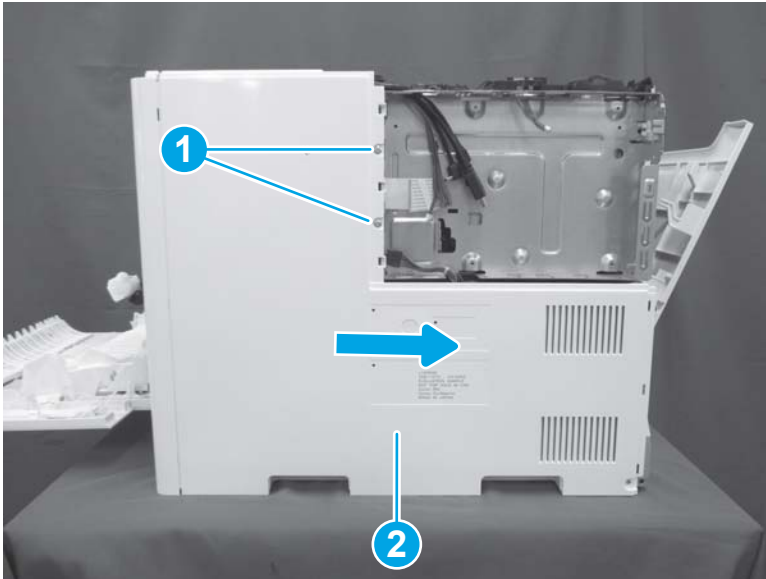

**Step 4: Remove the low-voltage power supply (LVPS) and fan**


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-1318** Disconnect five connectors and remove two screws

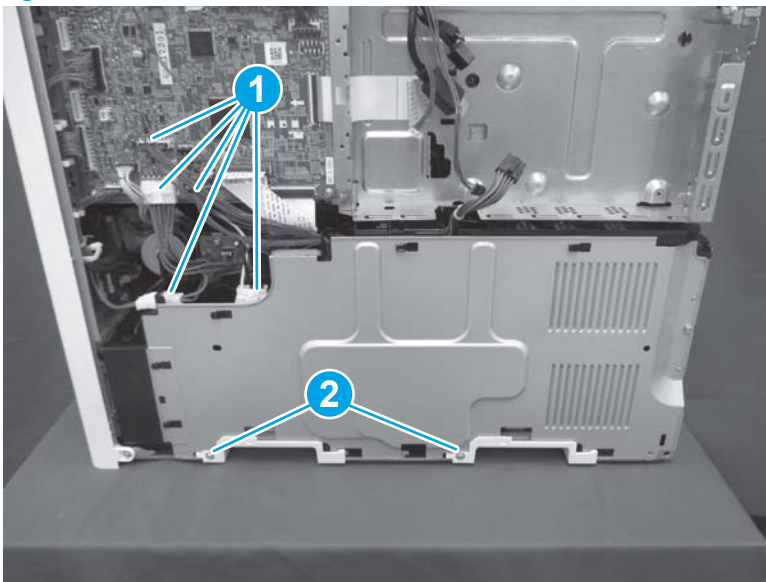


2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1319 Remove two handles

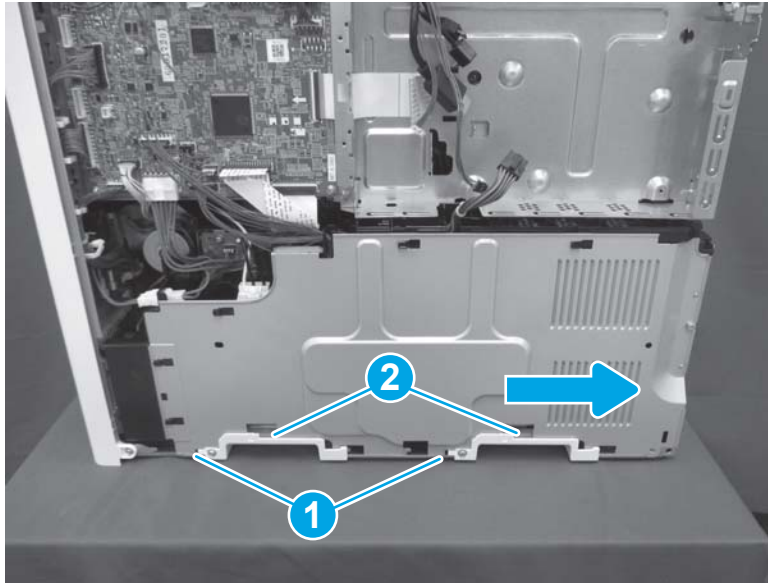


3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).

---

 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.

---


Figure 1-1320 Remove the low-voltage power supply

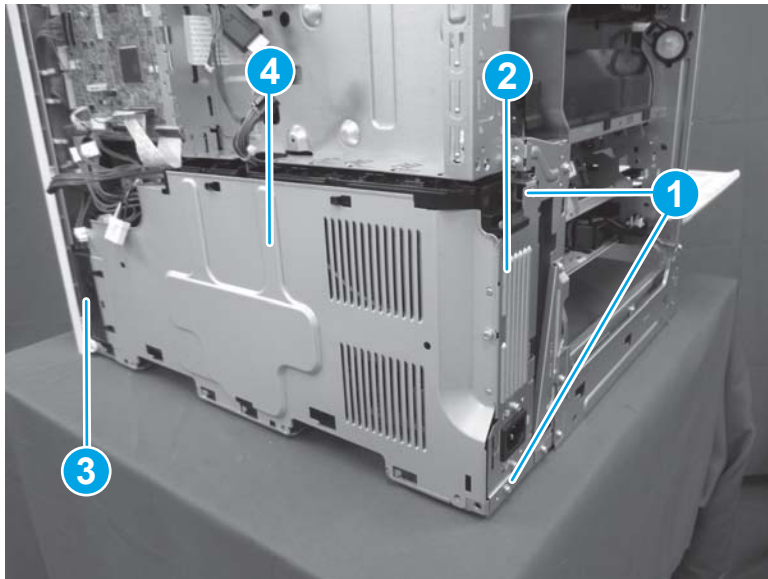

### Step 5: Remove the low-voltage power supply (LVPS)


1. Disconnect one connector (callout 1), and then remove one screw (callout 2).

---

 **Reinstallation tip:** One of the screws (callout 2) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.


---

Figure 1-1321 Disconnect one connector and remove one screw

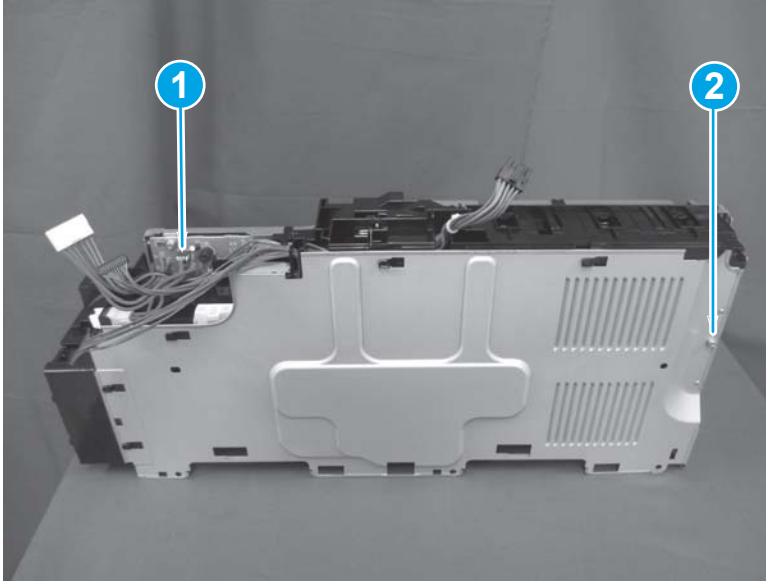

2. Unhook one spring on the top of the LVPS (callout 1).


---

 **IMPORTANT:** Do not lose this spring. It is not included with the replacement part.


 **Reinstallation tip:** Make sure that this spring is fully installed on the replacement LVPS.

---


Figure 1-1322 Unhook one spring

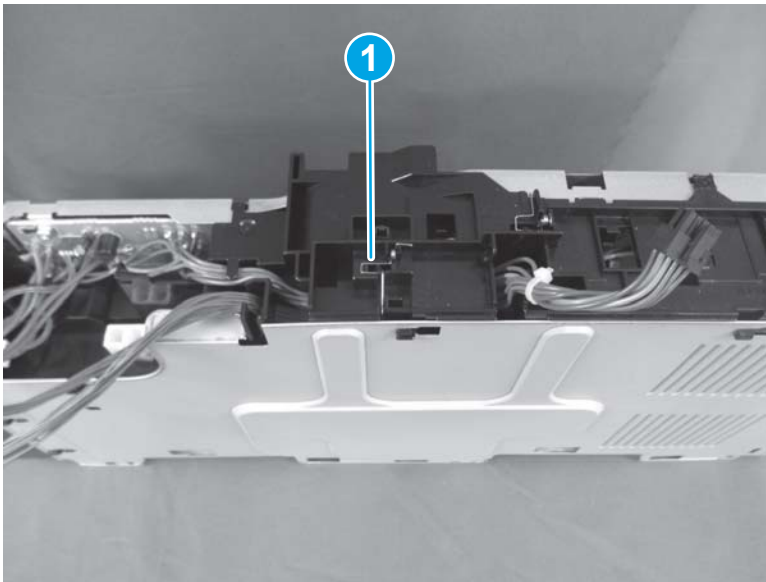

3. Remove the power supply fan holder (callout 1). Lift on the right side of the LVPS cover (callout 2), and then slide the cover to the left to remove it from the LVPS (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1323** Remove the power supply fan holder and LVPS cover

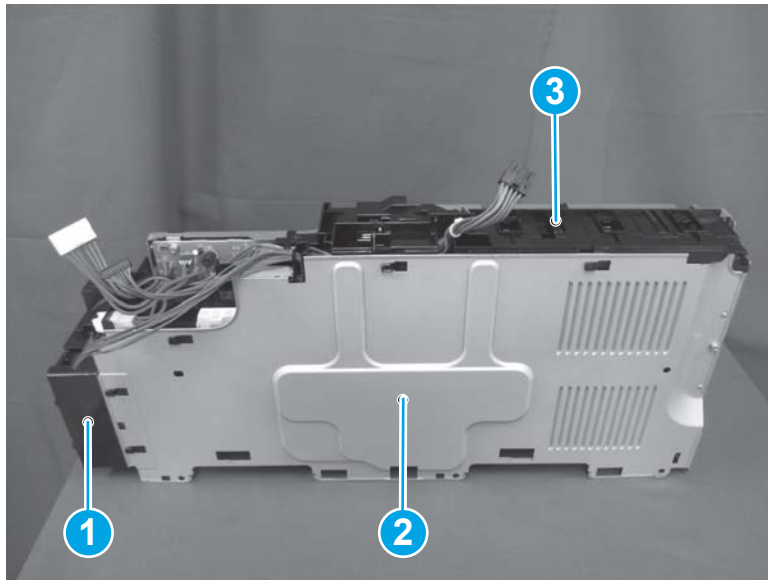



### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Lower high-voltage power supply (HVPS)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the lower high-voltage power supply](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lower high-voltage power supply (HVPS).


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)


---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Lower high-voltage power supply part number

---

RM3-7006-000CN

Lower high-voltage power supply

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1324 Remove the formatter cover

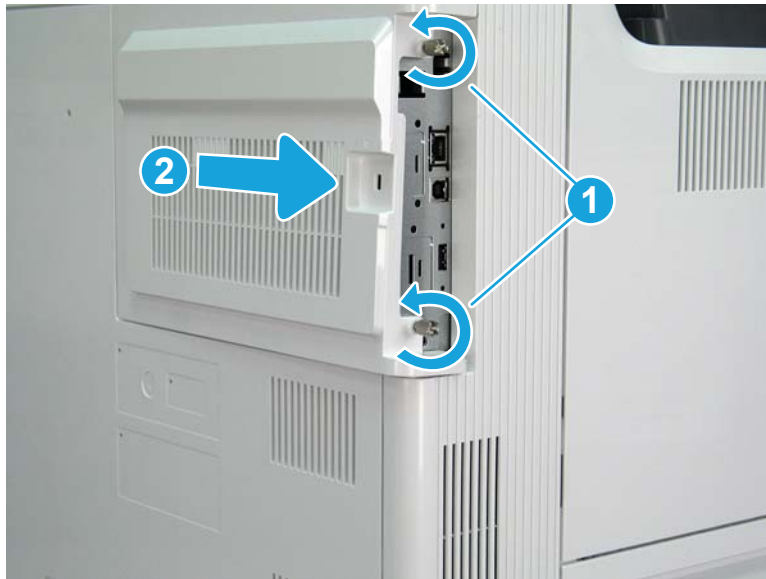

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1325 Remove the left rear cover

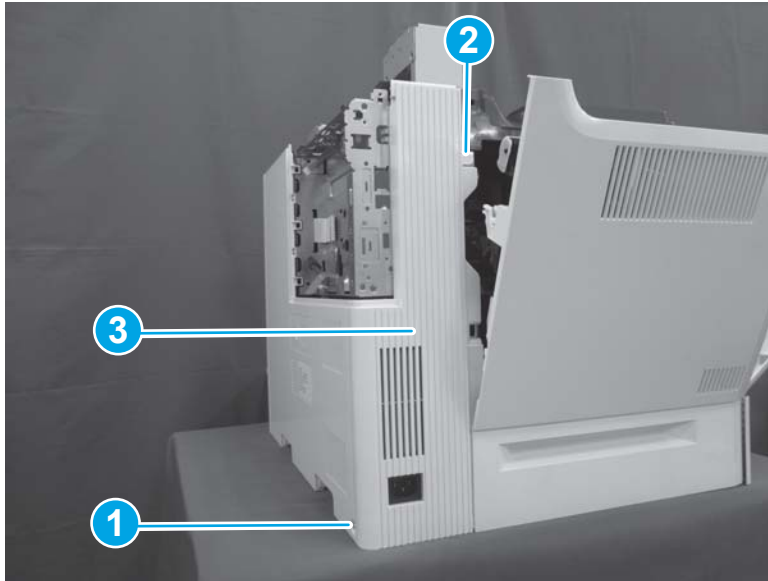


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.


Figure 1-1326 Install the left rear cover

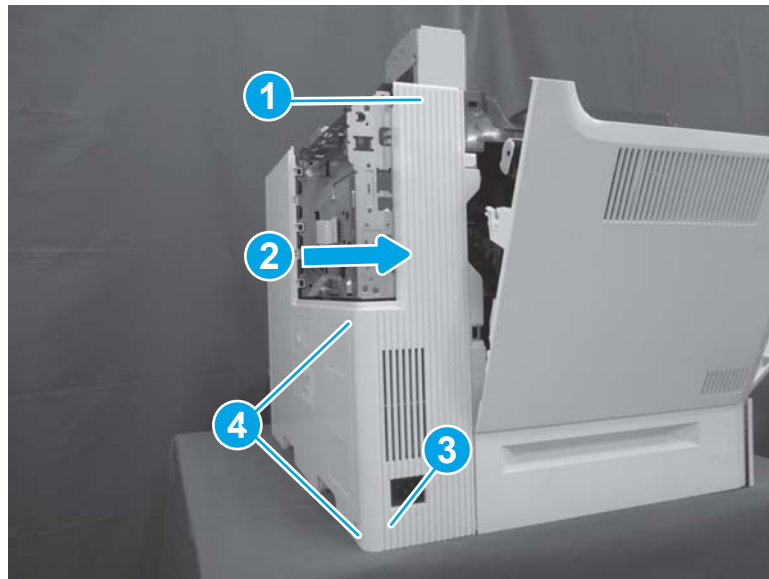


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.



 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1327** Remove two screws and the rear cover

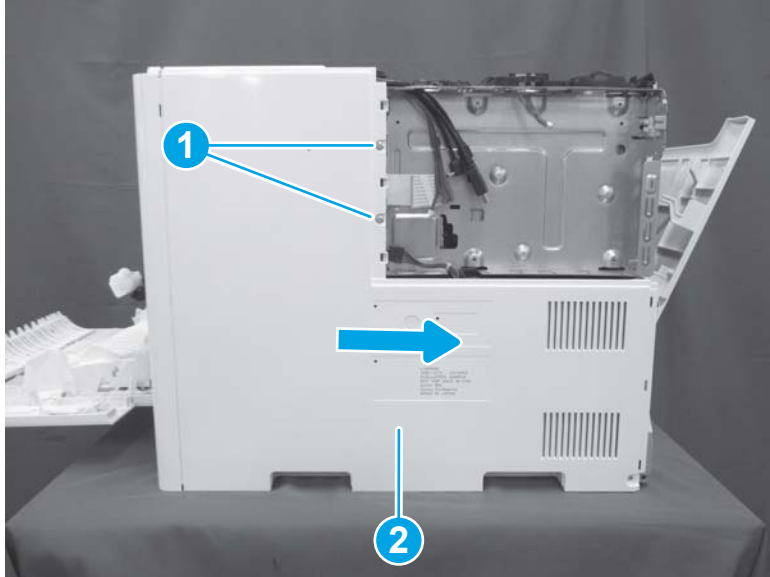

**Step 4: Remove the low-voltage power supply (LVPS) and fan**


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-1328** Disconnect five connectors and remove two screws

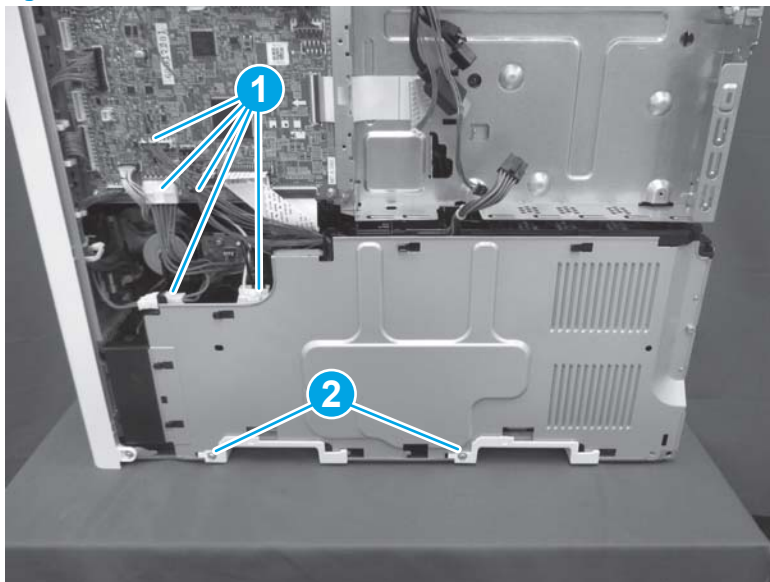

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1329 Remove two handles

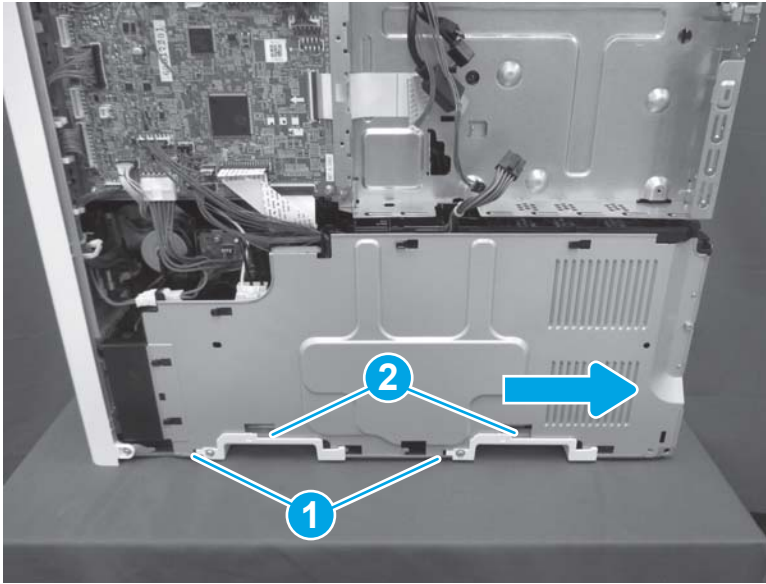

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


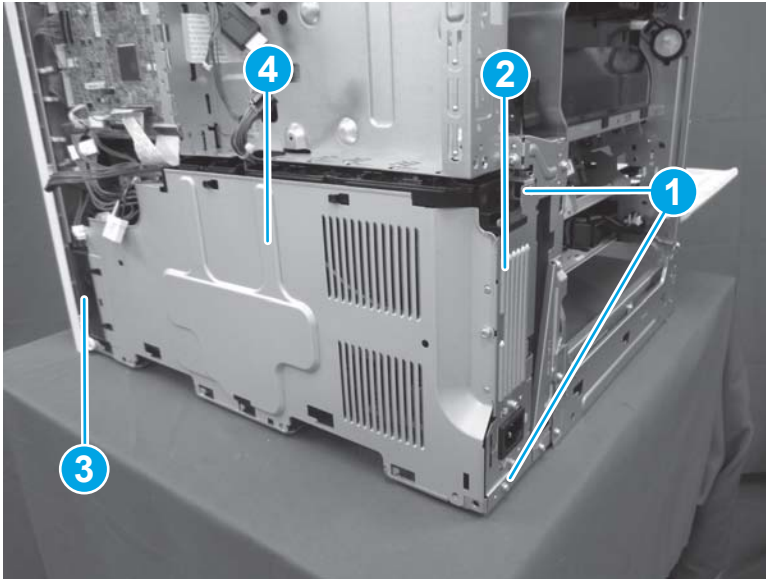
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-1330 Remove the low-voltage power supply




#### Step 5: Remove the lower high-voltage power supply

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).

Figure 1-1331 Disconnect one connector

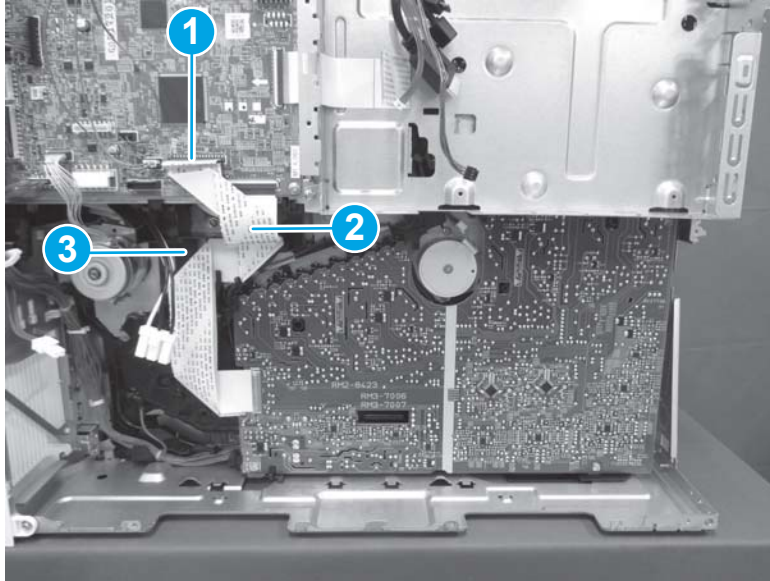

2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.


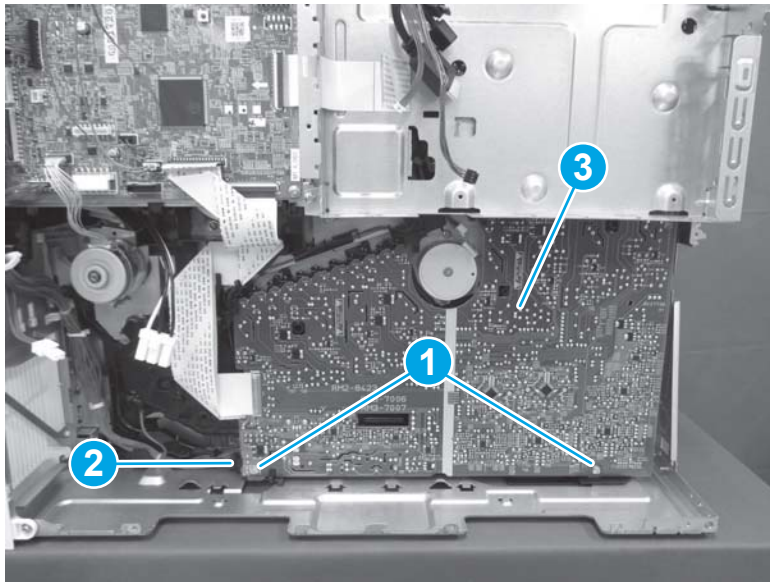
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1332 Remove two screws and release one tab



### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Upper high-voltage power supply (HVPS)

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 5: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 13: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the output bin](#)
- [Step 15: Remove the formatter cover](#)
- [Step 16: Remove the left rear cover](#)
- [Step 17: Remove the rear cover](#)
- [Step 18: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 20: Remove the formatter](#)
- [Step 21: Remove the formatter case](#)
- [Step 22: Remove the DC controller PCA](#)
- [Step 23: Remove the DC controller stay](#)
- [Step 24: Remove the upper high-voltage power supply \(HVPS\)](#)
- [Step 25: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the upper high-voltage power supply (HVPS).

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Upper high-voltage power supply (HVPS) part number	
RM2-8424-000CN	Upper high-voltage power supply (HVPS)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660)



**NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1333 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1334 Release five tabs






3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1335 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1336 Disconnect the keyboard flat cable

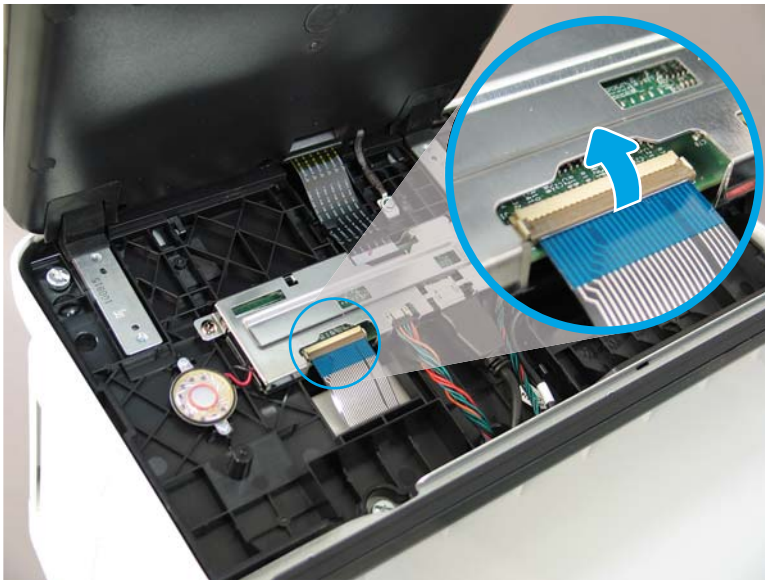



5. Slide the keyboard tray out until it stops.

Figure 1-1337 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1338 Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1339 Remove the keyboard



#### Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1340 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1341 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1342 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-1343** Disconnect the keyboard flat cable (keyboard models only)

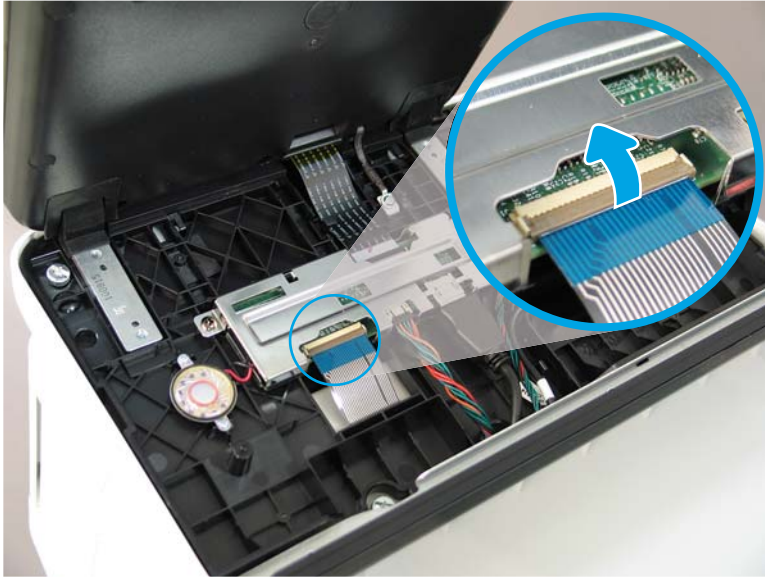


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-1344** Disconnect connectors

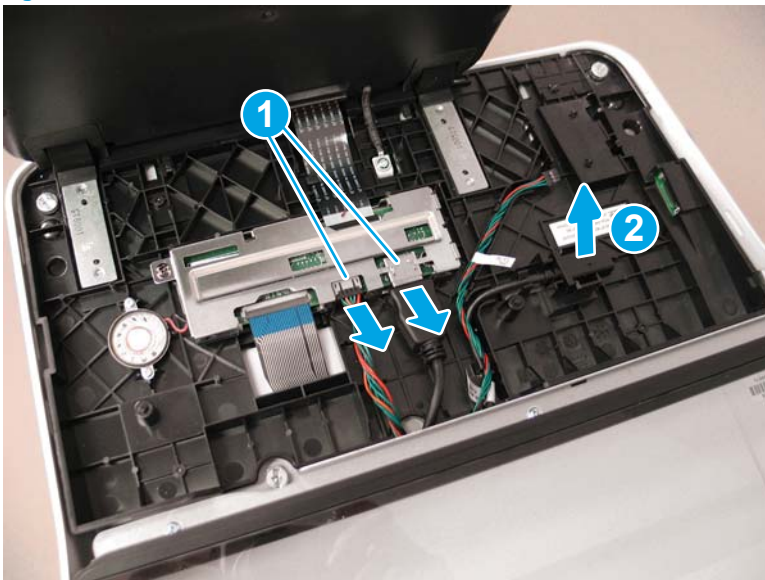


6. Remove three thumbscrews (callout 1).

Figure 1-1345 Remove three thumbscrews

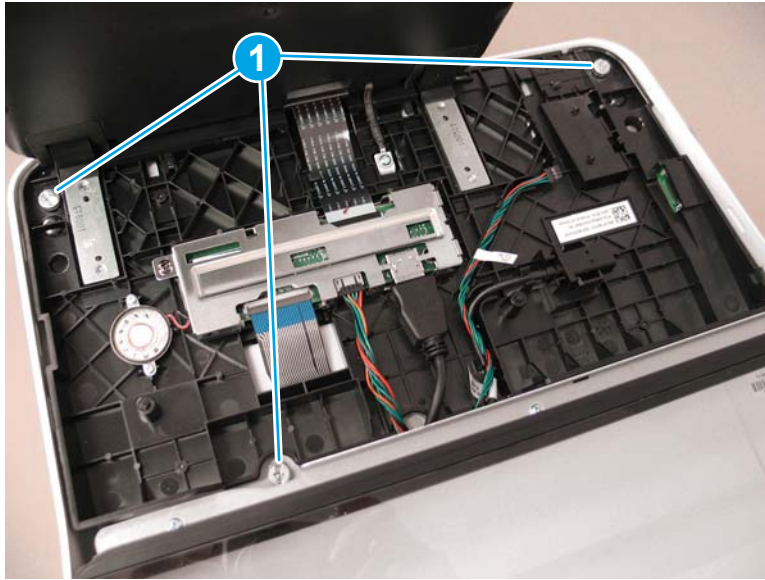


7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1346 Remove the control panel

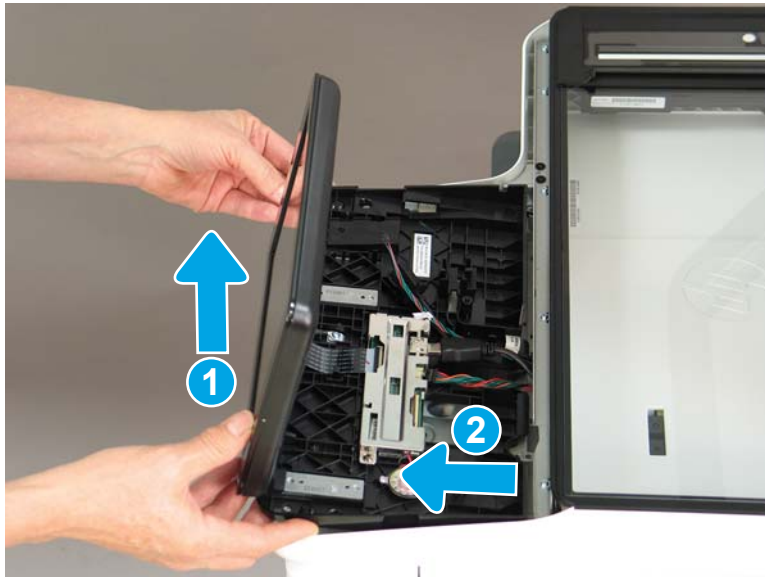


### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1347 Remove the SCB cover

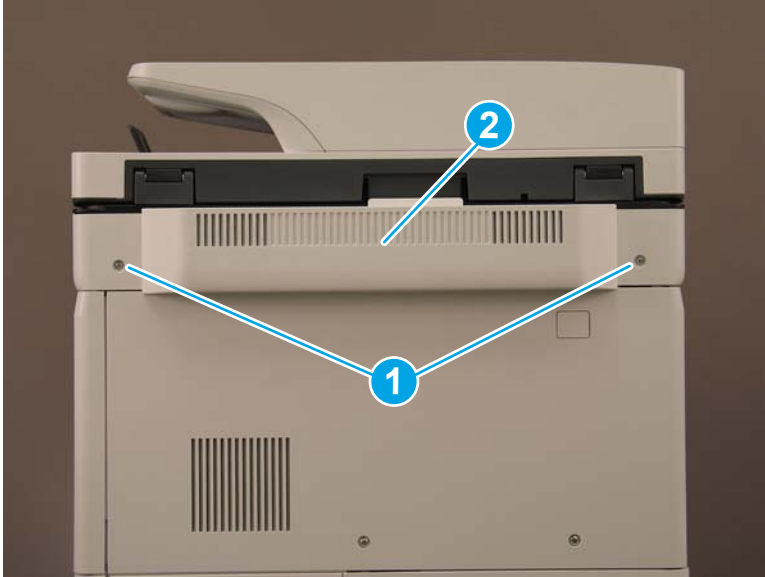

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).


Figure 1-1348 Remove the small cover






- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-1349** Remove the stapler/stacker rear cover

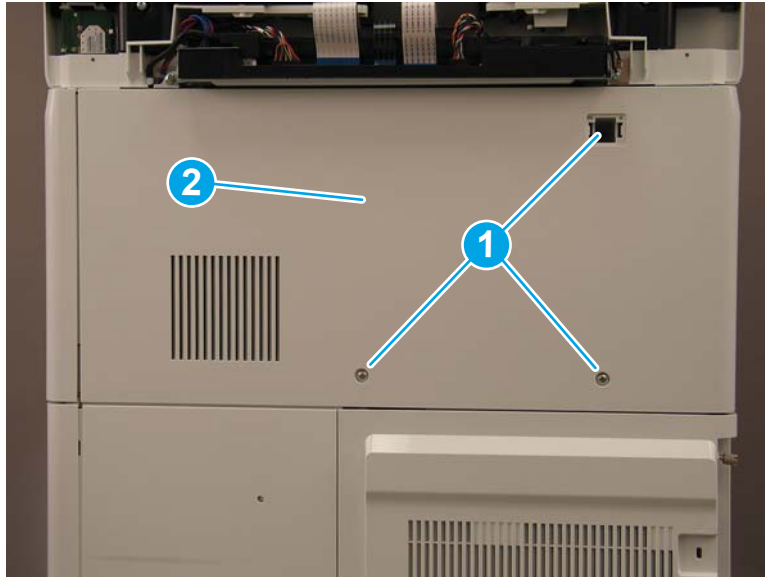


3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

**Figure 1-1350** Remove the upper rear cover

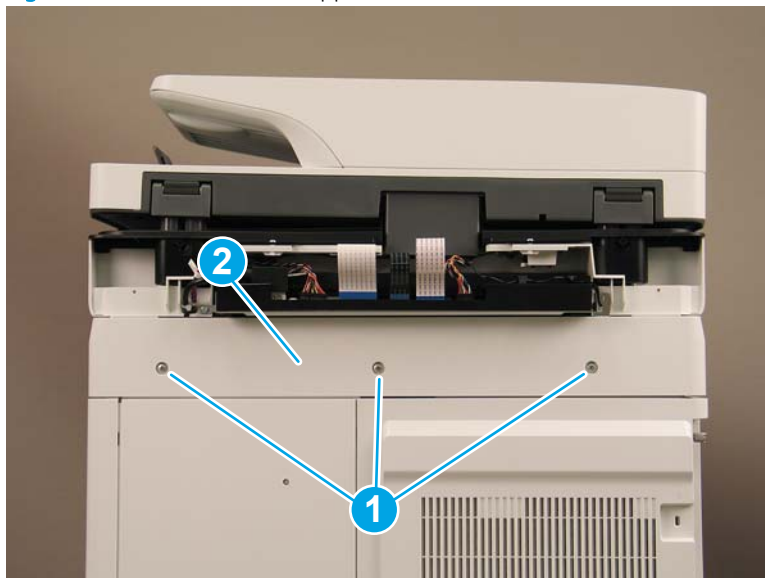

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-1351** Remove the formatter cover

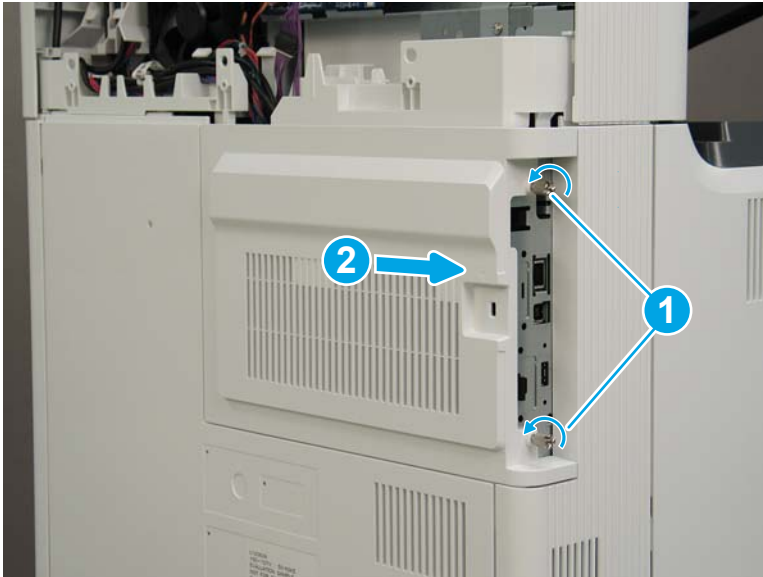

5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.


**Figure 1-1352** Cable routing for M681dh, M681f, and Flow M681f





6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1353 Disconnect two connectors

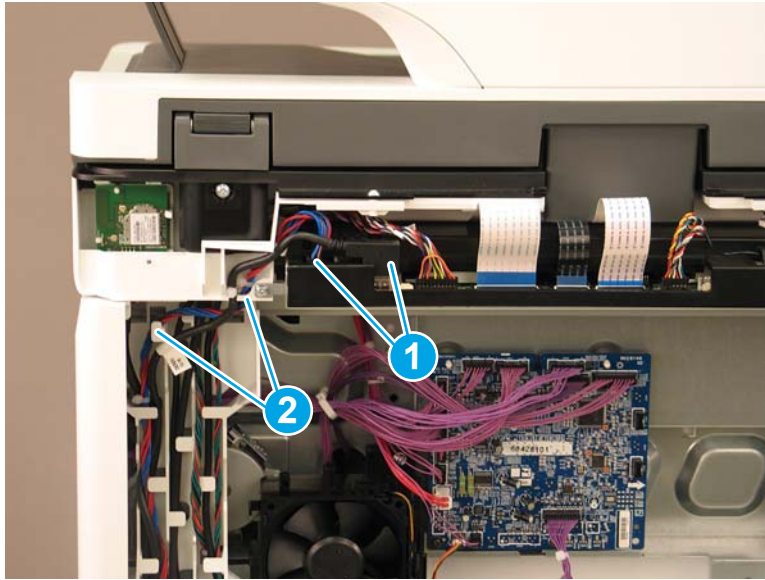


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1354 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1355 Disconnect the wireless connector

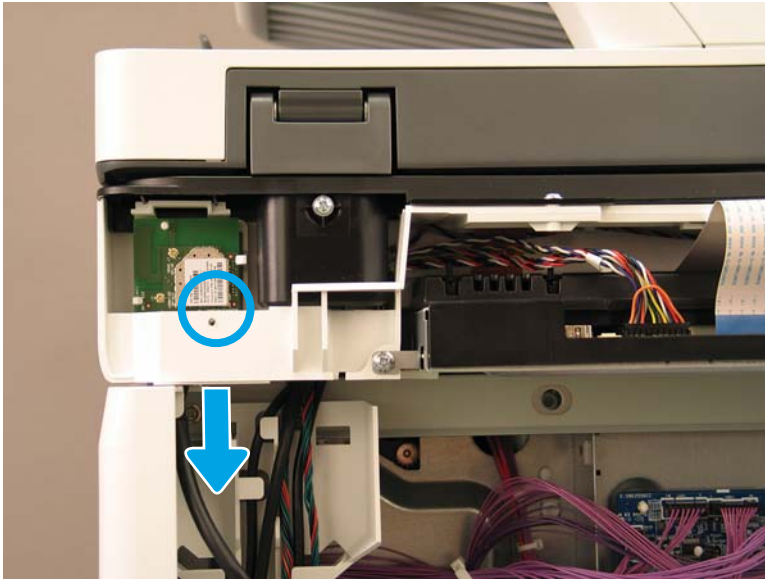


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1356 Release the cables

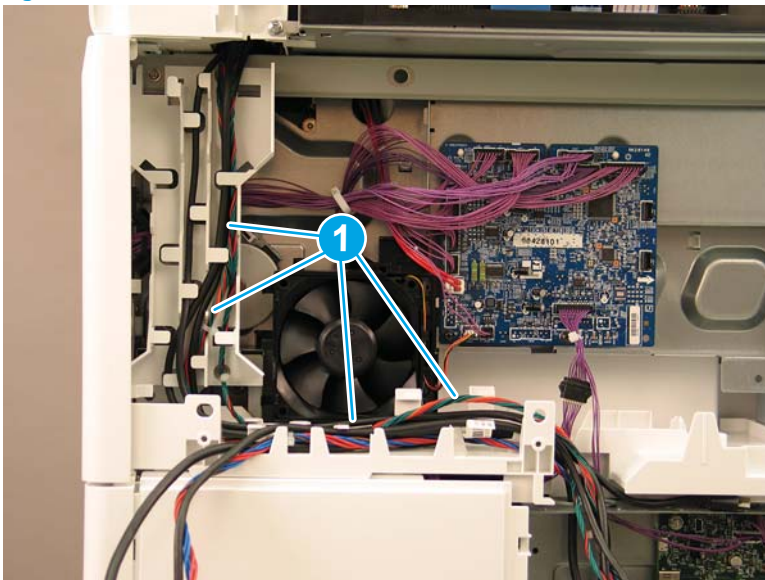


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1357 Remove four screws

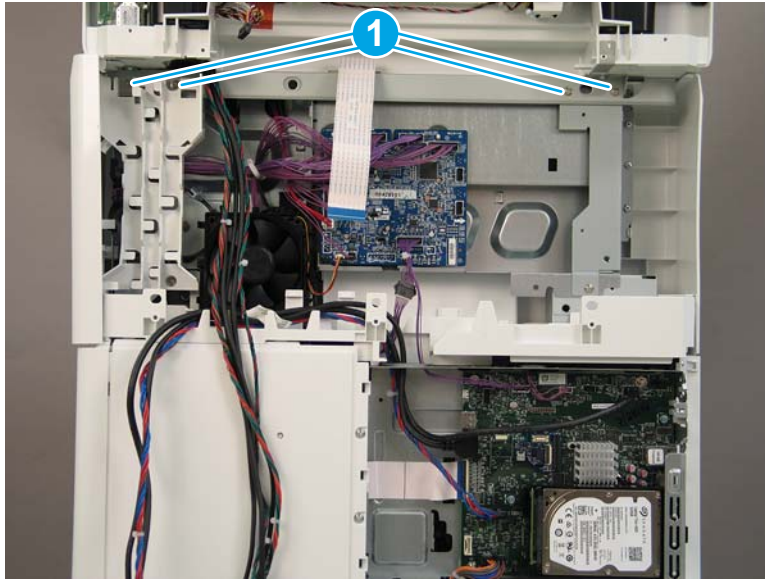

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1358 Remove three screws

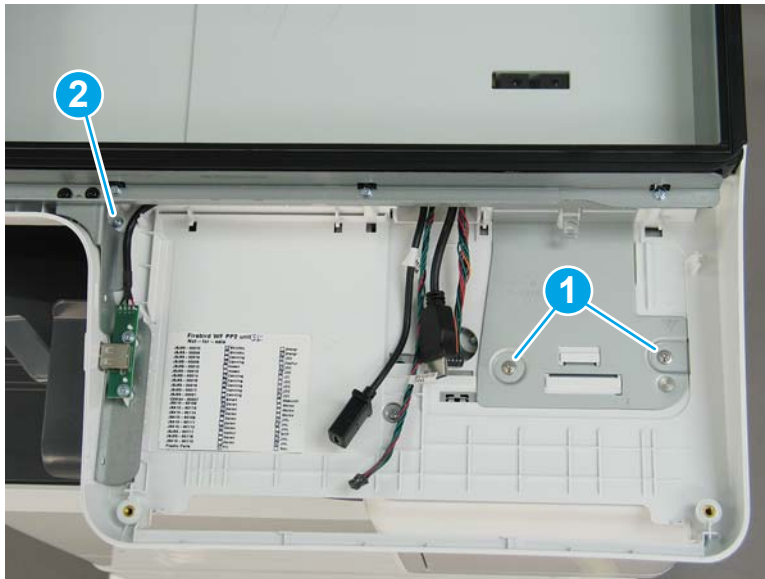

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-1359** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-1360** Remove the wireless card

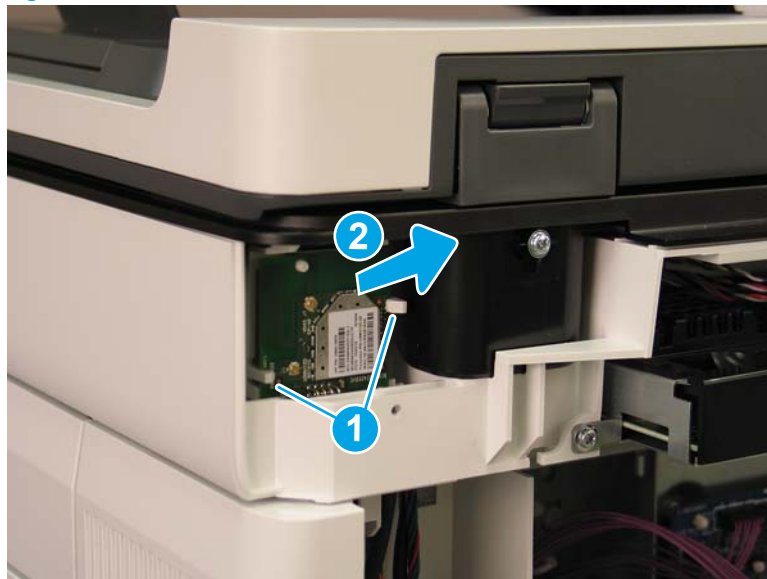


- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-1361** Connect the wireless card connector



- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).


**Figure 1-1362** Reinstall the wireless card

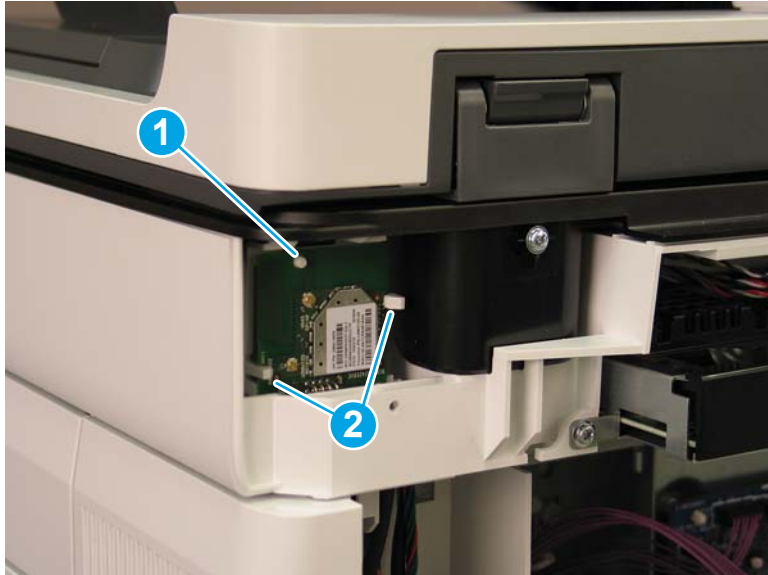




- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1363 Install the SCB cables

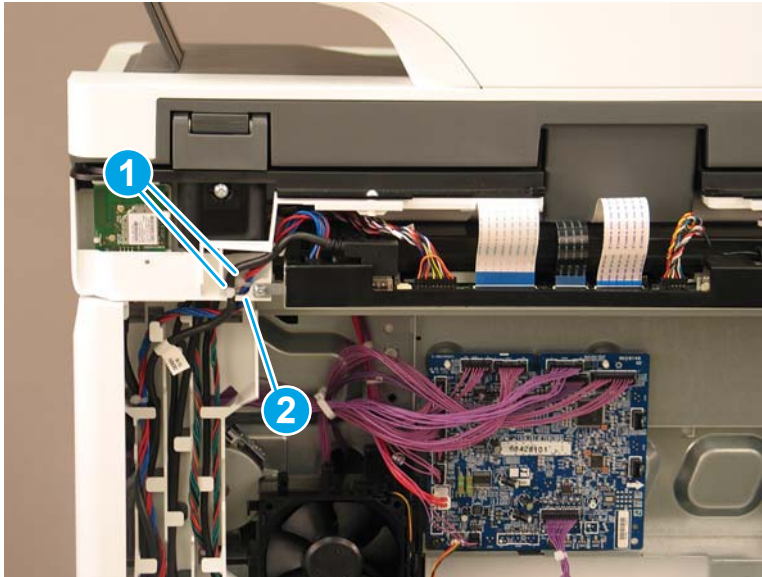

#### Step 4: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 891


1. Open the front door.

Figure 1-1364 Open the front door




2. Open the stapler door.

Figure 1-1365 Open the stapler door

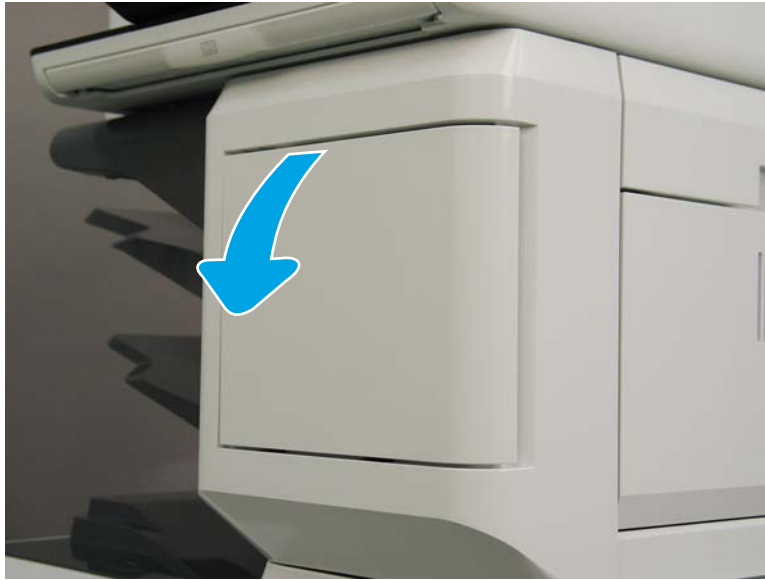

3. Release the latch, and then remove the staple cartridge.

Figure 1-1366 Remove the staple cartridge

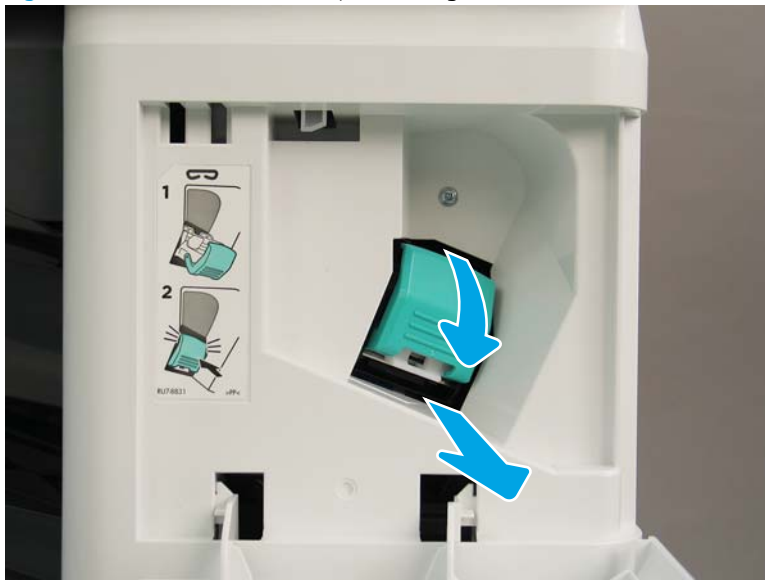

4. Remove one screw (callout 1).

Figure 1-1367 Remove one screw



5. Rotate the stapler cover to the right to remove it.


Figure 1-1368 Remove the stapler cover






6. Remove one screw (callout 1).

Figure 1-1369 Remove one screw

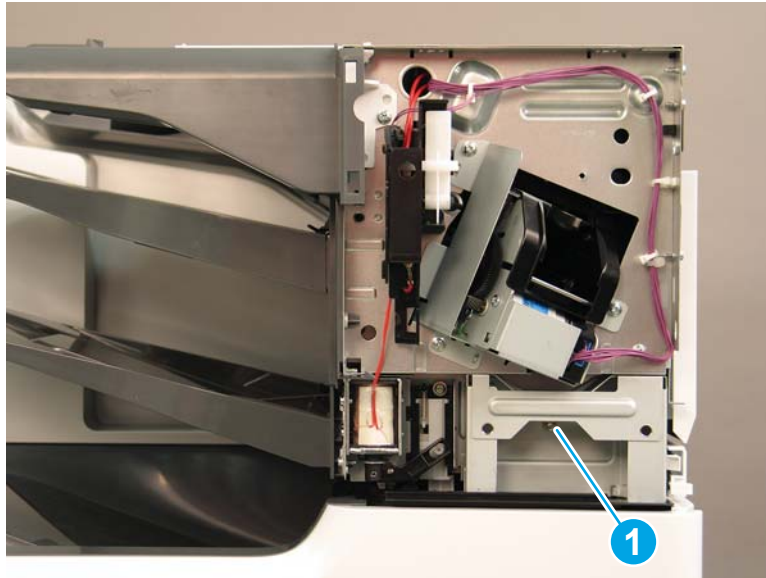


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1370 Remove the stapler/stacker right upper cover

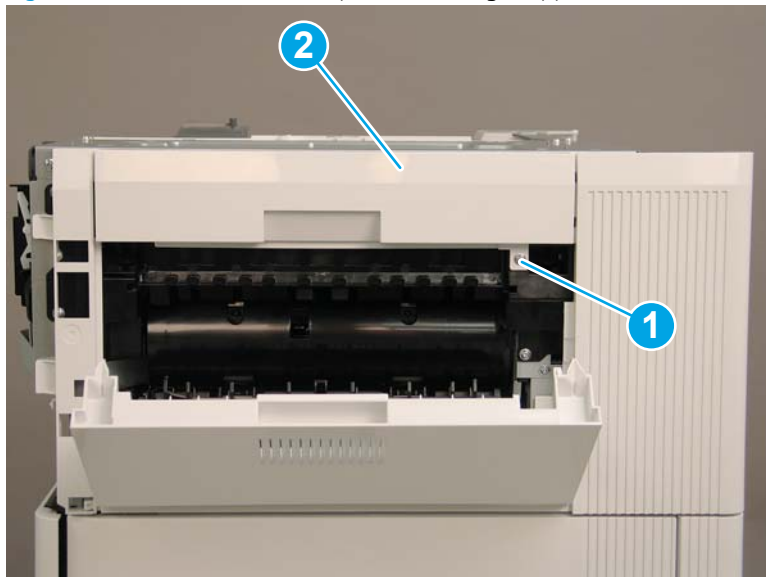


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1371 Remove the stapler rear cover

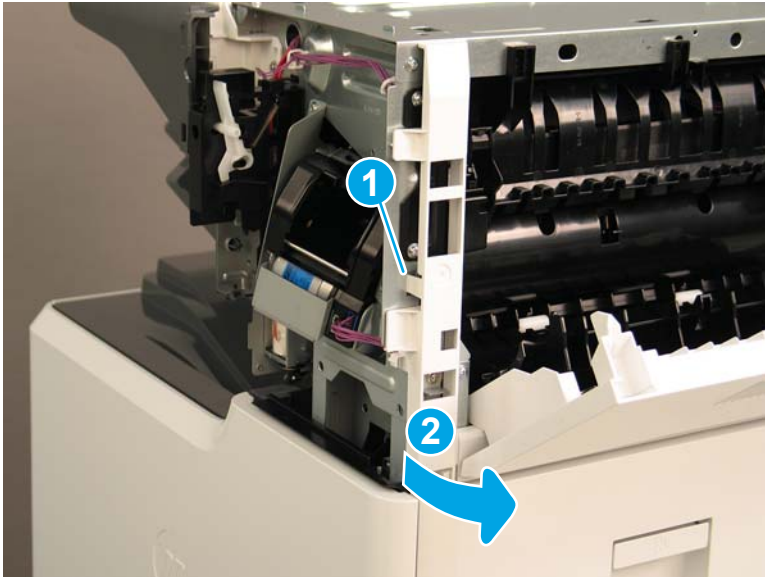


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1372 Remove the stapler/stacker rear corner cover

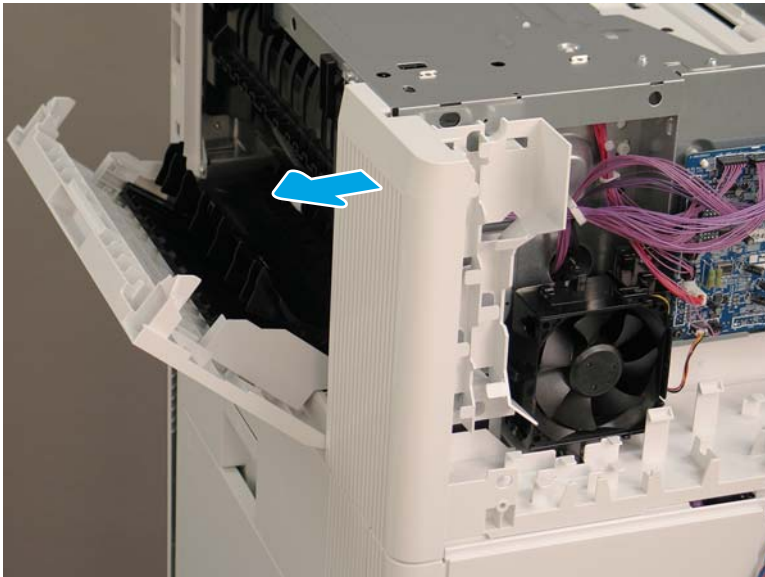


10. Remove two screws (callout 1).

Figure 1-1373 Remove two screws

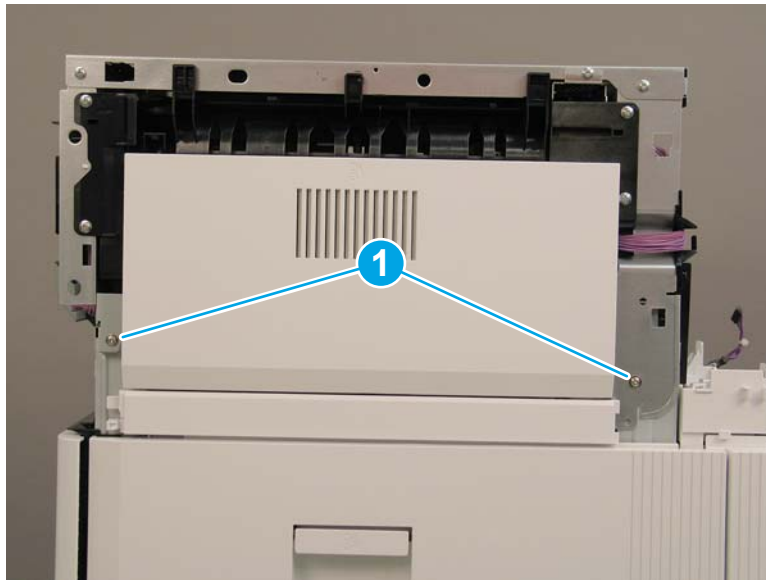


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1374 Remove the cable guide

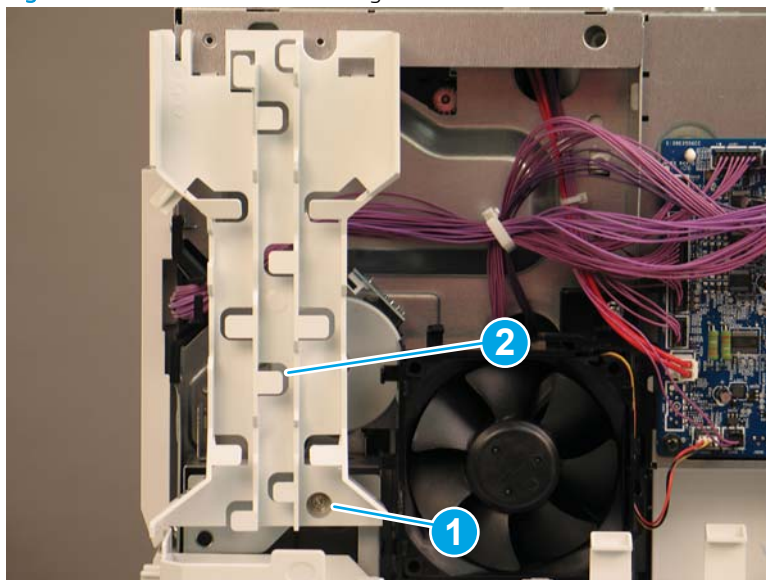

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1375 Disconnect one connector

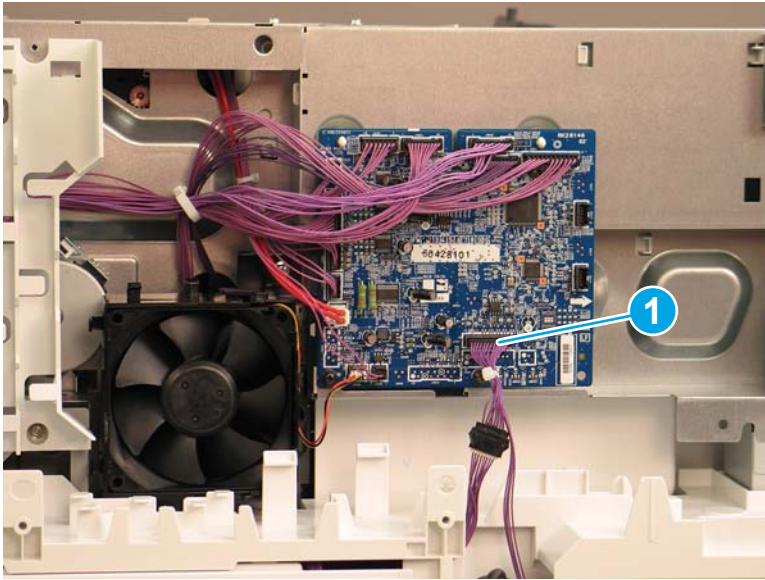

13. Remove two screws (callout 1).


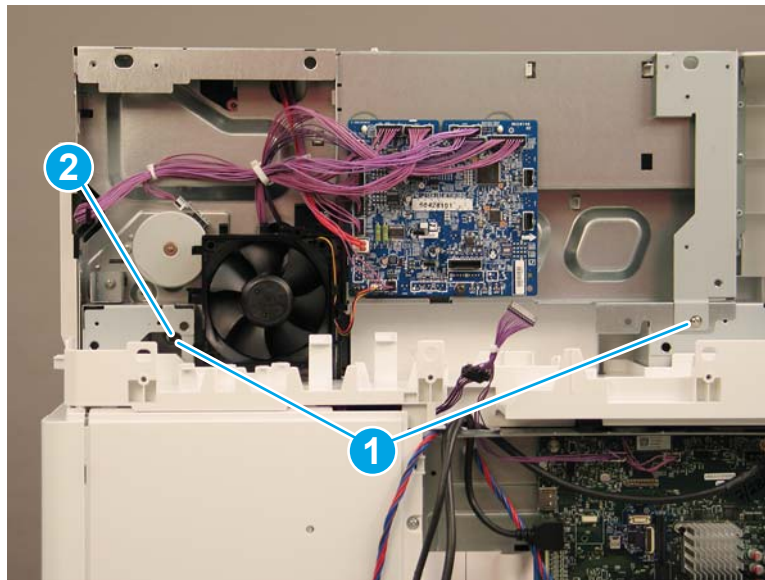
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.


Figure 1-1376 Remove two screws




14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1377** Remove the stapler/stacker

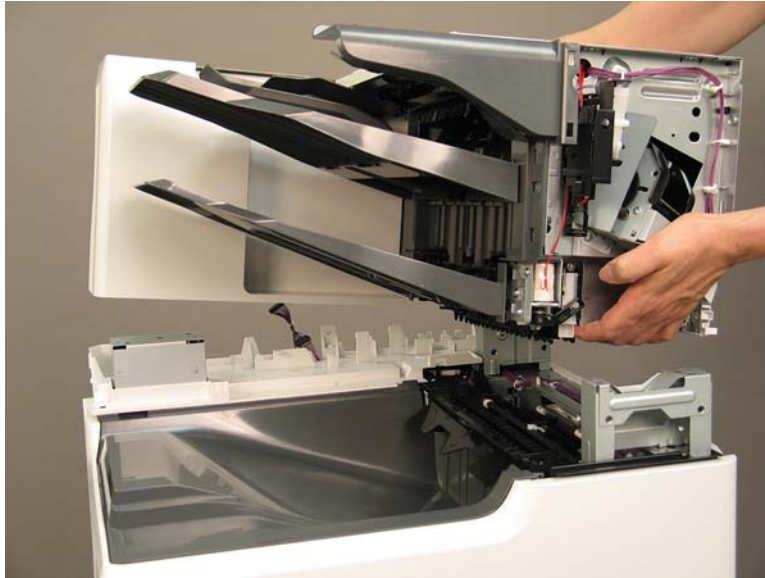


**Step 5: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).


**Figure 1-1378** Remove the face-down front cover

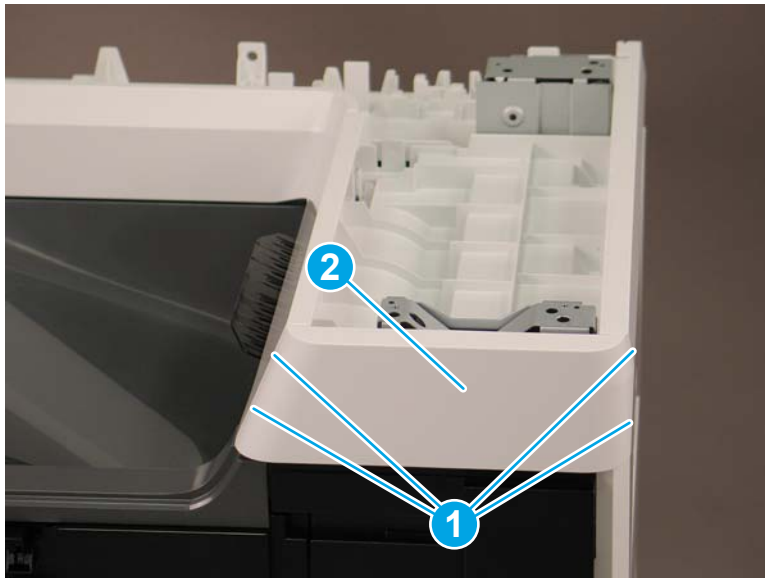

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.



---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Face-down front cover


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1379** Install the cover

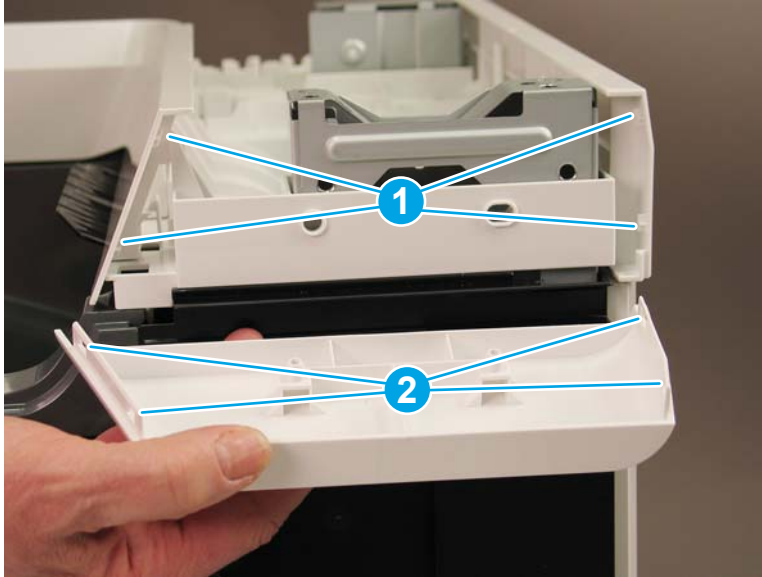

#### Step 6: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


---

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

---


- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

---


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1380 Remove the top cover

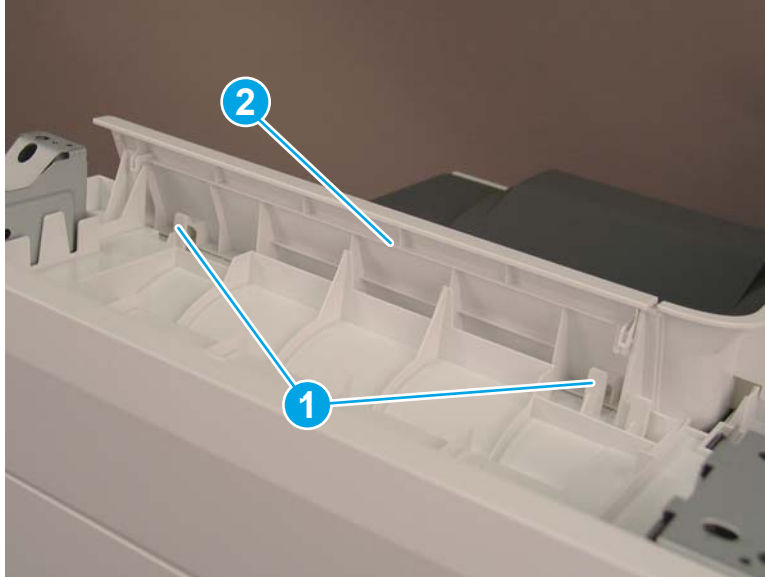

Step 7: Remove the right cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


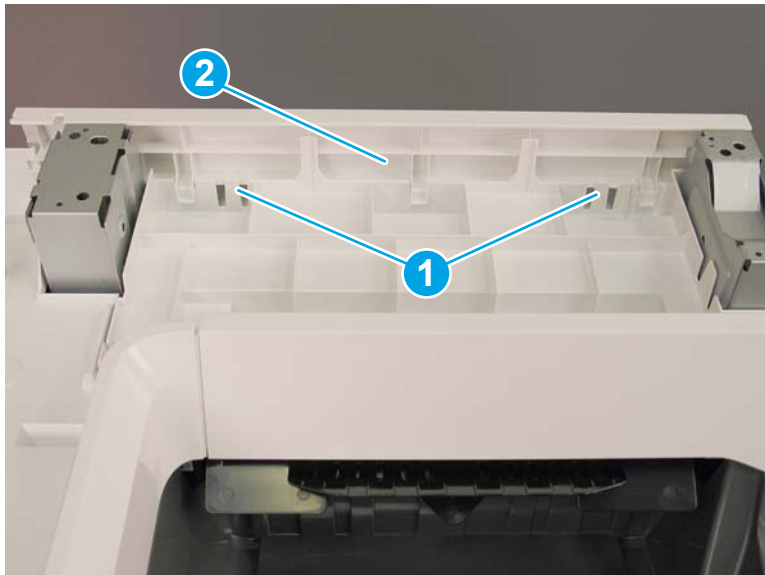

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1381 Remove the right cover



### Step 8: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


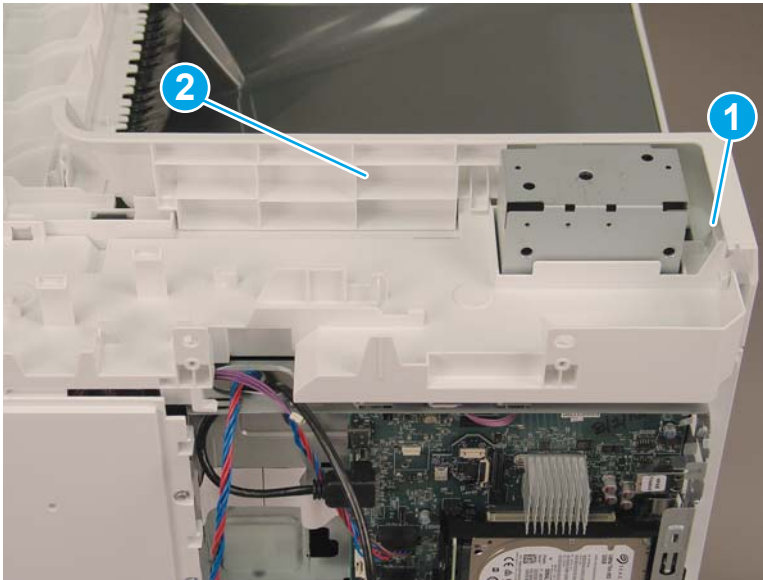

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1382 Remove the front cover



### Step 9: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#)

▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).


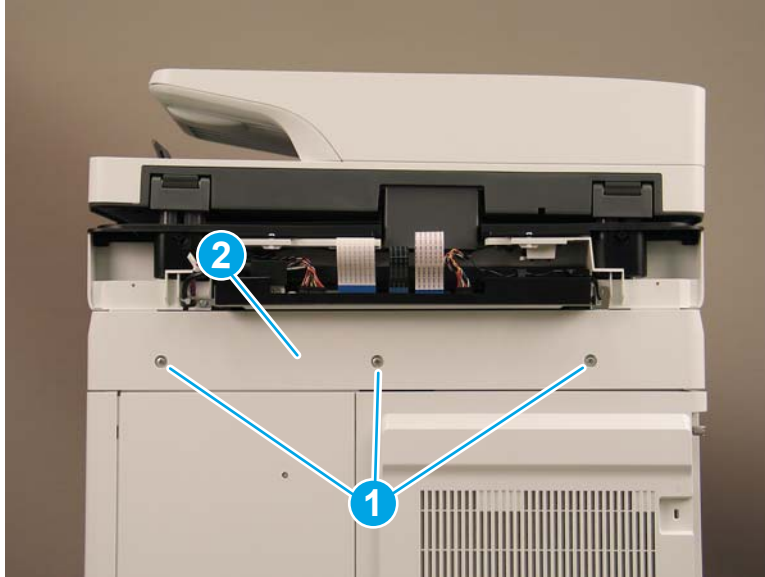

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-1383 Remove the rear upper cover



Step 10: Remove the face-down cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 891

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


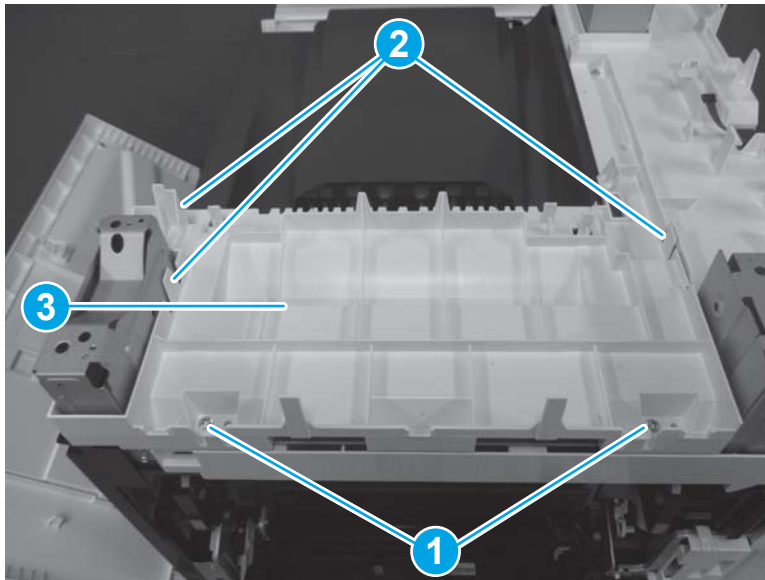

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1384 Remove two screws and the face-down cover




## Step 11: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 891](#).

1. Remove two screws (callout 1), and then release one tab (callout 2).


**Figure 1-1385** Remove two screws and release one tab

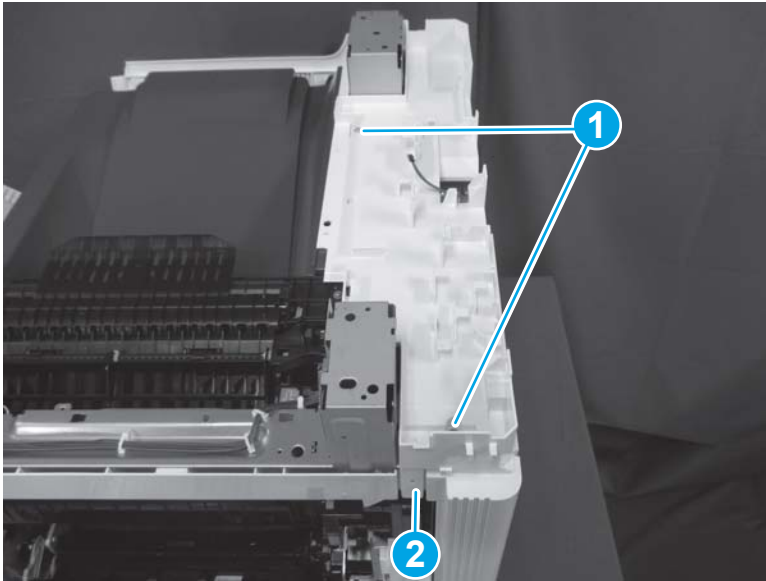


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1386** Remove one screw and the main cover

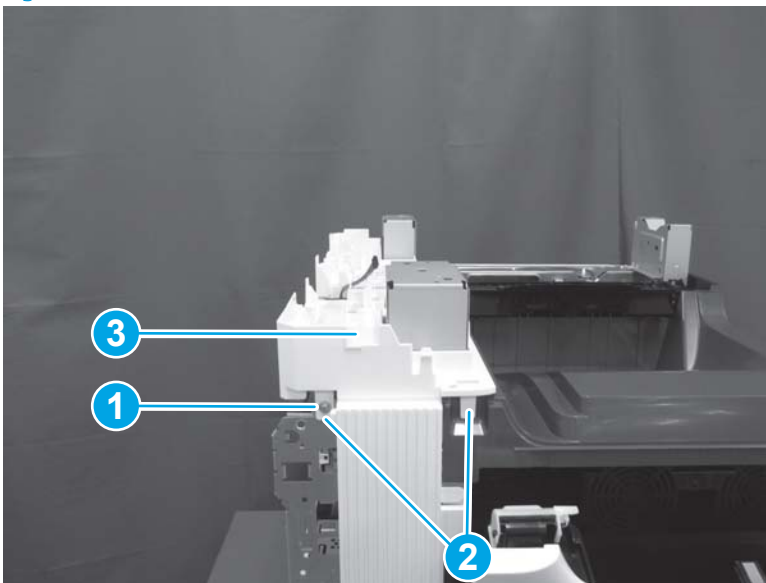

## Step 12: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 14: Remove the output bin on page 895](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1387** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-1388** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-1389** Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

**Figure 1-1390** Release the control panel

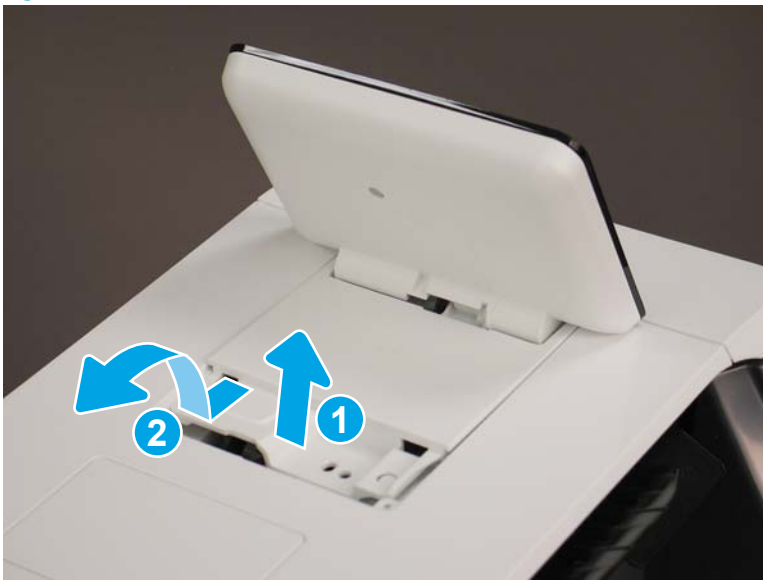

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-1391** Disconnect two connectors

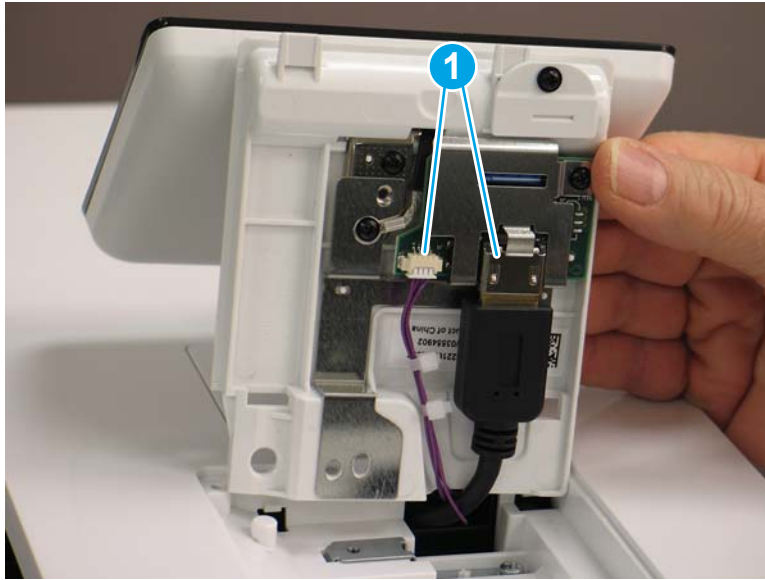


6. Remove the control panel.

**Figure 1-1392** Remove the control panel




### Step 13: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660, skip this step and go to [Step 14: Remove the output bin on page 895](#)

1. Open the following doors:


- Front door
  - Left door
  - Right door
2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1393 Remove the NFC cover

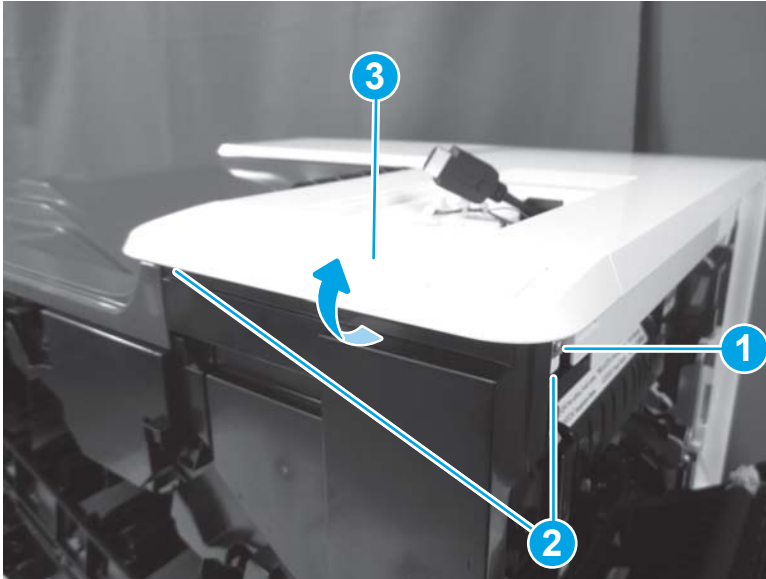


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1394 Remove one screw and release one tab

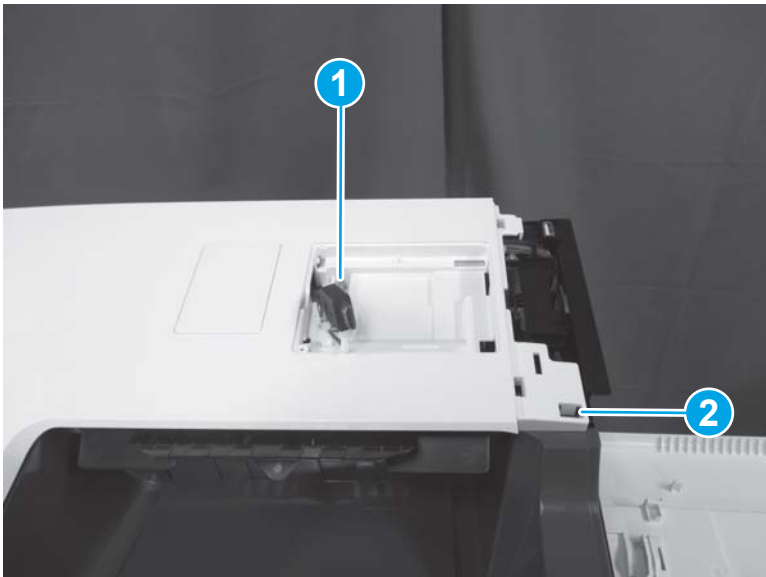

4. Release two tabs (callout 1).

Figure 1-1395 Release two tabs

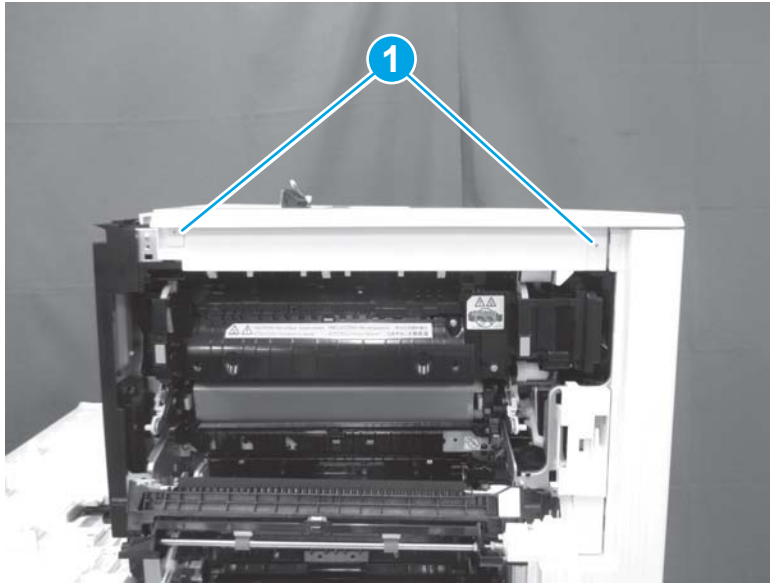

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


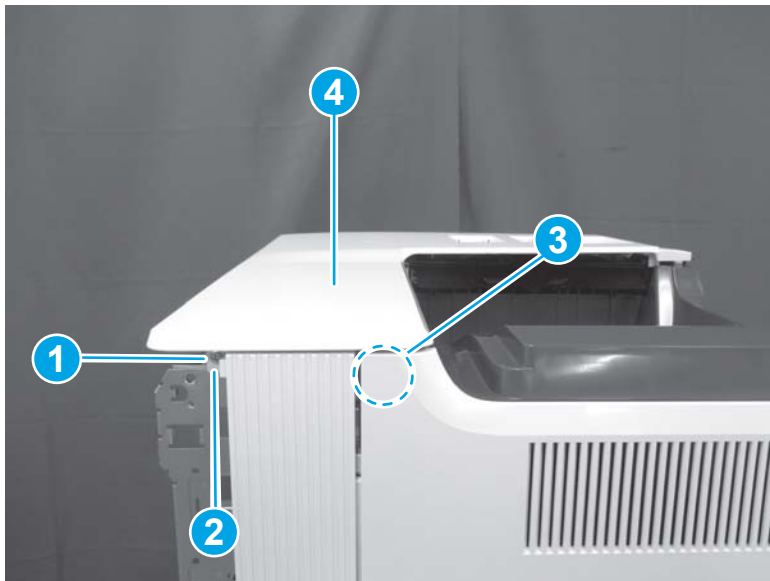
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1396 Remove the top cover



#### Step 14: Remove the output bin


1. Open the following doors:




- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


Figure 1-1397 Remove the output bin

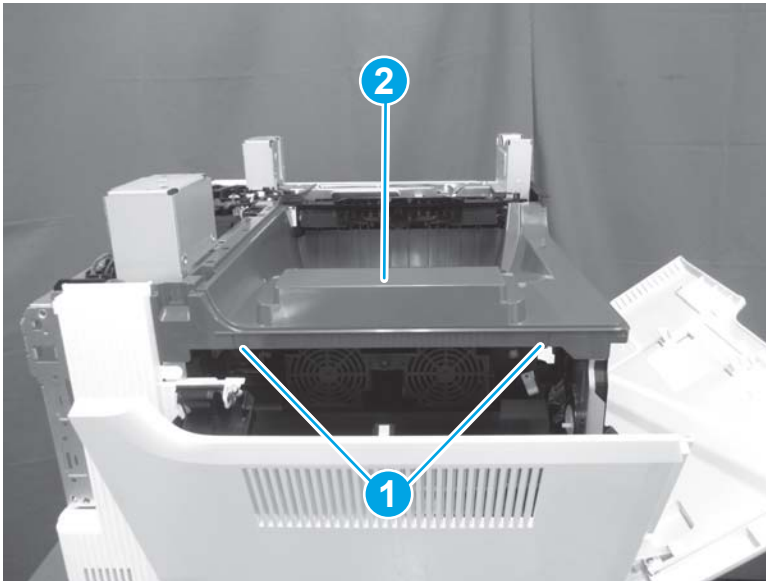

### Step 15: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1398 Remove the formatter cover

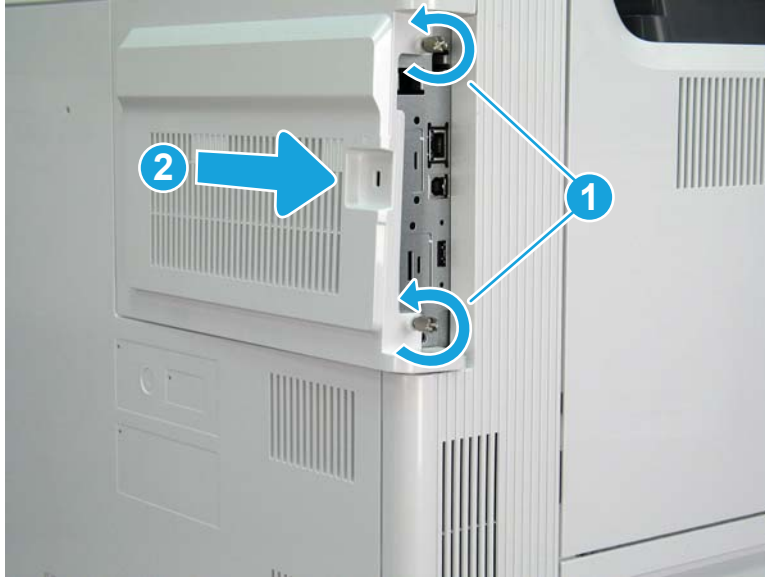

#### Step 16: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1399 Remove the left rear cover

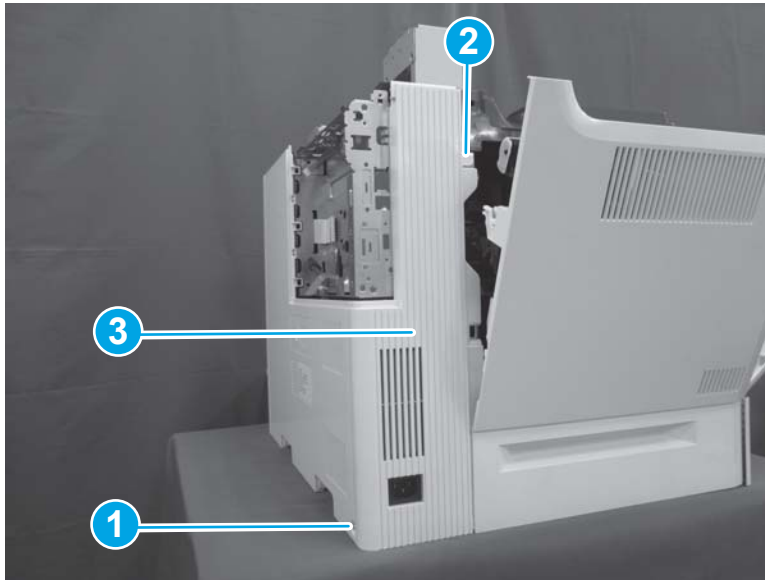


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1400 Install the left rear cover

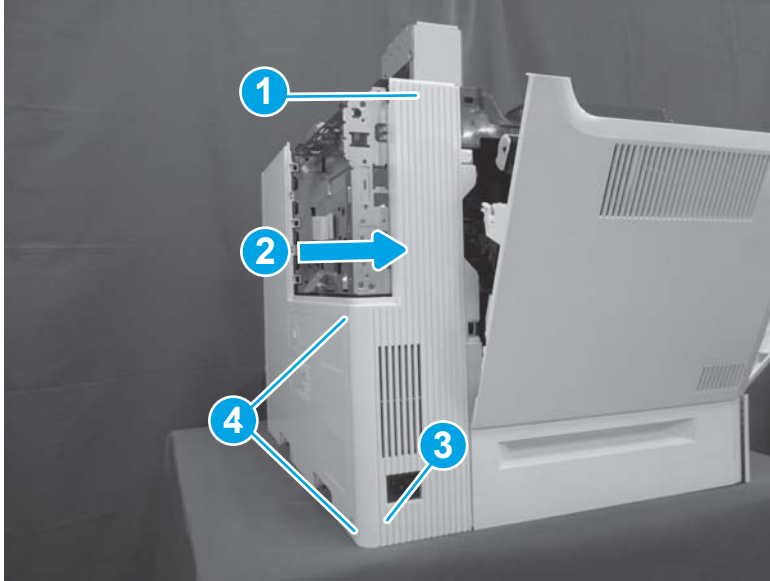


#### Step 17: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1401 Remove two screws and the rear cover

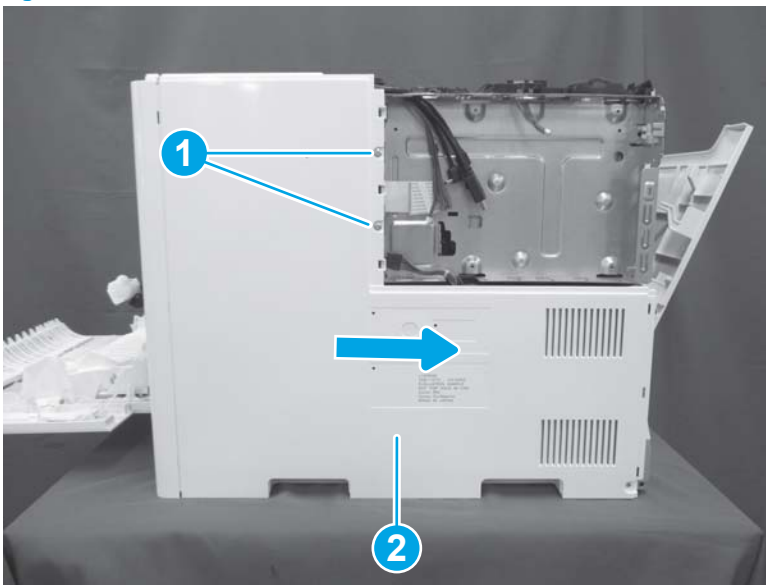

#### Step 18: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

📝 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\) on page 899](#)


1. Locate the fax PCA on the formatter.

Figure 1-1402 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1403 Remove the fax PCA

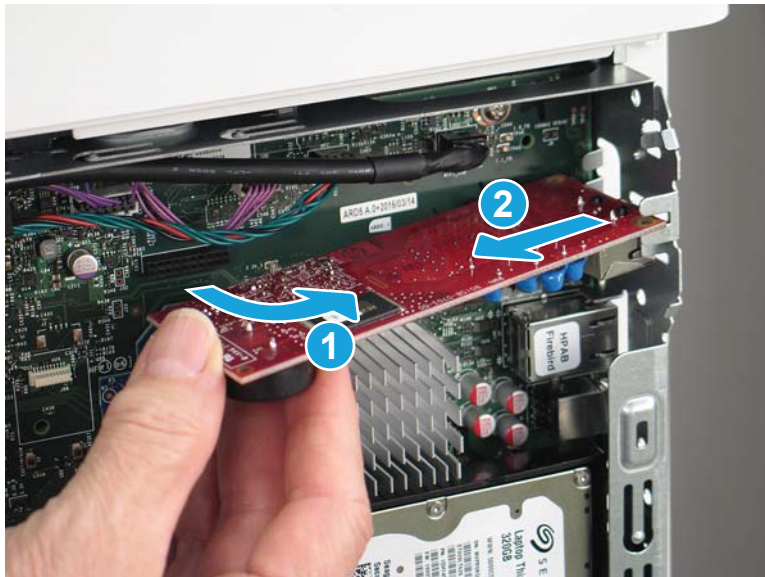

**Step 19: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)**


1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-1404 Release the HDD

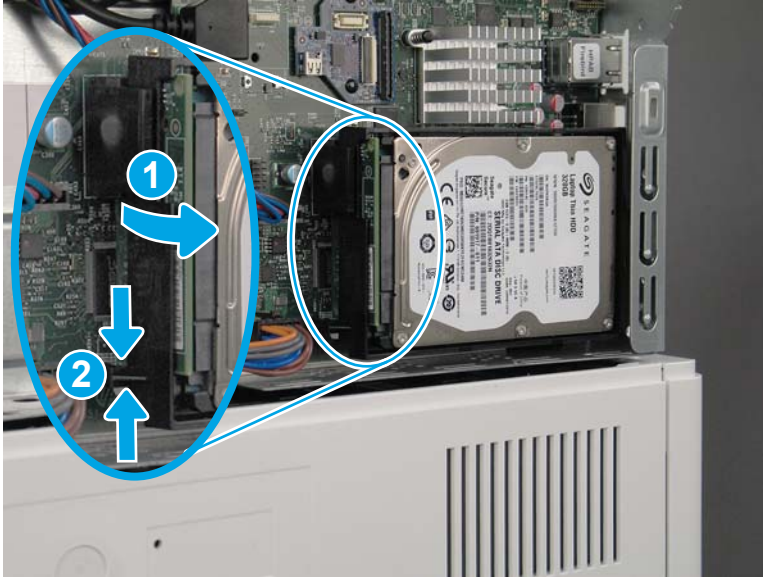


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1405 Remove the HDD

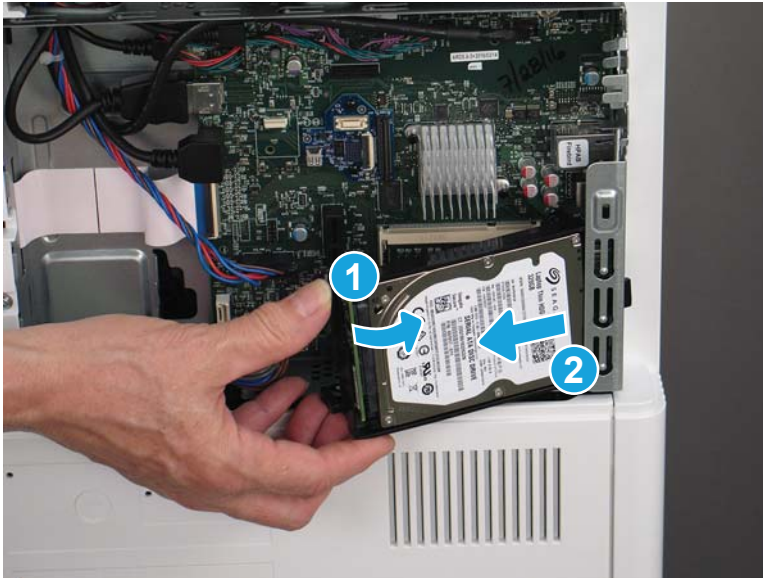

## Step 20: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


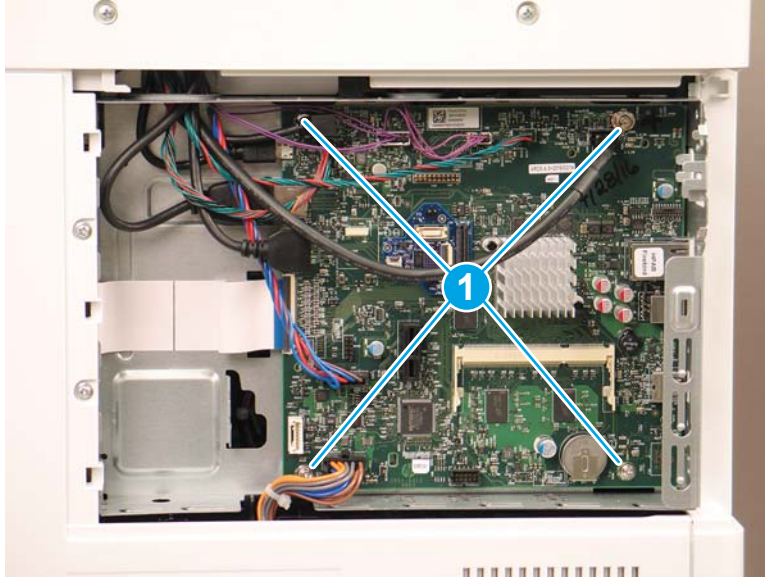
 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-1406 Remove the formatter




### Step 21: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

Figure 1-1407 Disconnect one connector and remove four screws

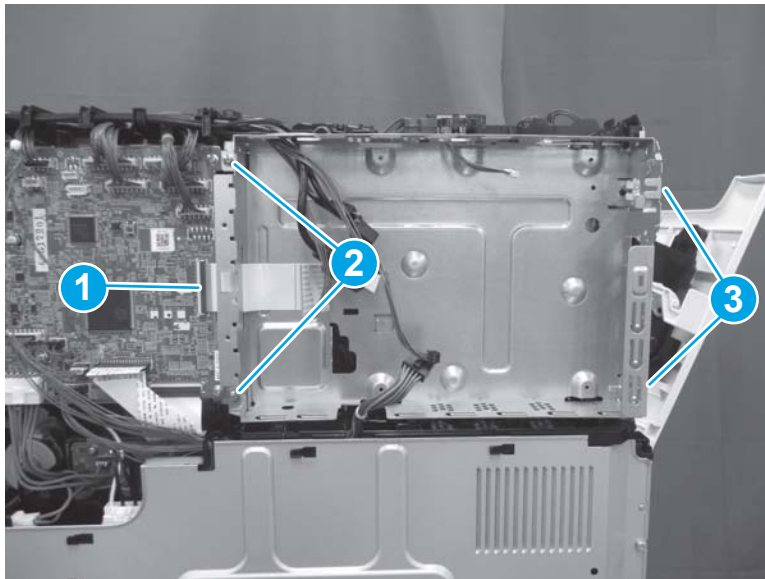


2. Tilt the bottom of the formatter case away from the printer.

Figure 1-1408 Tilt the formatter case

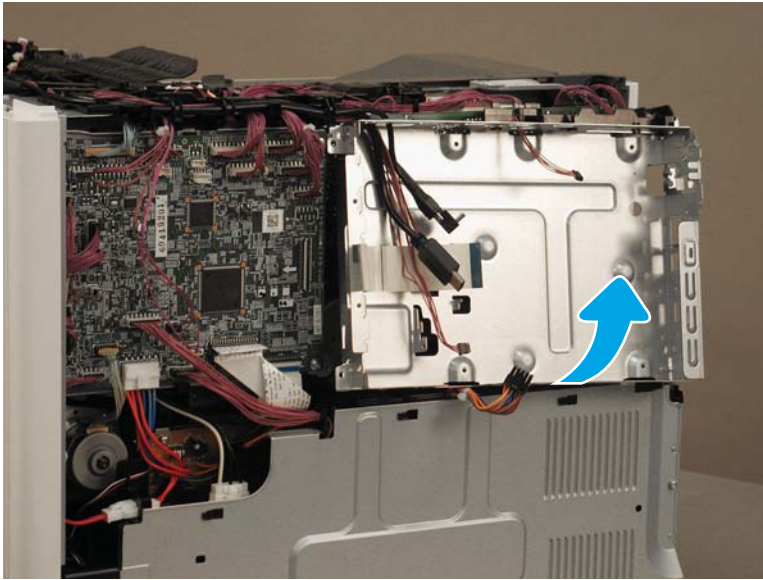

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1409 Remove the cable guide

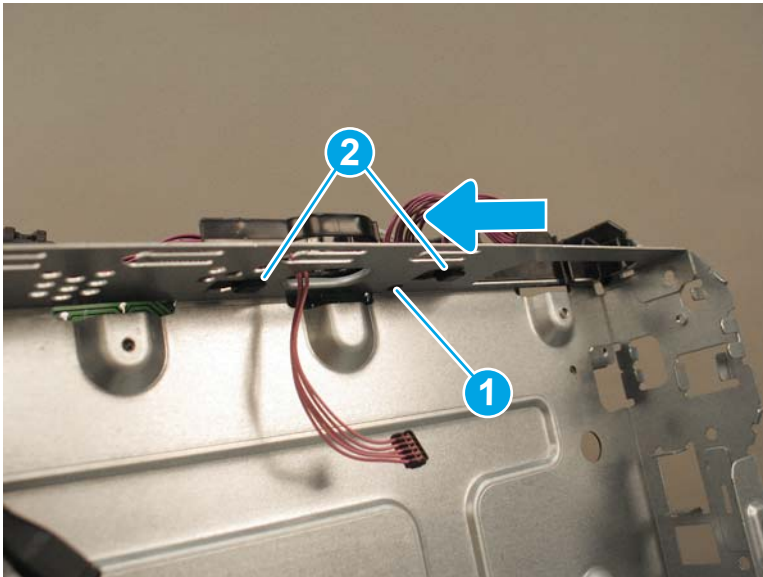

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.




**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1410 Install the cable guide

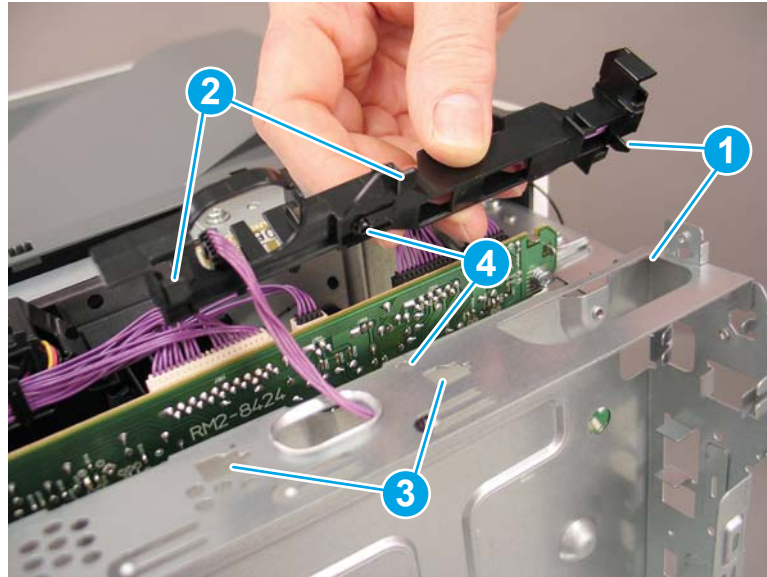

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.

Figure 1-1411 Check the IOD cable

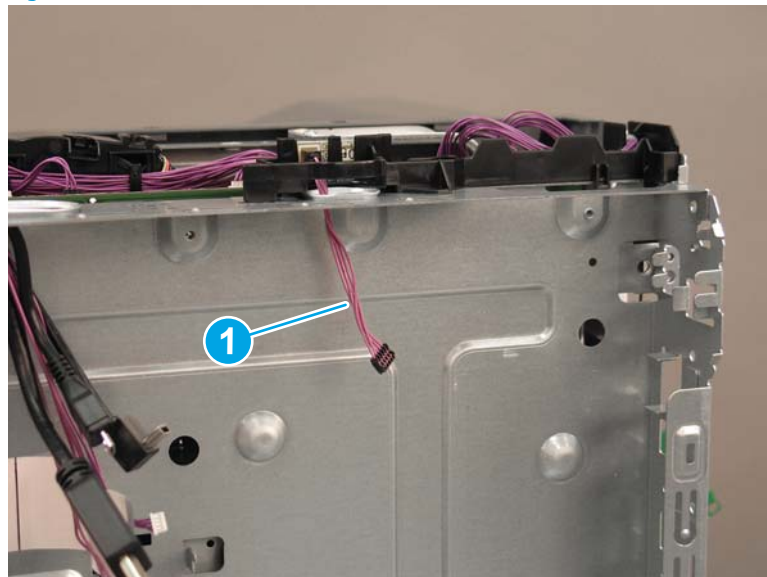


## Step 22: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.



Figure 1-1412 Remove the DC controller PCA

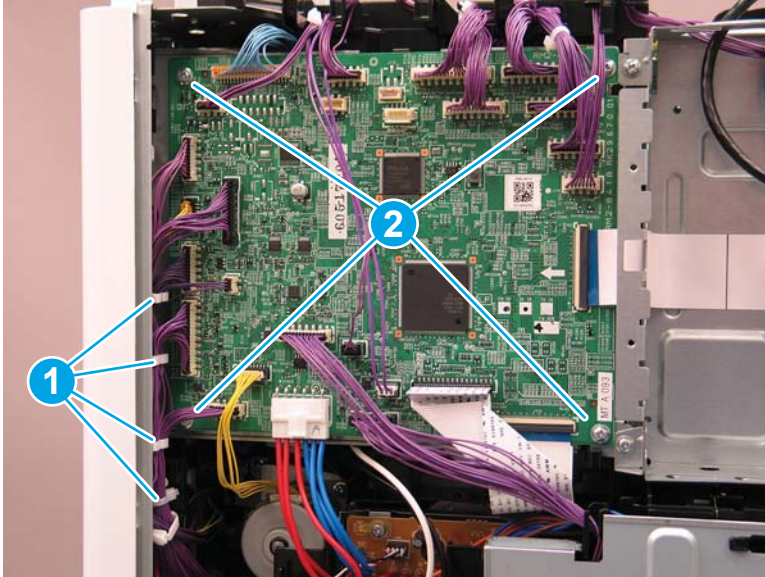

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: DC Controller PCA


- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---


Figure 1-1413 Check the yellow cable

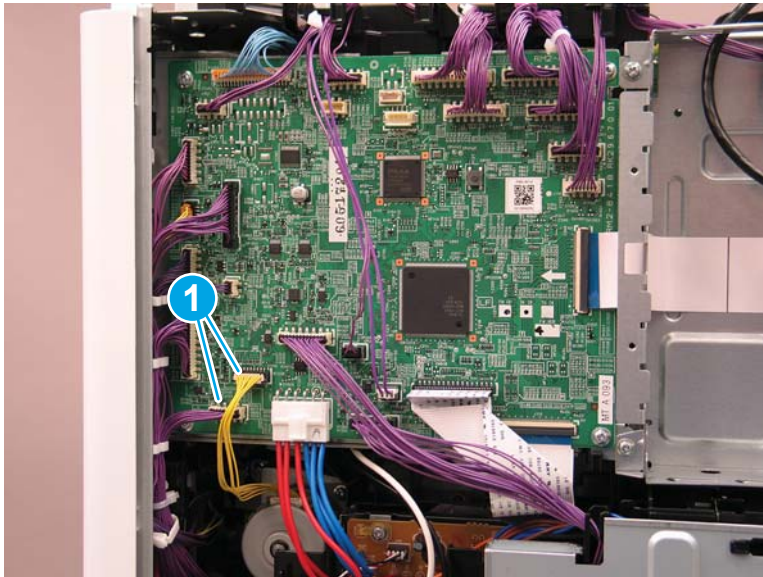

#### Step 23: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.


Figure 1-1414 Remove the DC controller stay

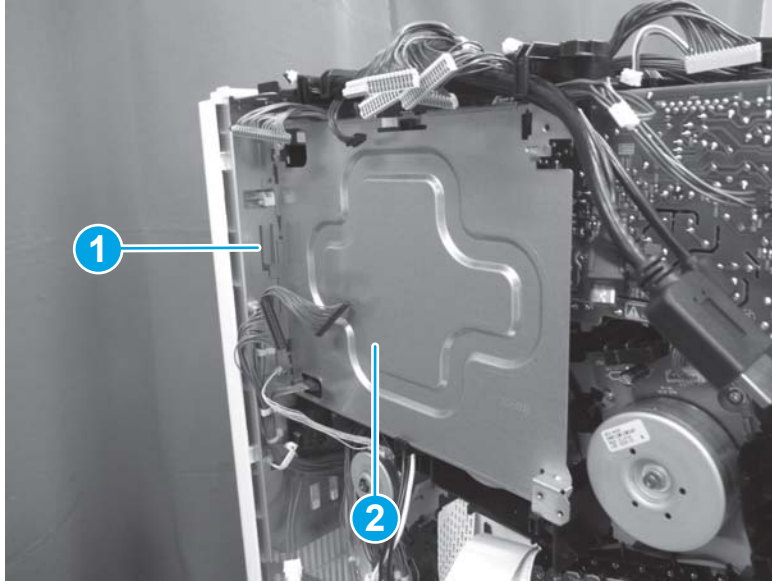


Step 24: Remove the upper high-voltage power supply (HVPS)

1. Disconnect eight connectors (callout 1).

Figure 1-1415 Disconnect eight connectors

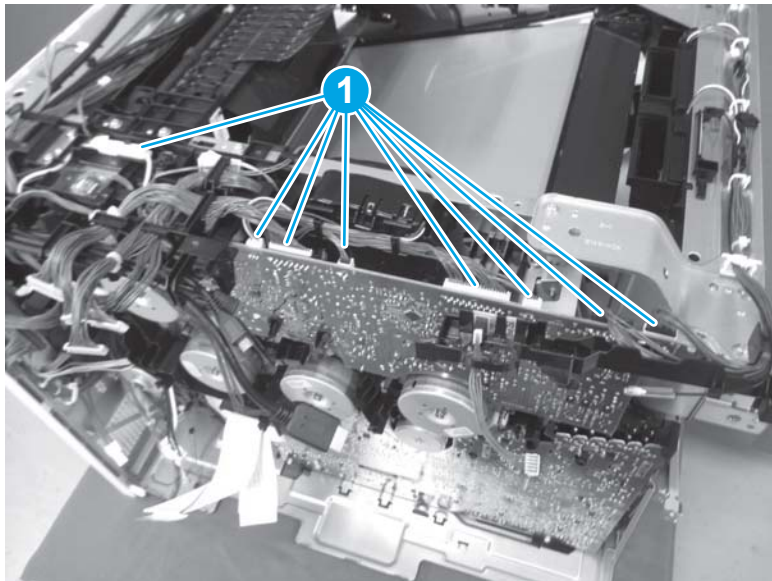


2. Release the cable (callout 1) from the retainer (callout 2). Remove one screw (callout 3), release five tabs (callout 4), and then remove the upper HVPS (callout 5).

 **Reinstallation tip:** The screw (callout 3) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1416** Remove the upper HVPS

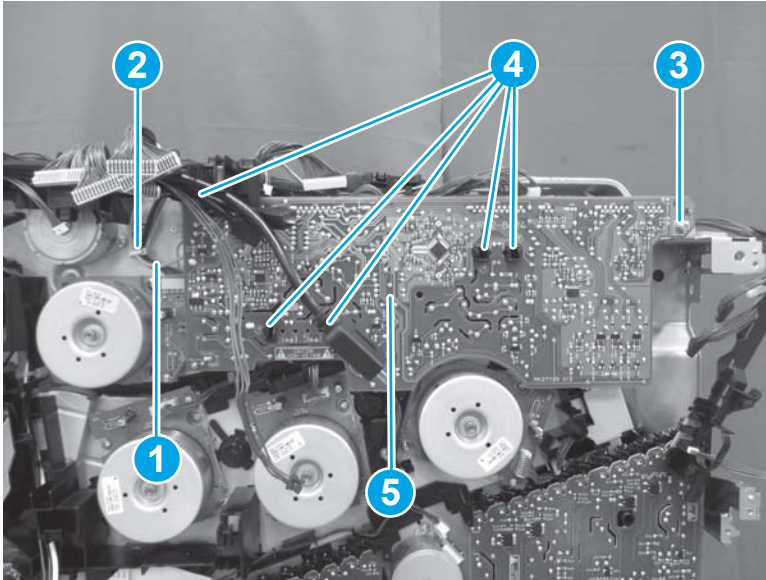



### Step 25: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Rear fan

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 5: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 13: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the output bin](#)
- [Step 15: Remove the formatter cover](#)
- [Step 16: Remove the left rear cover](#)
- [Step 17: Remove the rear cover](#)
- [Step 18: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 20: Remove the formatter](#)
- [Step 21: Remove the formatter case](#)
- [Step 22: Remove the DC controller PCA](#)
- [Step 23: Remove the DC controller stay](#)
- [Step 24: Remove the upper high-voltage power supply \(HVPS\)](#)
- [Step 25: Remove the rear fan](#)
- [Step 26: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the rear fan.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)


M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear fan part number	
RK2-6124-000CN	Rear fan

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuratio page to make sure that the printer is functioning correctly.

## Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#).

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).



Figure 1-1417 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1418 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1419 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1420 Disconnect the keyboard flat cable

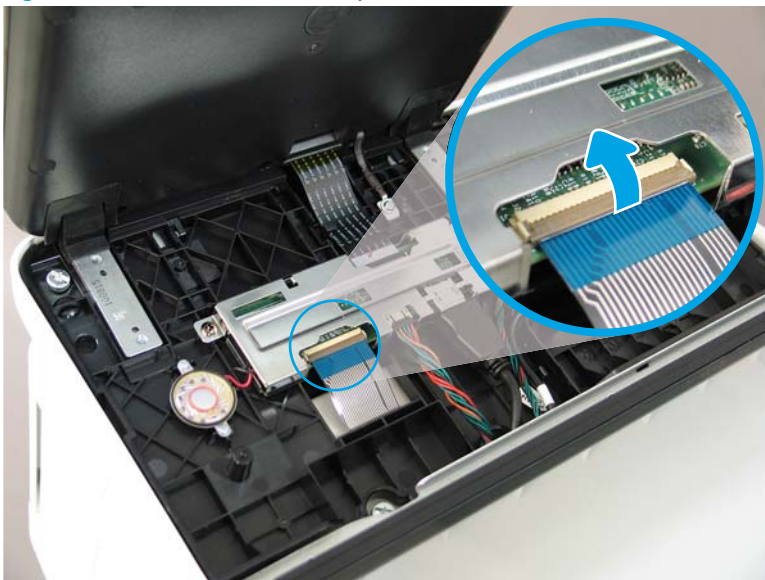



5. Slide the keyboard tray out until it stops.

Figure 1-1421 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1422 Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1423 Remove the keyboard



#### Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1424 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1425 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1426 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-1427** Disconnect the keyboard flat cable (keyboard models only)

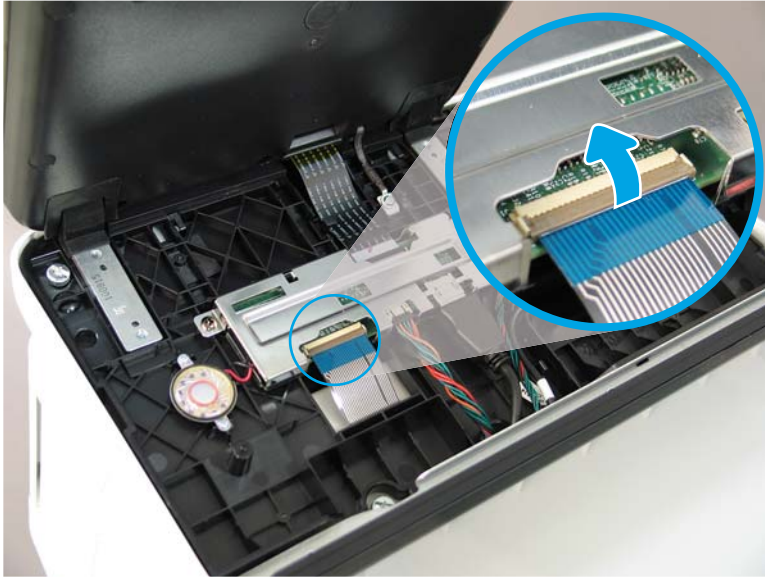


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-1428** Disconnect connectors

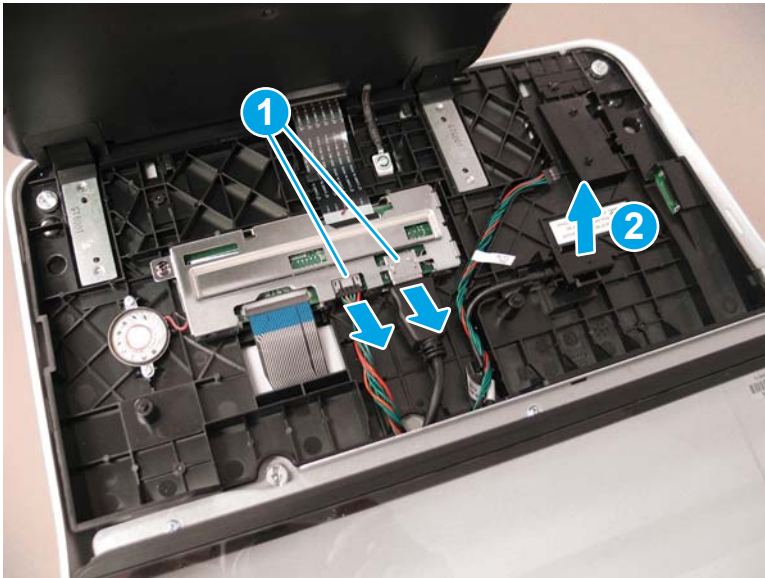


6. Remove three thumbscrews (callout 1).

Figure 1-1429 Remove three thumbscrews

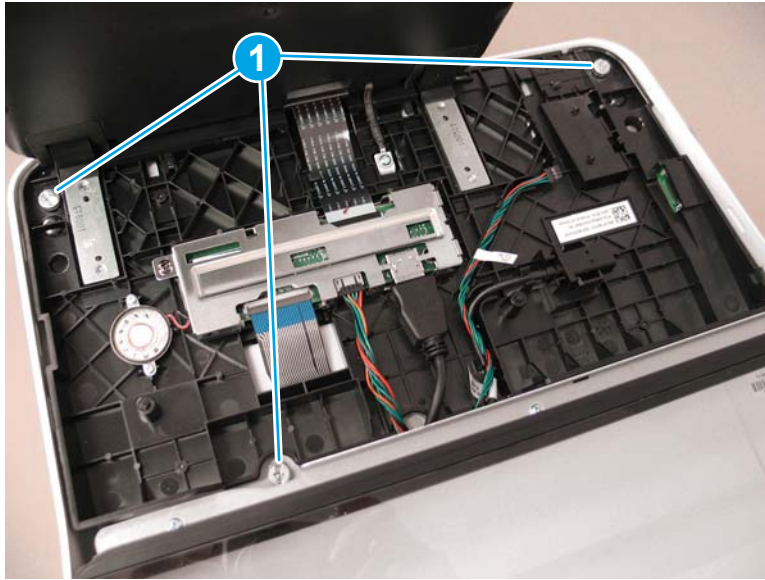


7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1430 Remove the control panel

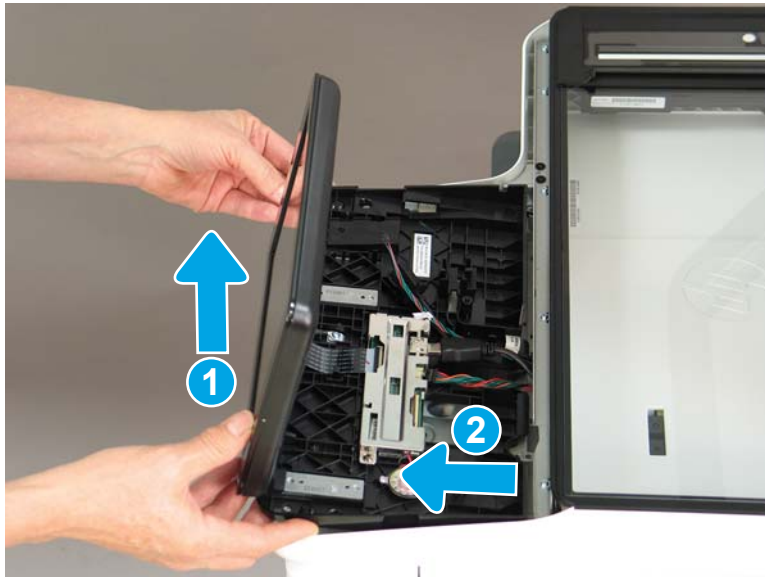


### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1431 Remove the SCB cover

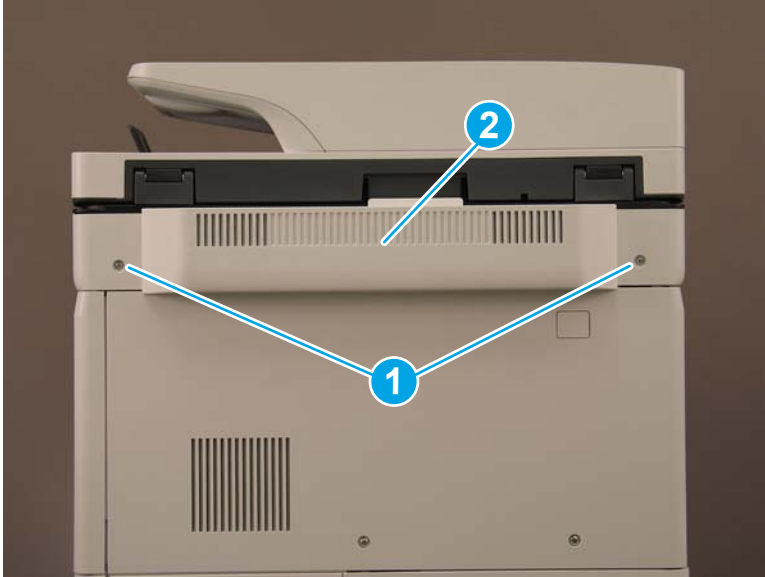

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).


Figure 1-1432 Remove the small cover






- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-1433** Remove the stapler/stacker rear cover

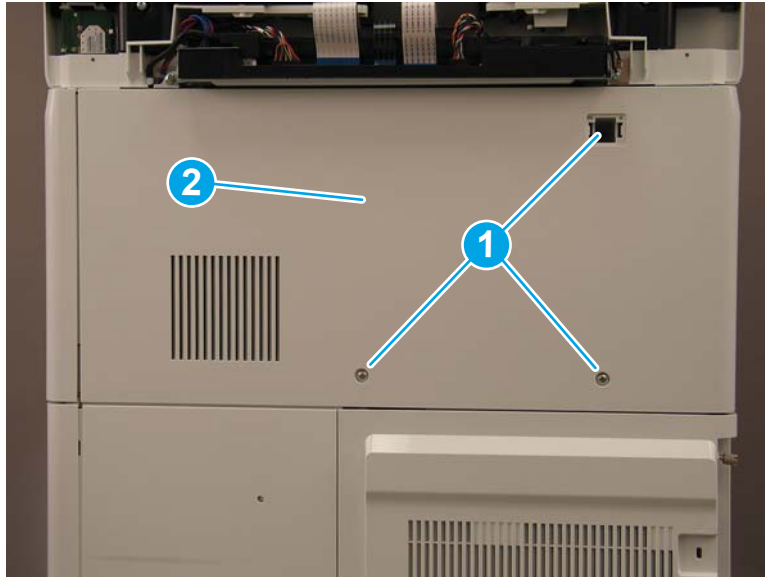

3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).


**Figure 1-1434** Remove the upper rear cover

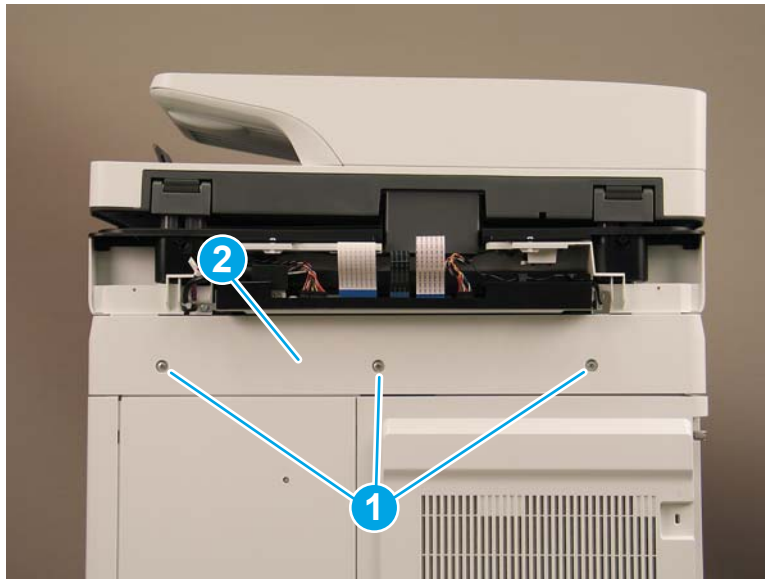



4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-1435** Remove the formatter cover

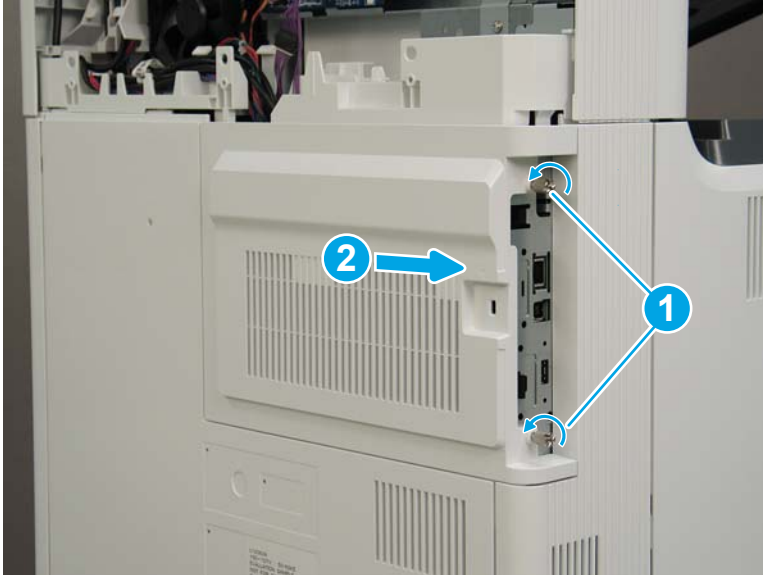


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

**Figure 1-1436** Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1437 Disconnect two connectors

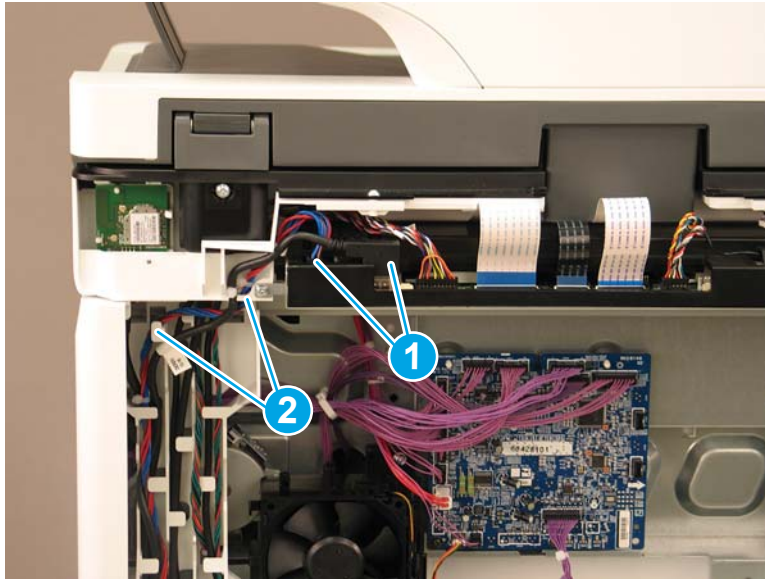


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1438 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1439 Disconnect the wireless connector

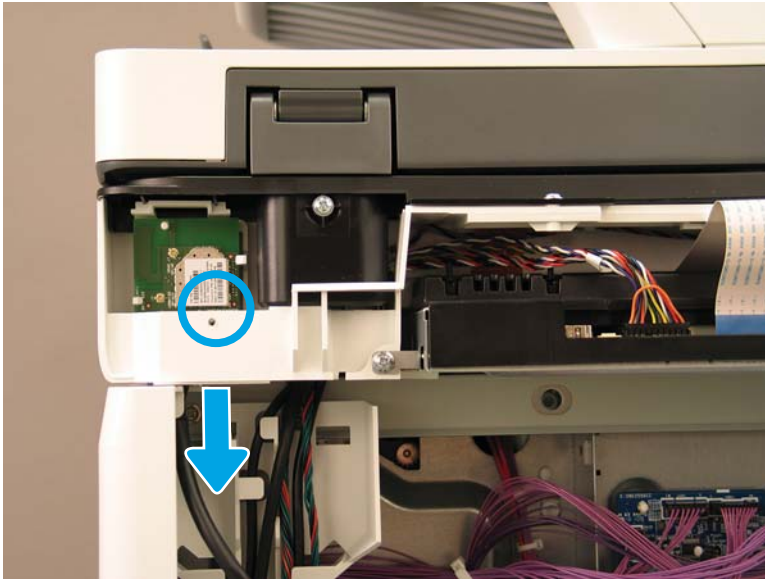


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1440 Release the cables

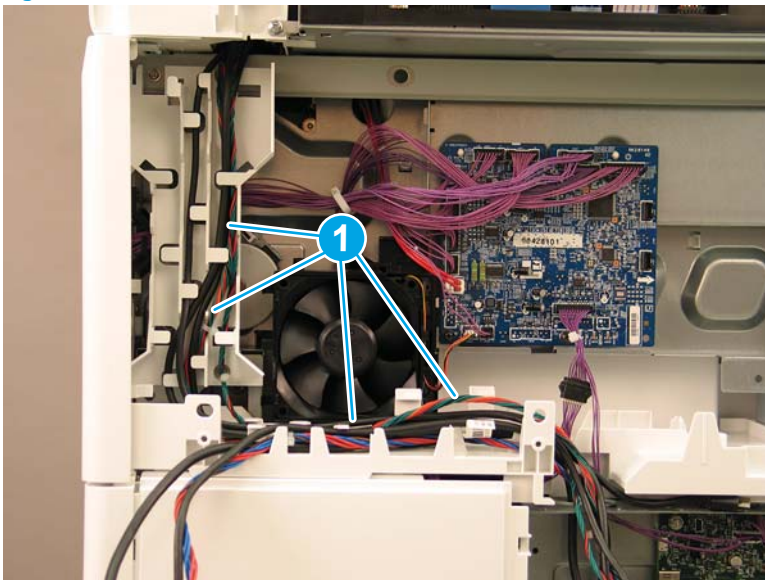


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1441 Remove four screws

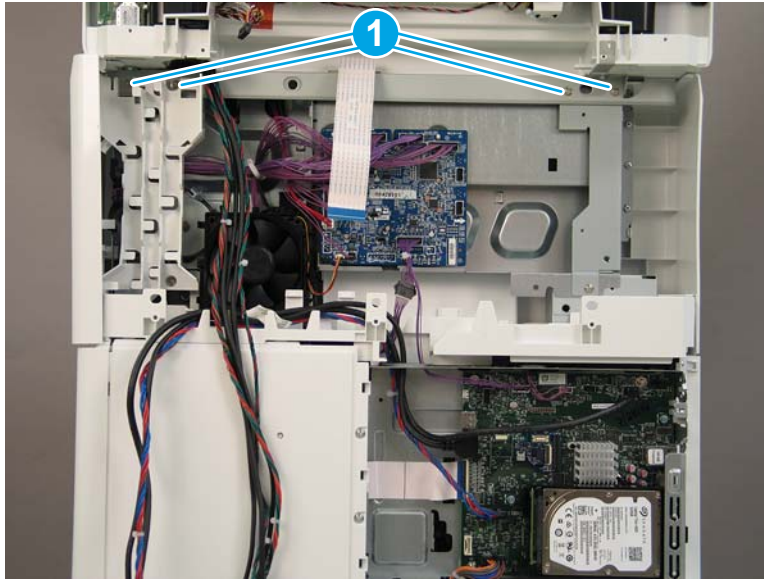

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1442 Remove three screws

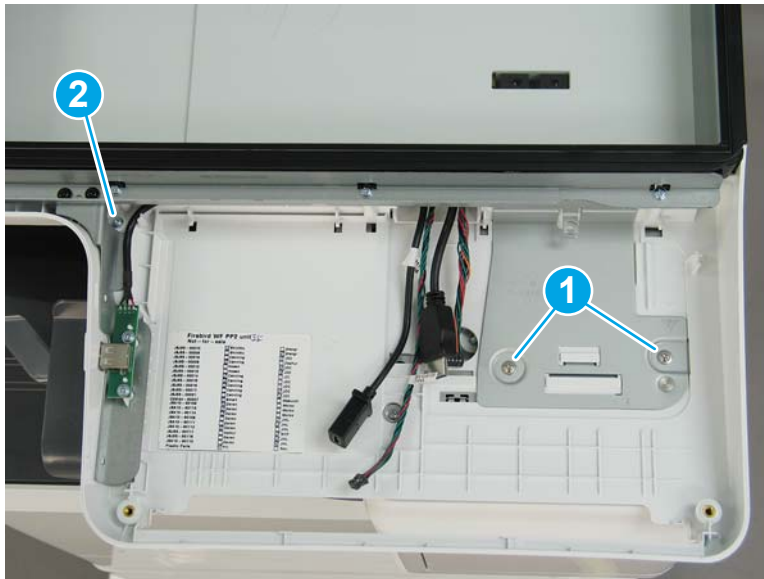

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-1443** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-1444** Remove the wireless card

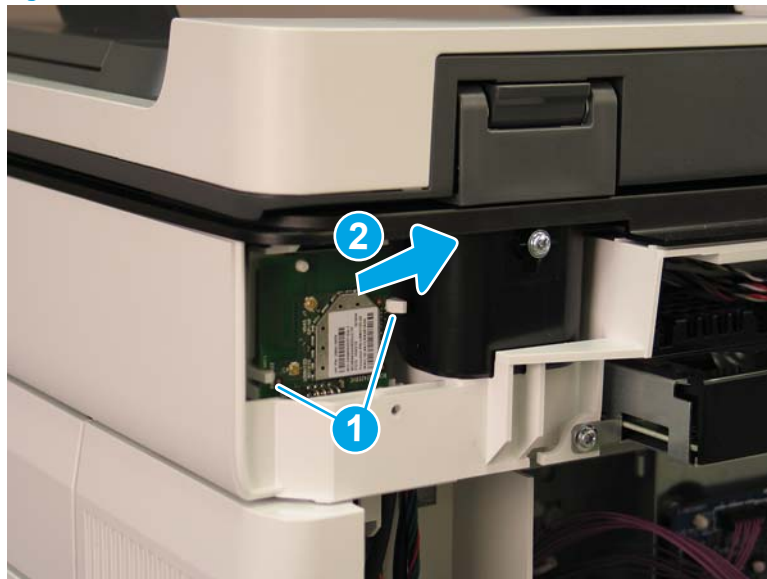




- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-1445** Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

**Figure 1-1446** Reinstall the wireless card

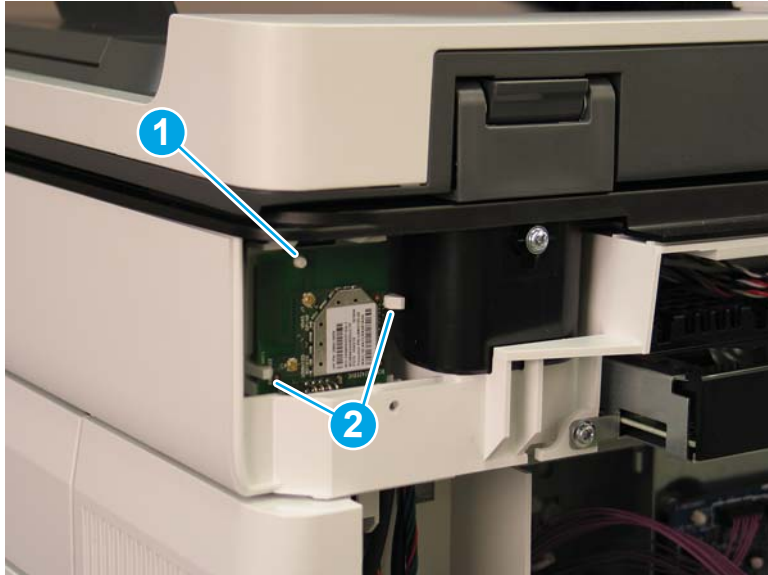


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1447 Install the SCB cables

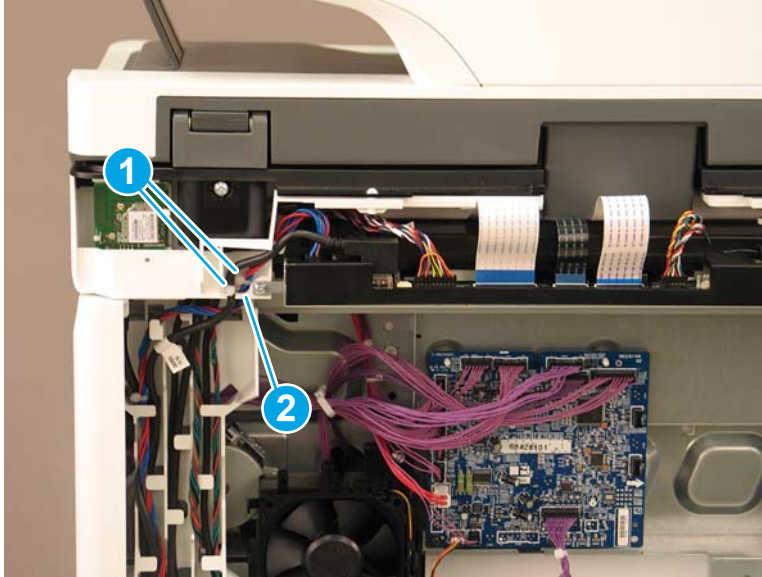

#### Step 4: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 937

1. Open the front door.


Figure 1-1448 Open the front door





2. Open the stapler door.

Figure 1-1449 Open the stapler door

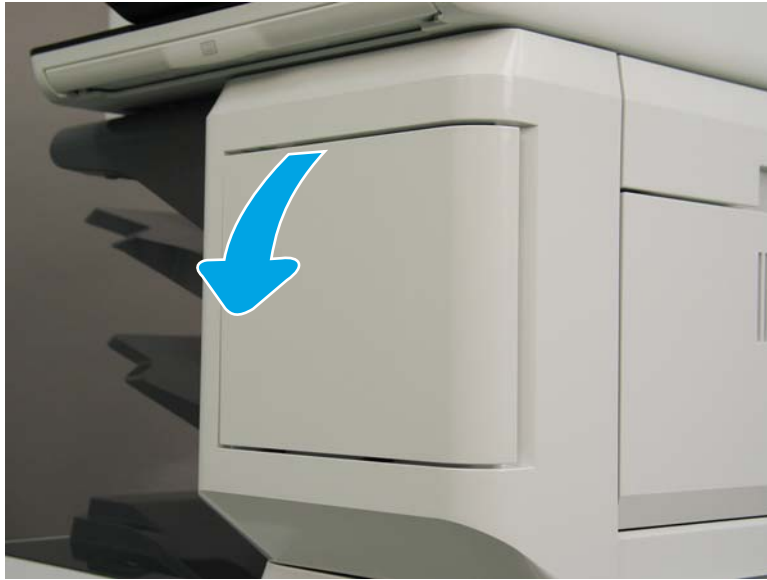

3. Release the latch, and then remove the staple cartridge.

Figure 1-1450 Remove the staple cartridge



4. Remove one screw (callout 1).

Figure 1-1451 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-1452 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1453 Remove one screw

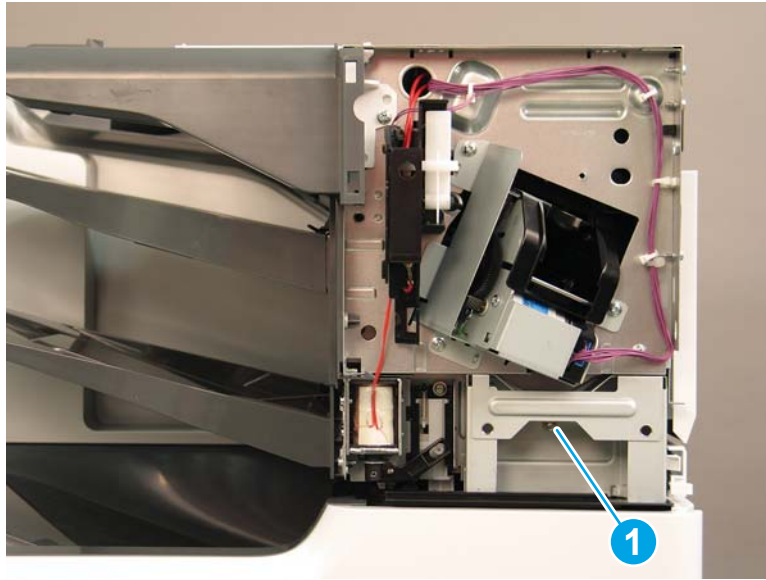


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1454 Remove the stapler/stacker right upper cover

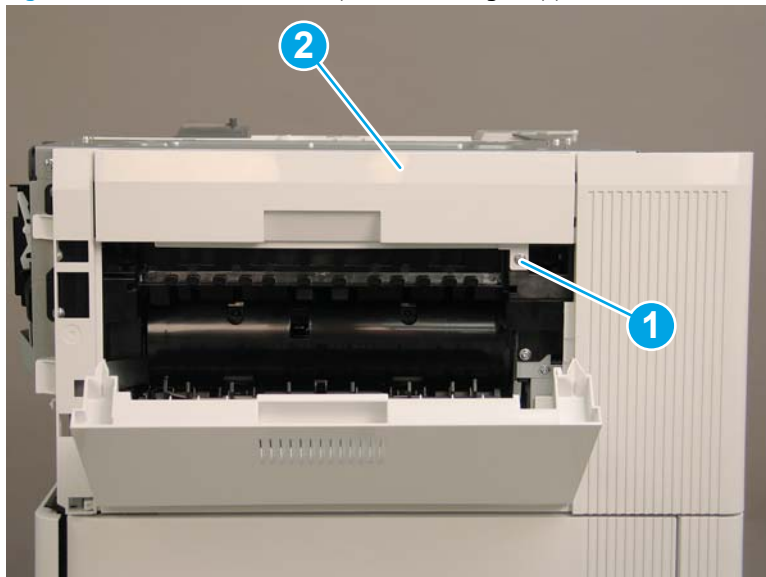


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1455 Remove the stapler rear cover

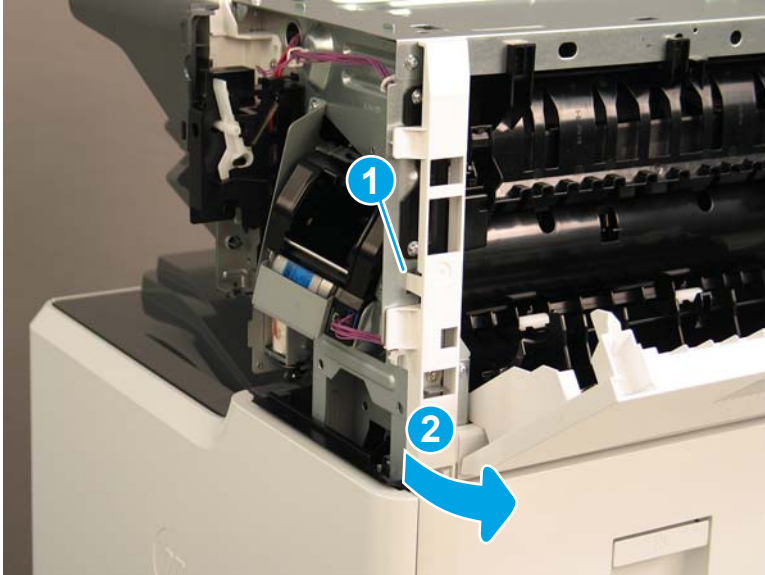


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1456 Remove the stapler/stacker rear corner cover

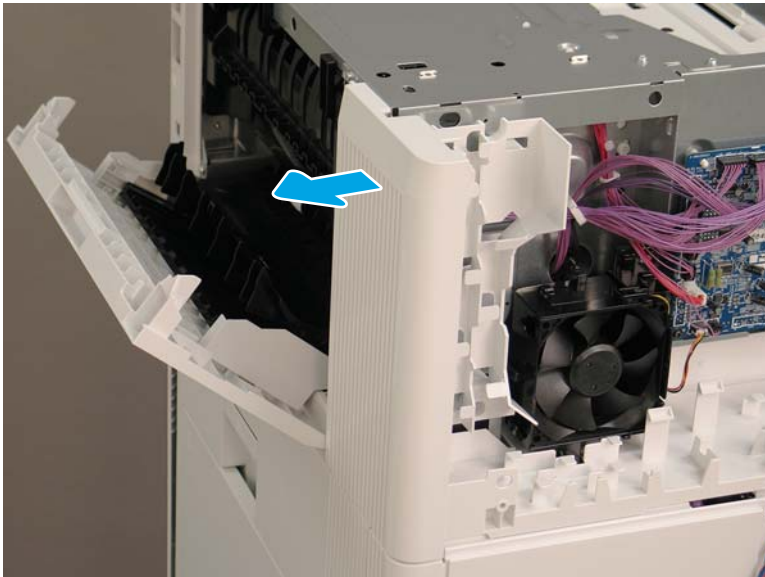


10. Remove two screws (callout 1).

Figure 1-1457 Remove two screws

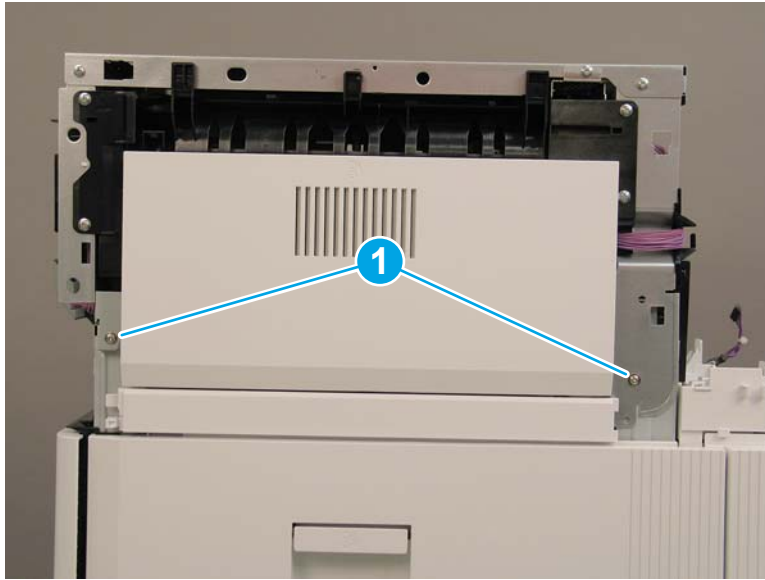


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1458 Remove the cable guide

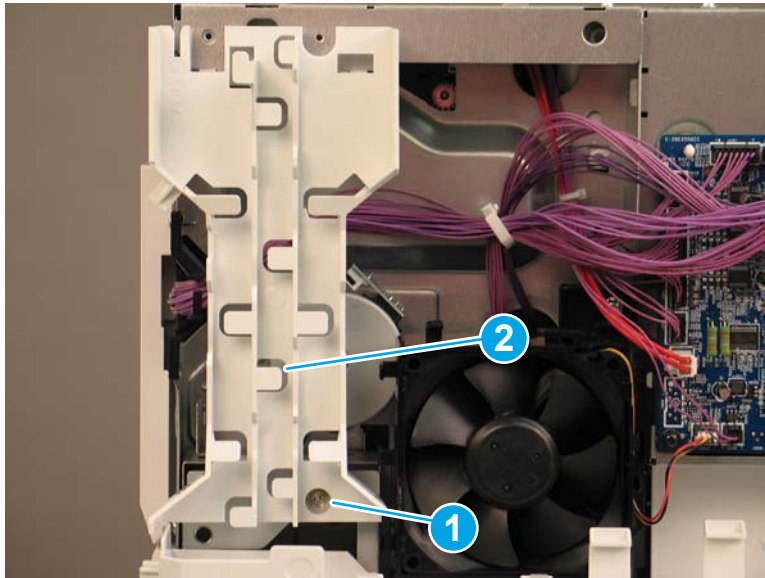

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1459 Disconnect one connector

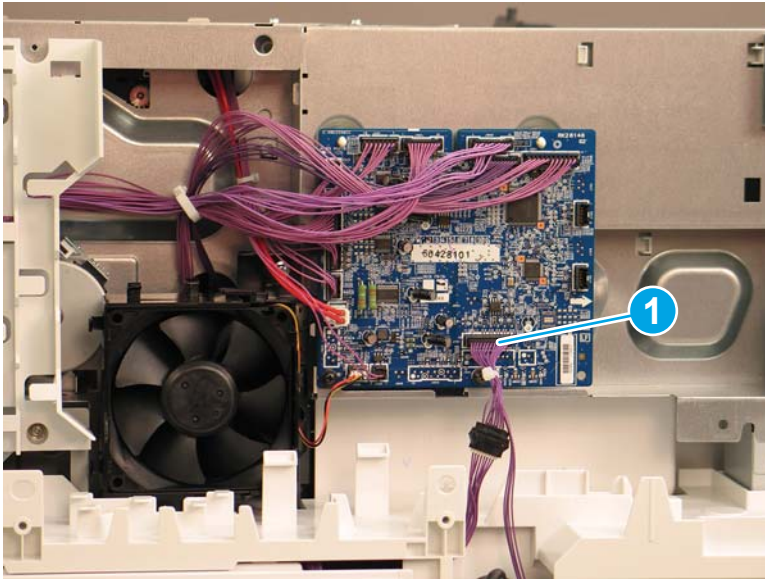

13. Remove two screws (callout 1).


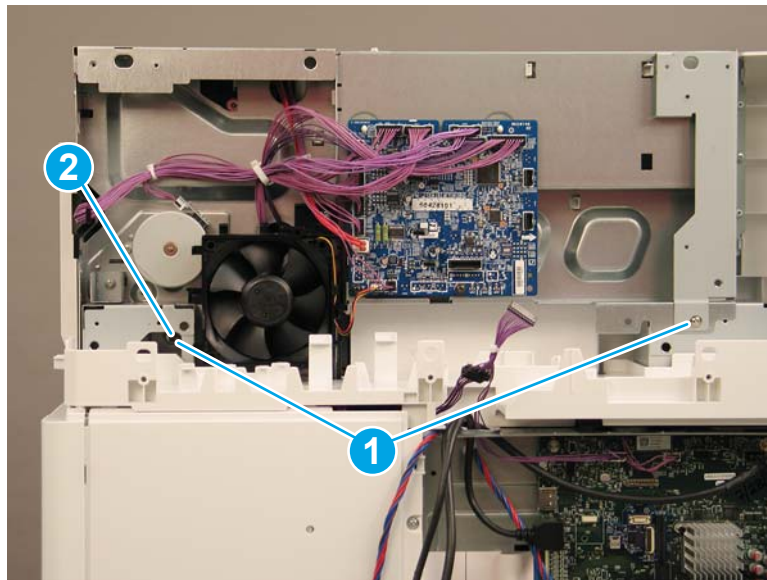

 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1460 Remove two screws







14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1461** Remove the stapler/stacker

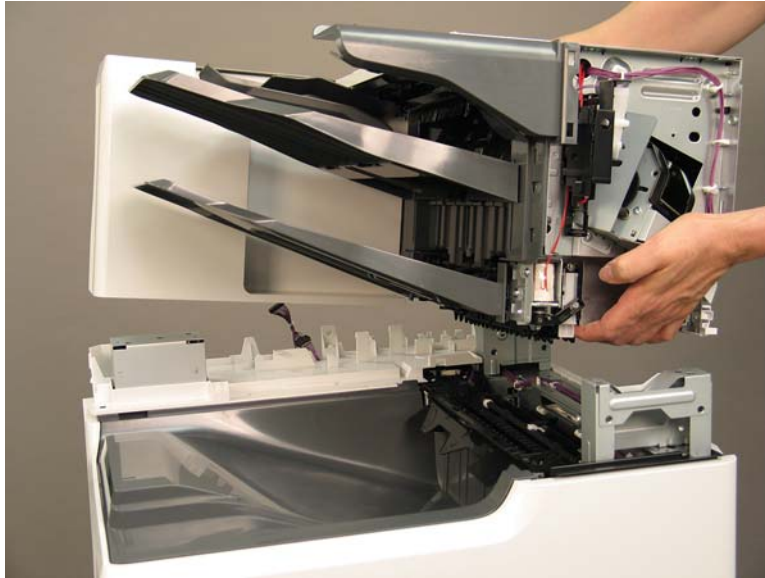


#### Step 5: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).


**Figure 1-1462** Remove the face-down front cover

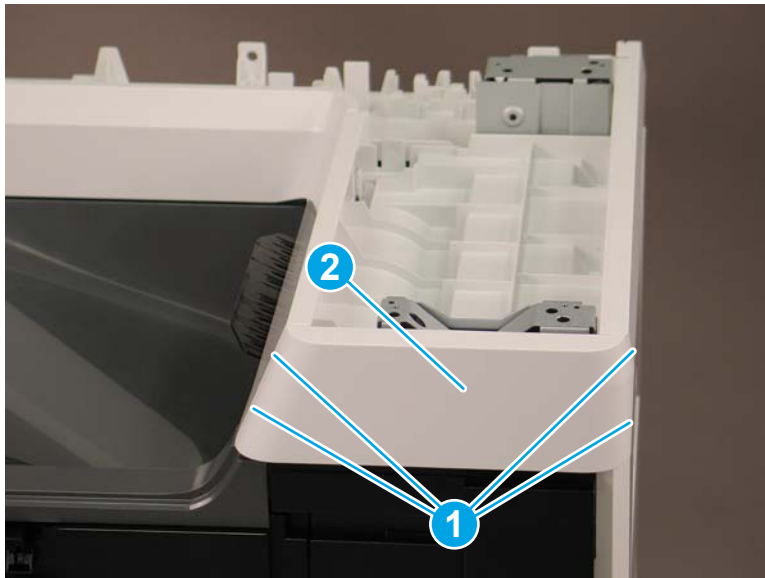

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.



---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Special installation instructions: Face-down front cover**


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1463** Install the cover

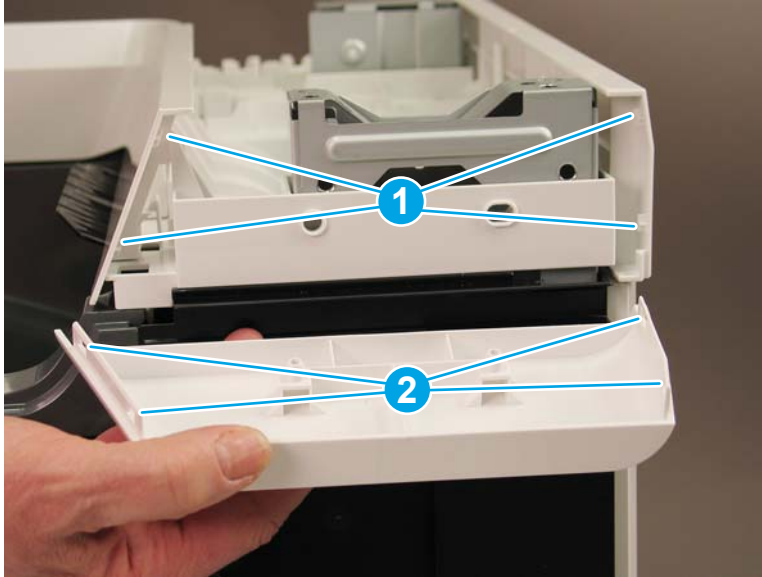

**Step 6: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**


---

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#)

---


- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

---


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1464 Remove the top cover

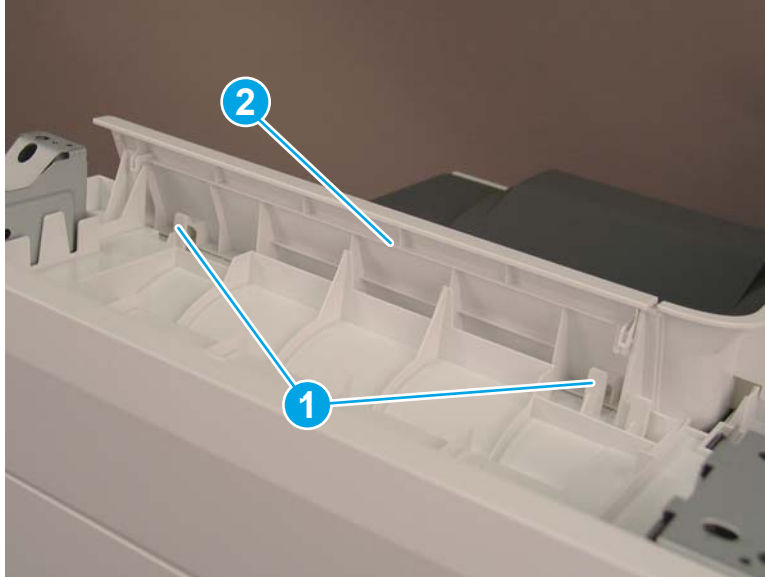

Step 7: Remove the right cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#)

▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


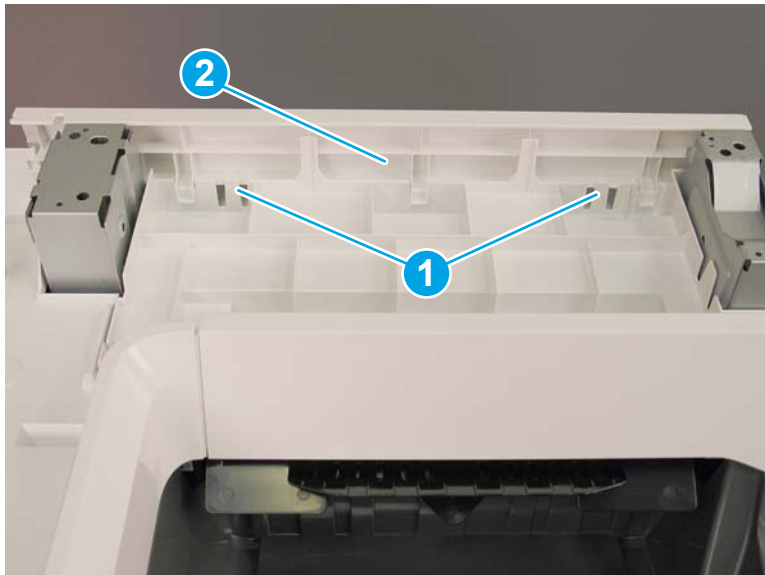

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1465 Remove the right cover



### Step 8: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#).

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


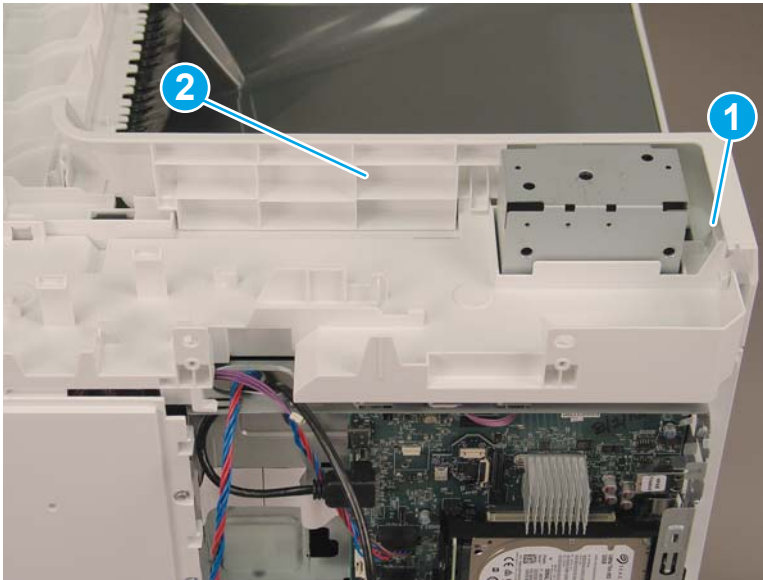

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1466 Remove the front cover



### Step 9: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#).

▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).


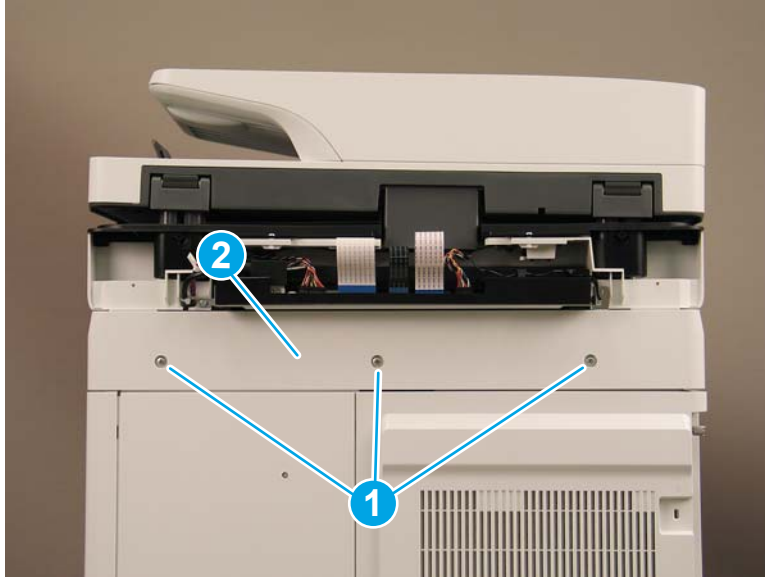

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1467 Remove the rear upper cover



Step 10: Remove the face-down cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 937

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


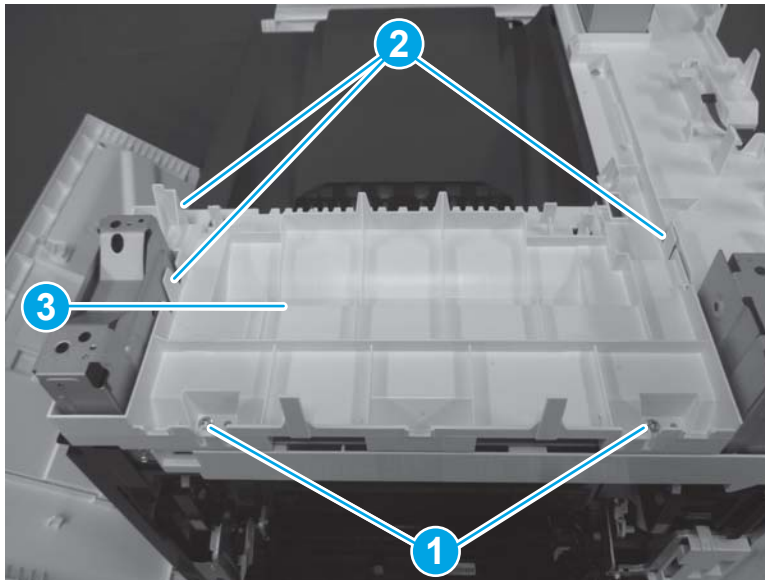

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1468 Remove two screws and the face-down cover




## Step 11: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 937](#).

1. Remove two screws (callout 1), and then release one tab (callout 2).


**Figure 1-1469** Remove two screws and release one tab

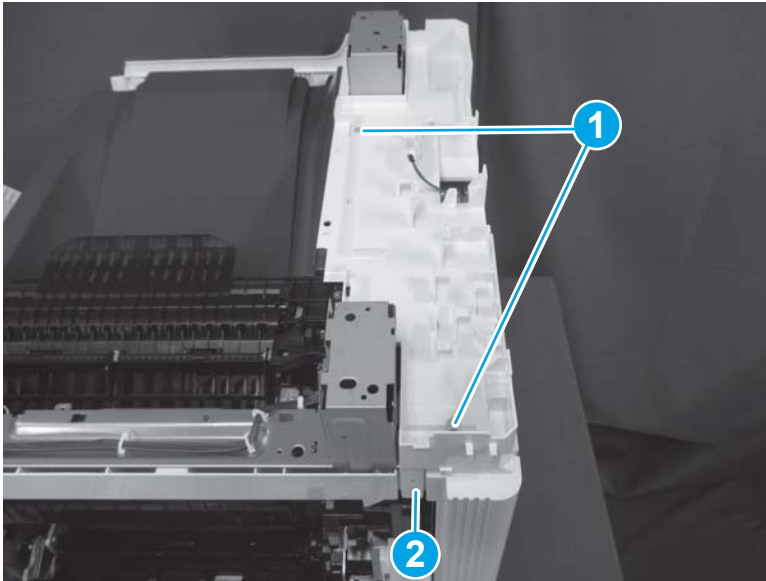


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1470** Remove one screw and the main cover

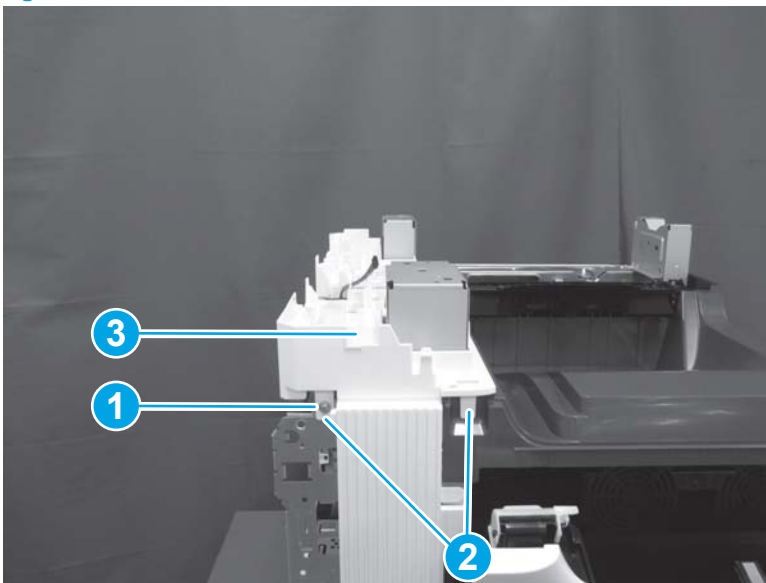

## Step 12: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 14: Remove the output bin on page 941](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1471** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-1472** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-1473** Remove one thumbscrew



4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.


**Figure 1-1474** Release the control panel

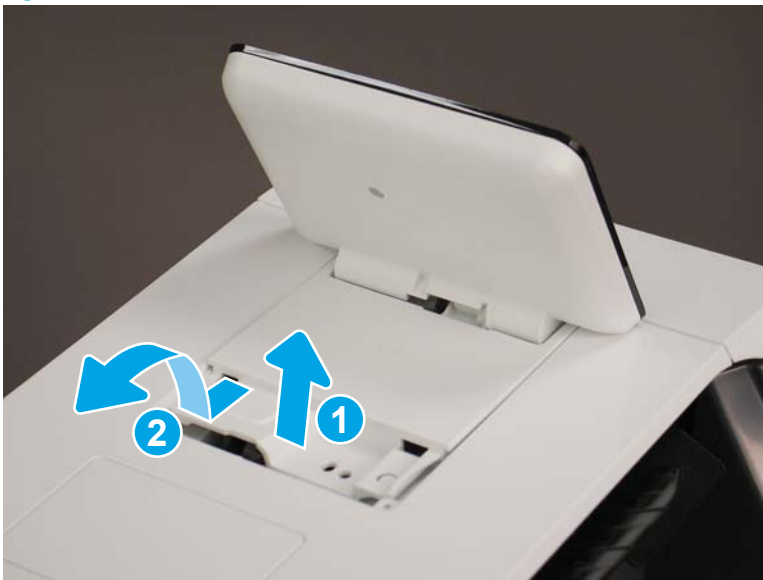



5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-1475** Disconnect two connectors

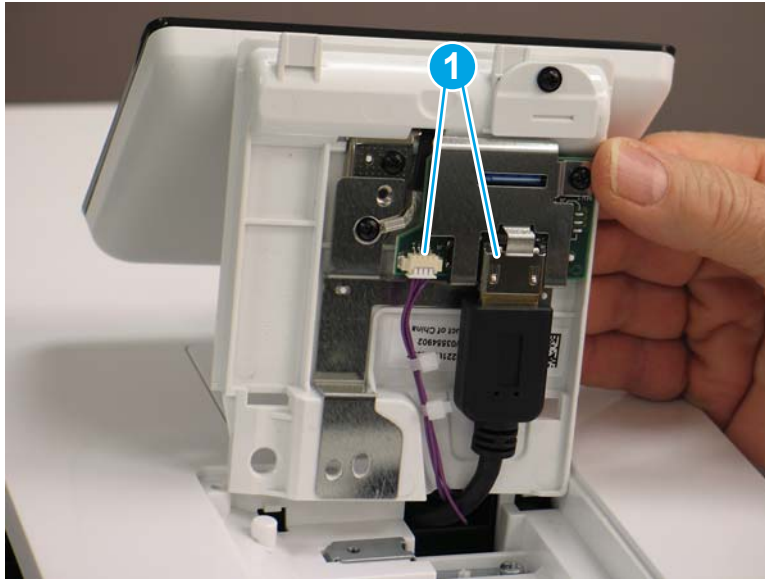


6. Remove the control panel.

**Figure 1-1476** Remove the control panel




### Step 13: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 14: Remove the output bin on page 941](#)

1. Open the following doors:


- Front door
  - Left door
  - Right door
2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1477 Remove the NFC cover

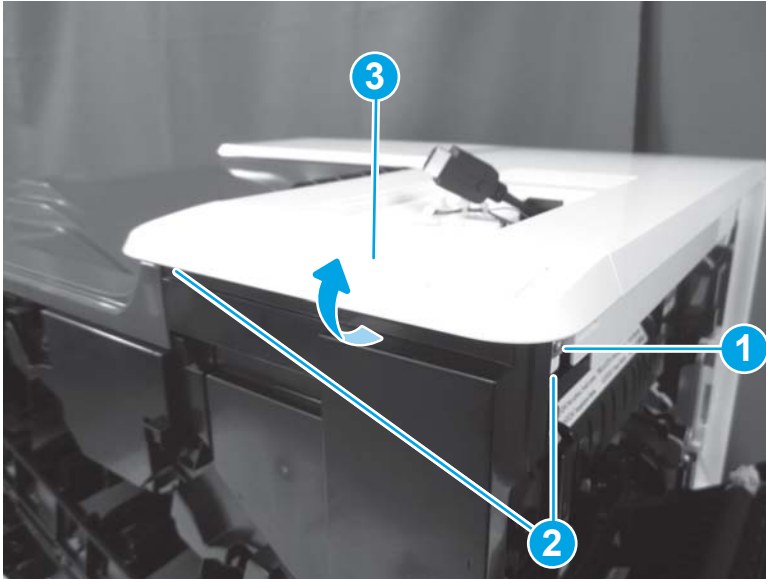


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1478 Remove one screw and release one tab

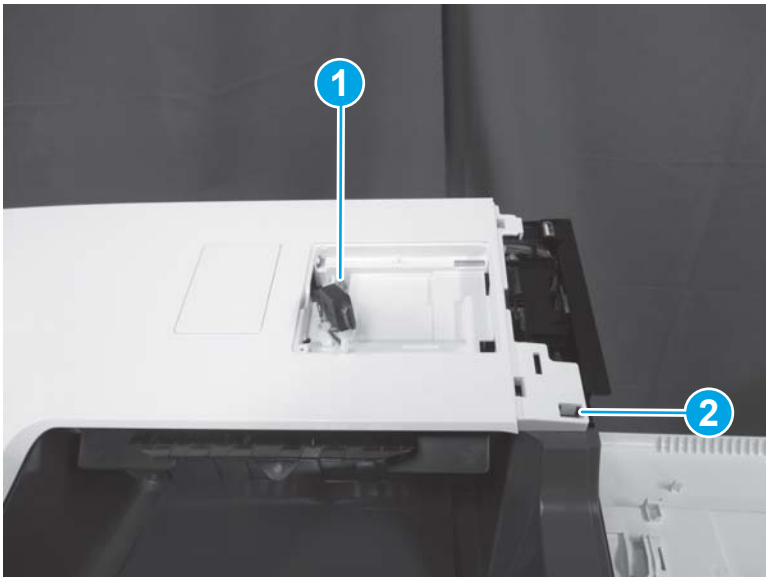

4. Release two tabs (callout 1).

Figure 1-1479 Release two tabs

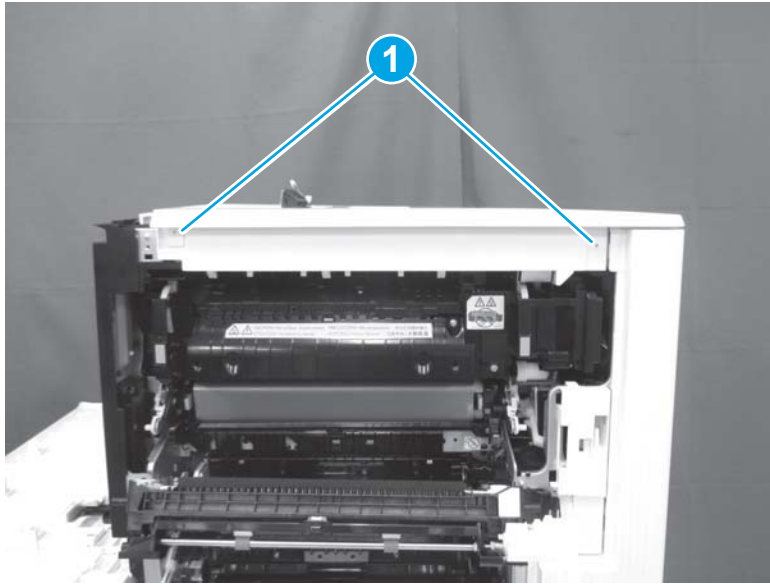

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


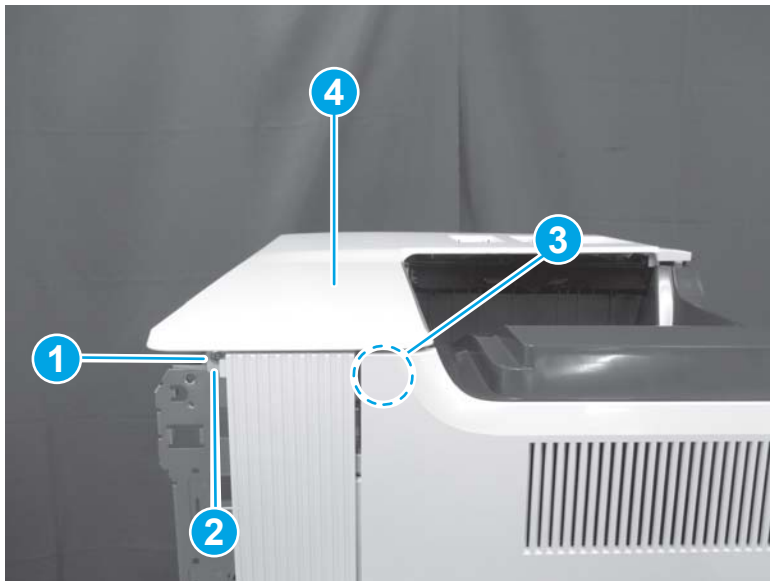
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1480 Remove the top cover




#### Step 14: Remove the output bin

1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


**Figure 1-1481** Remove the output bin

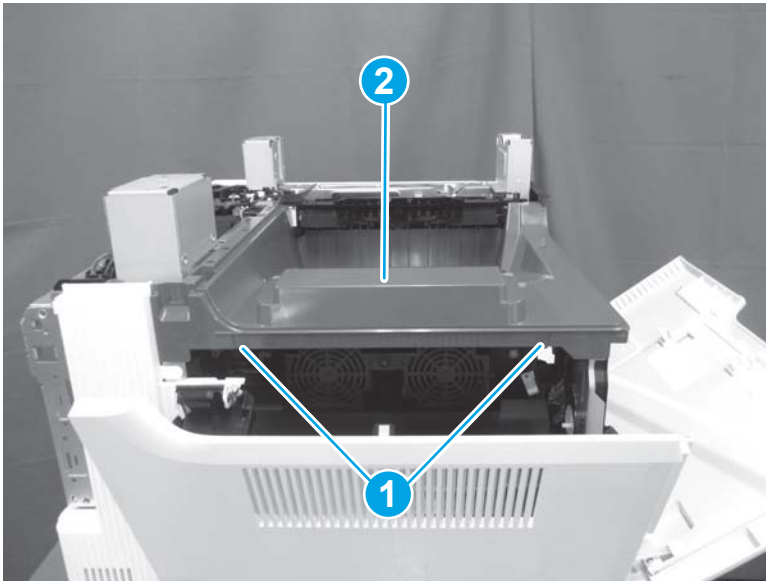

### Step 15: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1482 Remove the formatter cover

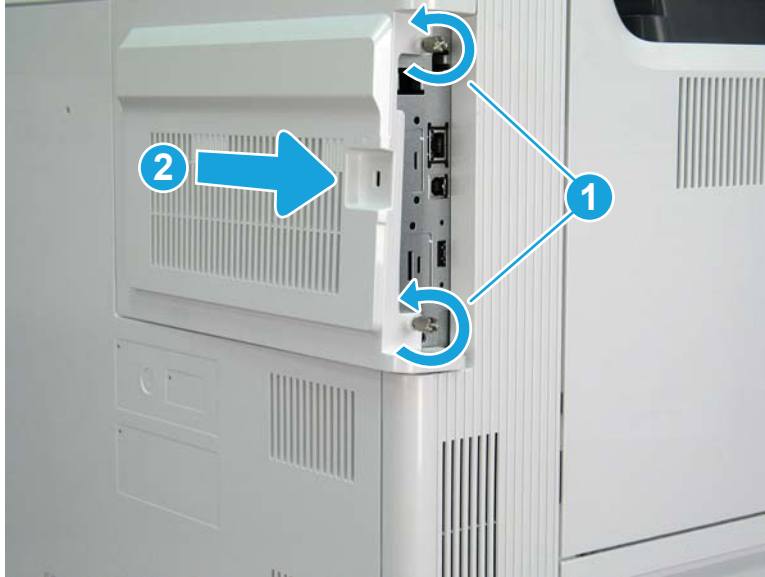

#### Step 16: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1483 Remove the left rear cover

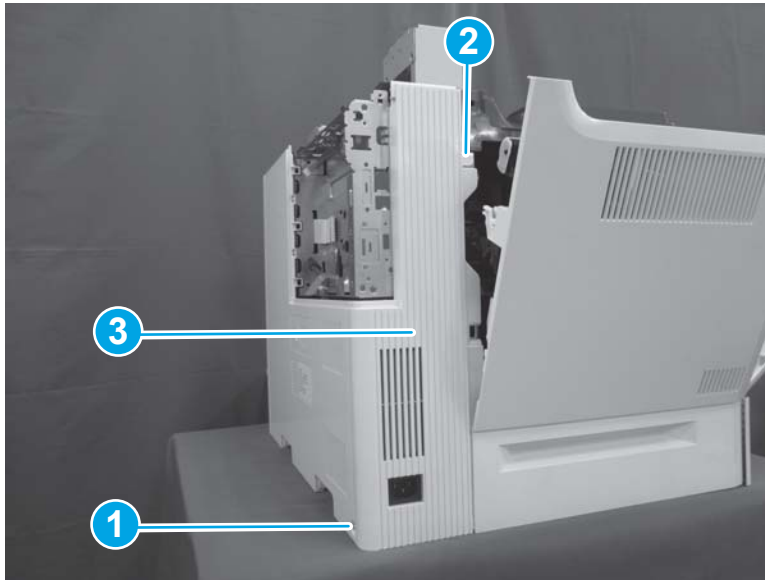


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1484 Install the left rear cover

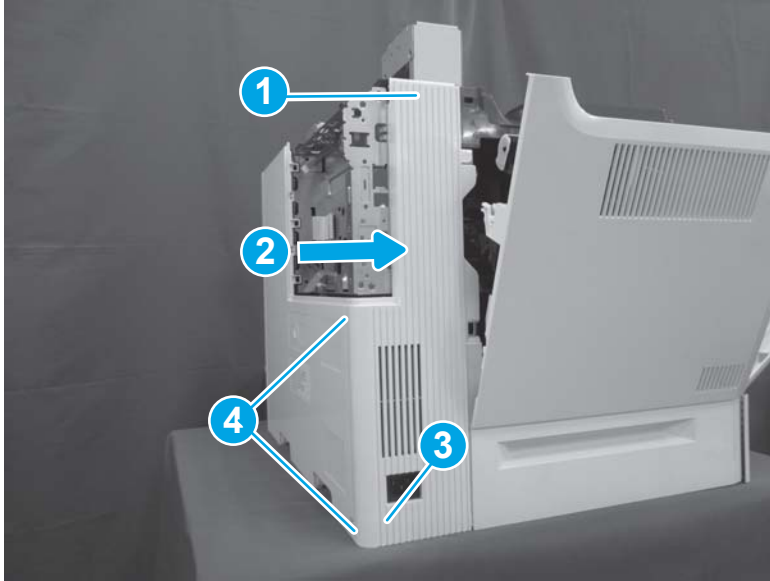


#### Step 17: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1485 Remove two screws and the rear cover

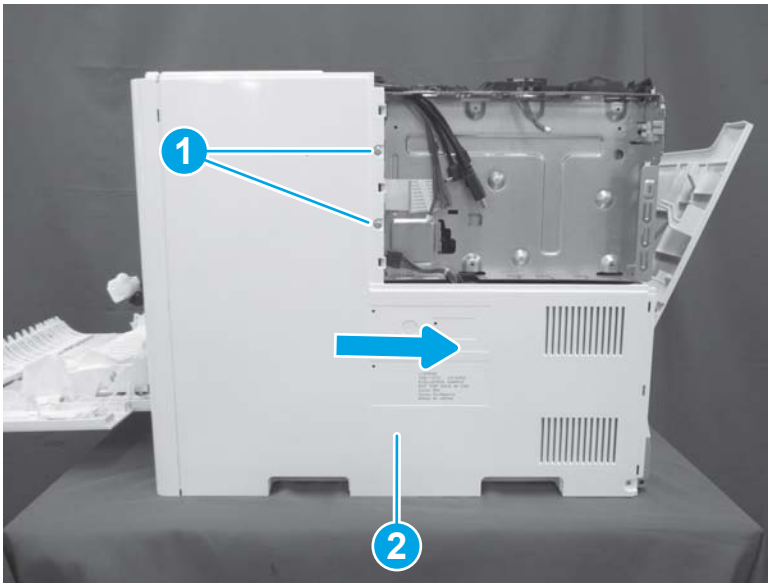

#### Step 18: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

📝 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\) on page 945](#)


1. Locate the fax PCA on the formatter.

Figure 1-1486 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.

Figure 1-1487 Remove the fax PCA

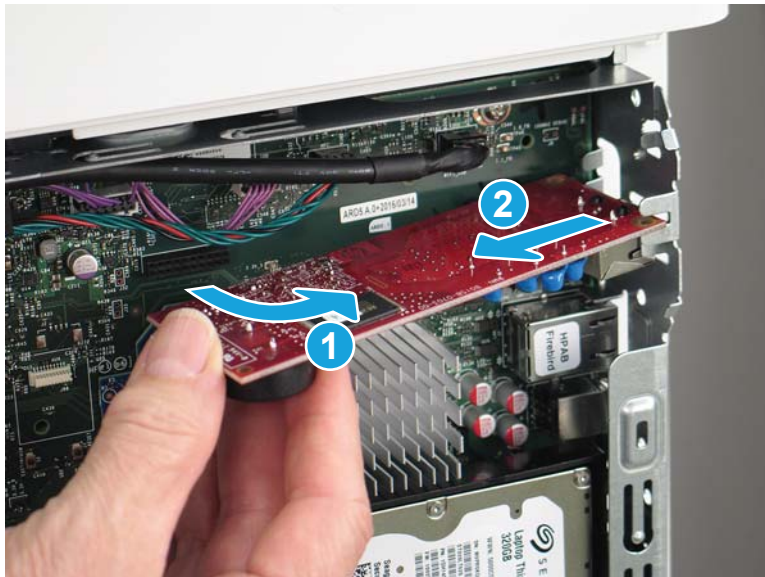


**Step 19: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)**

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.



Figure 1-1488 Release the HDD

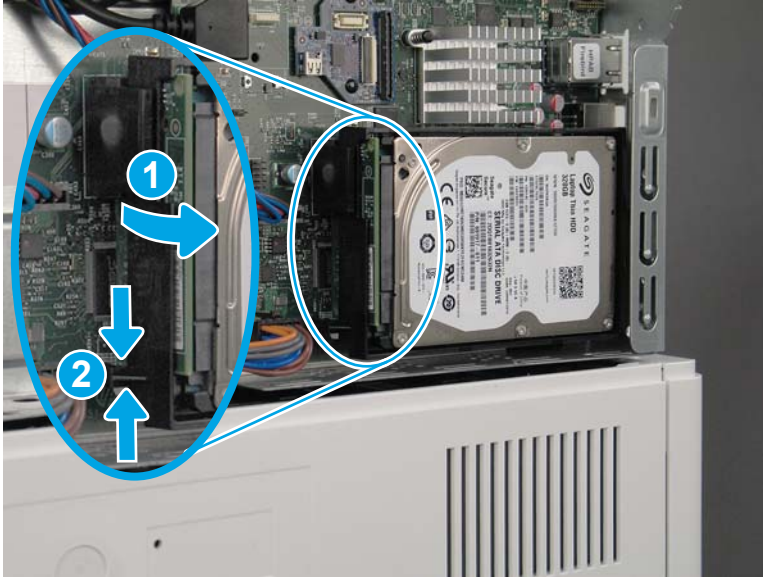


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1489 Remove the HDD



## Step 20: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


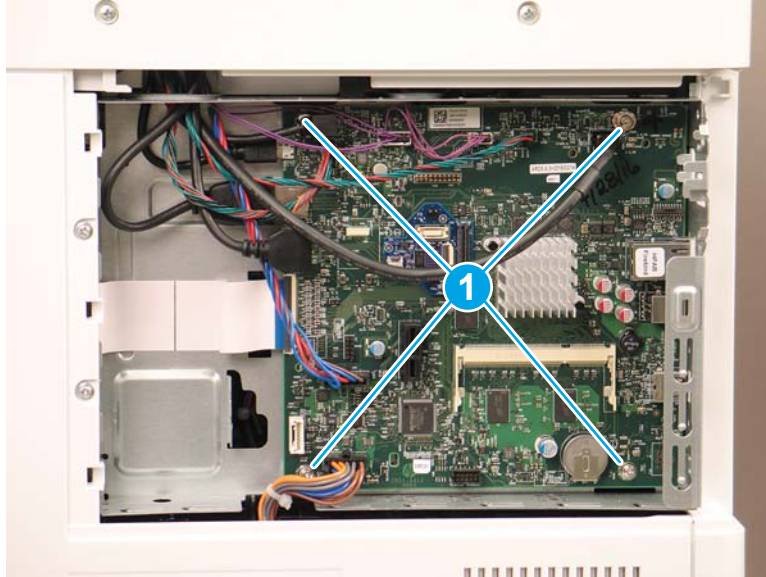
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1490 Remove the formatter




### Step 21: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

Figure 1-1491 Disconnect one connector and remove four screws

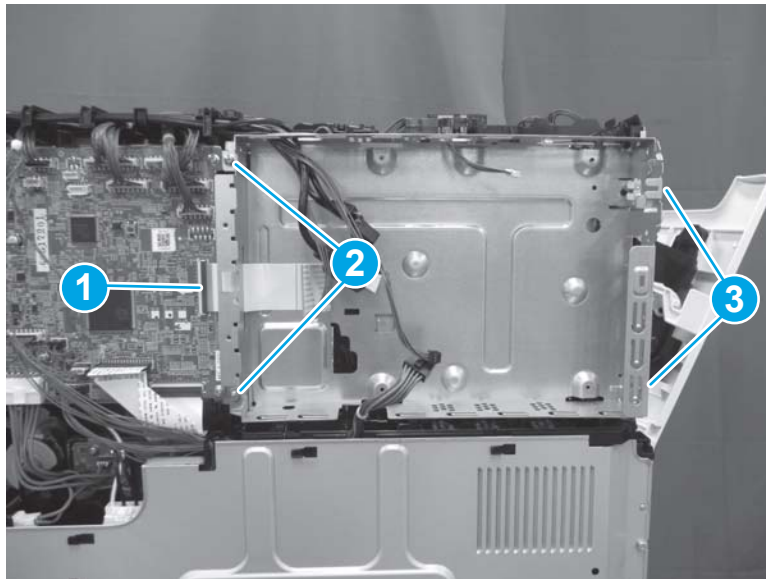


2. Tilt the bottom of the formatter case away from the printer.

Figure 1-1492 Tilt the formatter case

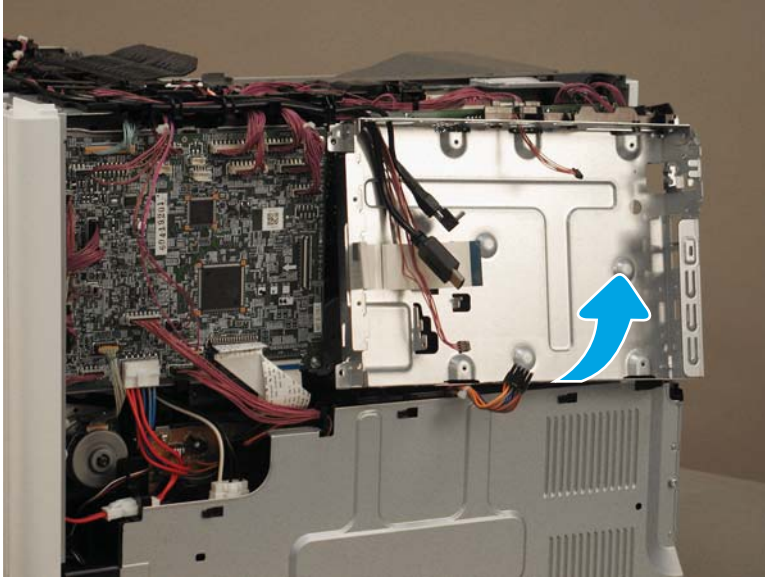

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1493 Remove the cable guide

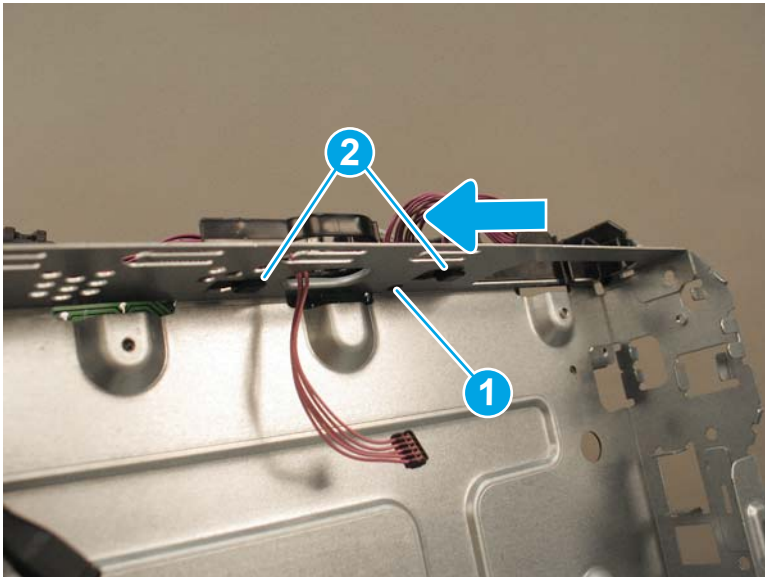

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.




**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1494 Install the cable guide

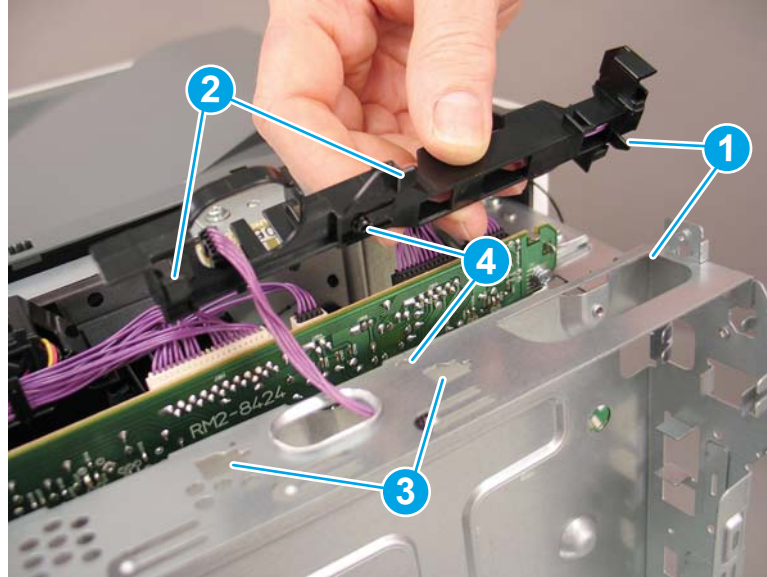

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.

Figure 1-1495 Check the IOD cable

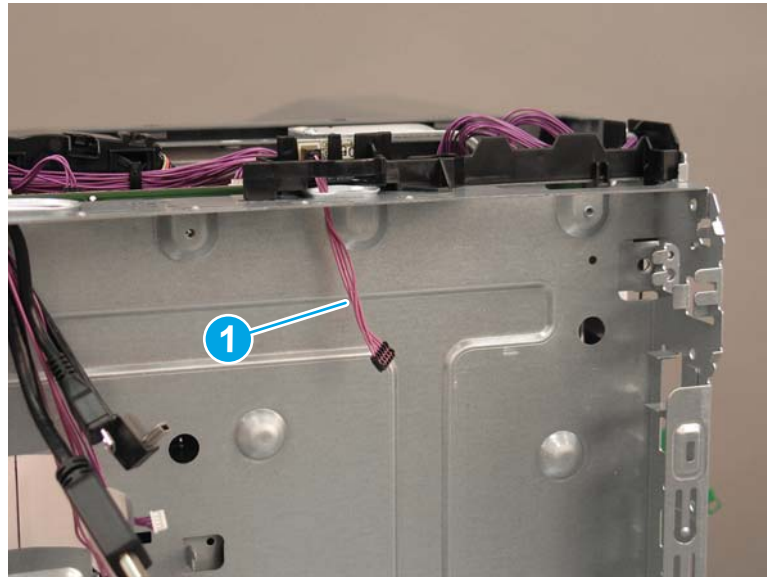


### Step 22: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.



Figure 1-1496 Remove the DC controller PCA

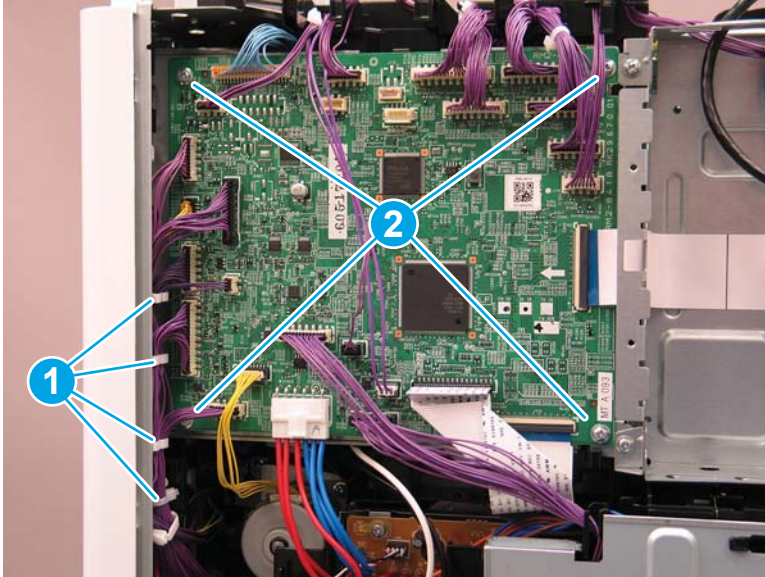

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: DC Controller PCA**


- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---


Figure 1-1497 Check the yellow cable

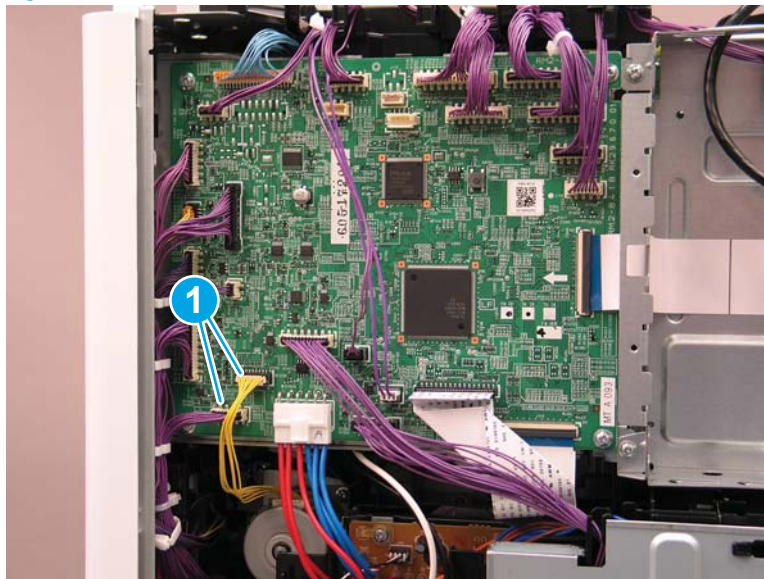

**Step 23: Remove the DC controller stay**

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.


Figure 1-1498 Remove the DC controller stay

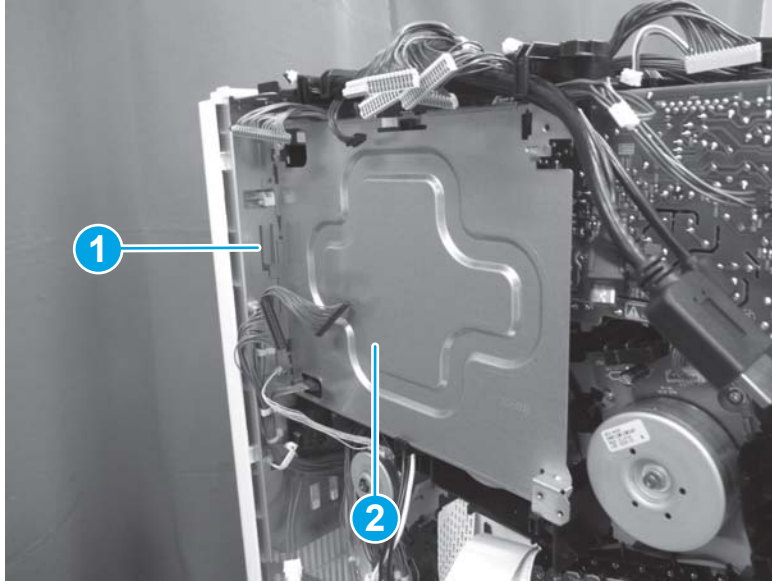


Step 24: Remove the upper high-voltage power supply (HVPS)

1. Disconnect eight connectors (callout 1).

Figure 1-1499 Disconnect eight connectors

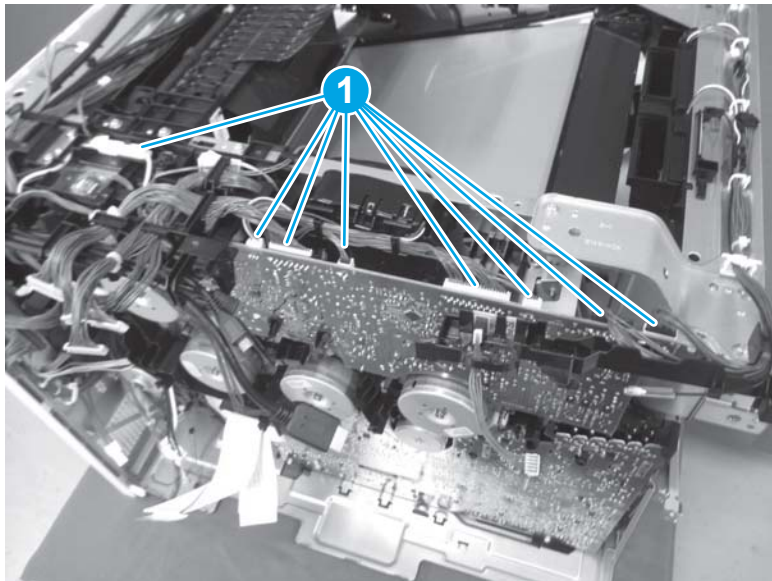


2. Release the cable (callout 1) from the retainer (callout 2). Remove one screw (callout 3), release five tabs (callout 4), and then remove the upper HVPS (callout 5).

 **Reinstallation tip:** The screw (callout 3) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1500** Remove the upper HVPS

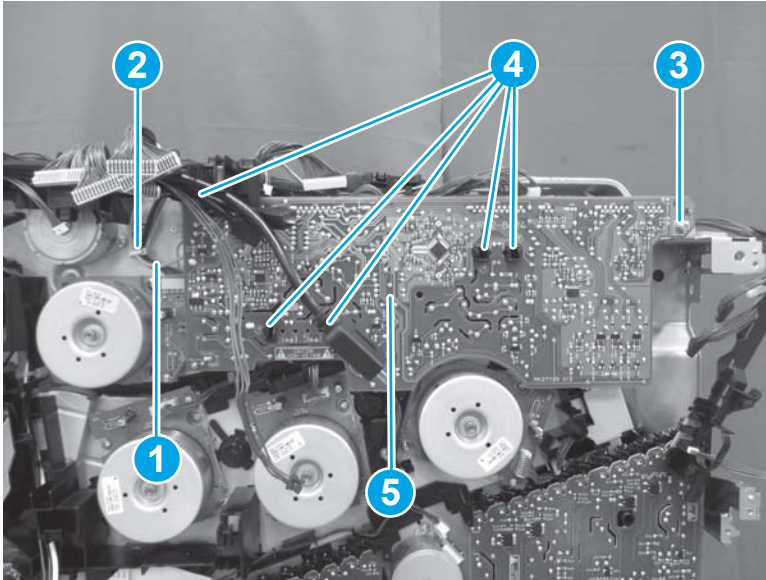


#### Step 25: Remove the rear fan

1. Release the cable (callout 1) from the cable guide (callout 2).

 **Reinstallation tip:** Carefully note the routing of the cables so they routed correctly when the fan is installed.


**Figure 1-1501** Release the cable

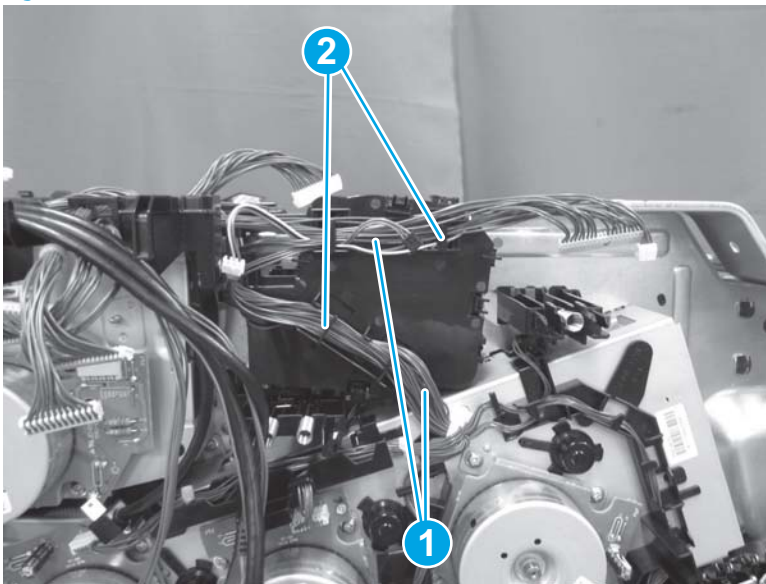




2. Release four retention points (callout 1), and then remove the fan cover (callout 2).

Figure 1-1502 Remove the fan cover

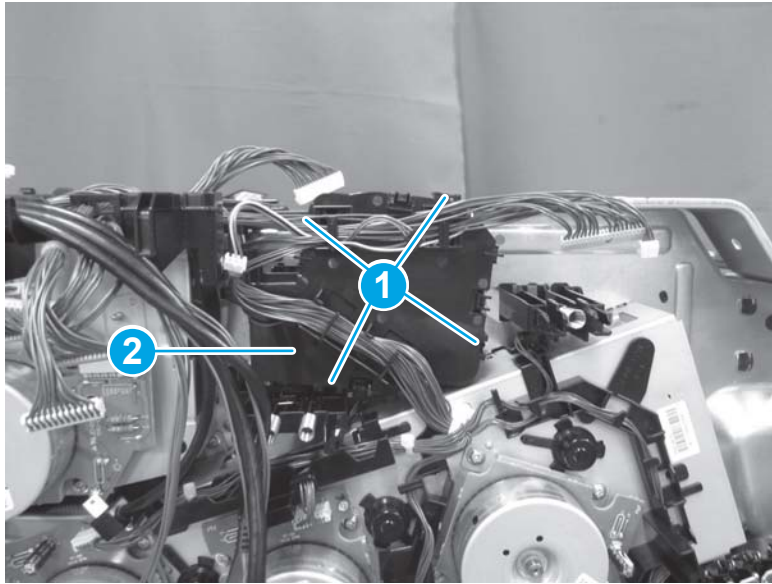


3. Release three tabs (callout 1), and then remove the rear fan (callout 2) from the fan holder (callout 3).

 **TIP:** Easily remove the fan by pressing outward from inside the printer through a crescent-shaped opening in the sheet metal.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1503 Remove the rear fan

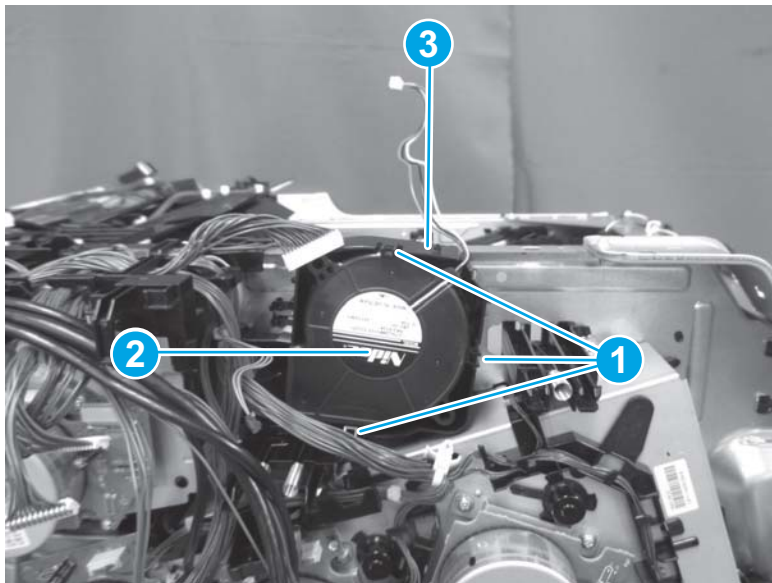

### Step 26: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Lifter drive assembly

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the lower high-voltage power supply](#)
- [Step 6: Remove the lifter drive assembly](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lifter drive assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

**⚠ WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Lifter drive assembly part number	
RM2-6669-000CN	Lifter drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1504 Remove the formatter cover

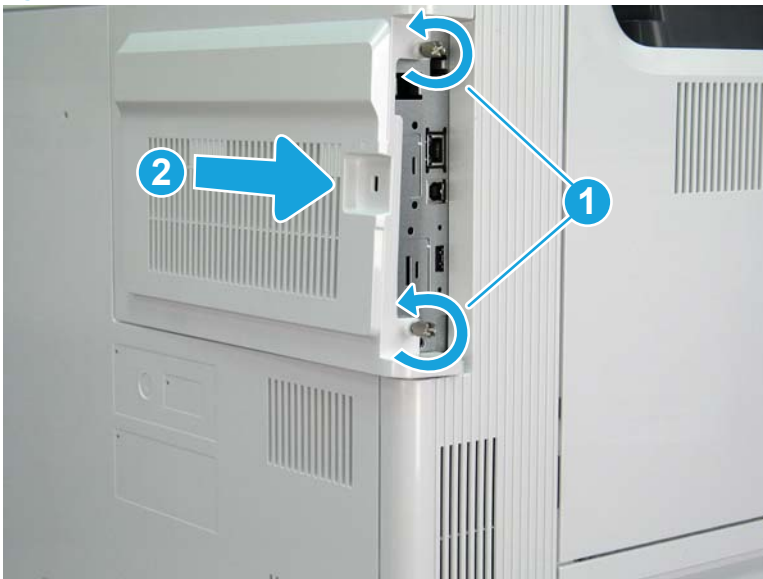

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1505 Remove the left rear cover

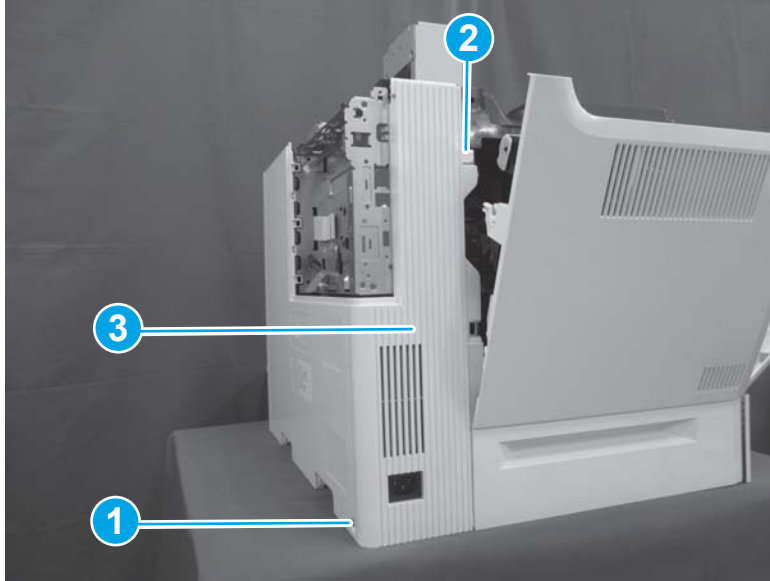


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1506 Install the left rear cover

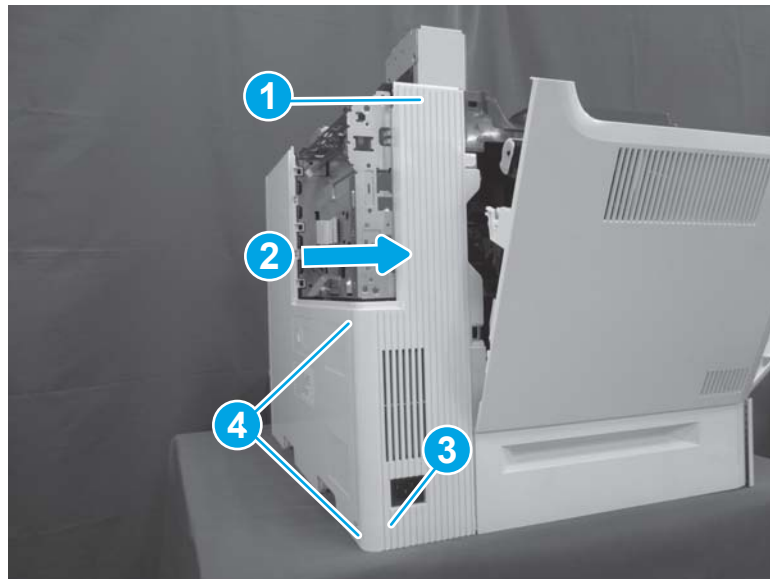


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1507** Remove two screws and the rear cover

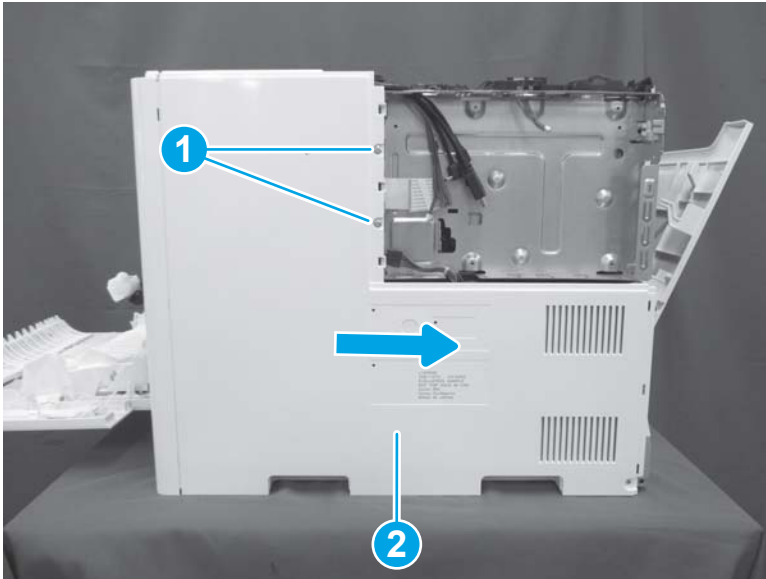

**Step 4: Remove the low-voltage power supply (LVPS) and fan**


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-1508** Disconnect five connectors and remove two screws

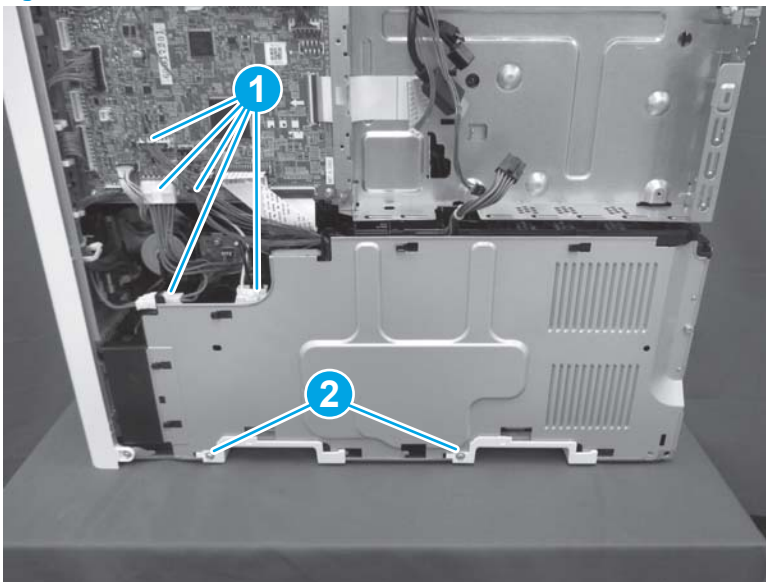

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1509 Remove two handles

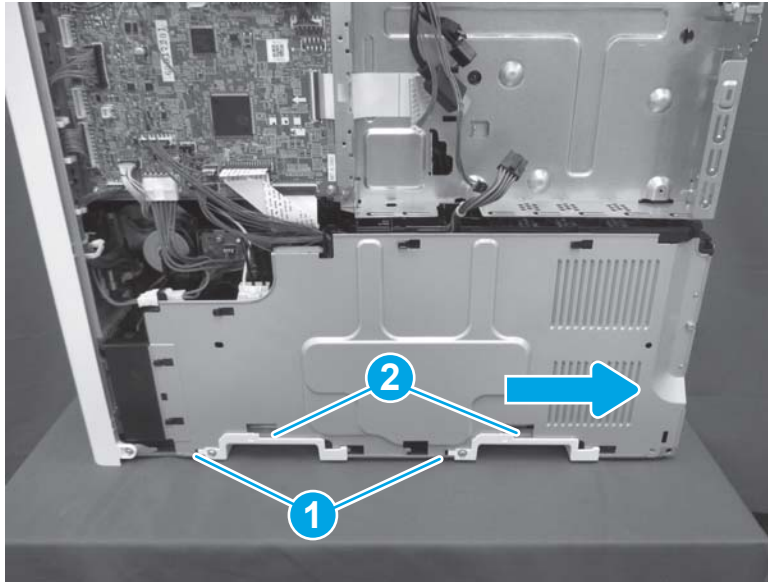

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


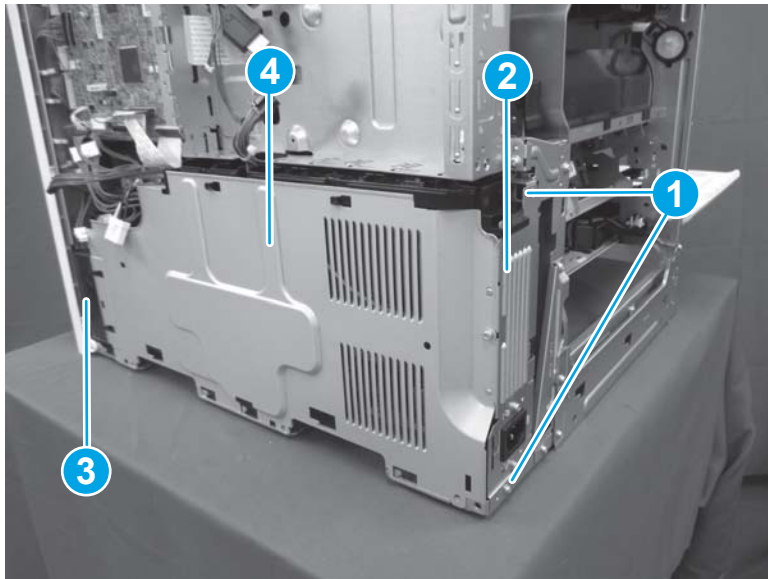
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.

Figure 1-1510 Remove the low-voltage power supply




### Step 5: Remove the lower high-voltage power supply

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).



Figure 1-1511 Disconnect one connector

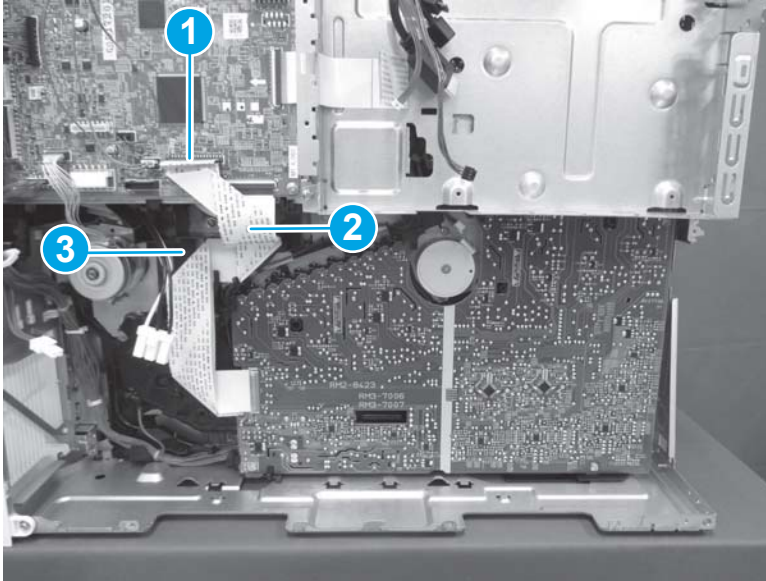

2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.


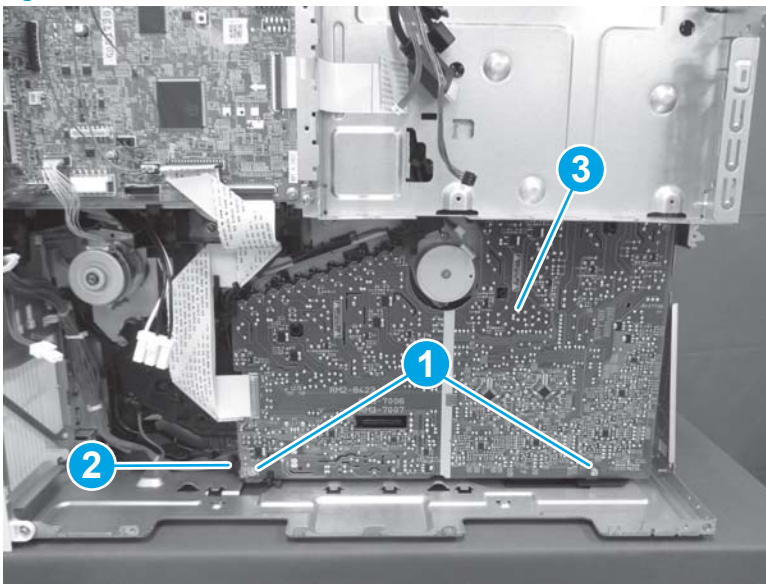
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1512 Remove two screws and release one tab



### Step 6: Remove the lifter drive assembly

1. Open the latch to disconnect one fla cable (callout 1), and then disconnect one connector (callout 2). Remove the fla cable (callout 3) from the cable guides (callout 4).


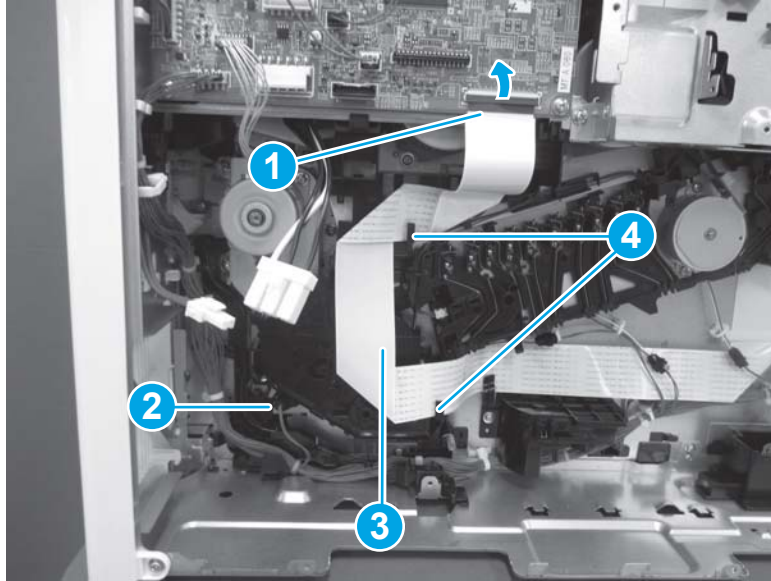
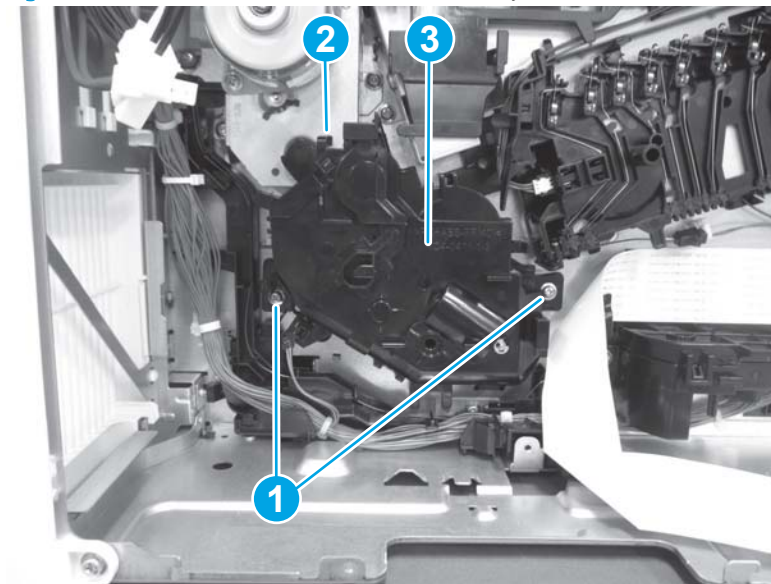
 **Reinstallation tip:** When reinstalling the fla cable, open the latch, install the fla cable, and then close the latch to secure the cable.

Figure 1-1513 Disconnect two connectors



2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lifter drive assembly (callout 3).

Figure 1-1514 Remove the lifter drive assembly



3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Lifter drive assembly**


- ▲ Position the tab on the assembly (callout 1) in the slot (callout 2) in the printer. Pivot the assembly into the correct position. Make sure that the assembly is completely installed against the sheet metal before installing the screws.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

Figure 1-1515 Position the tab

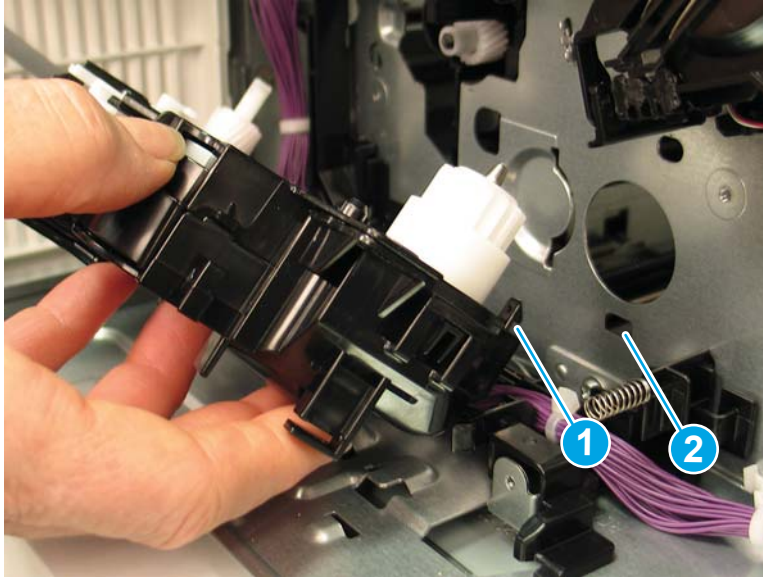

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Laser scanner

- [Introduction](#)
- [Step 1: Remove the toner collection unit \(TCU\)](#)
- [Step 2: Remove the left door](#)
- [Step 3: Remove the laser scanner](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the laser scanner.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Laser scanner part number	
RM2-1237-000CN	Laser scanner

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.


### Step 1: Remove the toner collection unit (TCU)

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the printer, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.

 **CAUTION:** If toner gets on clothing, wipe it off by using a dry cloth and wash the clothes in cold water. Hot water sets toner into fabric.


1. Open the front door.

Figure 1-1516 Open the front door

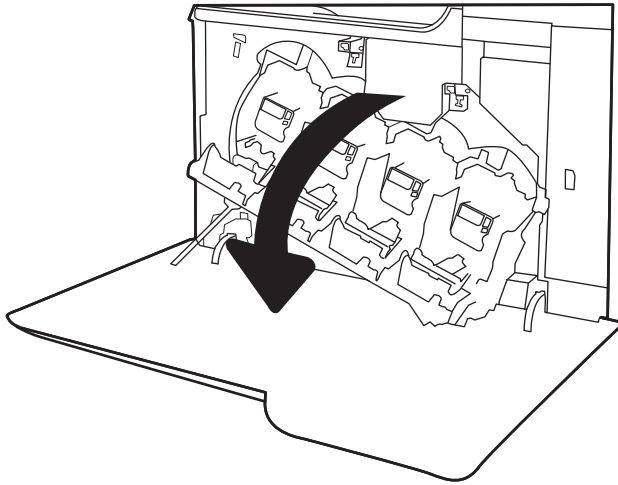


2. Open the left door.

Figure 1-1517 Open the left door

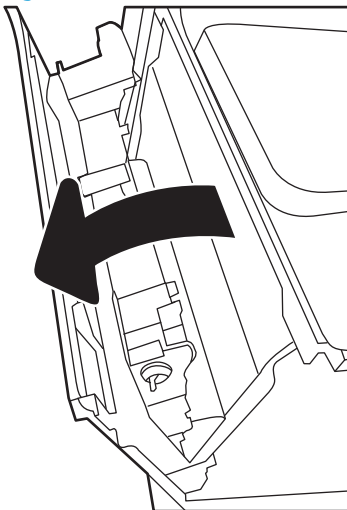

3. Grasp the top of the TCU and remove it from the printer.

Figure 1-1518 Remove the TCU

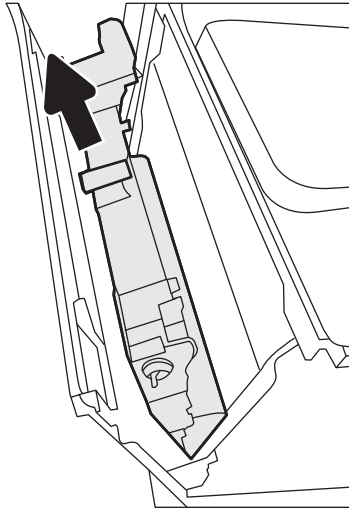

### Step 2: Remove the left door


1. Open front door.

Figure 1-1519 Open front door






2. Press on the tab (callout 1) while sliding the left door (callout 2) to the right to remove it.

 **NOTE:** Make sure that the front door is not blocking the left door at the lower corner.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1520** Remove the left door

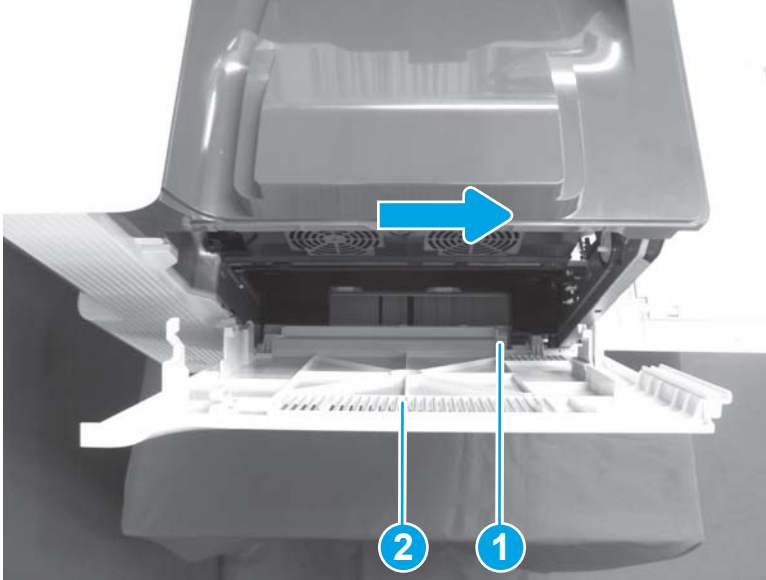

### Step 3: Remove the laser scanner

1. Release two tabs (callout 1), release four bosses (callout 2), and then remove the scanner cover (callout 3).


**Figure 1-1521** Remove the scanner cover

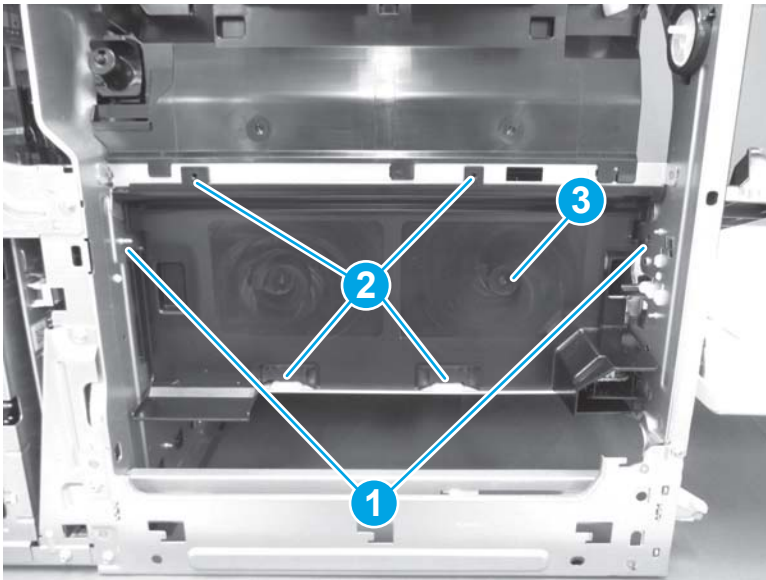



2. Disconnect one connector (callout 1), and then lift the gray latch and release one flat cable (callout 2). Remove one screw (callout 3), and then remove the plate (callout 4).

Figure 1-1522 Disconnect two connectors and remove one screw

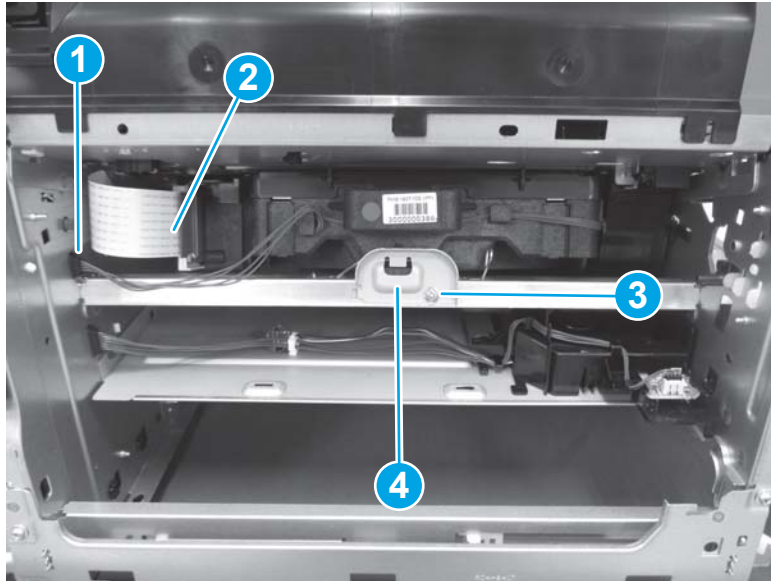


3. Unhook one spring (callout 1), and then pull the laser scanner (callout 2) away from the printer to remove it.

 **NOTE:** The spring is not retained. Do not lose the spring.

 **Reinstallation tip:** Close all printer doors before turning the printer power on for the first time after replacing the laser scanner.

**Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1523 Remove the laser scanner

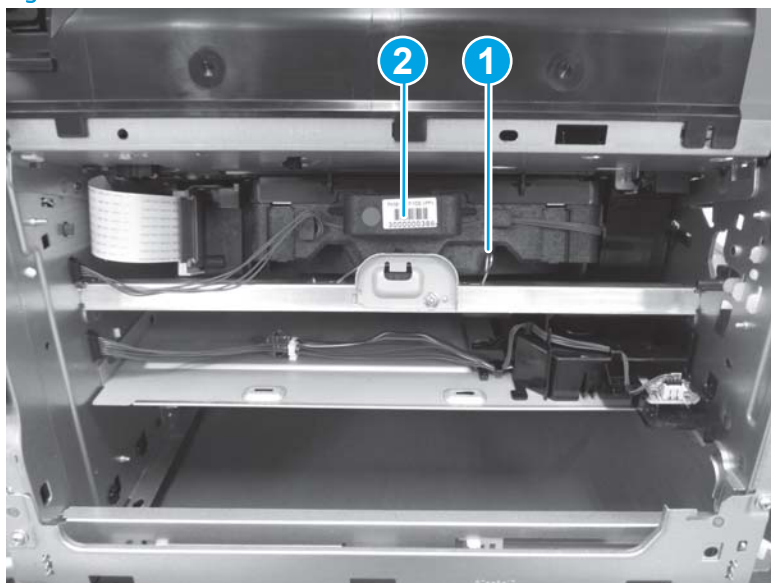

## Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Drum motor 1

- [Introduction](#)
- [Step 1: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 2: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 3: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 5: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 6: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 13: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 14: Remove the output bin](#)
- [Step 15: Remove the formatter cover](#)
- [Step 16: Remove the left rear cover](#)
- [Step 17: Remove the rear cover](#)
- [Step 18: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 20: Remove the formatter](#)
- [Step 21: Remove the formatter case](#)
- [Step 22: Remove the DC controller PCA](#)
- [Step 23: Remove the DC controller stay](#)
- [Step 24: Remove the upper high-voltage power supply \(HVPS\)](#)
- [Step 25: Remove drum motor 1](#)
- [Step 26: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace drum motor 1.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)


M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drum motor 1 part number	
RM2-1956-000CN	Drum motor 1

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on


- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1524 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1525 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1526 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1527 Disconnect the keyboard flat cable

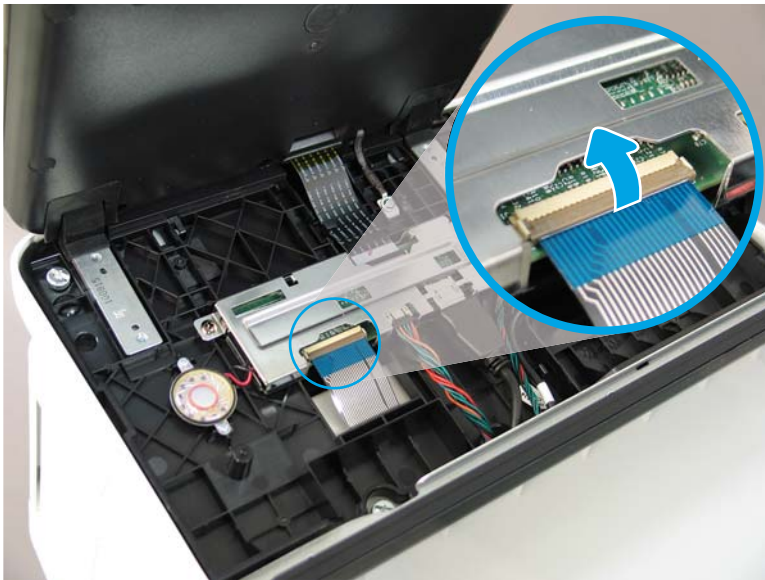

5. Slide the keyboard tray out until it stops.

Figure 1-1528 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1529 Release two tabs






7. Slide the keyboard tray all the way out of the printer to remove it.

**Figure 1-1530** Remove the keyboard



**Step 2: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

**Figure 1-1531** Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1532 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1533 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-1534** Disconnect the keyboard flat cable (keyboard models only)

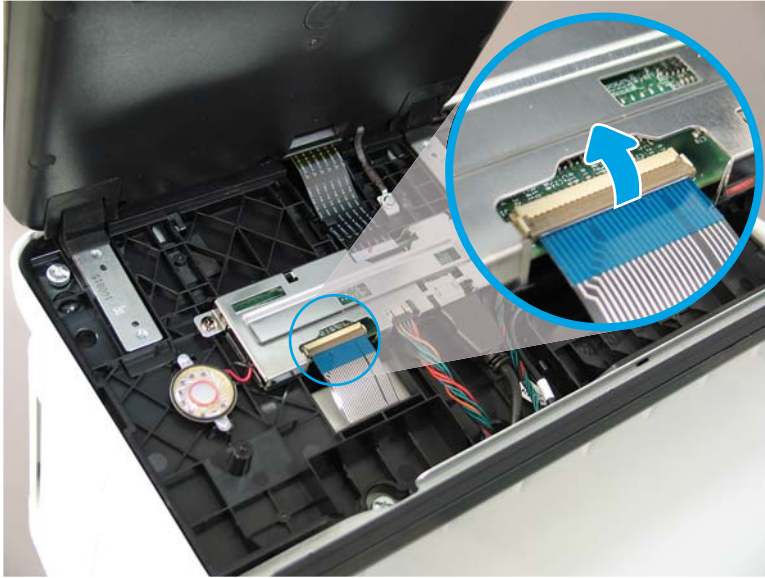


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-1535** Disconnect connectors

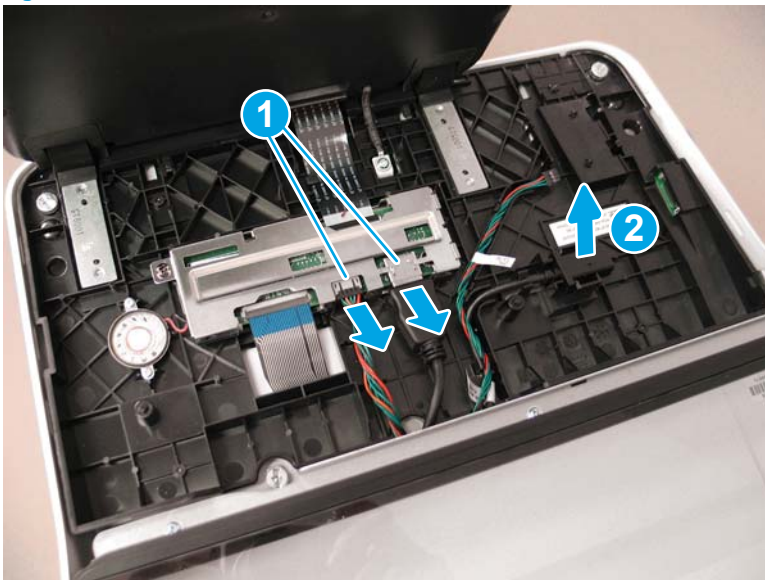


6. Remove three thumbscrews (callout 1).

Figure 1-1536 Remove three thumbscrews

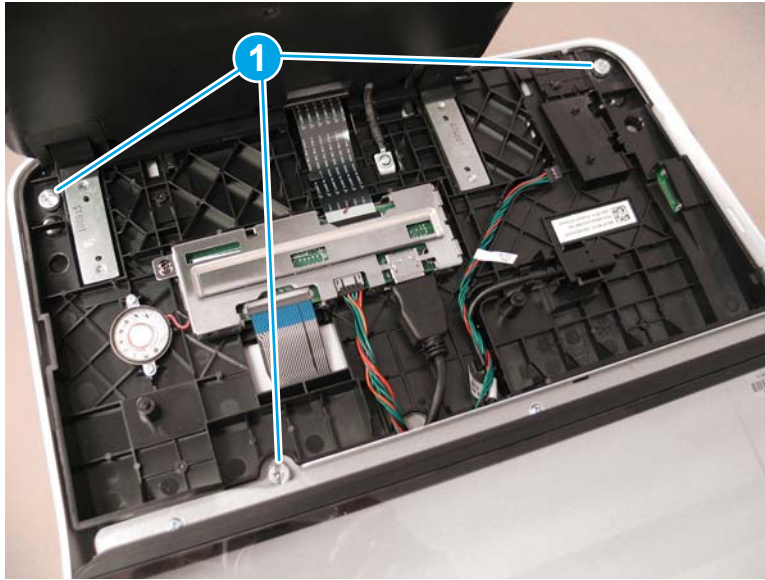

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

Figure 1-1537 Remove the control panel

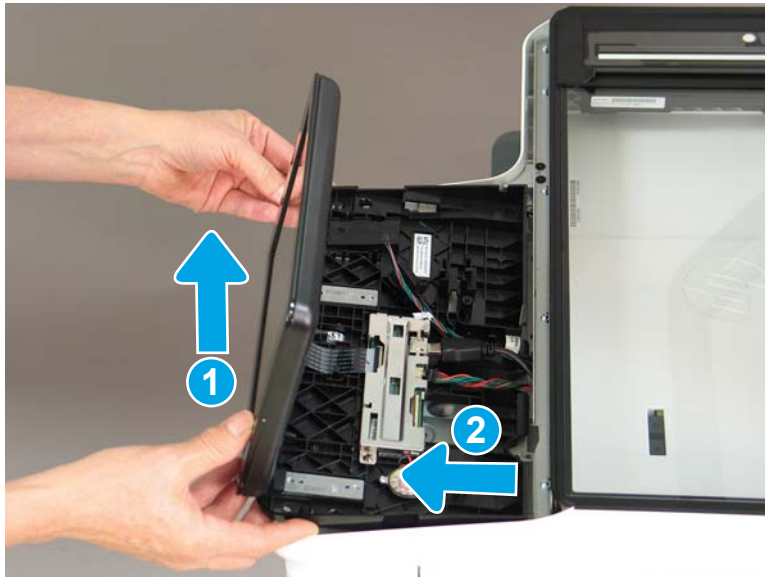


### Step 3: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

**NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1538 Remove the SCB cover

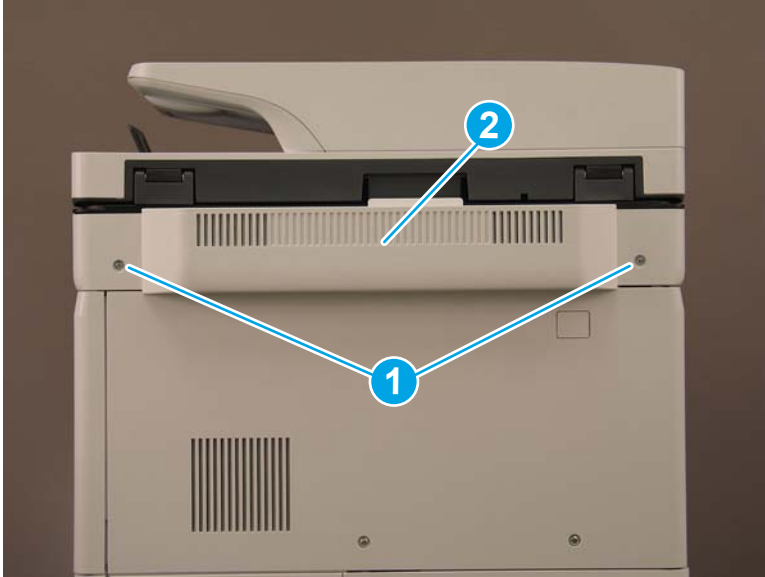


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-1539 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-1540** Remove the stapler/stacker rear cover

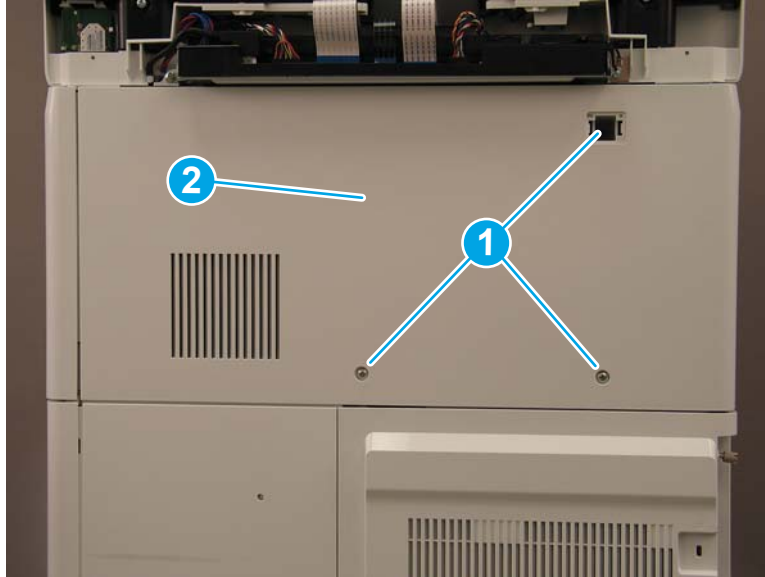

3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).


**Figure 1-1541** Remove the upper rear cover

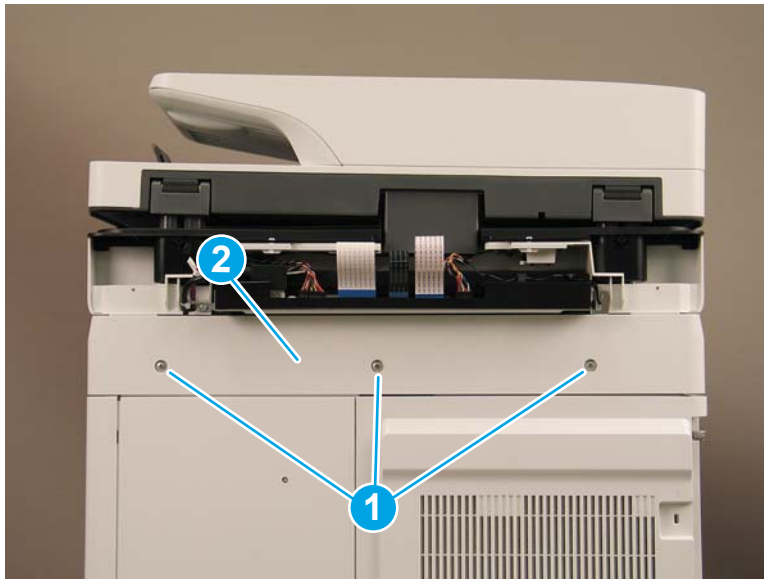




4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-1542** Remove the formatter cover

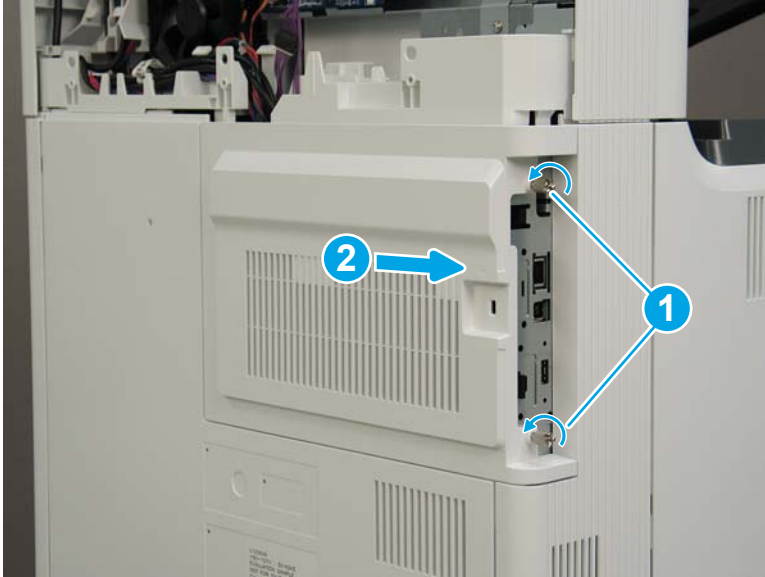

5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.


**Figure 1-1543** Cable routing for M681dh, M681f, and Flow M681f

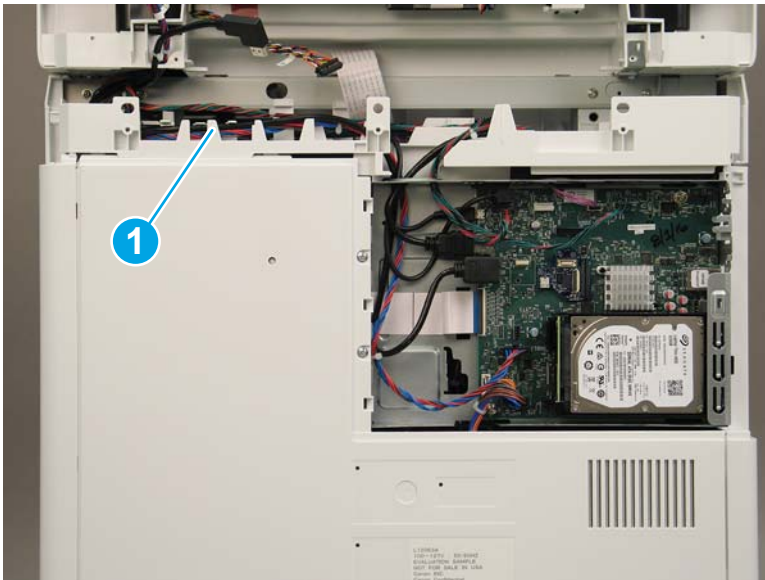



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1544 Disconnect two connectors

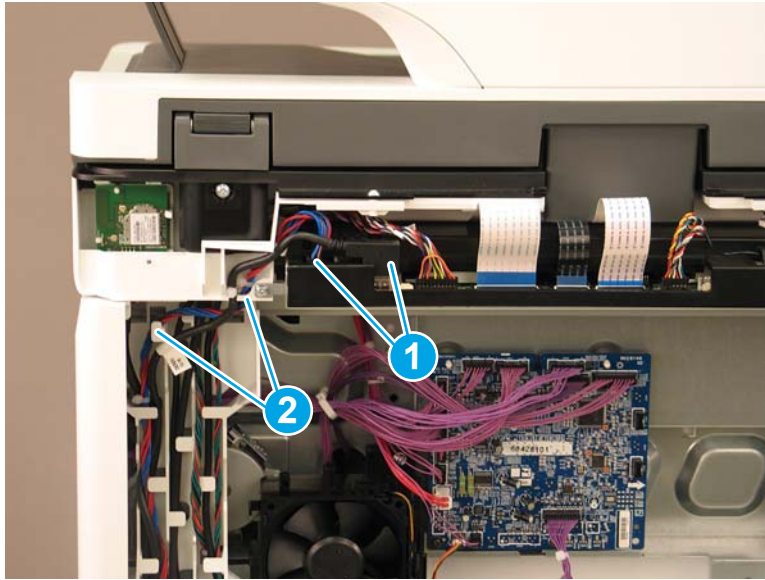


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1545 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1546 Disconnect the wireless connector

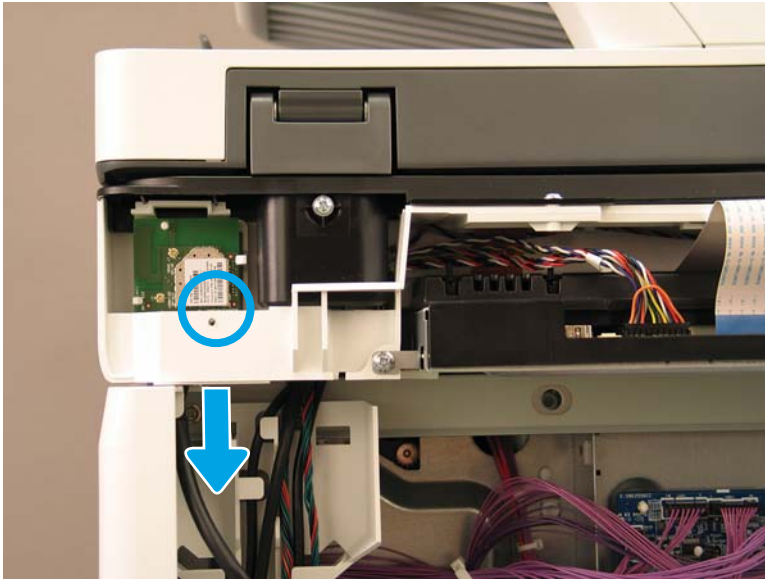


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1547 Release the cables

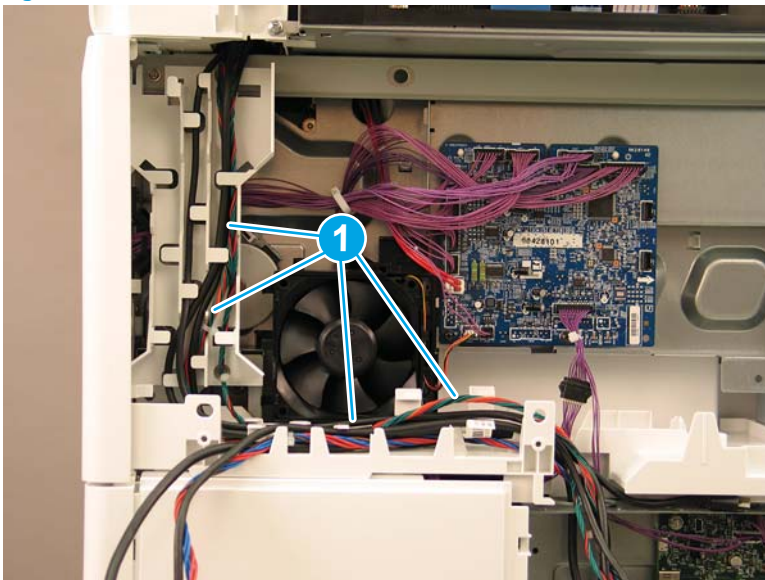


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1548 Remove four screws

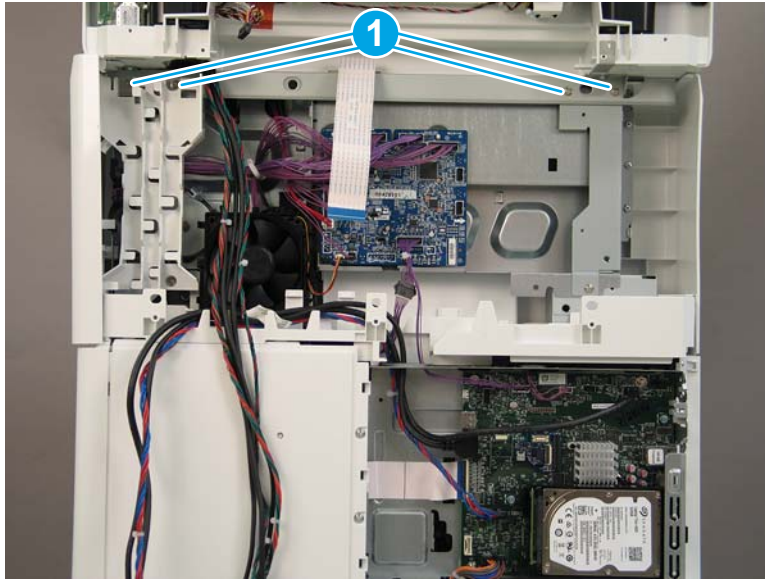

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1549 Remove three screws

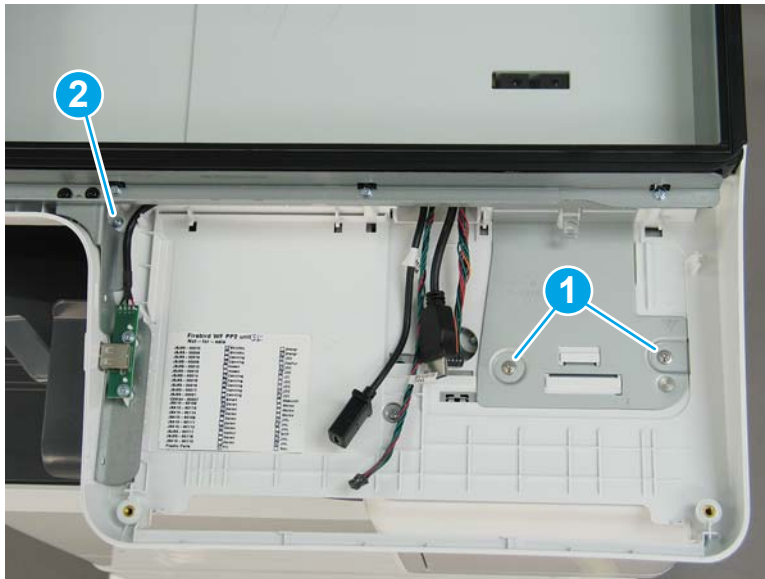

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-1550** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-1551** Remove the wireless card

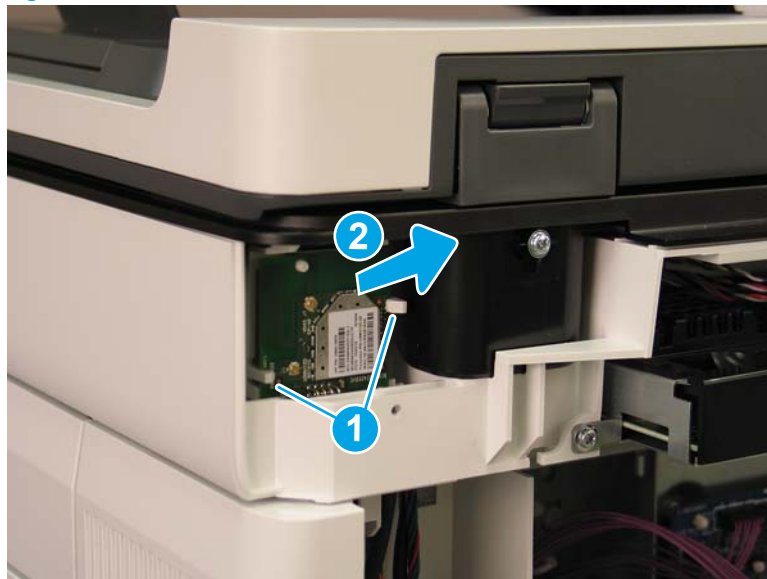


- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-1552** Connect the wireless card connector



- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).


**Figure 1-1553** Reinstall the wireless card

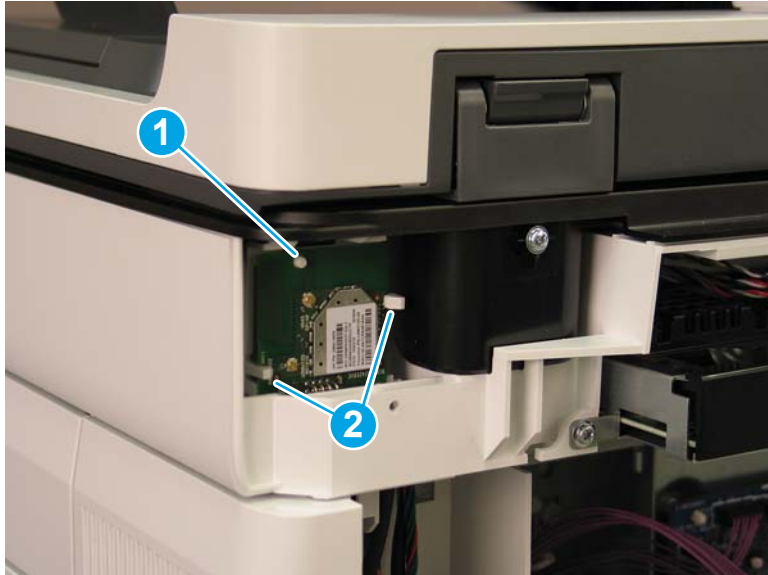




- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1554 Install the SCB cables

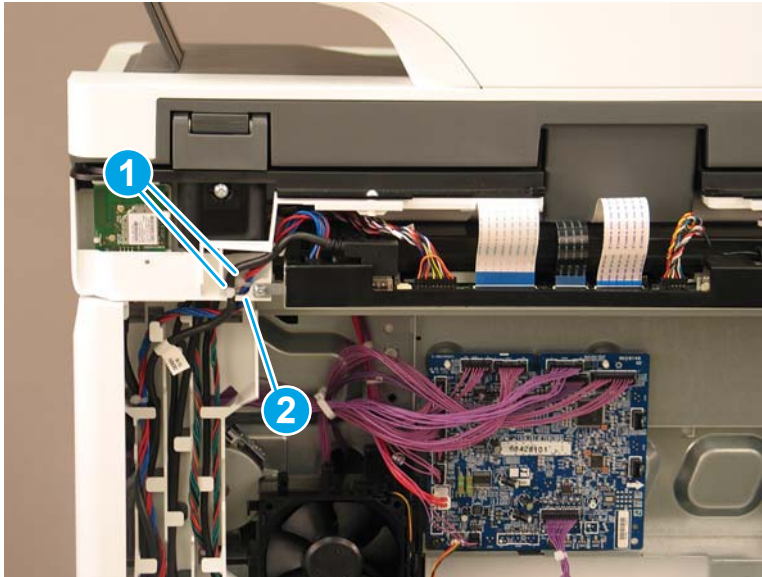

#### Step 4: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 999


1. Open the front door.

Figure 1-1555 Open the front door



2. Open the stapler door.

Figure 1-1556 Open the stapler door

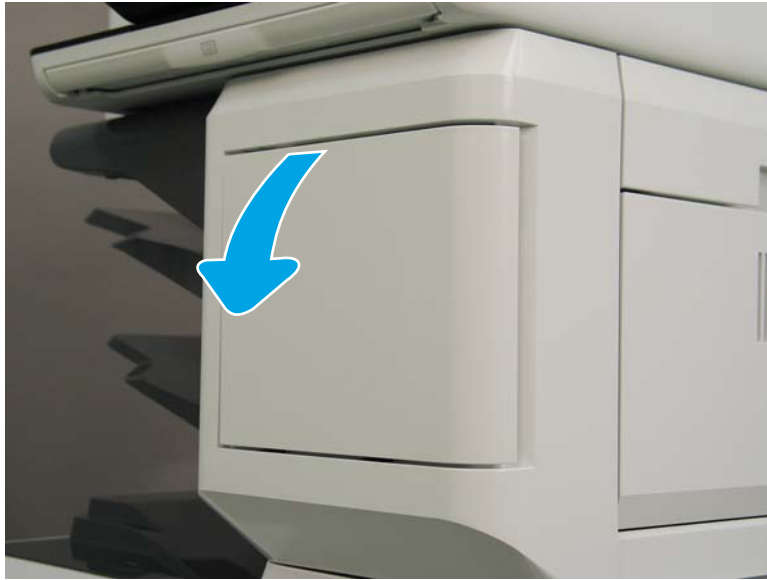

3. Release the latch, and then remove the staple cartridge.

Figure 1-1557 Remove the staple cartridge





4. Remove one screw (callout 1).

Figure 1-1558 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-1559 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1560 Remove one screw

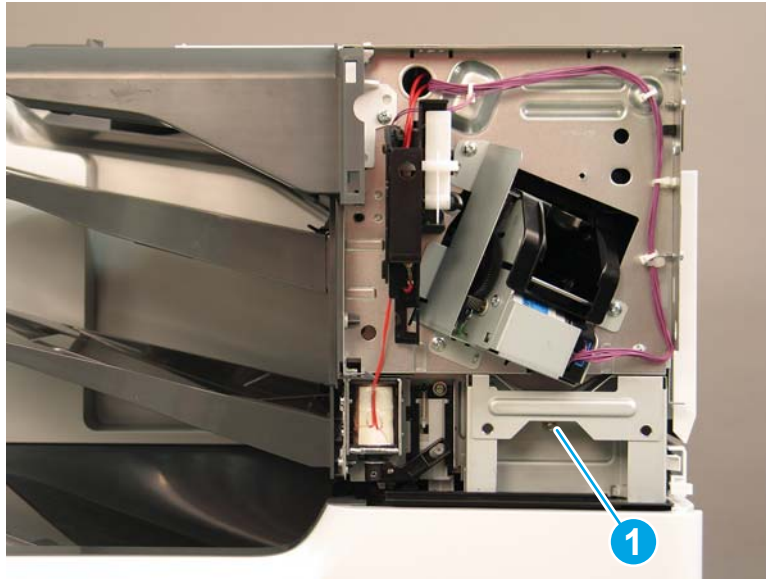


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1561 Remove the stapler/stacker right upper cover

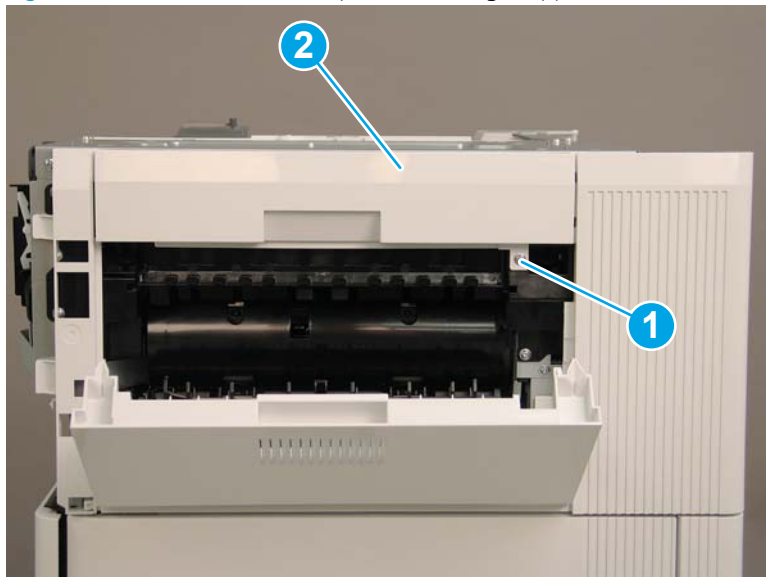


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1562 Remove the stapler rear cover

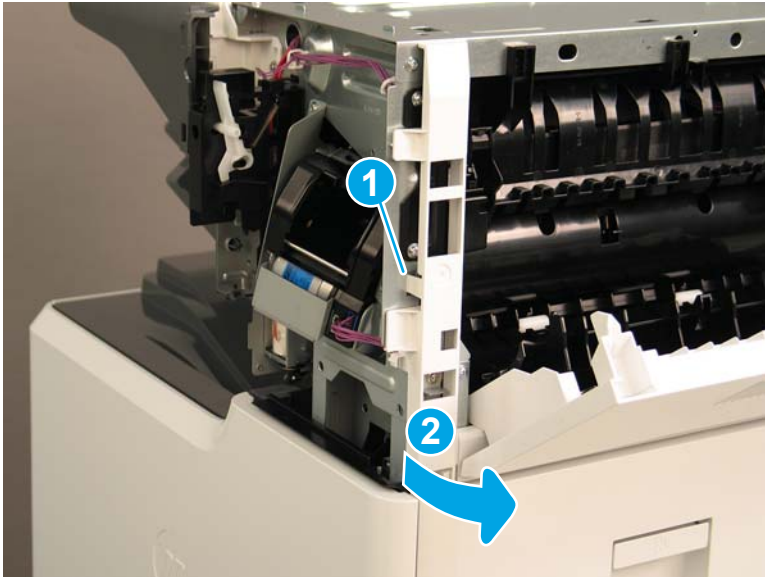


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1563 Remove the stapler/stacker rear corner cover

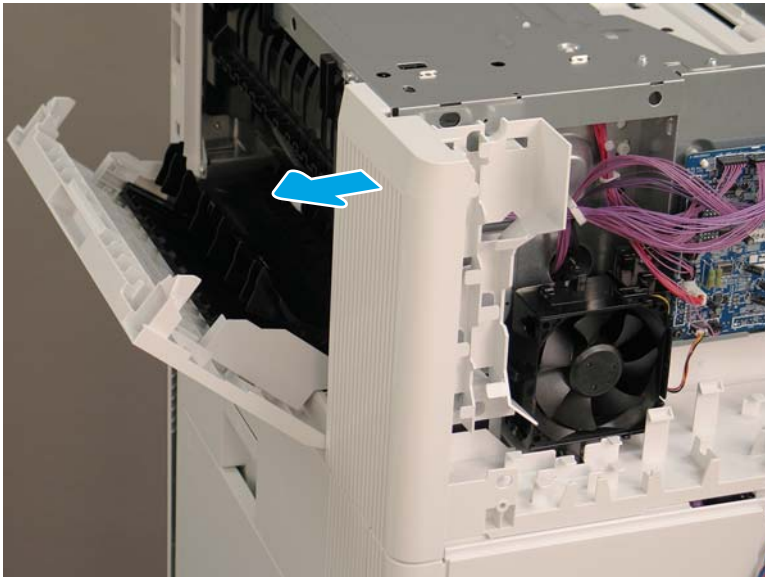


10. Remove two screws (callout 1).

Figure 1-1564 Remove two screws

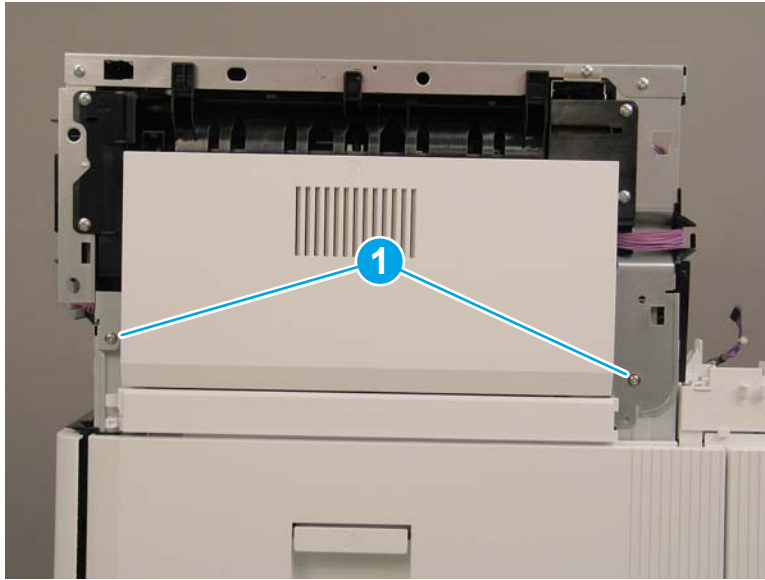


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1565 Remove the cable guide

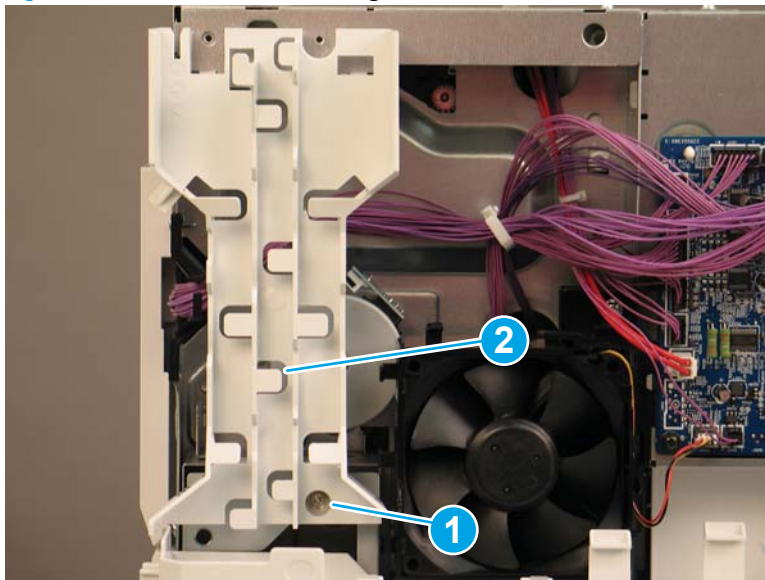

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1566 Disconnect one connector

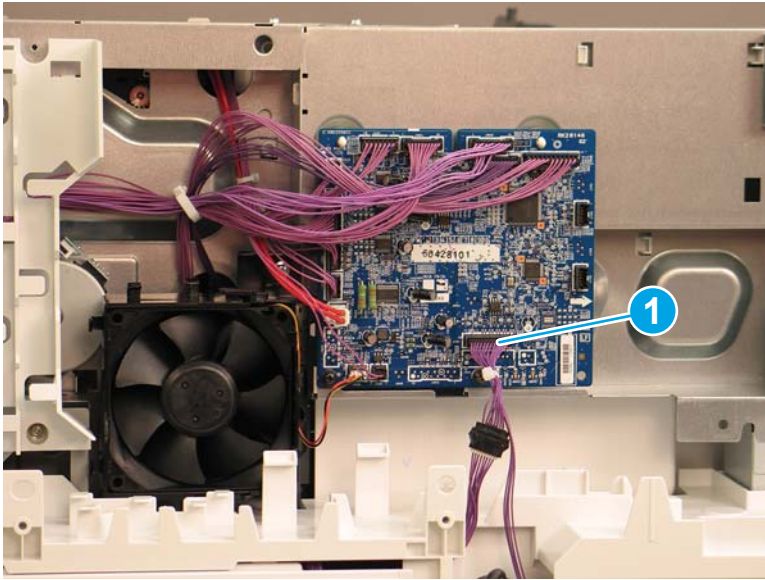

13. Remove two screws (callout 1).


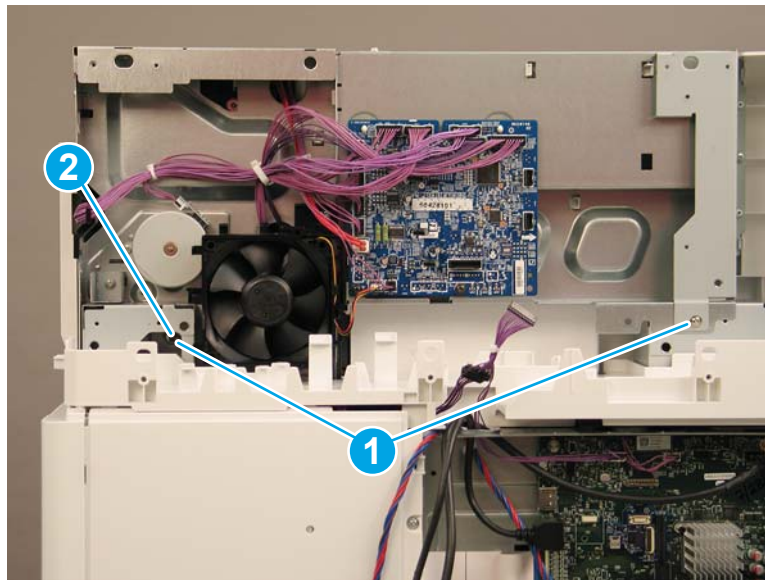
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1567 Remove two screws







14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1568** Remove the stapler/stacker

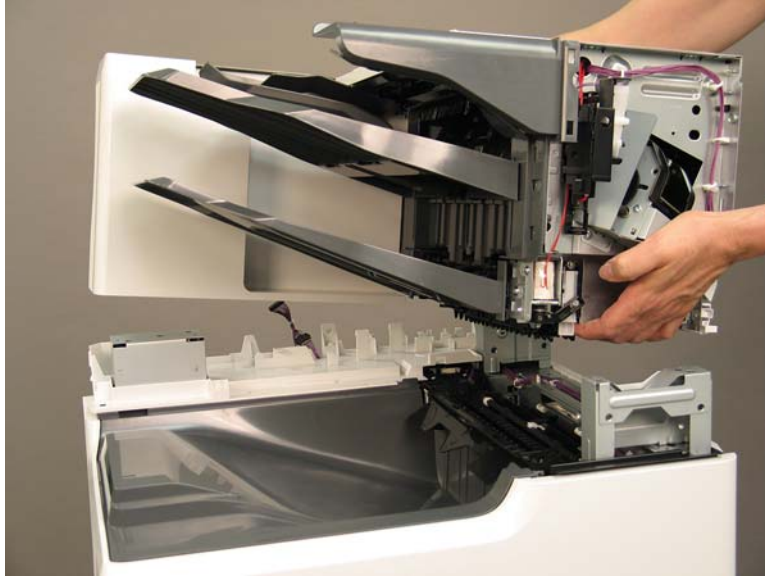


**Step 5: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1569** Remove the face-down front cover

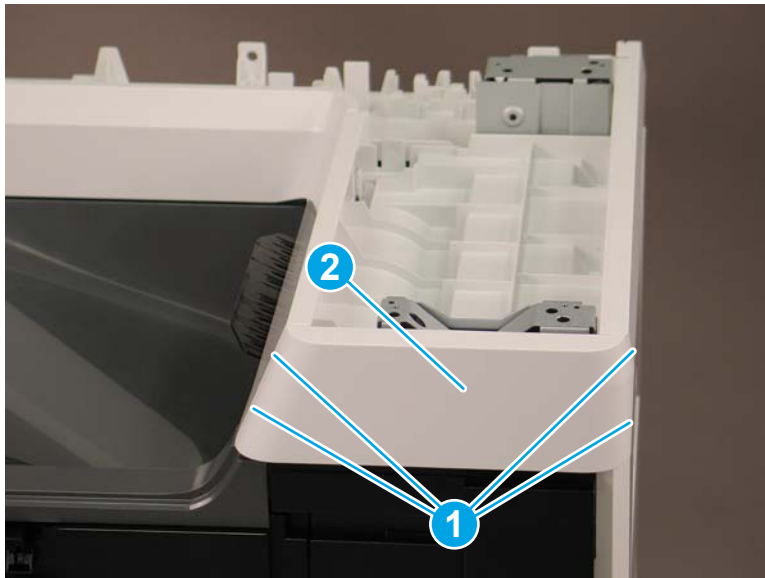

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Special installation instructions: Face-down front cover**


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1570** Install the cover

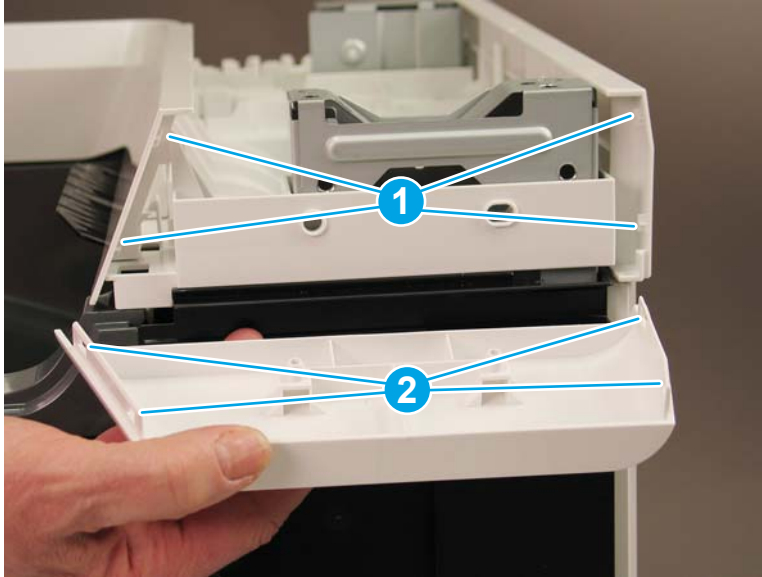

**Step 6: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**


---

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

---

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


---



Figure 1-1571 Remove the top cover

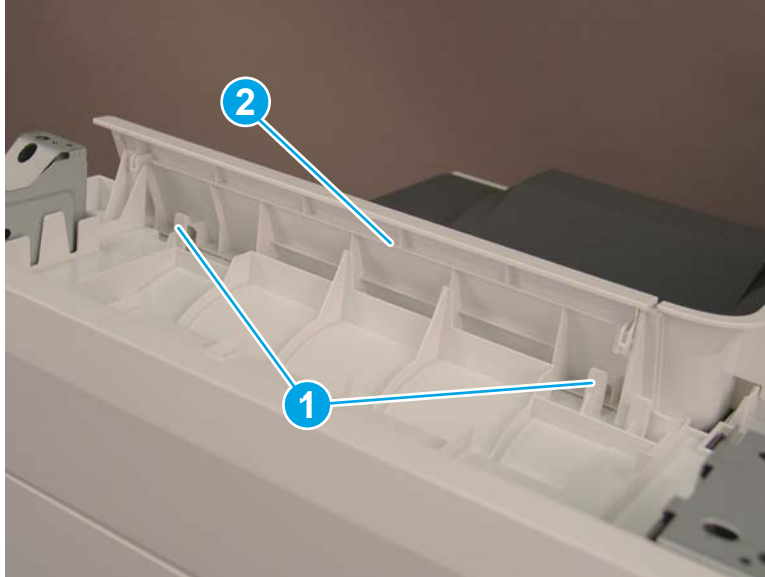


Step 7: Remove the right cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)


- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1572 Remove the right cover

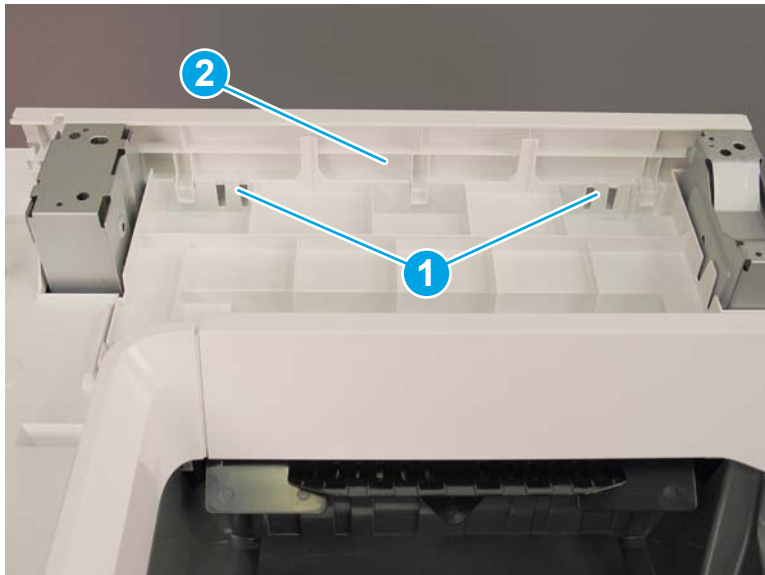

### Step 8: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


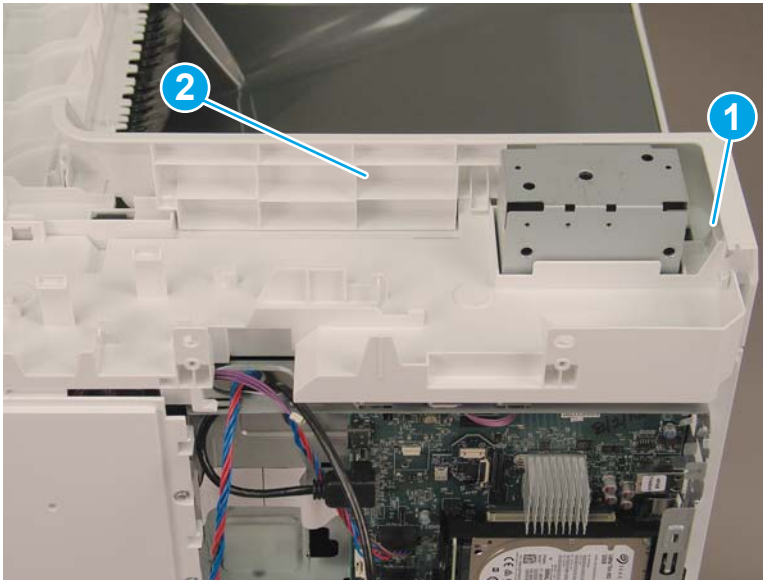

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1573 Remove the front cover



### Step 9: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).


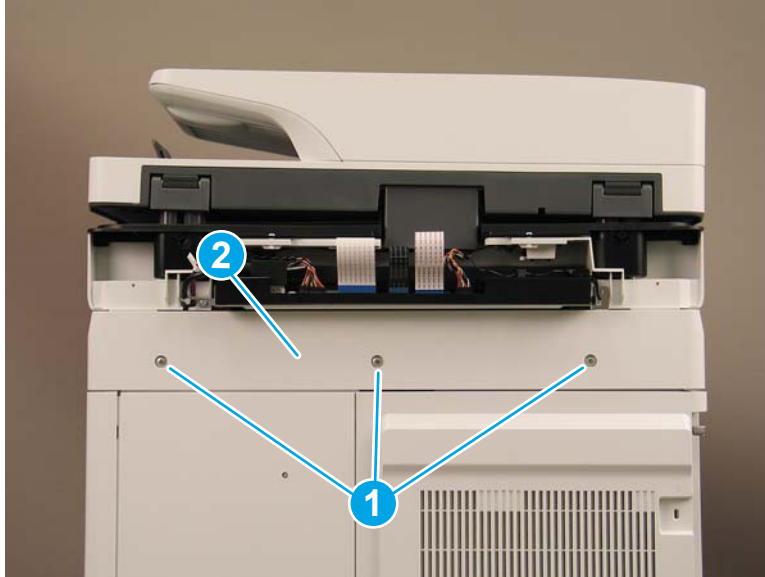

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1574 Remove the rear upper cover



Step 10: Remove the face-down cover (M681 dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 999

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


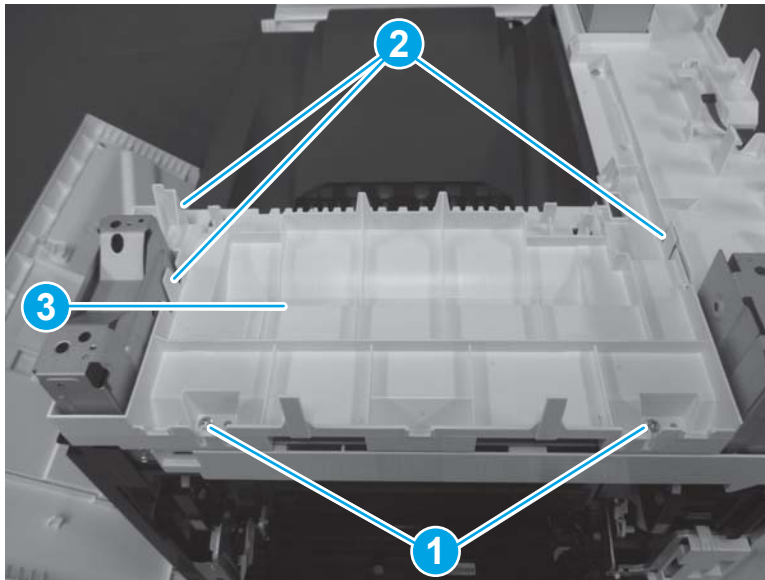

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1575 Remove two screws and the face-down cover




## Step 11: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 12: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 999](#)

1. Remove two screws (callout 1), and then release one tab (callout 2).


**Figure 1-1576** Remove two screws and release one tab

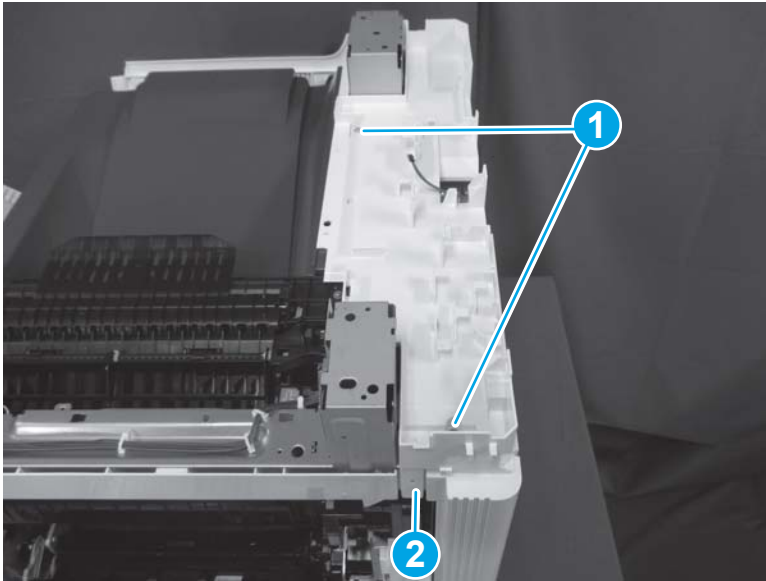


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1577** Remove one screw and the main cover

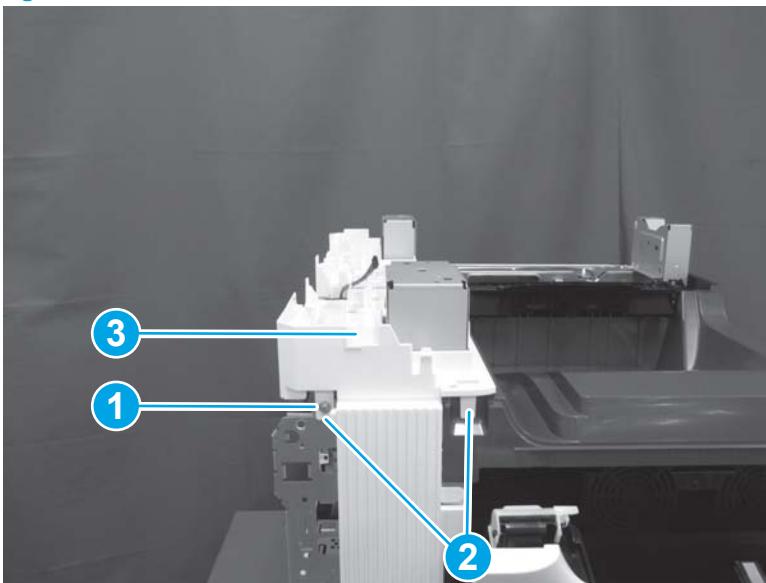

## Step 12: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 14: Remove the output bin on page 1003](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1578** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-1579** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-1580** Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

**Figure 1-1581** Release the control panel

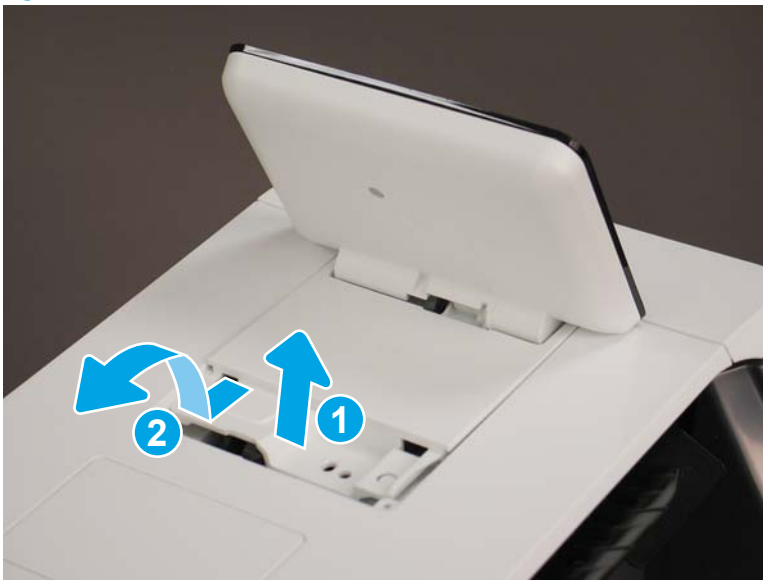

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-1582** Disconnect two connectors

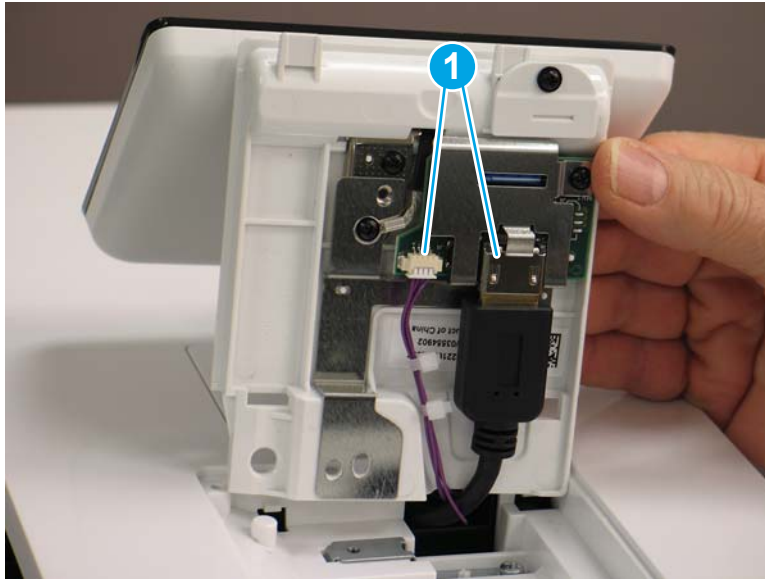


6. Remove the control panel.

**Figure 1-1583** Remove the control panel



### Step 13: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 14: Remove the output bin on page 1003](#)


1. Open the following doors:



- Front door
- Left door
- Right door


2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1584 Remove the NFC cover

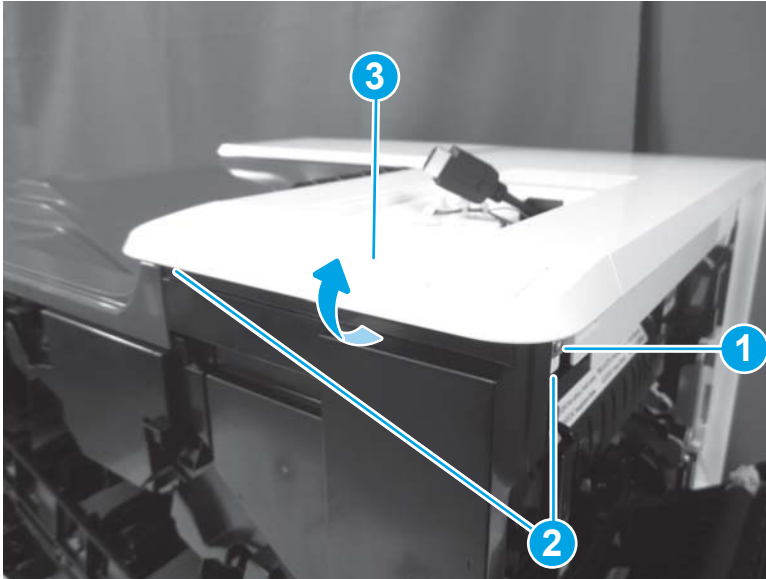


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1585 Remove one screw and release one tab

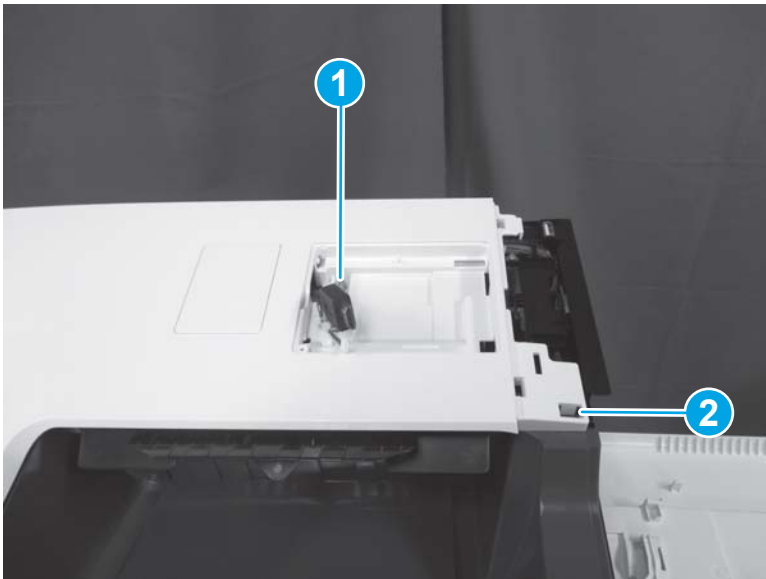


4. Release two tabs (callout 1).

Figure 1-1586 Release two tabs

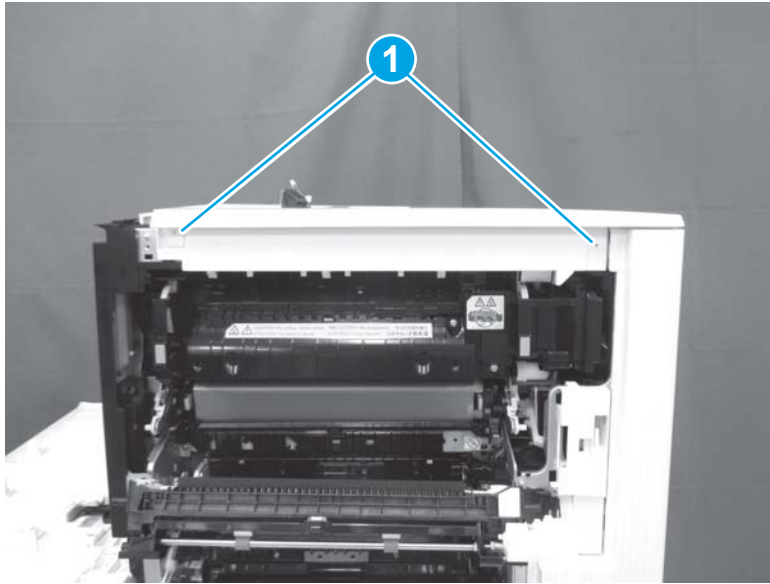


5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1587 Remove the top cover

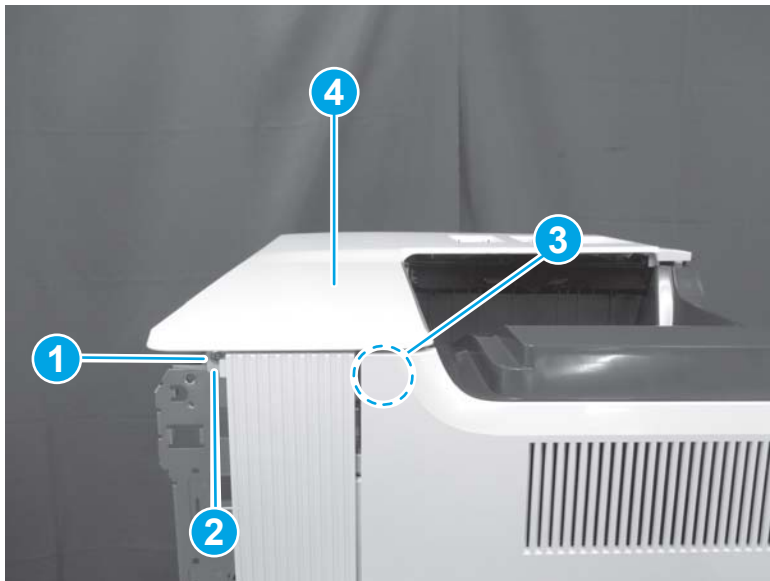


#### Step 14: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


**Figure 1-1588** Remove the output bin

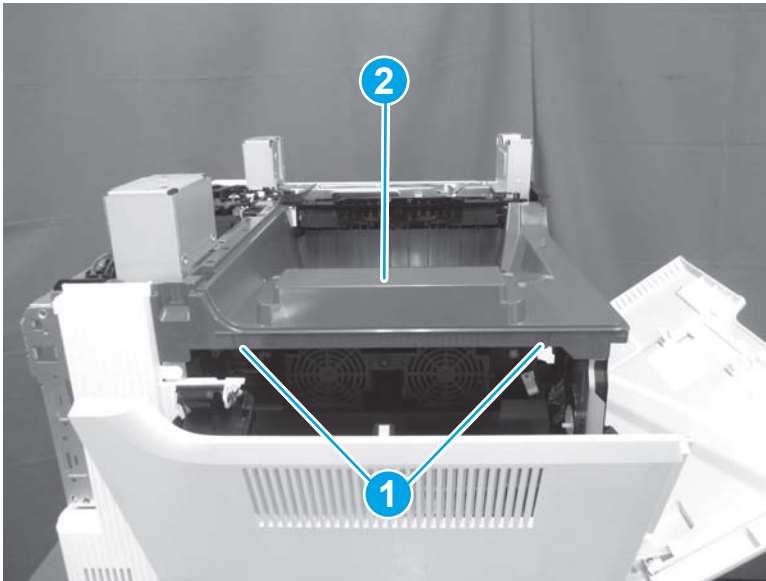

### Step 15: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1589 Remove the formatter cover

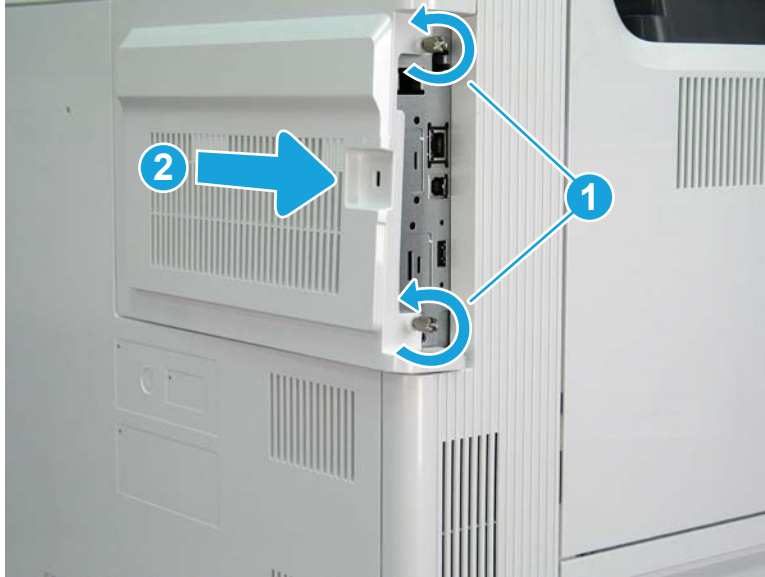

#### Step 16: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1590 Remove the left rear cover

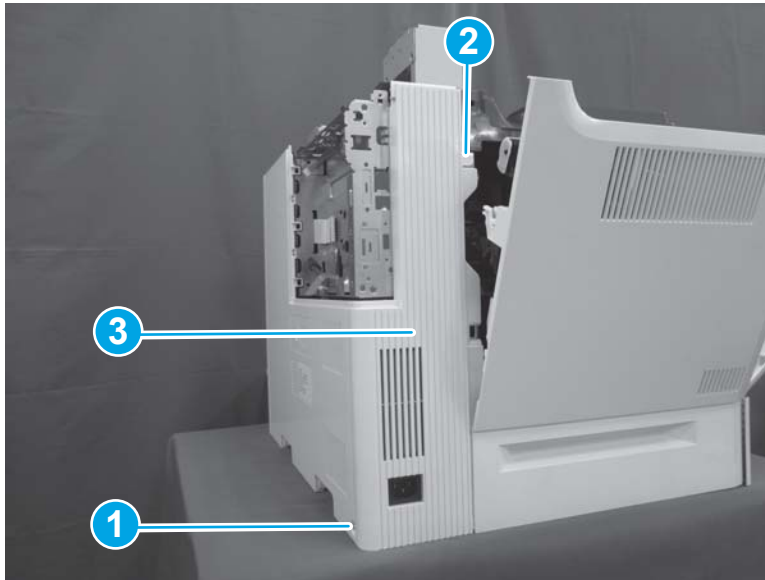


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1591 Install the left rear cover

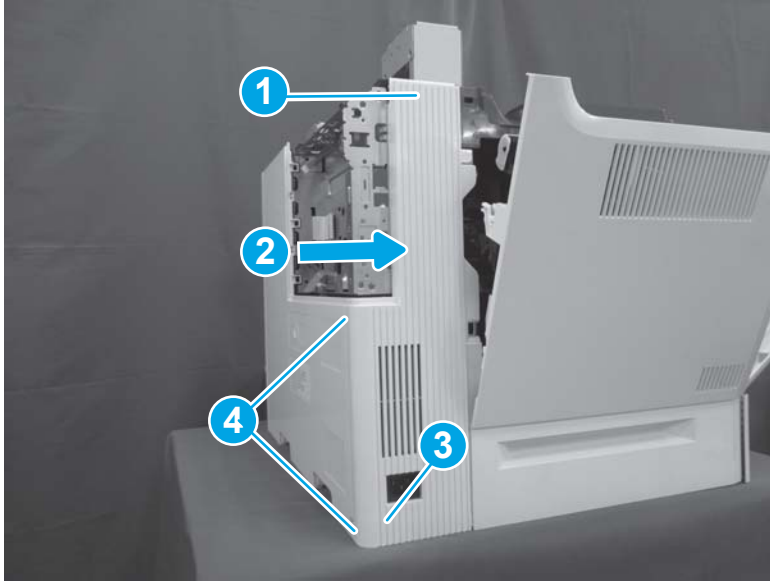


#### Step 17: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1592 Remove two screws and the rear cover

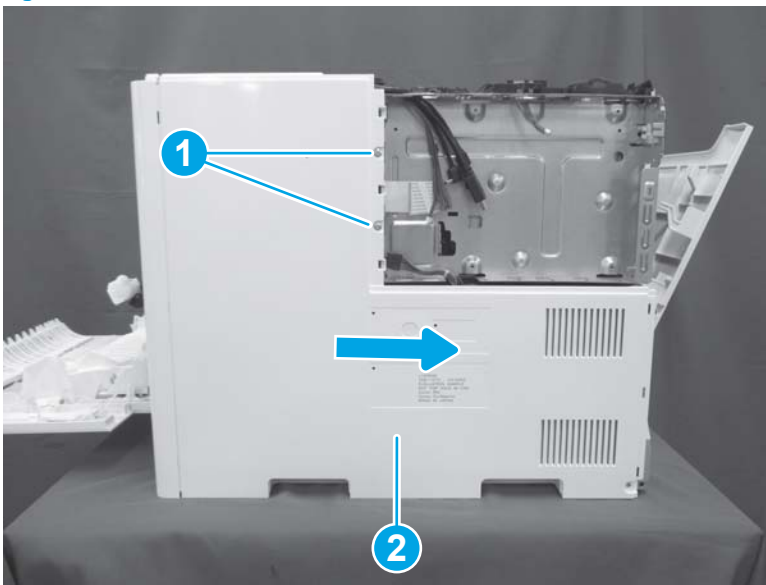

#### Step 18: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

📝 **NOTE:** This step is for fax printers. For non-fax printers, skip this step and go to [Step 19: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\) on page 1007](#)


1. Locate the fax PCA on the formatter.

Figure 1-1593 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1594 Remove the fax PCA

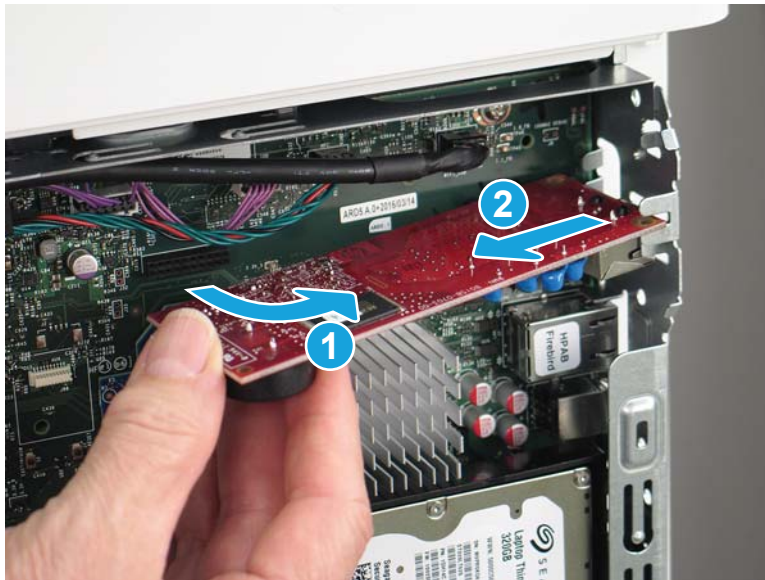

**Step 19: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)**

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-1595 Release the HDD

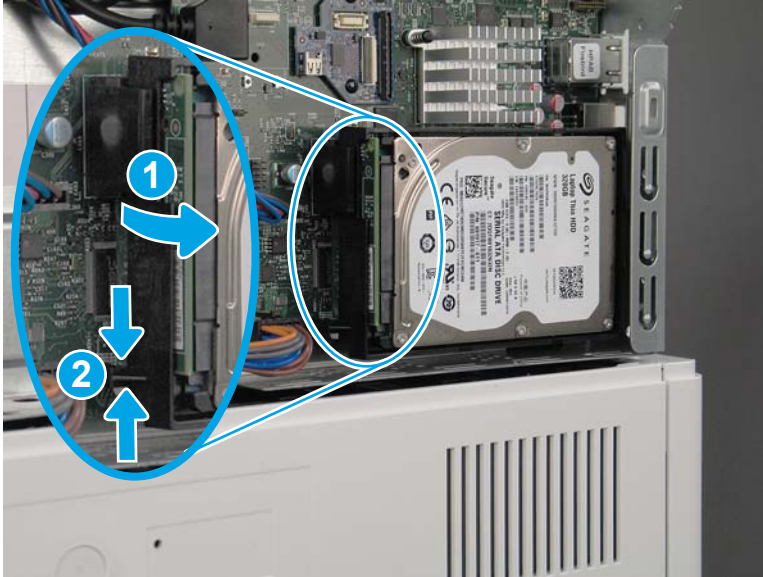


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1596 Remove the HDD



## Step 20: Remove the formatter


- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-1597 Remove the formatter

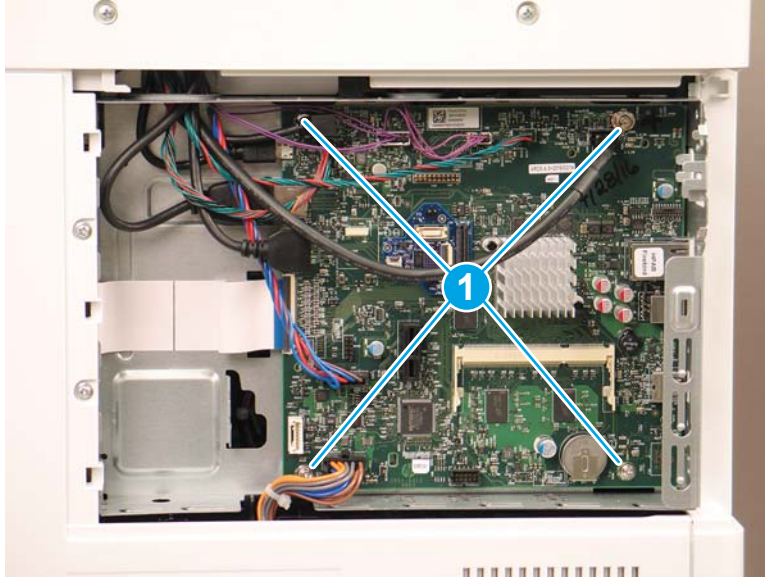


### Step 21: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

Figure 1-1598 Disconnect one connector and remove four screws

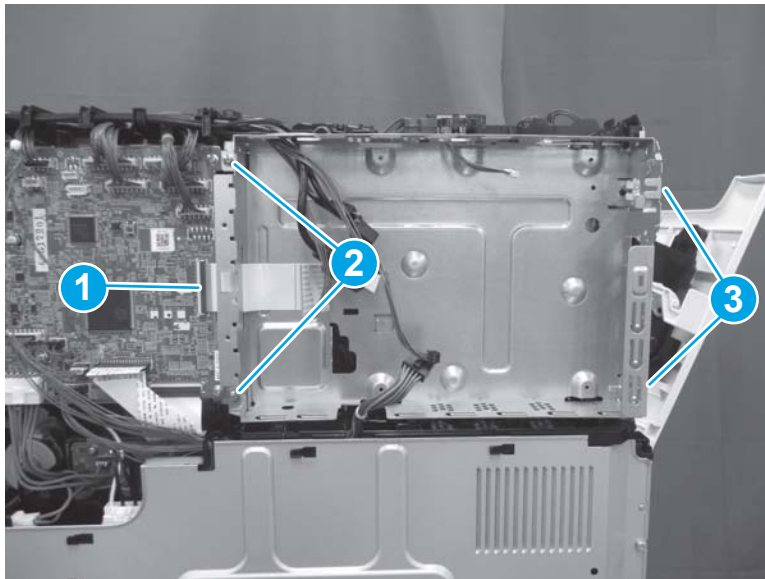


2. Tilt the bottom of the formatter case away from the printer.

Figure 1-1599 Tilt the formatter case

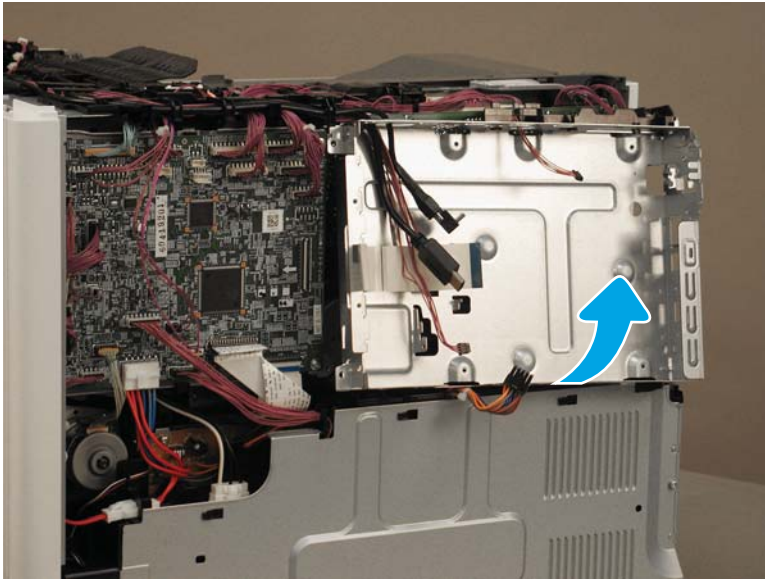

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1600 Remove the cable guide

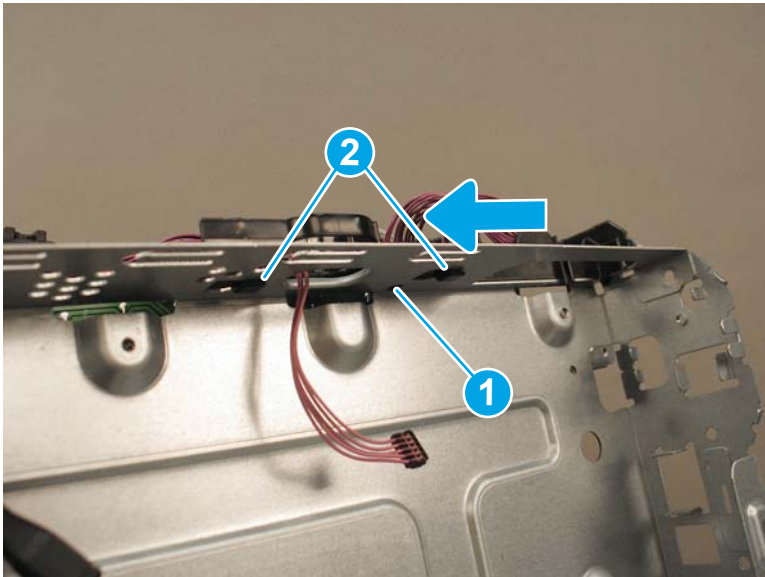


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1601 Install the cable guide

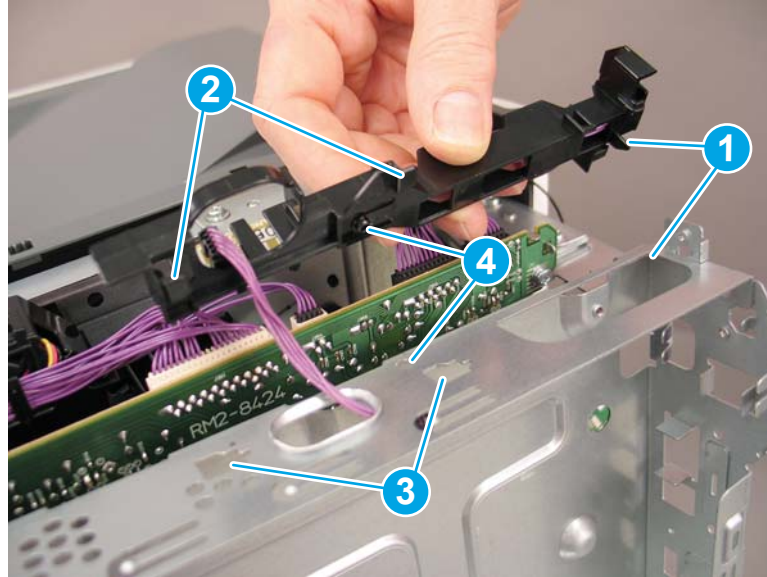

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.


Figure 1-1602 Check the IOD cable

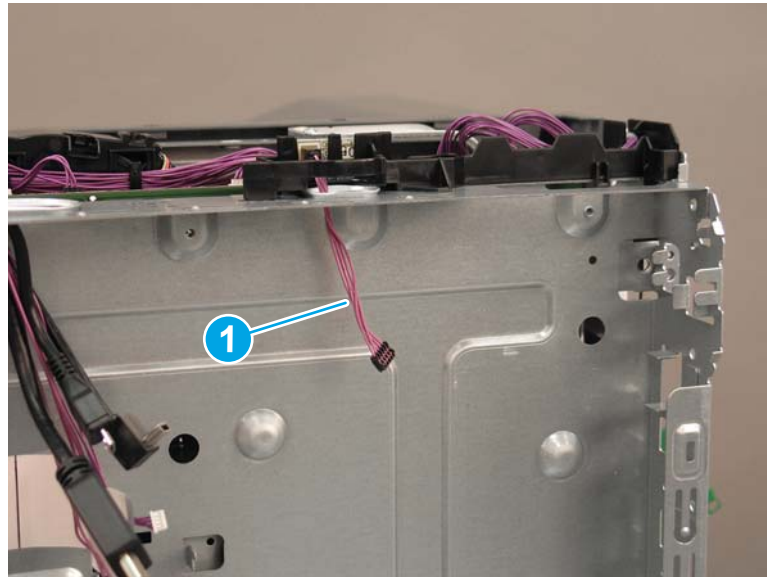

## Step 22: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

Figure 1-1603 Remove the DC controller PCA

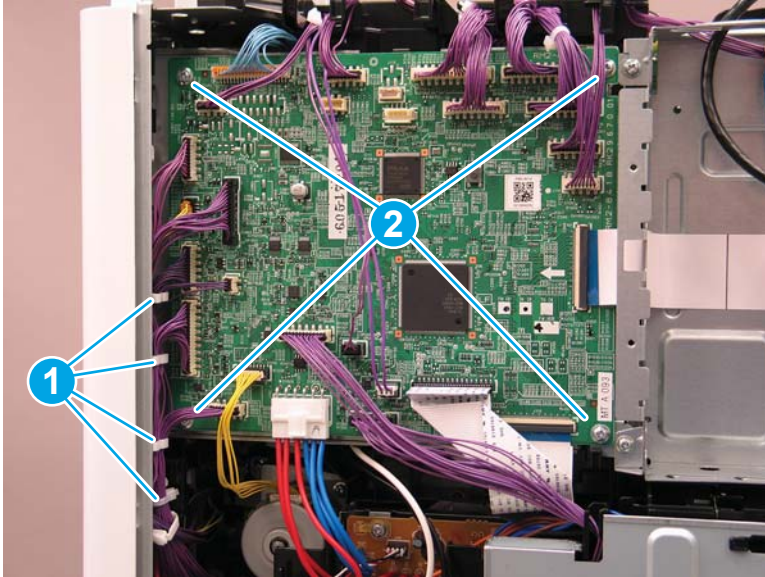

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: DC Controller PCA**


- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

Figure 1-1604 Check the yellow cable

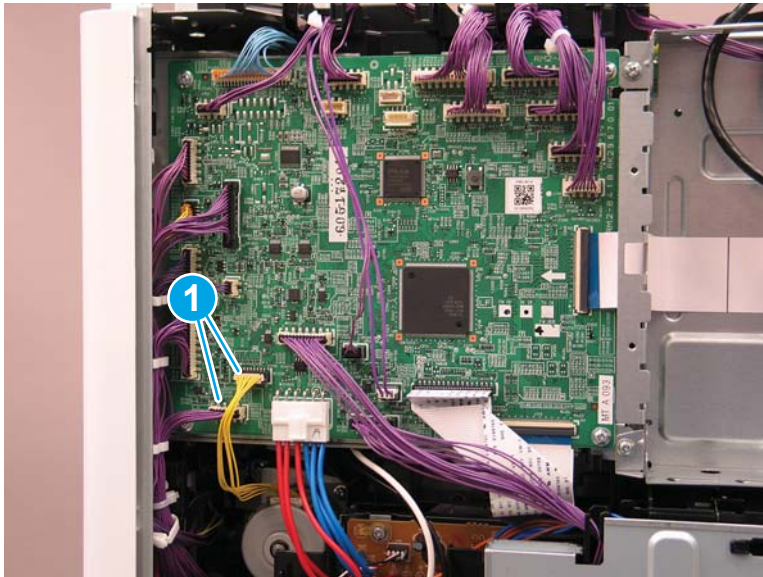


**Step 23: Remove the DC controller stay**

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.




Figure 1-1605 Remove the DC controller stay

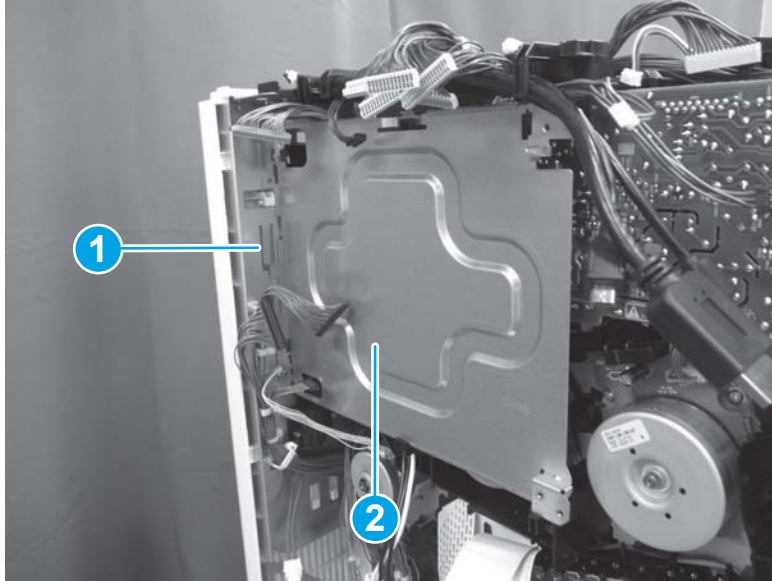


Step 24: Remove the upper high-voltage power supply (HVPS)

1. Disconnect eight connectors (callout 1).

Figure 1-1606 Disconnect eight connectors

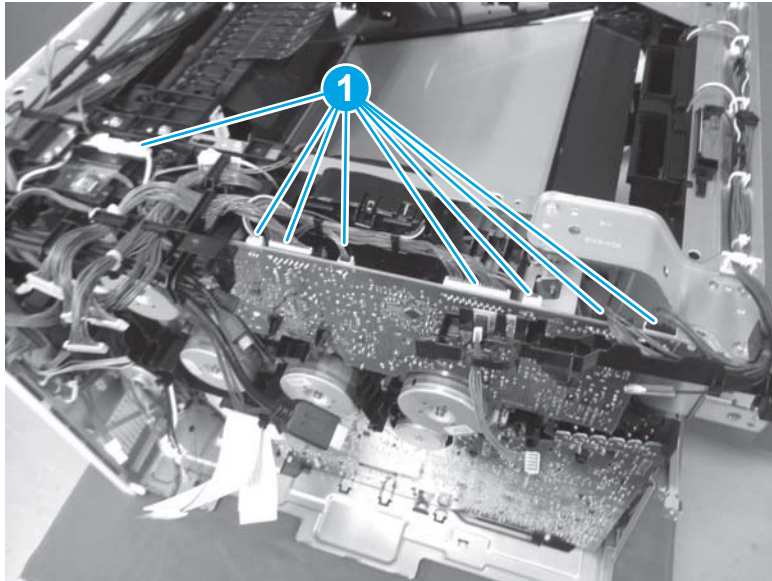


2. Release the cable (callout 1) from the retainer (callout 2). Remove one screw (callout 3), release five tabs (callout 4), and then remove the upper HVPS (callout 5).

 **Reinstallation tip:** The screw (callout 3) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1607** Remove the upper HVPS

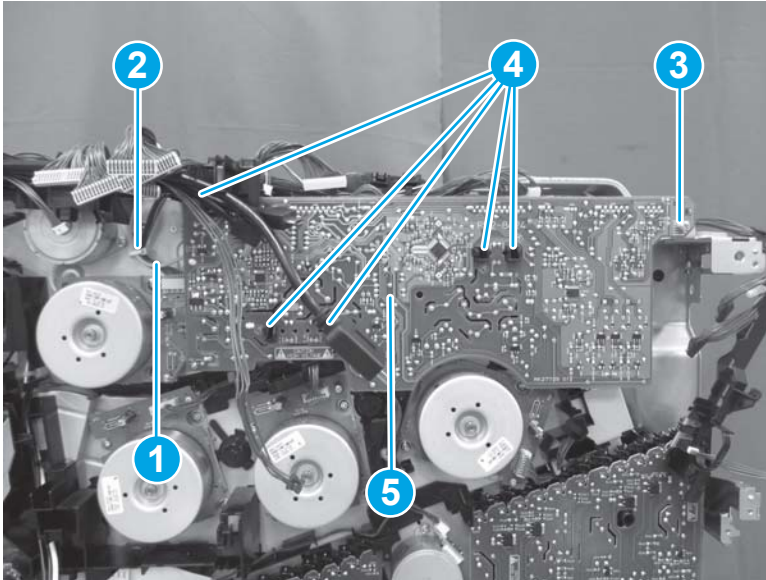


#### Step 25: Remove drum motor 1

- ▲ Disconnect one connector (callout 1), remove four screws (callout 2), and then remove drum motor 1 (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1608** Remove drum motor 1

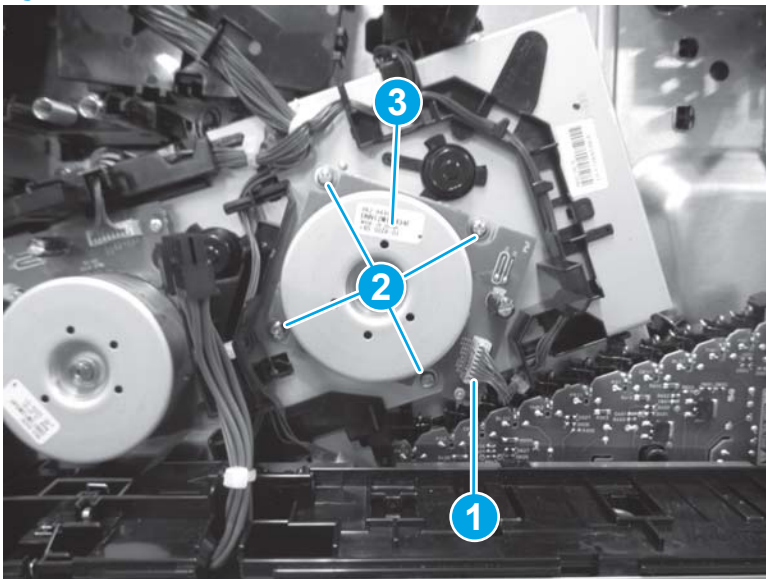

## Step 26: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Drum motor 2

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 6: Remove the formatter](#)
- [Step 7: Remove the formatter case](#)
- [Step 8: Remove the DC controller PCA](#)
- [Step 9: Remove the DC controller stay](#)
- [Step 10: Remove drum motor 2](#)
- [Step 11: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace drum motor 2.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Drum motor 2 part number
--------------------------

RM2-1956-000CN
----------------

Drum motor 2
--------------

---

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1609 Remove the formatter cover

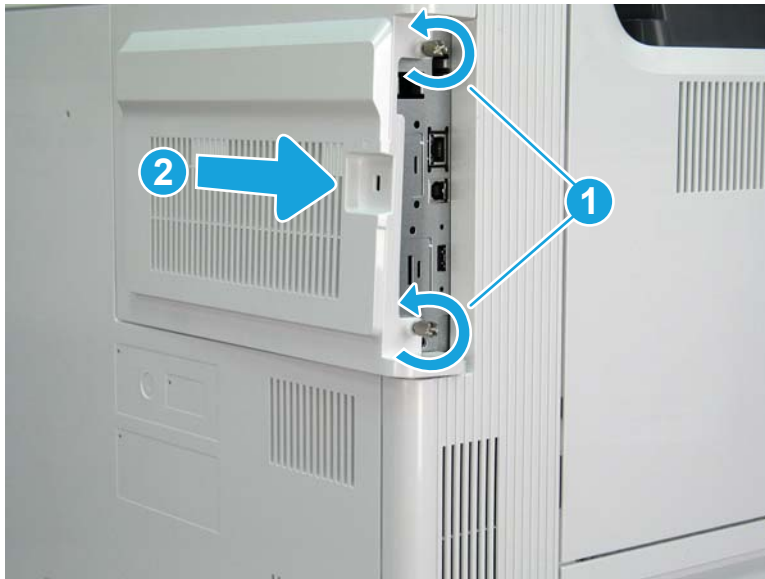

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1610 Remove the left rear cover

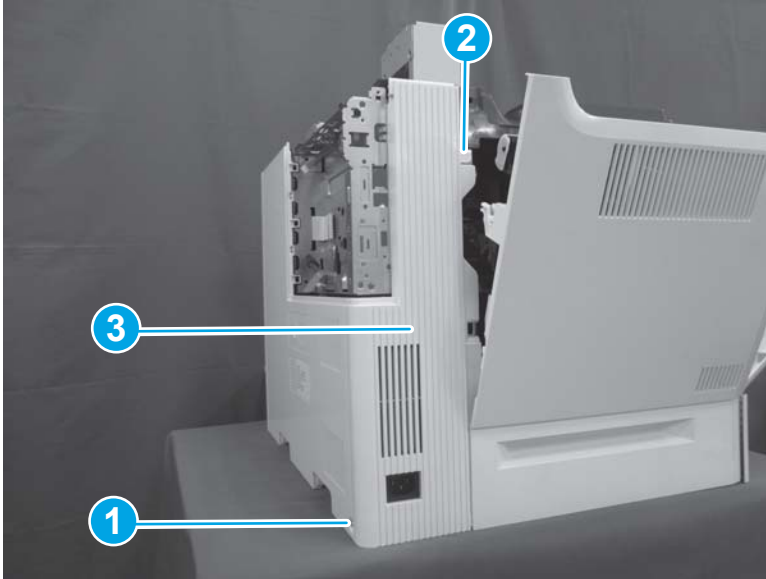


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1611 Install the left rear cover

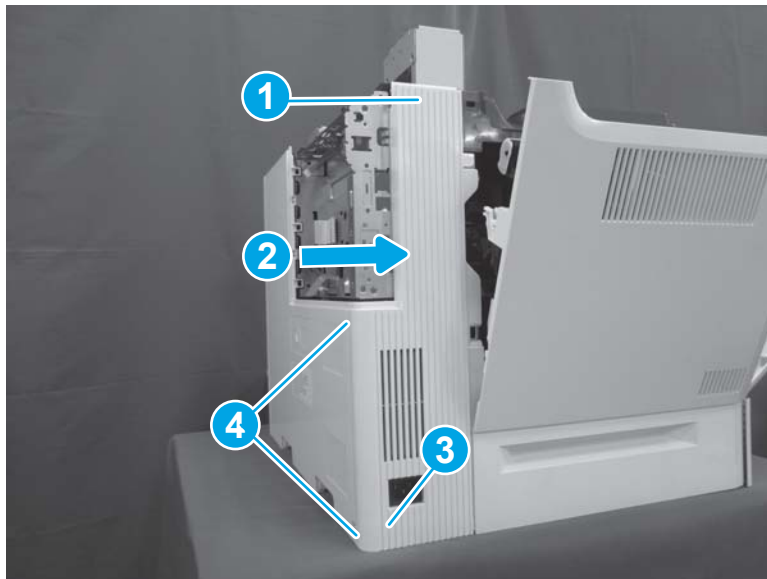


#### Step 3: Remove the rear cover


- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1612** Remove two screws and the rear cover

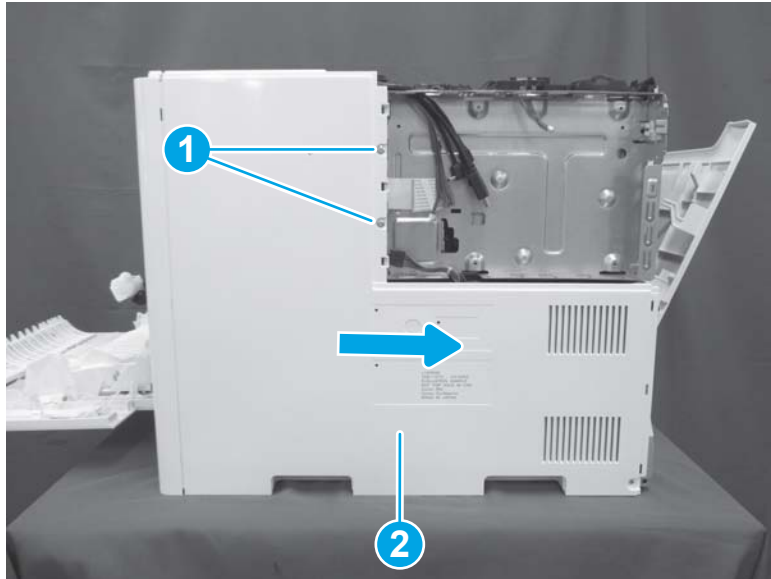

**Step 4: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)**

 **NOTE:** This step is for the fax printers. For non-fax printers, skip this step and go to [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#) on page 1020


1. Locate the fax PCA on the formatter.

**Figure 1-1613** Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1614 Remove the fax PCA

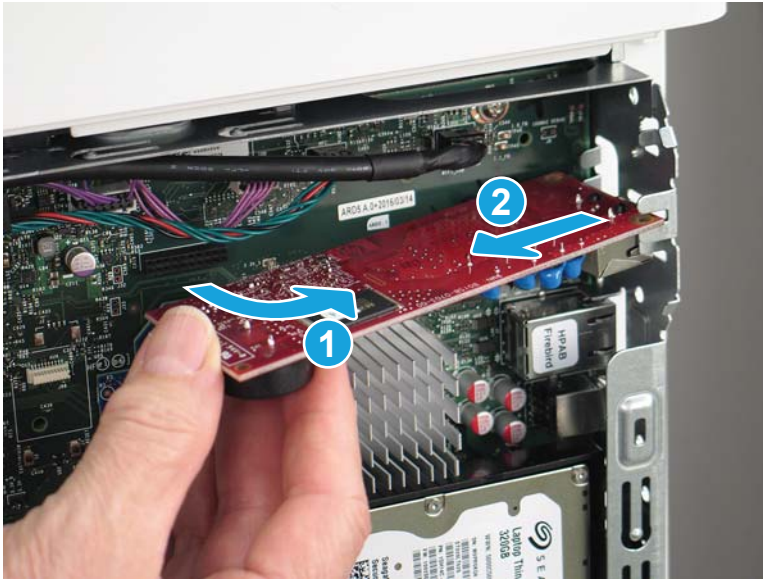

Step 5: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)


1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-1615 Release the HDD

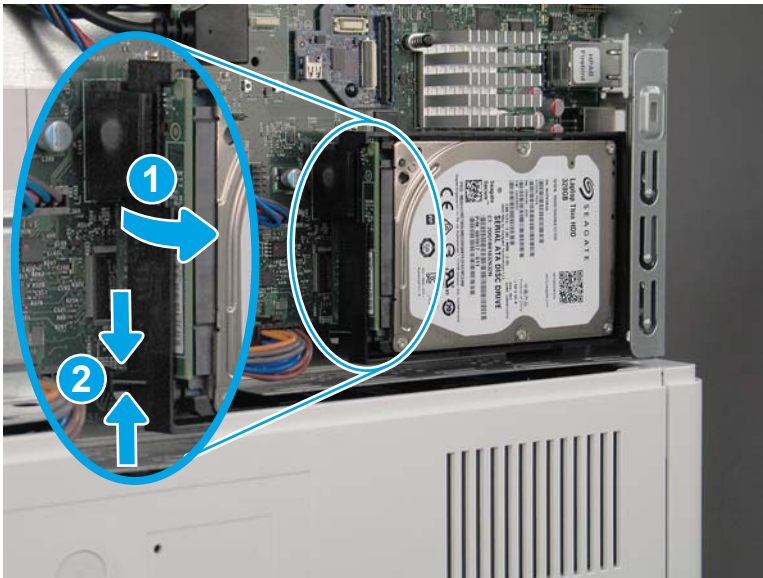


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1616 Remove the HDD

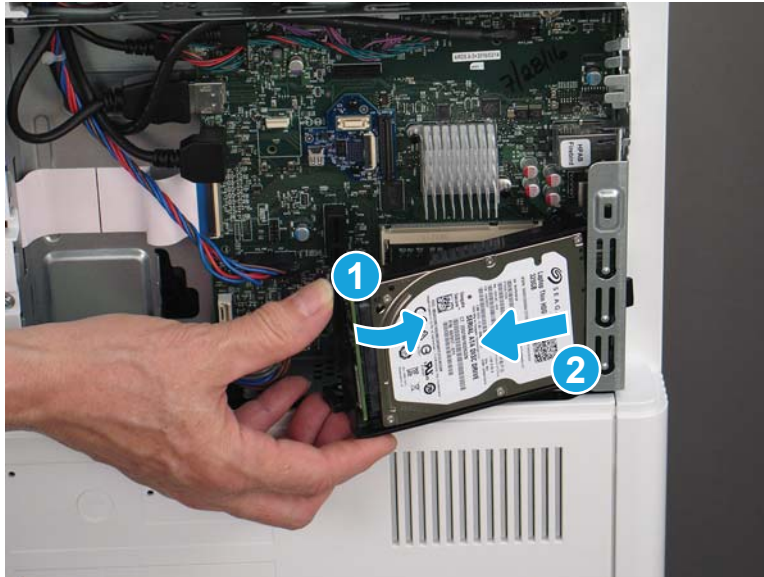

#### Step 6: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


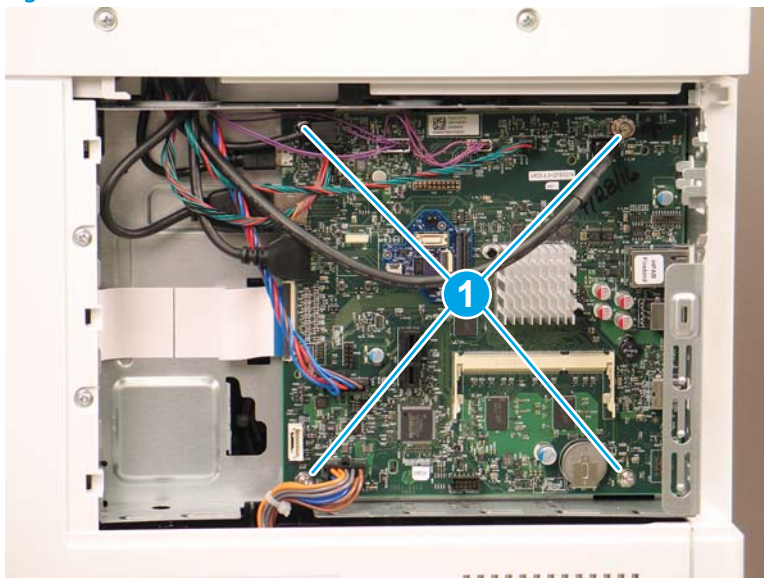
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1617 Remove the formatter






## Step 7: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

**Figure 1-1618** Disconnect one connector and remove four screws

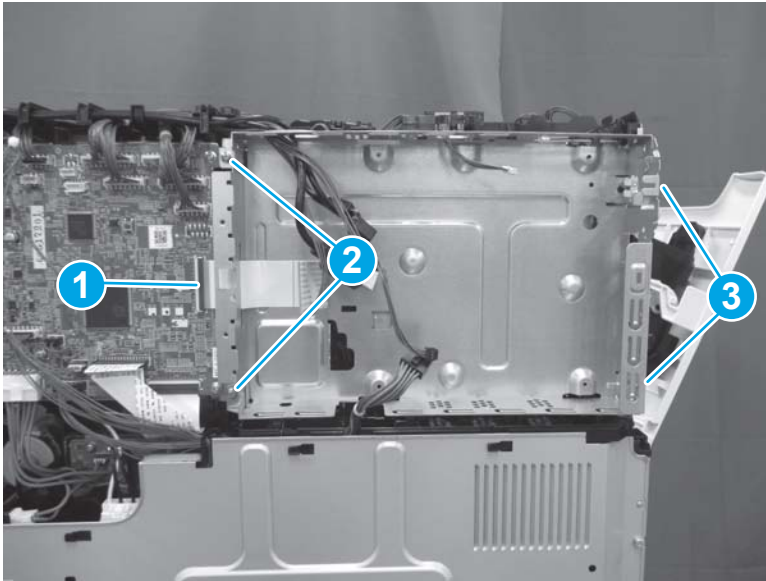

2. Tilt the bottom of the formatter case away from the printer.


**Figure 1-1619** Tilt the formatter case

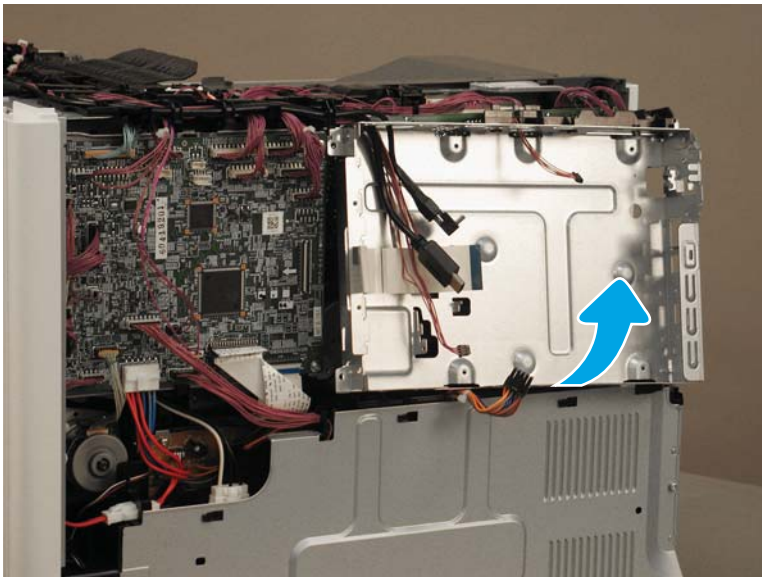



3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1620 Remove the cable guide

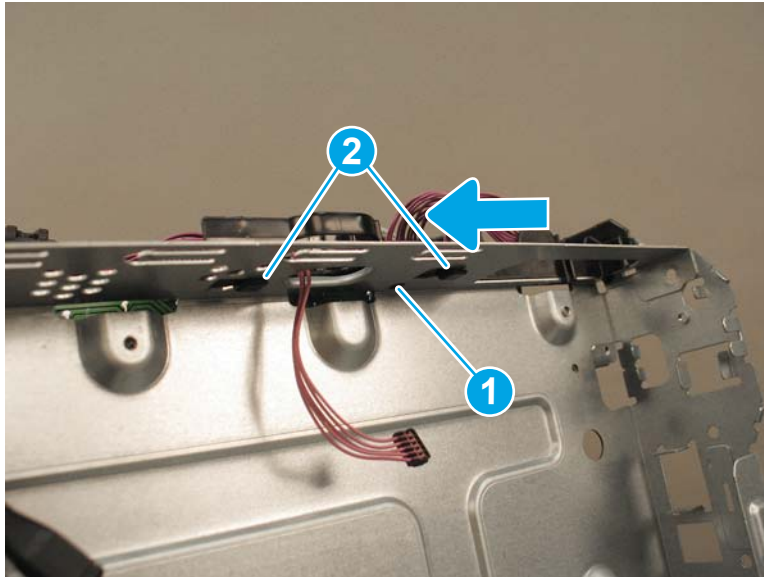


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1621 Install the cable guide

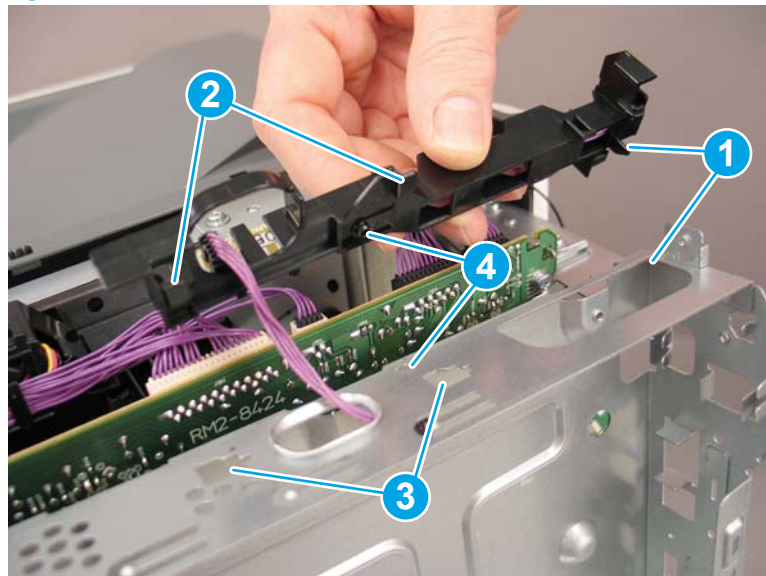

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.


Figure 1-1622 Check the IOD cable

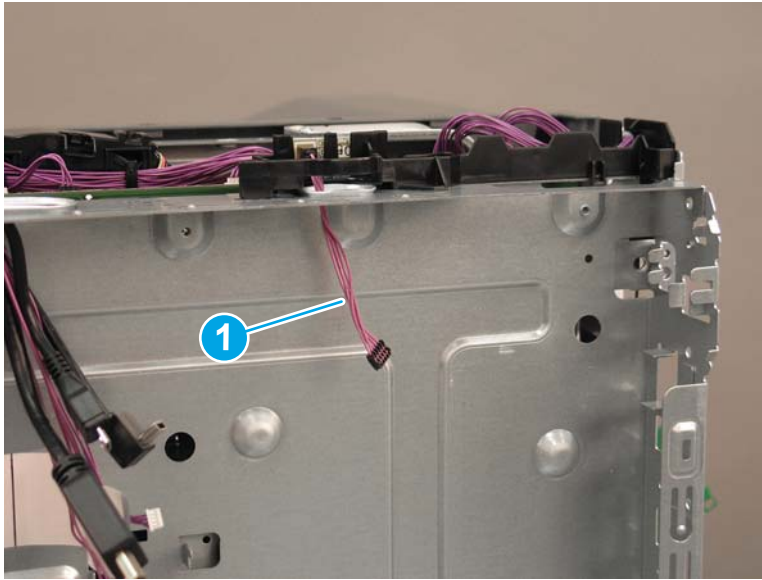

#### Step 8: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

Figure 1-1623 Remove the DC controller PCA

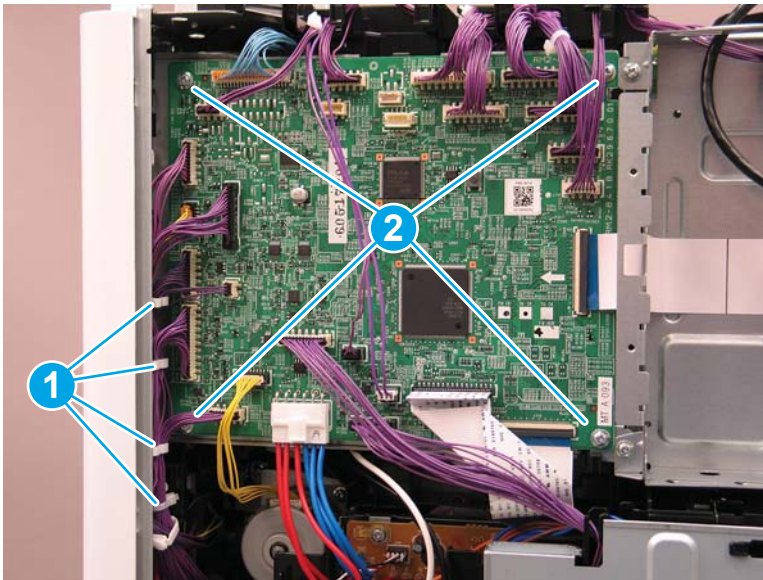

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-1624 Check the yellow cable

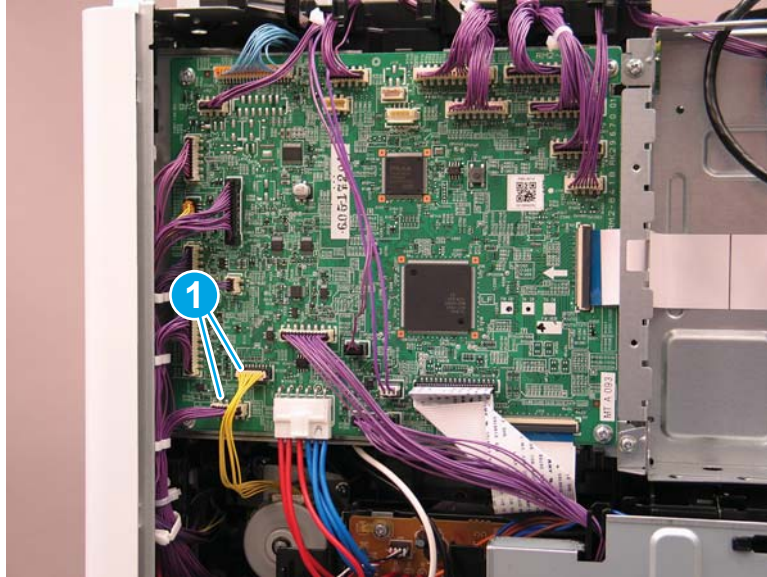

### Step 9: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.

Figure 1-1625 Remove the DC controller stay

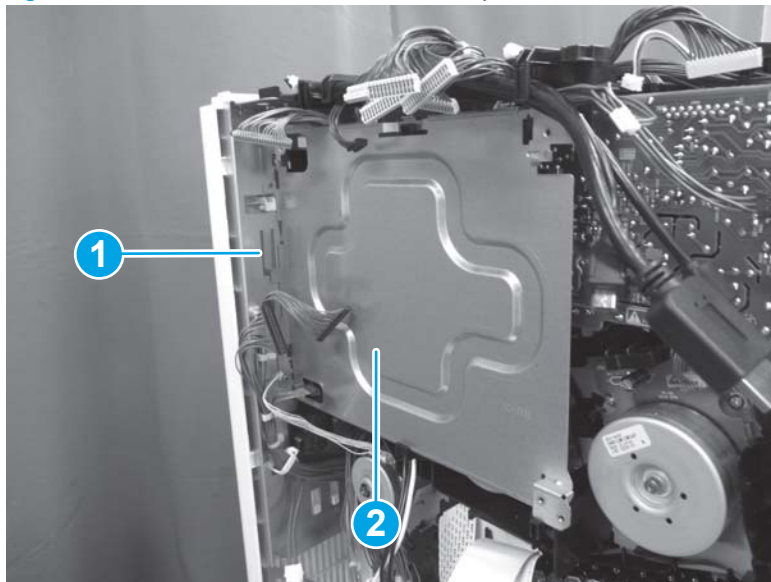


### Step 10: Remove drum motor 2

- ▲ Disconnect one connector (callout 1), remove four screws (callout 2), and then remove drum motor 2 (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1626 Remove drum motor 2

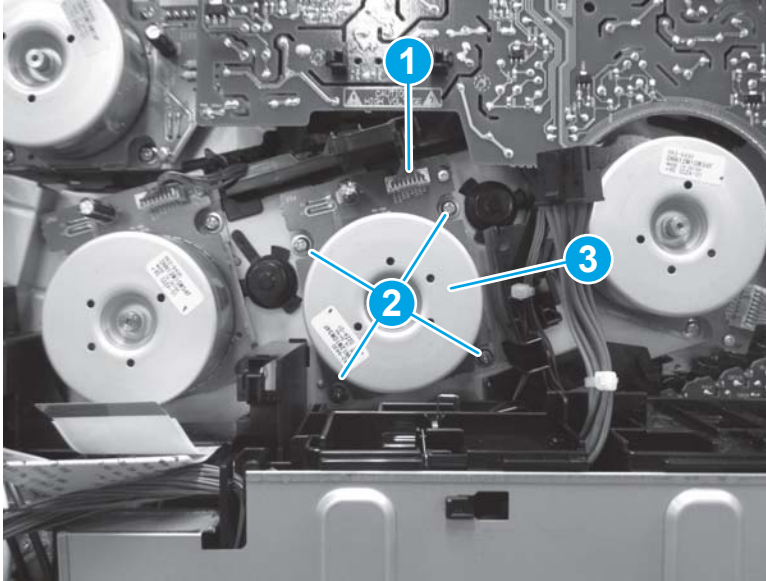



### Step 11: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Drum motor 3

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 6: Remove the formatter](#)
- [Step 7: Remove the formatter case](#)
- [Step 8: Remove the DC controller PCA](#)
- [Step 9: Remove the DC controller stay](#)
- [Step 10: Remove drum motor 3](#)
- [Step 11: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace drum motor 3.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)


---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Drum motor 3 part number	
RM2-1956-000CN	Drum motor 3

---



## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1627 Remove the formatter cover

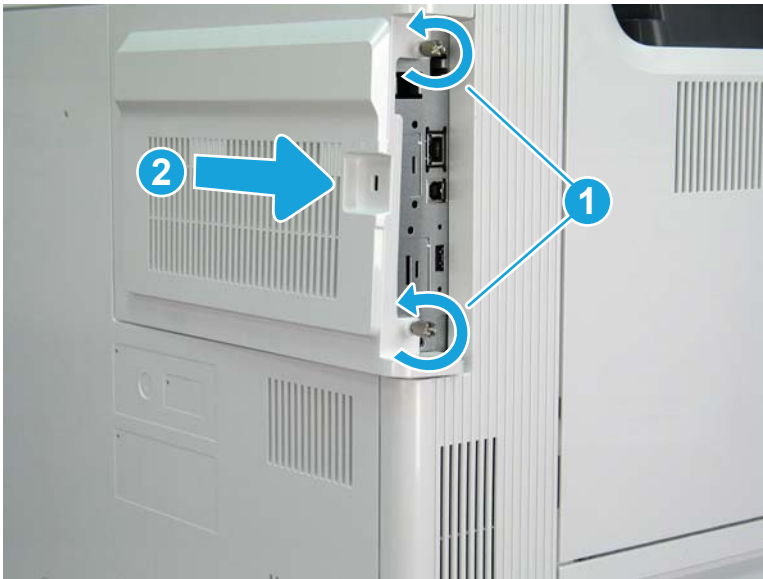

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1628 Remove the left rear cover

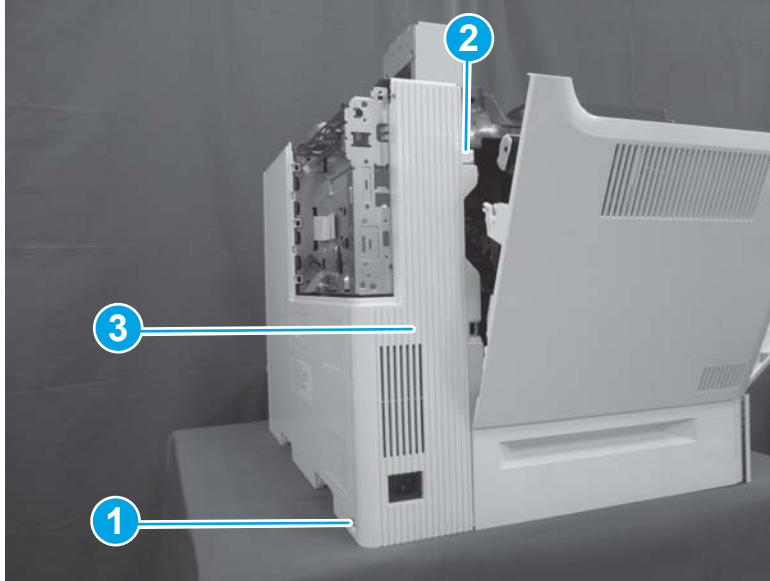


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.


Figure 1-1629 Install the left rear cover

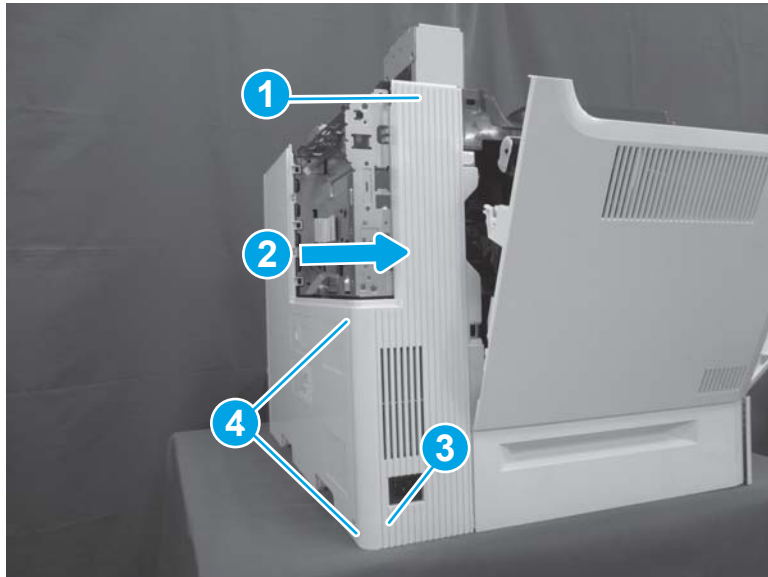


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.



 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1630** Remove two screws and the rear cover

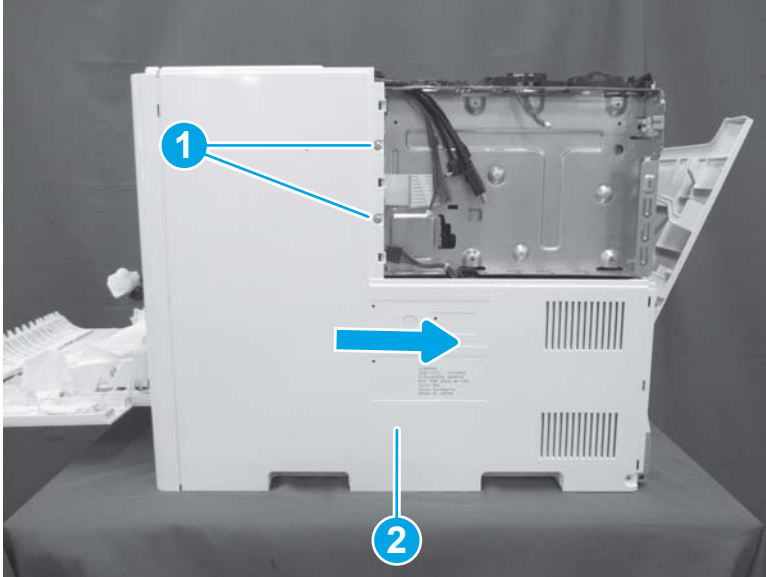

**Step 4: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)**

 **NOTE:** This step is for fax printers. For non-fax printers, skip this step and go to [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\) on page 1031](#)

1. Locate the fax PCA on the formatter.

**Figure 1-1631** Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1632 Remove the fax PCA



Step 5: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-1633 Release the HDD

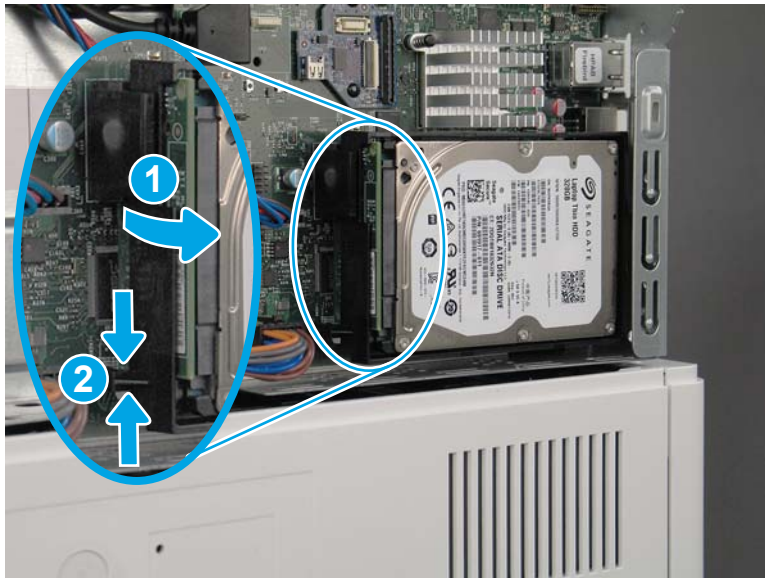


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1634 Remove the HDD



### Step 6: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


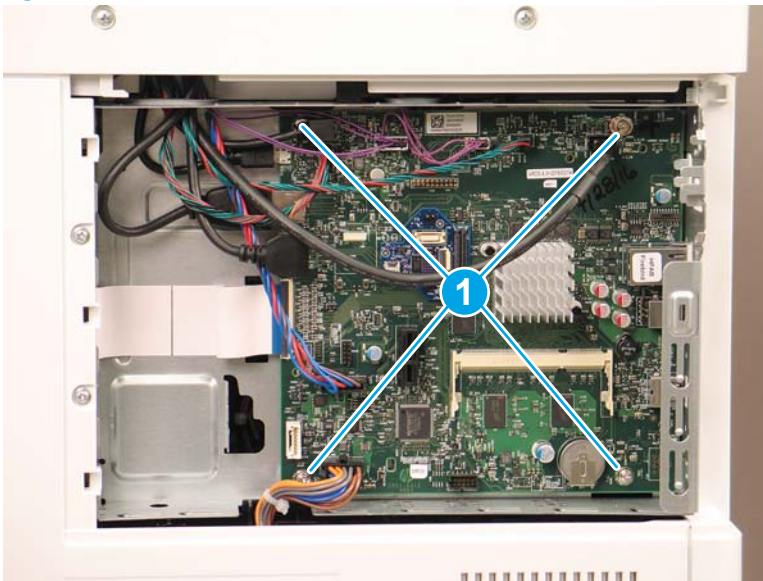

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1635 Remove the formatter




## Step 7: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

**Figure 1-1636** Disconnect one connector and remove four screws

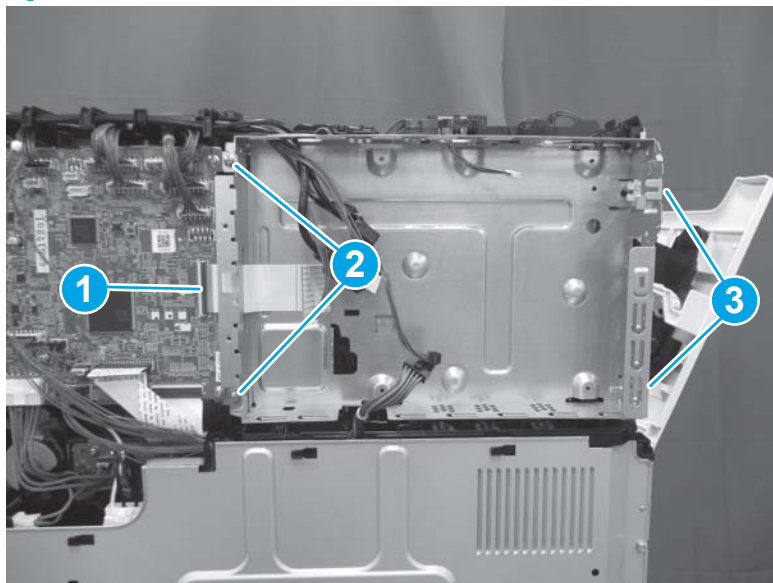

2. Tilt the bottom of the formatter case away from the printer.


**Figure 1-1637** Tilt the formatter case

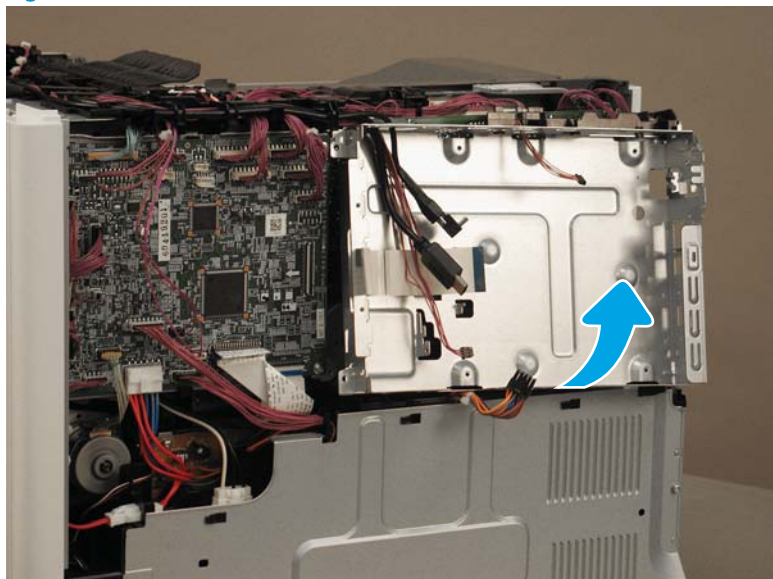



3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1638 Remove the cable guide

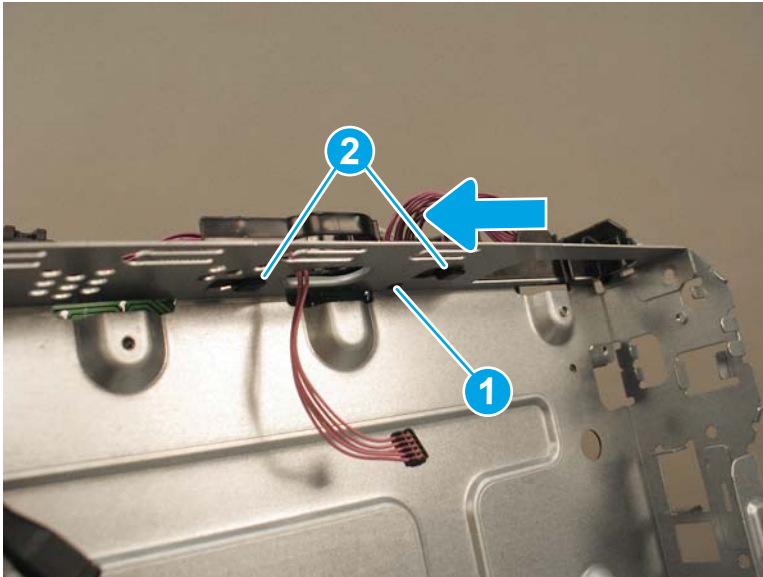


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1639 Install the cable guide

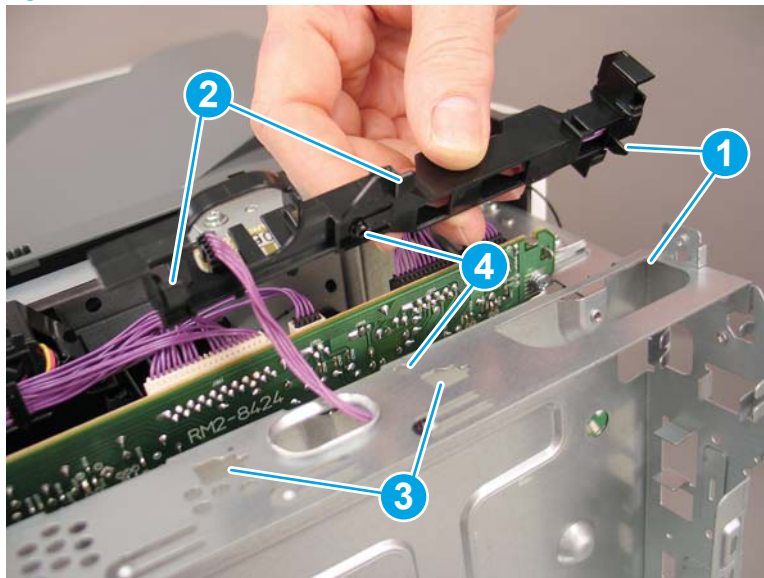

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.


**Figure 1-1640** Check the IOD cable

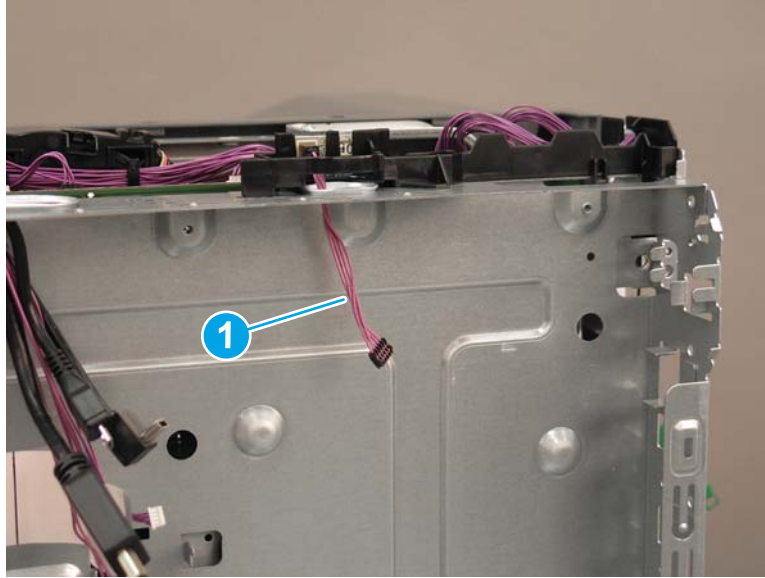

#### Step 8: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

**Figure 1-1641** Remove the DC controller PCA

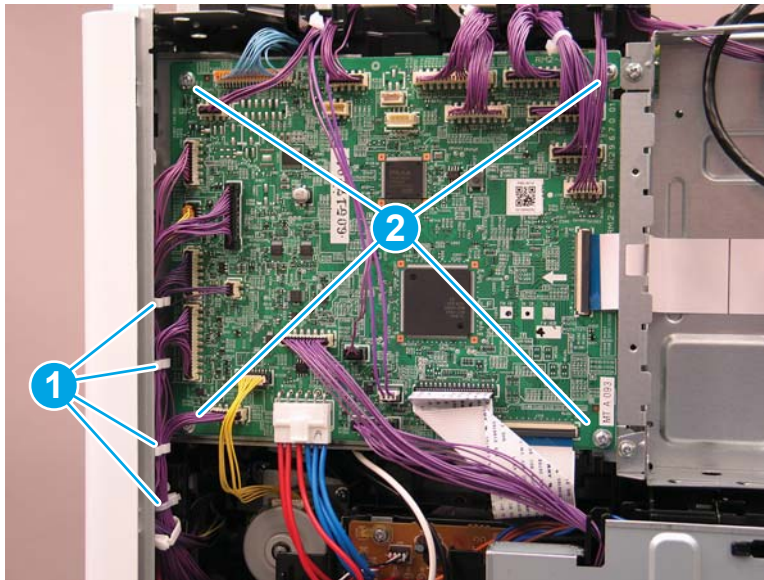

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-1642 Check the yellow cable



### Step 9: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.

Figure 1-1643 Remove the DC controller stay

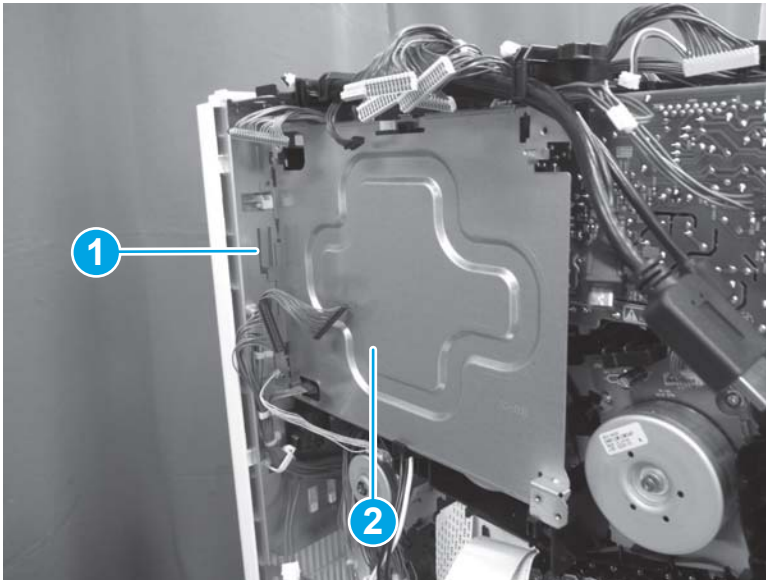

### Step 10: Remove drum motor 3

- ▲ Disconnect one connector (callout 1), remove four screws (callout 2), and then remove drum motor 3 (callout 3).


---

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---



Figure 1-1644 Remove drum motor 3

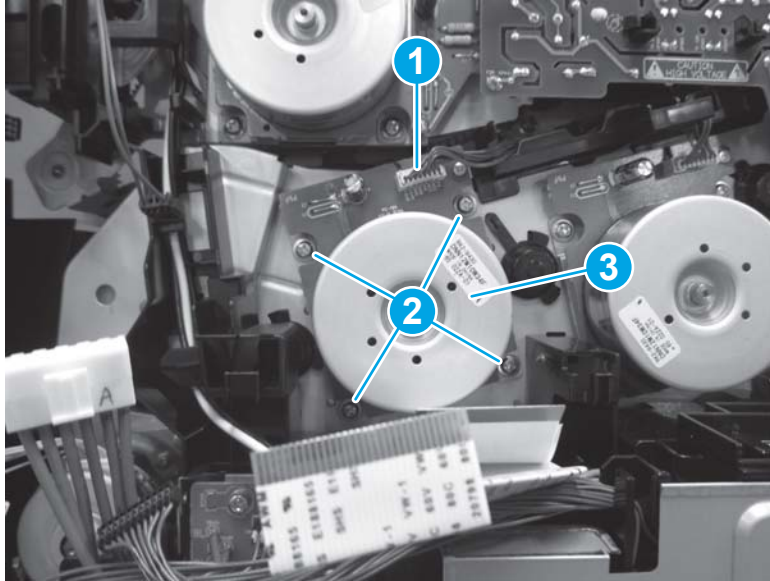

### Step 11: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Main drive assembly

- [Introduction](#)
- [Step 1: Remove the fuser](#)
- [Step 2: Remove the intermediate transfer belt \(ITB\)](#)
- [Step 3: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 4: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 6: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 7: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 16: Remove the output bin](#)
- [Step 17: Remove the formatter cover](#)
- [Step 18: Remove the left rear cover](#)
- [Step 19: Remove the rear cover](#)
- [Step 20: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 21: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 22: Remove the formatter](#)
- [Step 23: Remove the formatter case](#)
- [Step 24: Remove the DC controller PCA](#)
- [Step 25: Remove the DC controller stay](#)
- [Step 26: Remove the upper high-voltage power supply \(HVPS\)](#)
- [Step 27: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 28: Remove the lower high-voltage power supply \(HVPS\)](#)
- [Step 29: Remove the main drive assembly](#)

- [Step 30: Unpack the replacement assembly](#)

## Introduction

This document provides the procedures to remove and replace the main drive assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to

[www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Main drive assembly part number	
RM2-1927-000CN	Main drive assembly

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the fuser


1. Open the right door.

Figure 1-1645 Open the right door



2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).

Figure 1-1646 Remove the fuser

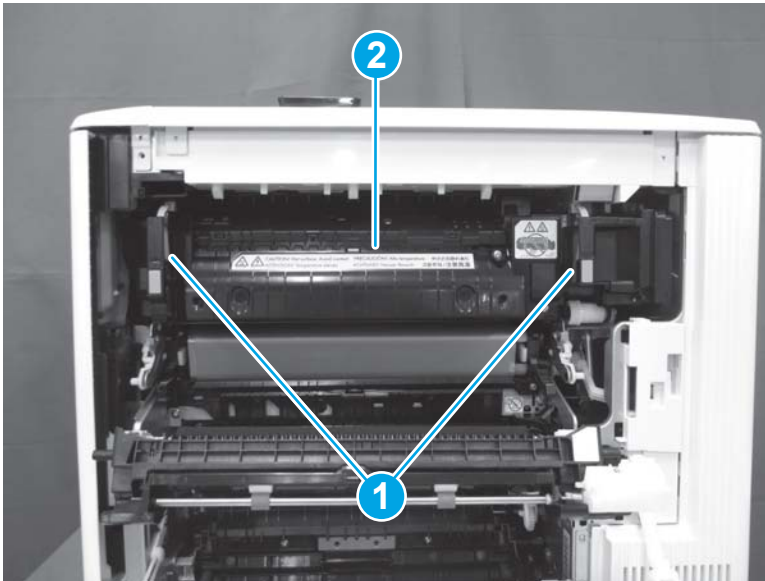

**Step 2: Remove the intermediate transfer belt (ITB)**


1. Open the right door.

Figure 1-1647 Open the right door




2. Release the blue latch (callout 1), and then lower the transfer assembly (callout 2).

Figure 1-1648 Lower the transfer assembly

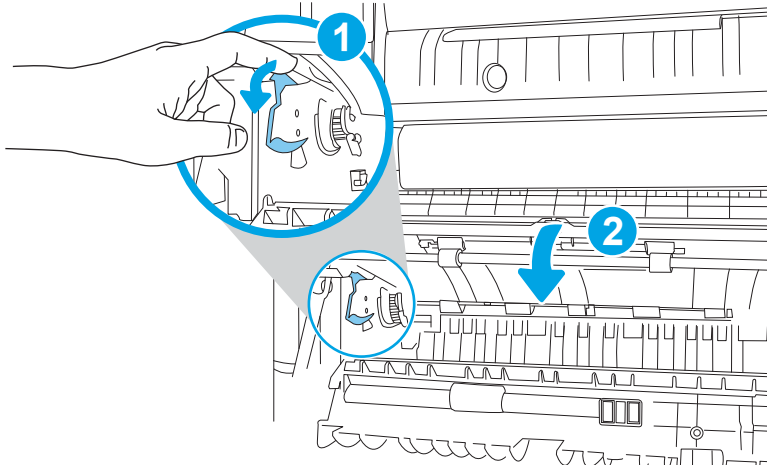


3. Grasp the two blue handles on the ITB.

Figure 1-1649 Grasp the two blue handles

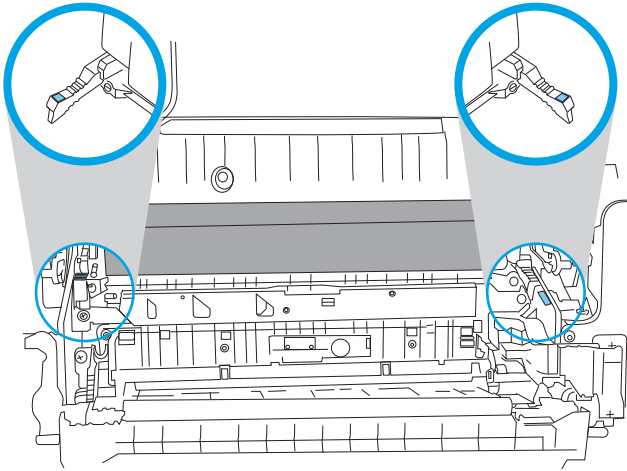


4. Pull the ITB partially out of the printer.

Figure 1-1650 Pull the ITB partially out of the printer

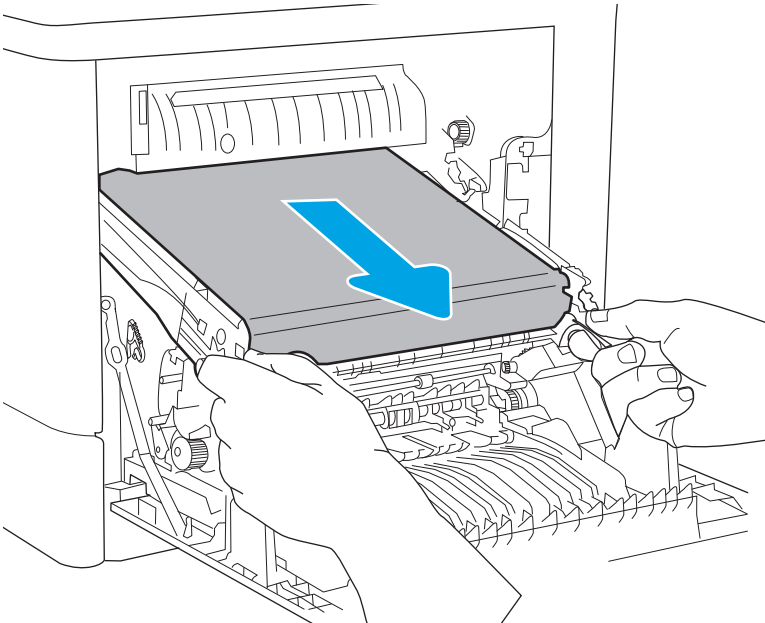


5. Grasp the outside edges of the ITB to support it, and then remove the ITB from the printer.

**Figure 1-1651** Remove the ITB

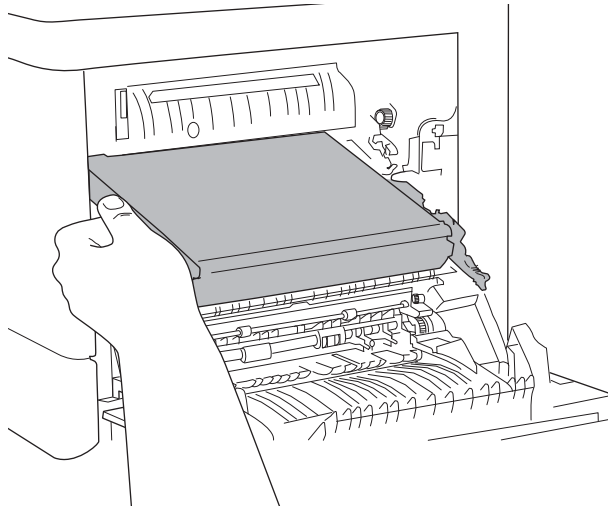

### Step 3: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for Flow printers. For non-Flow printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-1652** Tilt the control panel and open the document feeder





2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1653 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1654 Remove the cover



4. Open the connector latch to release the keyboard flex cable.

Figure 1-1655 Disconnect the keyboard flex cable

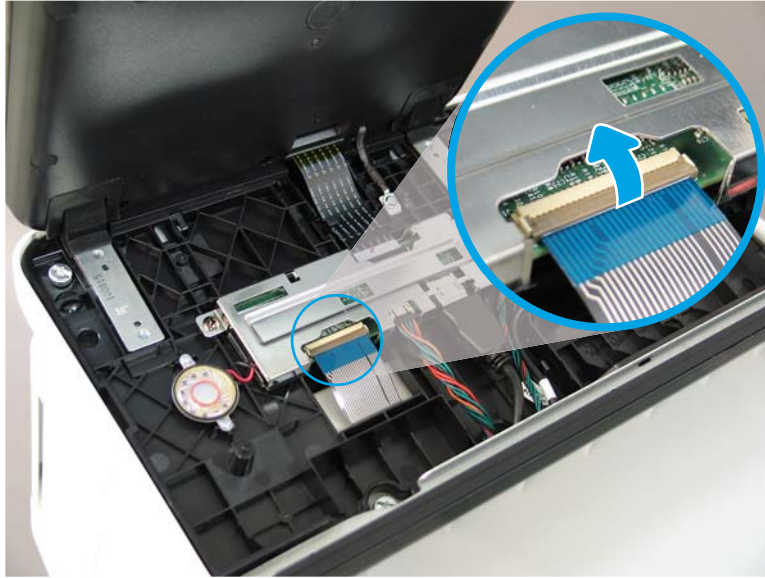

5. Slide the keyboard tray out until it stops.

Figure 1-1656 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1657 Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1658 Remove the keyboard



#### Step 4: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#).

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1659 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1660 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1661 Remove the cover



4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.


Figure 1-1662 Disconnect the keyboard flat cable (keyboard models only)

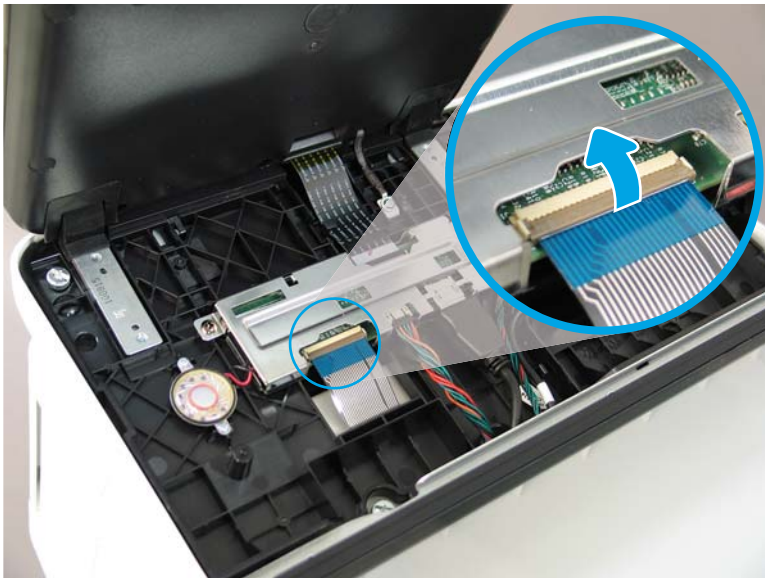




5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-1663 Disconnect connectors

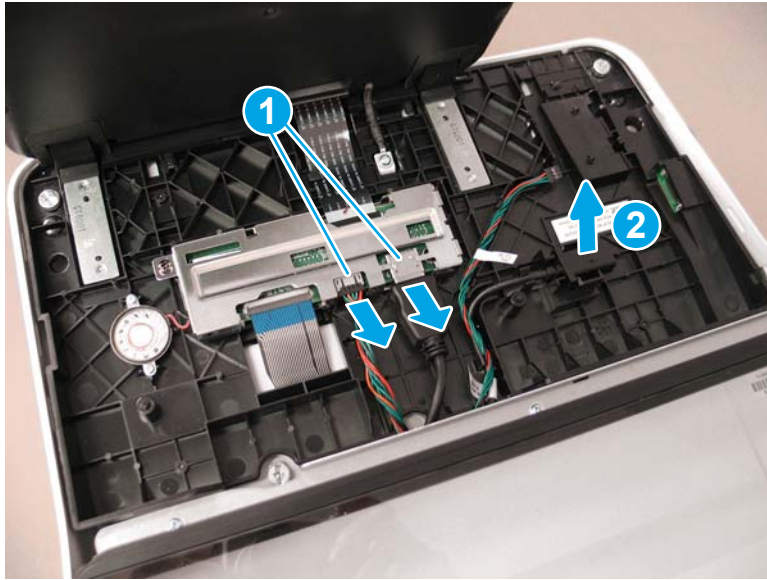


6. Remove three thumbscrews (callout 1).

Figure 1-1664 Remove three thumbscrews

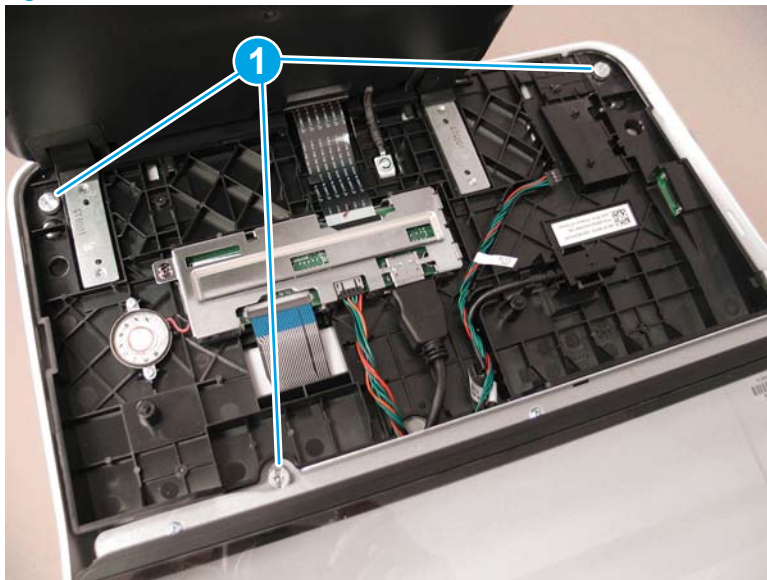

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

**Figure 1-1665** Remove the control panel

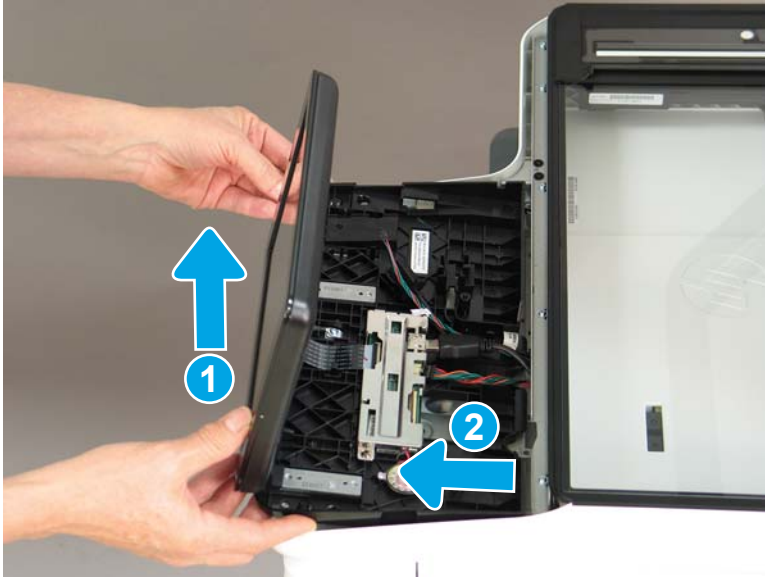


**Step 5: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1071

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

**Figure 1-1666** Remove the SCB cover

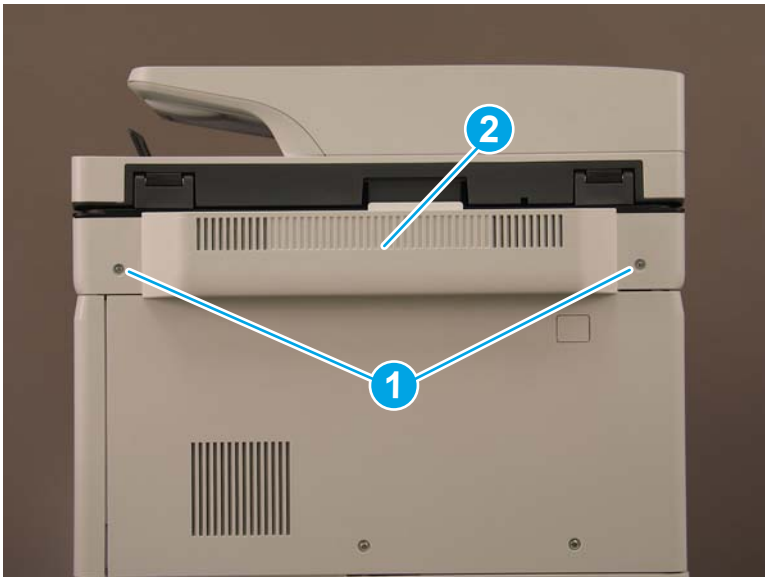

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

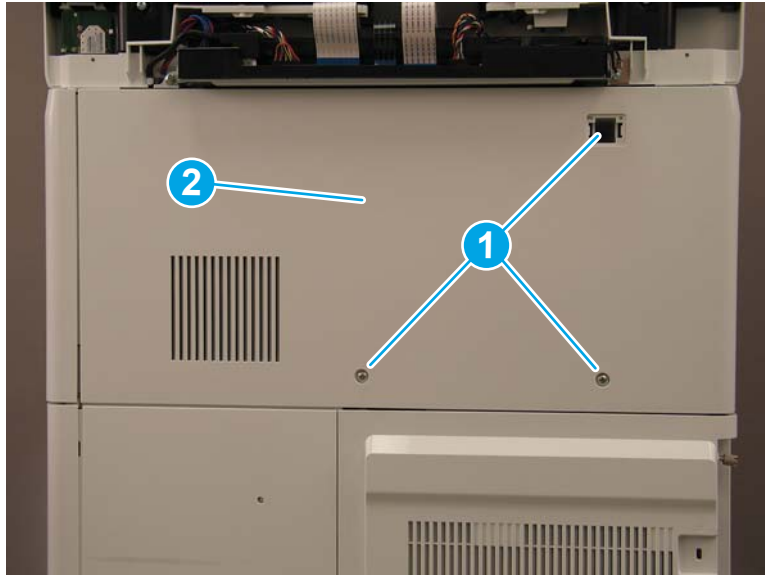


Figure 1-1667 Remove the small cover




- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

Figure 1-1668 Remove the stapler/stacker rear cover




3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-1669 Remove the upper rear cover

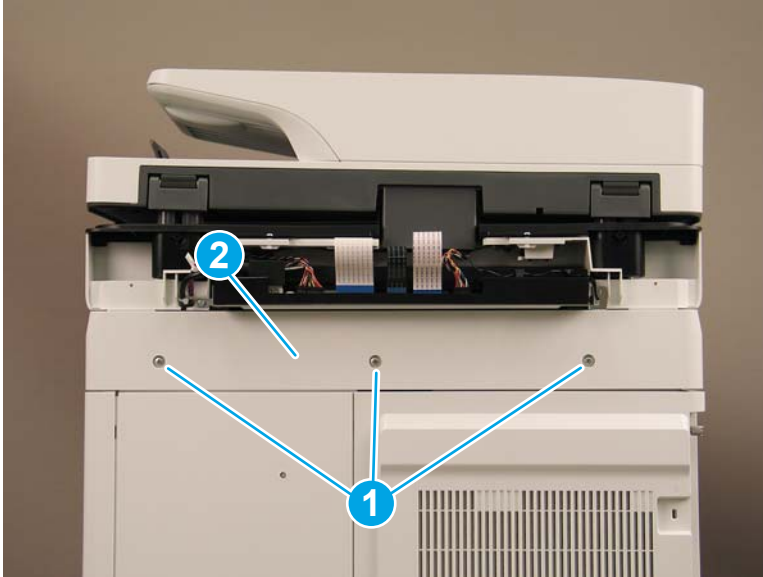


4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-1670 Remove the formatter cover

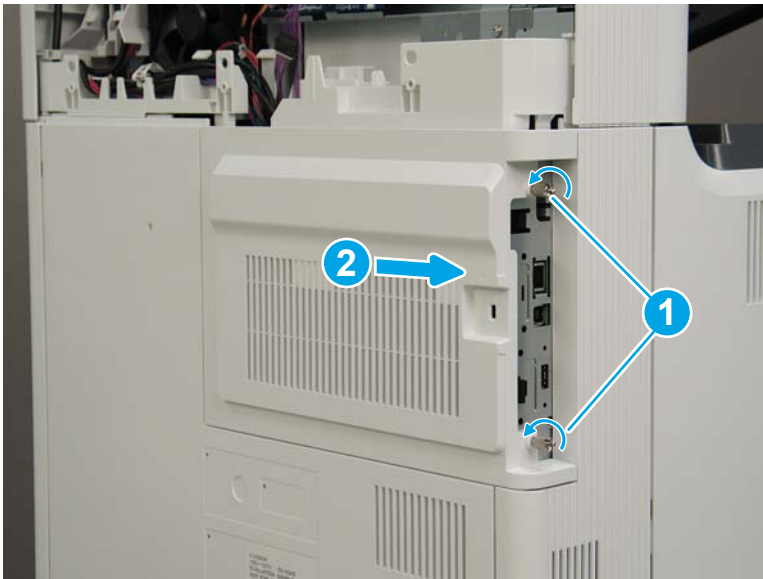


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-1671 Cable routing for M681dh, M681f, and Flow M681f

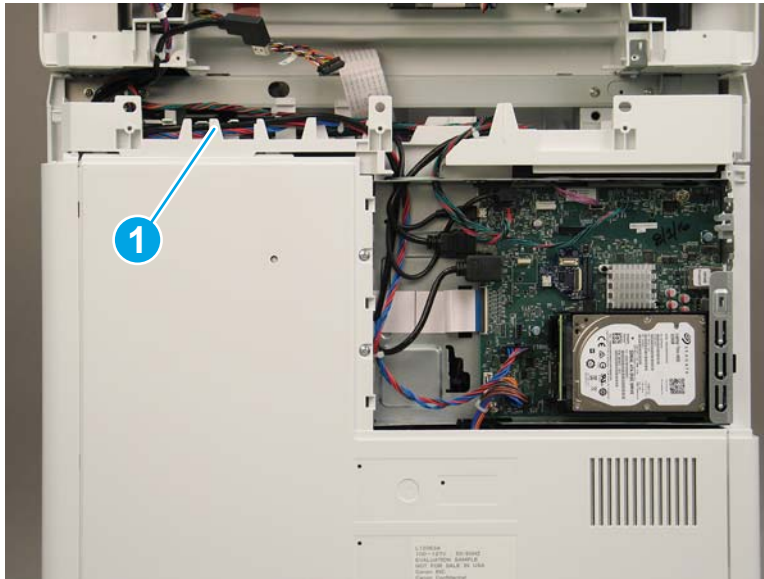

6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1672 Disconnect two connectors

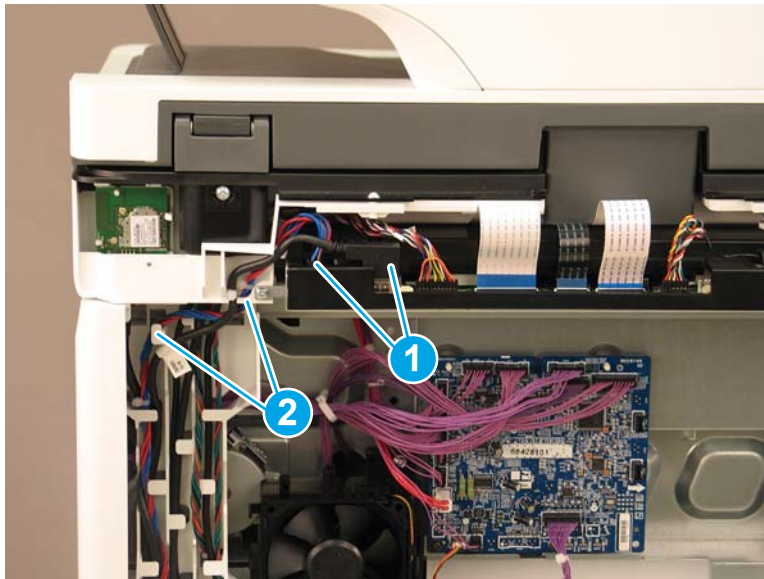


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1673 Disconnect five connectors




8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1674 Disconnect the wireless connector

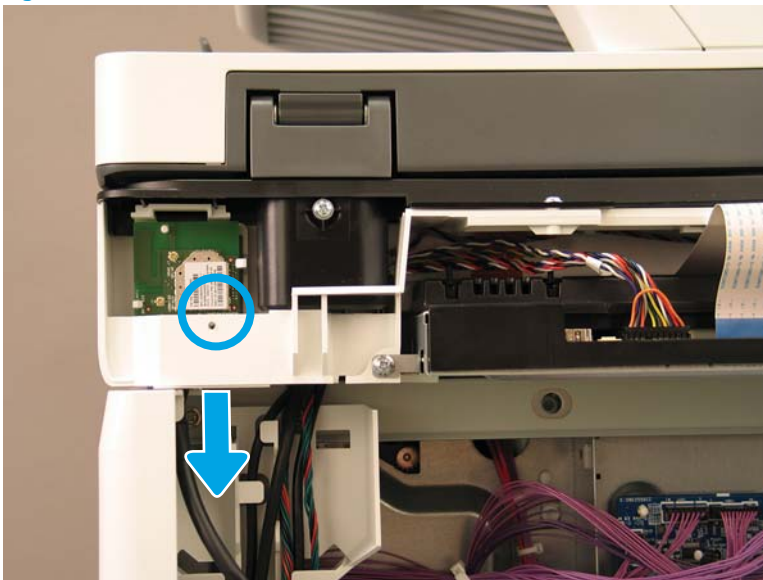


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1675 Release the cables

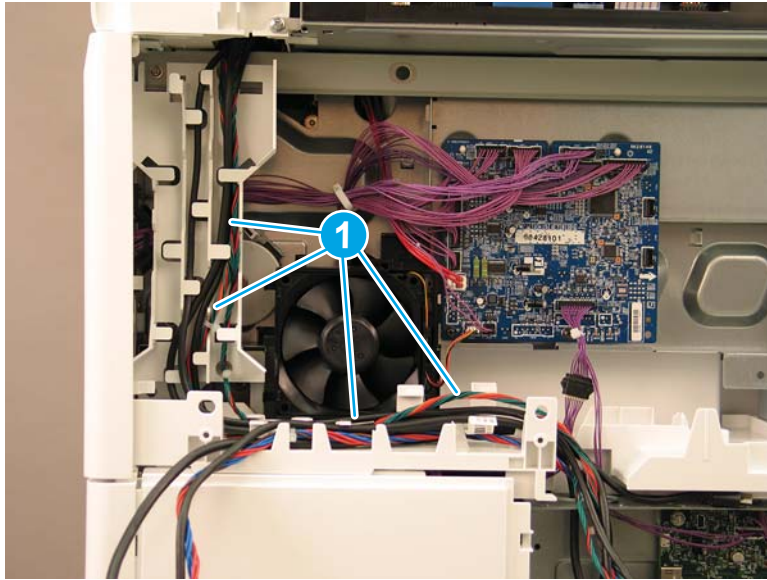

10. At the back of the printer, remove four screws (callout 1).


Figure 1-1676 Remove four screws

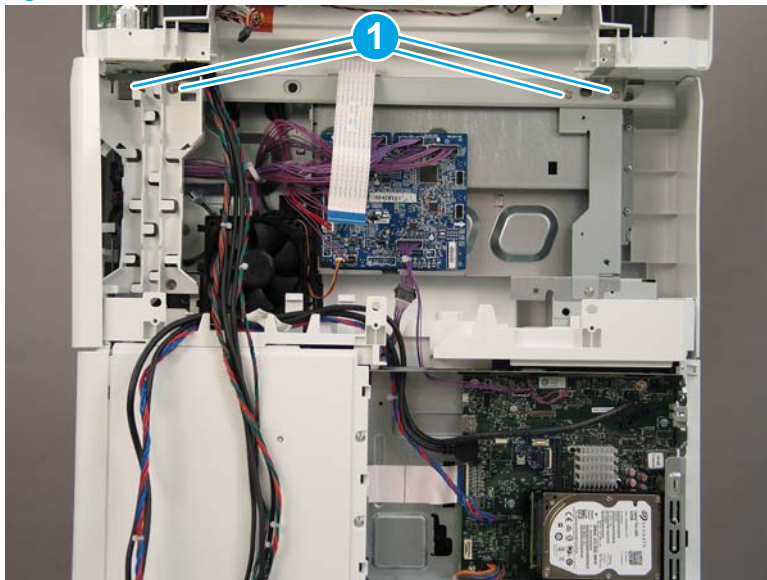



11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1677 Remove three screws

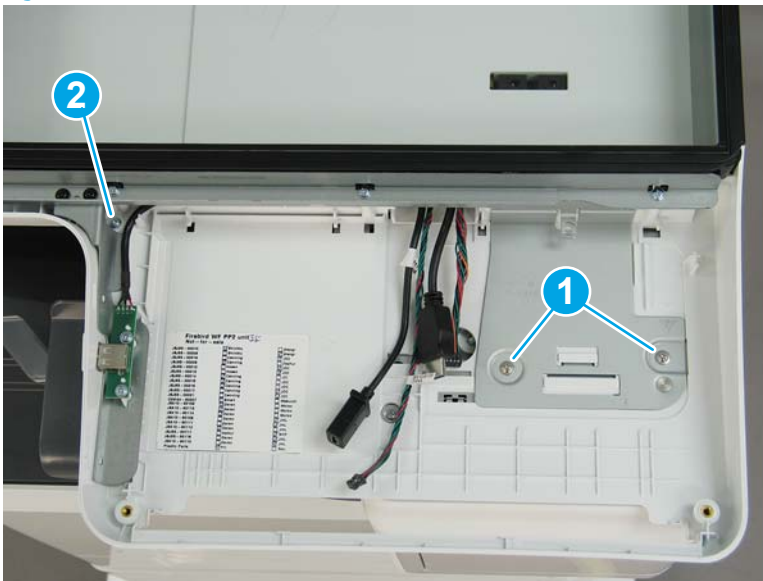

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-1678 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-1679 Remove the wireless card

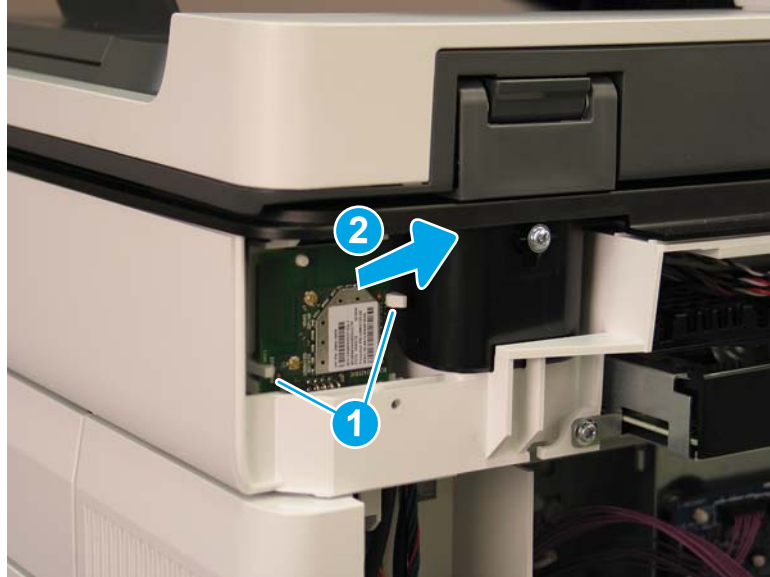

- ii. Connect the cable to the wireless card (callout 1).


Figure 1-1680 Connect the wireless card connector






- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-1681 Reinstall the wireless card

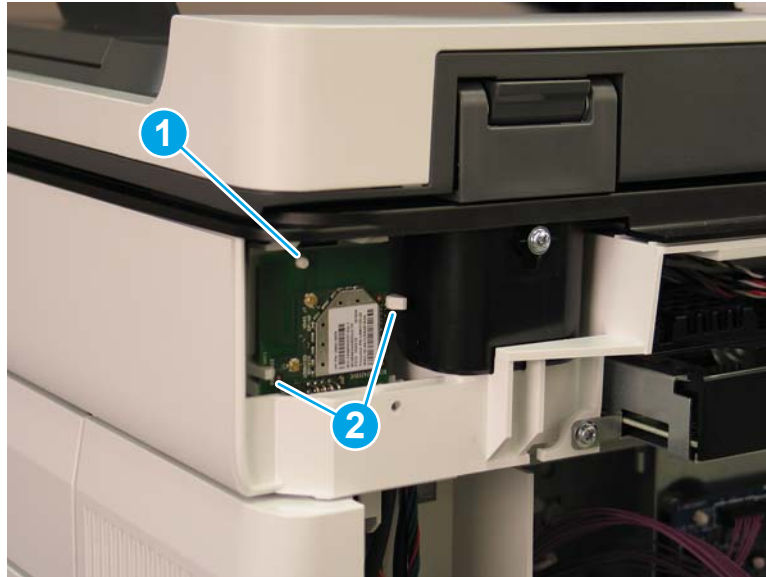


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1682 Install the SCB cables

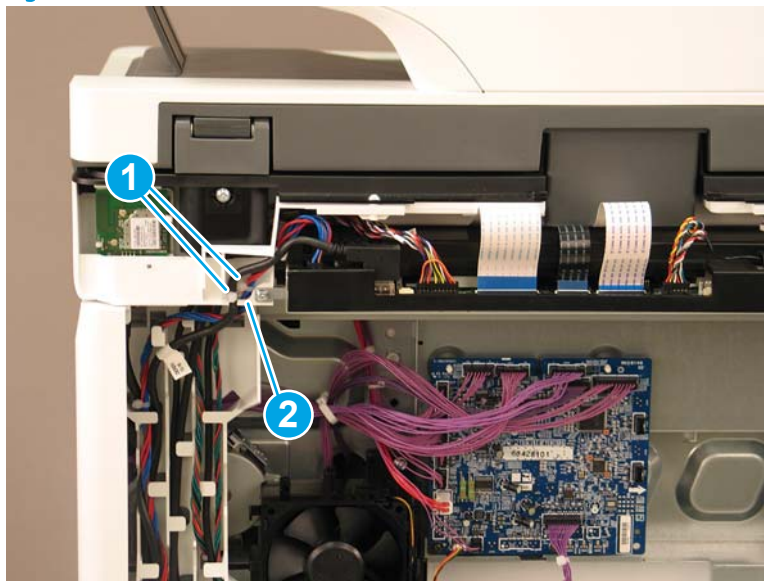

#### Step 6: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the Flow M681z/Flow M682z/Flow E67660z printers. For other printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)


1. Open the front door.

Figure 1-1683 Open the front door




2. Open the stapler door.

Figure 1-1684 Open the stapler door

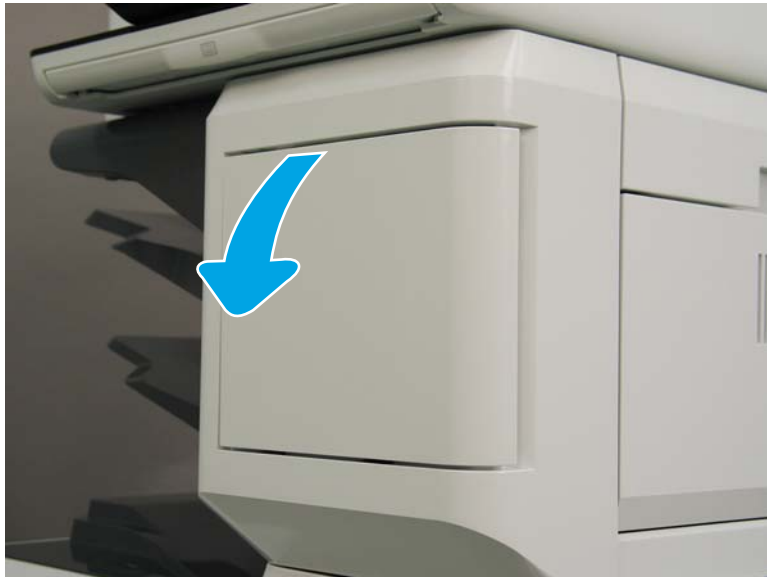


3. Release the latch, and then remove the staple cartridge.

Figure 1-1685 Remove the staple cartridge

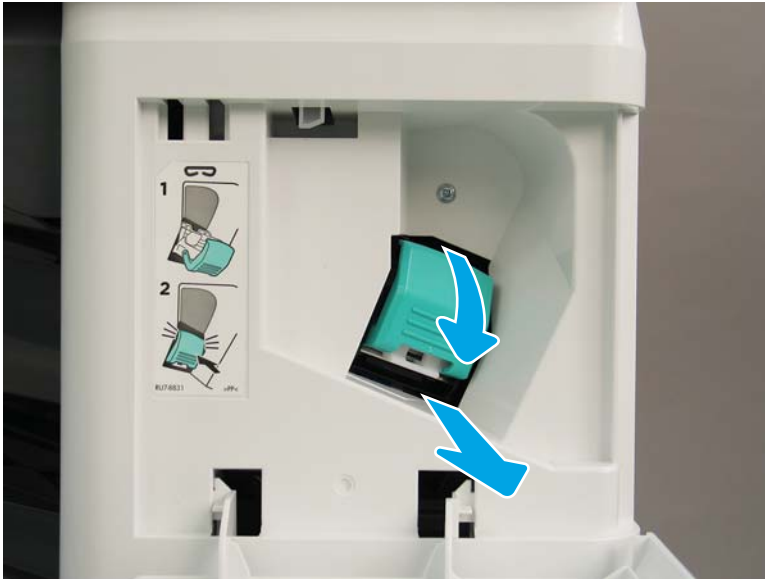


4. Remove one screw (callout 1).

Figure 1-1686 Remove one screw

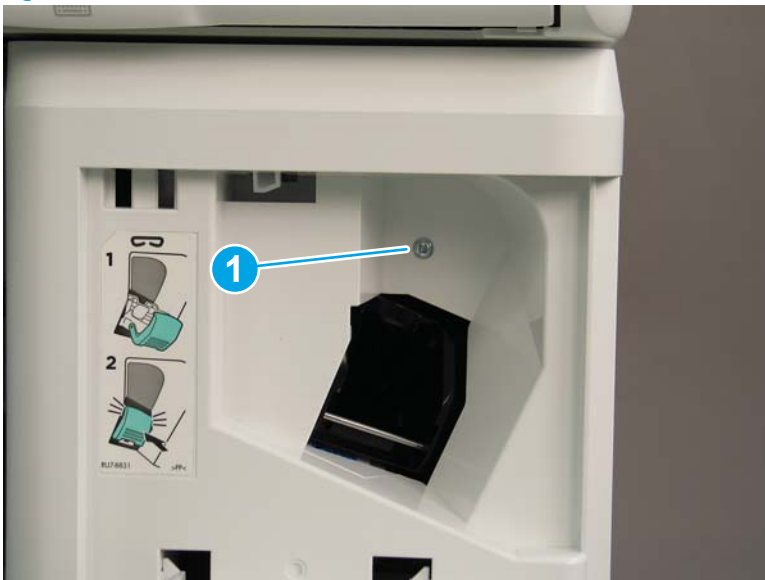


5. Rotate the stapler cover to the right to remove it.

Figure 1-1687 Remove the stapler cover

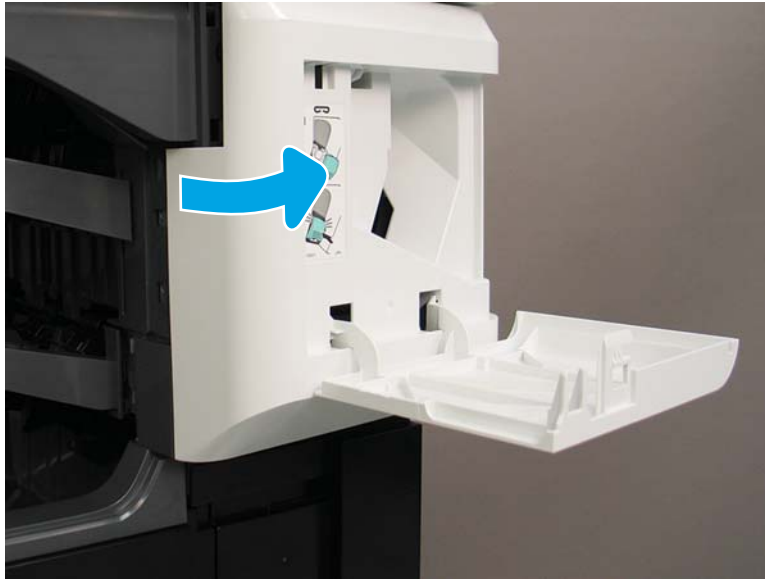


6. Remove one screw (callout 1).

Figure 1-1688 Remove one screw

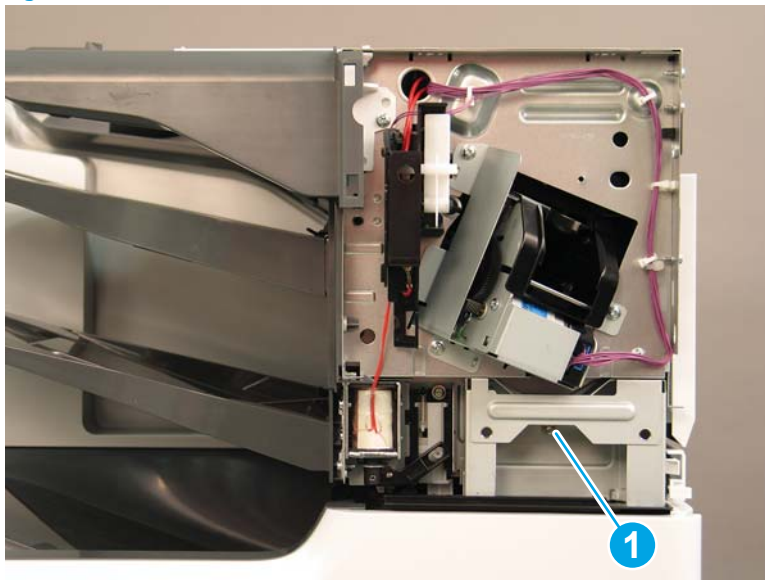


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1689 Remove the stapler/stacker right upper cover

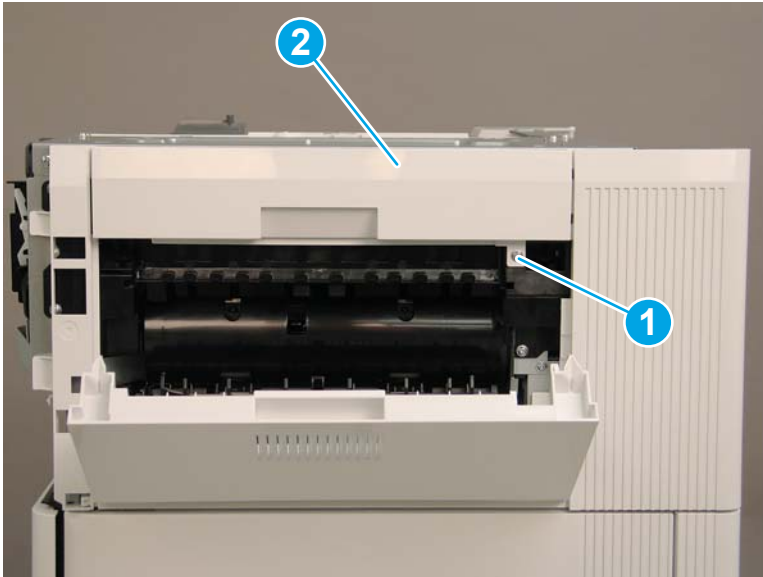


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1690 Remove the stapler rear cover

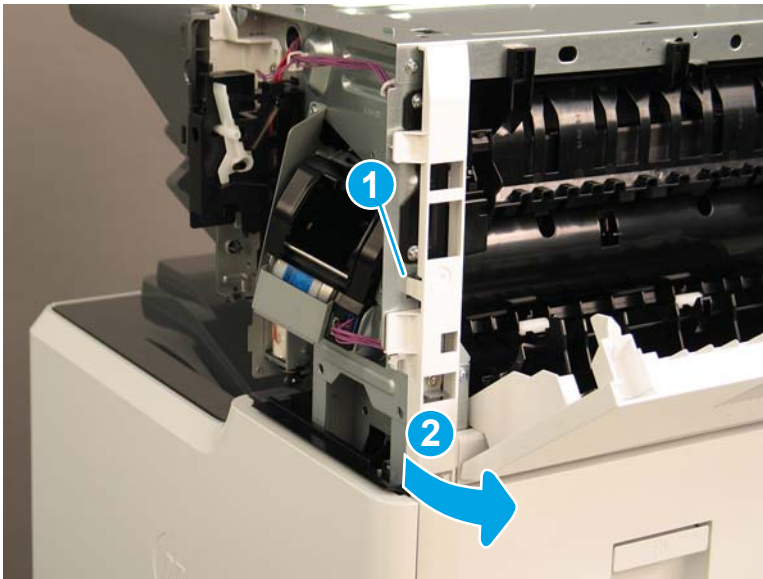


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1691 Remove the stapler/stacker rear corner cover

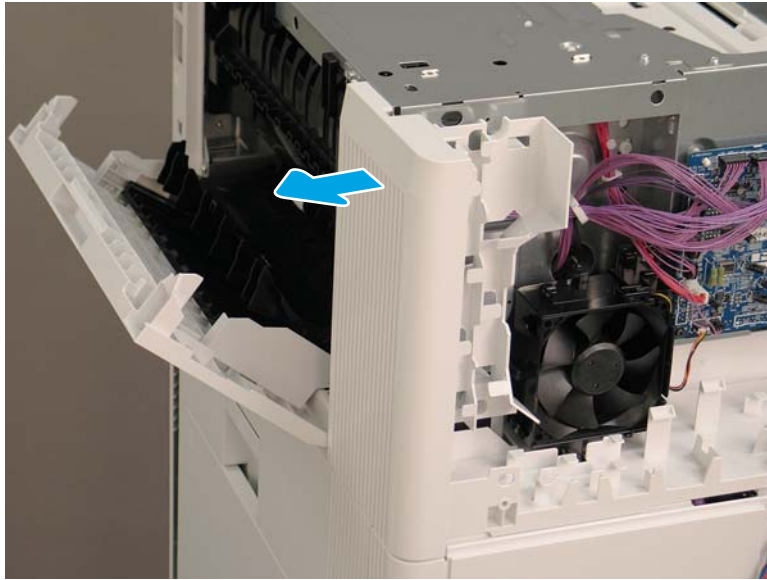

10. Remove two screws (callout 1).


Figure 1-1692 Remove two screws

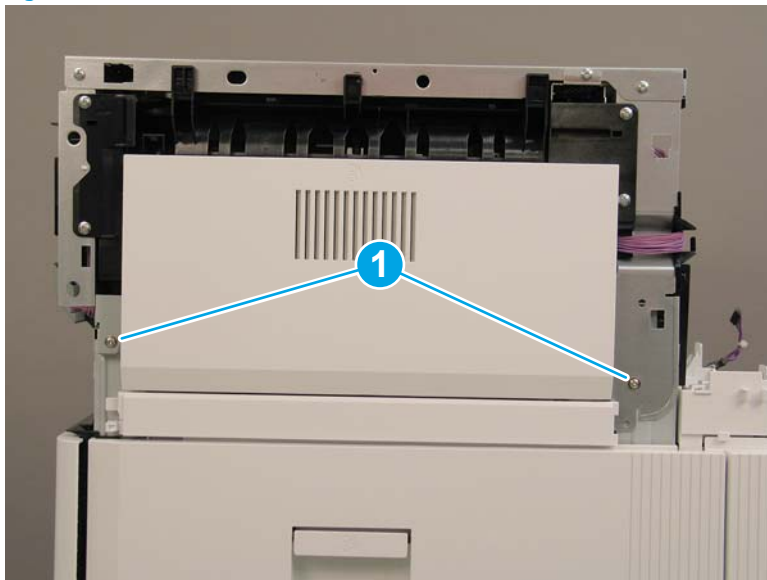




11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1693 Remove the cable guide

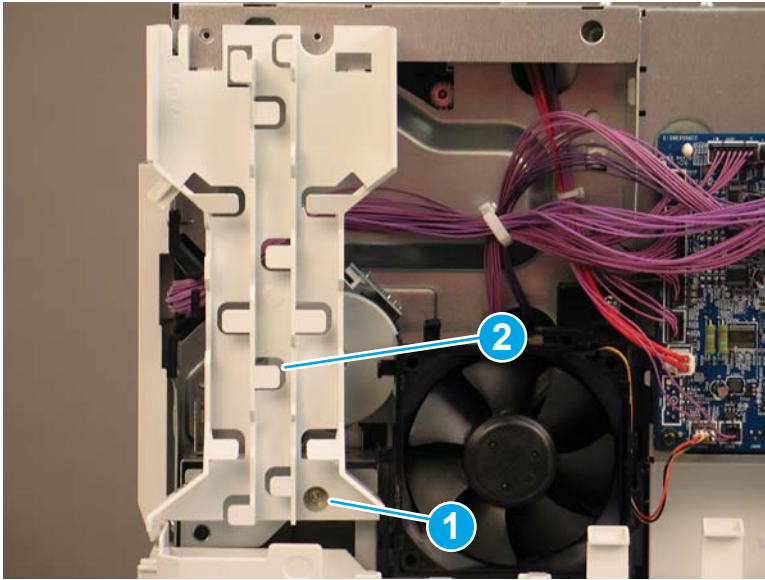

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1694 Disconnect one connector

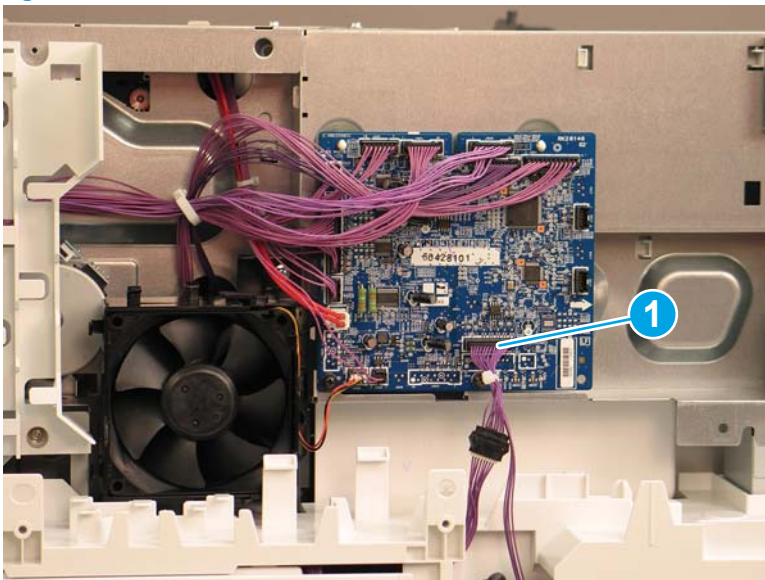



13. Remove two screws (callout 1).


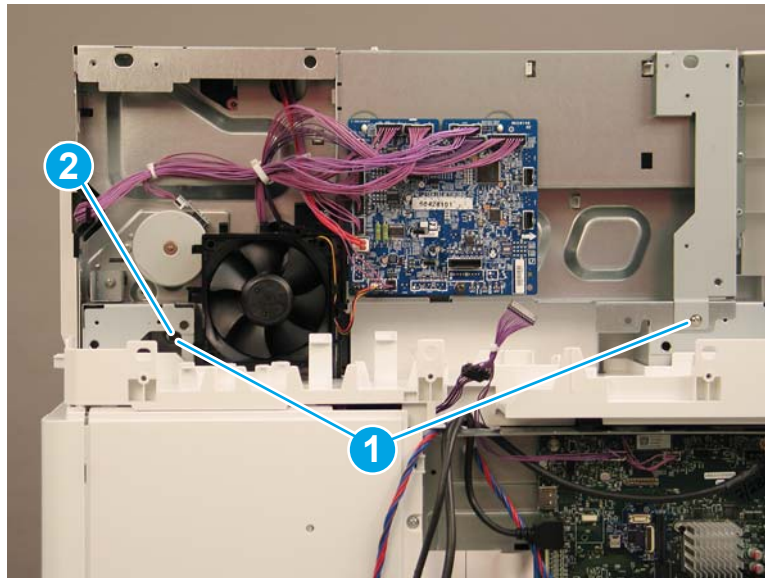
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1695 Remove two screws



14. Lift the stapler/stacker away from the printer.


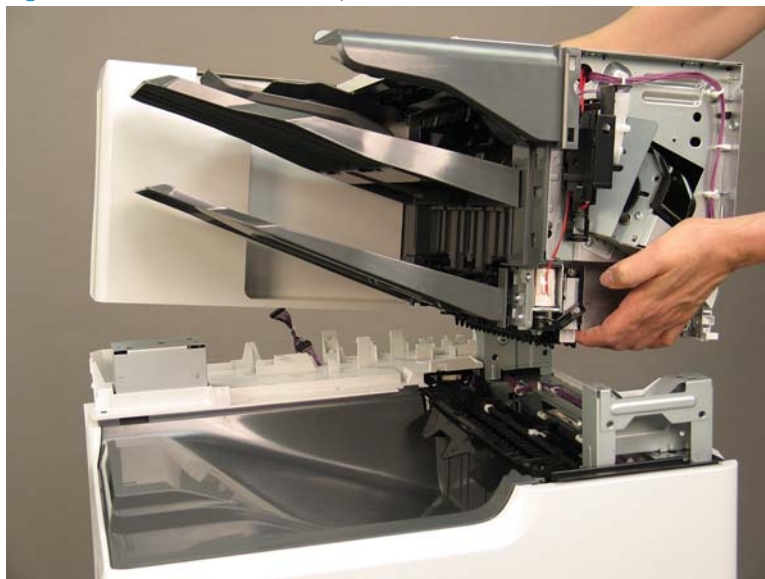

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1696 Remove the stapler/stacker




#### Step 7: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1697** Remove the face-down front cover

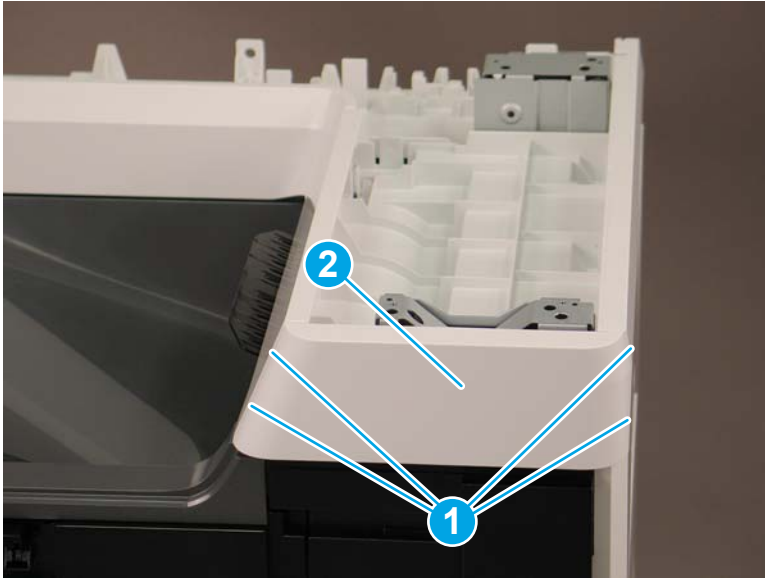


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


#### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1698** Install the cover

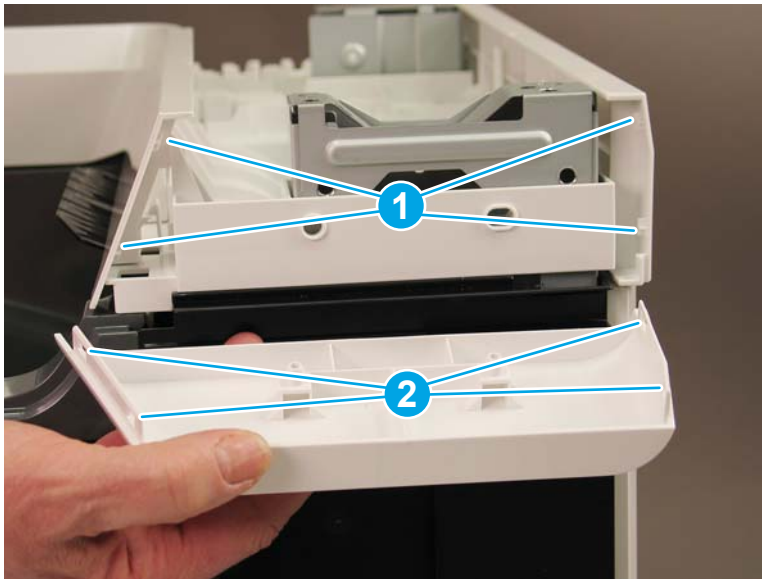


### Step 8: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)


▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1699 Remove the top cover

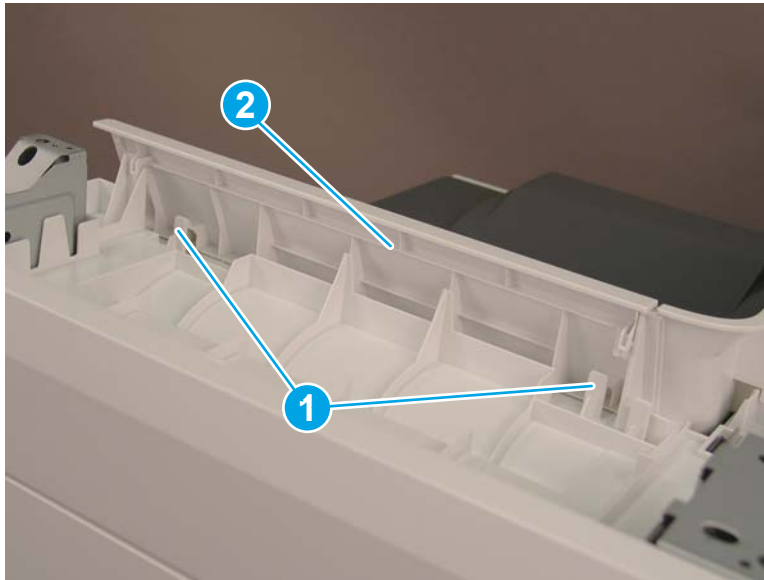

### Step 9: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)

▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


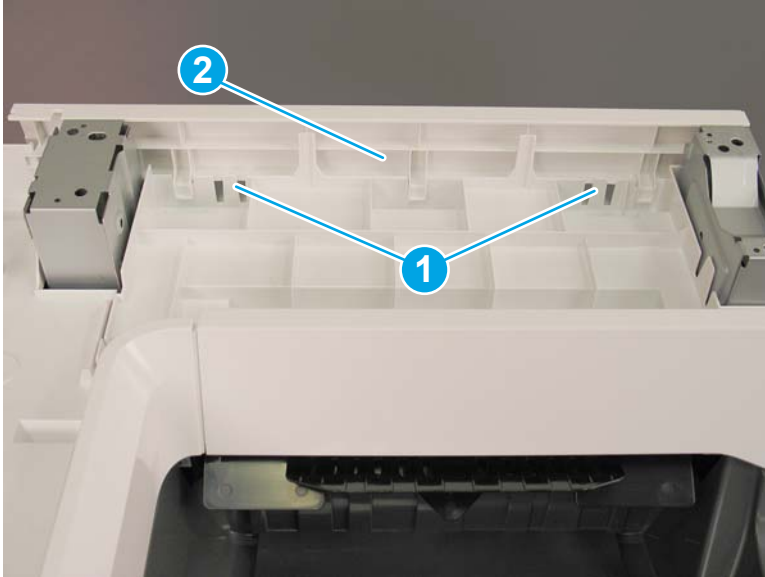
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1700 Remove the right cover



Step 10: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1071

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


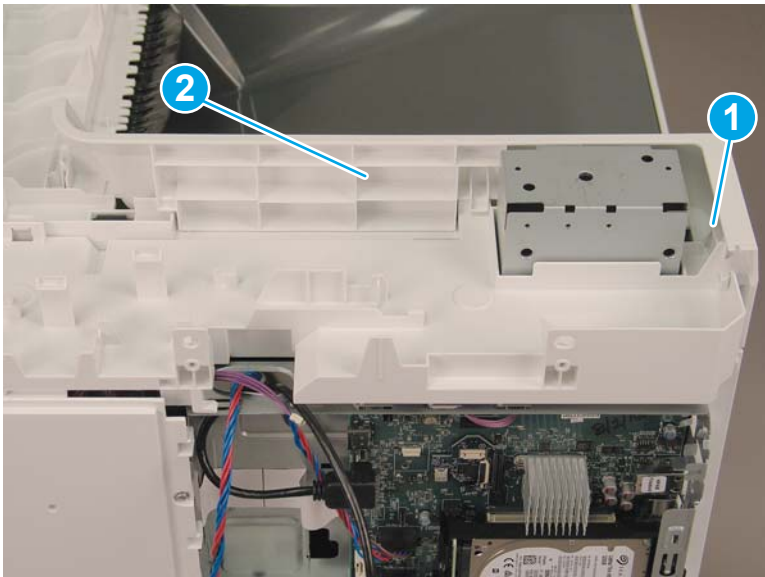

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1701 Remove the front cover




### Step 11: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)


▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1702 Remove the rear upper cover

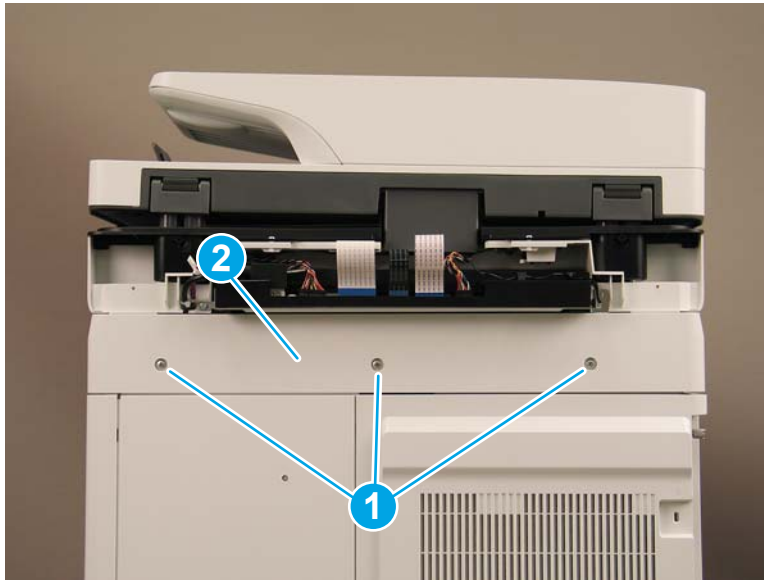

### Step 12: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1071](#)

▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).


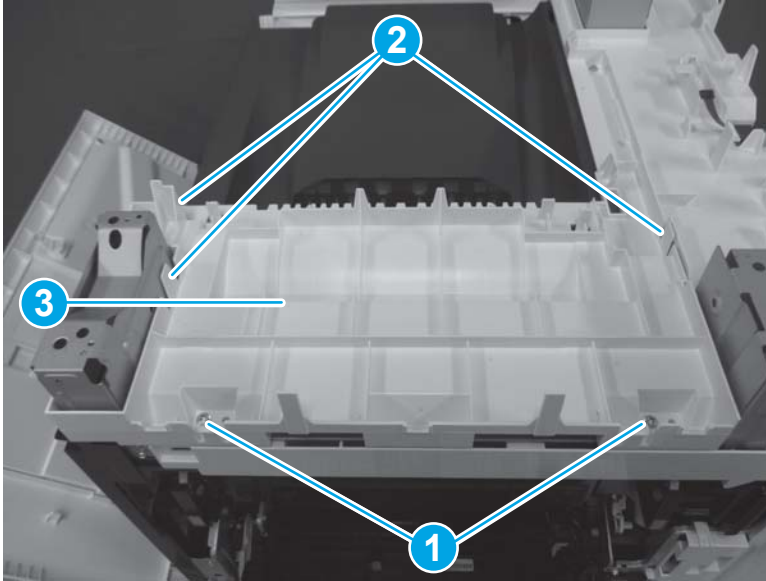

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1703 Remove two screws and the face-down cover




Step 13: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1071.


1. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-1704 Remove two screws and release one tab

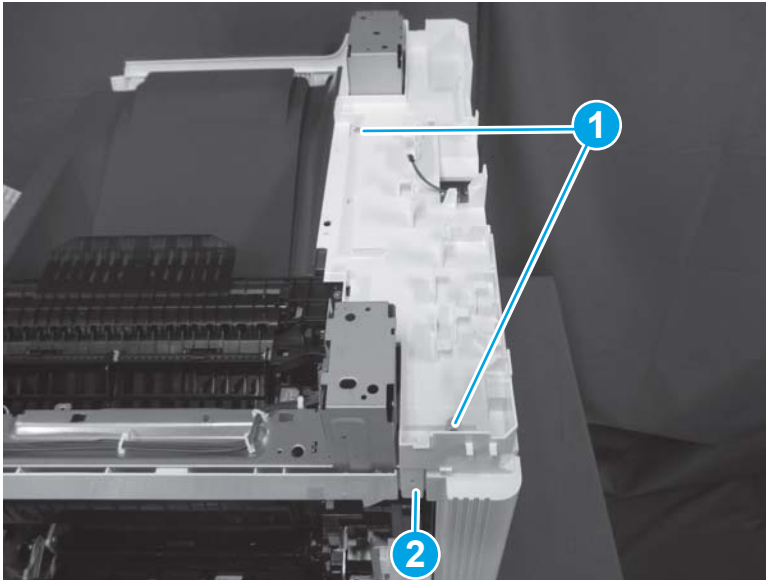





2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1705** Remove one screw and the main cover

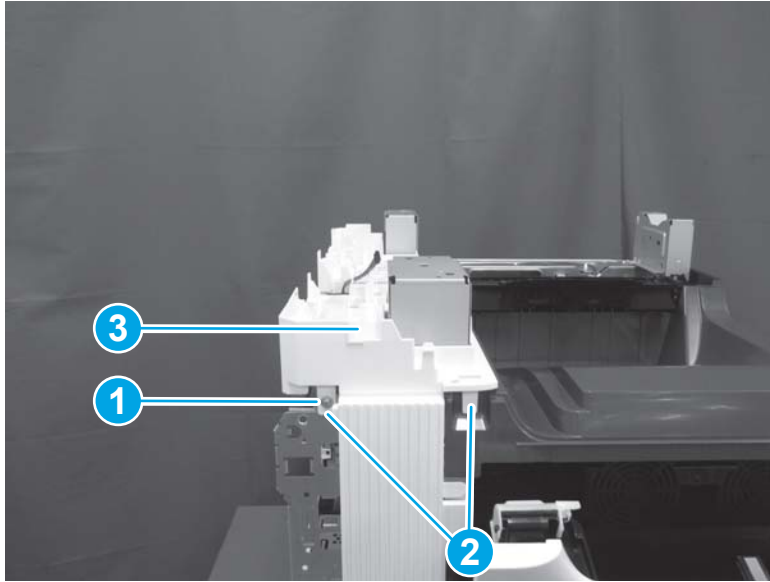

#### Step 14: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 16: Remove the output bin on page 1076](#)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1706** Tilt the control panel up





2. Use a coin to release the cover, and then remove the cover.

Figure 1-1707 Remove the cover



3. Remove one thumbscrew (callout 1)

---

 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.


---

Figure 1-1708 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-1709 Release the control panel

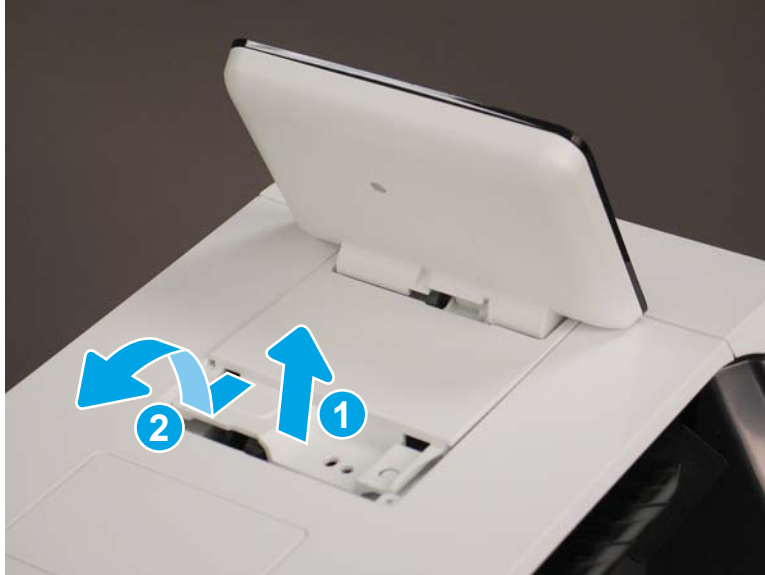

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-1710 Disconnect two connectors

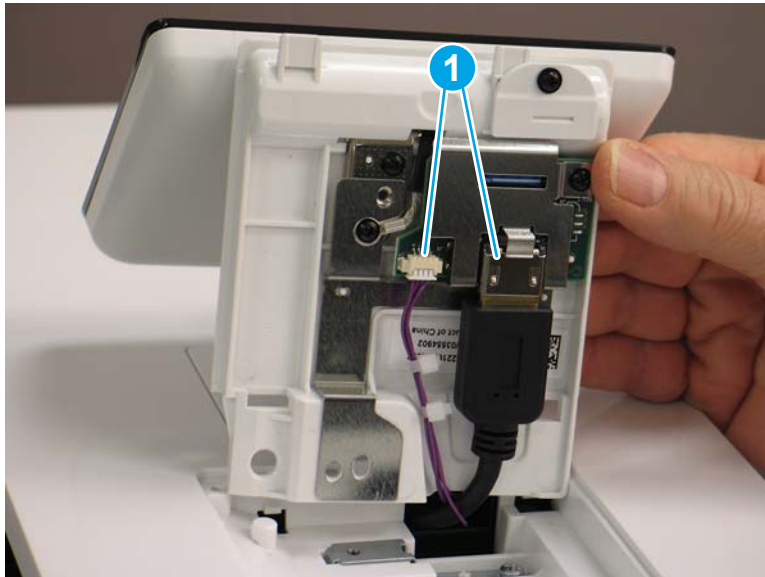

6. Remove the control panel.

**Figure 1-1711** Remove the control panel



**Step 15: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)**




**NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 16: Remove the output bin on page 1076](#)

1. Open the following doors:
  - Front door
  - Left door
  - Right door


2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1712 Remove the NFC cover

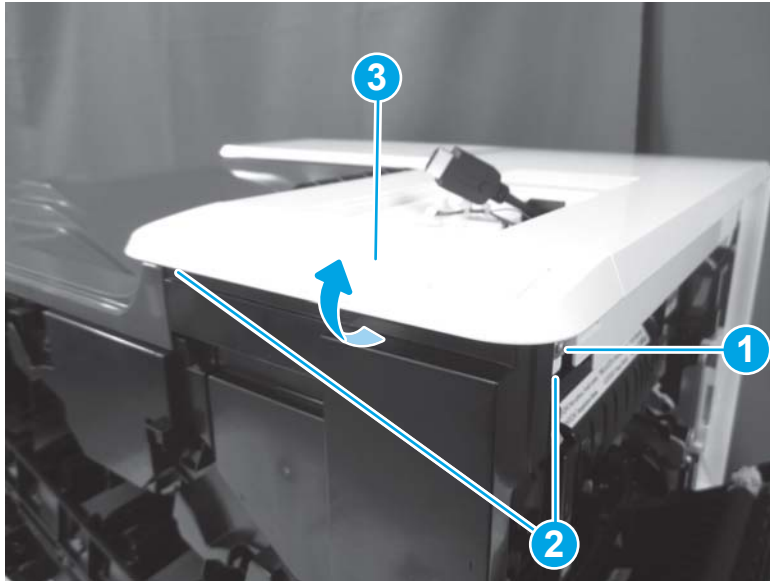


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1713 Remove one screw and release one tab

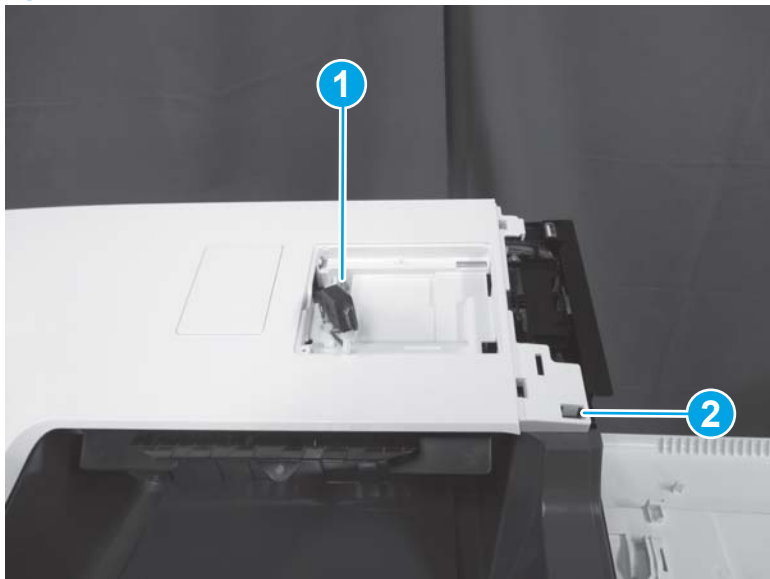

4. Release two tabs (callout 1).

Figure 1-1714 Release two tabs

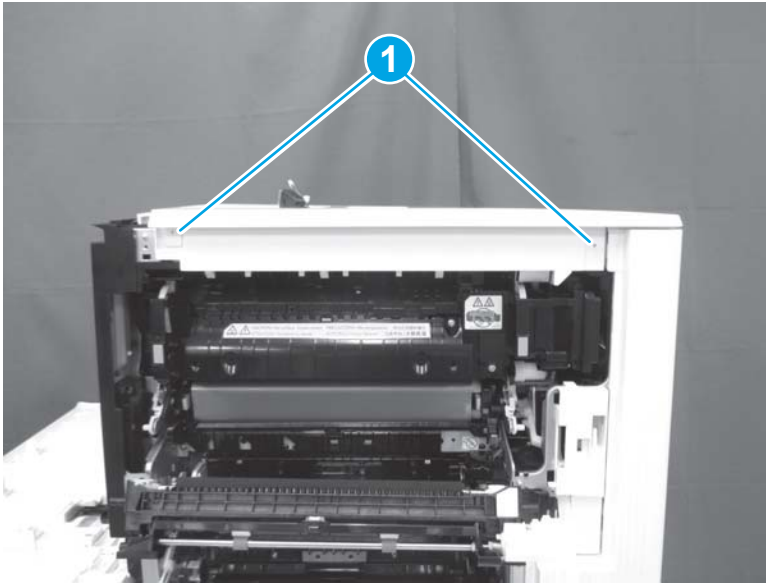

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


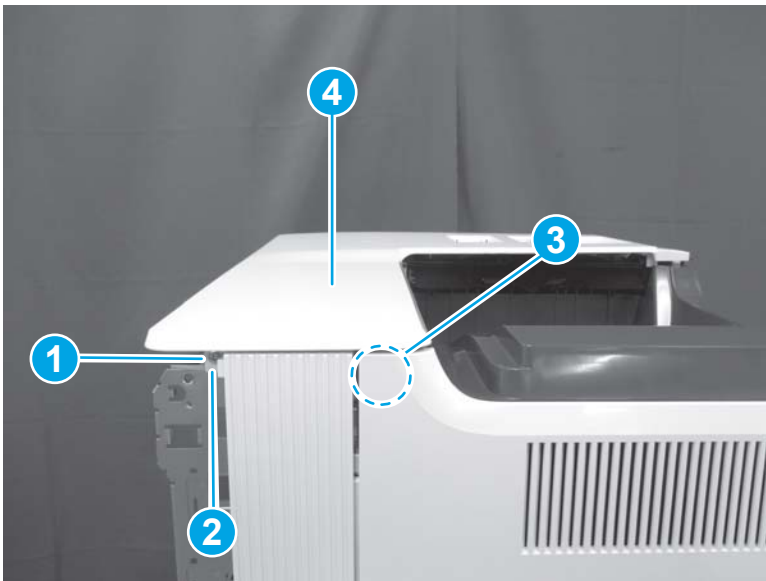
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1715 Remove the top cover




### Step 16: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


**Figure 1-1716** Remove the output bin

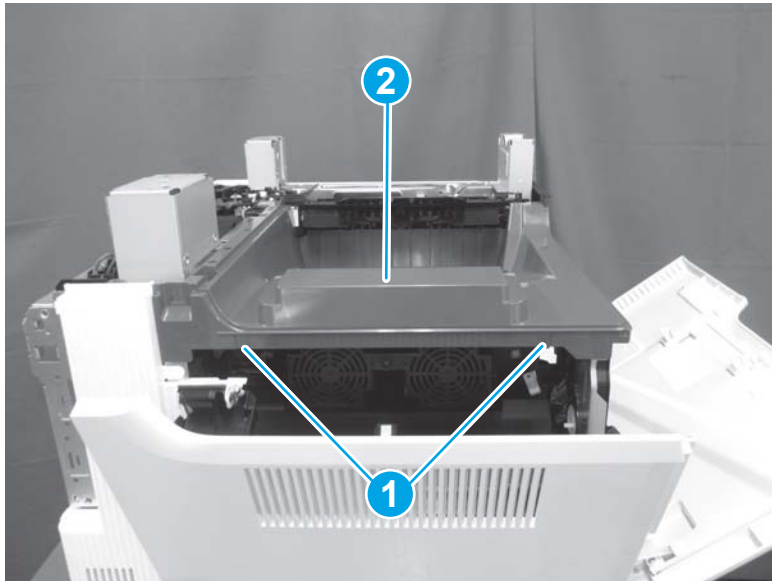

### Step 17: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1717 Remove the formatter cover

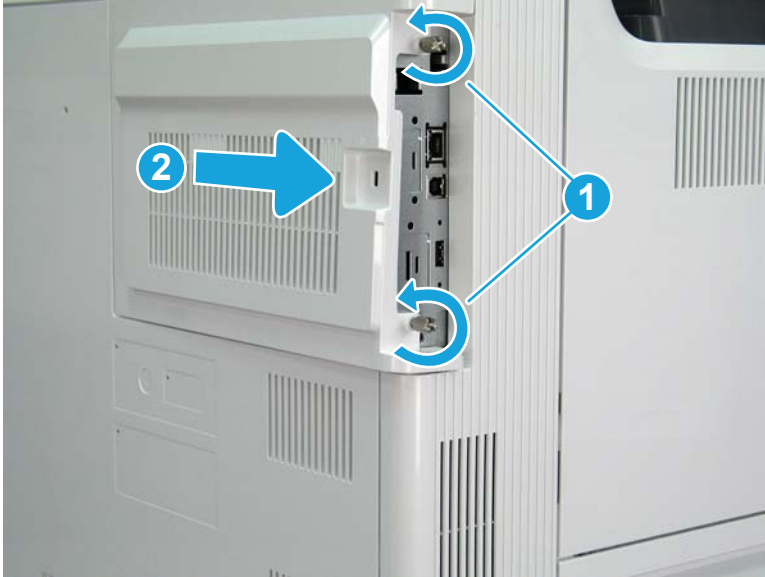

### Step 18: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1718 Remove the left rear cover

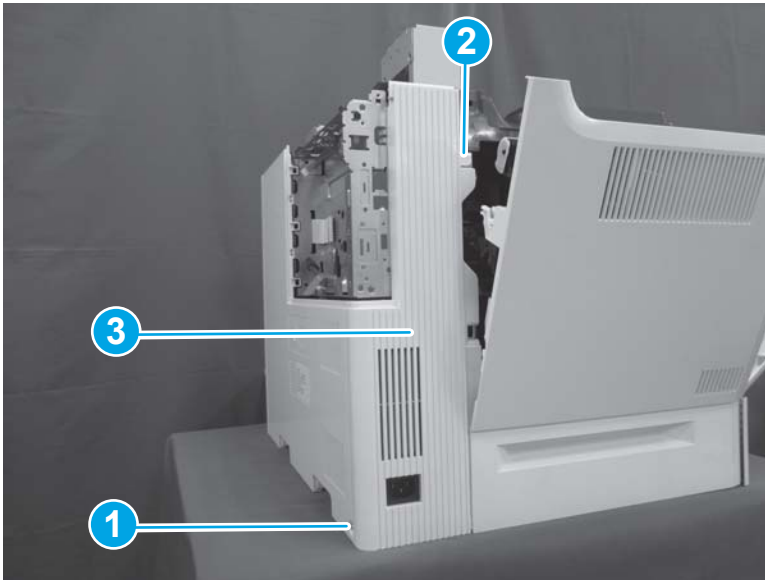

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.



Figure 1-1719 Install the left rear cover

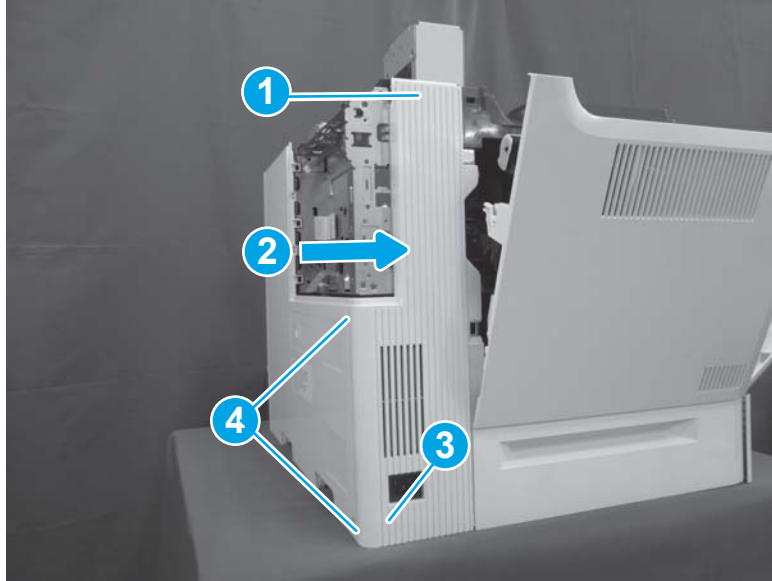


#### Step 19: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1720 Remove two screws and the rear cover

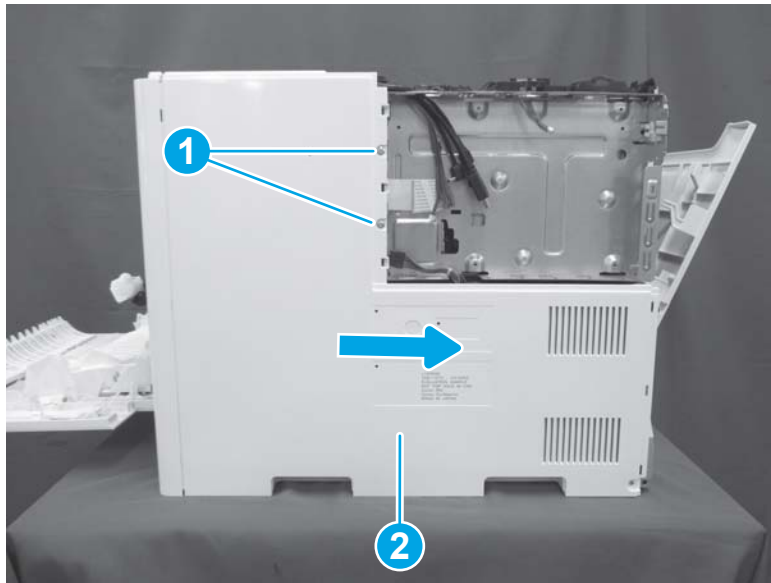

#### Step 20: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

📝 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 21: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#) on page 1080


1. Locate the fax PCA on the formatter.

Figure 1-1721 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1722 Remove the fax PCA

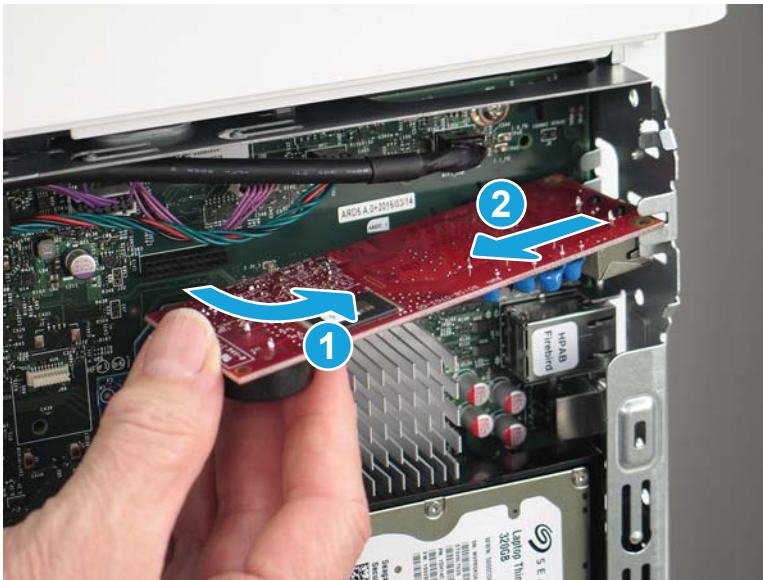

**Step 21: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)**

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.

Figure 1-1723 Release the HDD

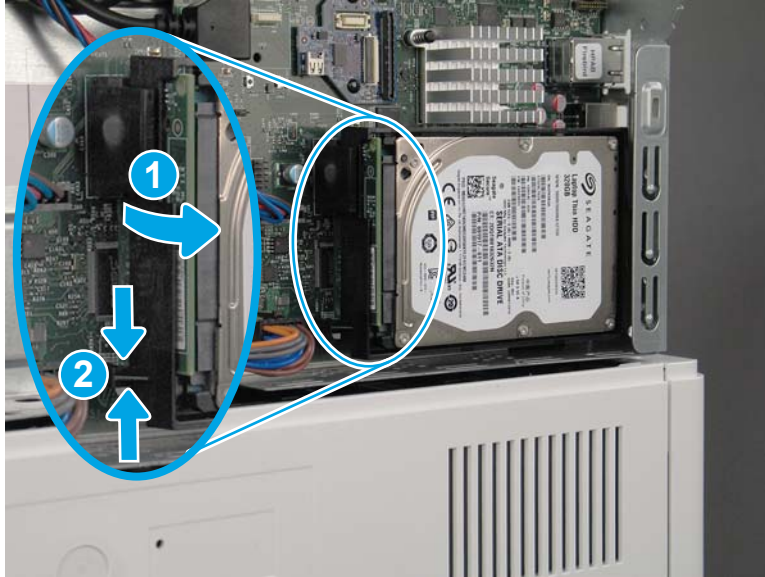


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1724 Remove the HDD




## Step 22: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1725 Remove the formatter

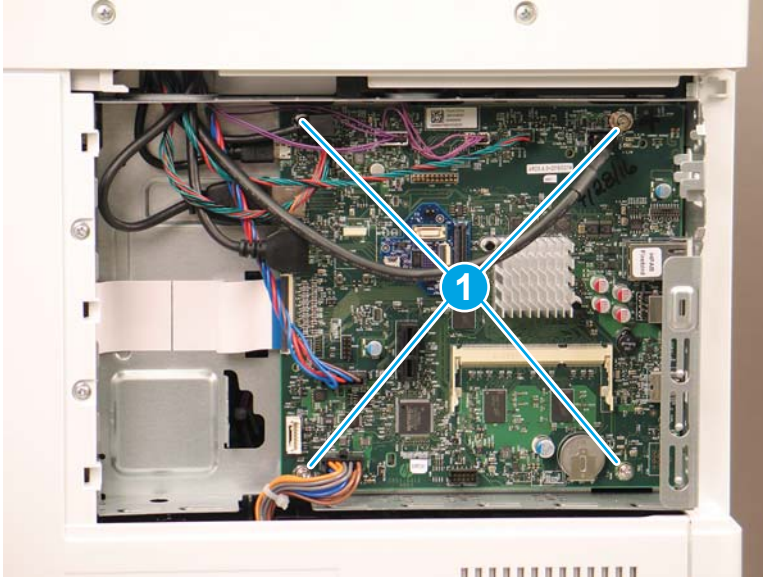


### Step 23: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).

 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.


Figure 1-1726 Disconnect one connector and remove four screws

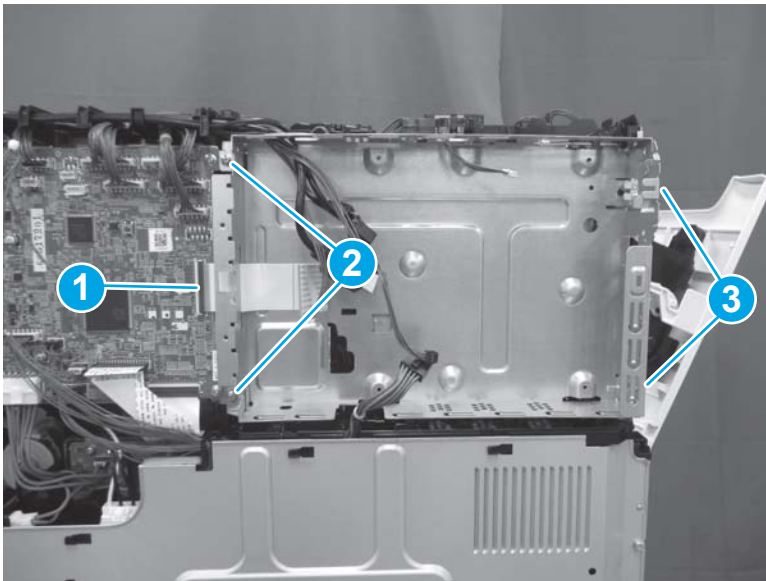




2. Tilt the bottom of the formatter case away from the printer.

Figure 1-1727 Tilt the formatter case

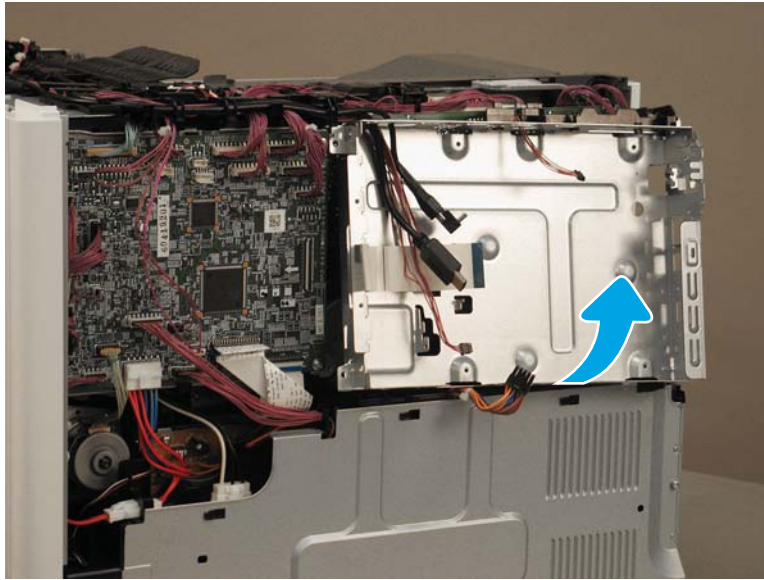

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1728 Remove the cable guide

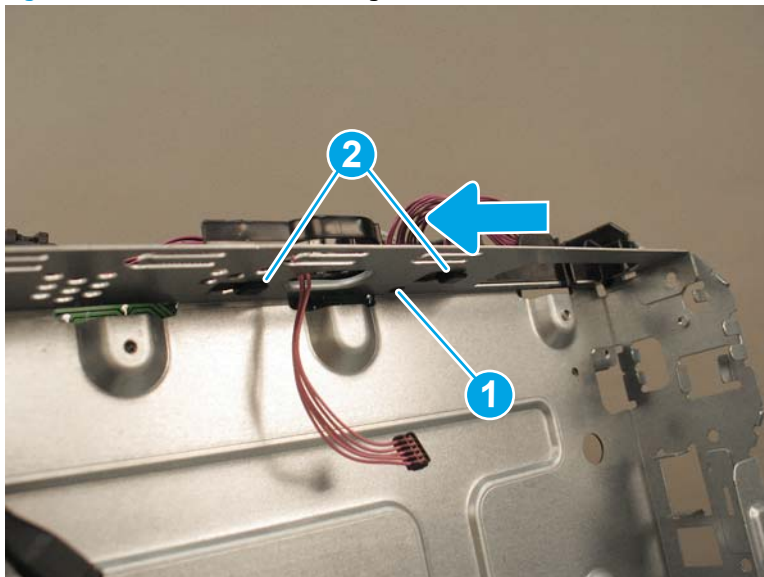


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1729 Install the cable guide

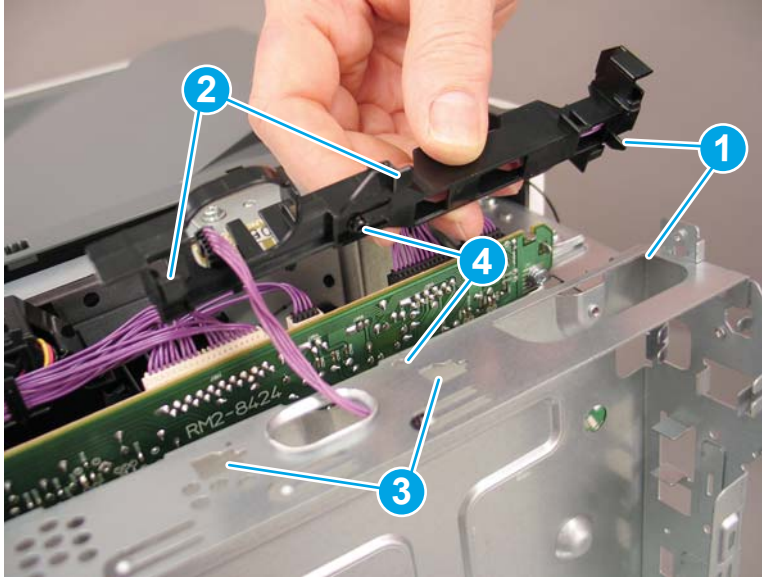

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.


Figure 1-1730 Check the IOD cable

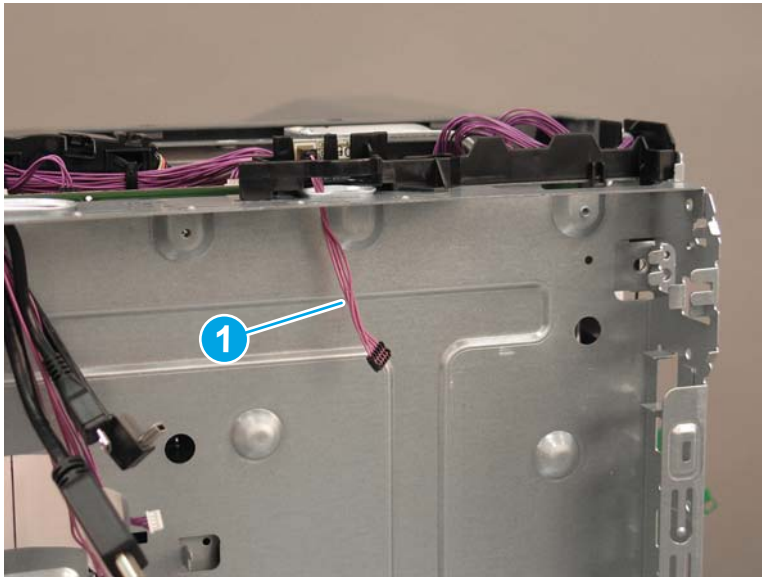

#### Step 24: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

Figure 1-1731 Remove the DC controller PCA

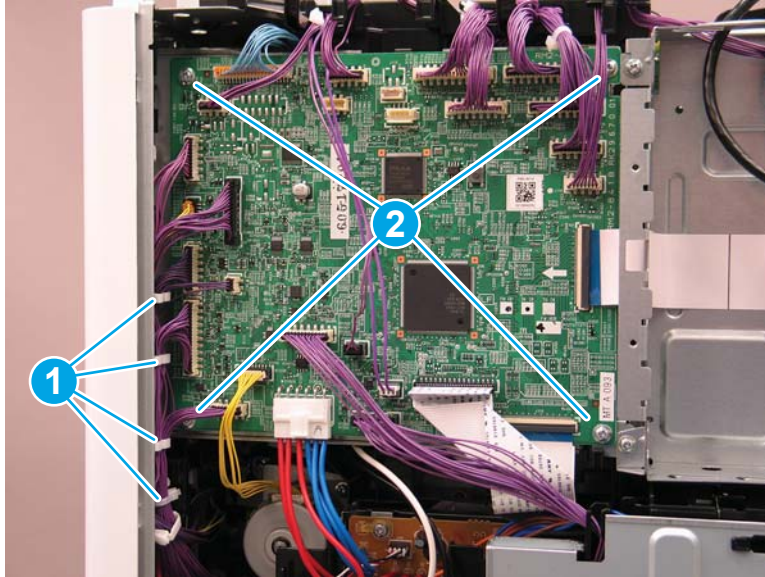

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.



**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-1732 Check the yellow cable

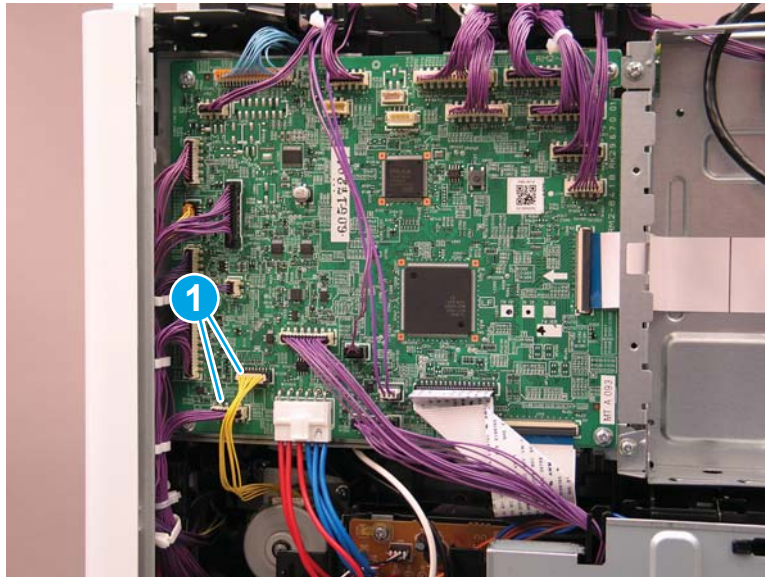


#### Step 25: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.




Figure 1-1733 Remove the DC controller stay

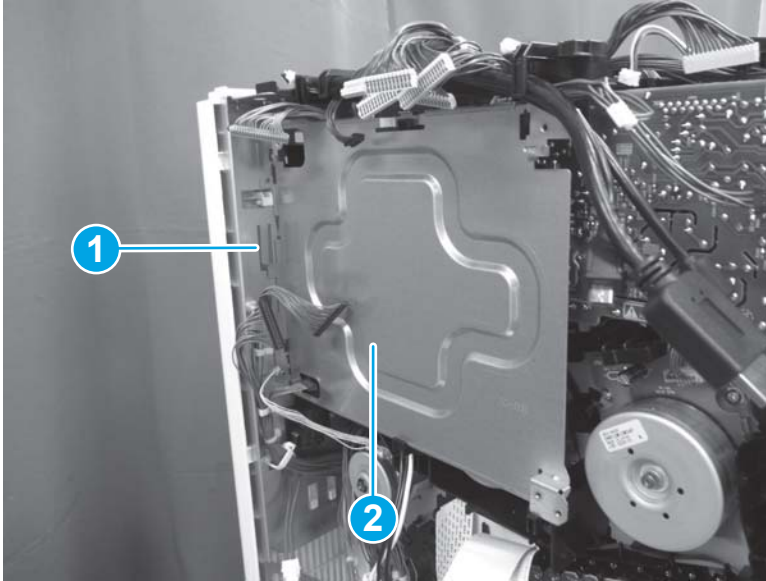


Step 26: Remove the upper high-voltage power supply (HVPS)

1. Disconnect eight connectors (callout 1).

Figure 1-1734 Disconnect eight connectors

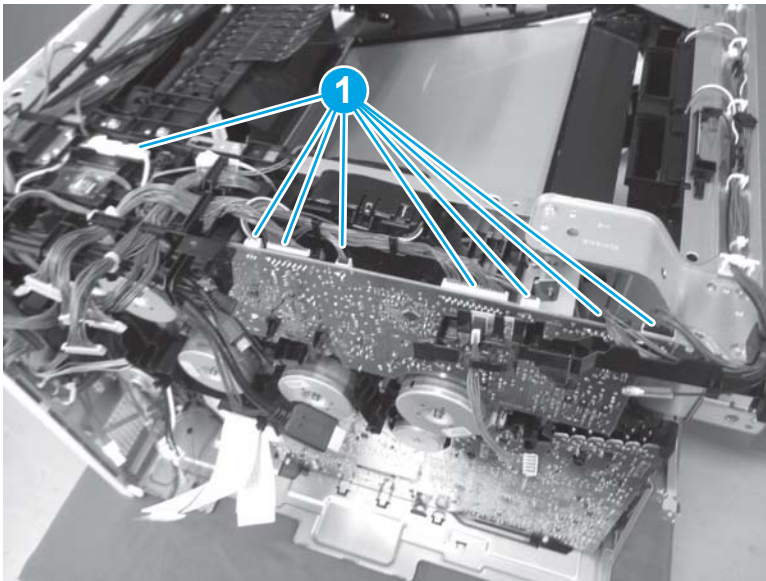


2. Release the cable (callout 1) from the retainer (callout 2). Remove one screw (callout 3), release five tabs (callout 4), and then remove the upper HVPS (callout 5).

 **Reinstallation tip:** The screw (callout 3) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.

**Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1735** Remove the upper HVPS

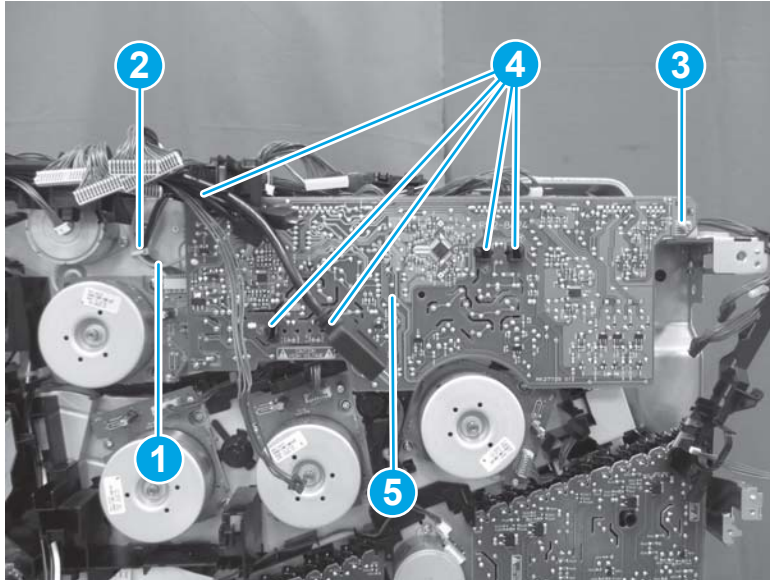

### Step 27: Remove the low-voltage power supply (LVPS) and fan


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-1736** Disconnect five connectors and remove two screws

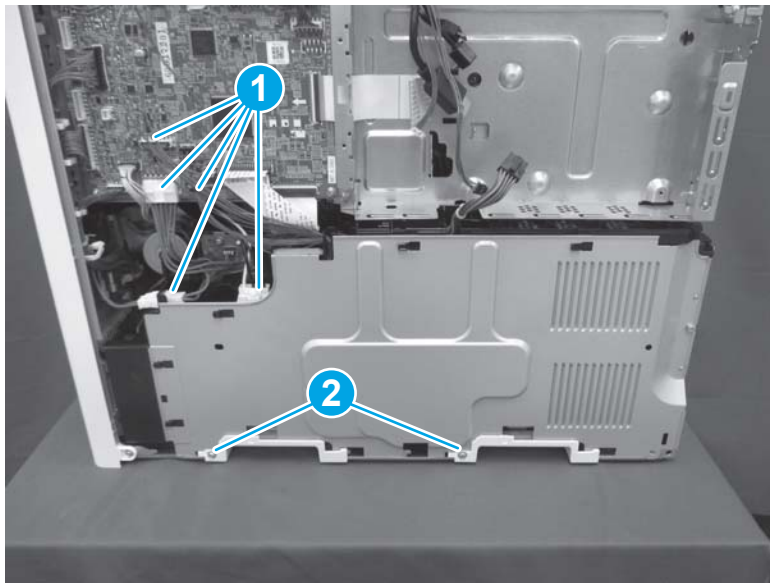

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1737 Remove two handles

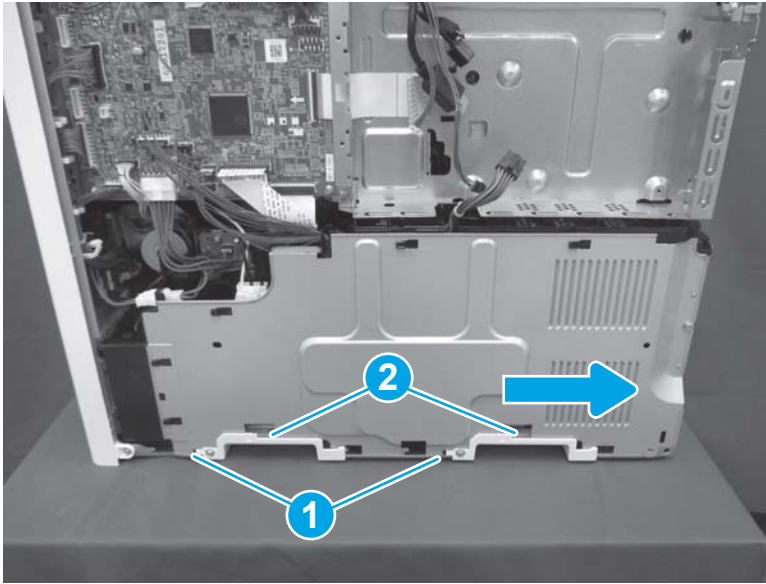

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


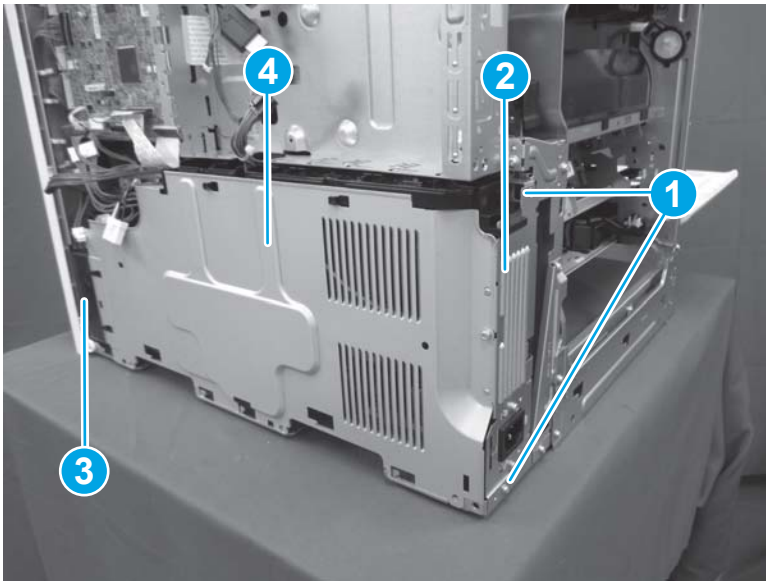
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-1738 Remove the low-voltage power supply



### Step 28: Remove the lower high-voltage power supply (HVPS)

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).

Figure 1-1739 Disconnect one connector

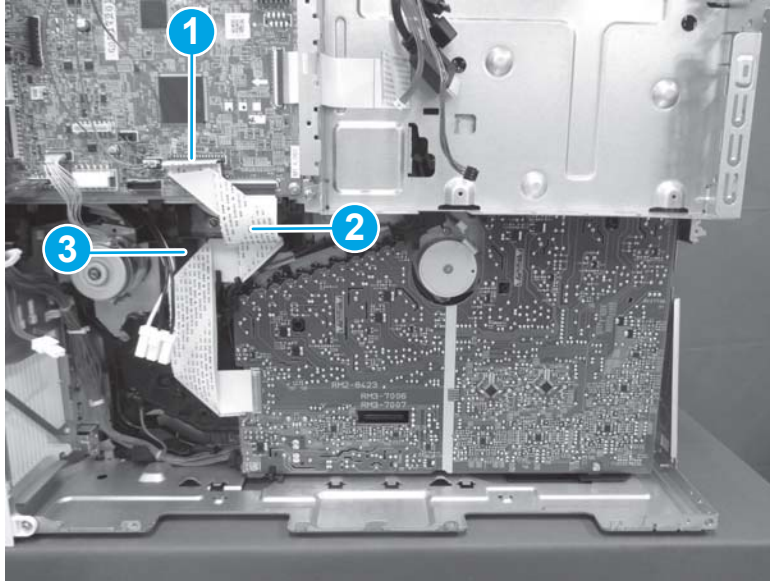


2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1740 Remove two screws and release one tab

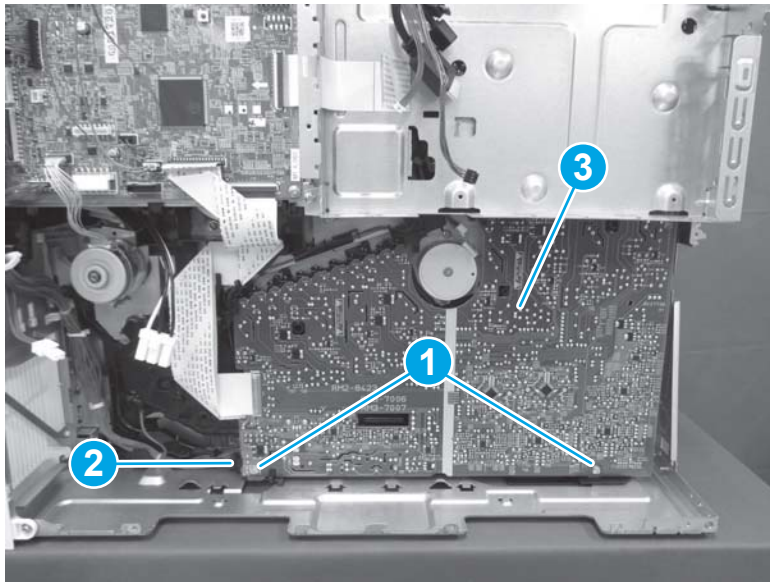


### Step 29: Remove the main drive assembly

1. Release two tabs (callout 1), and then remove the link arm (callout 2).




Figure 1-1741 Remove the link arm

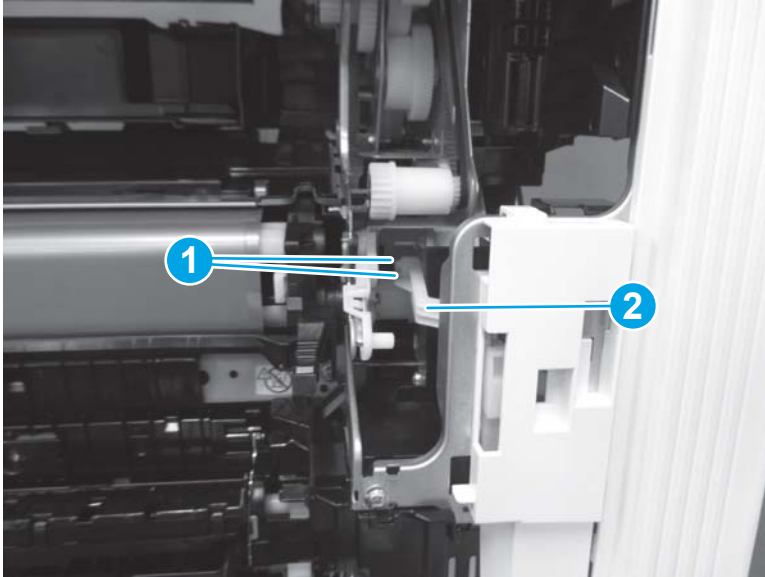


2. Remove three screws (callout 1).

Figure 1-1742 Remove three screws

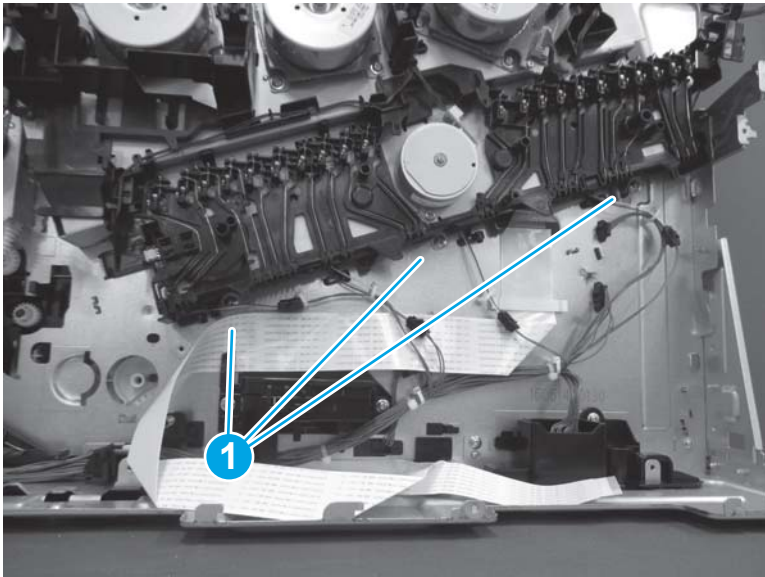


3. Remove two screws (callout 1).

Figure 1-1743 Remove two screws

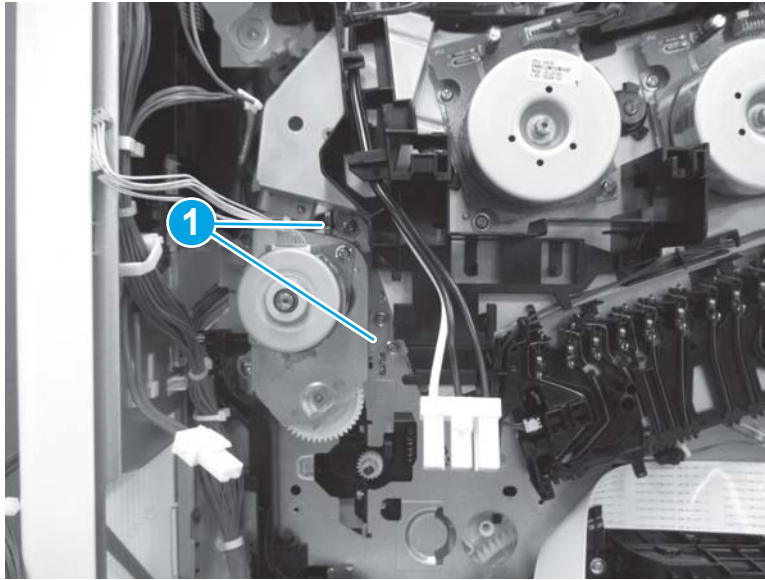

4. Disconnect five connectors (callout 1), and then release all cables from the cable guides (callout 2).


Figure 1-1744 Disconnect five connectors and release cables

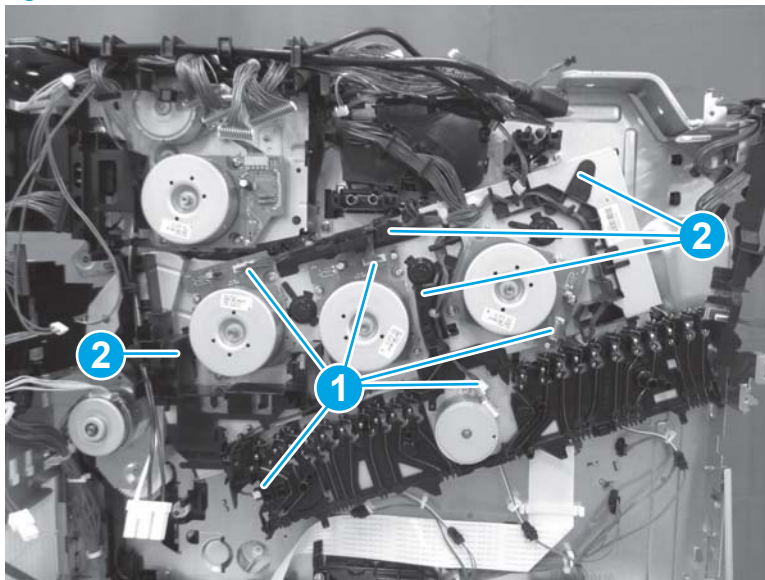

5. Remove three screws (callout 1), and then lift the main drive assembly (callout 2) slightly away from the printer.

**⚠ CAUTION:** Do not completely remove the main drive assembly. It is still connected to the printer.

Figure 1-1745 Remove three screws

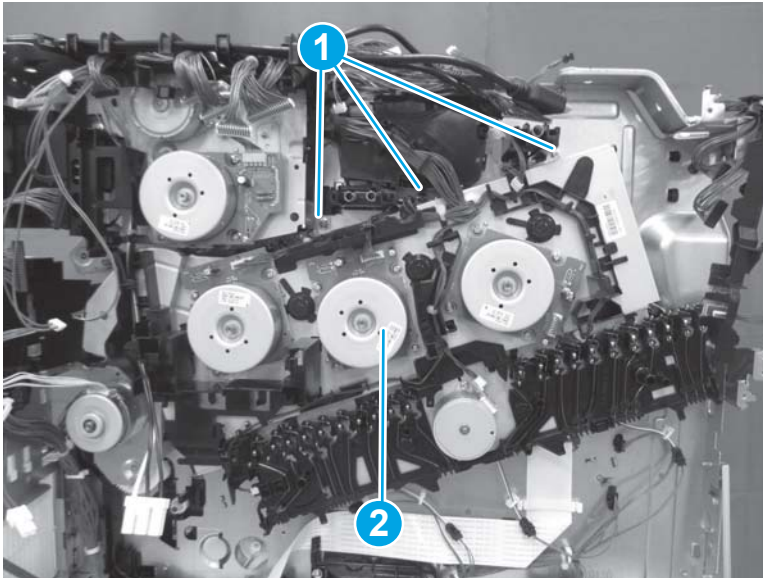


6. Disconnect three connectors (callout 1), and then remove the main drive assembly.

**⚠ CAUTION:** Use care when disconnecting the connector on the left side. It is attached to a small, square retainer that fits loosely in the main drive assembly. This retainer can easily be dislodged when the cable is disconnected. If the retainer becomes dislodged, reinstall it in the main drive assembly.

**💡 Reinstallation tip:** Before reinstalling the main drive assembly, don't forget to connect the three cables running through the cable harness on the front to the three connectors on the back.

Figure 1-1746 Disconnect three connectors

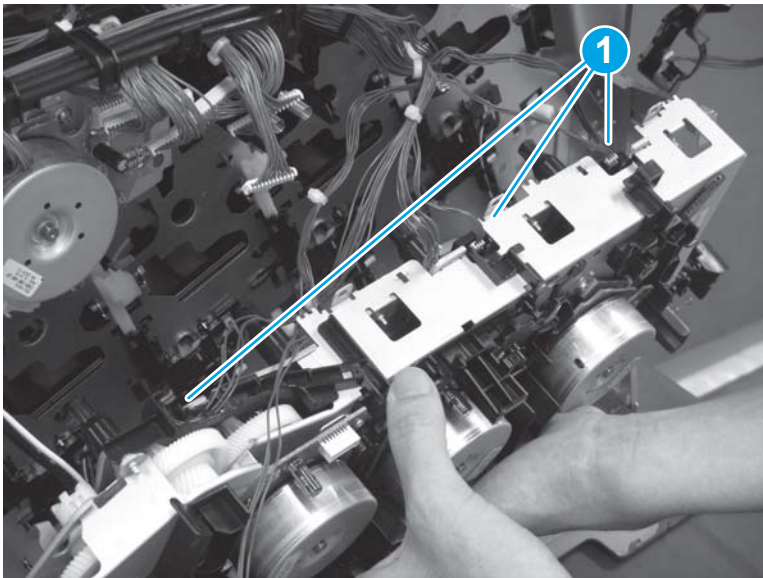

7. Reverse the removal steps to install the assembly. Also use the following special installation instructions.




### Special installation instructions: Main drive assembly

- ▲ When reinstalling the main drive assembly, make sure that the four alienation levers (callout 1) are positioned on the right side of the sheet metal openings. If these levers are not positioned as shown, it is not possible to install the main drive assembly.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-1747 Alienation lever positions

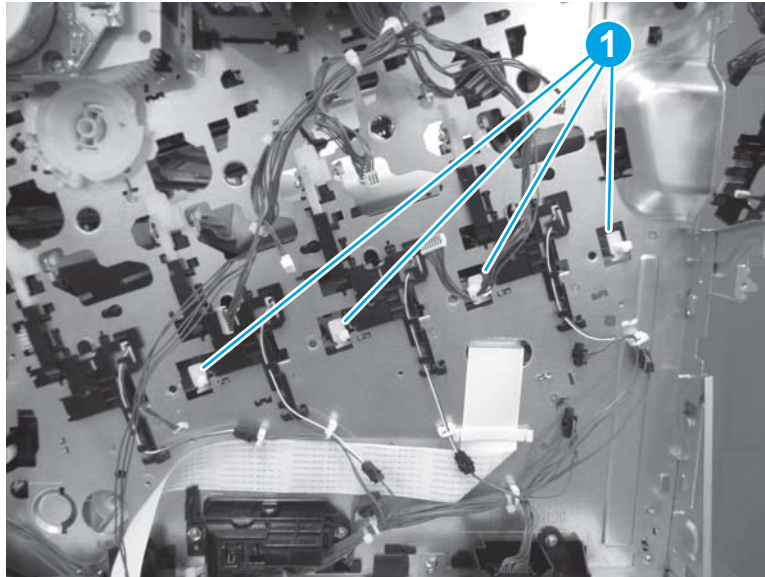



### Step 30: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Fuser motor

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 6: Remove the formatter](#)
- [Step 7: Remove the formatter case](#)
- [Step 8: Remove the DC controller PCA](#)
- [Step 9: Remove the DC controller stay](#)
- [Step 10: Remove the fuser motor](#)
- [Step 14: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace fuser motor.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Fuser motor part number
-------------------------

RM2-1955-000CN
----------------

Fuser motor (M4)
------------------

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1748 Remove the formatter cover

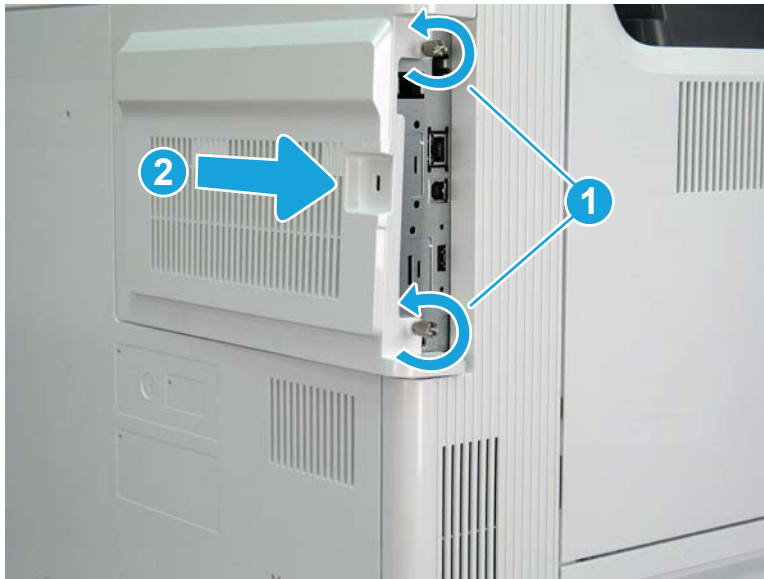

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1749 Remove the left rear cover

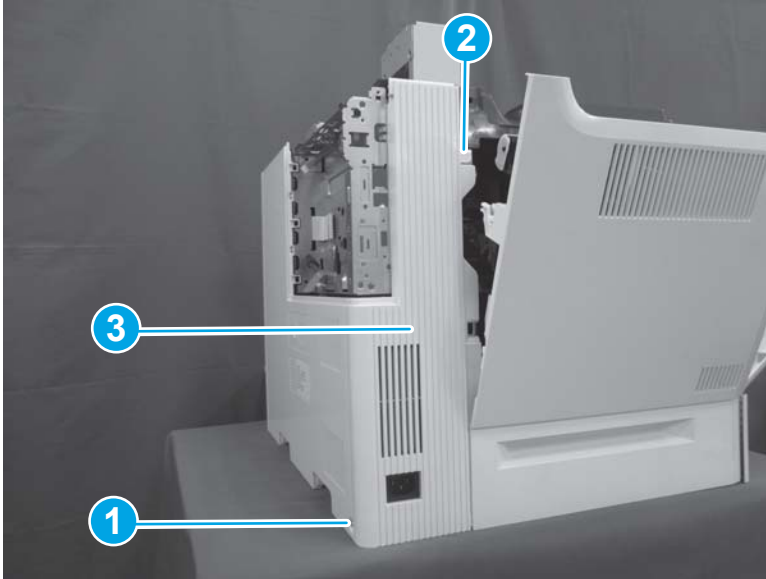


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1750 Install the left rear cover

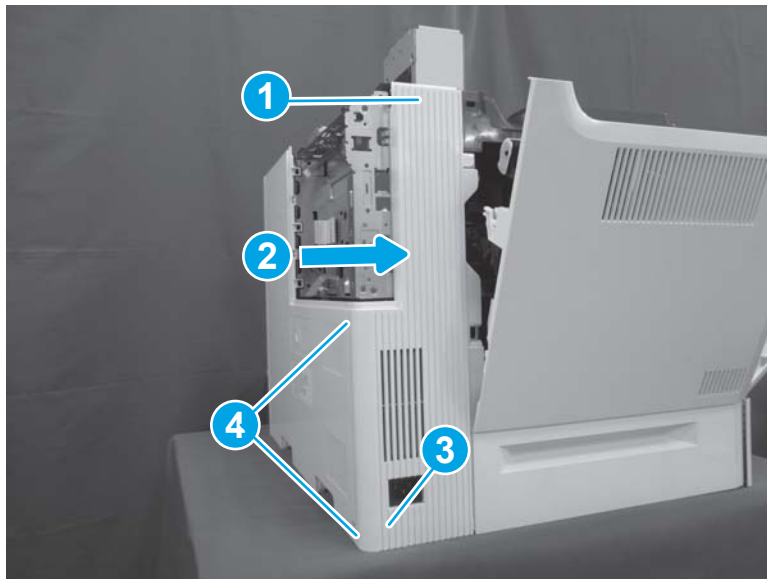


#### Step 3: Remove the rear cover


- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1751** Remove two screws and the rear cover

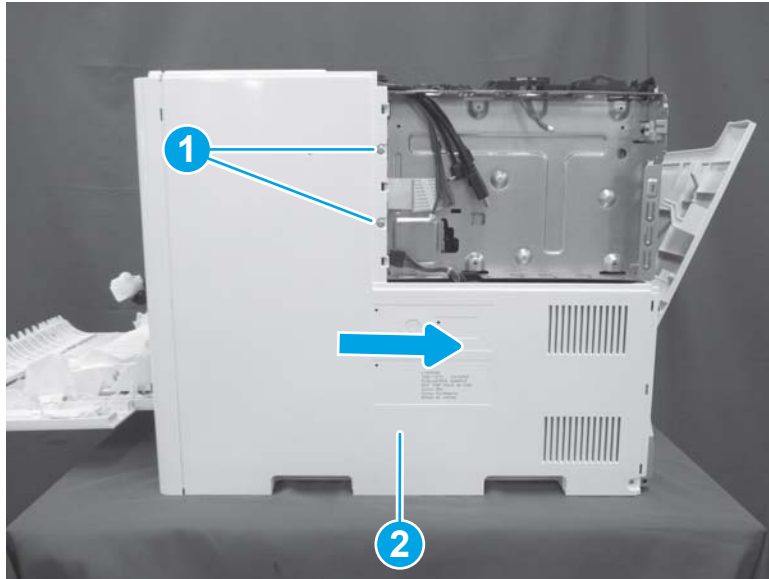

**Step 4: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 5: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#) on page 1098

1. Locate the fax PCA on the formatter.

**Figure 1-1752** Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.


Figure 1-1753 Remove the fax PCA



Step 5: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.


Figure 1-1754 Release the HDD

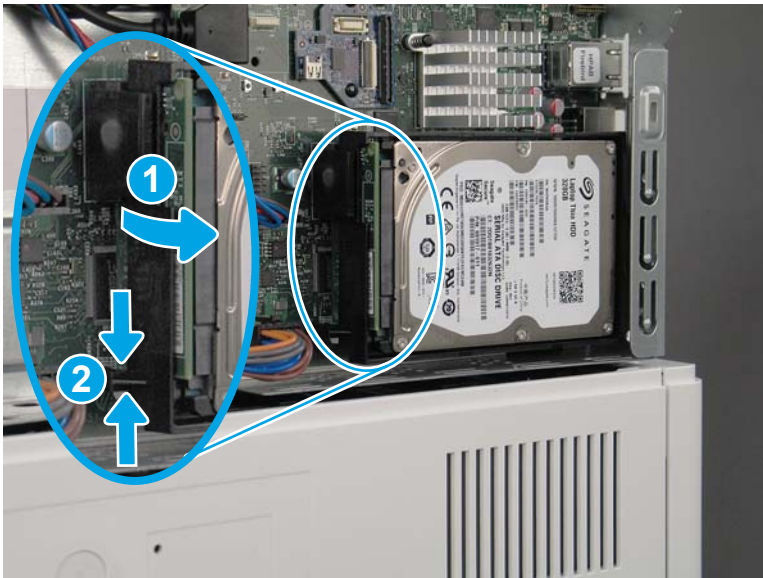




2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1755 Remove the HDD

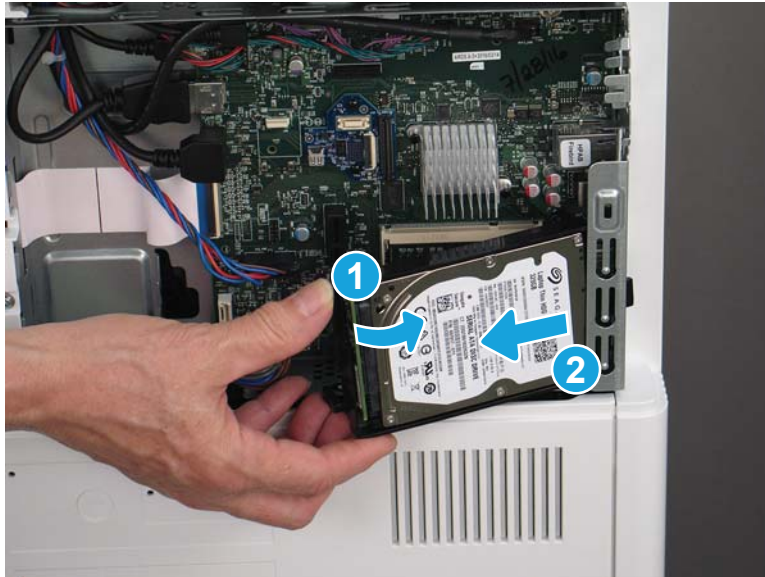


#### Step 6: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1756 Remove the formatter

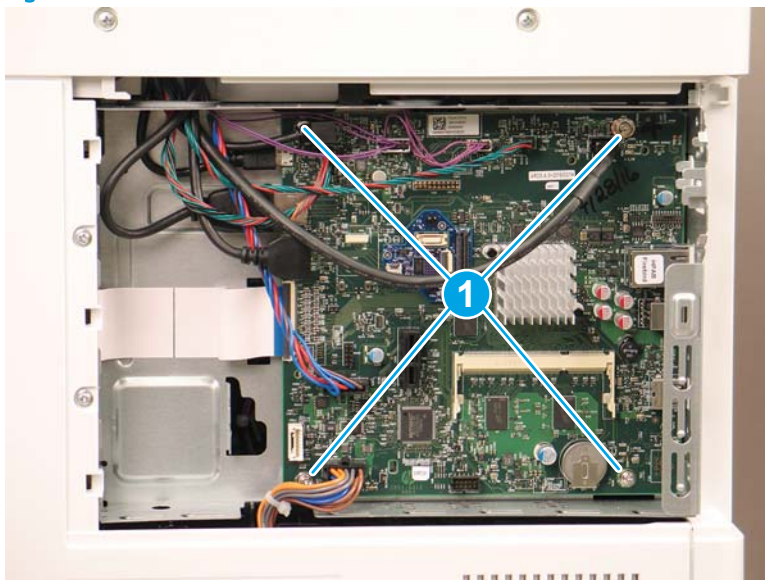




## Step 7: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

**Figure 1-1757** Disconnect one connector and remove four screws

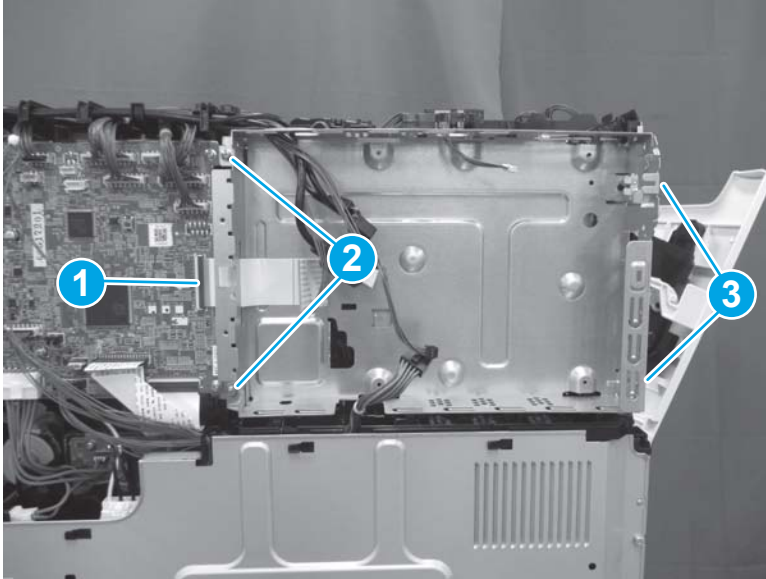


2. Tilt the bottom of the formatter case away from the printer.

**Figure 1-1758** Tilt the formatter case

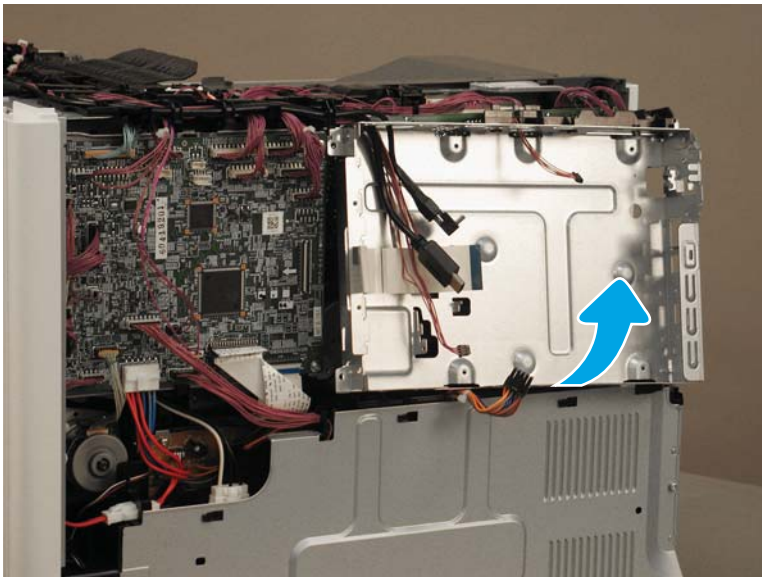

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

**Figure 1-1759** Remove the cable guide

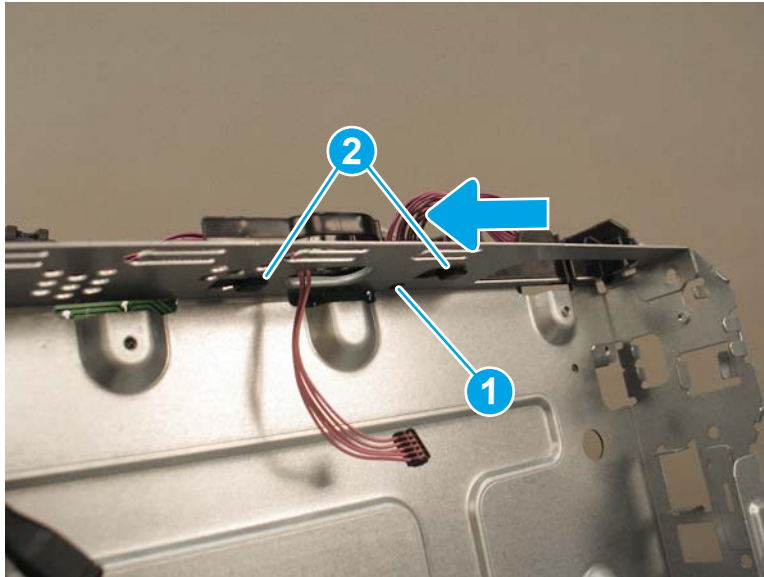

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

**Figure 1-1760** Install the cable guide

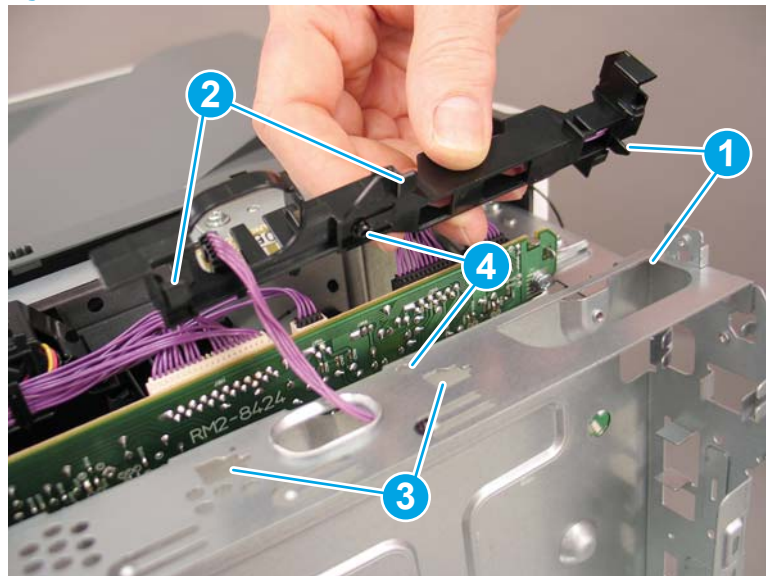

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.


Figure 1-1761 Check the IOD cable

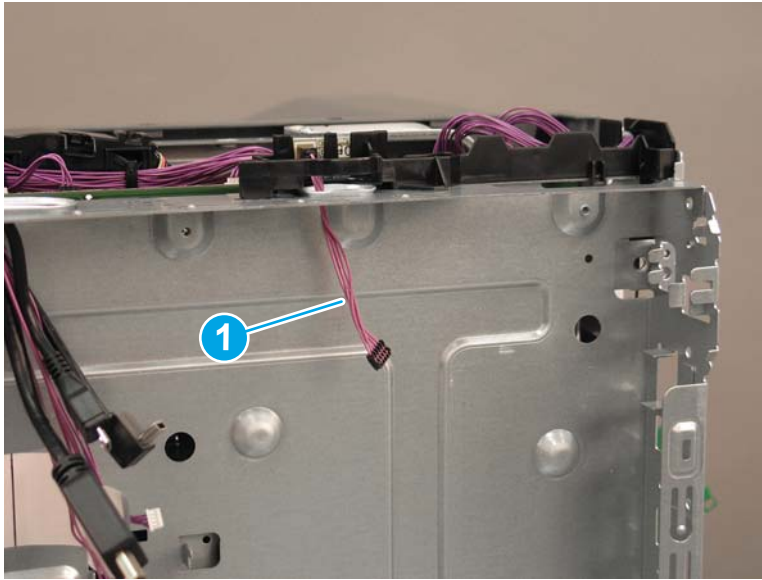

#### Step 8: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.

Figure 1-1762 Remove the DC controller PCA

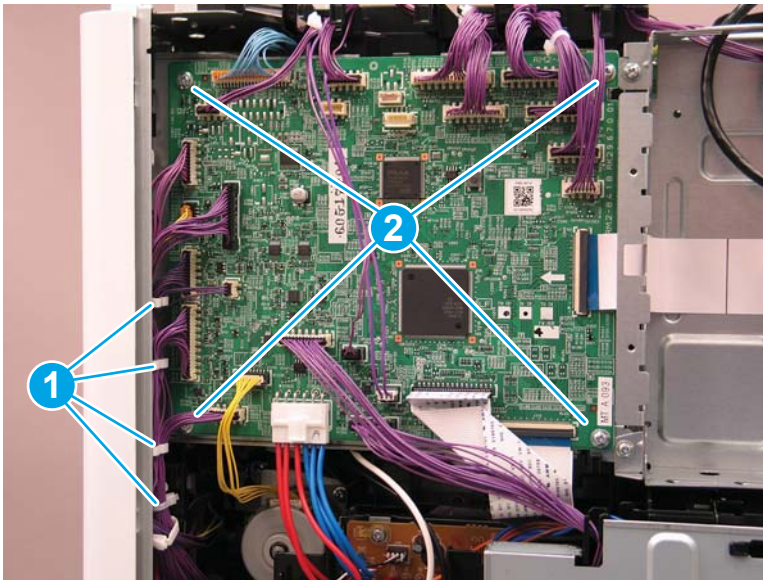

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.



**NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-1763 Check the yellow cable

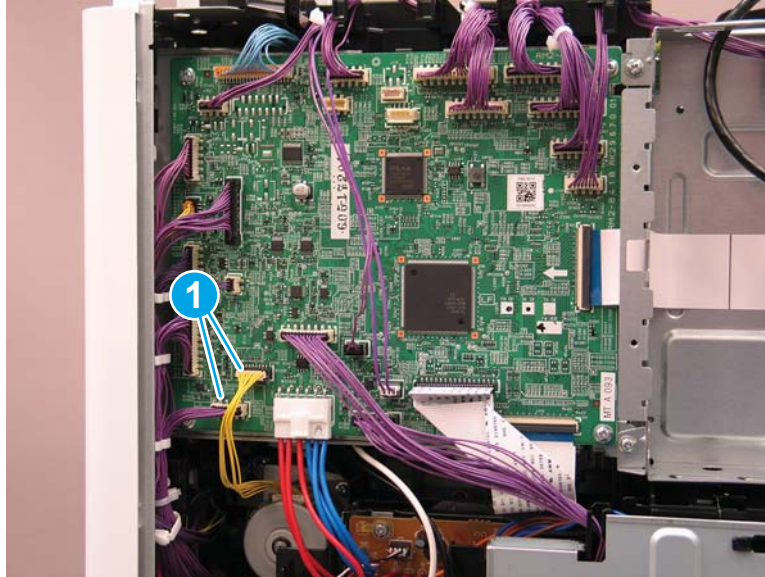

#### Step 9: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.

Figure 1-1764 Remove the DC controller stay

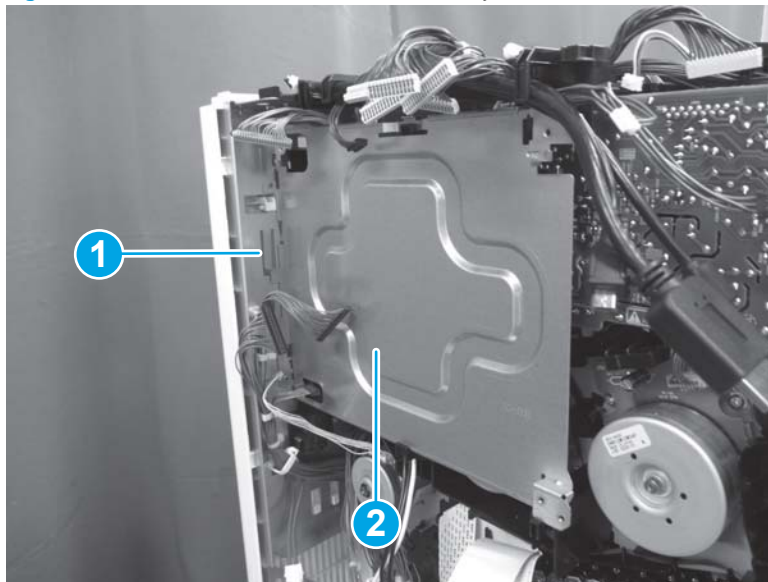


#### Step 10: Remove the fuser motor

1. Disconnect one connector (callout 1), remove three screws (callout 2), and then remove the fuser motor (callout 3).



Figure 1-1765 Remove the fuser motor

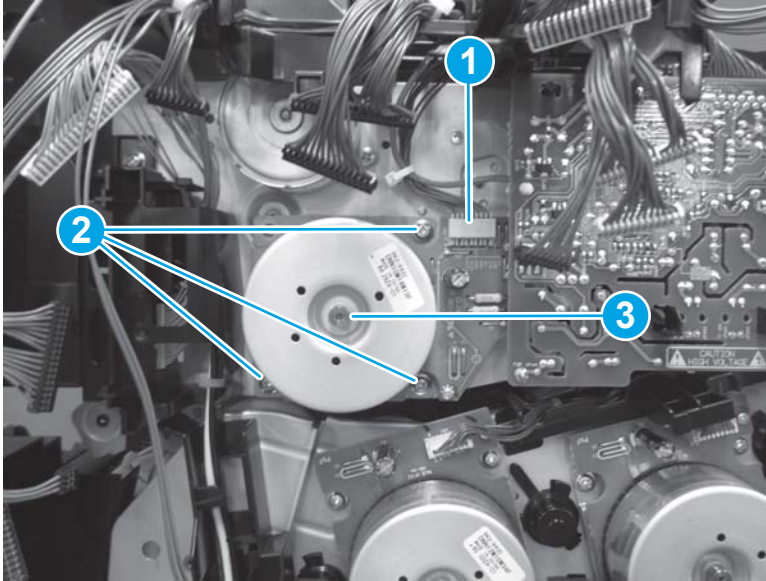

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Fuser motor**


- ▲ Reinstall the screws in the correct locations (callout 1). Do not install a screw in the hole in the upper left corner

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---


Figure 1-1766 Reinstall the screws

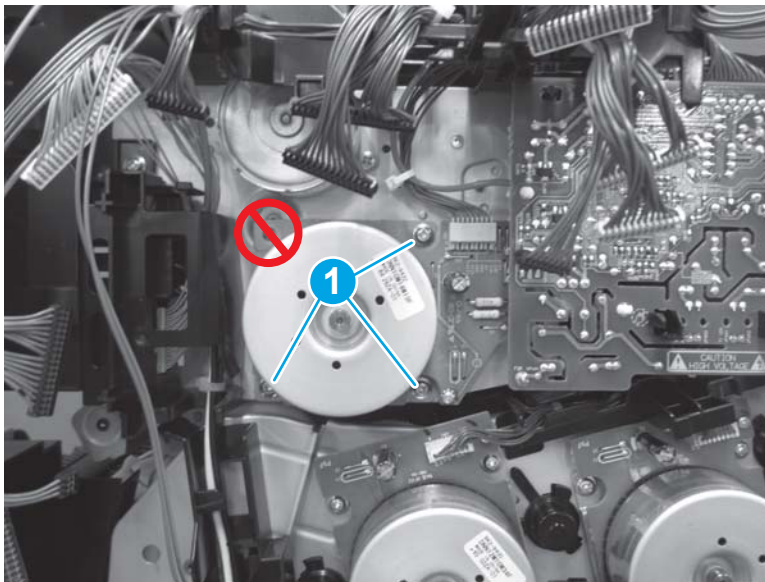

**Step 14: Unpack the replacement assembly**

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Fuser drive assembly

- [Introduction](#)
- [Step 1: Remove the fuser](#)
- [Step 2: Remove the intermediate transfer belt \(ITB\)](#)
- [Step 3: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 4: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 6: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 7: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 15: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 16: Remove the output bin](#)
- [Step 17: Remove the formatter cover](#)
- [Step 18: Remove the left rear cover](#)
- [Step 19: Remove the rear cover](#)
- [Step 20: Remove the fax PCA \(M681f/Flow M681f/Flow M681z/Flow M682z\)](#)
- [Step 21: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 22: Remove the formatter](#)
- [Step 23: Remove the formatter case](#)
- [Step 24: Remove the DC controller PCA](#)
- [Step 25: Remove the DC controller stay](#)
- [Step 26: Remove the upper high-voltage power supply \(HVPS\)](#)
- [Step 27: Remove the fuser drive assembly](#)
- [Step 28: Unpack the replacement assembly](#)



## Introduction

This document provides the procedures to remove and replace the fuser drive assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Fuser drive assembly part number	
RM2-1934-000CN	Fuser drive assembly

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the fuser


1. Open the right door.

Figure 1-1767 Open the right door



2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).

Figure 1-1768 Remove the fuser

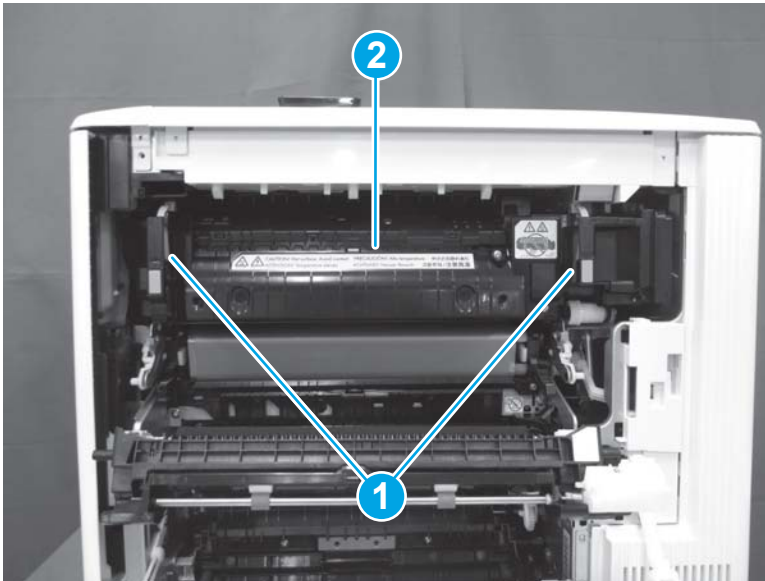

Step 2: Remove the intermediate transfer belt (ITB)


1. Open the right door.

Figure 1-1769 Open the right door




2. Release the blue latch (callout 1), and then lower the transfer assembly (callout 2).

Figure 1-1770 Lower the transfer assembly

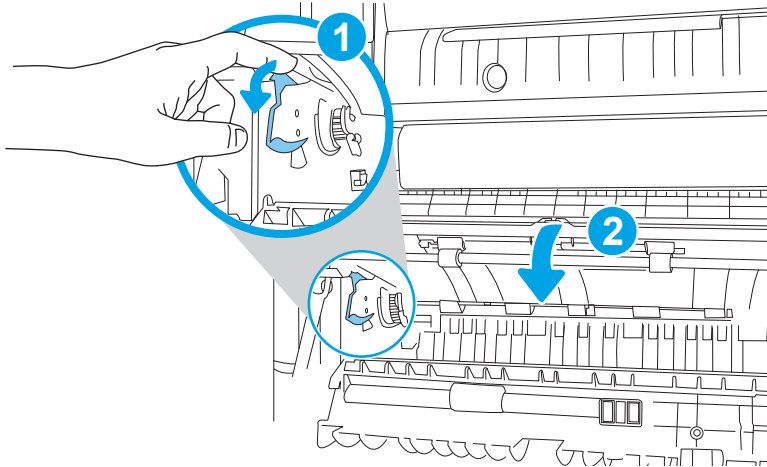


3. Grasp the two blue handles on the ITB.

Figure 1-1771 Grasp the two blue handles

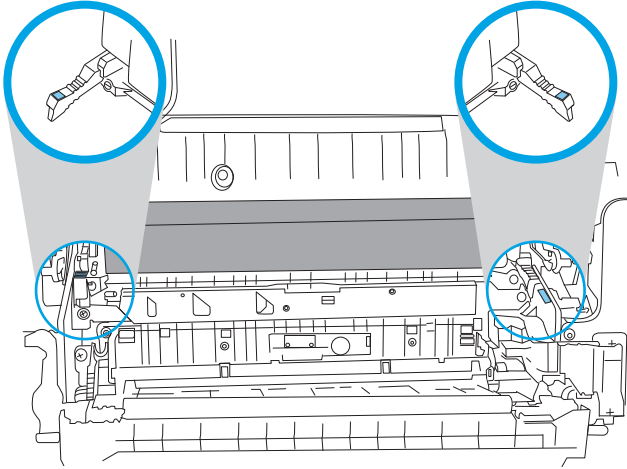


4. Pull the ITB partially out of the printer.

Figure 1-1772 Pull the ITB partially out of the printer

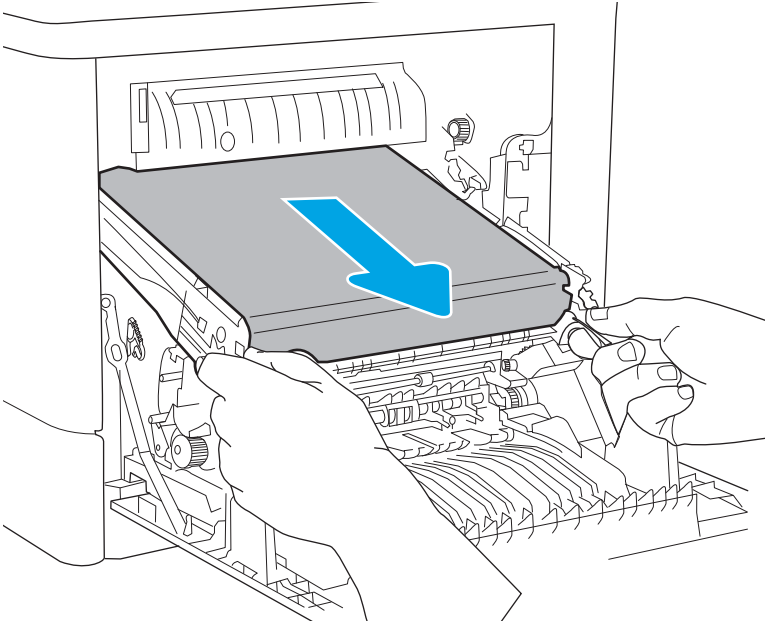


5. Grasp the outside edges of the ITB to support it, and then remove the ITB from the printer.

**Figure 1-1773** Remove the ITB

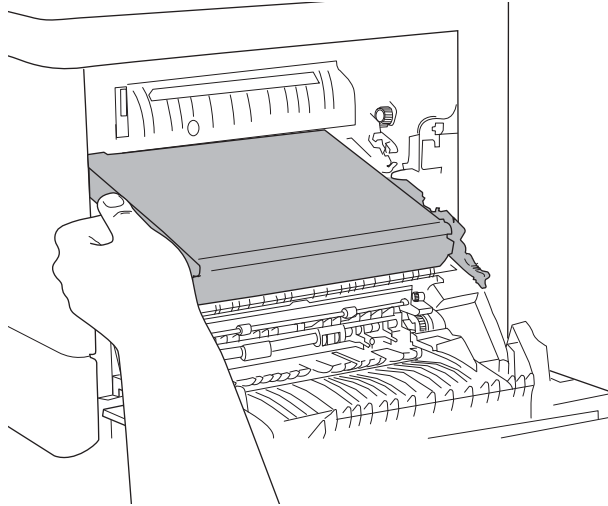

### Step 3: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

**Figure 1-1774** Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1775 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1776 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1777 Disconnect the keyboard flat cable

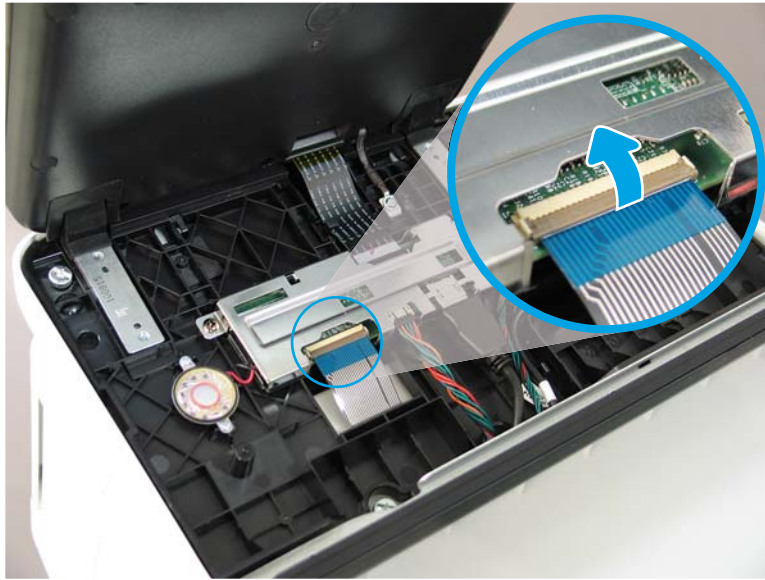

5. Slide the keyboard tray out until it stops.

Figure 1-1778 Slide the keyboard tray out





6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1779 Release two tabs




7. Slide the keyboard tray all the way out of the printer to remove it.

Figure 1-1780 Remove the keyboard



#### Step 4: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

Figure 1-1781 Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1782 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1783 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

Figure 1-1784 Disconnect the keyboard flat cable (keyboard models only)

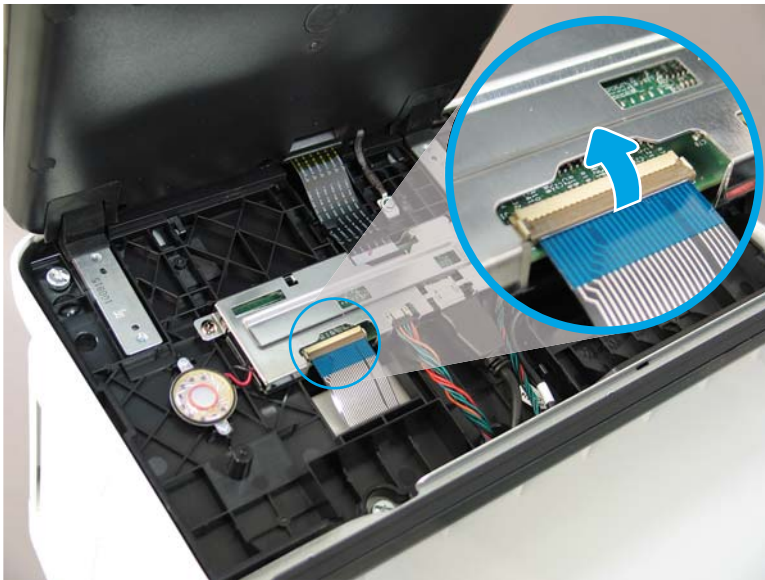


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

Figure 1-1785 Disconnect connectors

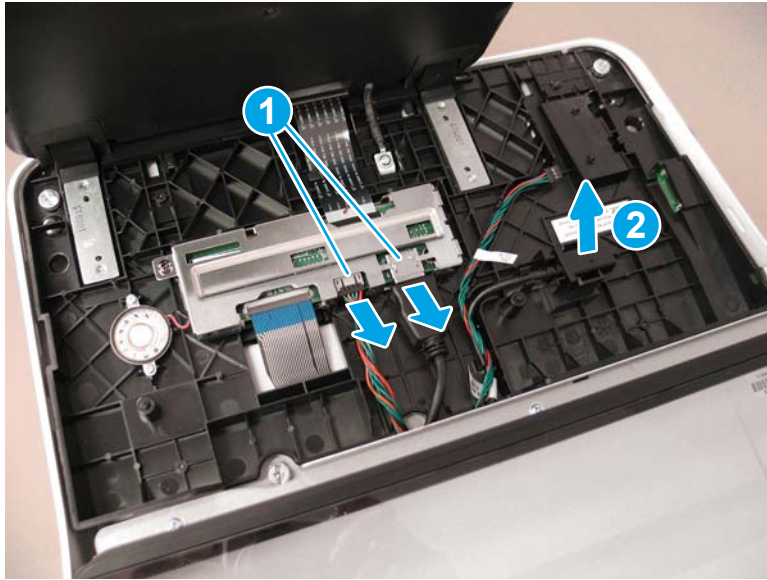


6. Remove three thumbscrews (callout 1).

Figure 1-1786 Remove three thumbscrews

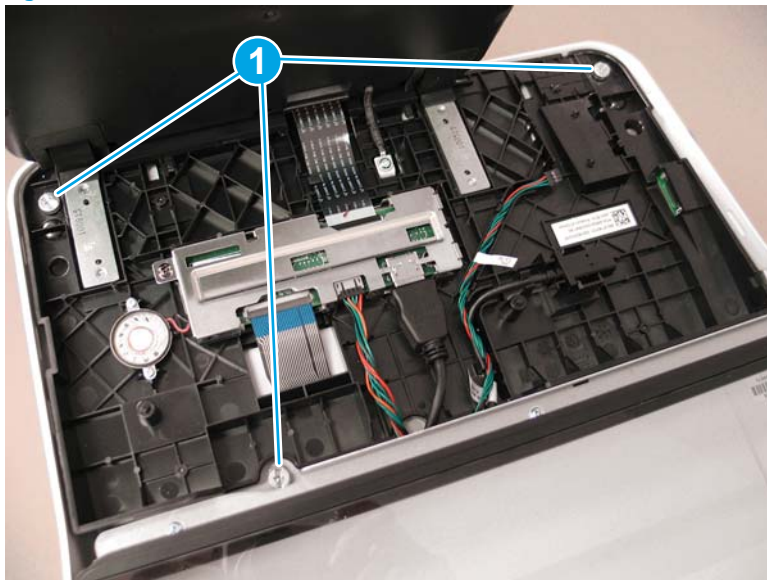


7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.

**Figure 1-1787** Remove the control panel

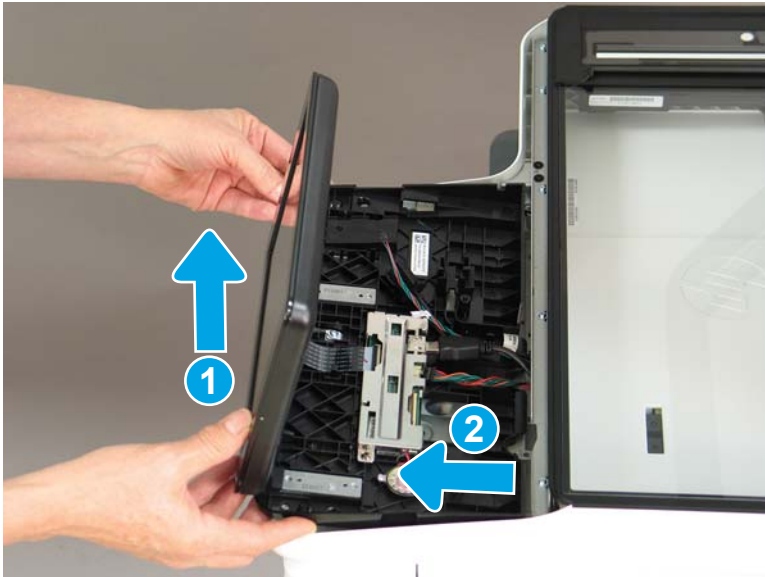


**Step 5: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)**

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1139

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

**Figure 1-1788** Remove the SCB cover

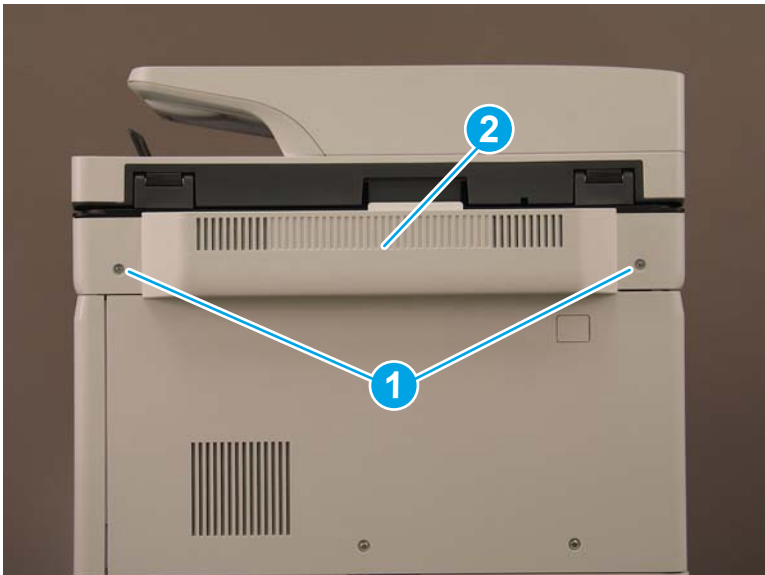


2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).

Figure 1-1789 Remove the small cover



- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).


Figure 1-1790 Remove the stapler/stacker rear cover

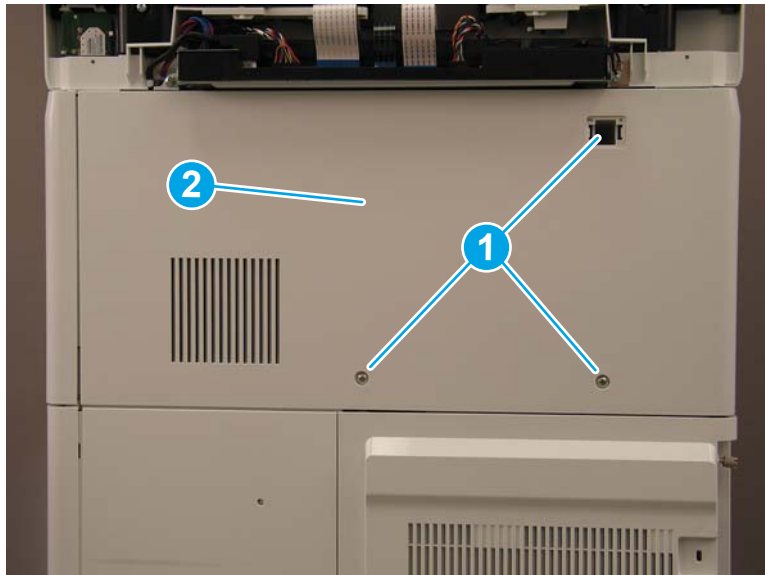




3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).

Figure 1-1791 Remove the upper rear cover

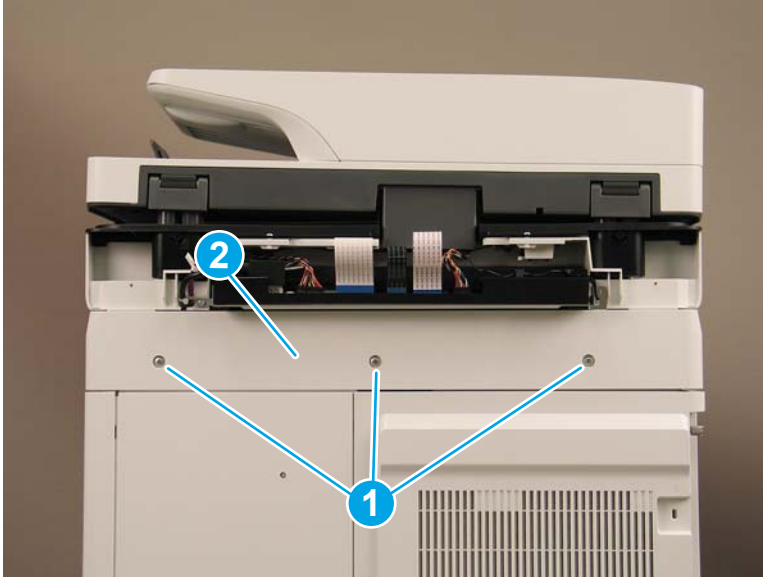

4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

Figure 1-1792 Remove the formatter cover

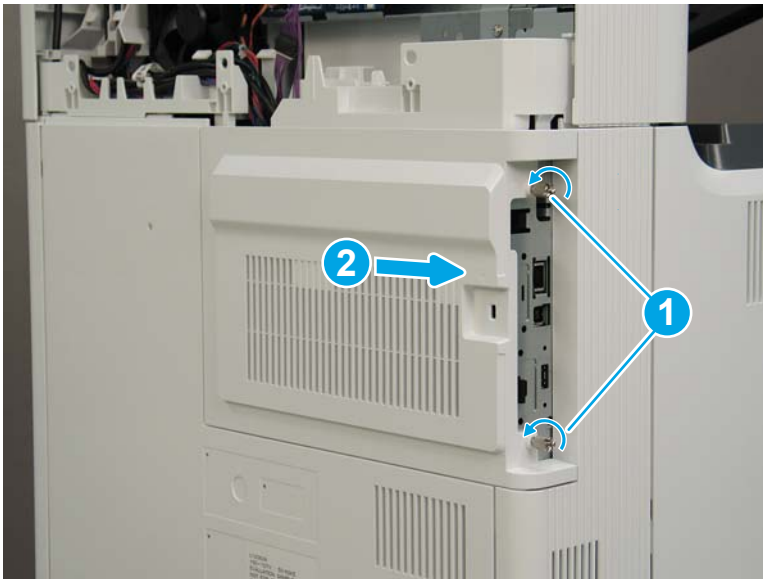




5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

Figure 1-1793 Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1794 Disconnect two connectors

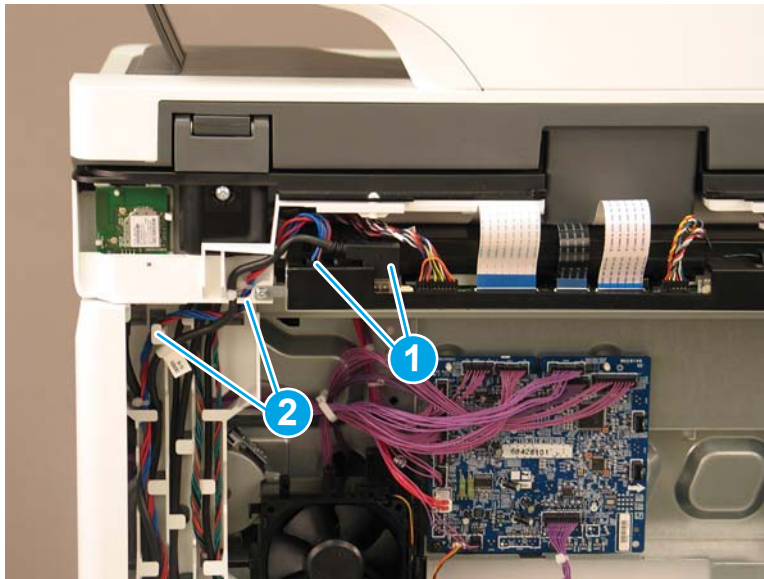


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1795 Disconnect five connectors




8. Flow M682z only: Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1796 Disconnect the wireless connector

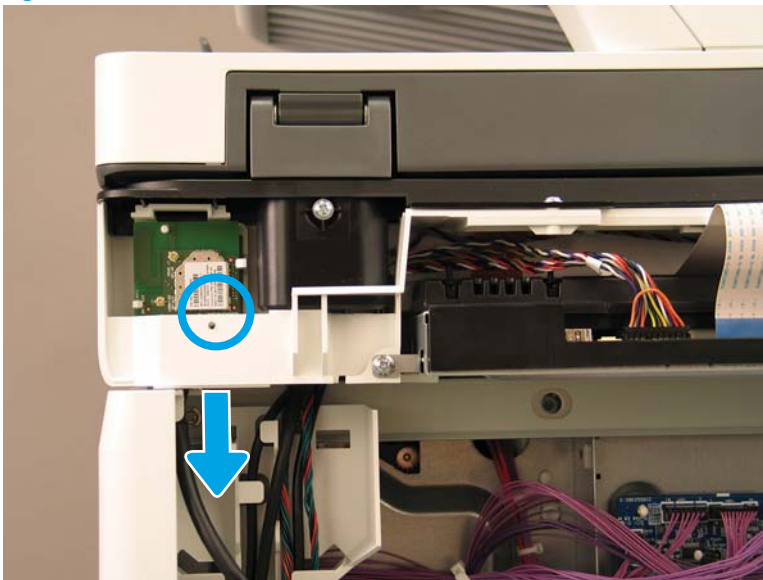


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1797 Release the cables

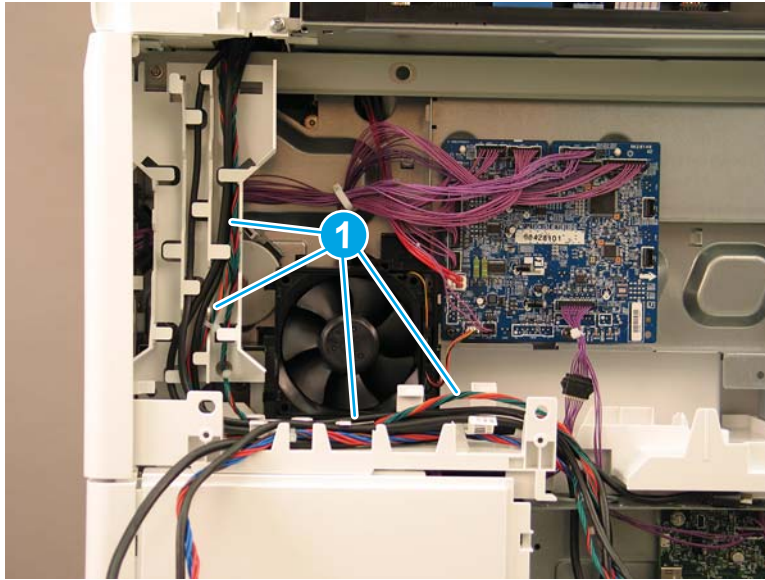


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1798 Remove four screws

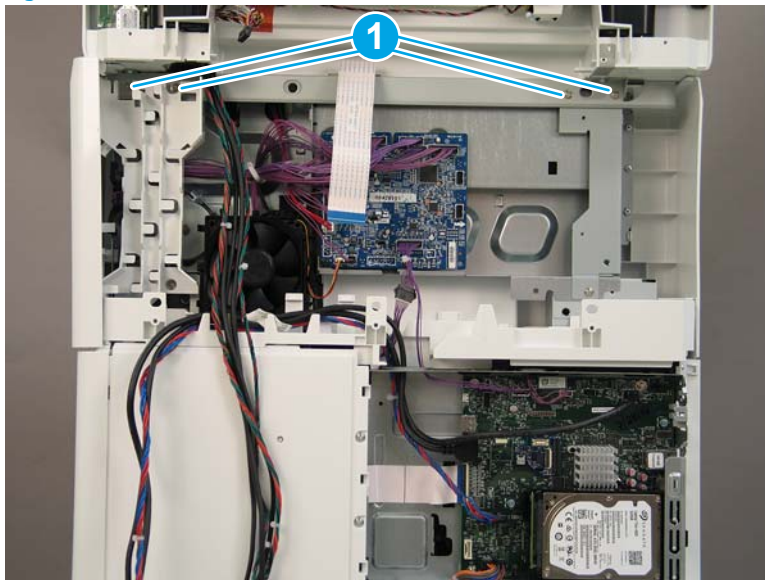

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1799 Remove three screws

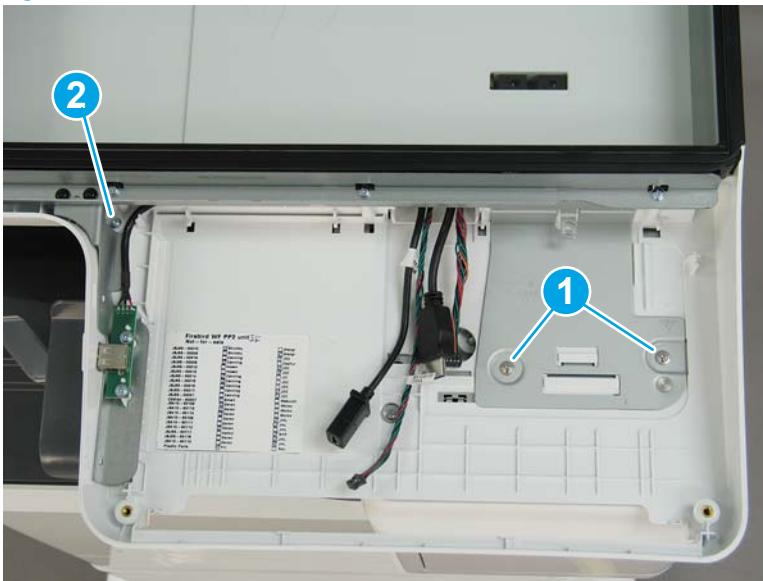

12. Lift the document feeder and image scanner off of the printer to remove them.

Figure 1-1800 Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

Figure 1-1801 Remove the wireless card

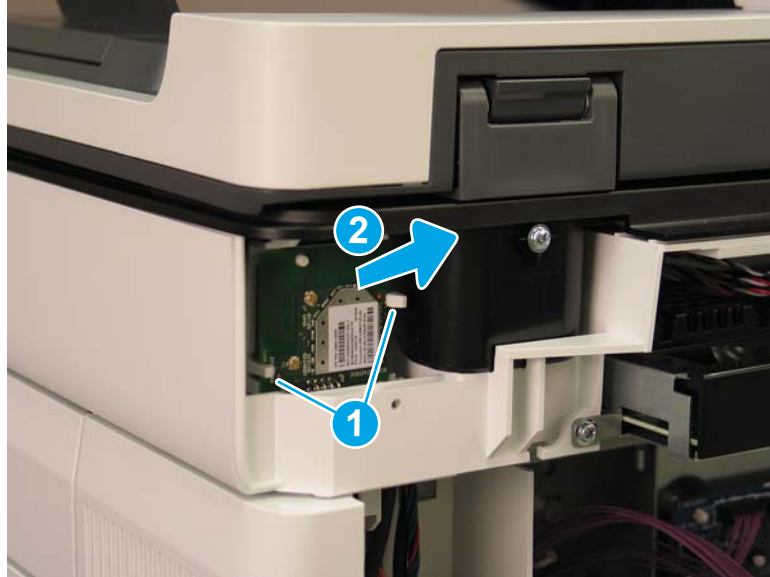

- ii. Connect the cable to the wireless card (callout 1).


Figure 1-1802 Connect the wireless card connector






- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

Figure 1-1803 Reinstall the wireless card

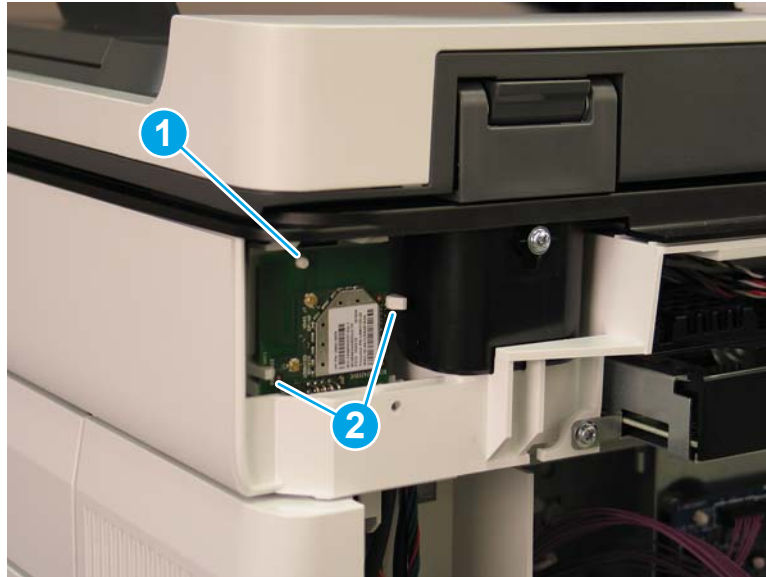


- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1804 Install the SCB cables

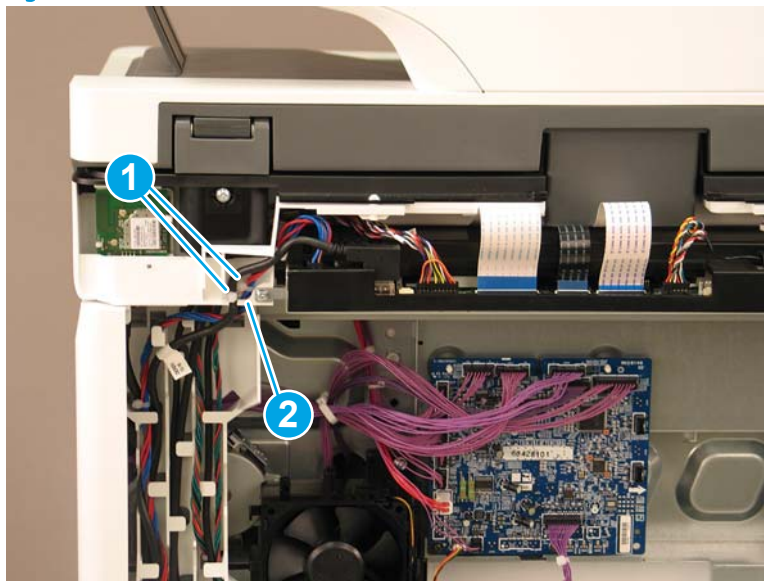

#### Step 6: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1139


1. Open the front door.

Figure 1-1805 Open the front door



2. Open the stapler door.


Figure 1-1806 Open the stapler door

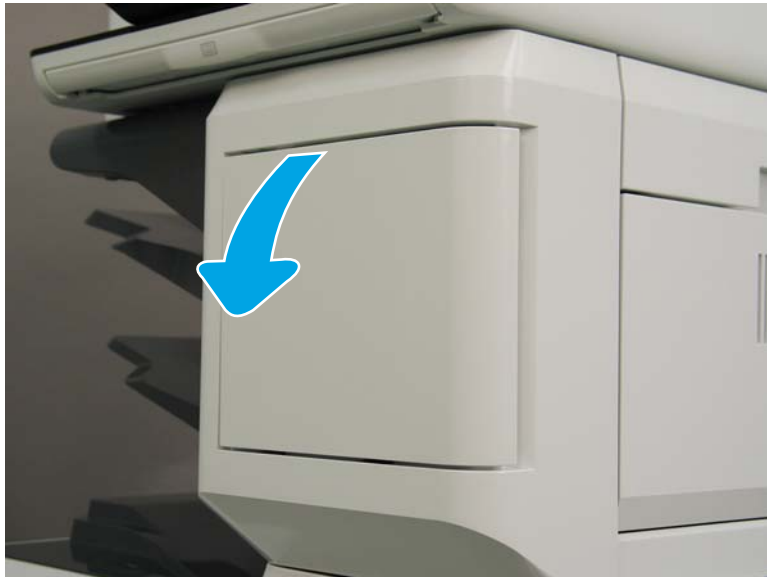



3. Release the latch, and then remove the staple cartridge.

Figure 1-1807 Remove the staple cartridge

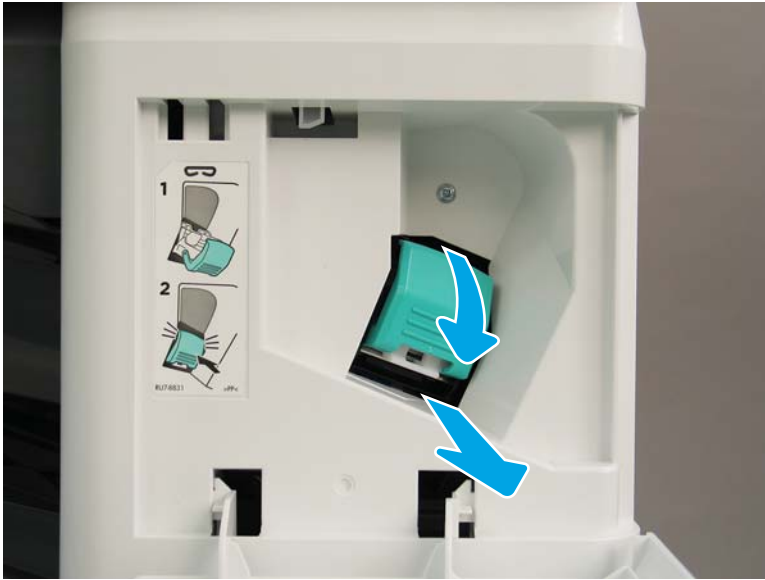

4. Remove one screw (callout 1).

Figure 1-1808 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-1809 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1810 Remove one screw

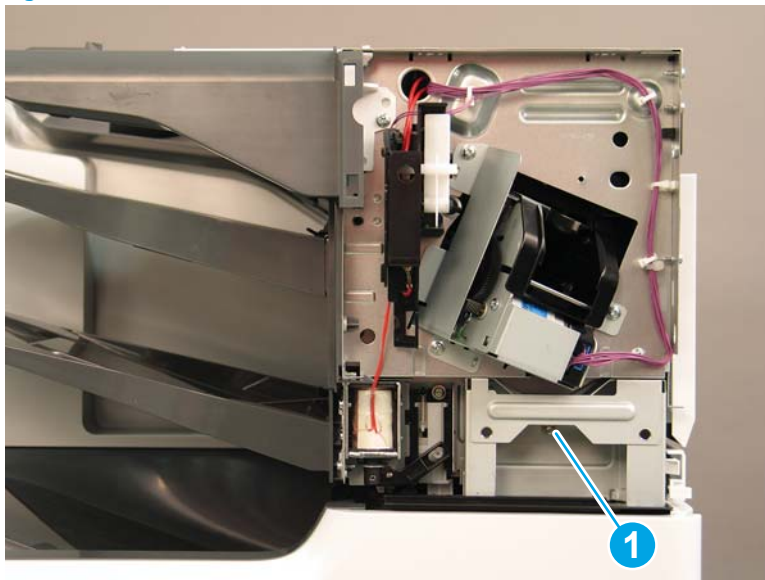


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

**Figure 1-1811** Remove the stapler/stacker right upper cover

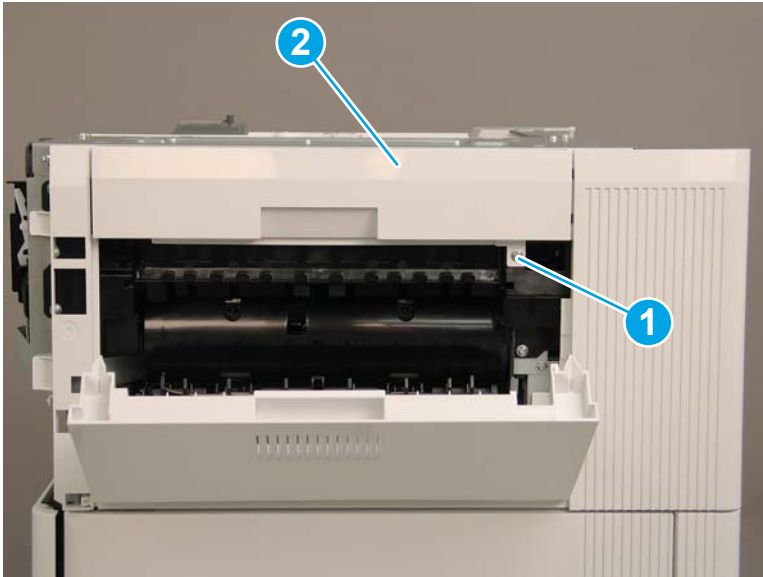


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

**Figure 1-1812** Remove the stapler rear cover

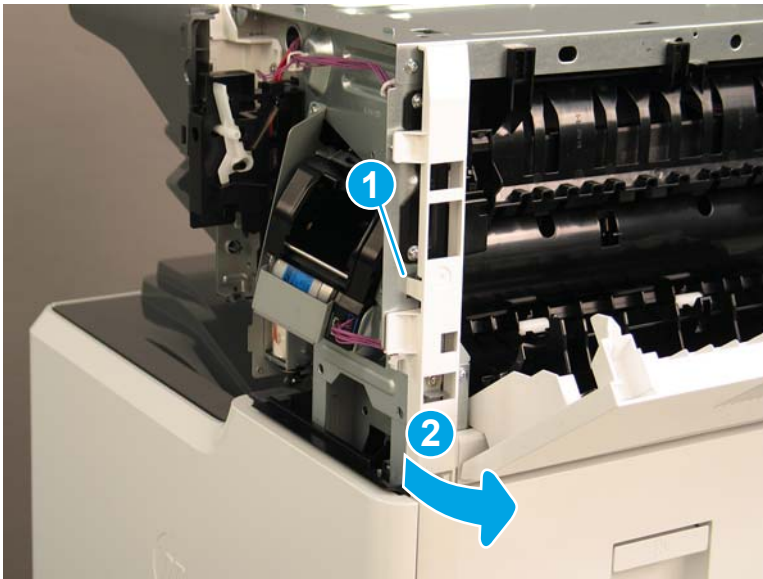


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1813 Remove the stapler/stacker rear corner cover

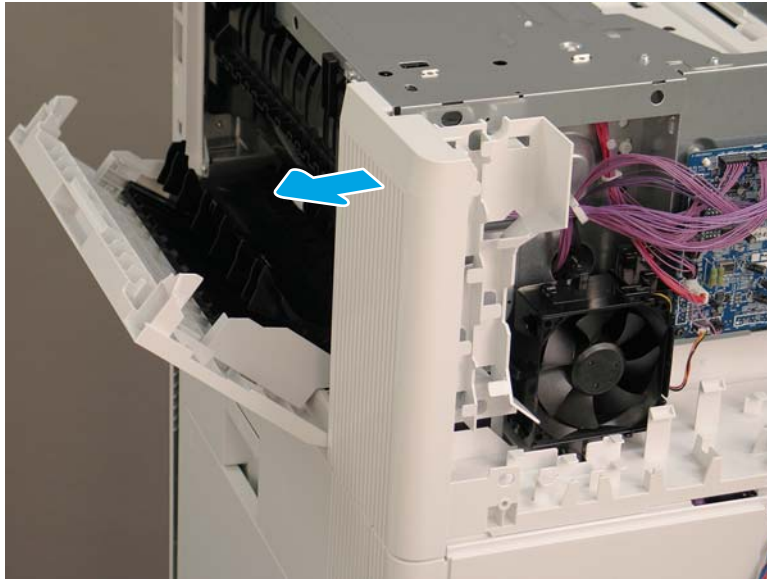


10. Remove two screws (callout 1).

Figure 1-1814 Remove two screws

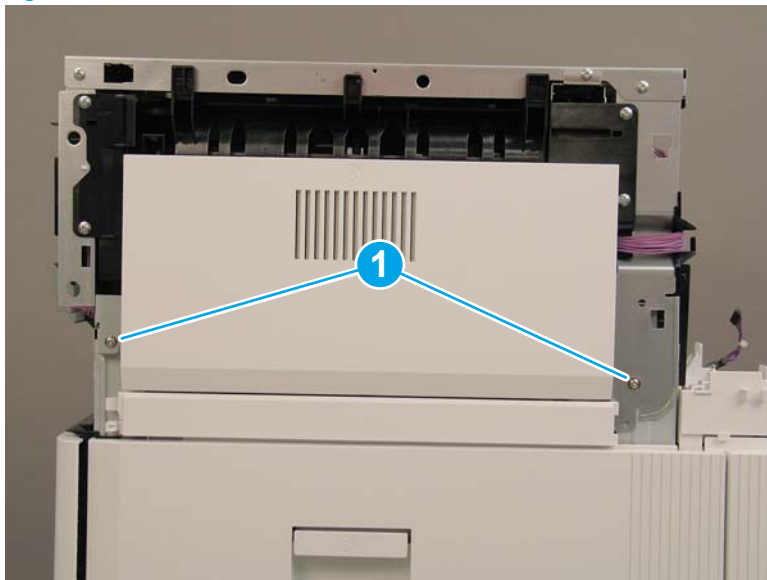


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1815 Remove the cable guide

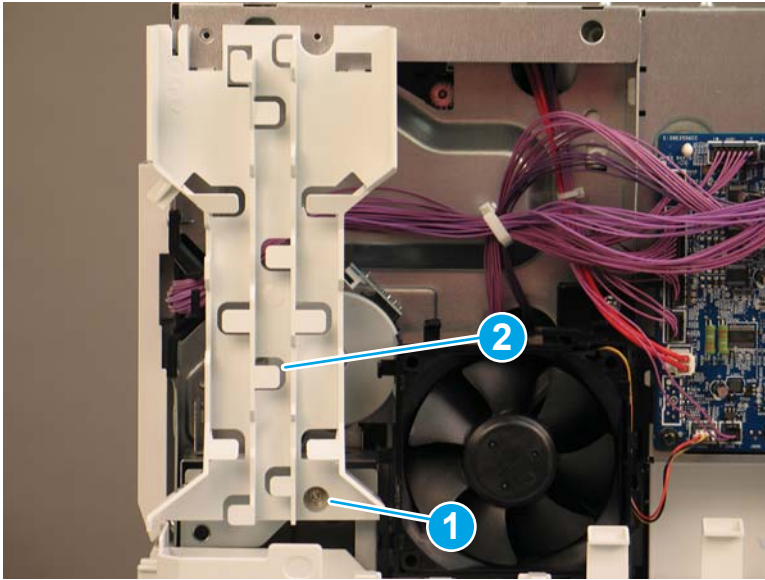

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1816 Disconnect one connector

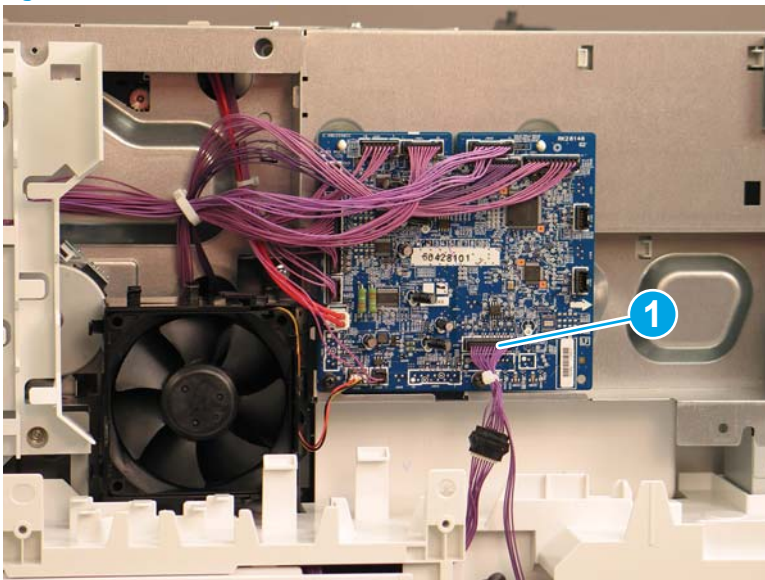



13. Remove two screws (callout 1).


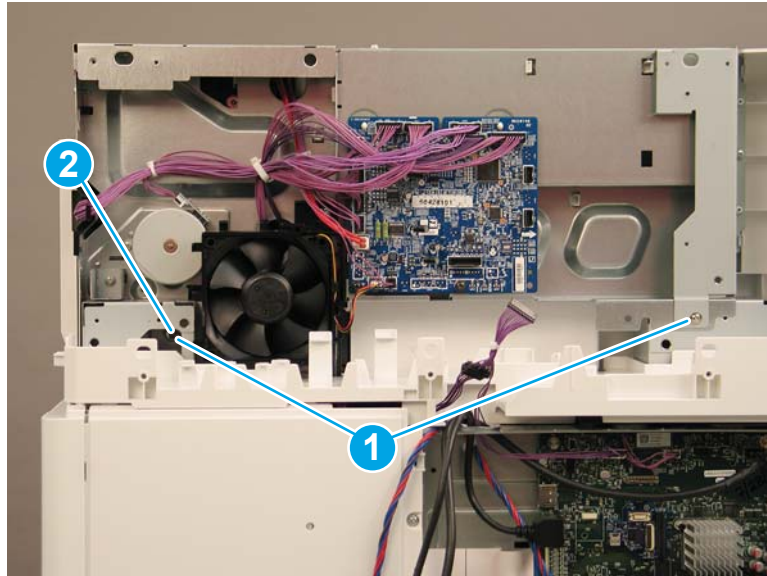
 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1817 Remove two screws



14. Lift the stapler/stacker away from the printer.


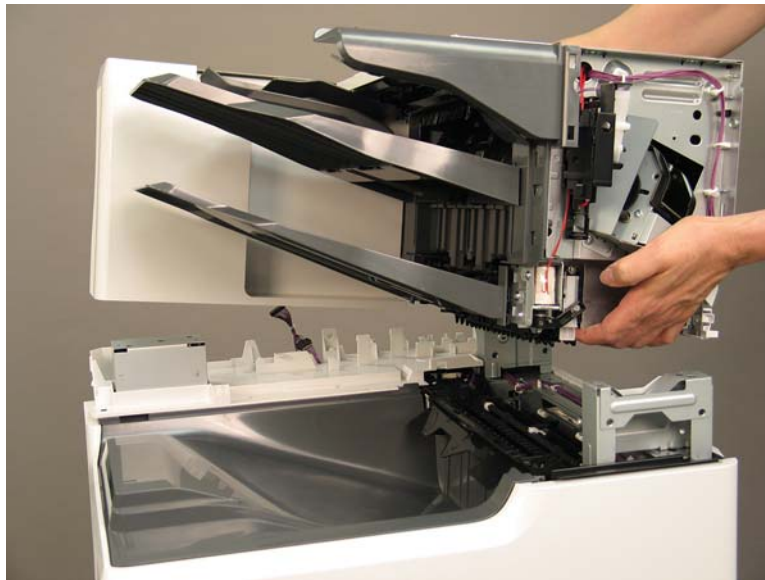

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1818 Remove the stapler/stacker




#### Step 7: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1819** Remove the face-down front cover

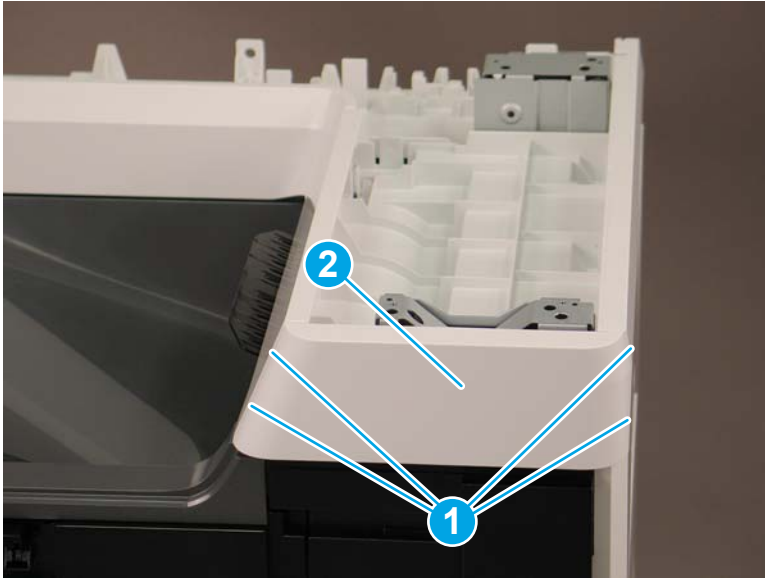


3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Face-down front cover


- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

**Figure 1-1820** Install the cover

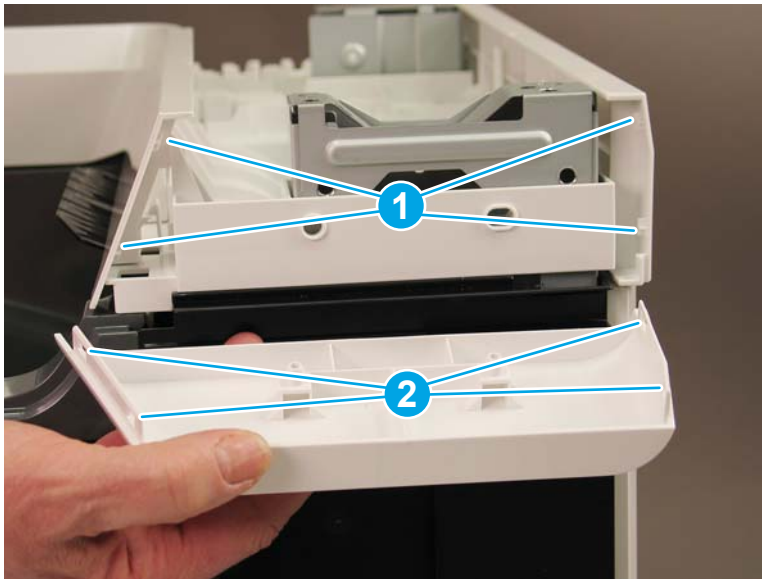



### Step 8: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)

▲ Release two tabs (callout 1), and then remove the top cover (callout 2).


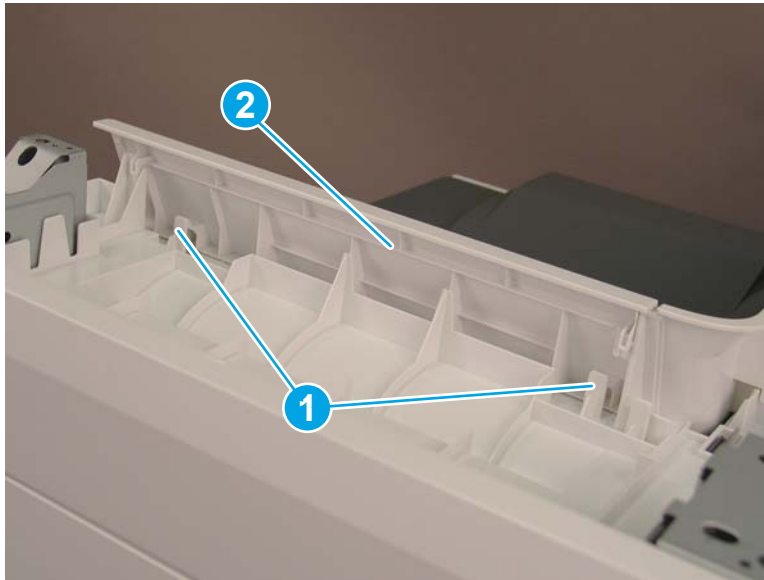

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1821 Remove the top cover



### Step 9: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)

▲ Release two tabs (callout 1), and then remove the right cover (callout 2).


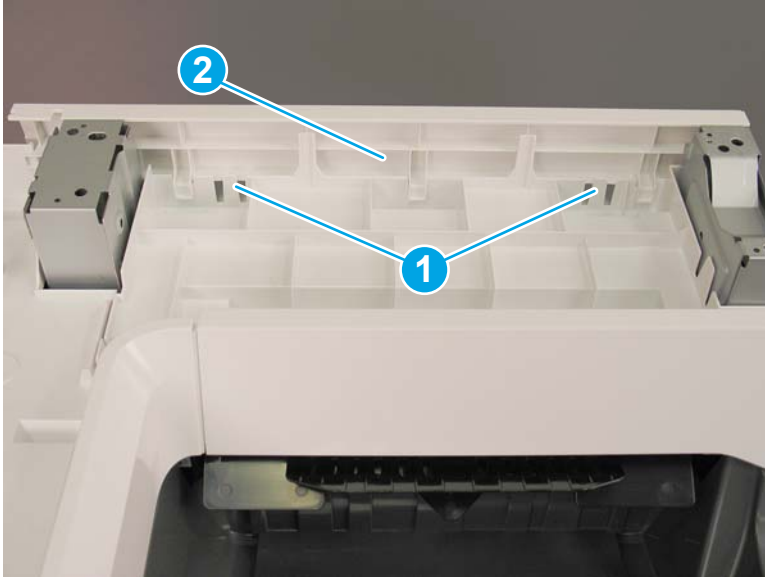

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1822 Remove the right cover



Step 10: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1139

▲ Release two tabs (callout 1), and then remove the front cover (callout 2).


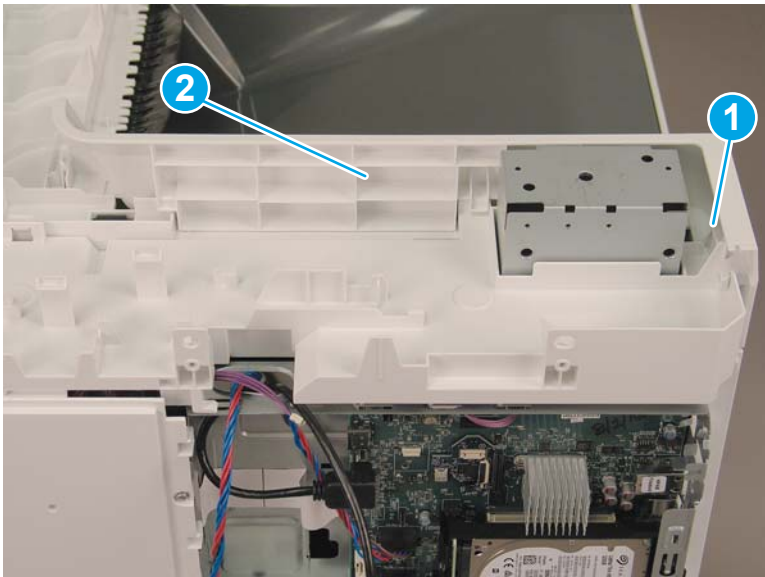

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1823 Remove the front cover




### Step 11: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)


▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1824 Remove the rear upper cover

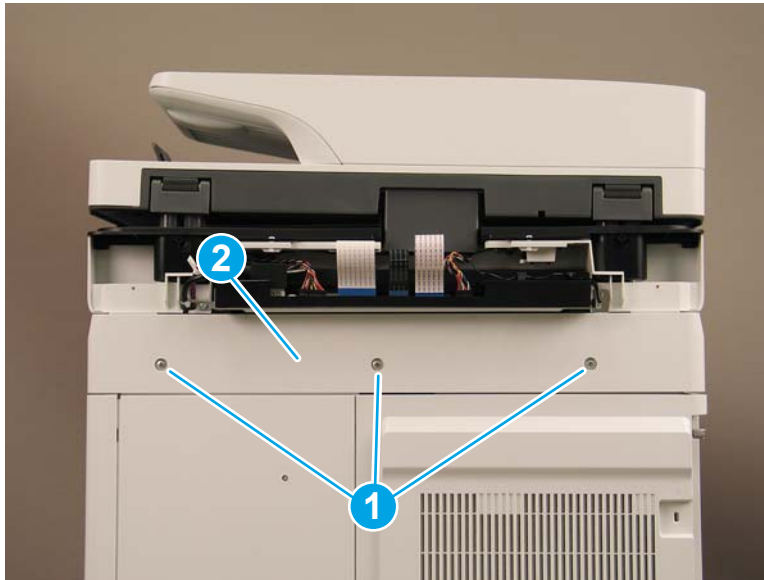


### Step 12: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\) on page 1139](#)


▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1825 Remove two screws and the face-down cover

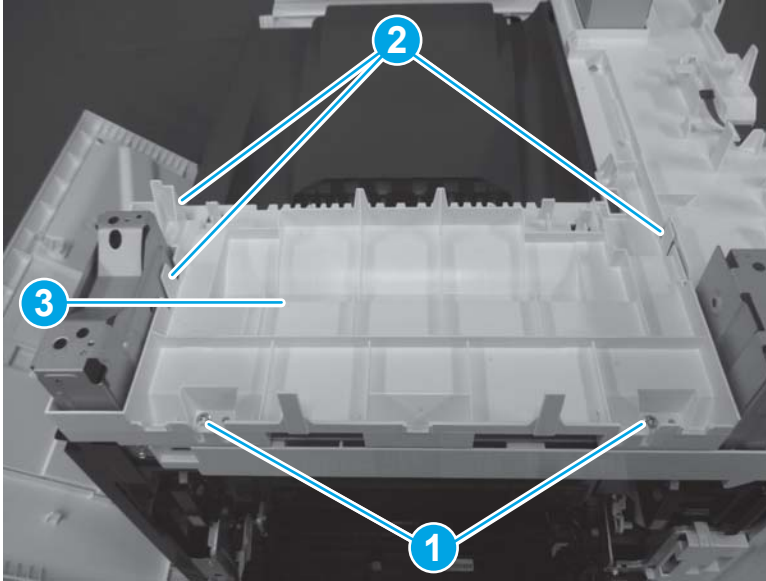


Step 13: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

 **NOTE:** This step is for the M681/M682/E67550/E67560/E67650/E67660 printers. For the M652/M653/E65050/E65060/E65150/E65160 printers, skip this step and go to [Step 14: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#) on page 1139

1. Remove two screws (callout 1), and then release one tab (callout 2).

Figure 1-1826 Remove two screws and release one tab

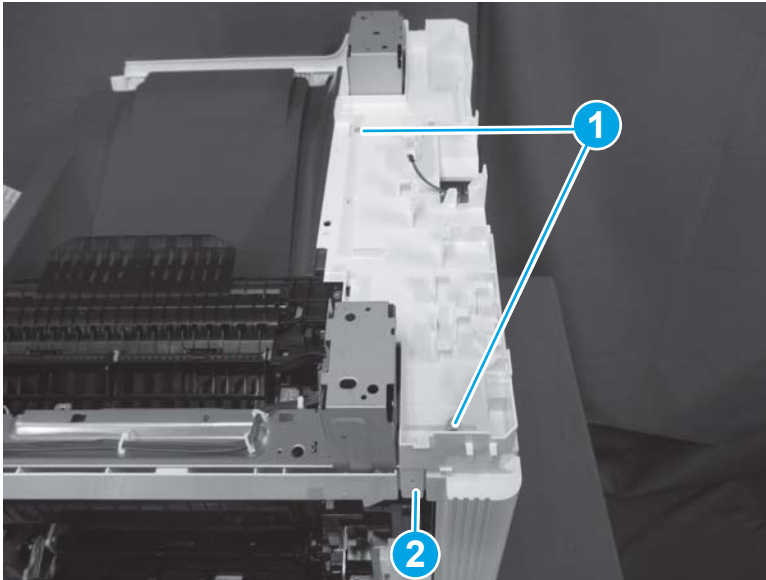


2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


---

**Figure 1-1827** Remove one screw and the main cover

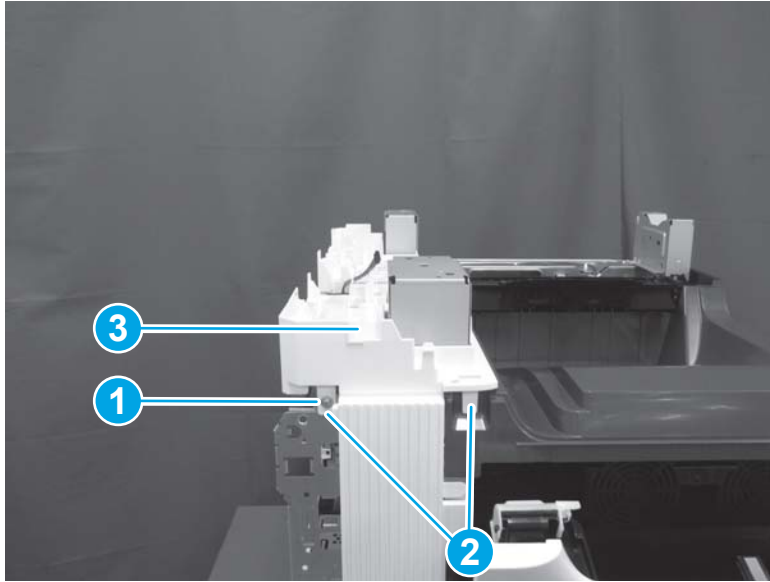

#### Step 14: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

---

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 16: Remove the output bin on page 1144](#)

---

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

---

1. Tilt the control panel to the fully raised position.

**Figure 1-1828** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

Figure 1-1829 Remove the cover



3. Remove one thumbscrew (callout 1)

---

 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.


---

Figure 1-1830 Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

Figure 1-1831 Release the control panel

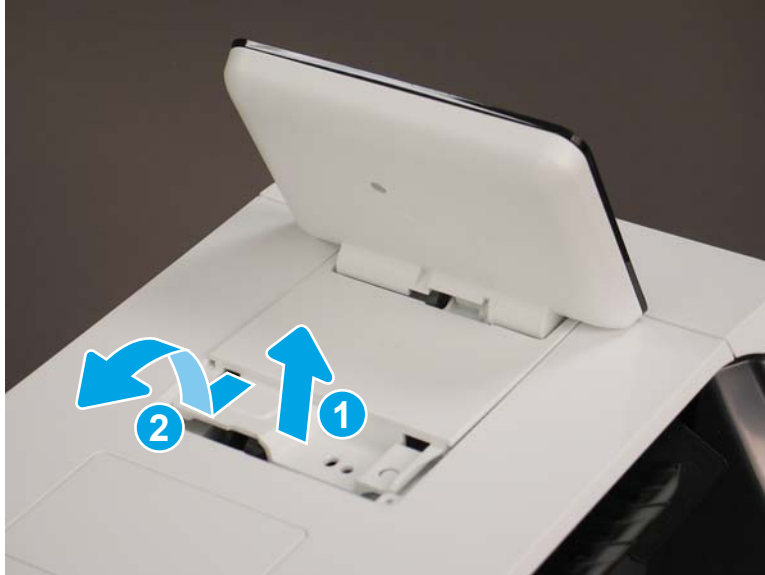

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

Figure 1-1832 Disconnect two connectors

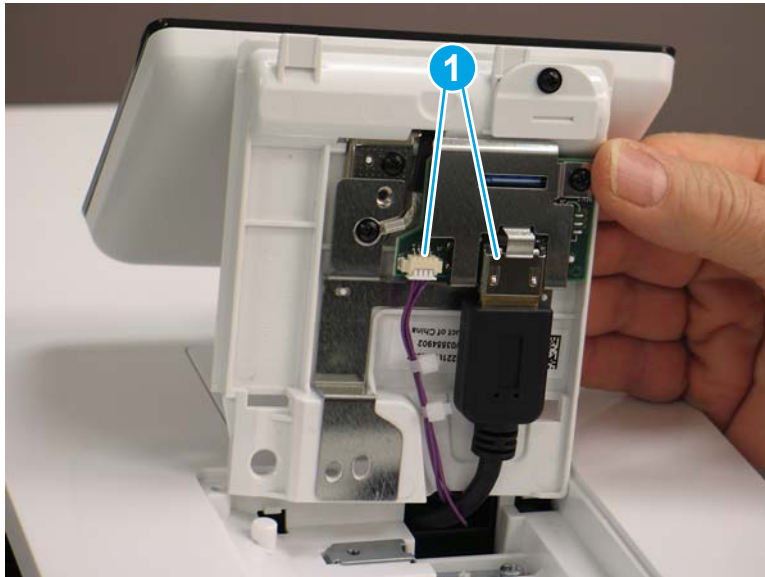




6. Remove the control panel.

**Figure 1-1833** Remove the control panel




**Step 15: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)**

 **NOTE:** This step is for the M652/M653/E65050/E65060/E65150/E65160 printers. For the M681/M682/E67550/E67560/E67650/E67660 printers, skip this step and go to [Step 16: Remove the output bin on page 1144](#)

1. Open the following doors:
  - Front door
  - Left door
  - Right door


2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1834 Remove the NFC cover

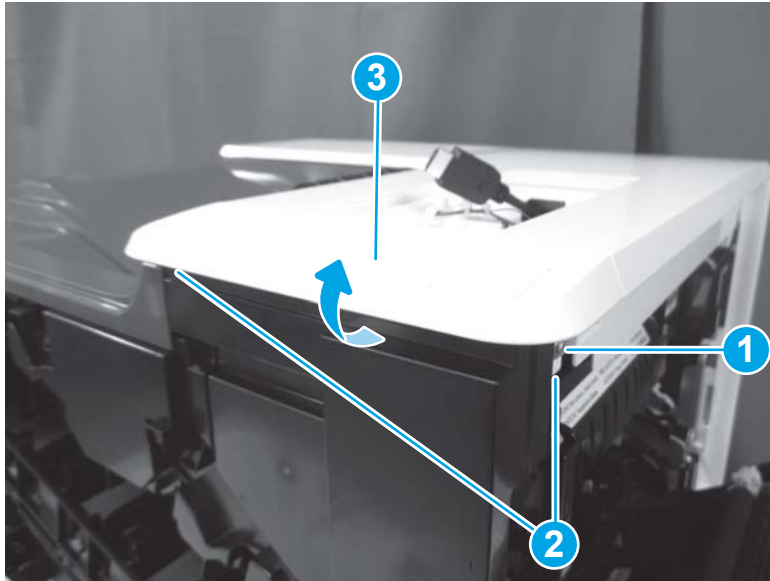


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1835 Remove one screw and release one tab

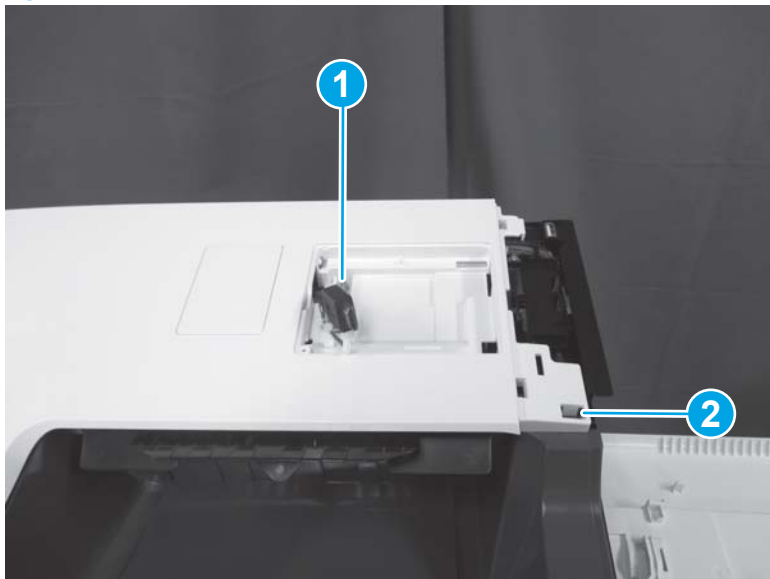

4. Release two tabs (callout 1).

Figure 1-1836 Release two tabs

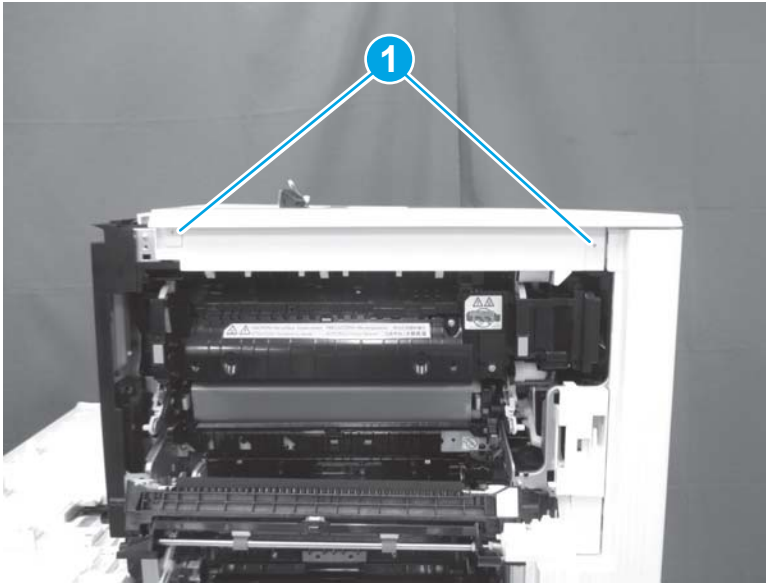

5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).


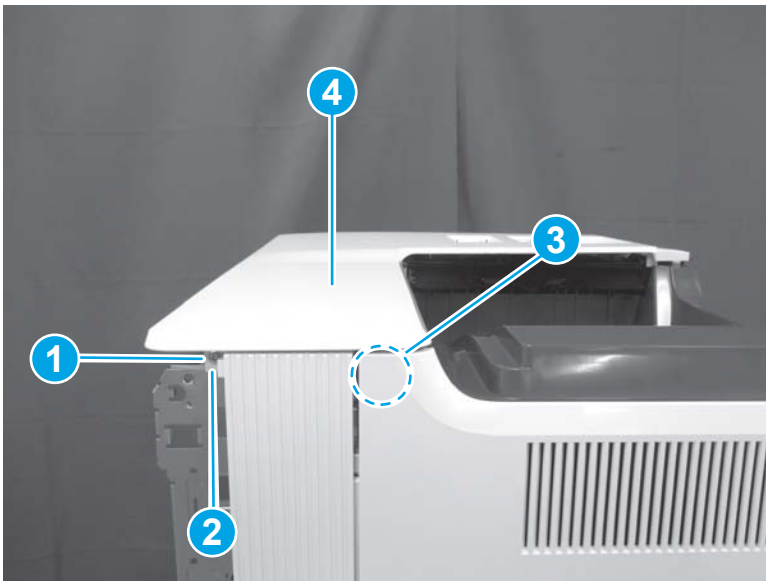
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1837 Remove the top cover




### Step 16: Remove the output bin


1. Open the following doors:

- Front door
- Left door
- Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

---


**Figure 1-1838** Remove the output bin

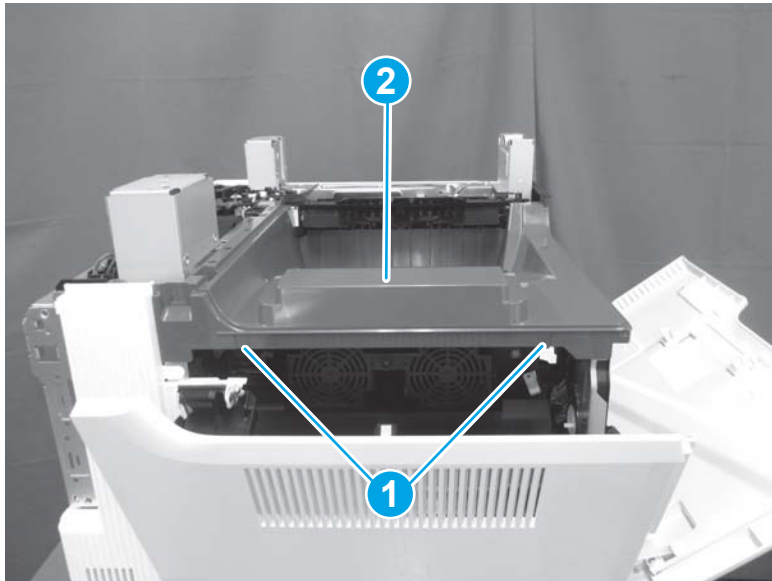

### Step 17: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1839 Remove the formatter cover

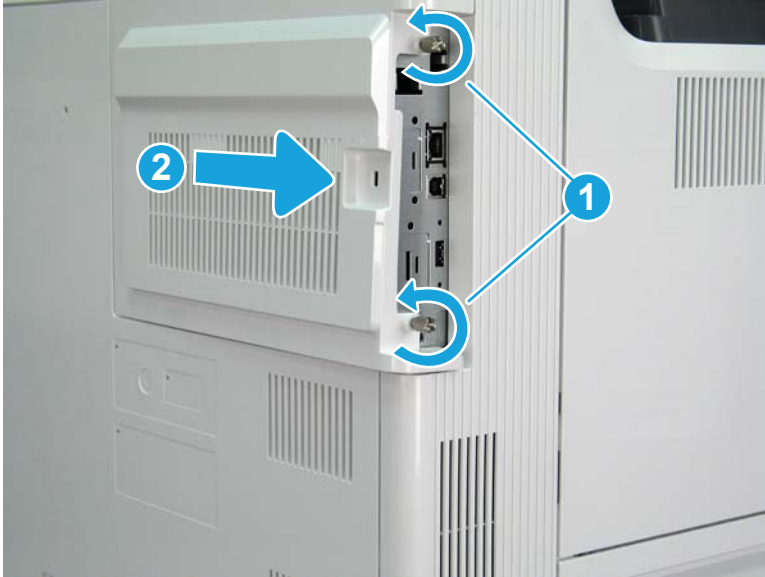

### Step 18: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1840 Remove the left rear cover

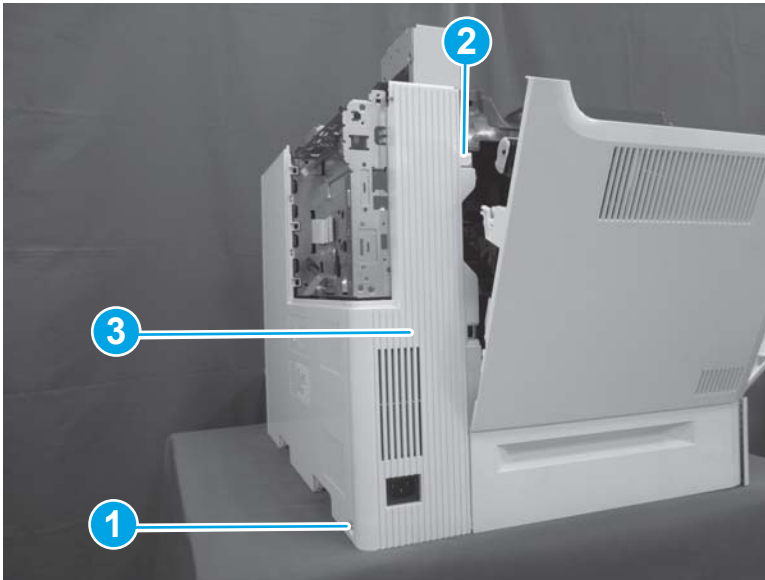


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1841 Install the left rear cover

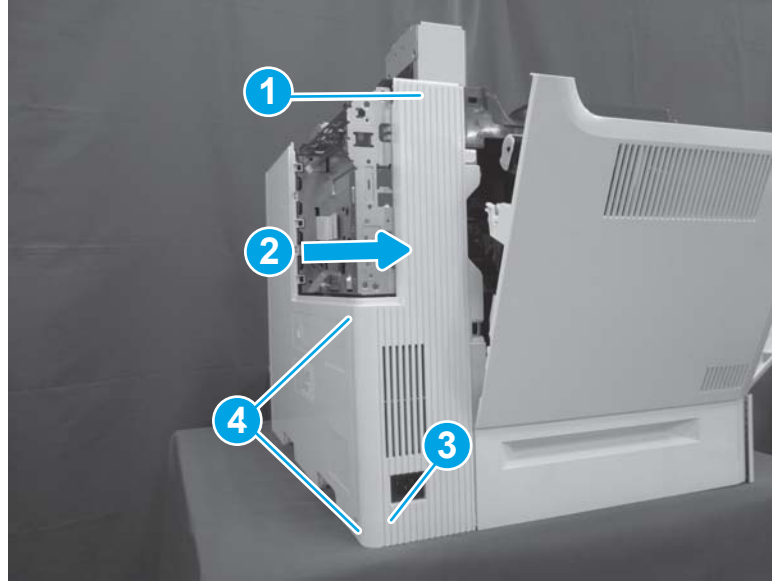


#### Step 19: Remove the rear cover


- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1842 Remove two screws and the rear cover

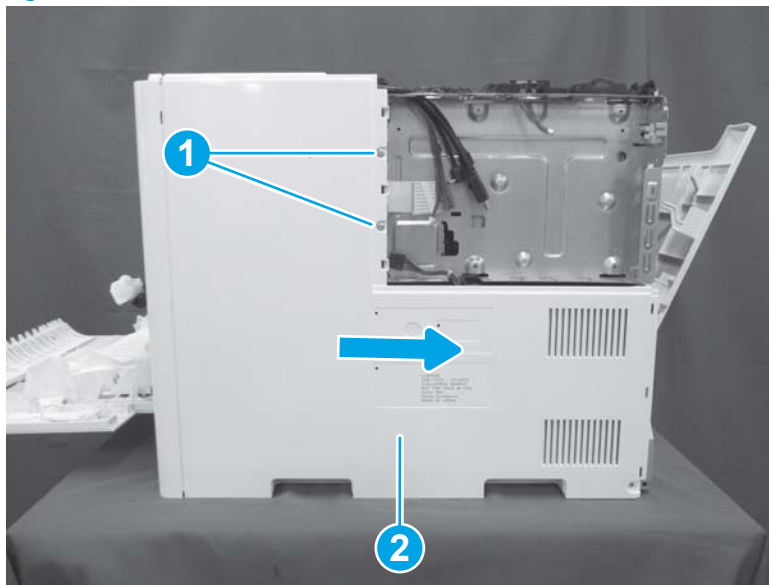

#### Step 20: Remove the fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)

 **NOTE:** This step is for fax printers. For other models, skip this step and go to [Step 21: Remove the hard disk drive \(HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660\)](#) on page 1148


1. Locate the fax PCA on the formatter.

Figure 1-1843 Locate the fax PCA



2. Rotate end left end of the fax PCA away from the formatter (callout 1) to disconnect the connector, and then slide the card away from the formatter (callout 2) to remove it.

Figure 1-1844 Remove the fax PCA

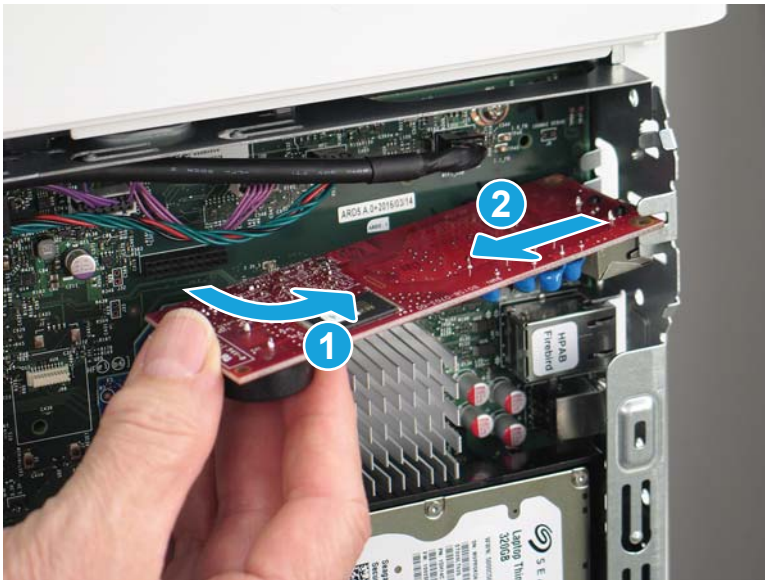


**Step 21: Remove the hard disk drive (HDD; M653dh/M681/M682/E67550/E67560/E67650/E67660)**

1. Release the locking connector (callout 1), and then pinch the retainer (callout 2) to release it.



Figure 1-1845 Release the HDD

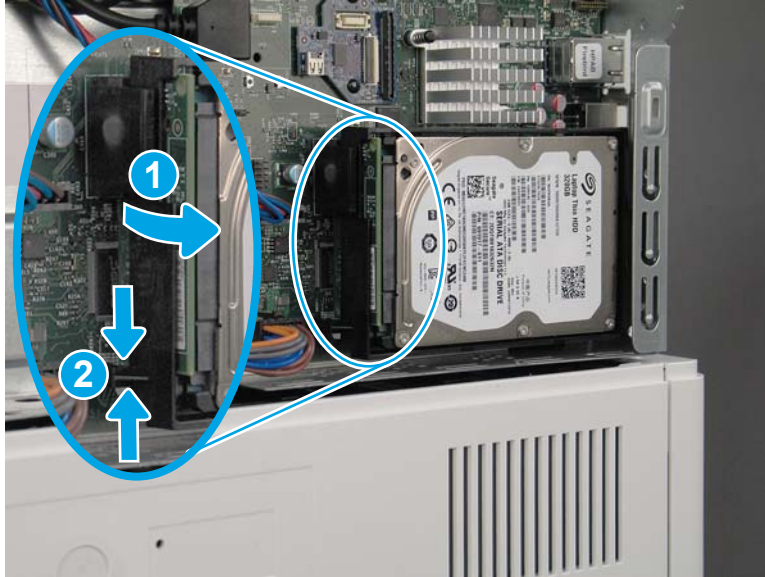


2. Rotate the connector end of the HDD out and away from the formatter (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-1846 Remove the HDD



## Step 22: Remove the formatter

- ▲ Disconnect all of the connectors on the formatter, remove four screws, and then remove the formatter.

 **NOTE:** If any accessories, such as the trusted platform module (TPM) or two internal USB ports, are installed on the formatter, remove them and install them on the replacement formatter.


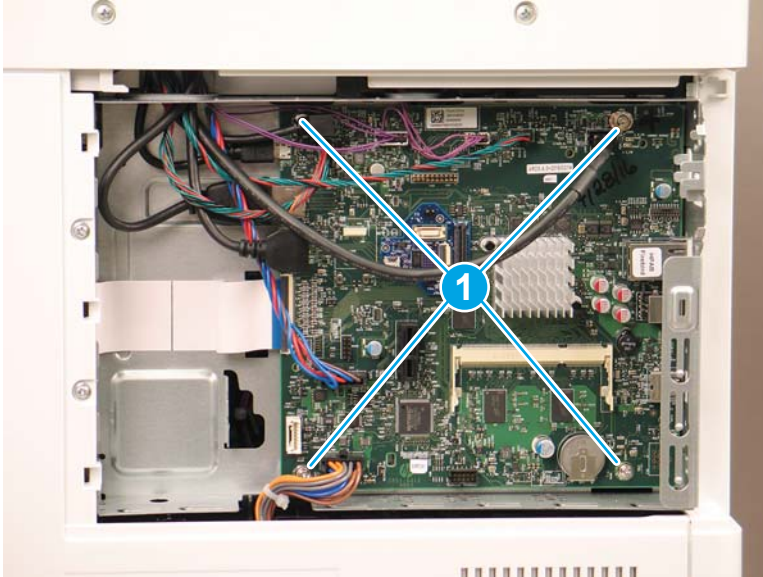
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1847 Remove the formatter




### Step 23: Remove the formatter case

1. Disconnect one connector (callout 1), remove two screws on the left side of the case (callout 2), and then remove two screws on the right end of the case (callout 3).


 **NOTE:** These screws are gold tinted to provide additional grounding. Make sure that these screws are reinstalled in the correct locations.

Figure 1-1848 Disconnect one connector and remove four screws

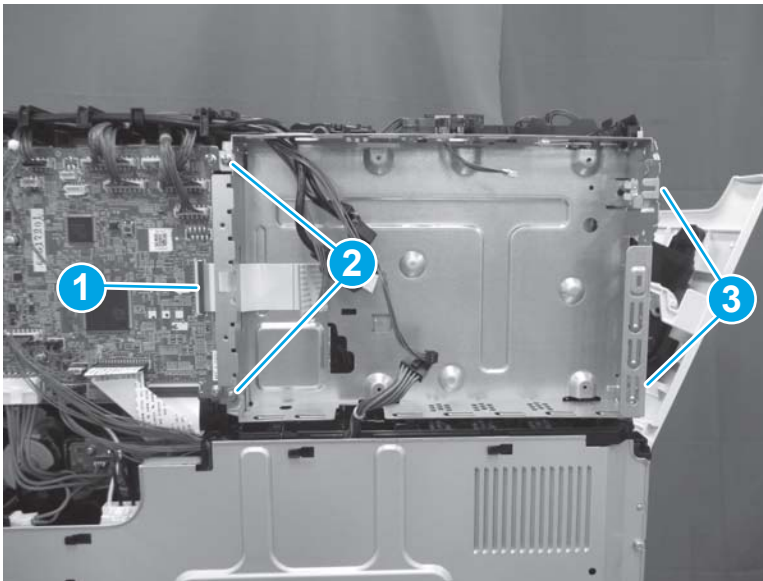


2. Tilt the bottom of the formatter case away from the printer.

Figure 1-1849 Tilt the formatter case

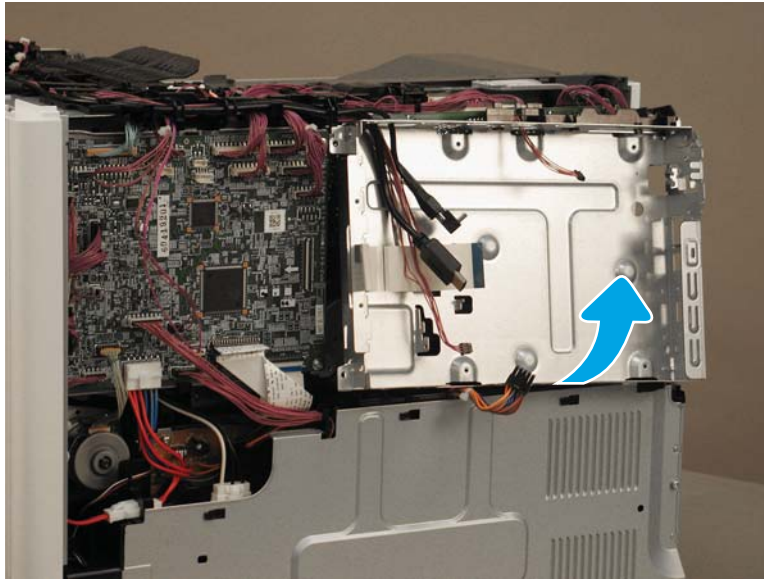

3. Locate one round boss (callout 1) and two hooks (callout 2) on the cable guide. Push up on the boss, and then slide the cable guide to the left to remove it. Remove the formatter case.

Figure 1-1850 Remove the cable guide

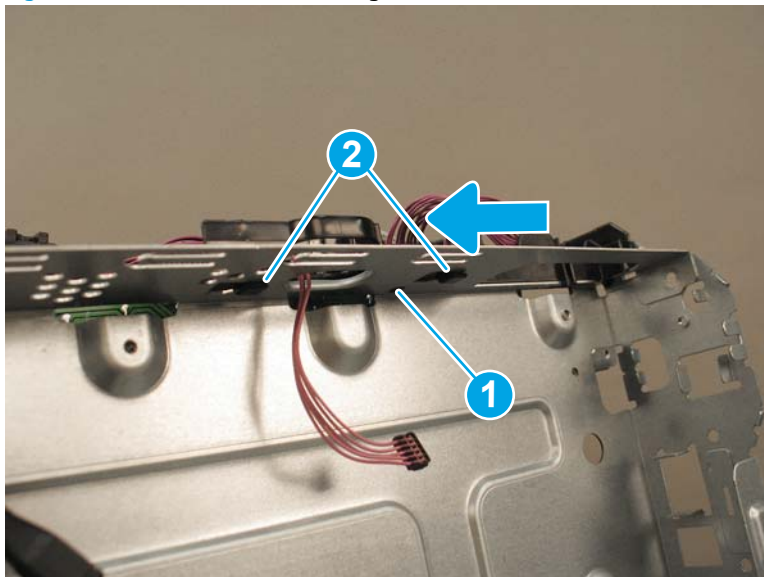


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Formatter case


- a. Align the hook on the right side of the cable guide with the slot in the formatter case (callout 1). Align two tabs (callout 2) with the slots (callout 3) in the top of the formatter case. Align the boss with the opening in the sheet metal (callout 4). Slide the cable guide to the right to lock it into position.

Figure 1-1851 Install the cable guide

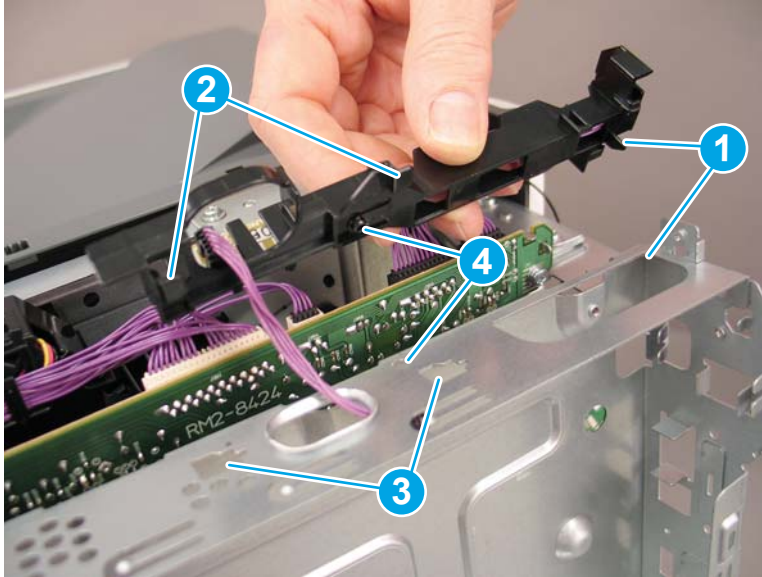

- b. Make sure that the island of data (IOD) cable (callout 1) is routed through the formatter case.

Figure 1-1852 Check the IOD cable

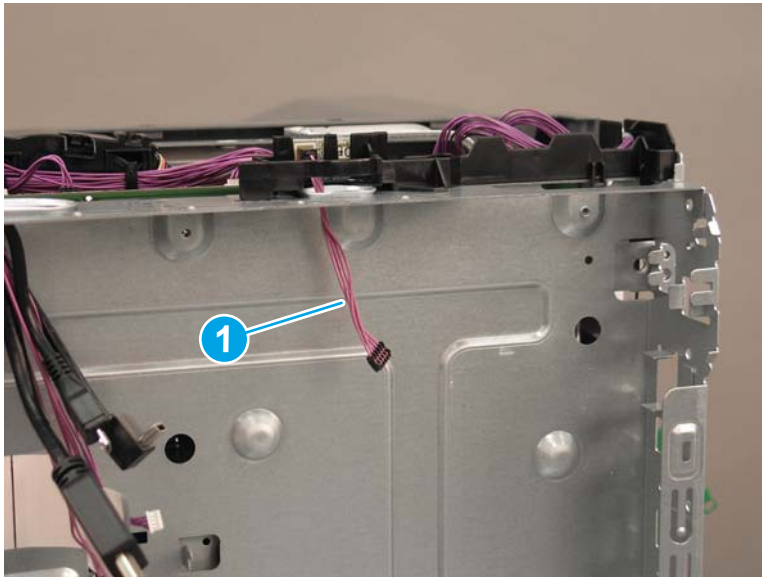


#### Step 24: Remove the DC controller PCA

1. Release four retainers (callout 1), and then disconnect all connectors on the DC controller PCA. Remove four screws (callout 2), and then remove the DC controller PCA.



Figure 1-1853 Remove the DC controller PCA

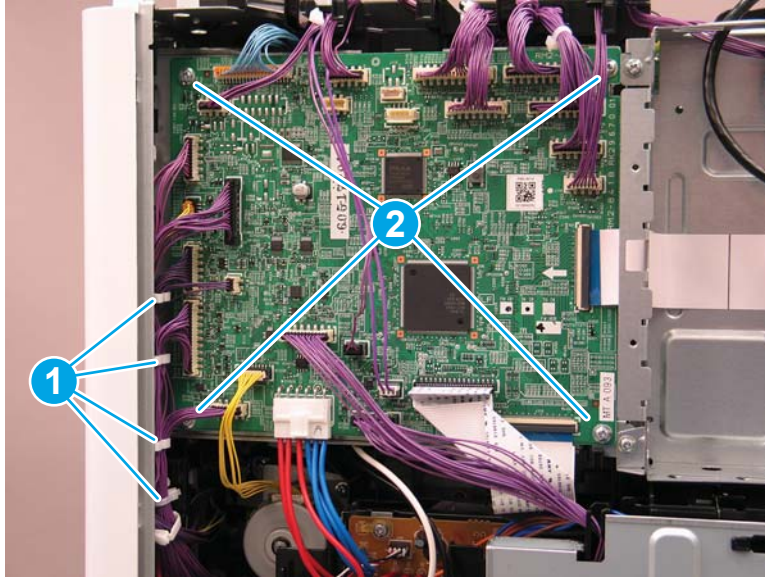

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


#### Special installation instructions: DC Controller PCA

- ▲ Two cables (callout 1) will fit in more than one connector. Make sure that these cables are installed in the correct connectors.



**NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-1854 Check the yellow cable

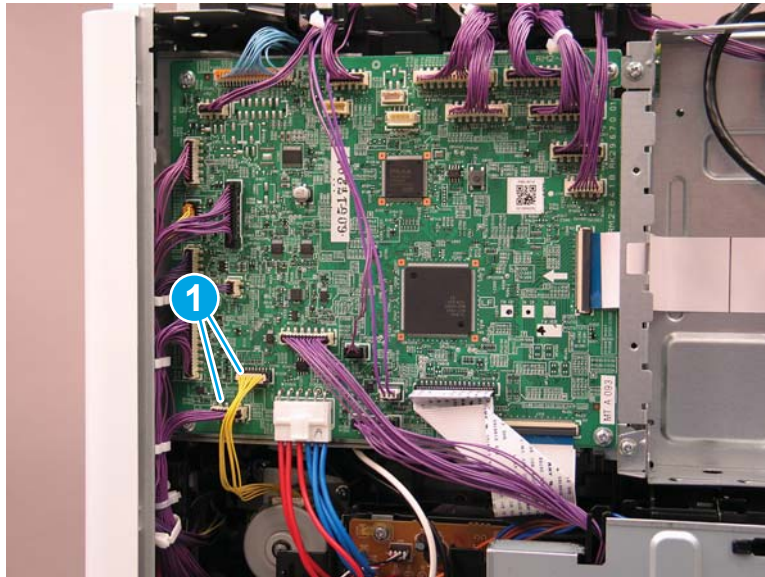

#### Step 25: Remove the DC controller stay

- ▲ Gently push out on the sheet metal tab (callout 1) to release the DC controller stay (callout 2), and then lift up to remove it.


Figure 1-1855 Remove the DC controller stay

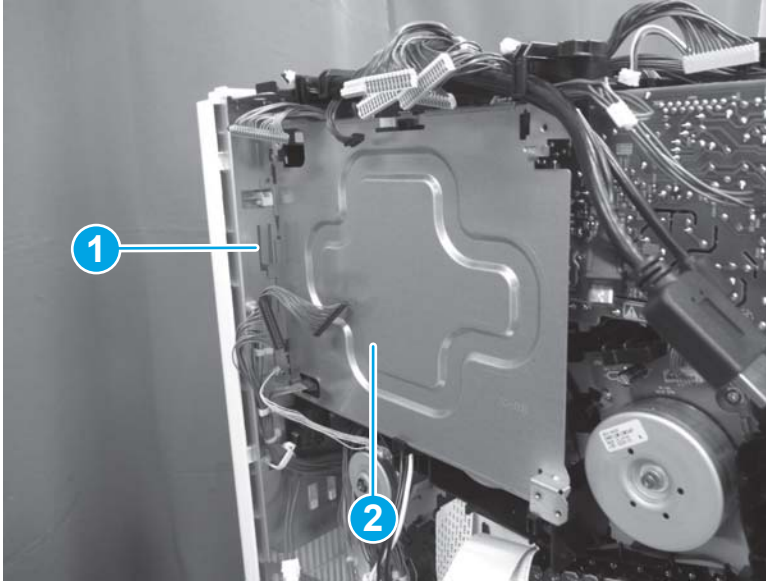


Step 26: Remove the upper high-voltage power supply (HVPS)

1. Disconnect eight connectors (callout 1).

Figure 1-1856 Disconnect eight connectors

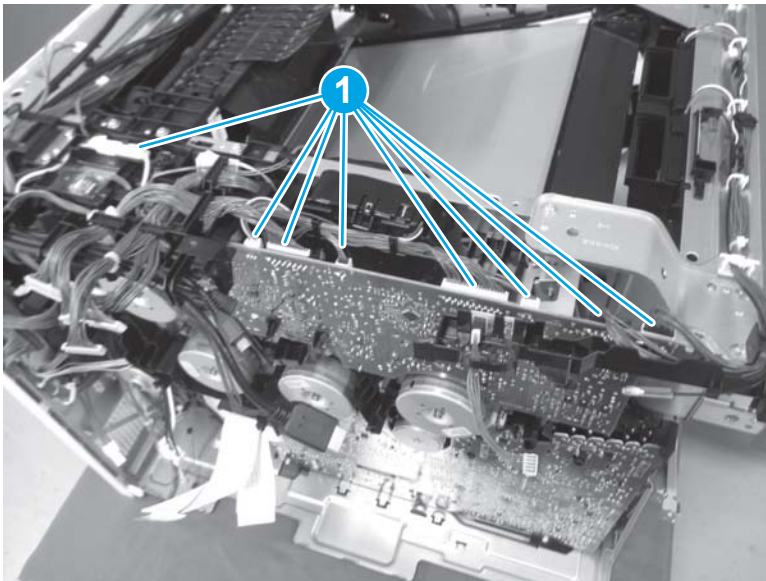


2. Release the cable (callout 1) from the retainer (callout 2). Remove one screw (callout 3), release five tabs (callout 4), and then remove the upper HVPS (callout 5).

 **Reinstallation tip:** The screw (callout 3) is a grounding screw with a washer attached. Make sure that this screw and washer are installed in the correct position.


**Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1857** Remove the upper HVPS

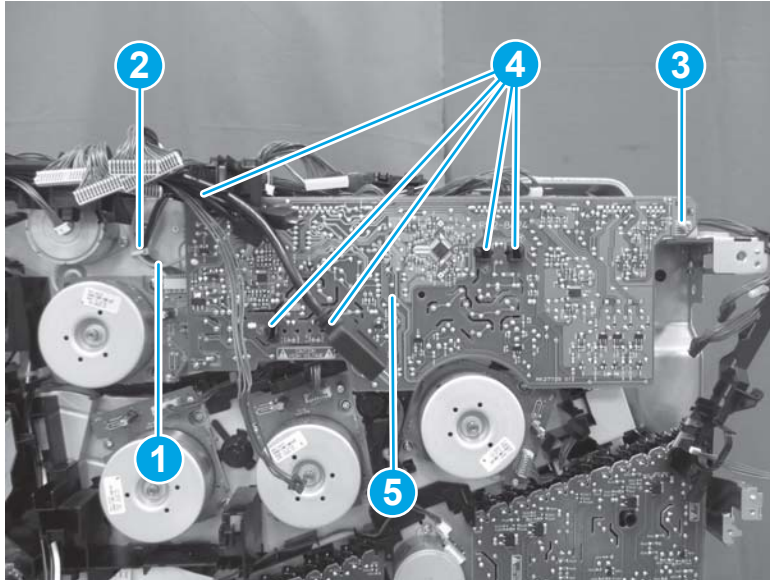


### Step 27: Remove the fuser drive assembly

1. Disconnect two connectors (callout 1), and then release the cable (callout 2) from the cable guide (callout 3). Remove one screw (callout 4), and then remove the connector cover (callout 5).

 **NOTE:** The yellow cable can easily be lost once the motor assembly is installed. This cable feeds up to attach to the black connector tied to a purple wire on top of the assembly (within the cable guide on top).


**Figure 1-1858** Remove the connector cover

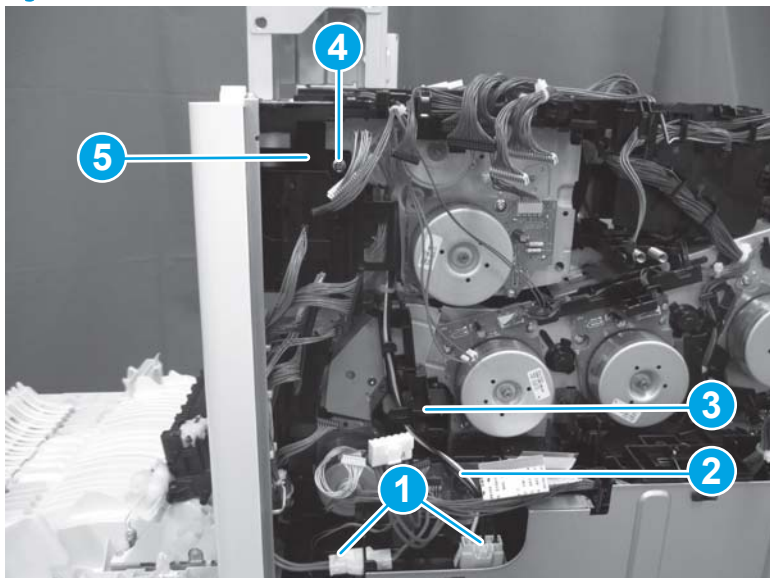




2. **M681/M682 only:** Release two bosses (callout 1), and then rotate the upper right inner cover (callout 2) away from the printer to remove it.

Figure 1-1859 Remove the upper right inner cover

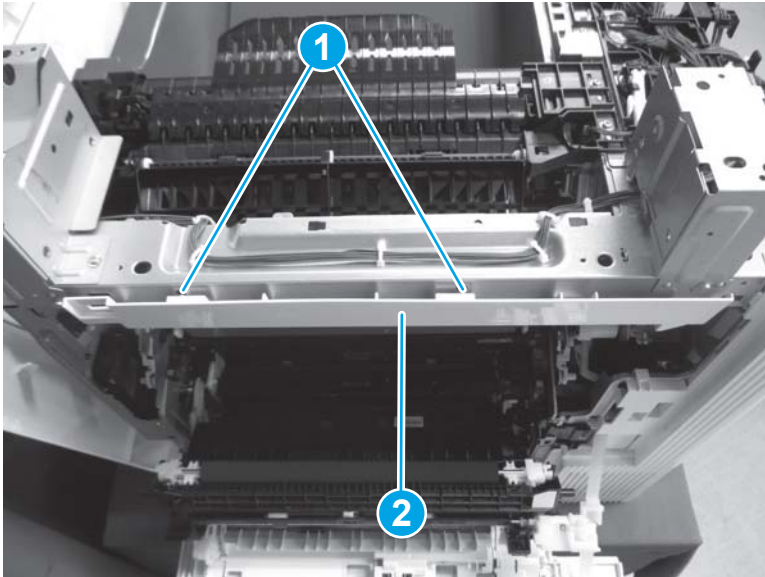


3. **M681/M682 only:** Remove three screws (callout 1), and then remove the stay (callout 2).

Figure 1-1860 Remove three screws and the stay

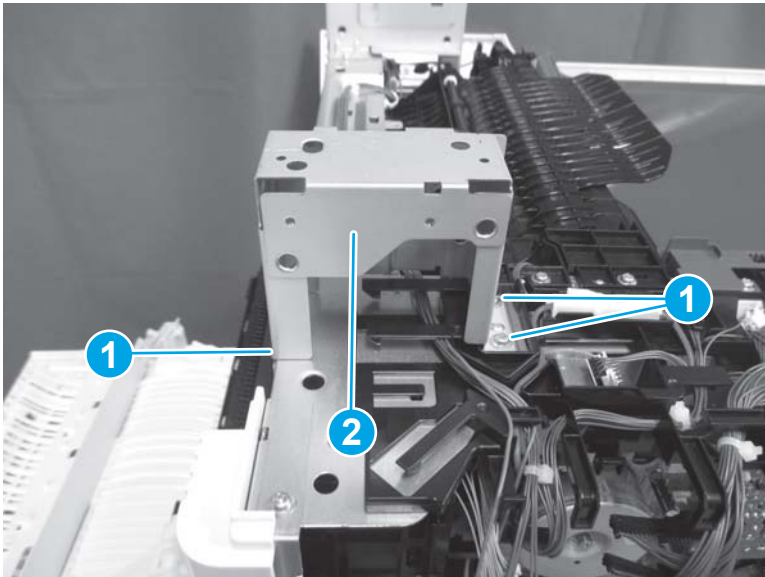

4. Release all cables from the cable guide (callout 1). Release one tab (callout 2), and then slide the cable guide (callout 3) right to release it from the sheet metal. When the guide is released, gently pull the right corner forward and away from the printer. Pivot the cable guide and cables upwards to provide access to the fuser drive assembly.


Figure 1-1861 Release the cable guide

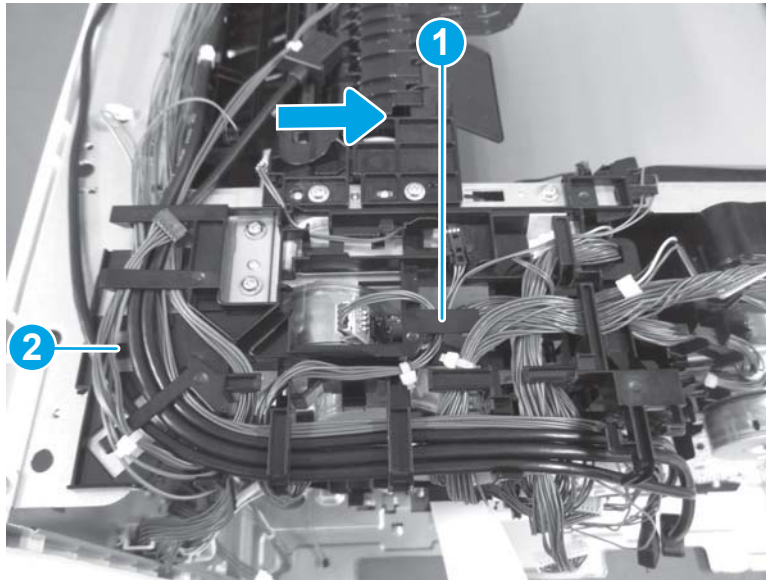

5. Remove four screws (callout 1), and then remove the fuser drive assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1862 Remove the fuser drive assembly

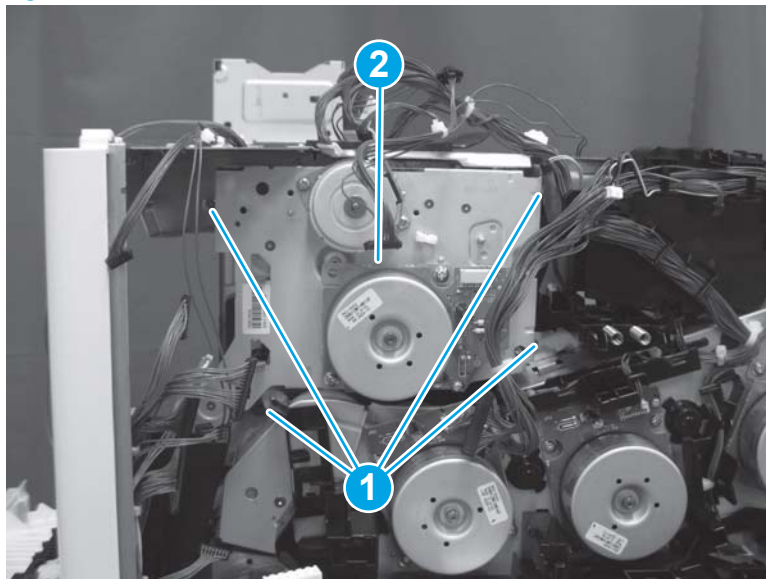

### Step 28: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Developer alienation motor

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the developer alienation motor](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the developer alienation motor.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Developer alienation motor part number	
RK2-6027-000CN	Developer disengagement motor (M6)

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1863 Remove the formatter cover

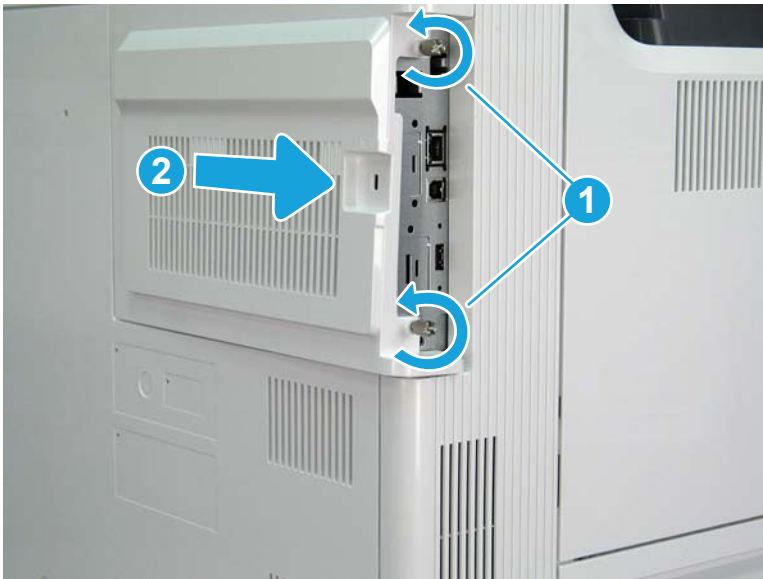

## Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1864 Remove the left rear cover

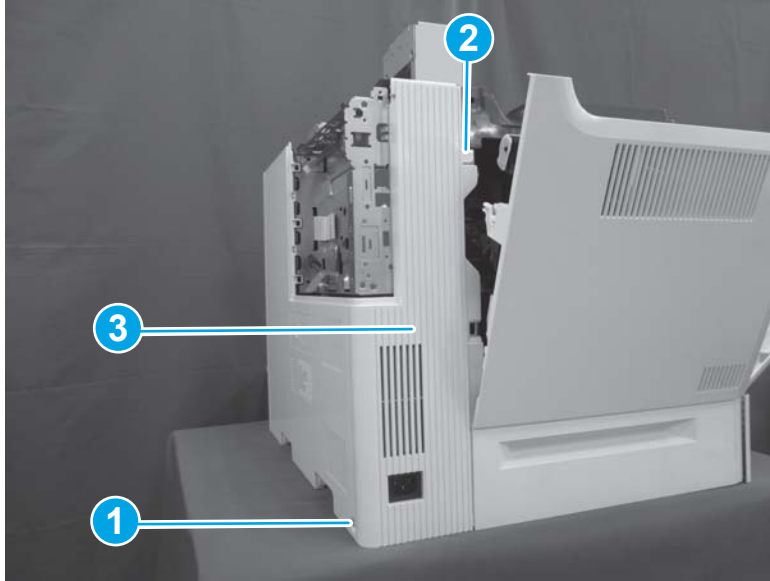


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1865 Install the left rear cover

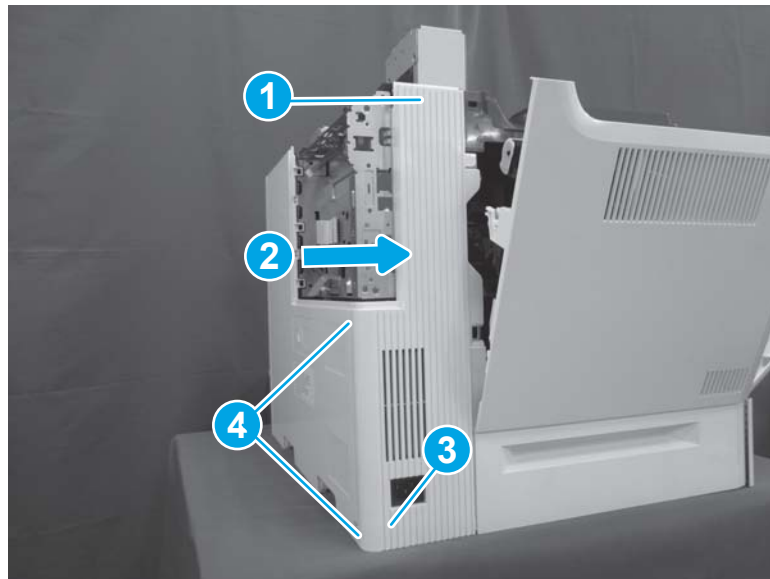


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1866** Remove two screws and the rear cover

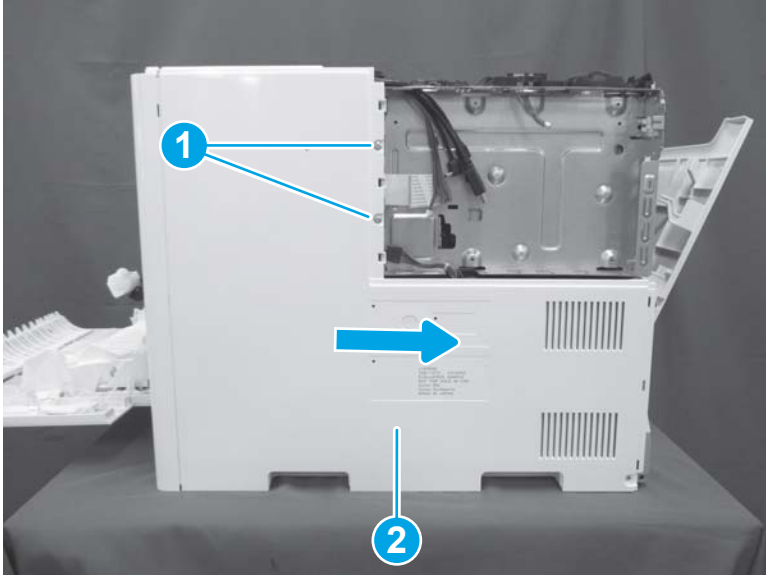

**Step 4: Remove the low-voltage power supply (LVPS) and fan**

1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).


**Figure 1-1867** Disconnect five connectors and remove two screws

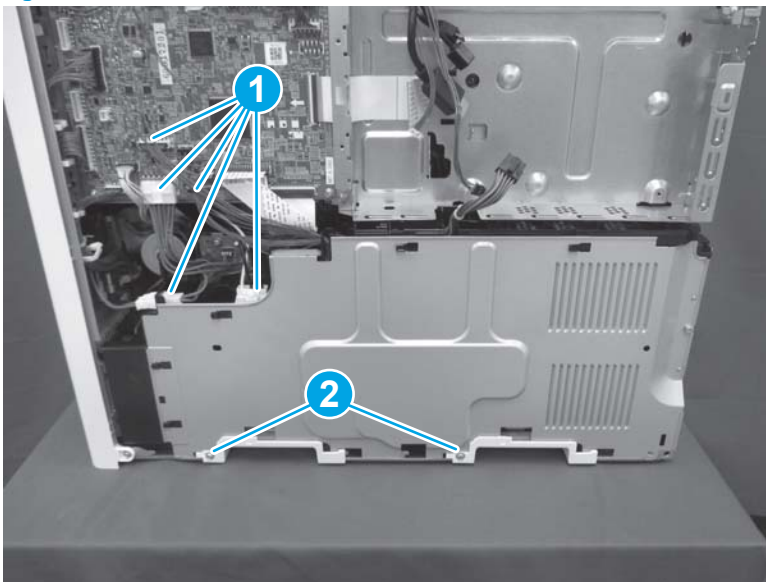



2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.


Figure 1-1868 Remove two handles

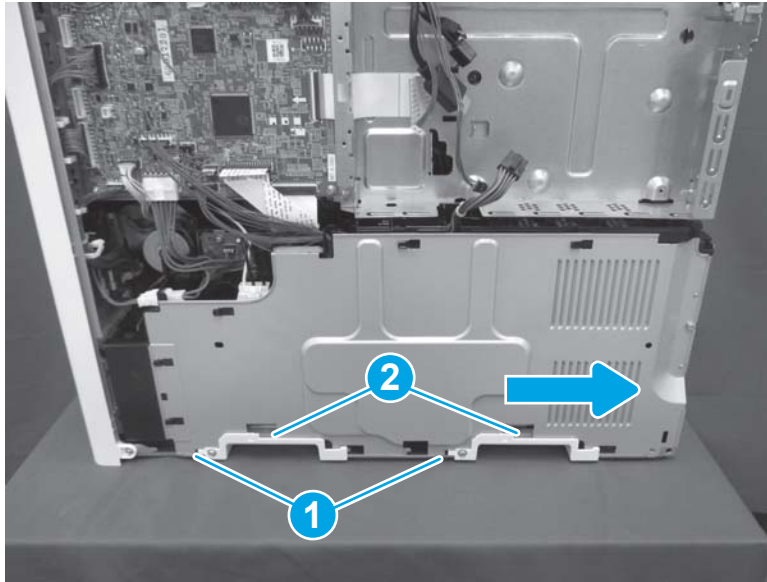

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).

 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-1869 Remove the low-voltage power supply

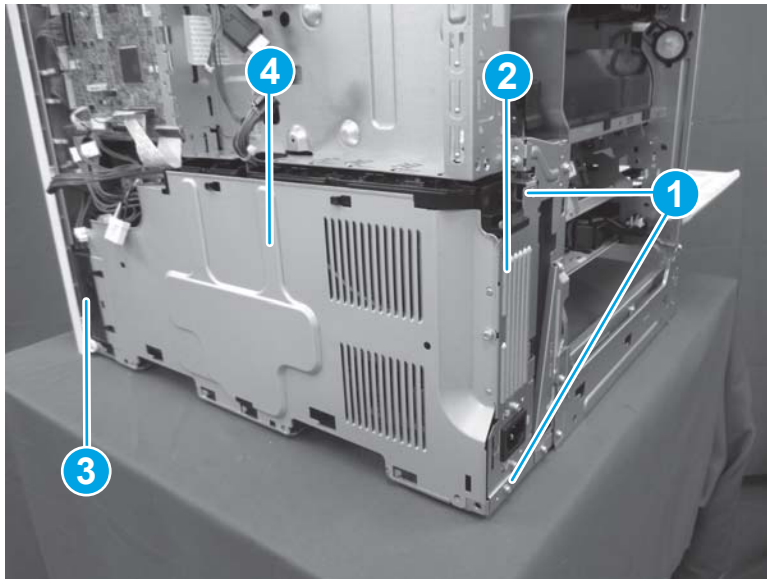

### Step 5: Remove the developer alienation motor


- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the developer alienation motor (callout 3).

 **NOTE:** The two screws (callout 2) do not have a flang on them. Make sure these screws are reinstalled on this motor.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-1870** Remove the developer alienation motor

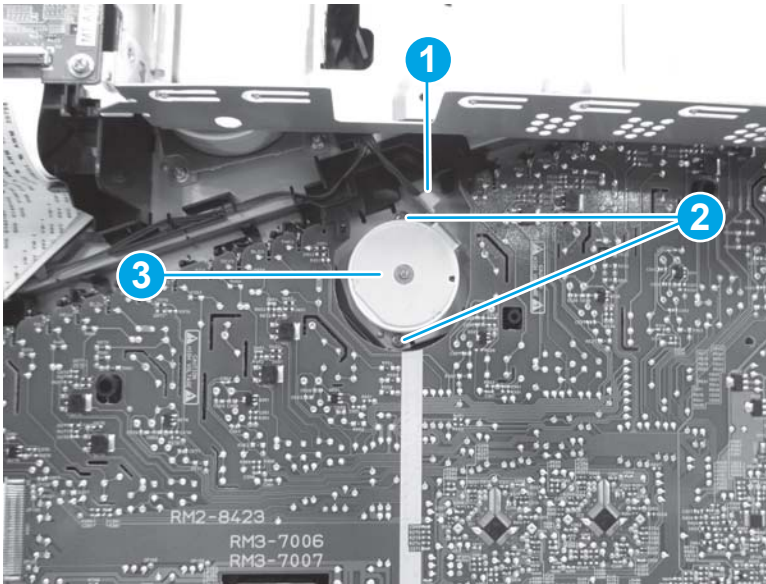

### Step 6: Unpack the replacement assembly



1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Pickup motor

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the pickup motor](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pickup motor.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Pickup motor part number	
RK2-7757-000CN	Paper Pickup Motor (M5)

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1871 Remove the formatter cover

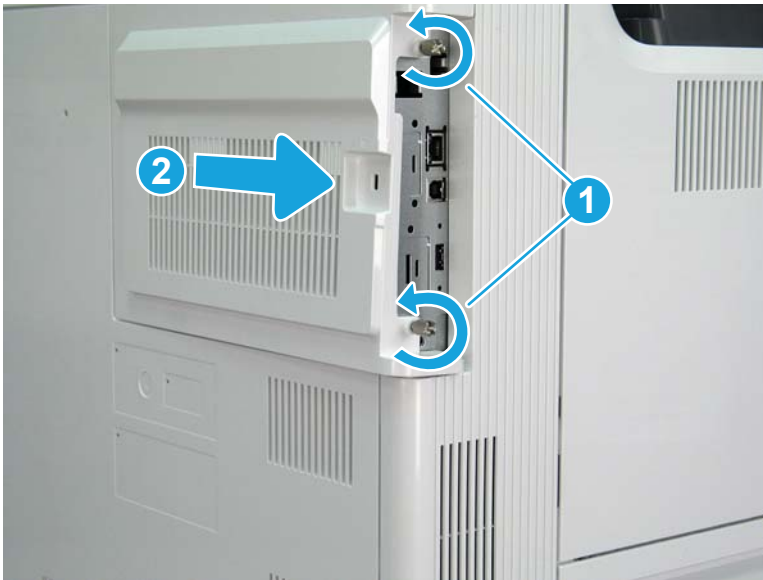

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1872 Remove the left rear cover

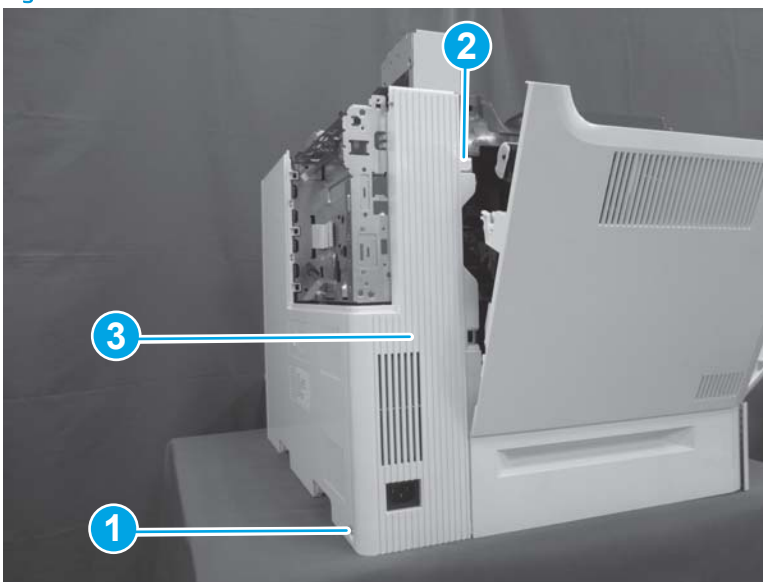


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

📝 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1873 Install the left rear cover

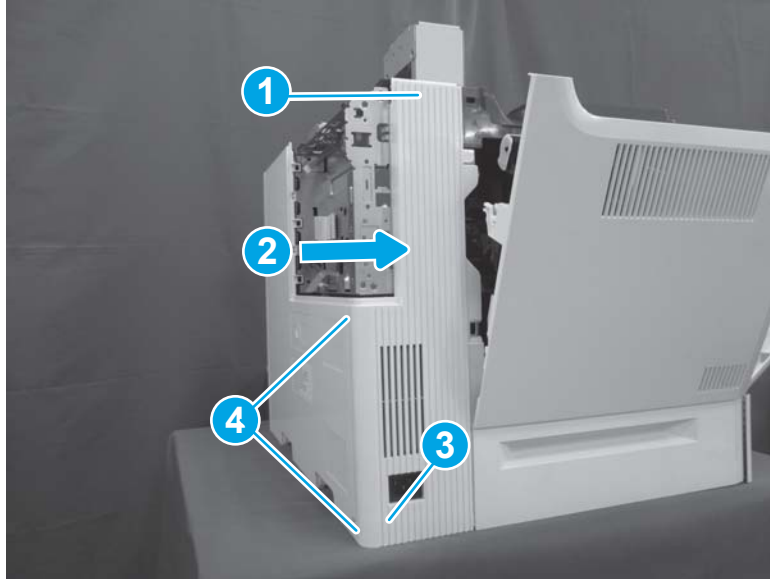


### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1874 Remove two screws and the rear cover

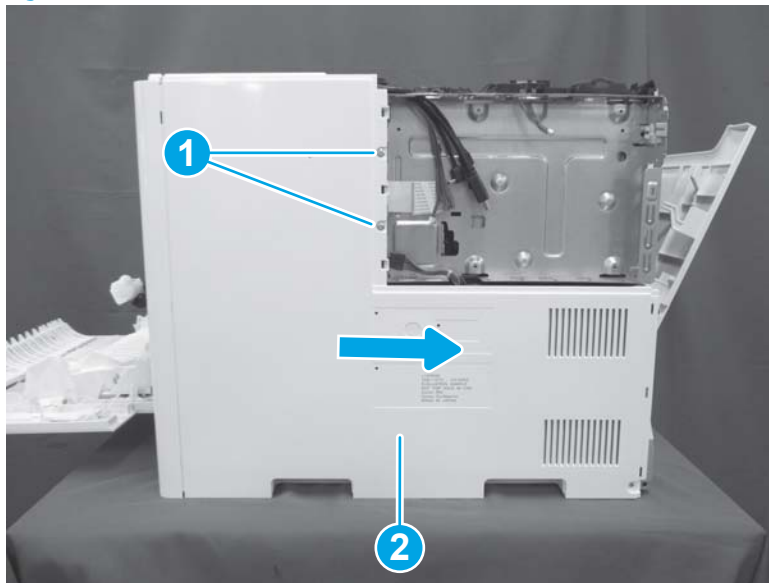

### Step 4: Remove the low-voltage power supply (LVPS) and fan


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

Figure 1-1875 Disconnect five connectors and remove two screws

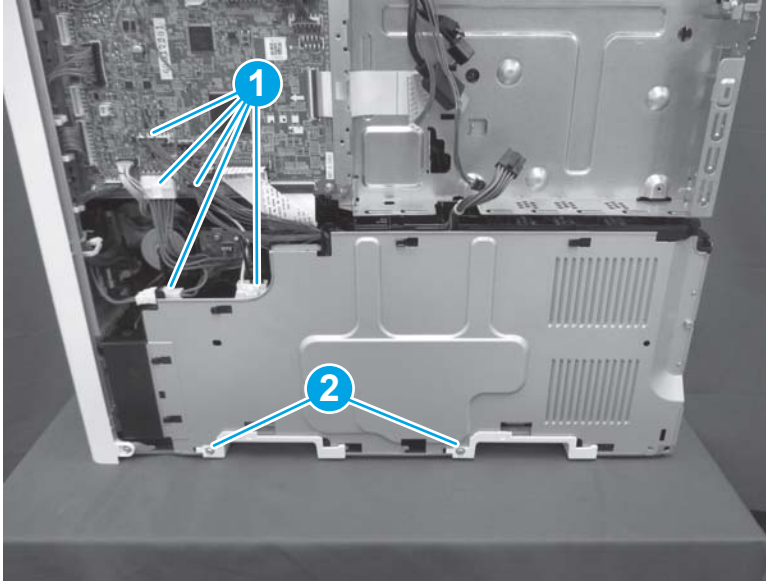

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-1876 Remove two handles

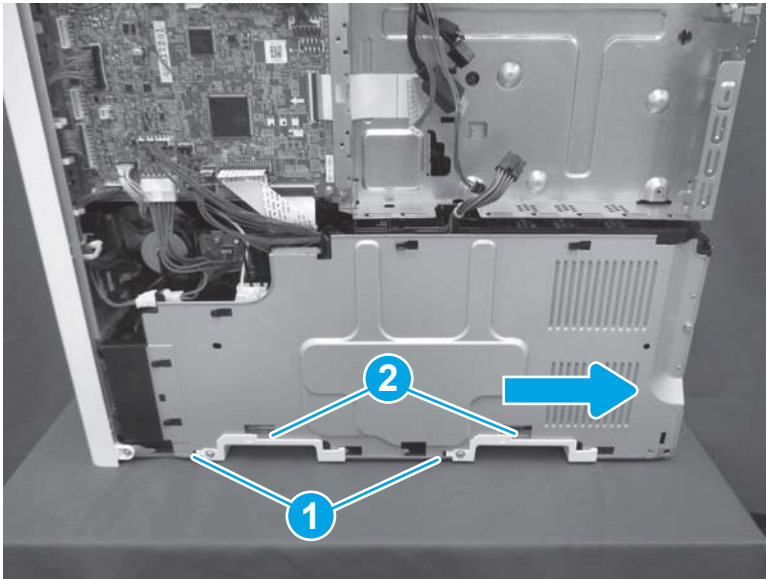



3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


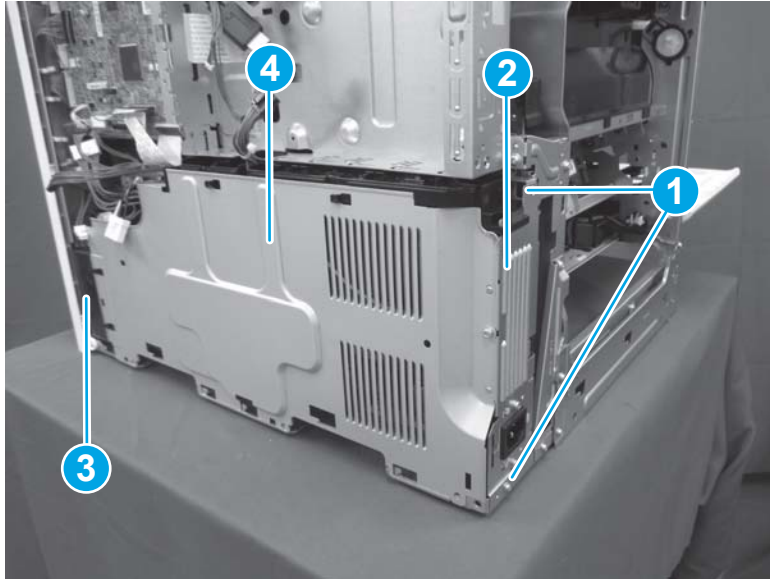
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.

Figure 1-1877 Remove the low-voltage power supply



#### Step 5: Remove the pickup motor

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the pickup motor (callout 3).


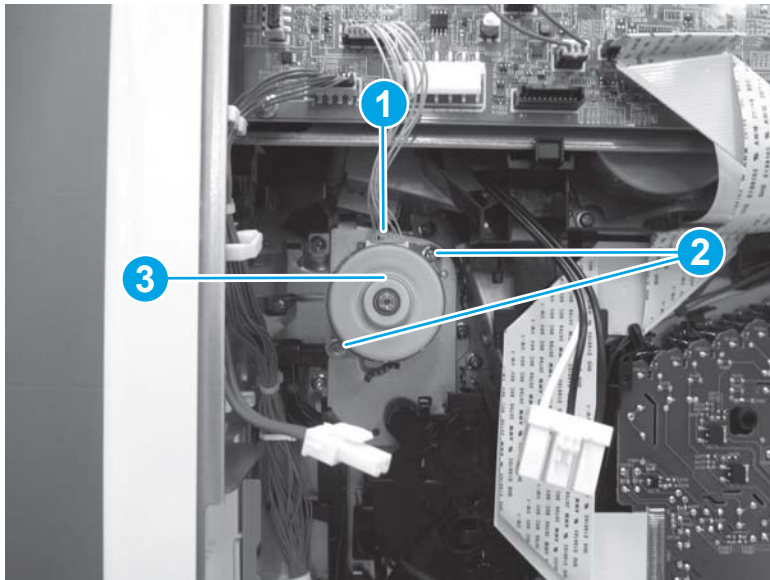
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1878 Remove the pickup motor






## Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Delivery assembly (M652/M653/E65050/E65060/E65150/E65160)

- [Introduction](#)
- [Step 1: Remove the control panel \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 2: Remove the top cover \(M652/M653/E65050/E65060/E65150/E65160\)](#)
- [Step 3: Remove the formatter cover](#)
- [Step 4: Remove the output bin](#)
- [Step 5: Remove the fuser](#)
- [Step 6: Remove the delivery assembly](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the delivery assembly for the M652 and M653 models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Delivery assembly part number	
RM2-6621-000CN	Delivery assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the control panel (M652/M653/E65050/E65060/E65150/E65160)

 **NOTE:** The figure below show the touchscreen control panel. The procedure is also correct for the keypad control panel.

1. Tilt the control panel to the fully raised position.

**Figure 1-1879** Tilt the control panel up



2. Use a coin to release the cover, and then remove the cover.

**Figure 1-1880** Remove the cover



3. Remove one thumbscrew (callout 1)


 **NOTE:** Store the screw in a secure place where it cannot fall down into the printer.

**Figure 1-1881** Remove one thumbscrew




4. Lift the back edge of the control panel up (callout 1), and then slide it toward the back of the printer (callout 2) to release it.

**Figure 1-1882** Release the control panel

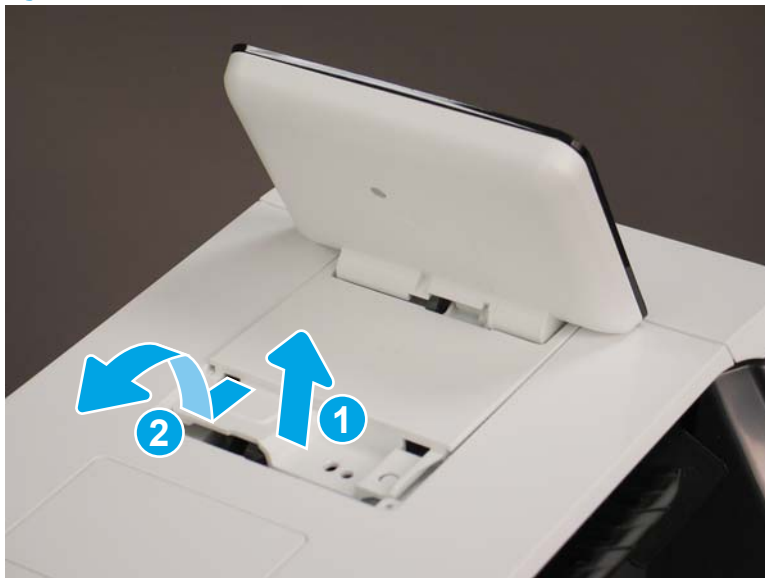

5. Turn the control panel over to gain access to the bottom side. Disconnect two connectors (callout 1).

**Figure 1-1883** Disconnect two connectors

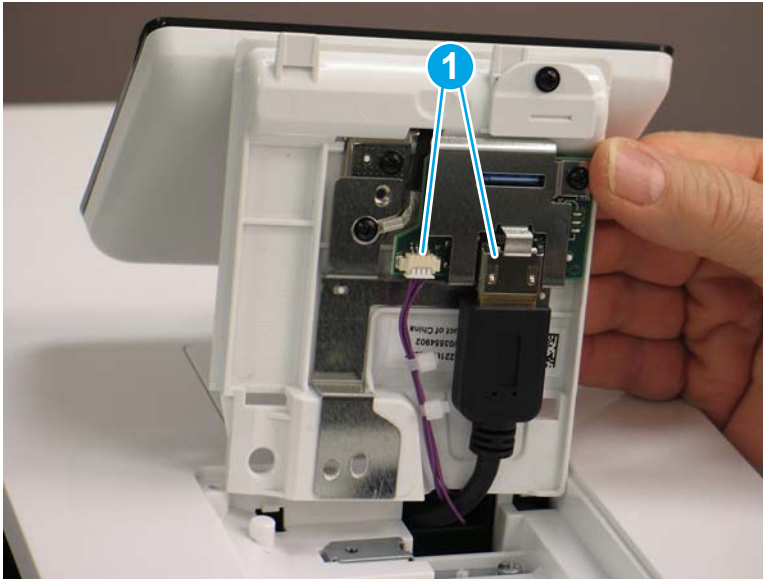

6. Remove the control panel.

**Figure 1-1884** Remove the control panel




## Step 2: Remove the top cover (M652/M653/E65050/E65060/E65150/E65160)

1. Open the following doors:
  - Front door
  - Left door
  - Right door


2. Remove one screw (callout 1), release two tabs (callout 2), and then rotate the NFC cover (callout 3) up and away from the printer to remove it.

Figure 1-1885 Remove the NFC cover

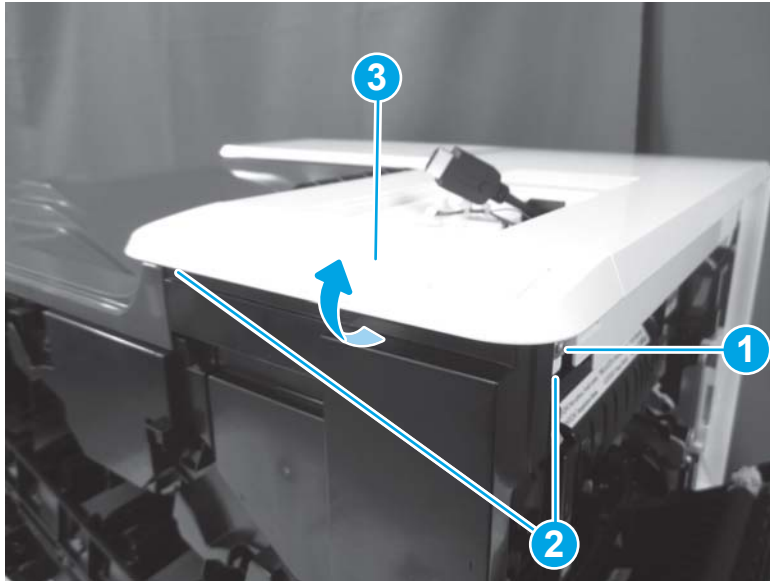


3. Remove one screw (callout 1), and then release one tab (callout 2).

Figure 1-1886 Remove one screw and release one tab

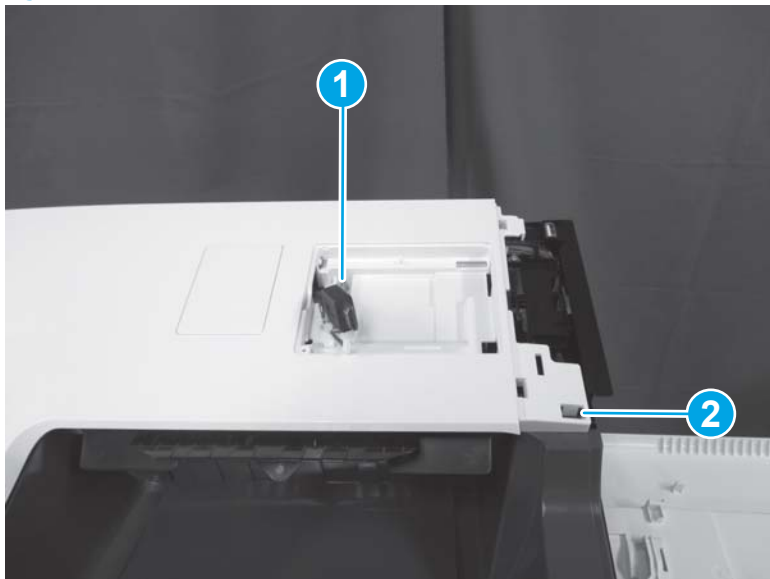


4. Release two tabs (callout 1).

Figure 1-1887 Release two tabs

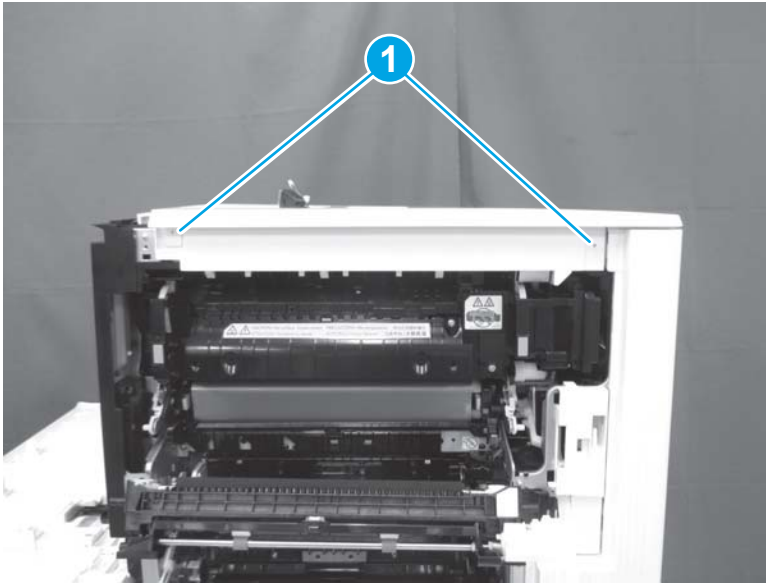


5. Remove one screw (callout 1), release one tab (callout 2), release one tab behind the left door (callout 3), and then remove the top cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-1888 Remove the top cover

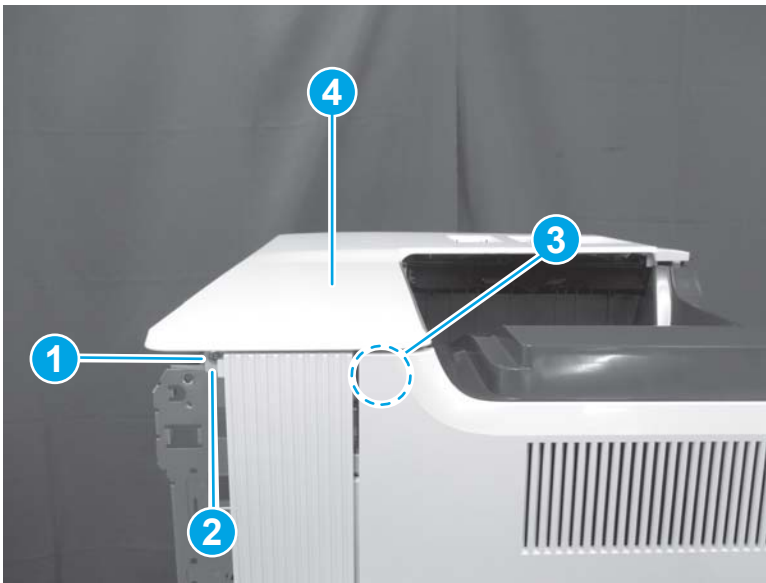

### Step 3: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---




Figure 1-1889 Remove the formatter cover

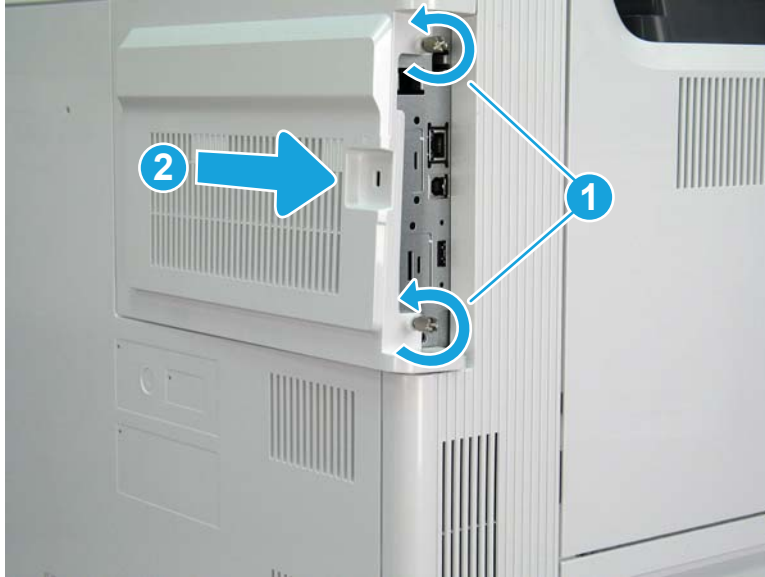


#### Step 4: Remove the output bin


1. Open the following doors:
  - Front door
  - Left door
  - Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

**Figure 1-1890** Remove the output bin

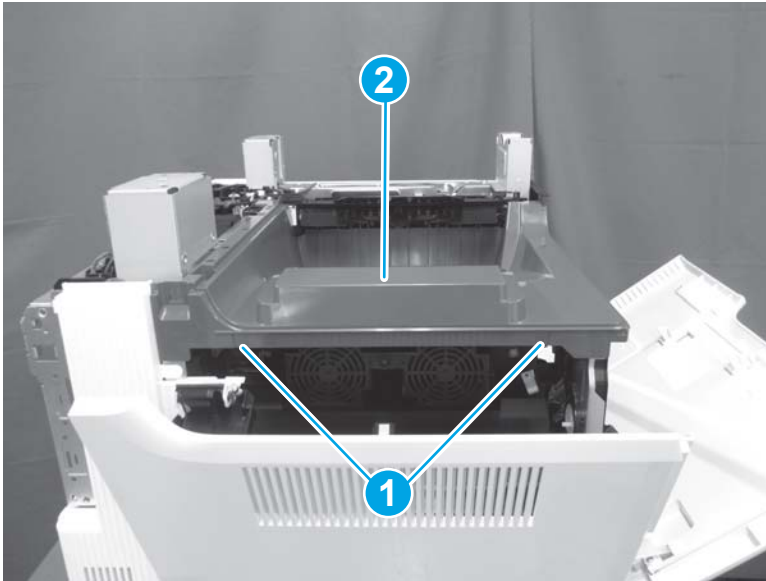

#### Step 5: Remove the fuser


1. Open the right door.

**Figure 1-1891** Open the right door



2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).


Figure 1-1892 Remove the fuser

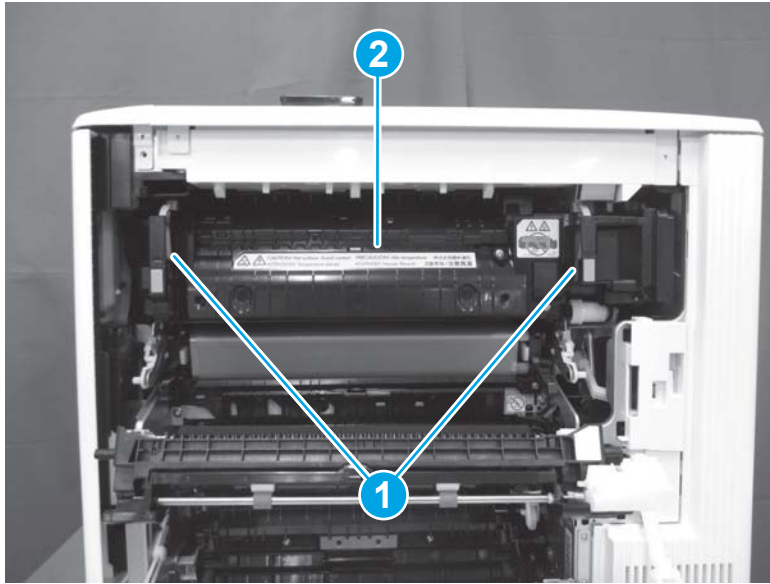

#### Step 6: Remove the delivery assembly

1. Release four tabs (callout 1).


Figure 1-1893 Release four tabs

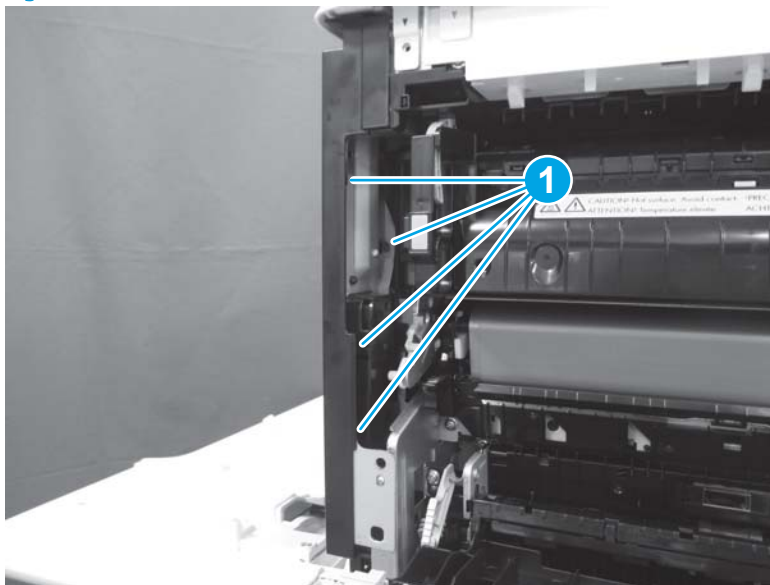

2. Release four tabs (callout 1), and then remove the front right inner cover (callout 2).


 **TIP:** Push on the back side of the cover for easy release.

**Figure 1-1894** Remove the front right inner cover

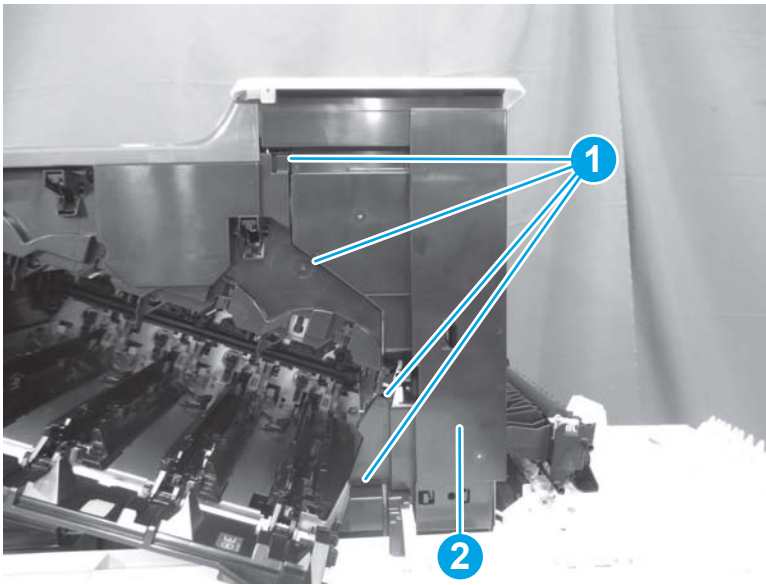


3. Disconnect three connectors (callout 1), and then release one boss (callout 2). Release the cable (callout 3) from the cable guide (callout 4).

**Figure 1-1895** Disconnect three connectors and release one boss

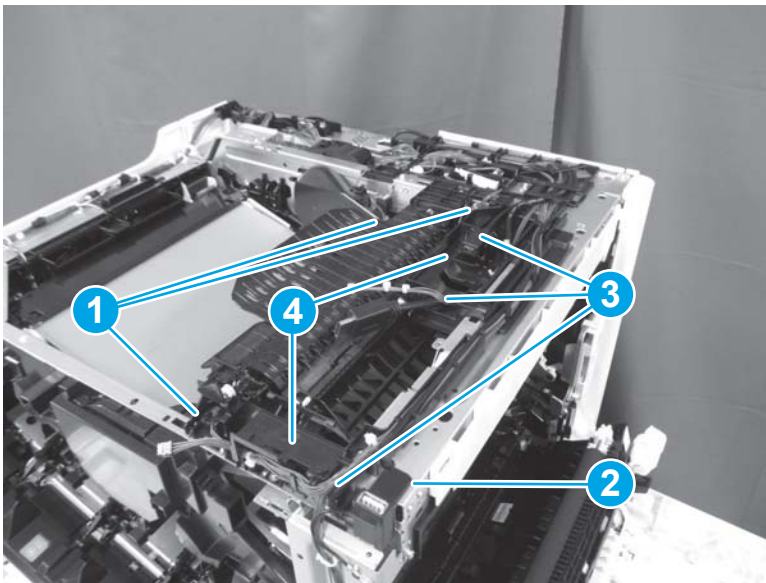


4. Remove one screw (callout 1), release one tab (callout 2), and then remove the cable guide (callout 3).

Figure 1-1896 Remove the cable guide

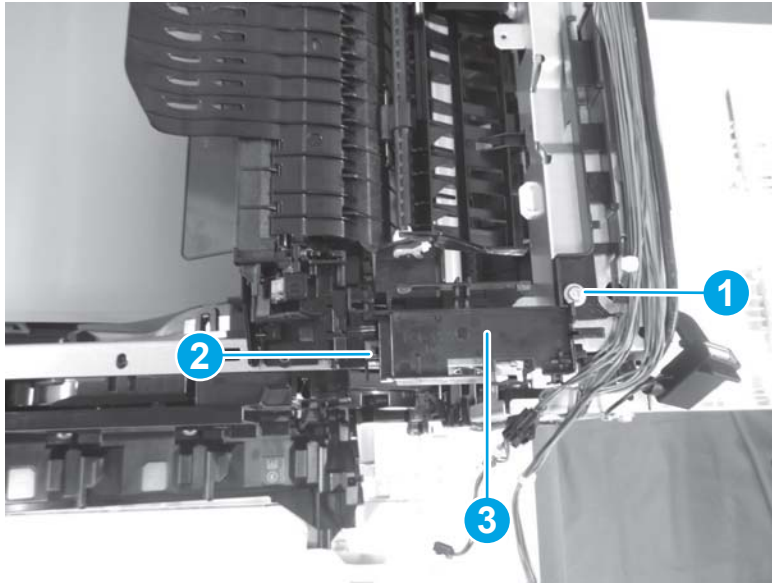


5. Release one boss (callout 1), and then slide the cable guide (callout 2) to the left to remove it.

Figure 1-1897 Remove the cable guide

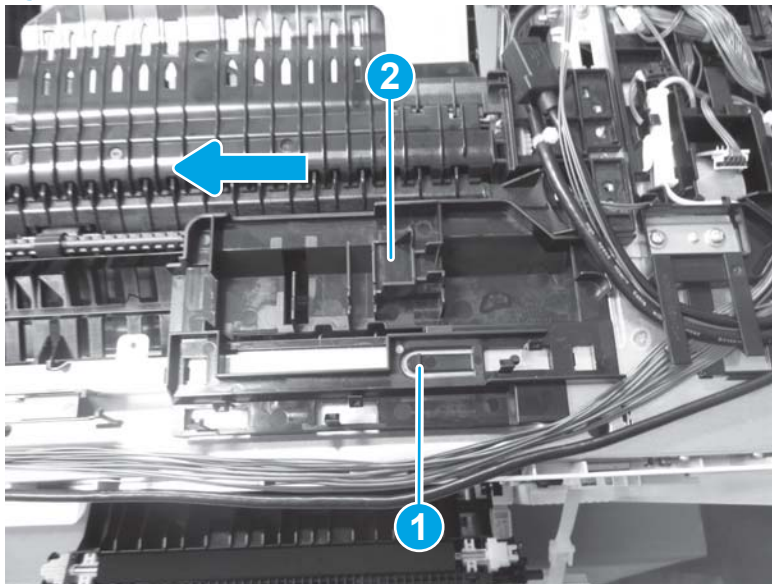

6. Remove four screws (callout 1), and then slide the delivery assembly (callout 2) to the right to remove it.

**Figure 1-1898** Remove four screws and the delivery assembly

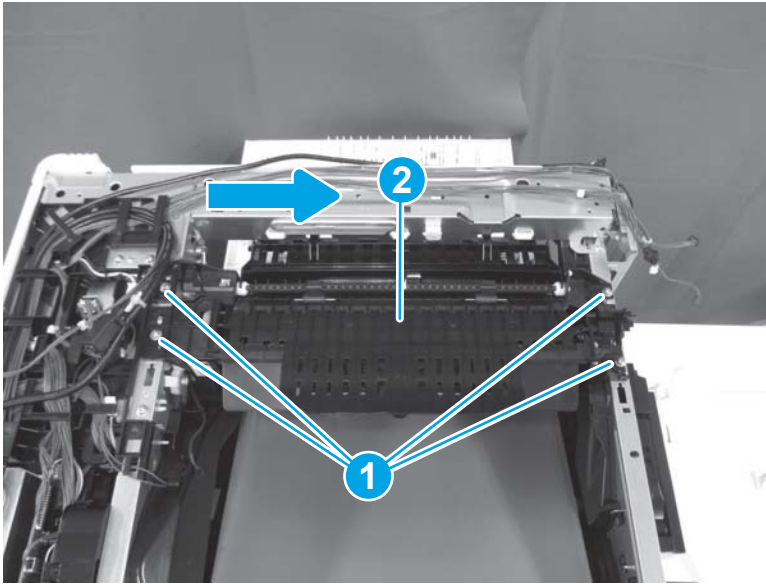


7. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Delivery assembly (M652/M653/E65050/E65060/E65150/E65160)**

- a. The delivery assembly is actually a three-piece unit. If the parts become separated after removing, follow these instructions to reassemble them:
  - i. Position the tab (callout 1) on the end of the lower portion in the slot (callout 2) on the end of the upper portion.


**Figure 1-1899** Position the tab

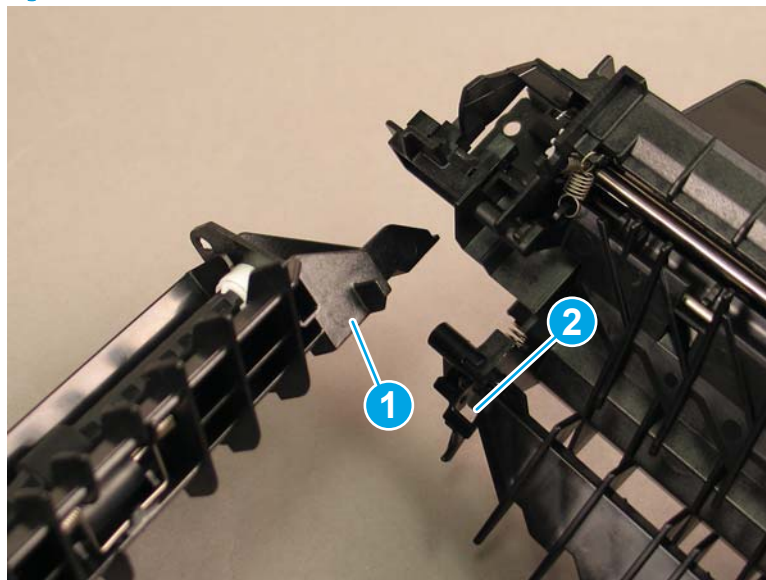



- ii. Rotate the ends of the upper and lower parts together.

**Figure 1-1900** Rotate the upper and lower parts together

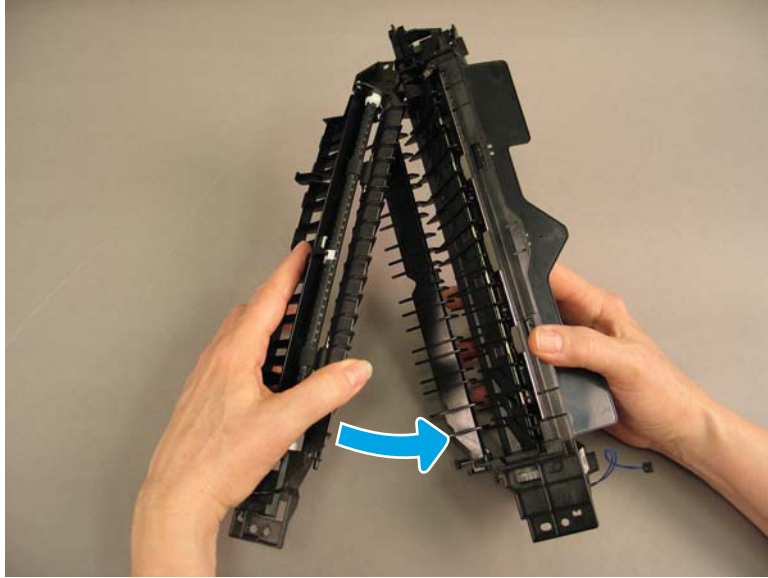

- iii. Install the tab on the lower part into the slot on the upper part to join the parts together.


**Figure 1-1901** Connect the upper and lower parts






- iv. Install the tabs (callout 1) on the lower shield into the slots (callout 2) in the delivery assembly.

Figure 1-1902 Install the tabs on the lower shield

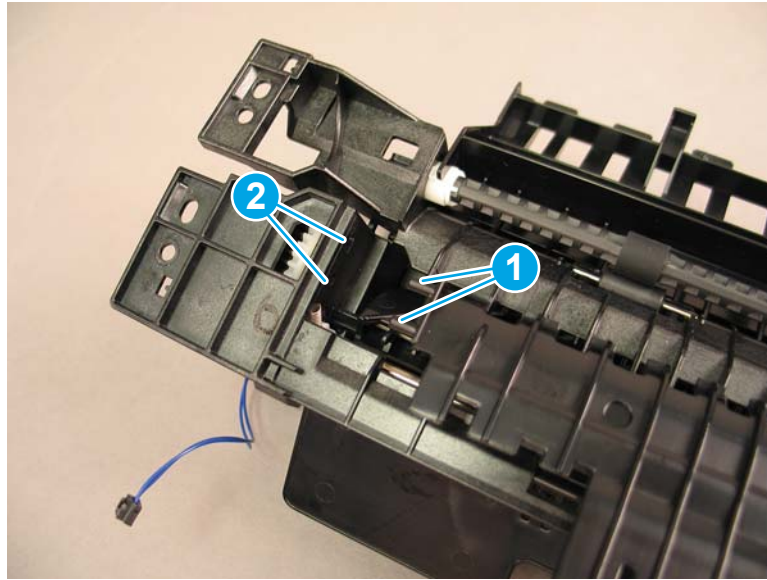


- v. Lower the end of the lower shield into the slot in the delivery assembly.

Figure 1-1903 Lower the end

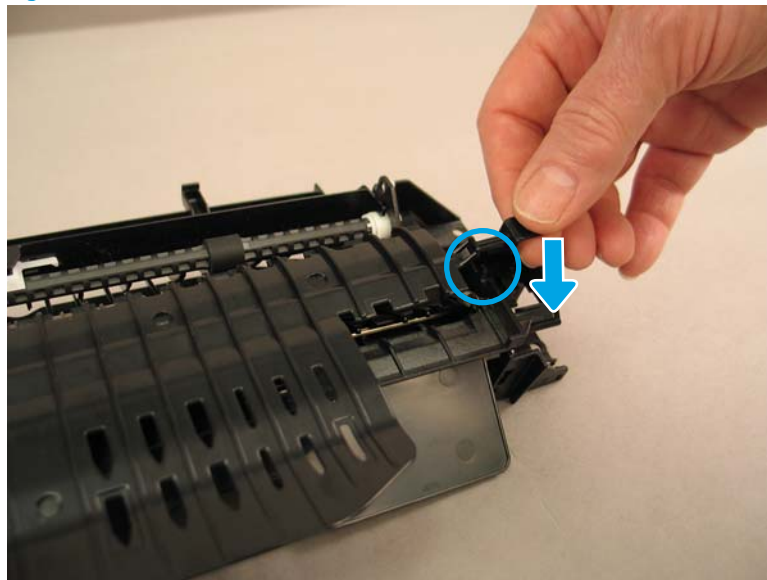

- b. Before reinstalling the delivery assembly, note the keyed shaft (callout 1) on the delivery assembly that must be aligned to fit into the slot (callout 2) on the drive gear.

**Figure 1-1904** Note the keyed shaft

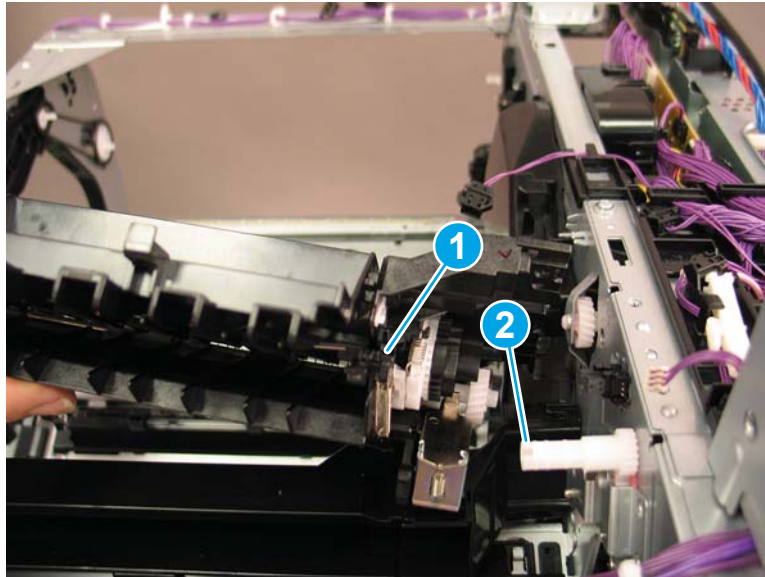


- c. Install the hooks on the delivery assembly (callout 1) into the slots (callout 2) in the sheet metal frame.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---


**Figure 1-1905** Install the hooks in the slots

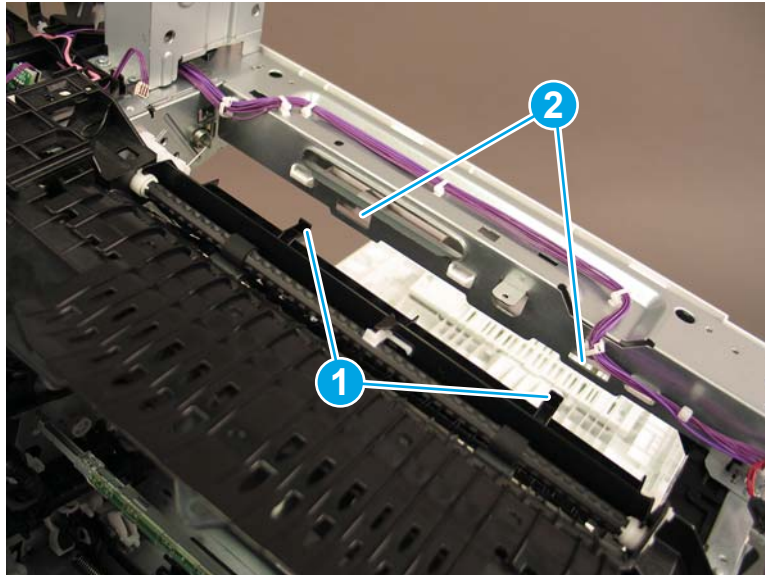

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Delivery assembly (M681/M682/E67550/E67560/E67650/E67660)

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the keyboard \(Flow M681/Flow M682/Flow E67660\)](#)
- [Step 3: Remove the control panel \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 4: Remove the document feeder and image scanner \(M681/M682/E67550/E67560/E67650/E67660\)](#)
- [Step 5: Remove the stapler/stacker \(Flow M681z/Flow M682z/Flow E67660z\)](#)
- [Step 6: Remove the face-down front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 7: Remove the top cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 8: Remove the right cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 9: Remove the front cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 10: Remove the rear upper cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 11: Remove the face-down cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 12: Remove the main cover \(M681dn/M681/M682dn/Flow M681f/E67650dh\)](#)
- [Step 13: Remove the output bin](#)
- [Step 14: Remove the fuser](#)
- [Step 15: Remove the delivery assembly](#)
- [Step 16: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the delivery assembly for the M681 and M682 models.

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Delivery assembly part number	
RM2-6621-000CN	Delivery assembly

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-1906 Remove the formatter cover

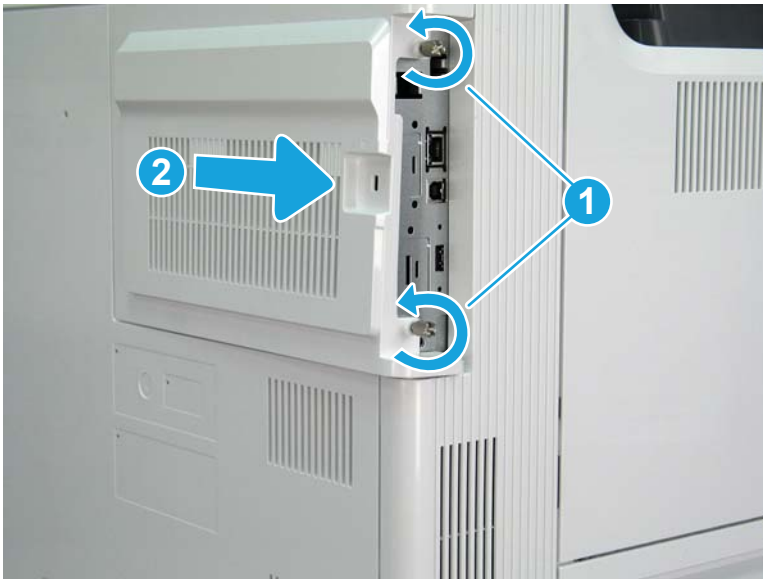

### Step 2: Remove the keyboard (Flow M681/Flow M682/Flow E67660)

1. If the control panel is not fully tilted forward, tilt it forward now (callout 1) until it stops. Open the document feeder (callout 2).

Figure 1-1907 Tilt the control panel and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1908 Release five tabs






3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1909 Remove the cover



4. Open the connector latch to release the keyboard flat cable.

Figure 1-1910 Disconnect the keyboard flat cable

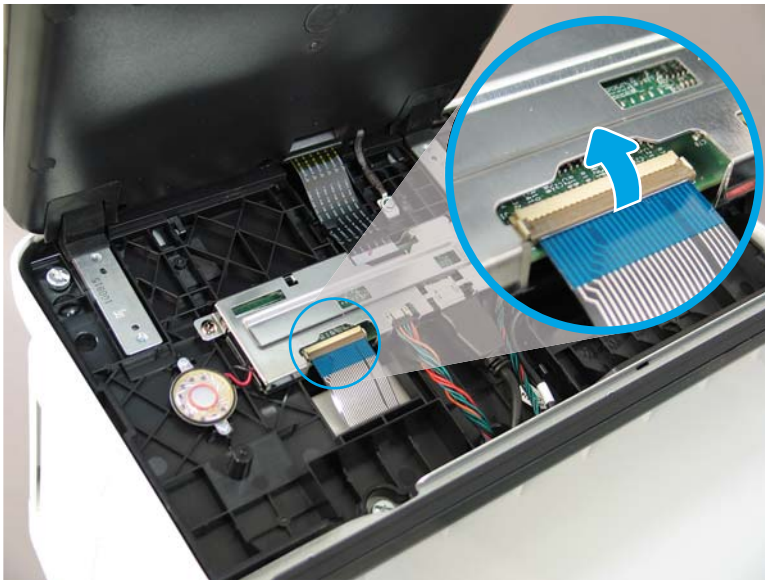



5. Slide the keyboard tray out until it stops.

Figure 1-1911 Slide the keyboard tray out



6. Push up on the keyboard tray to release two tabs on the bottom of the tray, and then slide the tray toward you to disengage the tabs.

Figure 1-1912 Release two tabs



7. Slide the keyboard tray all the way out of the printer to remove it.

**Figure 1-1913** Remove the keyboard



**Step 3: Remove the control panel (M681/M682/E67550/E67560/E67650/E67660)**

1. Tilt the control panel forward (callout 1), and then open the document feeder (callout 2).

**Figure 1-1914** Tilt the control panel forward and open the document feeder



2. Beginning at the right side of the control-panel cover, carefully release five tabs along the top edge of the cover.

Figure 1-1915 Release five tabs




3. Continue to rotate the top edge of the cover away from the printer, and then remove the cover.

Figure 1-1916 Remove the cover




4. **Keyboard models only:** Lift up on the small, gray gate to release the keyboard flat cable.

**Figure 1-1917** Disconnect the keyboard flat cable (keyboard models only)

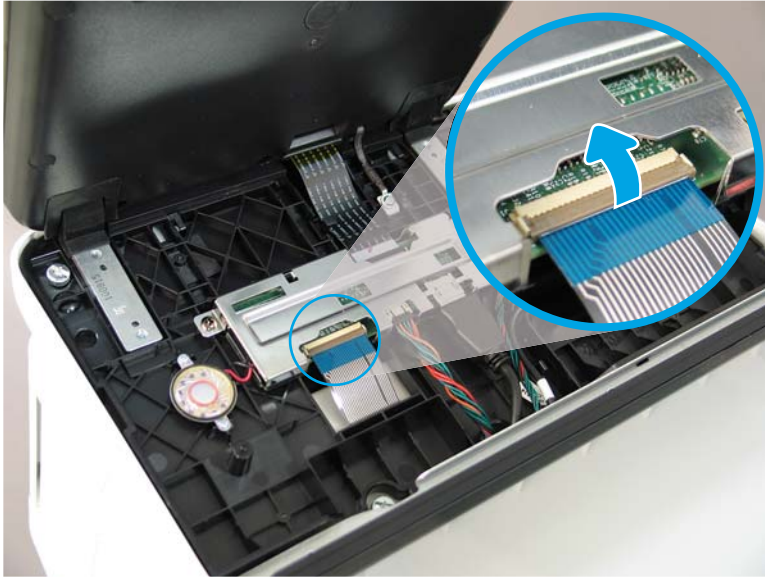


5. Disconnect two connectors (callout 1), and then release the USB cable (callout 2) from the holder.

**Figure 1-1918** Disconnect connectors

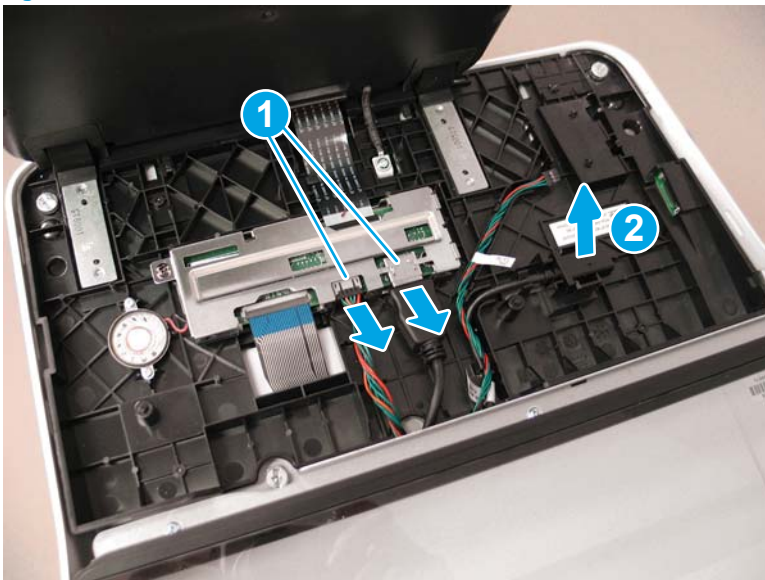


6. Remove three thumbscrews (callout 1).

Figure 1-1919 Remove three thumbscrews

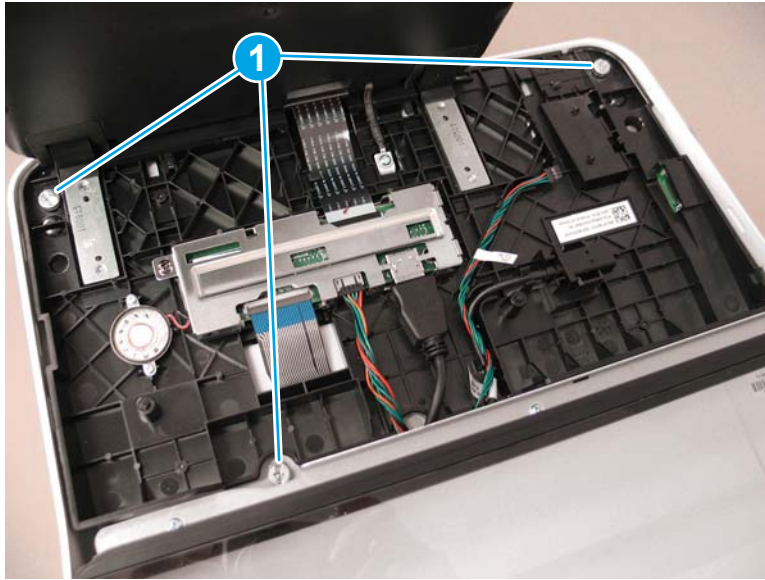

7. Lift the front of the control panel of the printer (callout 1), and then slide it toward the front of the printer (callout 2) to remove it.


Figure 1-1920 Remove the control panel

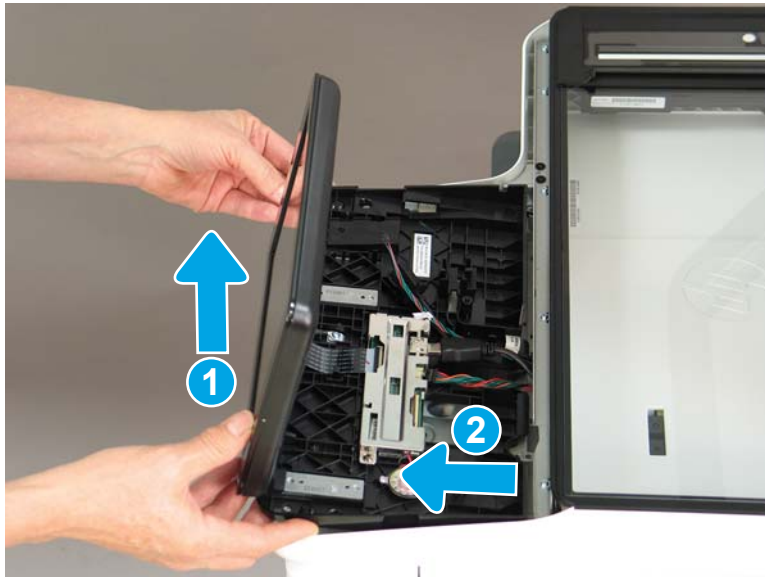

#### Step 4: Remove the document feeder and image scanner (M681/M682/E67550/E67560/E67650/E67660)

1. Remove two screws (callout 1), and then remove the scanner control board (SCB) cover (callout 2).

Figure 1-1921 Remove the SCB cover

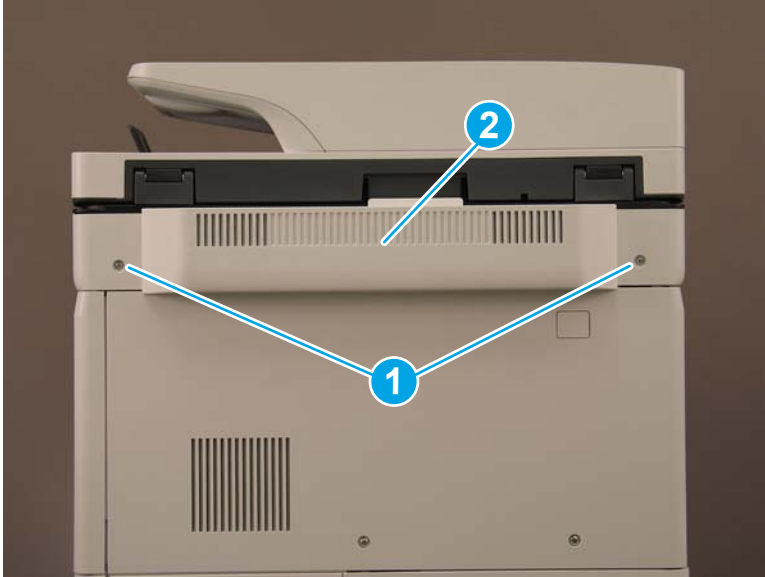

2. **Flow M681z and Flow M682z models only:** Do the following:
  - a. At the back of the printer, remove one small cover (callout 1).


Figure 1-1922 Remove the small cover






- b. **Flow M681z and Flow M682z only:** Remove three screws (callout 1), and then remove the stapler/stacker rear cover (callout 2).

**Figure 1-1923** Remove the stapler/stacker rear cover

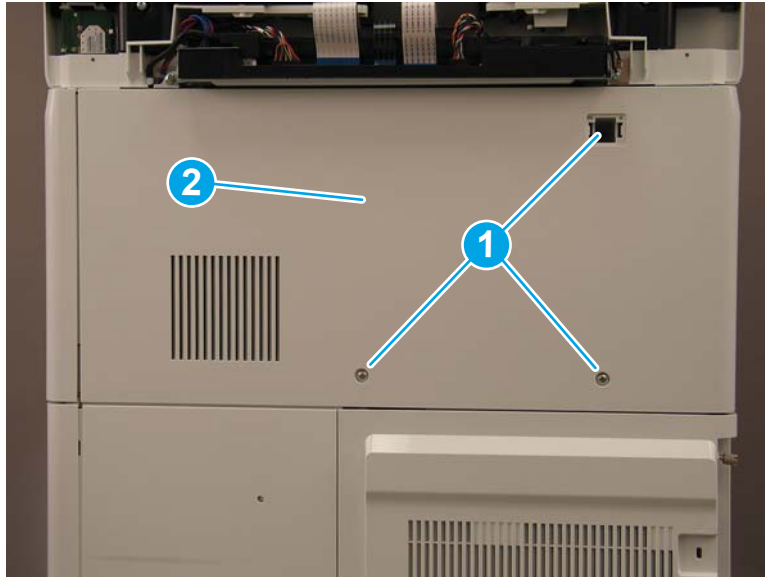

3. **M681dh, M681f, M682dh, and Flow M681f models only:** Remove three screws (callout 1), and then remove the upper rear cover (callout 2).


**Figure 1-1924** Remove the upper rear cover

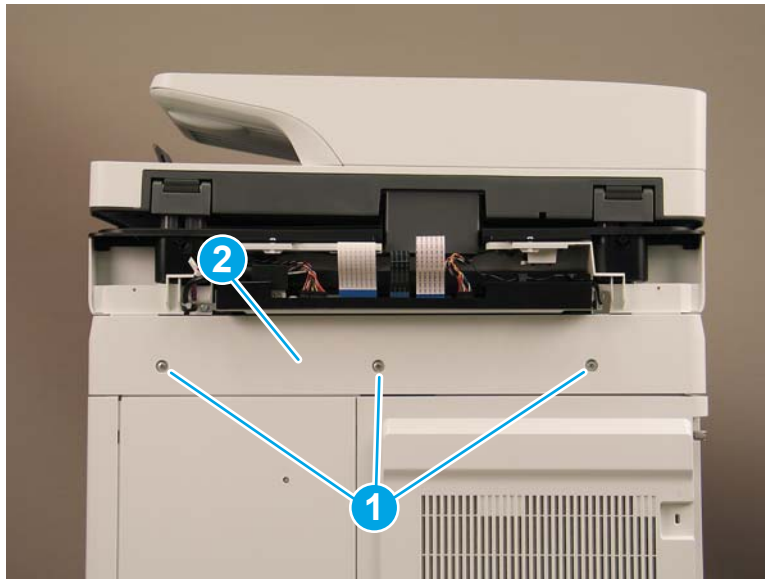



4. Loosen two thumbscrews (callout 1), and then slide the formatter cover away from the printer to remove it (callout 2).

**Figure 1-1925** Remove the formatter cover

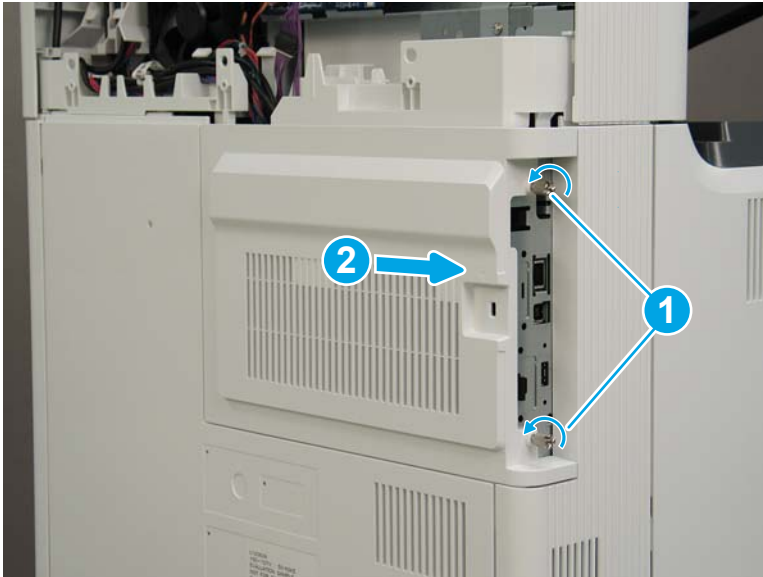


5. The remaining figure in this procedure show the Flow M682z model. While the cable routing (callout 1) on the M681dh, M681f, M682dh, and Flow M681f models is different the removal procedures are the same for all models.

**Figure 1-1926** Cable routing for M681dh, M681f, and Flow M681f



6. Disconnect two connectors (callout 1) on the SCB, and then release the cables from the guides (callout 2).

Figure 1-1927 Disconnect two connectors

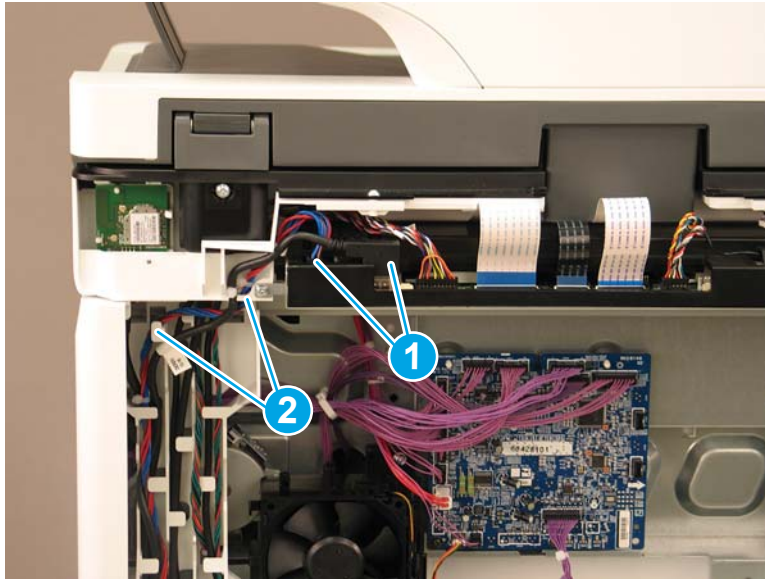


7. Disconnect five connectors on the formatter (callout 1).

Figure 1-1928 Disconnect five connectors




8. **Flow M682z only:** Gently pull down on the cable to disconnect the wireless connector.

Figure 1-1929 Disconnect the wireless connector

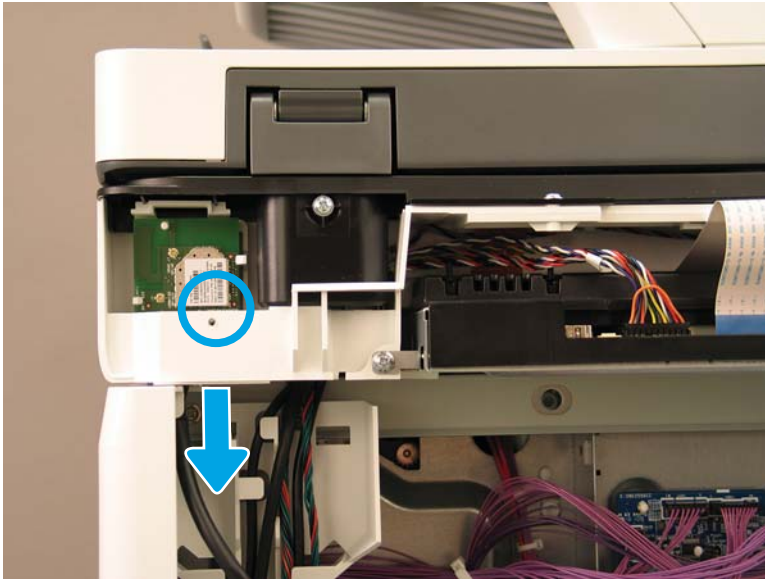


9. Release all of the cables from the cable guides (callout 1).

Figure 1-1930 Release the cables

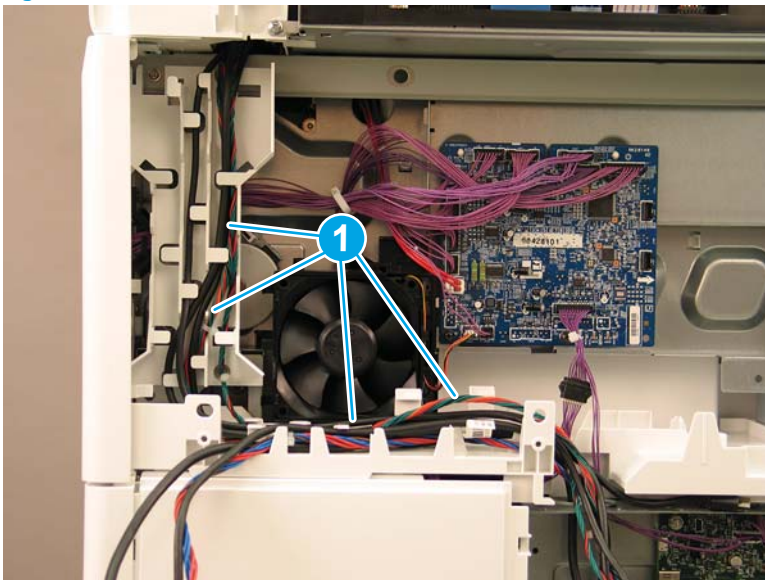


10. At the back of the printer, remove four screws (callout 1).

Figure 1-1931 Remove four screws

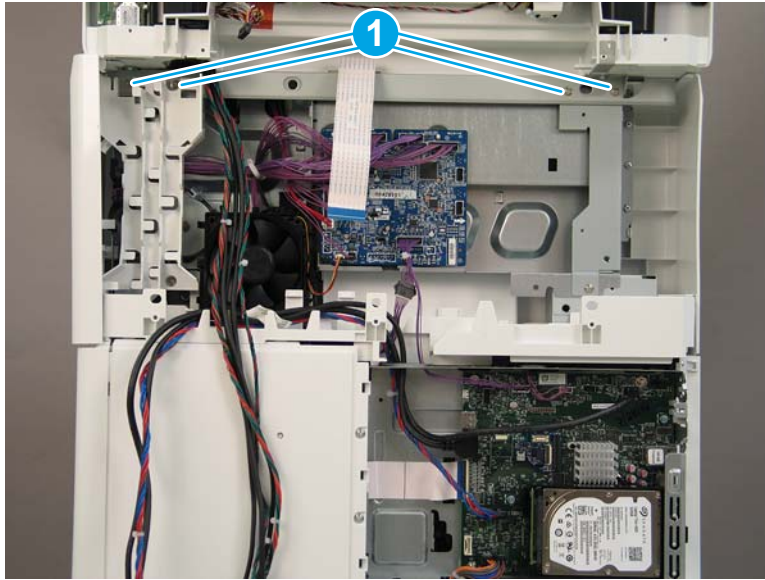

11. On the top of the image scanner assembly, at the location where the control panel was removed, remove two sheet metal screws (callout 1). **Flow M681z and Flow M682z only:** Remove one self-tapping screw (callout 2).

Figure 1-1932 Remove three screws

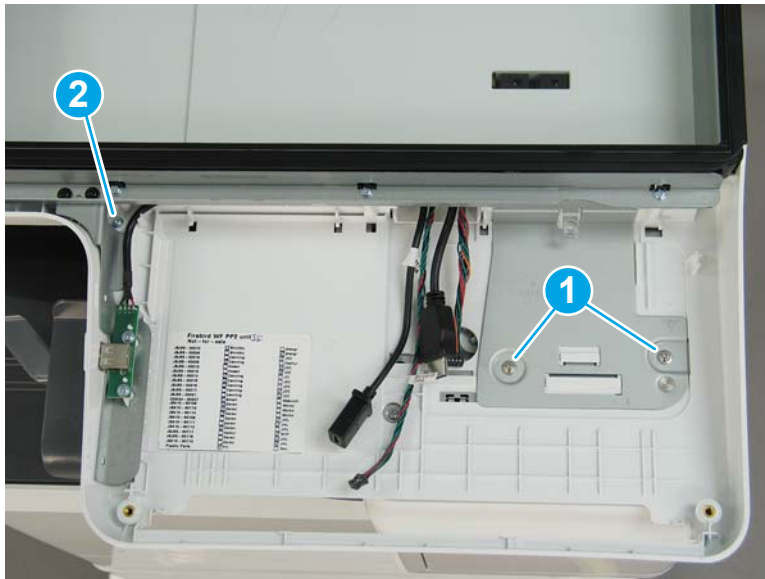

12. Lift the document feeder and image scanner off of the printer to remove them.

**Figure 1-1933** Remove the document feeder and image scanner




13. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Document feeder and image scanner**

- a. **Flow M682z only:** When reconnecting the wireless card cable, do the following:
  - i. Release two tabs (callout 1), and then remove the wireless card (callout 2).

**Figure 1-1934** Remove the wireless card

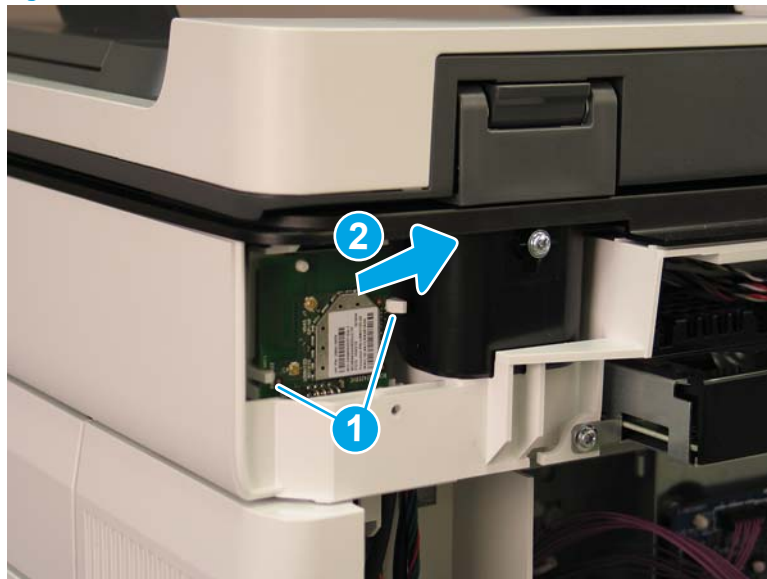




- ii. Connect the cable to the wireless card (callout 1).

**Figure 1-1935** Connect the wireless card connector




- iii. Reinstall the wireless card. Make sure that the hole in the card is positioned over the peg (callout 1), and that the card is under the two tabs (callout 2).

**Figure 1-1936** Reinstall the wireless card

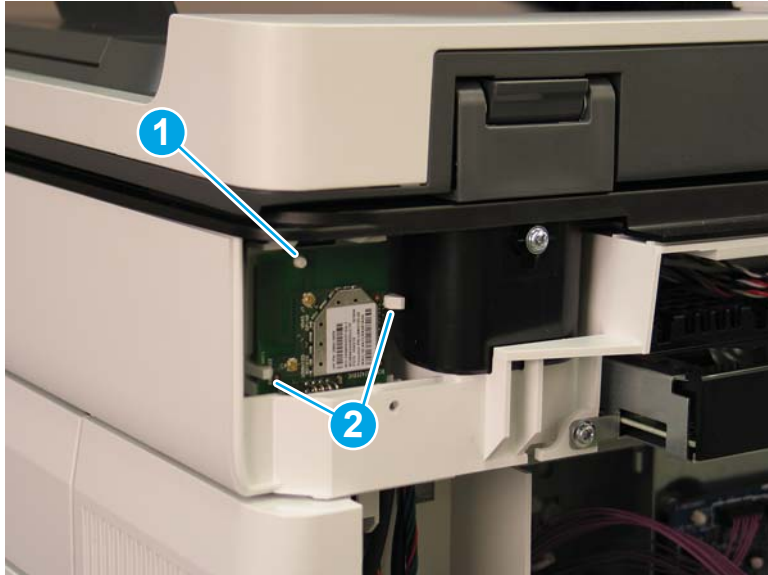

- b. When reinstalling the SCB cables, make sure that the wire retainers (callout 1) on the cables are positioned above the plastic guide (callout 2).

Figure 1-1937 Install the SCB cables

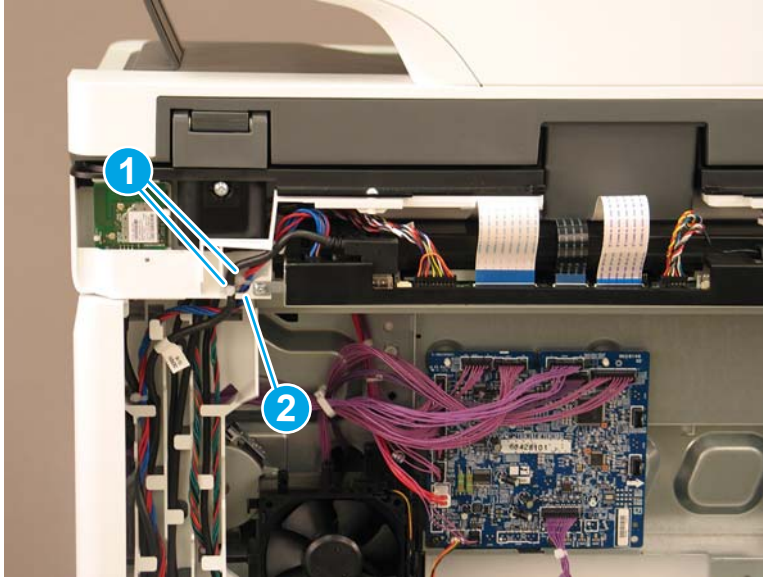

#### Step 5: Remove the stapler/stacker (Flow M681z/Flow M682z/Flow E67660z)

1. Open the front door.


Figure 1-1938 Open the front door





2. Open the stapler door.

Figure 1-1939 Open the stapler door

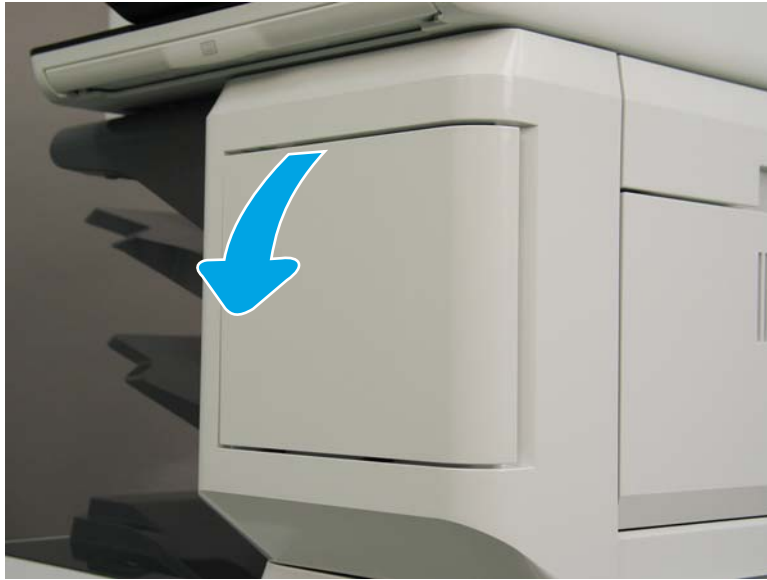

3. Release the latch, and then remove the staple cartridge.

Figure 1-1940 Remove the staple cartridge



4. Remove one screw (callout 1).

Figure 1-1941 Remove one screw




5. Rotate the stapler cover to the right to remove it.

Figure 1-1942 Remove the stapler cover




6. Remove one screw (callout 1).

Figure 1-1943 Remove one screw

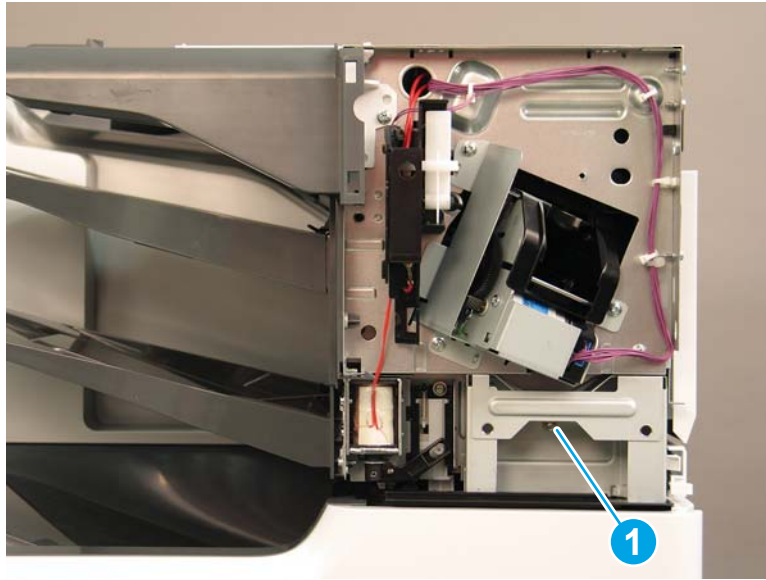


7. At the right side of the printer, remove one screw (callout 1), and then remove the stapler/stacker right upper cover (callout 2).

Figure 1-1944 Remove the stapler/stacker right upper cover

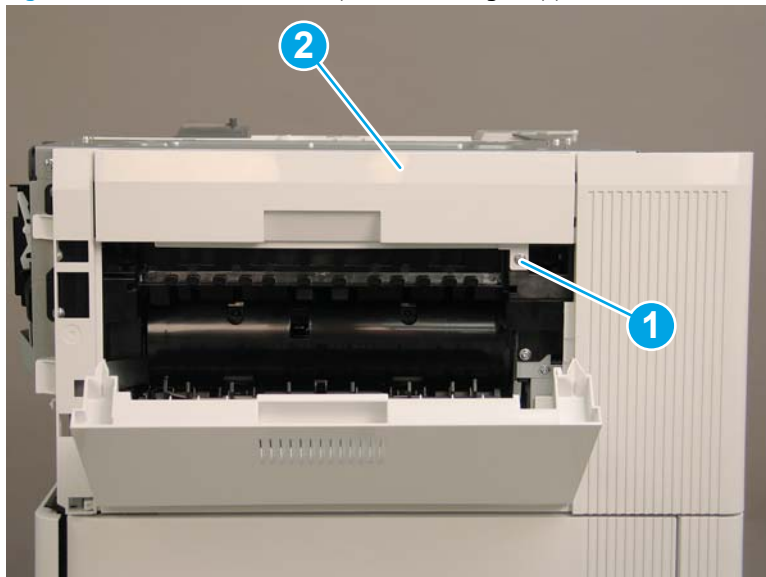


8. Release one tab (callout 1), and then rotate the stapler rear cover away from the printer (callout 2) to remove it.

Figure 1-1945 Remove the stapler rear cover

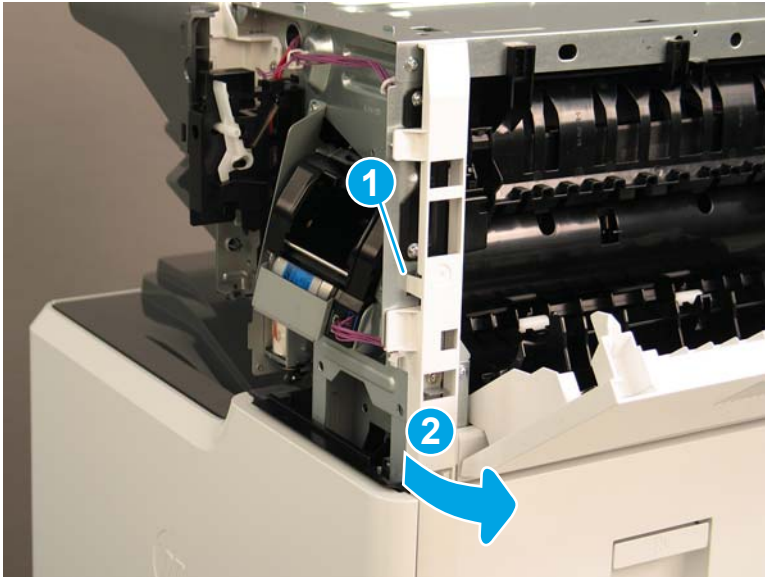


9. Pull the stapler/stacker rear corner cover away from the printer to remove it.

Figure 1-1946 Remove the stapler/stacker rear corner cover

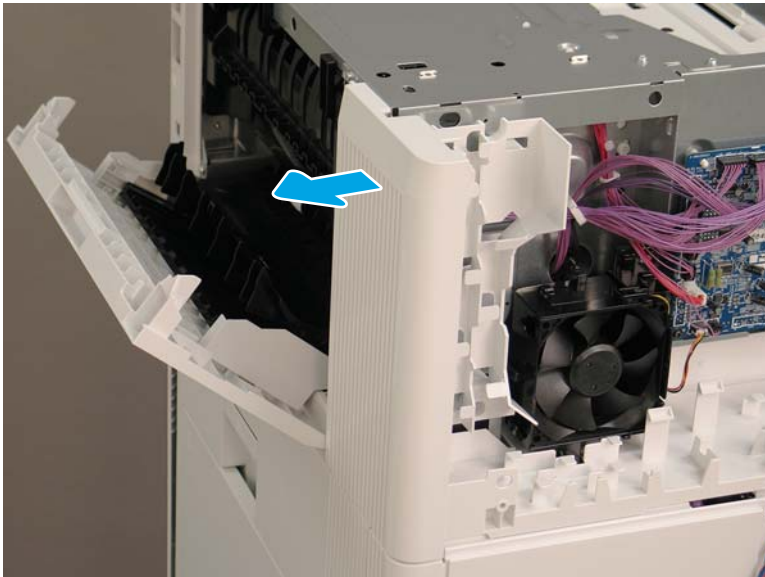


10. Remove two screws (callout 1).

Figure 1-1947 Remove two screws

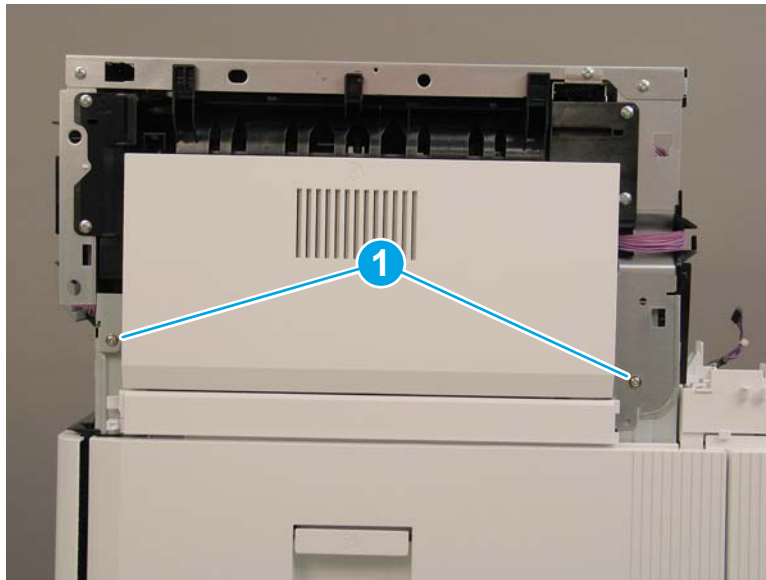


11. At the back of the printer, remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-1948 Remove the cable guide

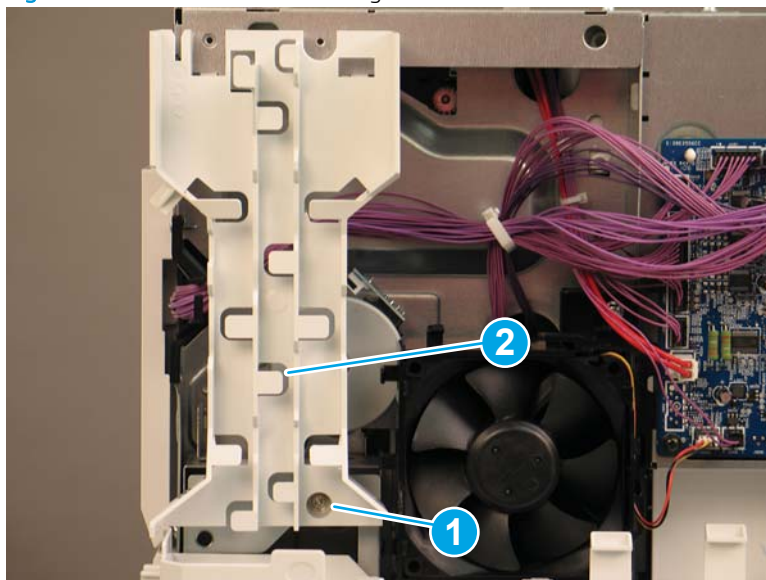

12. Disconnect one connector on the stapler/stacker PCA (callout 1).

Figure 1-1949 Disconnect one connector

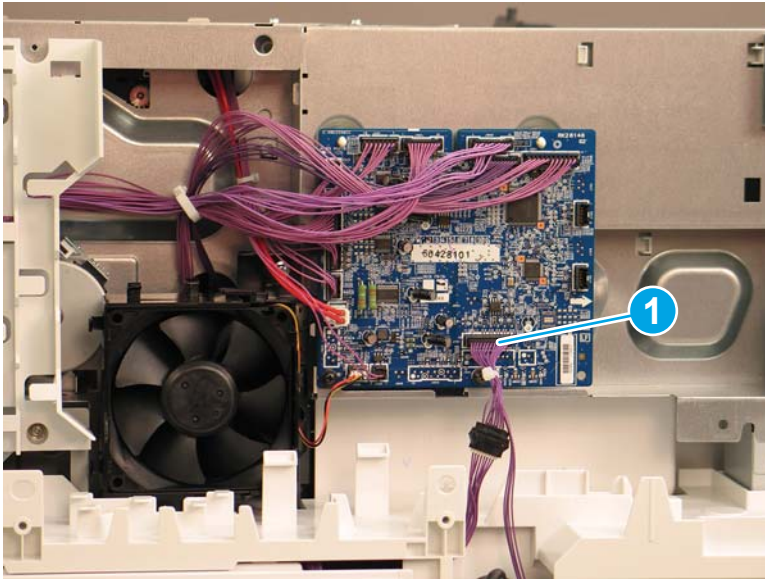

13. Remove two screws (callout 1).


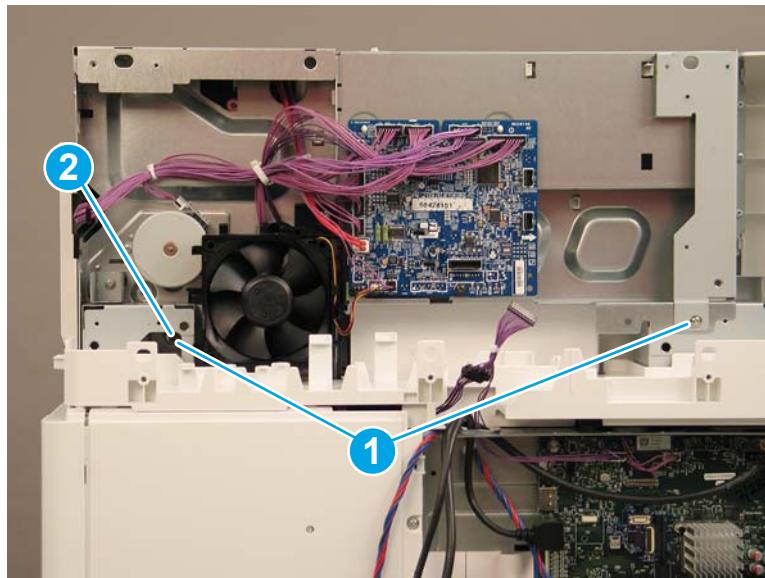

 **Reinstallation tip:** The screw on the left (callout 2) is longer than the other screw. Make sure that this screw is installed in the correct location.

Figure 1-1950 Remove two screws






14. Lift the stapler/stacker away from the printer.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1951** Remove the stapler/stacker

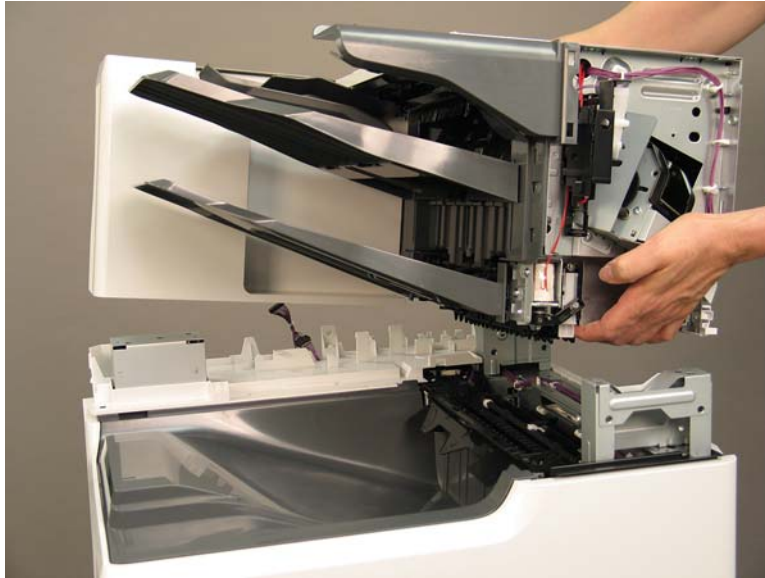

**Step 6: Remove the face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**

1. Open the front door.
2. Release two tabs on each side (callout 1), and then remove the face-down front cover (callout 2).

**Figure 1-1952** Remove the face-down front cover

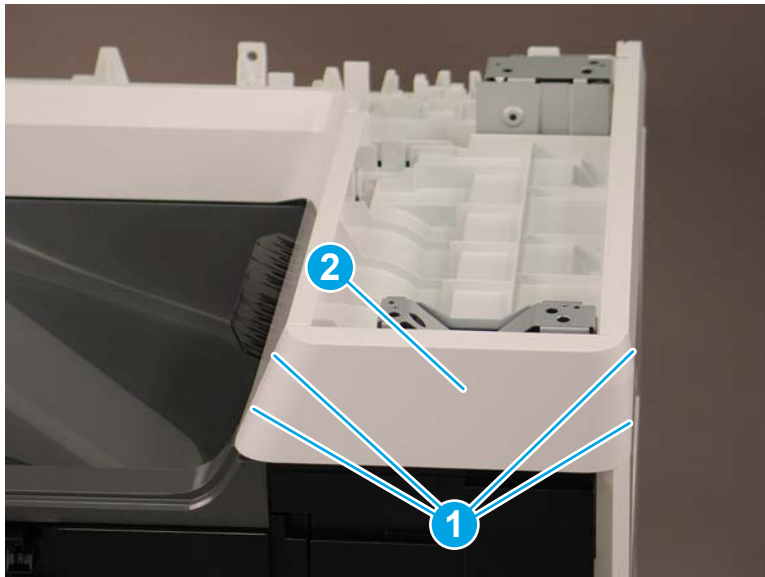

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



### Special installation instructions: Face-down front cover

- ▲ When reinstalling the cover, position the tabs (callout 1) on the printer into the slots (callout 2) on the cover.

Figure 1-1953 Install the cover

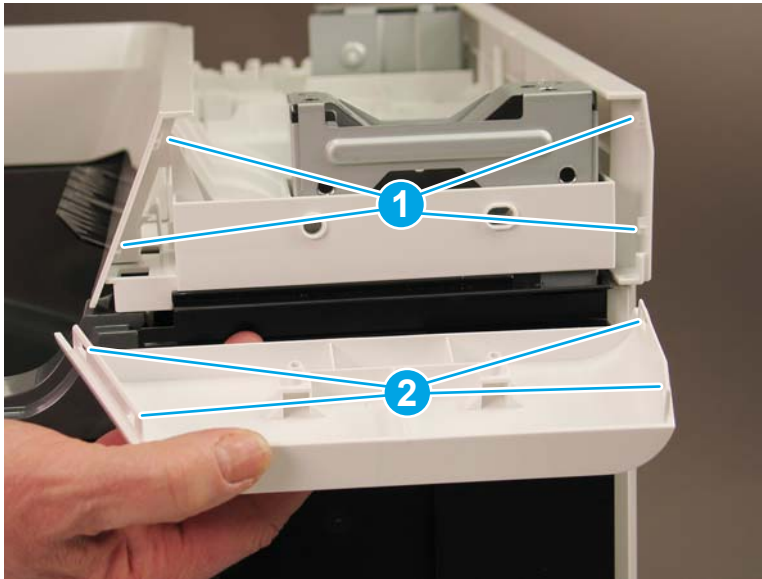


### Step 7: Remove the top cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Release two tabs (callout 1), and then remove the top cover (callout 2).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1954 Remove the top cover

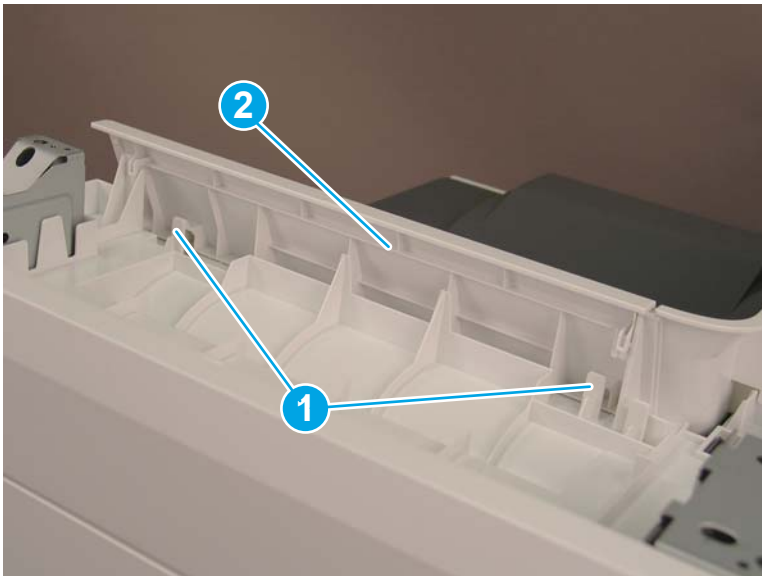

### Step 8: Remove the right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)


- ▲ Release two tabs (callout 1), and then remove the right cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-1955** Remove the right cover

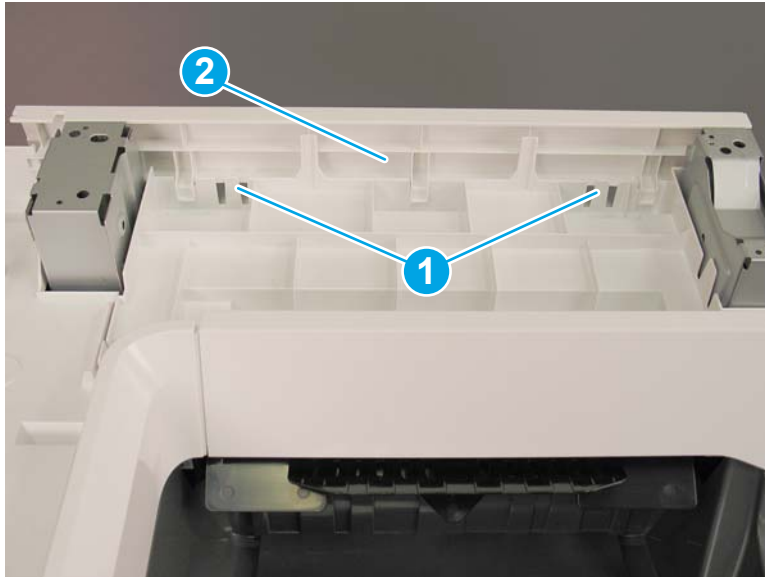

**Step 9: Remove the front cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**


- ▲ Release two tabs (callout 1), and then remove the front cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-1956** Remove the front cover

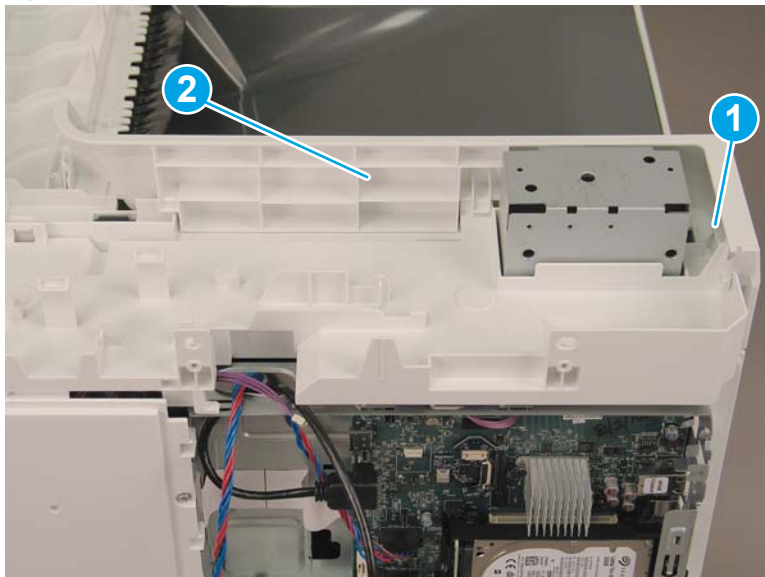

**Step 10: Remove the rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)**


- ▲ Remove two screws (callout 1), and then remove the rear upper cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-1957 Remove the rear upper cover

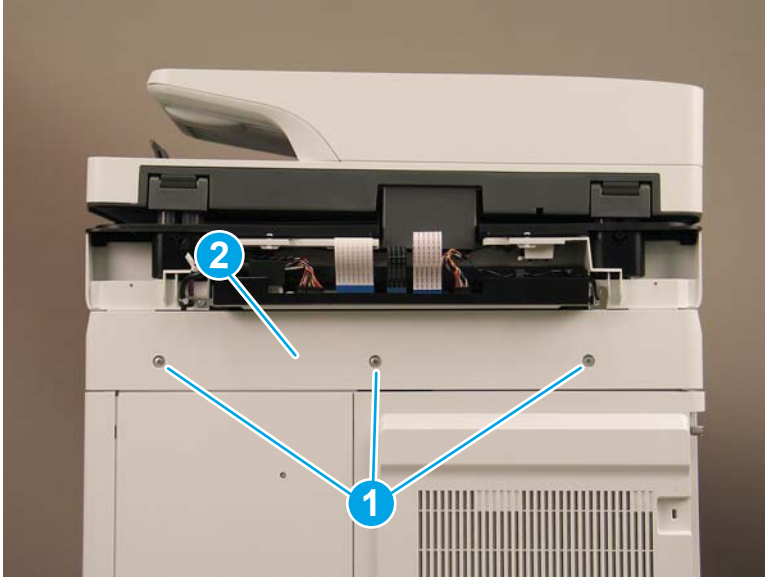


Step 11: Remove the face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

- ▲ Remove two screws (callout 1), release three tabs (callout 2), and then remove the face-down cover (callout 3).

🔧 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1958 Remove two screws and the face-down cover

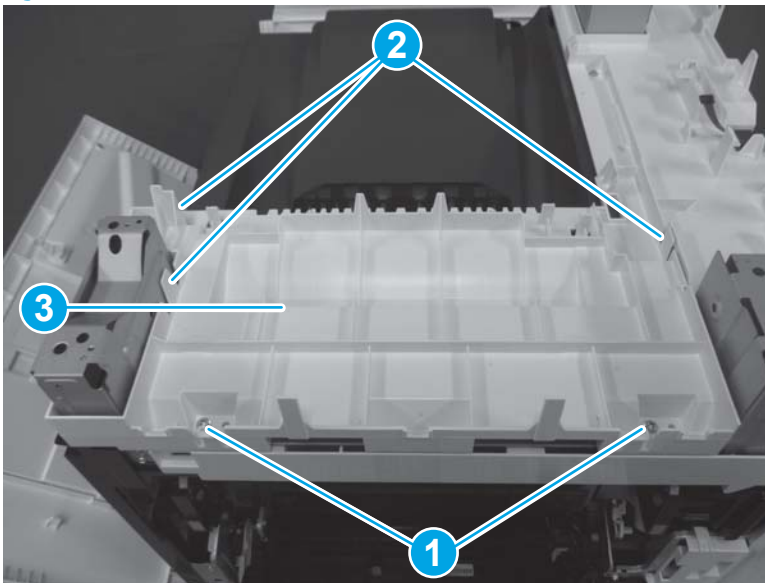

Step 12: Remove the main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)

1. Remove two screws (callout 1), and then release one tab (callout 2).


Figure 1-1959 Remove two screws and release one tab

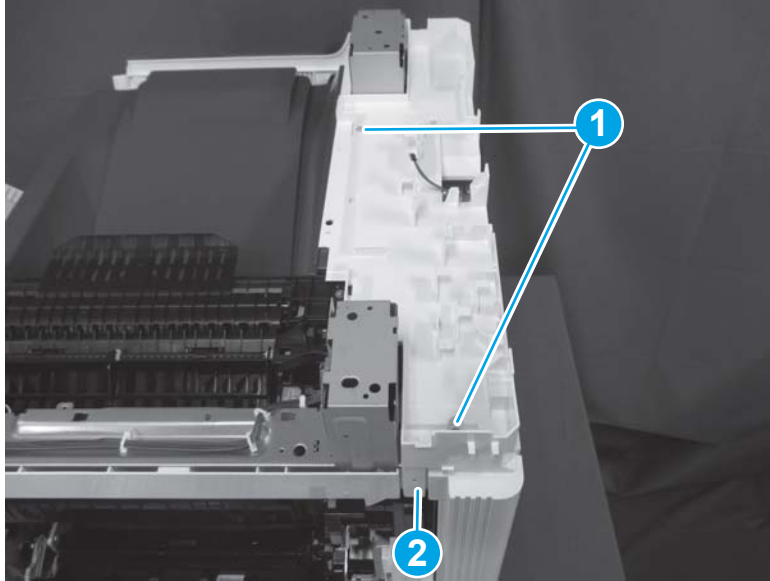

2. Remove one screw (callout 1), release two tabs (callout 2), and then remove the main cover (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-1960 Remove one screw and the main cover

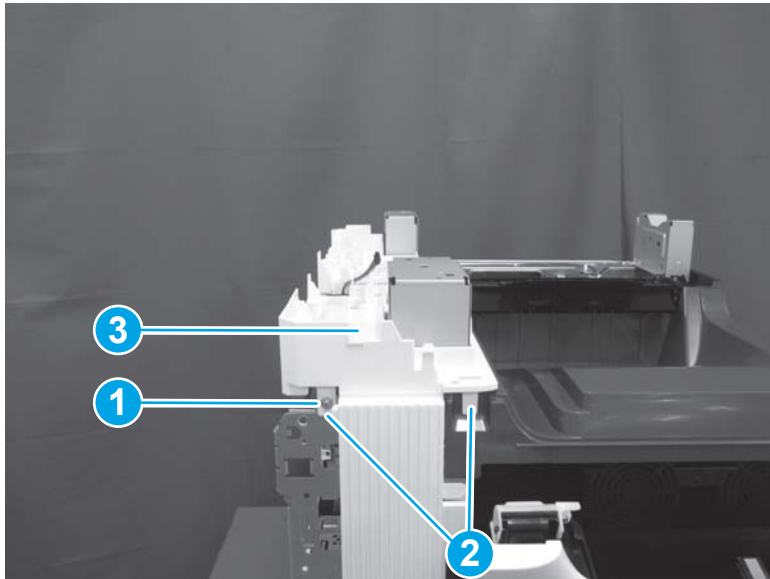


### Step 13: Remove the output bin


1. Open the following doors:
  - Front door
  - Left door
  - Right door

2. Release two tabs (callout 1), and then remove the output bin (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

 **NOTE:** The M682 is shown in the figure below. The procedure is correct for all models.

**Figure 1-1961** Remove the output bin

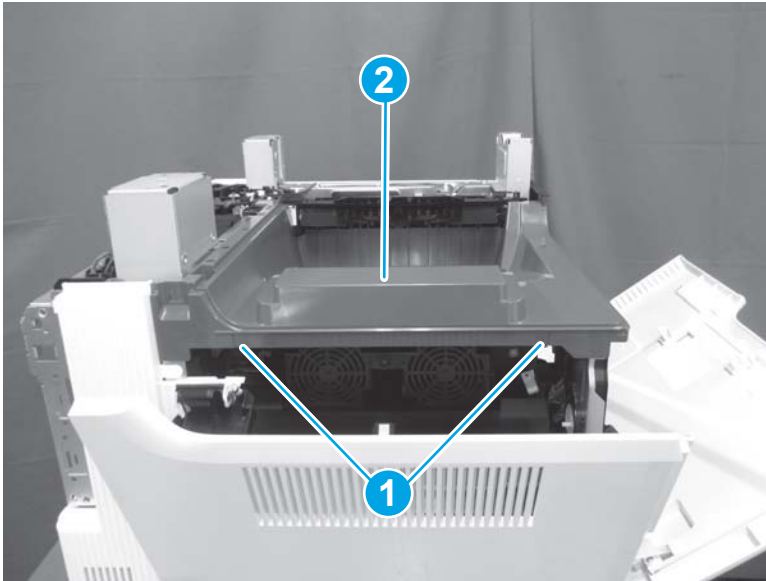

#### Step 14: Remove the fuser


1. Open the right door.

**Figure 1-1962** Open the right door



2. Grasp the handles (callout 1), and then pull away from the printer to remove the fuser (callout 2).


Figure 1-1963 Remove the fuser

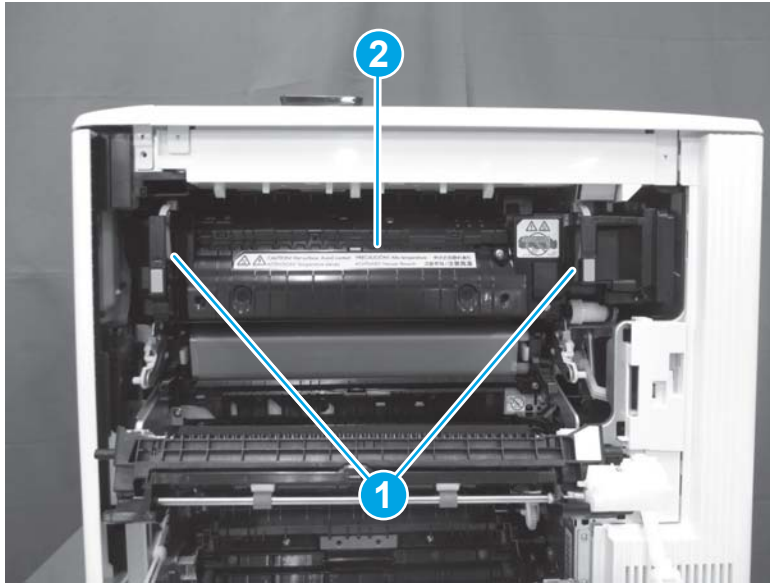

#### Step 15: Remove the delivery assembly

1. At the left side of the printer, release four tabs (callout 1).

Figure 1-1964 Release four tabs

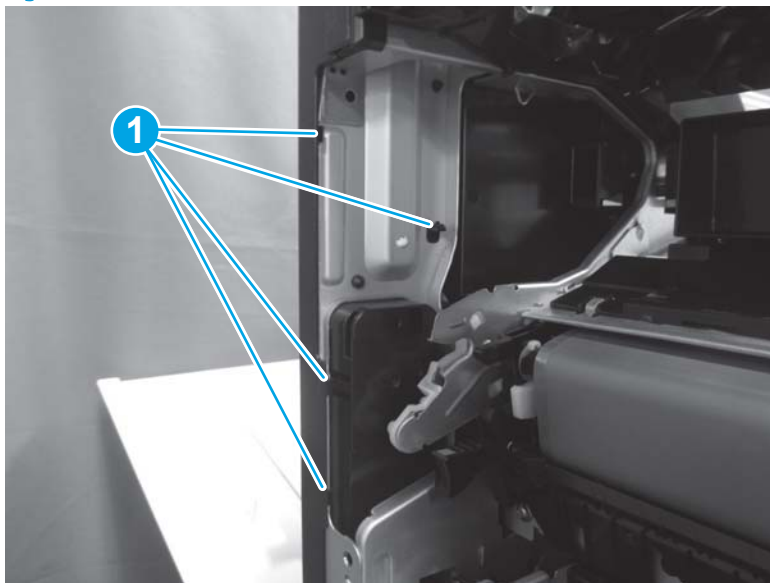


2. At the front of the printer, release four bosses (callout 1), and then remove the front right inner cover (callout 2).

 **TIP:** Push on the back side of the cover for easy release.


---

**Figure 1-1965** Remove the front right inner cover

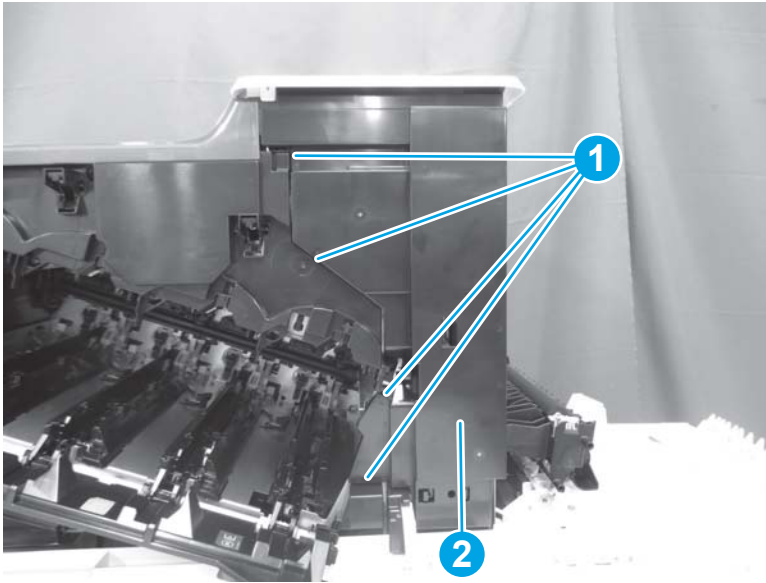

3. Remove two screws (callout 1).


**Figure 1-1966** Remove two screws

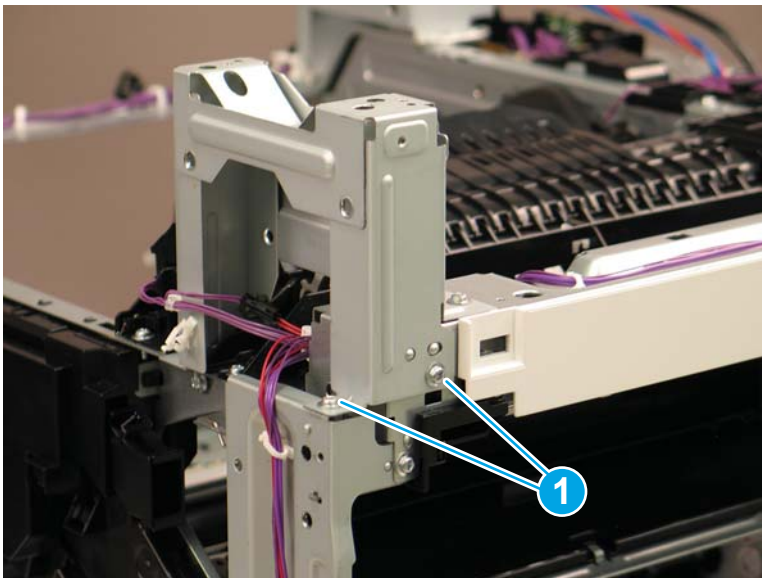




4. Remove two screws (callout 1), release the cables from one retainer (callout 2), and then remove the metal bracket (callout 3).

**Figure 1-1967** Remove two screws and the metal bracket

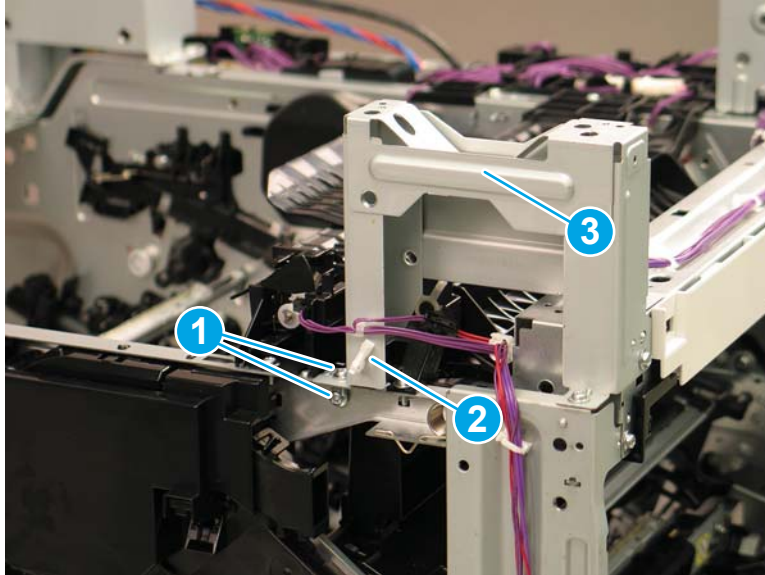

5. Disconnect two connectors (callout 1). Disconnect one connector and remove the cable from the guide (callout 2). Remove four screws (callout 3), and then slide the delivery assembly to the left to remove it.

**Figure 1-1968** Disconnect three connectors and remove four screws

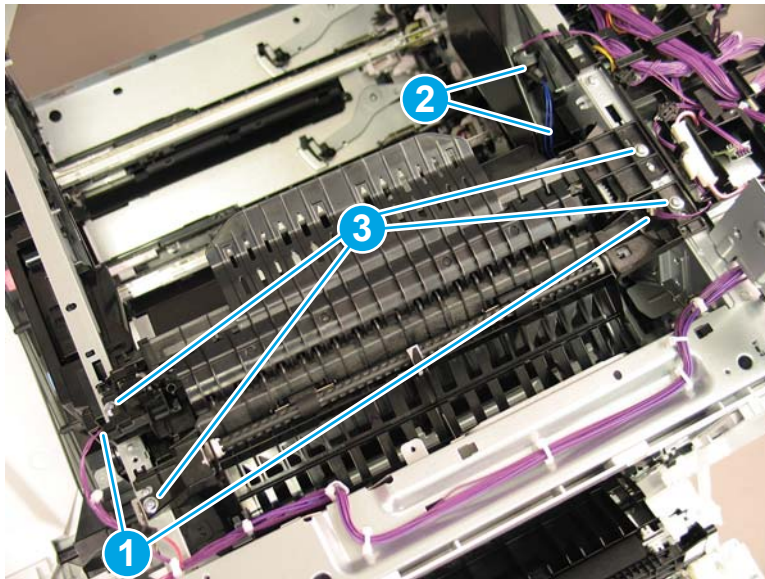


6. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Delivery assembly (M681/M682/E67550/E67560/E67650/E67660)**


- a. The delivery assembly is actually a three-piece unit. If the parts become separated after removing, follow these instructions to reassemble them:
  - i. Position the tab (callout 1) on the end of the lower portion in the slot (callout 2) on the end of the upper portion.

Figure 1-1969 Position the tab

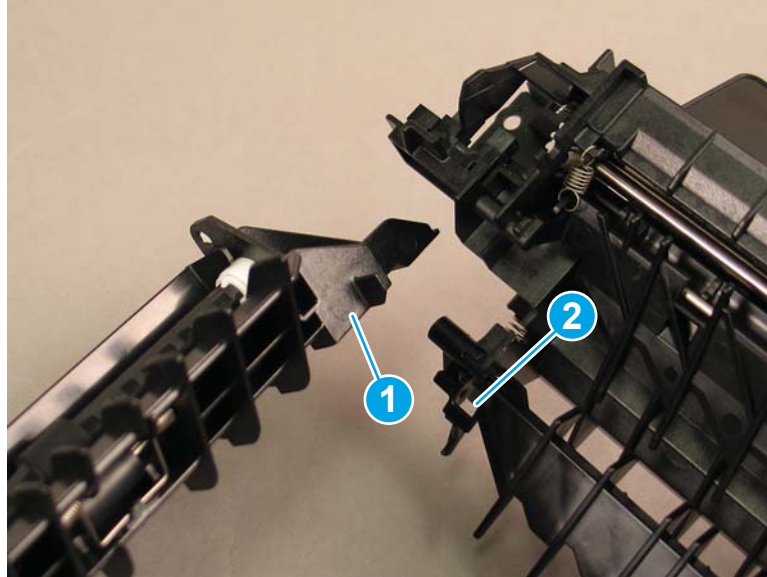


- ii. Rotate the ends of the upper and lower parts together.

Figure 1-1970 Rotate the upper and lower parts together

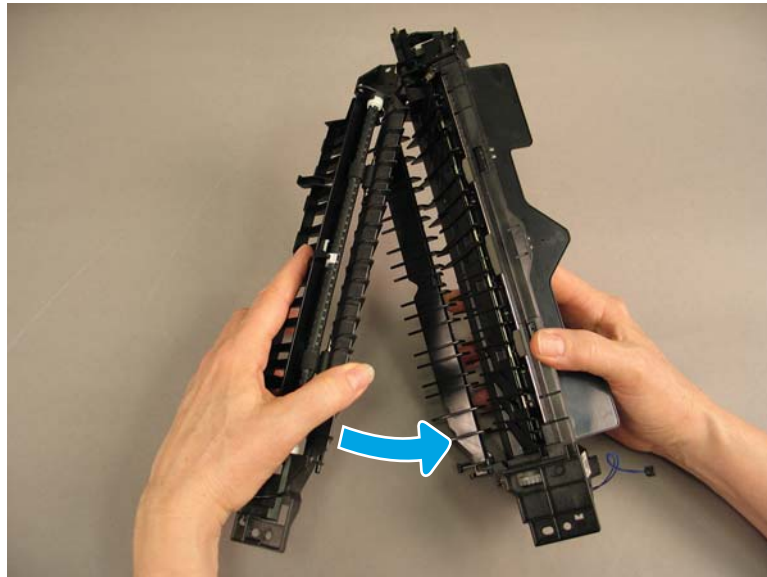


- iii. Install the tab on the lower part into the slot on the upper part to join the parts together.

Figure 1-1971 Connect the upper and lower parts

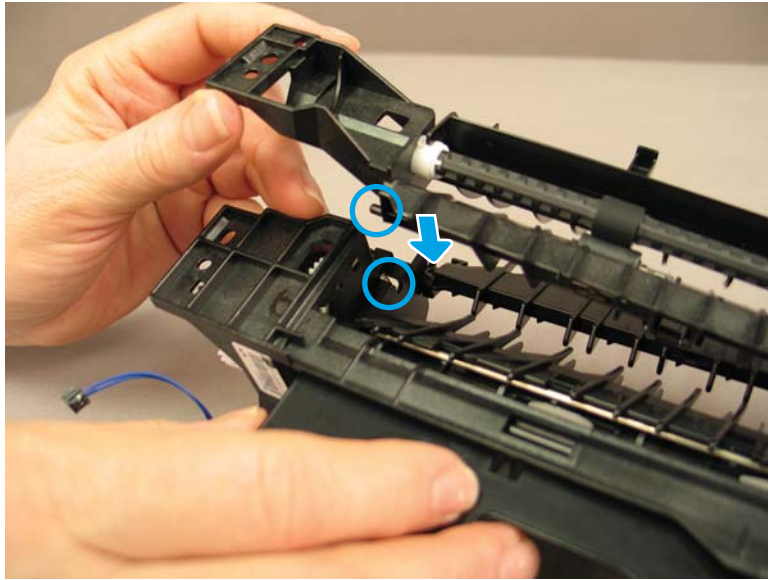


- iv. Install the tabs (callout 1) on the lower shield into the slots (callout 2) in the delivery assembly.

Figure 1-1972 Install the tabs on the lower shield

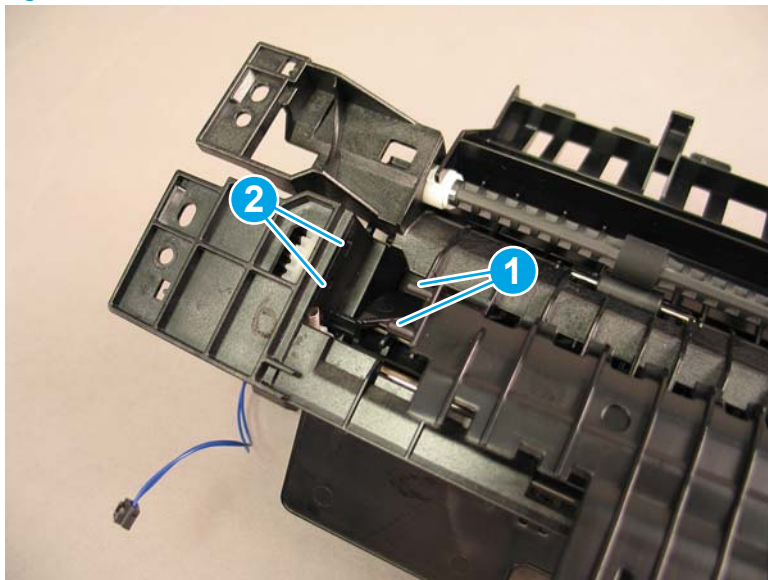


- v. Lower the end of the lower shield into the slot in the delivery assembly.

Figure 1-1973 Lower the end

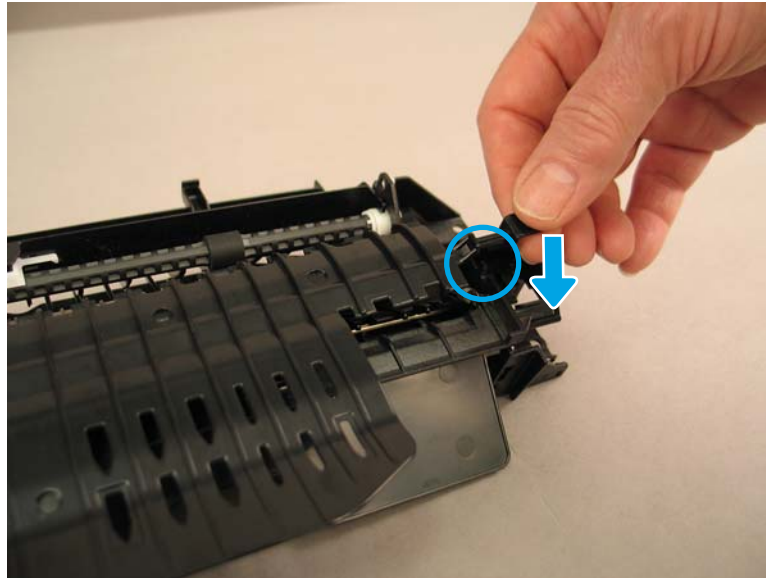

- b. Before reinstalling the delivery assembly, note the keyed shaft (callout 1) on the delivery assembly that must be aligned to fit into the slot (callout 2) on the drive gear.

Figure 1-1974 Note the keyed shaft

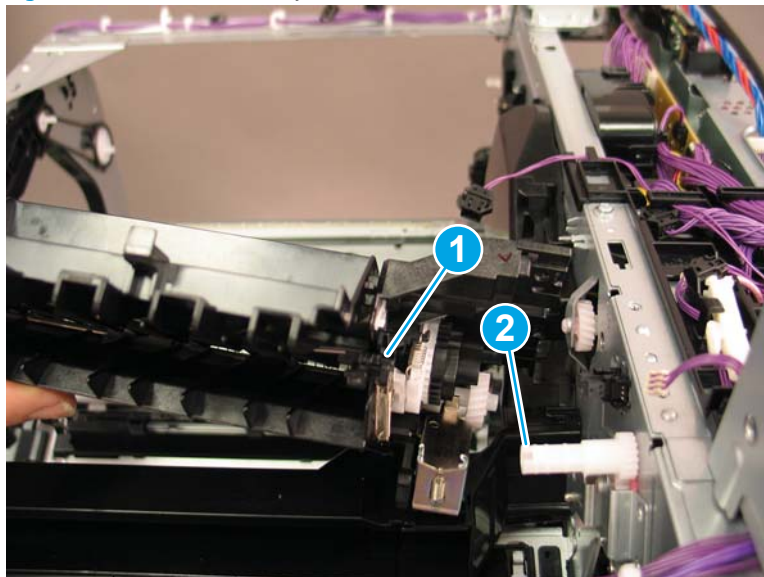




- c. Install the hooks on the delivery assembly (callout 1) into the slots (callout 2) in the sheet metal frame.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

**Figure 1-1975** Install the hooks in the slots

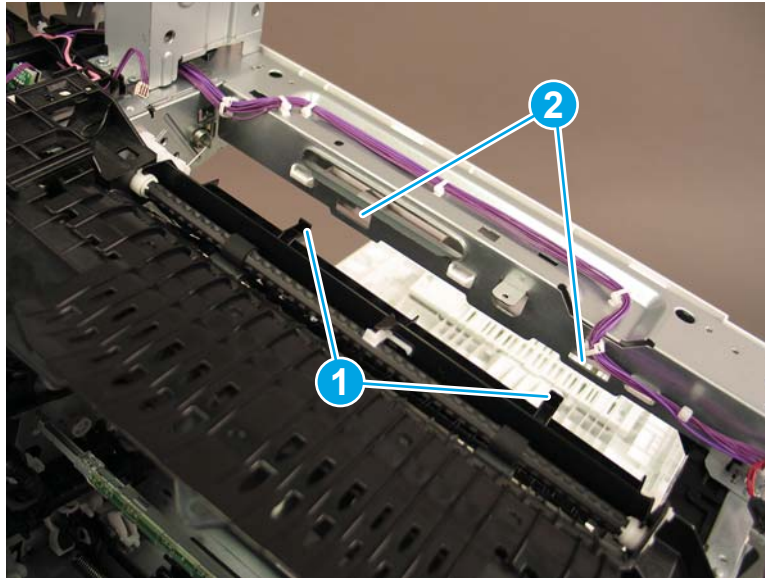

### Step 16: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Secondary transfer assembly

- [Introduction](#)
- [Step 1: Remove the secondary transfer assembly](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the secondary transfer assembly.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Secondary transfer assembly part number	
---	--

---

RM2-6682-000CN
----------------

Secondary transfer assembly
-----------------------------

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the secondary transfer assembly


1. Open the right door.

Figure 1-1976 Open the right door



2. Lower the secondary transfer assembly to a 45° angle.


Figure 1-1977 Lower the secondary transfer

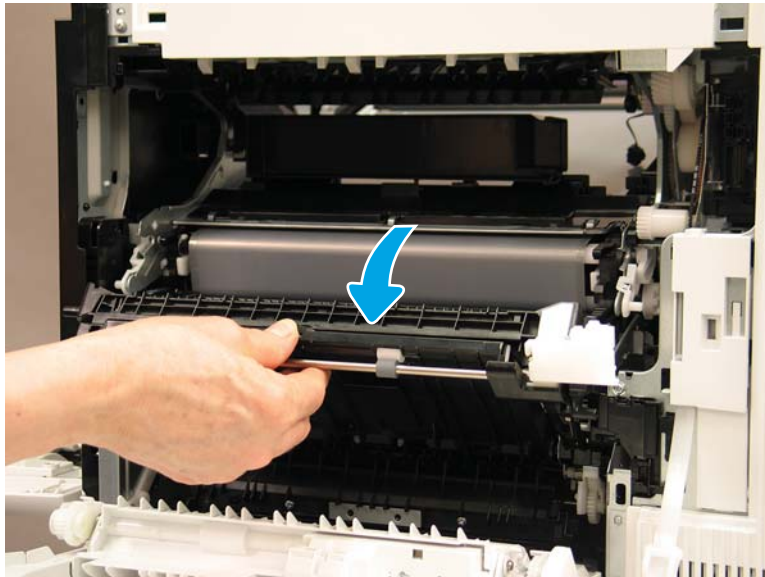




3. While holding the secondary transfer assembly, pivot the media detect assembly up and into the printer.

Figure 1-1978 Pivot the media detect assembly up

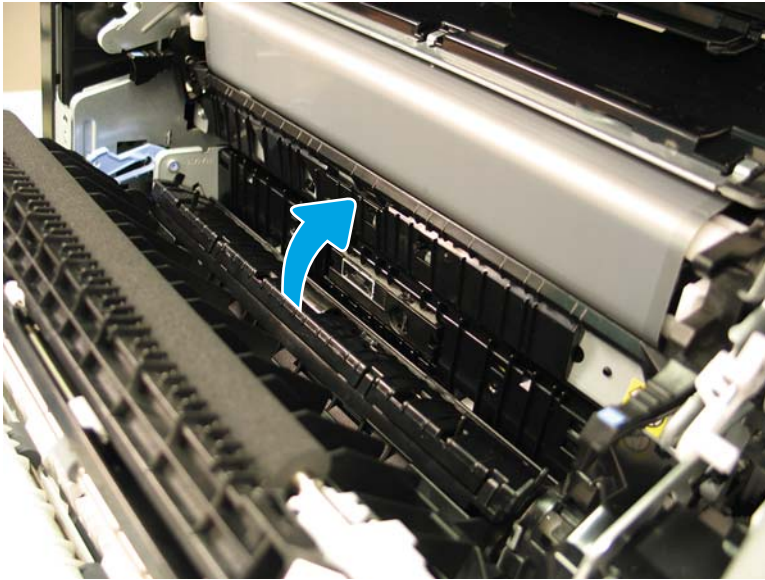


4. Lower the secondary transfer assembly and release it from the media detect assembly. Release the blue lever on the left, and then lower the secondary transfer assembly to the lowest position.

Figure 1-1979 Lower the secondary transfer assembly

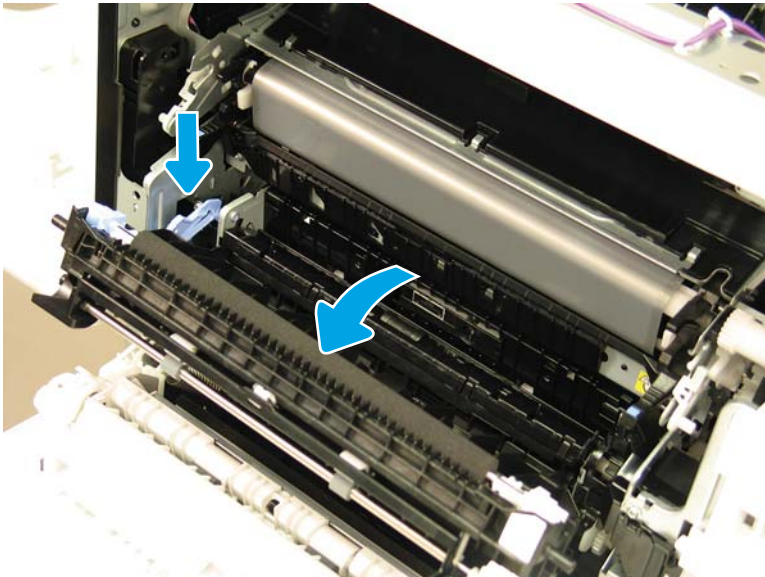


5. Release the right hinge by gently pushing left where the hinge attaches to the printer.

Figure 1-1980 Release the right hinge

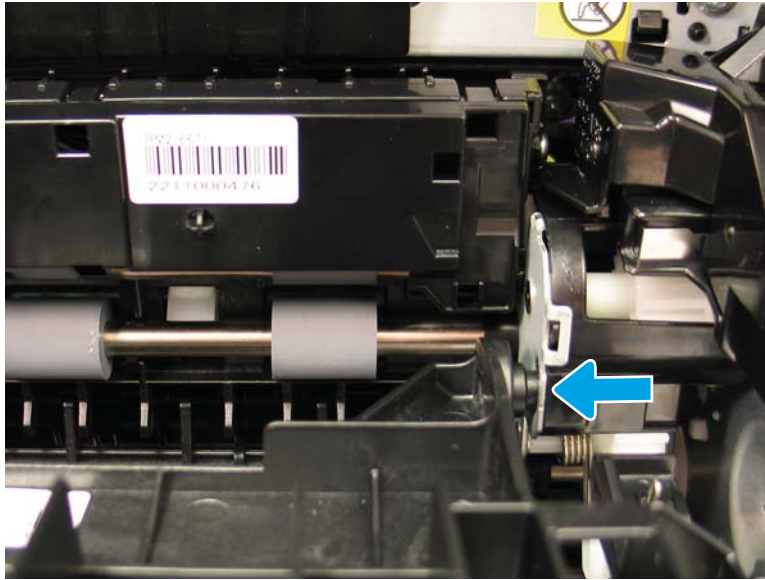


6. Rotate the right side of the assembly away from the printer, and then release the left side of the assembly from the blue link arm (callout 1).

Figure 1-1981 Release the left side

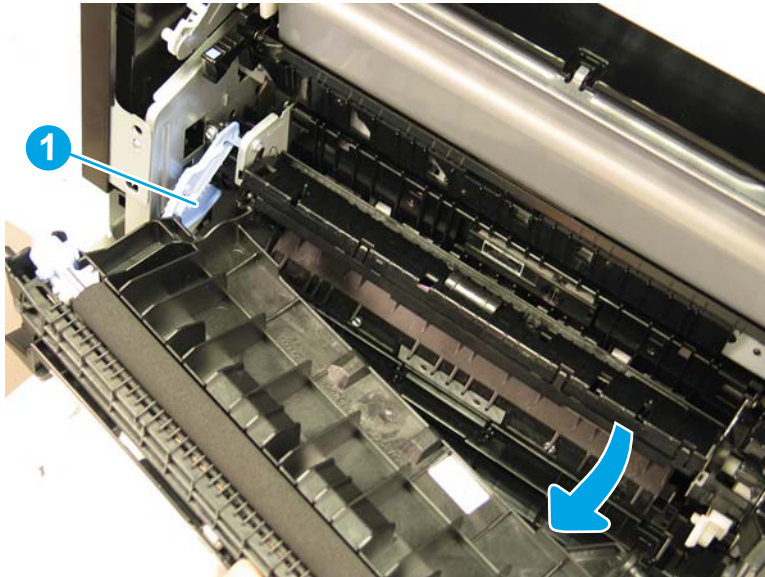


7. Lift the secondary transfer assembly up to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-1982** Remove the secondary transfer assembly

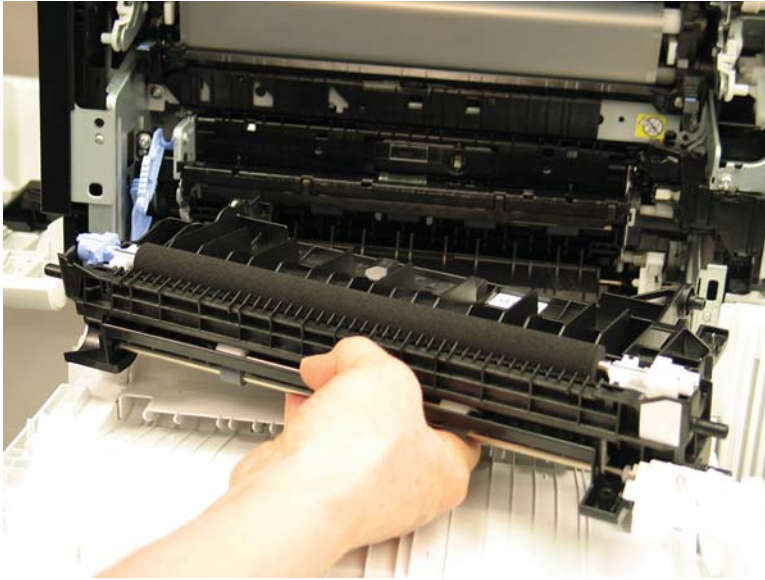

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Registration assembly

- [Introduction](#)
- [Step 1: Remove the secondary transfer assembly](#)
- [Step 2: Remove the formatter cover](#)
- [Step 3: Remove the left rear cover](#)
- [Step 4: Remove the rear cover](#)
- [Step 5: Remove the registration assembly](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the registration assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:


[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Registration assembly part number	
RM2-1957-000CN	Registration assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

#### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.



## Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the secondary transfer assembly


1. Open the right door.

**Figure 1-1983** Open the right door




2. Lower the secondary transfer assembly to a 45° angle.

**Figure 1-1984** Lower the secondary transfer

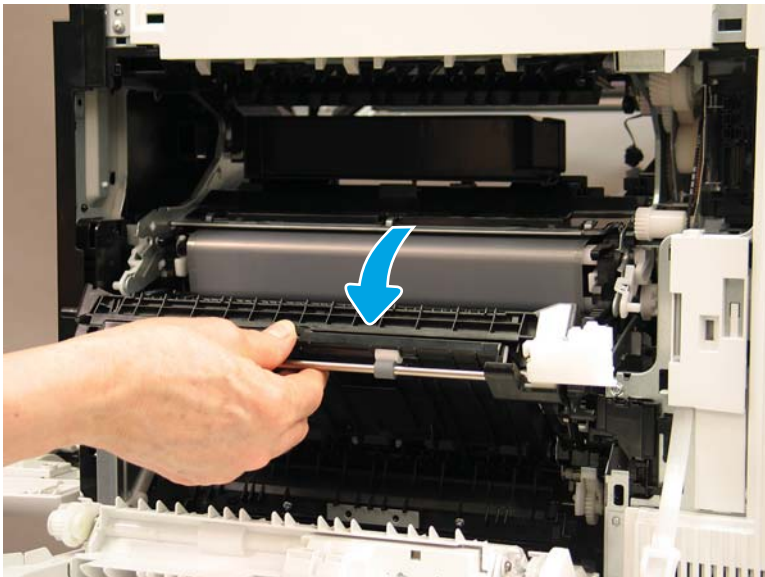


3. While holding the secondary transfer assembly, pivot the media detect assembly up and into the printer.

Figure 1-1985 Pivot the media detect assembly up

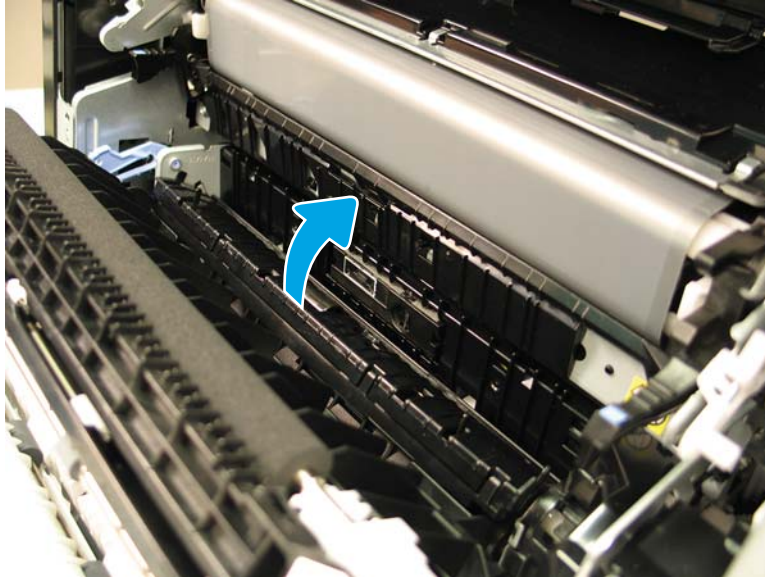


4. Lower the secondary transfer assembly and release it from the media detect assembly. Release the blue lever on the left, and then lower the secondary transfer assembly to the lowest position.

Figure 1-1986 Lower the secondary transfer assembly

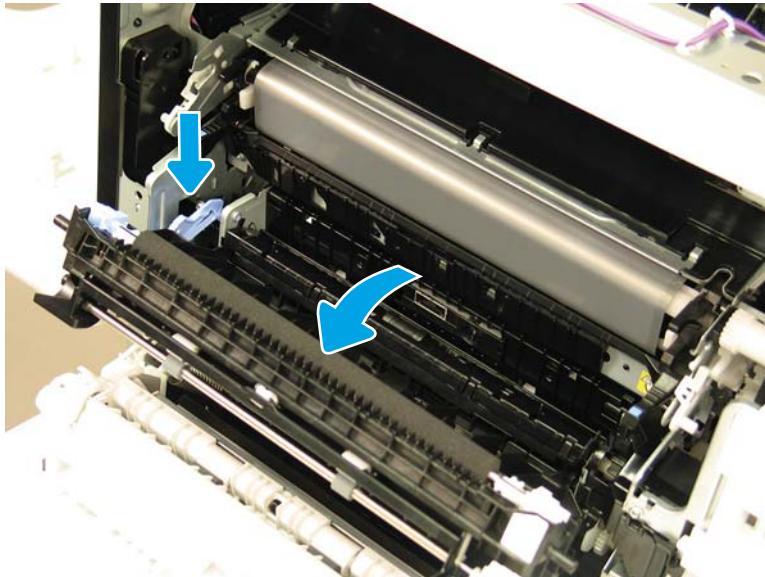


5. Release the right hinge by gently pushing left where the hinge attaches to the printer.

Figure 1-1987 Release the right hinge

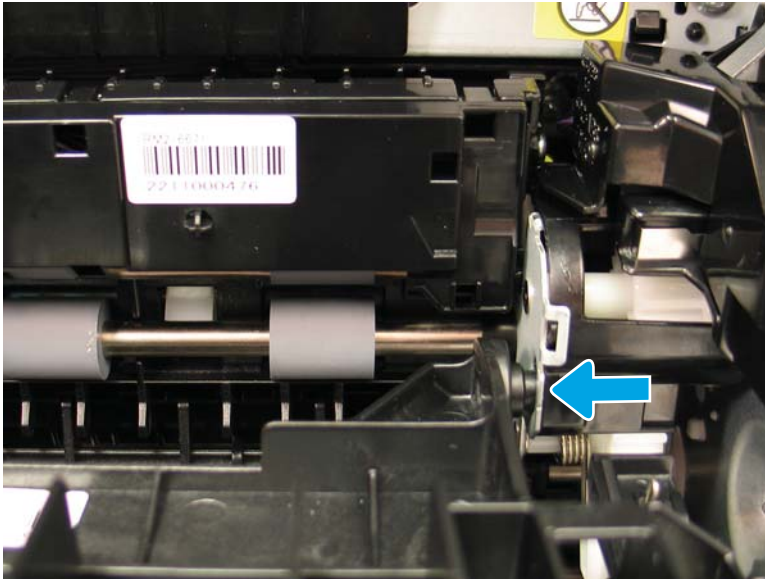

6. Rotate the right side of the assembly away from the printer, and then release the left side of the assembly from the blue link arm (callout 1).

Figure 1-1988 Release the left side

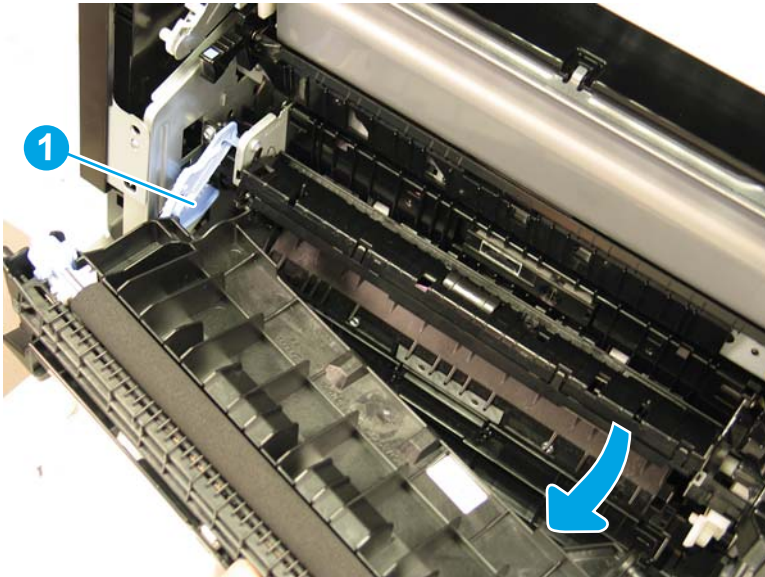




7. Lift the secondary transfer assembly up to remove it.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-1989** Remove the secondary transfer assembly

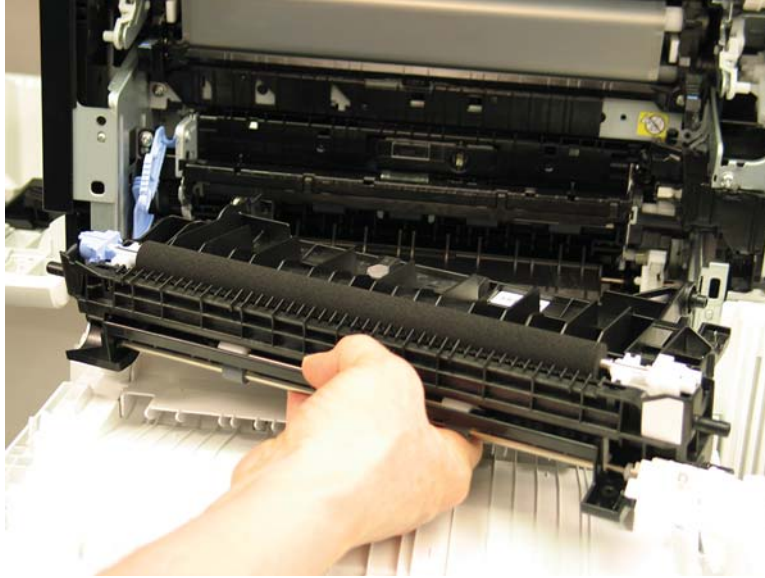


### Step 2: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1990** Remove the formatter cover

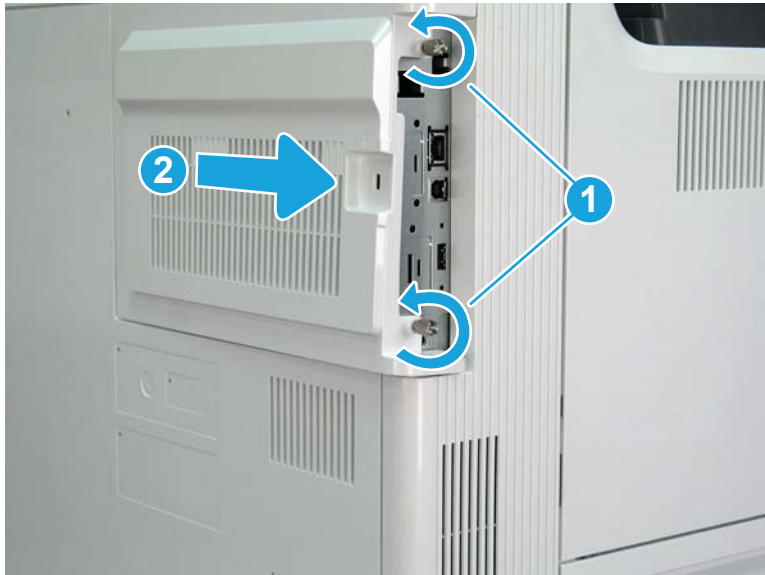

### Step 3: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-1991 Remove the left rear cover

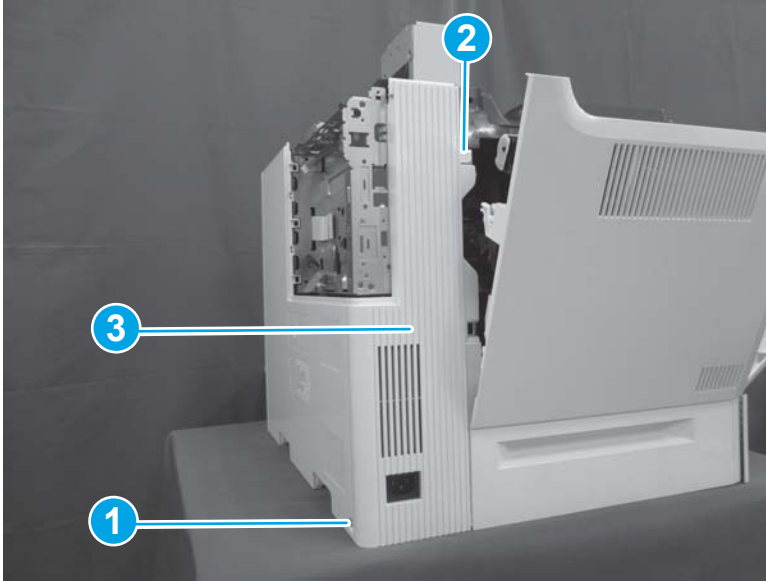


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-1992 Install the left rear cover

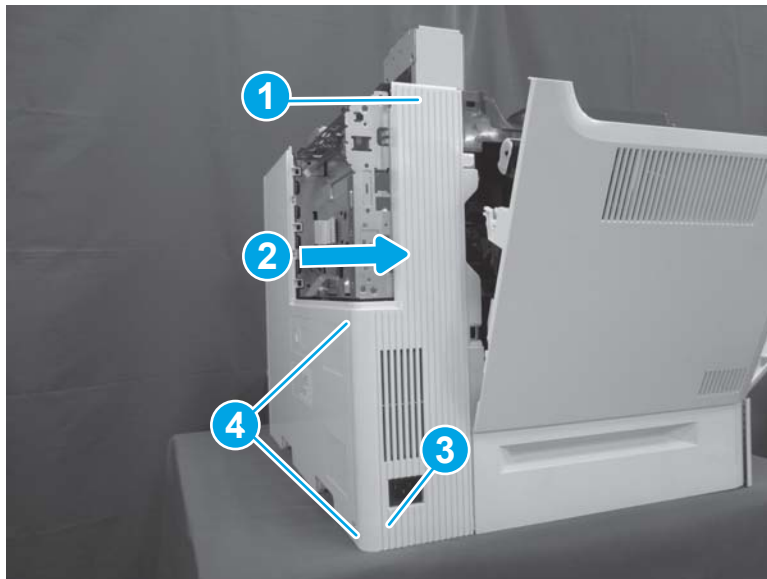


#### Step 4: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-1993** Remove two screws and the rear cover

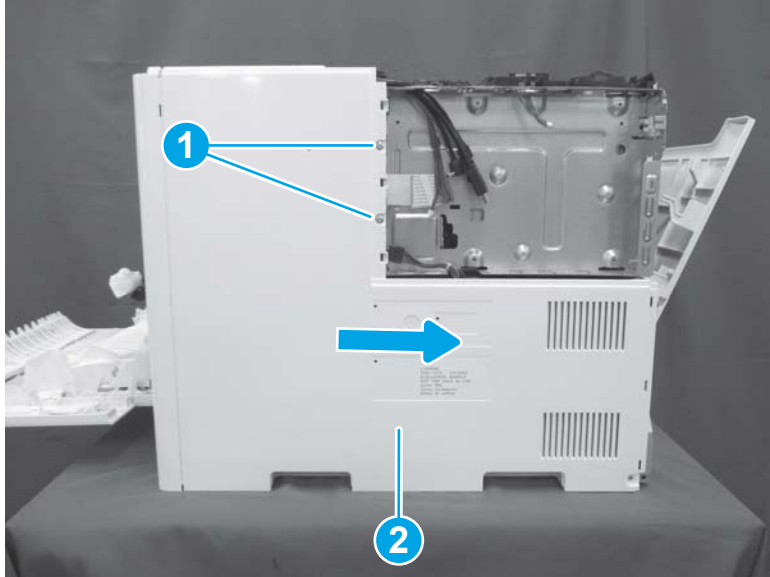

#### Step 5: Remove the registration assembly


1. Release the cables from four retainers (callout 1), and then disconnect four connectors (callout 2).

**Figure 1-1994** Disconnect four connectors

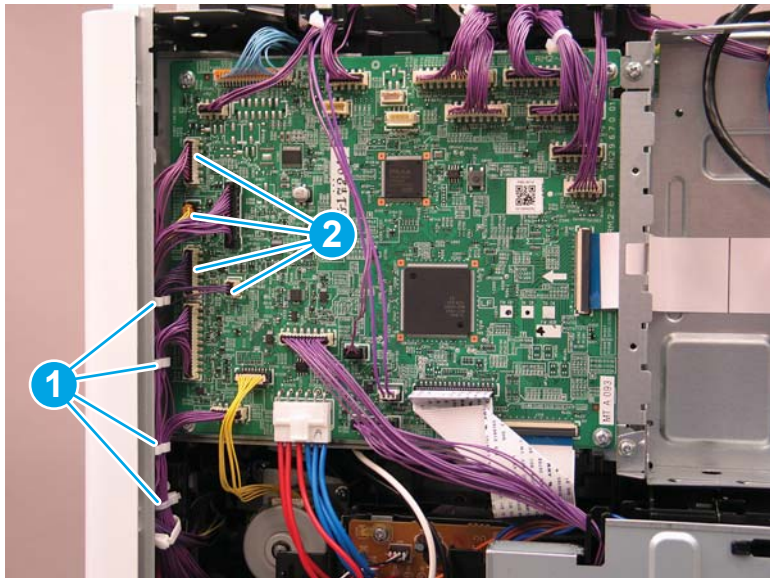


2. Release one tab (callout 1), release one boss (callout 2), and then remove the connector cover (callout 3).

Figure 1-1995 Remove the connector cover

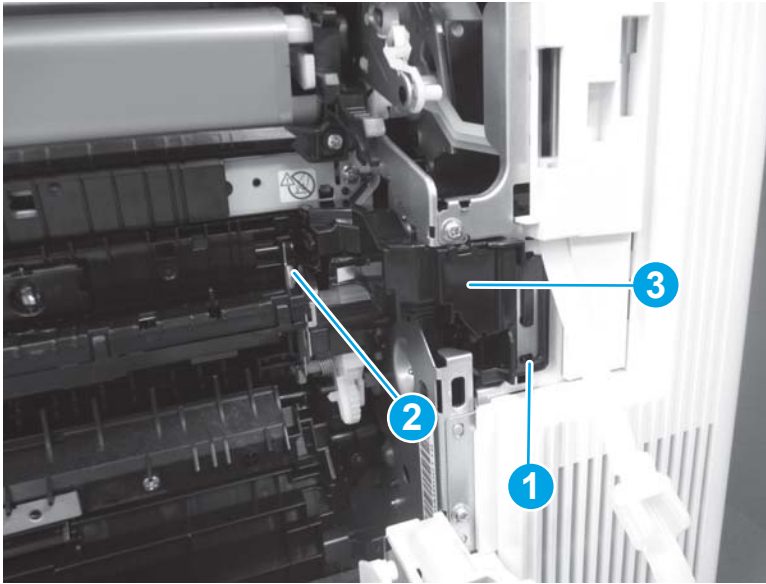


3. Release one tab (callout 1), and then slide the cable guide (callout 2) down to release it.

Figure 1-1996 Release the cable guide

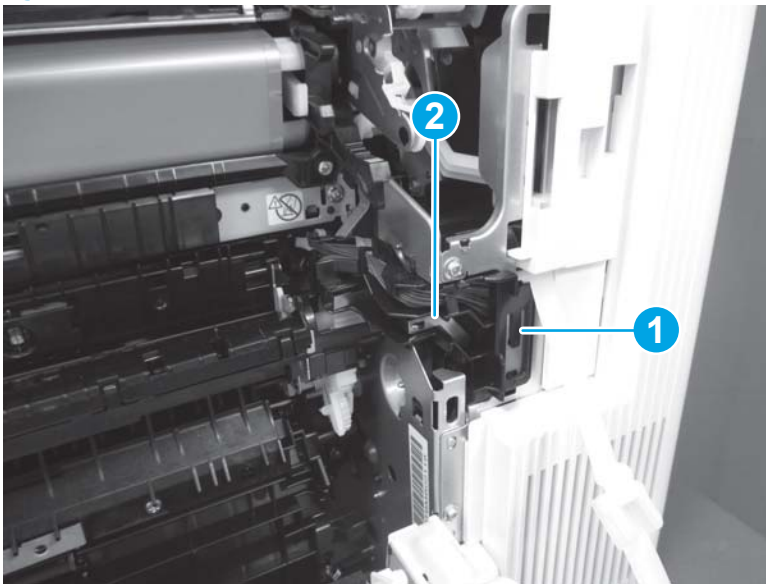


4. Release the cable (callout 1) from the cable guide (callout 2).

Figure 1-1997 Remove the cable guide

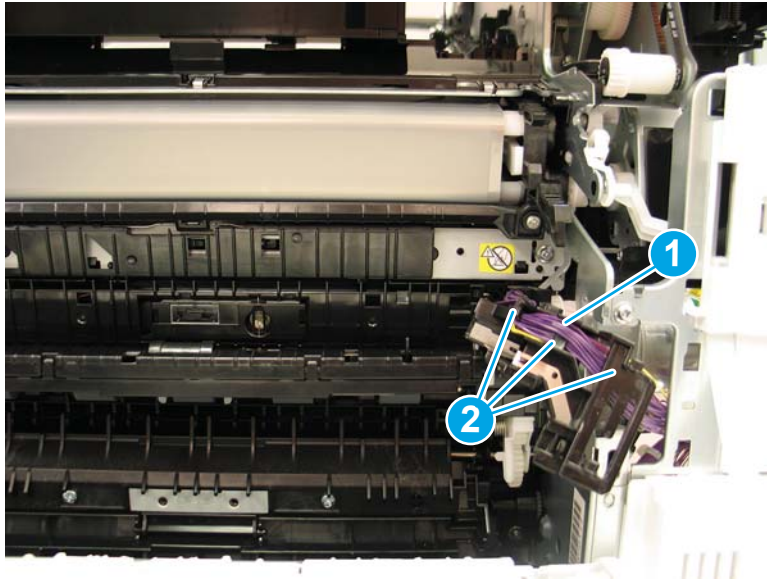

5. Remove three screws (callout 1).


Figure 1-1998 Remove three screws

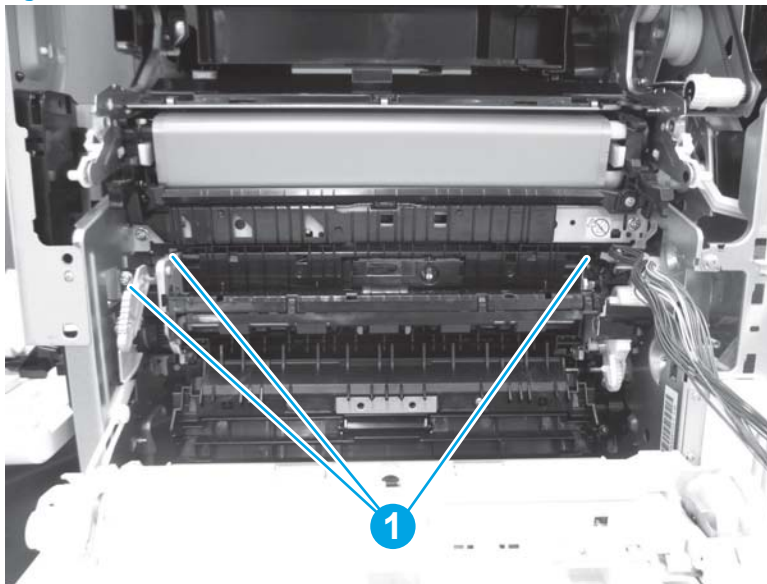




6. Release the assembly from the guide pin (callout 1) on the left side of the assembly.

**Figure 1-1999** Release the assembly from the guide pin

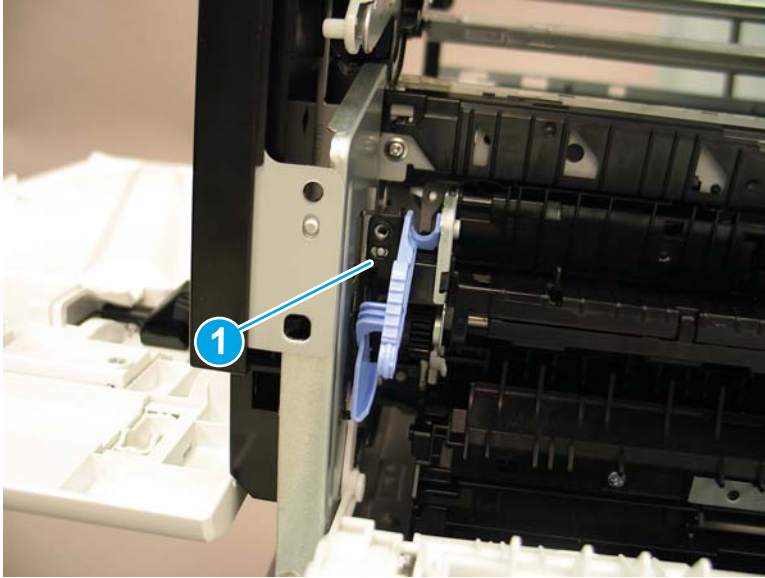

7. Press downward on the left side of the assembly (callout 1), and then rotate the assembly away from the printer (callout 2) to release the hooks that go through the sheet metal on the back of the assembly. Remove the registration assembly.

**Figure 1-2000** Remove the registration assembly

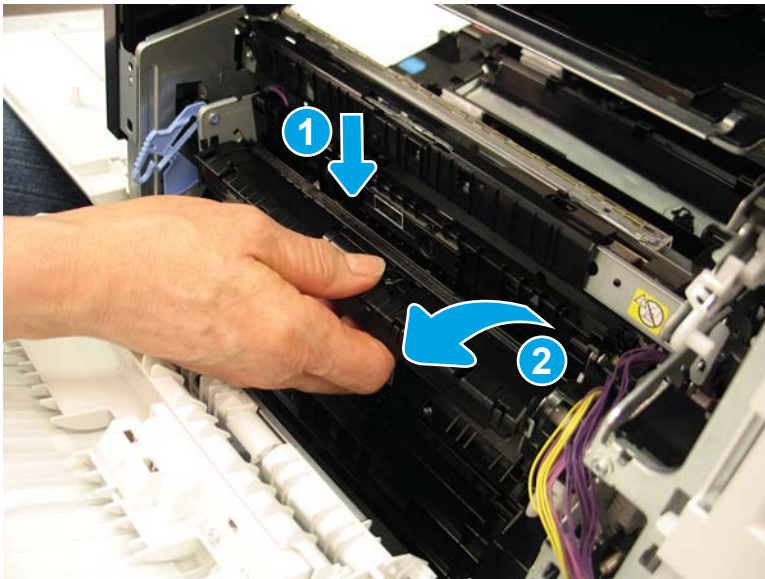


8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Registration assembly**

- a. Install the tabs (callout 1) on the registration assembly into the slots (callout 2) in the printer.

Figure 1-2001 Install the tabs in the slots

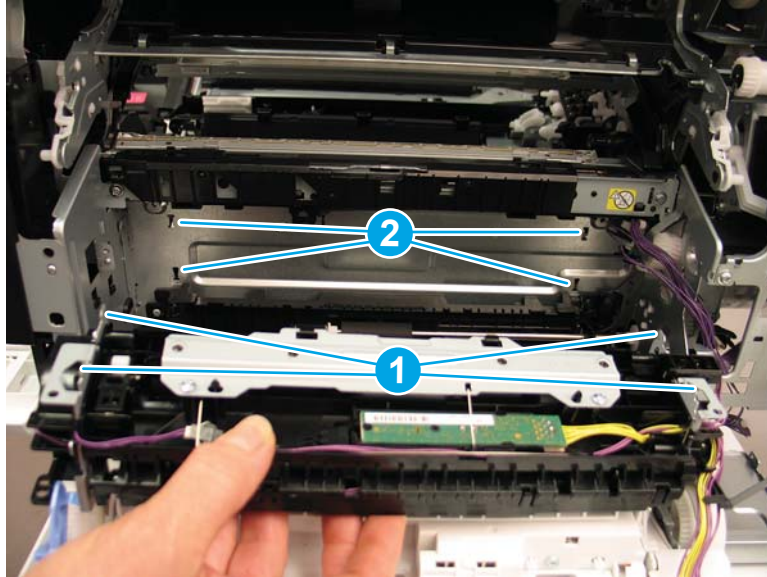


- b. Look inside the printer and make sure that the tabs (callout 1) are completely installed in the sheet metal before installing the screws.

---

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

Figure 1-2002 Check the tabs

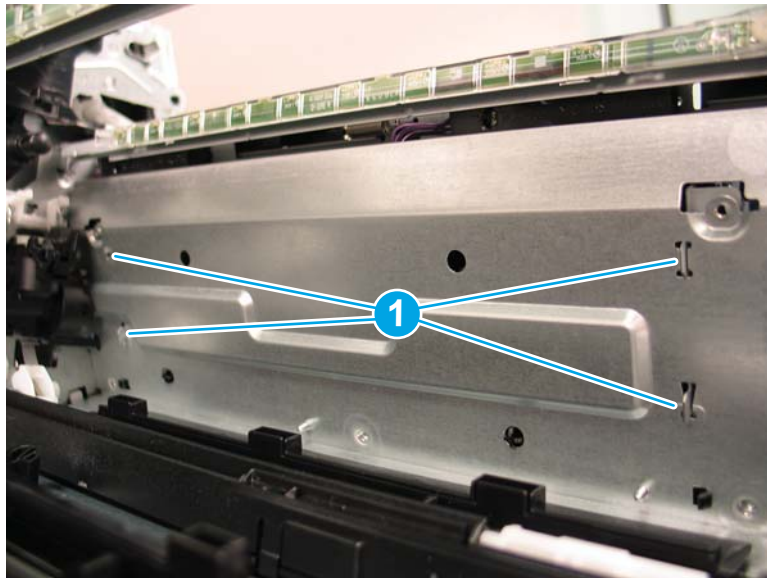


### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Registration density sensor

- [Introduction](#)
- [Step 1: Remove the secondary transfer assembly](#)
- [Step 2: Remove the formatter cover](#)
- [Step 3: Remove the left rear cover](#)
- [Step 4: Remove the rear cover](#)
- [Step 5: Remove the registration assembly](#)
- [Step 6: Remove the registration density sensor](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the registration density sensor.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Registration density sensor part number	
RM2-7160-000CN	Registration density sensor

### Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the secondary transfer assembly


1. Open the right door.

**Figure 1-2003** Open the right door




2. Lower the secondary transfer assembly to a 45° angle.

Figure 1-2004 Lower the secondary transfer

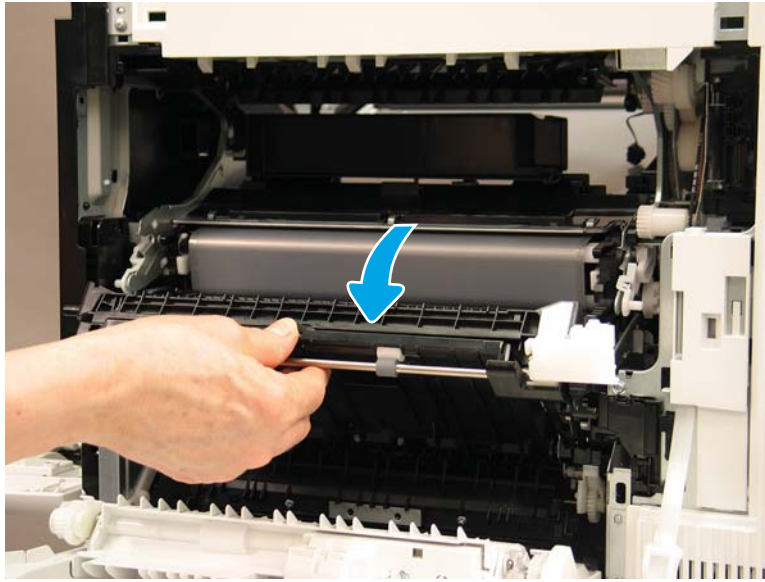


3. While holding the secondary transfer assembly, pivot the media detect assembly up and into the printer.

Figure 1-2005 Pivot the media detect assembly up

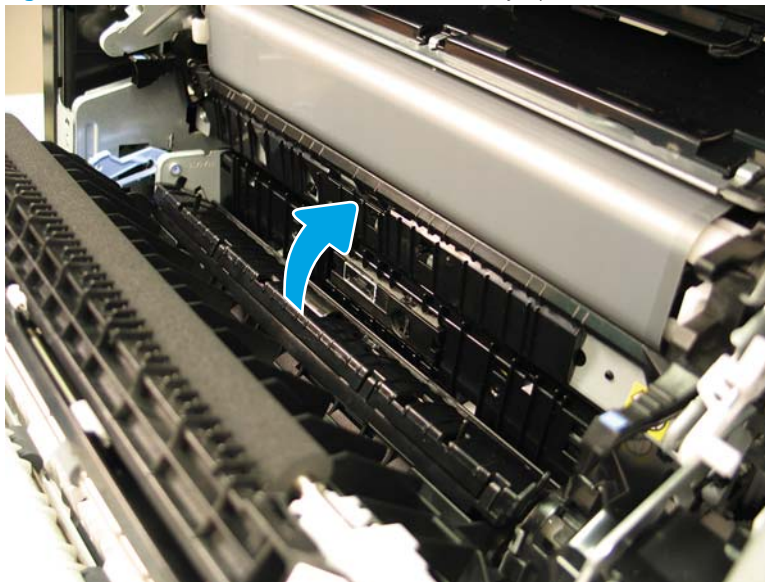


4. Lower the secondary transfer assembly and release it from the media detect assembly. Release the blue lever on the left, and then lower the secondary transfer assembly to the lowest position.

Figure 1-2006 Lower the secondary transfer assembly

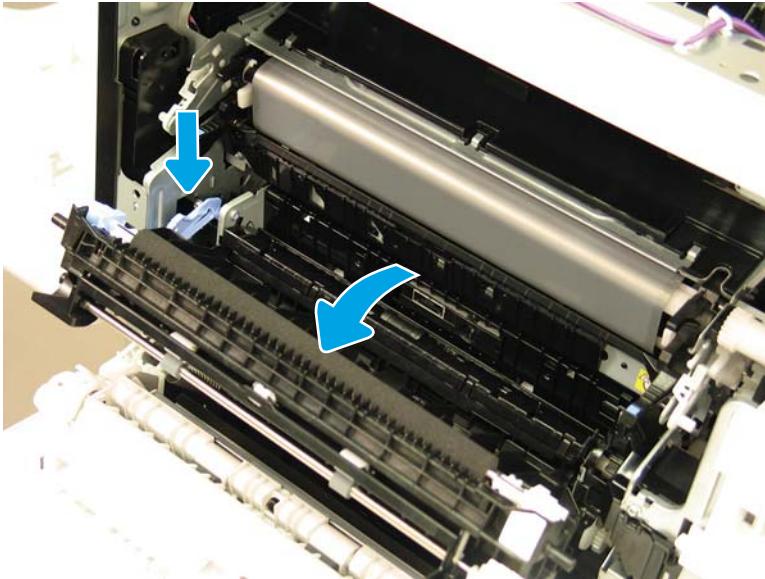

5. Release the right hinge by gently pushing left where the hinge attaches to the printer.


Figure 1-2007 Release the right hinge

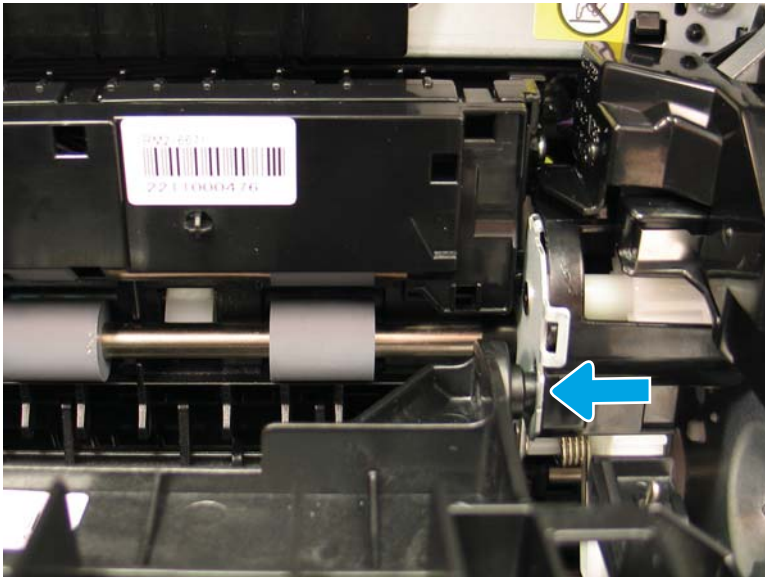



6. Rotate the right side of the assembly away from the printer, and then release the left side of the assembly from the blue link arm (callout 1).


Figure 1-2008 Release the left side

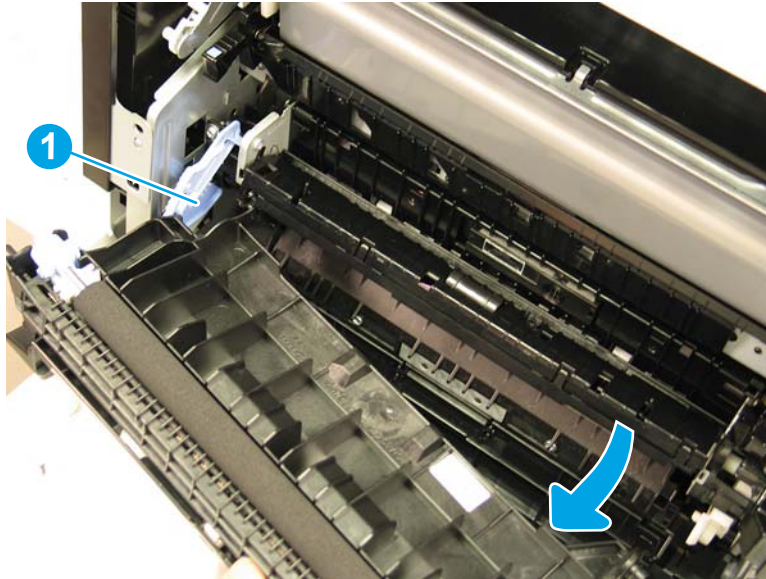

7. Lift the secondary transfer assembly up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2009 Remove the secondary transfer assembly

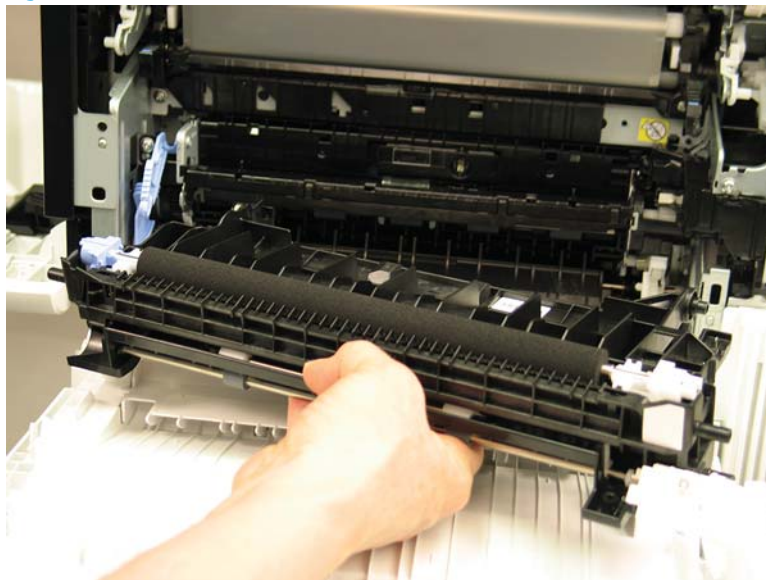


## Step 2: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2010 Remove the formatter cover

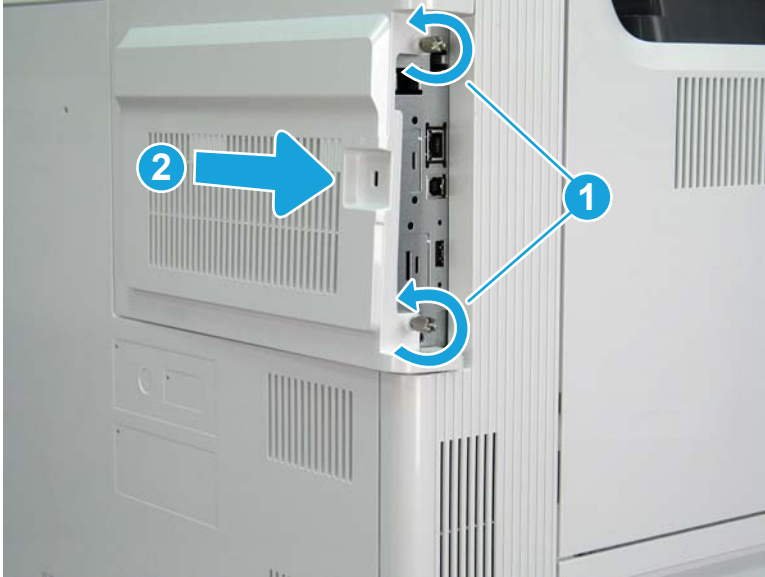

### Step 3: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-2011 Remove the left rear cover

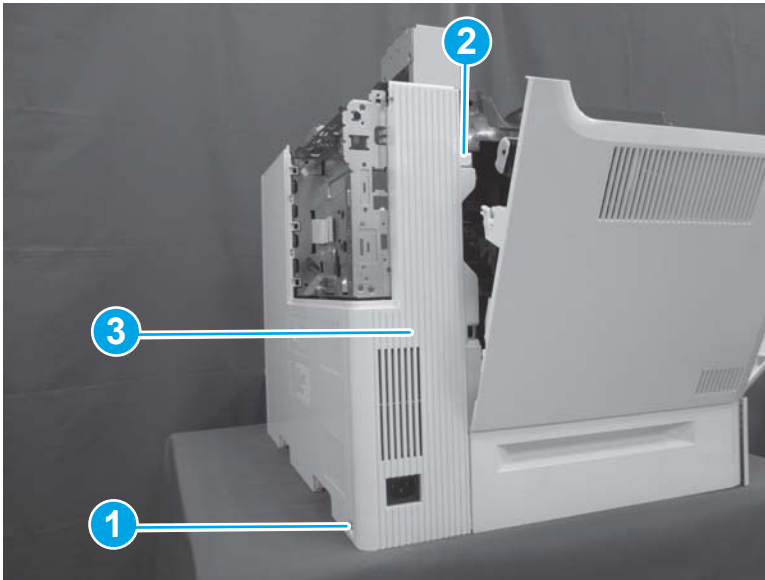

2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover

- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.



Figure 1-2012 Install the left rear cover

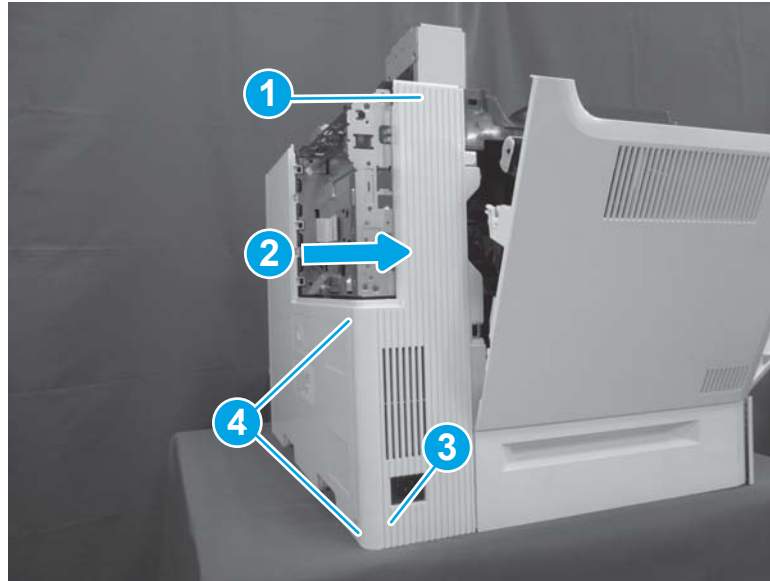


#### Step 4: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2013 Remove two screws and the rear cover

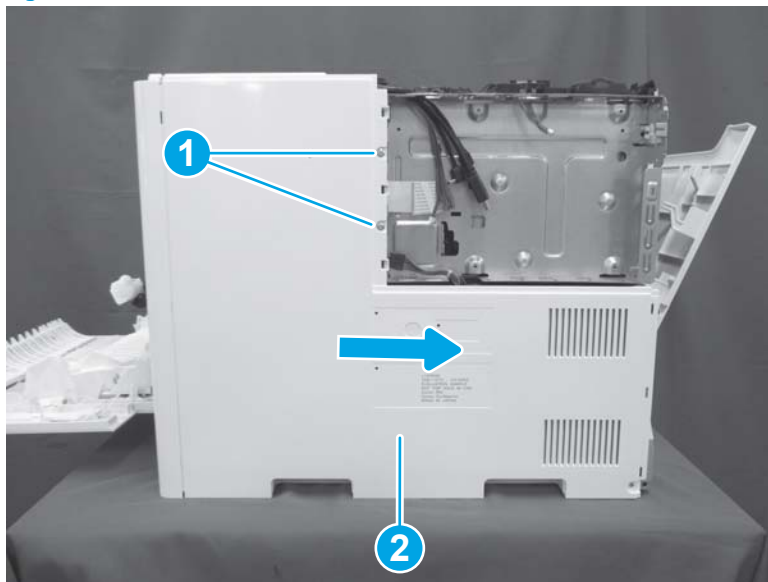

#### Step 5: Remove the registration assembly


1. Release the cables from four retainers (callout 1), and then disconnect four connectors (callout 2).

Figure 1-2014 Disconnect four connectors

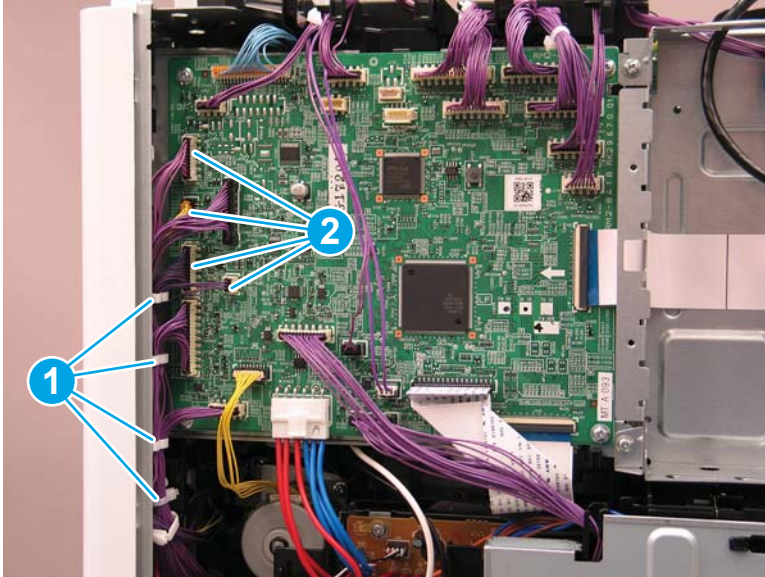


2. Release one tab (callout 1), release one boss (callout 2), and then remove the connector cover (callout 3).

Figure 1-2015 Remove the connector cover

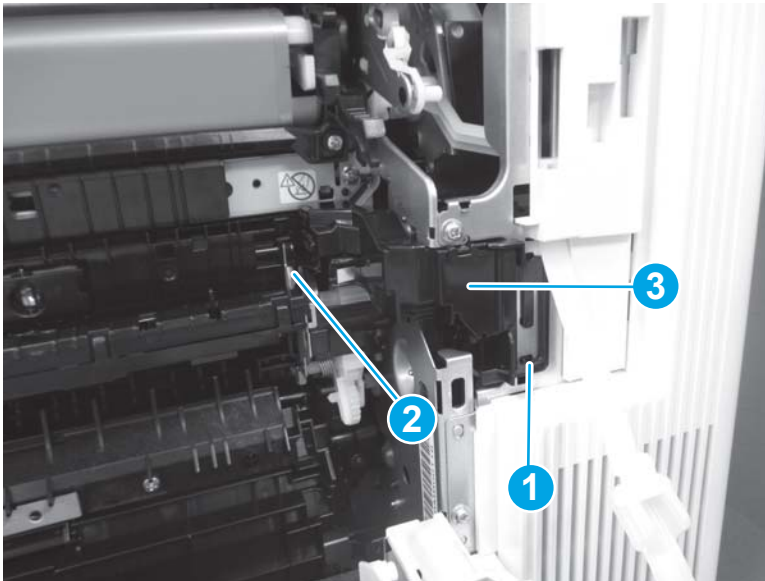


3. Release one tab (callout 1), and then slide the cable guide (callout 2) down to release it.

Figure 1-2016 Release the cable guide

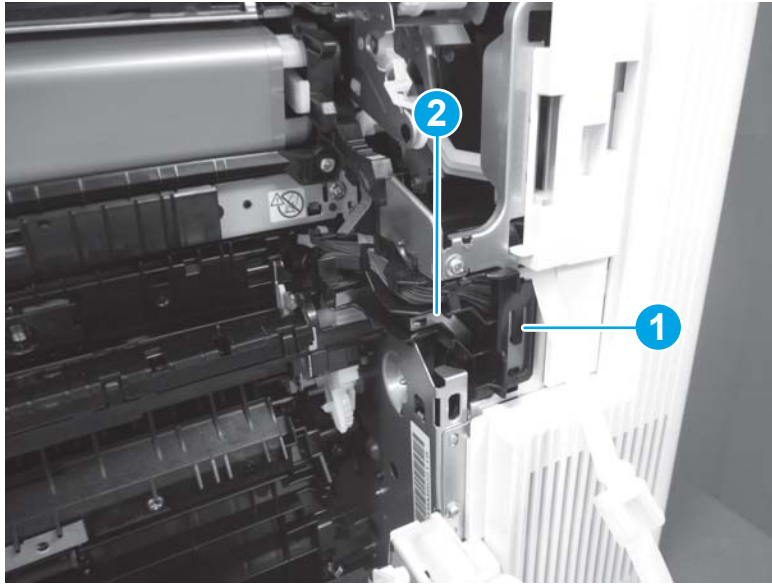


4. Release the cable (callout 1) from the cable guide (callout 2).

Figure 1-2017 Remove the cable guide

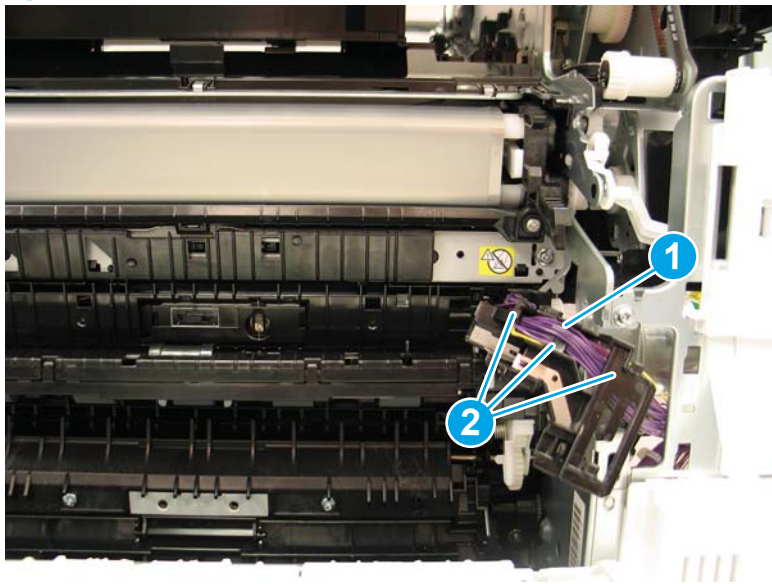


5. Remove three screws (callout 1).

Figure 1-2018 Remove three screws

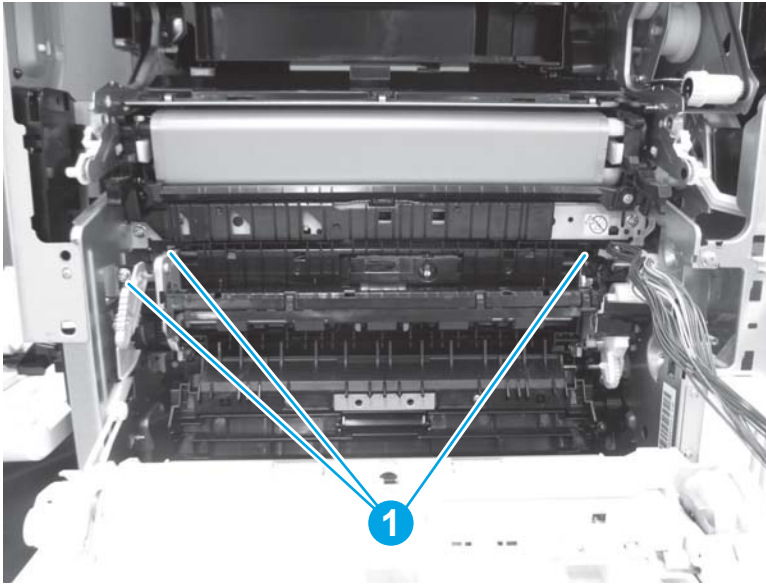

6. Release the assembly from the guide pin (callout 1) on the left side of the assembly.


Figure 1-2019 Release the assembly from the guide pin

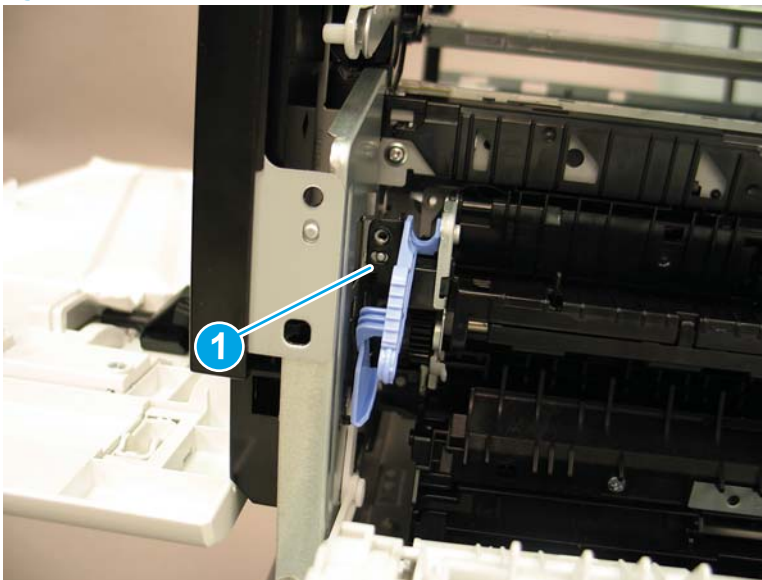



7. Press downward on the left side of the assembly (callout 1), and then rotate the assembly away from the printer (callout 2) to release the hooks that go through the sheet metal on the back of the assembly. Remove the registration assembly.

**Figure 1-2020** Remove the registration assembly

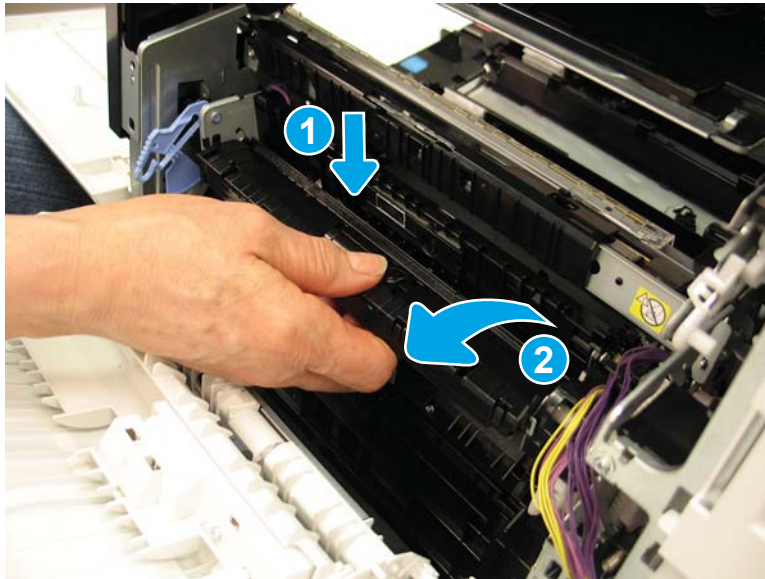


8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Registration assembly**

- a. Install the tabs (callout 1) on the registration assembly into the slots (callout 2) in the printer.

**Figure 1-2021** Install the tabs in the slots

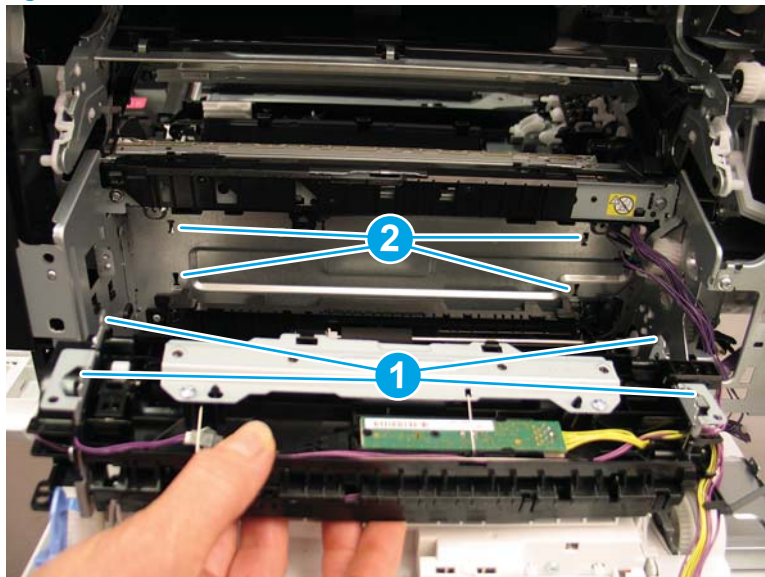

- b. Look inside the printer and make sure that the tabs (callout 1) are completely installed in the sheet metal before installing the screws.


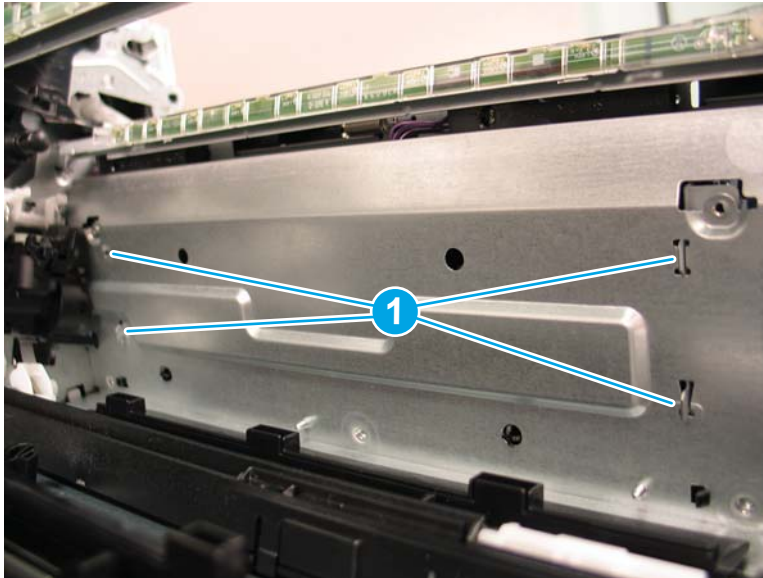

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-2022 Check the tabs




#### Step 6: Remove the registration density sensor

- ▲ Remove two screws (callout 1), and then slide the registration density sensor (callout 2) to the right to remove it.

 **Reinstallation tip:** Make sure that the guide pins on the back of the sensor are fully installed before installing the screws.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2023 Remove two screws and the registration density sensor

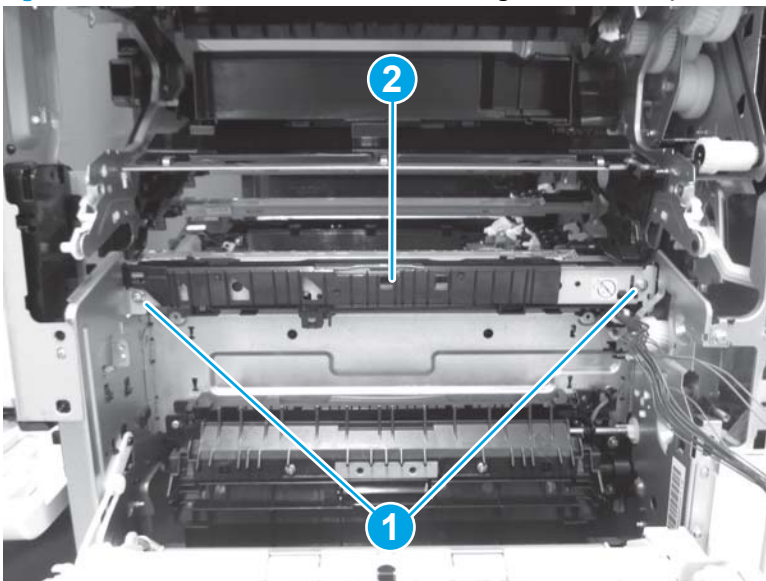

## Step 7: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Feed roller assembly

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the right rear cover](#)
- [Step 5: Remove the right handle](#)
- [Step 6: Remove the right door](#)
- [Step 7: Remove the secondary transfer assembly](#)
- [Step 8: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 9: Remove the lower high voltage power supply \(HVPS\)](#)
- [Step 10: Remove the registration assembly](#)
- [Step 11: Remove the feed roller assembly](#)
- [Step 12: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the feed roller assembly.

M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Disconnect the power cable.



**WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Feed roller assembly part number

---

RM2-6684-000CN

Feed roller assembly

---

## Required tools

- #2 Phillips screwdriver with a magnetic tip
- Needle-nose pliers

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test


Make sure that the printer initializes to a **Ready** state.

Print a configuration page to make sure that the printer is functioning correctly.

## Step 1: Remove the formatter cover


- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


**Figure 1-2024** Remove the formatter cover

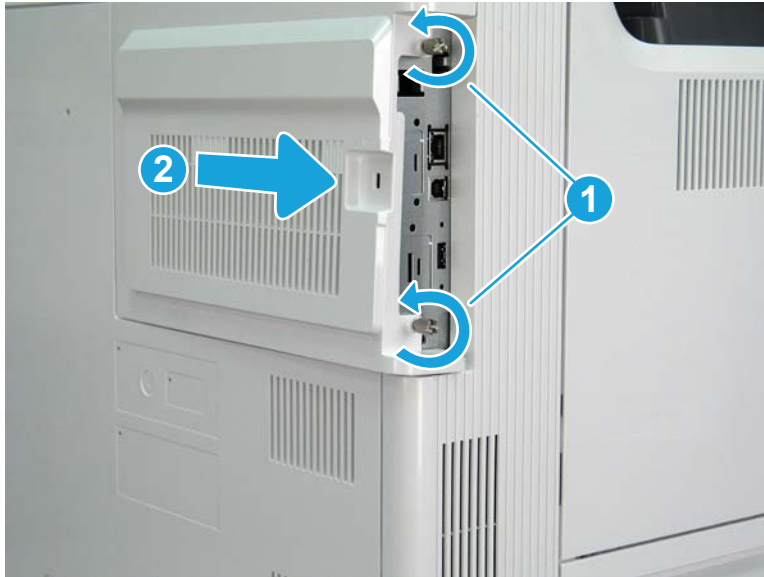

## Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-2025 Remove the left rear cover

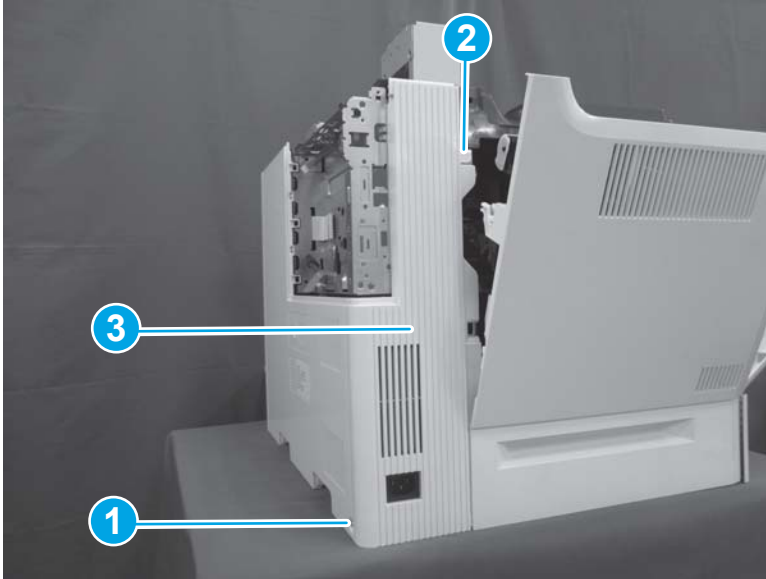


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-2026 Install the left rear cover

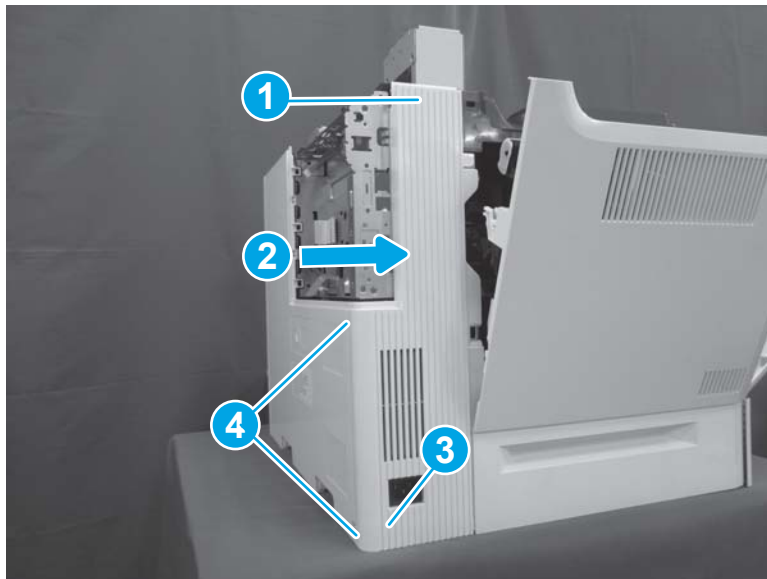


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2027** Remove two screws and the rear cover

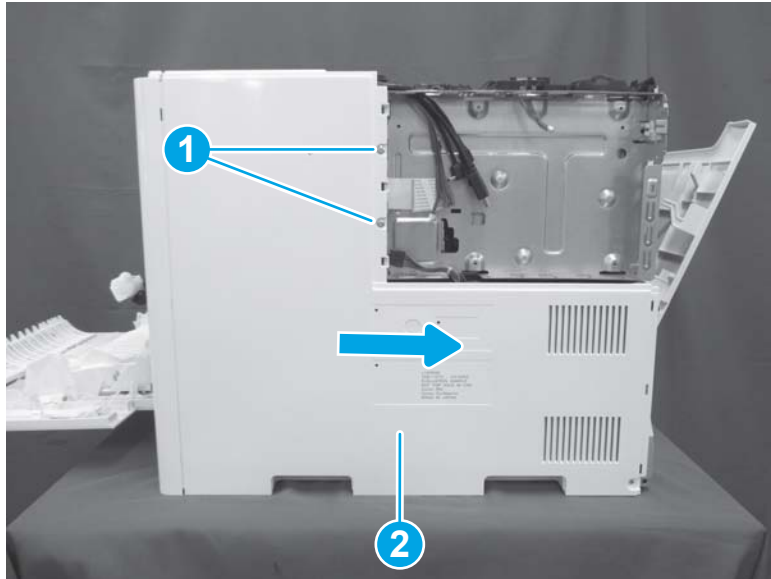


#### Step 4: Remove the right rear cover

- ▲ Remove one screw (callout 1), and then slide the right rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2028** Remove one screw and the right rear cover

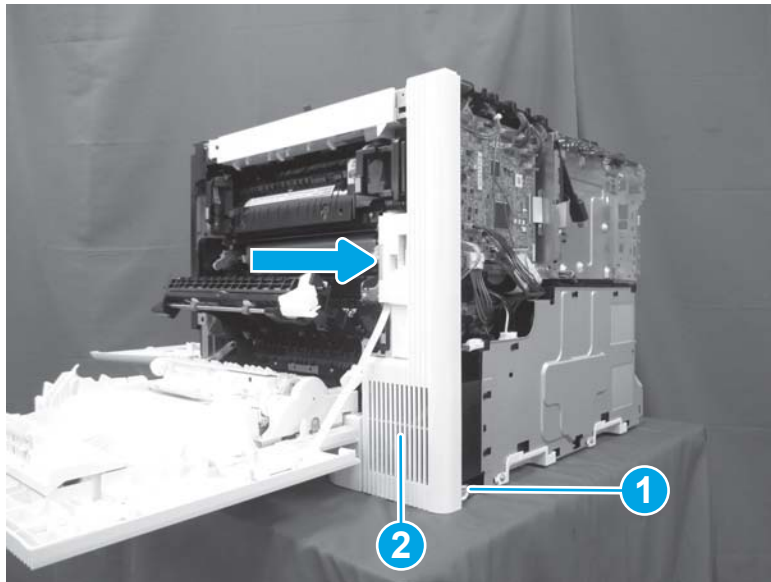

#### Step 5: Remove the right handle

1. Release one boss (callout 1), and then slide the right handle (callout 2) to the left to remove it.

Figure 1-2029 Remove the right handle

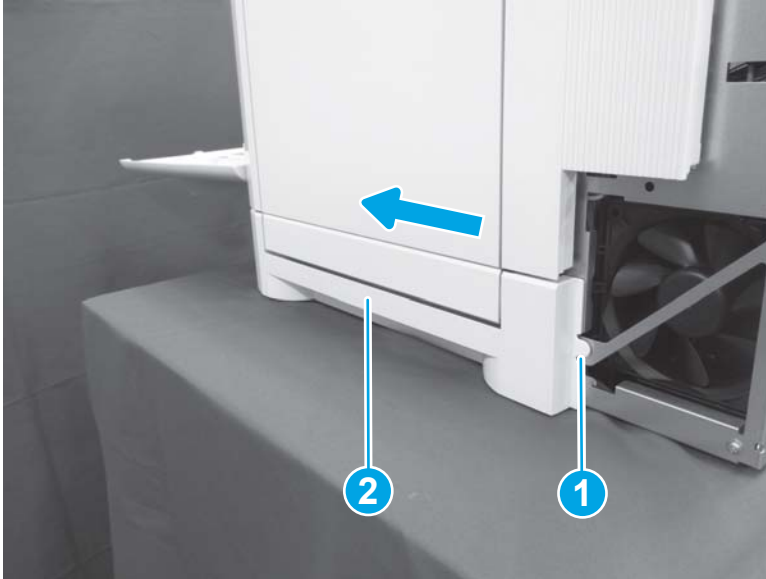


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right handle

- ▲ When reinstalling the right handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the lower, right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.

Figure 1-2030 Install the right handle

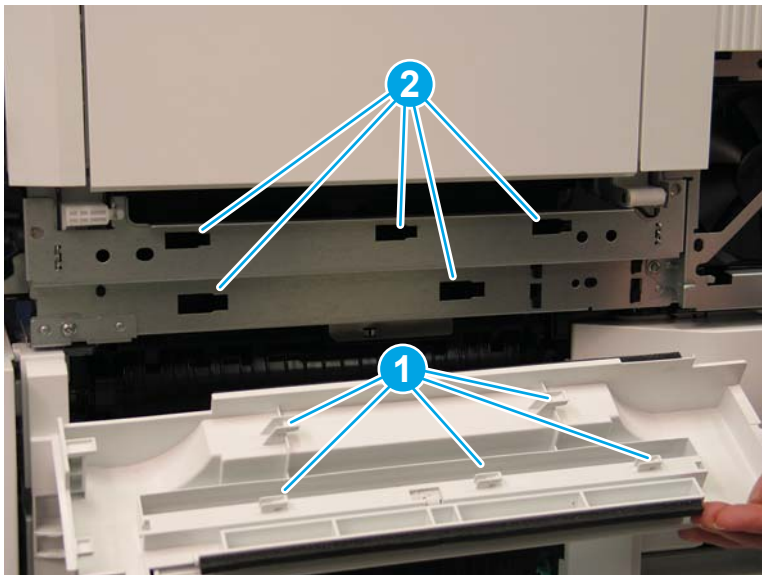

#### Step 6: Remove the right door


1. Open the right door.

Figure 1-2031 Open the right door



2. Release two tabs (callout 1), and then remove the connector cover (callout 2).


Figure 1-2032 Remove the connector cover

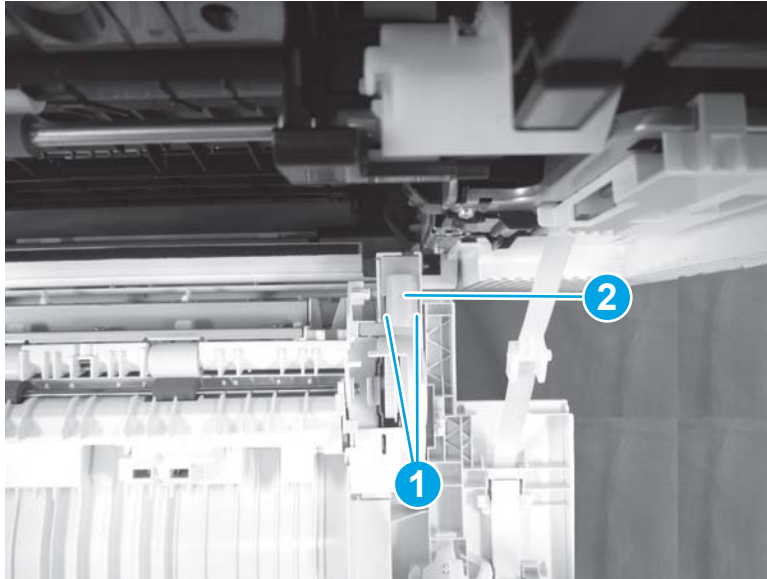

3. Disconnect two connectors (callout 1).

 **NOTE:** Disconnect the connectors on the side closest to the printer


Figure 1-2033 Disconnect two connectors

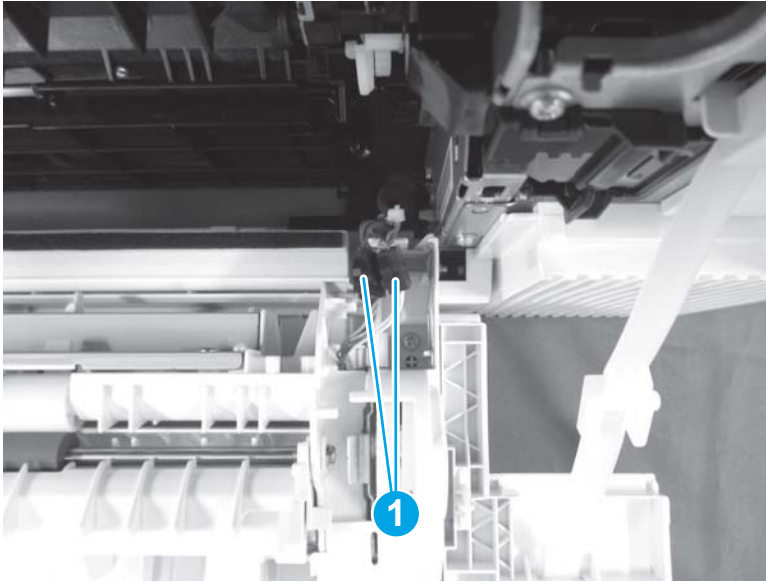

4. Remove two screws (callout 1), and then release the left link arm (callout 2) from the right door.

 **CAUTION:** The left link arm is under tension. Hold onto the part when removing the screws and release it slowly to avoid damaging the printer or losing the screws.


Figure 1-2034 Remove two screws and release the left link arm

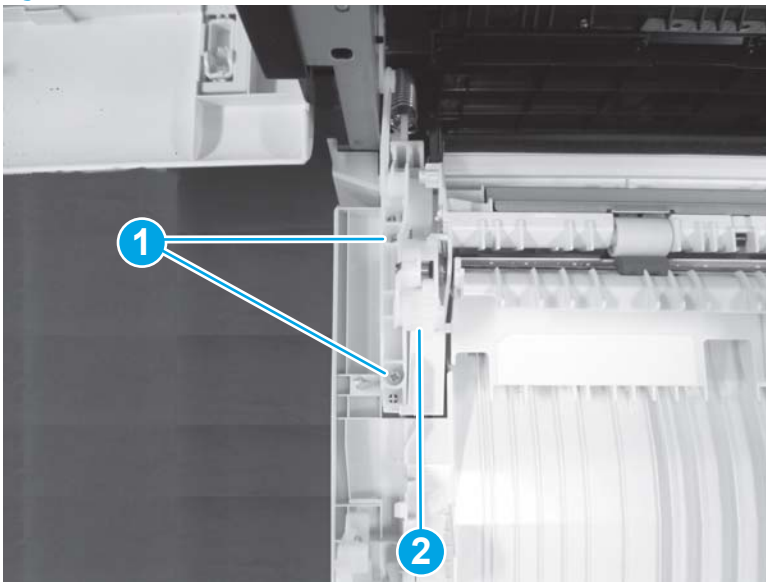




5. Release two bosses (callout 1), and then release the right door strap (callout 2).

Figure 1-2035 Release the right door strap

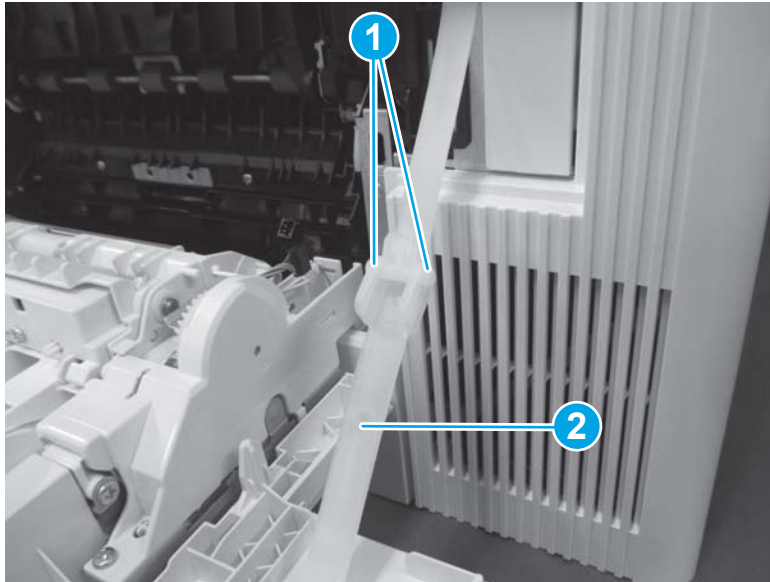


6. Slide the right door (callout 1) to the left to remove it.

 **Reinstallation tip:** The left hinge can be moved to the left, away from the door assembly, to allow correctly positioning the molded door assembly parts. Place the hinge back into position to align with the alignment pins, and then reattach.

 **CAUTION:** The left hinge is under tension. Use care when moving it so it does not release suddenly and damage the printer.

Figure 1-2036 Remove the right door

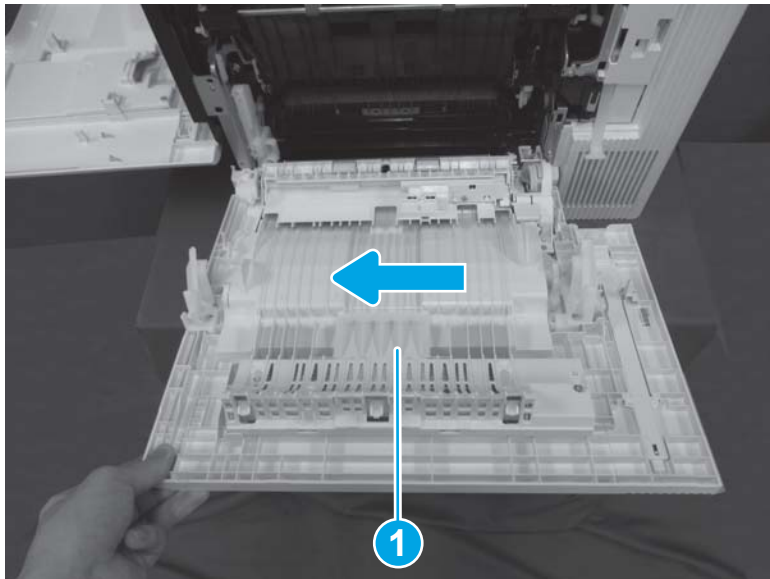

### Step 7: Remove the secondary transfer assembly


1. Open the right door.

Figure 1-2037 Open the right door




2. Lower the secondary transfer assembly to a 45° angle.

Figure 1-2038 Lower the secondary transfer

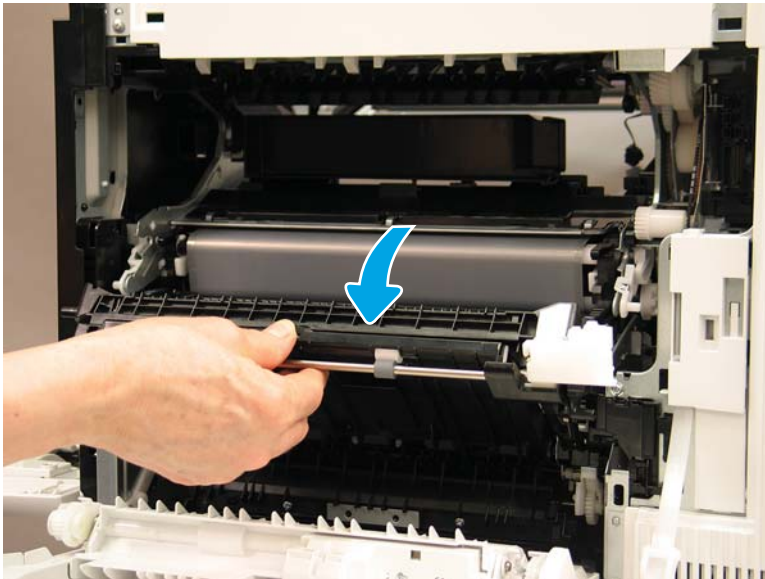


3. While holding the secondary transfer assembly, pivot the media detect assembly up and into the printer.

Figure 1-2039 Pivot the media detect assembly up

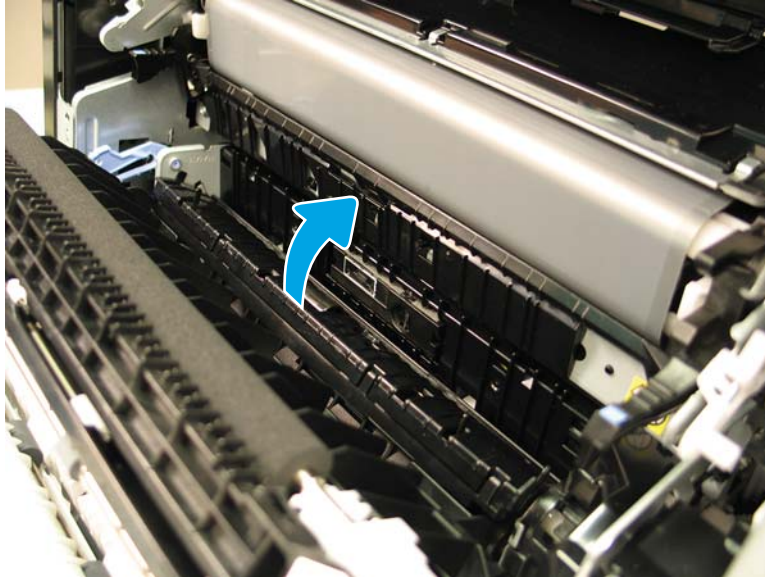


4. Lower the secondary transfer assembly and release it from the media detect assembly. Release the blue lever on the left, and then lower the secondary transfer assembly to the lowest position.

Figure 1-2040 Lower the secondary transfer assembly

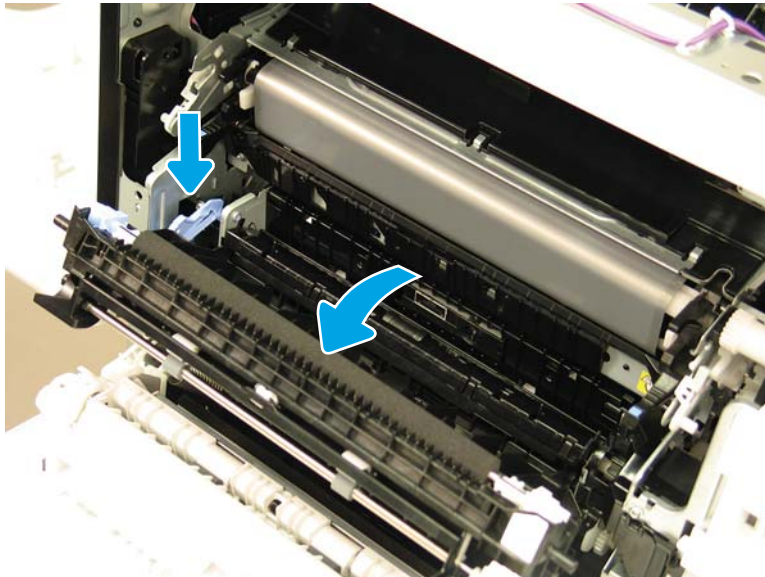


5. Release the right hinge by gently pushing left where the hinge attaches to the printer.

Figure 1-2041 Release the right hinge

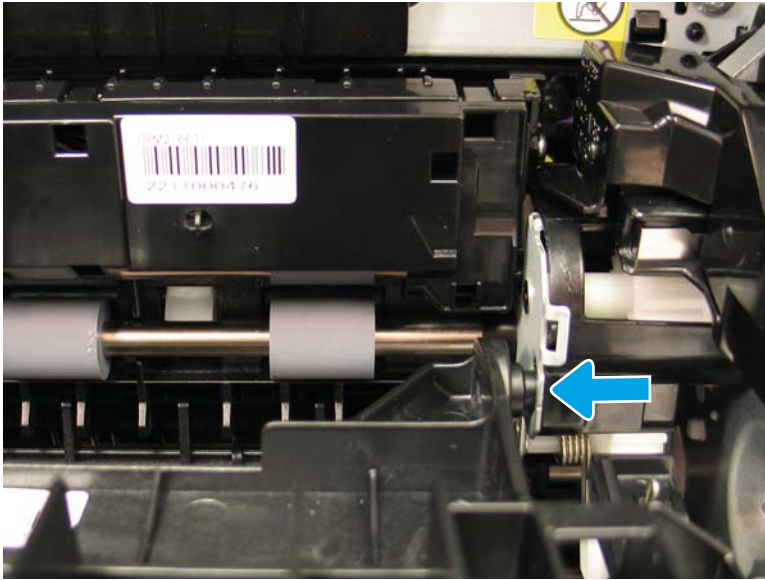


6. Rotate the right side of the assembly away from the printer, and then release the left side of the assembly from the blue link arm (callout 1).

Figure 1-2042 Release the left side

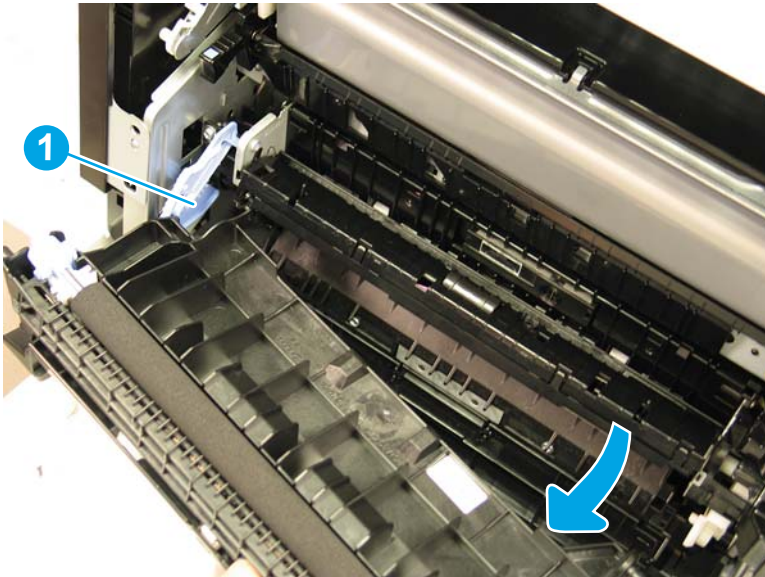




7. Lift the secondary transfer assembly up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2043** Remove the secondary transfer assembly

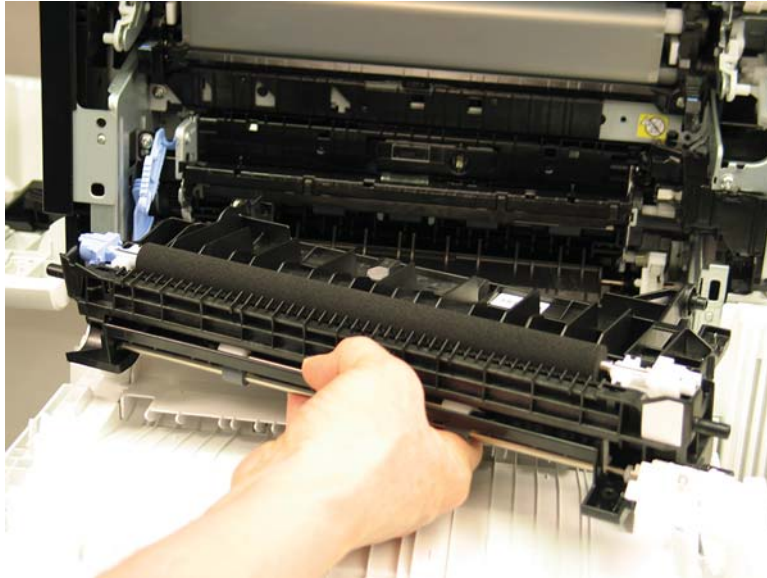

#### Step 8: Remove the low-voltage power supply (LVPS) and fan


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-2044** Disconnect five connectors and remove two screws

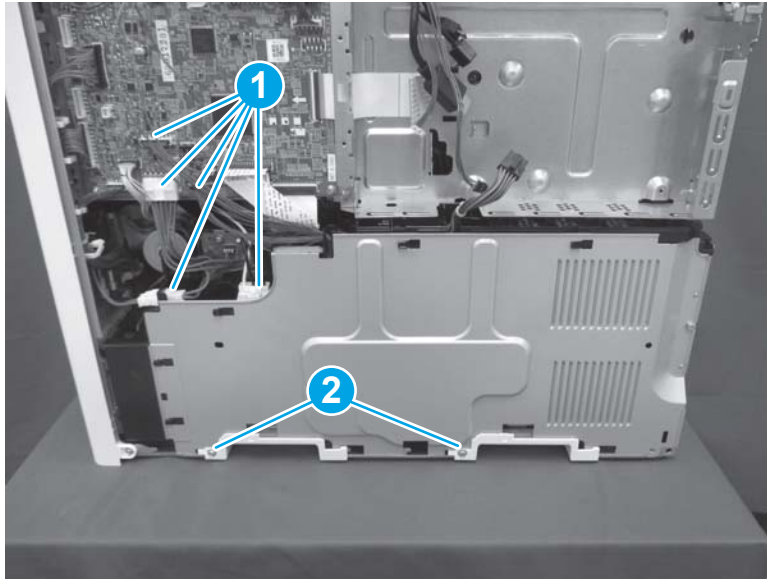

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-2045 Remove two handles

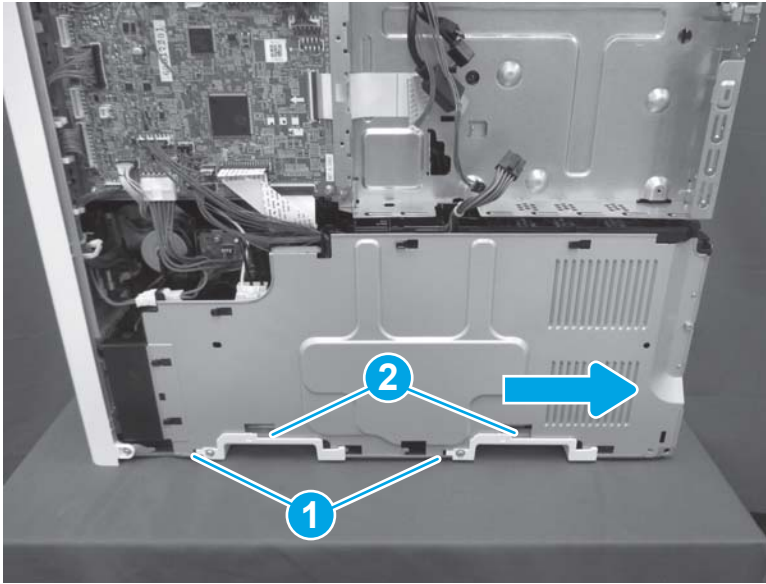

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


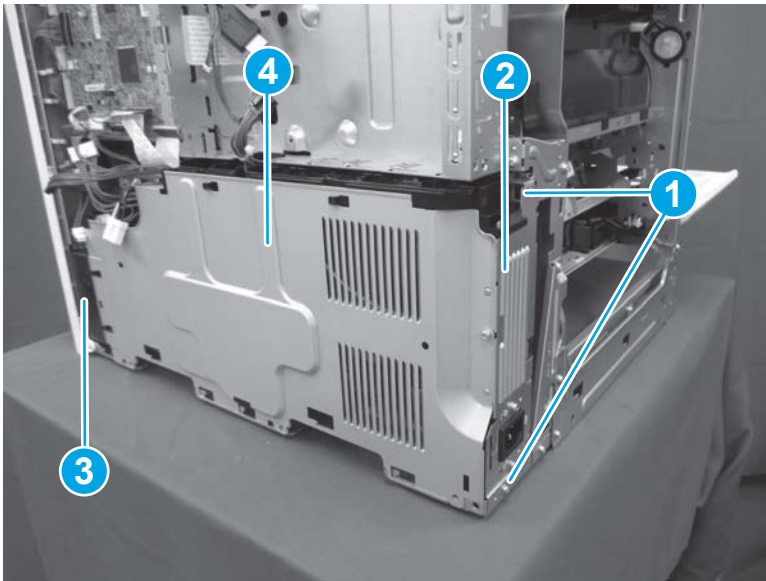
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-2046 Remove the low-voltage power supply




### Step 9: Remove the lower high voltage power supply (HVPS)

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).

Figure 1-2047 Disconnect one connector

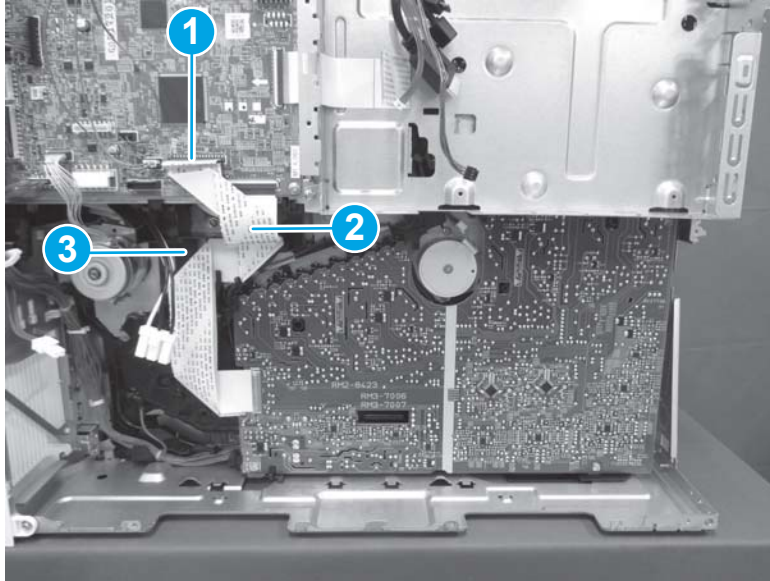

2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.


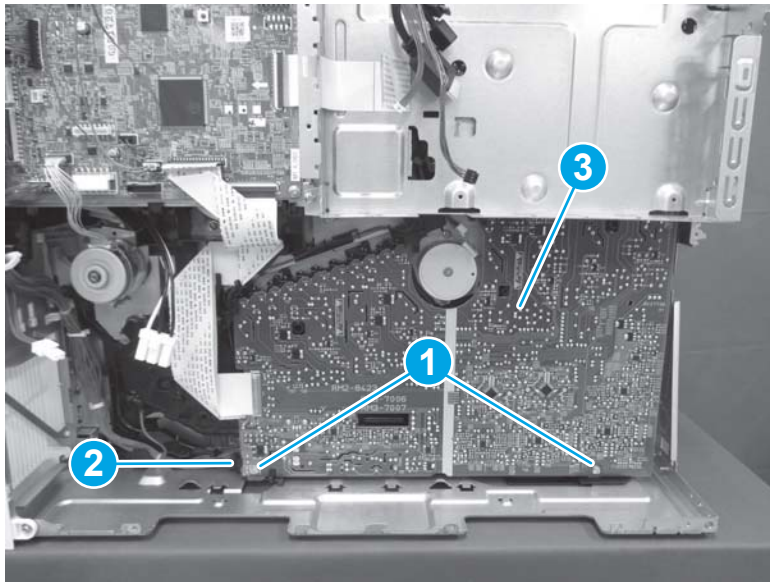
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2048 Remove two screws and release one tab




### Step 10: Remove the registration assembly

1. Release the cables from four retainers (callout 1), and then disconnect four connectors (callout 2).




Figure 1-2049 Disconnect four connectors

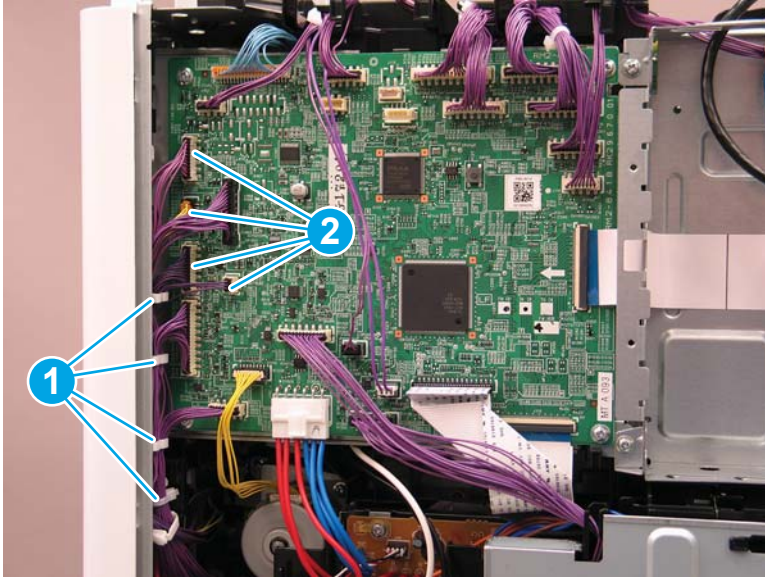


2. Release one tab (callout 1), release one boss (callout 2), and then remove the connector cover (callout 3).

Figure 1-2050 Remove the connector cover

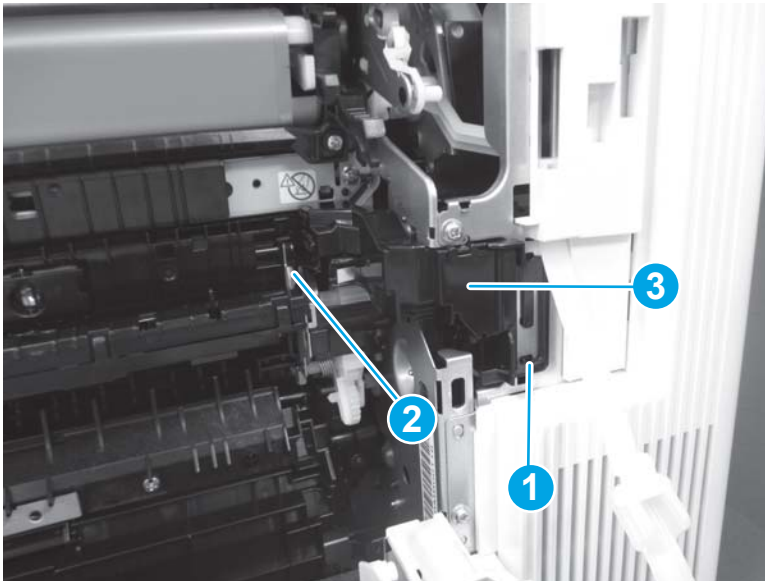


3. Release one tab (callout 1), and then slide the cable guide (callout 2) down to release it.

Figure 1-2051 Release the cable guide

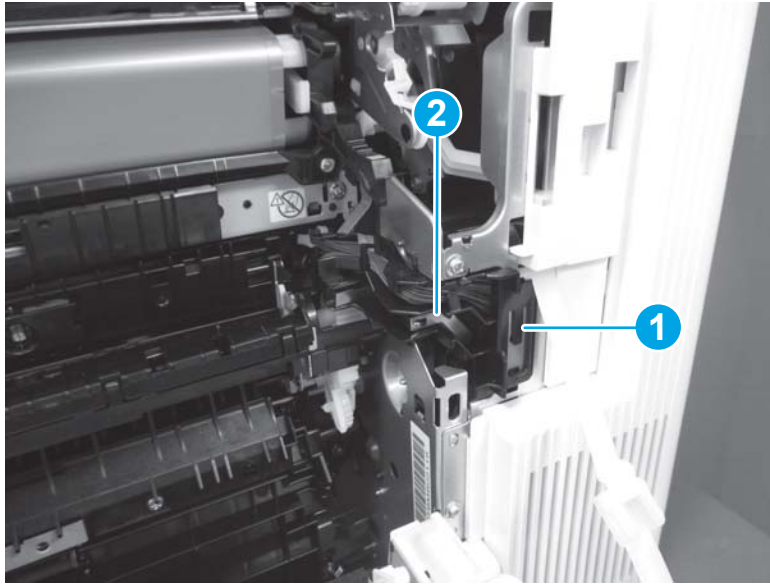


4. Release the cable (callout 1) from the cable guide (callout 2).

Figure 1-2052 Remove the cable guide

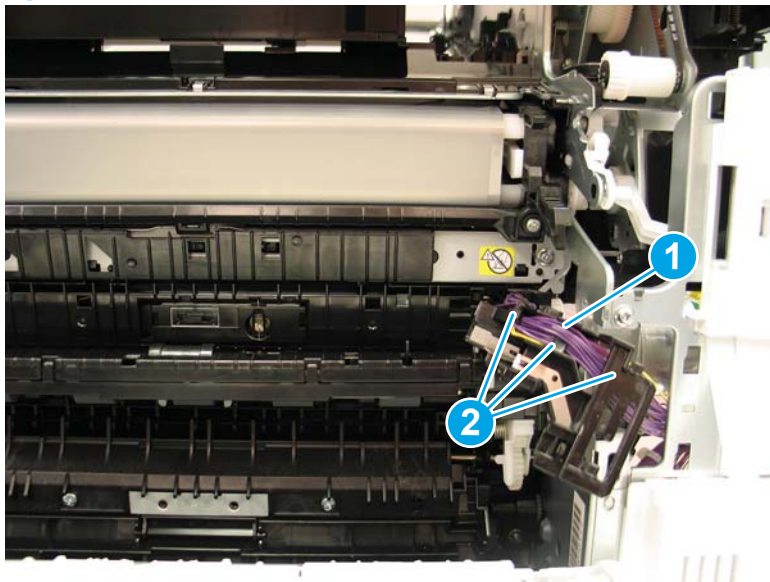


5. Remove three screws (callout 1).

Figure 1-2053 Remove three screws

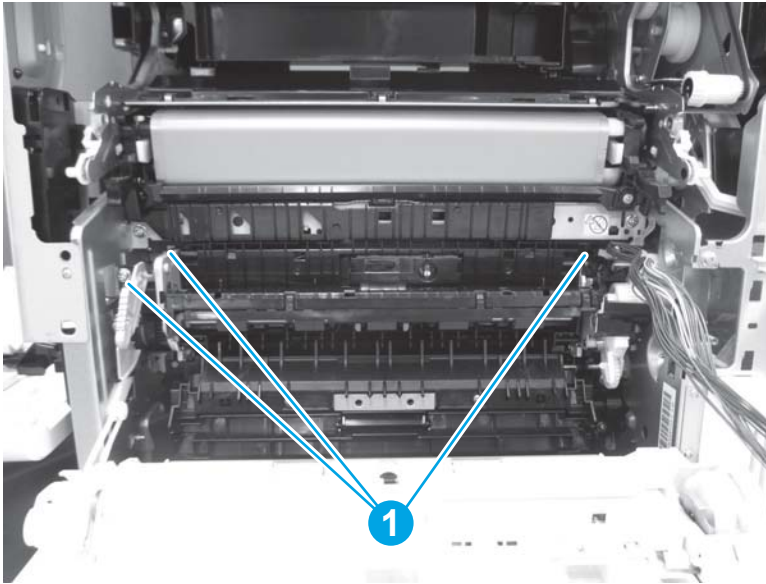


6. Release the assembly from the guide pin (callout 1) on the left side of the assembly.

Figure 1-2054 Release the assembly from the guide pin

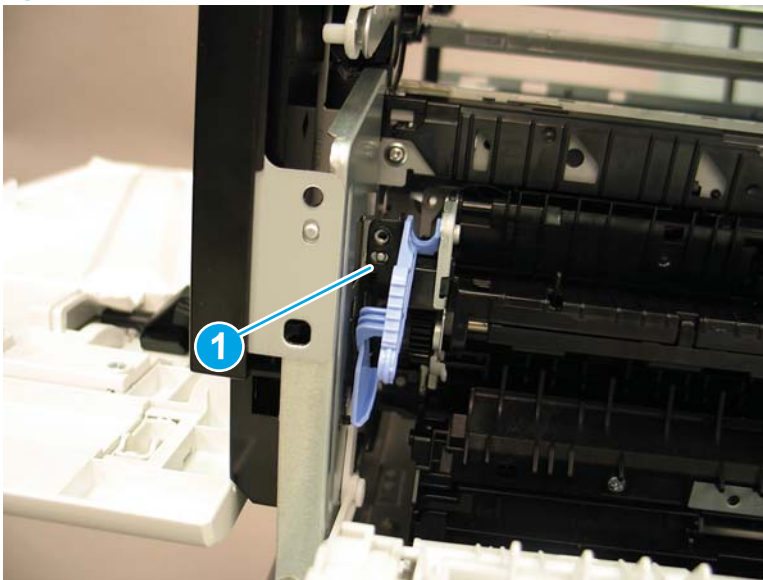

7. Press downward on the left side of the assembly (callout 1), and then rotate the assembly away from the printer (callout 2) to release the hooks that go through the sheet metal on the back of the assembly. Remove the registration assembly.

**Figure 1-2055** Remove the registration assembly

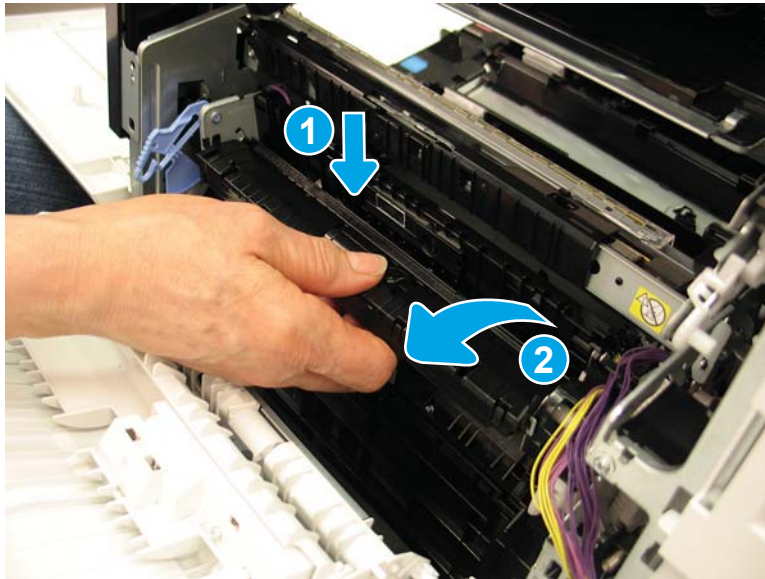


8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Registration assembly**


- a. Install the tabs (callout 1) on the registration assembly into the slots (callout 2) in the printer.

**Figure 1-2056** Install the tabs in the slots

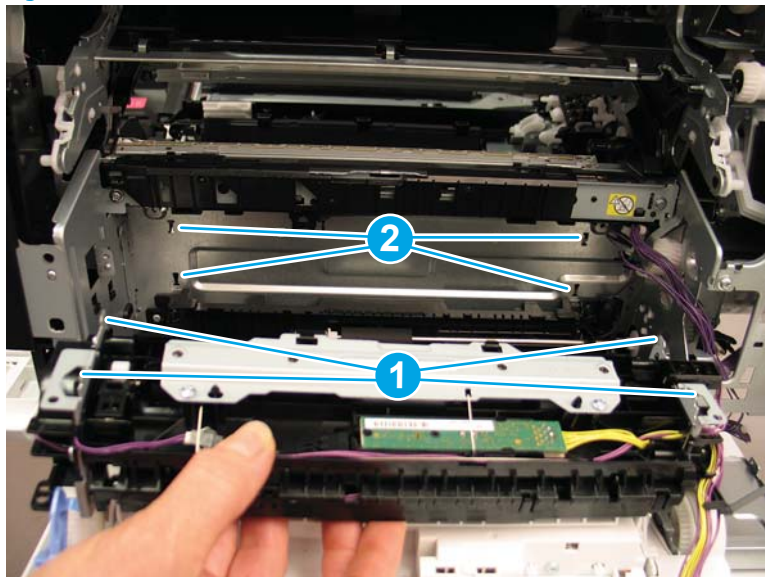




- b. Look inside the printer and make sure that the tabs (callout 1) are completely installed in the sheet metal before installing the screws.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


**Figure 1-2057** Check the tabs

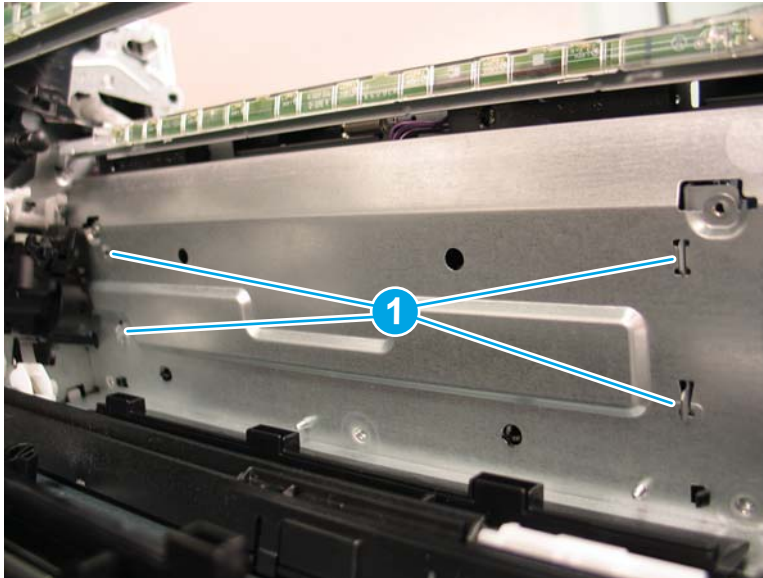


### Step 11: Remove the feed roller assembly


1. Unhook one spring (callout 1), release two hinge pins (callout 2), and then remove the feed guide (callout 3).

 **TIP:** Needle-nose pliers work well for unhooking the spring.

 **IMPORTANT:** The spring (callout 1) is not captive. Do not lose the spring.


 **Reinstallation tip:** Make sure to reattach the spring (callout 1).

**Figure 1-2058** Remove the feed guide

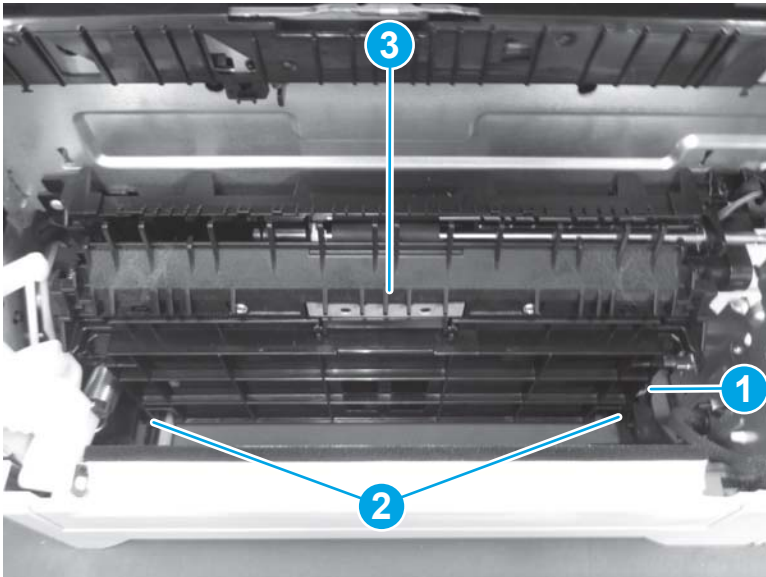


2. Release two hinge pins (callout 1), and then remove the feed guide (callout 2).

Figure 1-2059 Remove the feed guide

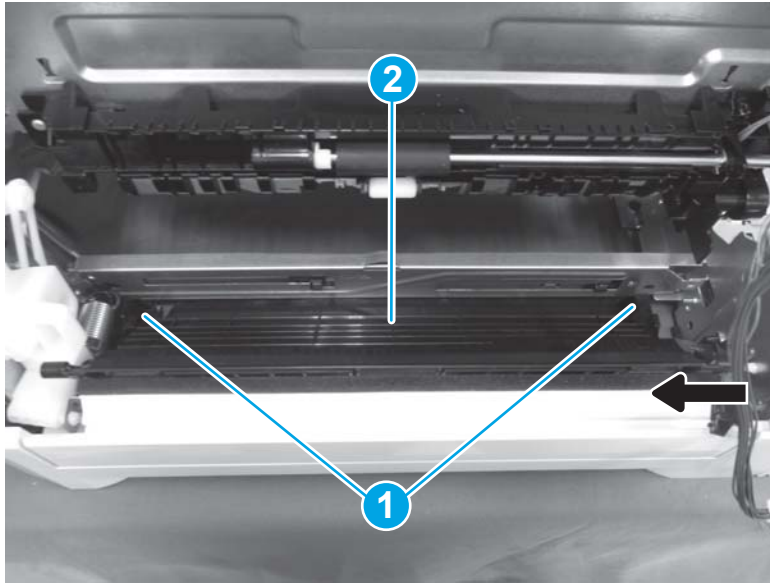

3. Release the cable (callout 1) from the retainers (callout 2). Release one tab (callout 3), and then slide the feed roller assembly (callout 4) to the left to remove it.

Figure 1-2060 Remove the feed roller assembly

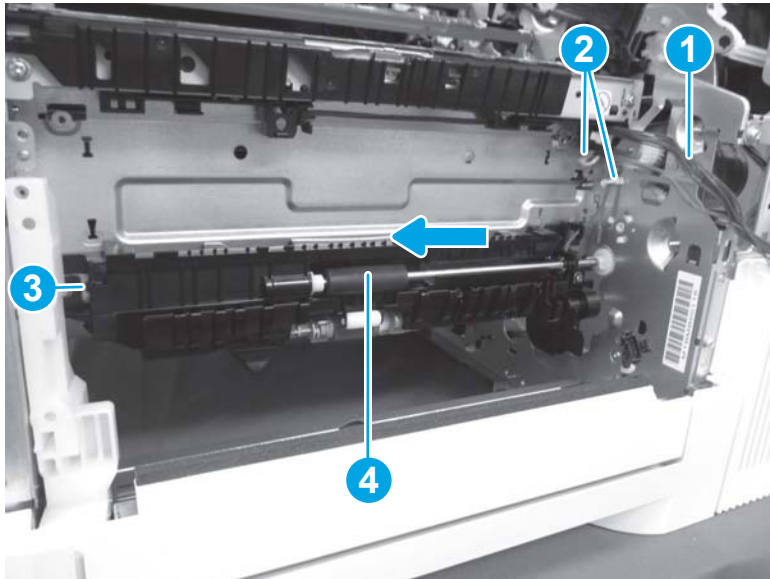


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Feed roller assembly**


- a. Before installing the feed roller assembly, make sure that the cable (callout 1) behind it is routed as shown so it is not pinched when the assembly is installed.

Figure 1-2061 Check the cable routing

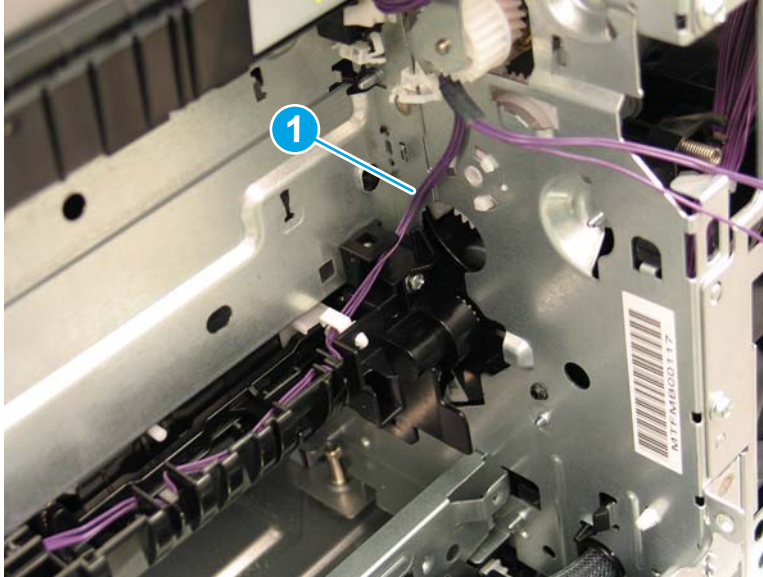

- b. Align the gear (callout 1) with the gear (callout 2) through the opening in the sheet metal.


Figure 1-2062 Position the gear

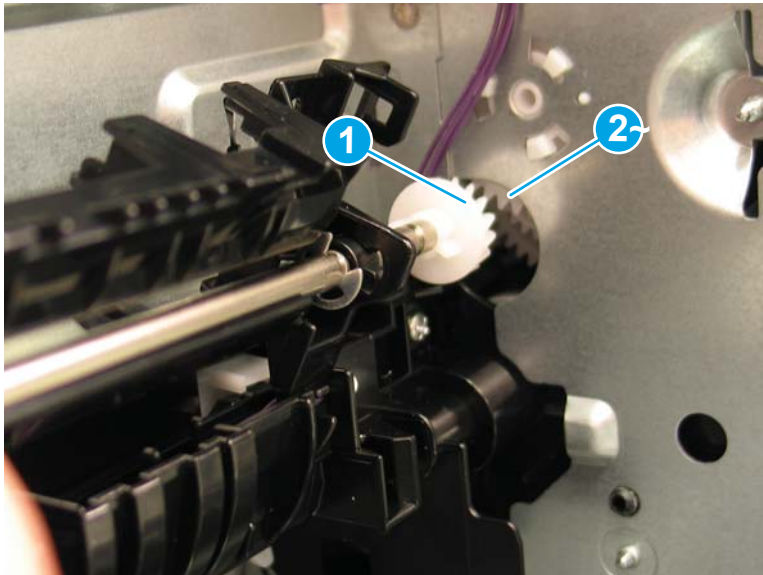



- c. Beginning at the right side, install the tabs (callout 1) on the assembly into the slots (callout 2) in the sheet metal. Make sure that the spring (callout 3) is not folded over. Position the right tab through the sheet metal and hold it, and then position the left tab near the sheet-metal hole. Gently push on the left tab to fully seat the guide pins (callout 4) in the holes (callout 5) in the assembly.

Figure 1-2063 Install the tabs

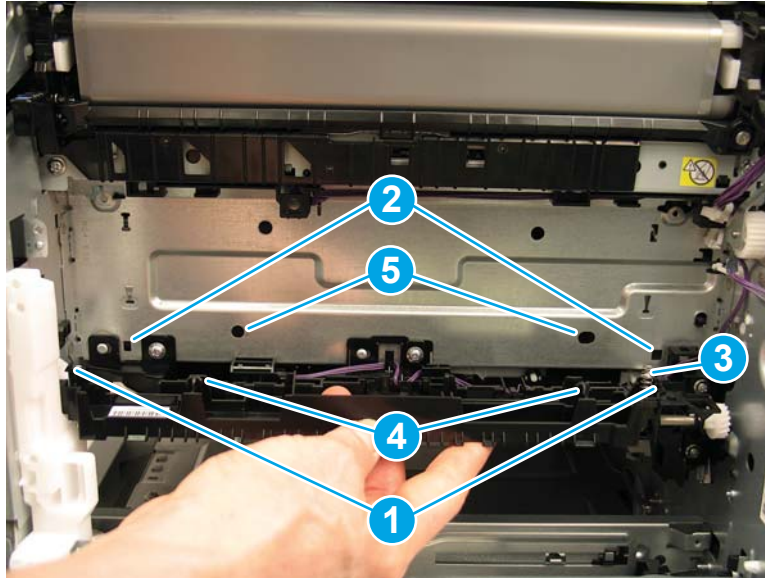


- d. Make sure that the tabs (callout 1) are positioned correctly in the sheet metal slots.



**NOTE:** Continue to reverse the removal steps to finish installing the assembly.

Figure 1-2064 Check the tabs

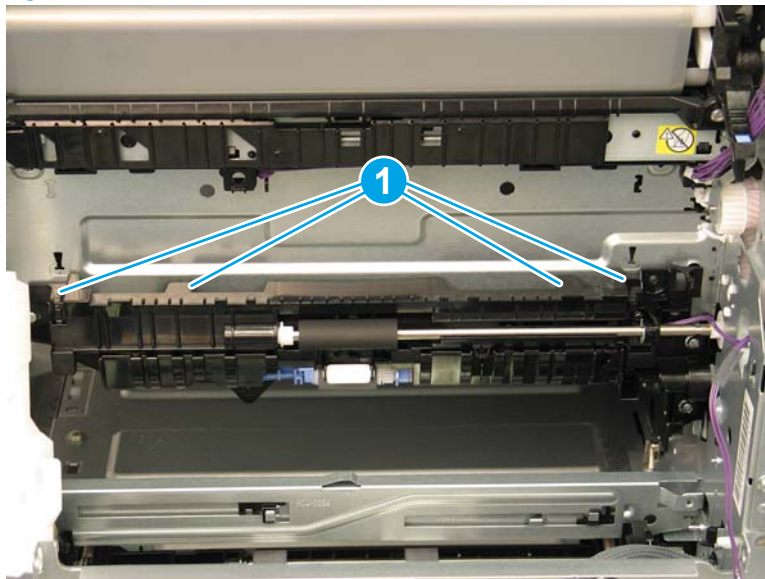

## Step 12: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Pickup assembly

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the right rear cover](#)
- [Step 5: Remove the right handle](#)
- [Step 6: Remove the right door](#)
- [Step 7: Remove the secondary transfer assembly](#)
- [Step 8: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 9: Remove the lower high voltage power supply \(HVPS\)](#)
- [Step 10: Remove the registration assembly](#)
- [Step 11: Remove the feed roller assembly](#)
- [Step 12: Remove the pickup assembly](#)
- [Step 13: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pickup assembly.


M652/M653/E65050/E65060/E65150/E65160:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660:

[Click here to view a video of this procedure.](#)

---


 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

---

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Pickup assembly part number	
RM2-6556-000CN	Pickup assembly

---

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

## Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2065 Remove the formatter cover

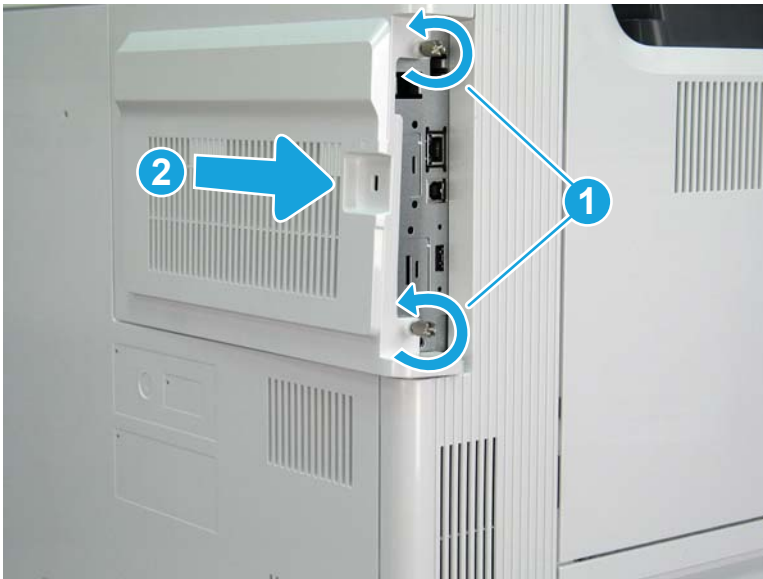

### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).

Figure 1-2066 Remove the left rear cover

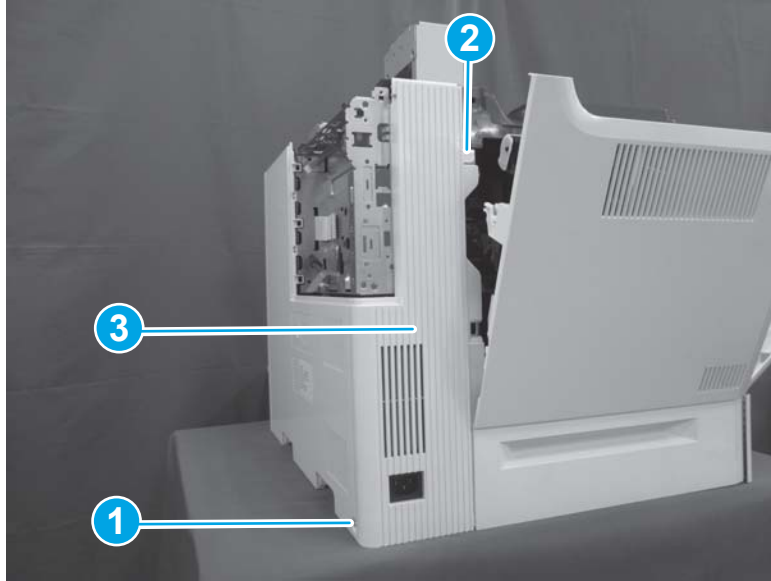


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-2067 Install the left rear cover

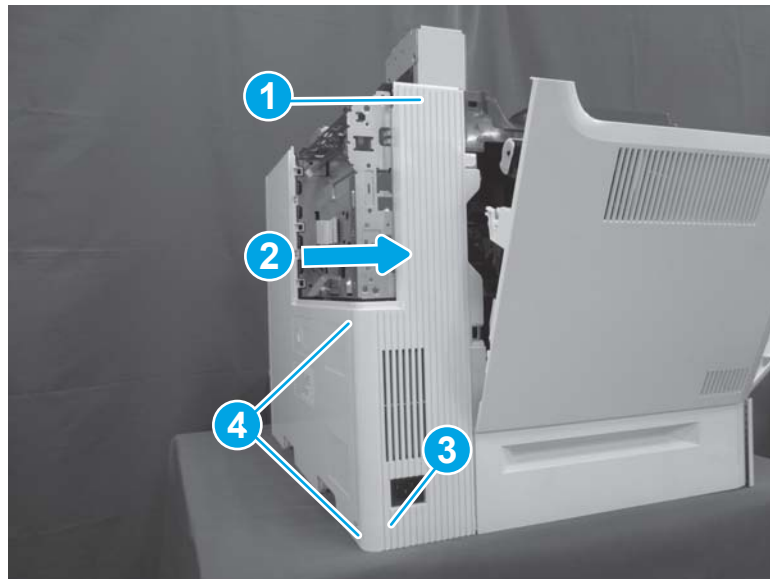


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2068** Remove two screws and the rear cover

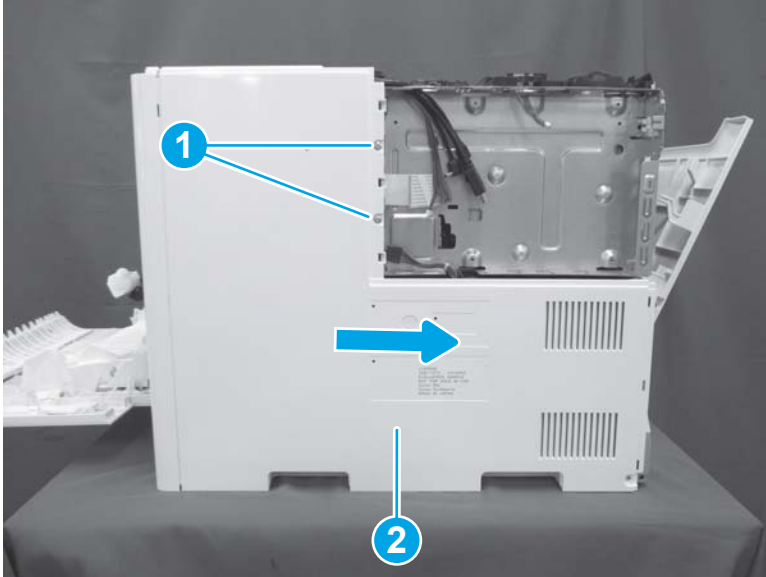


#### Step 4: Remove the right rear cover

- ▲ Remove one screw (callout 1), and then slide the right rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2069** Remove one screw and the right rear cover

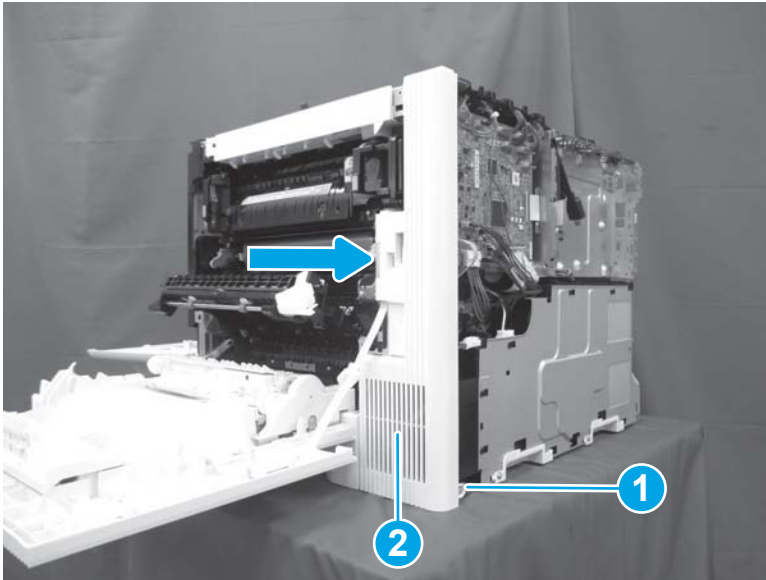

#### Step 5: Remove the right handle

1. Release one boss (callout 1), and then slide the right handle (callout 2) to the left to remove it.

Figure 1-2070 Remove the right handle

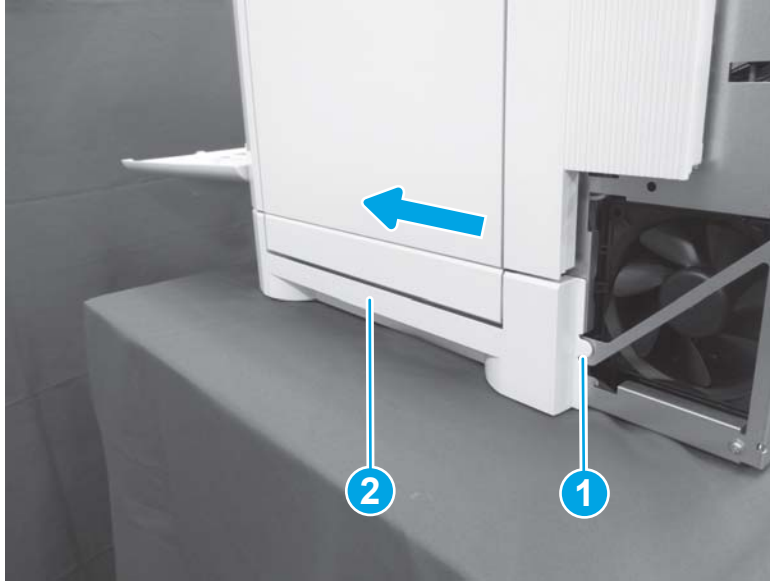


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right handle

- ▲ When reinstalling the right handle, install the hooks (callout 1) on the handle in the slots (callout 2) in the printer. Align the lower, right-most hook first to ensure all the hooks are aligned, and then slide the handle to the left to lock it into position.

Figure 1-2071 Install the right handle

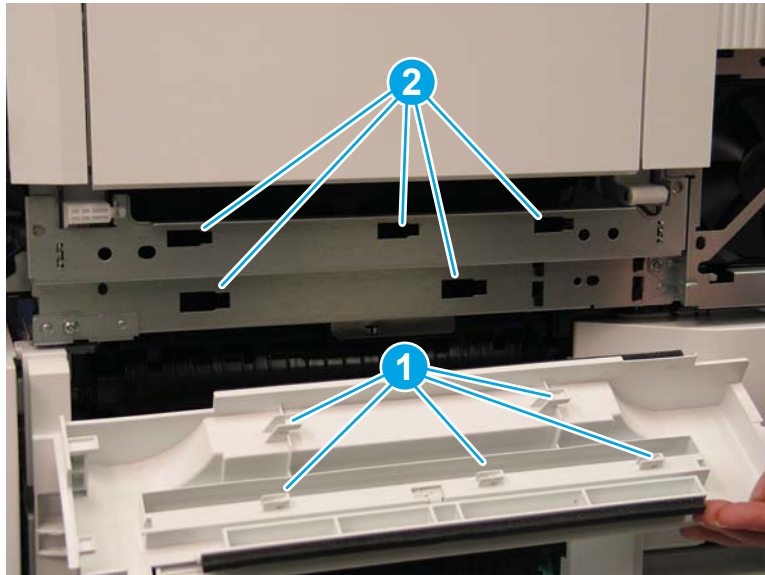

#### Step 6: Remove the right door

1. Open the right door.

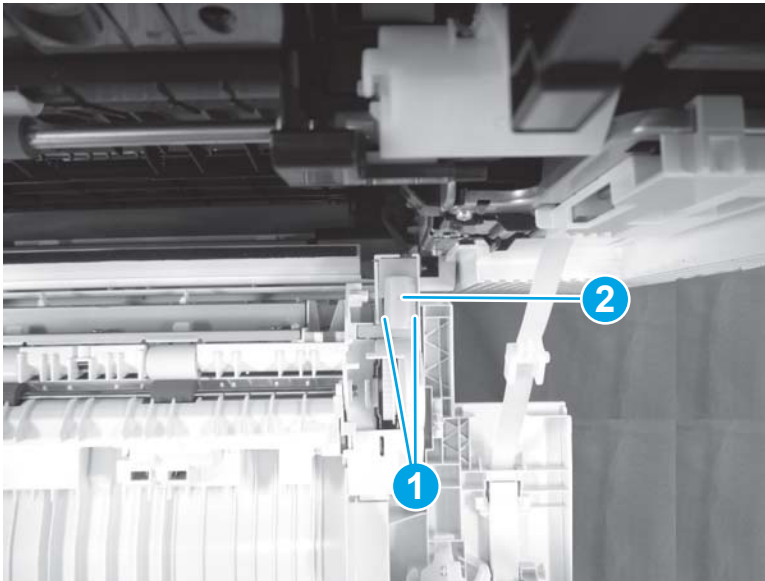


Figure 1-2072 Open the right door



2. Release two tabs (callout 1), and then remove the connector cover (callout 2).


Figure 1-2073 Remove the connector cover



3. Disconnect two connectors (callout 1).

 **NOTE:** Disconnect the connectors on the side closest to the printer


Figure 1-2074 Disconnect two connectors

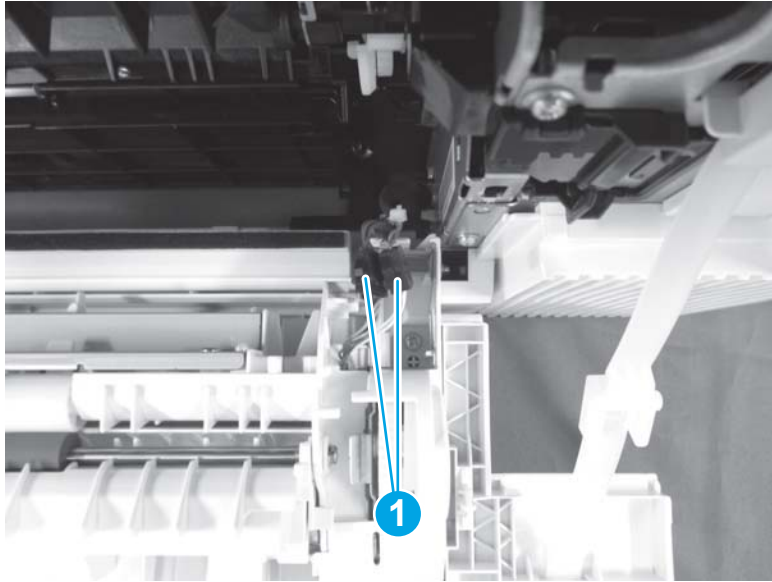

4. Remove two screws (callout 1), and then release the left link arm (callout 2) from the right door.


 **CAUTION:** The left link arm is under tension. Hold onto the part when removing the screws and release it slowly to avoid damaging the printer or losing the screws.

Figure 1-2075 Remove two screws and release the left link arm

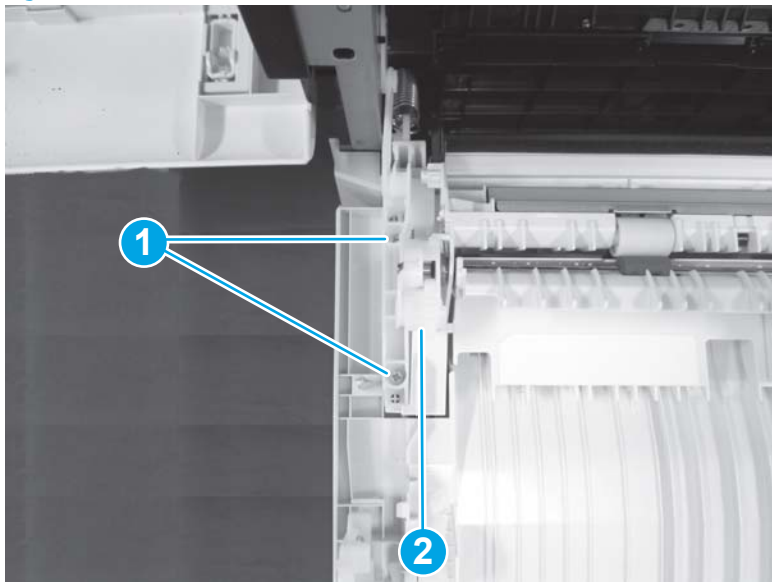


5. Release two bosses (callout 1), and then release the right door strap (callout 2).

Figure 1-2076 Release the right door strap

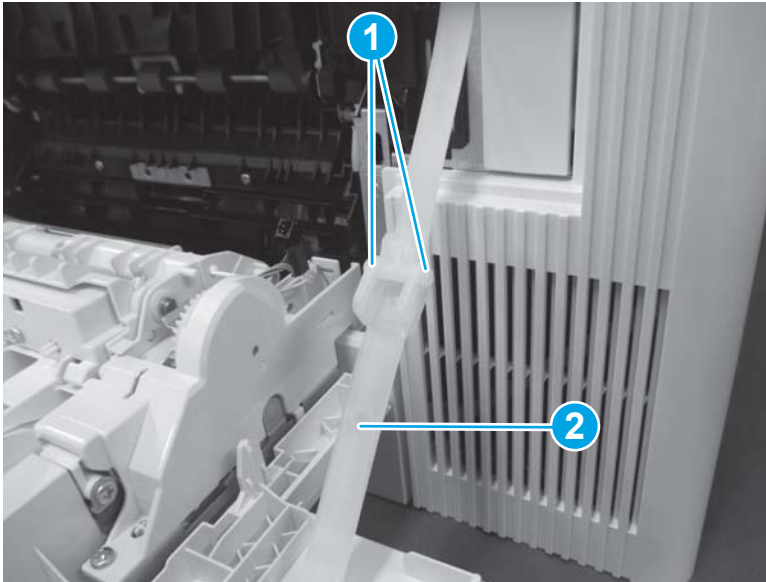


6. Slide the right door (callout 1) to the left to remove it.

 **Reinstallation tip:** The left hinge can be moved to the left, away from the door assembly, to allow correctly positioning the molded door assembly parts. Place the hinge back into position to align with the alignment pins, and then reattach.

 **CAUTION:** The left hinge is under tension. Use care when moving it so it does not release suddenly and damage the printer.

Figure 1-2077 Remove the right door

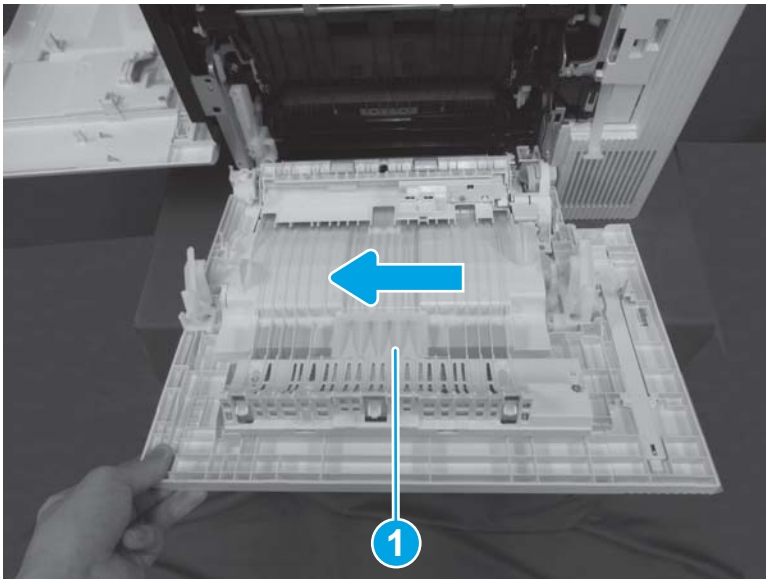

### Step 7: Remove the secondary transfer assembly


1. Open the right door.

Figure 1-2078 Open the right door




2. Lower the secondary transfer assembly to a 45° angle.

Figure 1-2079 Lower the secondary transfer

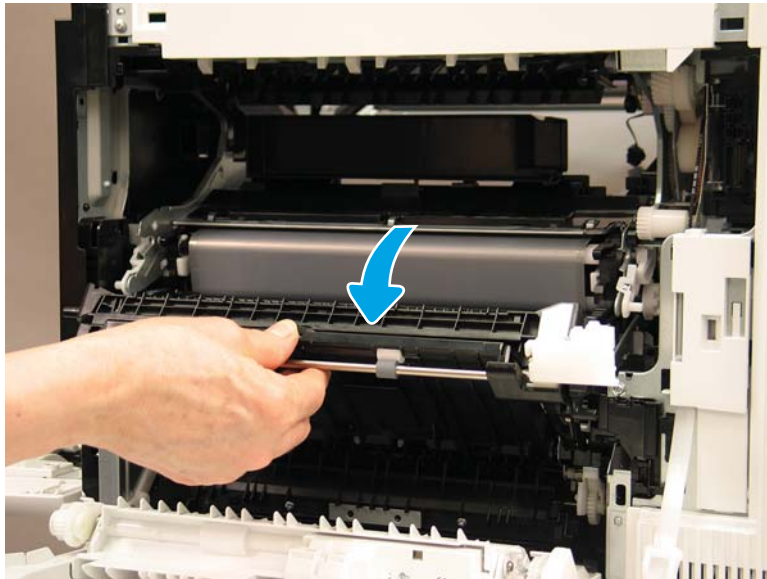


3. While holding the secondary transfer assembly, pivot the media detect assembly up and into the printer.

Figure 1-2080 Pivot the media detect assembly up

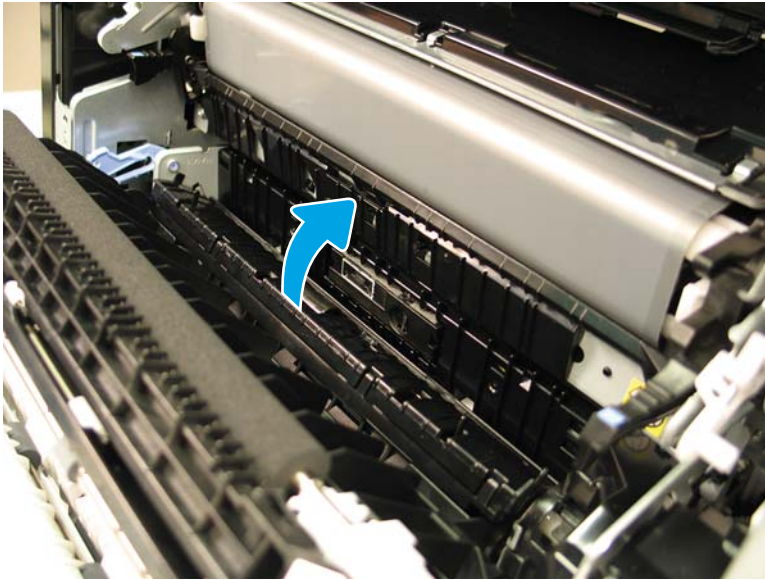

4. Lower the secondary transfer assembly and release it from the media detect assembly. Release the blue lever on the left, and then lower the secondary transfer assembly to the lowest position.


Figure 1-2081 Lower the secondary transfer assembly

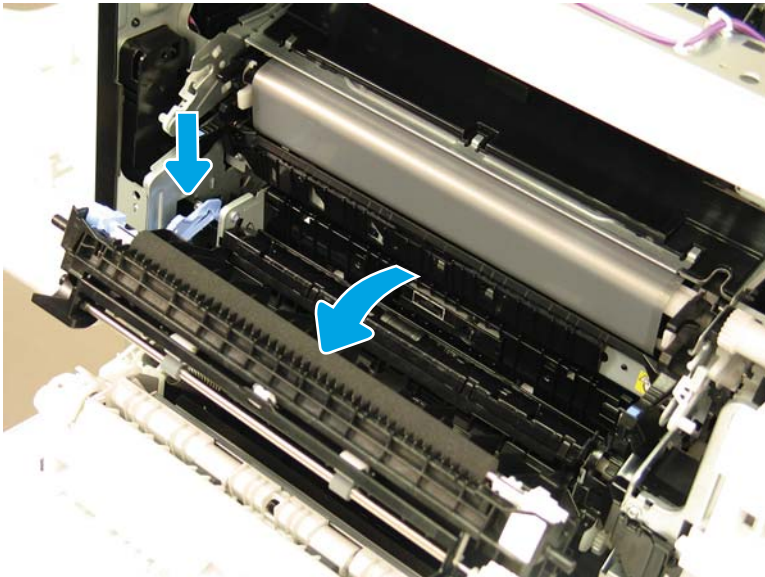




5. Release the right hinge by gently pushing left where the hinge attaches to the printer.

Figure 1-2082 Release the right hinge

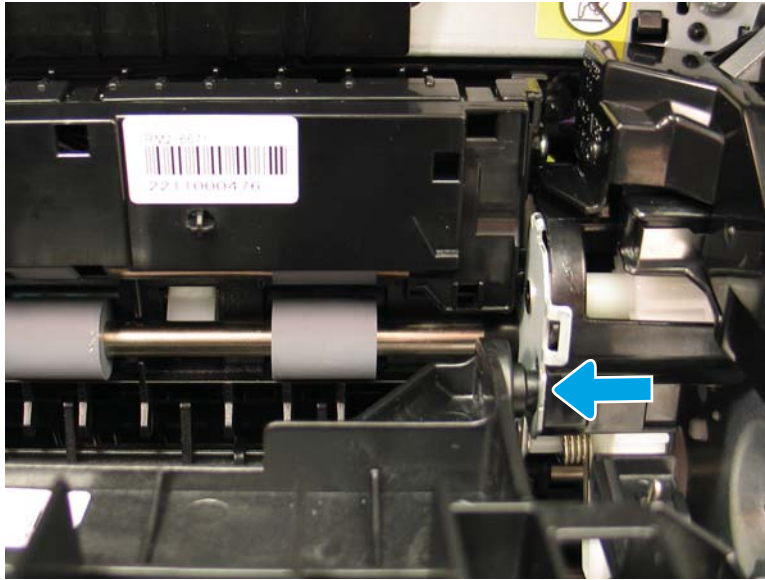


6. Rotate the right side of the assembly away from the printer, and then release the left side of the assembly from the blue link arm (callout 1).


Figure 1-2083 Release the left side

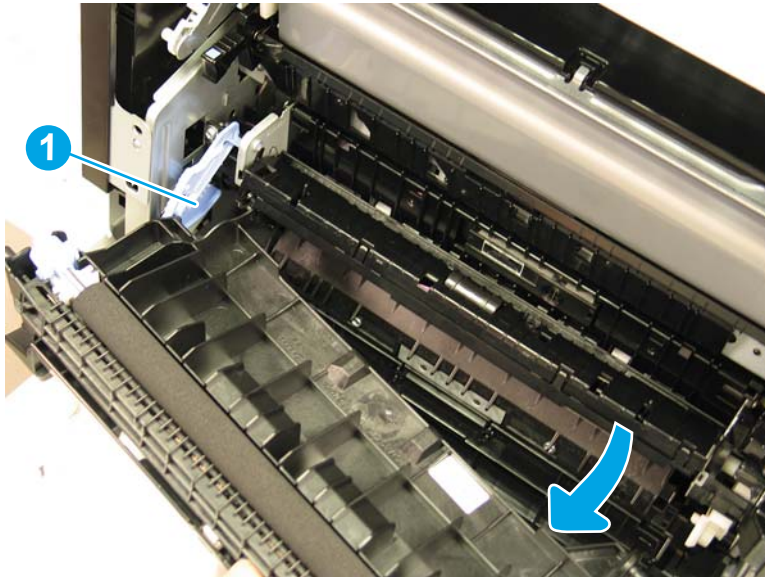

7. Lift the secondary transfer assembly up to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2084** Remove the secondary transfer assembly

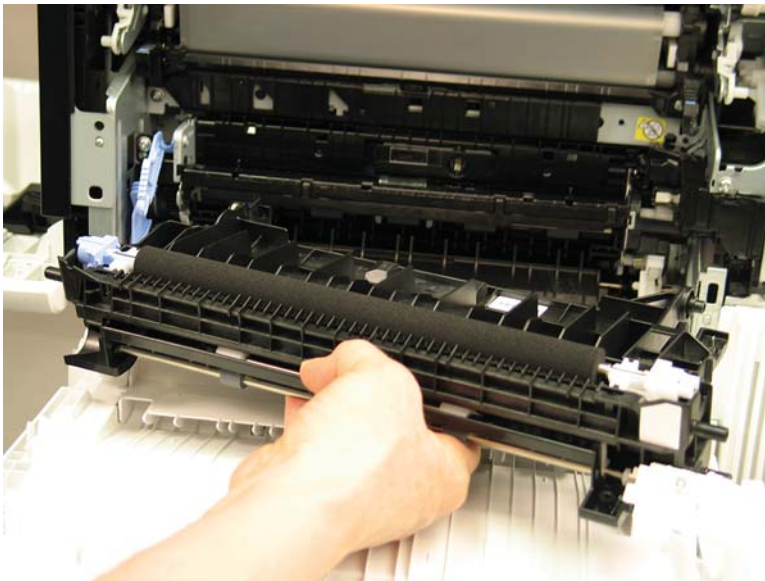

#### Step 8: Remove the low-voltage power supply (LVPS) and fan

1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).


**Figure 1-2085** Disconnect five connectors and remove two screws

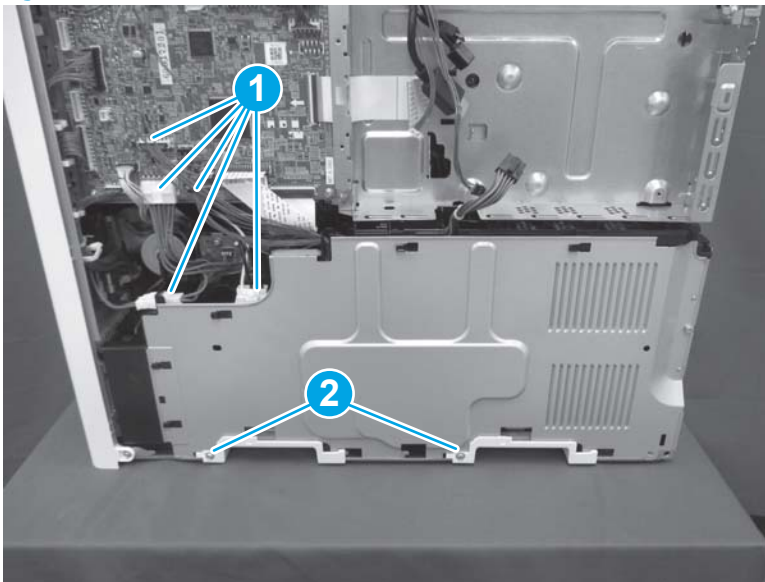



2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.


Figure 1-2086 Remove two handles

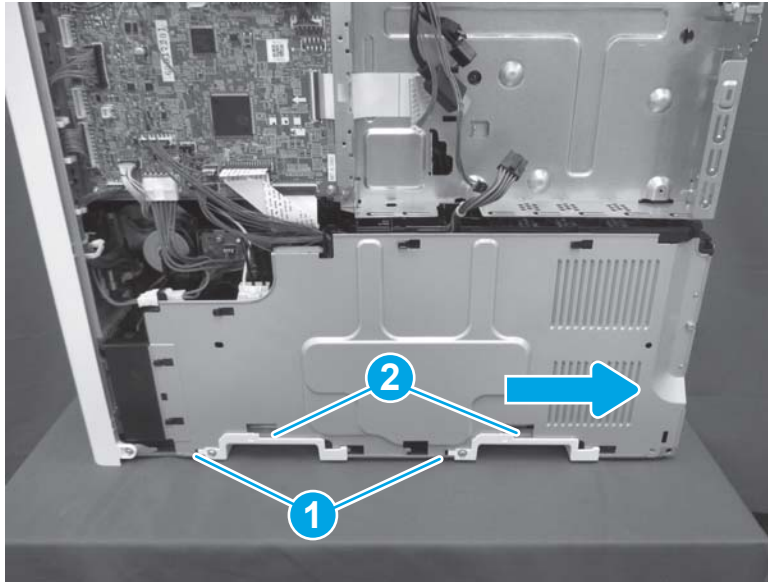

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).

 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-2087 Remove the low-voltage power supply

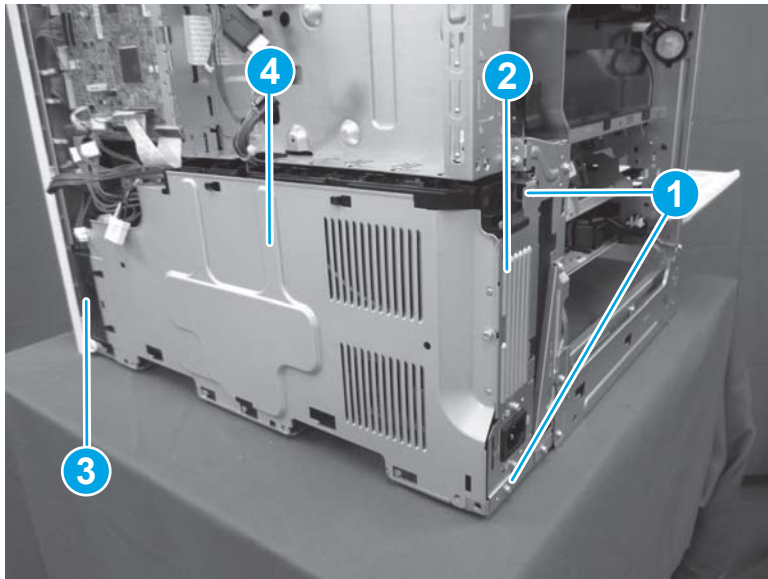


### Step 9: Remove the lower high voltage power supply (HVPS)

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).

Figure 1-2088 Disconnect one connector

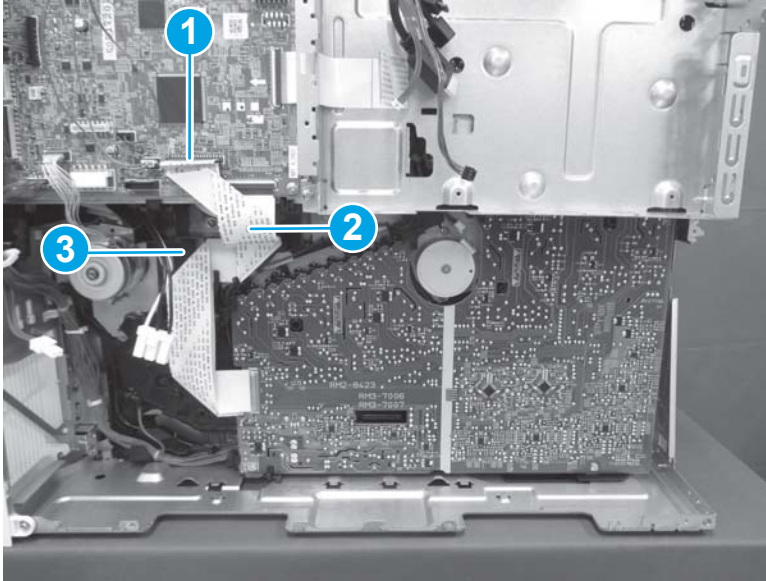

2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.


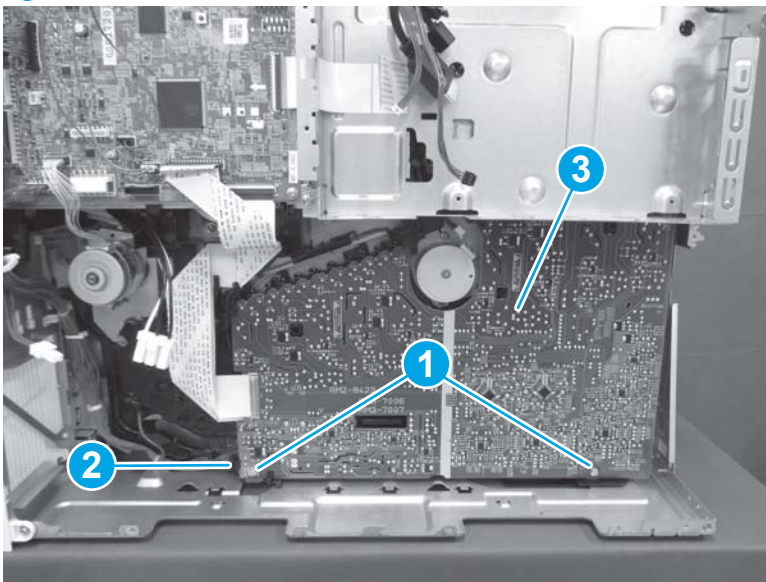
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2089 Remove two screws and release one tab



### Step 10: Remove the registration assembly


1. Release the cables from four retainers (callout 1), and then disconnect four connectors (callout 2).

Figure 1-2090 Disconnect four connectors

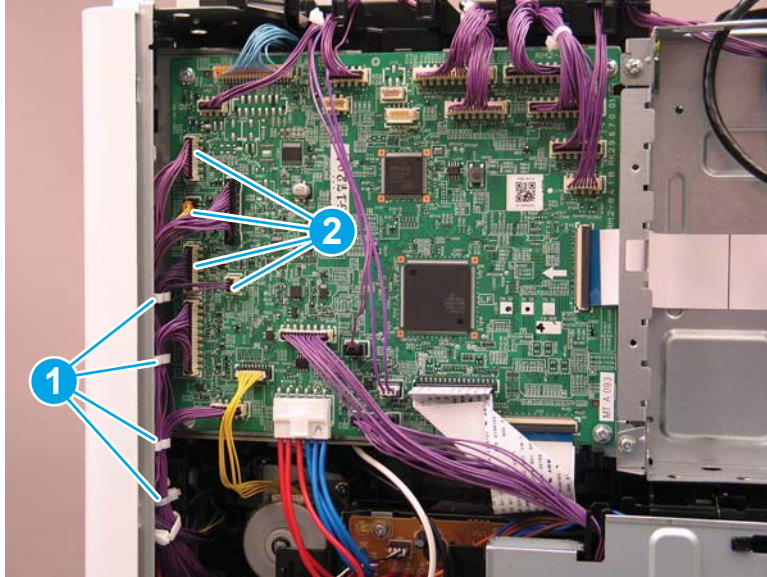


2. Release one tab (callout 1), release one boss (callout 2), and then remove the connector cover (callout 3).

Figure 1-2091 Remove the connector cover

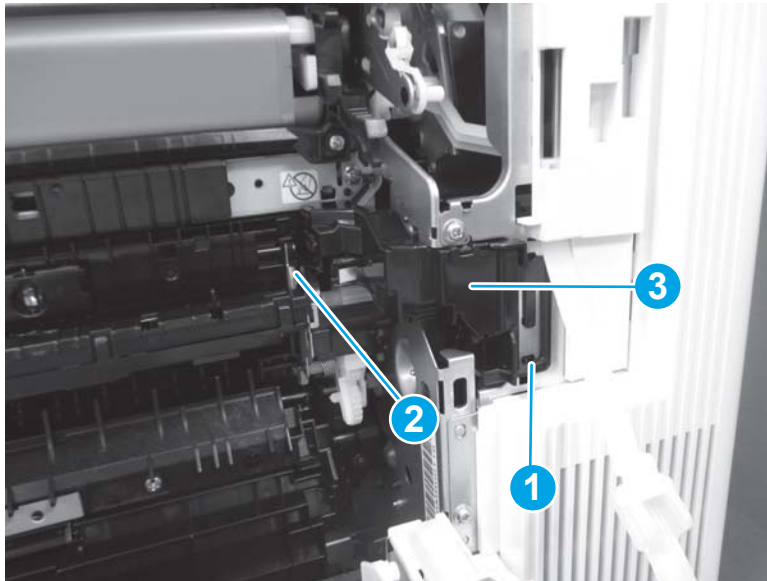


3. Release one tab (callout 1), and then slide the cable guide (callout 2) down to release it.

Figure 1-2092 Release the cable guide

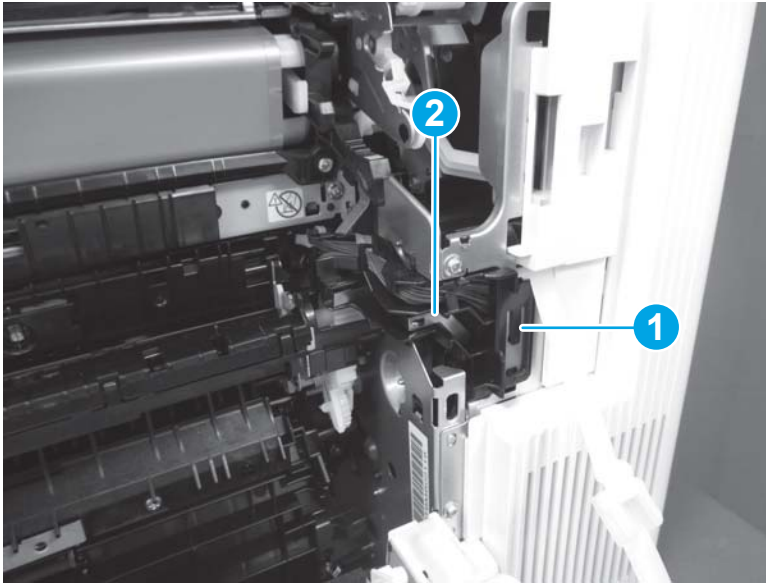

4. Release the cable (callout 1) from the cable guide (callout 2).


Figure 1-2093 Remove the cable guide

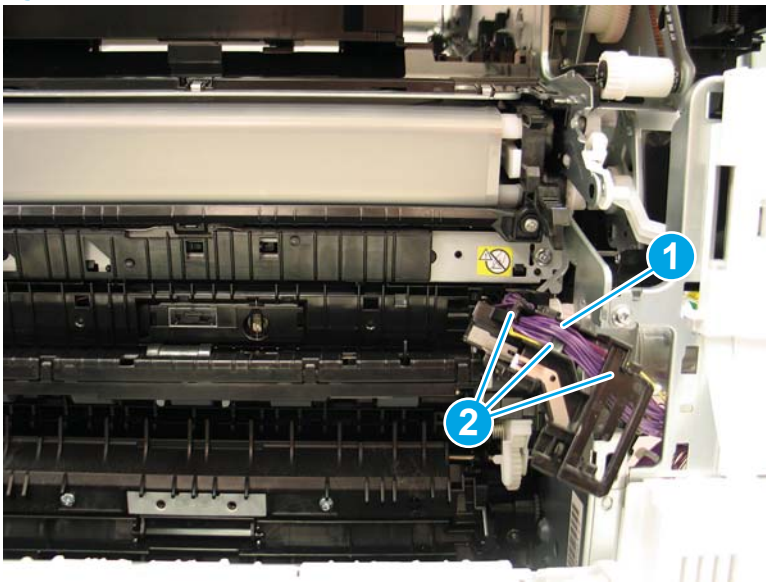




5. Remove three screws (callout 1).

Figure 1-2094 Remove three screws

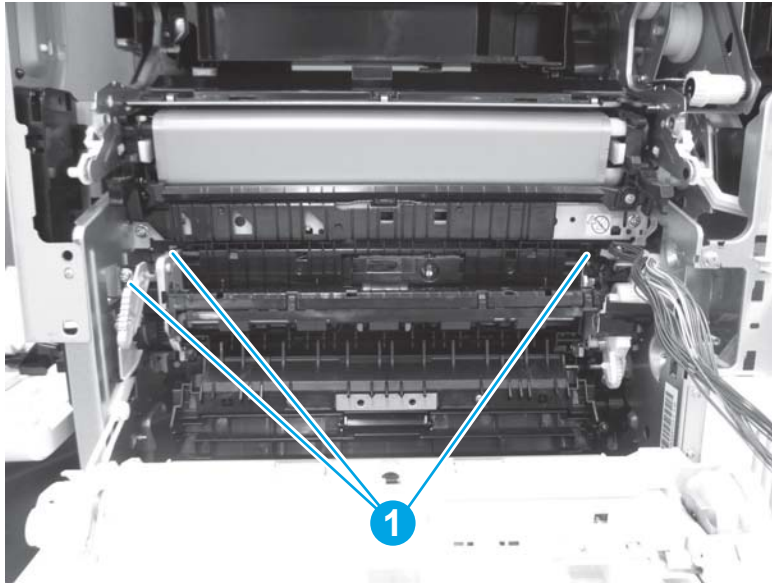


6. Release the assembly from the guide pin (callout 1) on the left side of the assembly.

Figure 1-2095 Release the assembly from the guide pin

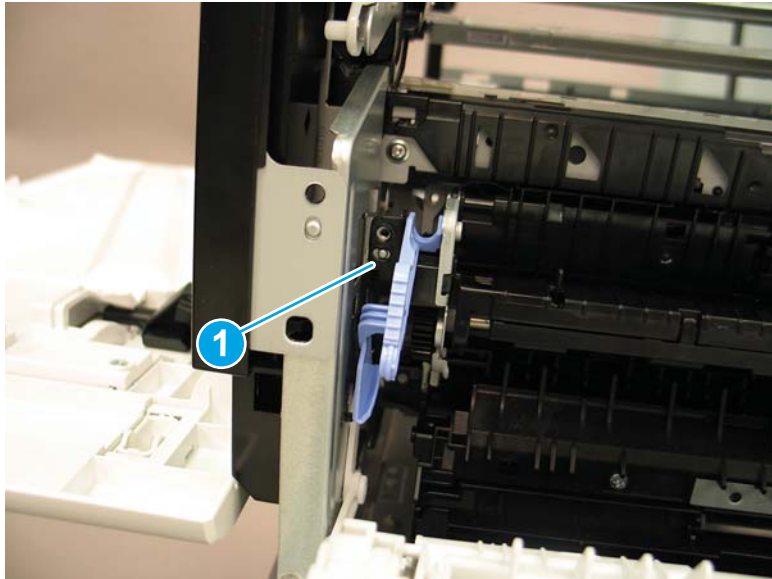

7. Press downward on the left side of the assembly (callout 1), and then rotate the assembly away from the printer (callout 2) to release the hooks that go through the sheet metal on the back of the assembly. Remove the registration assembly.

**Figure 1-2096** Remove the registration assembly

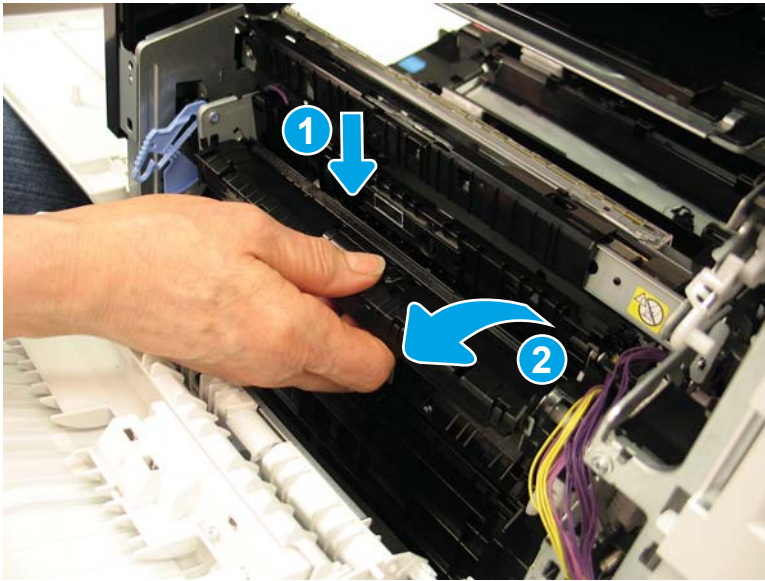


8. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


**Special installation instructions: Registration assembly**

- a. Install the tabs (callout 1) on the registration assembly into the slots (callout 2) in the printer.


**Figure 1-2097** Install the tabs in the slots

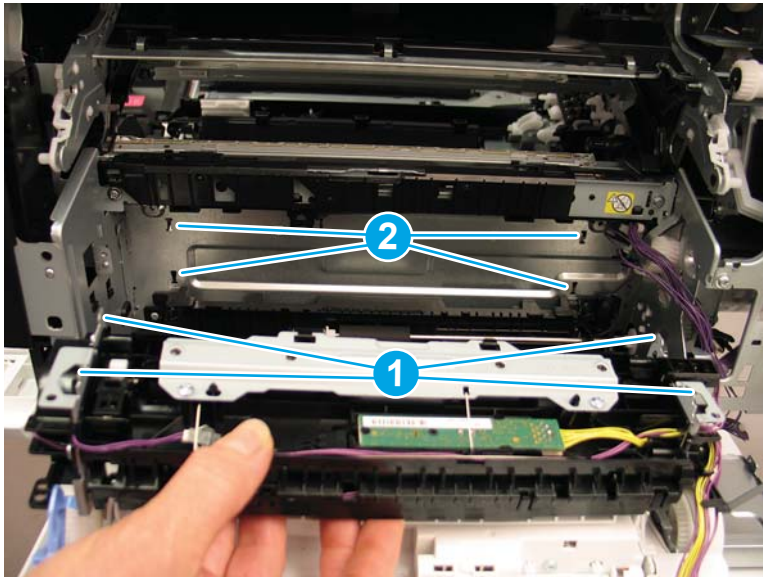

- b. Look inside the printer and make sure that the tabs (callout 1) are completely installed in the sheet metal before installing the screws.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


**Figure 1-2098** Check the tabs

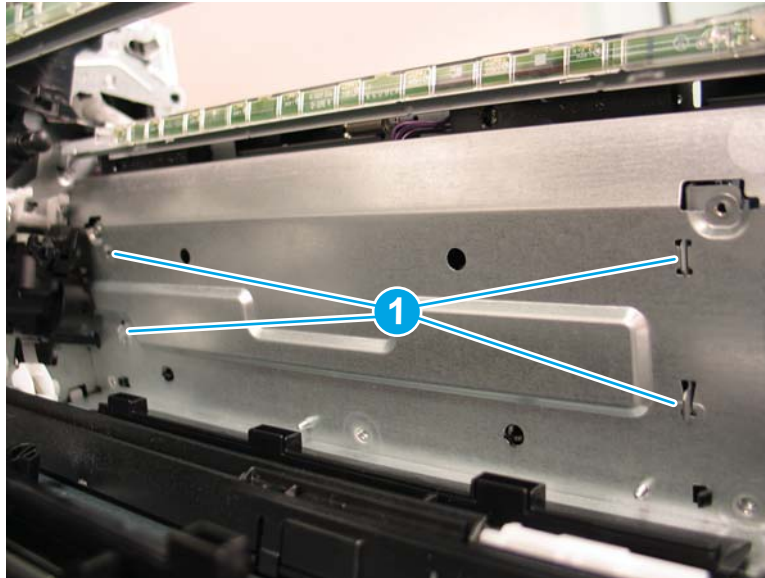


### Step 11: Remove the feed roller assembly


1. Unhook one spring (callout 1), release two hinge pins (callout 2), and then remove the feed guide (callout 3).

 **TIP:** Needle-nose pliers work well for unhooking the spring.

 **IMPORTANT:** The spring (callout 1) is not captive. Do not lose the spring.

 **Reinstallation tip:** Make sure to reattach the spring (callout 1).


**Figure 1-2099** Remove the feed guide

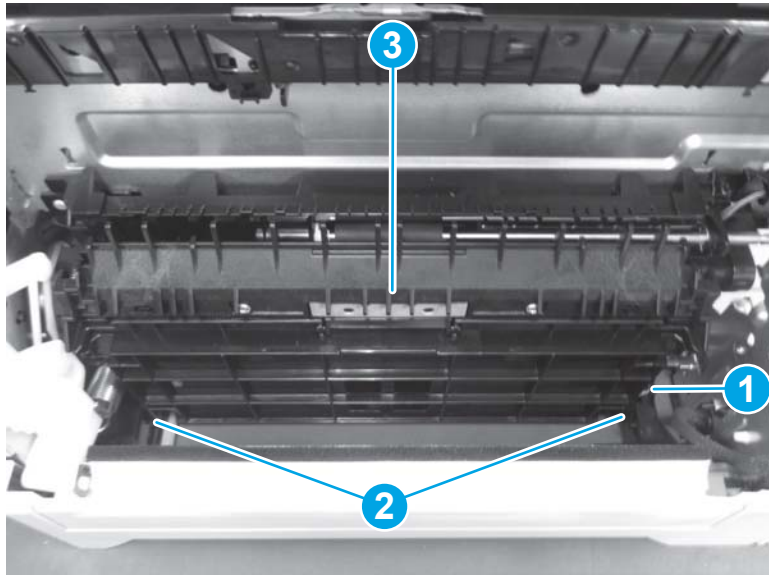




2. Release two hinge pins (callout 1), and then remove the feed guide (callout 2).

Figure 1-2100 Remove the feed guide

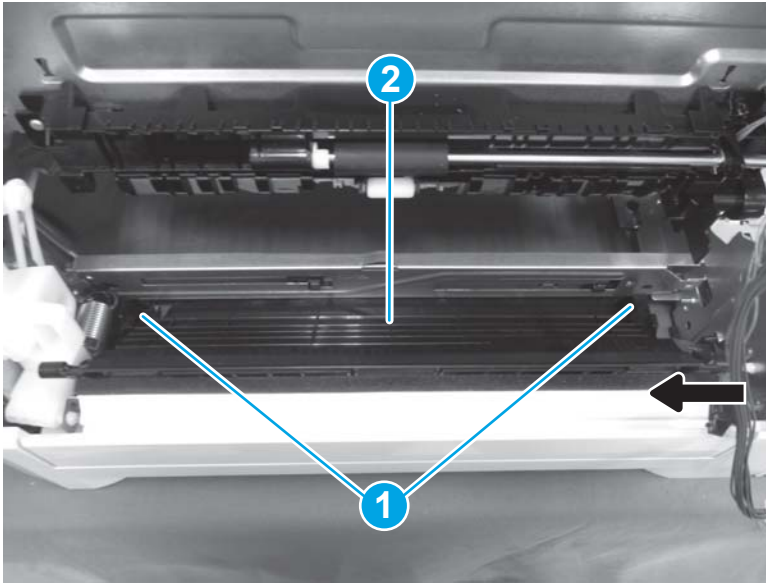

3. Release the cable (callout 1) from the retainers (callout 2). Release one tab (callout 3), and then slide the feed roller assembly (callout 4) to the left to remove it.

Figure 1-2101 Remove the feed roller assembly

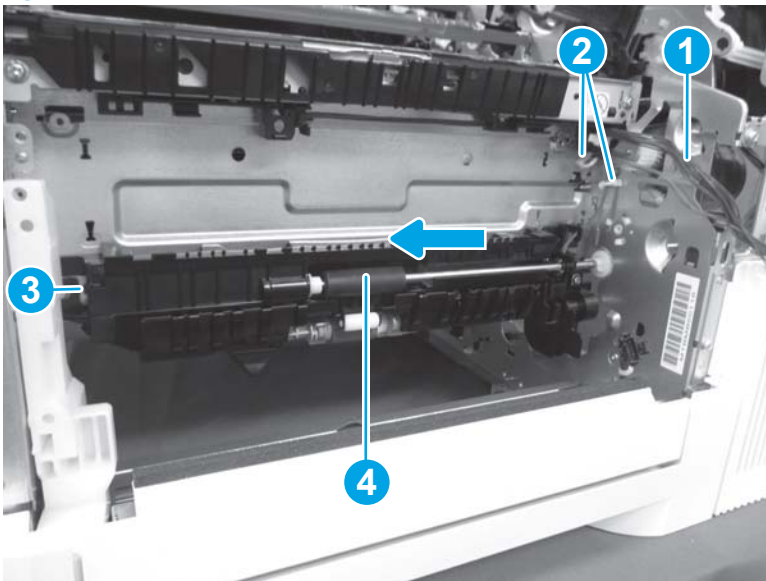


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

**Special installation instructions: Feed roller assembly**


- a. Before installing the feed roller assembly, make sure that the cable (callout 1) behind it is routed as shown so it is not pinched when the assembly is installed.

Figure 1-2102 Check the cable routing

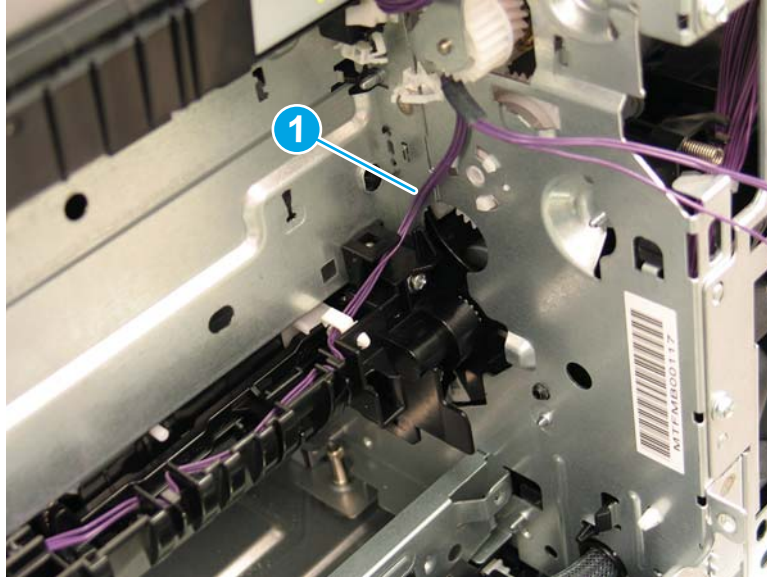


- b. Align the gear (callout 1) with the gear (callout 2) through the opening in the sheet metal.

Figure 1-2103 Position the gear

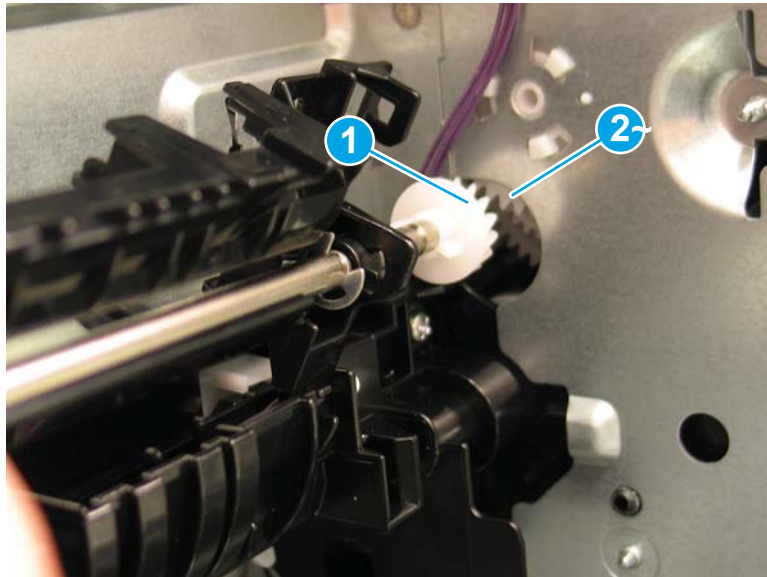

- c. Beginning at the right side, install the tabs (callout 1) on the assembly into the slots (callout 2) in the sheet metal. Make sure that the spring (callout 3) is not folded over. Position the right tab through the sheet metal and hold it, and then position the left tab near the sheet-metal hole. Gently push on the left tab to fully seat the guide pins (callout 4) in the holes (callout 5) in the assembly.


Figure 1-2104 Install the tabs

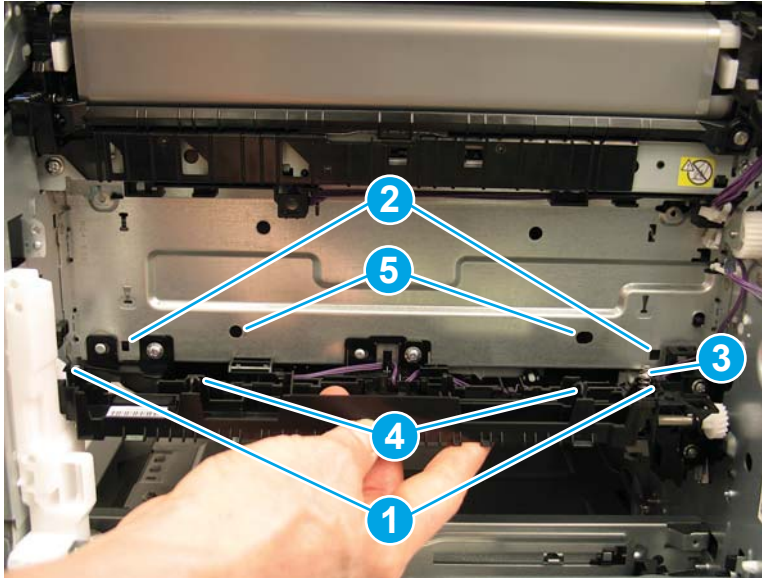

- d. Make sure that the tabs (callout 1) are positioned correctly in the sheet metal slots.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.


Figure 1-2105 Check the tabs

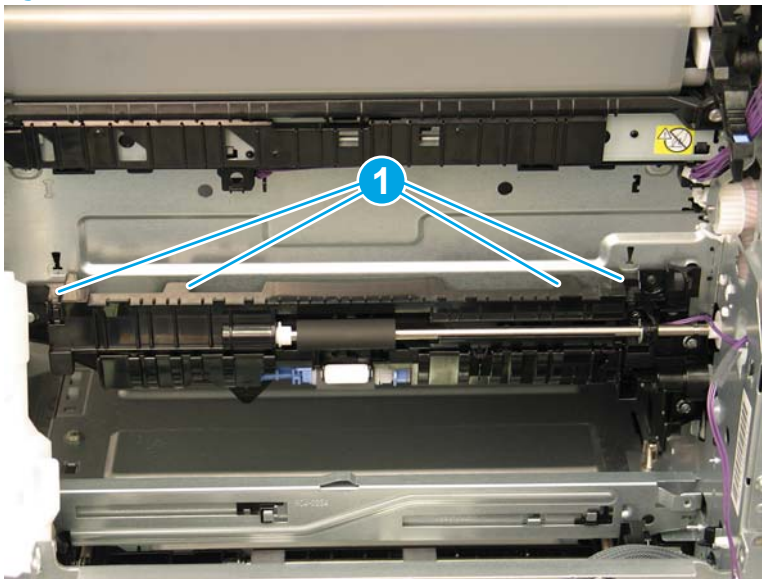

## Step 12: Remove the pickup assembly


1. Remove four screws (callout 1).

Figure 1-2106 Remove four screws

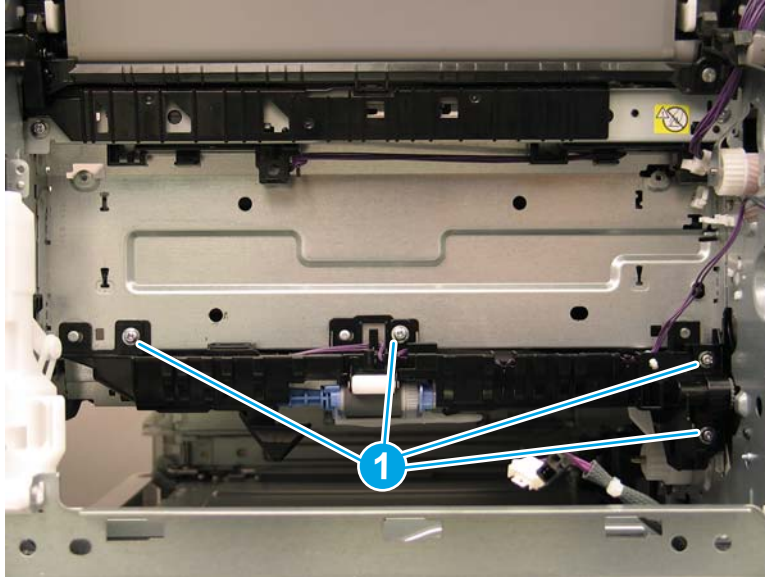

2. Lower the left side of the assembly (callout 1), and then slide it to the left (callout 2) to remove it.

Figure 1-2107 Remove the pickup assembly

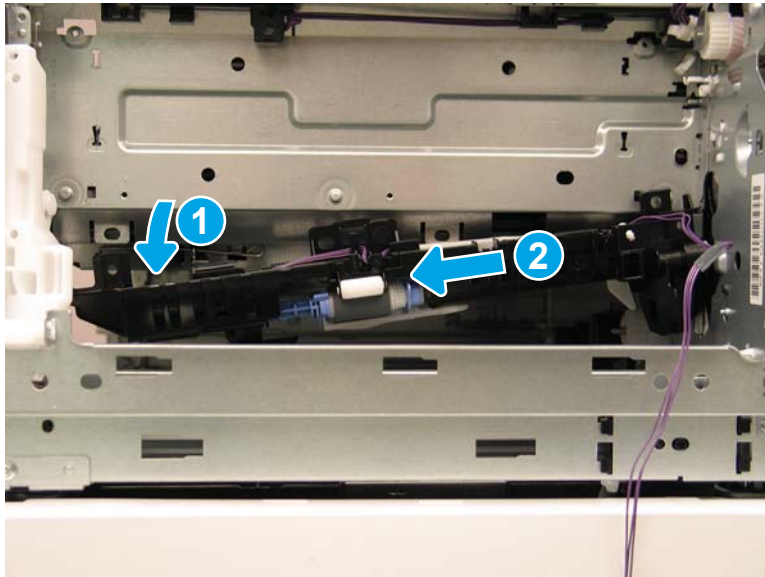

3. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


#### Special installation instructions: Pickup assembly

- ▲ Position the shaft on the assembly through the opening in the sheet metal (callout 1). Align the white gear on the assembly with the white gear (callout 2) on the printer.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.



Figure 1-2108 Position the shaft and gear

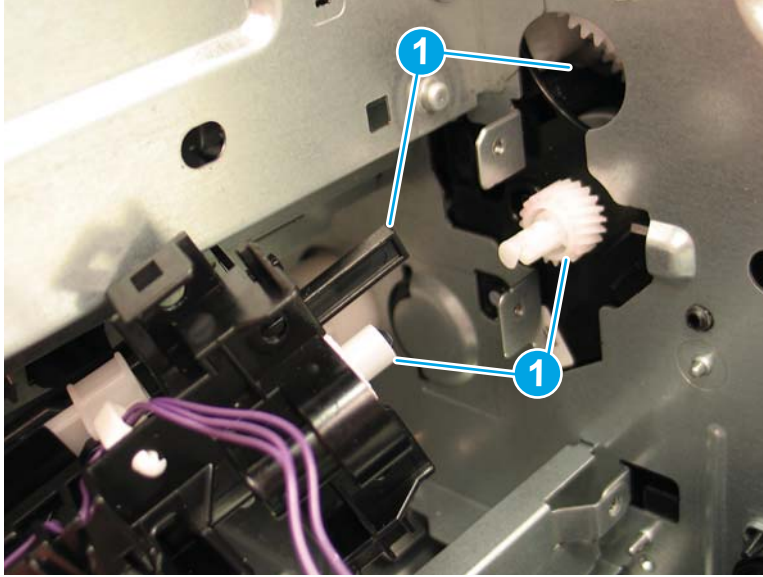

### Step 13: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Drawer connector and holder

- [Introduction](#)
- [Step 1: Remove the formatter cover](#)
- [Step 2: Remove the left rear cover](#)
- [Step 3: Remove the rear cover](#)
- [Step 4: Remove the low-voltage power supply \(LVPS\) and fan](#)
- [Step 5: Remove the lower high-voltage power supply](#)
- [Step 6: Remove the drawer connector and holder](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drawer connector and holder.

M652/M653/E65050/E65060/E65150/E65160 connector:

[Click here to view a video of this procedure.](#)

M652/M653/E65050/E65060/E65150/E65160 holder:

[Click here to view a video of this procedure.](#)


M681/M682/E67550/E67560/E67650/E67660 connector:

[Click here to view a video of this procedure.](#)

M681/M682/E67550/E67560/E67650/E67660 holder:

[Click here to view a video of this procedure.](#)


---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Disconnect the power cable.

 **WARNING!** To avoid damage to the printer, turn the printer off, wait 30 seconds, and then remove the power cable before attempting to service the printer.

---

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Drawer connector and holder part numbers	
VS1-7258-012CN	Connector
RC4-6497-000CN	Drawer connector holder

---

## Required tools

- #2 Phillips screwdriver with a magnetic tip

## After performing service

### Turn the printer power on

- Connect the power cable.
- Use the power switch to turn the power on.

### Post service test

Make sure that the printer initializes to a **Ready** state.


Print a configuration page to make sure that the printer is functioning correctly.

### Step 1: Remove the formatter cover

- ▲ Unscrew two thumbscrews (callout 1), and then slide the formatter cover (callout 2) away from the printer to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2109 Remove the formatter cover

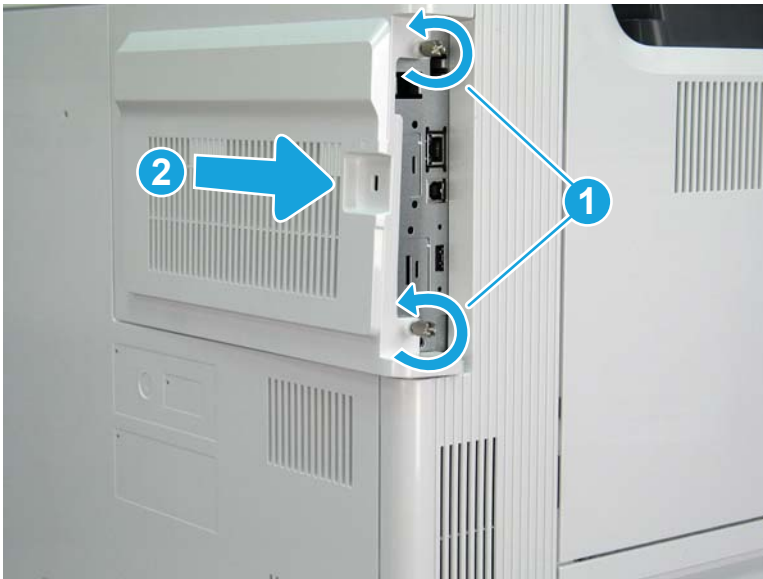


### Step 2: Remove the left rear cover

1. Open the left door. Remove one screw (callout 1), release one boss (callout 2), and then remove the left rear cover (callout 3).



Figure 1-2110 Remove the left rear cover

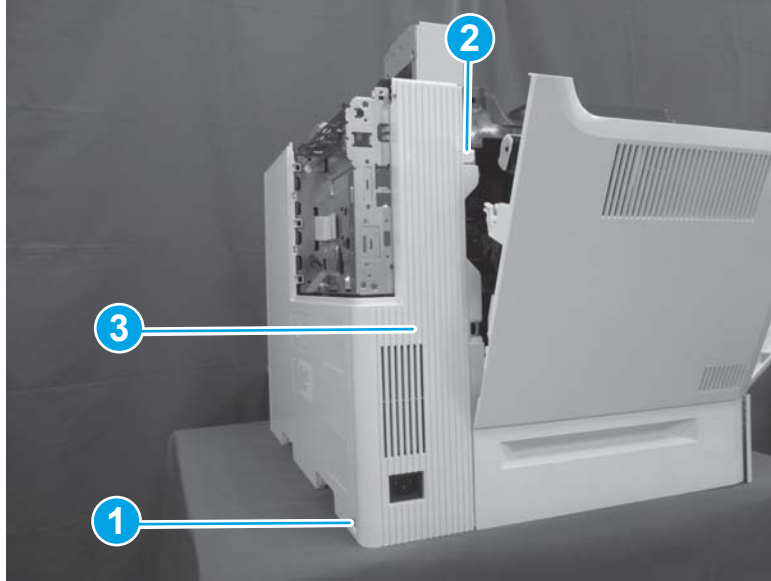


2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Left rear cover


- ▲ Position the top of the cover (callout 1) first and then slide the cover to the right (callout 2). Push the left lower corner (callout 3) toward the rear of the printer to engage two tabs (callout 4) in the slots on the rear cover.

Figure 1-2111 Install the left rear cover

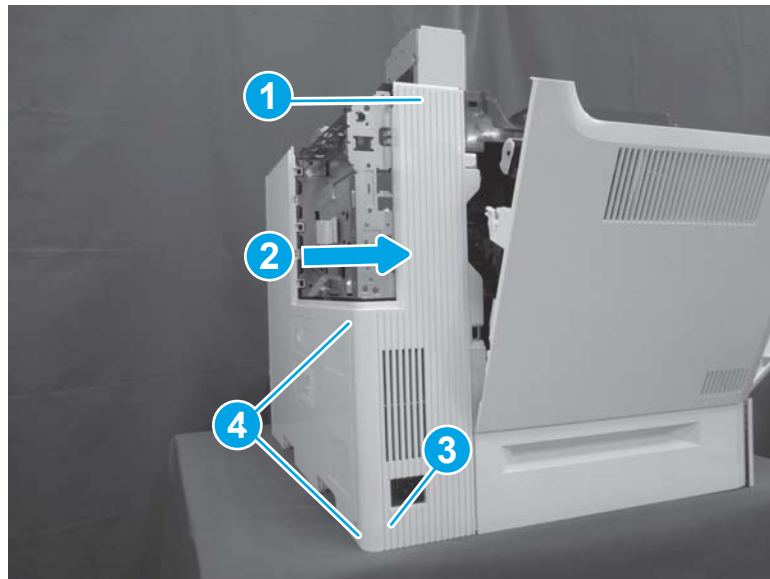


#### Step 3: Remove the rear cover

- ▲ Remove two screws (callout 1), and then slide the rear cover (callout 2) to the right to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2112** Remove two screws and the rear cover

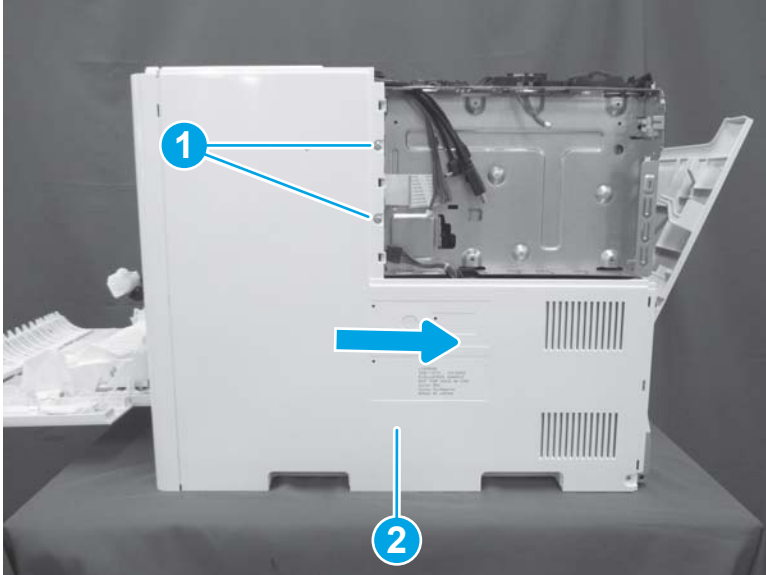

**Step 4: Remove the low-voltage power supply (LVPS) and fan**


1. Disconnect five connectors (callout 1), and then remove two screws (callout 2).

**Figure 1-2113** Disconnect five connectors and remove two screws

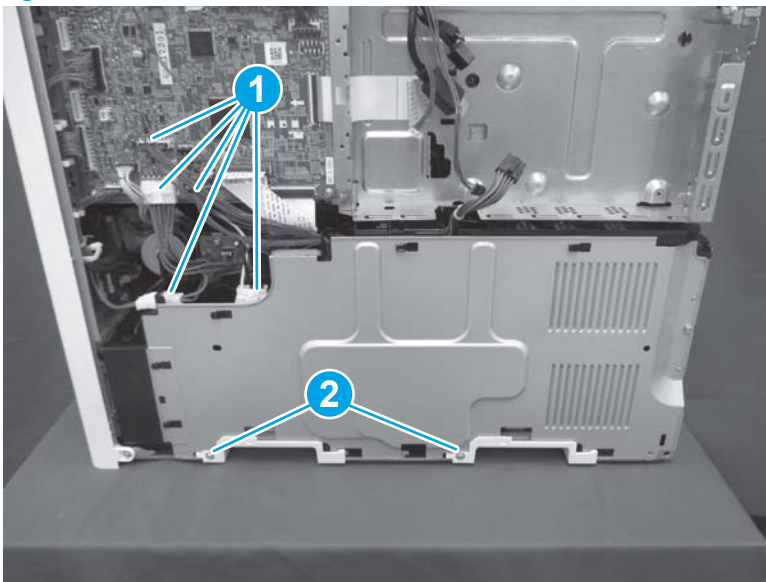

2. Release two tabs (callout 1), and then slide two handles (callout 2) to the right to remove them.

Figure 1-2114 Remove two handles

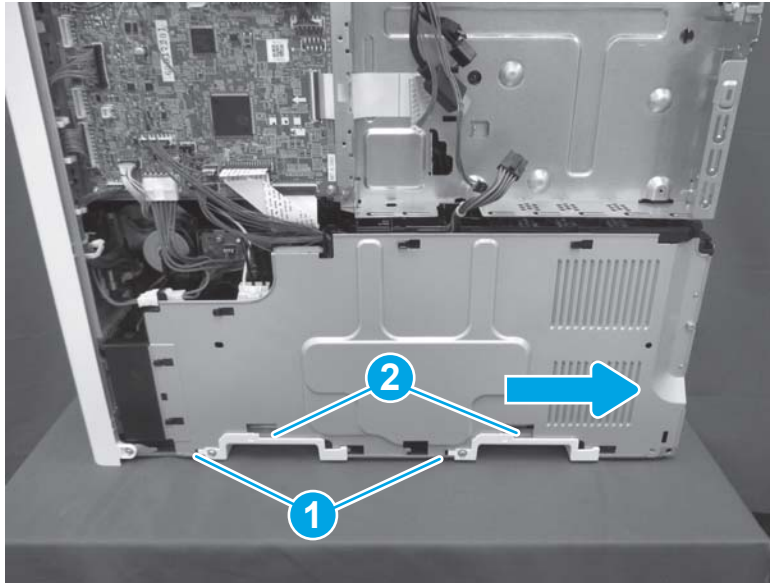

3. Remove two screws (callout 1). Remove the low-voltage power supply (callout 2) together with the power supply fan (callout 3) and the low-voltage power supply cover (callout 4).


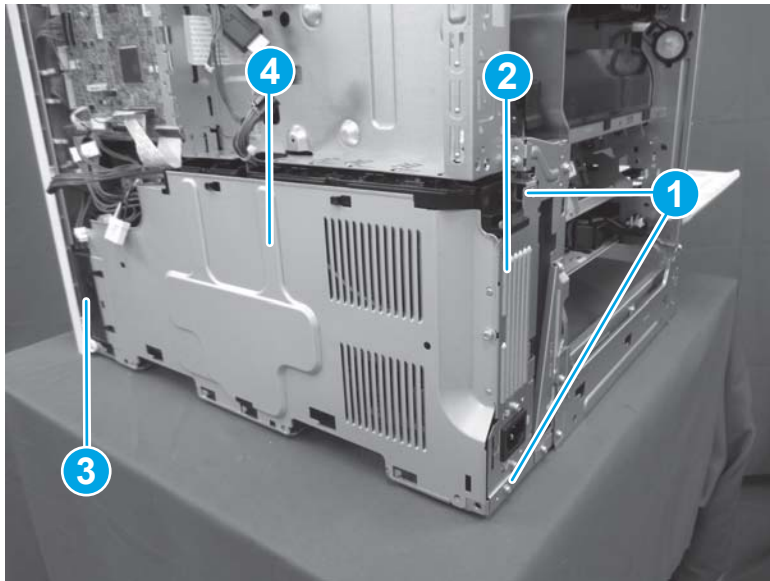
 **NOTE:** The upper screw is recessed inside the printer just above the upper right corner of the LVPS. The lower screw is located between the locator pins at the bottom of the assembly.


Figure 1-2115 Remove the low-voltage power supply



### Step 5: Remove the lower high-voltage power supply

1. Disconnect one connector (callout 1), and then remove the flat cable (callout 2) from the cable guide (callout 3).

Figure 1-2116 Disconnect one connector

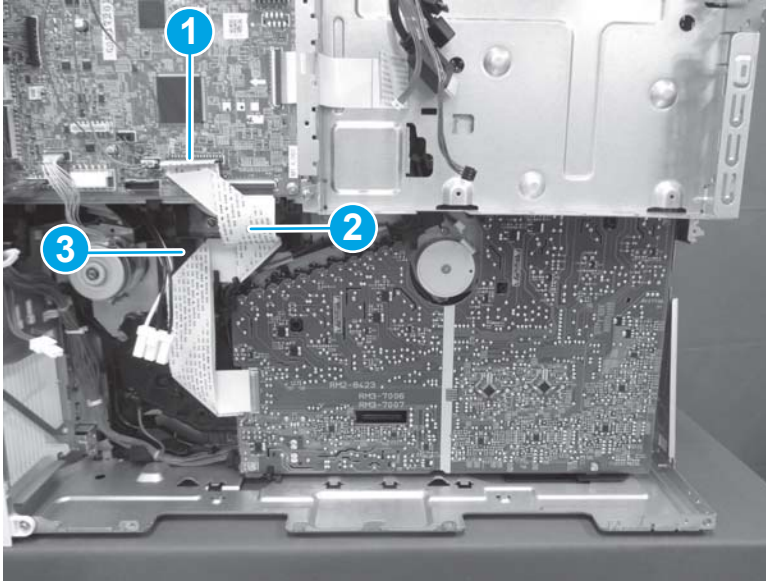

2. Remove two screws (callout 1), release one tab (callout 2), and then remove the lower HVPS (callout 3).

 **NOTE:** These screws have washers attached. Make sure that they are reinstalled in the lower HVPS board.


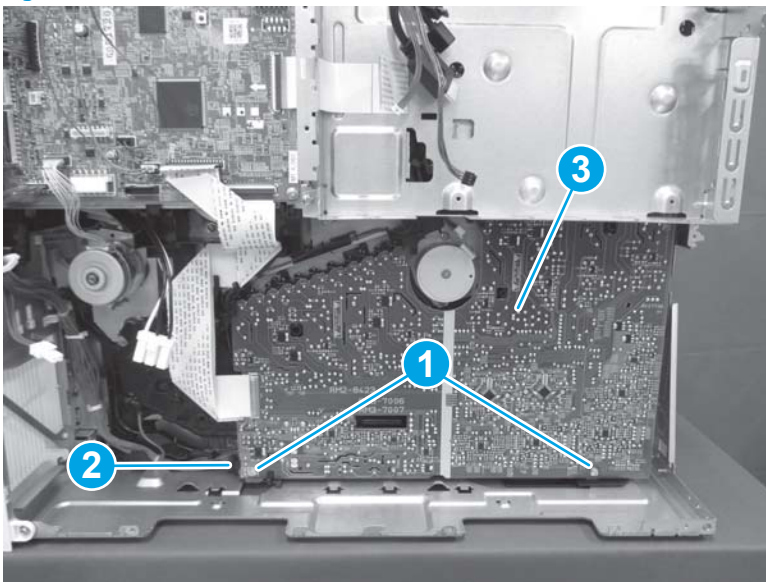
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2117 Remove two screws and release one tab



#### Step 6: Remove the drawer connector and holder


1. Disconnect one connector (callout 1), and then remove one screw (callout 2).

Figure 1-2118 Disconnect one connector and remove one screw

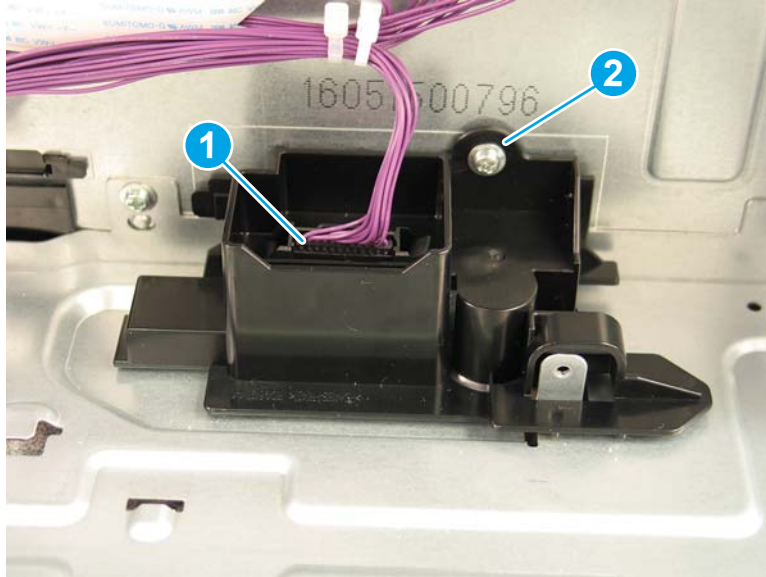

2. Release one tab (callout 1), and then slide the connector holder (callout 2) to the left to remove it.

Figure 1-2119 Remove the connector holder

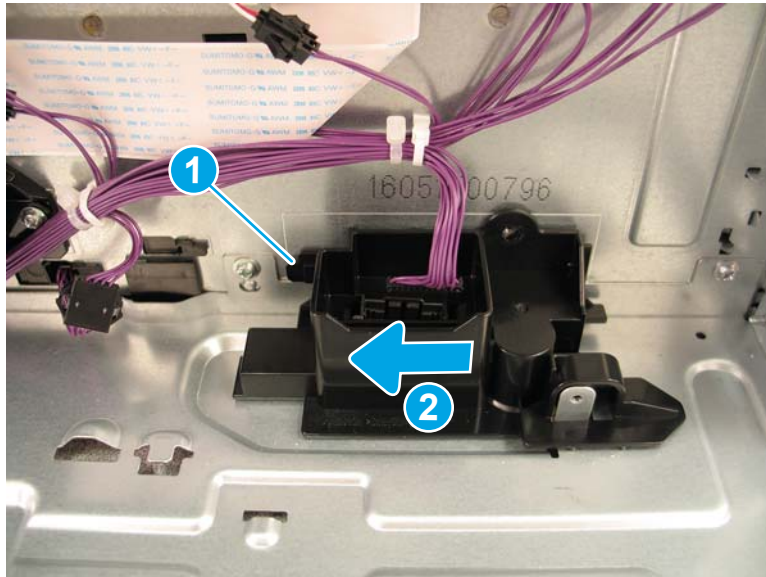



3. Release two tabs (callout 1), and then remove the connector (callout 2) from the holder.


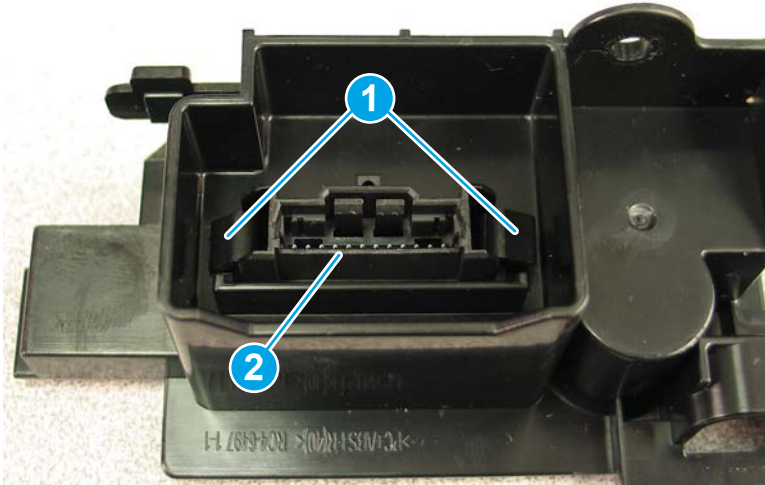
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2120 Remove the connector from the holder





### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Trays

- [Removal and replacement: Tray 2 and optional 550-sheet Trays 3–5](#)
- [Removal and replacement: Tray 4 \(2,500-sheet paper feeder with stand\)](#)




## Removal and replacement: Tray 2 and optional 550-sheet Trays 3–5

- [Introduction](#)
- [Step 1: Remove the 550-sheet paper tray](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace Tray 2 and optional 550-sheet Trays 3–5.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Tray part numbers	
RM2-6935-000CN	Cassette assembly (1x550-sheet paper feeder)
RM2-1231-000CN	Cassette assembly (3x550-sheet paper feeder with stand)
RM2-1219-000CN	Cassette assembly (1x550-sheet paper feeder with stand and Tray 3 of 2,500-sheet paper feeder with stand))

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the 550-sheet paper tray

 **NOTE:** Tray 2 is shown in the figure below. The procedure is the same for all of the 550-sheet paper trays.

1. Pull the tray straight out of the printer until it stops.

Figure 1-2121 Pull the tray out




2. Lift the front of the tray, and then pull it out of the printer to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2122 Remove the tray

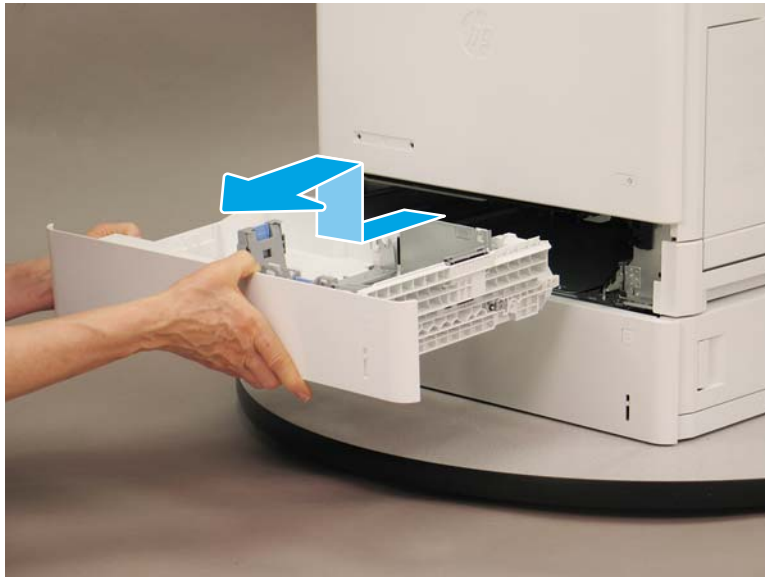

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Tray 4 (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove Tray 4 \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the Tray 4 in the 2,500-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Tray 4 (2,500-sheet paper feeder with stand) part number	
RM2-1220-000CN	Tray assembly

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove Tray 4 (2,500-sheet paper feeder with stand)

1. Open Tray 4.

2. Press the right and left release levers at the base of the tray (callout 1), and then pull Tray 4 (callout 2) away from the feeder to remove it.


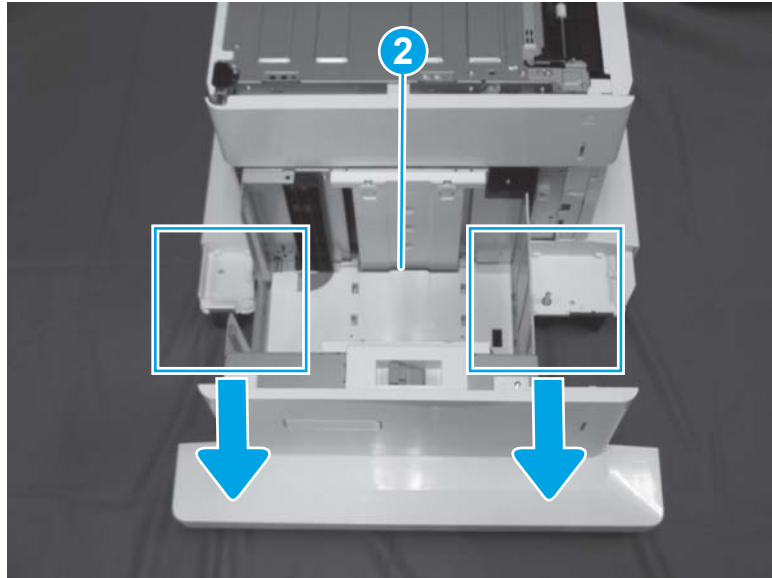
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2123 Remove Tray 4



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Input accessories

- [Removal and replacement: 550-sheet paper feeder](#)
- [Removal and replacement: 1x550-sheet paper feeder with stand](#)
- [Removal and replacement: 3x550-sheet paper feeder with stand](#)
- [Removal and replacement: 2,550-sheet paper feeder with stand](#)



## Removal and replacement: 550-sheet paper feeder

- [Removal and replacement: Right door link \(550-sheet paper feeder\)](#)
- [Removal and replacement: Right door \(550-sheet paper feeder\)](#)
- [Removal and replacement: Rear cover \(550-sheet paper feeder\)](#)
- [Removal and replacement: Left cover \(550-sheet paper feeder\)](#)
- [Removal and replacement: Right lower cover \(550-sheet paper feeder\)](#)
- [Removal and replacement: Auto-close assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Drive assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Lifter drive assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Paper feed assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Paper pickup assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Paper feeder controller PCA \(550-sheet paper feeder\)](#)
- [Removal and replacement: Size-detect switch \(550-sheet paper feeder\)](#)
- [Removal and replacement: Upper drawer holder and cable assembly \(550-sheet paper feeder\)](#)
- [Removal and replacement: Lower drawer holder cable assembly \(550-sheet paper feeder\)](#)


## Removal and replacement: Right door link (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the right door link on the 550-sheet paper feeder.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right door link part number	
RC4-1778-000CN	Link, door

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.


### Step 1: Remove the right door link (550-sheet paper feeder)

1. Open the right door.

2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2124** Release the link from the door

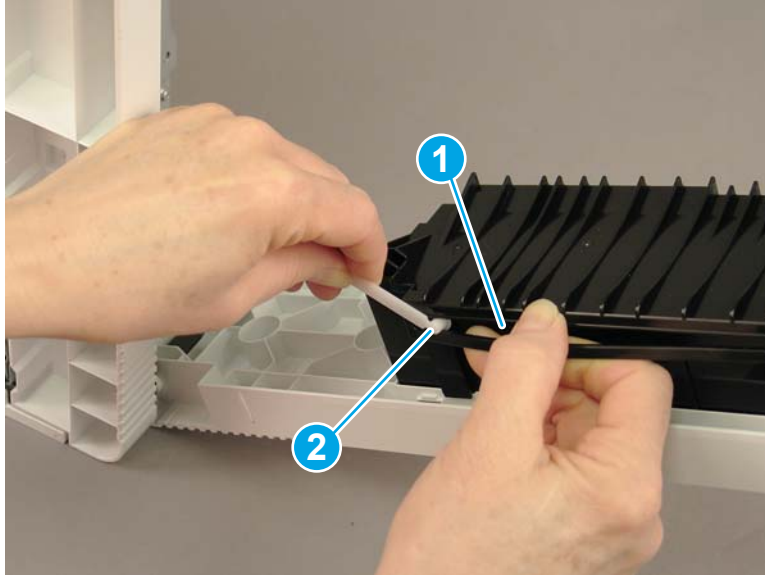

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.


**Figure 1-2125** Remove the link

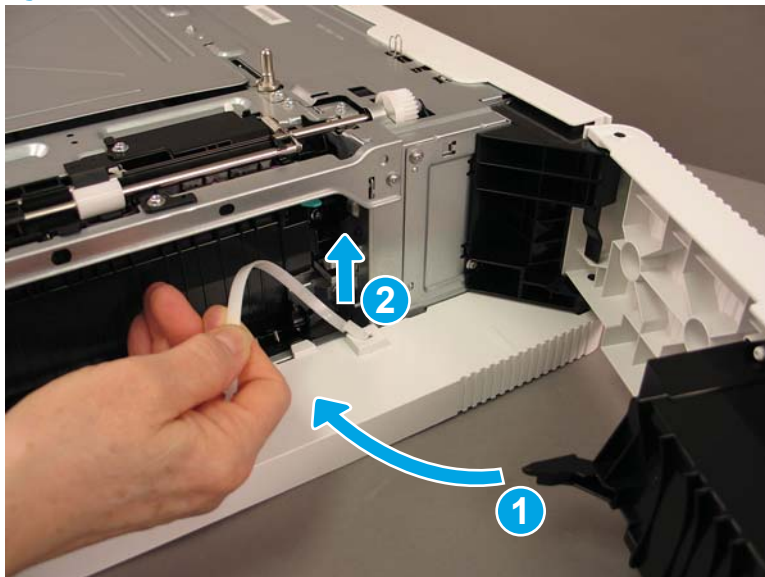

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right door (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right door \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door on the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.



**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door (550-sheet paper feeder) part number	
RM2-6937-000CN	Right door assembly

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.


### Step 1: Remove the right door link (550-sheet paper feeder)

1. Open the right door.

2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2126** Release the link from the door

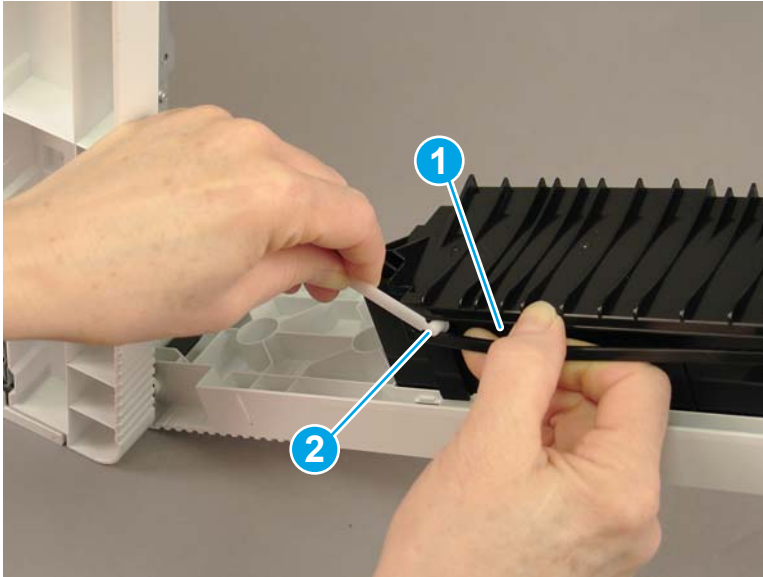

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2127** Remove the link

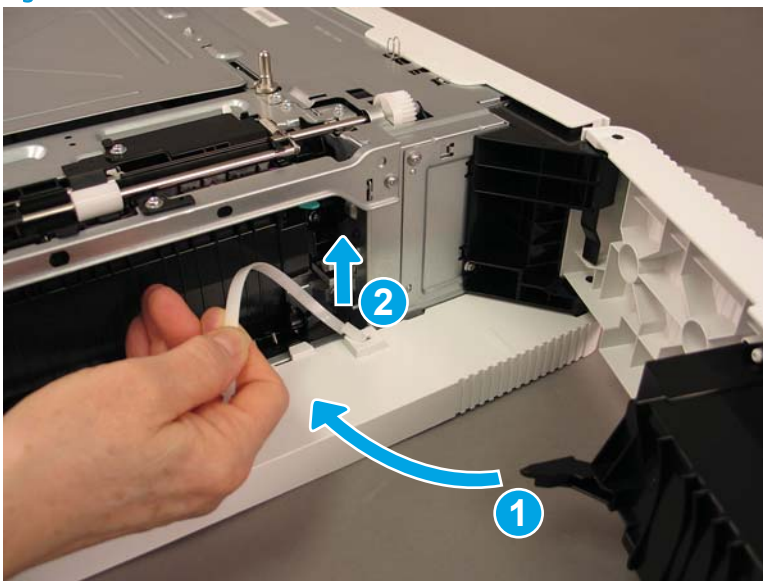


### Step 2: Remove the right door (550-sheet paper feeder)

- ▲ Release one tab (callout 1), and then slide the right door (callout 2) up to remove it

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2128 Release one tab and remove the right door

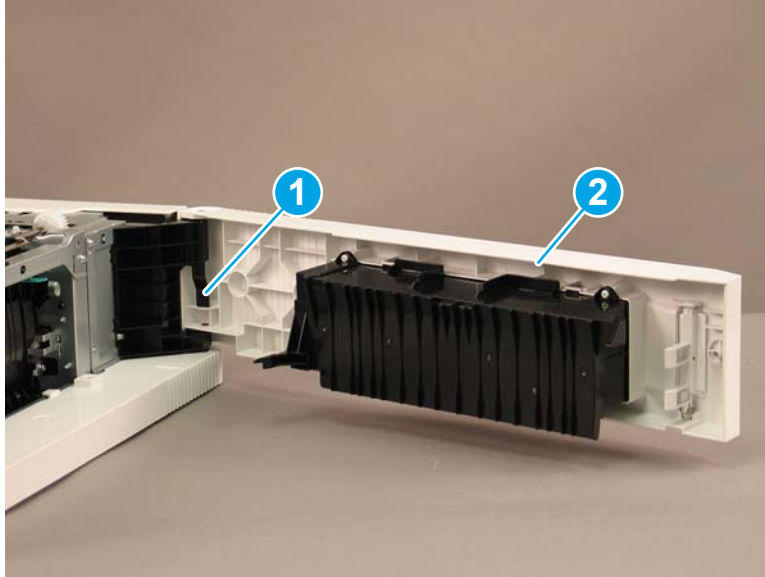

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Rear cover (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear cover (550-sheet paper feeder) part number	
RC4-7683-000CN	Cover, rear

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.


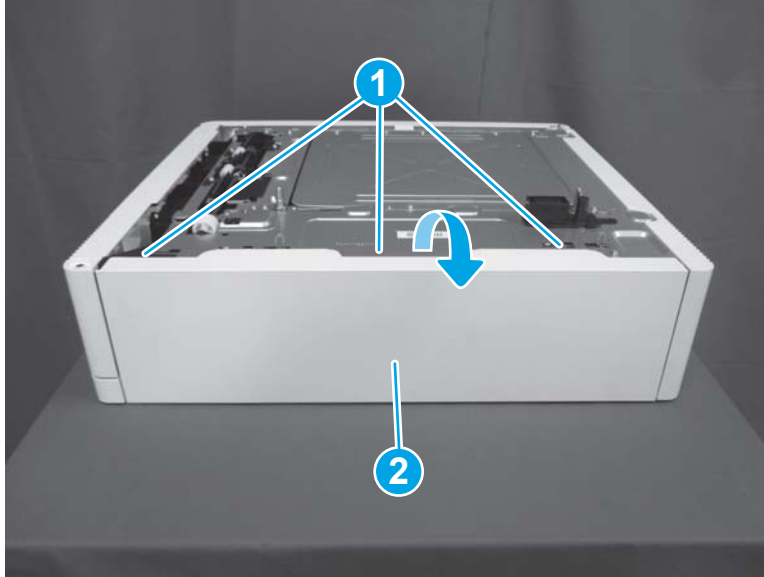
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2129 Remove the rear cover



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left cover (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the left cover \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left cover for the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left cover (550-sheet paper feeder) part number	
RC4-7682-000CN	Cover, left

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.


### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.



**Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2130 Remove the rear cover

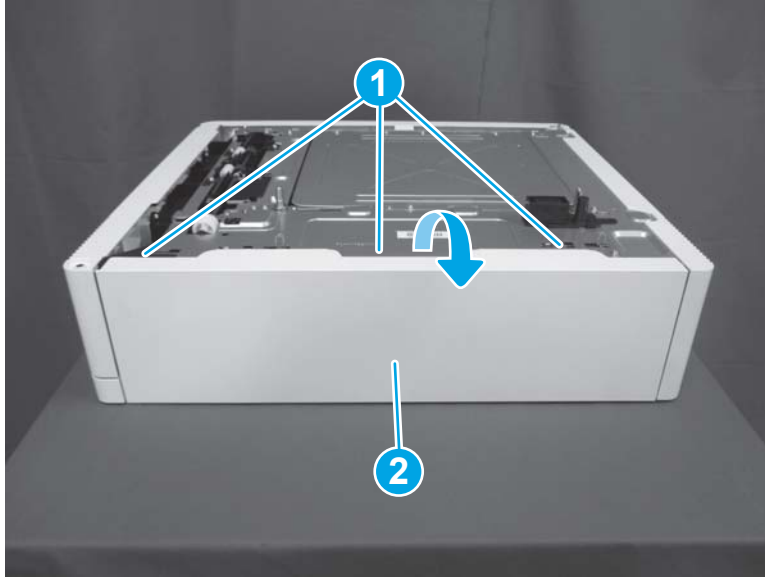


### Step 2: Remove the left cover (550-sheet paper feeder)

1. Remove the 550-sheet paper feeder tray.
2. Release three tabs (callout 1), and then rotate the top of the left cover (callout 2) away from the paper feeder to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2131 Release three tabs and remove the cover

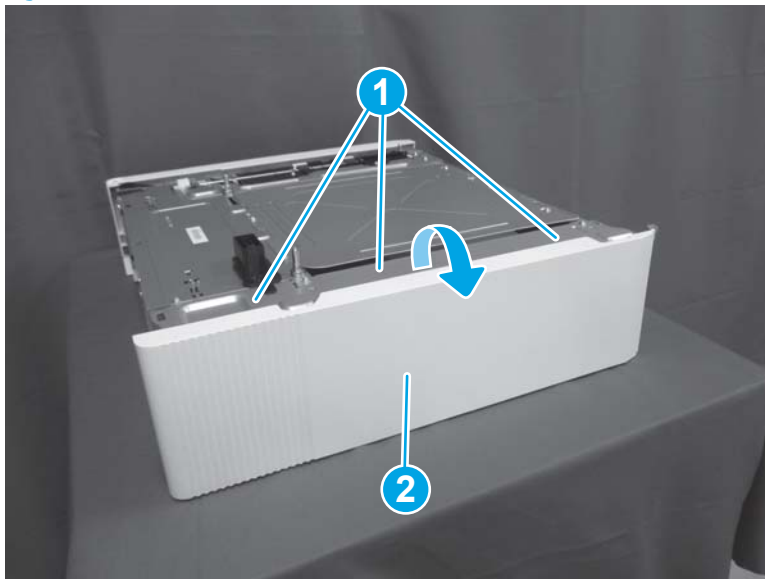

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Right lower cover (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right lower cover](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right lower cover on the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right lower cover (550-sheet paper feeder) part number	
RC4-7684-000CN	Cover, right lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.


### Step 1: Remove the right door link (550-sheet paper feeder)

1. Open the right door.

2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2132** Release the link from the door

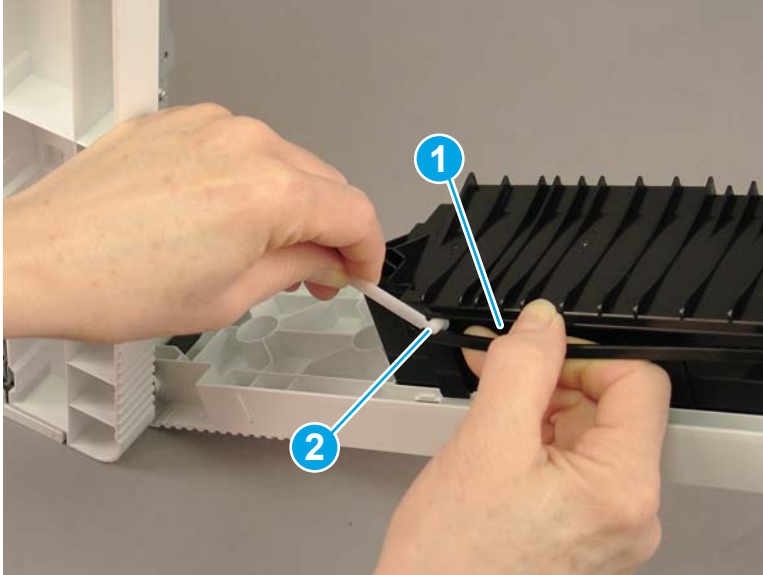

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2133** Remove the link

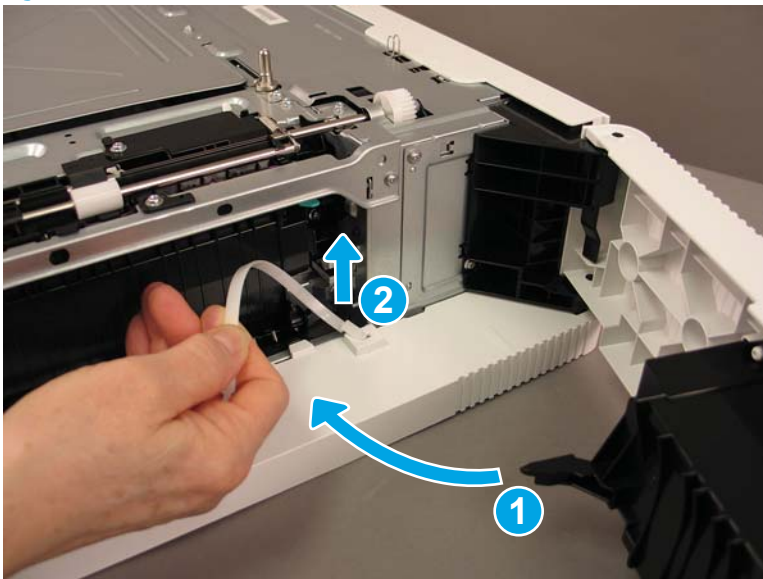


### Step 2: Remove the right lower cover

1. Remove the 550-sheet paper feeder tray.



2. Remove two screws (callout 1), and then remove the front inner cover (callout 2).

Figure 1-2134 Remove two screws and the front inner cover

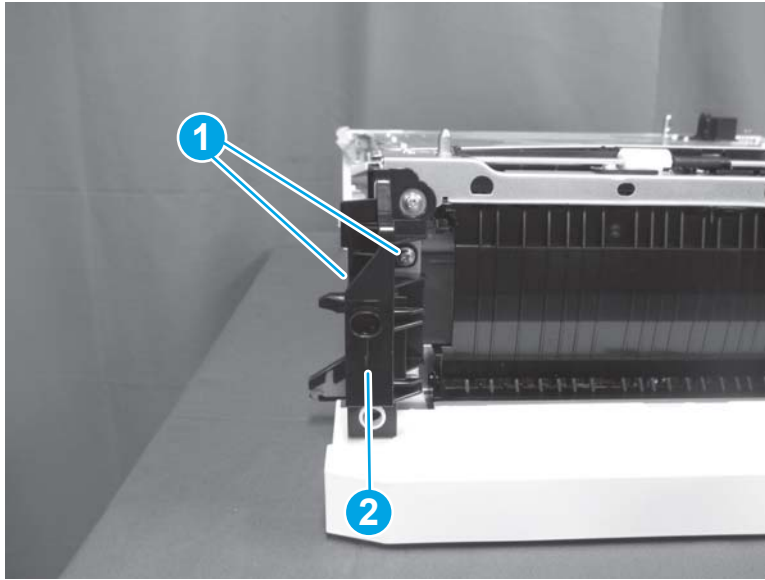


3. Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the front of the paper feeder to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2135 Remove the right lower cover

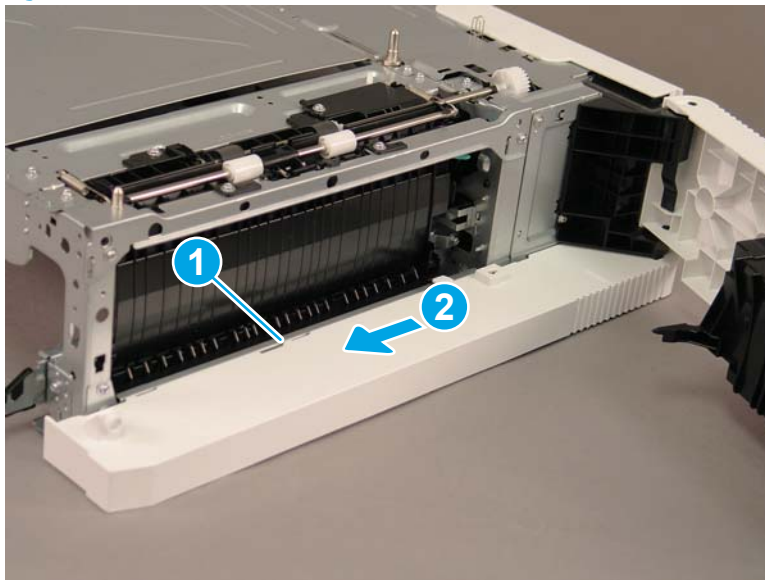

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Auto-close assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the auto-close assembly \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the auto-close assembly for the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Auto-close assembly (550-sheet paper feeder) part number	
RM2-5147-000CN	Auto-close assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Slowly install the paper tray in the paper feeder. Verify that the auto-close assembly catches and pulls the tray completely closed.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.


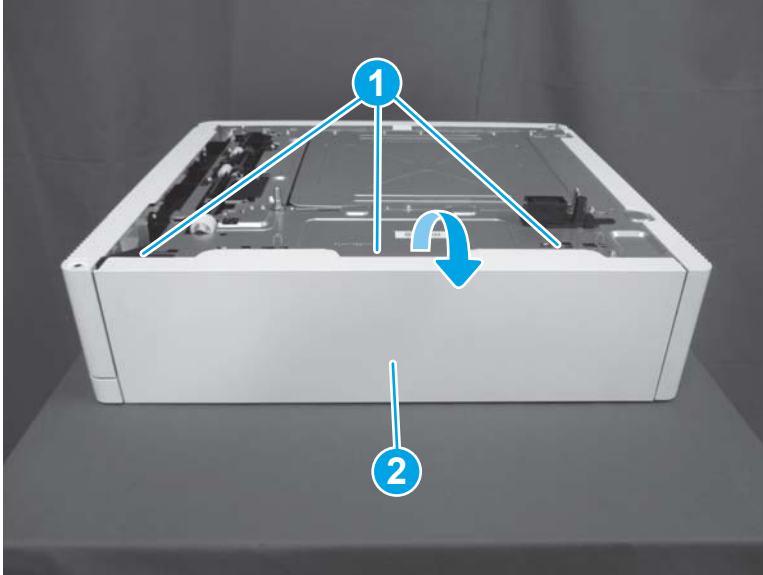
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2136 Remove the rear cover



### Step 2: Remove the auto-close assembly (550-sheet paper feeder)

1. Remove the 550-sheet paper feeder tray.
2. Disconnect one connector (callout 1), and then release the cable (callout 2) from the cable guide (callout 3). Remove two screws (callout 4), and then remove the auto-close assembly (callout 5).


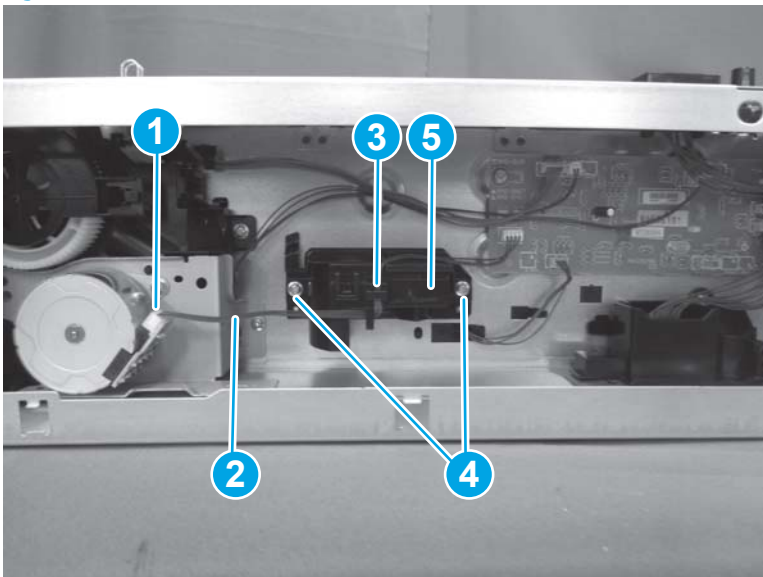
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2137 Remove the auto-close assembly



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Drive assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 3: Remove the right door \(550-sheet paper feeder\)](#)
- [Step 4: Remove the right lower cover \(550-sheet paper feeder\)](#)
- [Step 5: Remove the drive assembly](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the drive assembly in the 550-sheet paper feeder.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Drive assembly (550-sheet paper feeder) part number

---

RM2-6934-000CN

Drive assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2138 Remove the rear cover

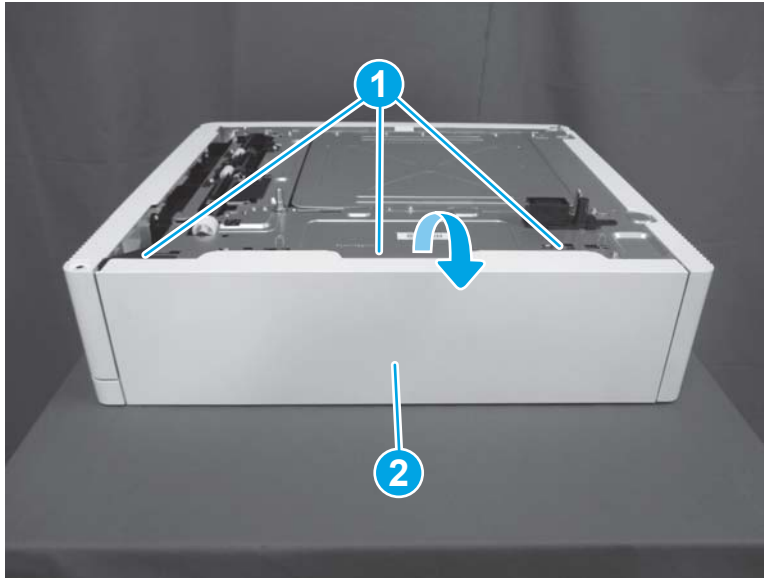

### Step 2: Remove the right door link (550-sheet paper feeder)


1. Open the right door.



2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2139** Release the link from the door

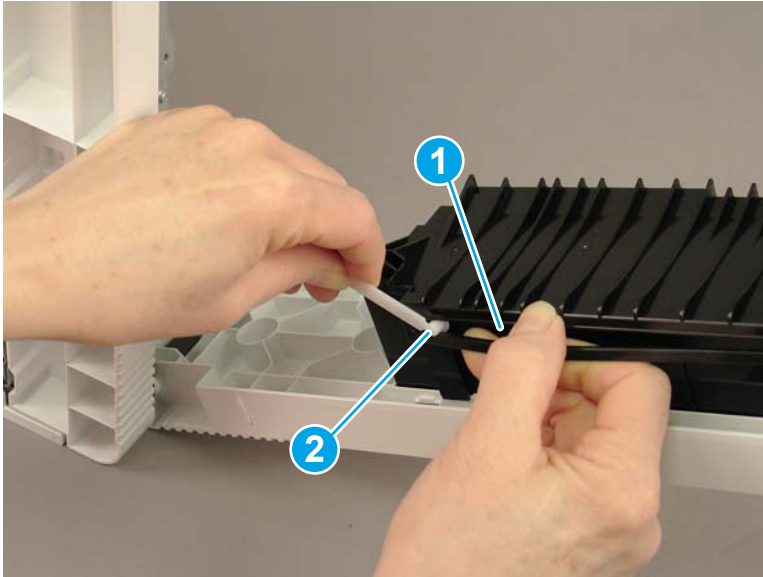

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2140** Remove the link

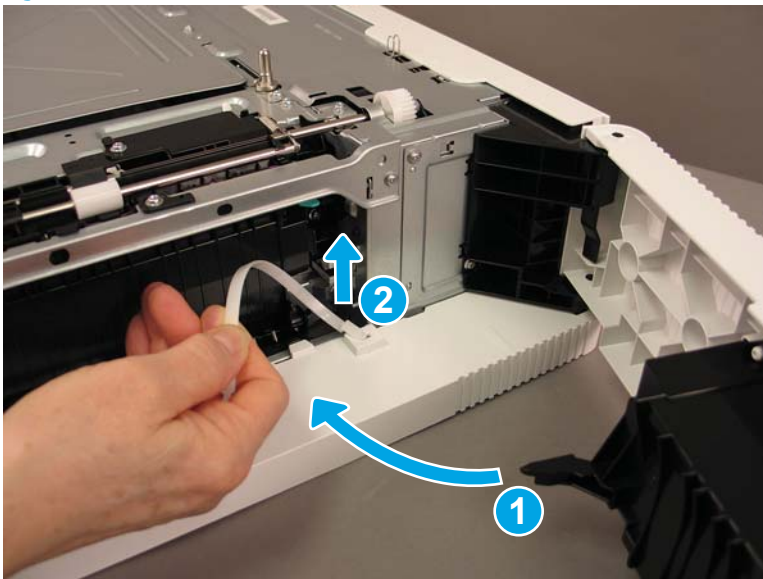

### Step 3: Remove the right door (550-sheet paper feeder)

- ▲ Release one tab (callout 1), and then slide the right door (callout 2) up to remove it


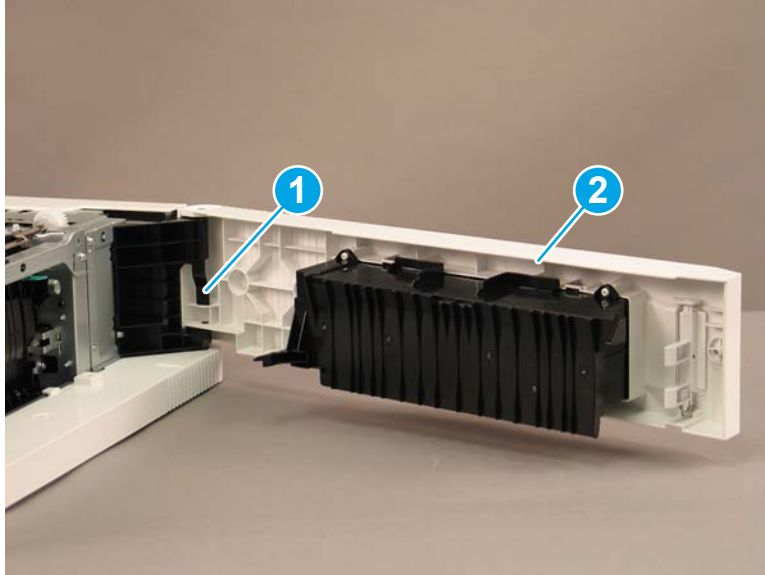
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2141 Release one tab and remove the right door




**Step 4: Remove the right lower cover (550-sheet paper feeder)**

1. Remove the 550-sheet paper feeder tray.
2. Remove two screws (callout 1), and then remove the front inner cover (callout 2).


Figure 1-2142 Remove two screws and the front inner cover

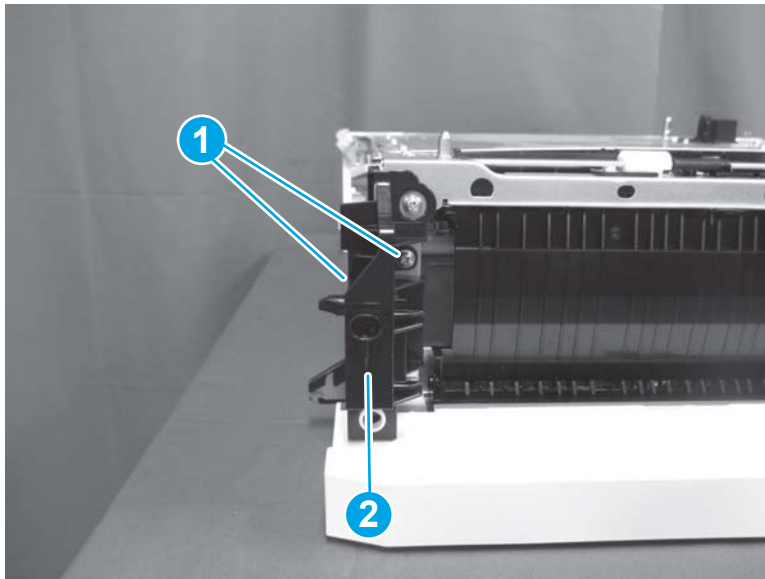

3. Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the front of the paper feeder to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2143** Remove the right lower cover

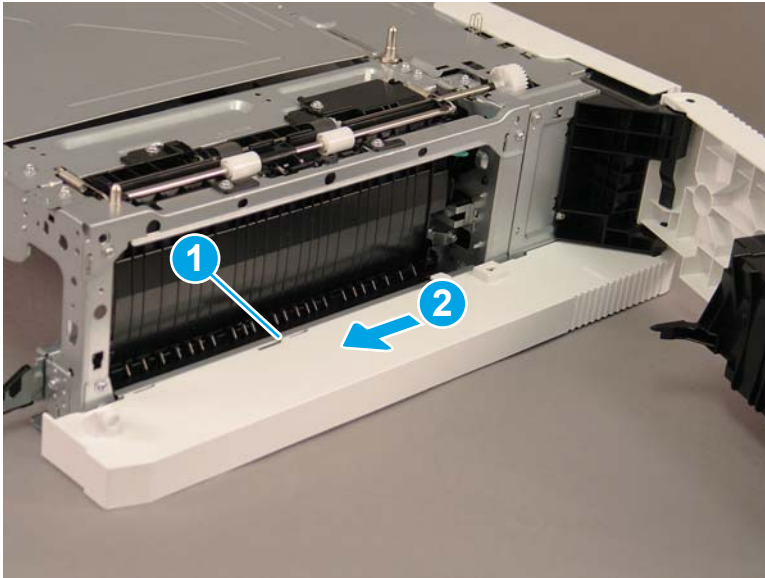

#### Step 5: Remove the drive assembly


1. Remove two screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2144** Remove two screws and the hinge

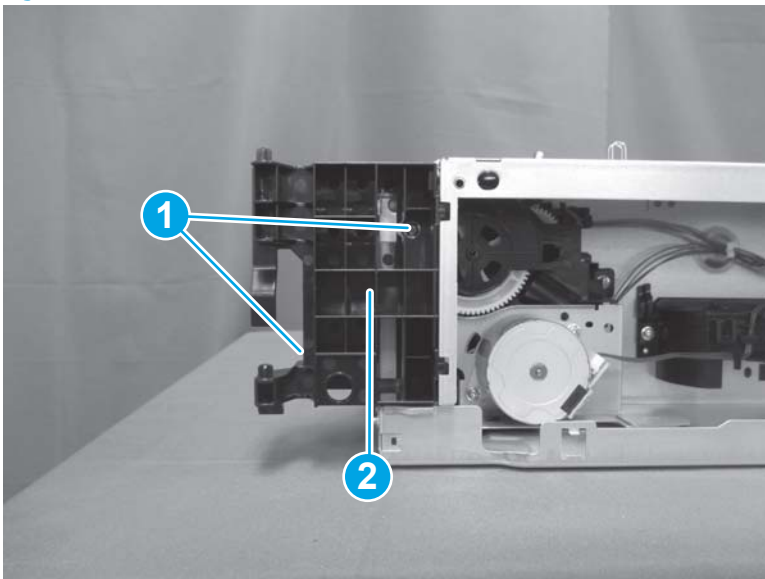

2. Remove four screws (callout 1), and then remove the plate (callout 2).

Figure 1-2145 Remove four screws and the plate

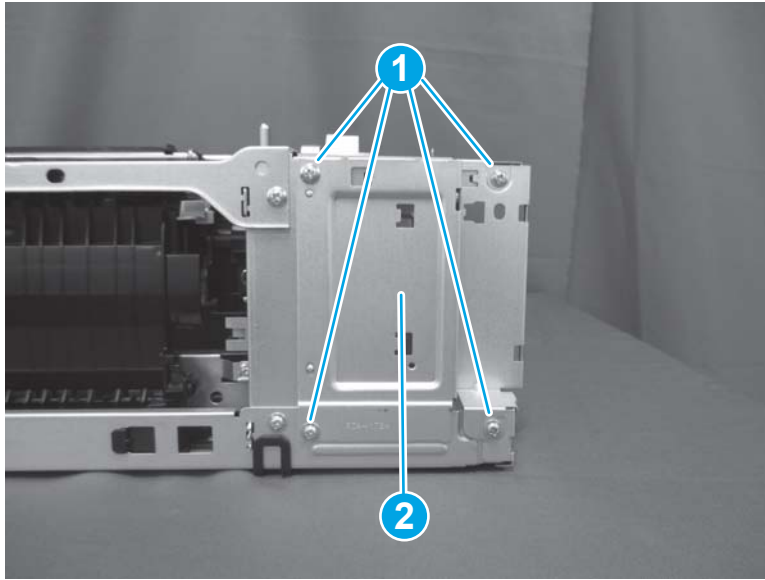

3. Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the drive assembly (callout 3).


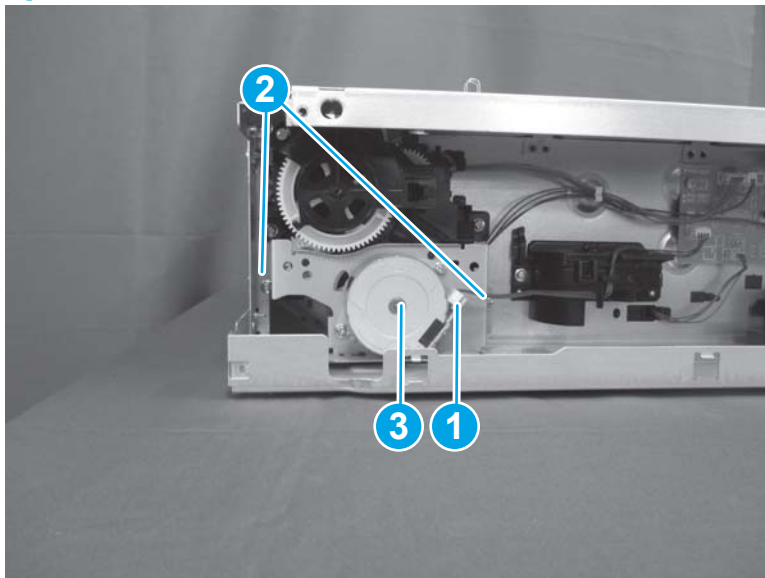
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2146 Remove two screws and the drive assembly



### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Lifter drive assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 3: Remove the right door \(550-sheet paper feeder\)](#)
- [Step 4: Remove the right lower cover \(550-sheet paper feeder\)](#)
- [Step 5: Remove the drive assembly](#)
- [Step 6: Remove the lifter drive assembly](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lifter drive assembly in the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Lifter drive assembly (550-sheet paper feeder) part number	
RM2-6933-000CN	Lifter drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.


### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2147 Remove the rear cover

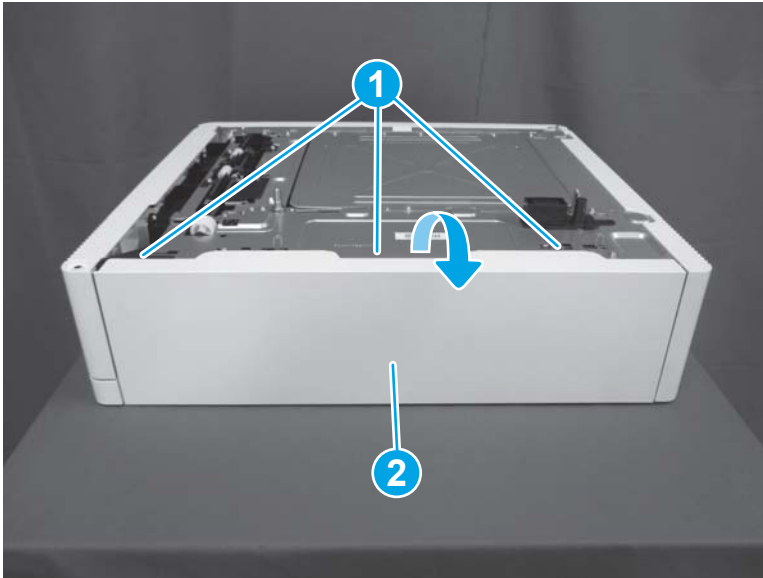

### Step 2: Remove the right door link (550-sheet paper feeder)


1. Open the right door.



2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2148** Release the link from the door

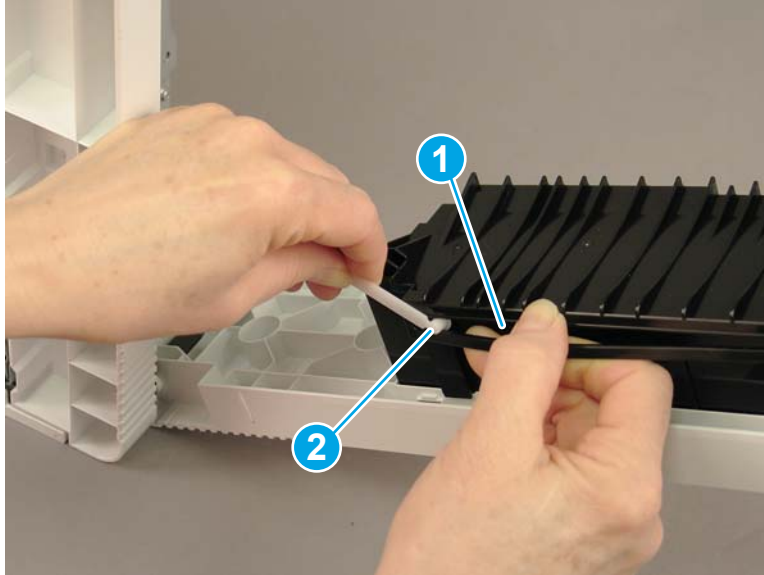

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2149** Remove the link

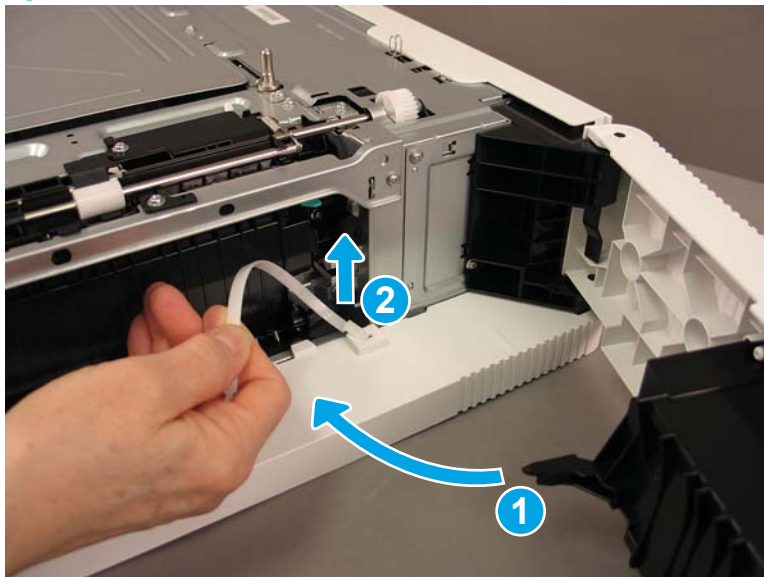

### Step 3: Remove the right door (550-sheet paper feeder)

- ▲ Release one tab (callout 1), and then slide the right door (callout 2) up to remove it


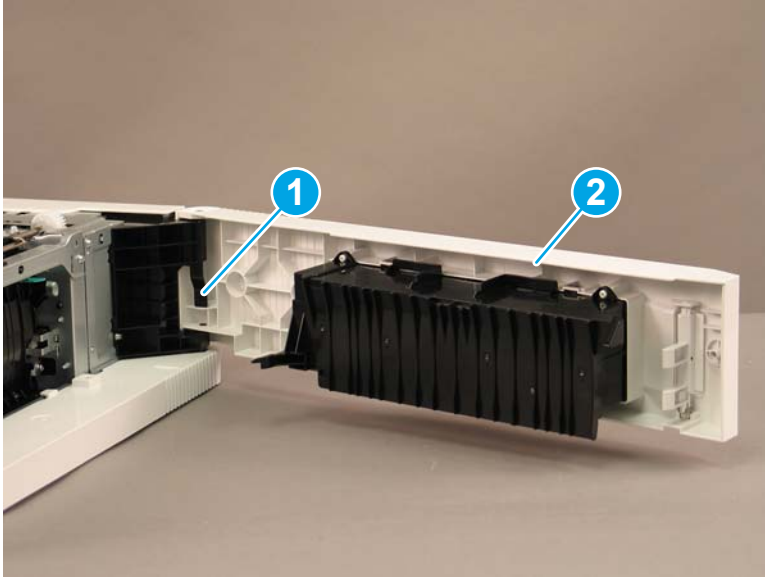
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2150 Release one tab and remove the right door




Step 4: Remove the right lower cover (550-sheet paper feeder)

1. Remove the 550-sheet paper feeder tray.
2. Remove two screws (callout 1), and then remove the front inner cover (callout 2).


Figure 1-2151 Remove two screws and the front inner cover

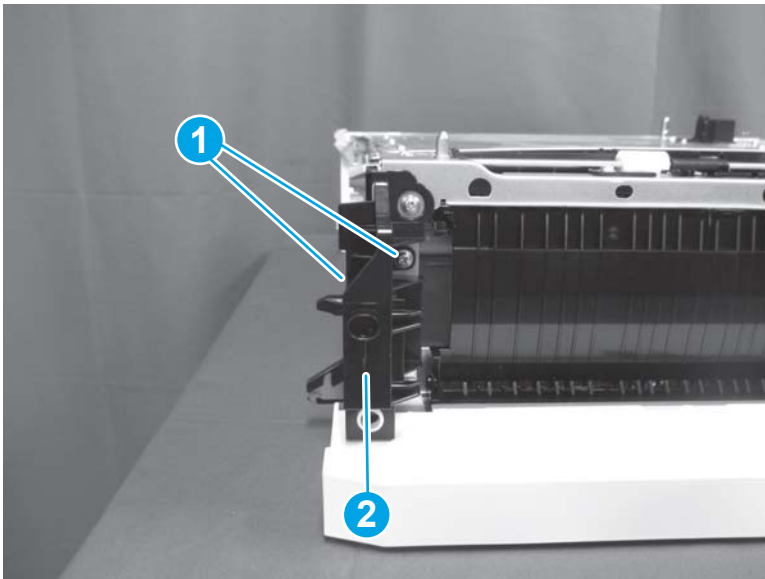

3. Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the front of the paper feeder to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2152** Remove the right lower cover

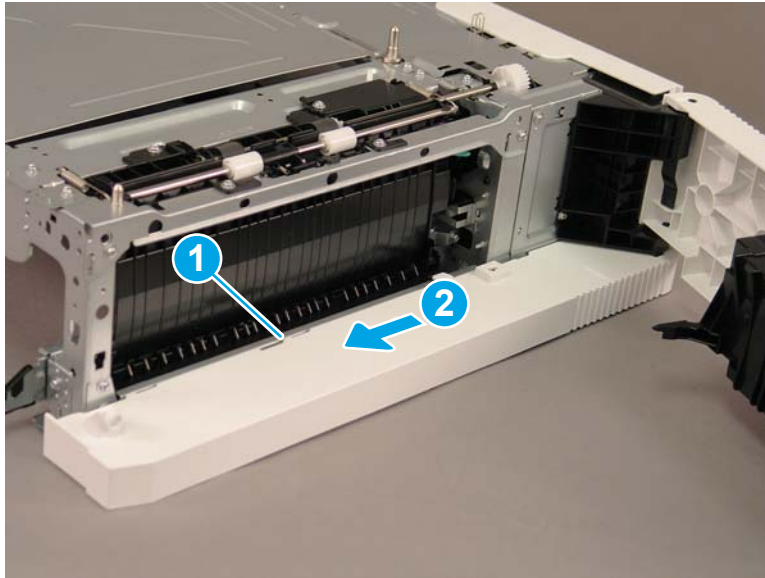

#### Step 5: Remove the drive assembly


1. Remove two screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2153** Remove two screws and the hinge

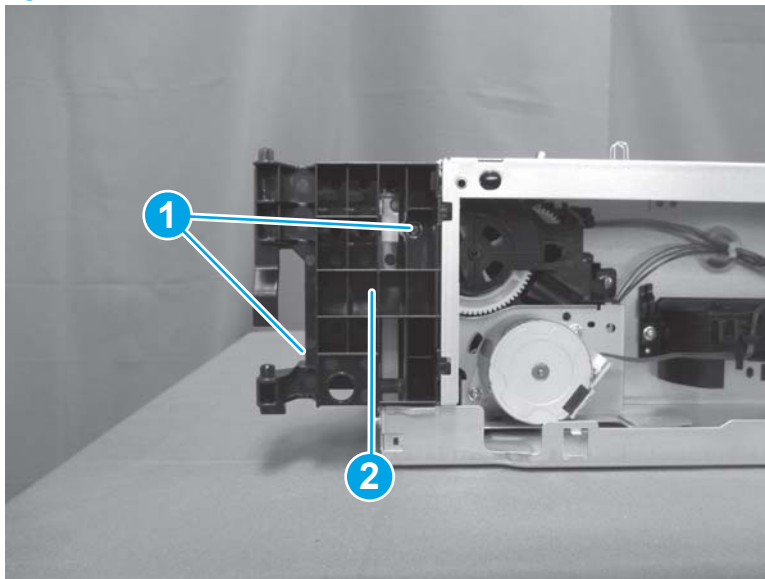

2. Remove four screws (callout 1), and then remove the plate (callout 2).

Figure 1-2154 Remove four screws and the plate

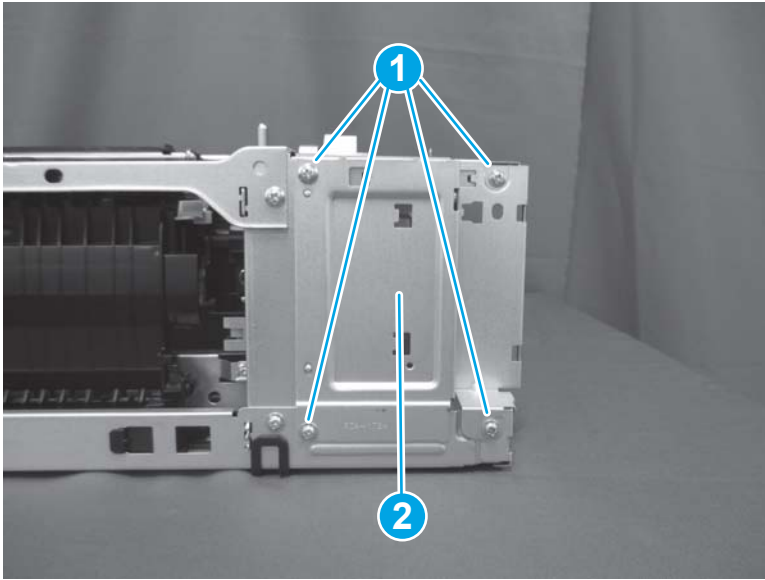

3. Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the drive assembly (callout 3).


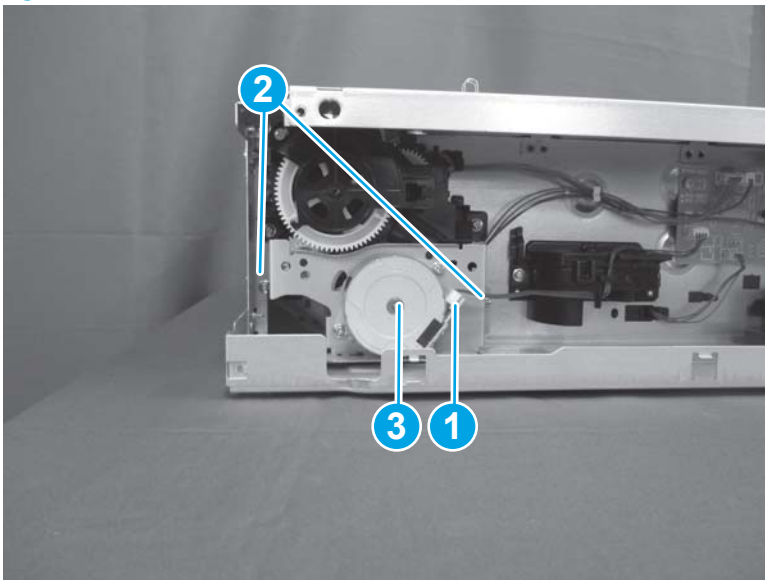
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2155 Remove two screws and the drive assembly



### Step 6: Remove the lifter drive assembly


1. Disconnect one connector (callout 1).

Figure 1-2156 Disconnect one connector

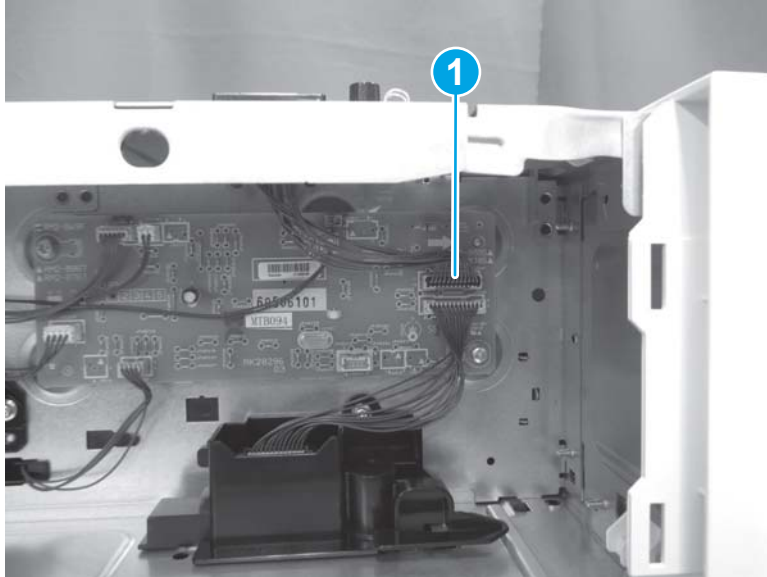


2. Remove four screws (callout 1), and then remove the right upper plate (callout 2).

Figure 1-2157 Remove four screws and the plate

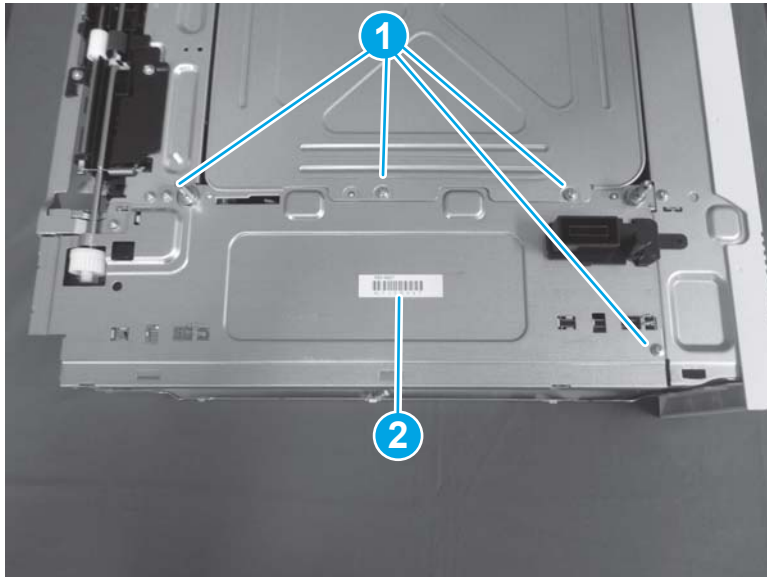


3. Disconnect three connectors (callout 1), and then release the cables (callout 2) from the guides (callout 3).

Figure 1-2158 Disconnect three connectors

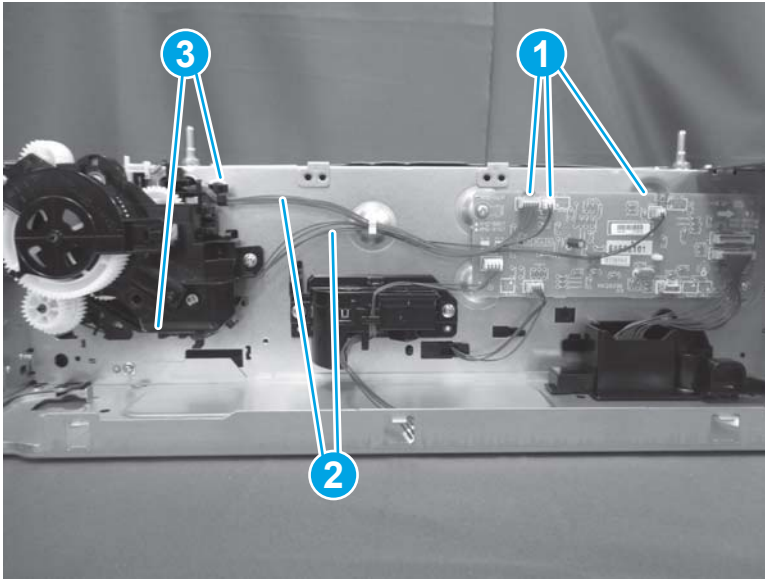


4. Remove two screws (callout 1), release three tabs (callout 2), and then remove the lifter drive assembly (callout 3).


Figure 1-2159 Remove two screws and the lifter drive assembly

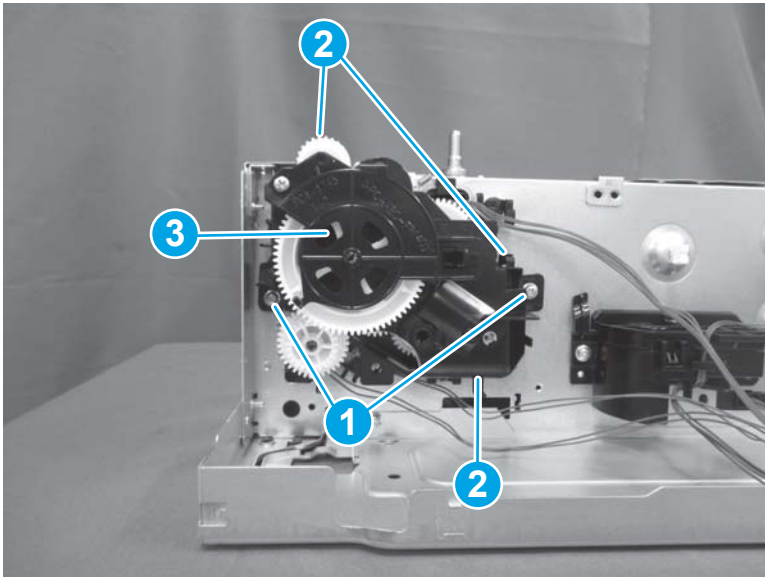

5. Remove one screw (callout 1). Remove the lifter drive frame (callout 2) and three gears (callout 3) from the lifter drive assembly (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2160** Remove the lifter drive frame and gears

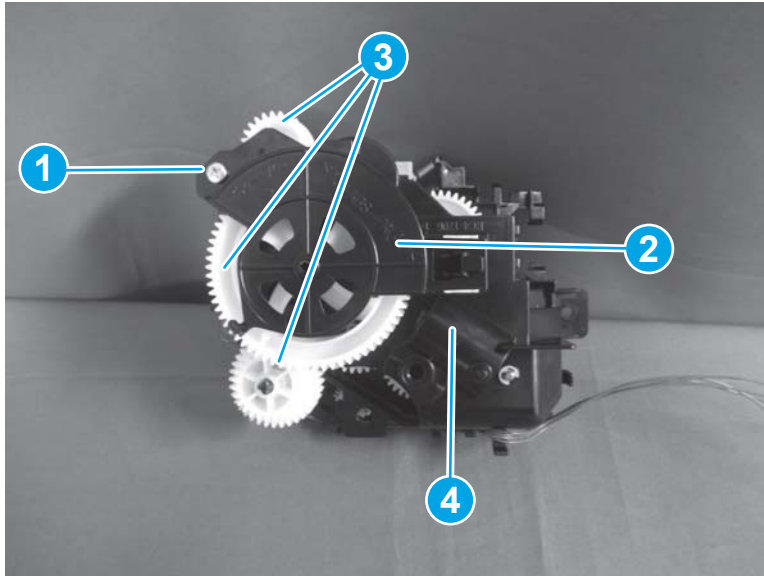



### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.



## Removal and replacement: Paper feed assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 3: Remove the right door \(550-sheet paper feeder\)](#)
- [Step 4: Remove the right lower cover \(550-sheet paper feeder\)](#)
- [Step 5: Remove the drive assembly](#)
- [Step 6: Remove the lifter drive assembly](#)
- [Step 7: Remove the paper feed assembly](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper feed assembly in the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Paper feed assembly (550-sheet paper feeder) part number	
RM2-5145-000CN	Paper feed assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2161 Remove the rear cover

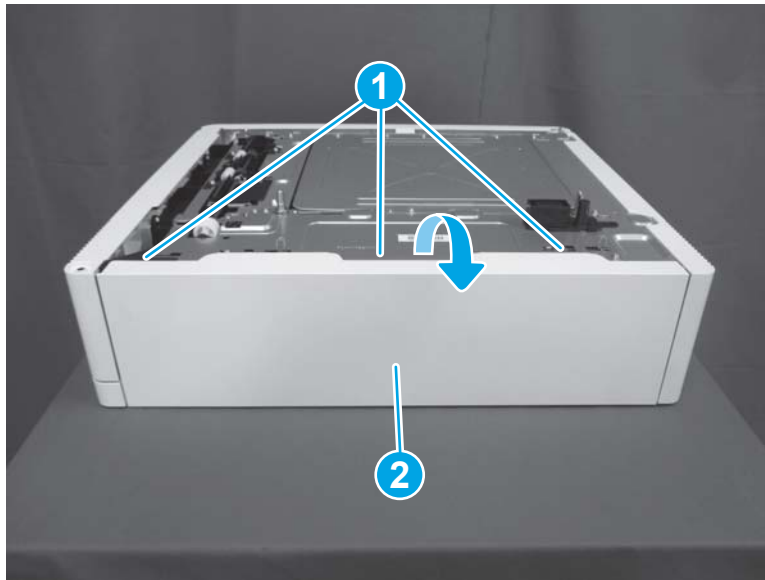


### Step 2: Remove the right door link (550-sheet paper feeder)

1. Open the right door.

2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2162** Release the link from the door

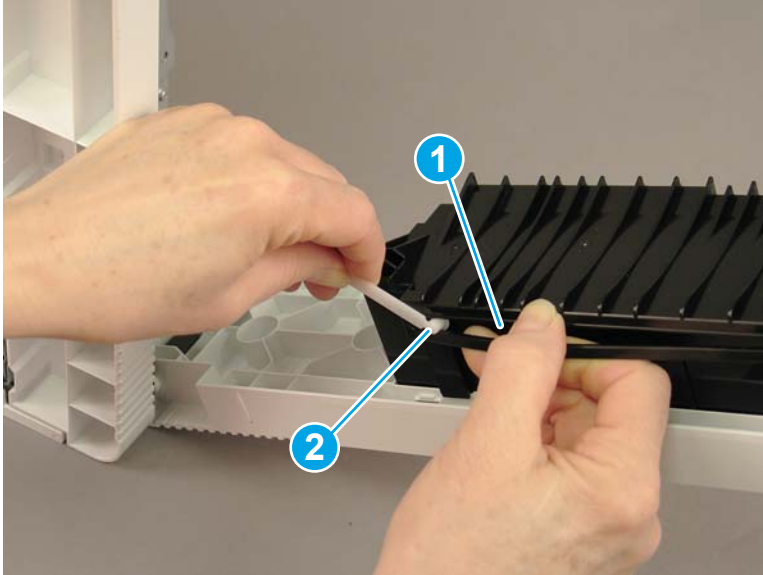

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2163** Remove the link

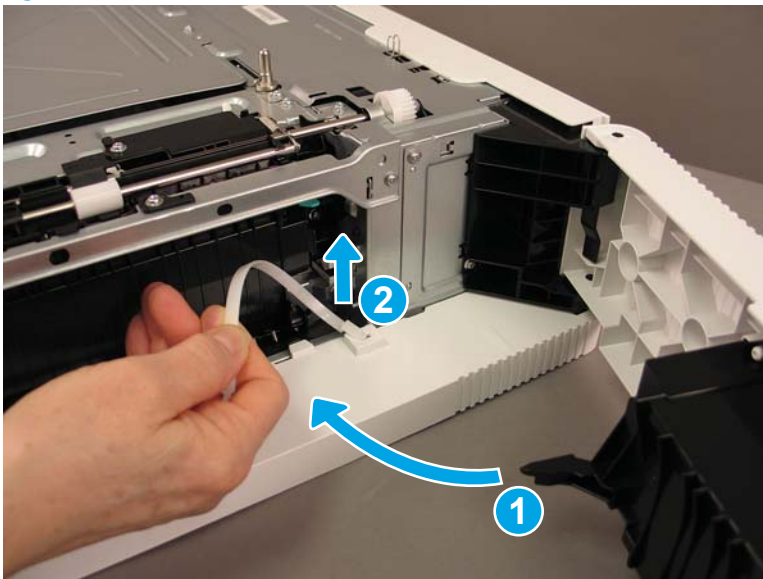

### Step 3: Remove the right door (550-sheet paper feeder)

- ▲ Release one tab (callout 1), and then slide the right door (callout 2) up to remove it


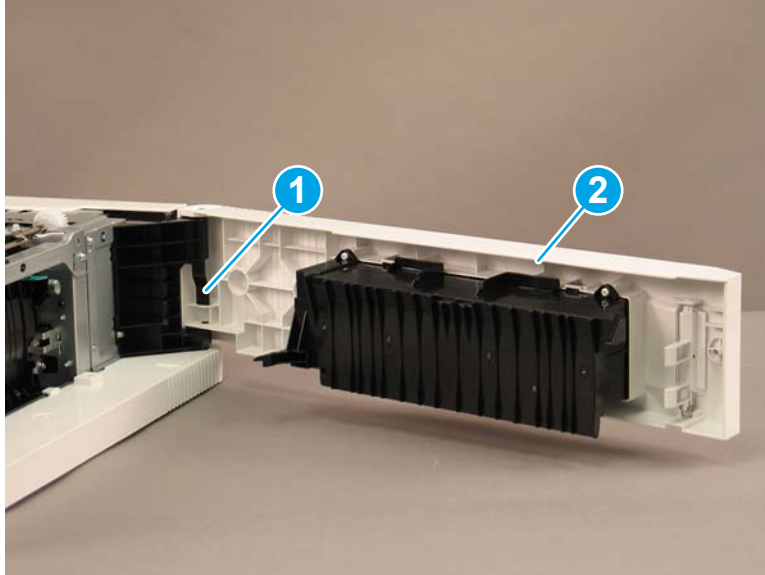
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2164 Release one tab and remove the right door




**Step 4: Remove the right lower cover (550-sheet paper feeder)**

1. Remove the 550-sheet paper feeder tray.
2. Remove two screws (callout 1), and then remove the front inner cover (callout 2).


Figure 1-2165 Remove two screws and the front inner cover

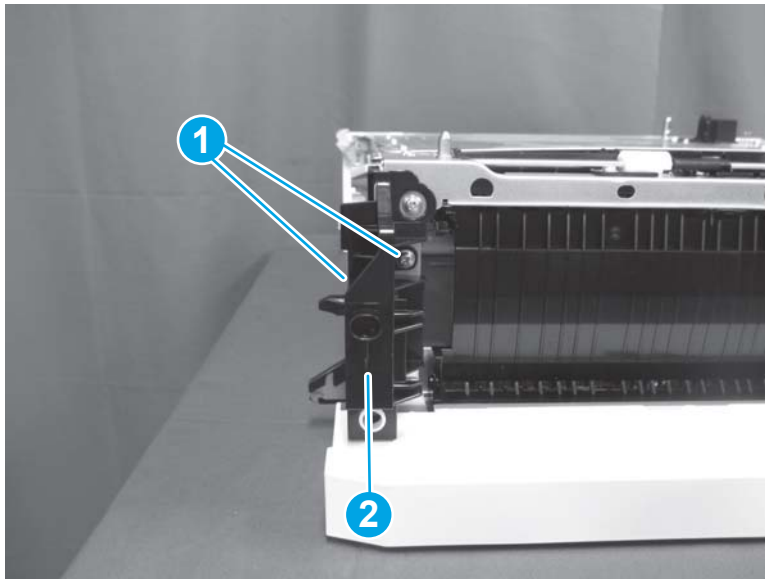

3. Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the front of the paper feeder to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2166** Remove the right lower cover

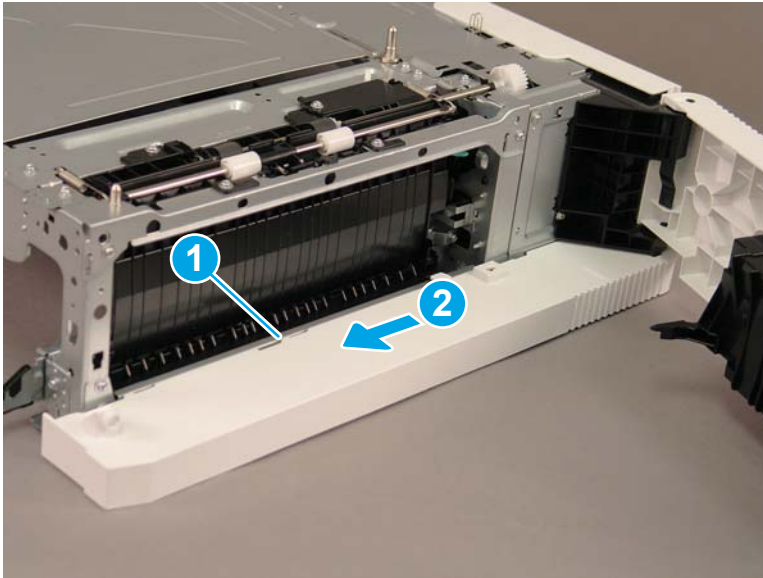

#### Step 5: Remove the drive assembly


1. Remove two screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2167** Remove two screws and the hinge

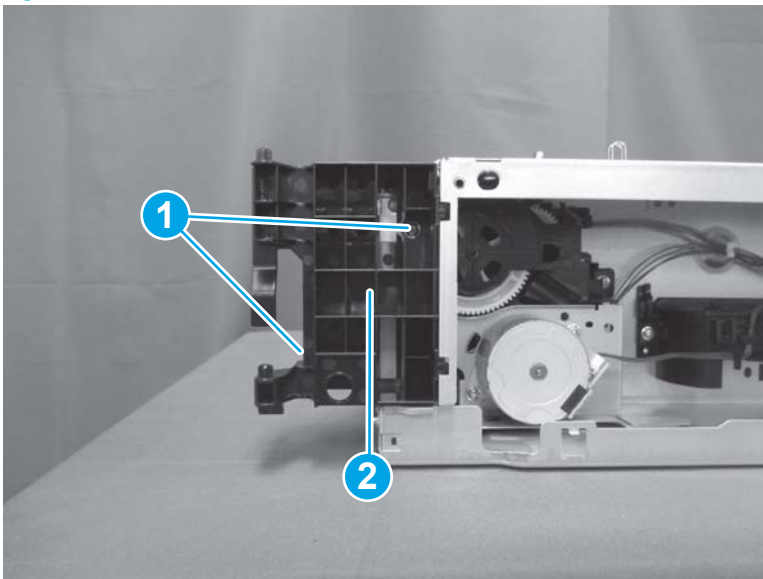

2. Remove four screws (callout 1), and then remove the plate (callout 2).


Figure 1-2168 Remove four screws and the plate

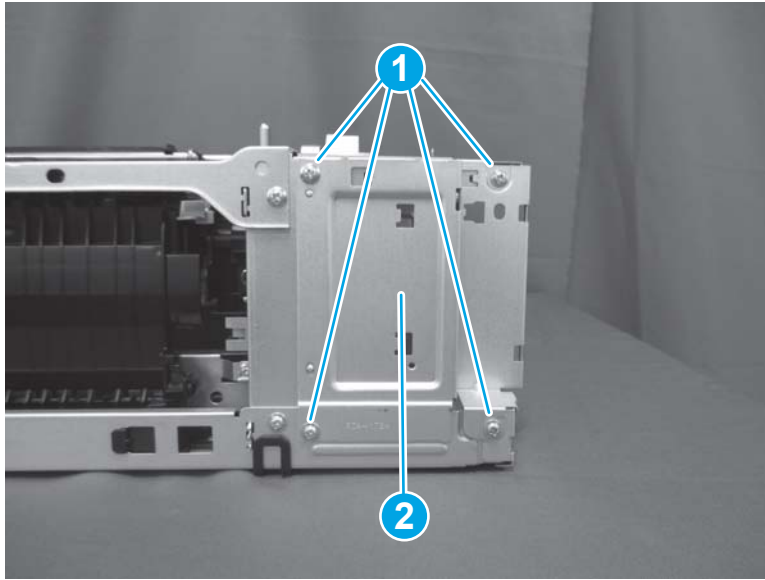

3. Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the drive assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2169 Remove two screws and the drive assembly

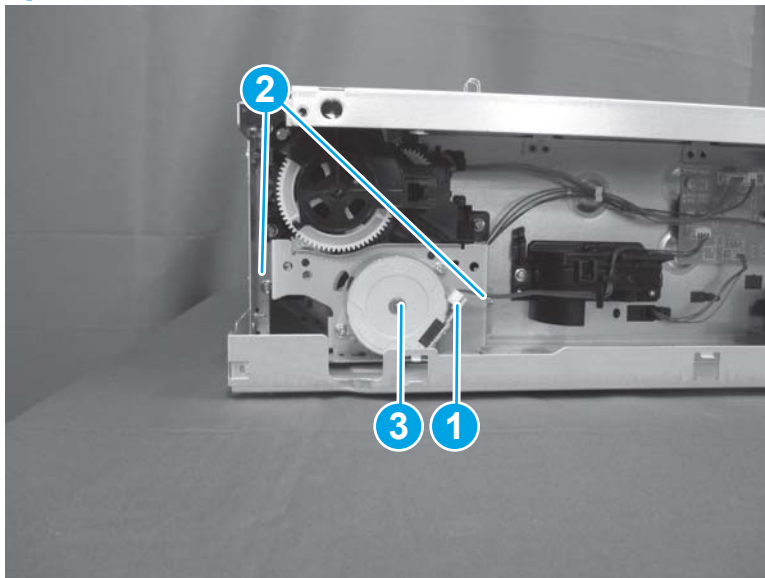

### Step 6: Remove the lifter drive assembly


1. Disconnect one connector (callout 1).

Figure 1-2170 Disconnect one connector

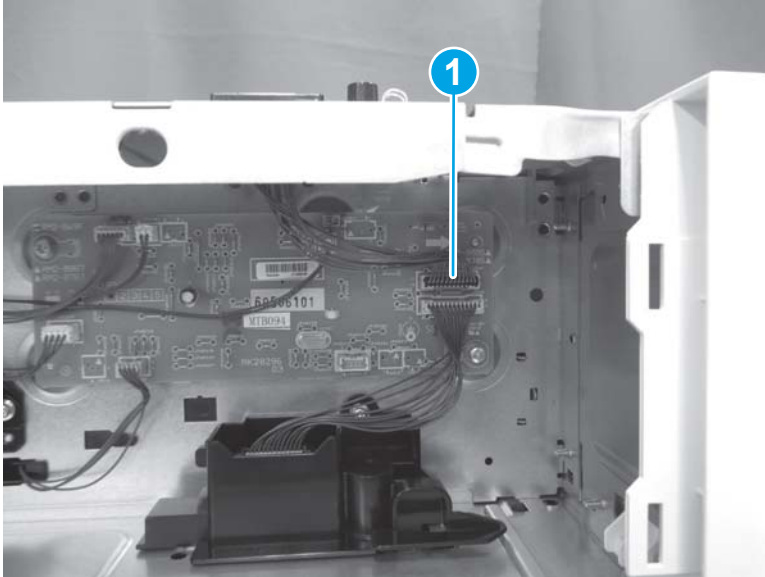

2. Remove four screws (callout 1), and then remove the right upper plate (callout 2).


Figure 1-2171 Remove four screws and the plate

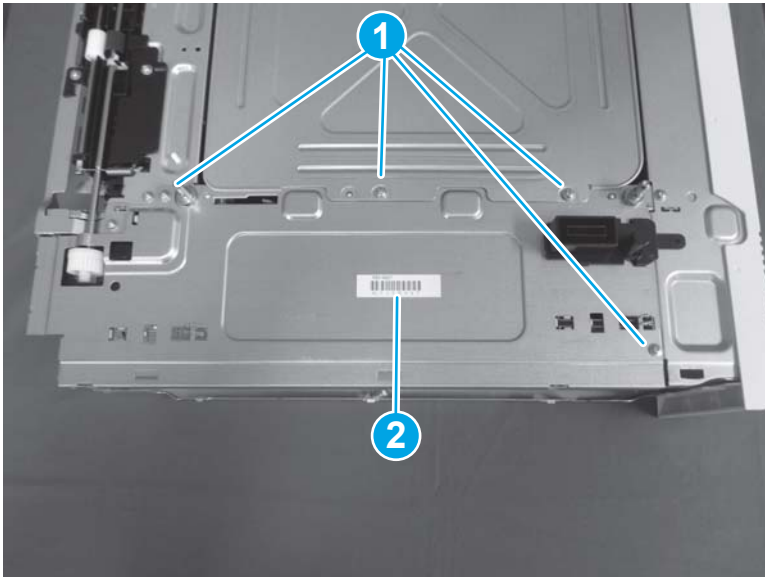




3. Disconnect three connectors (callout 1), and then release the cables (callout 2) from the guides (callout 3).

Figure 1-2172 Disconnect three connectors

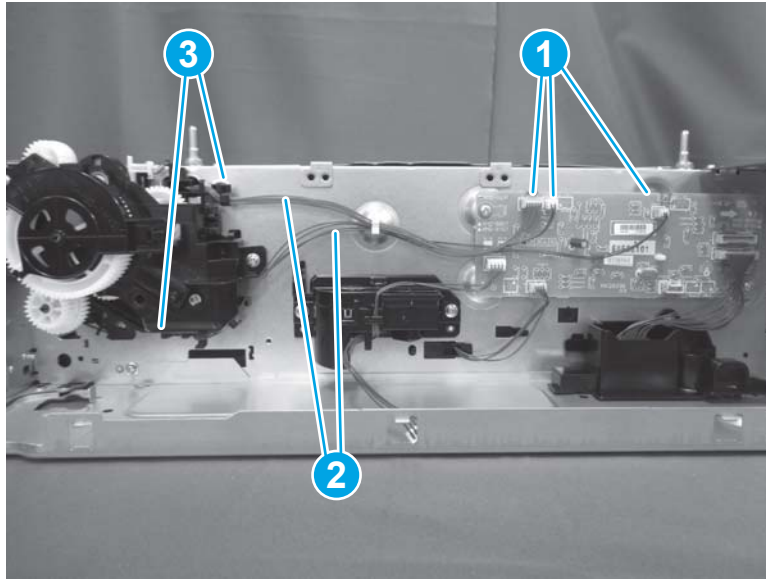


4. Remove two screws (callout 1), release three tabs (callout 2), and then remove the lifter drive assembly (callout 3).


Figure 1-2173 Remove two screws and the lifter drive assembly

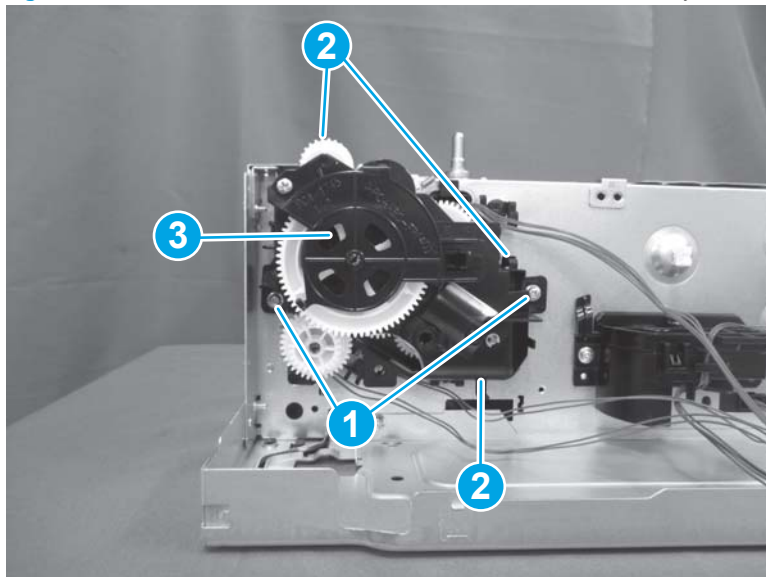

5. Remove one screw (callout 1). Remove the lifter drive frame (callout 2) and three gears (callout 3) from the lifter drive assembly (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2174** Remove the lifter drive frame and gears

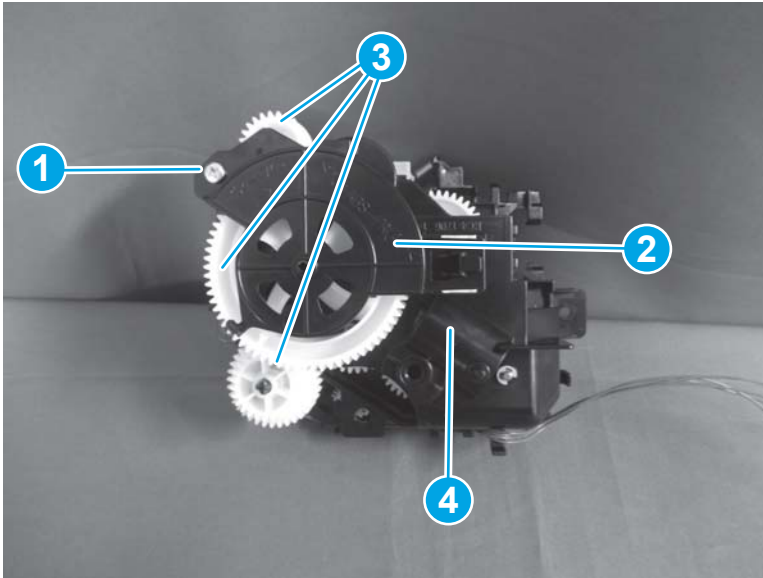

### Step 7: Remove the paper feed assembly


1. Pull the jam removal lever (callout 1), and then open the feed guide (callout 2).

**Figure 1-2175** Open the feed guide

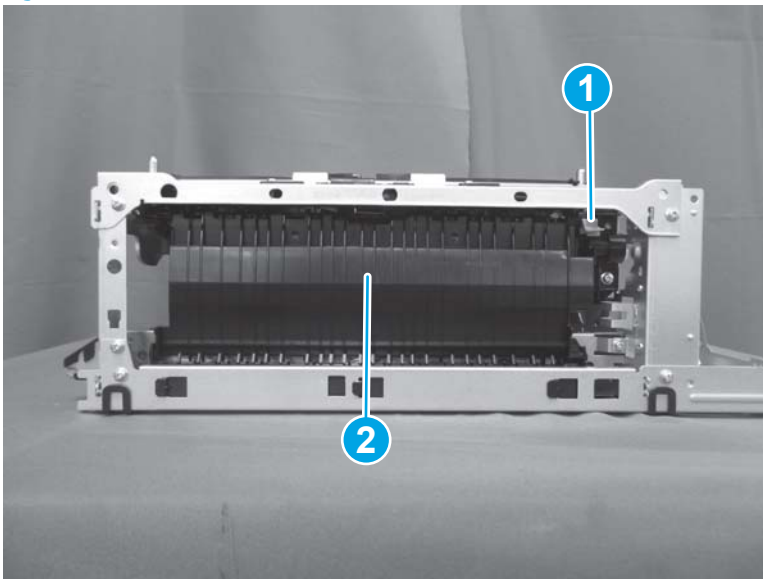

2. Remove one screw (callout 1), release one tab (callout 2), and then remove the connector cover (callout 3).

Figure 1-2176 Remove one screw and the connector cover

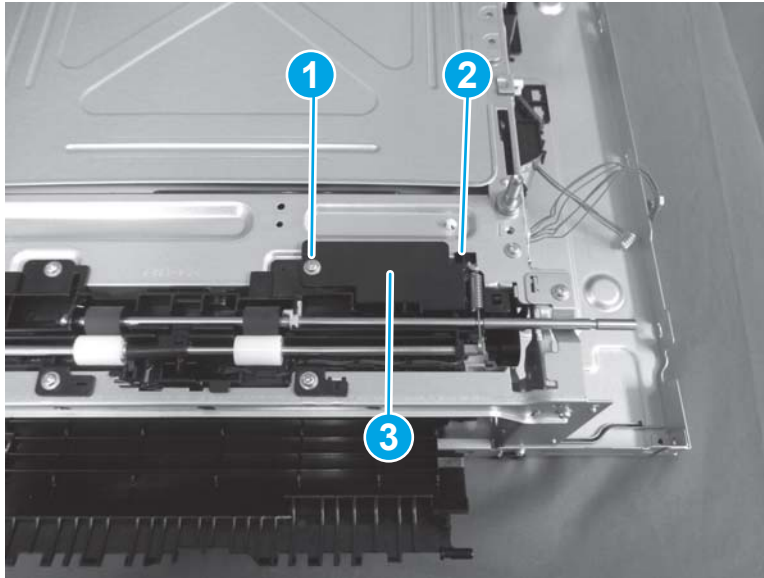


3. Disconnect one connector (callout 1), and then unhook two springs (callout 2). Remove three screws (callout 3), and then remove the paper feed assembly (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2177 Remove the paper feed assembly

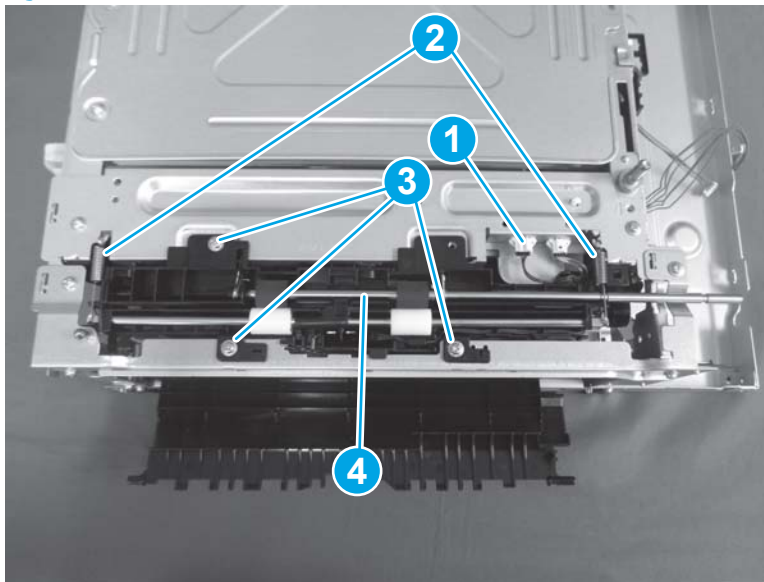

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Paper pickup assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the right door link \(550-sheet paper feeder\)](#)
- [Step 3: Remove the right door \(550-sheet paper feeder\)](#)
- [Step 4: Remove the right lower cover \(550-sheet paper feeder\)](#)
- [Step 5: Remove the drive assembly](#)
- [Step 6: Remove the lifter drive assembly](#)
- [Step 7: Remove the paper feed assembly](#)
- [Step 8: Remove the paper pickup assembly](#)
- [Step 9: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper pickup assembly in the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Paper pickup assembly (550-sheet paper feeder) part number	
RM2-5154-000CN	Paper pickup assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

## Post service test


Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2178 Remove the rear cover

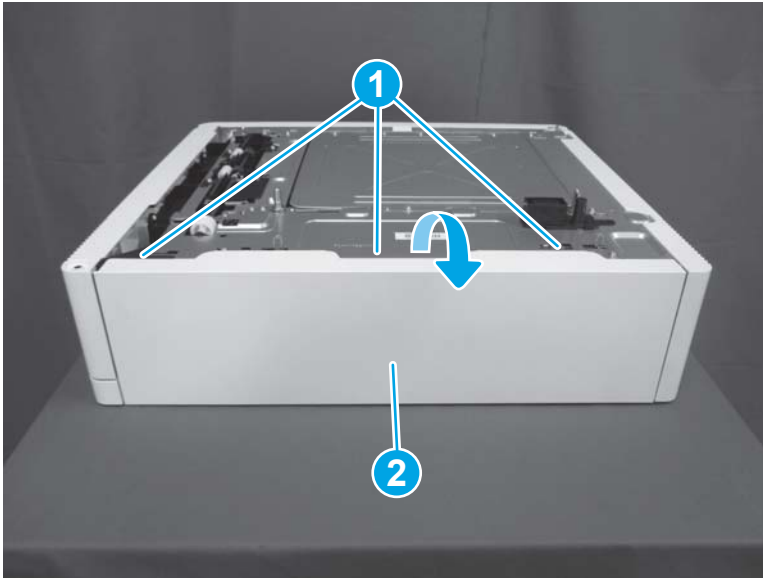


### Step 2: Remove the right door link (550-sheet paper feeder)

1. Open the right door.

2. Slightly flex the slot in the lower edge of the right door (callout 1) and release the end of the link (callout 2) from the door.


 **TIP:** Position the paper feeder with the back side facing down on a flat surface to allow easier access to the lower edge of the door.

**Figure 1-2179** Release the link from the door

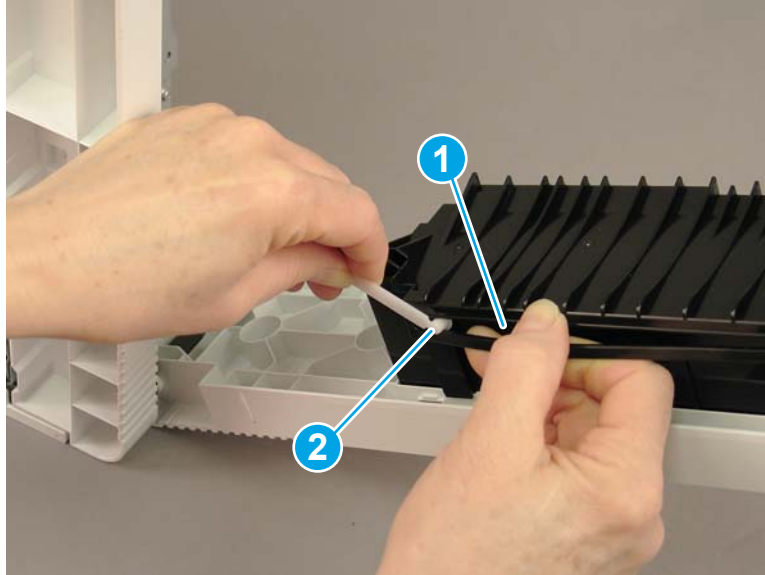

3. Rotate the link so that the tab on the link (callout 1) aligns with the opening in the paper feeder. Lift the link up (callout 2) to remove it.

**Figure 1-2180** Remove the link

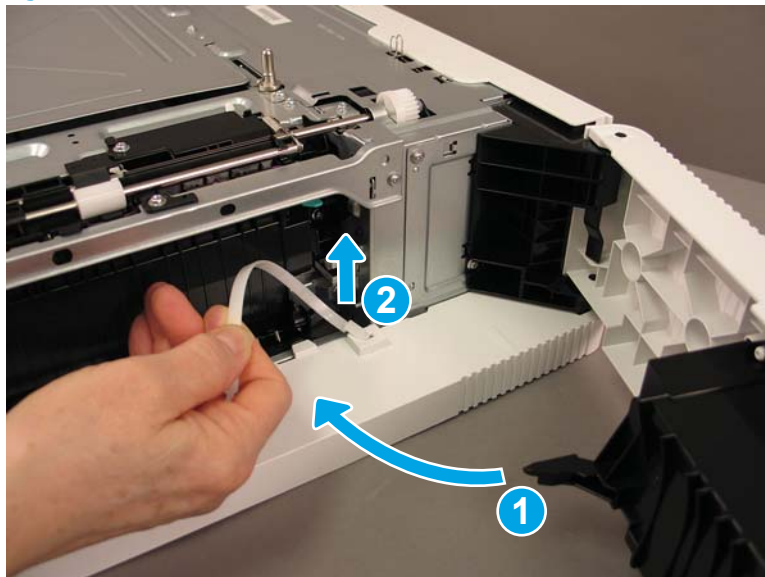

### Step 3: Remove the right door (550-sheet paper feeder)

- ▲ Release one tab (callout 1), and then slide the right door (callout 2) up to remove it


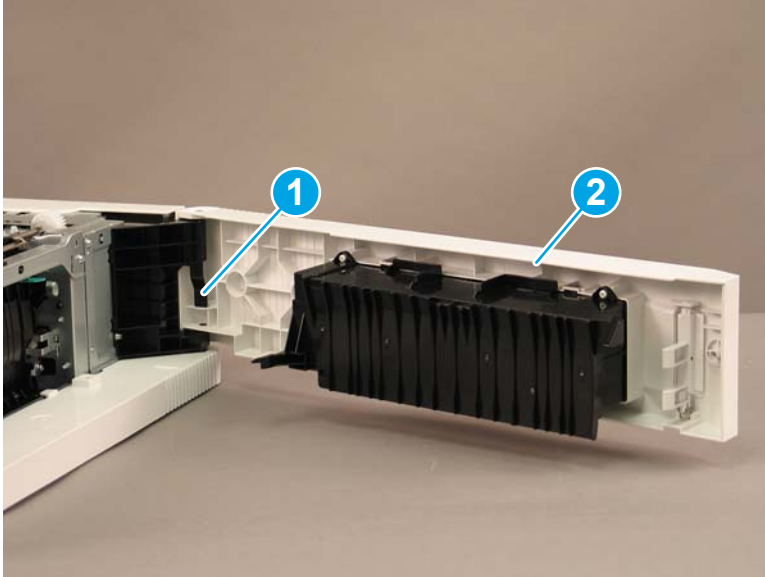
 **Reinstallation tip:** Reverse the removal steps to install the assembly.




Figure 1-2181 Release one tab and remove the right door




Step 4: Remove the right lower cover (550-sheet paper feeder)

1. Remove the 550-sheet paper feeder tray.
2. Remove two screws (callout 1), and then remove the front inner cover (callout 2).


Figure 1-2182 Remove two screws and the front inner cover

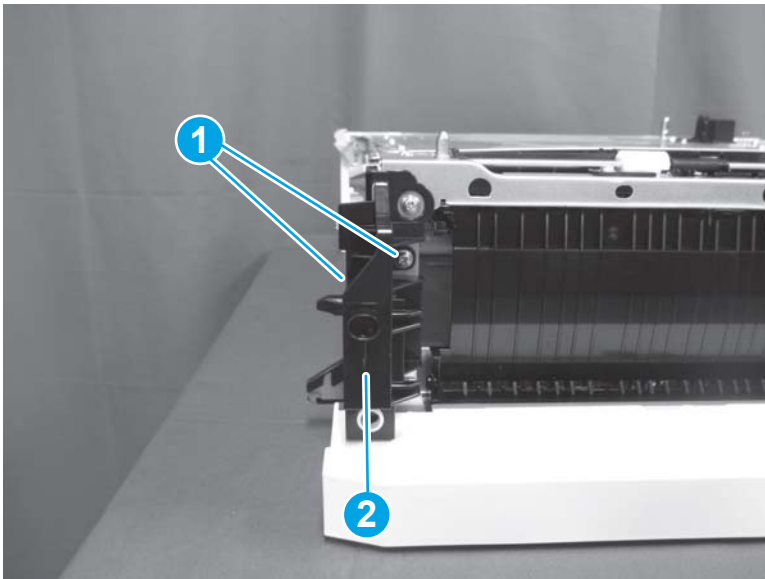

3. Release one tab (callout 1), and then slide the right lower cover (callout 2) toward the front of the paper feeder to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2183** Remove the right lower cover

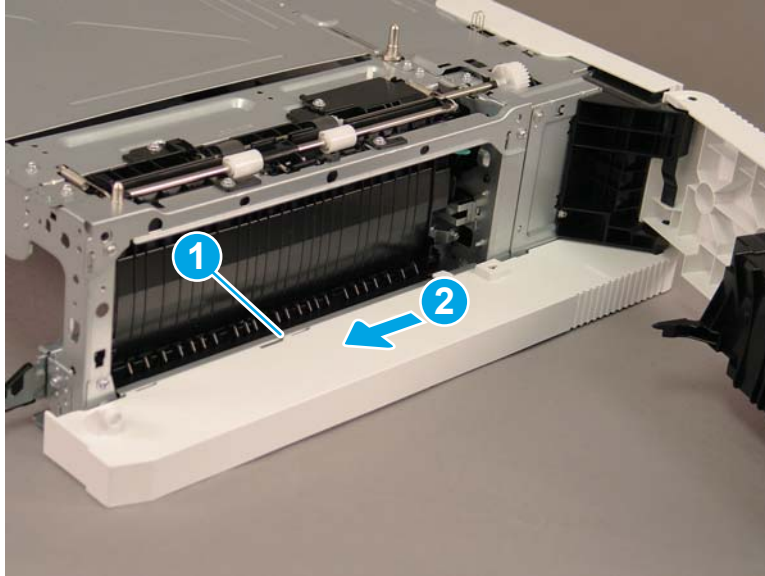

#### Step 5: Remove the drive assembly


1. Remove two screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2184** Remove two screws and the hinge

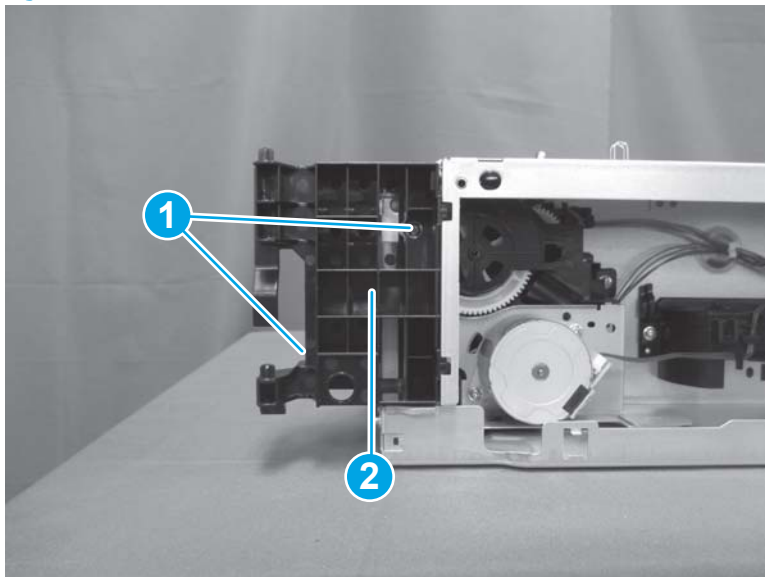

2. Remove four screws (callout 1), and then remove the plate (callout 2).

Figure 1-2185 Remove four screws and the plate

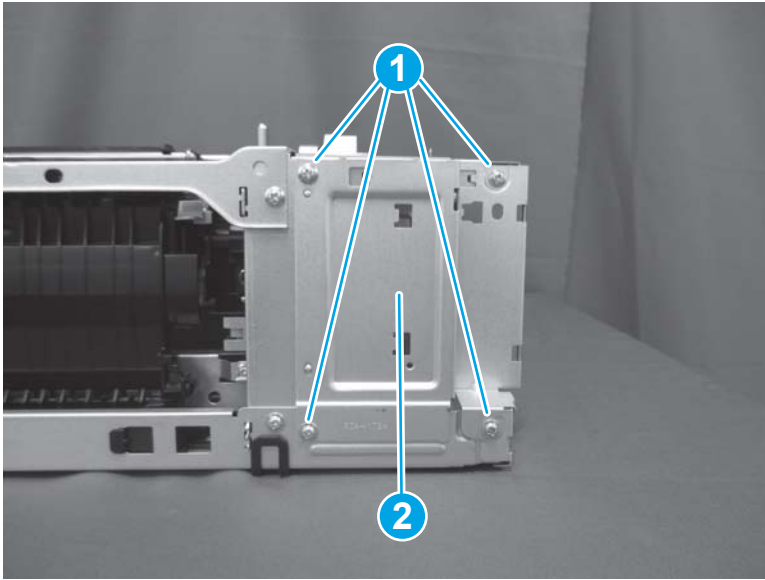

3. Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the drive assembly (callout 3).


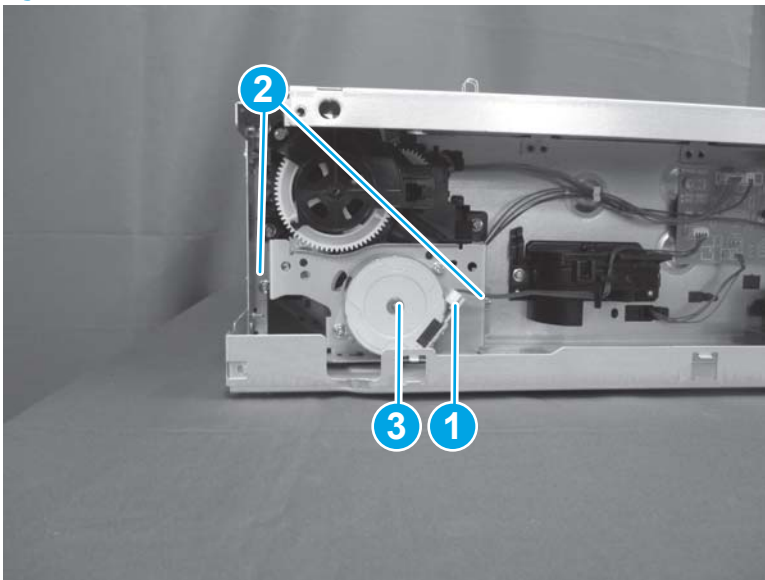
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2186 Remove two screws and the drive assembly



### Step 6: Remove the lifter drive assembly


1. Disconnect one connector (callout 1).

Figure 1-2187 Disconnect one connector

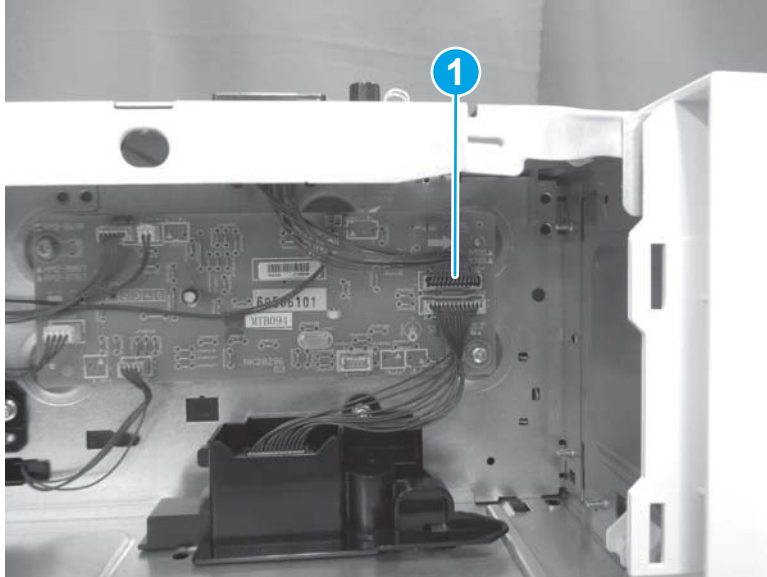


2. Remove four screws (callout 1), and then remove the right upper plate (callout 2).

Figure 1-2188 Remove four screws and the plate

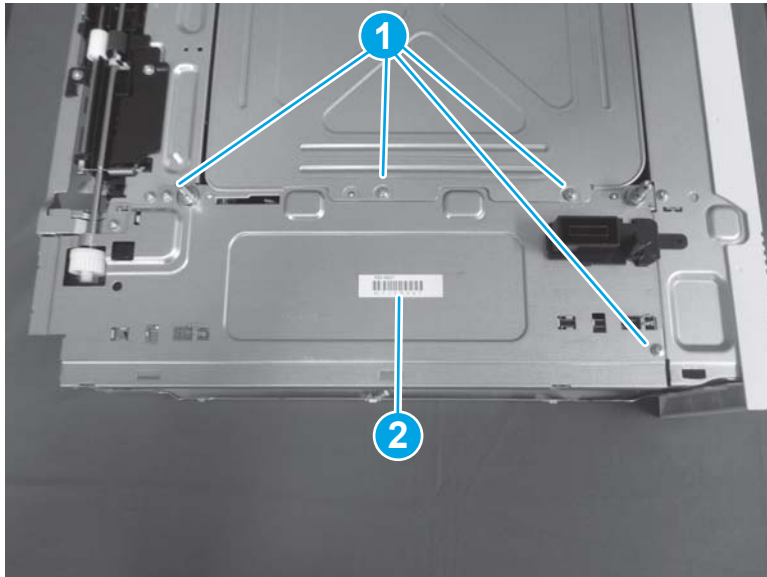


3. Disconnect three connectors (callout 1), and then release the cables (callout 2) from the guides (callout 3).

Figure 1-2189 Disconnect three connectors

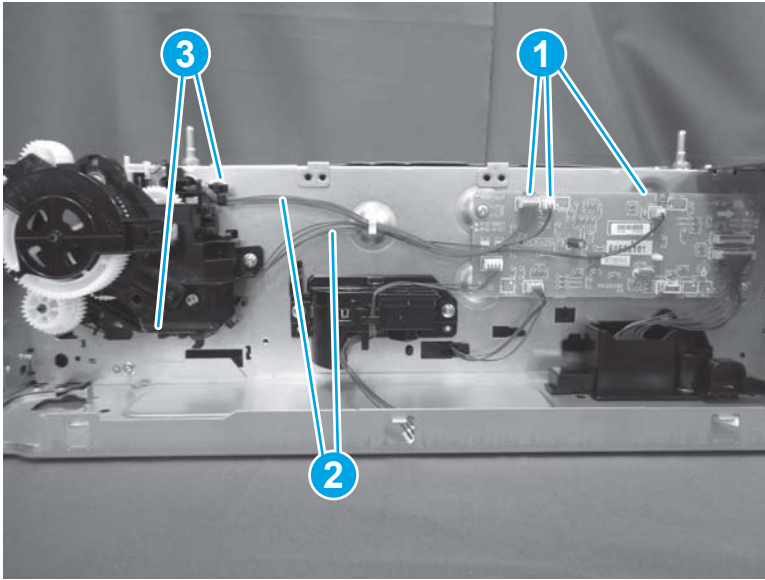


4. Remove two screws (callout 1), release three tabs (callout 2), and then remove the lifter drive assembly (callout 3).


Figure 1-2190 Remove two screws and the lifter drive assembly

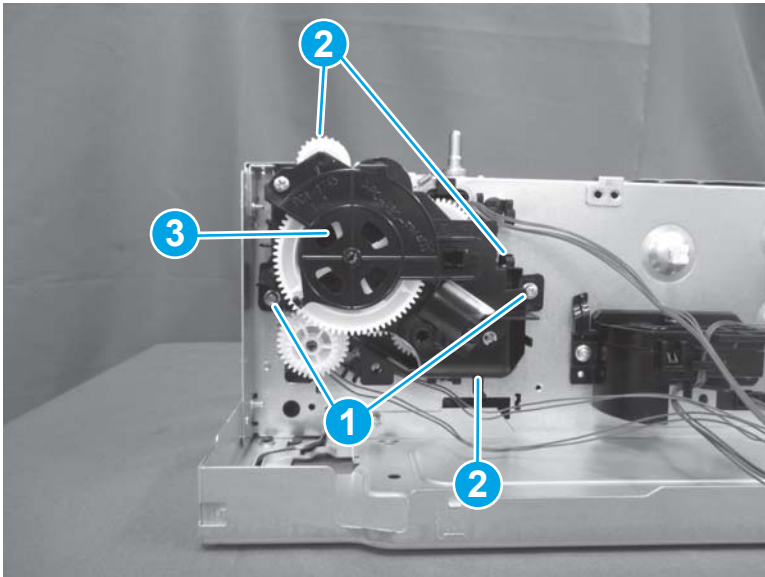

5. Remove one screw (callout 1). Remove the lifter drive frame (callout 2) and three gears (callout 3) from the lifter drive assembly (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2191** Remove the lifter drive frame and gears

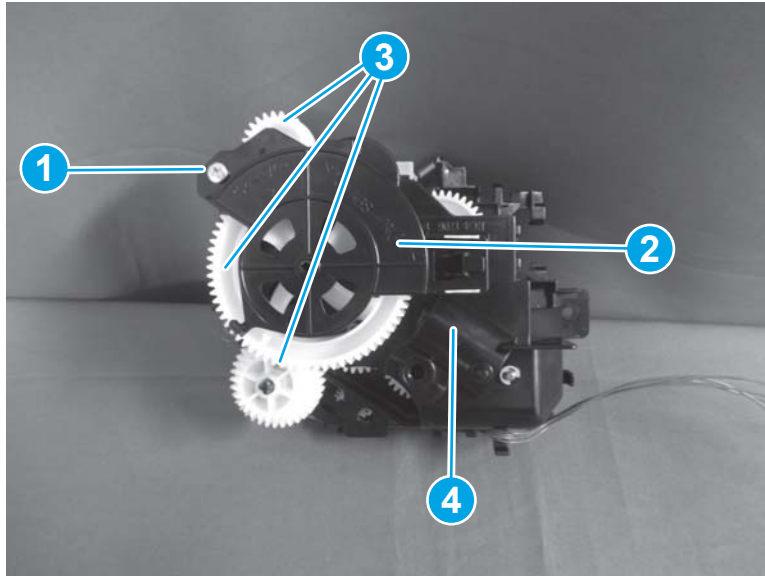

#### Step 7: Remove the paper feed assembly


1. Pull the jam removal lever (callout 1), and then open the feed guide (callout 2).

**Figure 1-2192** Open the feed guide

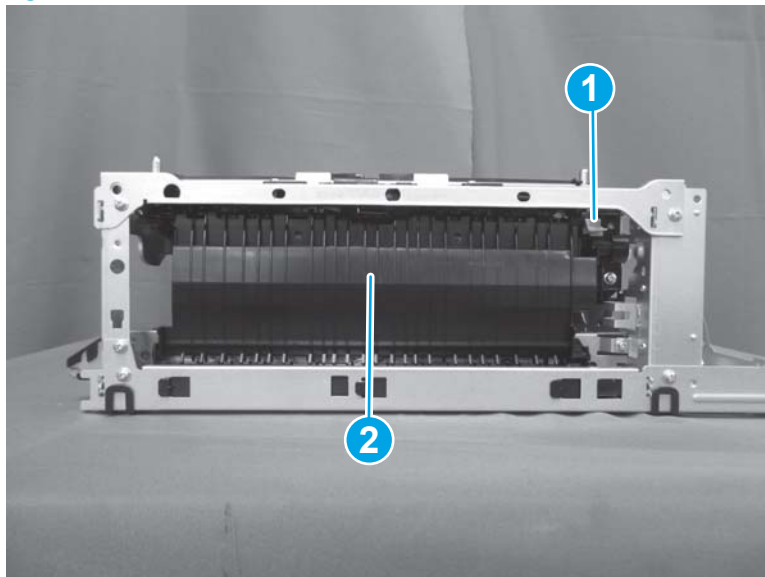

2. Remove one screw (callout 1), release one tab (callout 2), and then remove the connector cover (callout 3).

Figure 1-2193 Remove one screw and the connector cover

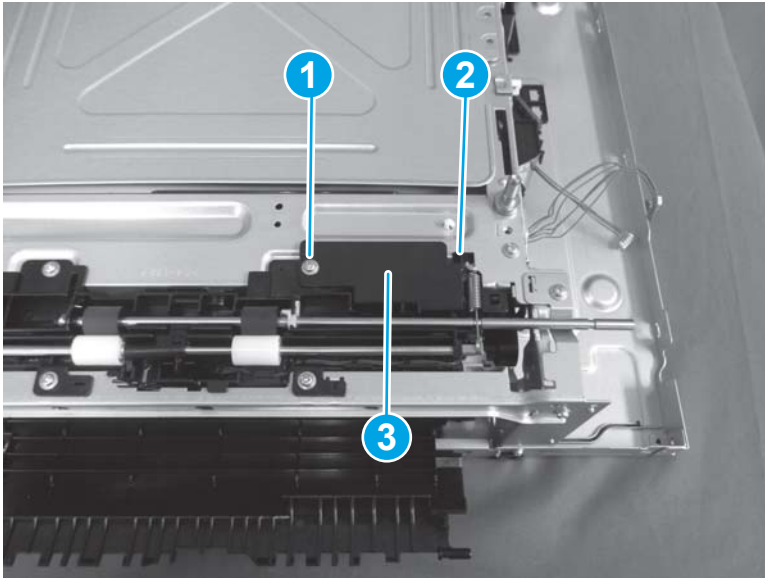


3. Disconnect one connector (callout 1), and then unhook two springs (callout 2). Remove three screws (callout 3), and then remove the paper feed assembly (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2194 Remove the paper feed assembly

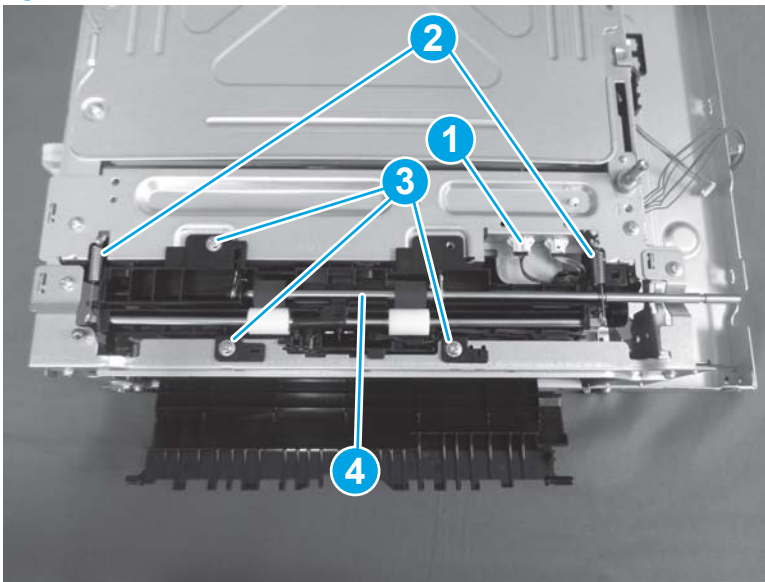


### Step 8: Remove the paper pickup assembly

1. Disconnect one connector (callout 1), remove three screws (callout 2), and then remove the paper pickup assembly (callout 3).




Figure 1-2195 Remove the paper pickup assembly

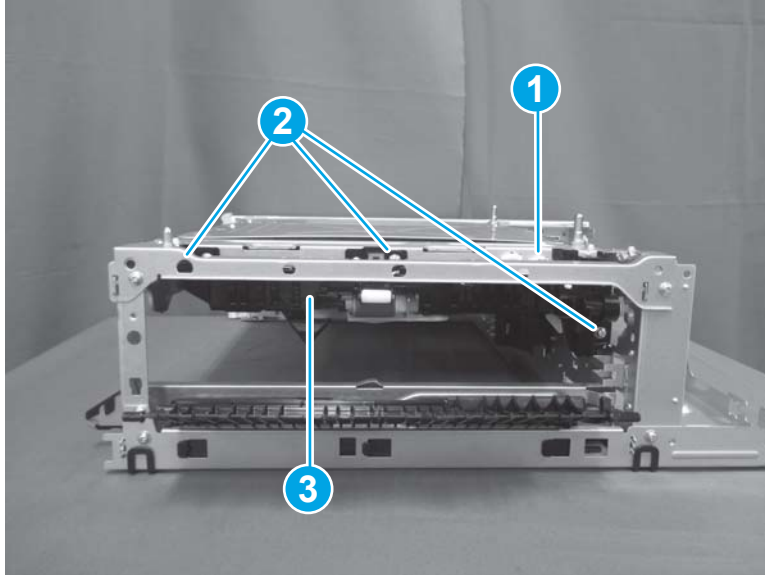

2. Remove the gear (callout 1) from the paper pickup assembly (callout 2).


---

 **Reinstallation tip:** Install the gear on the replacement paper pickup assembly.

**Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2196 Remove the gear

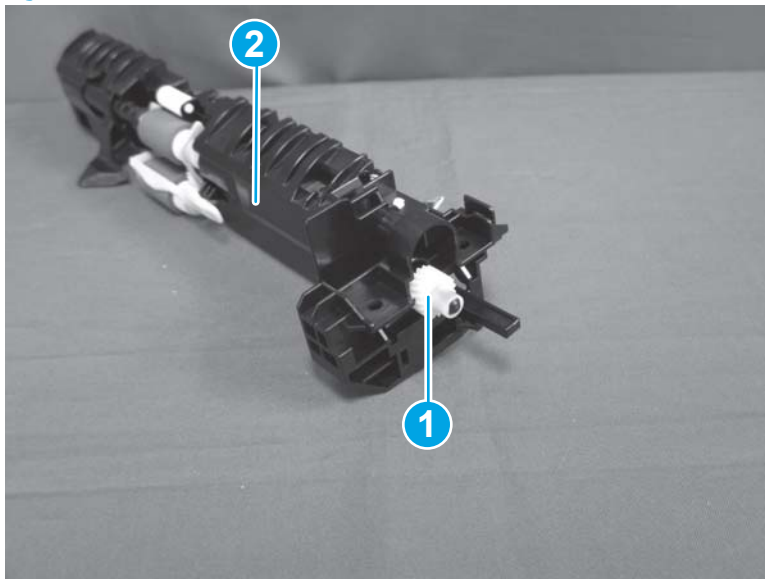

### Step 9: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Paper feeder controller PCA (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the paper feeder controller PCA \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper feeder controller PCA in the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Paper feeder controller PCA (550-sheet paper feeder) part number	
RM2-8491-000CN	Feeder controller PCB assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.


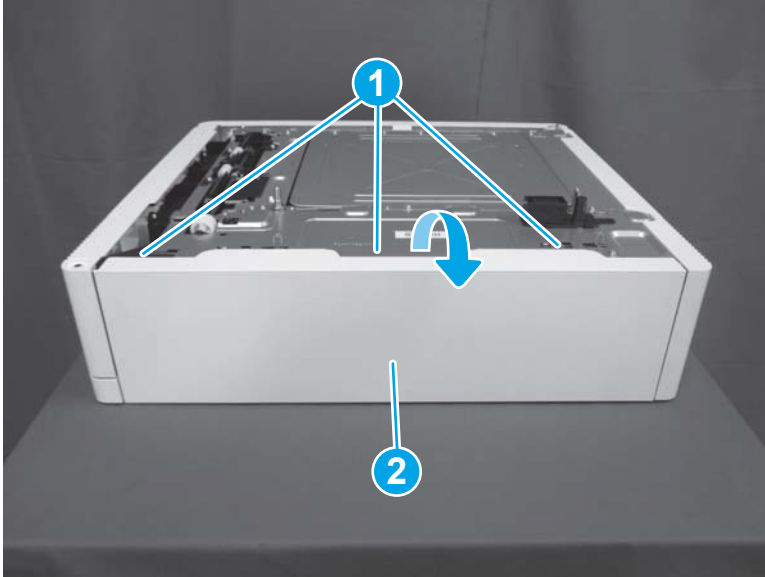
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2197 Remove the rear cover




### Step 2: Remove the paper feeder controller PCA (550-sheet paper feeder)

- ▲ Disconnect all of the connectors on the paper feeder controller PCA. Remove two screws (callout 1), release one tab (callout 2), and then remove the paper feeder controller PCA (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2198 Remove the paper feeder controller PCA

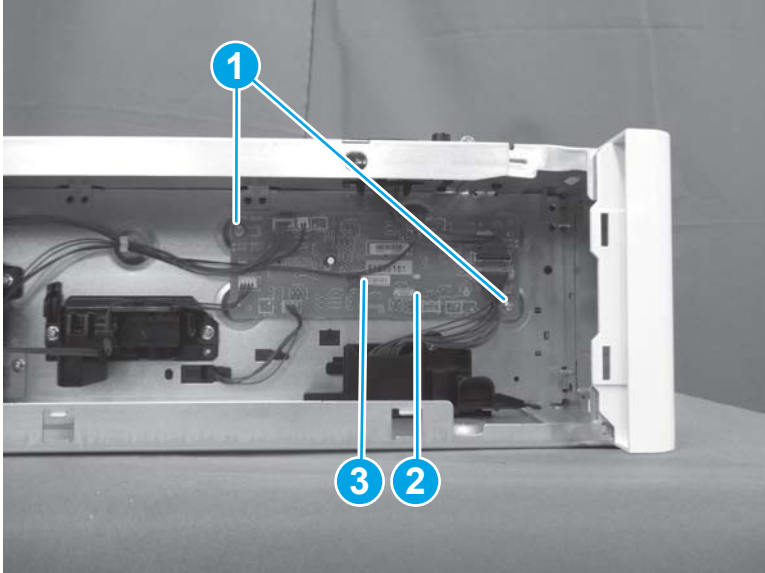

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Size-detect switch (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the size-detect switch \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the size-detect switch on the 550-sheet paper feeder.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Size-detect switch (550-sheet paper feeder) part number	
WC2-5762-000CN	Switch, push

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.


### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.



**Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2199 Remove the rear cover

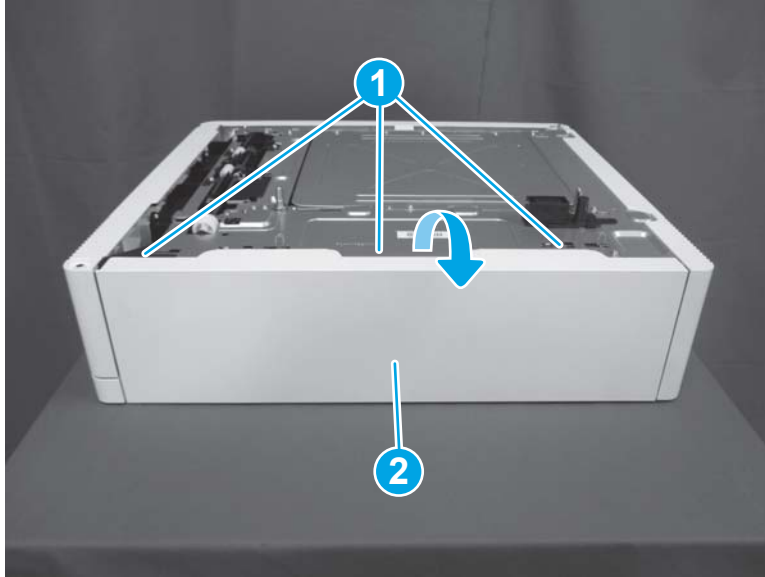

**Step 2: Remove the size-detect switch (550-sheet paper feeder)**

1. Remove the paper tray.
2. At the rear of the paper feeder, disconnect one connector (callout 1).


Figure 1-2200 Disconnect one connector

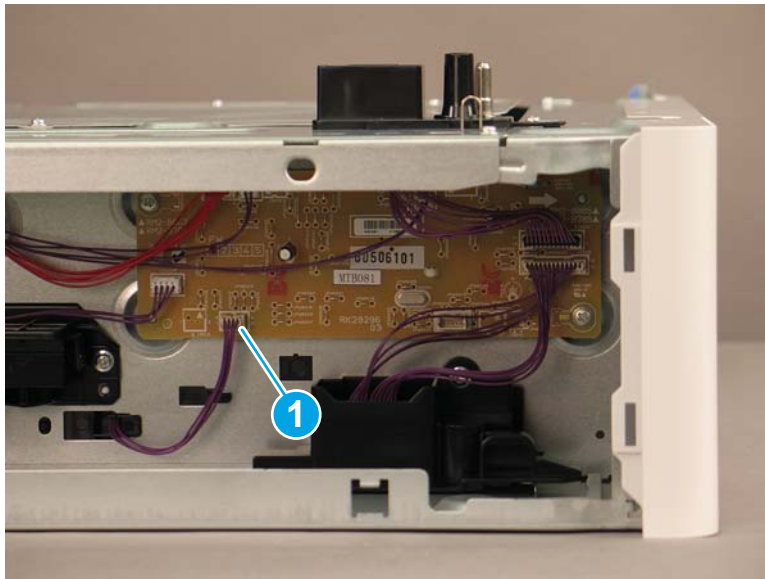




3. Inside the paper tray opening, release one tab (callout 1), and then slide the size-detect switch holder to the right to remove it.

Figure 1-2201 Remove the holder

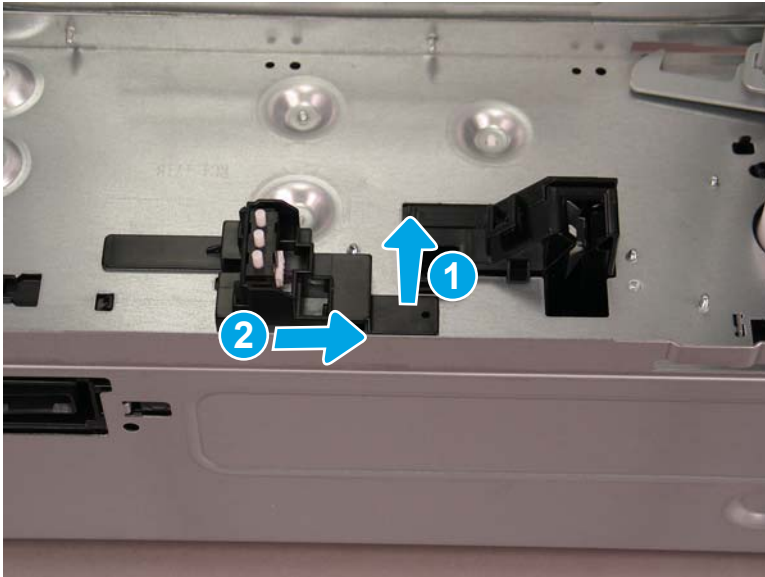


4. On the back of the holder, release the wires (callout 1) from the guides (callout 2).

Figure 1-2202 Release the wires

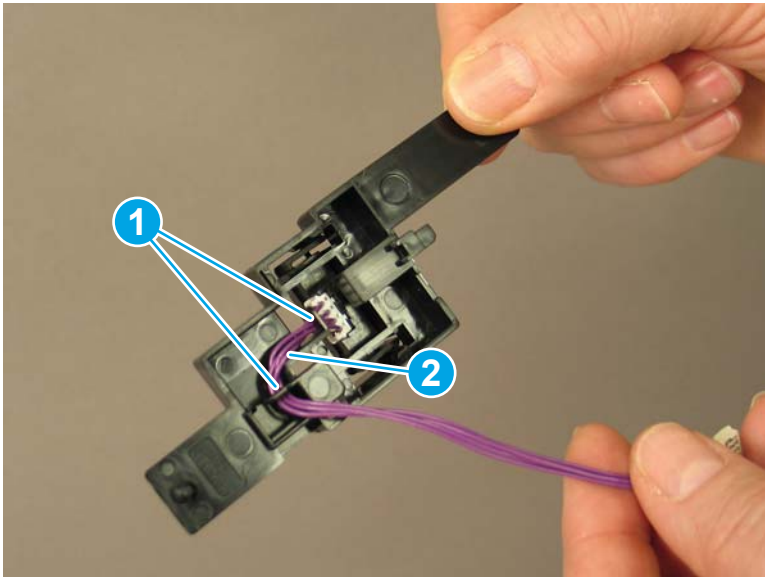

5. Release two tabs, and then remove the size-detect switch from the holder.

Figure 1-2203 Remove the size-detect switch

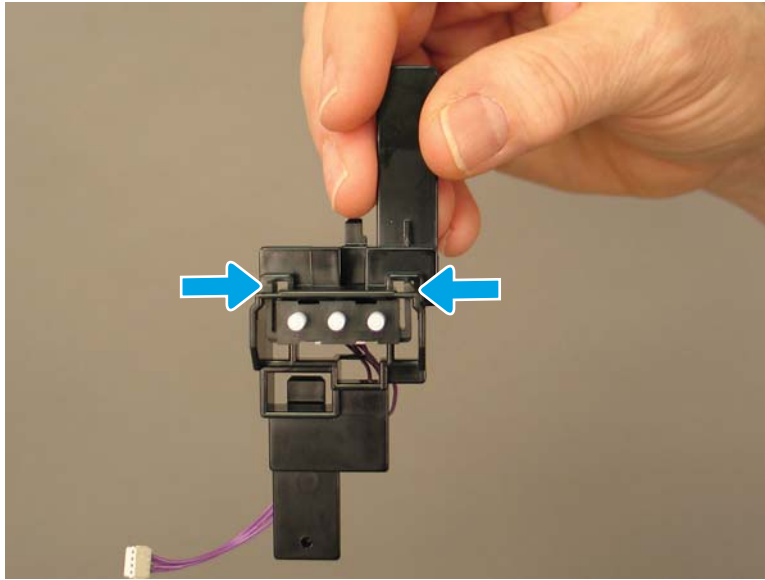

6. Disconnect one connector (callout 1).


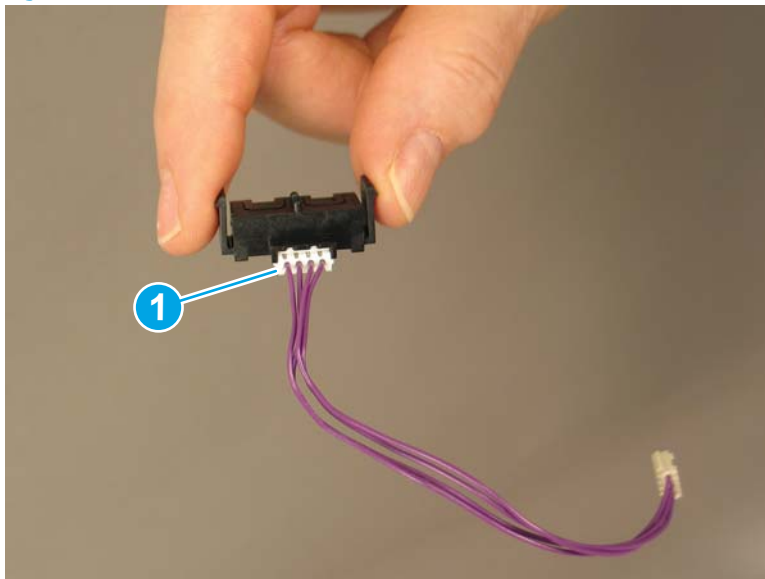
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2204 Disconnect one connector



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Upper drawer holder and cable assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the upper drawer holder and cable assembly \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the upper drawer holder and cable assembly on the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Upper drawer holder and cable assembly (550-sheet paper feeder) part numbers	
RC4-7680-000CN	Holder, drawer, upper
RM2-8880-000CN	Option upper cable assembly

### Required tools

- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.


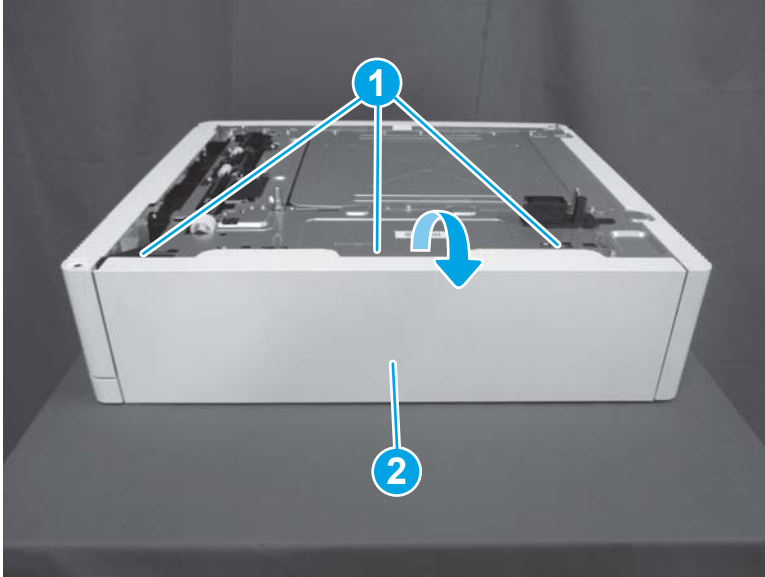
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2205 Remove the rear cover



Step 2: Remove the upper drawer holder and cable assembly (550-sheet paper feeder)


1. At the rear of the paper feeder, disconnect one connector (callout 1).

Figure 1-2206 Disconnect one connector

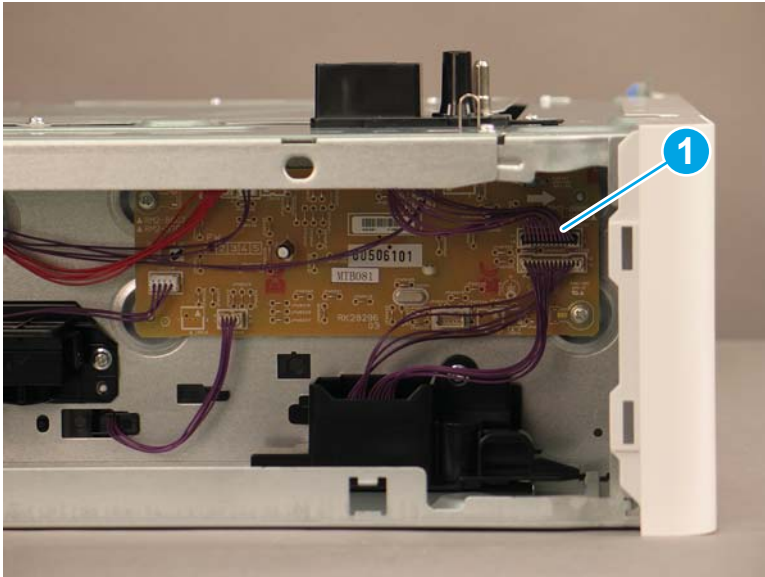


2. At the top of the paper feeder, lift one tab (callout 1), and then slide the upper drawer holder to the right to remove it.

Figure 1-2207 Remove the holder

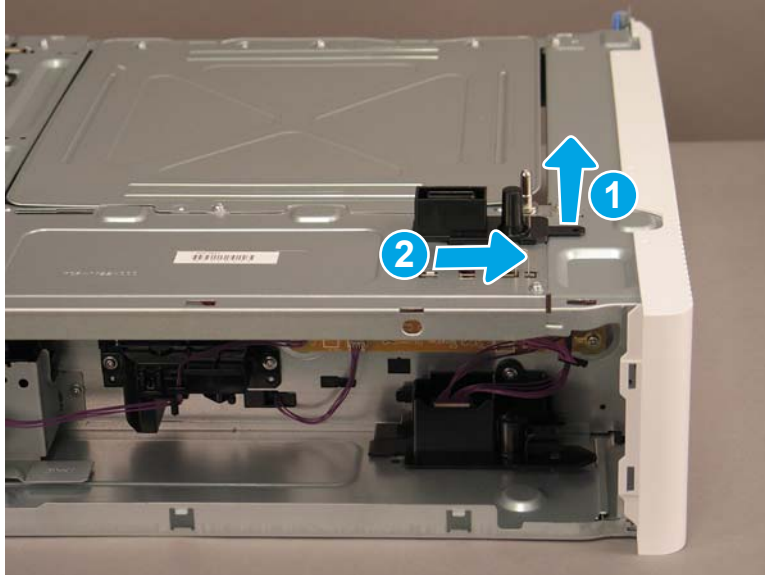


3. Use a small, flat-blade screwdriver to release two tabs (callout 1).


Figure 1-2208 Release two tabs

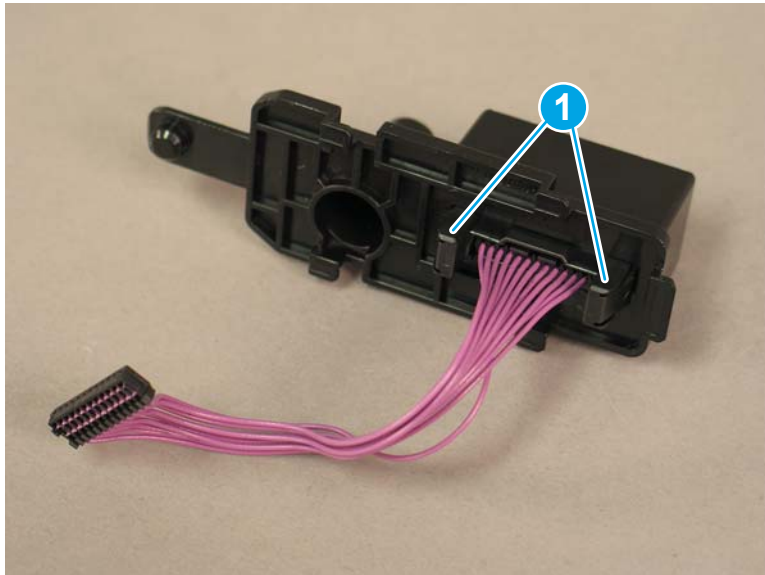

4. Remove the cable assembly from the drawer holder.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2209** Remove the cable assembly

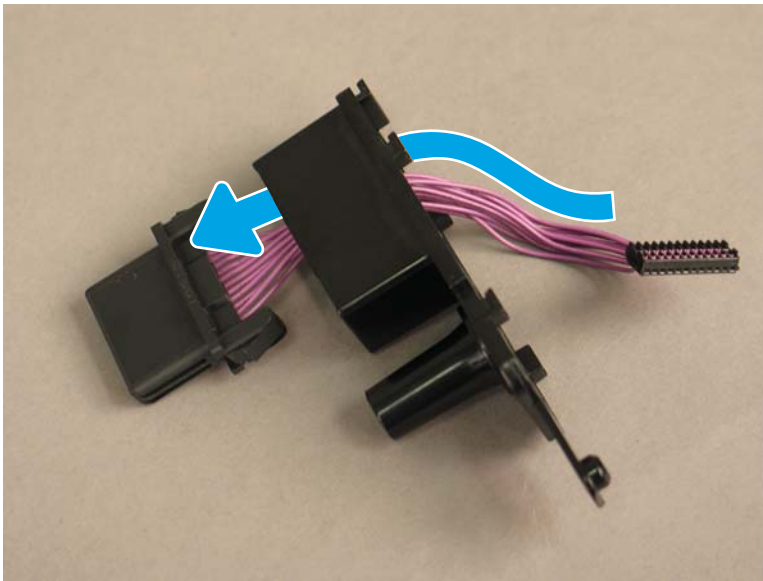



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.




## Removal and replacement: Lower drawer holder cable assembly (550-sheet paper feeder)

- [Introduction](#)
- [Step 1: Remove the rear cover \(550-sheet paper feeder\)](#)
- [Step 2: Remove the lower drawer holder cable assembly \(550-sheet paper feeder\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lower drawer holder cable assembly on the 550-sheet paper feeder.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Lower drawer holder cable assembly (550-sheet paper feeder) part numbers	
RM2-8881-000CN	Option lower cable assembly

### Required tools

- Small, flat-blade screwdriver
- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (550-sheet paper feeder)

- ▲ Release three tabs (callout 1), and then rotate the top of the rear cover (callout 2) out and away from the paper feeder to remove it.


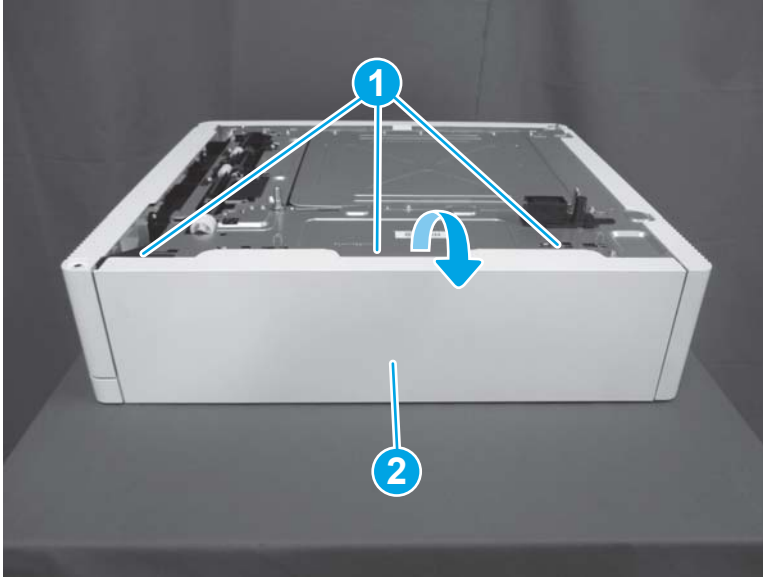
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2210 Remove the rear cover



Step 2: Remove the lower drawer holder cable assembly (550-sheet paper feeder)


1. At the rear of the paper feeder, disconnect one connector (callout 1).

Figure 1-2211 Disconnect one connector

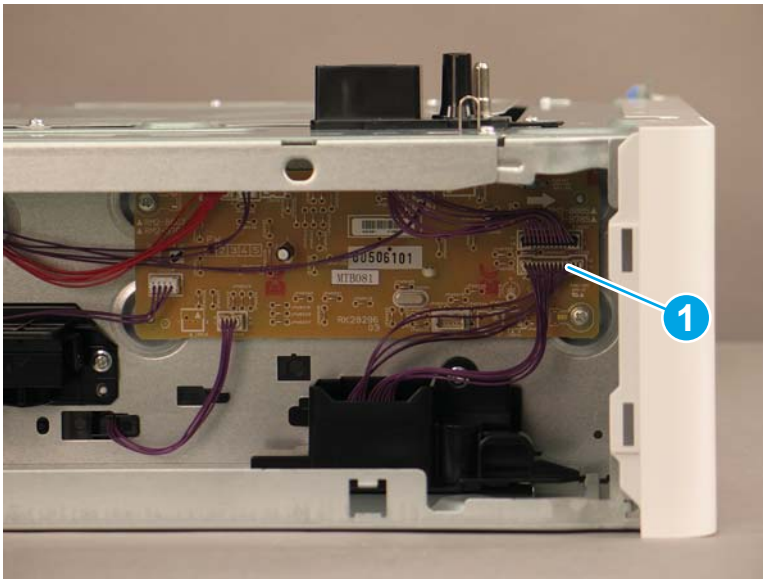


2. Remove one screw (callout 1).

Figure 1-2212 Remove one screw

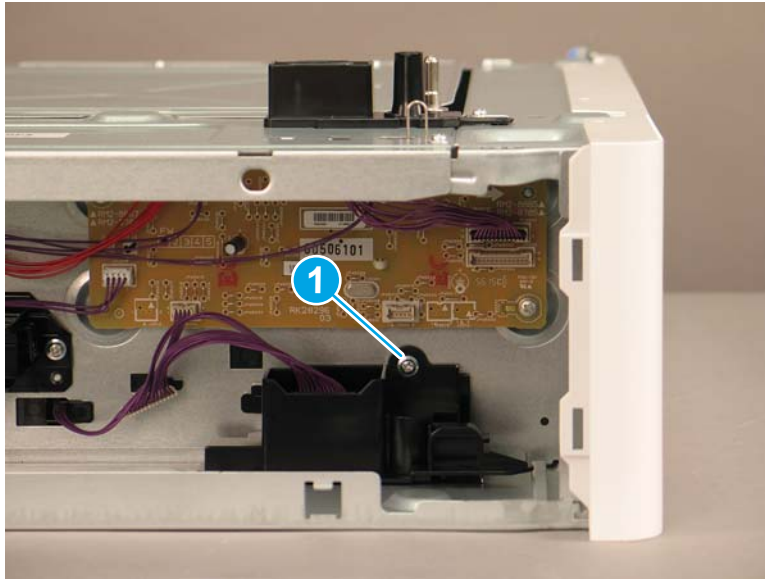


3. Release one tab (callout 1), and then slide the drawer holder to the left to remove it.

Figure 1-2213 Remove the drawer holder

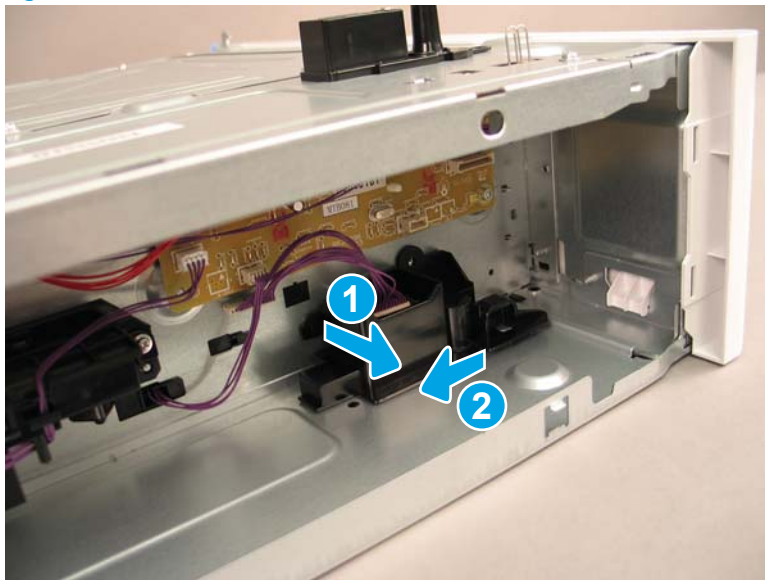

4. Use a small, flat-blad screwdriver to release two tabs (callout 1).

Figure 1-2214 Release two tabs

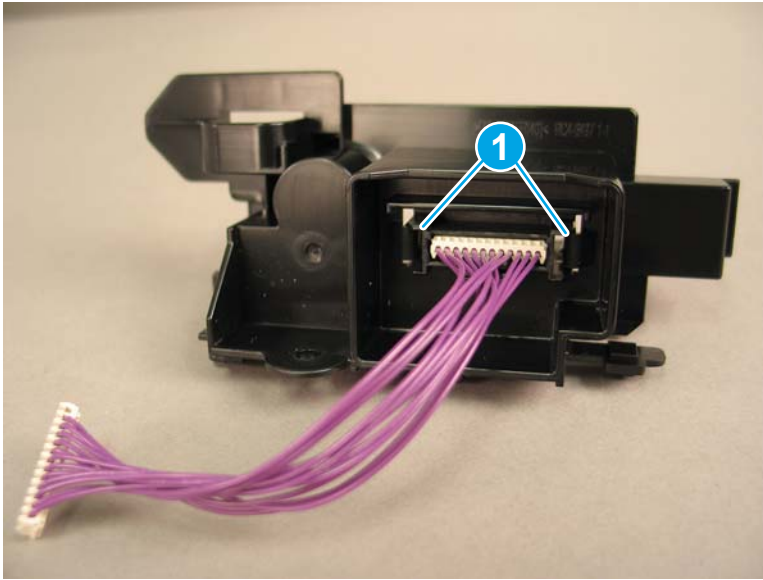

5. Remove the cable assembly from the drawer holder.


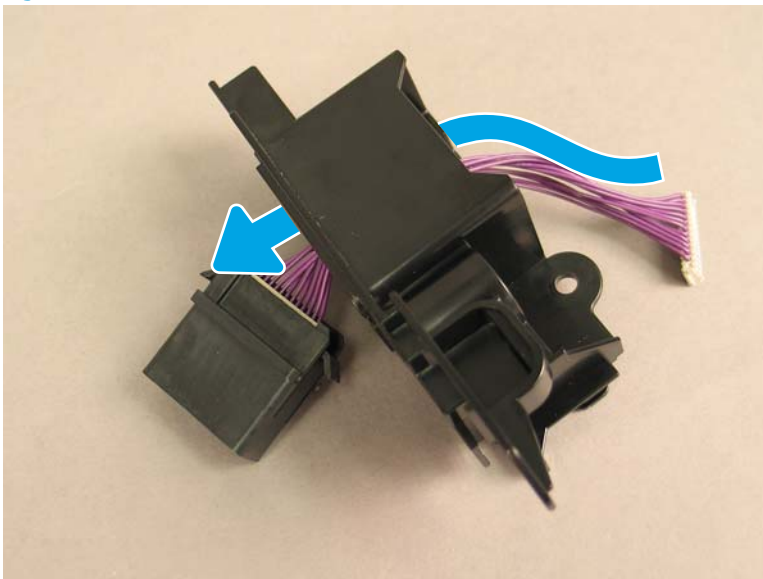
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2215 Remove the cable assembly



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: 1x550-sheet paper feeder with stand

- [Removal and replacement: Left cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door link \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Front door \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Left lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Front lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door switch \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Size sensor \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drawer connector holder and cable assembly \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Auto-close assembly \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Paper pickup assembly \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Feed motor \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Pickup alienation holder \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Lifter drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Controller PCA \(1x550-sheet paper feeder with stand\)](#)


## Removal and replacement: Left cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the left cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left cover on the 1x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Left cover (1x550-sheet paper feeder with stand) part number	
RC5-0387-000CN	Cover, left

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the left cover (1x550-sheet paper feeder with stand)

1. Open the front door.



2. Release five tabs (callout 1), and then remove the left cover (callout 2).


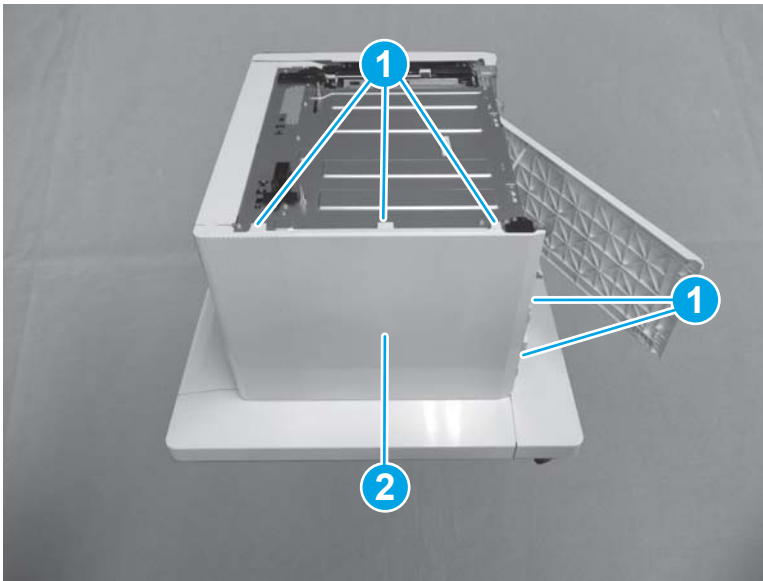
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2216 Remove the left cover





### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


## Removal and replacement: Right door link (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door link](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the link on the right door on the 1x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Right door link (1x550-sheet paper feeder with stand) part number	
RC4-9824-000CN	Link, door

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link

1. Lift the end of the link arm up and out of the right door.

Figure 1-2217 Lift the link arm end

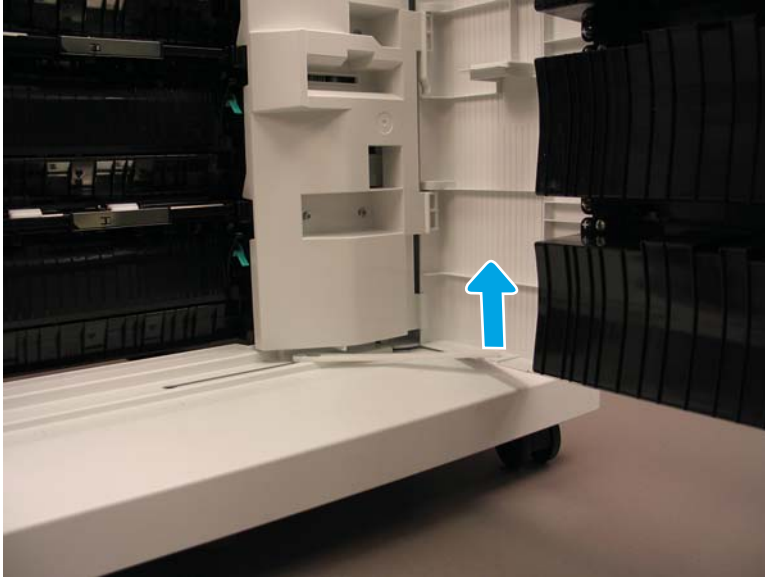


2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2218 Remove the link arm

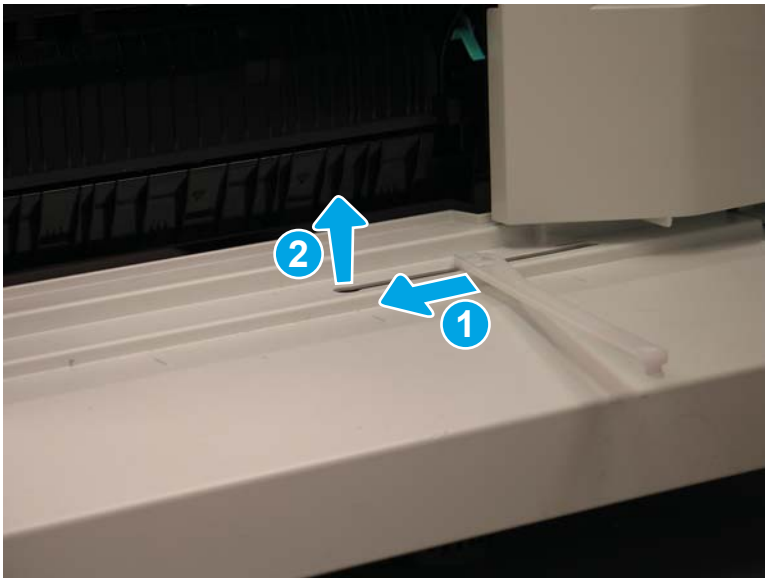

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right door (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door link arm](#)
- [Step 2: Remove the right door](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door on the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door (1x550-sheet paper feeder with stand) part number	
RM2-1226-000CN	Right door assembly

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link arm

1. Lift the end of the link arm up and out of the right door.


Figure 1-2219 Lift the link arm end

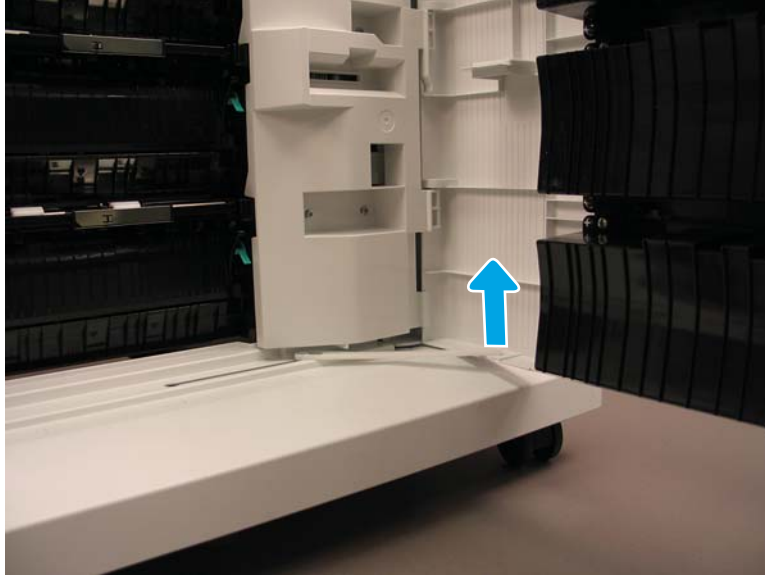

2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2220 Remove the link arm

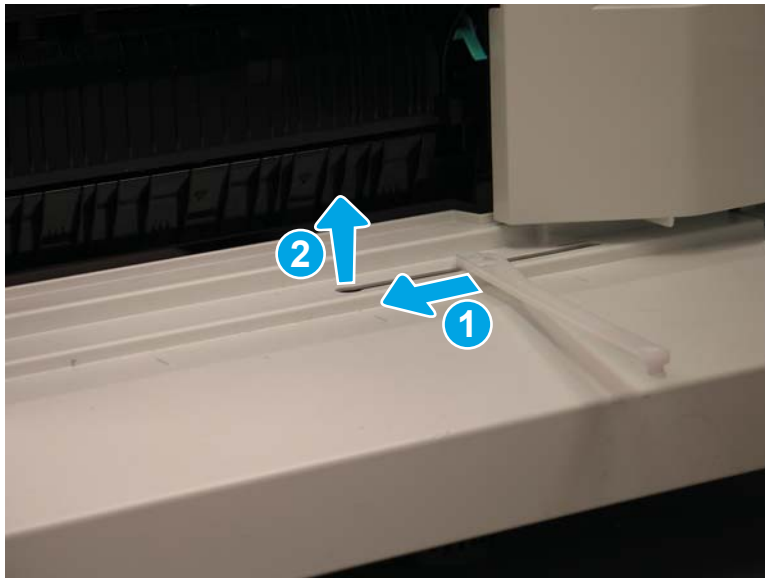


## Step 2: Remove the right door

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2221 Remove the right door

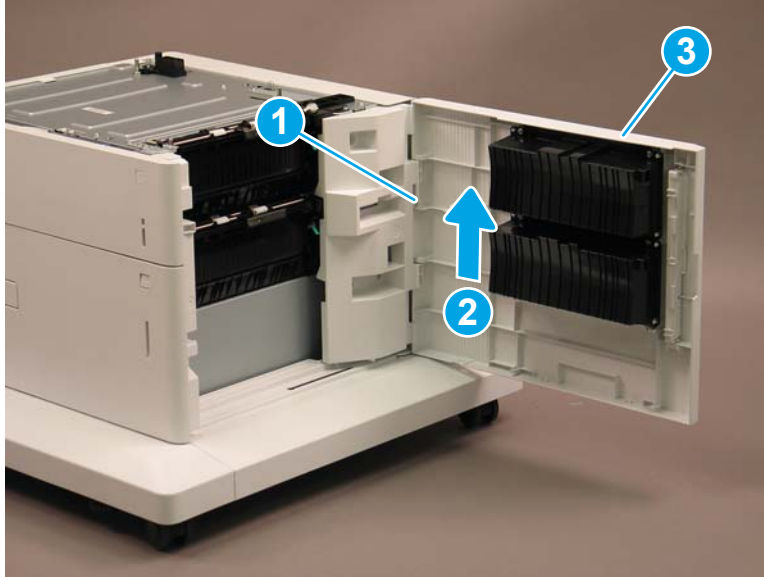



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.




## Removal and replacement: Rear cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on the 1x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Rear cover (1x550-sheet paper feeder with stand) part number	
RC5-0386-000CN	Cover, rear

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2222 Remove one screw

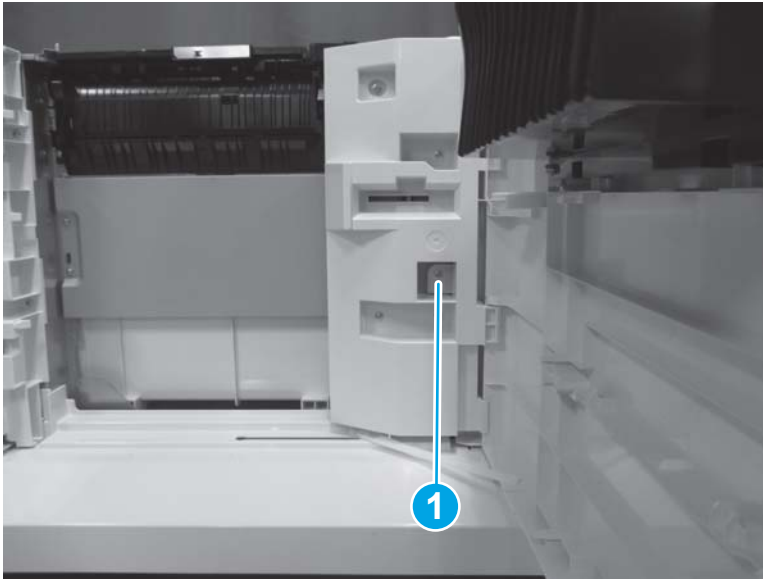

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


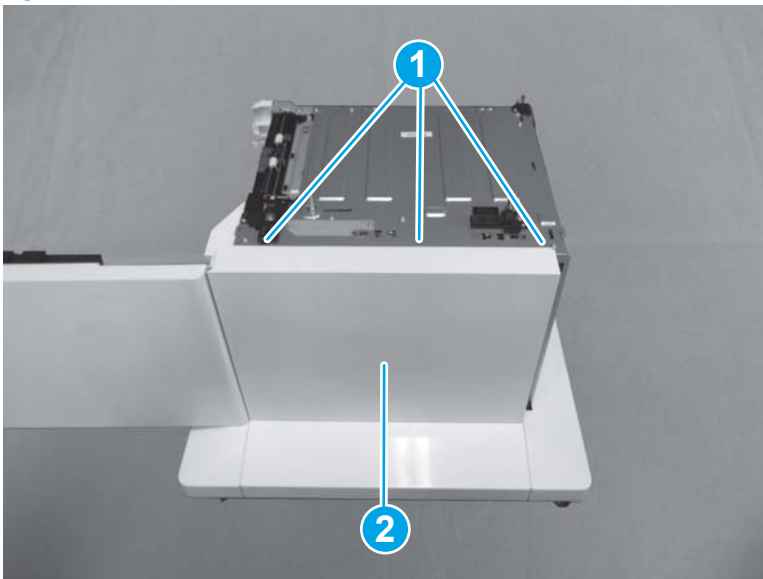
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2223 Remove the rear cover



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Front door (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the front door \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front door on the 1x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Front door (1x550-sheet paper feeder with stand) part number	
RC5-0405-000CN	Door, stock

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the front door (1x550-sheet paper feeder with stand)

1. Open the front door.


2. Slide the front door (callout 1) up to release it. Remove two links (callout 2), and then remove the roller (callout 3). Transfer these parts to the replacement door.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2224 Remove the front door

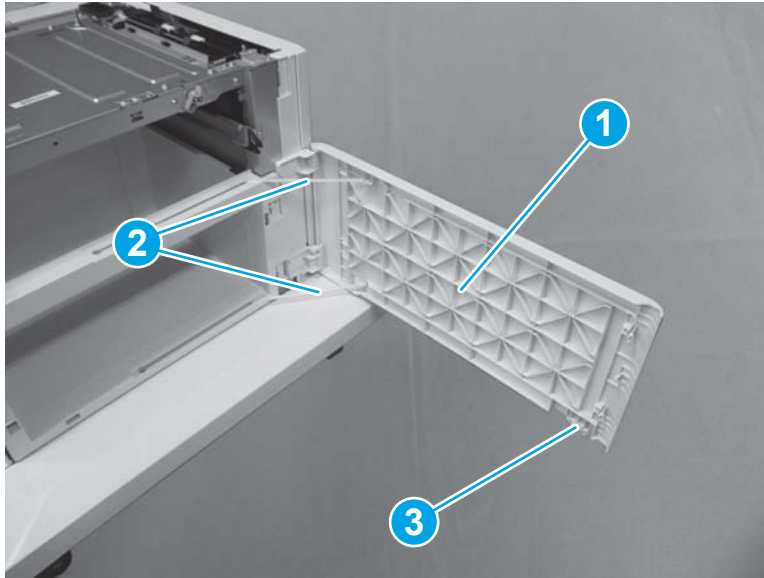

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---


2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.


---

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left lower cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the left cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the left lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left lower cover on the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Left lower cover (1x550-sheet paper feeder with stand) part number

---

RC5-0385-000	Cover, left lower
--------------	-------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the left cover (1x550-sheet paper feeder with stand)

1. Open the front door.

2. Release five tabs (callout 1), and then remove the left cover (callout 2).


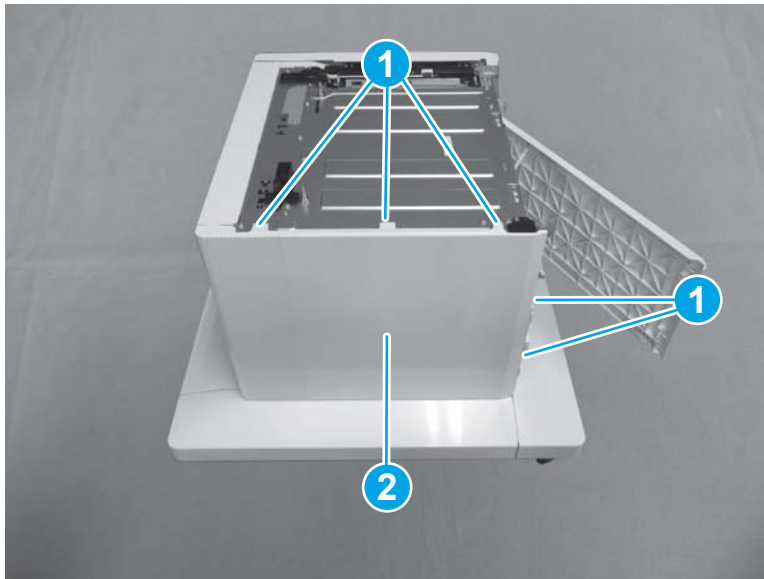
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2225 Remove the left cover



### Step 2: Remove the left lower cover (1x550-sheet paper feeder with stand)

- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).


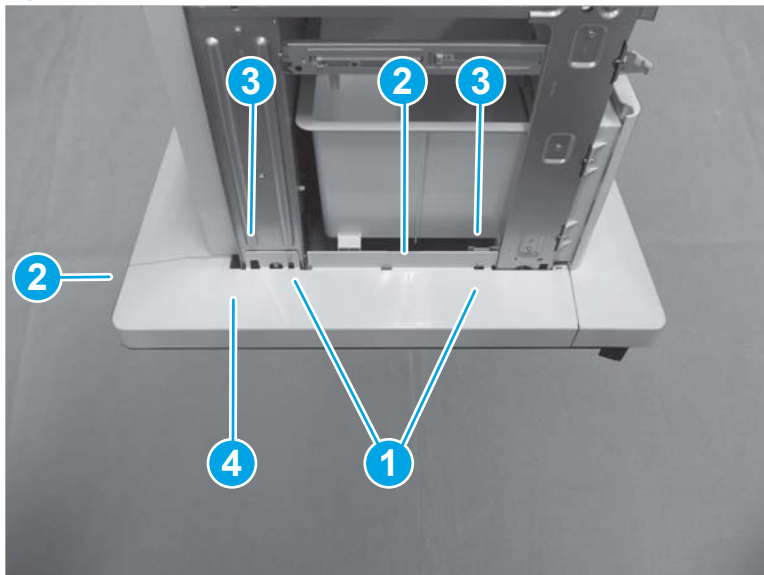
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2226 Remove the left lower cover




### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right lower cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the front door \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the right lower cover](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right lower cover for the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right lower cover (1x550-sheet paper feeder with stand) part number	
RC5-0384-000CN	Cover, right lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2227 Remove one screw

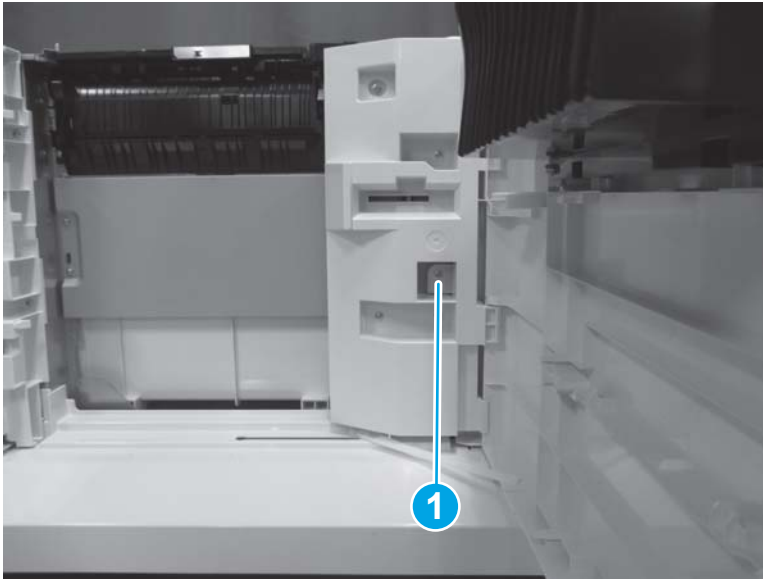

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


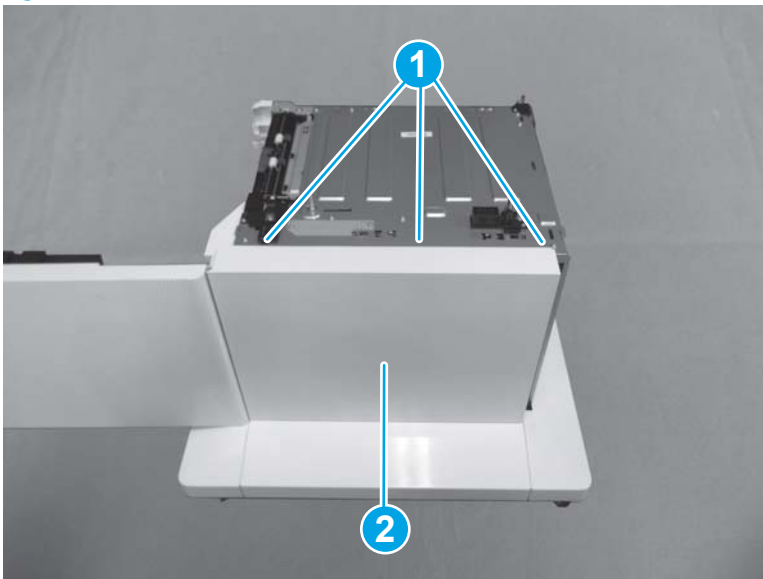
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2228 Remove the rear cover




### Step 2: Remove the front door (1x550-sheet paper feeder with stand)

1. Open the front door.

- Slide the front door (callout 1) up to release it. Remove two links (callout 2), and then remove the roller (callout 3). Transfer these parts to the replacement door.


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2229** Remove the front door

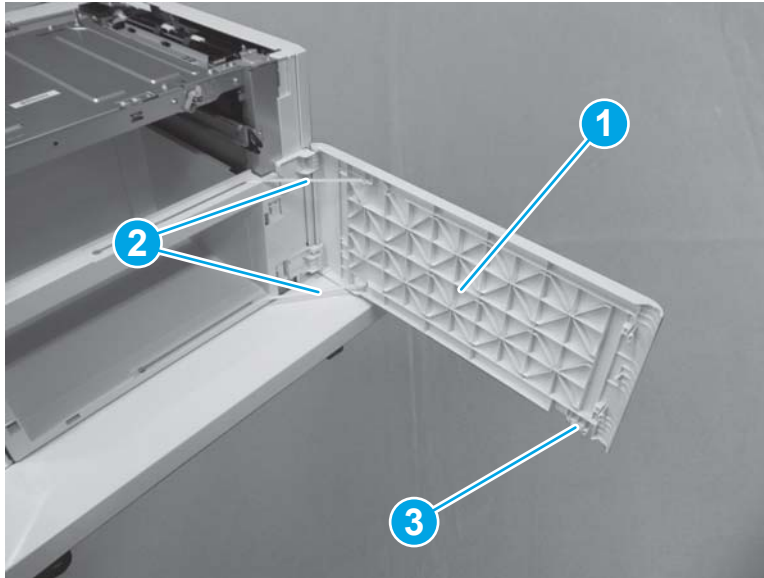


### Step 3: Remove the right door (1x550-sheet paper feeder with stand)

- Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2230** Remove the right door

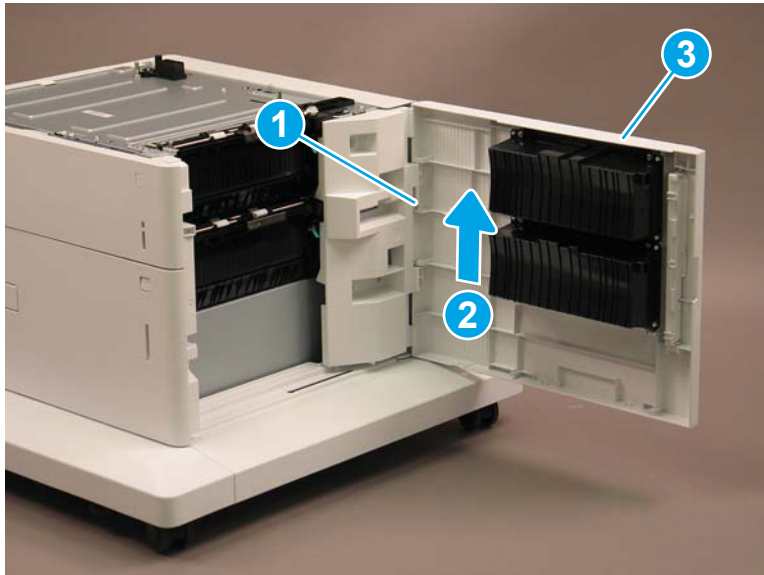

### Step 4: Remove the right lower cover


- Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2231 Remove four screws and the hinge

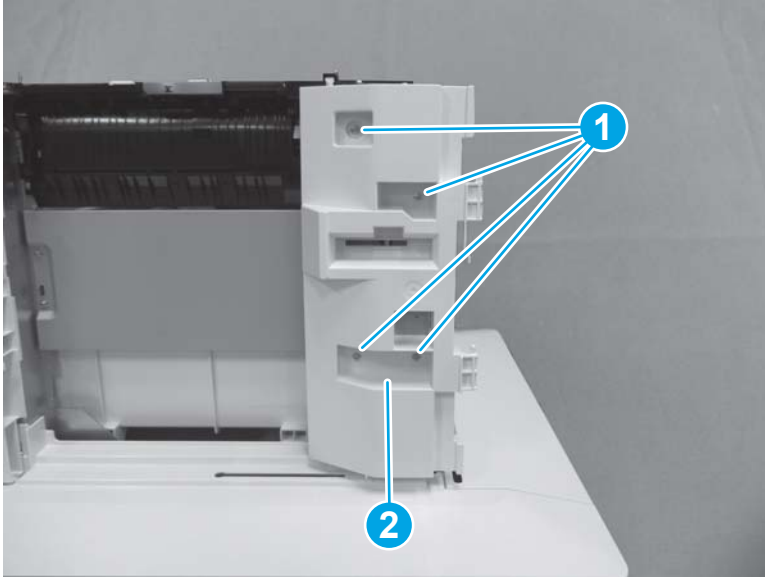


2. Remove four screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2232 Remove four screws and the inner cover

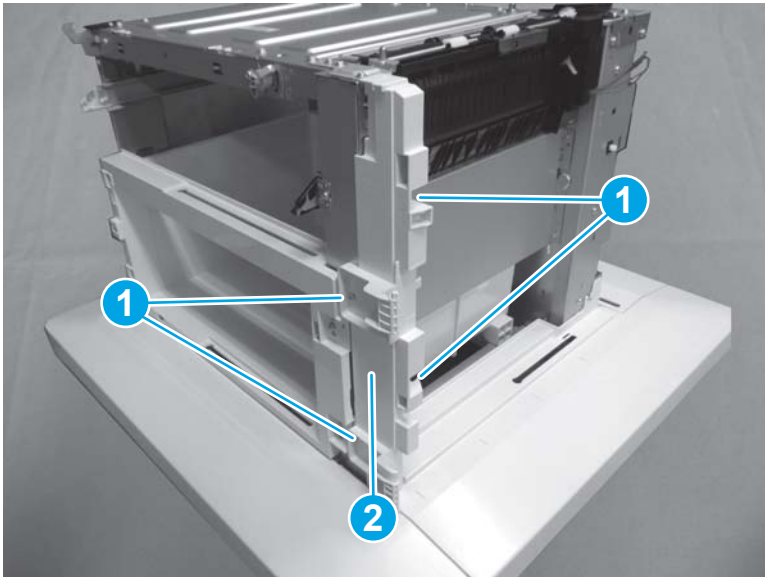

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2233 Remove the right lower cover

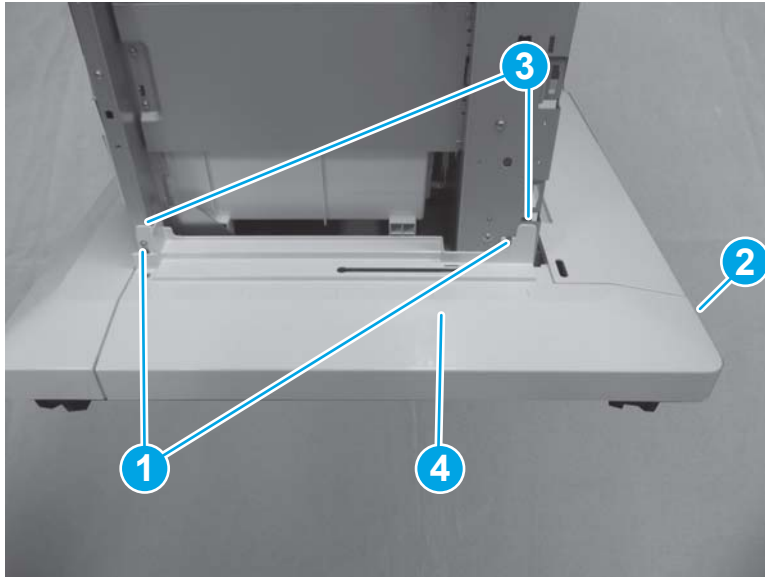


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


Figure 1-2234 Check spring position

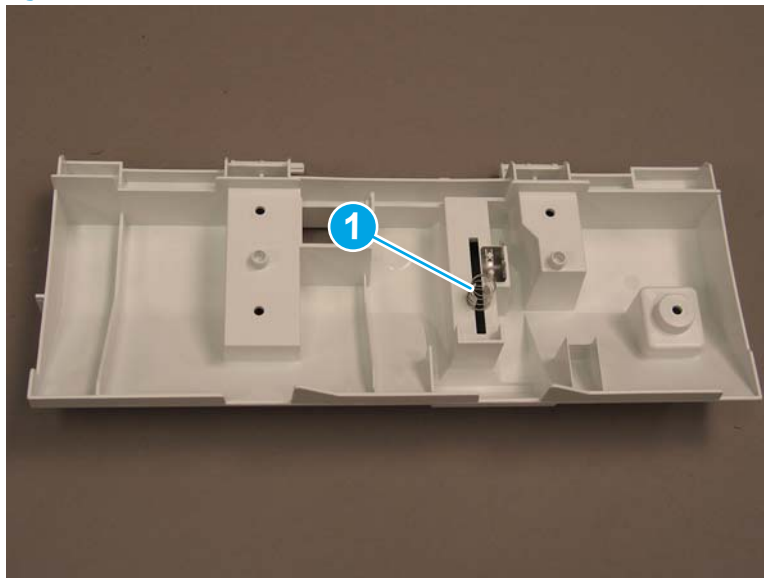

#### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Rear lower cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the front door \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the left cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the left lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 6: Remove the right lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 7: Remove the rear lower cover](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear lower cover for the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear lower cover (1x550-sheet paper feeder with stand) part number	
RC5-0399-000CN	Cover, rear lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2235 Remove one screw

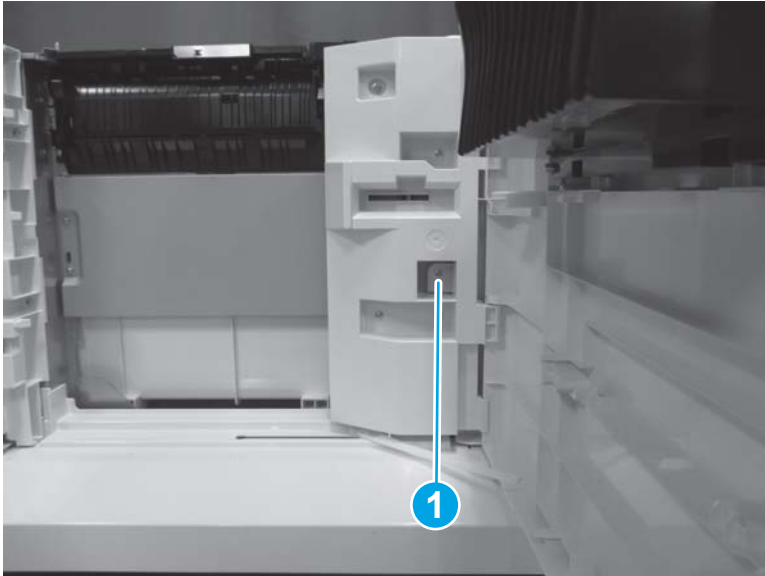

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2236 Remove the rear cover

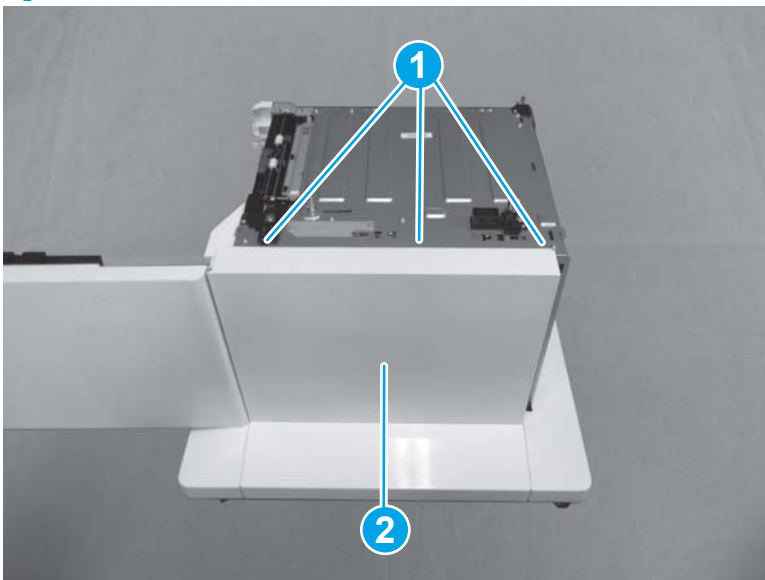

### Step 2: Remove the front door (1x550-sheet paper feeder with stand)

1. Open the front door.

- Slide the front door (callout 1) up to release it. Remove two links (callout 2), and then remove the roller (callout 3). Transfer these parts to the replacement door.


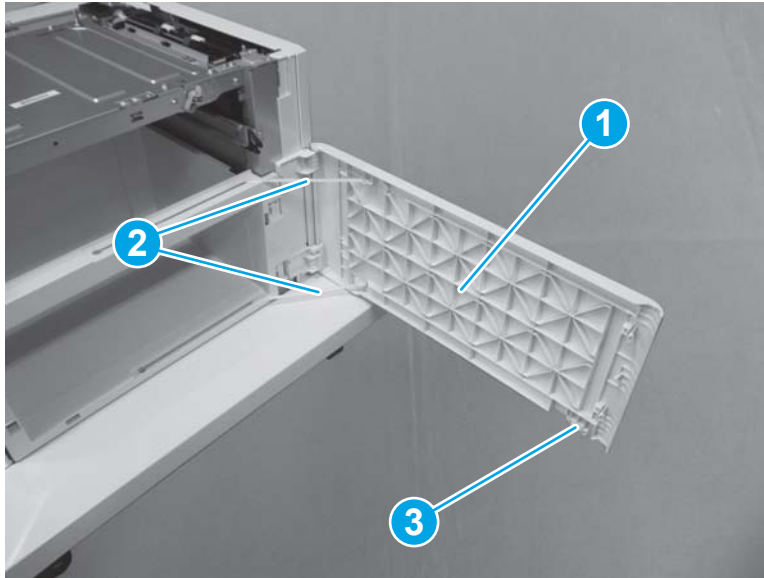
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2237 Remove the front door



### Step 3: Remove the right door (1x550-sheet paper feeder with stand)

- Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).


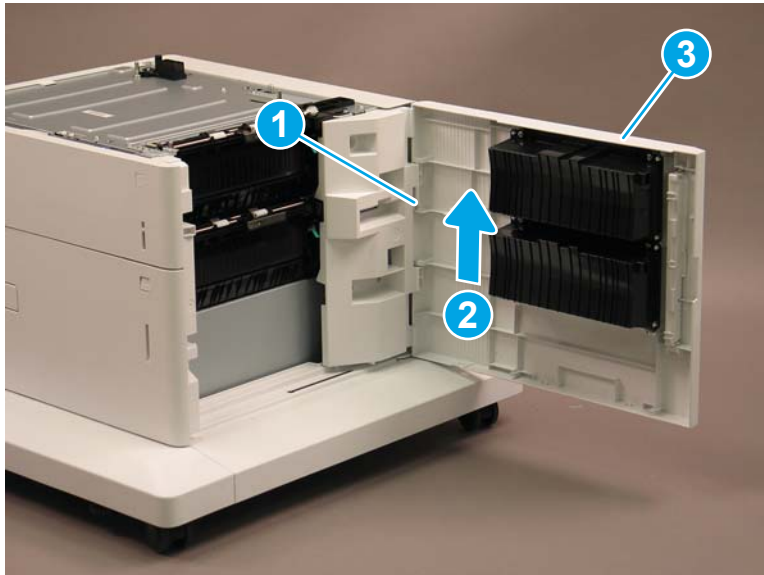
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2238 Remove the right door



### Step 4: Remove the left cover (1x550-sheet paper feeder with stand)

- Open the front door.

2. Release five tabs (callout 1), and then remove the left cover (callout 2).


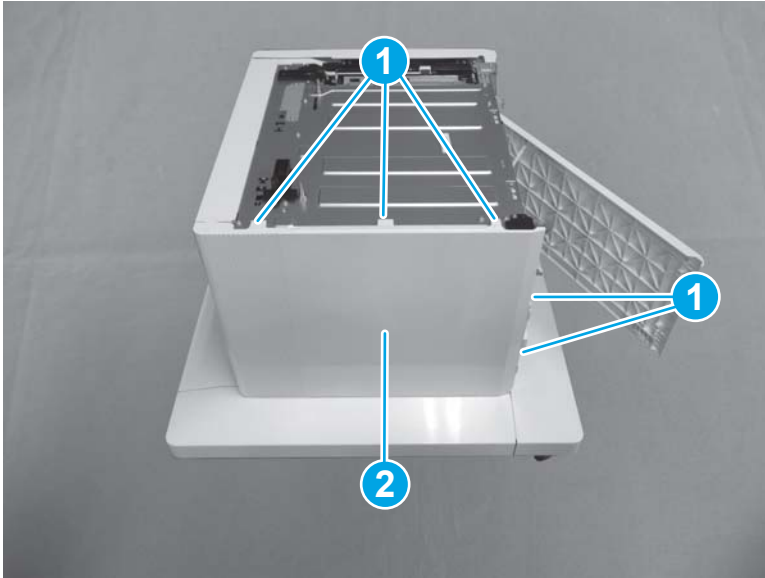
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2239 Remove the left cover



#### Step 5: Remove the left lower cover (1x550-sheet paper feeder with stand)

- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).


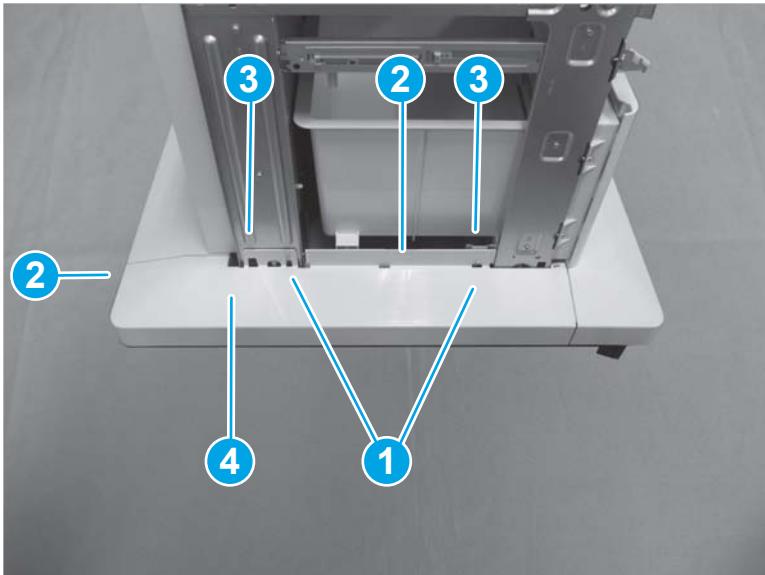
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2240 Remove the left lower cover



#### Step 6: Remove the right lower cover (1x550-sheet paper feeder with stand)


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2241 Remove four screws and the hinge

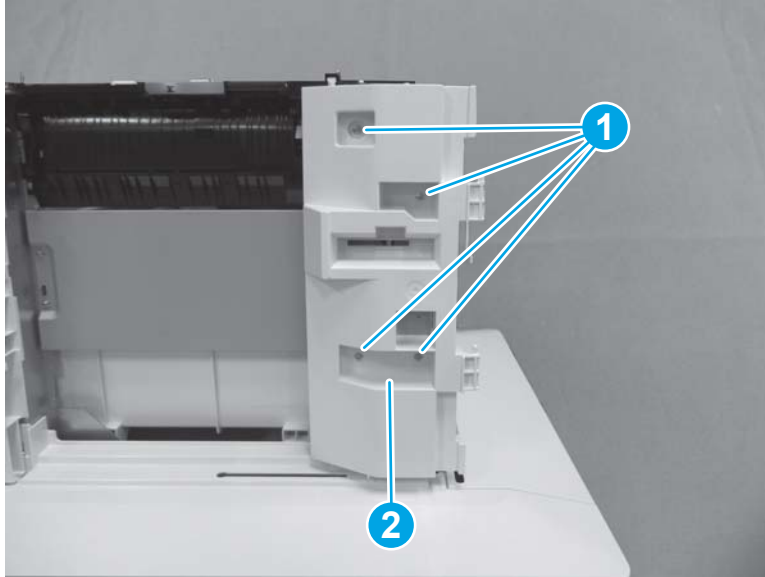


2. Remove four screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2242 Remove four screws and the inner cover

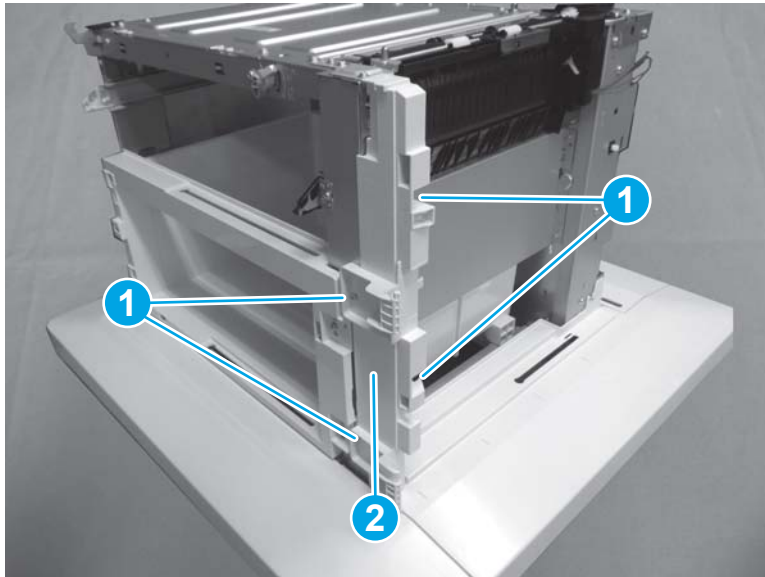

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2243 Remove the right lower cover

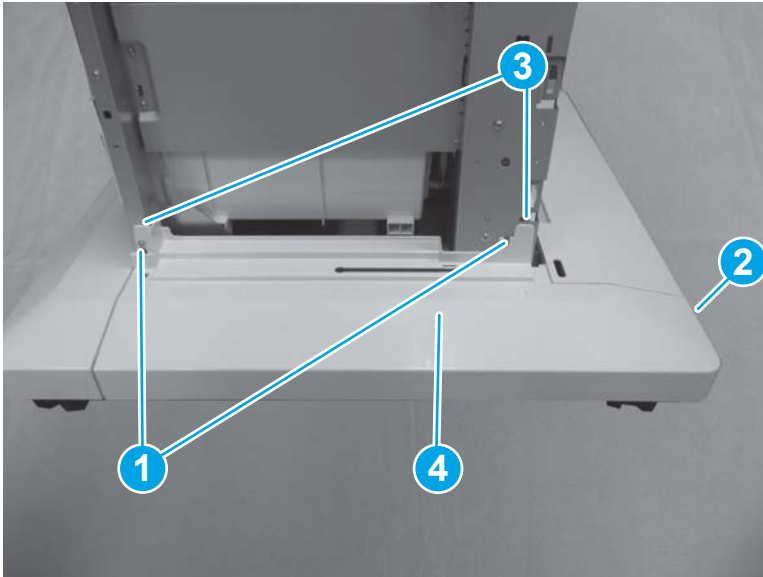


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


Figure 1-2244 Check spring position

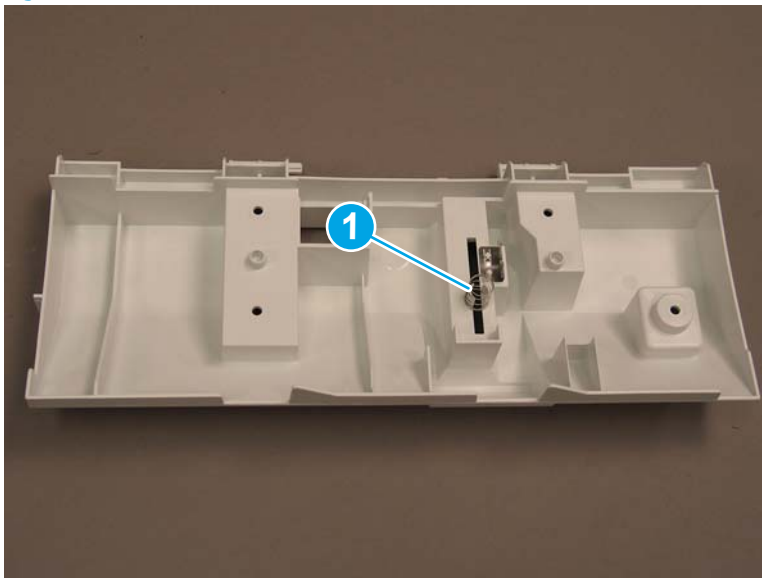

#### Step 7: Remove the rear lower cover

- ▲ Remove two screws (callout 1), and then remove the rear lower cover (callout 2).

Figure 1-2245 Remove the rear lower cover

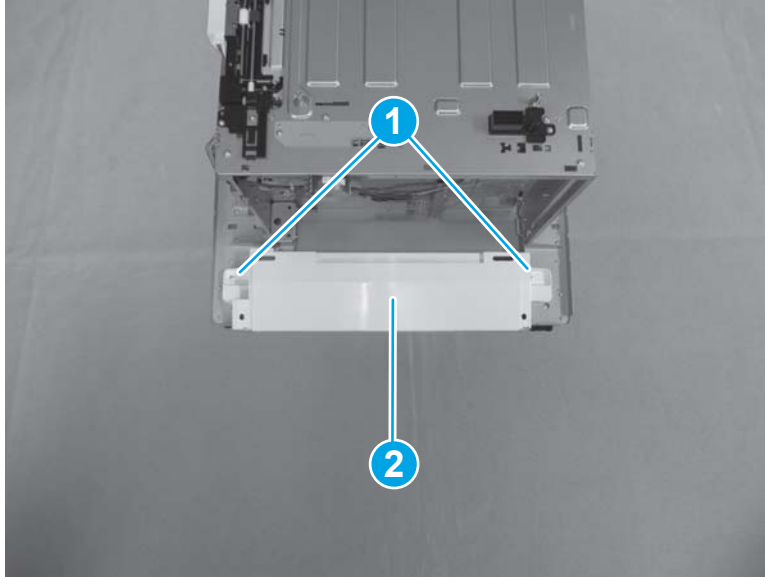

### Step 8: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Front lower cover (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the front door \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the left cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the left lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 6: Remove the right lower cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 7: Remove the front lower cover](#)
- [Step 8: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front lower cover for the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Front lower cover (1x550-sheet paper feeder with stand) part number	
RC5-0383-000CN	Cover, front lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)


1. Open the right door.
2. Remove one screw (callout 1).

Figure 1-2246 Remove one screw

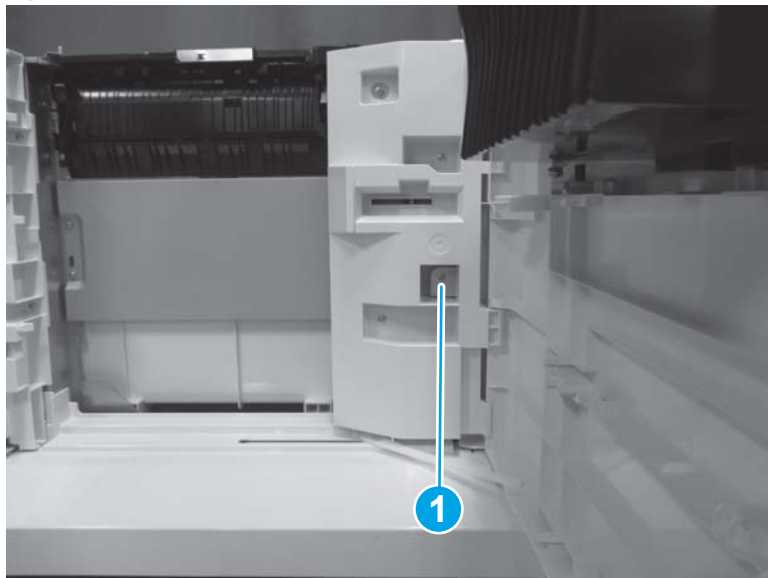


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2247 Remove the rear cover

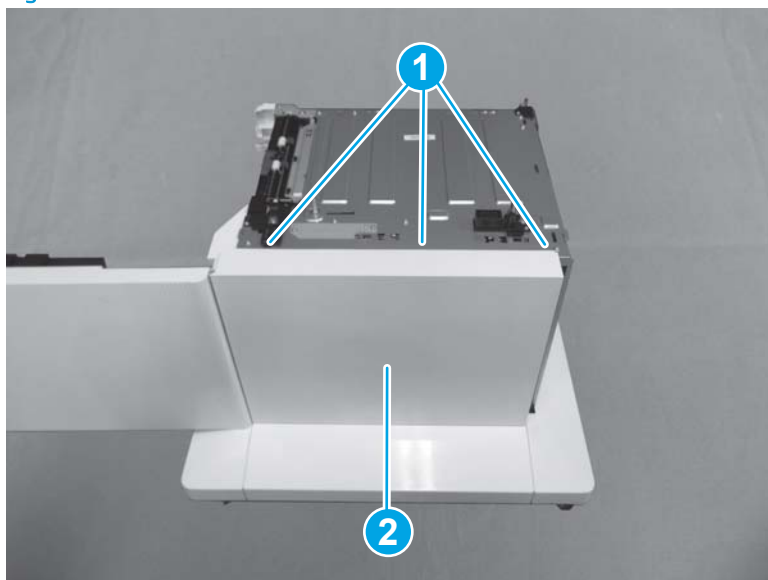

### Step 2: Remove the front door (1x550-sheet paper feeder with stand)

1. Open the front door.

- Slide the front door (callout 1) up to release it. Remove two links (callout 2), and then remove the roller (callout 3). Transfer these parts to the replacement door.


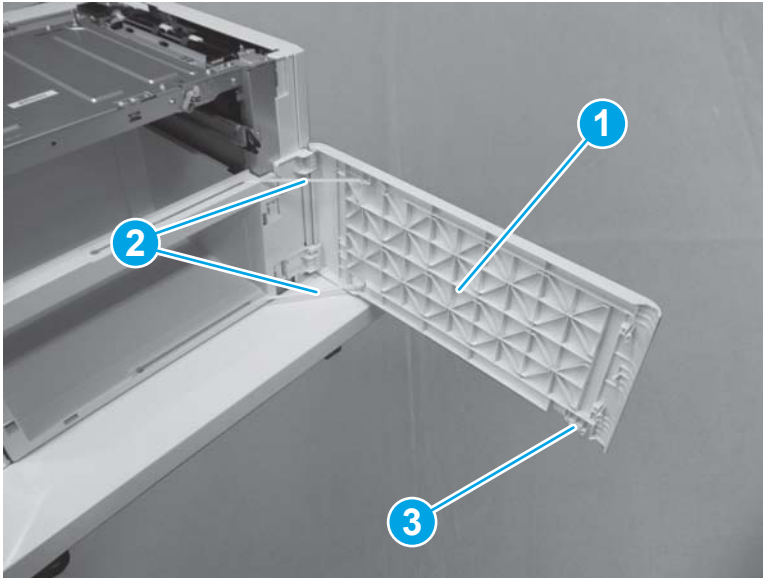
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2248 Remove the front door



### Step 3: Remove the right door (1x550-sheet paper feeder with stand)

- Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).


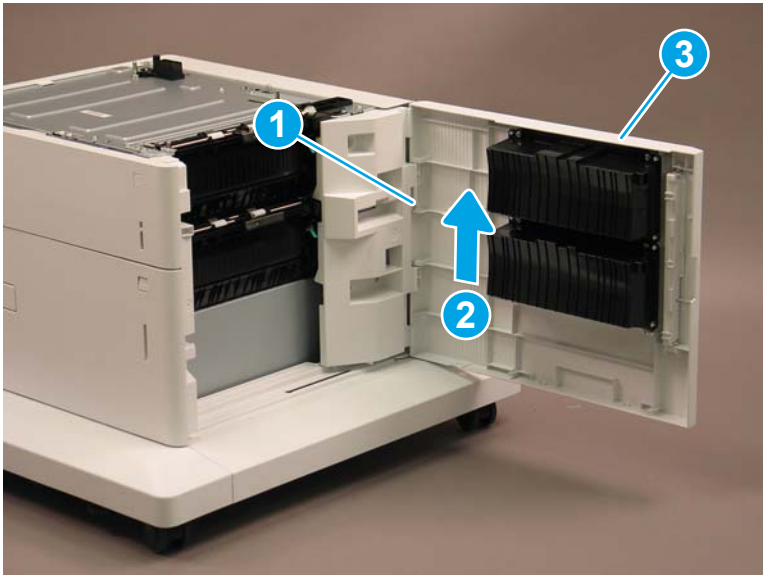
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2249 Remove the right door




### Step 4: Remove the left cover (1x550-sheet paper feeder with stand)

- Open the front door.

2. Release five tabs (callout 1), and then remove the left cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2250** Remove the left cover

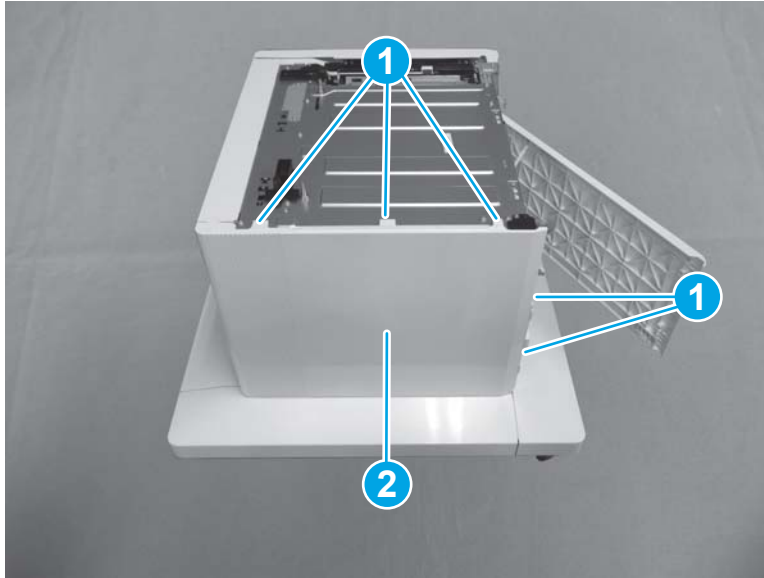


#### Step 5: Remove the left lower cover (1x550-sheet paper feeder with stand)

- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2251** Remove the left lower cover

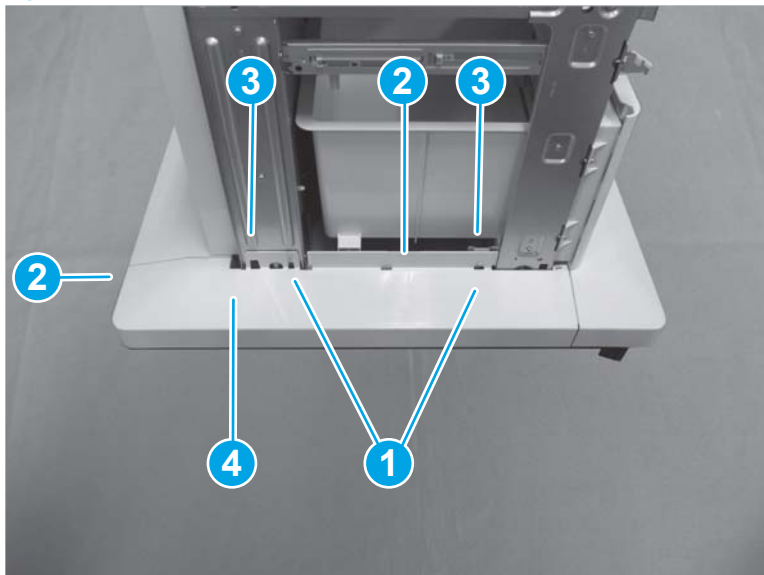

#### Step 6: Remove the right lower cover (1x550-sheet paper feeder with stand)


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2252 Remove four screws and the hinge

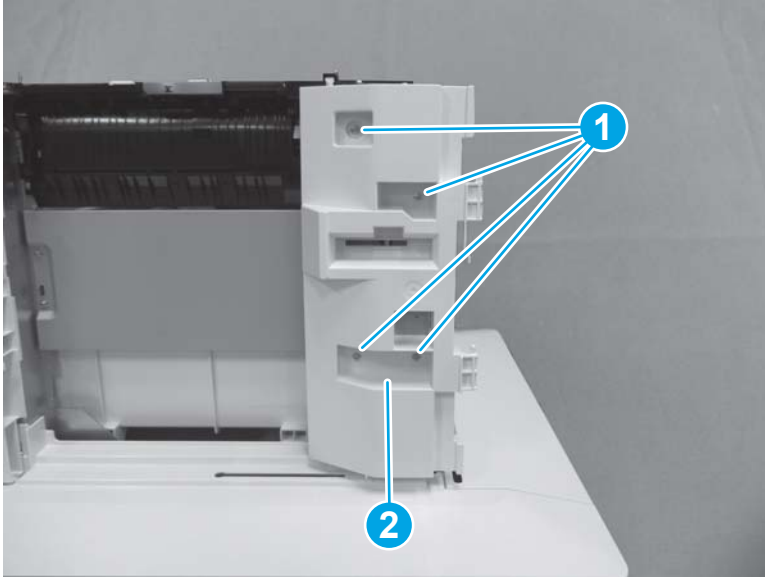


2. Remove four screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2253 Remove four screws and the inner cover

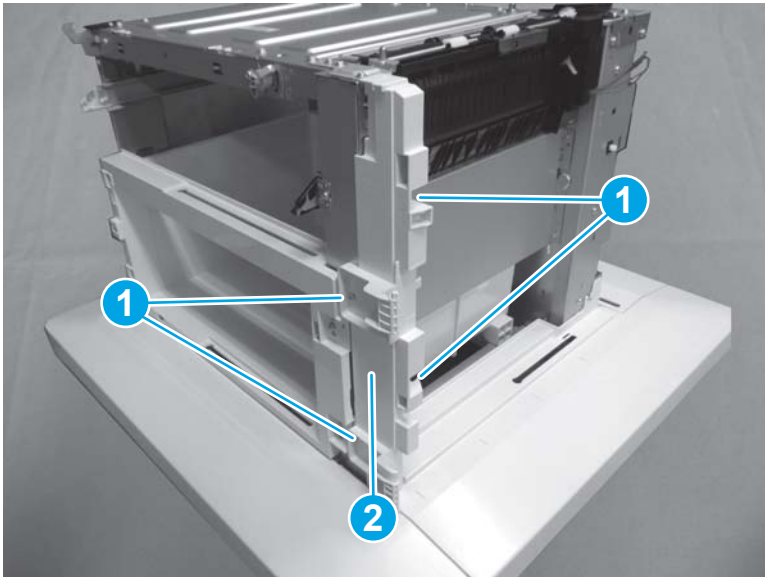

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2254 Remove the right lower cover

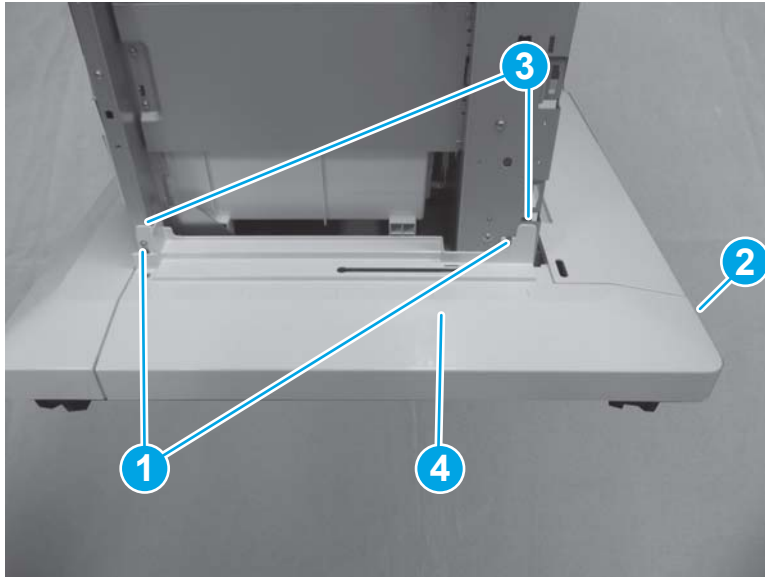


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


Figure 1-2255 Check spring position

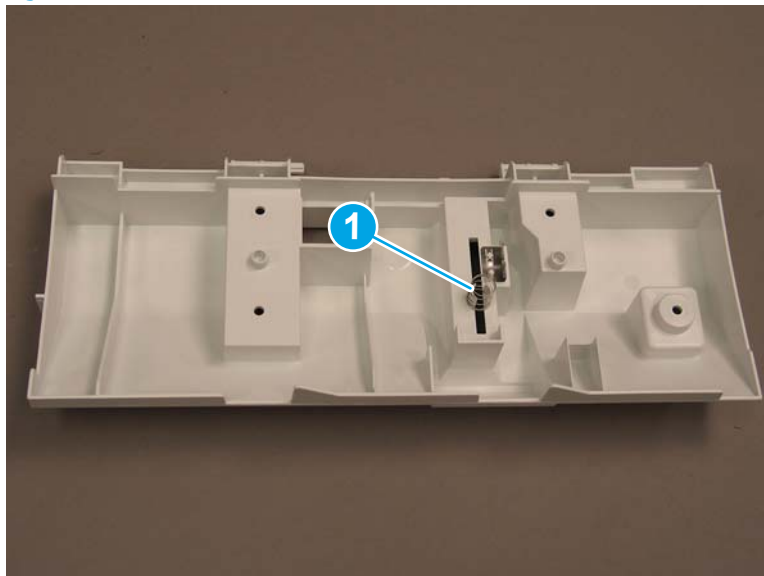

## Step 7: Remove the front lower cover

- ▲ Remove one screw (callout 1), release one tab (callout 2), and then remove the front lower cover (callout 3).

Figure 1-2256 Remove the front lower cover

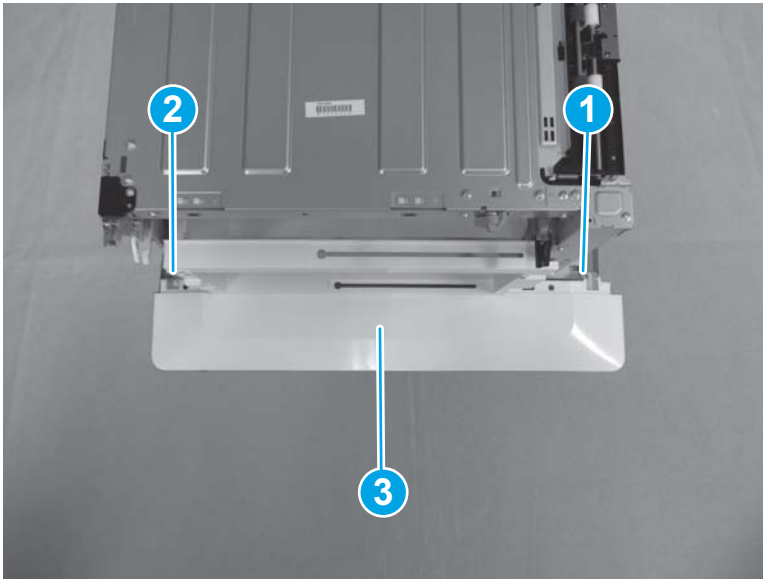



## Step 8: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.




## Removal and replacement: Right door switch (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door switch \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door switch on the 1x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- △ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door switch (1x550-sheet paper feeder with stand) part number	
WC2-5803-000CN	Switch, push

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Close the right door. Verify that no door-open messages display on the control panel.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2257 Remove one screw

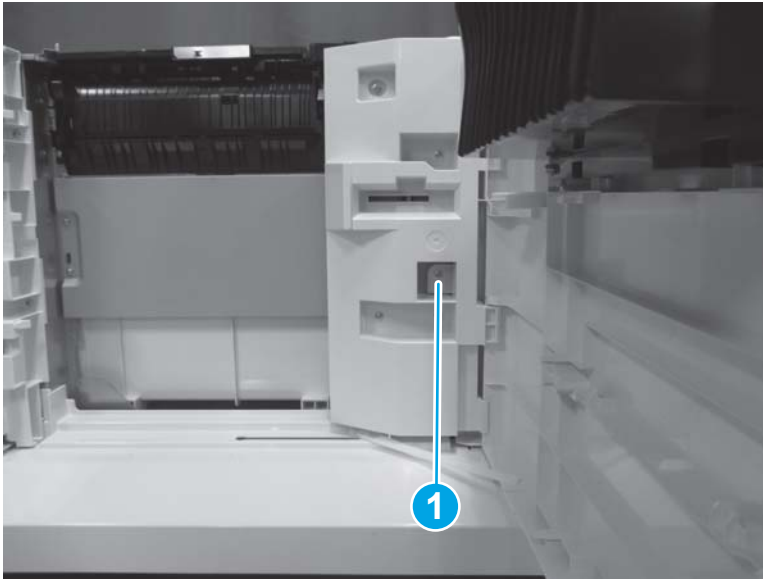


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2258 Remove the rear cover

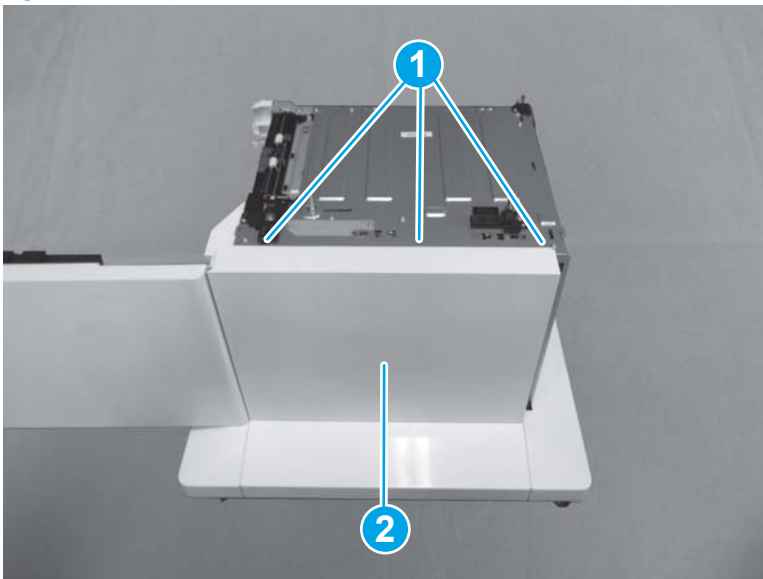

### Step 2: Remove the right door (1x550-sheet paper feeder with stand)


- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2259 Remove the right door

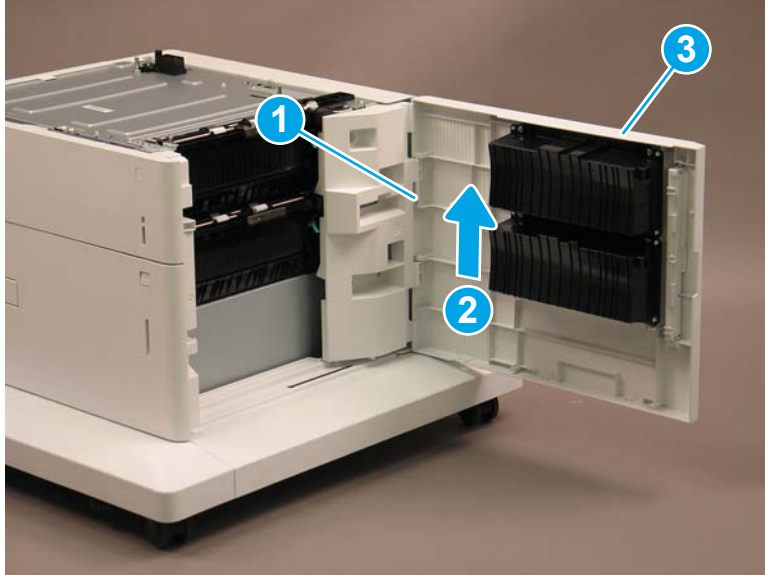

**Step 3: Remove the right door switch (1x550-sheet paper feeder with stand)**


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2260 Remove four screws and the hinge

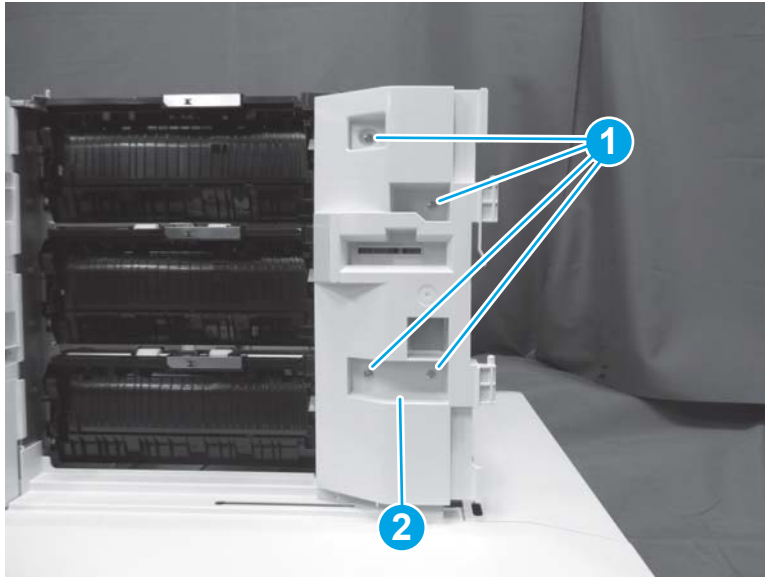


2. At the back of the paper feeder, release two tabs (callout 1) and release the switch through the opening in the sheet metal.

Figure 1-2261 Release two tabs

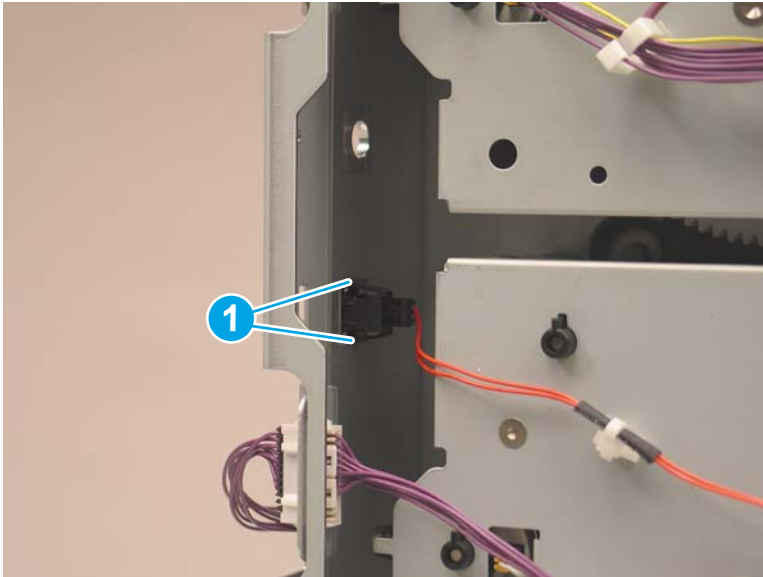

3. Disconnect one connector (callout 1), and then remove the right door switch.

Figure 1-2262 Disconnect one connector

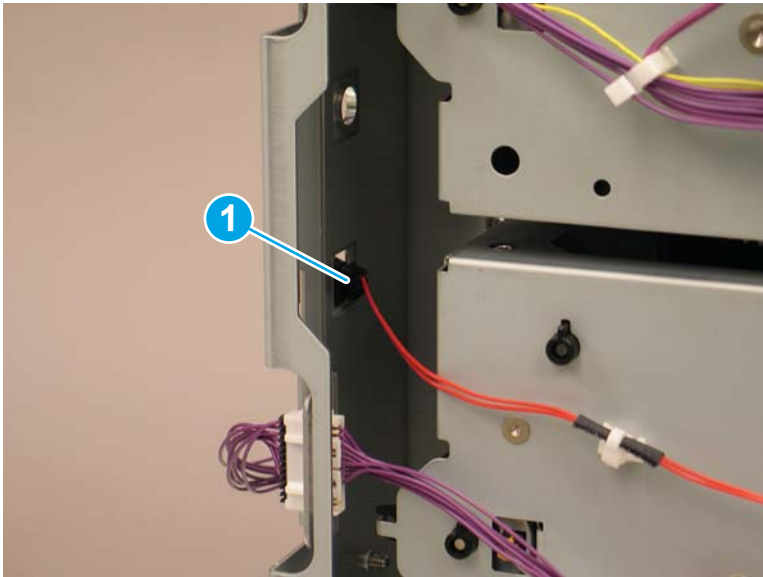

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Right door switch

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.

Figure 1-2263 Check spring position

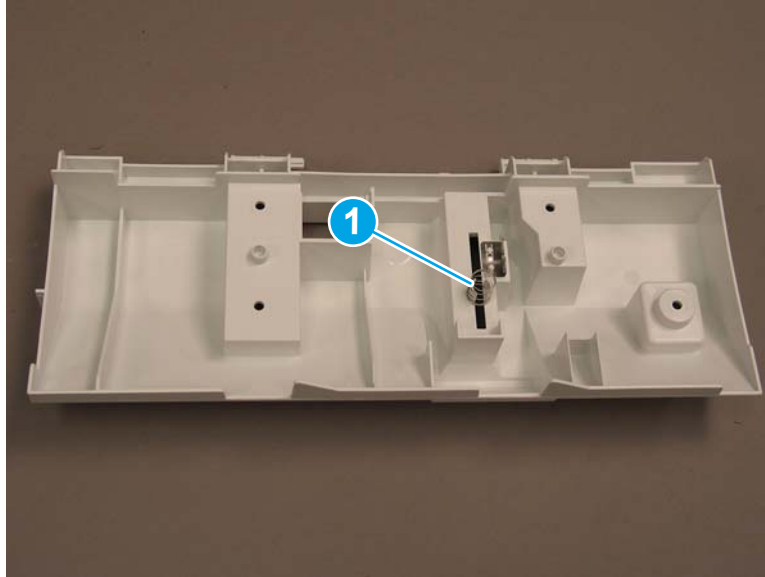

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Size sensor (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the size sensor \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the size sensor on the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Size sensor (1x550-sheet paper feeder with stand) part number	
RM2-0857-000CN	Size sensor assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Install the paper tray and verify that the printer detects the correct size of paper in the tray.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2264 Remove one screw

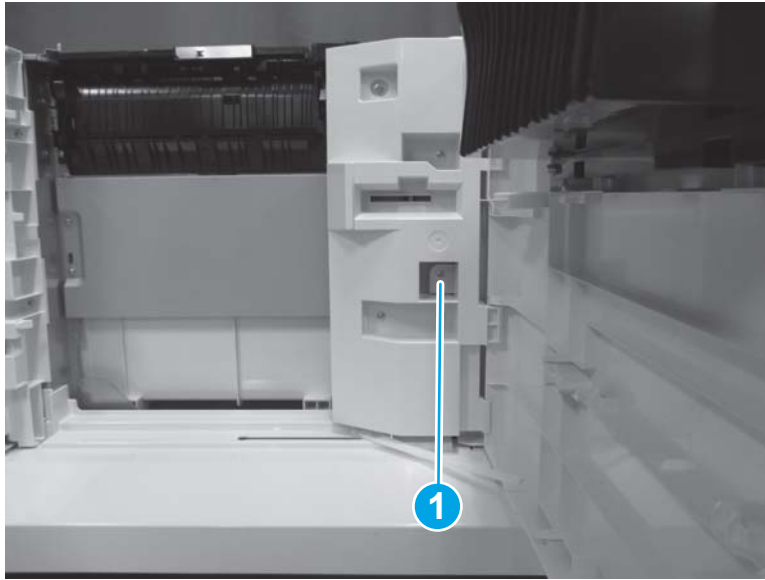

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


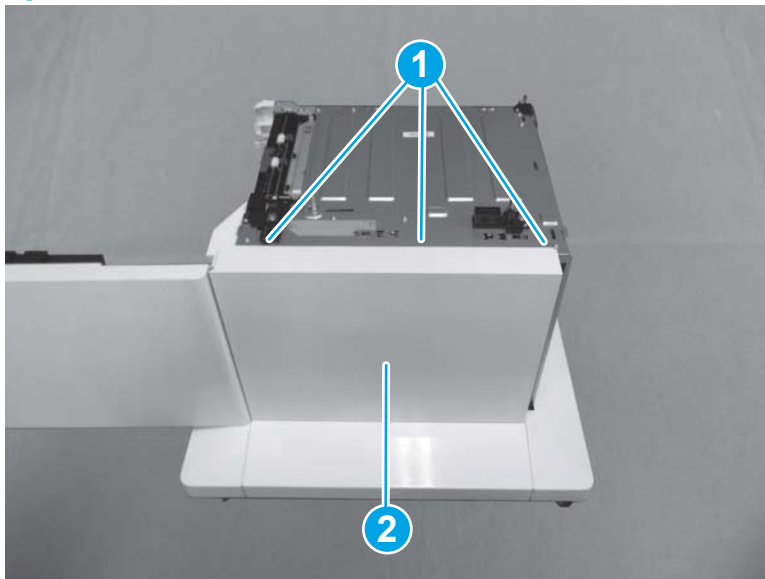
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2265 Remove the rear cover




## Step 2: Remove the size sensor (1x550-sheet paper feeder with stand)

1. Remove the paper tray.




2. At the back of the feeder, disconnect two connectors (callout 1), and then remove two screws (callout 2).

Figure 1-2266 Disconnect two connectors and remove two screws

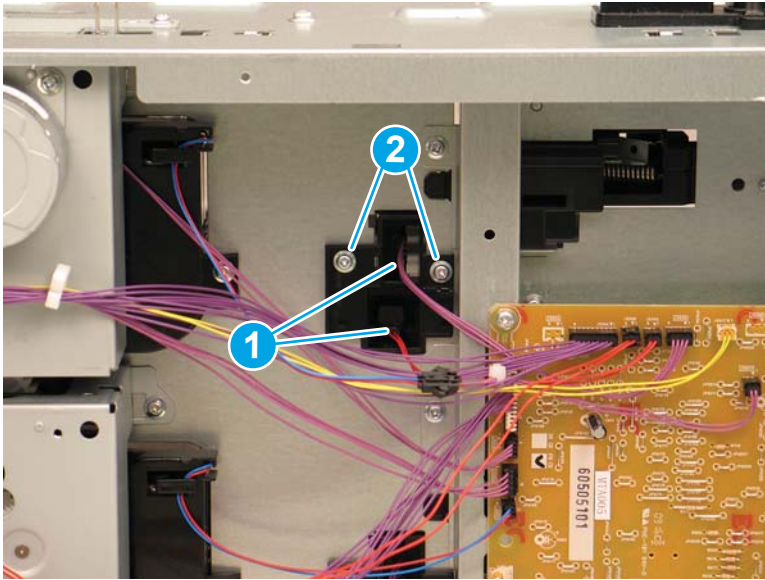

3. Remove the size sensor (callout 1).


Figure 1-2267 Remove the size sensor

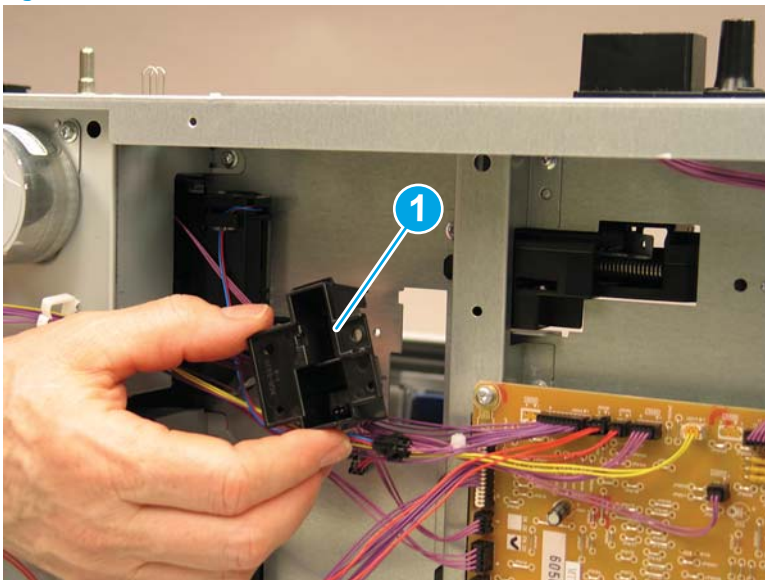

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Drawer connector holder and cable assembly (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the drawer connector holder and cable assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drawer connector holder and cable assembly on the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

#### Drawer connector holder and cable assembly (1x550-sheet paper feeder with stand) part numbers

RC4-8914-000CN	Holder, drawer connector
RM2-9286-000CN	Drawer upper cable assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 1x550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2268 Remove one screw

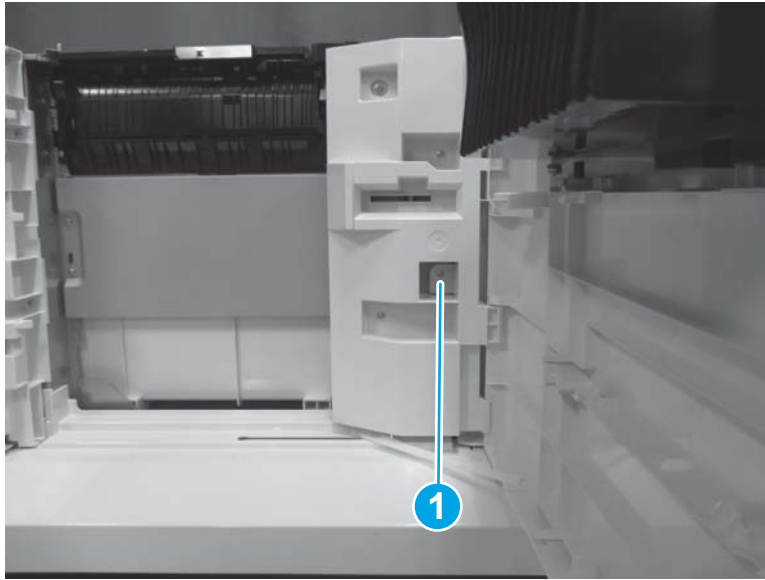

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


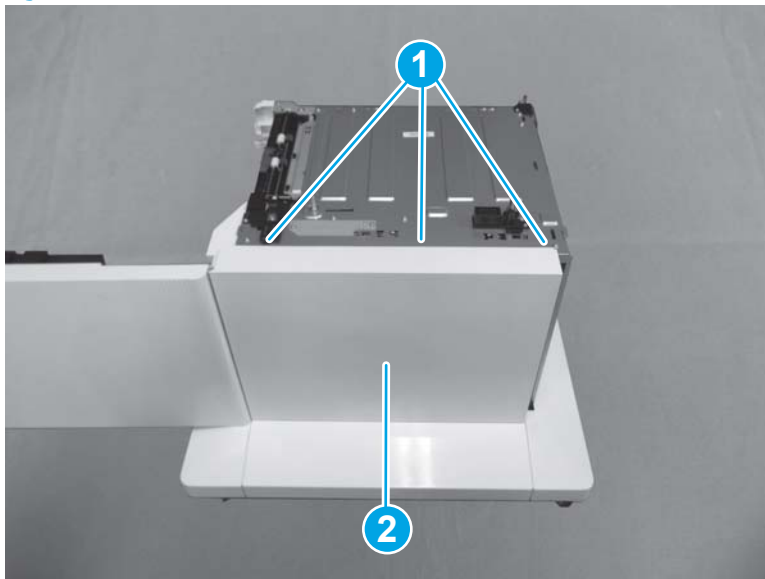
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2269 Remove the rear cover



### Step 2: Remove the drawer connector holder and cable assembly (1x550-sheet paper feeder with stand)


1. At the back of the feeder, disconnect one connector and release one retainer (callout 1).

Figure 1-2270 Disconnect one connector and release retainer

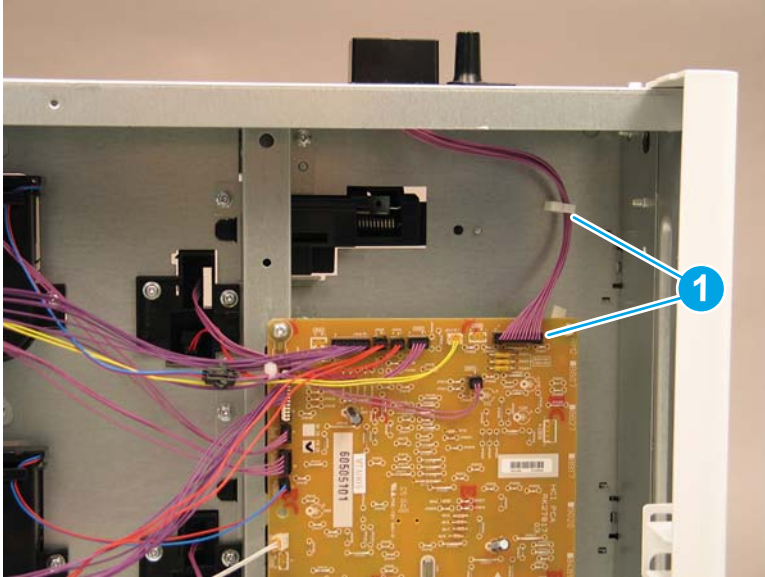

2. At the top of the paper feeder, remove one screw (callout 1).

Figure 1-2271 Remove one screw

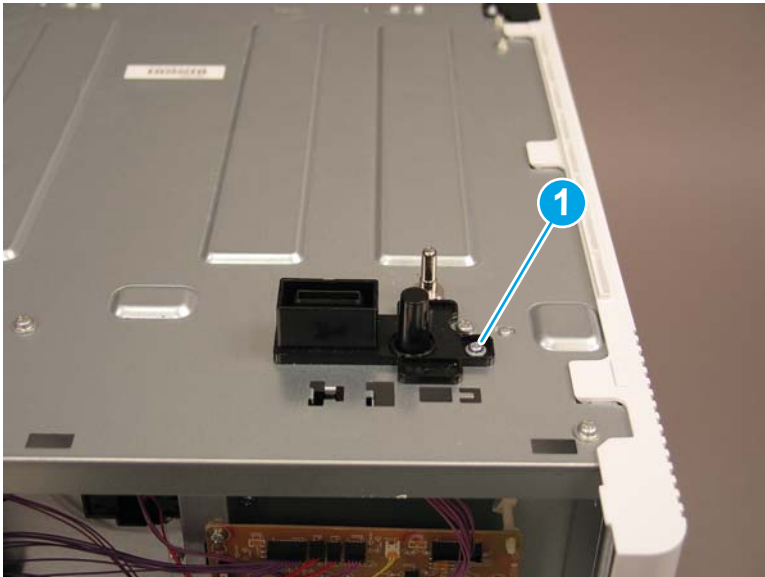


3. Lift the drawer connector holder and cable assembly away from the feeder to remove them.

Figure 1-2272 Remove the drawer connector holder and cable assembly




4. Use a small, flat-blad screwdriver to release two tabs (callout 1).

Figure 1-2273 Release two tabs

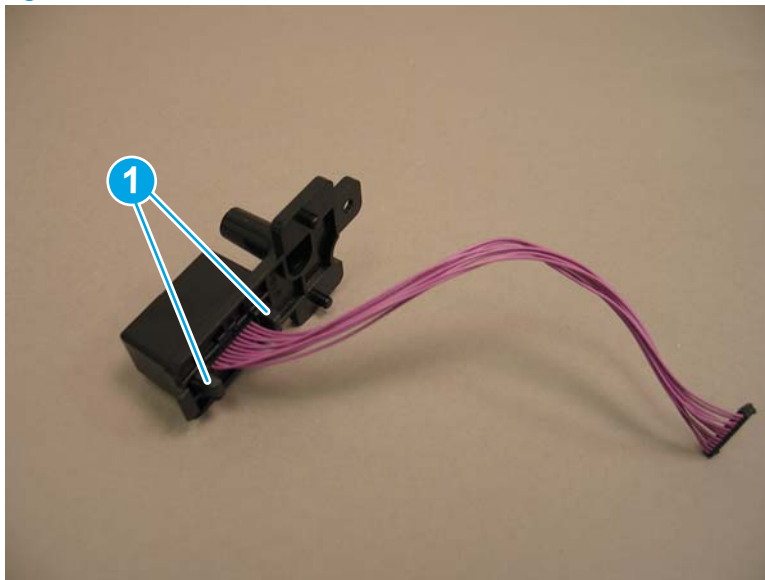

5. Remove the cable assembly from the drawer connector holder.

Figure 1-2274 Remove the cable assembly

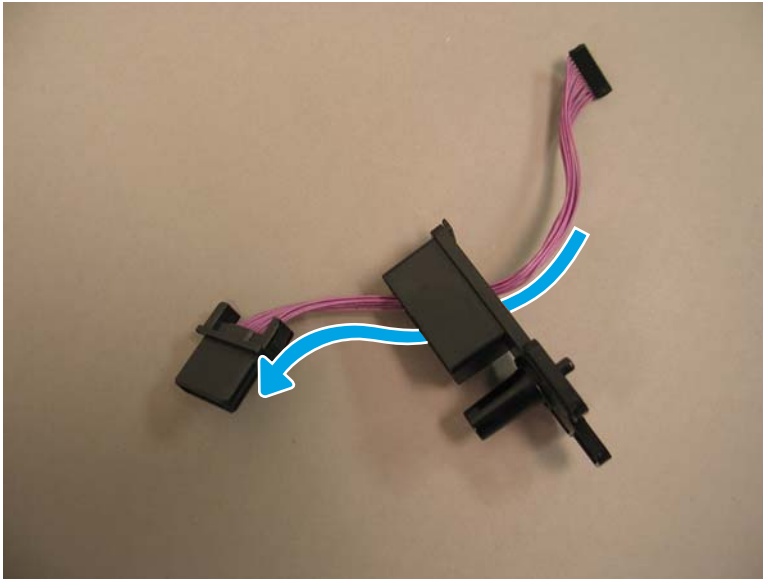

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Auto-close assembly (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the auto-close assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the auto-close assembly for the 1x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Auto-close assembly (1x550-sheet paper feeder with stand) part number	
RM2-0856-000CN	Auto close assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Slowly install the paper tray in the paper feeder. Verify that the auto-close assembly catches and pulls the tray completely closed.


### Step 1: Remove the auto-close assembly (1x550-sheet paper feeder with stand)

1. Remove the paper tray.

2. Remove one screw (callout 1), and then remove the auto-close assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2275** Remove the auto-close assembly

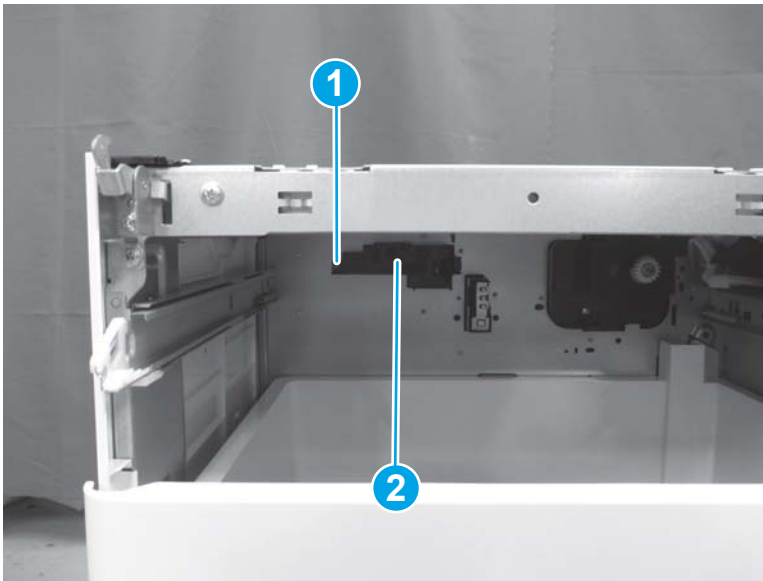



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Paper pickup assembly (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the paper pickup assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper pickup assembly for the 1x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Paper pickup assembly (1x550-sheet paper feeder with stand) part number	
RM2-1235-000CN	Paper pickup assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the right door (1x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).


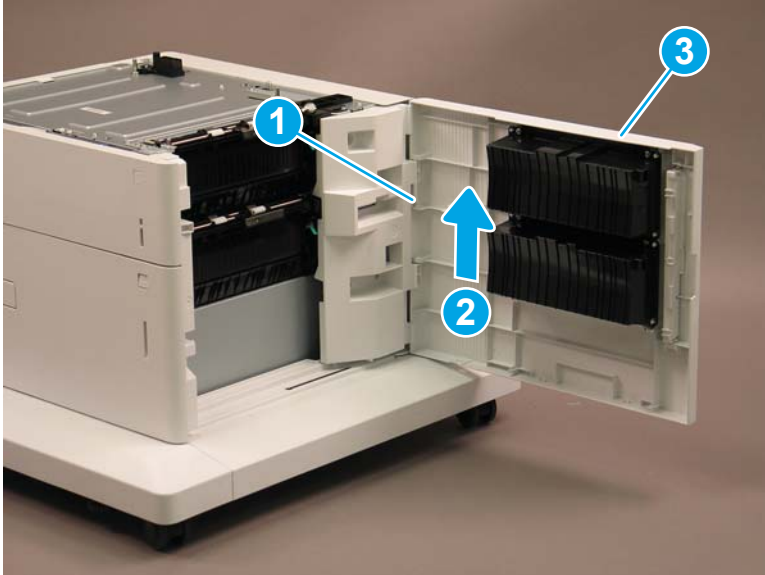
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2276 Remove the right door




Step 2: Remove the paper pickup assembly (1x550-sheet paper feeder with stand)

1. Remove the paper tray.
2. Remove four screws (callout 1), and then remove the hinge (callout 2).


Figure 1-2277 Remove four screws and the hinge

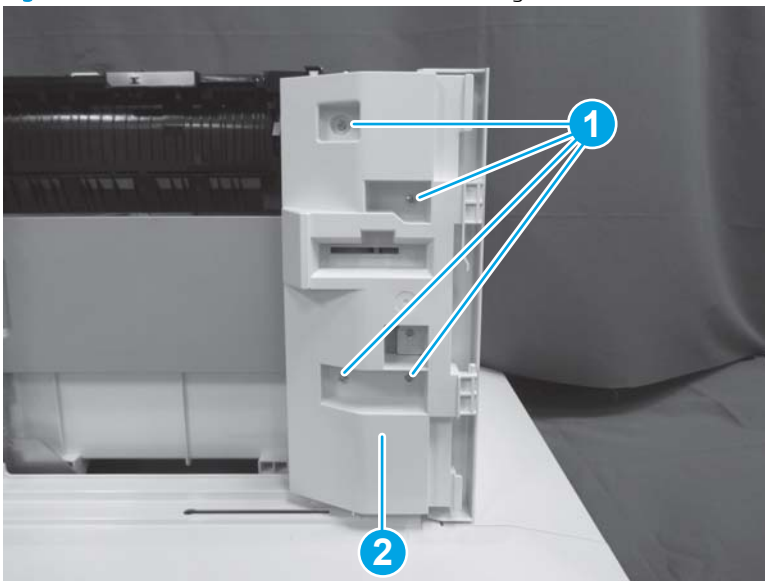

3. Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the paper pickup assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2278** Remove the paper pickup assembly

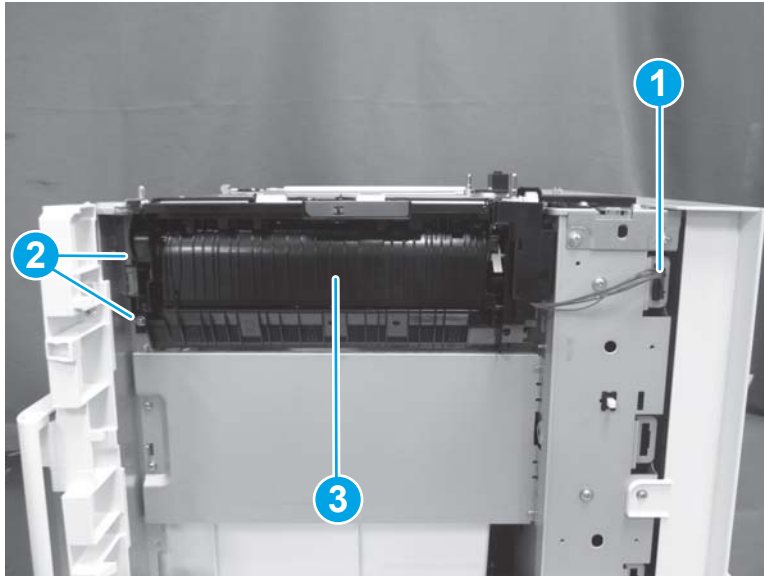


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Paper pickup assembly

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


**Figure 1-2279** Check spring position

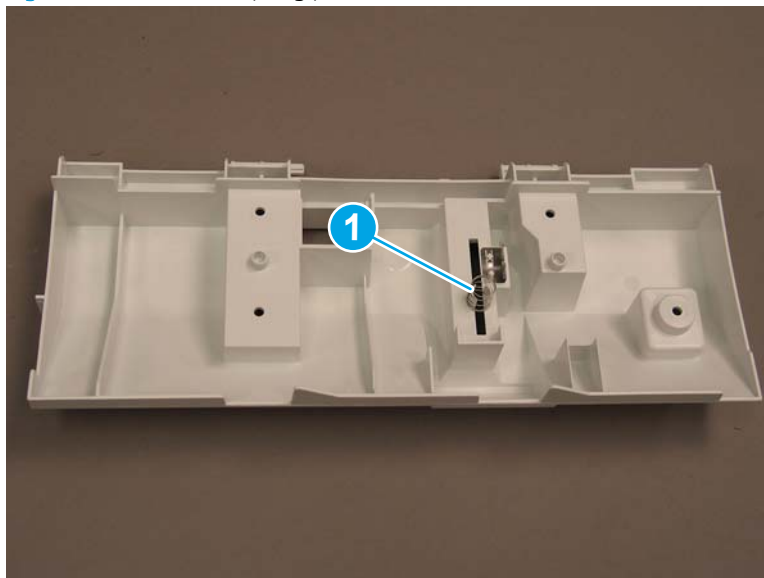

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Feed motor (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the feed motor for the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Feed motor (1x550-sheet paper feeder with stand) part number	
RK2-7831-000CN	Motor, stepping

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.


### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.




2. Remove one screw (callout 1).

Figure 1-2280 Remove one screw

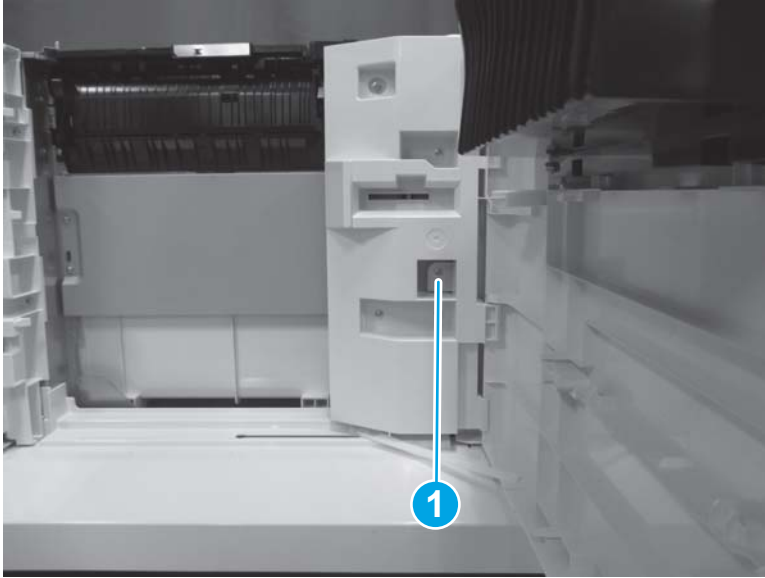


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2281 Remove the rear cover

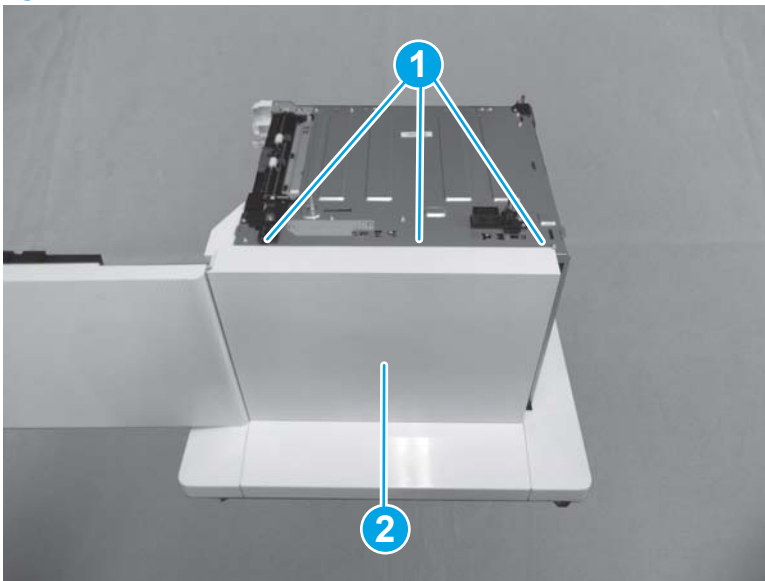

### Step 2: Remove the feed motor (1x550-sheet paper feeder with stand)


- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2282 Remove the feed motor

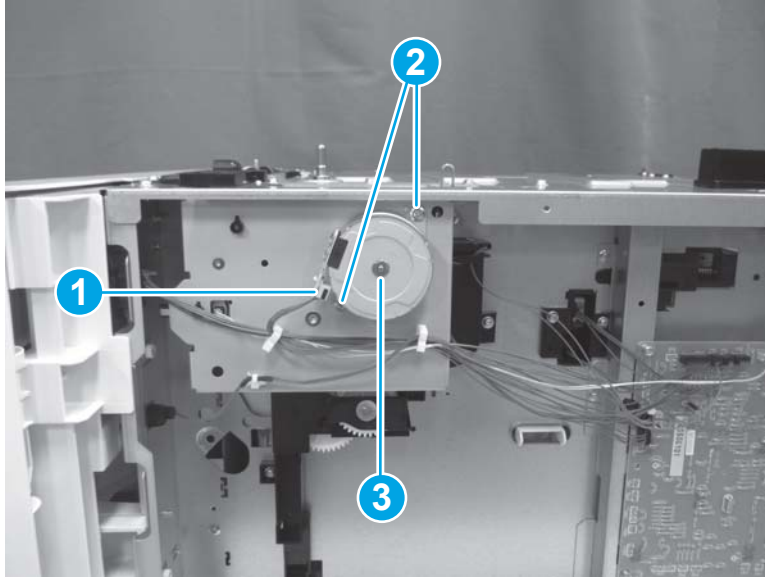

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Drive assembly (1x550-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drive assembly for the 1x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drive assembly (1x550-sheet paper feeder with stand) part number	
RM2-1222-000CN	Drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2283 Remove one screw

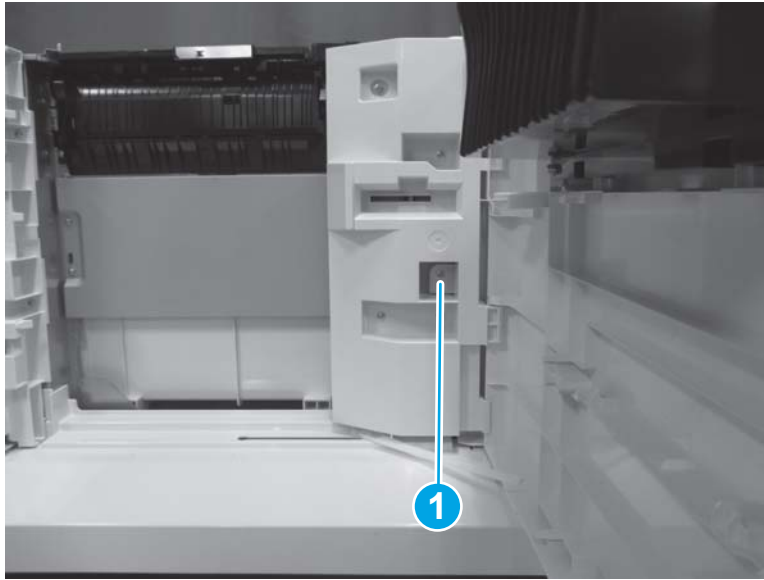


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2284 Remove the rear cover

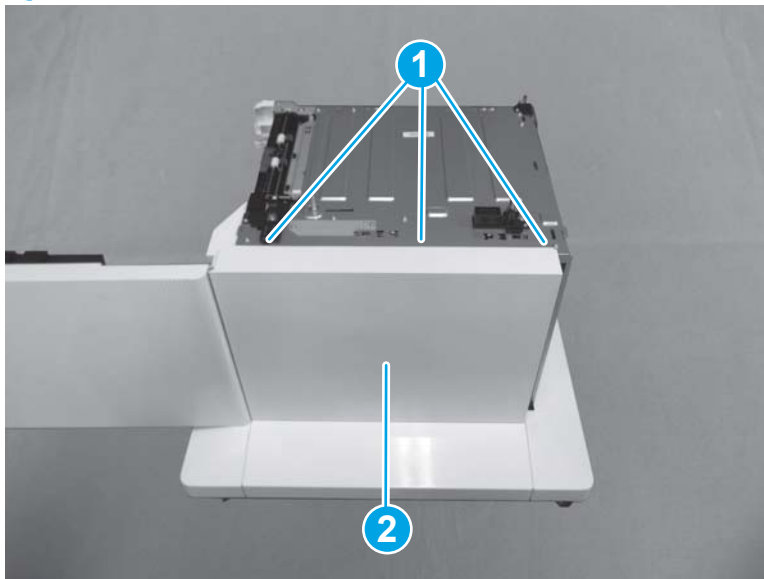

### Step 2: Remove the feed motor (1x550-sheet paper feeder with stand)


- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2285 Remove the feed motor

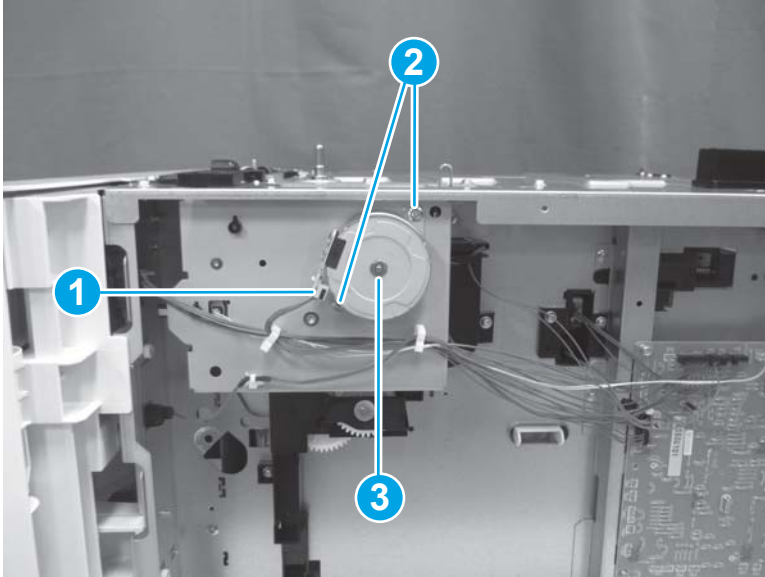


Step 3: Remove the drive assembly (1x550-sheet paper feeder with stand)

1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).


Figure 1-2286 Disconnect three connectors

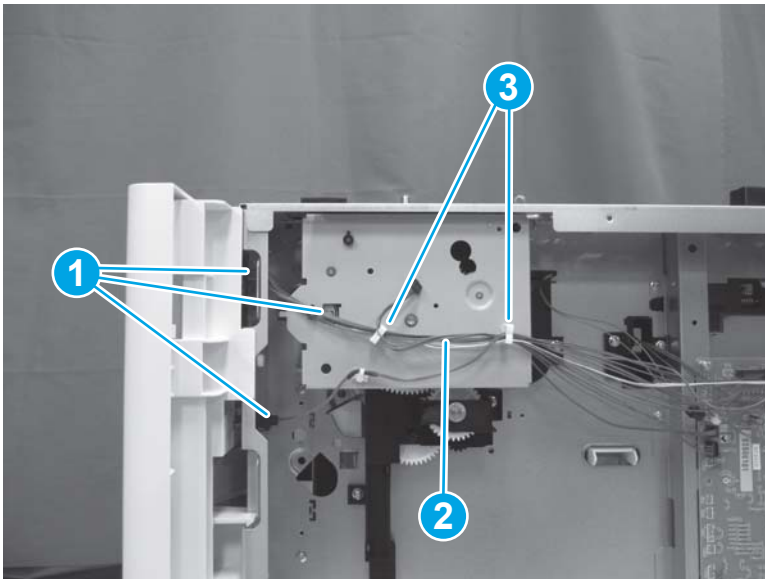

2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2287** Remove the drive assembly

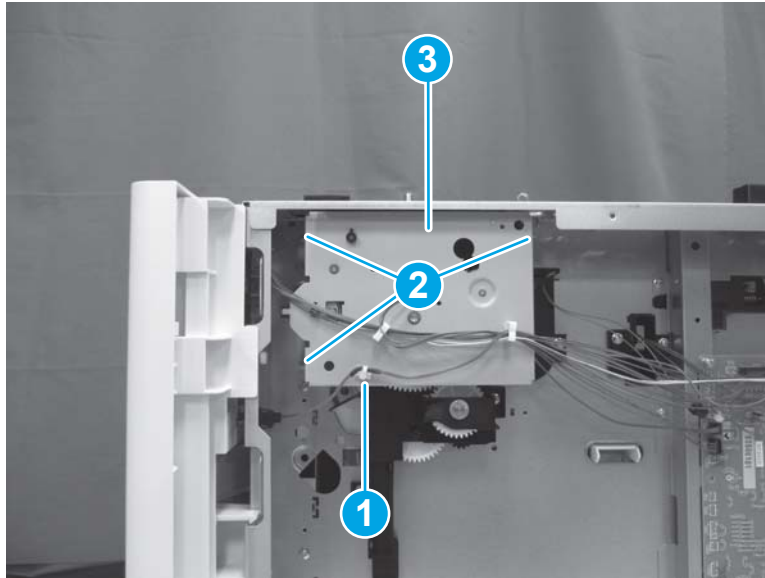



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Pickup alienation holder (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the pickup alienation holder \(1x550-sheet paper feeder with stand\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pickup alienation holder for the 1x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Pickup alienation holder (1x550-sheet paper feeder with stand) part number	
RM2-1223-000CN	Estrangement holder assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.


### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.




2. Remove one screw (callout 1).

Figure 1-2288 Remove one screw

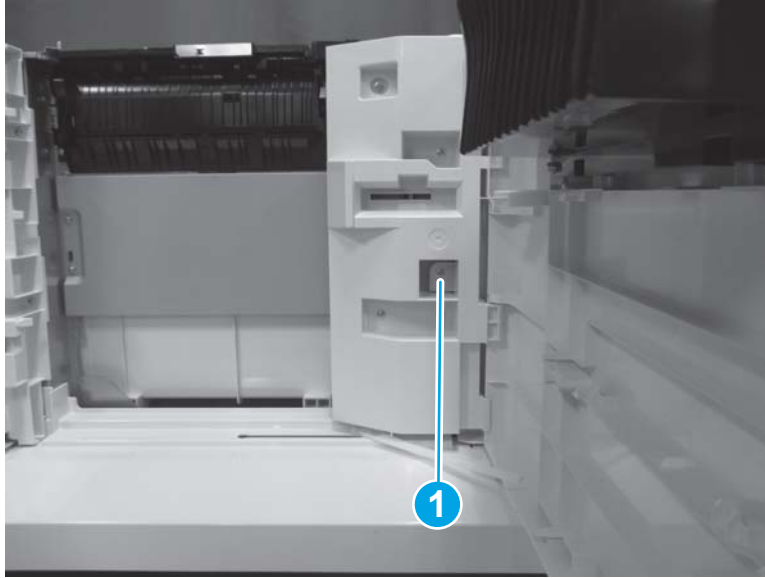


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2289 Remove the rear cover

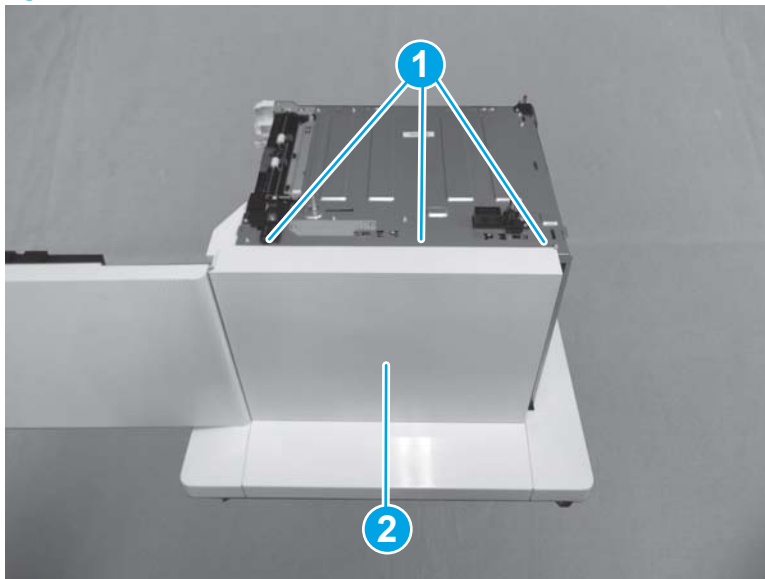

### Step 2: Remove the feed motor (1x550-sheet paper feeder with stand)


- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2290 Remove the feed motor

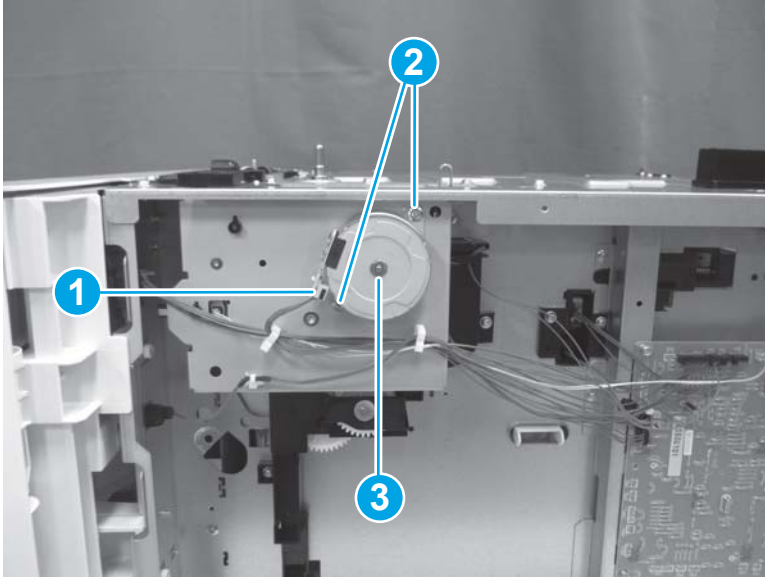


Step 3: Remove the drive assembly (1x550-sheet paper feeder with stand)

1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).


Figure 1-2291 Disconnect three connectors

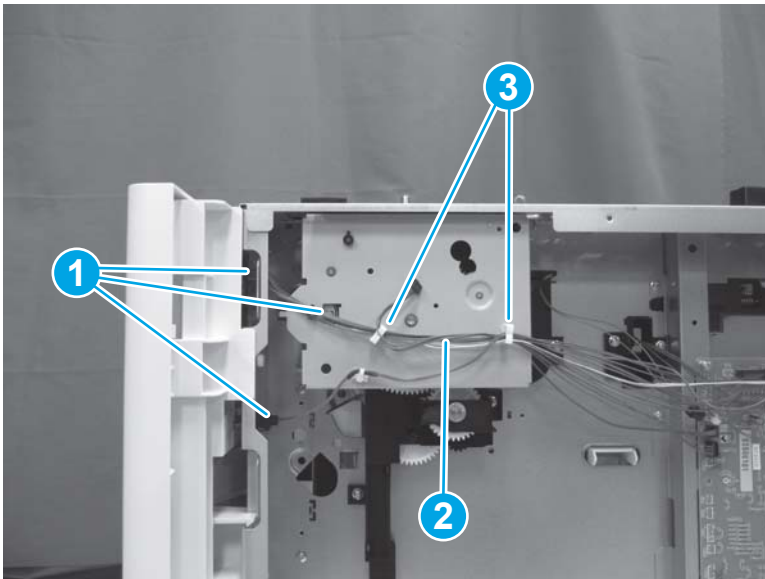

2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2292** Remove the drive assembly

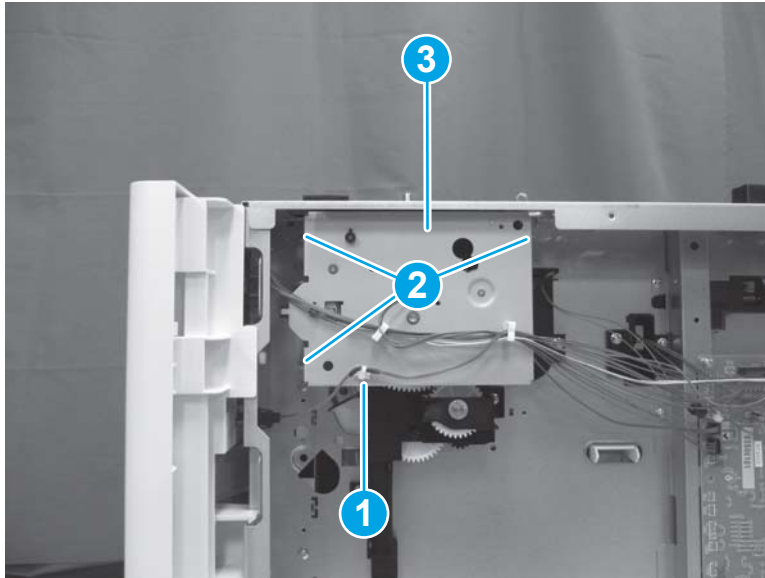


**Step 4: Remove the pickup alienation holder (1x550-sheet paper feeder with stand)**

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).


**Figure 1-2293** Disconnect one connector

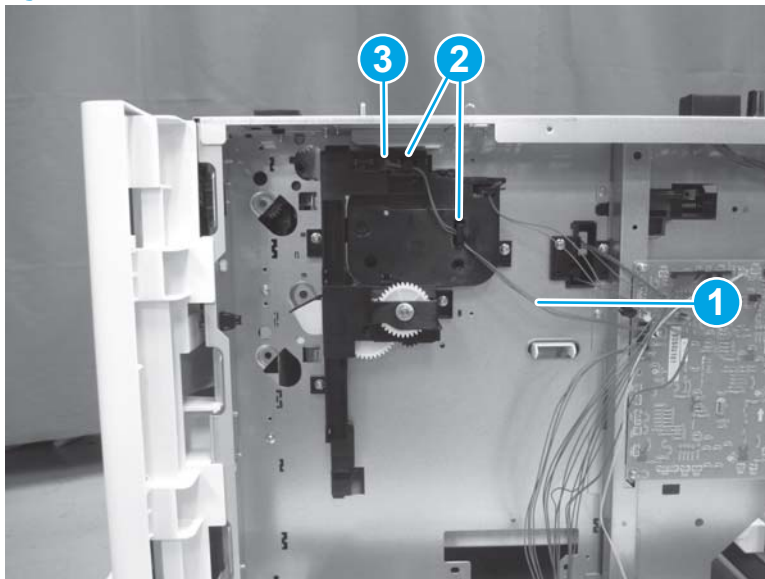

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2294** Remove four screws and the pickup alienation holder

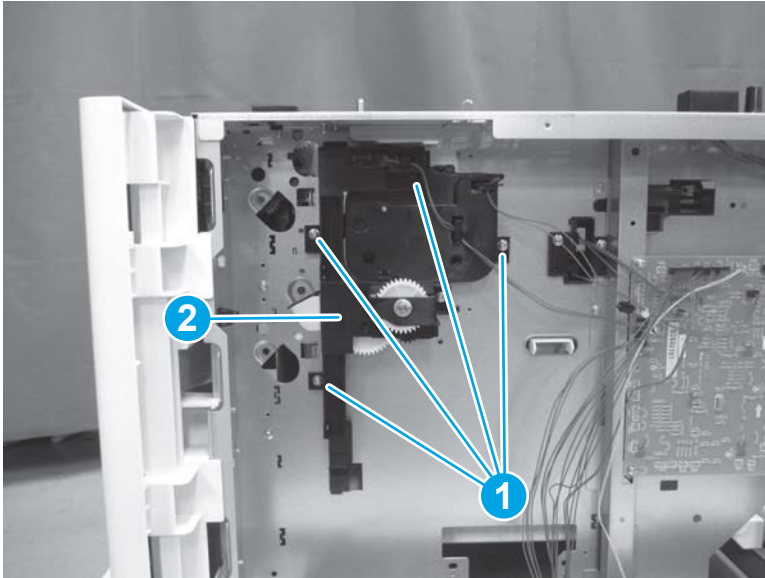



### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


## Removal and replacement: Lifter drive assembly (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the pickup alienation holder \(1x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the lifter drive assembly \(1x550-sheet paper feeder with stand\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the lifter drive assembly for the 1x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Lifter drive assembly (1x550-sheet paper feeder with stand) part number	
RM2-2091-000CN	Lifter drive assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2295 Remove one screw

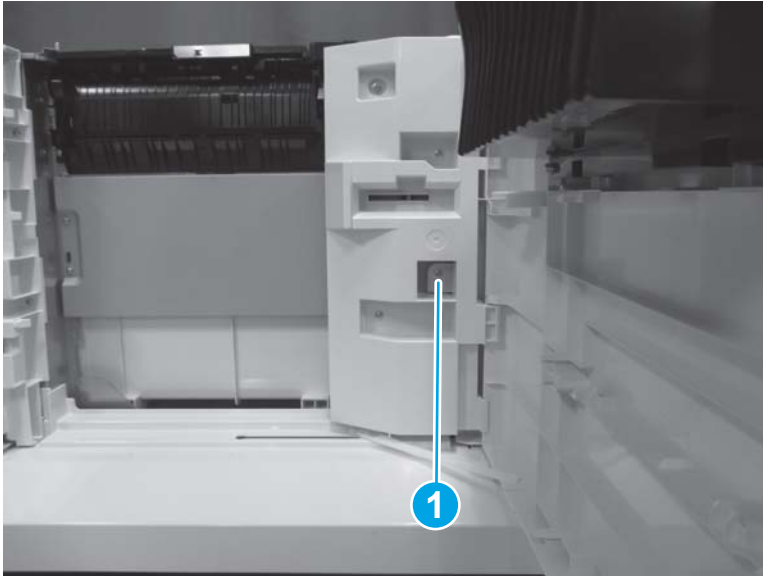

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2296 Remove the rear cover

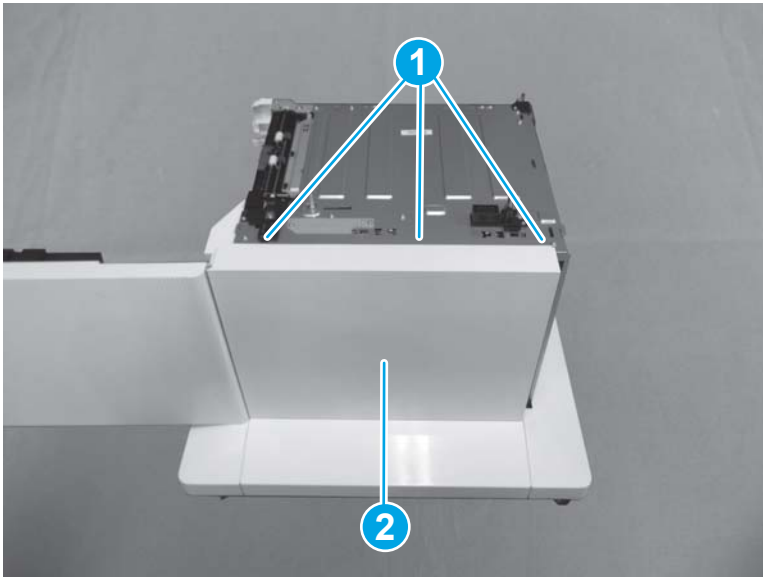


### Step 2: Remove the feed motor (1x550-sheet paper feeder with stand)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2297** Remove the feed motor

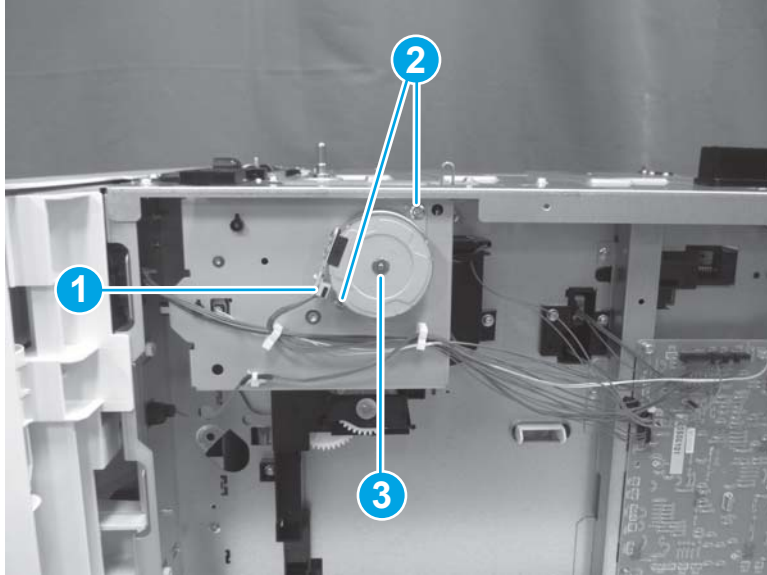

**Step 3: Remove the drive assembly (1x550-sheet paper feeder with stand)**


1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

**Figure 1-2298** Disconnect three connectors

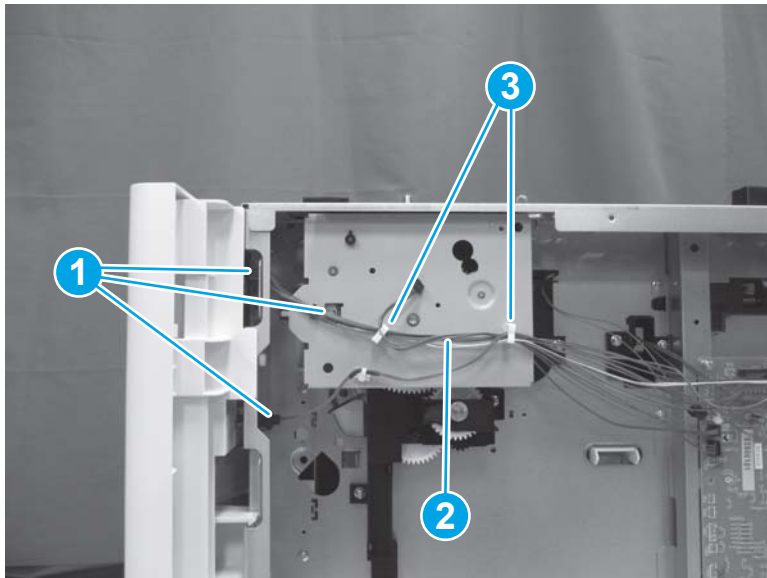




2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2299** Remove the drive assembly

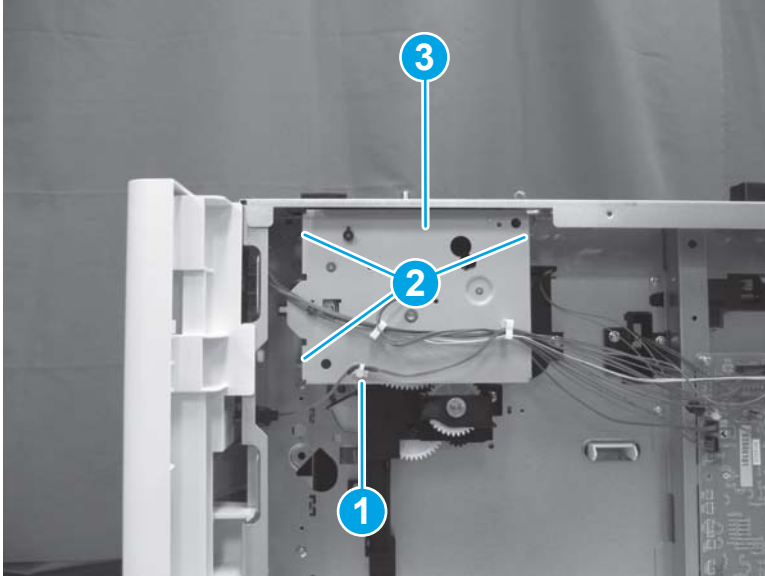

**Step 4: Remove the pickup alienation holder (1x550-sheet paper feeder with stand)**

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).


**Figure 1-2300** Disconnect one connector

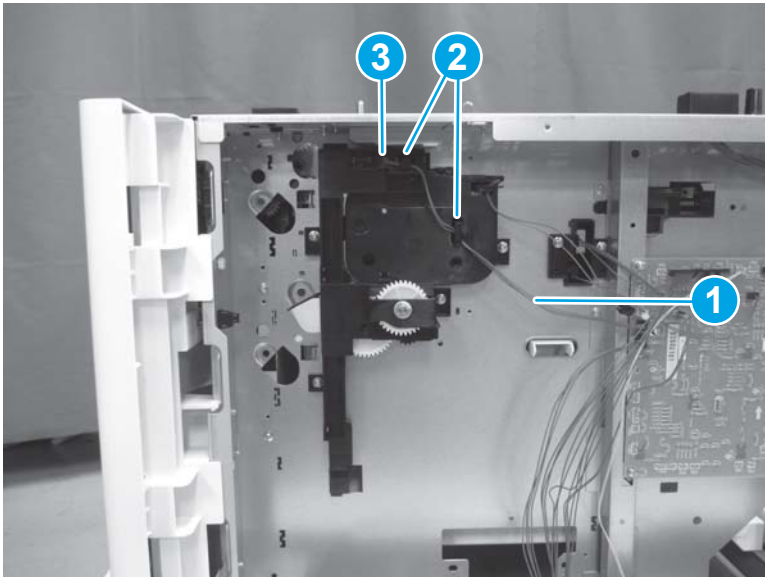

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2301** Remove four screws and the pickup alienation holder

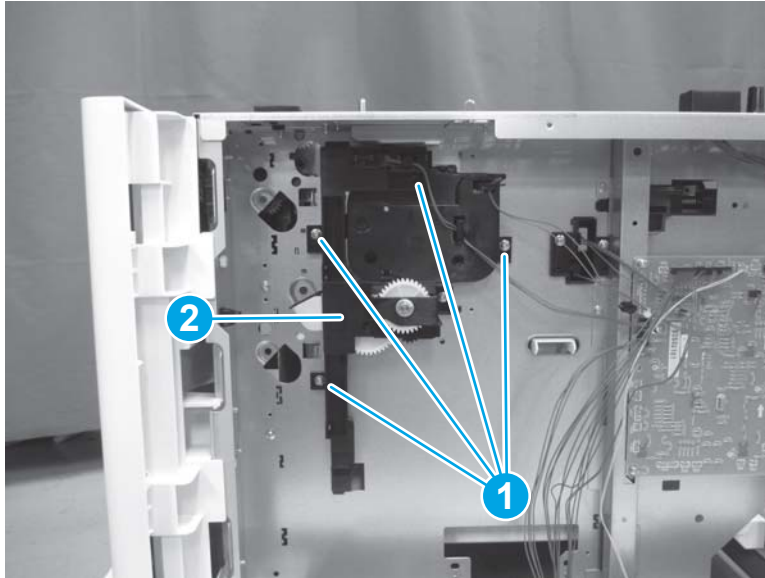


#### Step 5: Remove the lifter drive assembly (1x550-sheet paper feeder with stand)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the lifter drive assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2302** Remove three screws and the lifter drive assembly

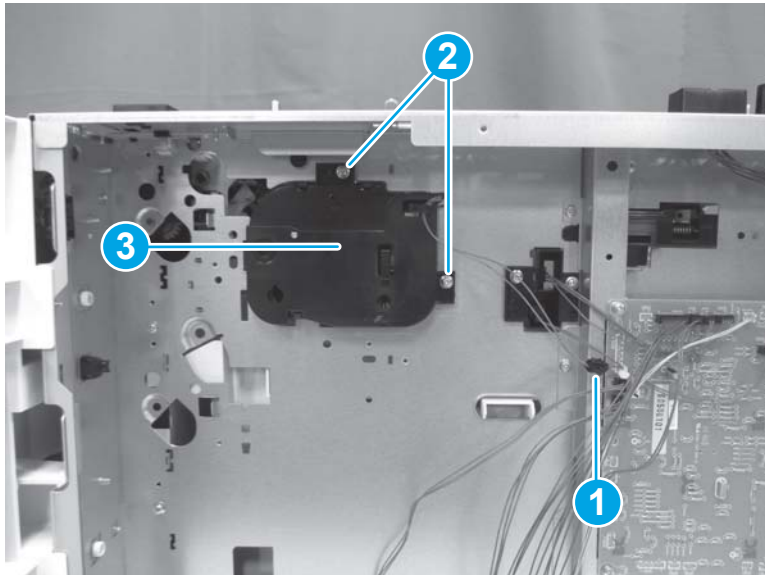

#### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Controller PCA (1x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(1x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the controller PCA \(1x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the controller PCA for the 1x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Controller PCA (1x550-sheet paper feeder with stand) part number	
RM2-8482-000CN	Paper deck controller PCB assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 1x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (1x550-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2303 Remove one screw

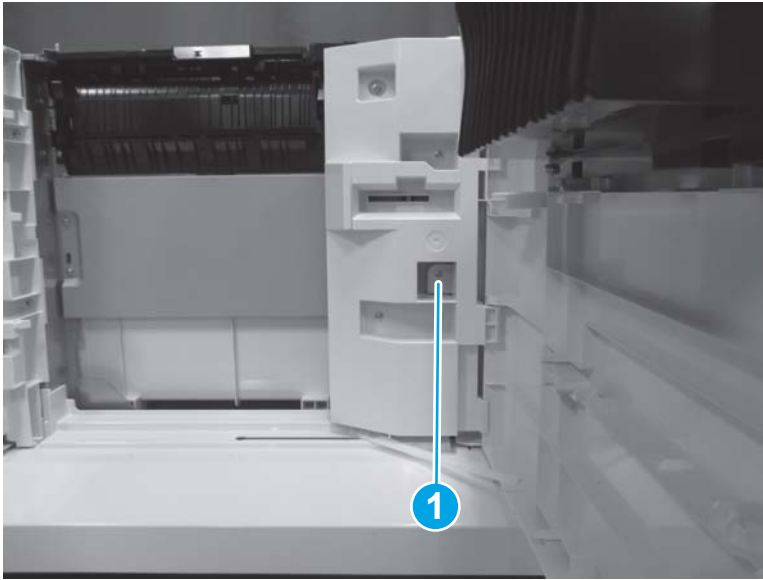


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2304 Remove the rear cover

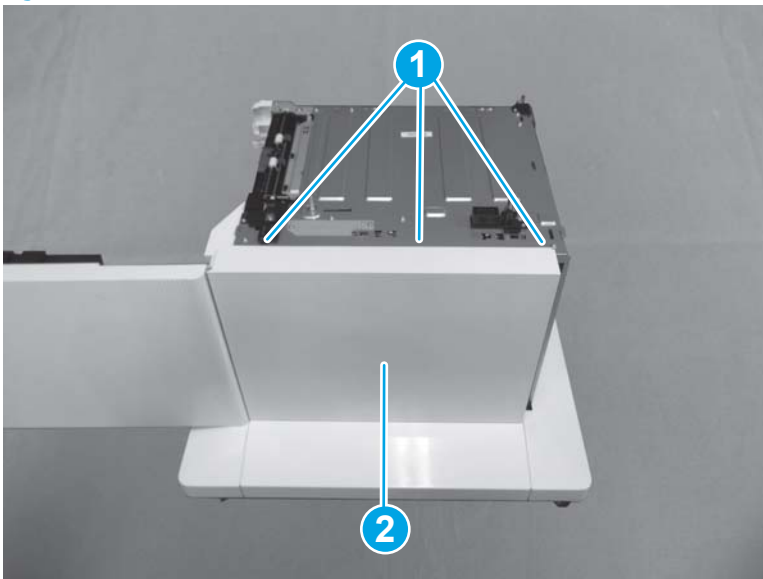

### Step 2: Remove the controller PCA (1x550-sheet paper feeder with stand)


- ▲ Disconnect all of the connectors on the controller PCA. Remove two screws (callout 1), release two tabs (callout 2), and then remove the controller PCA (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2305 Remove the controller PCA

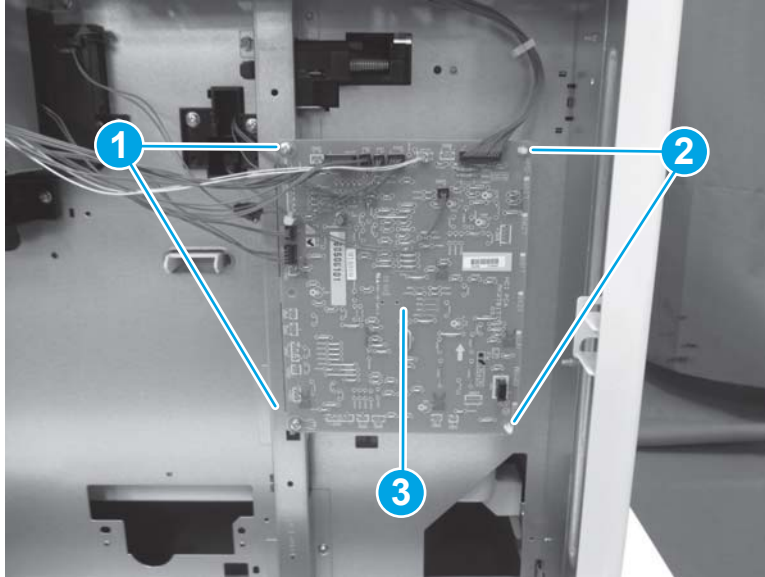

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: 3x550-sheet paper feeder with stand

- [Removal and replacement: Caster covers \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Left cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door link \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Left lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Front lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door switch \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Size sensor \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drawer connector holder and cable assembly \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Auto-close assemblies \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Paper pickup assemblies \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Feed motors \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drive assemblies \(Trays 3 and 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drive assembly \(Tray 4\) \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Pickup alienation holder \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Lifter drive assemblies \(Trays 3 and 4\) \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Lifter drive assembly \(Tray 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Removal and replacement: Controller PCA \(3x550-sheet paper feeder with stand\)](#)




## Removal and replacement: Caster covers (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the caster cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the caster covers on the 3x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Caster covers (3x550-sheet paper feeder with stand) part number	
RC5-0417-000CN	Cover, caster, right
RC5-0418-000CN	Cover, caster, left

---

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the caster cover (3x550-sheet paper feeder with stand)

1. Slide the caster cover away from the printer to remove it.

---

 **NOTE:** The figure below shows the left caster cover. The procedure is the same for the right caster cover.

---

Figure 1-2306 Remove the caster cover




2. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

**Special installation instructions: Caster cover (3x550-sheet paper feeder with stand)**

- ▲ Before installing the caster cover, position the caster wheel (callout 1) so that it faces the front of the printer.


Figure 1-2307 Position the caster wheel

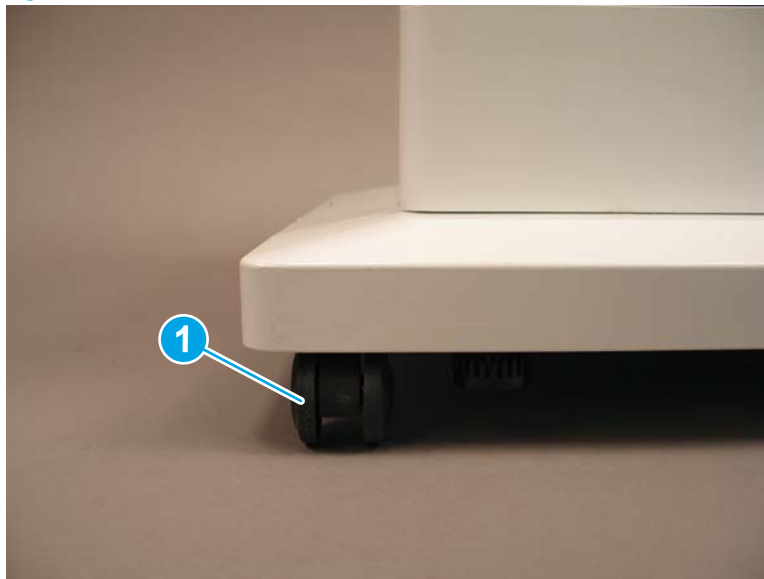

**Step 2: Unpack the replacement assembly**

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Left cover (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the left cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left cover on the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left cover (3x550-sheet paper feeder with stand) part number	
RC5-0387-000CN	Cover, left

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the left cover (3x550-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).


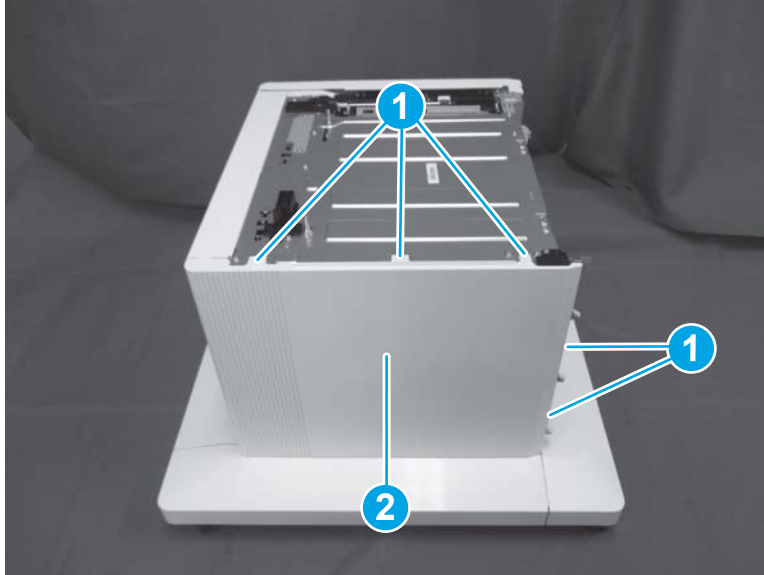
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2308 Remove the left cover



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Right door link (3x550-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the right door link](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the link on the right door on the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door link (3x550-sheet paper feeder with stand) part number	
RC4-9824-000CN	Link, door

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link

1. Lift the end of the link arm up and out of the right door.

Figure 1-2309 Lift the link arm end

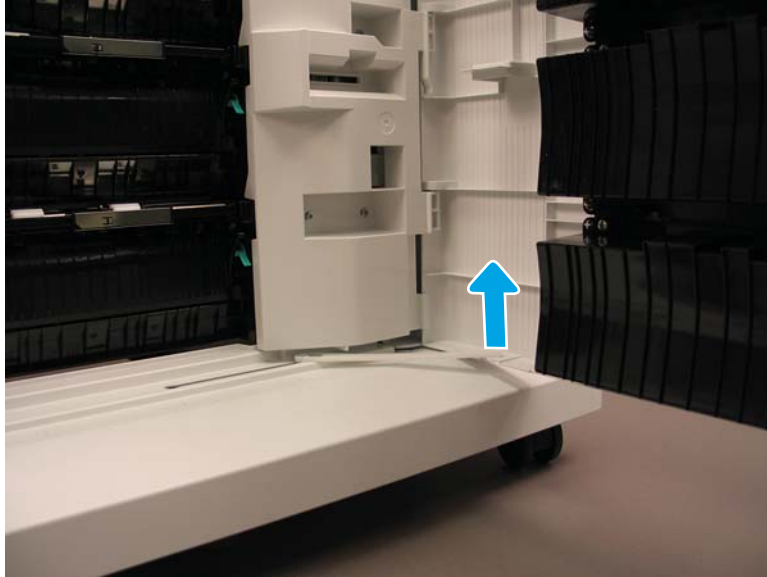


2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2310 Remove the link arm

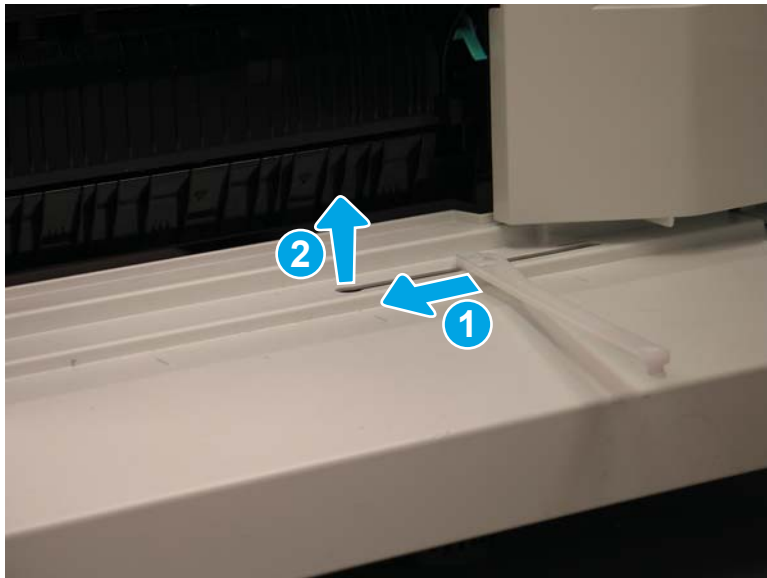


### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.





---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right door (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door link \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door on the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door (3x550-sheet paper feeder with stand) part number	
RM2-1230-000CN	Right door assembly

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link (3x550-sheet paper feeder with stand)

1. Lift the end of the link arm up and out of the right door.

Figure 1-2311 Lift the link arm end

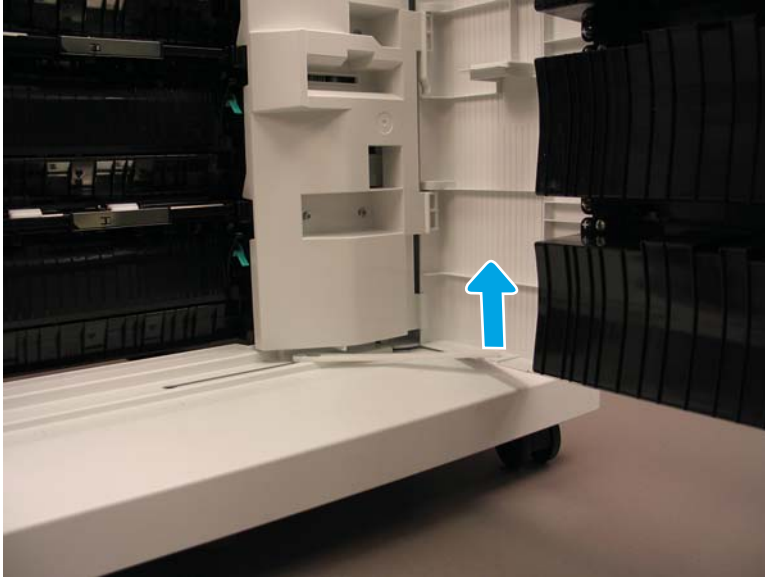

2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.


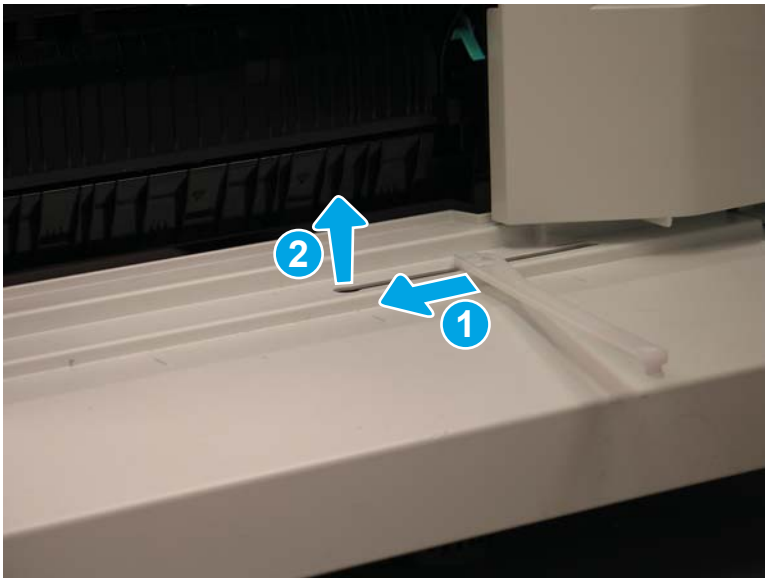

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2312 Remove the link arm



### Step 2: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.


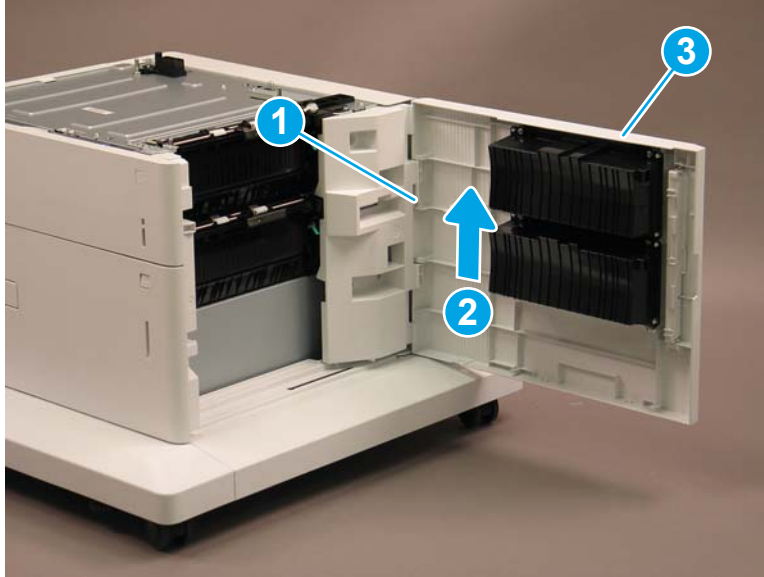
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2313 Remove the right door



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Rear cover (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear cover (3x550-sheet paper feeder with stand) part number	
RCS-0386-000CN	Cover, rear

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2314 Remove one screw

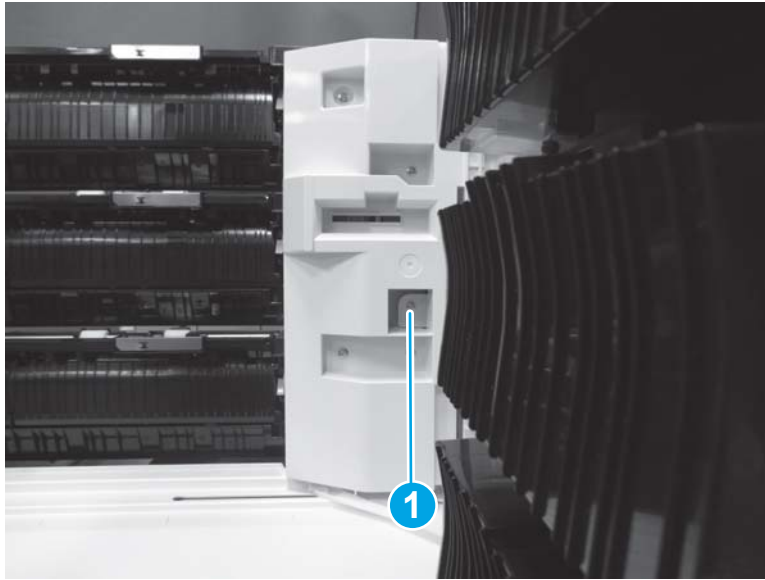

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


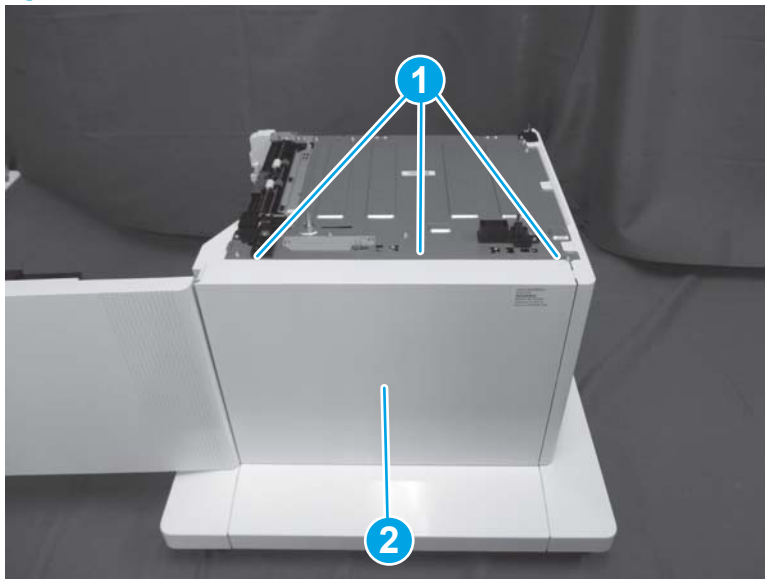
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2315 Remove the rear cover



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Left lower cover (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the left cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the left lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left lower cover on the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left lower cover (3x550-sheet paper feeder with stand) part number	
RC5-0385-000	Cover, left lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the left cover (3x550-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).


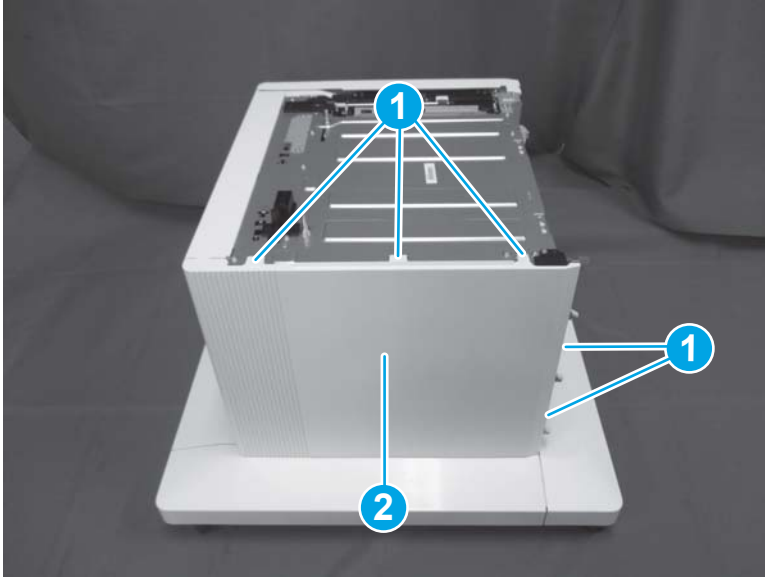
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2316 Remove the left cover



Step 2: Remove the left lower cover (3x550-sheet paper feeder with stand)


- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2317 Remove the left lower cover

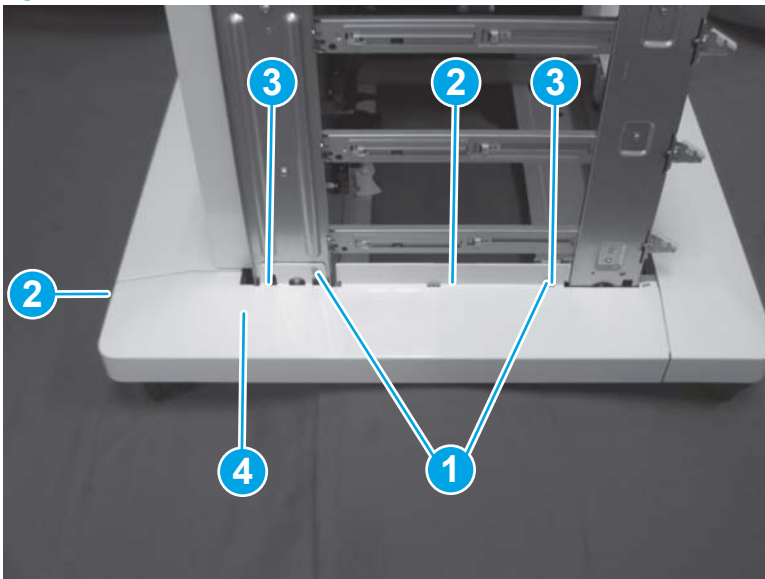

Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Right lower cover (3x550-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right lower cover](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right lower cover for the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right lower cover (3x550-sheet paper feeder with stand) part number	
---	--

RC5-0384-000CN	Cover, right lower
----------------	--------------------

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2318 Remove one screw

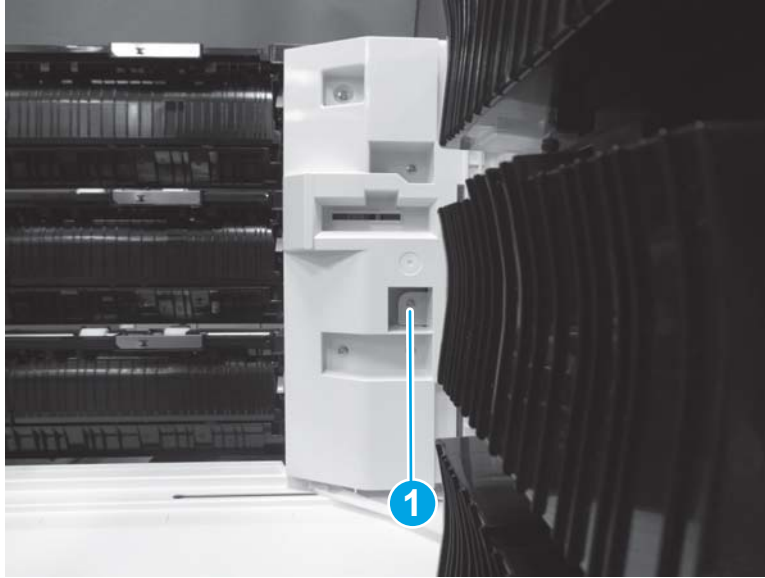

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


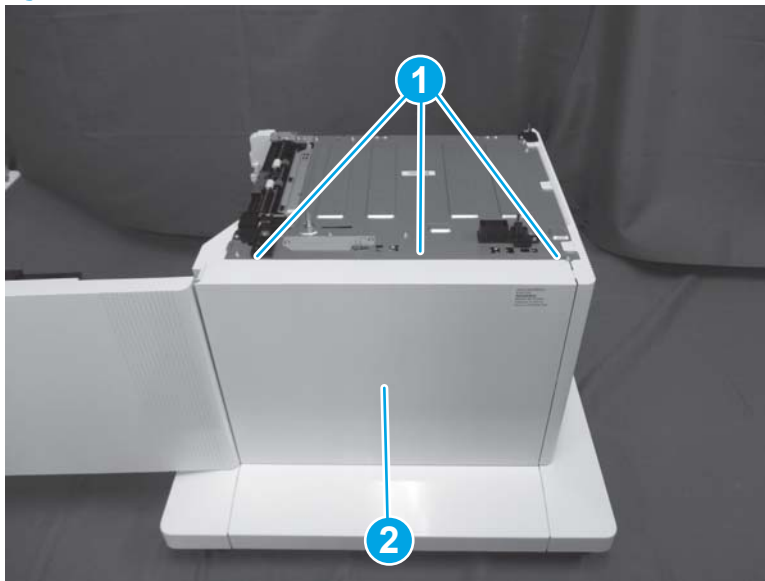

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2319 Remove the rear cover



### Step 2: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.


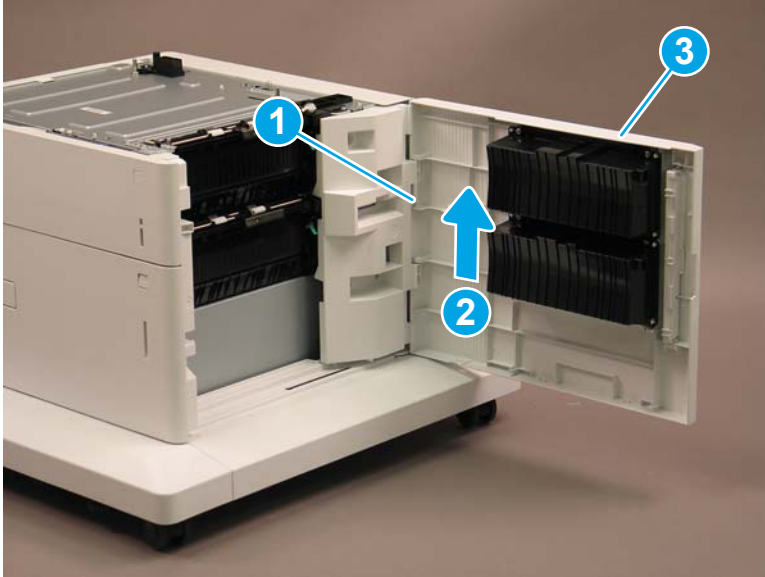
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2320 Remove the right door



Step 3: Remove the right lower cover


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2321 Remove four screws and the hinge

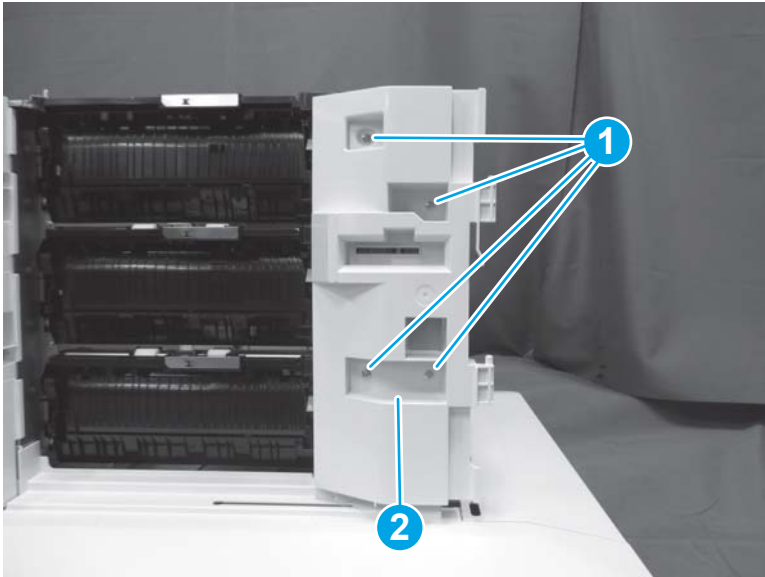


2. Remove two screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2322 Remove two screws and the inner cover

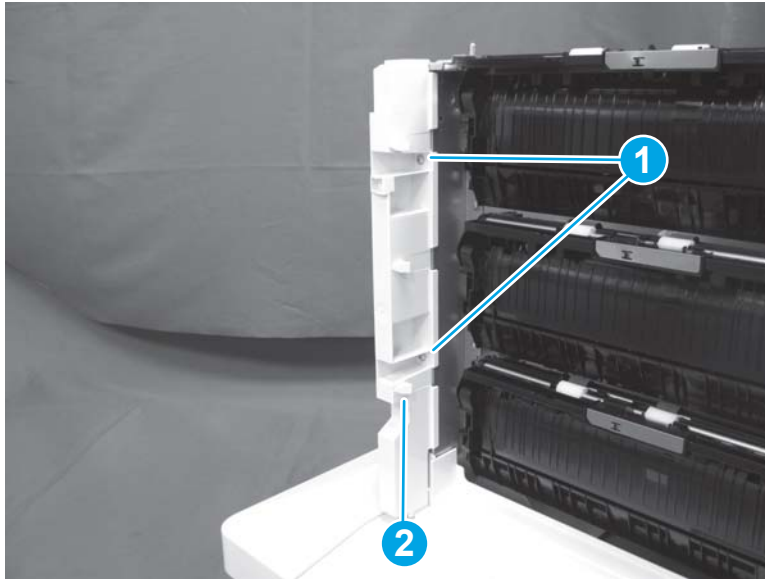

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2323 Remove the right lower cover

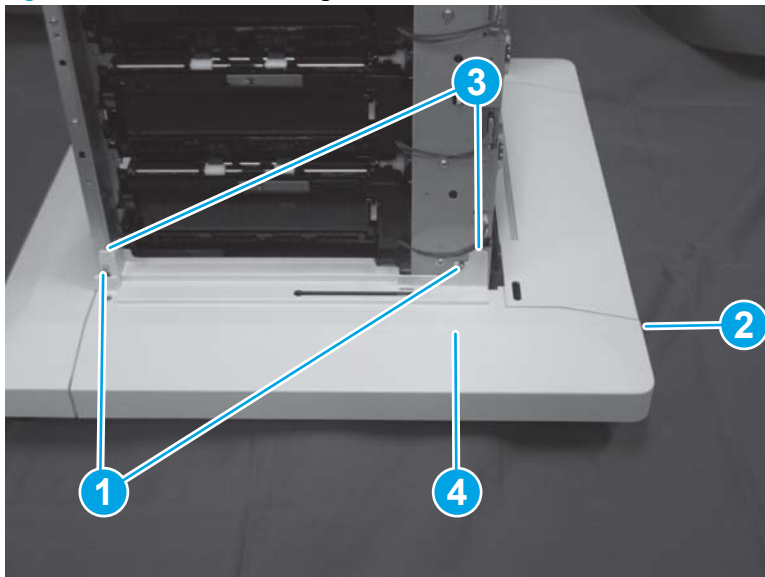

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.



Figure 1-2324 Check spring position

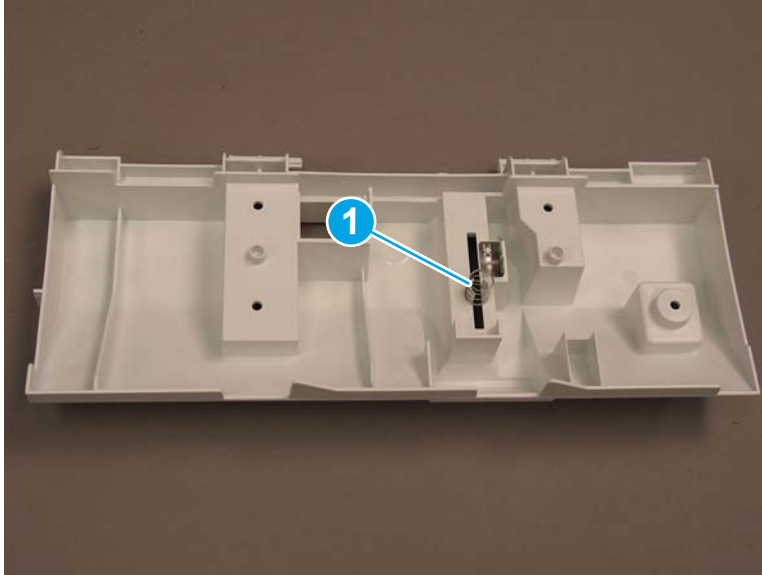



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Rear lower cover (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the left cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the left lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the right lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 6: Remove the rear lower cover](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear lower cover for the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear lower cover (3x550-sheet paper feeder with stand) part number	
RC5-0399-000CN	Cover, rear lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2325 Remove one screw

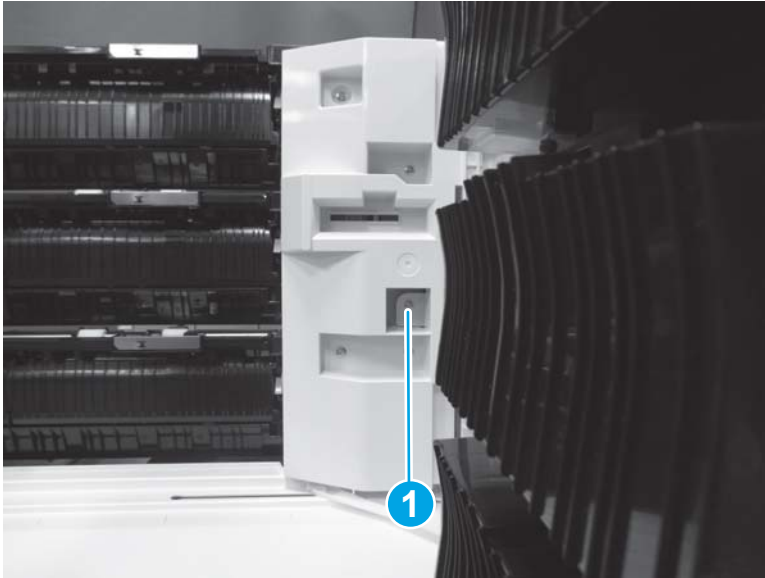

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2326 Remove the rear cover

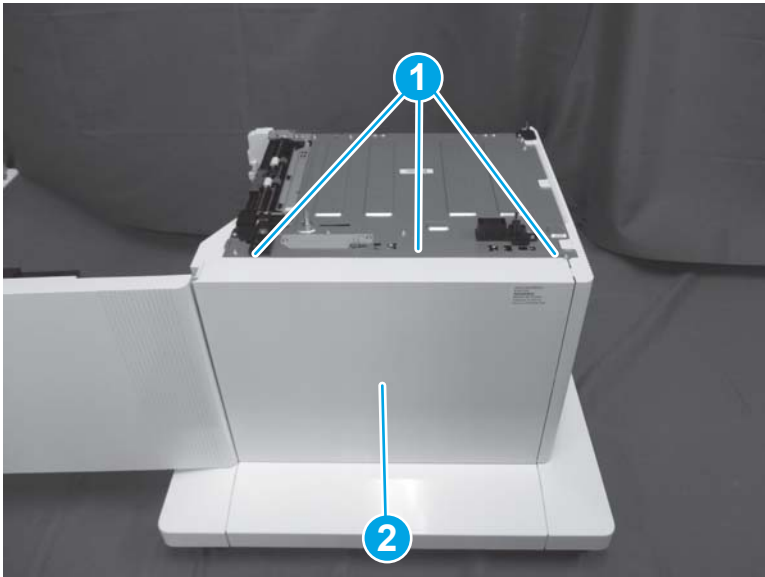


### Step 2: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2327** Remove the right door

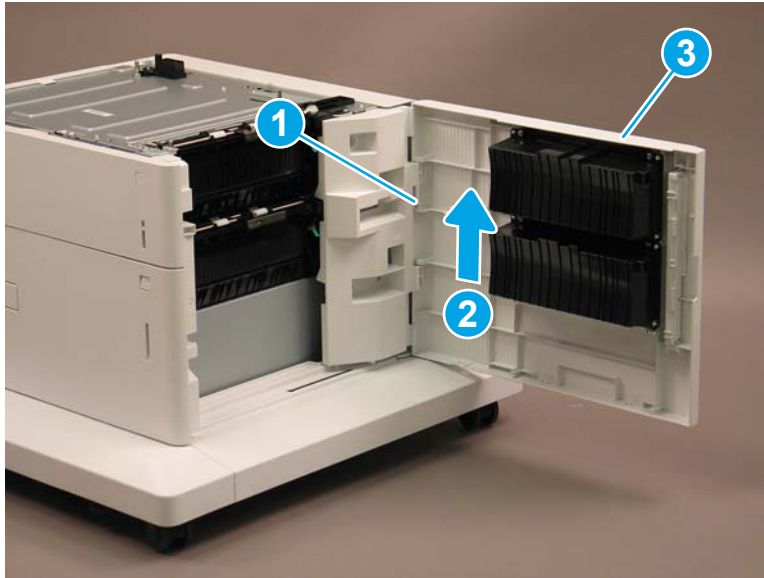


### Step 3: Remove the left cover (3x550-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2328** Remove the left cover

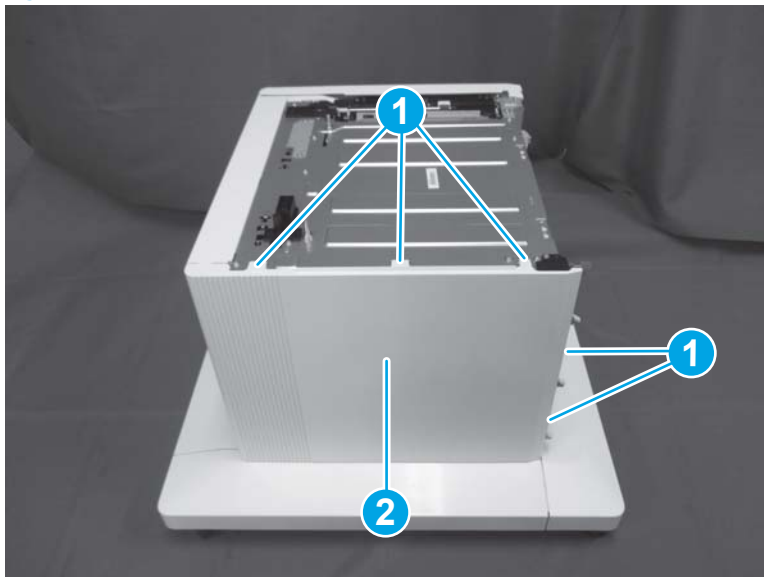


### Step 4: Remove the left lower cover (3x550-sheet paper feeder with stand)

- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2329** Remove the left lower cover

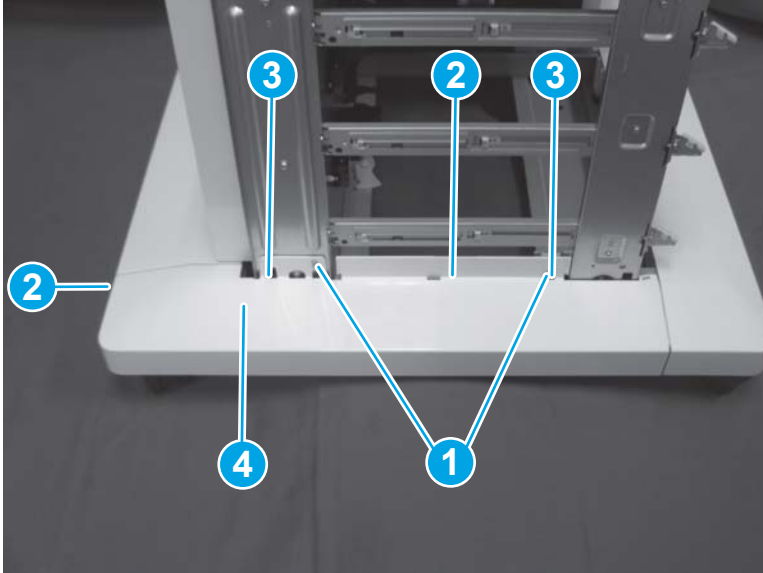

**Step 5: Remove the right lower cover (3x550-sheet paper feeder with stand)**


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2330** Remove four screws and the hinge

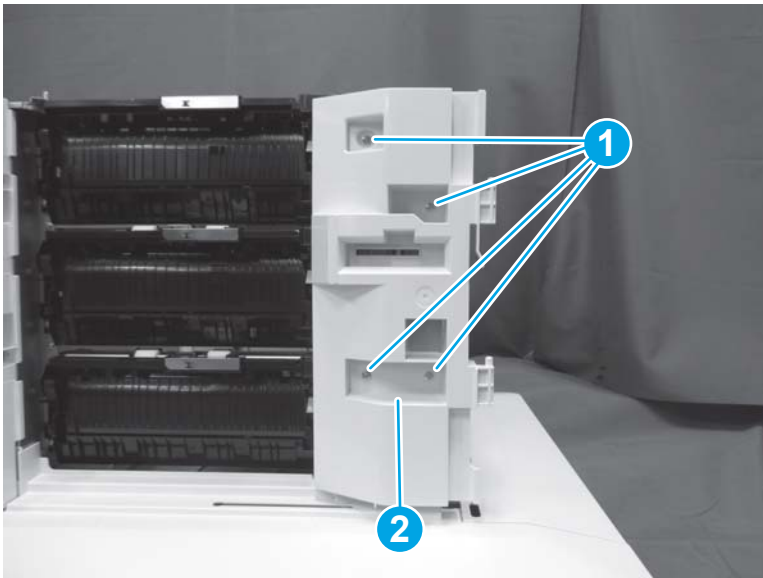


2. Remove two screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2331 Remove two screws and the inner cover

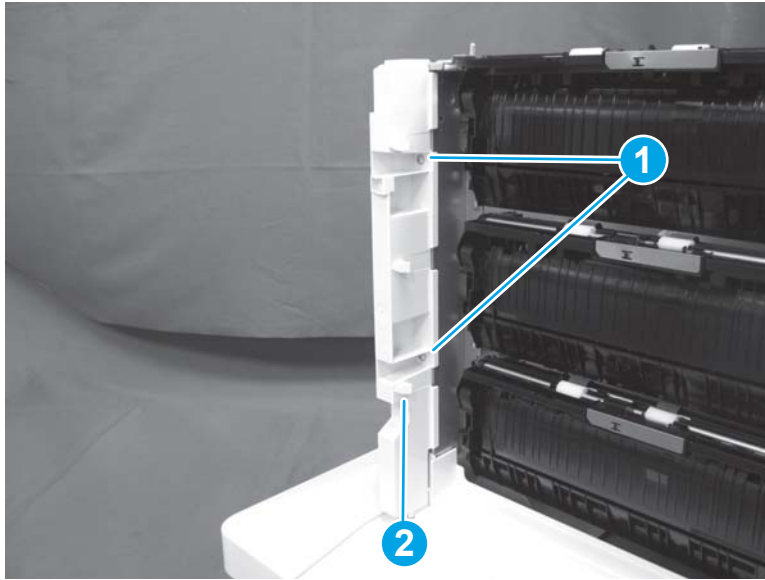

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2332 Remove the right lower cover

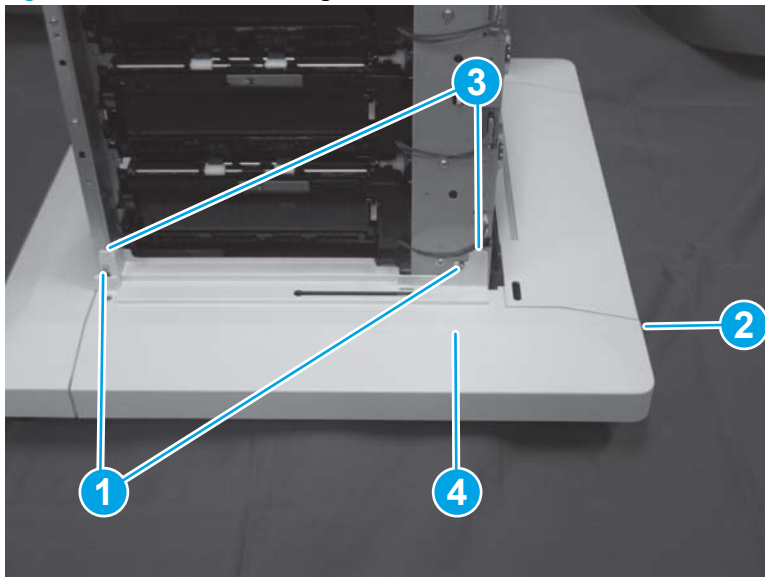


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


Figure 1-2333 Check spring position

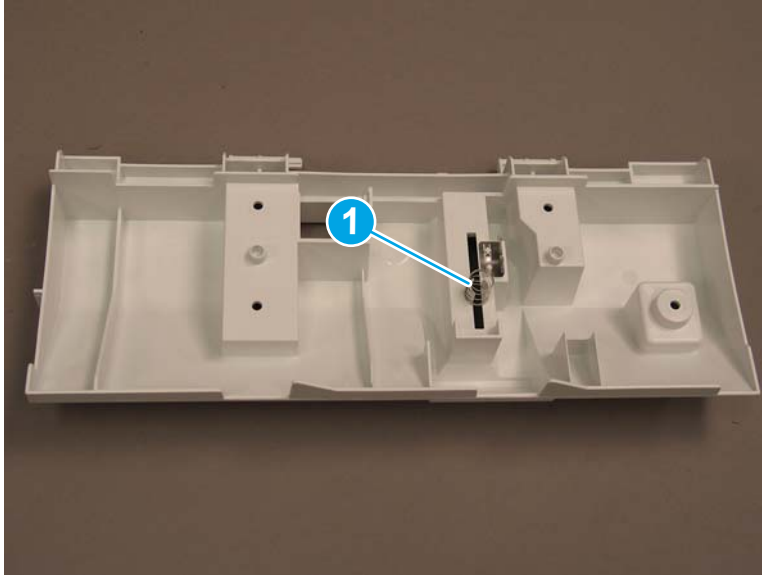

Step 6: Remove the rear lower cover

- ▲ Remove two screws (callout 1), and then remove the rear lower cover (callout 2).

Figure 1-2334 Remove the rear lower cover

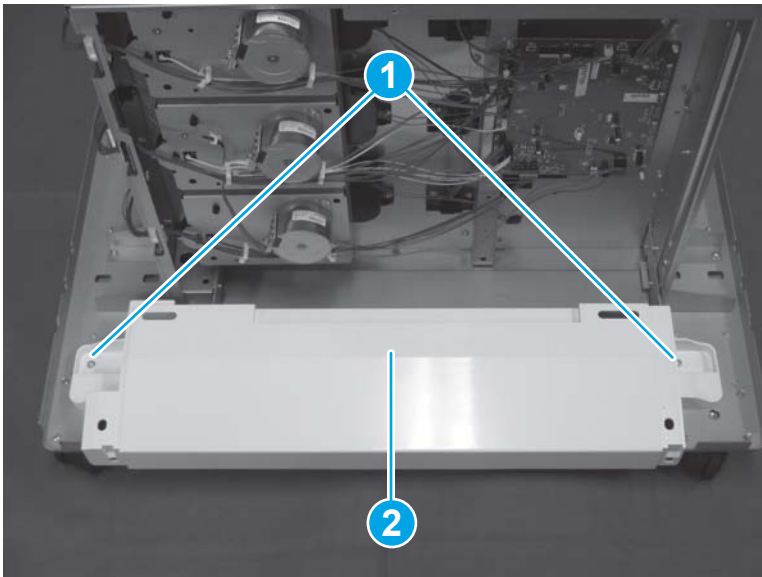


Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Front lower cover (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the left cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the left lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the right lower cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 6: Remove the front lower cover](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the front lower cover for the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Front lower cover (3x550-sheet paper feeder with stand) part number

---

RC5-0383-000CN

Cover, front lower

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).

Figure 1-2335 Remove one screw

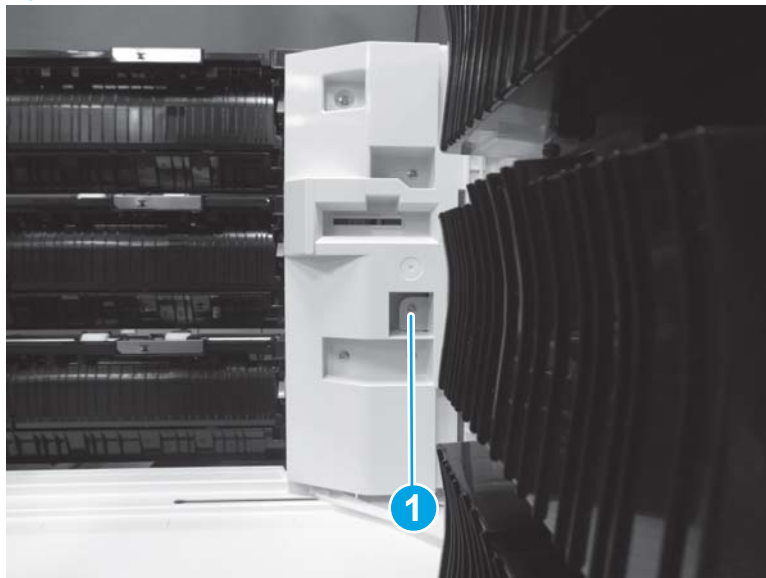


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2336 Remove the rear cover

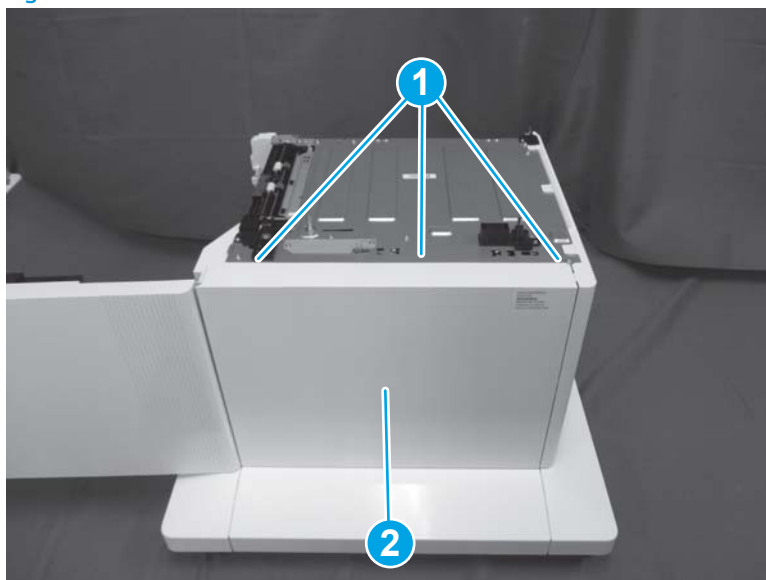

### Step 2: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.


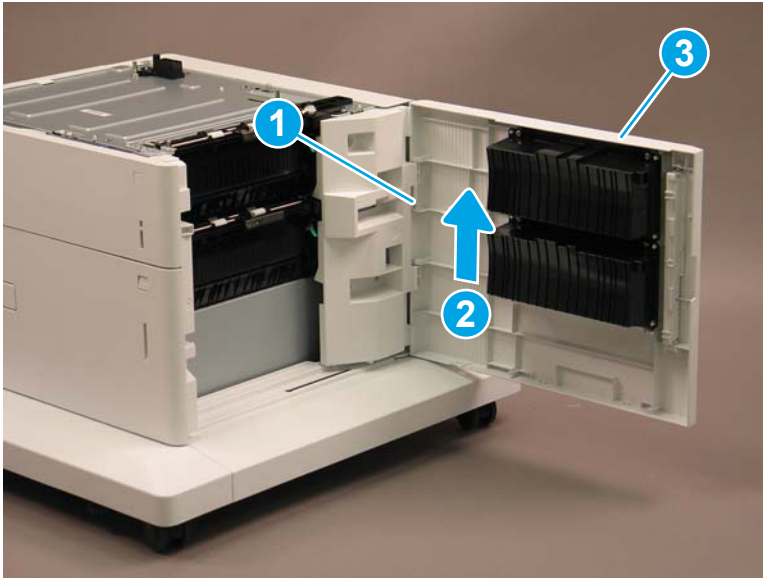
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2337 Remove the right door



### Step 3: Remove the left cover (3x550-sheet paper feeder with stand)

▲ Release five tabs (callout 1), and then remove the left cover (callout 2).


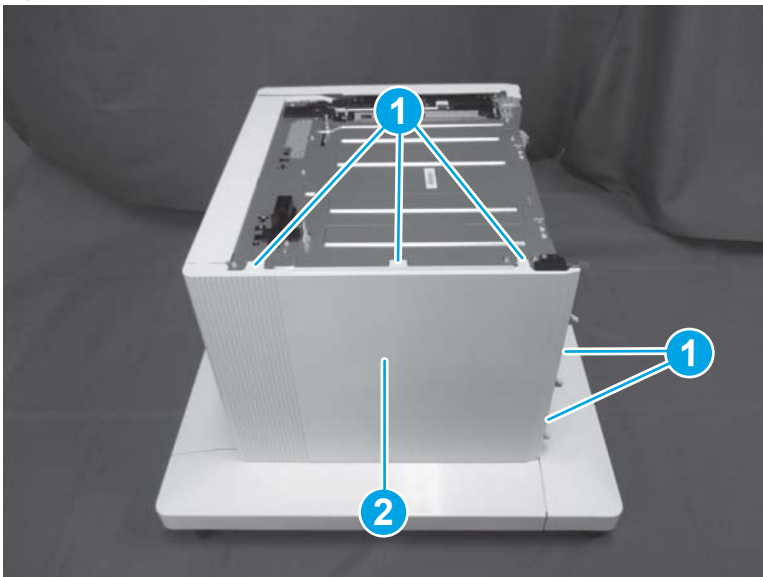

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2338 Remove the left cover




### Step 4: Remove the left lower cover (3x550-sheet paper feeder with stand)

▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2339** Remove the left lower cover

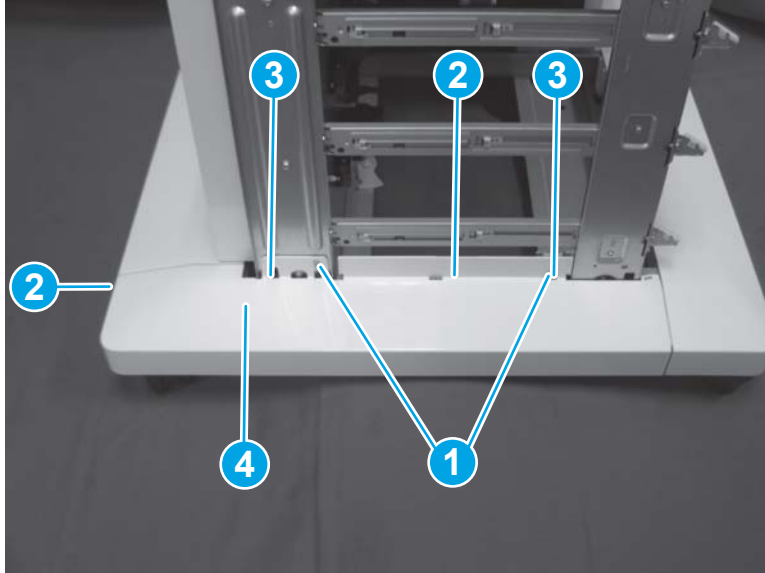

**Step 5: Remove the right lower cover (3x550-sheet paper feeder with stand)**


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

**Figure 1-2340** Remove four screws and the hinge

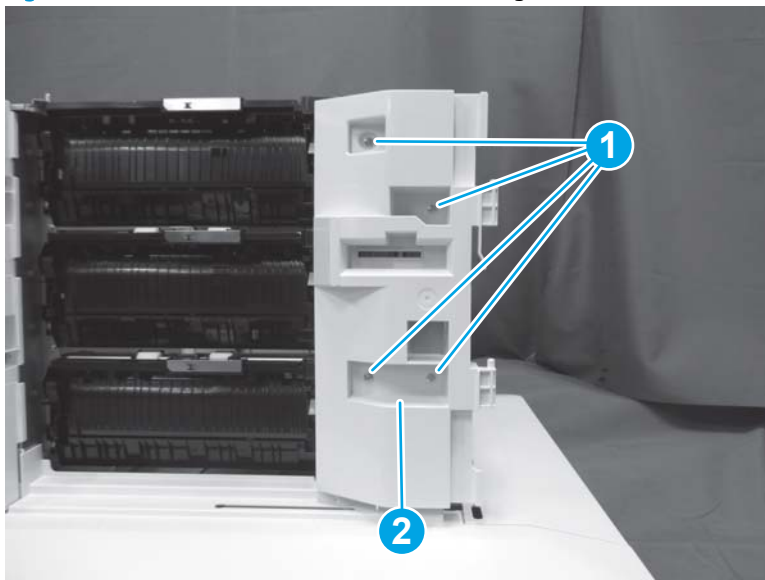


2. Remove two screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2341 Remove two screws and the inner cover

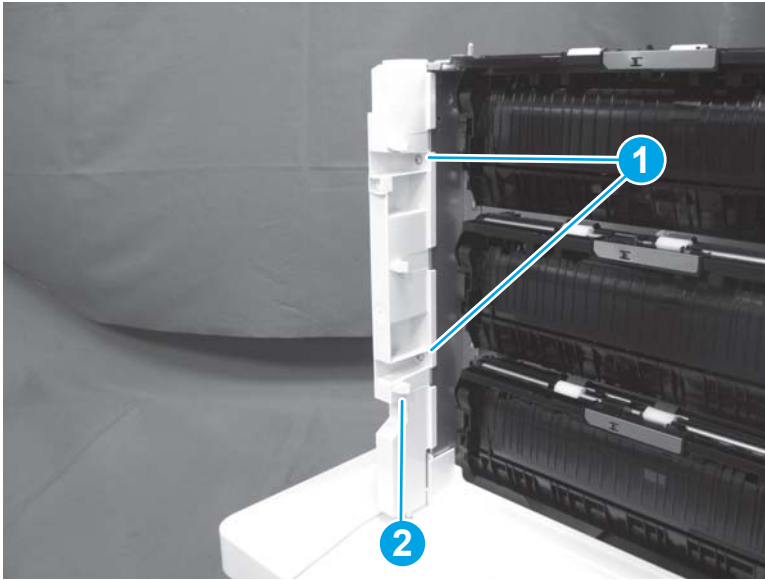

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2342 Remove the right lower cover

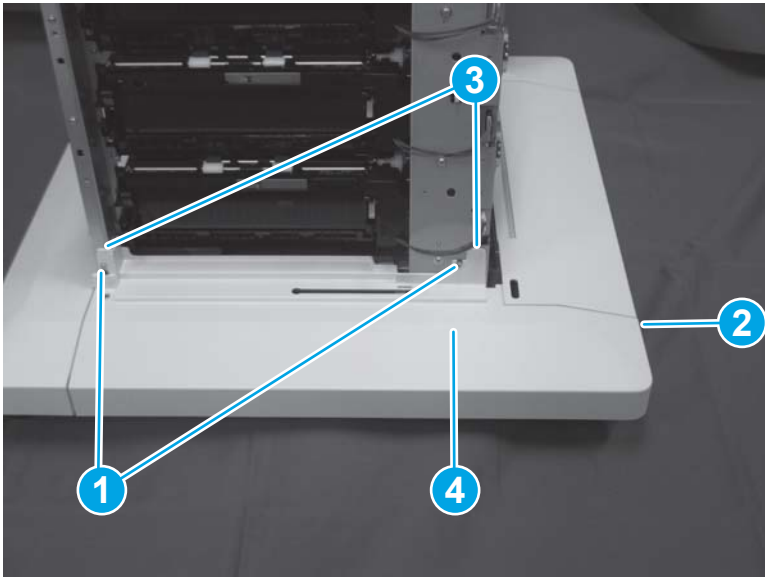


4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Right lower cover

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.


Figure 1-2343 Check spring position

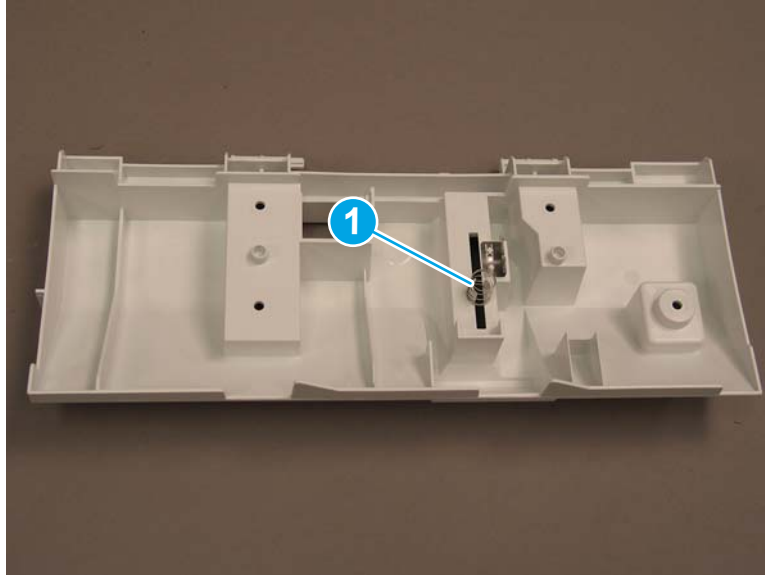

Step 6: Remove the front lower cover

- ▲ Remove one screw (callout 1), release one tab (callout 2), and then remove the front lower cover (callout 3).

Figure 1-2344 Remove the front lower cover

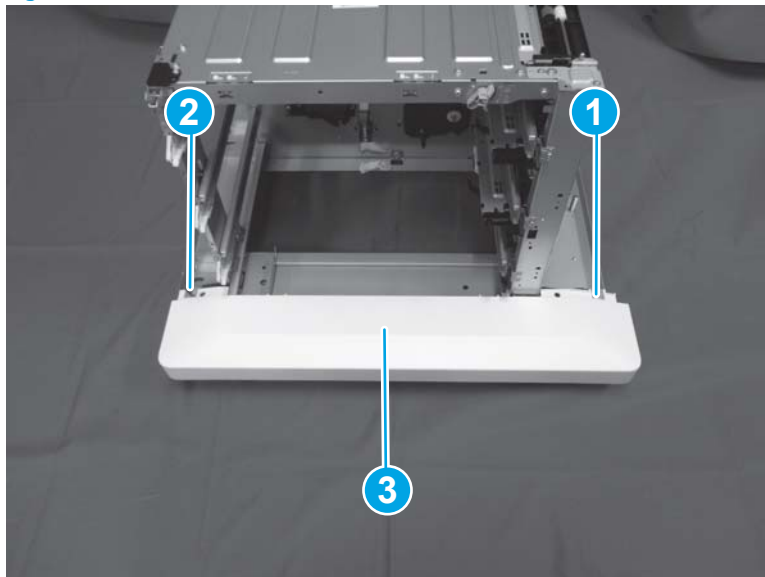


Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right door switch (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door switch \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door switch on the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door switch (3x550-sheet paper feeder with stand) part number	
WC2-5803-000CN	Switch, push

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Close the right door. Verify that no door-open messages display on the control panel.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).


Figure 1-2345 Remove one screw

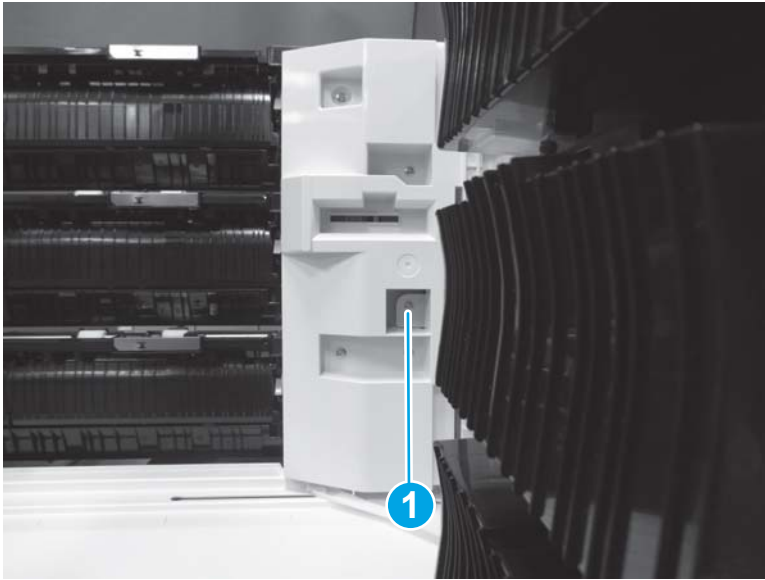

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2346 Remove the rear cover

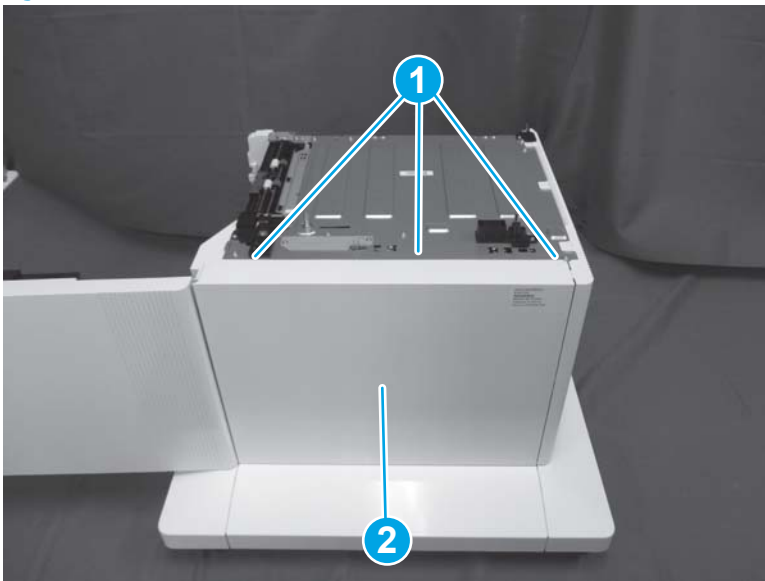

### Step 2: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.


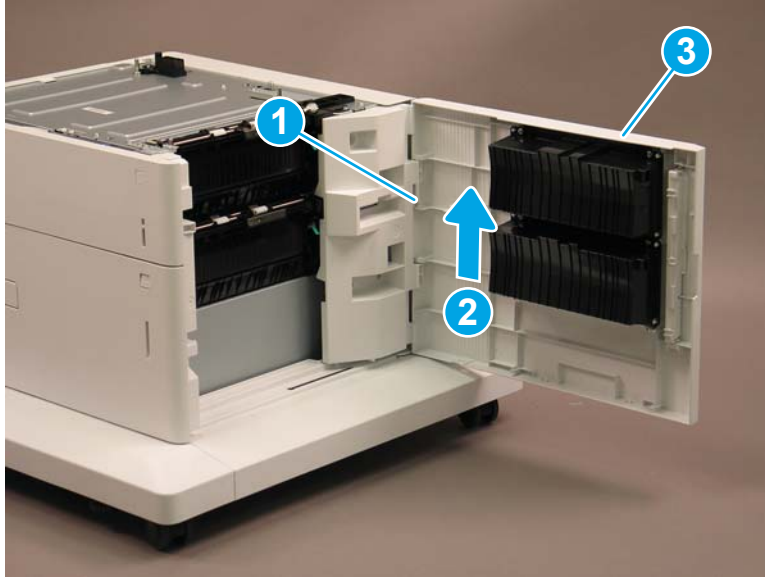
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2347 Remove the right door



**Step 3: Remove the right door switch (3x550-sheet paper feeder with stand)**


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2348 Remove four screws and the hinge

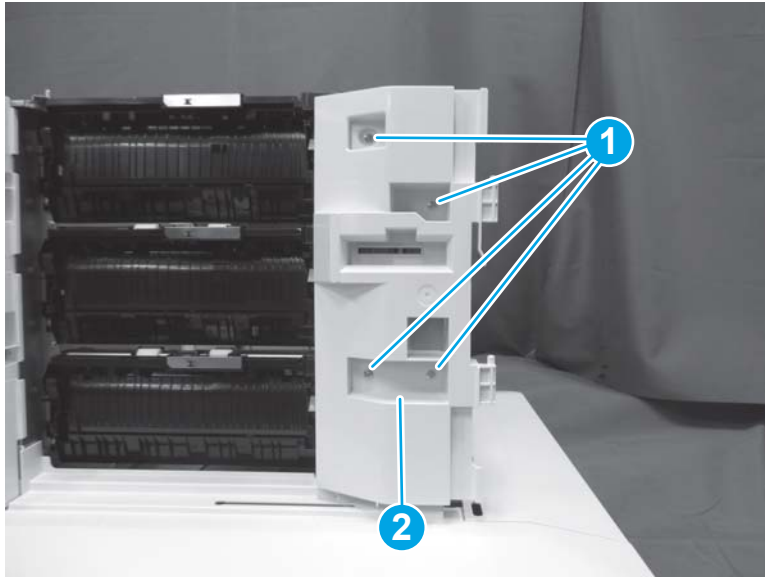


2. At the back of the paper feeder, release two tabs (callout 1) and release the switch through the opening in the sheet metal.

Figure 1-2349 Release two tabs

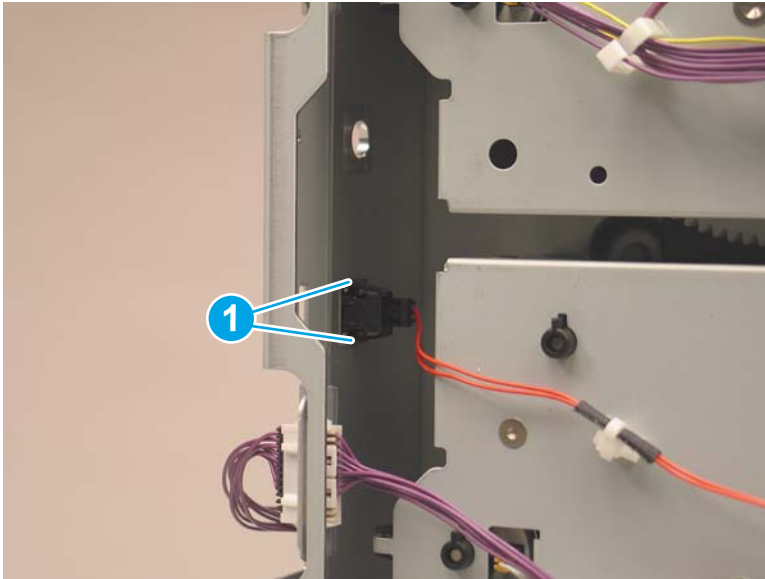

3. Disconnect one connector (callout 1), and then remove the right door switch.

Figure 1-2350 Disconnect one connector

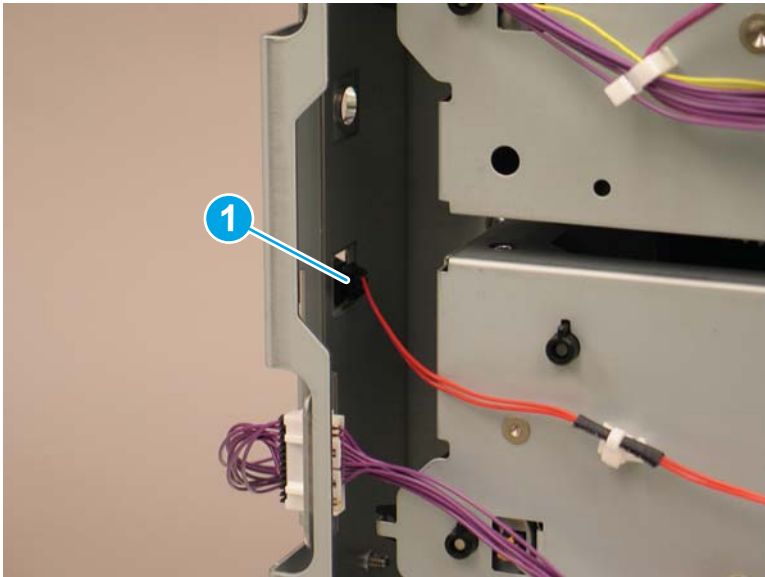

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Right door switch

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.

Figure 1-2351 Check spring position

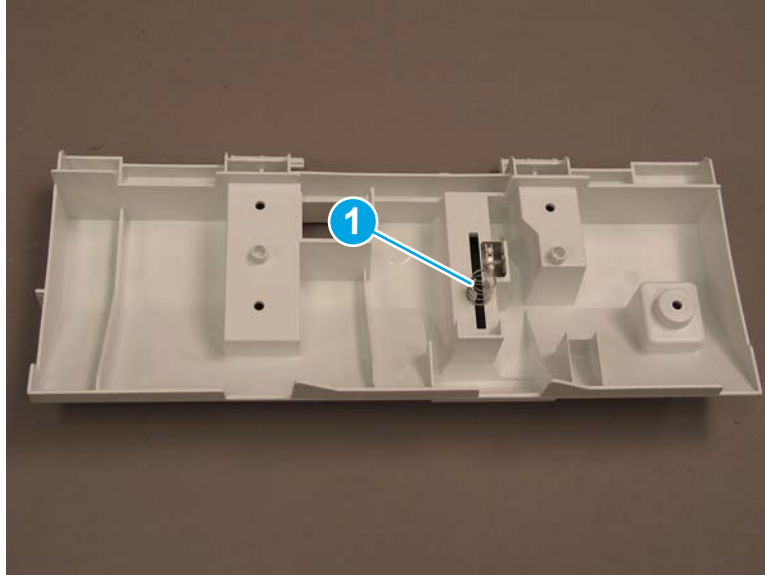

## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Size sensor (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the size sensor \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the size sensor on the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Size sensor (3x550-sheet paper feeder with stand) part number	
RM2-0857-000CN	Size sensor assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Install the paper tray and verify that the printer detects the correct size of paper in the tray.


### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.



2. Remove one screw (callout 1).

Figure 1-2352 Remove one screw

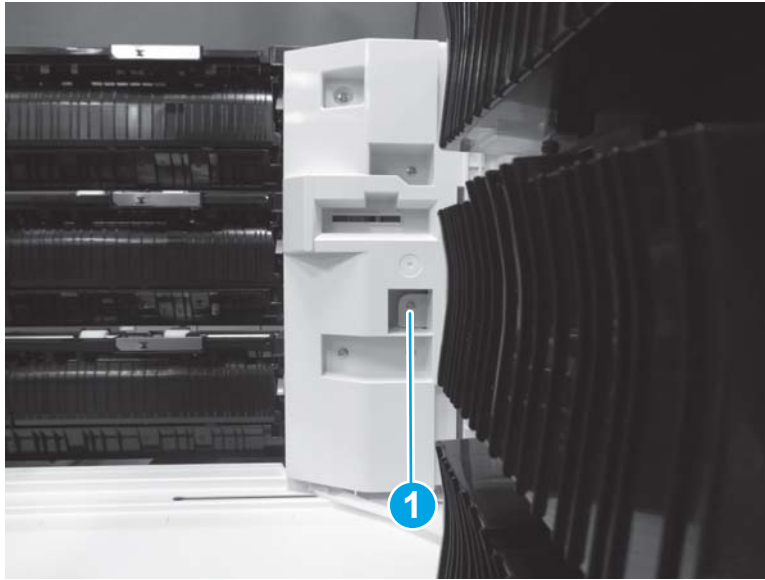

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


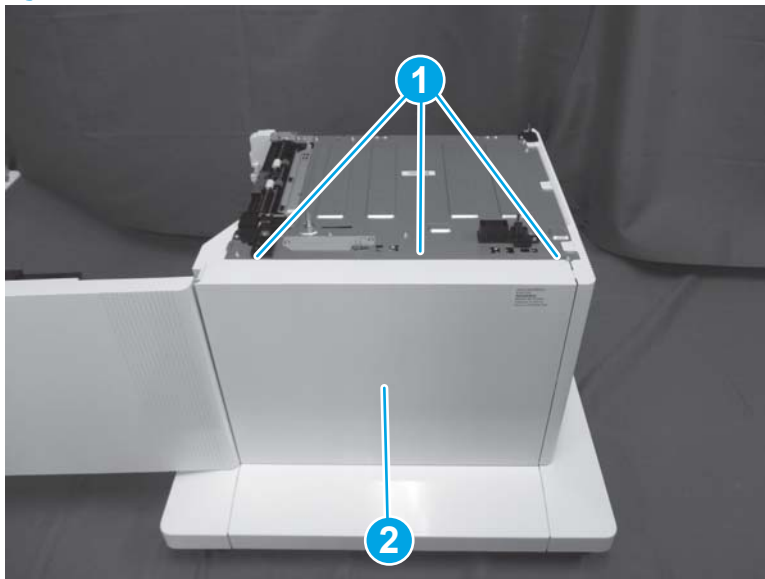
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2353 Remove the rear cover




### Step 2: Remove the size sensor (3x550-sheet paper feeder with stand)

1. Remove the paper tray for the size sensor you are replacing.

2. At the back of the feeder, disconnect two connectors (callout 1), and then remove two screws (callout 2).


 **NOTE:** The figure below show the Tray 3 size sensor. The procedure is the same for all of the size sensors.

**Figure 1-2354** Disconnect two connectors and remove two screws

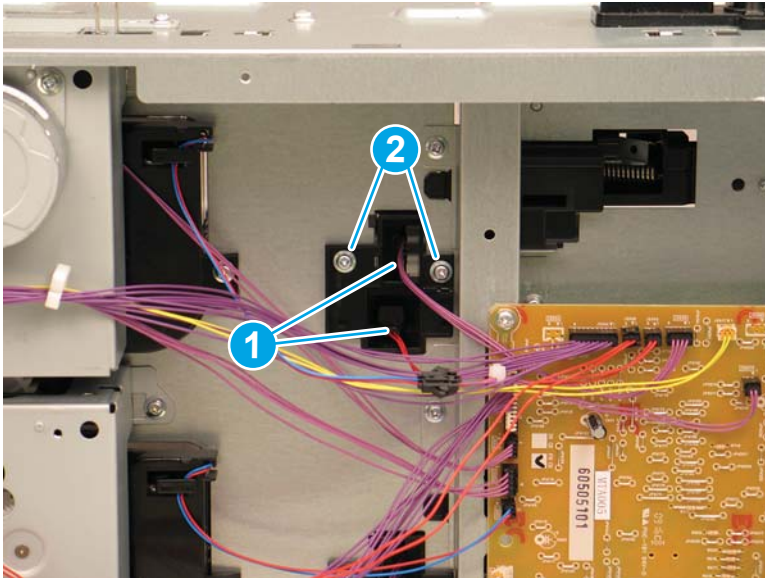

3. Remove the size sensor (callout 1).


**Figure 1-2355** Remove the size sensor

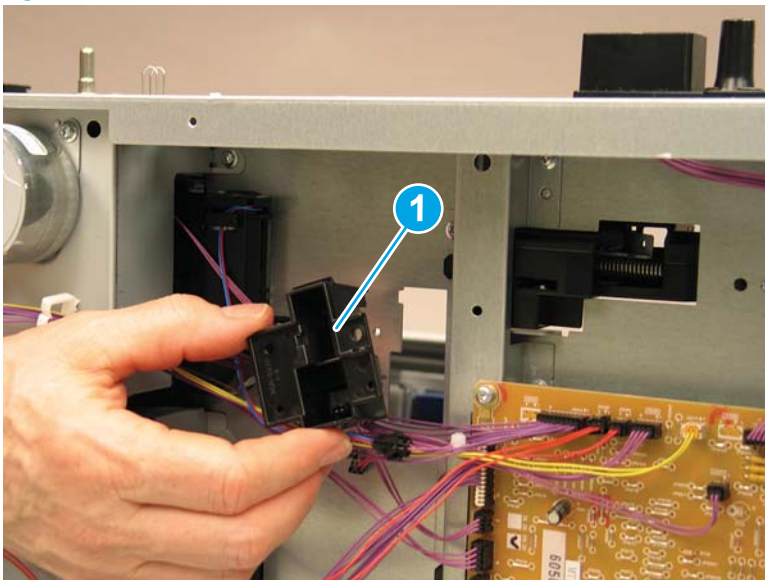

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Drawer connector holder and cable assembly (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the drawer connector holder and cable assembly \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drawer connector holder and cable assembly on the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Drawer connector holder and cable assembly (3x550-sheet paper feeder with stand) part numbers

---

RC4-8914-000CN	Holder, drawer connector
RM2-9286-000CN	Drawer upper cable assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2356 Remove one screw

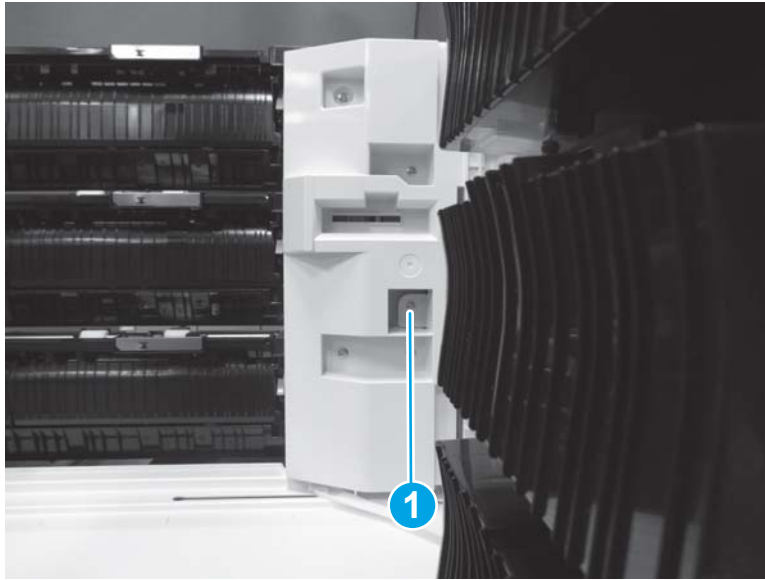

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


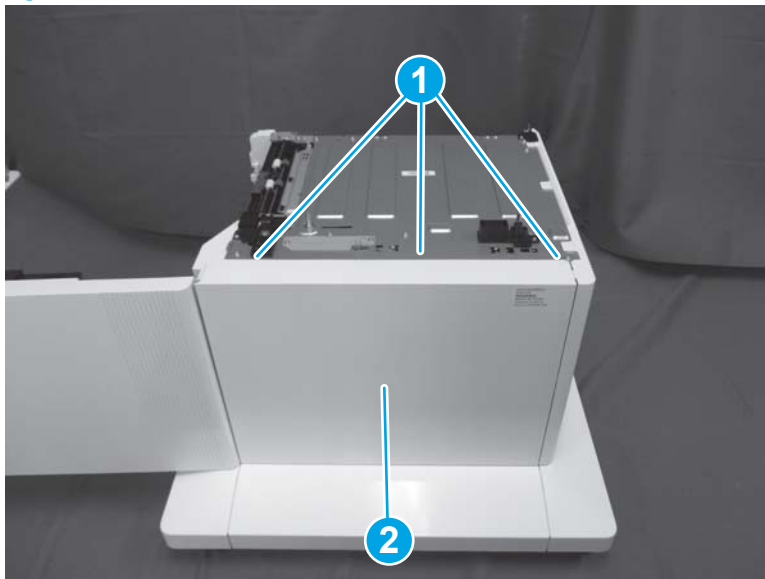
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2357 Remove the rear cover



### Step 2: Remove the drawer connector holder and cable assembly (3x550-sheet paper feeder with stand)


1. At the back of the feeder, disconnect one connector and release one retainer (callout 1).

Figure 1-2358 Disconnect one connector and release retainer

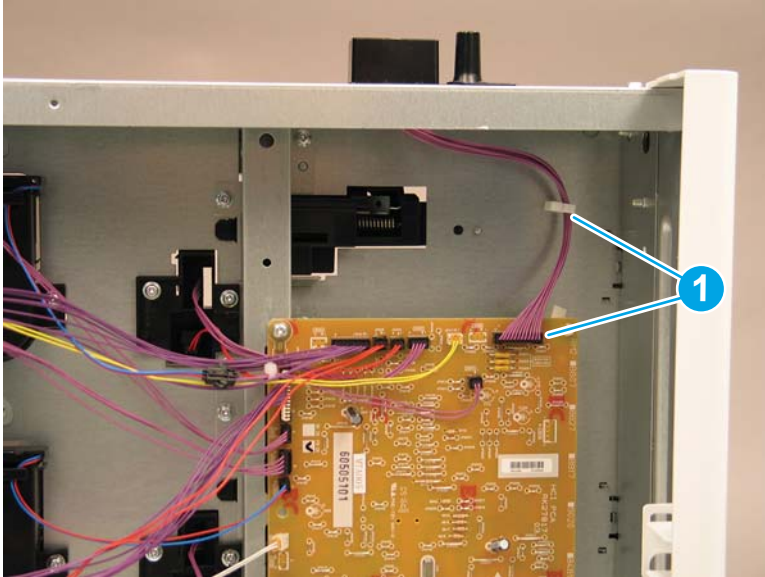


2. At the top of the paper feeder, remove one screw (callout 1).

Figure 1-2359 Remove one screw

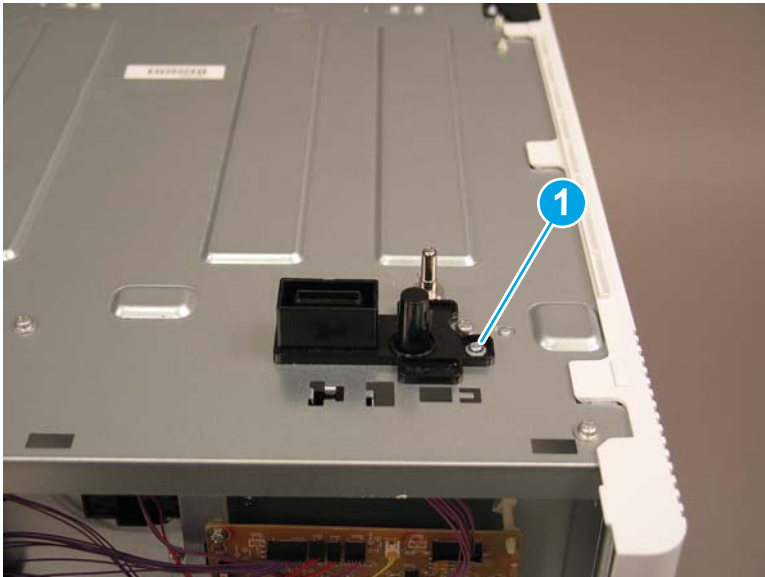


3. Lift the drawer connector holder and cable assembly away from the feeder to remove them.

Figure 1-2360 Remove the drawer connector holder and cable assembly

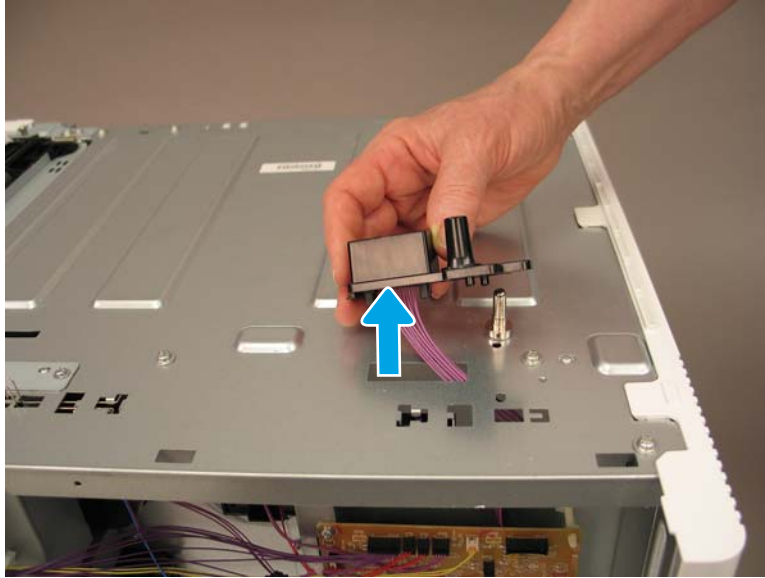

4. Use a small, flat-blad screwdriver to release two tabs (callout 1).


Figure 1-2361 Release two tabs

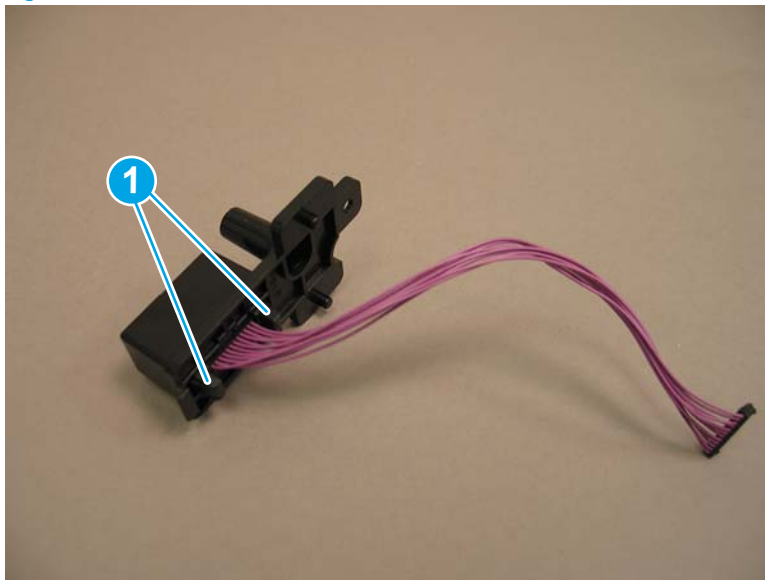



5. Remove the cable assembly from the drawer connector holder.

Figure 1-2362 Remove the cable assembly

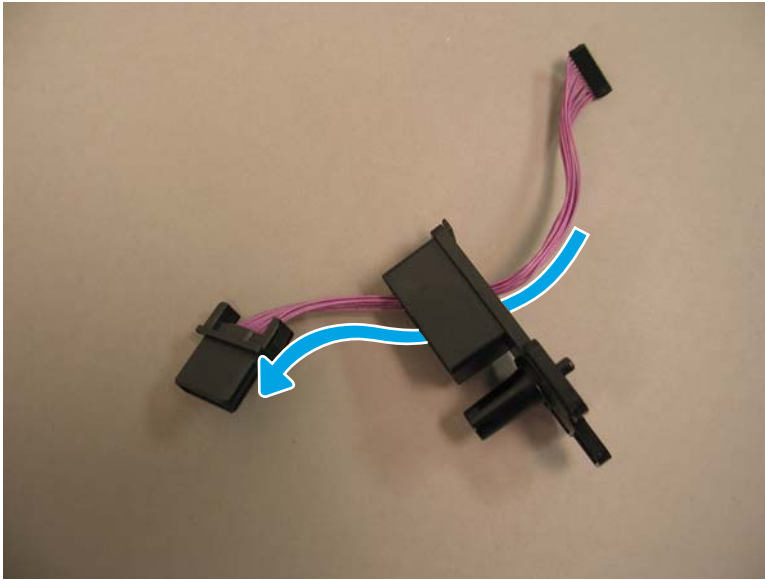

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Auto-close assemblies (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the auto-close assembly \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the auto-close assemblies for the 3x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Auto-close assemblies (3x550-sheet paper feeder with stand) part number	
RM2-0856-000CN	Auto close assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Slowly install the paper tray in the paper feeder. Verify that the auto-close assembly catches and pulls the tray completely closed.

### Step 1: Remove the auto-close assembly (3x550-sheet paper feeder with stand)

1. Remove all of the paper trays.
2. Do one of the following, depending upon which auto-close assembly you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 auto-close assembly:** Remove one screw (callout 1), and then remove the auto-close assembly (callout 2).
- b. **Tray 4 auto-close assembly:** Remove one screw (callout 3), and then remove the auto-close assembly (callout 4).
- c. **Tray 5 auto-close assembly:** Remove one screw (callout 5), and then remove the auto-close assembly (callout 6).

**Figure 1-2363** Remove the auto-close assemblies

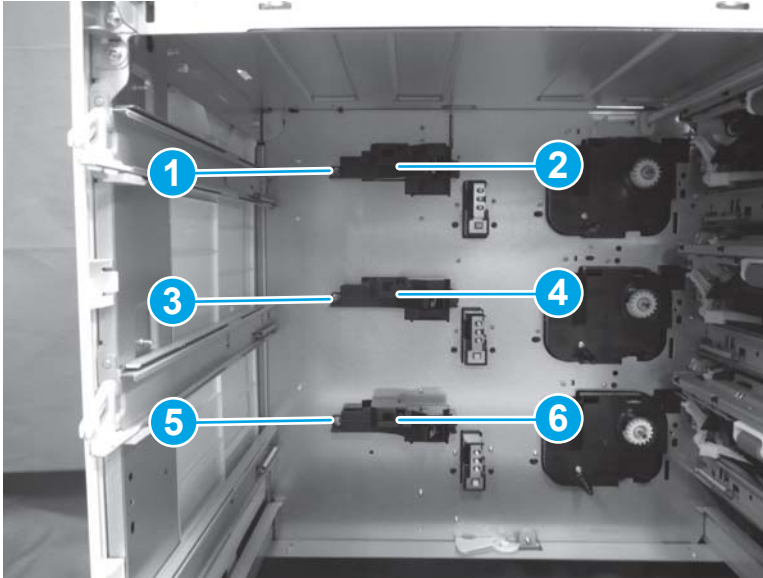



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Paper pickup assemblies (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the paper pickup assembly \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper pickup assemblies for the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Paper pickup assembly (3x550-sheet paper feeder with stand) part number	
RM2-1235-000CN	Paper pickup assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.


### Step 1: Remove the right door (3x550-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **NOTE:** The following figure shows 2,500-sheet paper feeder with stand. The procedure is also correct for the 3x550-sheet feeder with stand.

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2364 Remove the right door

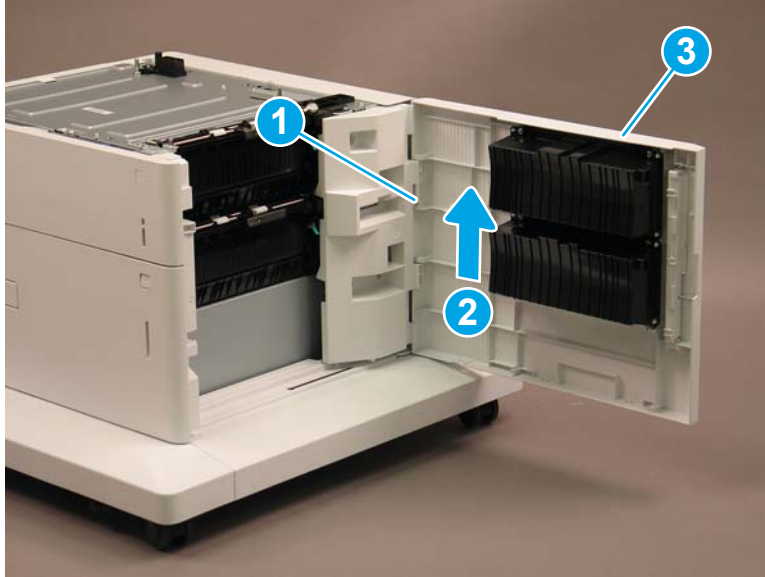

**Step 2: Remove the paper pickup assembly (3x550-sheet paper feeder with stand)**

1. Remove all of the paper trays.
2. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2365 Remove four screws and the hinge

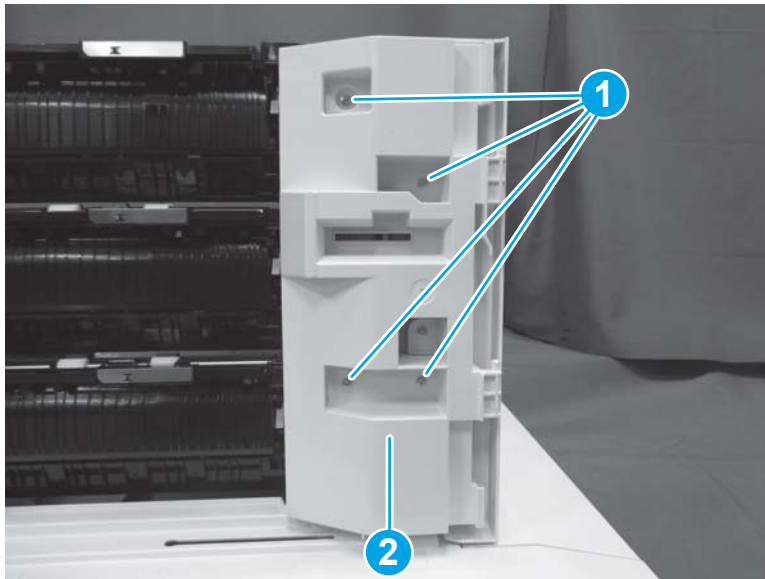

3. Do one of the following, depending upon which paper pickup assembly you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 paper pickup assembly:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the paper pickup assembly (callout 3).
- b. **Tray 4 paper pickup assembly:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the paper pickup assembly (callout 6).
- c. **Tray 5 paper pickup assembly:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the paper pickup assembly (callout 9).

**Figure 1-2366** Remove the paper pickup assemblies

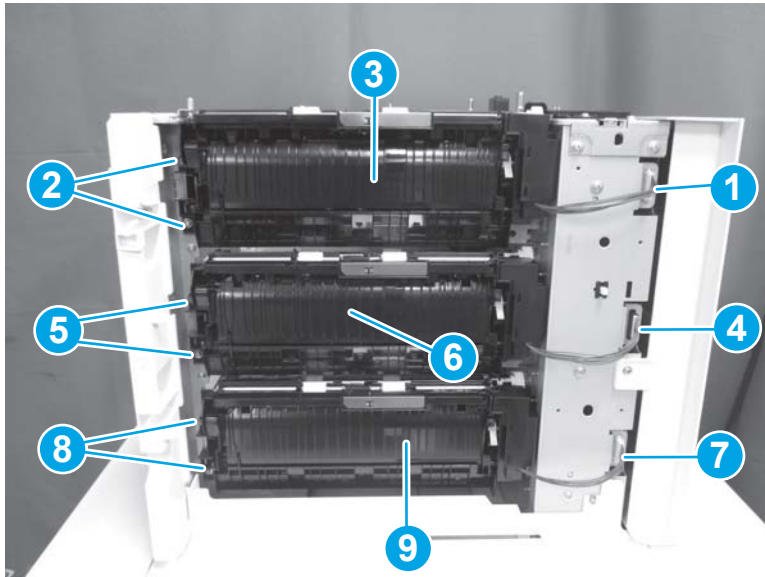

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

#### Special installation instructions: Paper pickup assemblies

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.



Figure 1-2367 Check spring position

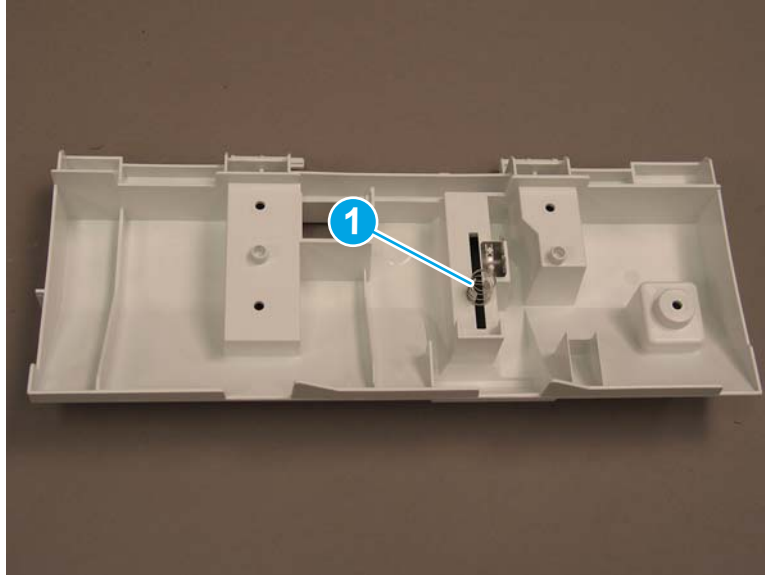

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.




**NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Feed motors (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the feed motors for the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Feed motor (3x550-sheet paper feeder with stand) part number	
RK2-7831-000CN	Motor, stepping

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2368 Remove one screw

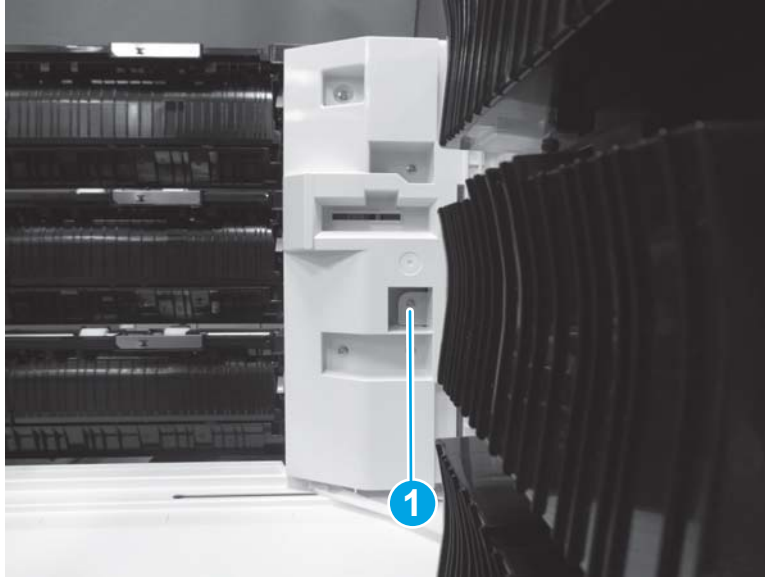

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


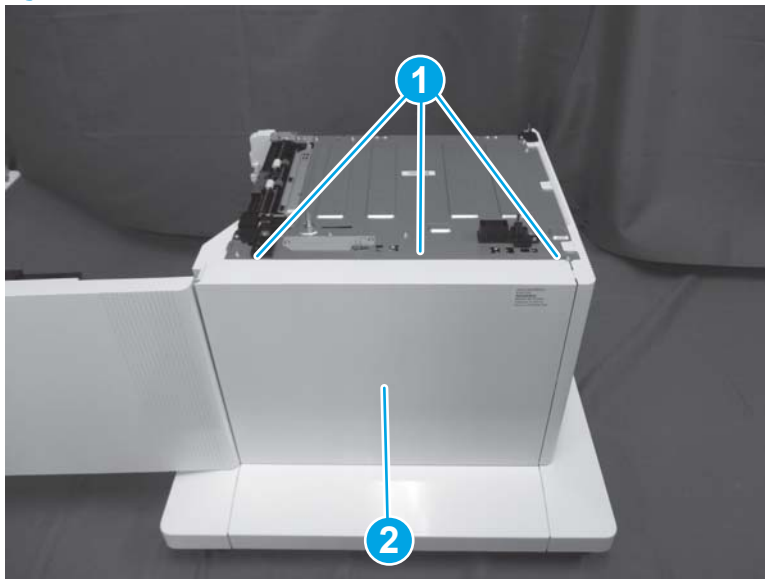
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2369 Remove the rear cover




### Step 2: Remove the feed motor (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).

Figure 1-2370 Remove the feed motors

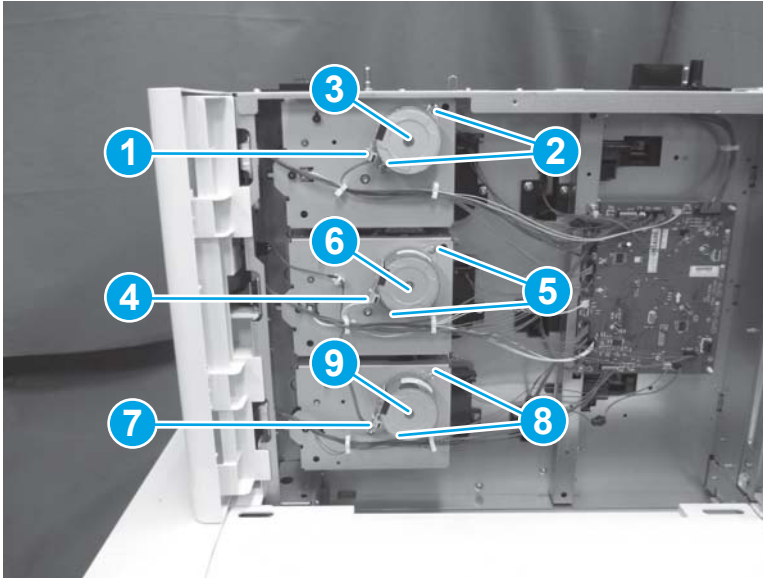



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Drive assemblies (Trays 3 and 5) (3x550-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the Tray 3 or 5 feed motor \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 3 or 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drive assemblies for Trays 3 and 5 in the 3x550-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drive assembly (3x550-sheet paper feeder with stand) part number	
RM2-1222-000CN	Drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2371 Remove one screw

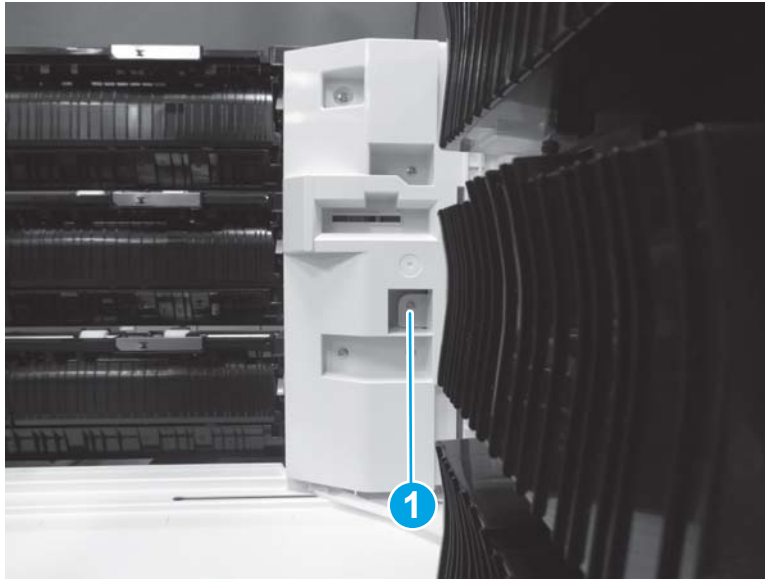

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


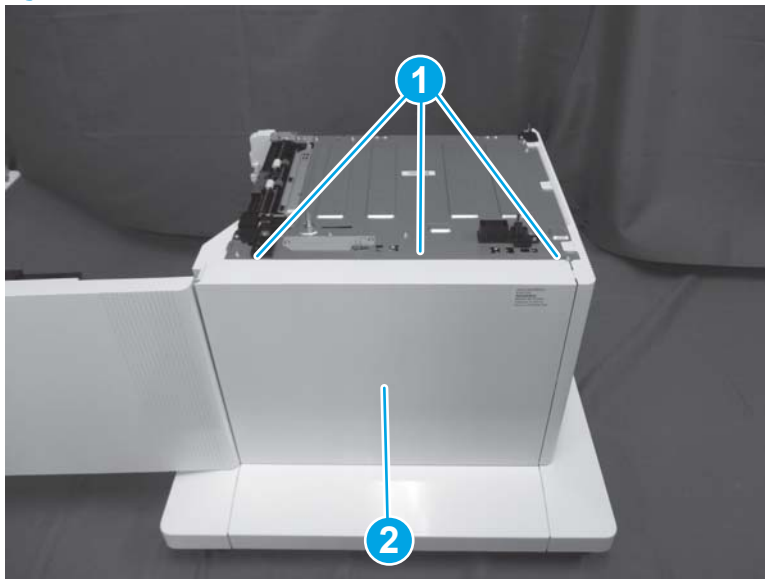
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2372 Remove the rear cover



### Step 2: Remove the Tray 3 or 5 feed motor (3x550-sheet paper feeder with stand)


- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).


Figure 1-2373 Remove the feed motors

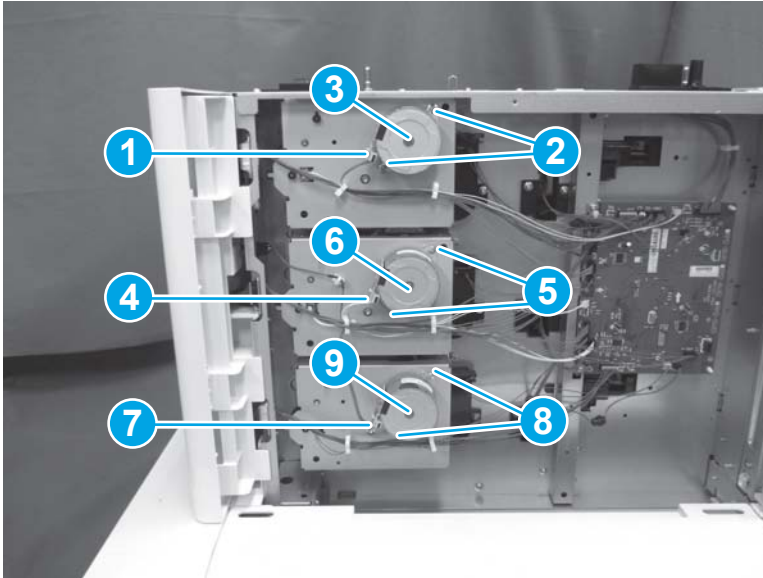

### Step 3: Remove the drive assembly (Tray 3 or 5) (3x550-sheet paper feeder with stand)


1. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).
  - b. **Tray 5 drive assembly:** Disconnect two connectors (callout 4), and then release the cable (callout 5) from the retainers (callout 6).

Figure 1-2374 Disconnect two connectors

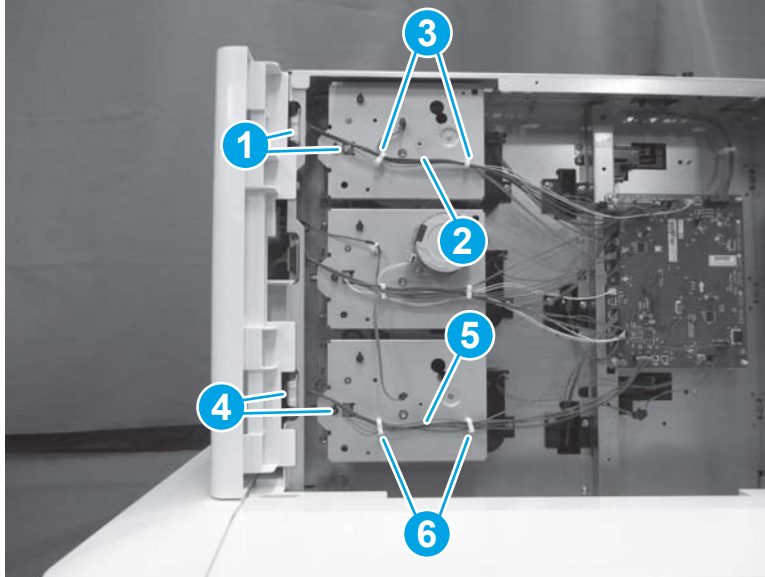

2. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Remove three screws (callout 1), and then remove the drive assembly (callout 2).
  - b. **Tray 5 drive assembly:** Remove three screws (callout 3), and then remove the drive assembly (callout 4).


Figure 1-2375 Remove the drive assembly

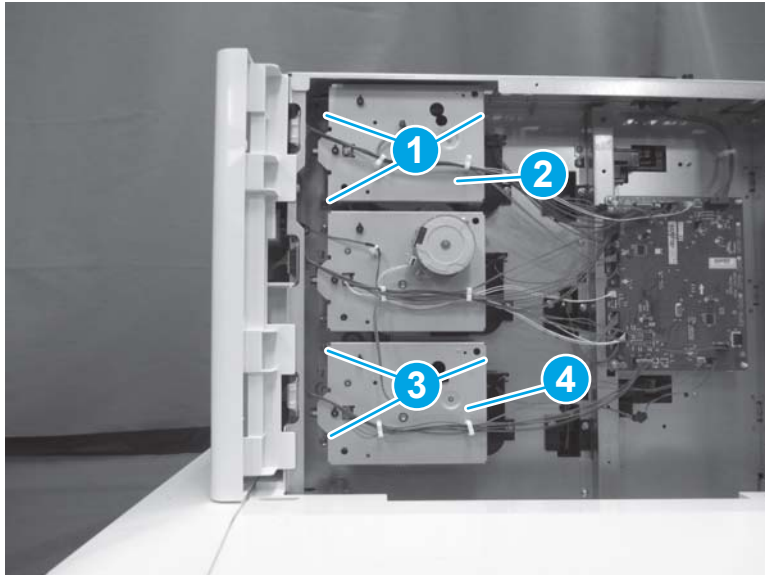

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Drive assembly (Tray 4) (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the Tray 4 feed motor \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drive assembly for Tray 4 in the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drive assembly (3x550-sheet paper feeder with stand) part number	
RM2-1222-000CN	Drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2376 Remove one screw

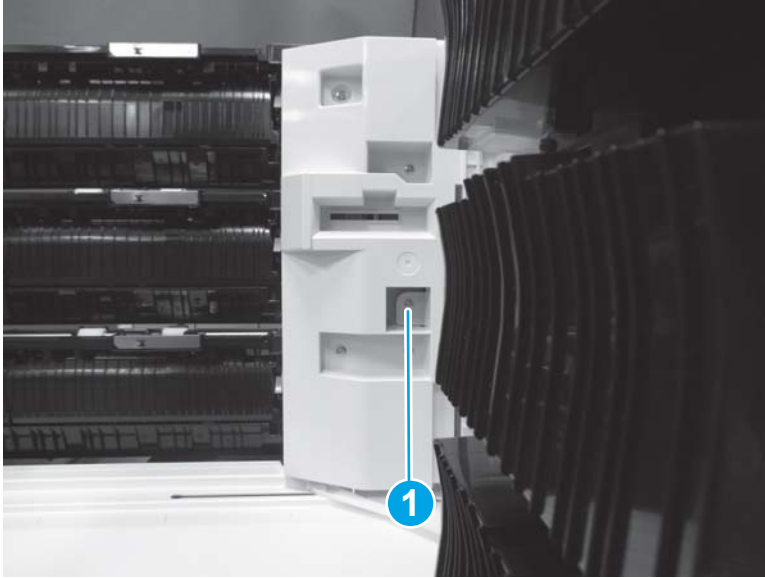


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2377 Remove the rear cover

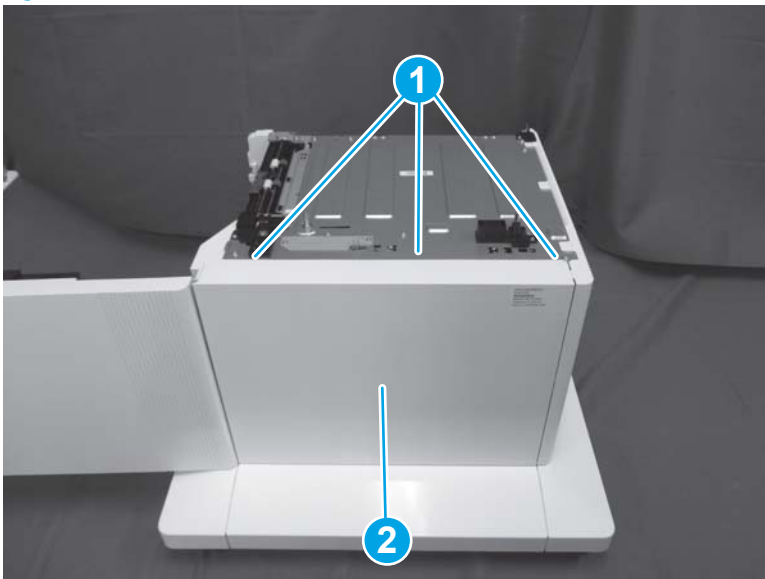

### Step 2: Remove the Tray 4 feed motor (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).


Figure 1-2378 Remove the feed motors

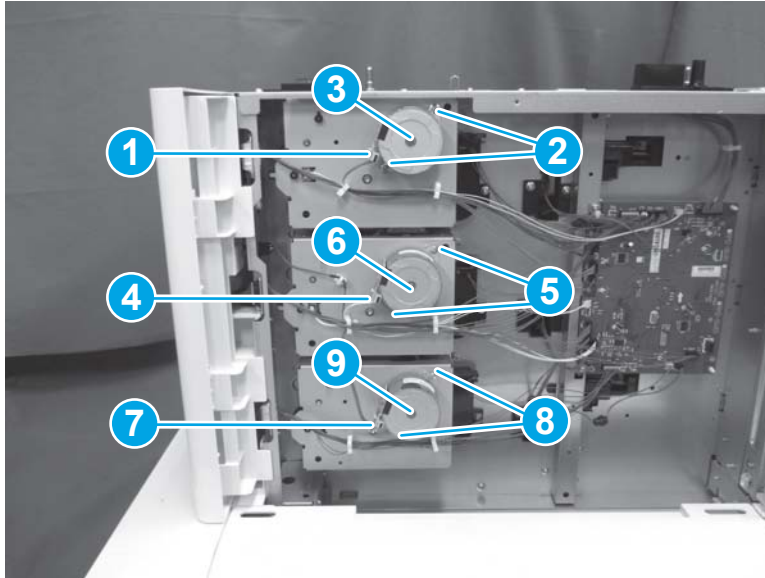

### Step 3: Remove the drive assembly (3x550-sheet paper feeder with stand)


1. Disconnect three connectors (callout 1), and then release the cable (callout 3) from the retainers (callout 2).

Figure 1-2379 Disconnect three connectors

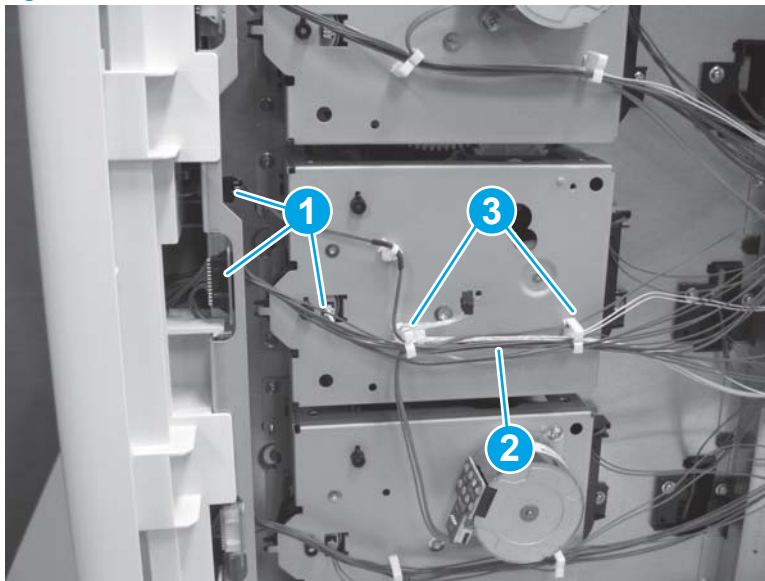


2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

**Figure 1-2380** Remove the drive assembly

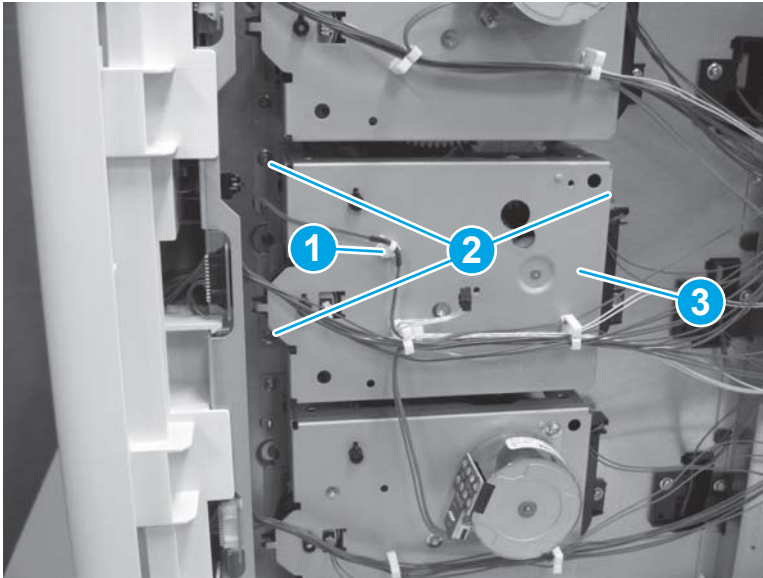

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Pickup alienation holder (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motors \(Trays 3, 4, and 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assemblies \(Trays 3 and 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the drive assembly \(Tray 4\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the pickup alienation holder \(3x550-sheet paper feeder with stand\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the pickup alienation holder for the 3x550-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- 
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- 
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Pickup alienation holder (3x550-sheet paper feeder with stand) part number	
RM2-1223-000CN	Estrangement holder assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2381 Remove one screw

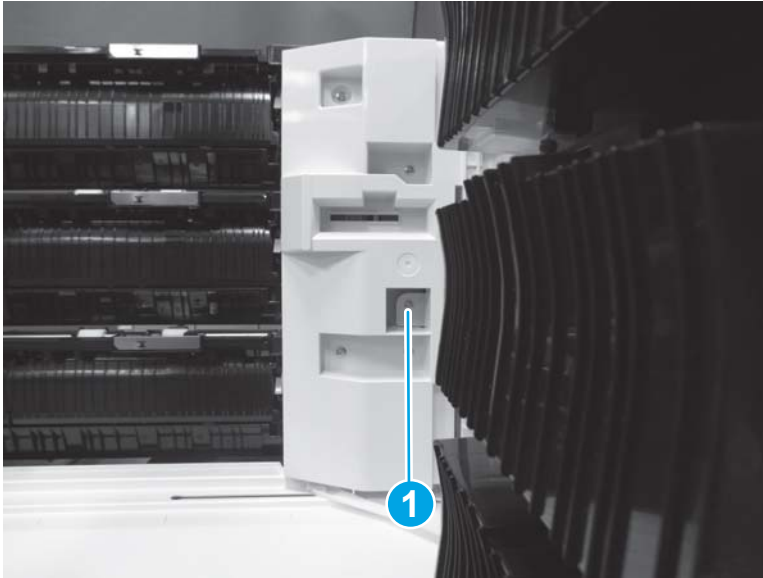

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2382 Remove the rear cover

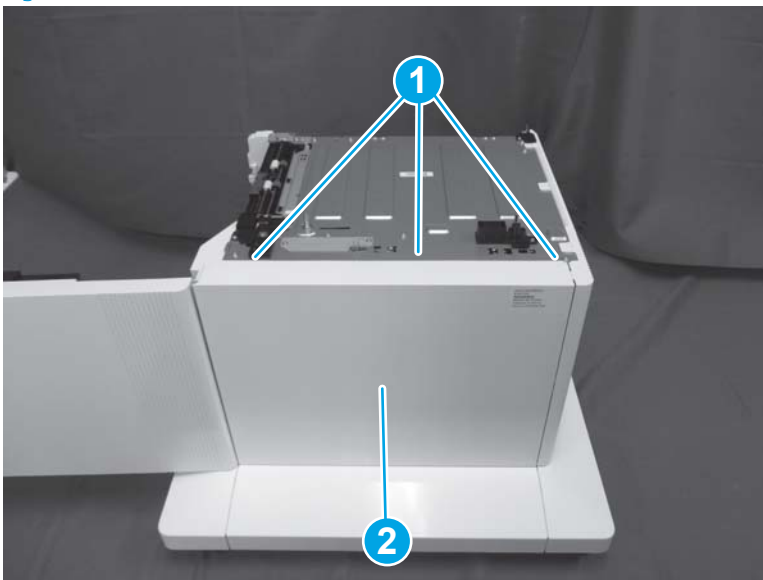


### Step 2: Remove the feed motors (Trays 3, 4, and 5) (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).


Figure 1-2383 Remove the feed motors

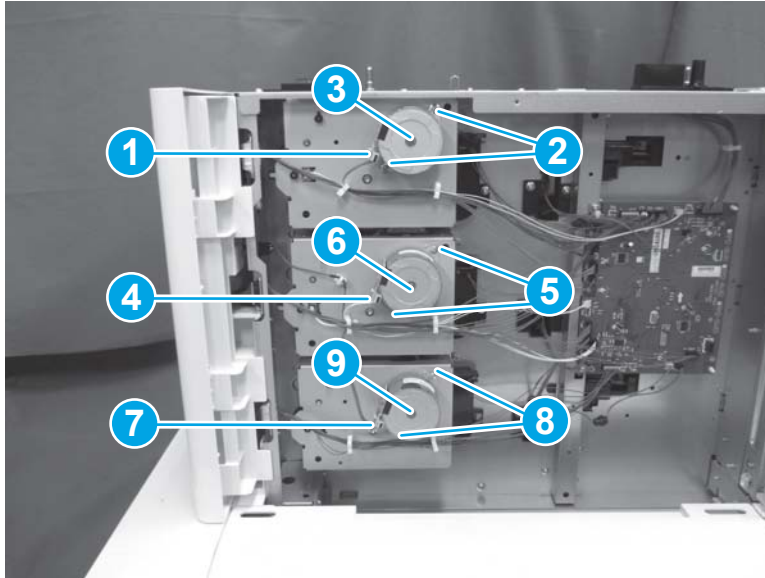

### Step 3: Remove the drive assemblies (Trays 3 and 5) (3x550-sheet paper feeder with stand)


1. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).
  - b. **Tray 5 drive assembly:** Disconnect two connectors (callout 4), and then release the cable (callout 5) from the retainers (callout 6).

Figure 1-2384 Disconnect two connectors

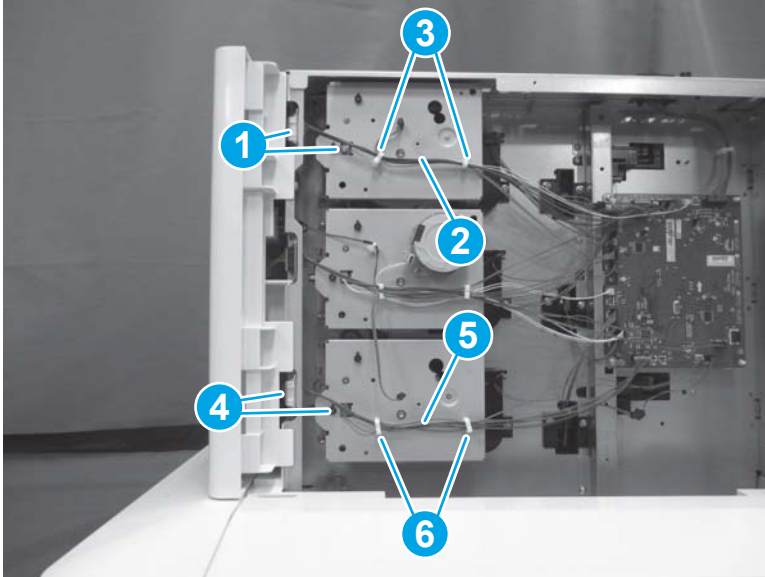

2. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Remove three screws (callout 1), and then remove the drive assembly (callout 2).
  - b. **Tray 5 drive assembly:** Remove three screws (callout 3), and then remove the drive assembly (callout 4).


Figure 1-2385 Remove the drive assembly

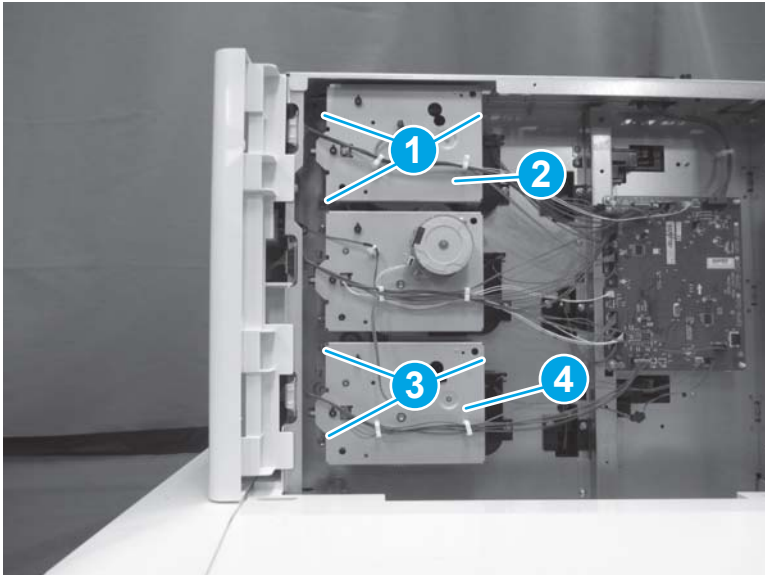

#### Step 4: Remove the drive assembly (Tray 4) (3x550-sheet paper feeder with stand)

1. Disconnect three connectors (callout 1), and then release the cable (callout 3) from the retainers (callout 2).

Figure 1-2386 Disconnect three connectors

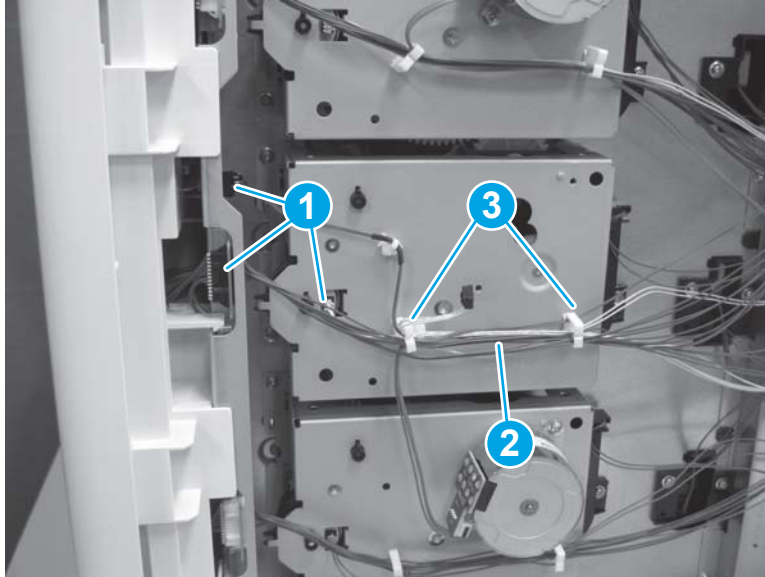


2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2387 Remove the drive assembly

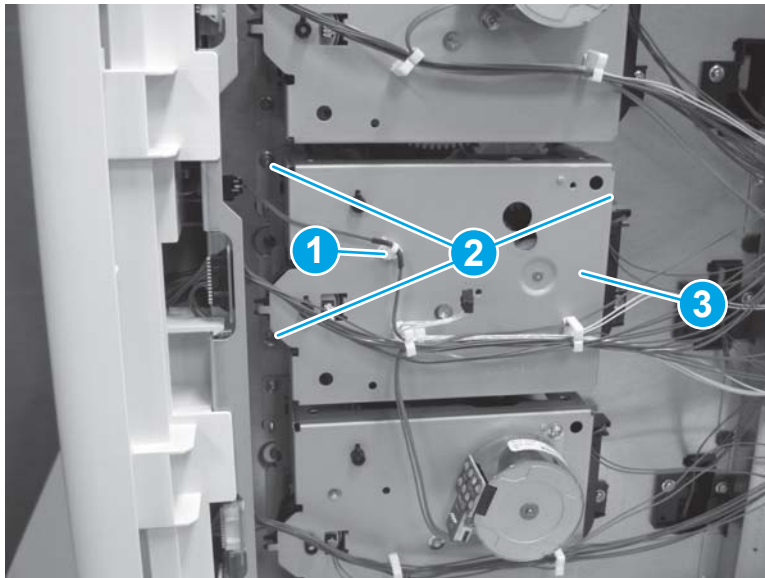

#### Step 5: Remove the pickup alienation holder (3x550-sheet paper feeder with stand)

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).


Figure 1-2388 Disconnect one connector

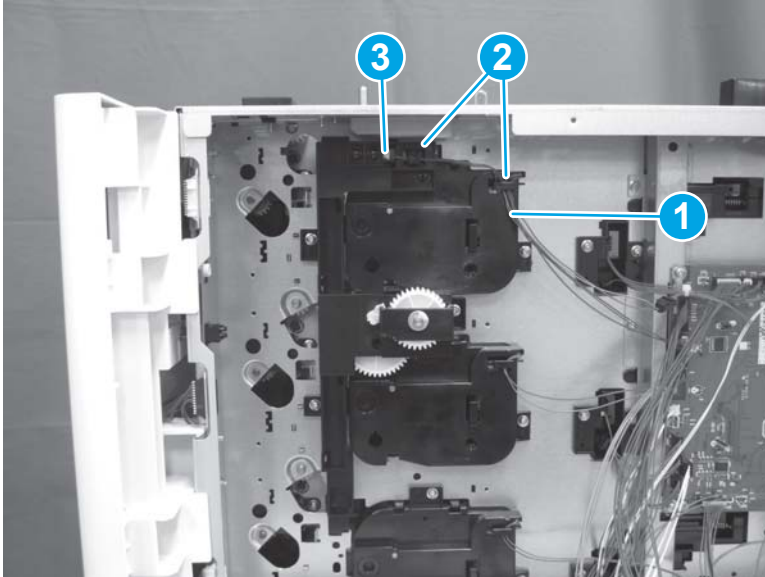

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2389 Remove four screws and the pickup alienation holder

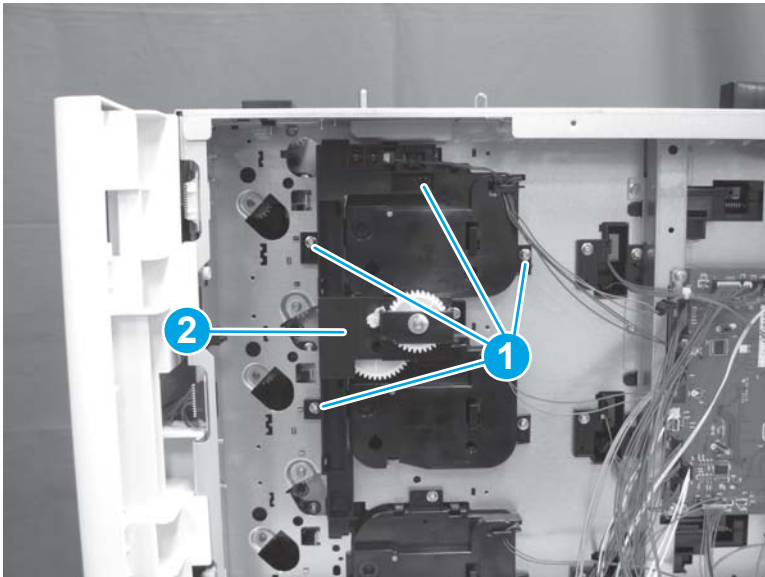

### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Lifter drive assemblies (Trays 3 and 4) (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motors \(Trays 3, 4, and 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assemblies \(Trays 3 and 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the drive assembly \(Tray 4\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 5: Remove the pickup alienation holder \(3x550-sheet paper feeder with stand\)](#)
- [Step 6: Remove the lifter drive assembly \(Trays 3 and 4\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the lifter drive assemblies for Trays 3 and 4 in the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

 **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Lifter drive assembly (3x550-sheet paper feeder with stand) part number	
---	--

---

RM2-2091-000CN	Lifter drive assembly
----------------	-----------------------

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)


1. Open the right door.
2. Remove one screw (callout 1).

Figure 1-2390 Remove one screw

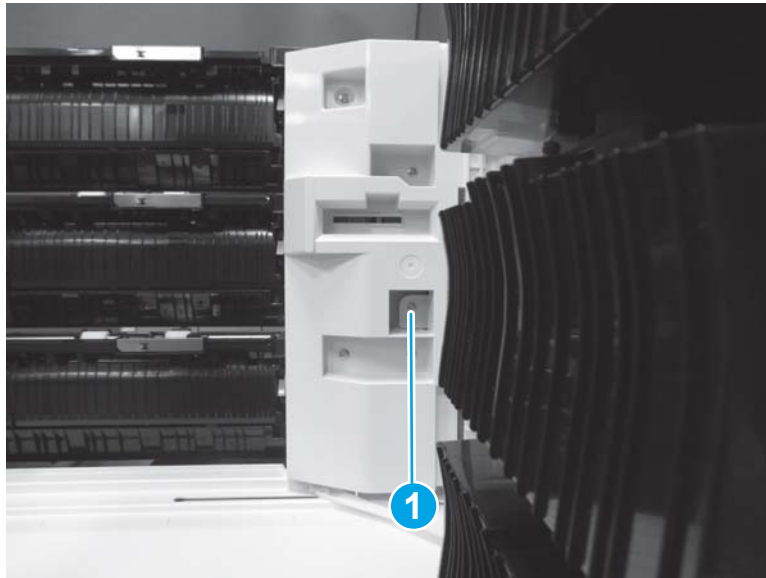


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2391 Remove the rear cover

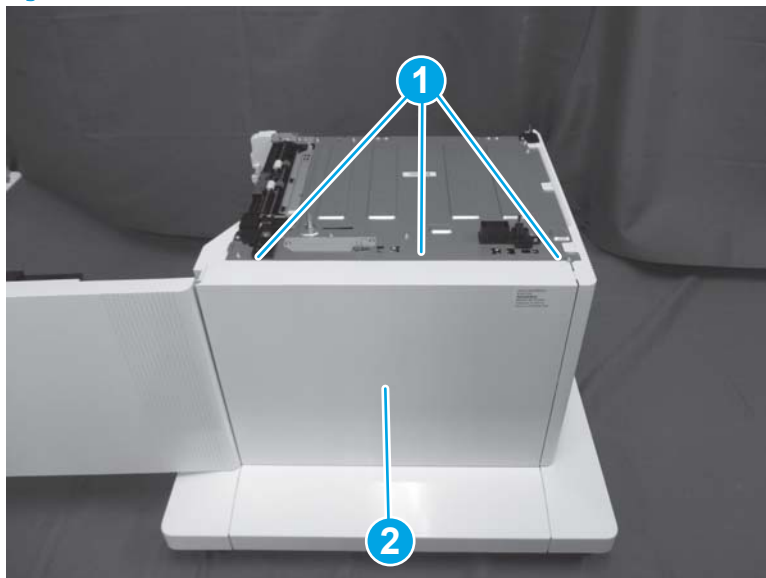

### Step 2: Remove the feed motors (Trays 3, 4, and 5) (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).


Figure 1-2392 Remove the feed motors

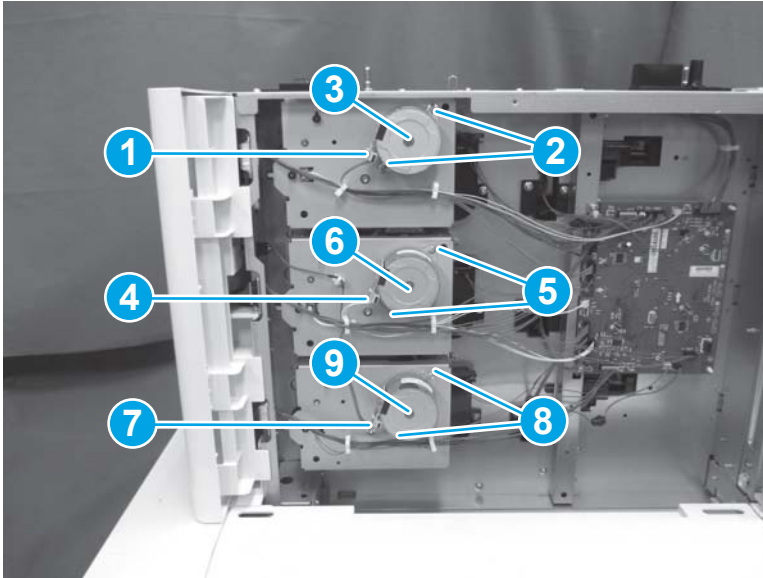

### Step 3: Remove the drive assemblies (Trays 3 and 5) (3x550-sheet paper feeder with stand)


1. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).
  - b. **Tray 5 drive assembly:** Disconnect two connectors (callout 4), and then release the cable (callout 5) from the retainers (callout 6).

Figure 1-2393 Disconnect two connectors

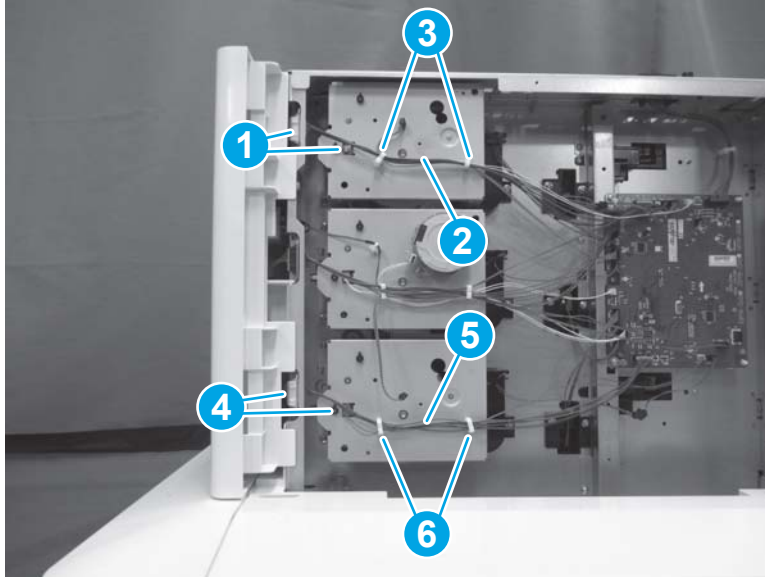

2. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Remove three screws (callout 1), and then remove the drive assembly (callout 2).
  - b. **Tray 5 drive assembly:** Remove three screws (callout 3), and then remove the drive assembly (callout 4).


Figure 1-2394 Remove the drive assembly

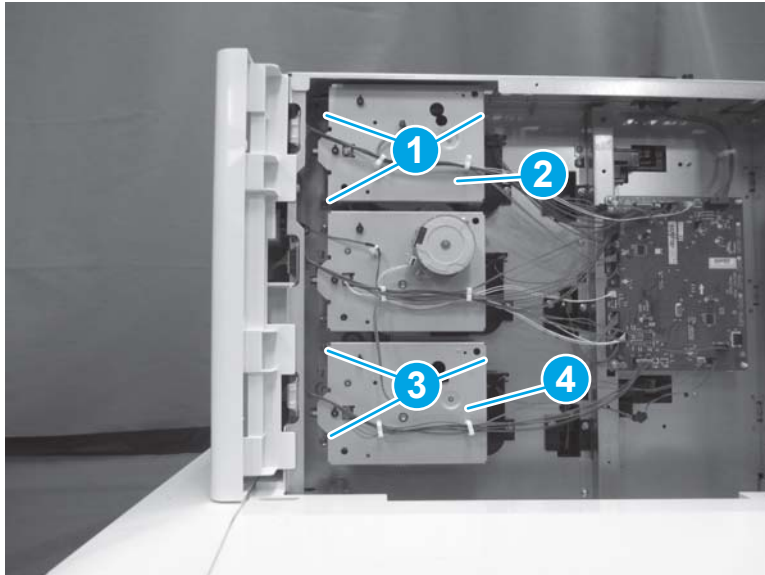

#### Step 4: Remove the drive assembly (Tray 4) (3x550-sheet paper feeder with stand)

1. Disconnect three connectors (callout 1), and then release the cable (callout 3) from the retainers (callout 2).

Figure 1-2395 Disconnect three connectors

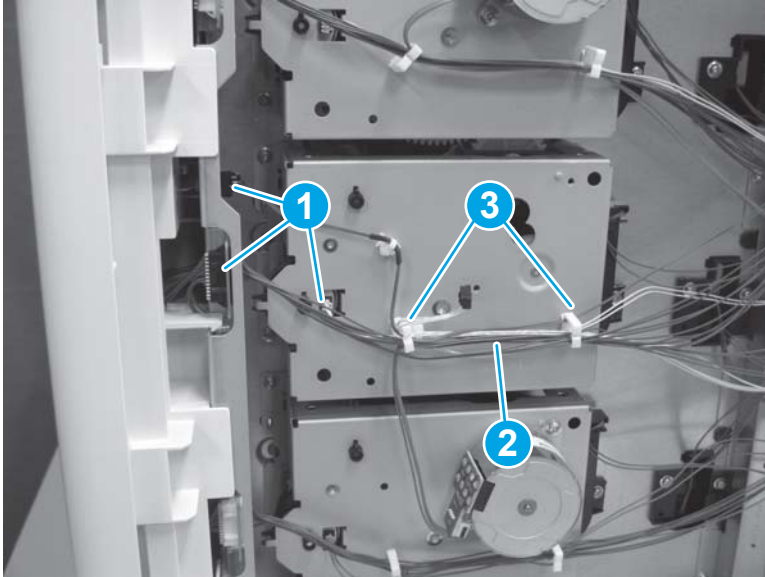


2. Release the retainer (callout 1), remove three screws (callout 2), and then remove the drive assembly (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2396 Remove the drive assembly

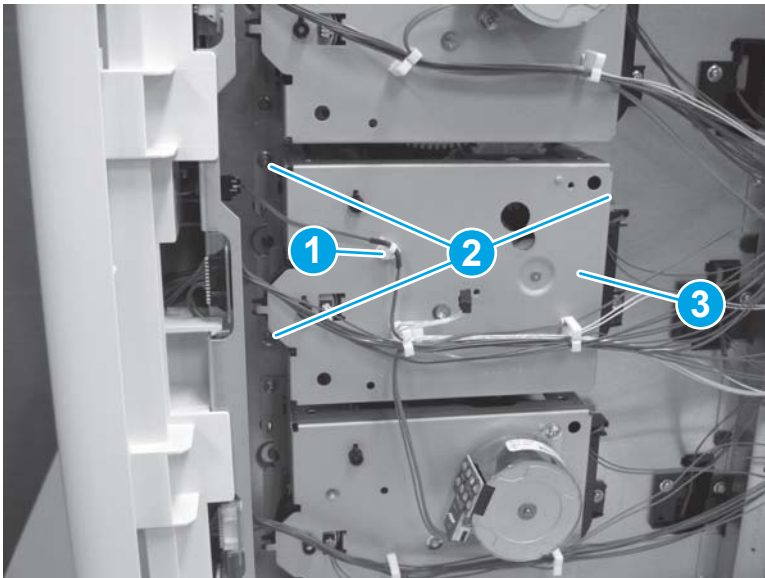

#### Step 5: Remove the pickup alienation holder (3x550-sheet paper feeder with stand)

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).

Figure 1-2397 Disconnect one connector

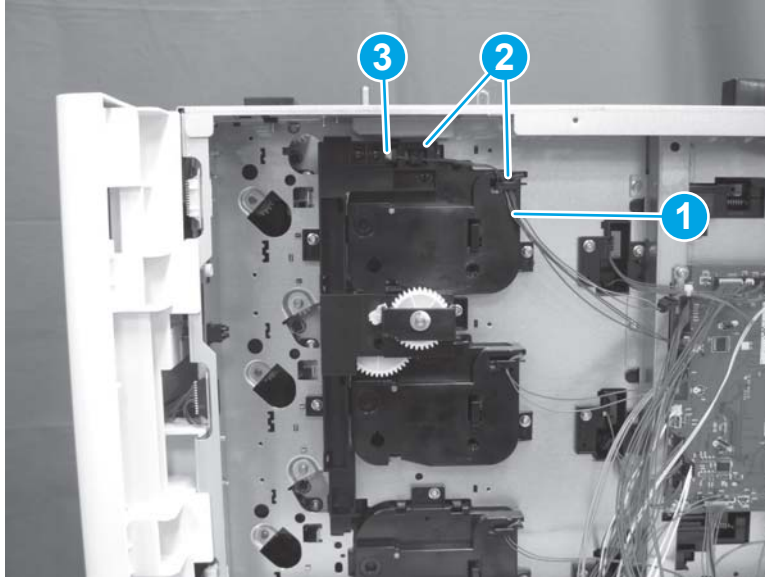

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).


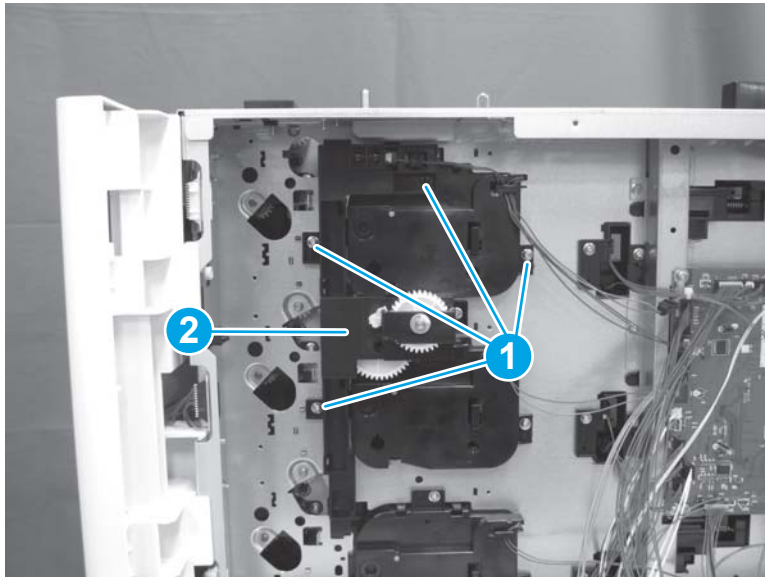
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2398 Remove four screws and the pickup alienation holder




### Step 6: Remove the lifter drive assembly (Trays 3 and 4) (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which lifter drive assembly you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 lifter drive assembly:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the lifter drive assembly (callout 3).
- b. **Tray 4 lifter drive assembly:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the lifter drive assembly (callout 6).

Figure 1-2399 Remove the lifter drive assembly assemblies

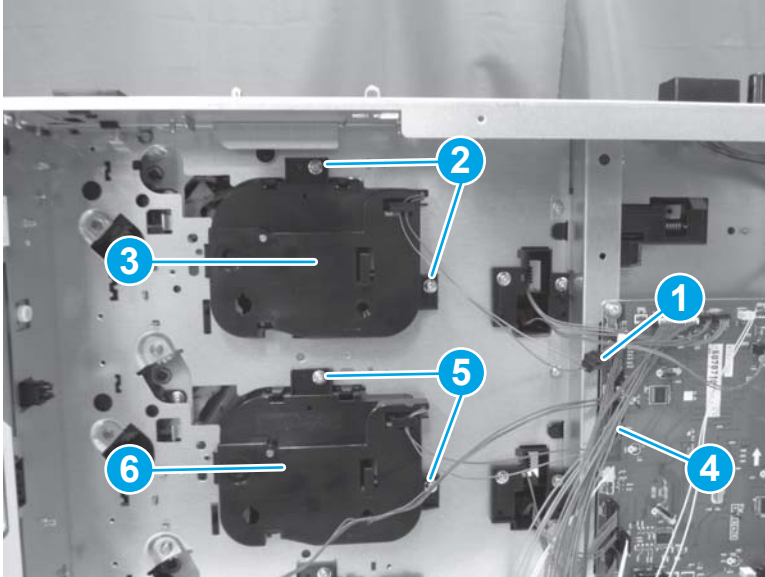

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Lifter drive assembly (Tray 5) (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(Tray 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 4: Remove the lifter drive assembly \(Tray 5\) \(3x550-sheet paper feeder with stand\)](#)
- [Step 5: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lifter drive assembly for Tray 5 in the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Lifter drive assembly (3x550-sheet paper feeder with stand) part number	
RM2-2091-000CN	Lifter drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2400 Remove one screw

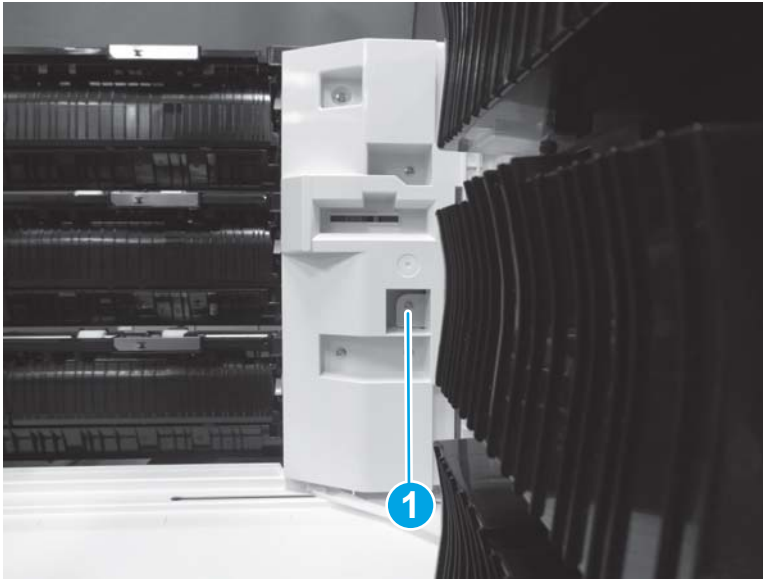


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2401 Remove the rear cover

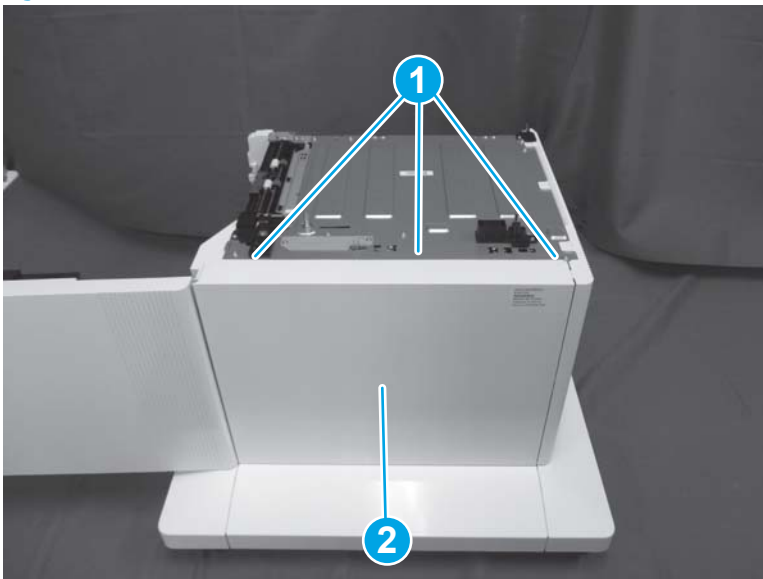

### Step 2: Remove the feed motor (Tray 5) (3x550-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).
- c. **Tray 5 feed motor:** Disconnect one connector (callout 7), remove two screws (callout 8), and then remove the feed motor (callout 9).


Figure 1-2402 Remove the feed motors

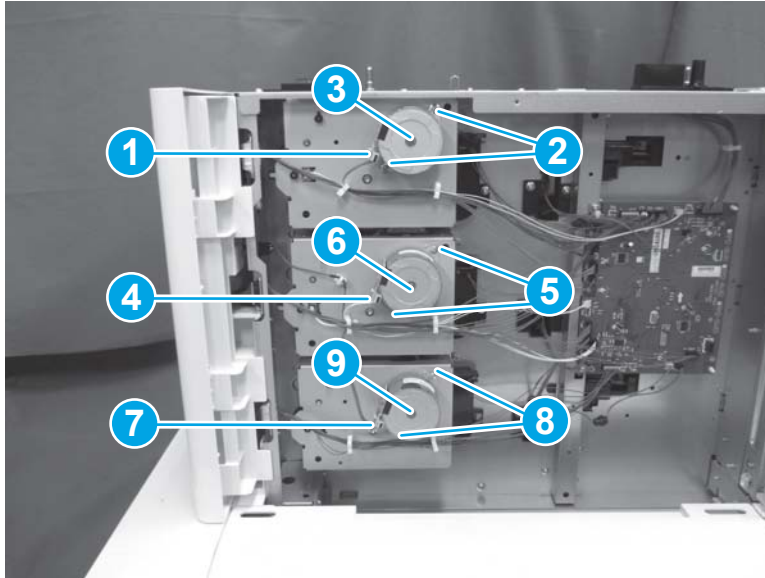

### Step 3: Remove the drive assembly (Tray 5) (3x550-sheet paper feeder with stand)


1. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).
  - b. **Tray 5 drive assembly:** Disconnect two connectors (callout 4), and then release the cable (callout 5) from the retainers (callout 6).

Figure 1-2403 Disconnect two connectors

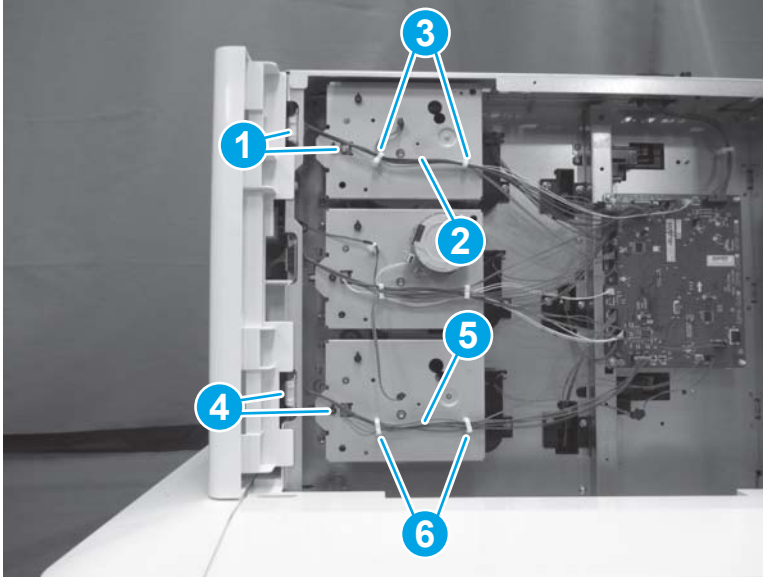

2. Do one of the following, depending upon which drive assembly you are removing:
  - a. **Tray 3 drive assembly:** Remove three screws (callout 1), and then remove the drive assembly (callout 2).
  - b. **Tray 5 drive assembly:** Remove three screws (callout 3), and then remove the drive assembly (callout 4).

Figure 1-2404 Remove the drive assembly

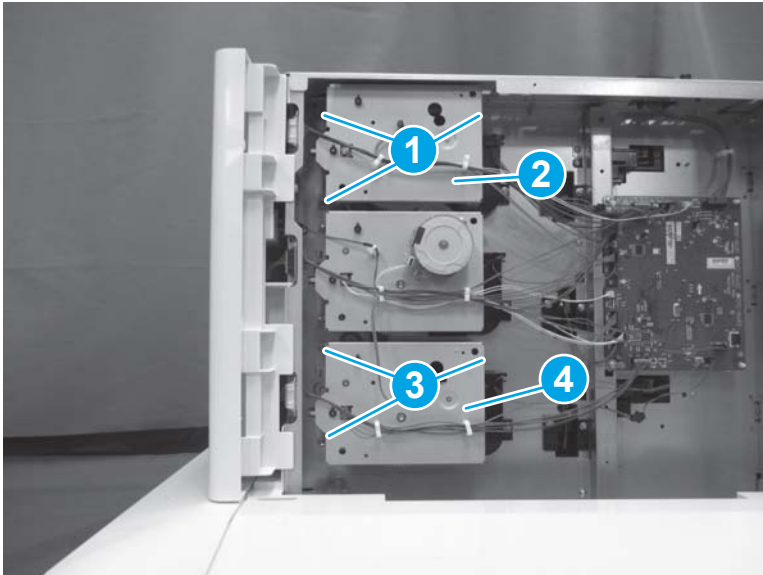


#### Step 4: Remove the lifter drive assembly (Tray 5) (3x550-sheet paper feeder with stand)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the lifter drive assembly (callout 3).

💡 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2405 Remove three screws and the lifter drive assembly

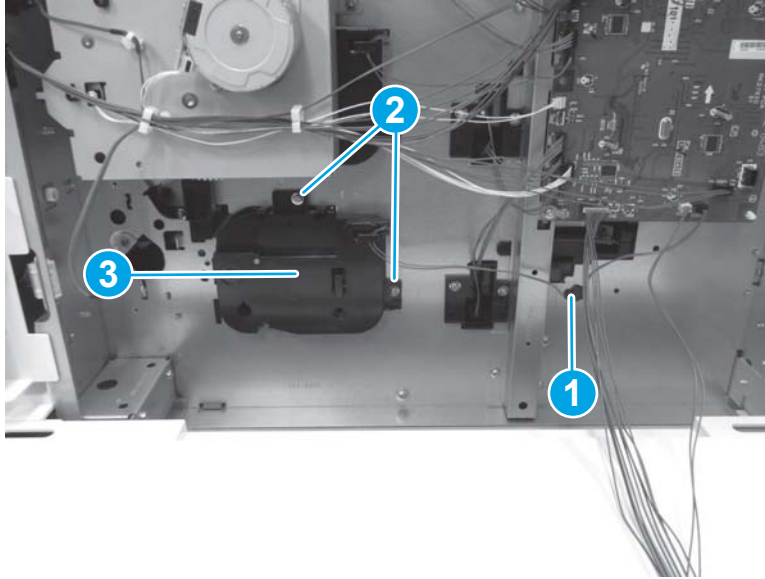

### Step 5: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Controller PCA (3x550-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(3x550-sheet paper feeder with stand\)](#)
- [Step 2: Remove the controller PCA \(3x550-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the controller PCA for the 3x550-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Controller PCA (3x550-sheet paper feeder with stand) part number

---

RM2-8483-000CN

Paper deck controller PCB assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 3x550-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (3x550-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).


Figure 1-2406 Remove one screw

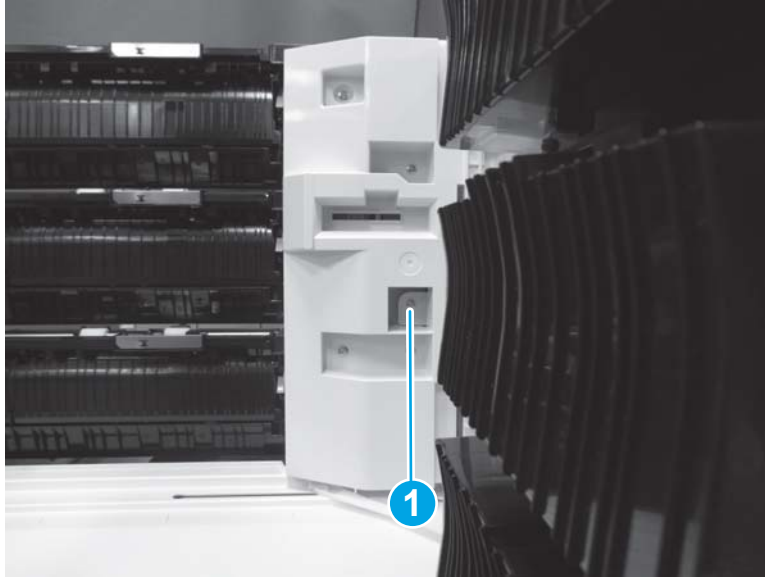

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2407 Remove the rear cover

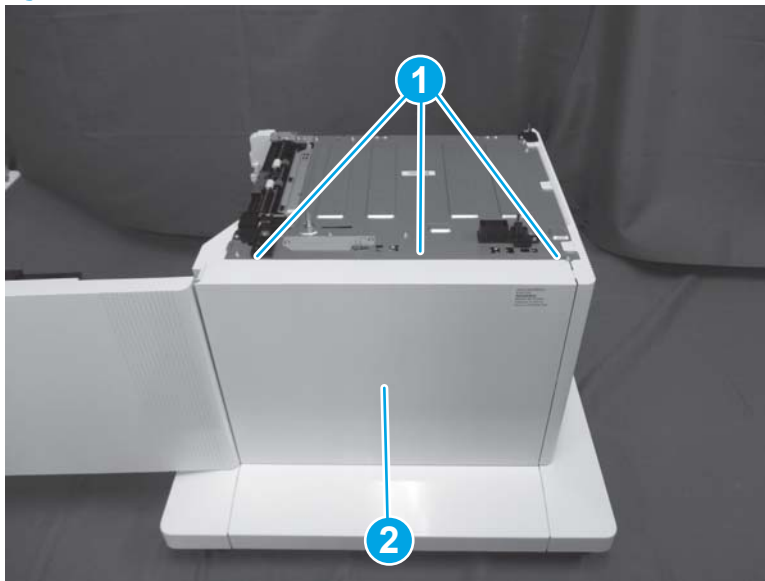

### Step 2: Remove the controller PCA (3x550-sheet paper feeder with stand)

- ▲ Disconnect all of the connectors on the controller PCA. Remove two screws (callout 1), release two tabs (callout 2), and then remove the controller PCA (callout 3).


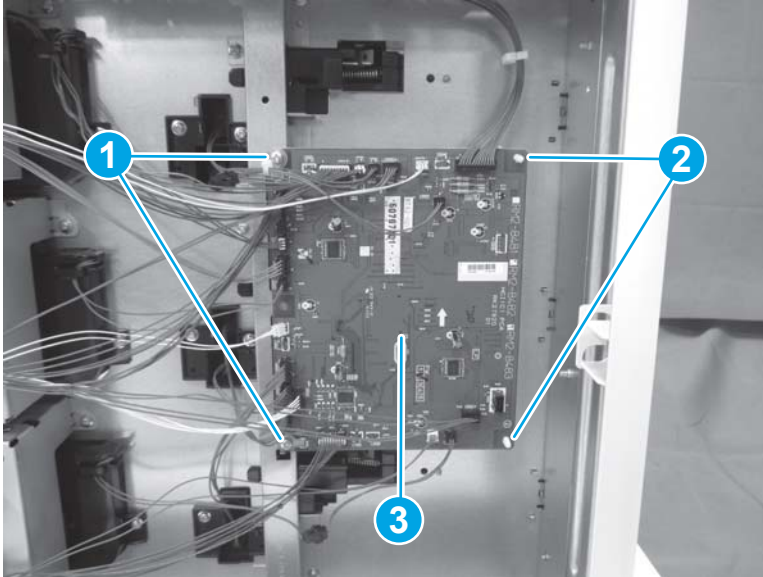
 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-2408 Remove the controller PCA



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: 2,550-sheet paper feeder with stand


- [Removal and replacement: Left cover \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door link \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Left lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Rear lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Right door switch \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Size sensor \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Size sensor \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drawer connector holder and cable assembly \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Auto-close assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Auto-close assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Paper pickup assemblies \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Tray lifter motor drive assembly \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Feed motors \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drive assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Drive assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Pickup alienation holder \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Lifter drive assembly \(2,500-sheet paper feeder with stand\)](#)
- [Removal and replacement: Controller PCA \(2,500-sheet paper feeder with stand\)](#)

## Removal and replacement: Left cover (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the left cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left cover on the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left cover (2,500-sheet paper feeder with stand) part number	
RC5-0387-000CN	Cover, left

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove the left cover (2,500-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).


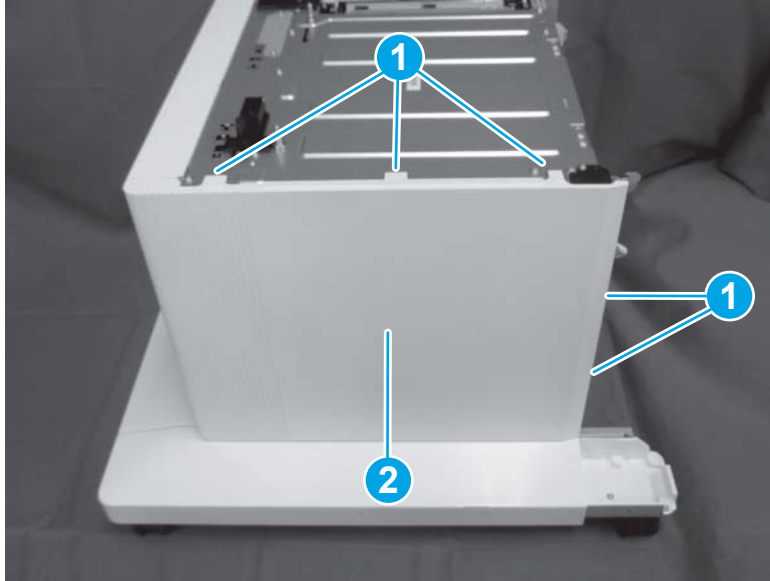
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2409 Remove the left cover



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Right door link (2,500-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the right door link](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the link on the right door on the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door link (2,500-sheet paper feeder with stand) part number	
RC4-9824-000CN	Link, door

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link

1. Lift the end of the link arm up and out of the right door.

Figure 1-2410 Lift the link arm end

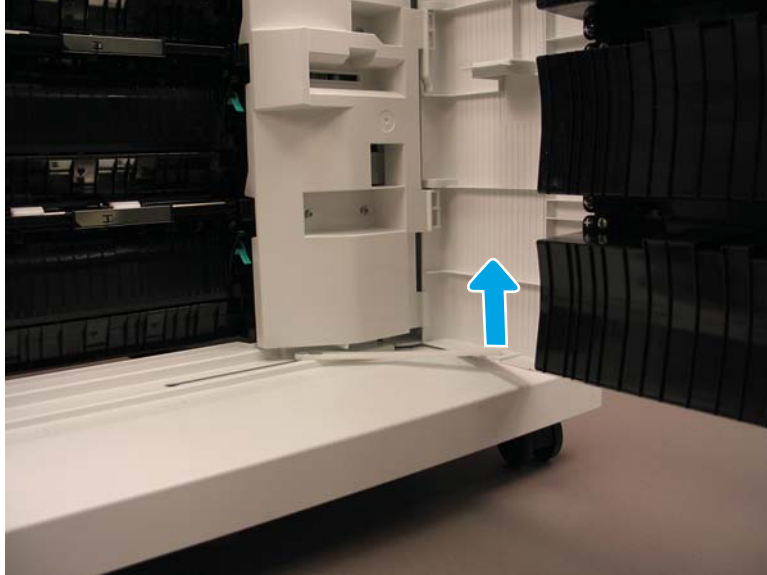


2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2411 Remove the link arm

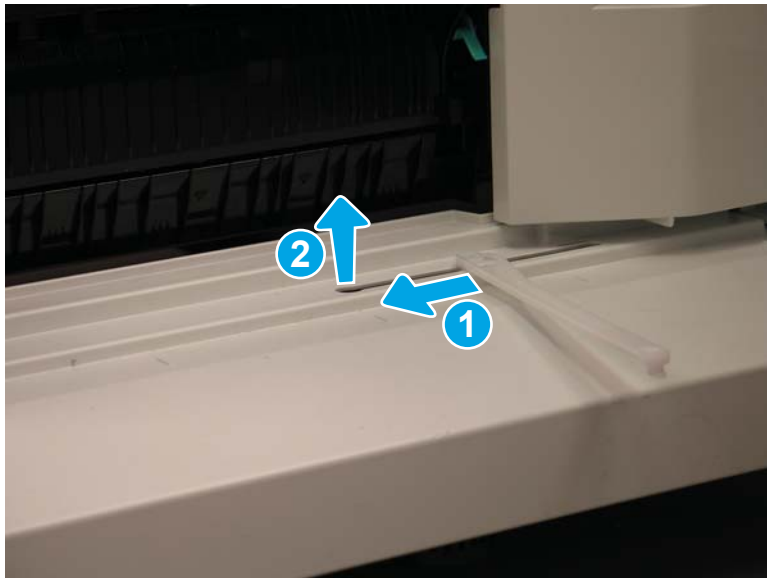

### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---



## Removal and replacement: Right door (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door link arm \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door on the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door (2,500-sheet paper feeder with stand) part number	
RM2-1218-000CN	Right door assembly

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the right door link arm (2,500-sheet paper feeder with stand)

1. Lift the end of the link arm up and out of the right door.

Figure 1-2412 Lift the link arm end

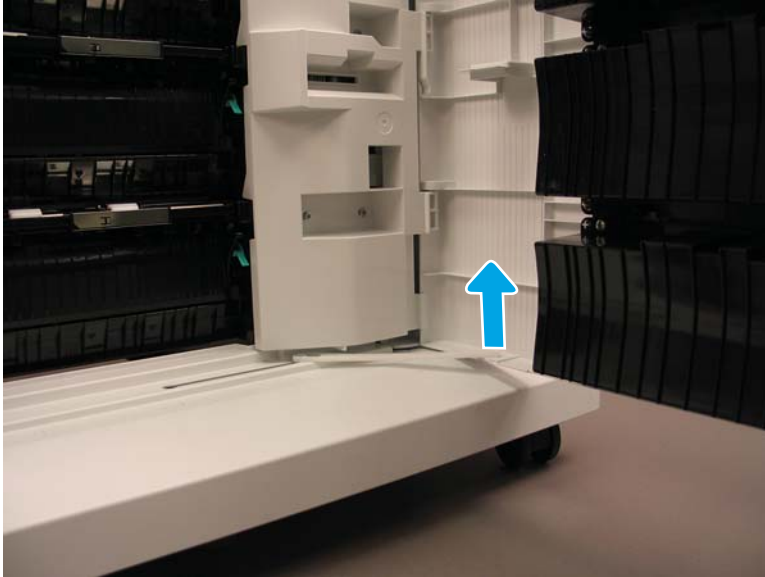


2. Slide the end of the link arm on the paper feeder stand to the left, all the way to the end of the slot (callout 1). Lift the link arm up (callout 2) to remove it.

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2413 Remove the link arm

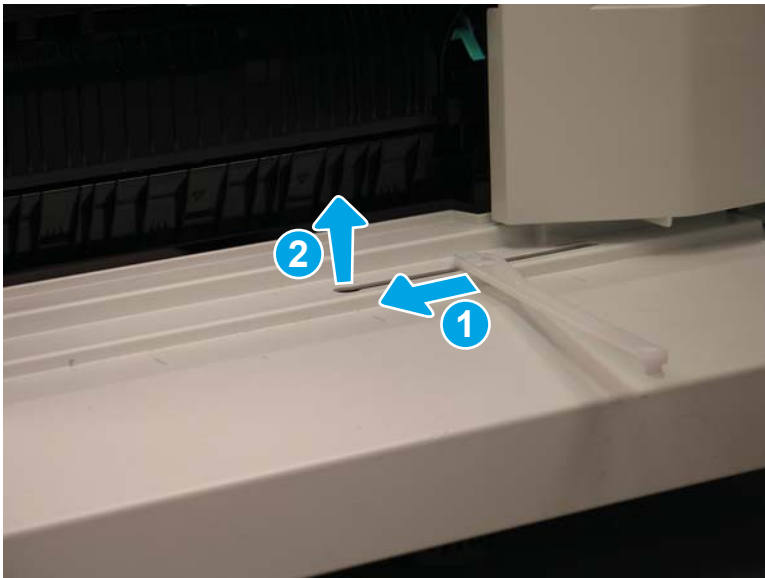

### Step 2: Remove the right door (2,500-sheet paper feeder with stand)


- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2414 Remove the right door

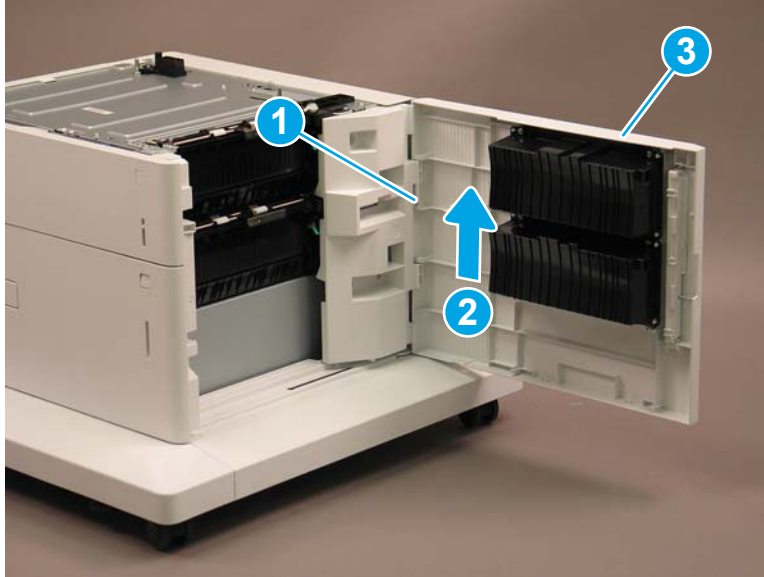

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Rear cover (2,500-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear cover on the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Rear cover (2,500-sheet paper feeder with stand) part number	
RCS-0386-000CN	Cover, rear

### Required tools

- No special tools are needed to remove or install this assembly.

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2415 Remove one screw

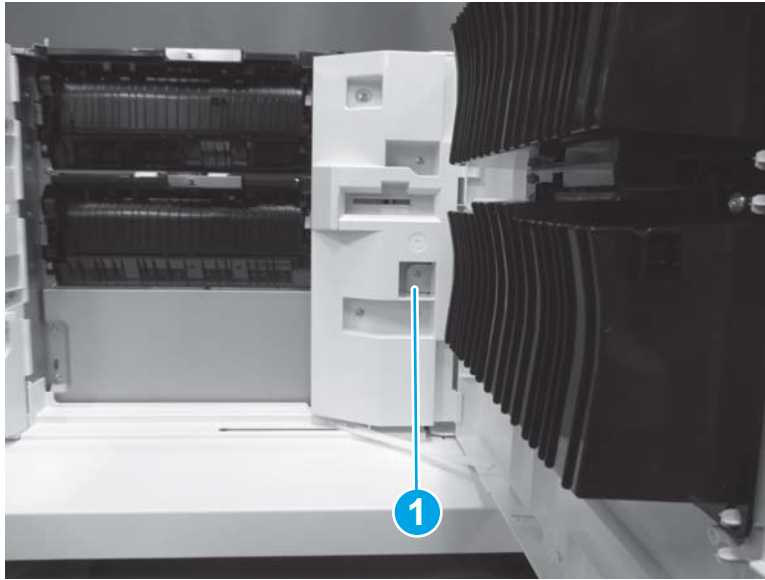

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


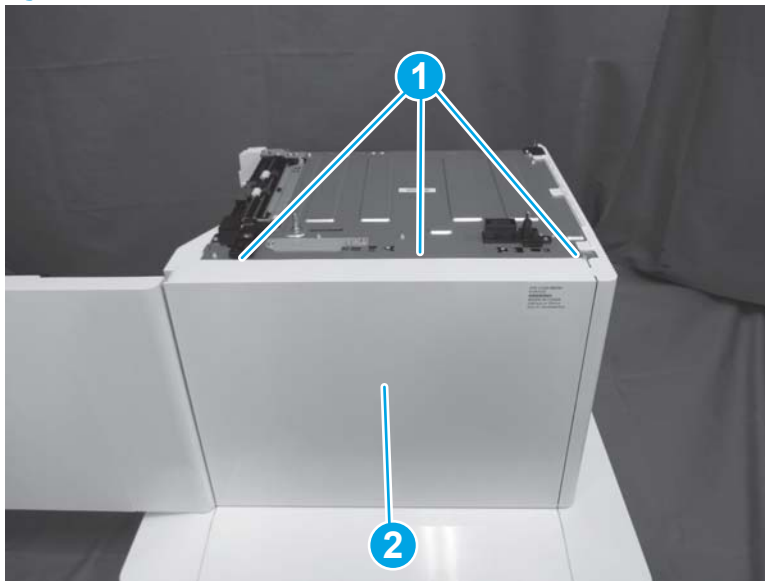
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2416 Remove the rear cover



## Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Left lower cover (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove Tray 4](#)
- [Step 2: Remove the left cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the left lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the left lower cover on the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Left lower cover (2,500-sheet paper feeder with stand) part number	
RC5-0385-000	Cover, left lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

No post service test is available for this assembly.

### Step 1: Remove Tray 4

1. Open Tray 4.



2. Press the right and left release levers at the base of the tray (callout 1), and then pull Tray 4 (callout 2) away from the feeder to remove it.


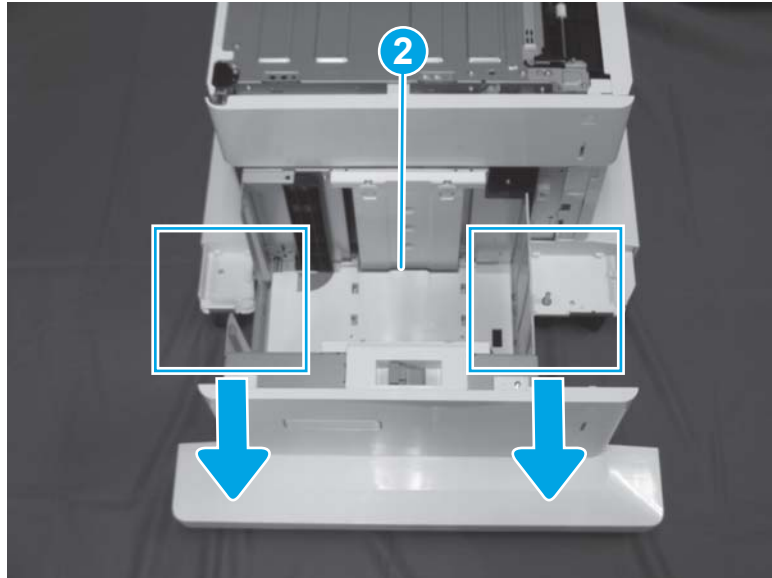
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2417 Remove Tray 4




### Step 2: Remove the left cover (2,500-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2418 Remove the left cover

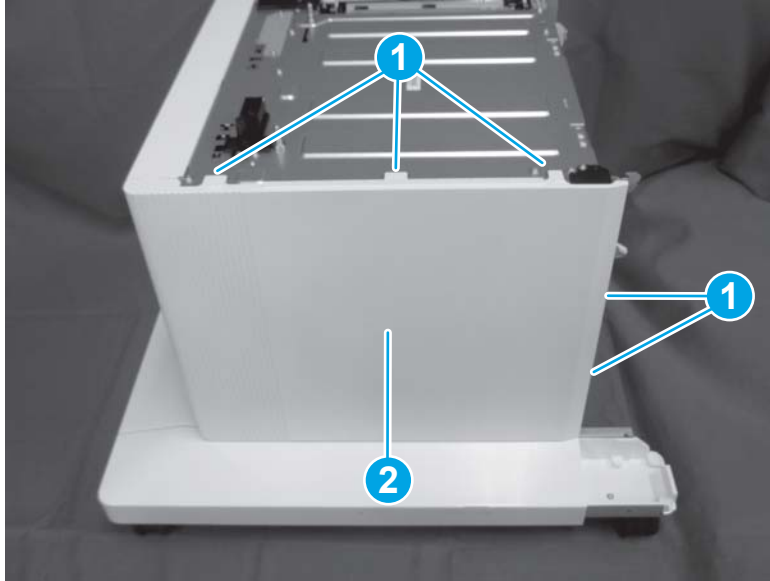

**Step 3: Remove the left lower cover (2,500-sheet paper feeder with stand)**


- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2419 Remove the left lower cover

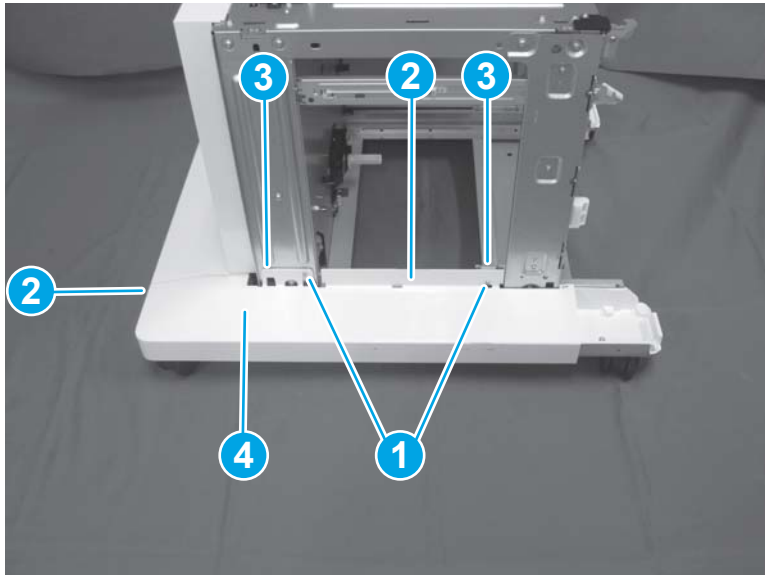

**Step 4: Unpack the replacement assembly**

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Right lower cover (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right lower cover](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right lower cover for the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right lower cover (2,500-sheet paper feeder with stand) part number	
RC5-0384-000CN	Cover, right lower

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


No post service test is available for this assembly.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2420 Remove one screw

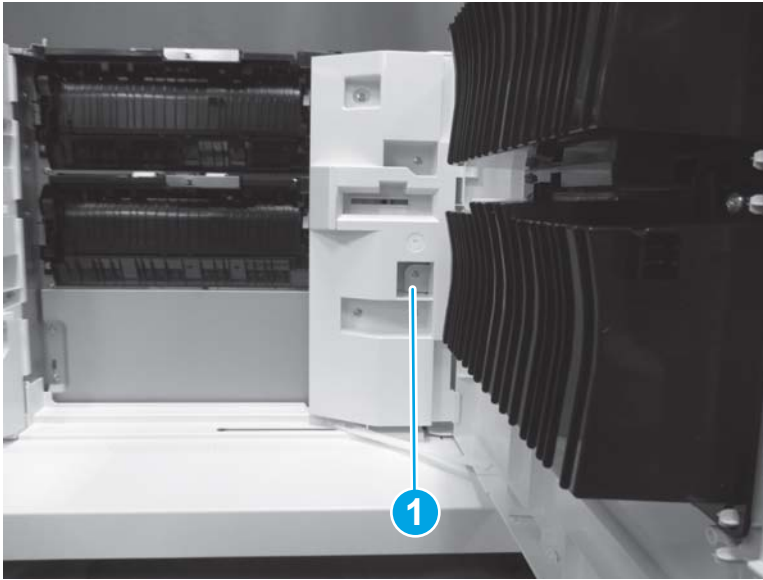


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2421 Remove the rear cover

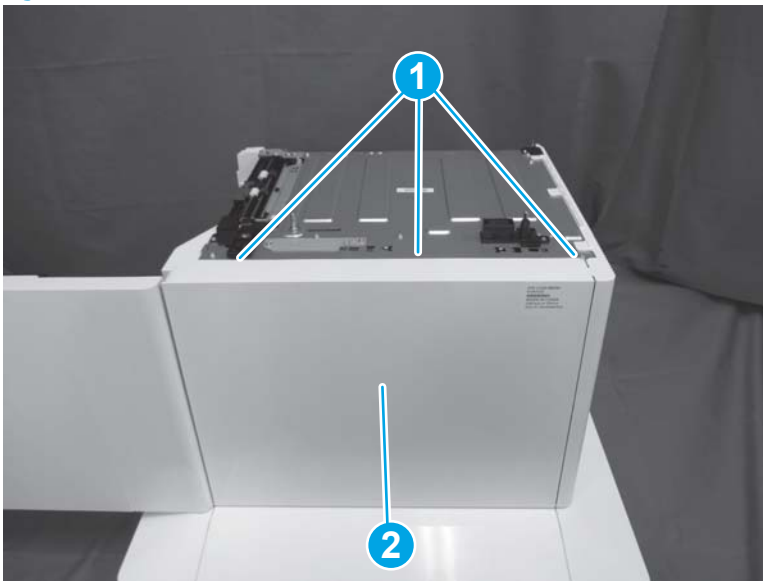

### Step 2: Remove the right door (2,500-sheet paper feeder with stand)


- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2422 Remove the right door

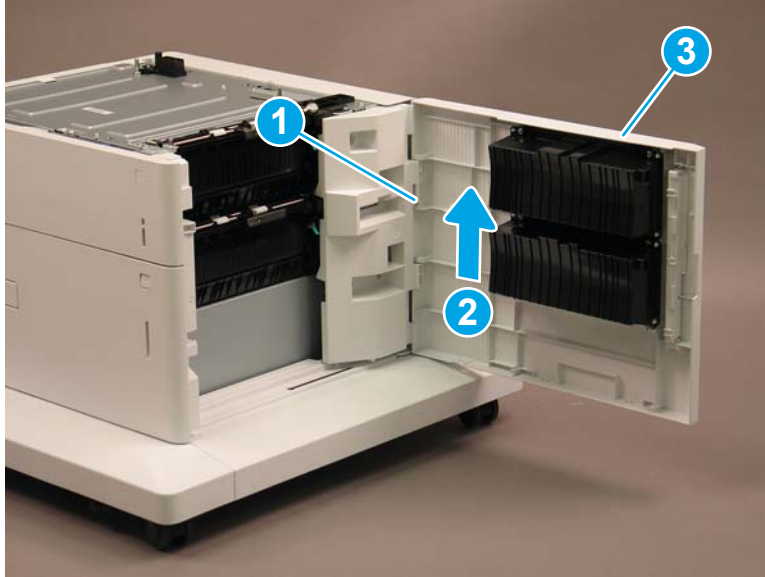

Step 3: Remove the right lower cover


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2423 Remove four screws and the hinge

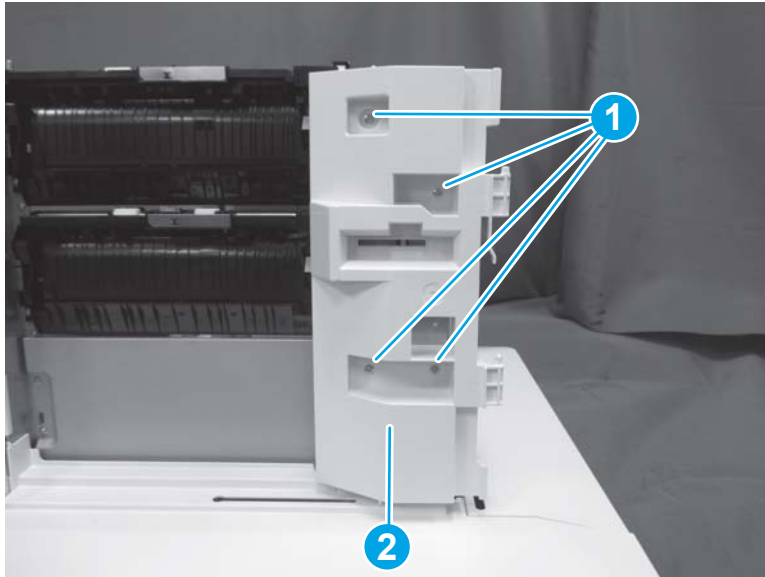


2. Remove two screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2424 Remove two screws and the inner cover

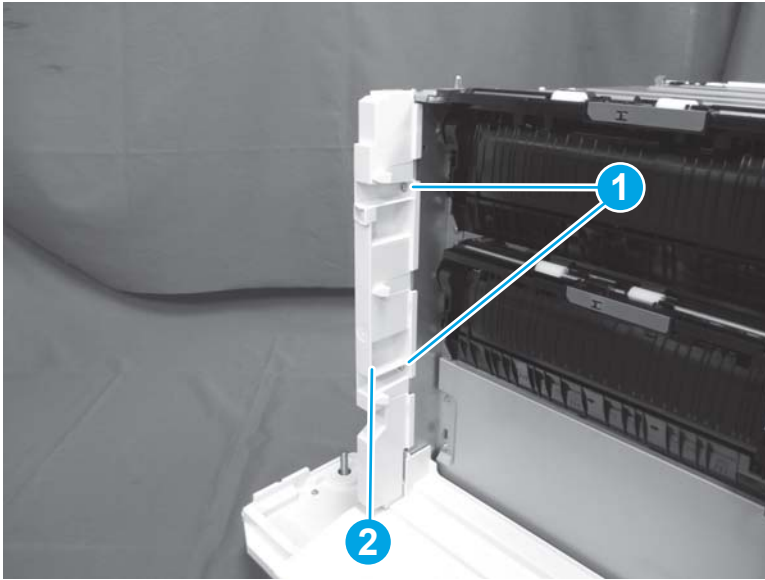

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).

Figure 1-2425 Remove the right lower cover

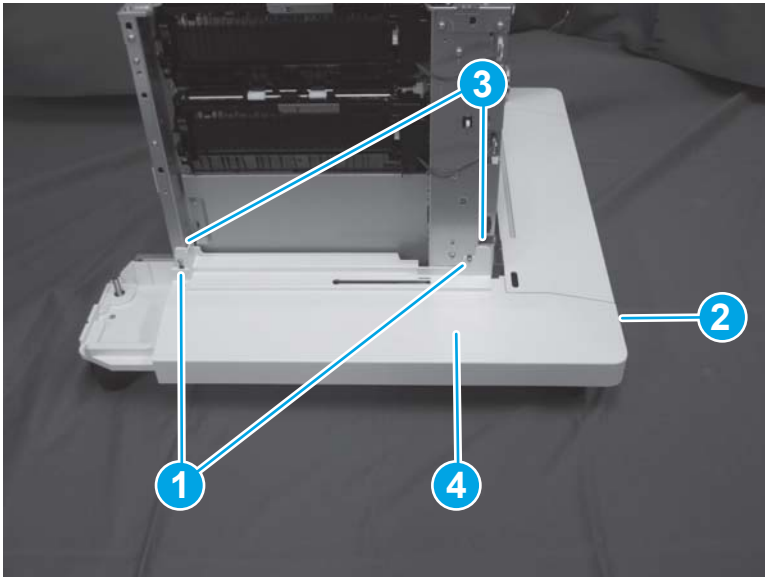


#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.



**CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.



**IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.



**NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Rear lower cover (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the left cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Remove the left lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 5: Remove the right lower cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 6: Remove the rear lower cover](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the rear lower cover for the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.

**WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.

- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Rear lower cover (2,500-sheet paper feeder with stand) part number

---

RC5-0399-000CN

Cover, rear lower

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

No post service test is available for this assembly.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)


1. Open the right door.
2. Remove one screw (callout 1).

Figure 1-2426 Remove one screw

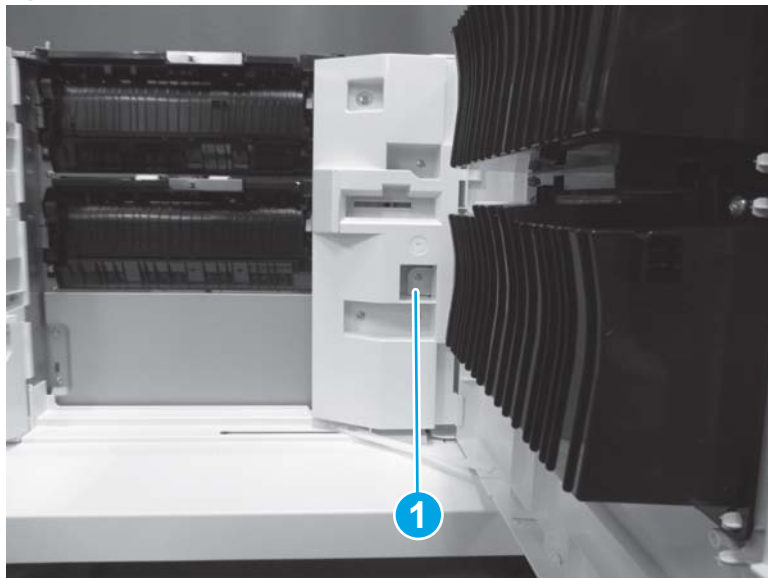


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2427 Remove the rear cover

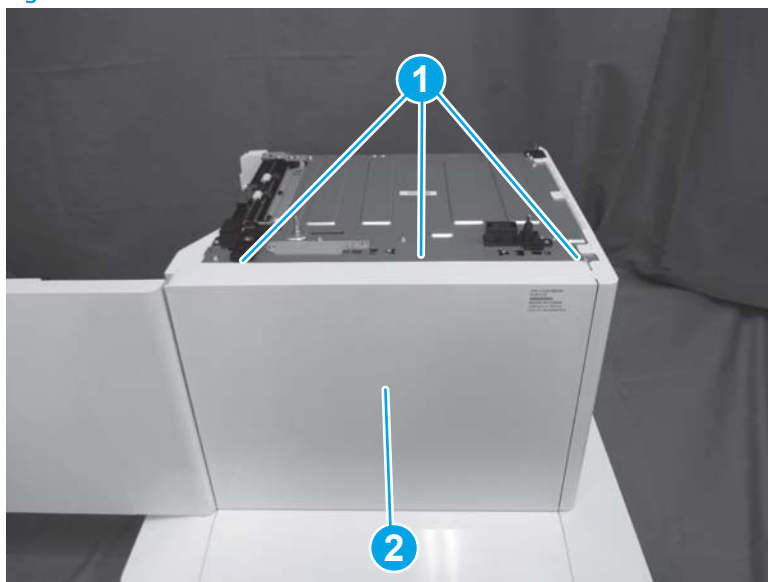

### Step 2: Remove the right door (2,500-sheet paper feeder with stand)


- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2428 Remove the right door

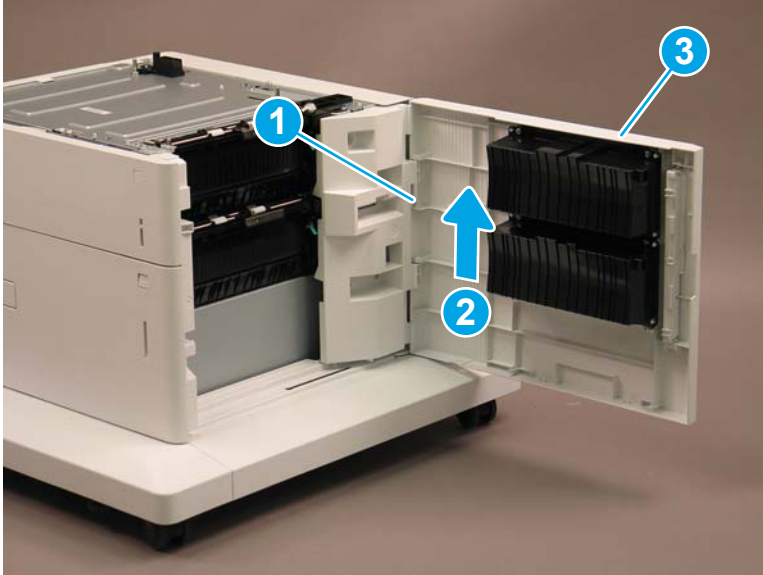


### Step 3: Remove the left cover (2,500-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).

🔧 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2429 Remove the left cover

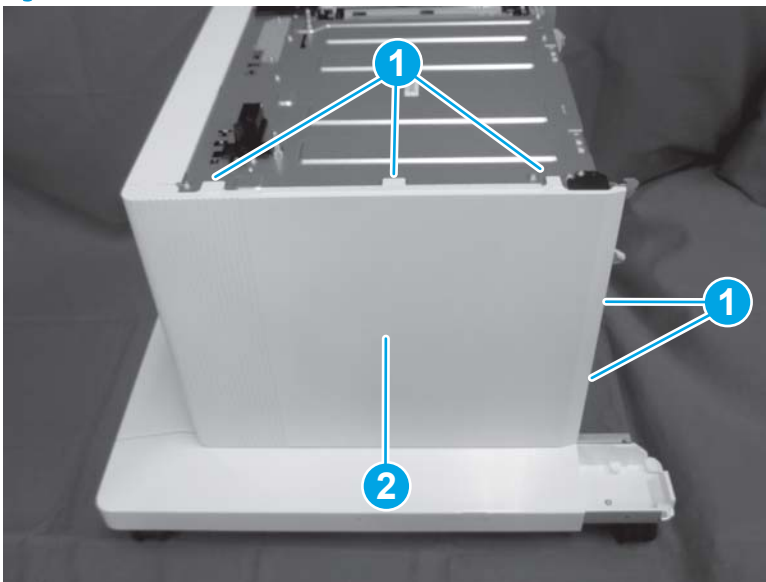


### Step 4: Remove the left lower cover (2,500-sheet paper feeder with stand)

- ▲ Remove two screws (callout 1), and then release two tabs (callout 2). Release two bosses (callout 3), and then remove the left lower cover (callout 4).

🔧 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2430 Remove the left lower cover

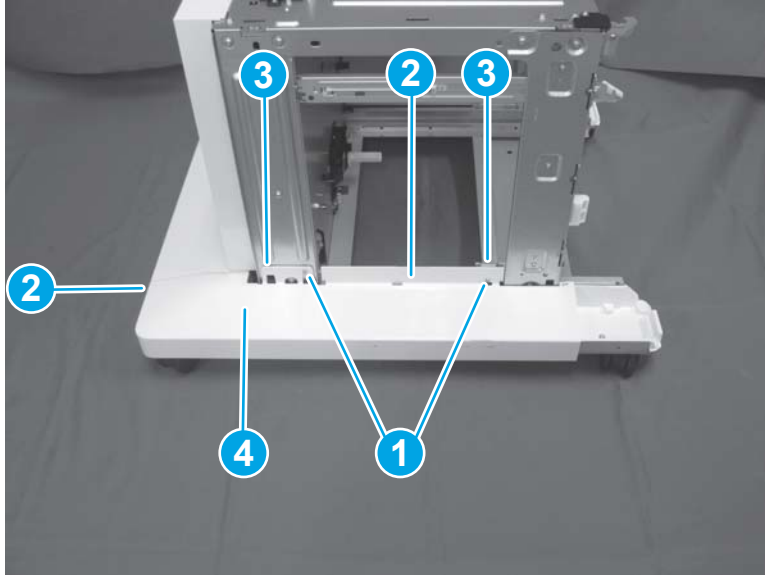

Step 5: Remove the right lower cover (2,500-sheet paper feeder with stand)


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2431 Remove four screws and the hinge

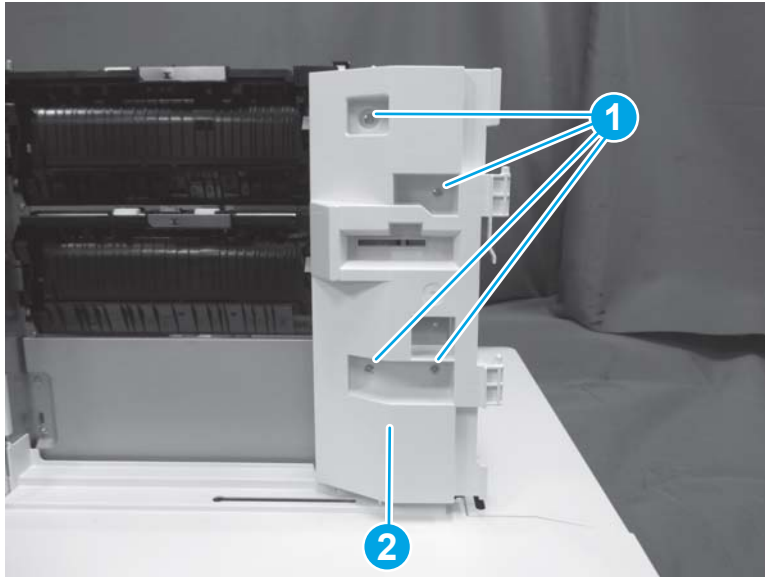


2. Remove two screws (callout 1), and then remove the inner cover (callout 2).

Figure 1-2432 Remove two screws and the inner cover

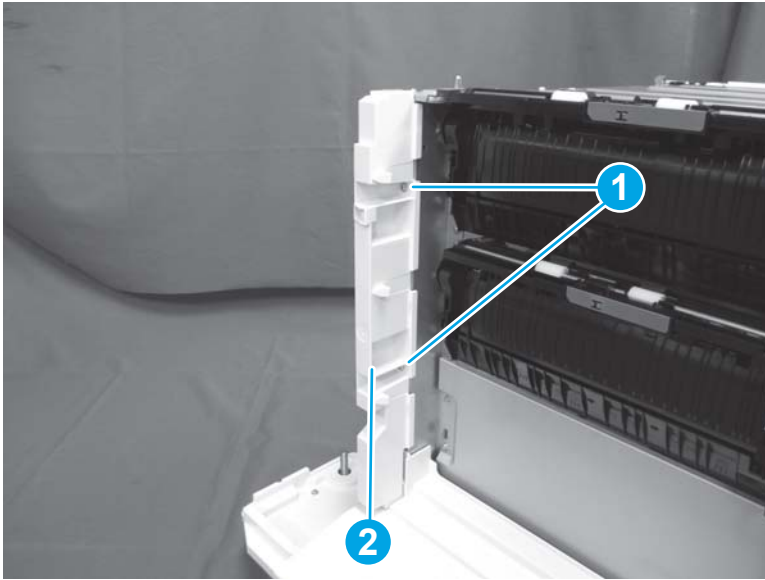

3. Remove two screws (callout 1), and then release one tab (callout 2). Release two bosses (callout 3), and then remove the right lower cover (callout 4).


Figure 1-2433 Remove the right lower cover

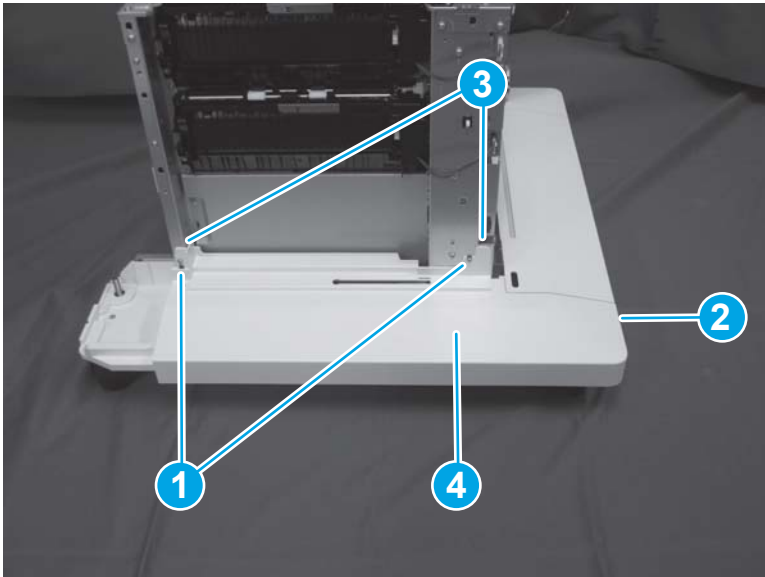

#### Step 6: Remove the rear lower cover

- ▲ Remove two screws (callout 1), and then remove the rear lower cover (callout 2).

Figure 1-2434 Remove the rear lower cover

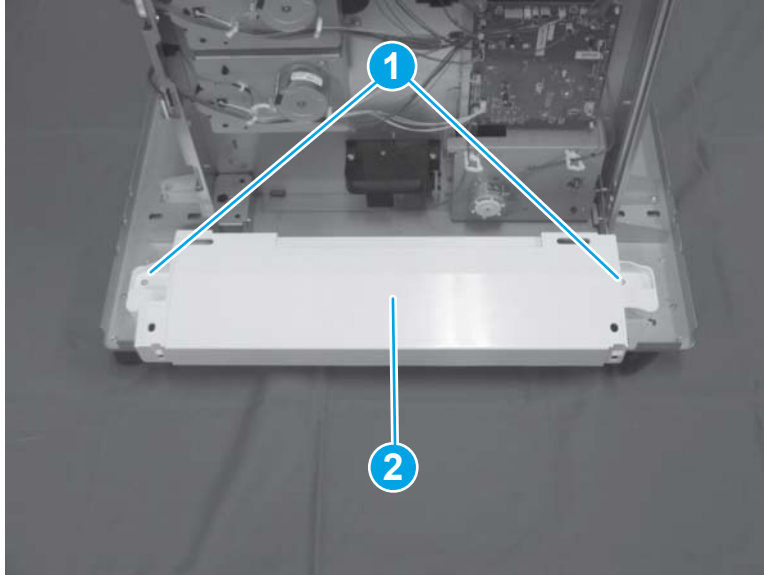

### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---




## Removal and replacement: Right door switch (2,500-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the right door \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the right door switch \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the right door switch on the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Right door switch (2,500-sheet paper feeder with stand) part number	
---	--

WC2-5803-000CN	Switch, push
----------------	--------------

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Close the right door. Verify that no door-open messages display on the control panel.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2435 Remove one screw

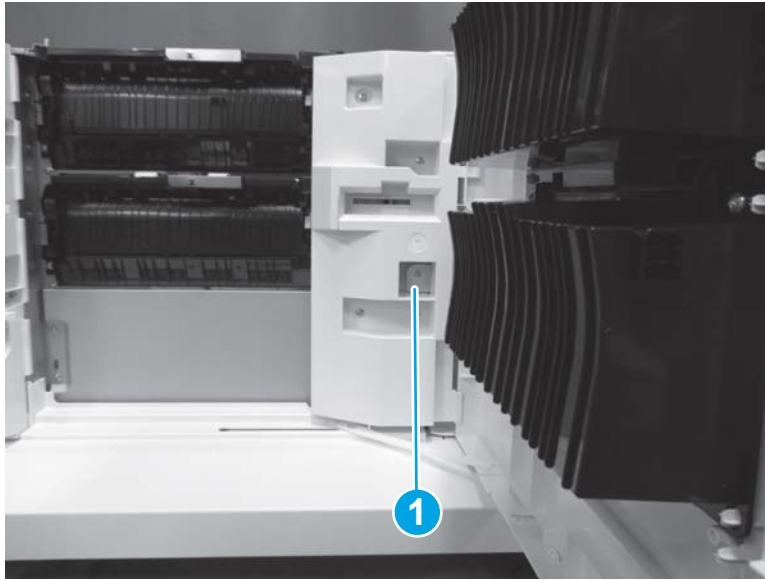

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


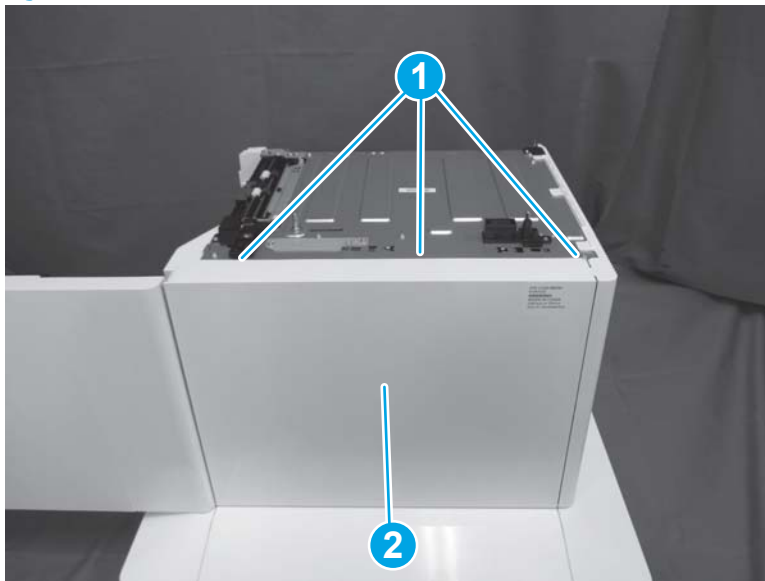
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2436 Remove the rear cover




### Step 2: Remove the right door (2,500-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2437 Remove the right door

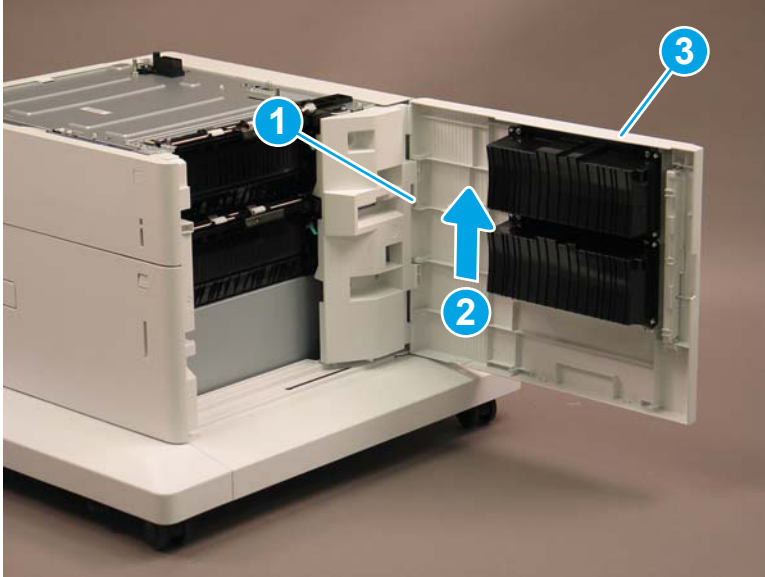

Step 3: Remove the right door switch (2,500-sheet paper feeder with stand)


1. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2438 Remove four screws and the hinge

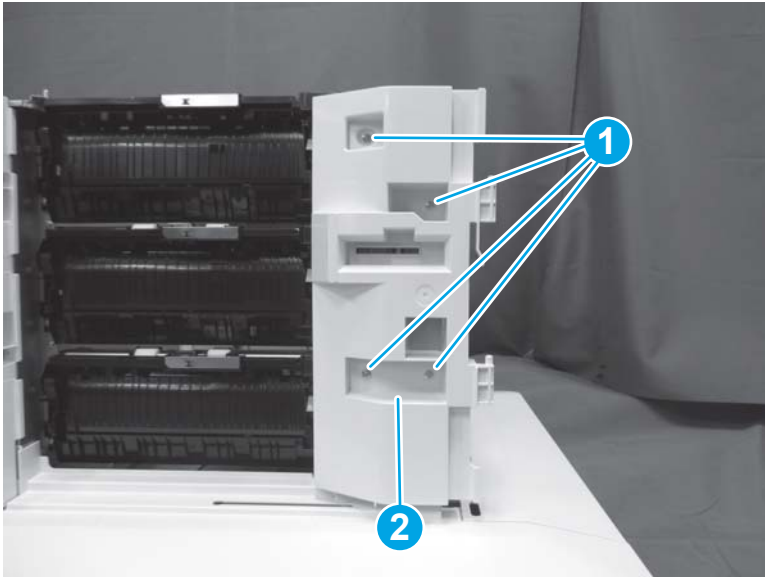


2. At the back of the paper feeder, release two tabs (callout 1) and release the switch through the opening in the sheet metal.

Figure 1-2439 Release two tabs

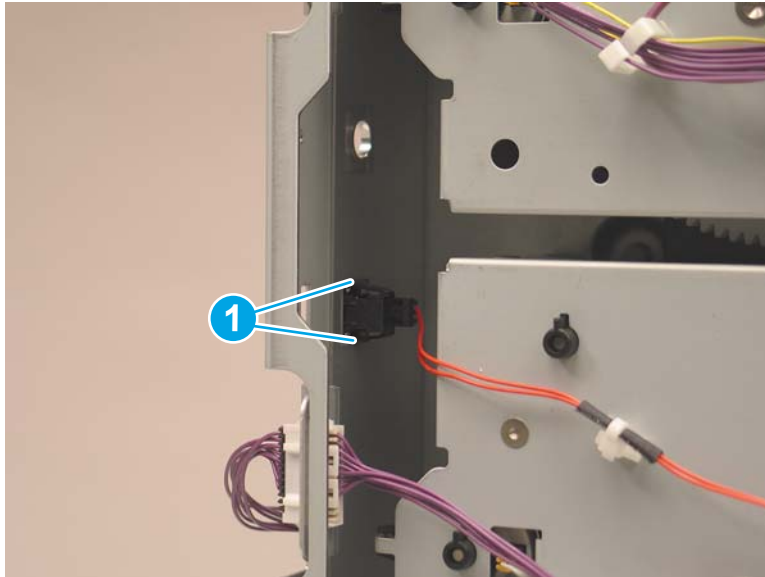

3. Disconnect one connector (callout 1), and then remove the right door switch.

Figure 1-2440 Disconnect one connector

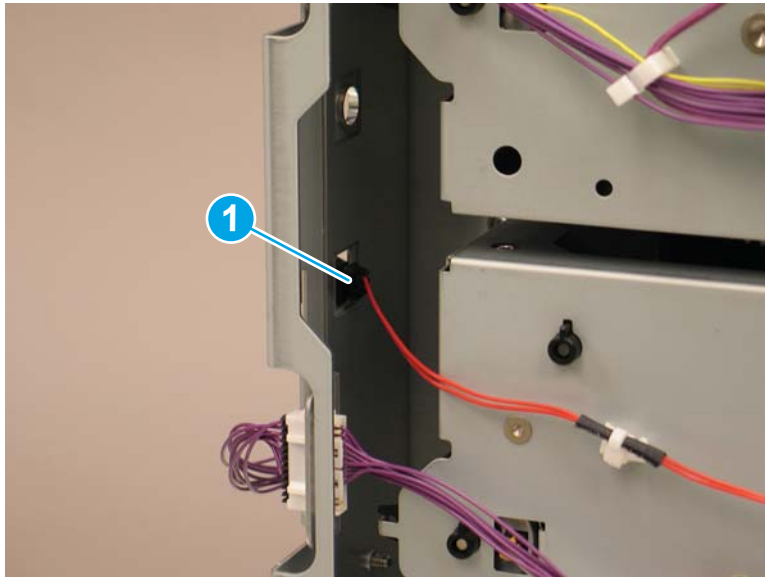

4. Reverse the removal steps to install the assembly. Also use the following special installation instructions.

---


 **NOTE:** Continue to reverse the removal steps to finish installing the assembly.

---

#### Special installation instructions: Right door switch

- ▲ Before reinstalling the hinge, make sure that the spring (callout 1) on the back of the part is in the correct position.

Figure 1-2441 Check spring position

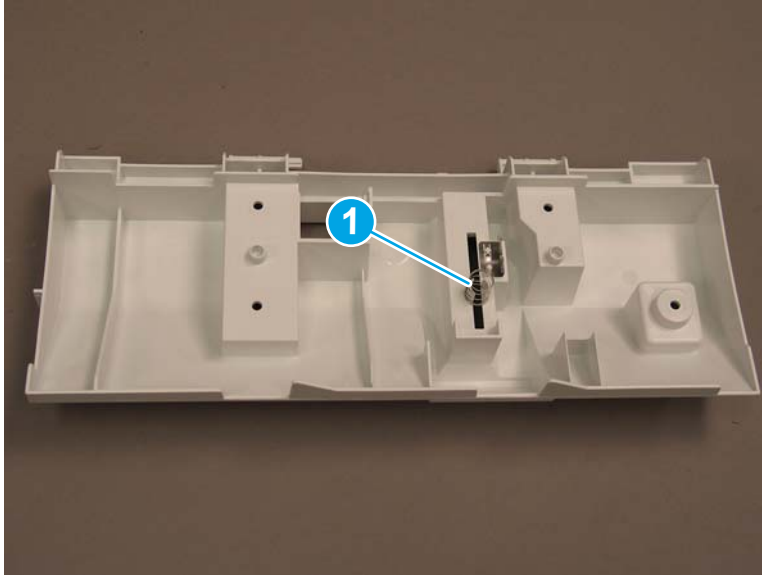



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Size sensor (Tray 3) (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the size sensor \(Tray 3\)\(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the size sensor on Tray 3 of the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Size sensor (Tray 3) (2,500-sheet paper feeder with stand) part number	
RM2-0857-000CN	Size sensor assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Install the paper tray and verify that the printer detects the correct size of paper in the tray.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2442 Remove one screw

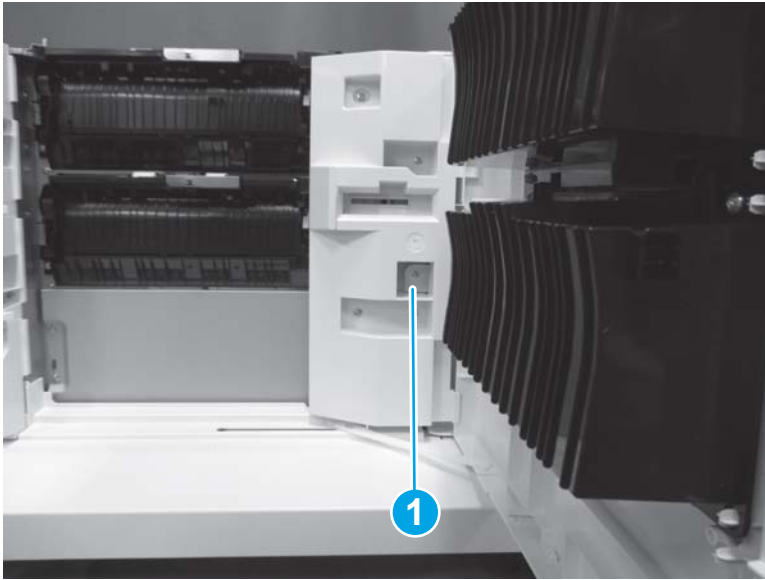

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


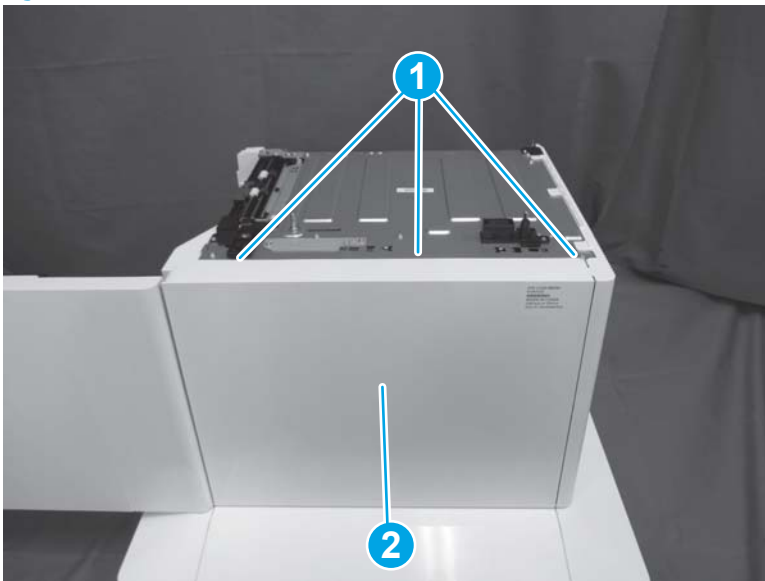
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2443 Remove the rear cover




### Step 2: Remove the size sensor (Tray 3)(2,500-sheet paper feeder with stand)

1. Remove Tray 3.




2. At the back of the feeder, disconnect two connectors (callout 1), and then remove two screws (callout 2).

Figure 1-2444 Disconnect two connectors and remove two screws

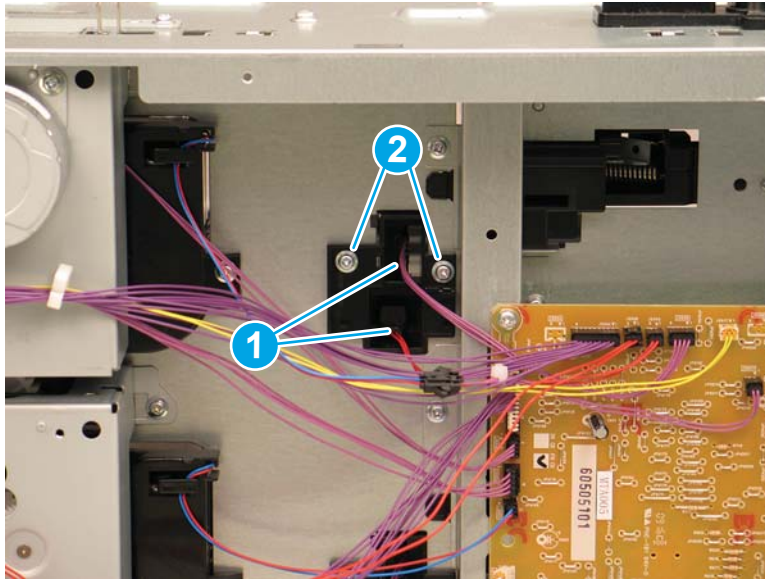

3. Remove the size sensor (callout 1).

Figure 1-2445 Remove the size sensor

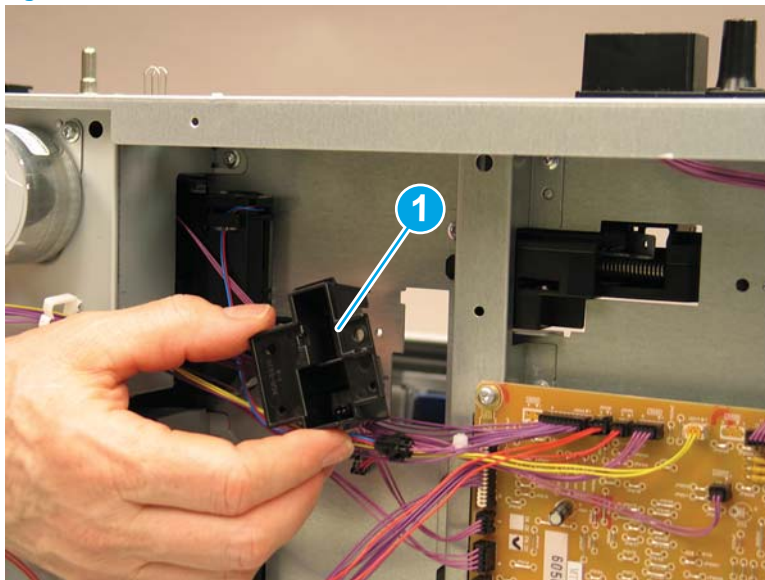

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Size sensor (Tray 4) (2,500-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove Tray 4 \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the size sensor \(Tray 4\)\(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the size sensor on Tray 4 of the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Size sensor (Tray 4) (2,500-sheet paper feeder with stand) part number	
RM2-0921-000CN	Size sensor assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Install the Tray 4 and verify that the printer detects the correct size of paper in the tray.

### Step 1: Remove Tray 4 (2,500-sheet paper feeder with stand)

1. Open Tray 4.

2. Press the right and left release levers at the base of the tray (callout 1), and then pull Tray 4 (callout 2) away from the feeder to remove it.


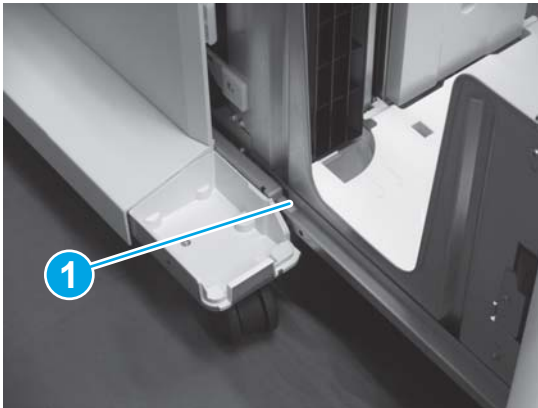
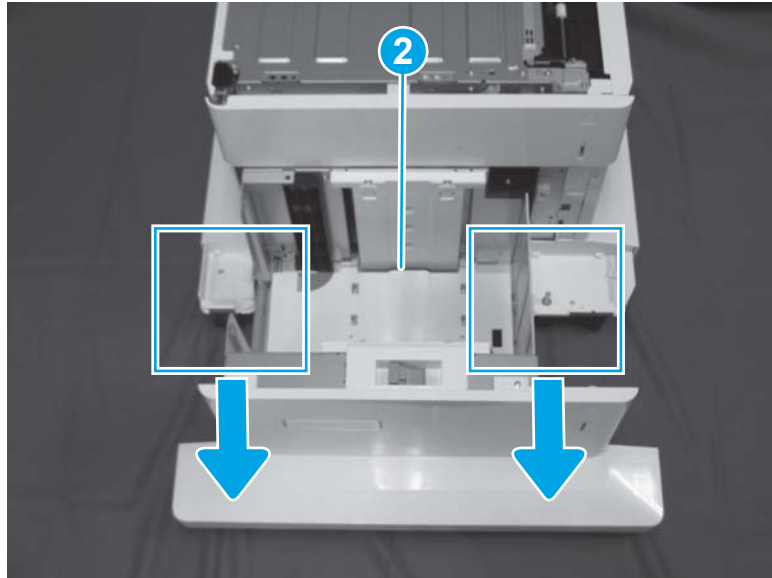
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2446 Remove Tray 4




**Step 2: Remove the rear cover (2,500-sheet paper feeder with stand)**

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2447 Remove one screw

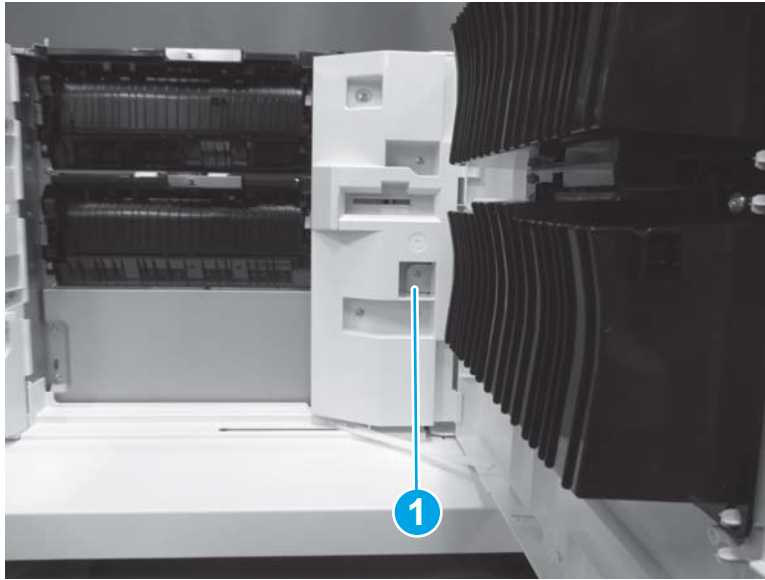

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


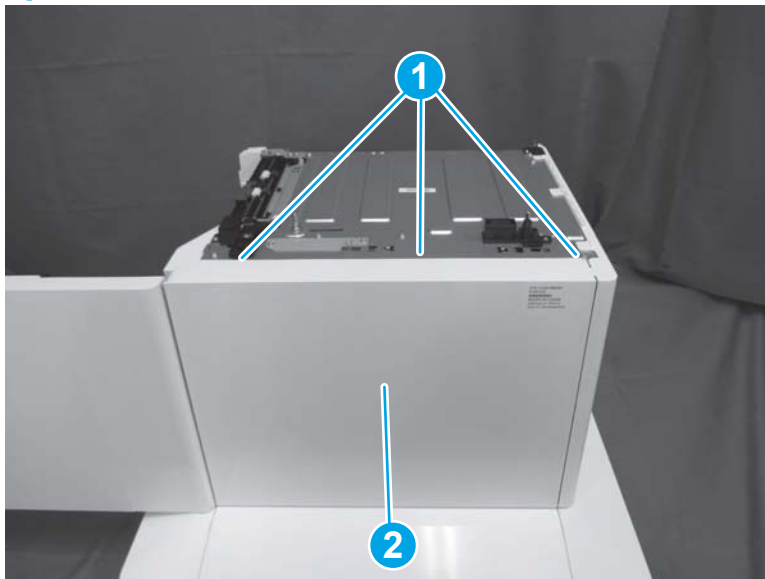
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2448 Remove the rear cover



### Step 3: Remove the size sensor (Tray 4)(2,500-sheet paper feeder with stand)


1. At the back of the feeder, disconnect one connector (callout 1).

Figure 1-2449 Disconnect one connector

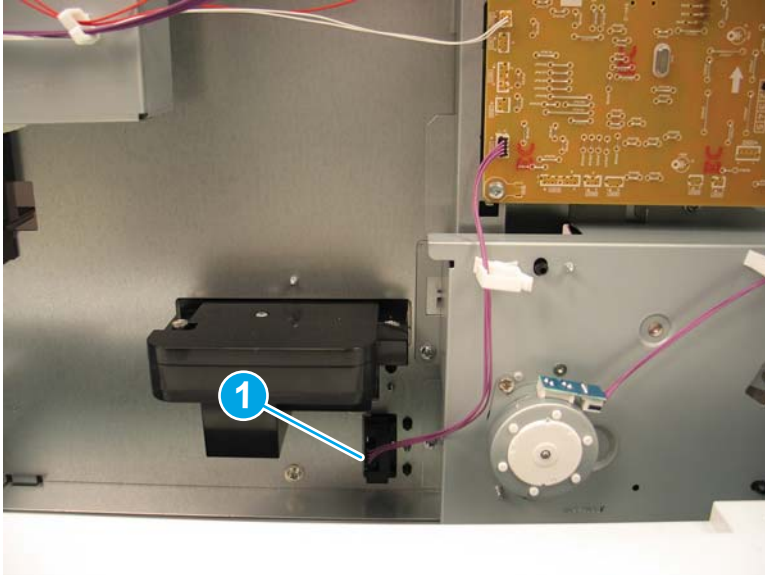


2. Inside the paper tray opening, remove one screw (callout 1).

Figure 1-2450 Remove one screw

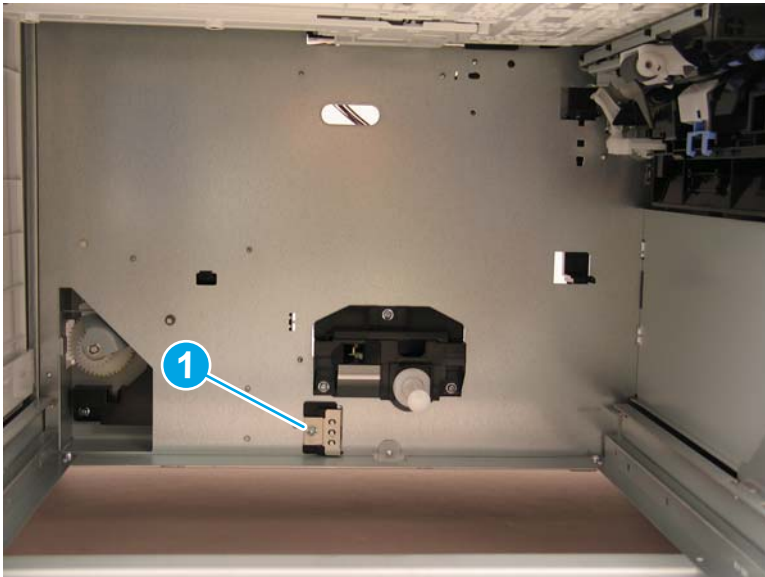

3. Remove the size sensor (callout 1).

Figure 1-2451 Remove the size sensor

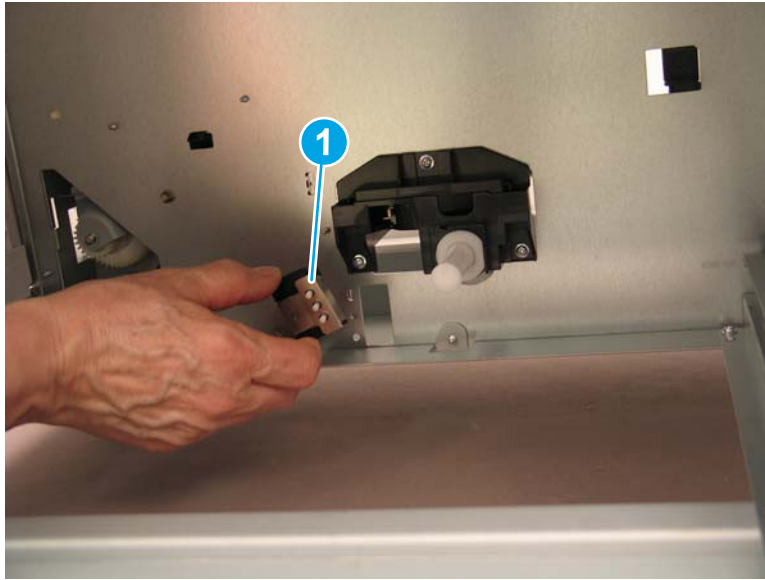



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.



## Removal and replacement: Drawer connector holder and cable assembly (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the drawer connector holder and cable assembly \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drawer connector holder and cable assembly on the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

#### Drawer connector holder and cable assembly (2,500-sheet paper feeder with stand) part numbers

---

RC4-8914-000CN	Holder, drawer connector
RM2-9286-000CN	Drawer upper cable assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip
- Small, flat-blade screwdriver

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2452 Remove one screw

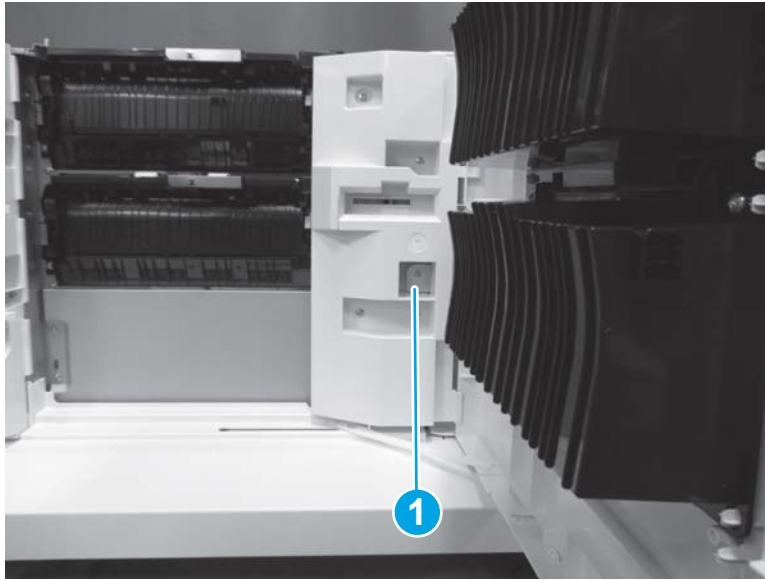

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


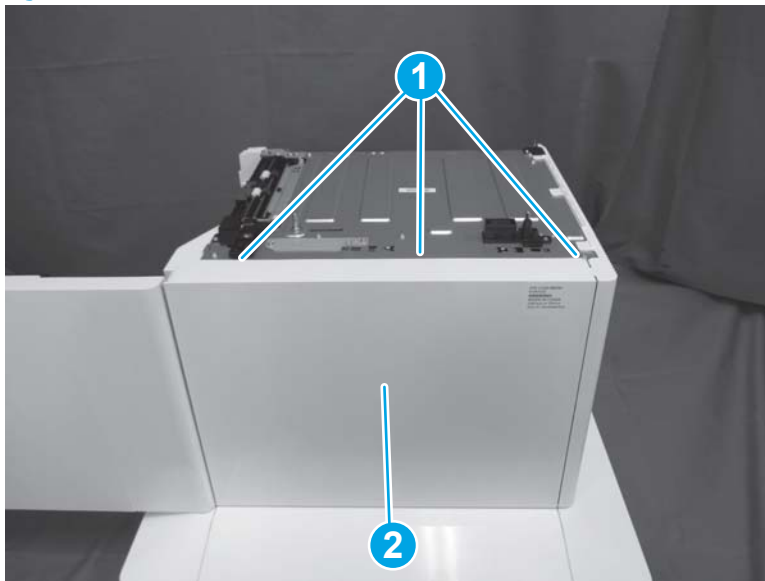
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2453 Remove the rear cover



### Step 2: Remove the drawer connector holder and cable assembly (2,500-sheet paper feeder with stand)


1. At the back of the feeder, disconnect one connector and release one retainer (callout 1).

Figure 1-2454 Disconnect one connector and release retainer

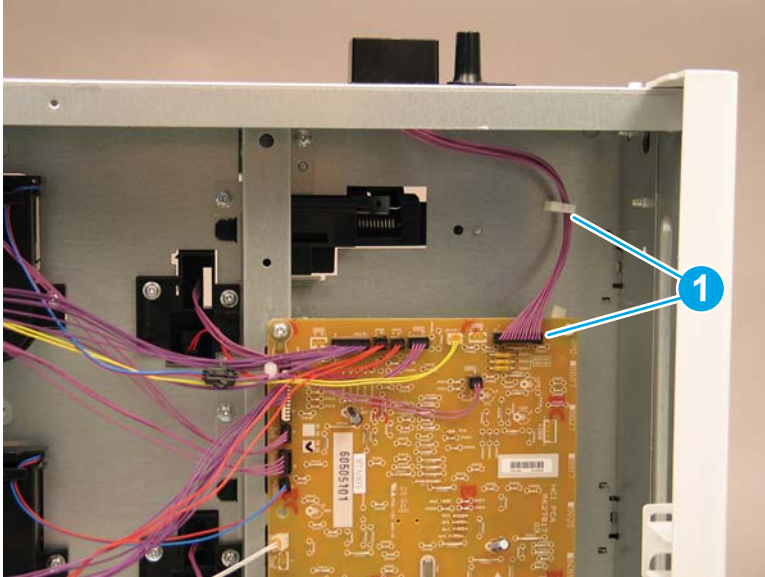

2. At the top of the paper feeder, remove one screw (callout 1).

Figure 1-2455 Remove one screw

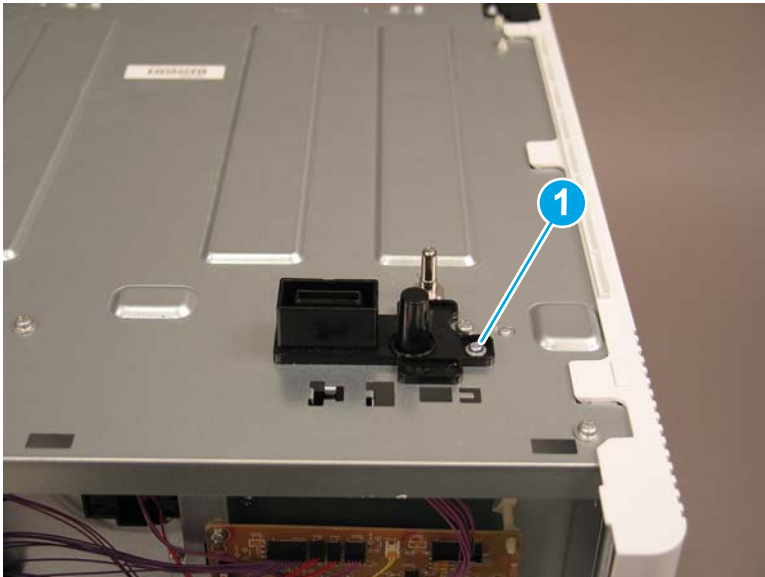


3. Lift the drawer connector holder and cable assembly away from the feeder to remove them.

Figure 1-2456 Remove the drawer connector holder and cable assembly




4. Use a small, flat-blad screwdriver to release two tabs (callout 1).

Figure 1-2457 Release two tabs

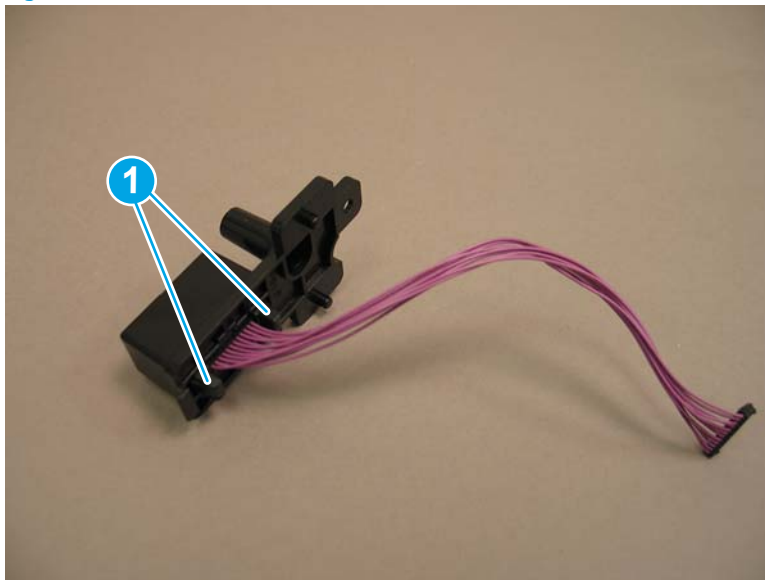

5. Remove the cable assembly from the drawer connector holder.

Figure 1-2458 Remove the cable assembly

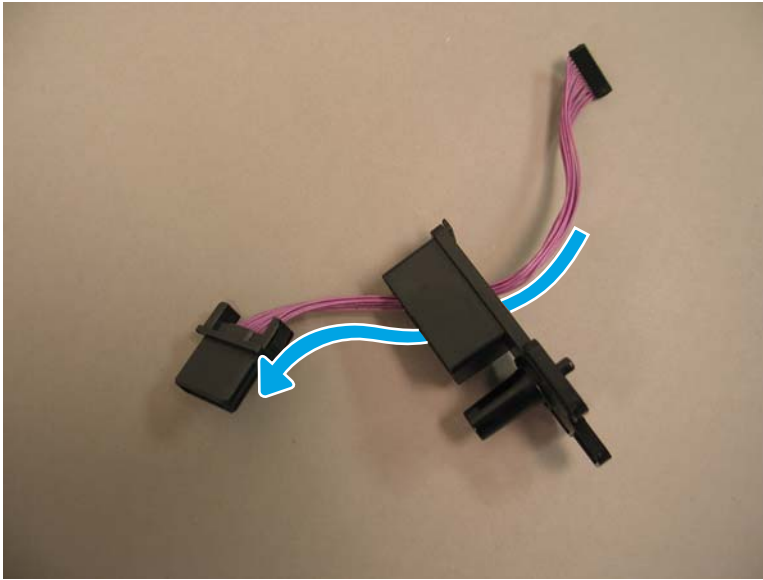

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---


## Removal and replacement: Auto-close assembly (Tray 3) (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the auto-close assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction


This document provides the procedures to remove and replace the auto-close assembly for Tray 3 in the 2,500-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Auto-close assembly (Tray 3) (2,500-sheet paper feeder with stand) part number	
RM2-0856-000CN	Auto close assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Slowly install the paper tray in the paper feeder. Verify that the auto-close assembly catches and pulls the tray completely closed.


## Step 1: Remove the auto-close assembly (Tray 3) (2,500-sheet paper feeder with stand)

1. Remove all of the paper trays.

2. Remove one screw (callout 1), and then remove the auto-close assembly (callout 2).


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2459** Remove the auto-close assembly

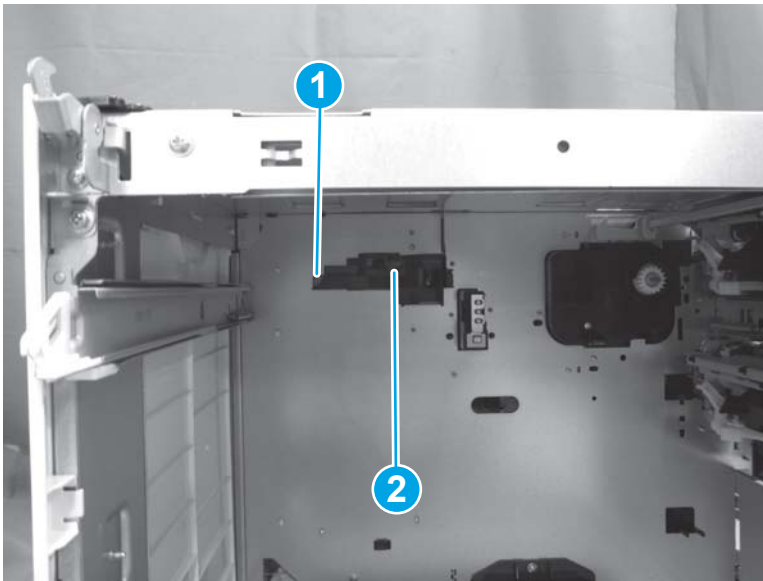



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.




## Removal and replacement: Auto-close assembly (Tray 4) (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the auto-close assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the tray auto-close assembly for Tray 4 in the 2,500-sheet paper feeder with stand.

---

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

---

Auto-close assembly (Tray 4) (2,500-sheet paper feeder with stand) part number	
RM2-0918-000CN	Tray auto close assembly

---

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Slowly install the paper tray in the paper feeder. Verify that the auto-close assembly catches and pulls the tray completely closed.


## Step 1: Remove the auto-close assembly (Tray 4) (2,500-sheet paper feeder with stand)

1. Remove all of the paper trays.

2. Remove three screws (callout 1), and then remove the tray auto-close assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2460** Remove the tray auto-close assembly

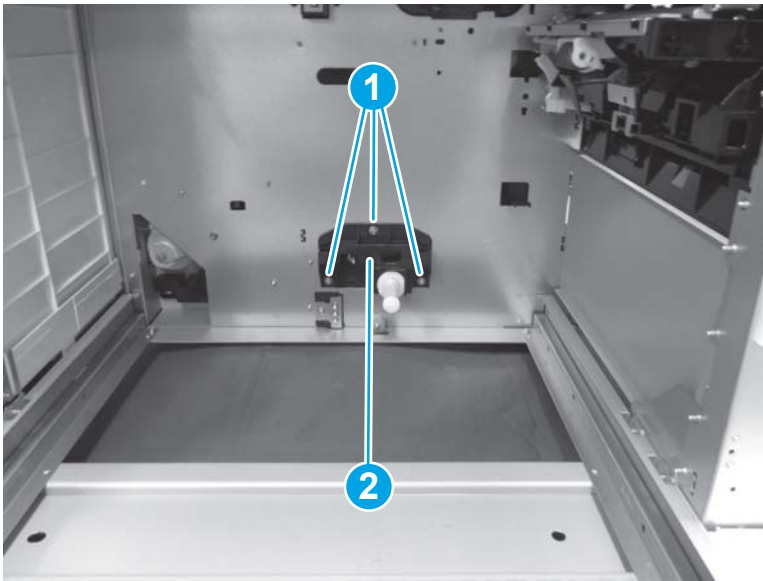



### Step 2: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Paper pickup assemblies (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the right door \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the paper pickup assembly \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the paper pickup assemblies for the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
  - ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Paper pickup assembly (2,500-sheet paper feeder with stand) part number	
RM2-1235-000CN	Paper pickup assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test

Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the right door (2,500-sheet paper feeder with stand)

- ▲ Release one tab (callout 1), and then lift up (callout 2) to remove the right door (callout 3).


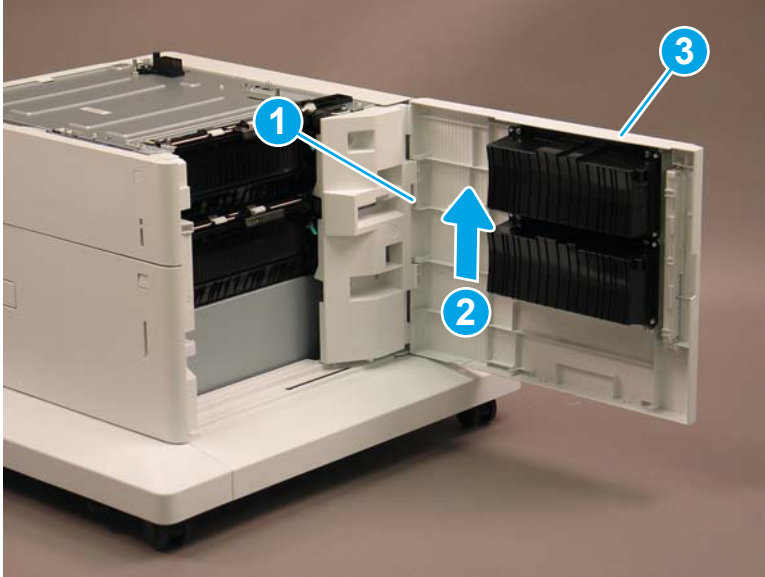
 **Reinstallation tip:** Reverse the removal steps to install the assembly.


Figure 1-2461 Remove the right door




Step 2: Remove the paper pickup assembly (2,500-sheet paper feeder with stand)

1. Remove all of the paper trays.
2. Remove four screws (callout 1), and then remove the hinge (callout 2).

Figure 1-2462 Remove four screws and the hinge

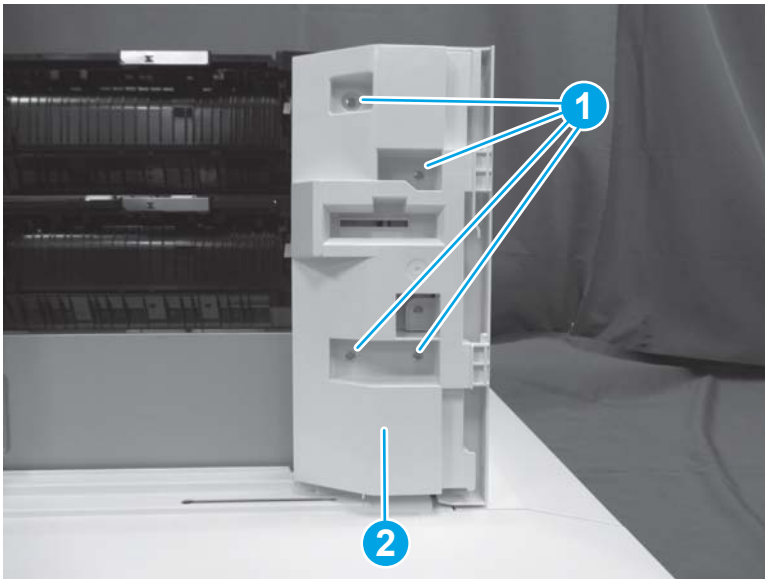


3. Do one of the following, depending upon which paper pickup assembly you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 paper pickup assembly:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the paper pickup assembly (callout 3).
- b. **Tray 4 paper pickup assembly:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the paper pickup assembly (callout 6).

Figure 1-2463 Remove the paper pickup assemblies

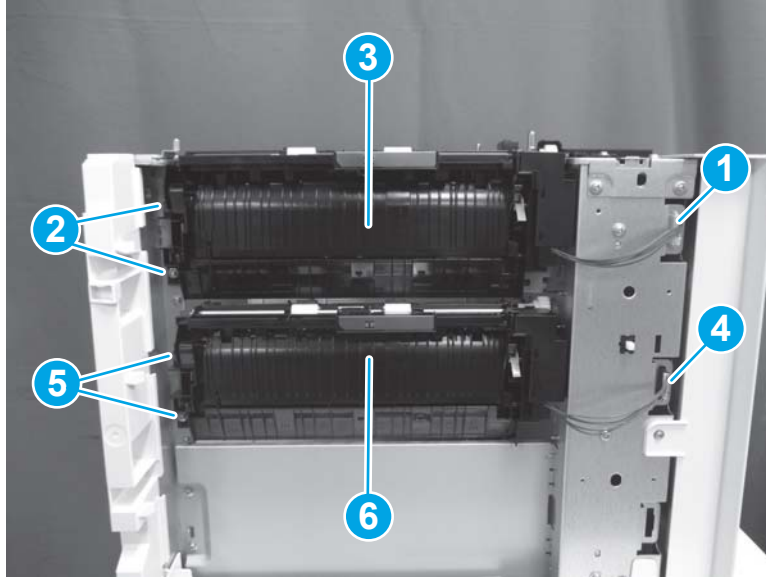

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.


---

## Removal and replacement: Tray lifter motor drive assembly (2,500-sheet paper feeder with stand)


- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the left cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the tray lifter motor drive assembly \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the tray lifter motor drive assembly for the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
-  **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Tray lifter motor drive assembly (2,500-sheet paper feeder with stand) part number	
RM2-0915-000CN	Tray lifter motor drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2464 Remove one screw

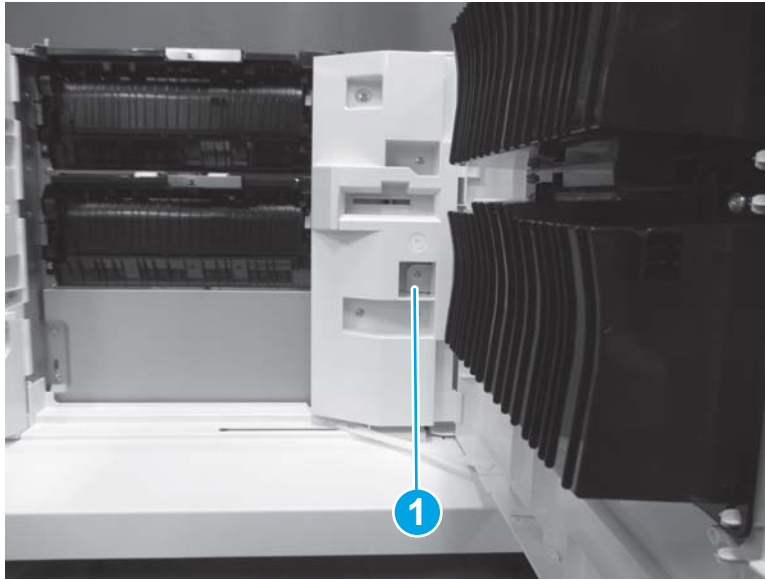

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


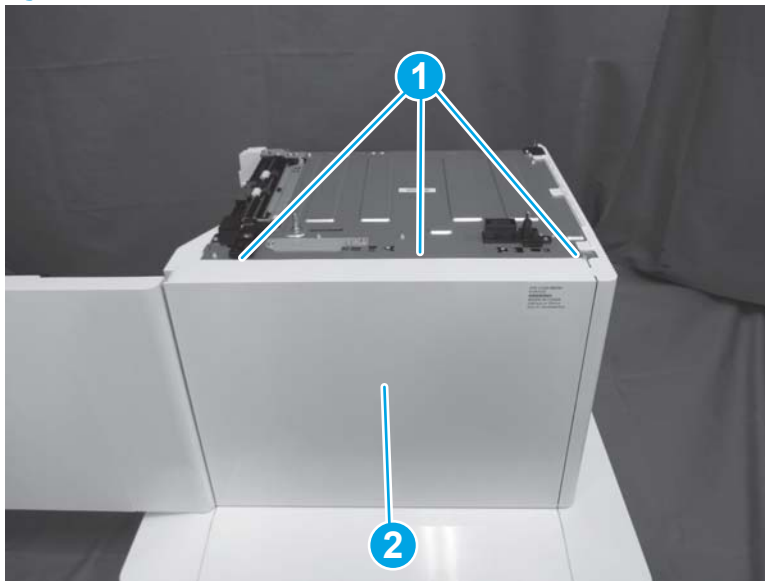
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2465 Remove the rear cover




### Step 2: Remove the left cover (2,500-sheet paper feeder with stand)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.




Figure 1-2466 Remove the left cover

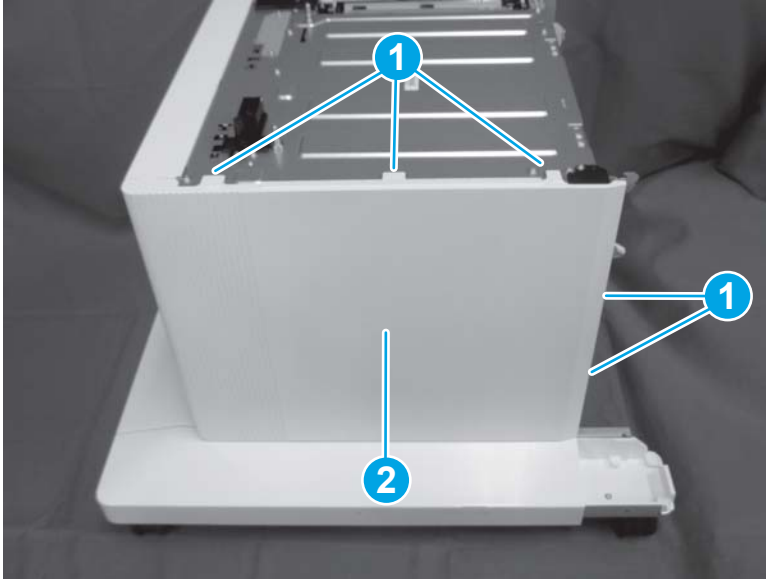


Step 3: Remove the tray lifter motor drive assembly (2,500-sheet paper feeder with stand)

1. Disconnect two connectors (callout 1), and then release the cables (callout 3) from the retainers (callout 2).


Figure 1-2467 Disconnect two connectors

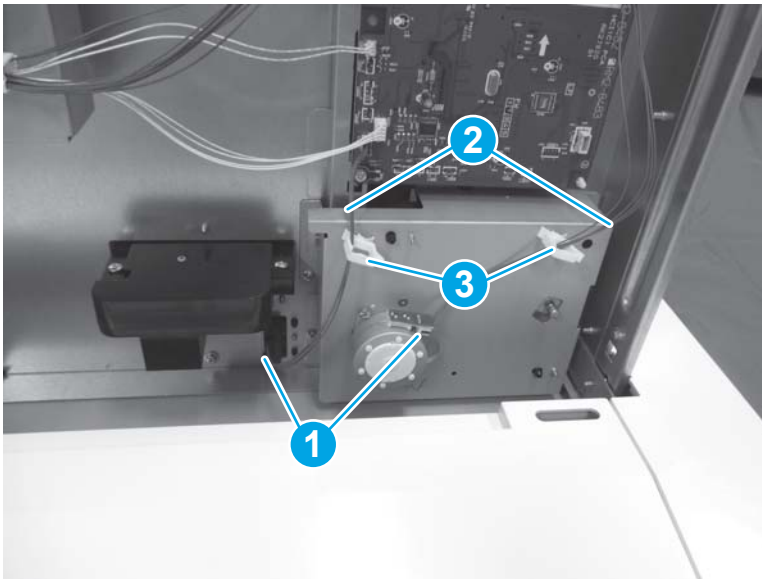

2. Remove three screws (callout 1), and then remove the tray lifter motor drive assembly (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2468** Remove the tray lifter motor drive assembly

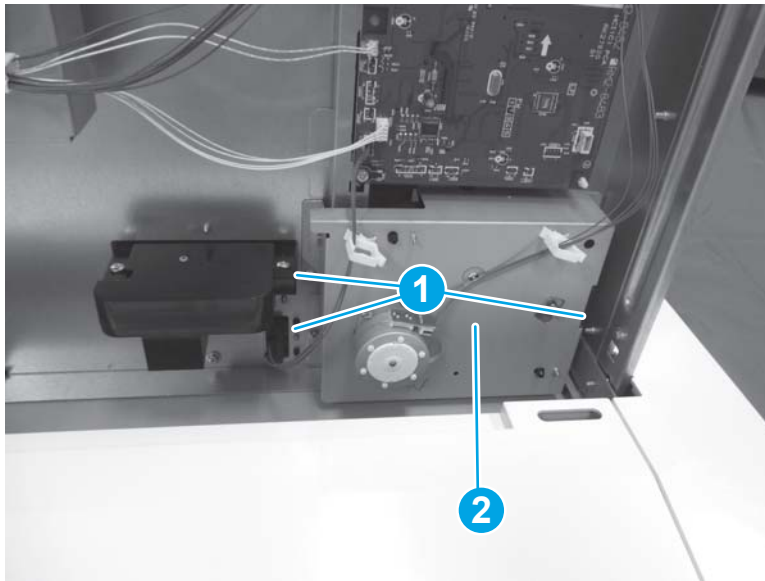



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Feed motors (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motor \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the feed motors for the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Feed motor (2,500-sheet paper feeder with stand) part number	
RK2-7831-000CN	Motor, stepping

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2469 Remove one screw

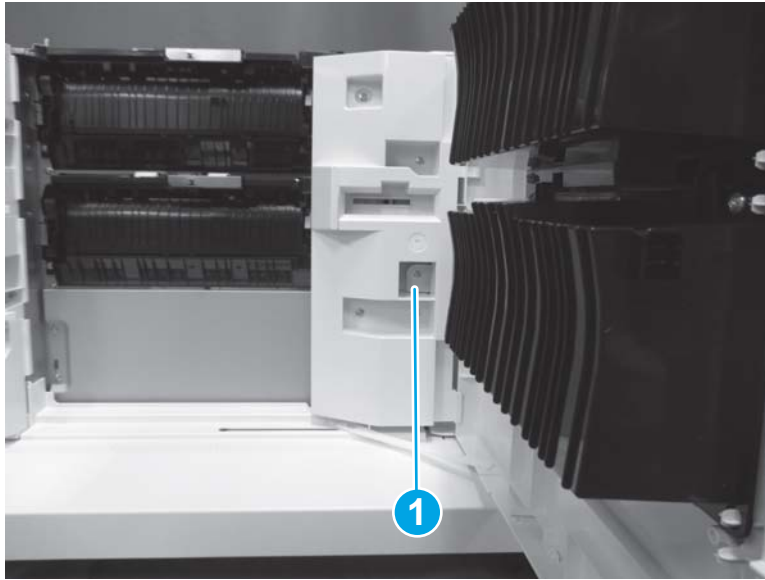

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


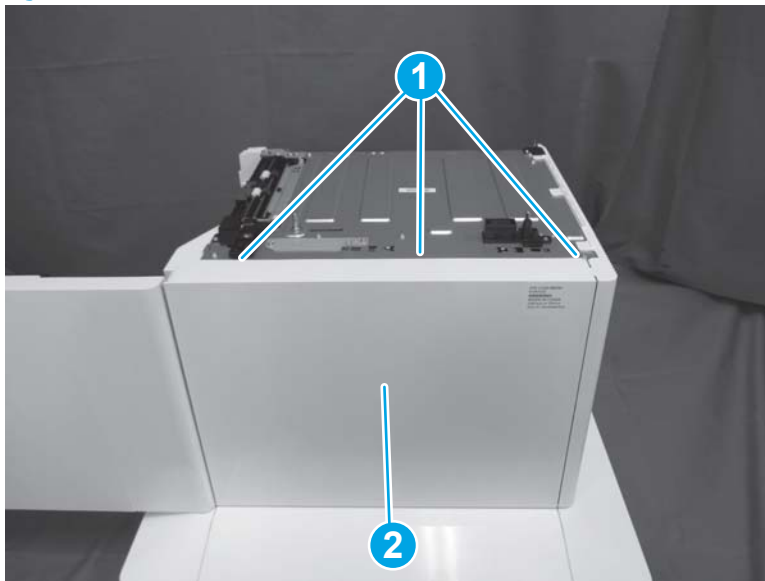
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2470 Remove the rear cover




### Step 2: Remove the feed motor (2,500-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).

Figure 1-2471 Remove the feed motors

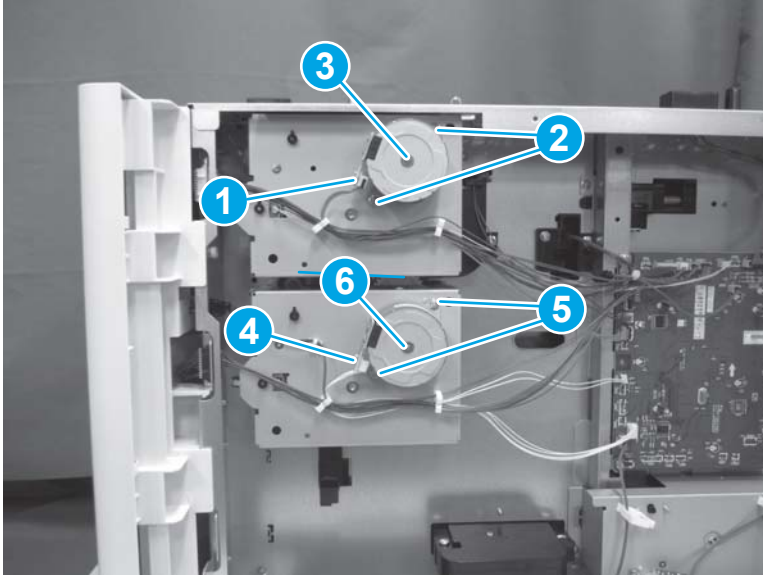



### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Drive assembly (Tray 3) (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the Tray 3 feed motor \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drive assembly for Tray 3 in the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- △ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drive assembly (2,500-sheet paper feeder with stand) part number	
RM2-1222-000CN	Drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2472 Remove one screw

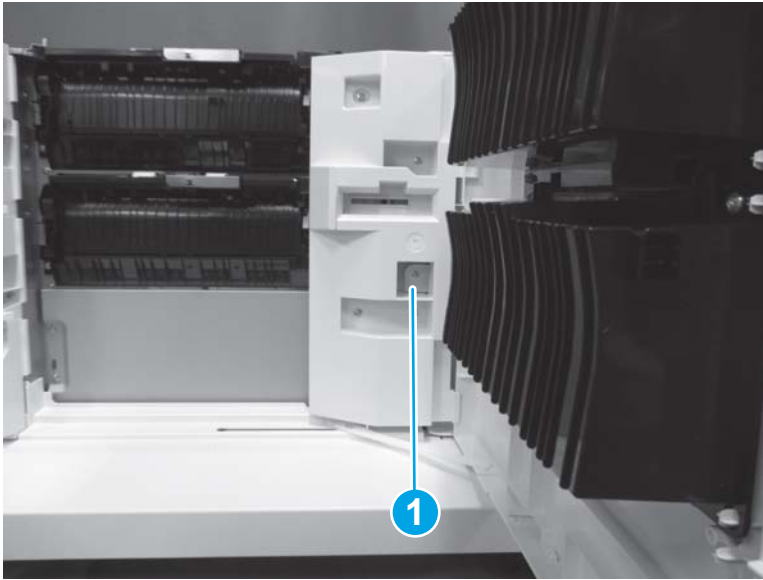


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---


Figure 1-2473 Remove the rear cover

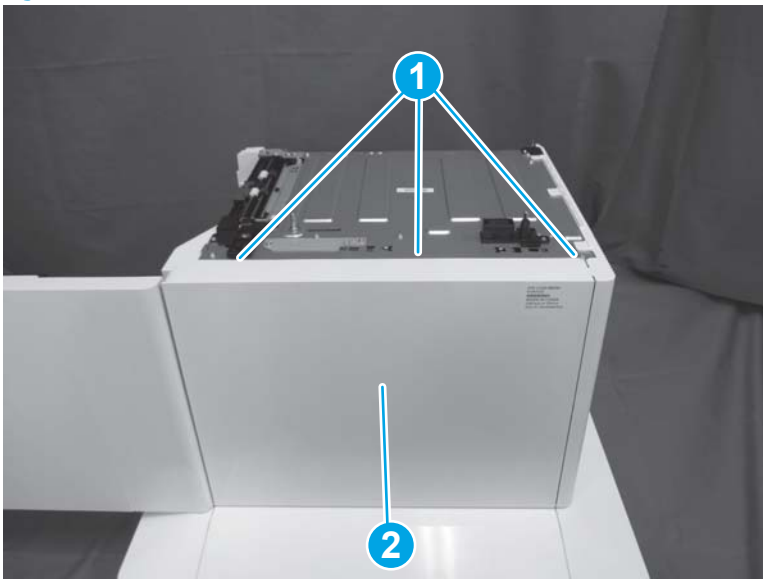

### Step 2: Remove the Tray 3 feed motor (2,500-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:

---


 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---



- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).


Figure 1-2474 Remove the feed motors

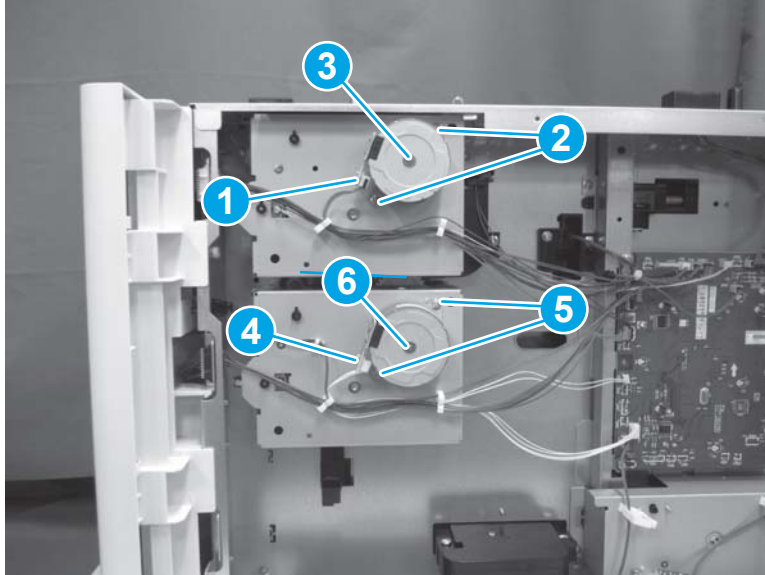

**Step 3: Remove the drive assembly (Tray 3) (2,500-sheet paper feeder with stand)**


1. Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2475 Disconnect two connectors

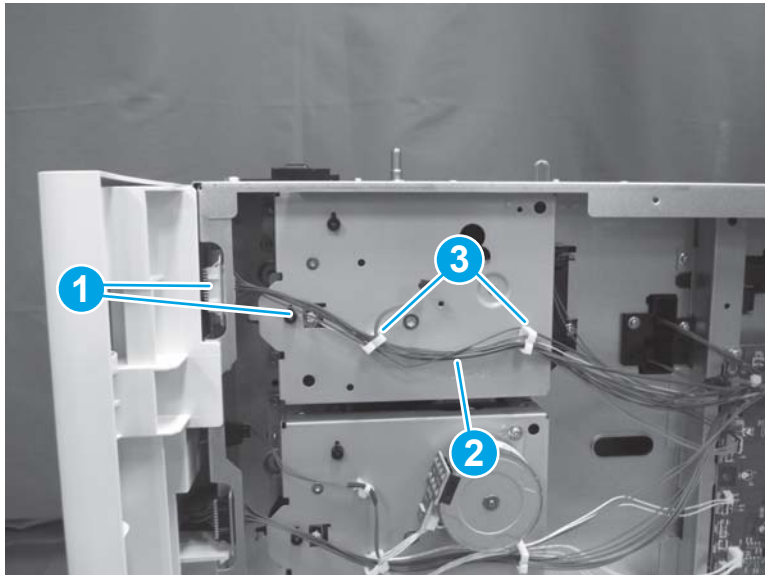

2. Remove three screws (callout 1), and then remove the drive assembly (callout 2).

Figure 1-2476 Remove the drive assembly

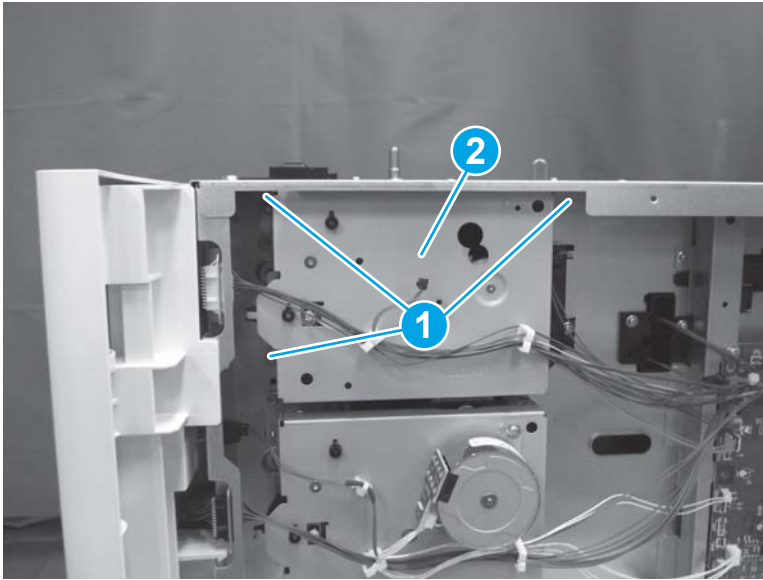



#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.


 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Drive assembly (Tray 4) (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the Tray 4 feed motor \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the drive assembly for Tray 4 in the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Drive assembly (2,500-sheet paper feeder with stand) part number	
RM2-1222-000CN	Drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.


2. Remove one screw (callout 1).

Figure 1-2477 Remove one screw

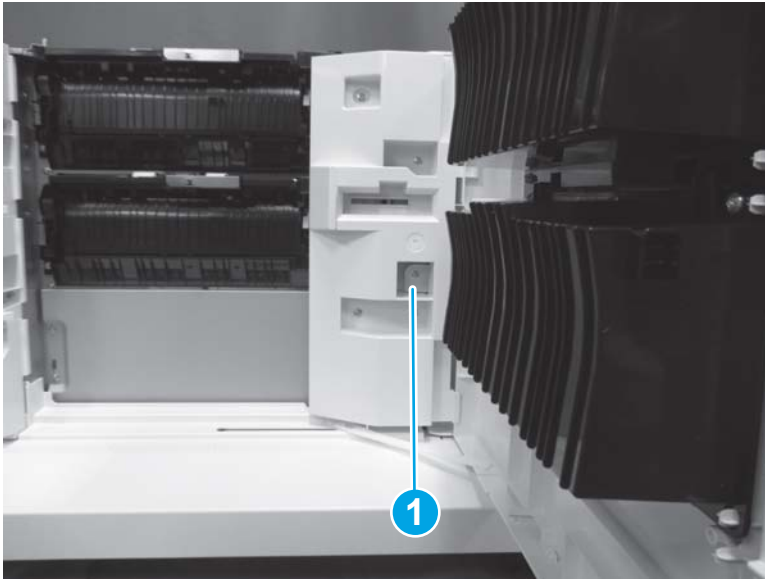


3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

Figure 1-2478 Remove the rear cover

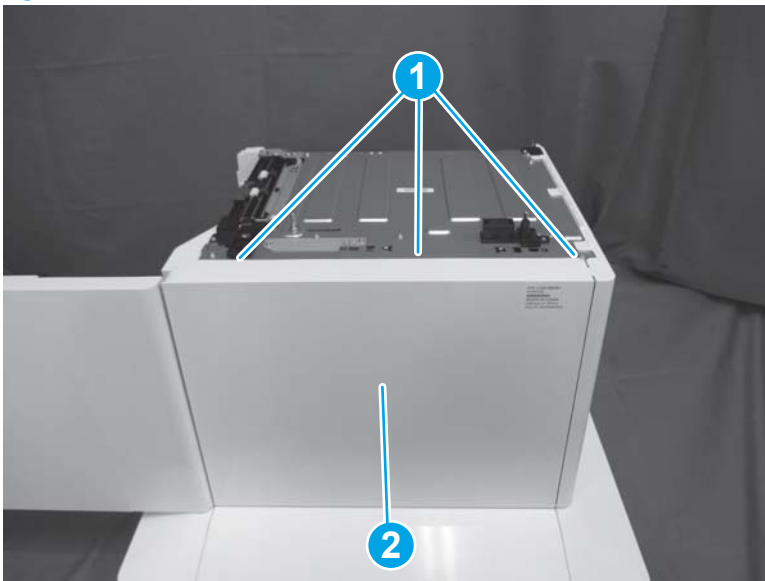

### Step 2: Remove the Tray 4 feed motor (2,500-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:


---

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

---

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).


Figure 1-2479 Remove the feed motors

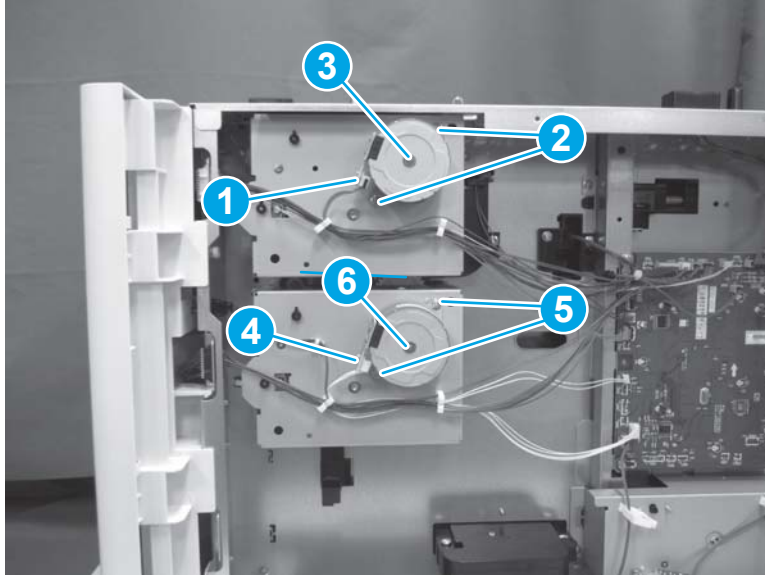

**Step 3: Remove the drive assembly (Tray 4) (2,500-sheet paper feeder with stand)**


1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2480 Disconnect three connectors

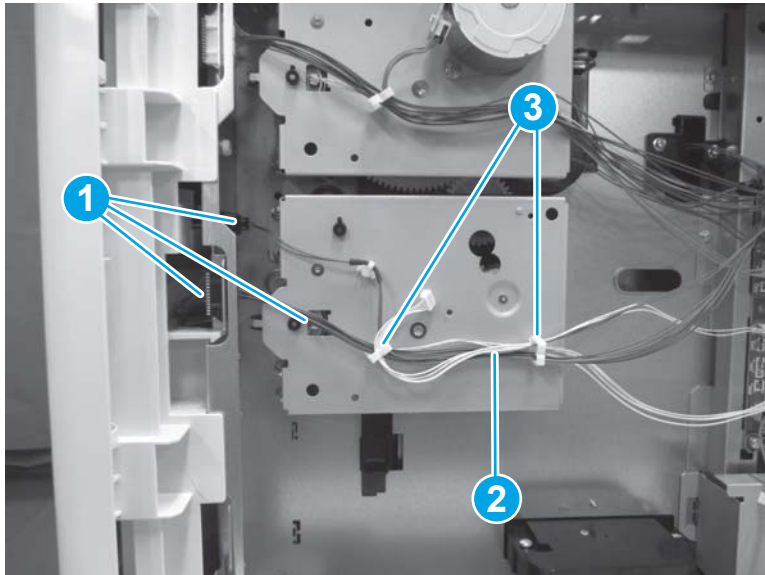

2. Remove the cable clamp (callout 1) from the drive assembly, remove three screws (callout 2), and then remove the drive assembly (callout 3).

Figure 1-2481 Remove the drive assembly

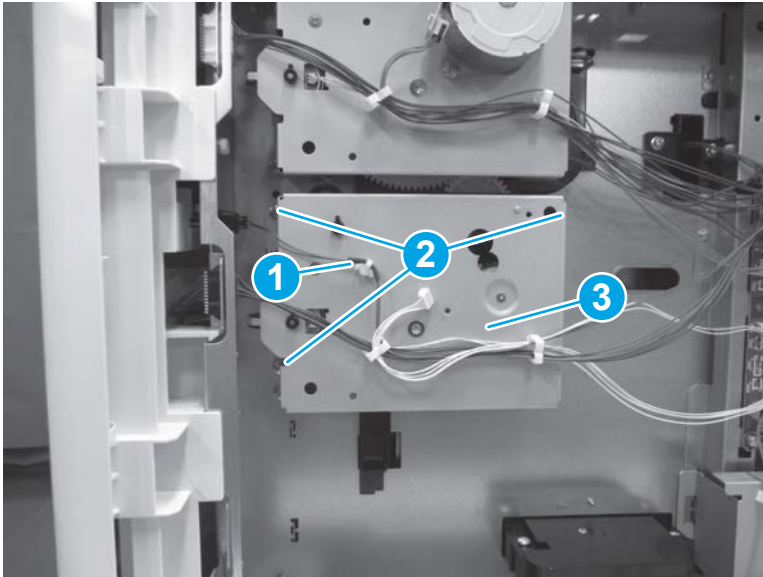

#### Step 4: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.


<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Pickup alienation holder (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motors \(Trays 3 and 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Remove the drive assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 5: Remove the pickup alienation holder \(2,500-sheet paper feeder with stand\)](#)
- [Step 6: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the pickup alienation holder for the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Pickup alienation holder (2,500-sheet paper feeder with stand) part number	
RM2-1223-000CN	Estrangement holder assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.



### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2482 Remove one screw

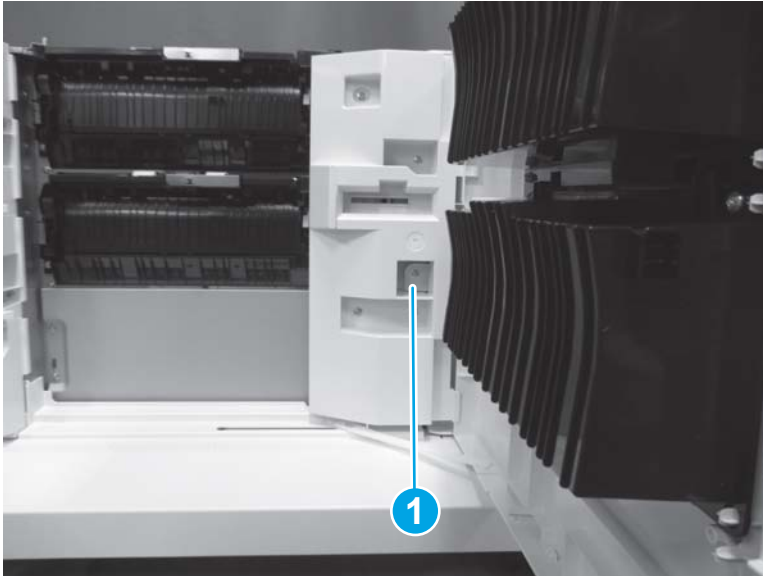

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2483 Remove the rear cover

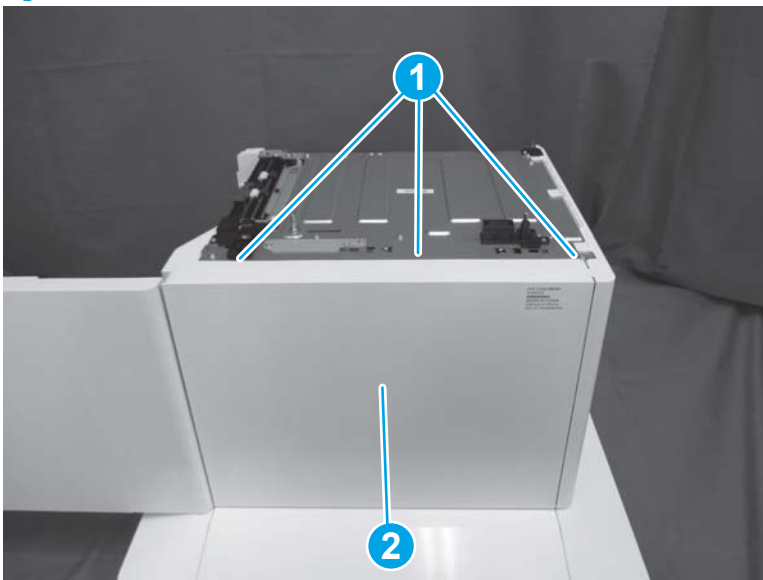


### Step 2: Remove the feed motors (Trays 3 and 4) (2,500-sheet paper feeder with stand)

- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).


Figure 1-2484 Remove the feed motors

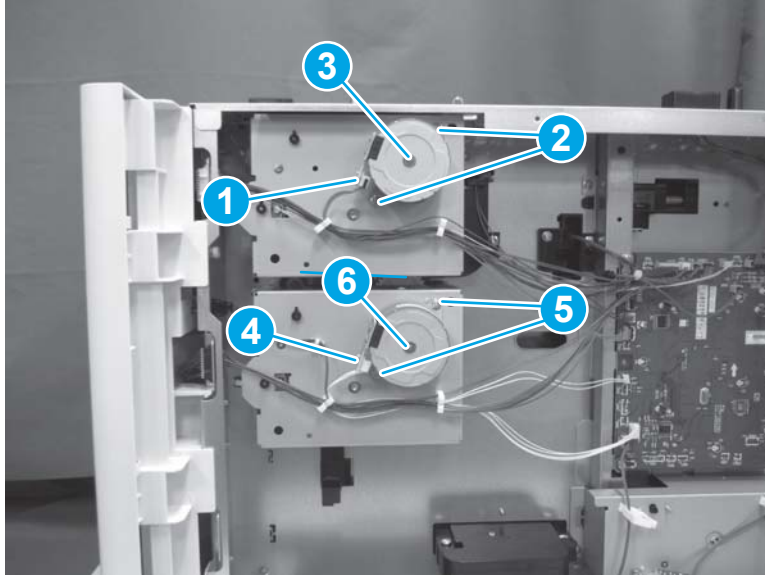

**Step 3: Remove the drive assembly (Tray 3) (2,500-sheet paper feeder with stand)**


1. Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2485 Disconnect two connectors

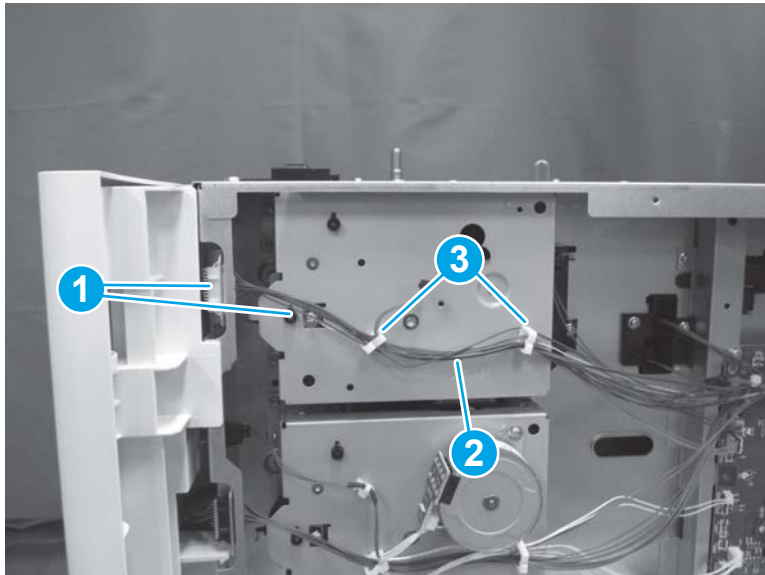

2. Remove three screws (callout 1), and then remove the drive assembly (callout 2).


Figure 1-2486 Remove the drive assembly

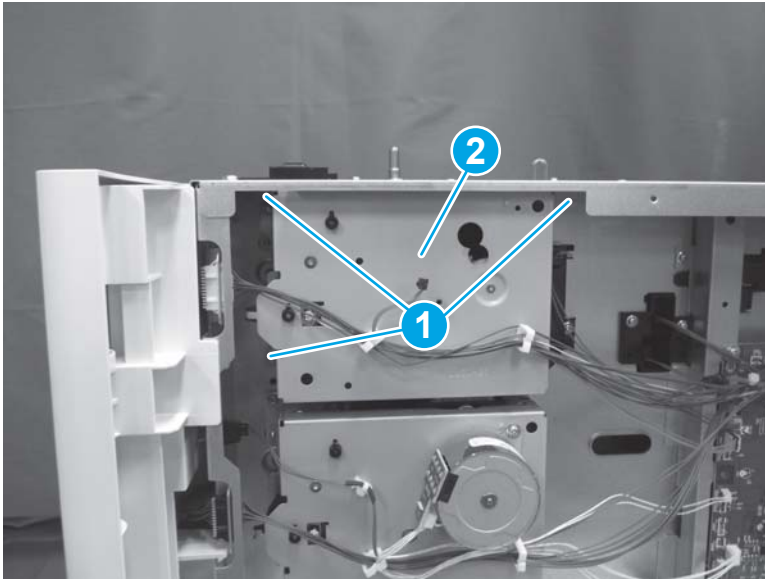

Step 4: Remove the drive assembly (Tray 4) (2,500-sheet paper feeder with stand)


1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2487 Disconnect three connectors

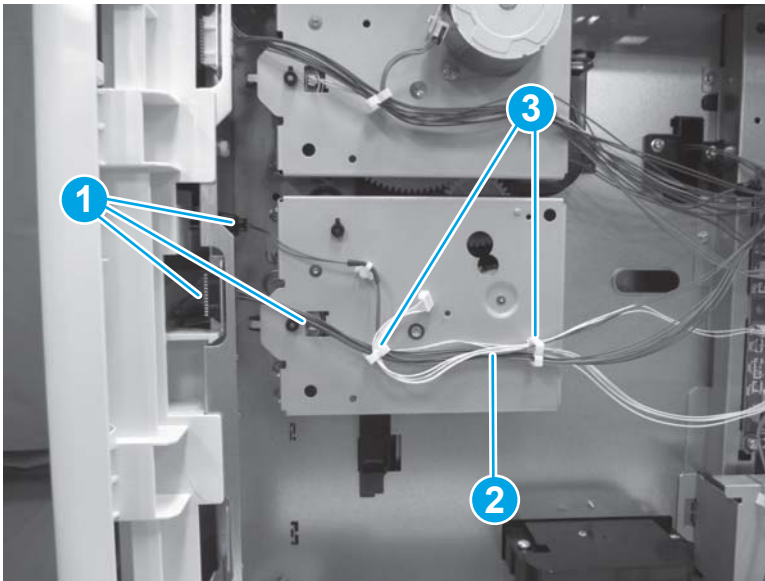

2. Remove the cable clamp (callout 1) from the drive assembly, remove three screws (callout 2), and then remove the drive assembly (callout 3).


Figure 1-2488 Remove the drive assembly

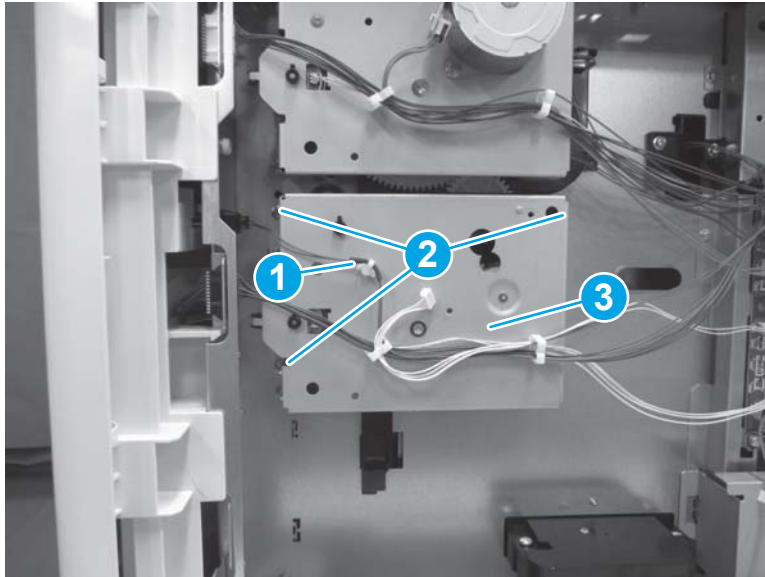


#### Step 5: Remove the pickup alienation holder (2,500-sheet paper feeder with stand)

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).


Figure 1-2489 Disconnect one connector

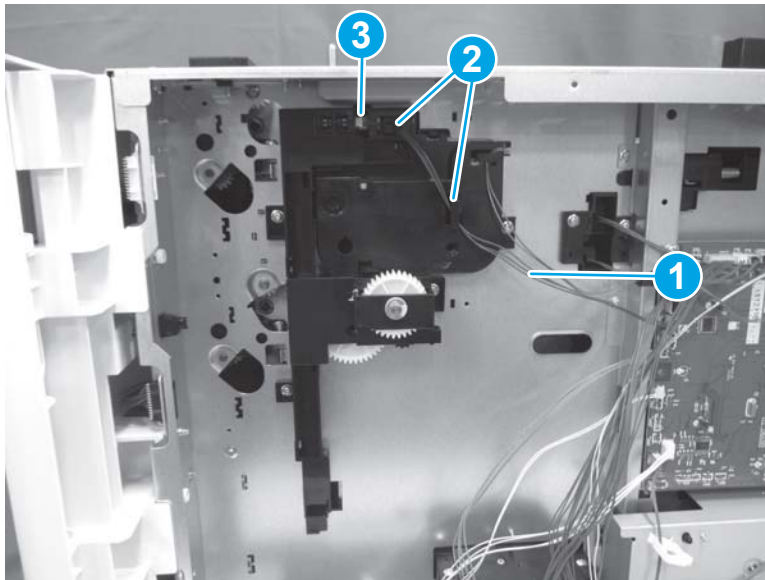

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2490** Remove four screws and the pickup alienation holder

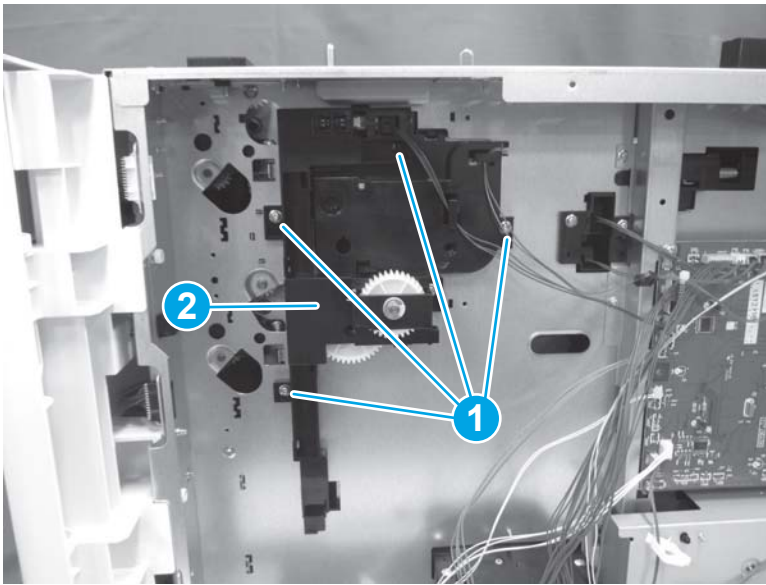



### Step 6: Unpack the replacement assembly

1. Dispose of the defective part.

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


2. Unpack the replacement part from the packaging.

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

3. To install an assembly, reverse the removal steps.


 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

## Removal and replacement: Lifter drive assembly (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the feed motors \(Trays 3 and 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Remove the drive assembly \(Tray 3\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 4: Remove the drive assembly \(Tray 4\) \(2,500-sheet paper feeder with stand\)](#)
- [Step 5: Remove the pickup alienation holder \(2,500-sheet paper feeder with stand\)](#)
- [Step 6: Remove the lifter drive assembly \(2,500-sheet paper feeder with stand\)](#)
- [Step 7: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the lifter drive assembly for Tray 5 in the 2,500-sheet paper feeder with stand.

 **IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Lifter drive assembly (2,500-sheet paper feeder with stand) part number	
RM2-2091-000CN	Lifter drive assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.


### Post service test

Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.
2. Remove one screw (callout 1).


Figure 1-2491 Remove one screw

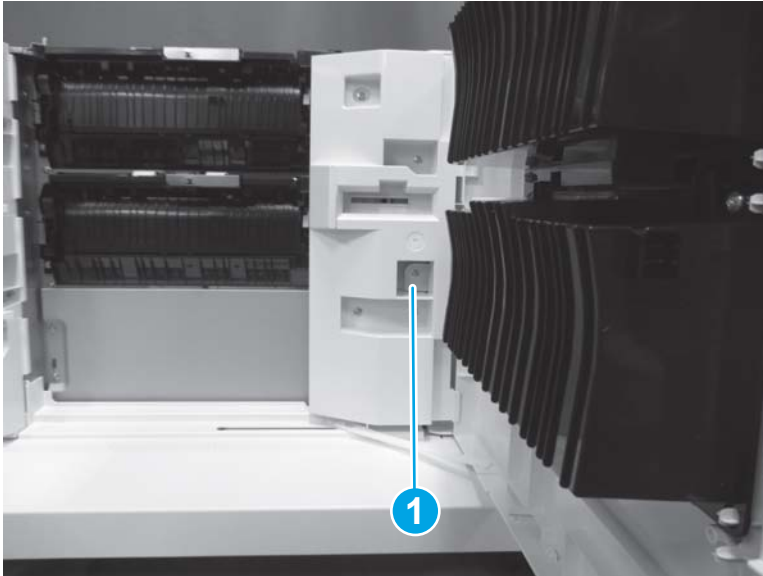

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2492 Remove the rear cover

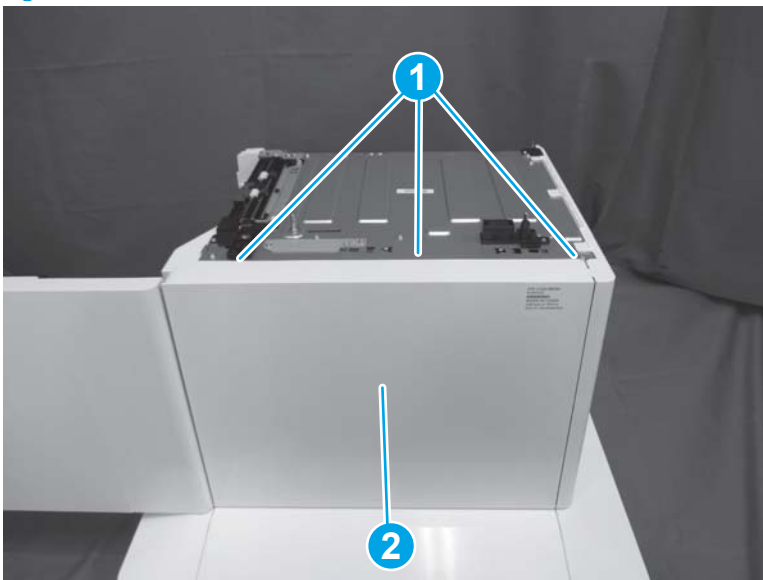

### Step 2: Remove the feed motors (Trays 3 and 4) (2,500-sheet paper feeder with stand)


- ▲ Do one of the following, depending upon which feed motor you are removing:

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



- a. **Tray 3 feed motor:** Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the feed motor (callout 3).
- b. **Tray 4 feed motor:** Disconnect one connector (callout 4), remove two screws (callout 5), and then remove the feed motor (callout 6).


Figure 1-2493 Remove the feed motors

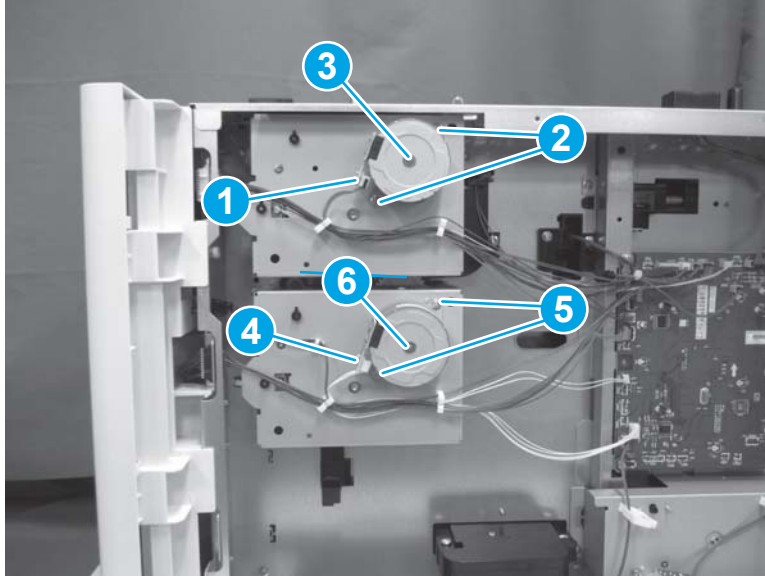

**Step 3: Remove the drive assembly (Tray 3) (2,500-sheet paper feeder with stand)**


1. Disconnect two connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2494 Disconnect two connectors

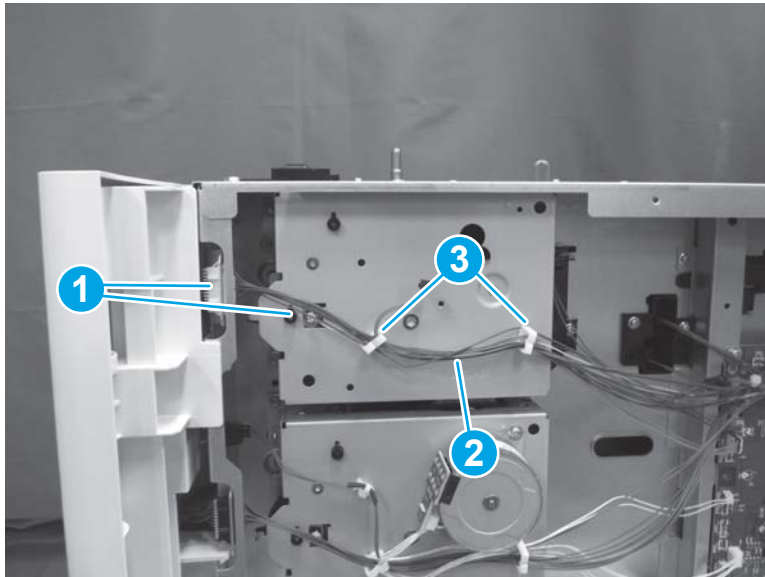

2. Remove three screws (callout 1), and then remove the drive assembly (callout 2).


Figure 1-2495 Remove the drive assembly

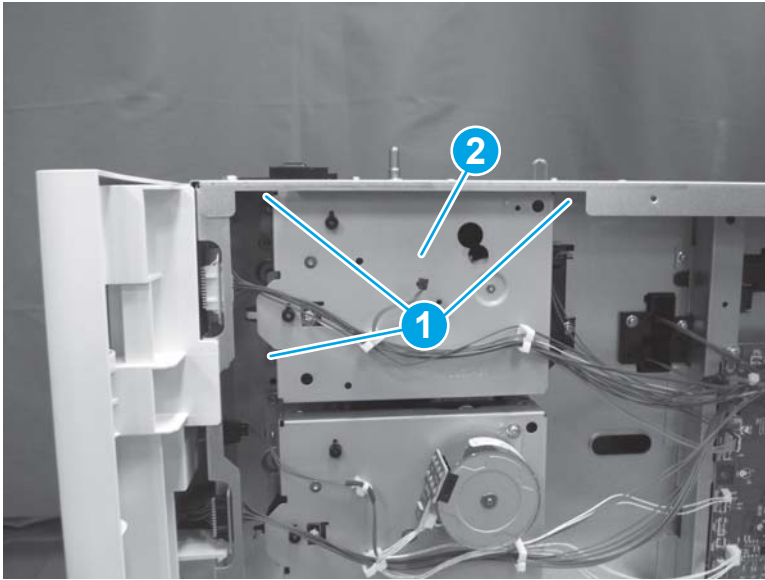

Step 4: Remove the drive assembly (Tray 4) (2,500-sheet paper feeder with stand)


1. Disconnect three connectors (callout 1), and then release the cable (callout 2) from the retainers (callout 3).

Figure 1-2496 Disconnect three connectors

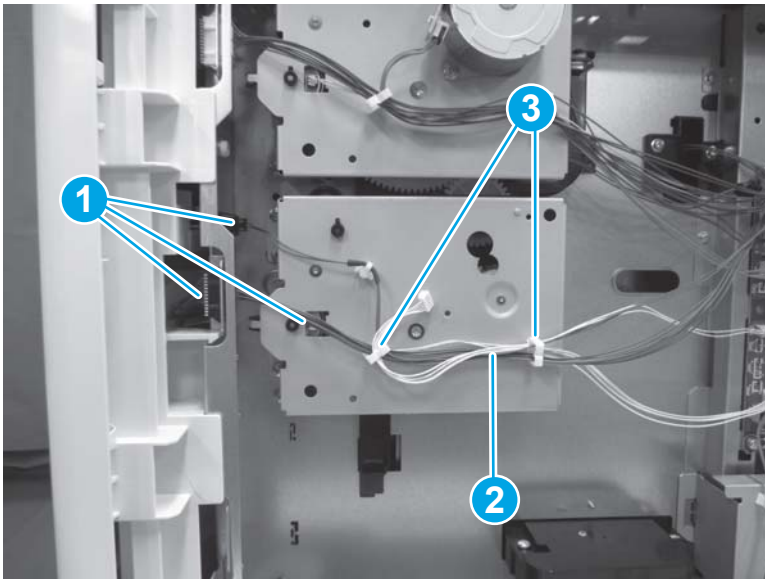

2. Remove the cable clamp (callout 1) from the drive assembly, remove three screws (callout 2), and then remove the drive assembly (callout 3).


Figure 1-2497 Remove the drive assembly

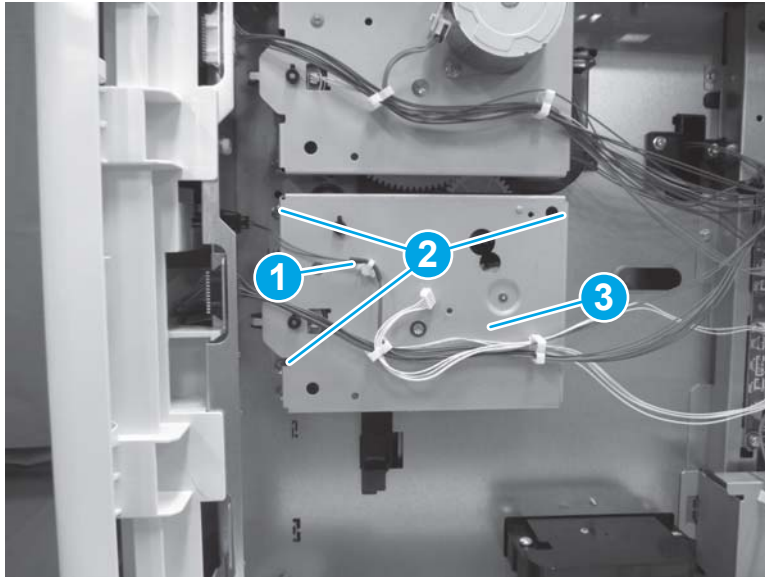


#### Step 5: Remove the pickup alienation holder (2,500-sheet paper feeder with stand)

1. Release the cable (callout 1) from cable guides (callout 2), and then disconnect one connector (callout 3).


Figure 1-2498 Disconnect one connector

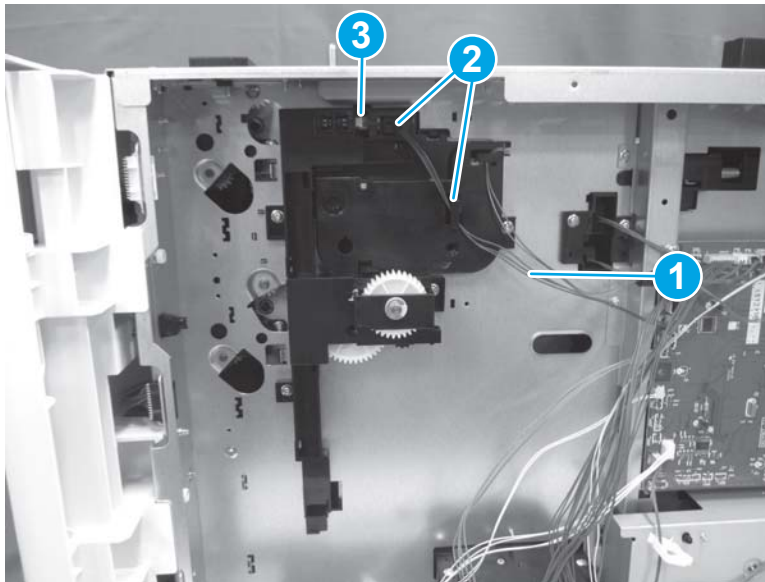

2. Remove four screws (callout 1), and then remove the pickup alienation holder (callout 2).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.

**Figure 1-2499** Remove four screws and the pickup alienation holder

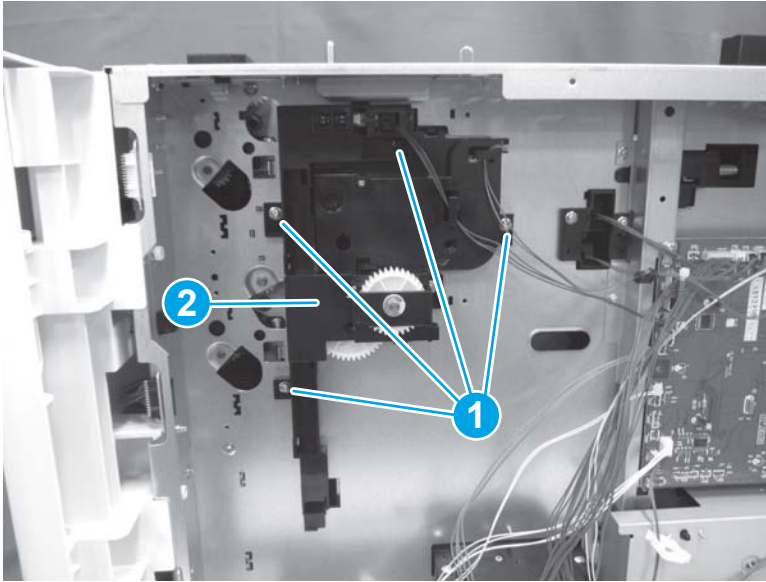


#### Step 6: Remove the lifter drive assembly (2,500-sheet paper feeder with stand)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the lifter drive assembly (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.


**Figure 1-2500** Remove three screws and the lifter drive assembly

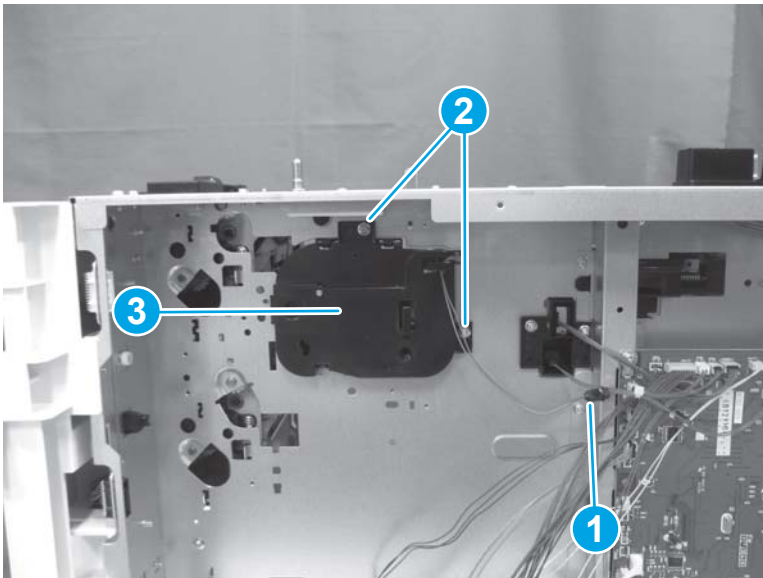

#### Step 7: Unpack the replacement assembly

1. Dispose of the defective part.

---



 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>


---

2. Unpack the replacement part from the packaging.

---

 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.


If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

---

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

## Removal and replacement: Controller PCA (2,500-sheet paper feeder with stand)

- [Introduction](#)
- [Step 1: Remove the rear cover \(2,500-sheet paper feeder with stand\)](#)
- [Step 2: Remove the controller PCA \(2,500-sheet paper feeder with stand\)](#)
- [Step 3: Unpack the replacement assembly](#)

### Introduction

This document provides the procedures to remove and replace the controller PCA for the 2,500-sheet paper feeder with stand.



**IMPORTANT:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

### Before performing service

- Turn the printer power off. A shutting-down message appears on the control-panel display.
- ⚠ **WARNING!** To avoid damage to the printer, turn the power off and wait until the printer shuts down before removing the power cable.
- Disconnect the power cable after the printer is completely shut down (the control-panel display is blank).

Use the table below to identify the correct part number for your printer. To order the part, go to [www.hp.com/buy/parts](http://www.hp.com/buy/parts)

Controller PCA (2,500-sheet paper feeder with stand) part number	
RM2-8481-000CN	Paper deck controller PCB assembly

### Required tools

- #2 Phillips screwdriver with a magnetic tip

### After performing service

- Connect the printer power cable.
- Turn the printer power on.

### Post service test


Send a print job from the host computer to the 2,500-sheet paper feeder with stand. Verify that a page prints.

### Step 1: Remove the rear cover (2,500-sheet paper feeder with stand)

1. Open the right door.

2. Remove one screw (callout 1).

Figure 1-2501 Remove one screw

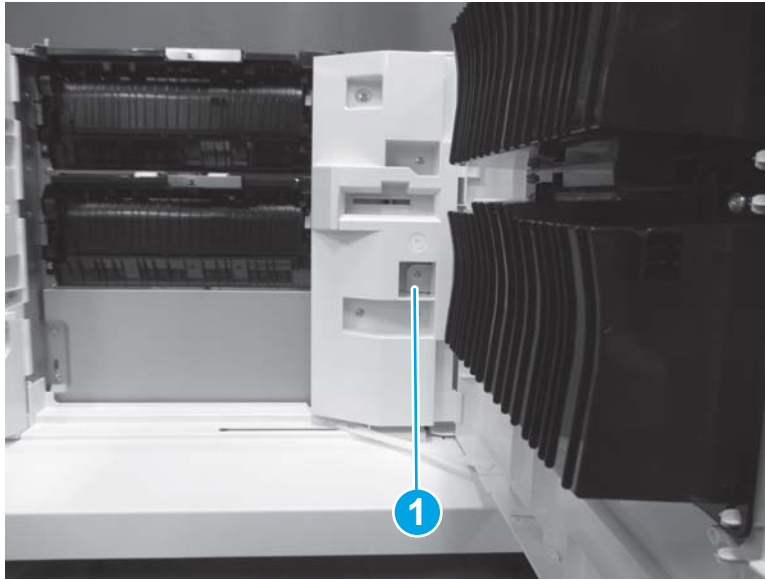

3. Release three tabs (callout 1), and then remove the rear cover (callout 2).


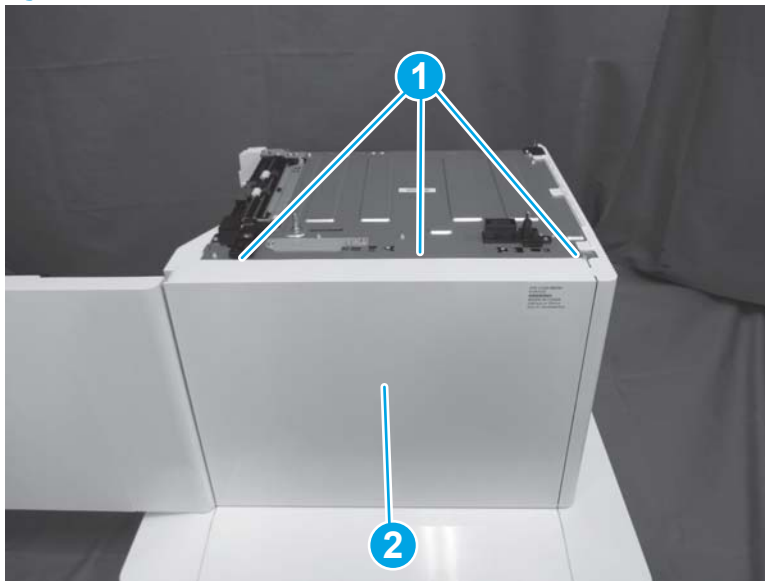
 **Reinstallation tip:** Reverse the removal steps to install the assembly.

Figure 1-2502 Remove the rear cover




### Step 2: Remove the controller PCA (2,500-sheet paper feeder with stand)

- ▲ Disconnect all of the connectors on the controller PCA. Remove two screws (callout 1), release two tabs (callout 2), and then remove the controller PCA (callout 3).

 **Reinstallation tip:** Reverse the removal steps to install the assembly.



Figure 1-2503 Remove the controller PCA

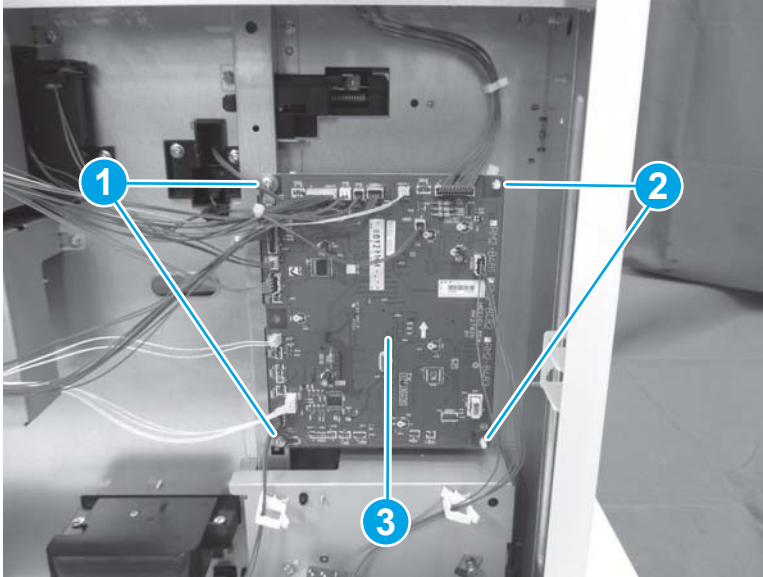

### Step 3: Unpack the replacement assembly

1. Dispose of the defective part.



---

 **NOTE:** HP recommends responsible disposal of the defective part.

<http://www8.hp.com/us/en/hp-information/environment/product-recycling.html>

---

2. Unpack the replacement part from the packaging.


 **CAUTION:**  Some parts are sensitive to electrostatic discharge (ESD). Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground before touching an ESD-sensitive assembly. Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the printer.

If the replacement part is a roller or pad, avoid touching the spongy part of it. Skin oils on the roller or pad can cause paper pickup and/or print-quality problems. HP recommends using disposable gloves when handling rollers or pads or washing your hands before touching rollers or pads.

 **IMPORTANT:** Make sure that all of the shipping materials (for example shipping tape) are removed from the replacement part prior to installation.

---

3. To install an assembly, reverse the removal steps.

 **NOTE:** When applicable, special installation instructions are provided for an assembly at the end of the removal procedure. Always completely read the removal instructions and follow all special installation instructions.

---

---

## 2 Parts and diagrams

- [Related documentation and software](#)
- [Order parts, accessories, and supplies](#)
- [Assembly locations](#)
- [How to use the parts lists and diagrams](#)
- [Parts and diagrams: Document feeder and scanner whole units](#)
- [Parts and diagrams: Covers](#)
- [Parts and diagrams: Internal components](#)
- [Parts and diagrams: Accessories](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

## Related documentation and software

HP service personnel, go to one of the following Web-based Interactive Search Engines (WISE) sites:

### Americas (AMS)

- <https://support.hp.com/wise/home/ams-enWISE> - English
- <https://support.hp.com/wise/home/ams-esWISE> - Spanish
- <https://support.hp.com/wise/home/ams-ptWISE> - Portuguese
- <https://support.hp.com/wise/home/ams-frWISE> - French

### Asia Pacific / Japan (APJ)

- <https://support.hp.com/wise/home/apj-enWISE> - English
- <https://support.hp.com/wise/home/apj-jaWISE> - Japanese
- <https://support.hp.com/wise/home/apj-koWISE> - Korean
- <https://support.hp.com/wise/home/apj-zh-HansWISE> - Chinese (simplified)
- <https://support.hp.com/wise/home/apj-zh-HantWISE> - Chinese (traditional)
- <https://support.hp.com/wise/home/apj-thWISE> - Thai

### Europe / Middle East / Africa (EMEA)

- <https://support.hp.com/wise/home/emea-enWISE> - English

Channel partners, go to [partner.hp.com](https://partner.hp.com).

Channel partners, access training materials in the HP University and Partner Learning Center at <https://content.ext.hp.com/sites/LMS/HPU.page>.

# Order parts, accessories, and supplies

## Ordering

Order supplies and paper	<a href="http://www.hp.com/go/suresupply">www.hp.com/go/suresupply</a>
Order genuine HP parts or accessories	<a href="http://www.hp.com/buy/parts">www.hp.com/buy/parts</a>
Order through service or support providers	Contact an HP-authorized service or support provider.
Order using the HP Embedded Web Server (EWS)	To access, in a supported web browser on your computer, enter the printer IP address or host name in the address/URL field. The EWS contains a link to the HP SureSupply website, which provides options for purchasing Original HP supplies.

## Orderable parts

Not all of the parts shown in the diagrams in this chapter can be ordered. Refer to the table following the diagram or the parts lists at the end of this chapter to determine if a part is orderable.

## Supplies and accessories

Item	Description	Cartridge number	Part number
<b>Supplies</b>			
HP 655A Black LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	Standard-capacity replacement black cartridge	655A	CF450A
HP 655A Cyan LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	Standard-capacity replacement cyan cartridge	655A	CF451A
HP 655A Yellow LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	Standard-capacity replacement yellow cartridge	655A	CF452A
HP 655A Magenta LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	Standard-capacity replacement magenta cartridge	655A	CF453A
HP 656X Black LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	High-capacity replacement black toner cartridge	656X	CF460X
HP 656X Cyan LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	High-capacity replacement cyan toner cartridge	656X	CF461X
HP 656X Yellow LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	High-capacity replacement yellow toner cartridge	656X	CF462X
HP 656X Magenta LaserJet Toner Cartridge (M652/M653/E65050/E65060/E65150/E65160)	High-capacity replacement magenta toner cartridge	656X	CF463X
HP 657X Black LaserJet Toner Cartridge (M681/M682/E67550/E67560/E67650/E67660)	High-capacity replacement black toner cartridge	657X	CF470X

Item	Description	Cartridge number	Part number
HP 657X Cyan LaserJet Toner Cartridge (M681/M682/E67550/E67560/E67650/E67660)	High-capacity replacement cyan toner cartridge	657X	CF471X
HP 657X Yellow LaserJet Toner Cartridge (M681/M682/E67550/E67560/E67650/E67660)	High-capacity replacement yellow toner cartridge	657X	CF472X
HP 657X Magenta LaserJet Toner Cartridge (M681/M682/E67550/E67560/E67650/E67660)	High-capacity replacement magenta toner cartridge	657X	CF473X
HP Staple Cartridge Refil	Replacement staple cartridges for the M681z/M682z/E67660z models	Not applicable	J8J96A
<b>Accessories</b>			
HP Color LaserJet 550-sheet Paper Tray	Optional 550-sheet paper feeder <b>NOTE:</b> The printer supports up to two 1 x 550-sheet paper feeders unless other input devices are present.	Not applicable	P1B09A
HP Color LaserJet 550-sheet Paper Tray with Stand	Optional 550-sheet paper feeder with stand	Not applicable	P1B10A
HP Color LaserJet 3 x 550-sheet Paper Tray with Stand	Optional 3 x 550-sheet paper feeder with stand to support the printer	Not applicable	P1B11A
HP Color LaserJet High Capacity Paper Feeder with Stand	Optional 2,000-sheet paper feeder and 550-sheet paper feeder with stand to support the printer	Not applicable	P1B12A
HP LaserJet Keyboard Overlay Kit for Simplified Chinese & Traditional Chinese  (Flow models only)	Language-specific adhesive overlay for the physical keyboard	Not applicable	A7W12A
HP LaserJet Keyboard Overlay Kit for Swedish  (Flow models only)	Language-specific adhesive overlay for the physical keyboard	Not applicable	A7W14A
HP 1GB DDR3 x32 144-Pin 800MHz SODIMM	Optional DIMM for expanding the memory	Not applicable	E5K48A
HP Trusted Platform Module	Automatically encrypts all data that passes through the printer	Not applicable	F5S62A
HP Foreign Interface Harness	Optional port for connecting third-party devices	Not applicable	B5L31A
HP LaserJet MFP Analog Fax Accessory 500	Optional fax accessory for the dh model	Not applicable	CC487A
HP Jetdirect 2900nw Print Server	USB wireless print server accessory	Not applicable	J8031A
HP Jetdirect 3000w NFC/Wireless Accessory	Wi-Fi direct accessory for "touch" printing from mobile devices	Not applicable	J8030A
HP Internal USB ports	Two internal USB ports for connecting third-party devices	Not applicable	B5L28A

## Customer self-repair parts

Customer Self-Repair (CSR) parts are available for many HP LaserJet printers to reduce repair time. More information about the CSR program and benefit can be found at [www.hp.com/go/csr-support](http://www.hp.com/go/csr-support) and [www.hp.com/go/csr-faq](http://www.hp.com/go/csr-faq).

Genuine HP replacement parts can be ordered at [www.hp.com/buy/parts](http://www.hp.com/buy/parts) or by contacting an HP-authorized service or support provider. When ordering, one of the following will be needed: part number, serial number (found on back of printer), product number, or printer name.

- Parts listed as **Mandatory** self-replacement are to be installed by customers, unless you are willing to pay HP service personnel to perform the repair. For these parts, on-site or return-to-depot support is not provided under the HP printer warranty.
- Parts listed as **Optional** self-replacement can be installed by HP service personnel at your request for no additional charge during the printer warranty period.

Item	Description	Self-replacement options	Part number
1x550 Sheet Feeder Kit	Replacement 1x550-sheet feeder	Mandatory	P1B09-67901
Secure Hard Disk Drive	Replacement hard disk drive	Mandatory	B5L29-67903
HP 1GB DDR3 x32 144-Pin 800MHz SODIMM	Replacement memory DIMM	Mandatory	E5K48-67902
Analog Fax Accessory 500 Kit	Replacement fax board	Mandatory	CC522-67929
HP Trusted Platform Module kit	Replacement trusted platform module	Mandatory	B5L31-67902
HP Foreign Interface Harness kit	Replacement foreign interface harness	Mandatory	F5562-61001
HP Jetdirect 2900nw Print Server	Replacement USB wireless print server accessory	Mandatory	J8031-61001
HP Jetdirect 3000w NFC/Wireless Accessory	Replacement Wireless Direct Print accessory for "touch" printing from mobile devices	Mandatory	J8030-61001
Scanner white backing	Replacement white plastic backing for the scanner	Mandatory	5851-7206
Control-panel kit	Replacement touchscreen control panel	Mandatory	5851-7210
Retention Clip Assembly	Replacement retention clips that are behind the scanner white backing	Mandatory	5851-7207
ADF Maintenance Kit	Maintenance kit for the document feeder	Mandatory	5851-7202
U.S. English Keyboard Kit	Replacement keyboard for Flow models	Mandatory	B5L47-67019
U.K. English Keyboard Kit	Replacement keyboard for Flow models	Mandatory	B5L47-67020
Keyboard Overlay Kit French, Italian, Russian, German, U.K. Spanish	Replacement keyboard overlay for Flow models	Mandatory	5851-6019
Keyboard Overlay Kit Canadian French, Latin American Spanish, U.S. Spanish	Replacement keyboard overlay for Flow models	Mandatory	5851-6020

Item	Description	Self-replacement options	Part number
Keyboard Overlay Kit Swiss French, Swiss German, Danish	Replacement keyboard overlay for Flow models	Mandatory	5851-6021
Keyboard Overlay Kit Simplified Chinese, Traditional Chinese	Replacement keyboard overlay for Flow models	Mandatory	5851-6022
Keyboard Overlay Kit Spanish, Portuguese	Replacement keyboard overlay for Flow models	Mandatory	5851-6023
Keyboard Overlay Kit Japanese (KG and KT)	Replacement keyboard overlay for Flow models	Mandatory	5851-6024

## Related documentation and software

HP service personnel, go to one of the following Web-based Interactive Search Engines (WISE) sites:

### AMS

- <https://support.hp.com/wise/home/ams-en>
- <https://support.hp.com/wise/home/ams-es>
- <https://support.hp.com/wise/home/ams-pt>
- <https://support.hp.com/wise/home/ams-fr>

### APJ

- <https://support.hp.com/wise/home/apj-en>
- <https://support.hp.com/wise/home/apj-ja>
- <https://support.hp.com/wise/home/apj-ko>
- <https://support.hp.com/wise/home/apj-zh-Hans>
- <https://support.hp.com/wise/home/apj-zh-Hant>
- <https://support.hp.com/wise/home/apj-th>

### EMEA

- <https://support.hp.com/wise/home/emea-en>

Channel partners, go to [partner.hp.com](https://partner.hp.com).


Channel partners, access training materials in the HP University and Partner Learning Center at <https://content.ext.hp.com/sites/LMS/HPU.page>.




## Assembly locations

- [Product front view \(M681/M682/E67550/E67560/E67650/E67660 models\)](#)
- [Product back view \(M681/M682/E67550/E67560/E67650/E67660 models\)](#)
- [Product front view \(M681/M682/E67550/E67560/E67650/E67660 models\)](#)
- [Product back view \(M652/M653/E65050/E65060/E65150/E65160 models\)](#)

Product front view (M681/M682/E67550/E67560/E67650/E67660 models)

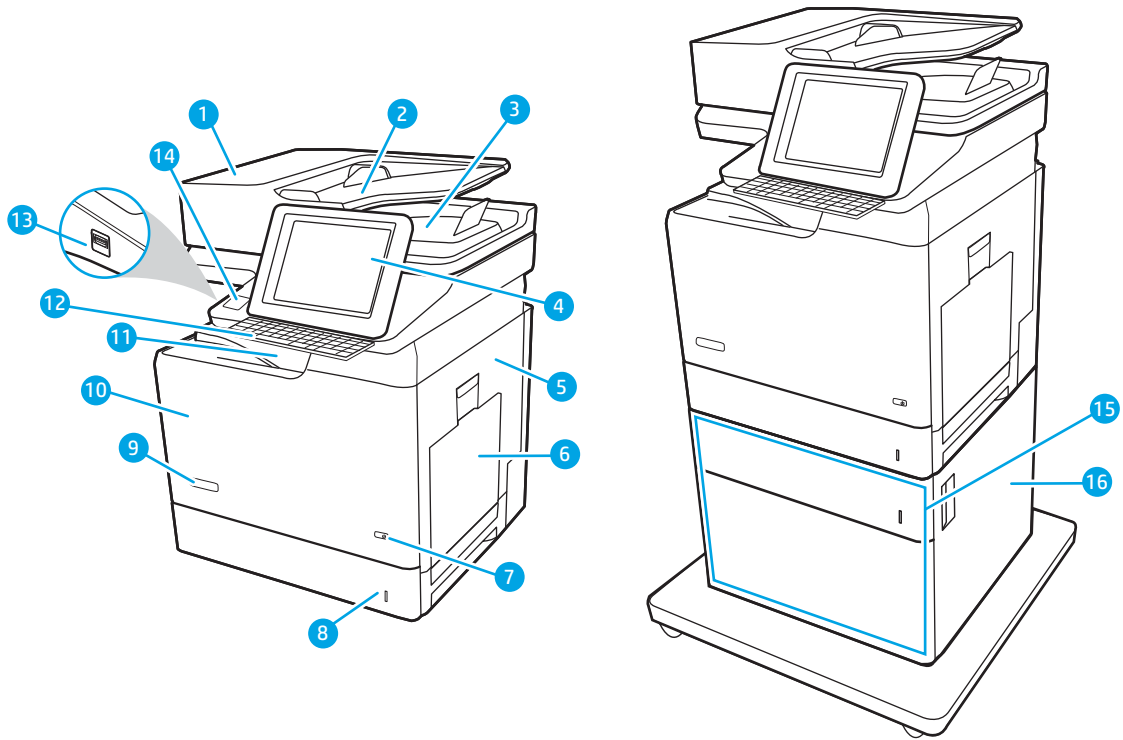


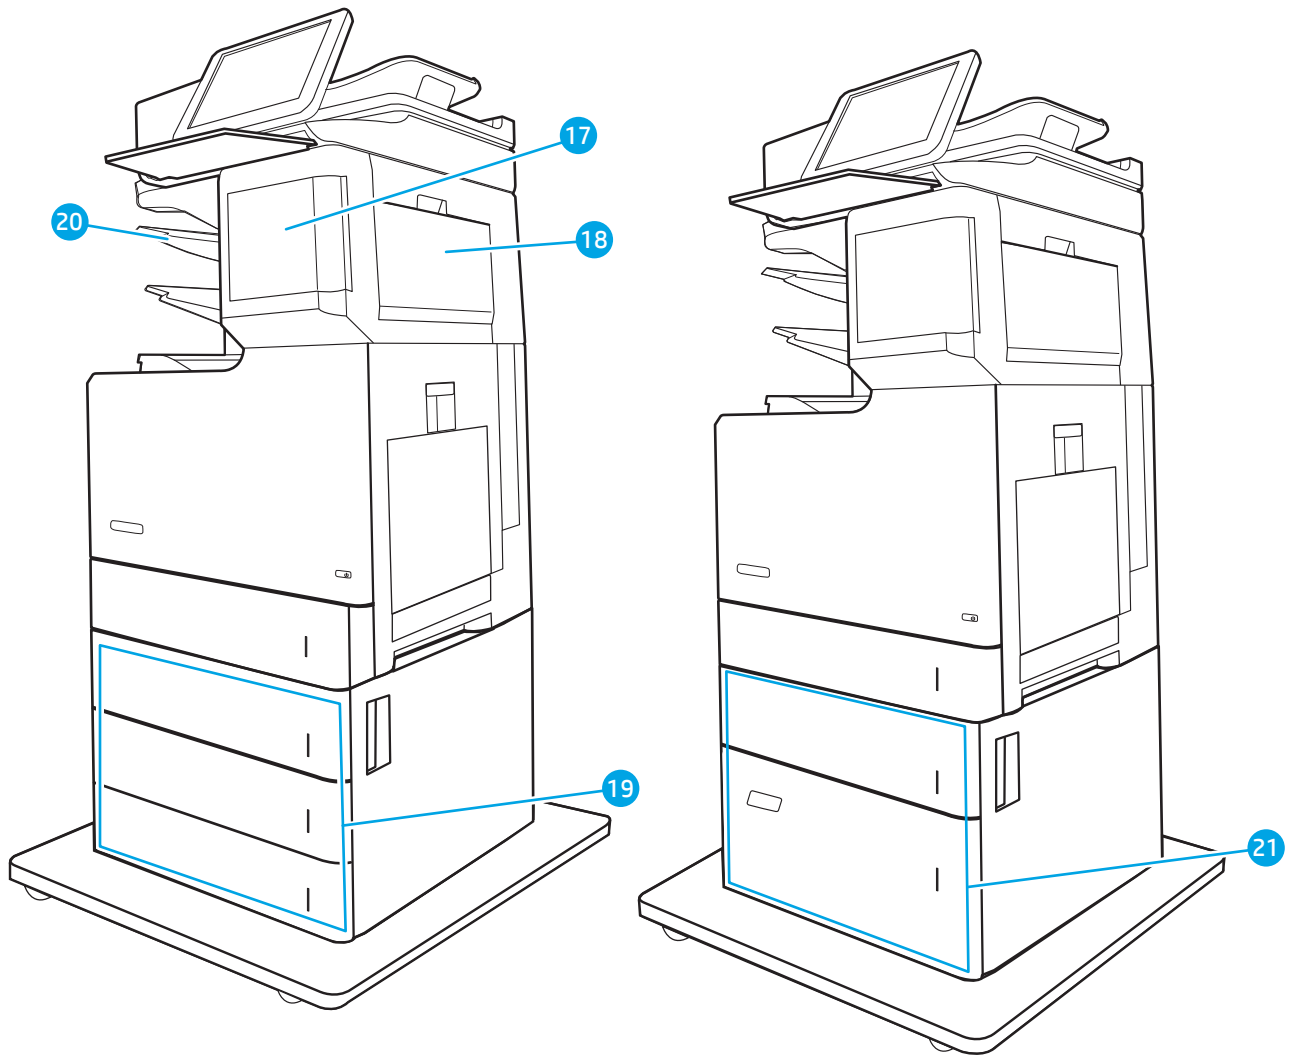

1	Document-feeder cover (access for clearing jams)
2	Document-feeder input tray
3	Document-feeder output bin
<b>NOTE:</b> When feeding long paper through the document feeder, extend the paper stop at the right side of the output bin.	
4	Control panel with color touchscreen display (tilts up for easier viewing)
5	Right door (access to the fuser and for clearing jams)
6	Tray 1
7	On/o button
8	Tray 2
9	Model name
10	Front door (access to the toner cartridges)
11	Standard output bin
12	Physical keyboard (Flow models only). Pull the keyboard straight out to use it.
<b>CAUTION:</b> Close the keyboard when it is not in use.	

13	Easy-access USB port (on the side of the control panel) Insert a USB flash drive for printing or scanning without a computer or to update the printer firmware <b>NOTE:</b> An administrator must enable this port before use.
14	Hardware integration pocket (for connecting accessory and third-party devices)
15	1x550-sheet paper feeder with stand
16	Lower-right door (access for clearing jams)
17	Stapler-cartridge door (z models only)
18	Stapler/stacker-right door (z models only) (access for clearing jams)
19	3x550-sheet paper feeder with stand
20	2-bin stapler/stacker
21	High-capacity paper feeder and 550-sheet paper feeder with stand


## Product back view (M681/M682/E67550/E67560/E67650/E67660 models)

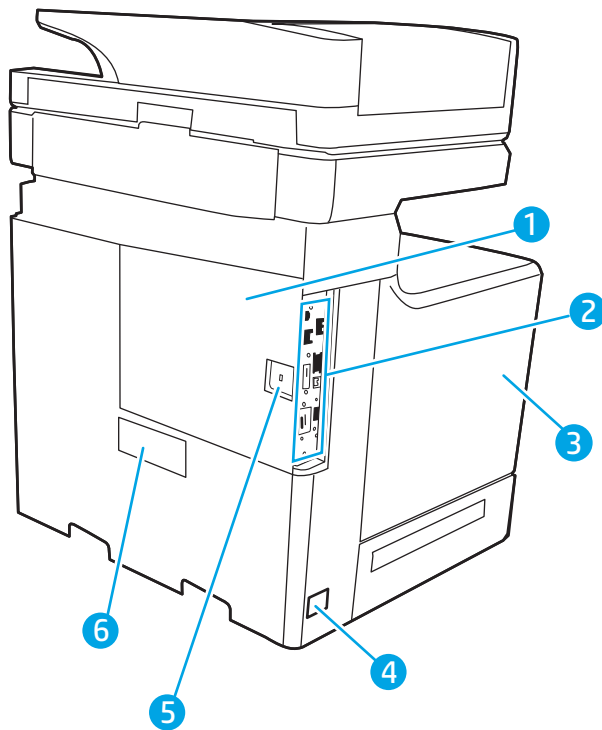

1	Formatter cover
2	Formatter (contains the interface ports)
3	Left door (access to the toner-collection unit)
4	Power connection


5	Slot for a cable-type security lock
6	Serial number and product number label

## Product front view (M681/M682/E67550/E67560/E67650/E67660 models)

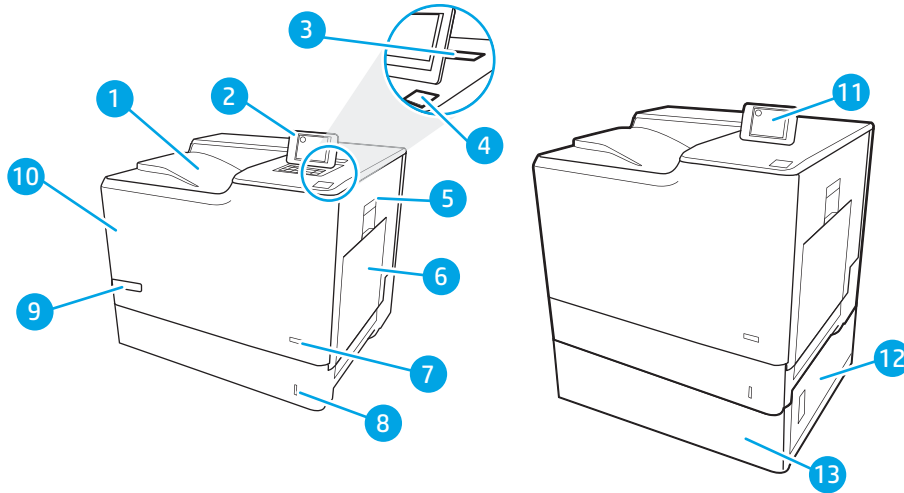

1	Output bin
2	Control panel with color graphical display and keypad (M652 models only)
3	Hardware integration pocket for connecting accessory and third-party devices
4	Easy-access USB port Insert a USB flash drive for printing without a computer or to update the printer firmware <b>NOTE:</b> An administrator must enable this port before use.
5	Right door (access to the fuser and for clearing jams)
6	Tray 1
7	On/Off button
8	Tray 2
9	Model name
10	Front door (access to the toner cartridges)
11	Control panel with color touchscreen display (M653 models only)
12	Lower-right door (access for clearing jams)
13	1 x 550-sheet paper feeder, Tray 3 (included with the M653x model, optional for the other models)

## Product back view (M652/M653/E65050/E65060/E65150/E65160 models)

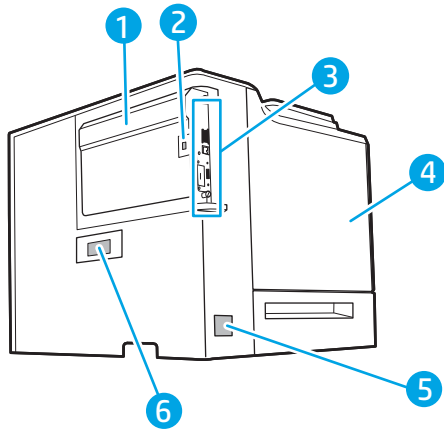

---


1	Formatter cover
2	Slot for a cable-type security lock
3	Formatter (contains the interface ports)
4	Left door (access to the toner-collection unit)
5	Power connection
6	Serial number and product number label


---

## How to use the parts lists and diagrams

The figure in this chapter show the major subassemblies in the product and their component parts. A parts list table follows each exploded view assembly diagram. Each table lists the item number, the associated part number, and the description of each part. If a part is not listed in the table, then it is not a field replacement unit (FRU).

---

 **CAUTION:** Be sure to order the correct part. When looking for part numbers for electrical components, pay careful attention to the voltage that is listed in the description column. Doing so will ensure that the part number selected is for the correct model.


 **NOTE:** In this manual, the abbreviation “PCA” stands for “printed circuit-board assembly.” Components described as a PCA might consist of a single circuit board or a circuit board plus other parts, such as cables and sensors.

---



## Parts and diagrams: Document feeder and scanner whole units

Figure 2-1 Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 models only)

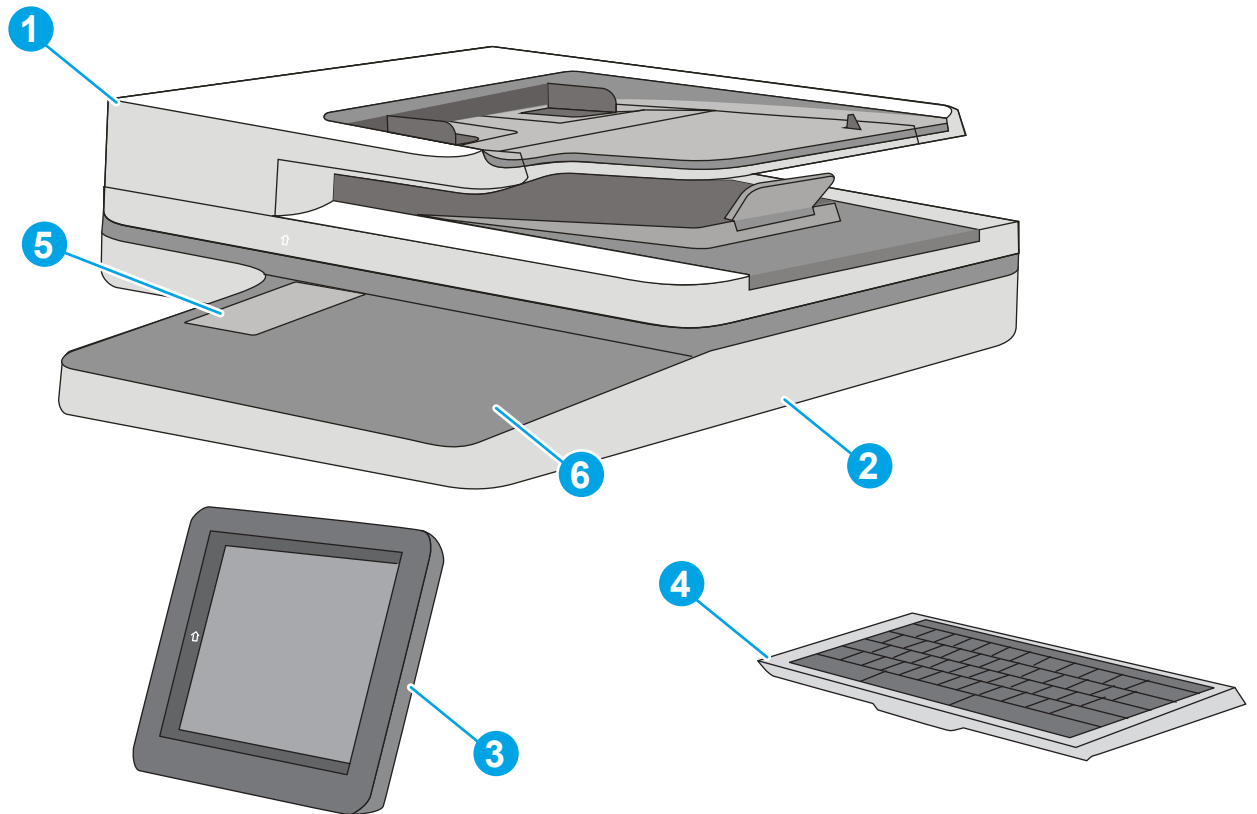


**Table 2-1 Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only)**

Ref	Description	Part number	Qty
1	Document feeder (non-Flow models) kit; includes white backing and retention clips	5851-7203	1
1	Document feeder (Flow models) kit; includes white backing and retention clips	5851-7204	1
2	Image scanner kit; includes white backing and retention clips, keyboard cover, and rear cover	J8A10-67901	1
3	Control panel kit, M681/M682/E67550/E67560/E67650/E67660	B5L47-67018	1
4	Keyboard US (Flow models)	B5L47-67019	1
4	Keyboard UK (Flow models)	B5L47-67020	1
5	Cover, HIP	B5L46-40021	1
6	Cover, control panel	J8J63-60137	1
Not shown	Scan control board (non-Flow models)	J8J63-60109	1
Not shown	Scan control board (Flow models)	J8A08-60103	1
Not shown	Scan control board (Enterprise)	5851-7764	1
Not shown	White backing retention clip kit	5851-7207	1
Not shown	Cover, USB	RC4-9423-000	1
Not shown	ADF hinge kit	5851-7205	1
Not shown	LaserJet ADF roller kit	5851-7202	1
Not shown	LaserJet ADF white backing, A4, kit	5851-7202	1
Not shown	Cable, HDMI	J8A10-60113	1
Not shown	Cable, WU USB control panel	J8A10-60111	1
Not shown	Cable, HIP control panel	J8A10-60114	1
Not shown	Cable, sideband control panel	J8A10-60112	1
Not shown	Cable, SCB-formatter power	J8A10-60110	1
Not shown	Cable, SCB-formatter HDMI	J8A10-60110	1
Not shown	Keyboard overlay kit (FR, IT, RU, DE, ES: UK Kybd)	5851-6019	1
Not shown	Keyboard overlay kit (FR-CN, ES-LA, ES: US Kybd)	5851-6020	1
Not shown	Keyboard overlay kit (FR-SW, DE-SW, DA: UK Kybd)	5851-6021	1
Not shown	Keyboard overlay kit (ZHTW, ZHCN)	5851-6022	1
Not shown	Keyboard overlay kit (ES, PT)	5851-6023	1
Not shown	Keyboard overlay kit (JA-KG, JA-KT)	5851-6024	1

# Parts and diagrams: Covers

## Covers (M652/M653/E65050/E65060/E65150/E65160)

Figure 2-2 Covers (M652/M653/E65050/E65060/E65150/E65160)

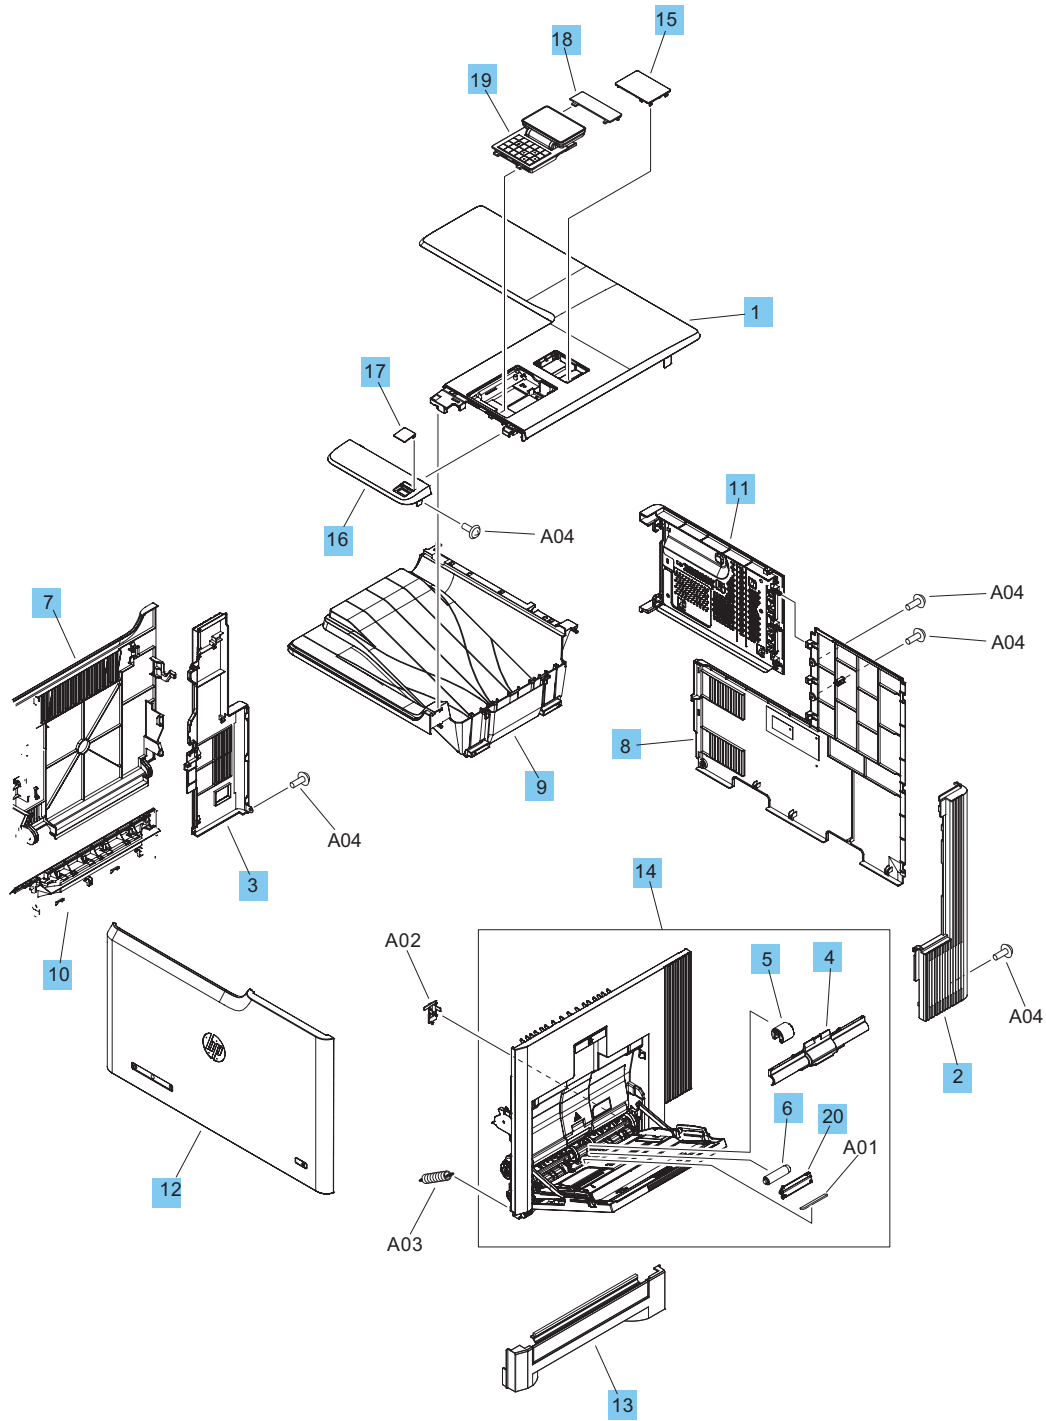


**Table 2-2 Covers (M652/M653/E65050/E65060/E65150/E65160)**

Ref	Description	Part number	Qty
1	Cover, top	RC4-6429-000CN	1
2	Cover, right rear	RC4-6425-000CN	1
3	Cover, left rear	RC4-6858-000CN	1
4	Cover, Tray 1 roller	RC4-7318-000CN	1
5	Roller, pickup, Tray 1	RL2-0034-000CN	1
6	Roller, separation, Tray 1	RL2-0079-000CN	1
7	Door, left	RL2-1500-000CN	1
8	Rear cover assembly	RM2-1951-000CN	1
9	Output bin assembly	RM2-1953-000CN	1
10	Left handle assembly	RM2-1958-000CN	1
11	Formatter cover assembly	RM2-6657-000CN	1
12	Front door assembly	RM2-6658-000CN	1
13	Right handle assembly	RM2-6659-000CN	1
14	Right door assembly	RM2-6622-000CN	1
15	Cover, HIP	RC4-0213-000CN	1
16	Cover, blanking	RC5-3356-000CN	1
17	Cover, USB	RC4-9423-000CN	1
18	Cover, control panel back	RC4-8239-000CN	1
19	Control panel assembly	RM2-6796-000CN	1
20	Guide, NIP	RC5-1892-000CN	1

# Covers (M681/M682/E67550/E67560/E67650/E67660)

Figure 2-3 Covers (M681/M682/E67550/E67560/E67650/E67660)

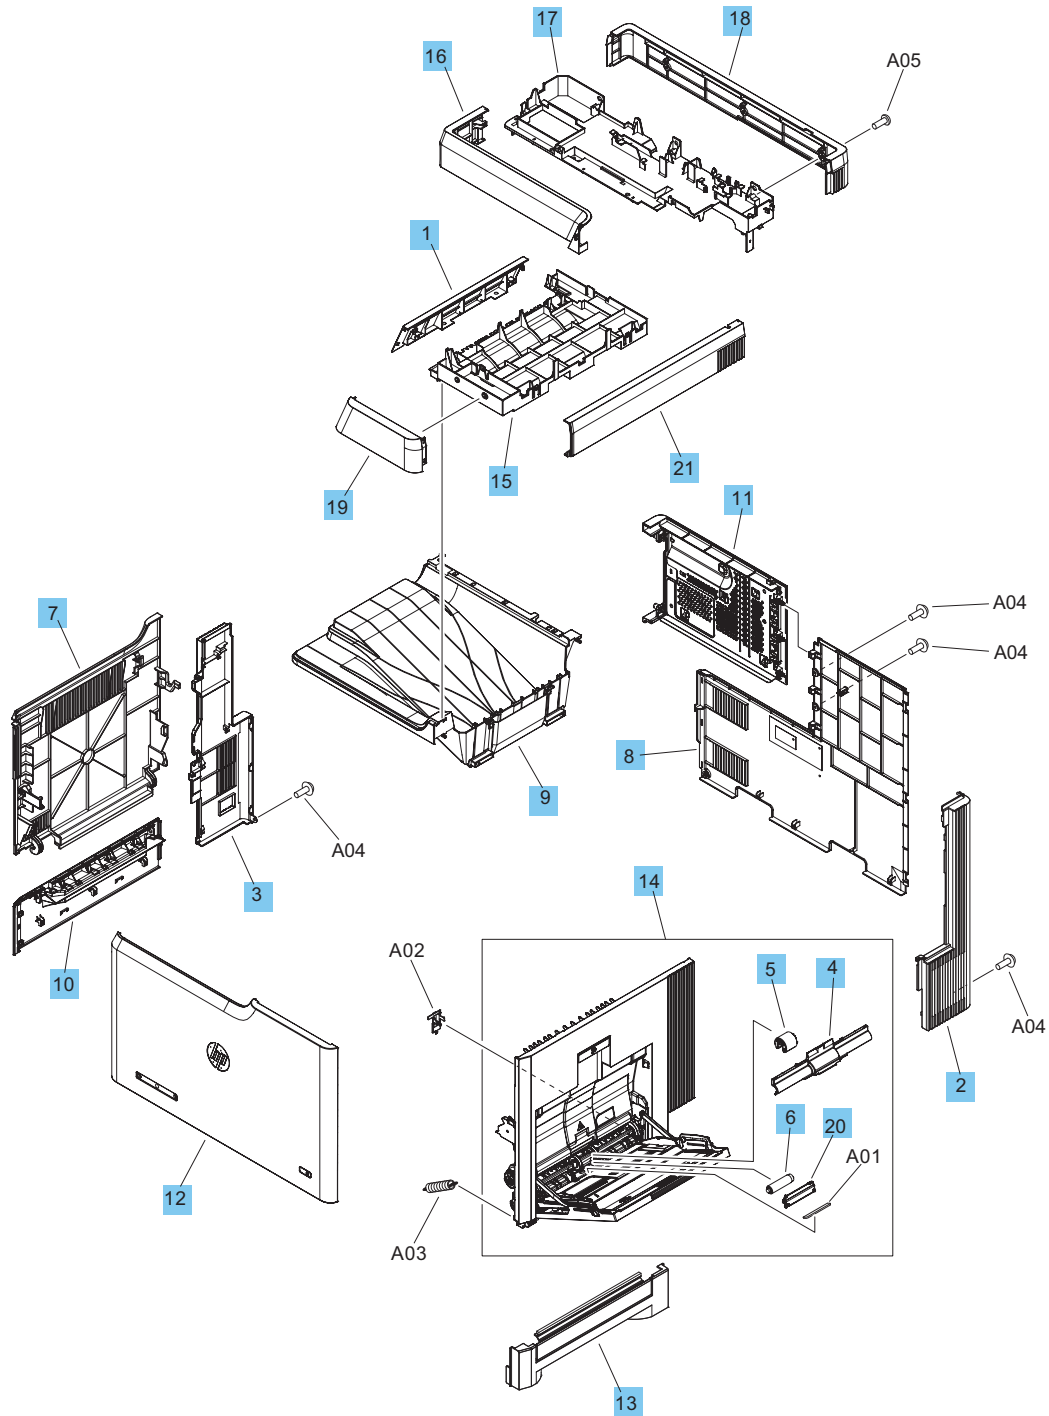

**Table 2-3 Covers (M681/M682/E67550/E67560/E67650/E67660)**

Ref	Description	Part number	Qty
1	Cover, top	RC4-6865-000CN	1
2	Cover, right rear	RC4-6425-000CN	1
3	Cover, left rear	RC4-6858-000CN	1
4	Cover, Tray 1 roller	RC4-7318-000CN	1
5	Roller, pickup, Tray 1	RL2-0034-000CN	1
6	Roller, separation, Tray 1	RL2-0079-000CN	1
7	Door, left	RL2-1500-000CN	1
8	Rear cover assembly	RM2-1951-000CN	1
9	Output bin assembly	RM2-1953-000CN	1
10	Left handle assembly	RM2-1958-000CN	1
11	Formatter cover assembly	RM2-6657-000CN	1
12	Front door assembly	RM2-6658-000CN	1
12	Front door assembly (E65150/E65160/E67650/E67660)	RM2-1975-000CN	1
13	Right handle assembly	RM2-6659-000CN	1
14	Right door assembly	RM2-6622-000CN	1
15	Cover, output bin	RC4-6859-000CN	1
15	Cover, output bin (E65150/E65160/E67650/E67660)	RM2-1975-000CN	1
16	Cover, front	RC4-6860-000CN	1
17	Cover, main	RC4-6861-000CN	1
18	Cover, rear	RC4-6862-000CN	1
19	Cover, output bin, front	RC5-1842-000CN	1
20	Guide, NIP	RC5-1892-000CN	1
21	Cover, right	RC5-1843-000CN	1

# Parts and diagrams: Internal components

## Internal components (1 of 6)

Figure 2-4 Internal components (1 of 6)

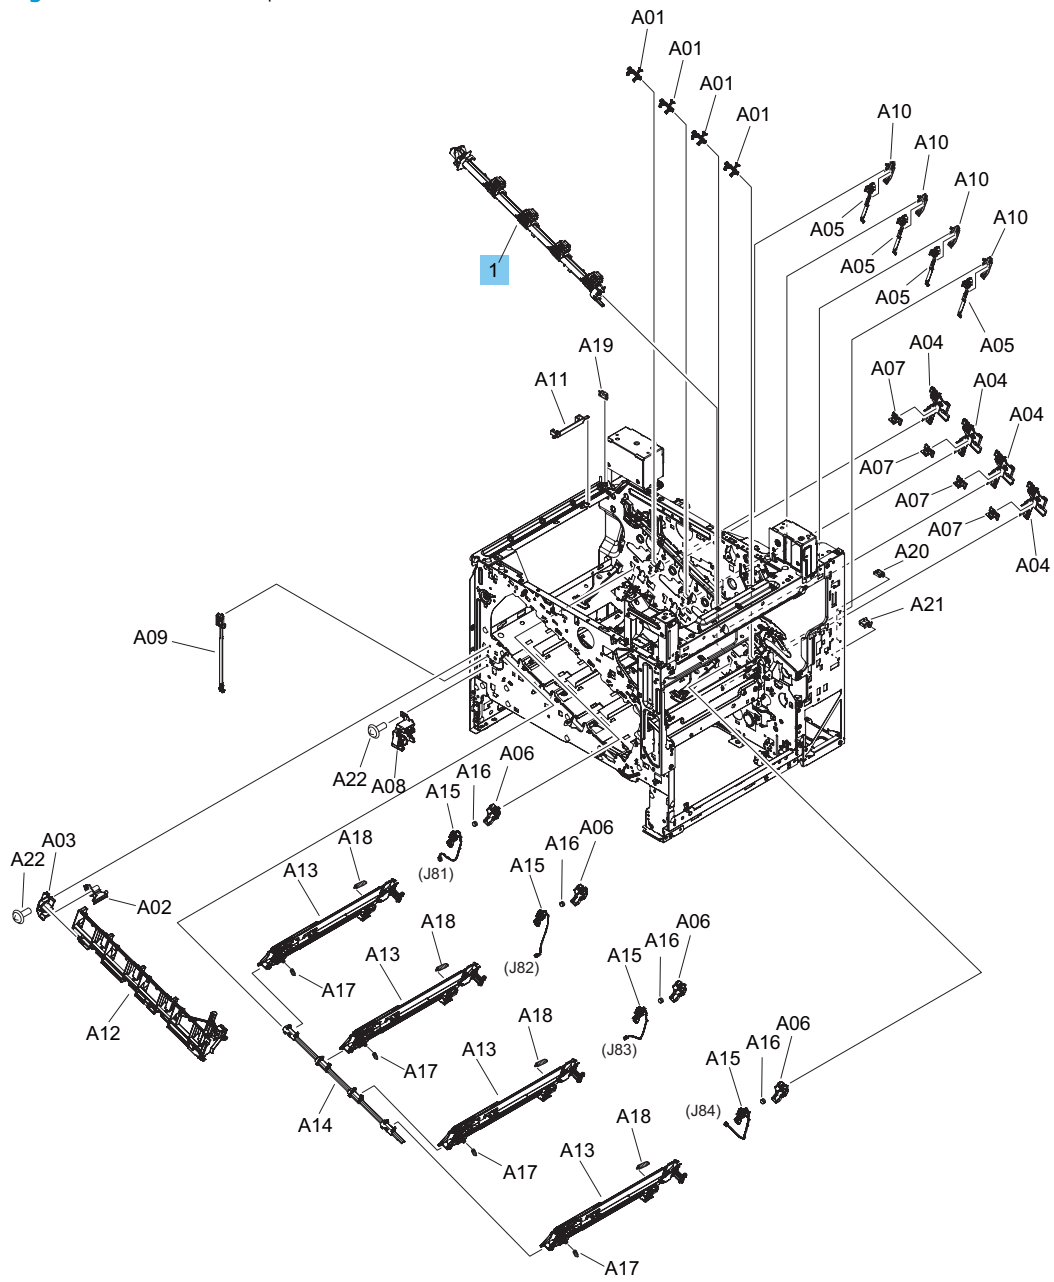




Table 2-4 Internal components (1 of 6)

Ref	Description	Part number	Qty
1	Toner carry assembly	RM2-6620-000CN	1

## Internal components (2 of 6)

Figure 2-5 Internal components (2 of 5)

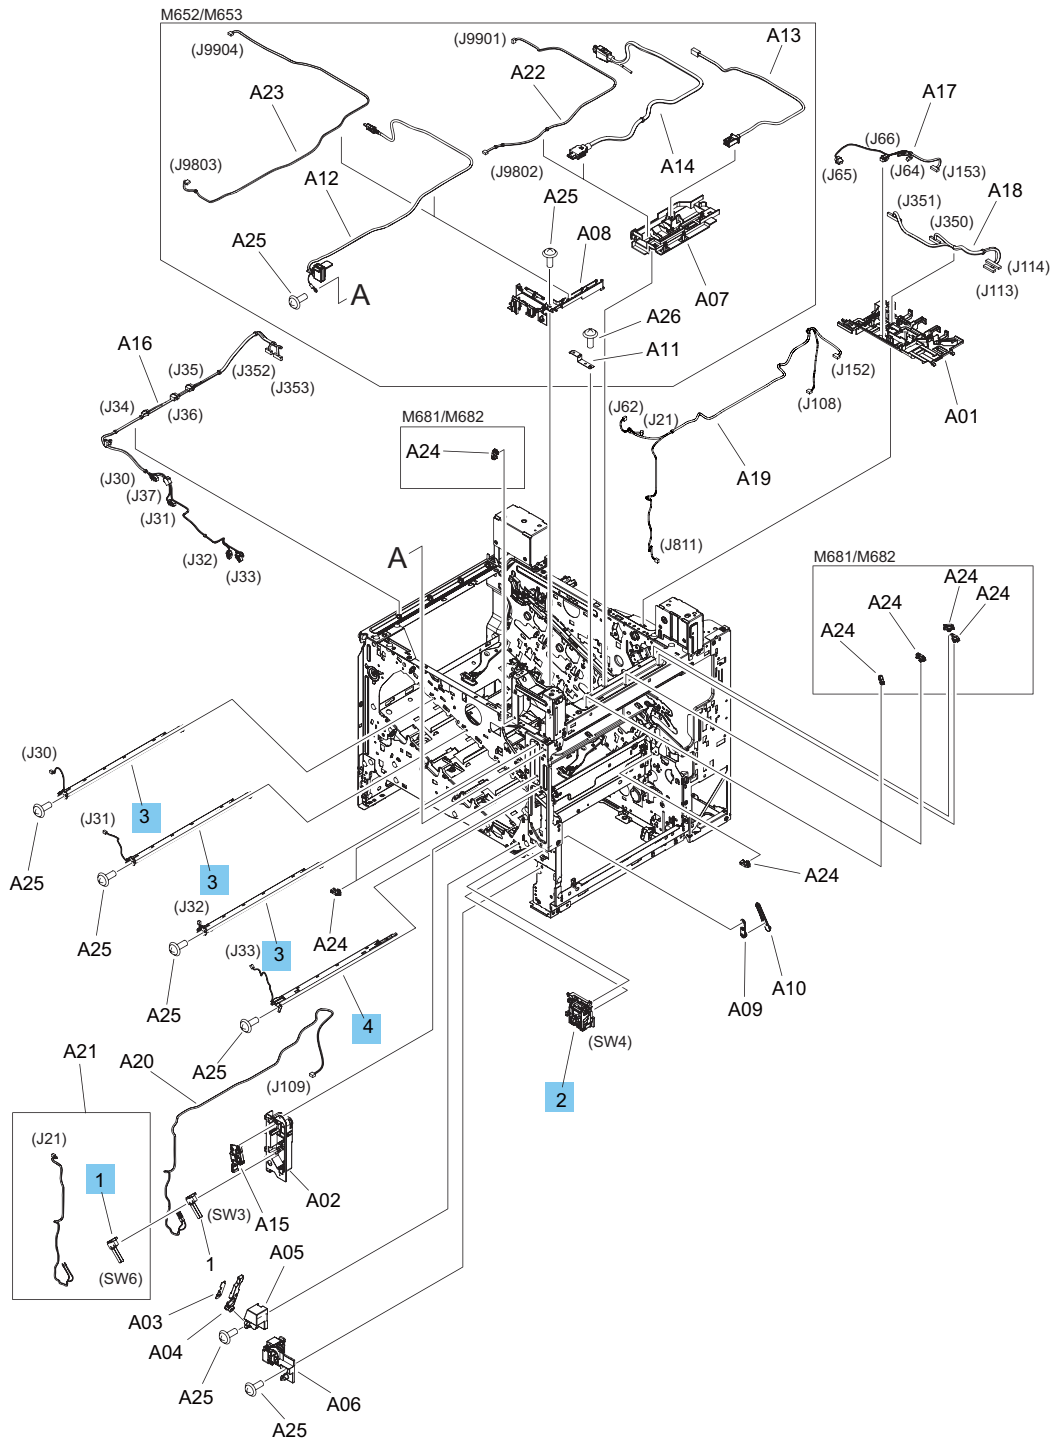


Table 2-5 Internal components (2 of 6)

Ref	Description	Part number	Qty
1	Microswitch	RM2-6545-000CN	2
2	Power supply switch assembly	RM2-1947-000CN	1
3	Pre-exposure PCA assembly	RM3-7046-000CN	3
4	Pre-exposure PCA assembly	RM3-7047-000CN	1

## Internal components (3 of 6)

Figure 2-6 Internal components (3 of 6)

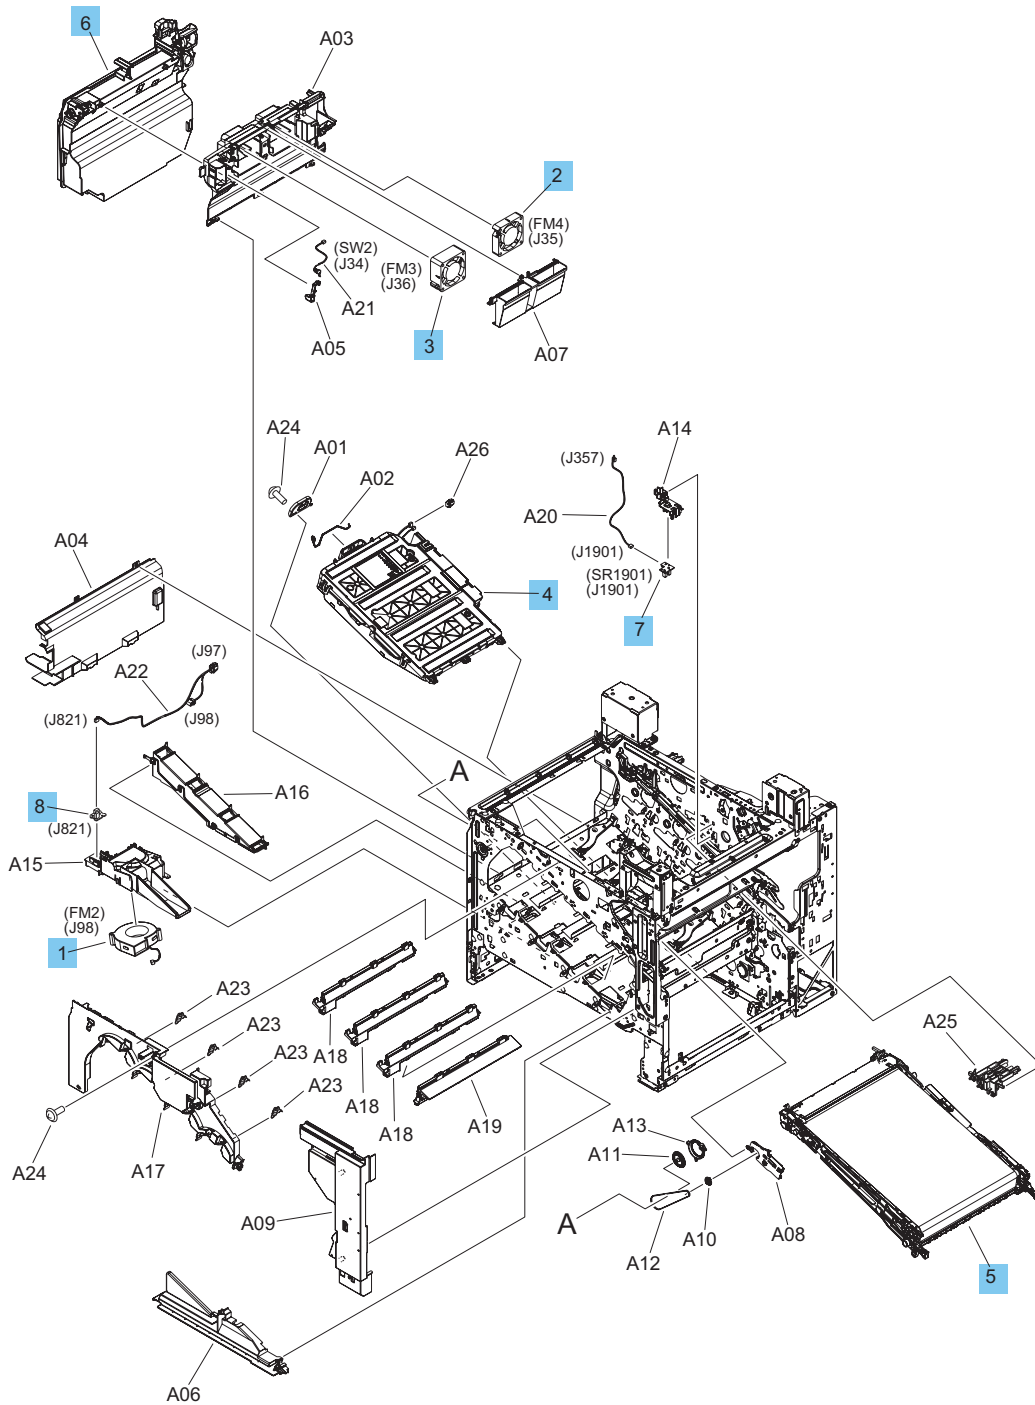


Table 2-6 Internal components (3 of 6)

Ref	Description	Part number	Qty
1	Fan	RK2-6124-000CN	1
2	Fan	RK2-7949-000CN	1
3	Fan	RK2-7951-000CN	1
4	Laser scanner assembly	RM2-1237-000CN	1
5	Image Transfer Belt (ITB) (part of LaserJet Image Transfer and Roller Kit)	P1B93-67901	1
6	Toner collection unit	RM2-6613-000CN	1
7	Estrangement detect PCA assembly	RM2-7157-000CN	1
8	Environmental sensor PCA assembly	RM2-8440-000CN	1



**Table 2-7 Internal components (4 of 6)**

Ref	Description	Part number	Qty
1	Fan	RK2-6124-000CN	2
2	Paper pick-up assembly	RM2-6556-000CN	1
3	Separation roller assembly	RM2-0064-000CN	1
4	Fuser assembly, 110-127V	RM2-1928-000CN	1
4	Fuser assembly, 220-240V	RM2-1929-000CN	1
5	Registration assembly	RM2-1957-000CN	1
6	Feed roller assembly	RM2-6684-000CN	1
7	Cassette assembly (Tray 2)	RM2-6618-000CN	1
8	Paper delivery assembly	RM2-6621-000CN	1
9	Paper pick-up roller assembly	RM2-6681-000CN	1
10	Secondary transfer assembly	RM2-6682-000CN	1
11	Density detect assembly	RM2-7160-000CN	1
12	Secondary transfer roller assembly (part of LaserJet Image Transfer and Roller Kit)	P1B93-67901	1
Not shown	Kit-Fixed Tray Guide	3GY25-67901	1
16	Guide Assembly	RM2-6650-000CN	1
17	Upper Guide Assembly	RM2-6651-000CN	1



## Internal components (5 of 6)

Figure 2-8 Internal components (5 of 6)


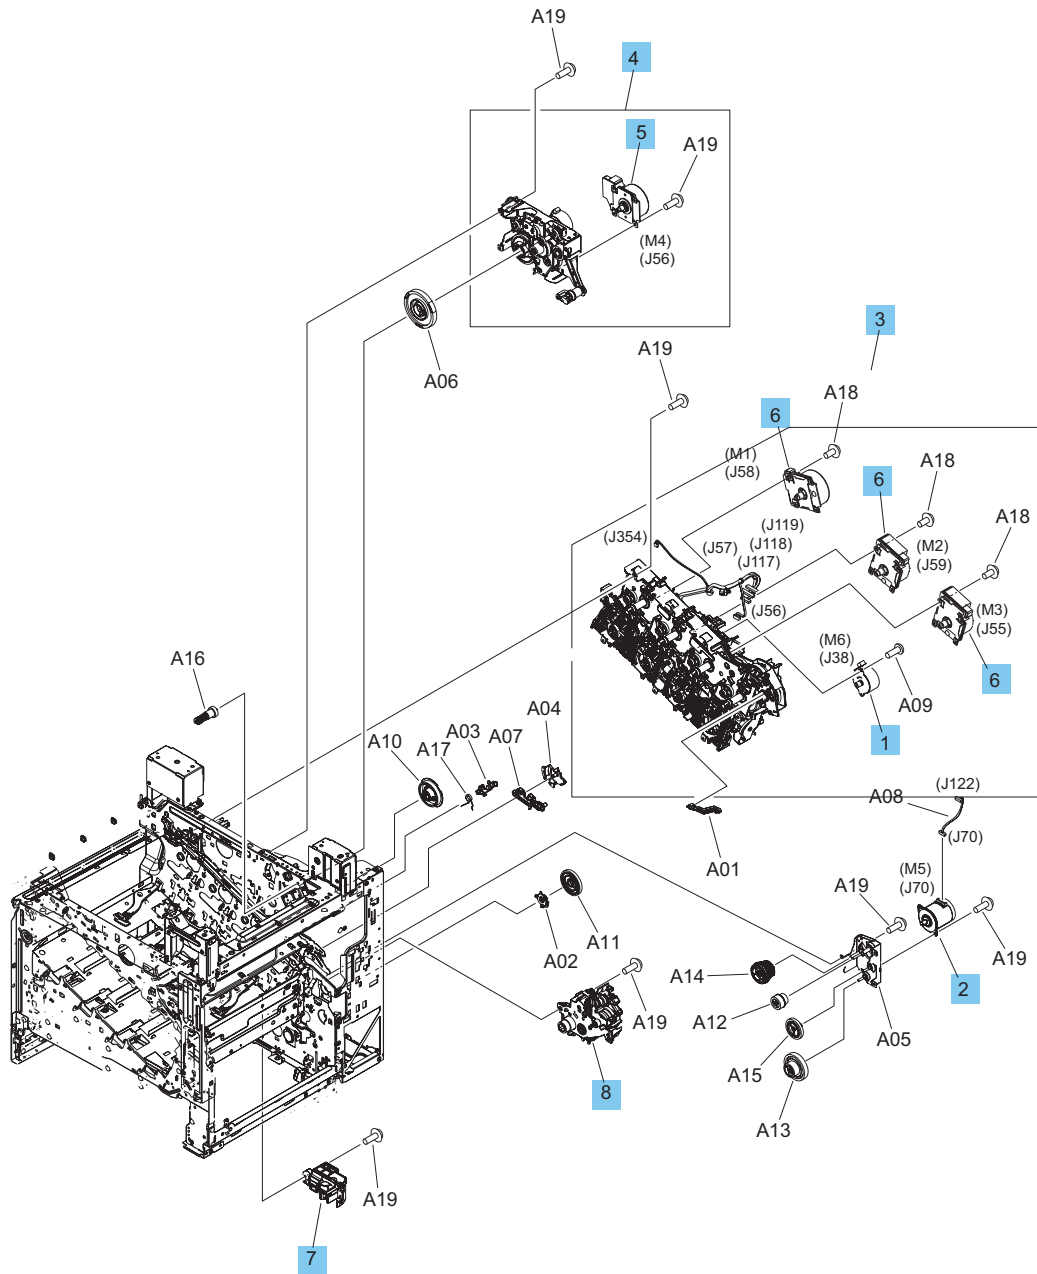


Table 2-8 Internal components (5 of 6)

Ref	Description	Part number	Qty
1	Motor, stepping	CN	1
2	Motor, stepping	CN	1
3	Main drive assembly	CN	1
4	Fuser drive assembly	CN	1
5	Fuser motor drive assembly	CN	1
6	Drum motor assembly	CN	3
7	Auto close assembly	CN	3
8	Lifter drive assembly	CN	1

# Internal components (6 of 6)

Figure 2-9 Internal components (6 of 6)

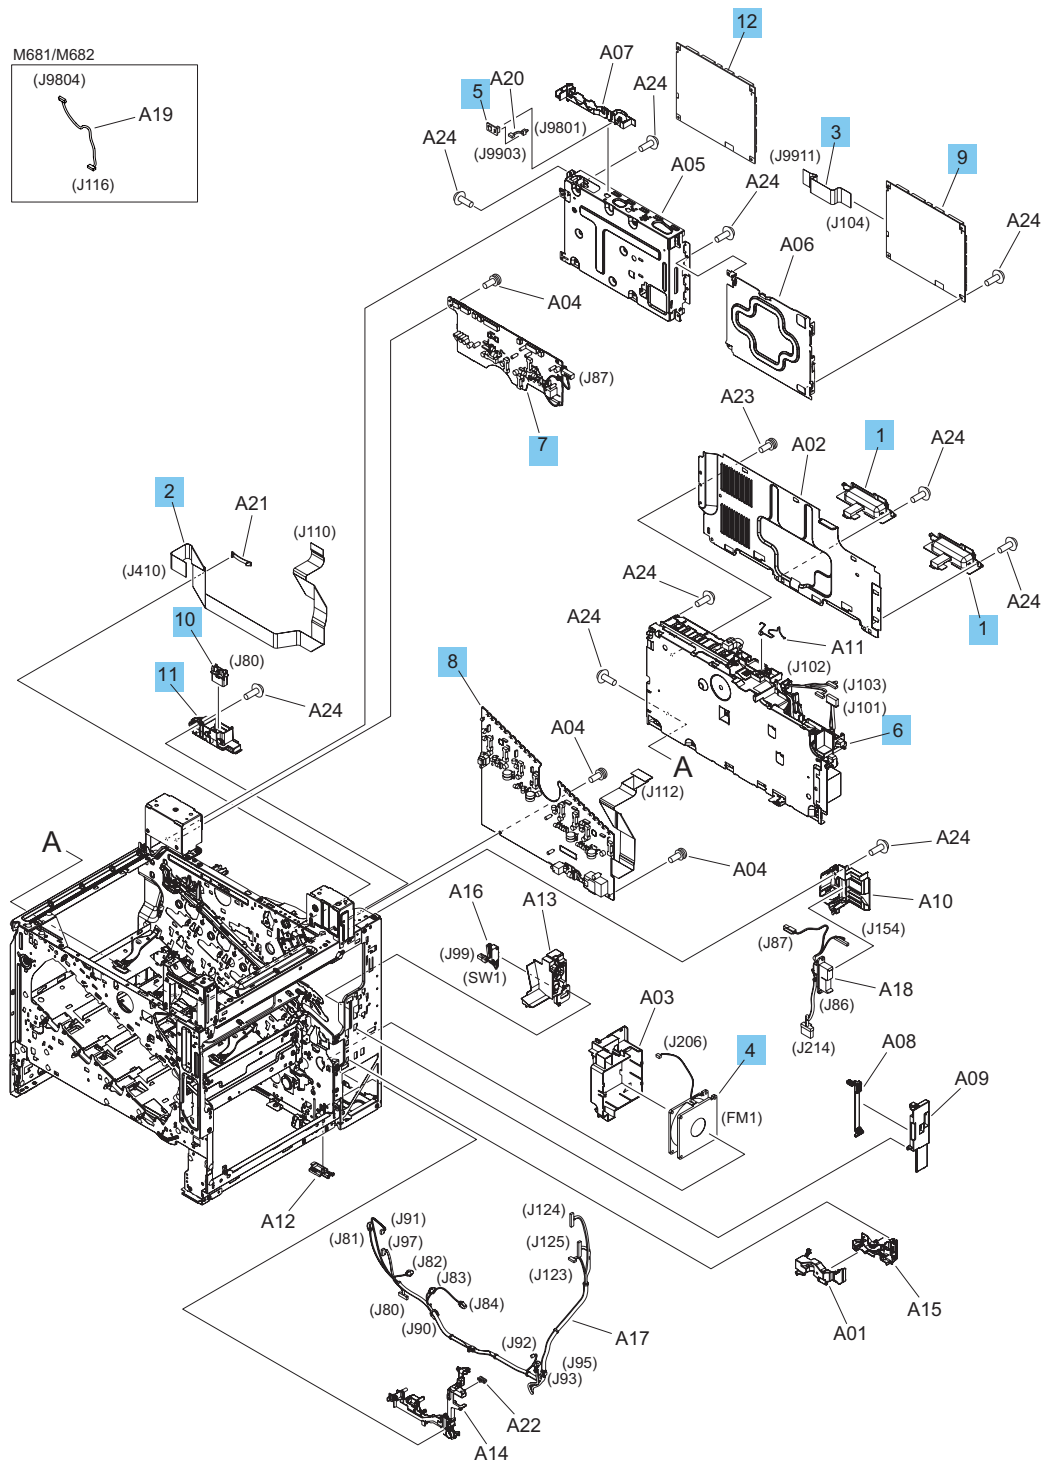

**Table 2-9 Internal components (6 of 6)**

Ref	Description	Part number	Qty
1	Handle, rear	RC4-9410-000CN	2
2	Cable, flexibl fla	RK2-7768-000CN	1
3	Cable, flexibl fla	RK2-7776-000CN	1
4	Fan	RK2-7953-000CN	1
5	Memory PCA	RM2-7138-000CN	1
6	Power supply PCA, 110-127V	RM2-8421-000CN	1
6	Power supply PCA, 220-240V	RM2-8422-000CN	1
7	Upper high voltage power supply PCA	RM2-8424-000CN	3
8	Lower high voltage power supply PCA	RM3-7006-000CN	1
9	DC controller PCA, M652/M653	RM3-7030-000CN	1
9	DC controller PCA, M681/M682	RM3-7031-000CN	1
9	DC controller PCA, E65150/E65160	RM3-7603-000CN	1
9	DC controller PCA, E67650/E67660	RM3-7606-000CN	1
10	Connector	VS1-7258-012CN	1
11	Holder, drawer connector	RC4-6497-000CN	1
12	Formatter kit (M652/M653)	J7Z98-60001	1
12	Formatter kit (M652/M653; India/China)	J7Z98-67904	1
12	Formatter kit (M681/M682)	J8A10-60001	1
12	Formatter kit (M681/M682; India/China)	J8A10-67902	1
12	Formatter kit (E65150/E65160)	3GY03-67901	1
12	Formatter kit (E67650/E67660)	3GY13-67901	1
12	Formatter kit (E65150/E65160; India/China)	3GY03-67902	1
12	Formatter kit (E67650/E67660; India/China)	3GY31-67902	1
Not shown	Kit-PEFS	3GY32-67901	1


# Parts and diagrams: Accessories

## Parts and diagrams: Input devices

### Parts and diagrams: 550-sheet paper feeder

#### 550-sheet paper feeder covers

Figure 2-10 550-sheet paper feeder covers

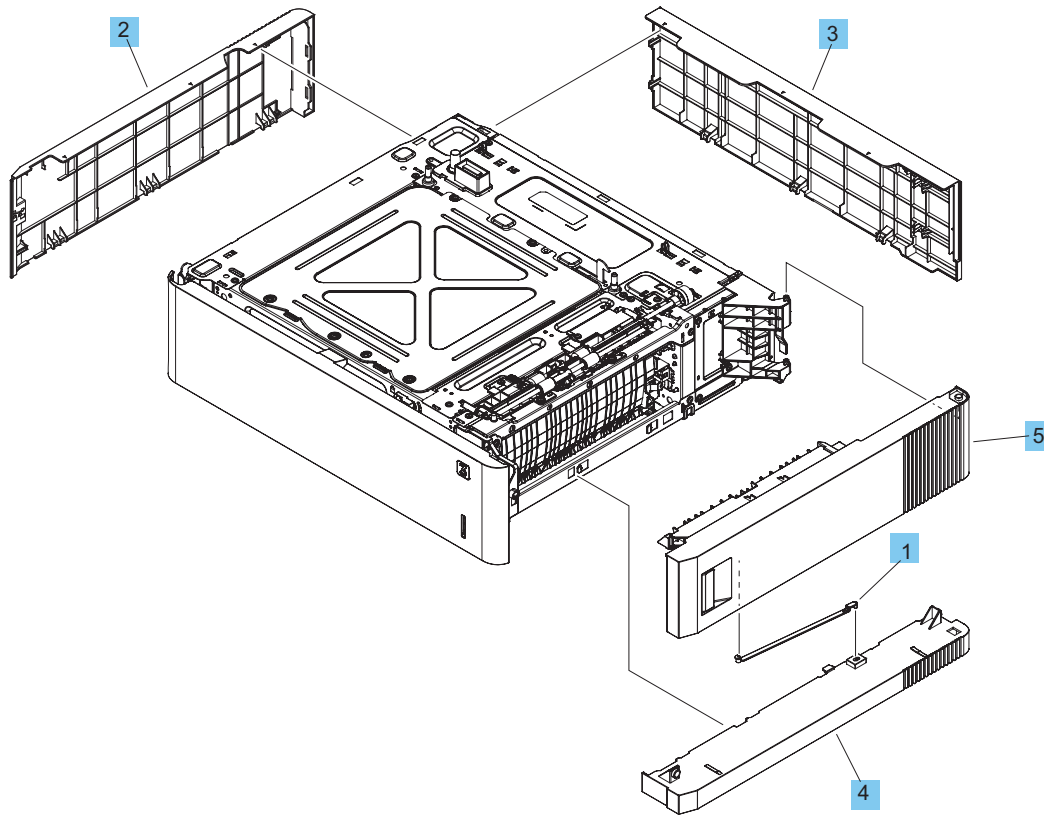


**Table 2-10** 550-sheet paper feeder covers

Ref	Description	Part number	Qty
1	Link, door, right (550-sheet feeder)	RC4-1778-000CN	1
2	Cover, left (550-sheet feeder)	RC4-7682-000CN	1
3	Cover, rear (550-sheet feeder)	RC4-7683-000CN	1
4	Cover, right lower (550-sheet feeder)	RC4-7684-000CN	1
5	Door assembly, right (550-sheet feeder)	RM2-6937-000CN	1

# 550-sheet paper feeder main body

Figure 2-11 550-sheet paper feeder main body

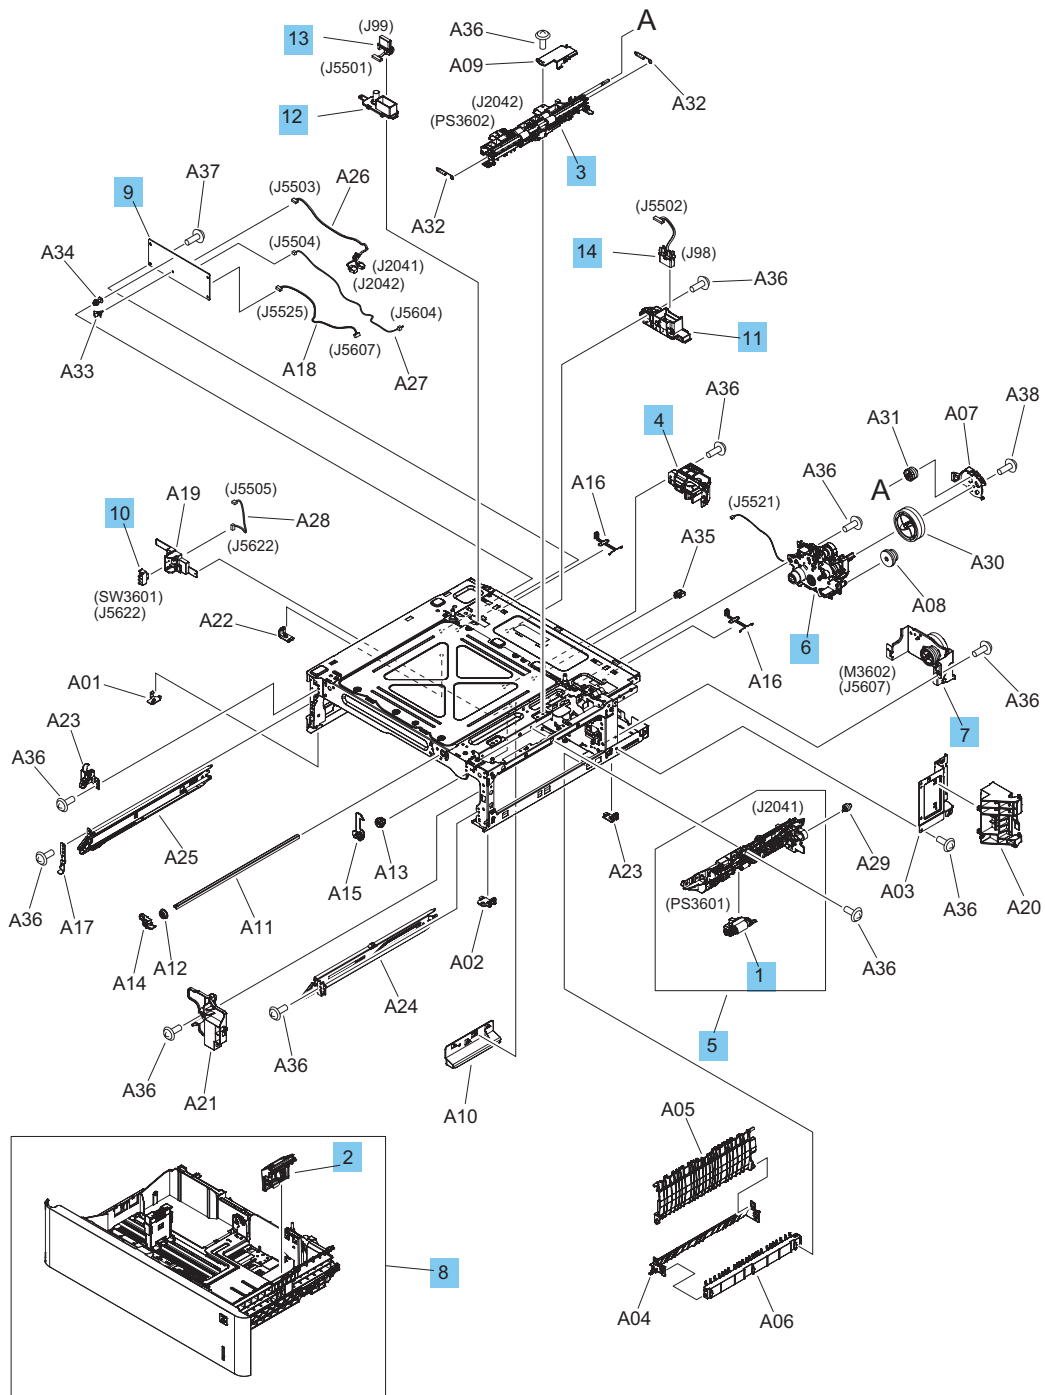




**Table 2-11 550-sheet paper feeder main body**

Ref	Description	Part number	Qty
1	Paper pick-up roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	J7Z98-67902	1
2	Separation roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	J7Z98-67902	1
3	Paper feed assembly (550-sheet feeder)	RM2-5145-000CN	1
4	Auto close assembly (550-sheet feeder)	RM2-5147-000CN	1
5	Paper pick-up assembly (550-sheet feeder)	RM2-5154-000CN	1
6	Lifter drive assembly (550-sheet feeder)	RM2-6933-000CN	1
7	Drive assembly (550-sheet feeder)	RM2-6934-000CN	1
8	Cassette assembly (550-sheet feeder)	RM2-6935-000CN	1
9	Feeder controller PCA (550-sheet feeder)	RM2-8491-000CN	1
10	Switch, push (550-sheet feeder)	WC2-5762-000CN	1
11	Holder, drawer connector (550-sheet feeder)	RC4-6497-000CN	1
12	Holder, drawer, upper (550-sheet feeder)	RC4-7680-000CN	1
13	Option upper cable assembly (550-sheet feeder)	RM2-8880-000CN	1
14	Option lower cable assembly (550-sheet feeder)	RM2-8881-000CN	1

## Parts and diagrams: 1x550-sheet feeder and stand

### 1x550-sheet paper feeder covers

Figure 2-12 1x550-sheet paper feeder covers

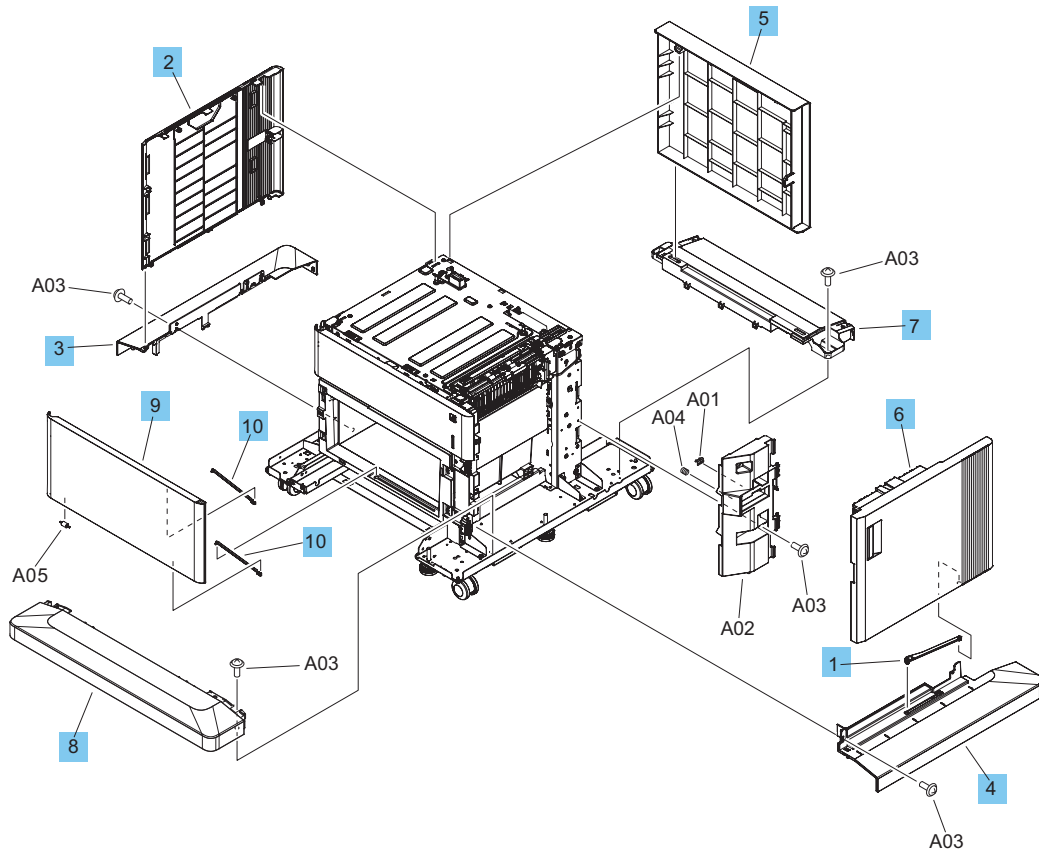


**Table 2-12 1x550-sheet paper feeder covers**

Ref	Description	Part number	Qty
1	Link, door (1x550-sheet feeder)	RC4-9824-000CN	1
2	Cover, left (1x550-sheet feeder)	RC5-0387-000CN	1
3	Cover, left lower (1x550-sheet feeder)	RC5-0385-000CN	1
4	Cover, right lower (1x550-sheet feeder)	RC5-0384-000CN	1
5	Cover, rear (1x550-sheet feeder)	RC5-0386-000CN	1
6	Right door assembly (1x550-sheet feeder)	RM2-1226-000CN	1
7	Cover, rear lower (1x550-sheet feeder)	RC5-0399-000CN	1
8	Cover, front lower (1x550-sheet feeder)	RC5-0383-000CN	1
9	Door, stock (1x550-sheet feeder)	RC5-0405-000CN	1
10	Link, door (1x550-sheet feeder)	RC4-1778-000CN	2

# 1x550-sheet paper feeder main body

Figure 2-13 1x550-sheet paper feeder main body

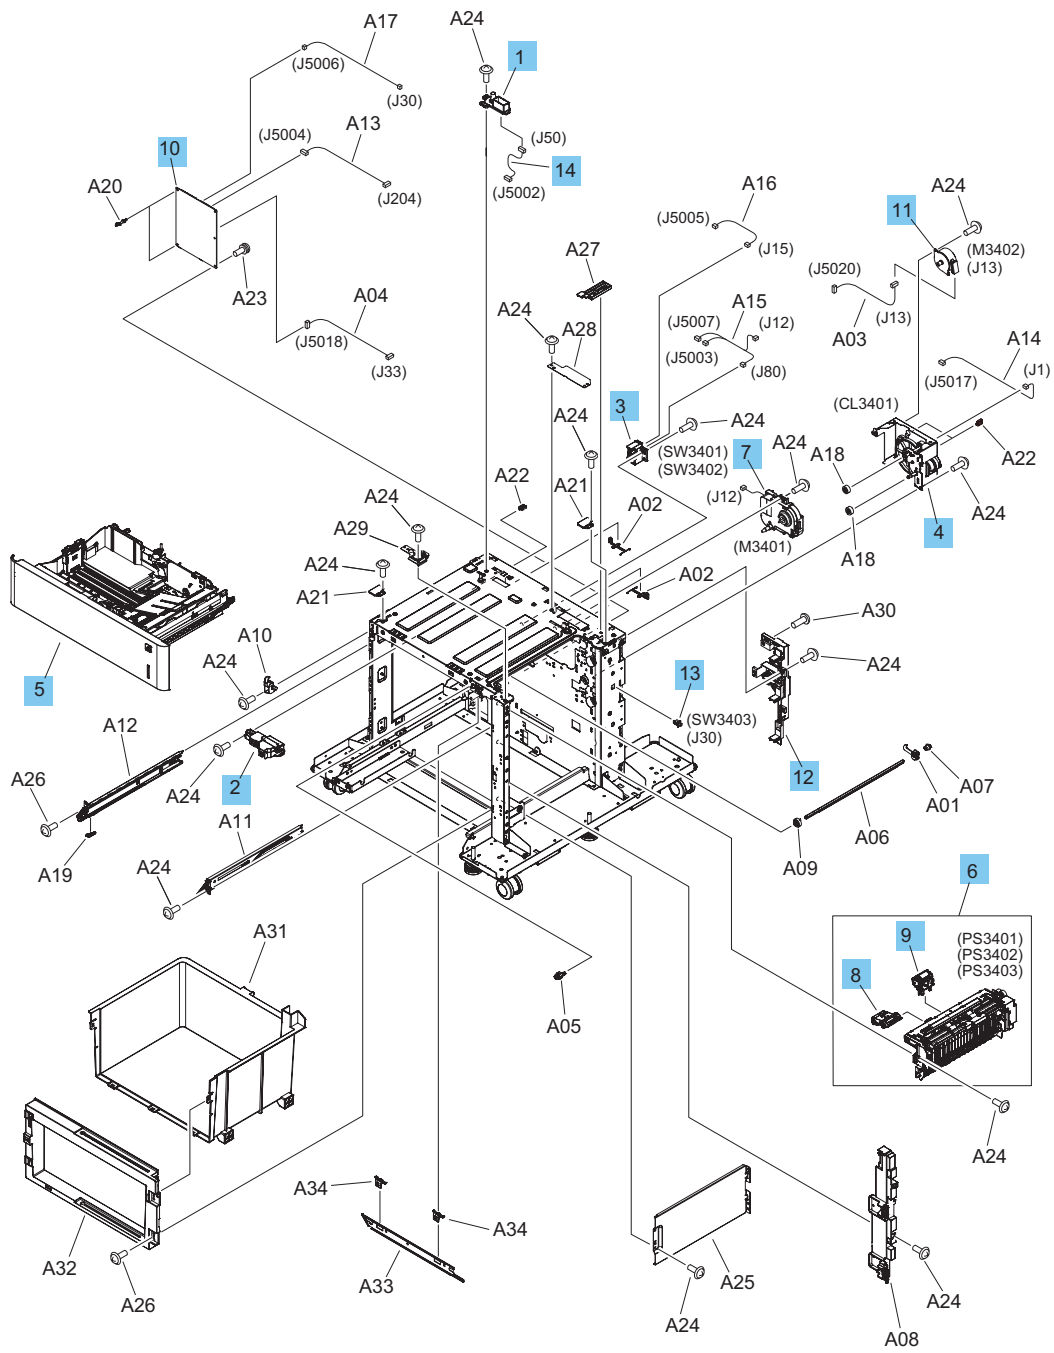


**Table 2-13 1x550-sheet paper feeder main body**

Ref	Description	Part number	Qty
1	Holder, drawer connector (1x550-sheet feeder)	RC4-8914-000CN	1
2	Auto close assembly (1x550-sheet feeder)	RM2-0856-000CN	1
3	Size sensor assembly (1x550-sheet feeder)	RM2-0857-000CN	1
4	Drive assembly (1x550-sheet feeder)	RM2-1222-000CN	1
5	Cassette assembly (tray; 1x550-sheet feeder)	RM2-1219-000CN	1
6	Paper pick-up assembly (1x550-sheet feeder)	RM2-1235-000CN	1
7	Lifter drive assembly (1x550-sheet feeder)	RM2-2091-000CN	1
8	Paper pickup roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	1
9	Separation roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	1
10	Paper deck cont. PCA	RM2-8482-000CN	1
11	Motor, stepping (1x550-sheet feeder)	RK2-7831-000CN	1
12	Estrangement holder assembly (1x550-sheet feeder)	RM2-1223-000CN	1
13	Switch, push (1x550-sheet feeder)	WC2-5803-000CN	1
14	Drawer upper cable assembly (1x550-sheet feeder)	RM2-9286-000CN	1

## Parts and diagrams: 3x550-sheet feeder and stand

### 3x550-sheet paper feeder covers

Figure 2-14 3x550-sheet paper feeder covers

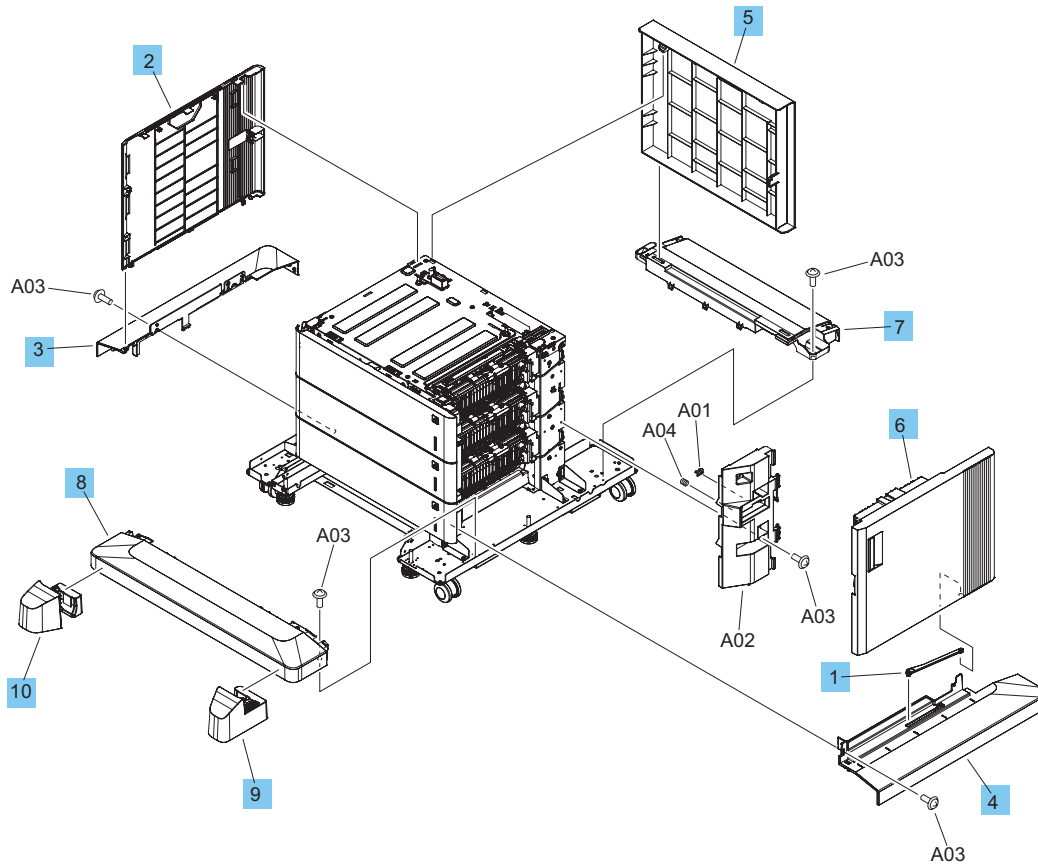


**Table 2-14 3x550-sheet paper feeder covers**

Ref	Description	Part number	Qty
1	Link, door (3x550-sheet feeder)	RC4-9824-000CN	1
2	Cover, left (3x550-sheet feeder)	RC5-0387-000CN	1
3	Cover, left lower (3x550-sheet feeder)	RC5-0385-000CN	1
4	Cover, right lower (3x550-sheet feeder)	RC5-0384-000CN	1
5	Cover, rear (3x550-sheet feeder)	RC5-0386-000CN	1
6	Right door assembly (3x550-sheet feeder)	RM2-1230-000CN	1
7	Cover, rear lower	RC5-0399-000CN	1
8	Cover, front lower	RC5-0383-000CN	1
9	Cover, caster, right	RC5-0417-000CN	1
10	Cover, caster, left	RC5-0418-000CN	1



# 3x550-sheet paper feeder main body

Figure 2-15 3x550-sheet paper feeder main body

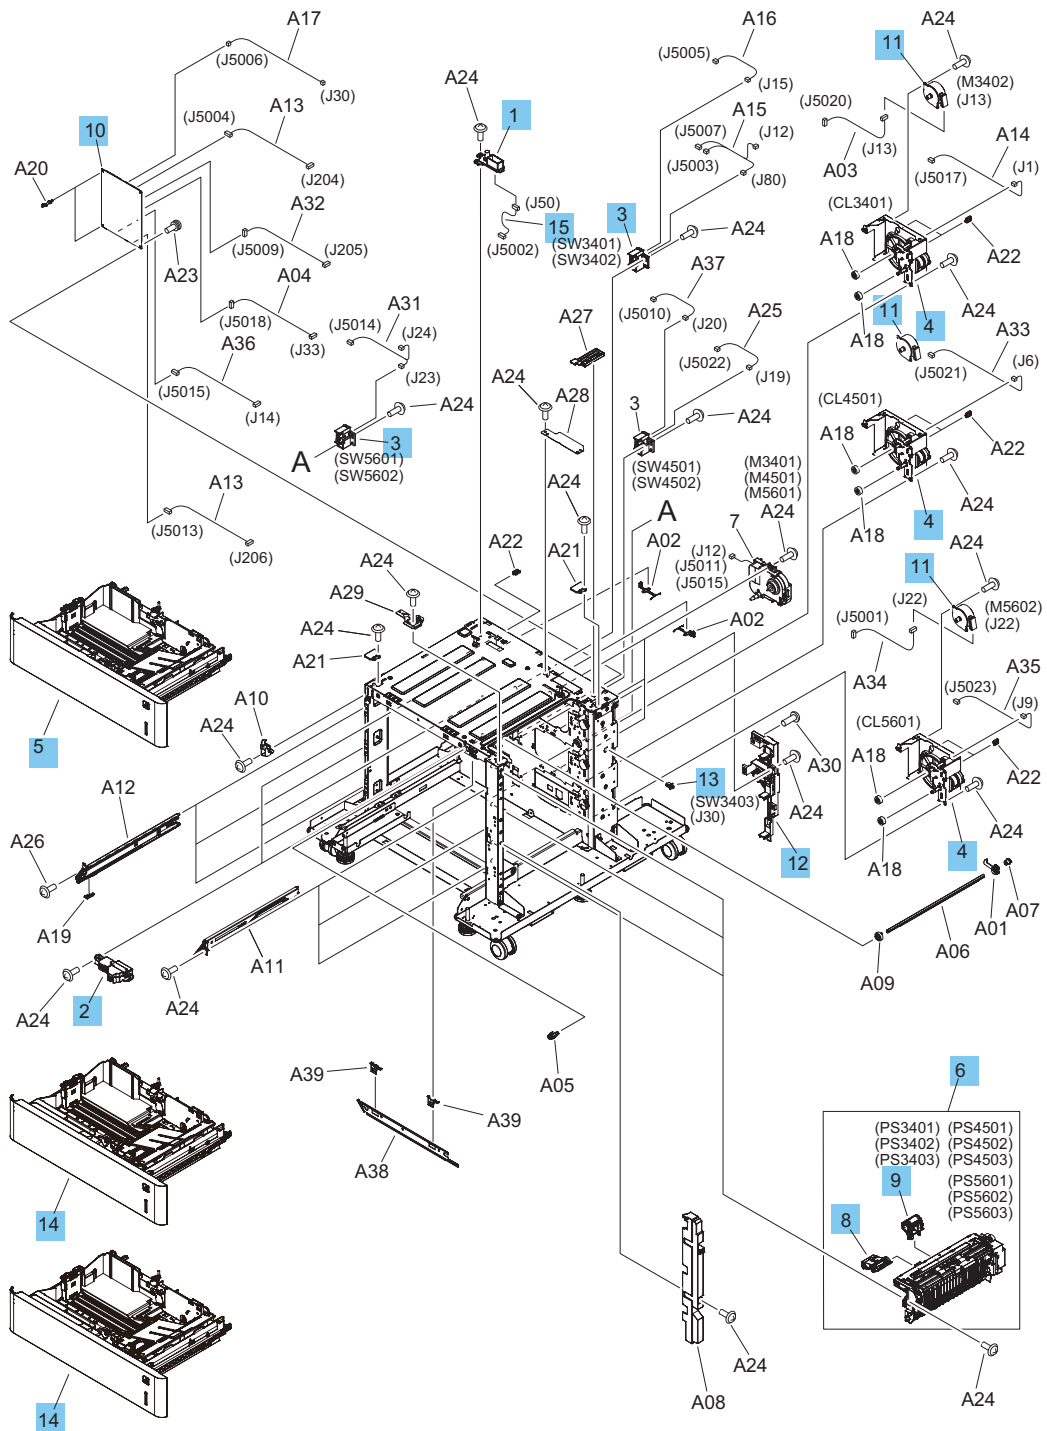

**Table 2-15 3x550-sheet paper feeder main body**

Ref	Description	Part number	Qty
1	Holder, drawer connector (3x550-sheet feeder)	RC4-8914-000CN	1
2	Auto close assembly (3x550-sheet feeder)	RM2-0856-000CN	3
3	Size sensor assembly (3x550-sheet feeder)	RM2-0857-000CN	3
4	Drive assembly (3x550-sheet feeder)	RM2-1222-000CN	3
5	Cassette assembly (upper tray; 3x550-sheet feeder)	RM2-1219-000CN	1
6	Paper pick-up assembly (3x550-sheet feeder)	RM2-1235-000CN	3
7	Lifter drive assembly (3x550-sheet feeder)	RM2-2091-000CN	3
8	Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	3
9	Separation roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	3
10	Paper deck cont. PCA (3x550-sheet feeder)	RM2-8483-000CN	1
11	Motor, stepping (3x550-sheet feeder)	RK2-7831-000CN	2
12	Estrangement holder assembly (3x550-sheet feeder)	RM2-1223-000CN	1
13	Switch, push (3x550-sheet feeder)	WC2-5803-00CN	1
14	Cassette assembly (middle/lower tray; 3x550-sheet feeder)	RM2-1231-000CN	2
15	Drawer upper cable assembly (3x550-sheet feeder)	RM2-9286-000CN	1

## Parts and diagrams: HCI

### HCI covers

Figure 2-16 HCI covers


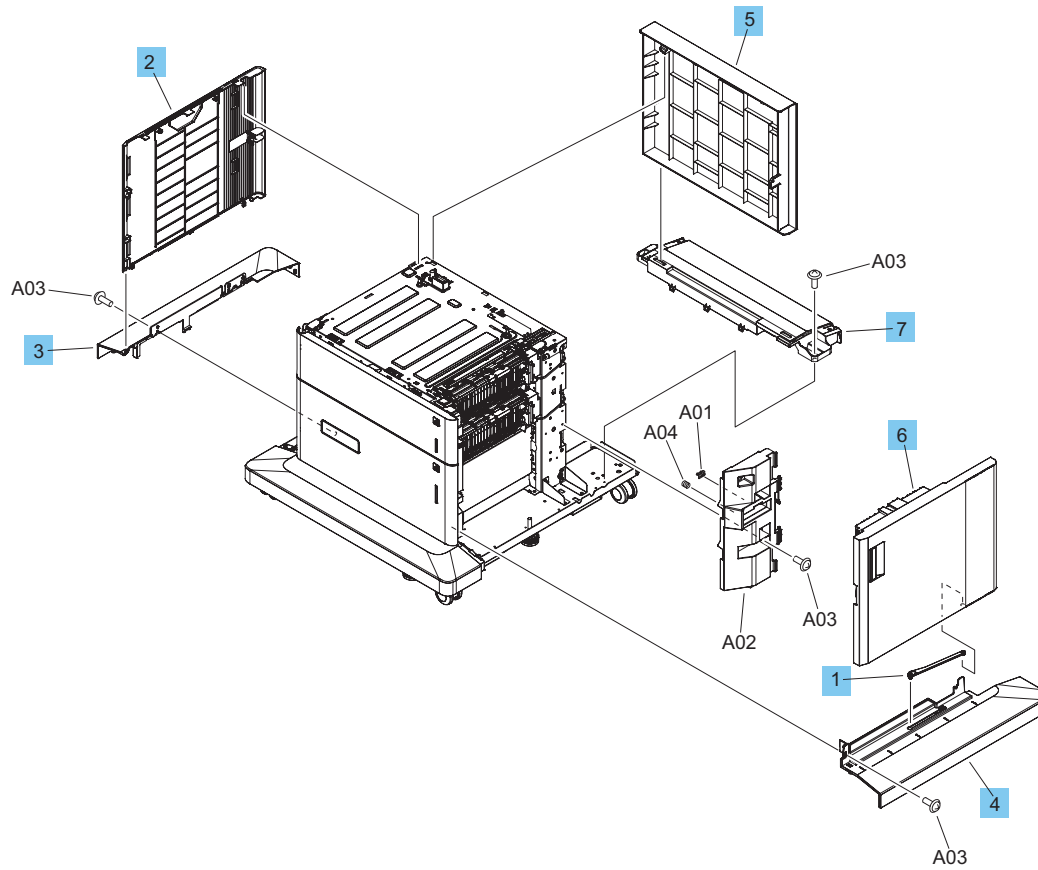


Table 2-16 HCl covers

Ref	Description	Part number	Qty
1	Link, door (HCl)	RC4-9824-000CN	1
2	Cover, left (HCl)	RC5-0387-000CN	1
3	Cover, left lower (HCl)	RC5-0385-000CN	1
4	Cover, right lower (HCl)	RC5-0384-000CN	1
5	Cover, rear (HCl)	RC5-0386-000CN	1
6	Right door assembly (HCl)	RM2-1218-000CN	1
7	Cover, rear lower (HCl)	RC5-0399-000CN	1

# HCI main body

Figure 2-17 HCI main body

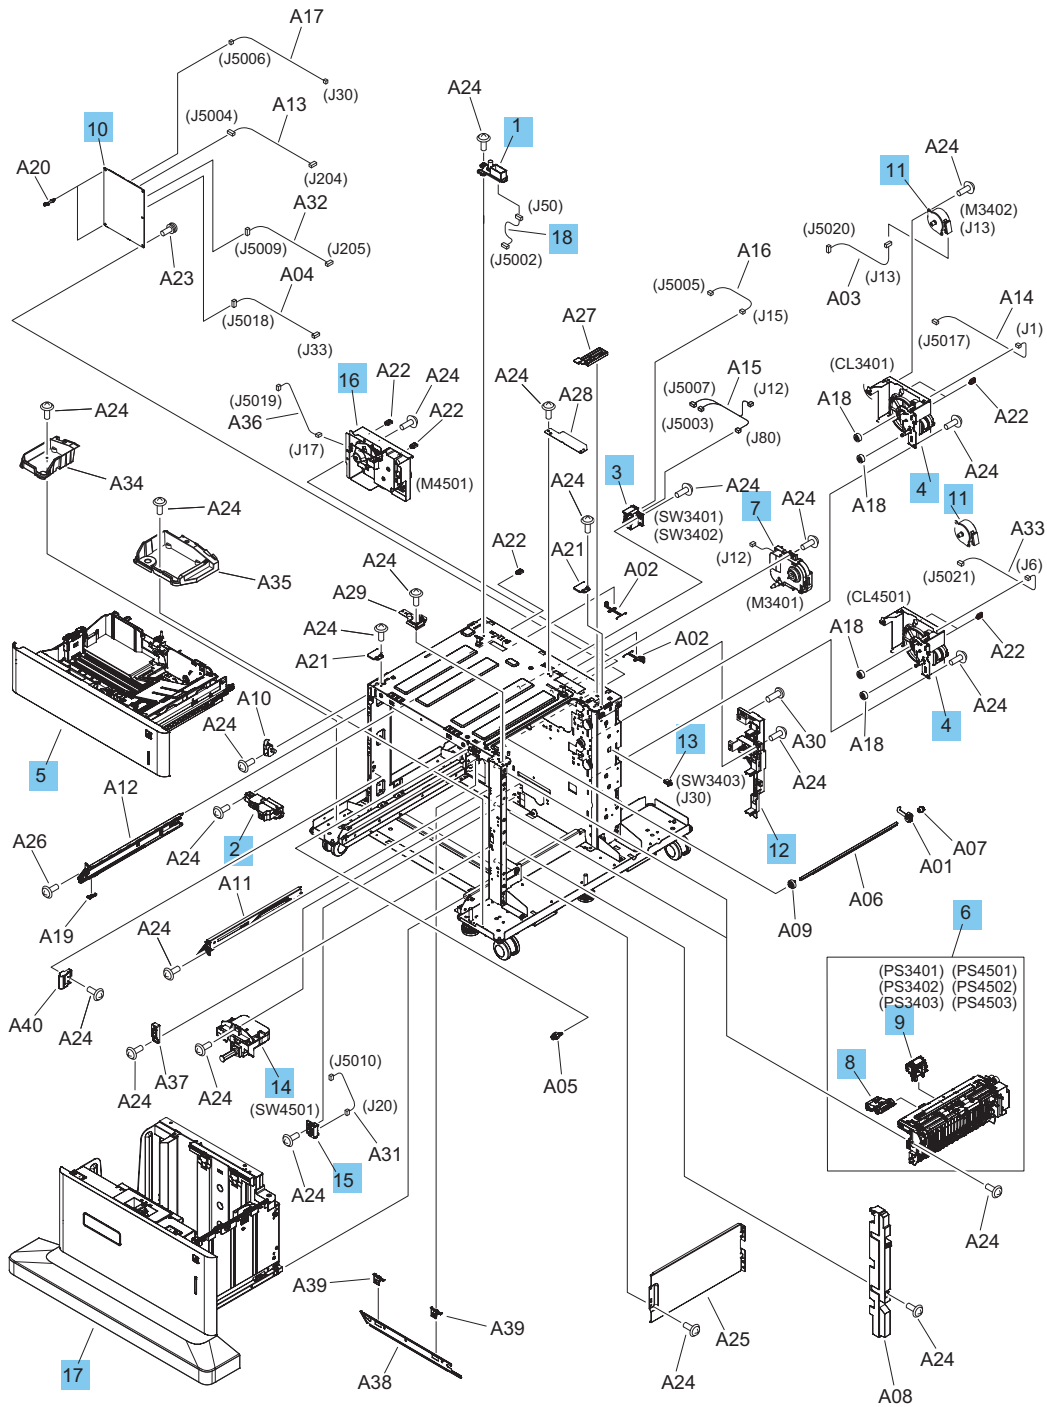

**Table 2-17 HCI main body**


Ref	Description	Part number	Qty
1	Holder, drawer connector (HCI)	RC4-8914-000CN	1
2	Auto close assembly (HCI)	RM2-0856-000CN	1
3	Size sensor assembly (HCI)	RM2-0857-000CN	1
4	Drive assembly (HCI)	RM2-1222-000CN	2
5	Cassette assembly (tray; HCI)	RM2-1219-000CN	1
6	Paper pick-up assembly (HCI)	RM2-1235-000CN	2
7	Lifter drive assembly (HCI)	RM2-2091-000CN	1
8	Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	2
9	Separation roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	2
10	Paper deck cont. PCA (HCI)	RM2-8481-000CN	1
11	Motor, stepping (HCI)	RK2-7831-000CN	1
12	Estrangement holder assembly (HCI)	RM2-1223-000CN	1
13	Switch, push (HCI)	WC2-5803-000CN	1
14	Tray auto close assembly (HCI)	RM2-0918-000CN	1
15	Size sensor assembly (HCI)	RM2-0921-000CN	1
16	Tray lifter motor drive assembly (HCI)	RM2-0915-000CN	1
17	Tray assembly (HCI)	RM2-1220-000CN	1
18	Drawer upper cable assembly (HCI)	RM2-9286-000CN	1

# Parts and diagrams: Stapler/stacker assembly (M681/M682/E67550/E67560/E67650/E67660 models only)

## Parts and diagrams: 2-bin stapler/stacker with offse

### Stapler/stacker covers

Figure 2-18 Stapler/stacker covers

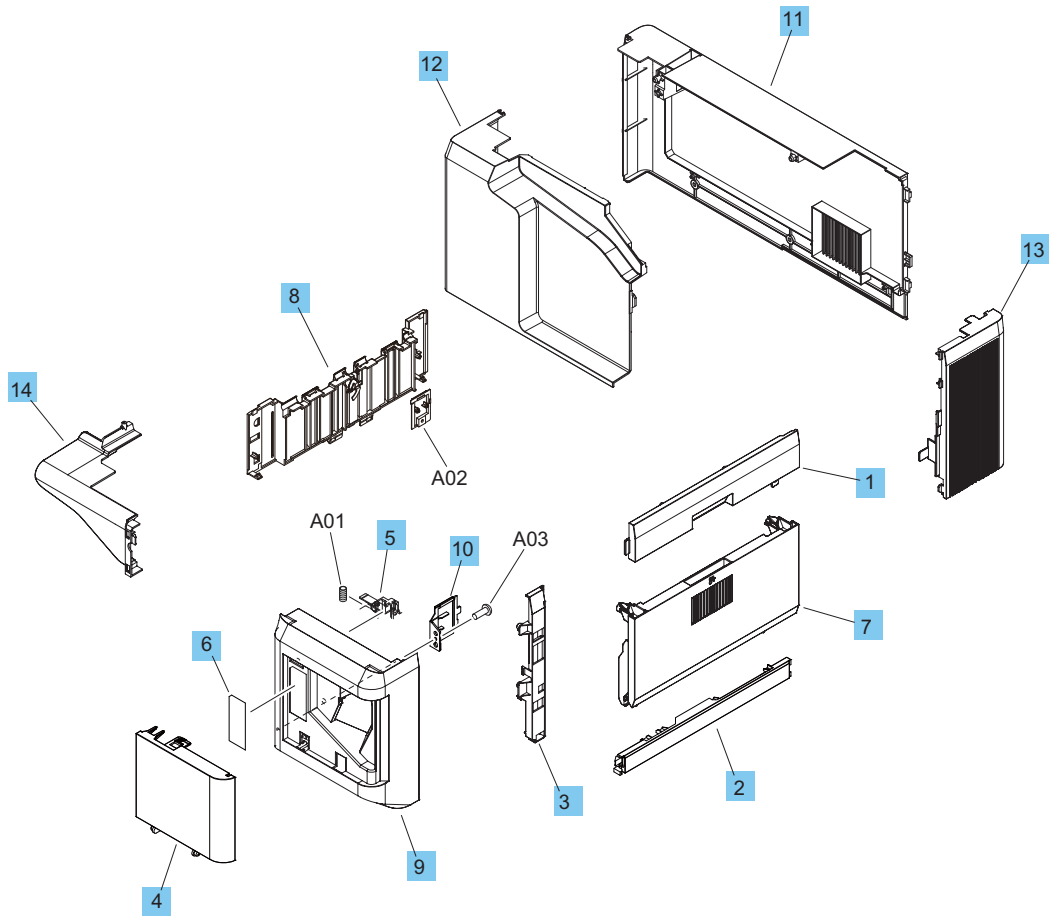




**Table 2-18 Stapler/stacker covers**

Ref	Description	Part number	Qty
1	Cover, right upper (stapler/stacker)	RC4-7409-000CN	1
2	Cover, right lower (stapler/stacker)	RC4-9439-000CN	1
3	Cover, staple rear (stapler/stacker)	RC4-7412-000CN	1
4	Door, staple (stapler/stacker)	RC4-9575-000CN	1
5	Arm, staple door lock (stapler/stacker)	RC4-9576-000CN	1
6	Label, staple exchange OPE. (stapler/stacker)	RU7-8831-000CN	1
7	Right door assembly (stapler/stacker)	RM2-6807-000CN	1
8	Stacking wall assembly (stapler/stacker)	RM2-1057-000CN	1
9	Cover, staple (stapler/stacker)	RC4-7405-000CN	1
10	Cover, right front (stapler/stacker)	RC4-9586-000CN	1
11	Cover, rear front (stapler/stacker)	RC4-7406-000CN	1
12	Cover, rear inner (stapler/stacker)	RC4-7407-000CN	1
13	Cover, rear corner (stapler/stacker)	RC4-7408-000CN	1
14	Cover, jogger (stapler/stacker)	RC4-7411-000CN	1

## Stapler/stacker main body

Figure 2-19 Stapler/stacker main body

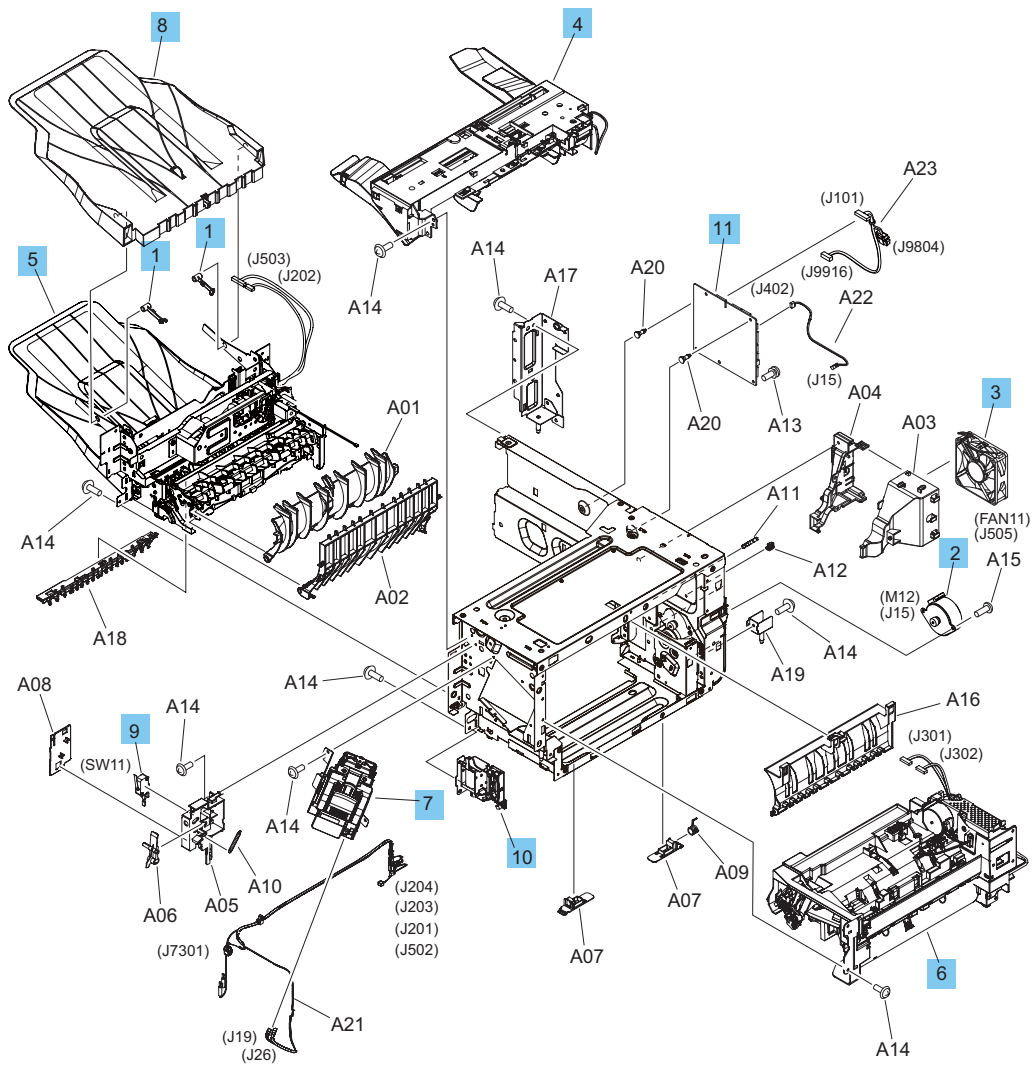

**Table 2-19 Stapler/stacker main body**

Ref	Description	Part number	Qty
1	Pin, tray fixe (stapler/stacker)	RC5-0353-000CN	2
2	Motor, stepping, DC (stapler/stacker)	RK2-8149-000CN	1
3	Fan (stapler/stacker)	RK2-8153-000CN	1
4	Jog assembly (stapler/stacker)	RM2-1066-000CN	1
5	Part not set up		
6	Upper paper feed assembly (stapler/stacker)	RM2-6810-000CN	1
7	Stapler assembly (stapler/stacker)	RM2-1193-000CN	1
8	Tray assembly (stapler/stacker)	RM2-1196-000CN	1
9	Microswitch (stapler/stacker)	WC4-5171-000CN	1
10	Solenoid assembly (stapler/stacker)	RM2-1040-000CN	1
11	Staple stacker PCA (stapler/stacker)	RM2-8689-000CN	1

# Alphabetical parts list

**Table 2-20 Alphabetical parts list**

Description	Part number	Table and page
ADF hinge kit	5851-7205	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Arm, staple door lock (stapler/stacker)	RC4-9576-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Auto close assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Auto close assembly (1x550-sheet feeder)	RM2-0856-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Auto close assembly (3x550-sheet feeder)	RM2-0856-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Auto close assembly (550-sheet feeder)	RM2-5147-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Auto close assembly (HCI)	RM2-0856-000CN	<a href="#">HCI main body on page 1693</a>
Cable, flexibl fla	RK2-7768-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Cable, flexibl fla	RK2-7776-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Cable, HDMI	J8A10-60113	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cable, HIP control panel	J8A10-60114	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cable, SCB-formatter HDMI	J8A10-60110	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cable, SCB-formatter power	J8A10-60110	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cable, sideband control panel	J8A10-60112	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cable, WU USB control panel	J8A10-60111	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cassette assembly (550-sheet feeder)	RM2-6935-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Cassette assembly (middle/lower tray; 3x550-sheet feeder)	RM2-1231-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Cassette assembly (Tray 2)	RM2-6618-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Cassette assembly (tray; 1x550-sheet feeder)	RM2-1219-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Cassette assembly (tray; HCI)	RM2-1219-000CN	<a href="#">HCI main body on page 1693</a>
Cassette assembly (upper tray; 3x550-sheet feeder)	RM2-1219-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Connector	VS1-7258-012CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Control panel assembly	RM2-6796-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Control panel kit, M681/M682/E67550/E67560/E67650/E67660	B5L47-67018	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cover, blanking	RC5-3356-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Cover, caster, left	RC5-0418-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, caster, right	RC5-0417-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, control panel	J8J63-60137	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cover, control panel back	RC4-8239-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Cover, front	RC4-6860-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, front lower	RC5-0383-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, front lower (1x550-sheet feeder)	RC5-0383-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, HIP	B5L46-40021	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cover, HIP	RC4-0213-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, jogger (stapler/stacker)	RC4-7411-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, left (1x550-sheet feeder)	RC5-0387-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, left (3x550-sheet feeder)	RC5-0387-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, left (550-sheet feeder)	RC4-7682-000CN	<a href="#">550-sheet paper feeder covers on page 1679</a>
Cover, left (HCI)	RC5-0387-000CN	<a href="#">HCI covers on page 1691</a>
Cover, left lower (1x550-sheet feeder)	RC5-0385-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, left lower (3x550-sheet feeder)	RC5-0385-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, left lower (HCI)	RC5-0385-000CN	<a href="#">HCI covers on page 1691</a>
Cover, left rear	RC4-6858-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Cover, left rear	RC4-6858-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, main	RC4-6861-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, output bin	RC4-6859-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, output bin (E65150/E65160/E67650/E67660)	RM2-1975-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, output bin, front	RC5-1842-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, rear	RC4-6862-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, rear (1x550-sheet feeder)	RC5-0386-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, rear (3x550-sheet feeder)	RC5-0386-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, rear (550-sheet feeder)	RC4-7683-000CN	<a href="#">550-sheet paper feeder covers on page 1679</a>
Cover, rear (HCI)	RC5-0386-000CN	<a href="#">HCI covers on page 1691</a>
Cover, rear corner (stapler/stacker)	RC4-7408-000CN	<a href="#">Stapler/stacker covers on page 1695</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, rear front (stapler/stacker)	RC4-7406-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, rear inner (stapler/stacker)	RC4-7407-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, rear lower	RC5-0399-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, rear lower (1x550-sheet feeder)	RC5-0399-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, rear lower (HCI)	RC5-0399-000CN	<a href="#">HCI covers on page 1691</a>
Cover, right	RC5-1843-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, right front (stapler/stacker)	RC4-9586-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, right lower (1x550-sheet feeder)	RC5-0384-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Cover, right lower (3x550-sheet feeder)	RC5-0384-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Cover, right lower (550-sheet feeder)	RC4-7684-000CN	<a href="#">550-sheet paper feeder covers on page 1679</a>
Cover, right lower (HCI)	RC5-0384-000CN	<a href="#">HCI covers on page 1691</a>
Cover, right lower (stapler/stacker)	RC4-9439-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, right rear	RC4-6425-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Cover, right rear	RC4-6425-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, right upper (stapler/stacker)	RC4-7409-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, staple (stapler/stacker)	RC4-7405-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, staple rear (stapler/stacker)	RC4-7412-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Cover, top	RC4-6429-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Cover, top	RC4-6865-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, Tray 1 roller	RC4-7318-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>



**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, Tray 1 roller	RC4-7318-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Cover, USB	RC4-9423-000	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Cover, USB	RC4-9423-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
DC controller PCA, E65150/E65160	RM3-7603-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
DC controller PCA, E67650/E67660	RM3-7606-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
DC controller PCA, M652/M653	RM3-7030-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
DC controller PCA, M681/M682	RM3-7031-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Density detect assembly	RM2-7160-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Document feeder (Flow models) kit; includes white backing and retention clips	5851-7204	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Document feeder (non-Flow models) kit; includes white backing and retention clips	5851-7203	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Door assembly, right (550-sheet feeder)	RM2-6937-000CN	<a href="#">550-sheet paper feeder covers on page 1679</a>
Door, left	RL2-1500-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Door, left	RL2-1500-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Door, staple (stapler/stacker)	RC4-9575-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Door, stock (1x550-sheet feeder)	RC5-0405-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Drawer upper cable assembly (1x550-sheet feeder)	RM2-9286-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Drawer upper cable assembly (3x550-sheet feeder)	RM2-9286-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Drawer upper cable assembly (HCI)	RM2-9286-000CN	<a href="#">HCI main body on page 1693</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Drive assembly (1x550-sheet feeder)	RM2-1222-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Drive assembly (3x550-sheet feeder)	RM2-1222-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Drive assembly (550-sheet feeder)	RM2-6934-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Drive assembly (HCI)	RM2-1222-000CN	<a href="#">HCI main body on page 1693</a>
Drum motor assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Environmental sensor PCA assembly	RM2-8440-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Estrangement detect PCA assembly	RM2-7157-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Estrangement holder assembly (1x550-sheet feeder)	RM2-1223-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Estrangement holder assembly (3x550-sheet feeder)	RM2-1223-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Estrangement holder assembly (HCI)	RM2-1223-000CN	<a href="#">HCI main body on page 1693</a>
Fan	RK2-6124-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Fan	RK2-7949-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Fan	RK2-7951-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Fan	RK2-6124-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Fan	RK2-7953-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Fan (stapler/stacker)	RK2-8153-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Feed roller assembly	RM2-6684-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Feeder controller PCA (550-sheet feeder)	RM2-8491-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Formatter cover assembly	RM2-6657-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Formatter cover assembly	RM2-6657-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Formatter kit (E65150/E65160)	3GY03-67901	<a href="#">Internal components (6 of 6) on page 1677</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Formatter kit (E65150/E65160; India/China)	3GY03-67902	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (E67650/E67660)	3GY13-67901	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (E67650/E67660; India/China)	3GY31-67902	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (M652/M653)	J7Z98-60001	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (M652/M653; India/China)	J7Z98-67904	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (M681/M682)	J8A10-60001	<a href="#">Internal components (6 of 6) on page 1677</a>
Formatter kit (M681/M682; India/China)	J8A10-67902	<a href="#">Internal components (6 of 6) on page 1677</a>
Front door assembly	RM2-6658-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Front door assembly	RM2-6658-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Front door assembly (E65150/E65160/E67650/E67660)	RM2-1975-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Fuser assembly, 110-127V	RM2-1928-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Fuser assembly, 220-240V	RM2-1929-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Fuser drive assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Fuser motor drive assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Guide, NIP	RC5-1892-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Guide, NIP	RC5-1892-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Handle, rear	RC4-9410-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Holder, drawer connector	RC4-6497-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Holder, drawer connector (1x550-sheet feeder)	RC4-8914-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Holder, drawer connector (3x550-sheet feeder)	RC4-8914-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>

**Table 2-20 Alphabetical parts list (continued)**

Description	Part number	Table and page
Holder, drawer connector (550-sheet feeder)	RC4-6497-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Holder, drawer connector (HCI)	RC4-8914-000CN	<a href="#">HCI main body on page 1693</a>
Holder, drawer, upper (550-sheet feeder)	RC4-7680-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Image scanner kit; includes white backing and retention clips, keyboard cover, and rear cover	J8A10-67901	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Image Transfer Belt (ITB) (part of LaserJet Image Transfer and Roller Kit)	P1B93-67901	<a href="#">Internal components (3 of 6) on page 1671</a>
Jog assembly (stapler/stacker)	RM2-1066-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Keyboard overlay kit (ES, PT)	5851-6023	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard overlay kit (FR, IT, RU, DE, ES: UK Kybd)	5851-6019	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard overlay kit (FR-CN, ES-LA, ES: US Kybd)	5851-6020	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard overlay kit (FR-SW, DE-SW, DA: UK Kybd)	5851-6021	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard overlay kit (JA-KG, JA-KT)	5851-6024	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard overlay kit (ZHTW, ZHCN)	5851-6022	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard UK (Flow models)	B5L47-67020	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Keyboard US (Flow models)	B5L47-67019	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Kit-Fixed Tray Guide	3GY25-67901	<a href="#">Internal components (4 of 6) on page 1673</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Kit-PEFS	3GY32-67901	<a href="#">Internal components (6 of 6) on page 1677</a>
Label, staple exchange OPE. (stapler/stacker)	RU7-8831-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Laser scanner assembly	RM2-1237-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
LaserJet ADF roller kit	5851-7202	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
LaserJet ADF white backing, A4, kit	5851-7202	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Left handle assembly	RM2-1958-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Left handle assembly	RM2-1958-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Lifter drive assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Lifter drive assembly (1x550-sheet feeder)	RM2-2091-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Lifter drive assembly (3x550-sheet feeder)	RM2-2091-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Lifter drive assembly (550-sheet feeder)	RM2-6933-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Lifter drive assembly (HCI)	RM2-2091-000CN	<a href="#">HCI main body on page 1693</a>
Link, door (1x550-sheet feeder)	RC4-9824-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Link, door (1x550-sheet feeder)	RC4-1778-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Link, door (3x550-sheet feeder)	RC4-9824-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Link, door (HCI)	RC4-9824-000CN	<a href="#">HCI covers on page 1691</a>
Link, door, right (550-sheet feeder)	RC4-1778-000CN	<a href="#">550-sheet paper feeder covers on page 1679</a>
Lower high voltage power supply PCA	RM3-7006-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Main drive assembly	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Memory PCA	RM2-7138-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Microswitch	RM2-6545-000CN	<a href="#">Internal components (2 of 6) on page 1669</a>
Microswitch (stapler/stacker)	WC4-5171-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Motor, stepping	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Motor, stepping	CN	<a href="#">Internal components (5 of 6) on page 1675</a>
Motor, stepping (1x550-sheet feeder)	RK2-7831-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Motor, stepping (3x550-sheet feeder)	RK2-7831-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Motor, stepping (HCI)	RK2-7831-000CN	<a href="#">HCI main body on page 1693</a>
Motor, stepping, DC (stapler/stacker)	RK2-8149-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Option lower cable assembly (550-sheet feeder)	RM2-8881-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Option upper cable assembly (550-sheet feeder)	RM2-8880-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Output bin assembly	RM2-1953-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Output bin assembly	RM2-1953-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Paper deck cont. PCA	RM2-8482-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Paper deck cont. PCA (3x550-sheet feeder)	RM2-8483-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Paper deck cont. PCA (HCI)	RM2-8481-000CN	<a href="#">HCI main body on page 1693</a>
Paper delivery assembly	RM2-6621-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Paper feed assembly (550-sheet feeder)	RM2-5145-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Paper pick-up assembly	RM2-6556-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Paper pick-up assembly (1x550-sheet feeder)	RM2-1235-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Paper pick-up assembly (3x550-sheet feeder)	RM2-1235-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Paper pick-up assembly (550-sheet feeder)	RM2-5154-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Paper pick-up assembly (HCI)	RM2-1235-000CN	<a href="#">HCI main body on page 1693</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Paper pick-up roller assembly	RM2-6681-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Paper pick-up roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	J7Z98-67902	<a href="#">550-sheet paper feeder main body on page 1681</a>
Paper pickup roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">HCI main body on page 1693</a>
Part not set up		<a href="#">Stapler/stacker main body on page 1697</a>
Pin, tray fixe (stapler/stacker)	RC5-0353-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Power supply PCA, 110-127V	RM2-8421-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Power supply PCA, 220-240V	RM2-8422-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Power supply switch assembly	RM2-1947-000CN	<a href="#">Internal components (2 of 6) on page 1669</a>
Pre-exposure PCA assembly	RM3-7046-000CN	<a href="#">Internal components (2 of 6) on page 1669</a>
Pre-exposure PCA assembly	RM3-7047-000CN	<a href="#">Internal components (2 of 6) on page 1669</a>
Rear cover assembly	RM2-1951-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Rear cover assembly	RM2-1951-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Registration assembly	RM2-1957-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Right door assembly	RM2-6622-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Right door assembly	RM2-6622-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Right door assembly (1x550-sheet feeder)	RM2-1226-000CN	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
Right door assembly (3x550-sheet feeder)	RM2-1230-000CN	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
Right door assembly (HCI)	RM2-1218-000CN	<a href="#">HCI covers on page 1691</a>
Right door assembly (stapler/stacker)	RM2-6807-000CN	<a href="#">Stapler/stacker covers on page 1695</a>



**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Right handle assembly	RM2-6659-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Right handle assembly	RM2-6659-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Roller, pickup, Tray 1	RL2-0034-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Roller, pickup, Tray 1	RL2-0034-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Roller, separation, Tray 1	RL2-0079-000CN	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
Roller, separation, Tray 1	RL2-0079-000CN	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
Scan control board (Enterprise)	5851-7764	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Scan control board (Flow models)	J8A08-60103	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Scan control board (non-Flow models)	J8J63-60109	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
Secondary transfer assembly	RM2-6682-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Secondary transfer roller assembly (part of LaserJet Image Transfer and Roller Kit)	P1B93-67901	<a href="#">Internal components (4 of 6) on page 1673</a>
Separation roller assembly	RM2-0064-000CN	<a href="#">Internal components (4 of 6) on page 1673</a>
Separation roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Separation roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	J7Z98-67902	<a href="#">550-sheet paper feeder main body on page 1681</a>
Separation roller assembly (HCl; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Separation roller assembly (HCl; part of LaserJet Tray 2-5 Roller Kit)	J7Z98-67902	<a href="#">HCl main body on page 1693</a>
Size sensor assembly (1x550-sheet feeder)	RM2-0857-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Size sensor assembly (3x550-sheet feeder)	RM2-0857-000CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>

**Table 2-20** Alphabetical parts list (continued)

Description	Part number	Table and page
Size sensor assembly (HCI)	RM2-0857-000CN	<a href="#">HCI main body on page 1693</a>
Size sensor assembly (HCI)	RM2-0921-000CN	<a href="#">HCI main body on page 1693</a>
Solenoid assembly (stapler/stacker)	RM2-1040-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Stacking wall assembly (stapler/stacker)	RM2-1057-000CN	<a href="#">Stapler/stacker covers on page 1695</a>
Staple stacker PCA (stapler/stacker)	RM2-8689-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Stapler assembly (stapler/stacker)	RM2-1193-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Switch, push (1x550-sheet feeder)	WC2-5803-000CN	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
Switch, push (3x550-sheet feeder)	WC2-5803-00CN	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
Switch, push (550-sheet feeder)	WC2-5762-000CN	<a href="#">550-sheet paper feeder main body on page 1681</a>
Switch, push (HCI)	WC2-5803-000CN	<a href="#">HCI main body on page 1693</a>
Toner carry assembly	RM2-6620-000CN	<a href="#">Internal components (1 of 6) on page 1667</a>
Toner collection unit	RM2-6613-000CN	<a href="#">Internal components (3 of 6) on page 1671</a>
Tray assembly (HCI)	RM2-1220-000CN	<a href="#">HCI main body on page 1693</a>
Tray assembly (stapler/stacker)	RM2-1196-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
Tray auto close assembly (HCI)	RM2-0918-000CN	<a href="#">HCI main body on page 1693</a>
Tray lifter motor drive assembly (HCI)	RM2-0915-000CN	<a href="#">HCI main body on page 1693</a>
Upper high voltage power supply PCA	RM2-8424-000CN	<a href="#">Internal components (6 of 6) on page 1677</a>
Upper paper feed assembly (stapler/stacker)	RM2-6810-000CN	<a href="#">Stapler/stacker main body on page 1697</a>
White backing retention clip kit	5851-7207	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>

# Numerical parts list

**Table 2-21 Numerical parts list**

Part number	Description	Table and page
	Part not set up	<a href="#">Stapler/stacker main body on page 1697</a>
3GY03-67901	Formatter kit (E65150/E65160)	<a href="#">Internal components (6 of 6) on page 1677</a>
3GY03-67902	Formatter kit (E65150/E65160; India/China)	<a href="#">Internal components (6 of 6) on page 1677</a>
3GY13-67901	Formatter kit (E67650/E67660)	<a href="#">Internal components (6 of 6) on page 1677</a>
3GY25-67901	Kit-Fixed Tray Guide	<a href="#">Internal components (4 of 6) on page 1673</a>
3GY31-67902	Formatter kit (E67650/E67660; India/China)	<a href="#">Internal components (6 of 6) on page 1677</a>
3GY32-67901	Kit-PEFS	<a href="#">Internal components (6 of 6) on page 1677</a>
5851-6019	Keyboard overlay kit (FR, IT, RU, DE, ES: UK Kybd)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-6020	Keyboard overlay kit (FR-CN, ES-LA, ES: US Kybd)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-6021	Keyboard overlay kit (FR-SW, DE-SW, DA: UK Kybd)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-6022	Keyboard overlay kit (ZHTW, ZHCN)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-6023	Keyboard overlay kit (ES, PT)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-6024	Keyboard overlay kit (JA-KG, JA-KT)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7202	LaserJet ADF roller kit	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7202	LaserJet ADF white backing, A4, kit	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
5851-7203	Document feeder (non-Flow models) kit; includes white backing and retention clips	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7204	Document feeder (Flow models) kit; includes white backing and retention clips	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7205	ADF hinge kit	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7207	White backing retention clip kit	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
5851-7764	Scan control board (Enterprise)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
B5L46-40021	Cover, HIP	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
B5L47-67018	Control panel kit, M681/M682/E67550/E67560/E67650/E67660	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
B5L47-67019	Keyboard US (Flow models)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
B5L47-67020	Keyboard UK (Flow models)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
CN	Motor, stepping	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Motor, stepping	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Main drive assembly	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Fuser drive assembly	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Fuser motor drive assembly	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Drum motor assembly	<a href="#">Internal components (5 of 6) on page 1675</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
CN	Auto close assembly	<a href="#">Internal components (5 of 6) on page 1675</a>
CN	Lifter drive assembly	<a href="#">Internal components (5 of 6) on page 1675</a>
J7Z98-60001	Formatter kit (M652/M653)	<a href="#">Internal components (6 of 6) on page 1677</a>
J7Z98-67902	Paper pick-up roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	<a href="#">550-sheet paper feeder main body on page 1681</a>
J7Z98-67902	Separation roller assembly (550-sheet feeder; part of LaserJet Trays 2-5 Roller Kit)	<a href="#">550-sheet paper feeder main body on page 1681</a>
J7Z98-67902	Paper pickup roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
J7Z98-67902	Separation roller assembly (1x550-sheet feeder; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
J7Z98-67902	Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
J7Z98-67902	Separation roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
J7Z98-67902	Paper pickup roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">HCI main body on page 1693</a>
J7Z98-67902	Separation roller assembly (HCI; part of LaserJet Tray 2-5 Roller Kit)	<a href="#">HCI main body on page 1693</a>
J7Z98-67904	Formatter kit (M652/M653; India/China)	<a href="#">Internal components (6 of 6) on page 1677</a>
J8A08-60103	Scan control board (Flow models)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-60001	Formatter kit (M681/M682)	<a href="#">Internal components (6 of 6) on page 1677</a>
J8A10-60110	Cable, SCB-formatter power	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-60110	Cable, SCB-formatter HDMI	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-60111	Cable, WU USB control panel	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-60112	Cable, sideband control panel	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>

**Table 2–21 Numerical parts list (continued)**

Part number	Description	Table and page
J8A10-60113	Cable, HDMI	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-60114	Cable, HIP control panel	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-67901	Image scanner kit; includes white backing and retention clips, keyboard cover, and rear cover	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8A10-67902	Formatter kit (M681/M682; India/China)	<a href="#">Internal components (6 of 6) on page 1677</a>
J8J63-60109	Scan control board (non-Flow models)	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
J8J63-60137	Cover, control panel	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
P1B93-67901	Image Transfer Belt (ITB) (part of LaserJet Image Transfer and Roller Kit)	<a href="#">Internal components (3 of 6) on page 1671</a>
P1B93-67901	Secondary transfer roller assembly (part of LaserJet Image Transfer and Roller Kit)	<a href="#">Internal components (4 of 6) on page 1673</a>
RC4-0213-000CN	Cover, HIP	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-1778-000CN	Link, door, right (550-sheet feeder)	<a href="#">550-sheet paper feeder covers on page 1679</a>
RC4-1778-000CN	Link, door (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC4-6425-000CN	Cover, right rear	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-6425-000CN	Cover, right rear	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6429-000CN	Cover, top	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-6497-000CN	Holder, drawer connector	<a href="#">Internal components (6 of 6) on page 1677</a>
RC4-6497-000CN	Holder, drawer connector (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RC4-6858-000CN	Cover, left rear	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-6858-000CN	Cover, left rear	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6859-000CN	Cover, output bin	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6860-000CN	Cover, front	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6861-000CN	Cover, main	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6862-000CN	Cover, rear	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-6865-000CN	Cover, top	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-7318-000CN	Cover, Tray 1 roller	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-7318-000CN	Cover, Tray 1 roller	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC4-7405-000CN	Cover, staple (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7406-000CN	Cover, rear front (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7407-000CN	Cover, rear inner (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7408-000CN	Cover, rear corner (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7409-000CN	Cover, right upper (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7411-000CN	Cover, jogger (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7412-000CN	Cover, staple rear (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-7680-000CN	Holder, drawer, upper (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RC4-7682-000CN	Cover, left (550-sheet feeder)	<a href="#">550-sheet paper feeder covers on page 1679</a>



**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RC4-7683-000CN	Cover, rear (550-sheet feeder)	<a href="#">550-sheet paper feeder covers on page 1679</a>
RC4-7684-000CN	Cover, right lower (550-sheet feeder)	<a href="#">550-sheet paper feeder covers on page 1679</a>
RC4-8239-000CN	Cover, control panel back	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-8914-000CN	Holder, drawer connector (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RC4-8914-000CN	Holder, drawer connector (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RC4-8914-000CN	Holder, drawer connector (HCI)	<a href="#">HCI main body on page 1693</a>
RC4-9410-000CN	Handle, rear	<a href="#">Internal components (6 of 6) on page 1677</a>
RC4-9423-000	Cover, USB	<a href="#">Document feeder and scanner whole units (M681/M682/E67550/E67560/E67650/E67660 only) on page 1661</a>
RC4-9423-000CN	Cover, USB	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC4-9439-000CN	Cover, right lower (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-9575-000CN	Door, staple (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-9576-000CN	Arm, staple door lock (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-9586-000CN	Cover, right front (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RC4-9824-000CN	Link, door (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC4-9824-000CN	Link, door (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC4-9824-000CN	Link, door (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0353-000CN	Pin, tray fixe (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RC5-0383-000CN	Cover, front lower (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0383-000CN	Cover, front lower	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0384-000CN	Cover, right lower (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0384-000CN	Cover, right lower (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RC5-0384-000CN	Cover, right lower (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0385-000CN	Cover, left lower (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0385-000CN	Cover, left lower (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0385-000CN	Cover, left lower (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0386-000CN	Cover, rear (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0386-000CN	Cover, rear (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0386-000CN	Cover, rear (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0387-000CN	Cover, left (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0387-000CN	Cover, left (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0387-000CN	Cover, left (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0399-000CN	Cover, rear lower (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0399-000CN	Cover, rear lower	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0399-000CN	Cover, rear lower (HCI)	<a href="#">HCI covers on page 1691</a>
RC5-0405-000CN	Door, stock (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>
RC5-0417-000CN	Cover, caster, right	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-0418-000CN	Cover, caster, left	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RC5-1842-000CN	Cover, output bin, front	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC5-1843-000CN	Cover, right	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC5-1892-000CN	Guide, NIP	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RC5-1892-000CN	Guide, NIP	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RC5-3356-000CN	Cover, blanking	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RK2-6124-000CN	Fan	<a href="#">Internal components (3 of 6) on page 1671</a>
RK2-6124-000CN	Fan	<a href="#">Internal components (4 of 6) on page 1673</a>
RK2-7768-000CN	Cable, flexibl fla	<a href="#">Internal components (6 of 6) on page 1677</a>
RK2-7776-000CN	Cable, flexibl fla	<a href="#">Internal components (6 of 6) on page 1677</a>
RK2-7831-000CN	Motor, stepping (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RK2-7831-000CN	Motor, stepping (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RK2-7831-000CN	Motor, stepping (HCI)	<a href="#">HCI main body on page 1693</a>
RK2-7949-000CN	Fan	<a href="#">Internal components (3 of 6) on page 1671</a>
RK2-7951-000CN	Fan	<a href="#">Internal components (3 of 6) on page 1671</a>
RK2-7953-000CN	Fan	<a href="#">Internal components (6 of 6) on page 1677</a>
RK2-8149-000CN	Motor, stepping, DC (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RK2-8153-000CN	Fan (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RL2-0034-000CN	Roller, pickup, Tray 1	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RL2-0034-000CN	Roller, pickup, Tray 1	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RL2-0079-000CN	Roller, separation, Tray 1	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RL2-0079-000CN	Roller, separation, Tray 1	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RL2-1500-000CN	Door, left	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RL2-1500-000CN	Door, left	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-0064-000CN	Separation roller assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-0856-000CN	Auto close assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-0856-000CN	Auto close assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-0856-000CN	Auto close assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-0857-000CN	Size sensor assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-0857-000CN	Size sensor assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-0857-000CN	Size sensor assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-0915-000CN	Tray lifter motor drive assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-0918-000CN	Tray auto close assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-0921-000CN	Size sensor assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1040-000CN	Solenoid assembly (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-1057-000CN	Stacking wall assembly (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RM2-1066-000CN	Jog assembly (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-1193-000CN	Stapler assembly (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-1196-000CN	Tray assembly (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-1218-000CN	Right door assembly (HCI)	<a href="#">HCI covers on page 1691</a>
RM2-1219-000CN	Cassette assembly (tray; 1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-1219-000CN	Cassette assembly (upper tray; 3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-1219-000CN	Cassette assembly (tray; HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1220-000CN	Tray assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1222-000CN	Drive assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-1222-000CN	Drive assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-1222-000CN	Drive assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1223-000CN	Estrangement holder assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-1223-000CN	Estrangement holder assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-1223-000CN	Estrangement holder assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1226-000CN	Right door assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder covers on page 1683</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-1230-000CN	Right door assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder covers on page 1687</a>
RM2-1231-000CN	Cassette assembly (middle/lower tray; 3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-1235-000CN	Paper pick-up assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-1235-000CN	Paper pick-up assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-1235-000CN	Paper pick-up assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM2-1237-000CN	Laser scanner assembly	<a href="#">Internal components (3 of 6) on page 1671</a>
RM2-1928-000CN	Fuser assembly, 110-127V	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-1929-000CN	Fuser assembly, 220-240V	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-1947-000CN	Power supply switch assembly	<a href="#">Internal components (2 of 6) on page 1669</a>
RM2-1951-000CN	Rear cover assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-1951-000CN	Rear cover assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-1953-000CN	Output bin assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-1953-000CN	Output bin assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-1957-000CN	Registration assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-1958-000CN	Left handle assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-1958-000CN	Left handle assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-1975-000CN	Front door assembly (E65150/E65160/E67650/E67660)	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-1975-000CN	Cover, output bin (E65150/E65160/E67650/E67660)	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-2091-000CN	Lifter drive assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-2091-000CN	Lifter drive assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-2091-000CN	Lifter drive assembly (HCl)	<a href="#">HCl main body on page 1693</a>
RM2-5145-000CN	Paper feed assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-5147-000CN	Auto close assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-5154-000CN	Paper pick-up assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-6545-000CN	Microswitch	<a href="#">Internal components (2 of 6) on page 1669</a>
RM2-6556-000CN	Paper pick-up assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6613-000CN	Toner collection unit	<a href="#">Internal components (3 of 6) on page 1671</a>
RM2-6618-000CN	Cassette assembly (Tray 2)	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6620-000CN	Toner carry assembly	<a href="#">Internal components (1 of 6) on page 1667</a>
RM2-6621-000CN	Paper delivery assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6622-000CN	Right door assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-6622-000CN	Right door assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-6657-000CN	Formatter cover assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-6657-000CN	Formatter cover assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-6658-000CN	Front door assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-6658-000CN	Front door assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>
RM2-6659-000CN	Right handle assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-6659-000CN	Right handle assembly	<a href="#">Covers (M681/M682/E67550/E67560/E67650/E67660) on page 1665</a>

**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-6681-000CN	Paper pick-up roller assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6682-000CN	Secondary transfer assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6684-000CN	Feed roller assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-6796-000CN	Control panel assembly	<a href="#">Covers (M652/M653/E65050/E65060/E65150/E65160) on page 1663</a>
RM2-6807-000CN	Right door assembly (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
RM2-6810-000CN	Upper paper feed assembly (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-6933-000CN	Lifter drive assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-6934-000CN	Drive assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-6935-000CN	Cassette assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-6937-000CN	Door assembly, right (550-sheet feeder)	<a href="#">550-sheet paper feeder covers on page 1679</a>
RM2-7138-000CN	Memory PCA	<a href="#">Internal components (6 of 6) on page 1677</a>
RM2-7157-000CN	Estrangement detect PCA assembly	<a href="#">Internal components (3 of 6) on page 1671</a>
RM2-7160-000CN	Density detect assembly	<a href="#">Internal components (4 of 6) on page 1673</a>
RM2-8421-000CN	Power supply PCA, 110-127V	<a href="#">Internal components (6 of 6) on page 1677</a>
RM2-8422-000CN	Power supply PCA, 220-240V	<a href="#">Internal components (6 of 6) on page 1677</a>
RM2-8424-000CN	Upper high voltage power supply PCA	<a href="#">Internal components (6 of 6) on page 1677</a>
RM2-8440-000CN	Environmental sensor PCA assembly	<a href="#">Internal components (3 of 6) on page 1671</a>
RM2-8481-000CN	Paper deck cont. PCA (HCl)	<a href="#">HCl main body on page 1693</a>
RM2-8482-000CN	Paper deck cont. PCA	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-8483-000CN	Paper deck cont. PCA (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-8491-000CN	Feeder controller PCA (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>



**Table 2-21 Numerical parts list (continued)**

Part number	Description	Table and page
RM2-8689-000CN	Staple stacker PCA (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>
RM2-8880-000CN	Option upper cable assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-8881-000CN	Option lower cable assembly (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
RM2-9286-000CN	Drawer upper cable assembly (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
RM2-9286-000CN	Drawer upper cable assembly (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
RM2-9286-000CN	Drawer upper cable assembly (HCI)	<a href="#">HCI main body on page 1693</a>
RM3-7006-000CN	Lower high voltage power supply PCA	<a href="#">Internal components (6 of 6) on page 1677</a>
RM3-7030-000CN	DC controller PCA, M652/M653	<a href="#">Internal components (6 of 6) on page 1677</a>
RM3-7031-000CN	DC controller PCA, M681/M682	<a href="#">Internal components (6 of 6) on page 1677</a>
RM3-7046-000CN	Pre-exposure PCA assembly	<a href="#">Internal components (2 of 6) on page 1669</a>
RM3-7047-000CN	Pre-exposure PCA assembly	<a href="#">Internal components (2 of 6) on page 1669</a>
RM3-7603-000CN	DC controller PCA, E65150/E65160	<a href="#">Internal components (6 of 6) on page 1677</a>
RM3-7606-000CN	DC controller PCA, E67650/E67660	<a href="#">Internal components (6 of 6) on page 1677</a>
RU7-8831-000CN	Label, staple exchange OPE. (stapler/stacker)	<a href="#">Stapler/stacker covers on page 1695</a>
VS1-7258-012CN	Connector	<a href="#">Internal components (6 of 6) on page 1677</a>
WC2-5762-000CN	Switch, push (550-sheet feeder)	<a href="#">550-sheet paper feeder main body on page 1681</a>
WC2-5803-000CN	Switch, push (1x550-sheet feeder)	<a href="#">1x550-sheet paper feeder main body on page 1685</a>
WC2-5803-000CN	Switch, push (HCI)	<a href="#">HCI main body on page 1693</a>
WC2-5803-00CN	Switch, push (3x550-sheet feeder)	<a href="#">3x550-sheet paper feeder main body on page 1689</a>
WC4-5171-000CN	Microswitch (stapler/stacker)	<a href="#">Stapler/stacker main body on page 1697</a>



---

# A Revision history

- [Revision history](#)

# Revision history

Table A-1 Revision history

Revision number	Revision date	Revision notes
2	April 2019	<p>Added managed models.</p> <p>Updated the following procedures:</p> <ul style="list-style-type: none"><li>• <a href="#">Install accessory: Trusted platform module (TPM) on page 48</a></li></ul> <p>Added and updated part numbers in <a href="#">Parts and diagrams on page 1647</a>.</p> <p>Added "Revision history" section.</p>
1	May 2017	Repair manual initial release

# Index

## Symbols/Numerics

- 1x550-sheet feeder
  - parts lists and diagrams 1682
- 1x550-sheet paper feeder
  - removing and replacing 9
- 1x550-sheet paper feeder with stand
  - removing and replacing 14, 1392
- 2,550-sheet paper feeder with stand
  - removing and replacing 26, 1563
- 3-bin stapler/stacker (Flow M681z/  
Flow M682z/Flow E67660z)
  - removing and replacing 447
- 3x550-sheet feeder
  - parts lists and diagrams 1686
- 3x550-sheet paper feeder with stand
  - removing and replacing 19, 1470
- 500-sheet feeder
  - parts lists and diagrams 1678
- 550-sheet paper trays
  - part numbers 1649
- 550-sheet paper feeder
  - removing and replacing 1317

## A

- accessories
  - part numbers 1649
- after-service checklist 6
- auto-close assemblies (3x550-sheet  
paper feeder with stand)
  - removing and replacing 1521
- auto-close assembly (1x550-sheet  
paper feeder with stand)
  - removing and replacing 1443
- auto-close assembly (550-sheet  
paper feeder)
  - removing and replacing 1333
- auto-close assembly (Tray 3) (2,500-  
sheet paper feeder with stand)
  - removing and replacing 1609

- auto-close assembly (Tray 4) (2,500-  
sheet paper feeder with stand)
  - removing and replacing 1611

## B

- before-service checklist 6

## C

- caster covers (3x550-sheet paper  
feeder with stand)
  - removing and replacing 1471
- cautions iii
- Channel partners support
  - HP Channel Services Network  
(CSN) v, 2
- control panel (M681/M682/E67550/  
E67560/E67650/E67660)
  - removing and replacing 155
- control panels (M652/M653/E65050/  
E65060/E65150/E65160)
  - removing and replacing 113
- controller PCA (1x550-sheet paper  
feeder with stand)
  - removing and replacing 1467
- controller PCA (2,500-sheet paper  
feeder with stand)
  - removing and replacing 1644
- controller PCA (3-bin stapler/stacker)
  - removing and replacing 627
- controller PCA (3x550-sheet paper  
feeder with stand)
  - removing and replacing 1560
- conventions, document iii
- covers
  - parts lists and diagrams 1662
- covers (M652/M653/E65050/E65060/  
E65150/E65160)
  - part numbers 1662

- covers (M681/M682/E67550/E67560/  
E67650/E67660)
  - part numbers 1664

## D

- delivery assembly (M652/M653/  
E65050/E65060/E65150/E65160)
  - removing and replacing 1171
- delivery assembly (M681/M682/  
E67550/E67560/E67650/E67660)
  - removing and replacing 1187
- DIMM
  - removing and replacing 75
- document conventions iii
- document feeder and scanner whole  
units
  - parts lists and diagrams 1660
- document feeder rollers
  - removing and replacing 87
- document feeder separation roller  
cover
  - removing and replacing 95
- drawer connector holder and cable  
assembly (1x550-sheet paper  
feeder with stand)
  - removing and replacing 1438
- drawer connector holder and cable  
assembly (2,500-sheet paper feeder  
with stand)
  - removing and replacing 1604
- drawer connector holder and cable  
assembly (3x550-sheet paper  
feeder with stand)
  - removing and replacing 1516
- drive assemblies (Trays 3 and 5)  
(3x550-sheet paper feeder with  
stand)
  - removing and replacing 1532

drive assembly (1x550-sheet paper feeder with stand)  
removing and replacing 1452

drive assembly (550-sheet paper feeder)  
removing and replacing 1336

drive assembly (Tray 3) (2,500-sheet paper feeder with stand)  
removing and replacing 1623

drive assembly (Tray 4) (2,500-sheet paper feeder with stand)  
removing and replacing 1627

drive assembly (Tray 4) (3x550-sheet paper feeder with stand)  
removing and replacing 1537

dual in-line memory module  
removing and replacing 75

**E**

electrostatic discharge (ESD) 4

embedded MultiMedia Card  
removing and replacing 64

eMMC  
removing and replacing 64

ESD electrostatic discharge (ESD) 4

estrangement detect PCA  
removing and replacing 770

**F**

face-down cover (M681dn/M681f/M682dn/Flow M681f/E67650dh)  
removing and replacing 276

face-down front cover (M681dn/M681f/M682dn/Flow M681f/E67650dh)  
removing and replacing 201

fan (3-bin stapler/stacker)  
removing and replacing 573

fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z)  
removing and replacing 83

feed motor (1x550-sheet paper feeder with stand)  
removing and replacing 1449

feed motor (3-bin stapler/stacker)  
removing and replacing 622

feed motors (2,500-sheet paper feeder with stand)  
removing and replacing 1620

feed motors (3x550-sheet paper feeder with stand)  
removing and replacing 1528

field-replaceabl units (FRUs)  
replacing 3

Foreign interface harness (FIH)  
removing and replacing 58

formatter  
removing and replacing 642

formatter cover  
removing and replacing 199

front door  
removing and replacing 321

front door (1x550-sheet paper feeder with stand)  
removing and replacing 1404

front lower cover (1x550-sheet paper feeder with stand)  
removing and replacing 1422

front lower cover (3x550-sheet paper feeder with stand)  
removing and replacing 1500

FRUs (field-replaceabl units)  
replacing 3

fuser  
removing and replacing 120

**H**

hard disk drive  
removing and replacing 69

hard drive  
part number 1649

HCI  
parts lists and diagrams 1690

HDD  
removing and replacing 69

history, revision 1725

HP Channel Services Network (CSN)  
Channel partners support v, 2

**I**

image scanner assembly  
removing and replacing 418

installation 5  
screws 5  
*See also* replacing parts

intermediate transfer belt (ITB)  
removing and replacing 105

internal components, product  
parts lists and diagrams 1666

internal USB ports  
removing and replacing 53

ITB  
removing and replacing 105

**J**

Jetdirect USB wireless print server  
removing and replacing 35

Jetdirect USB wireless print server with NFC  
removing and replacing 42

jogger (3-bin stapler/stacker)  
removing and replacing 539

jogger cover (3-bin stapler/stacker)  
removing and replacing 504

**K**

keyboard (Flow M681z/Flow M682z/Flow E67660z)  
removing and replacing 141

keyboard overlay (Flow M681z/Flow M682z/Flow E67660z)  
removing and replacing 150

**L**

laser scanner  
removing and replacing 963  
warnings for servicing 3

left cover (1x550-sheet paper feeder with stand)  
removing and replacing 1393

left cover (2,500-sheet paper feeder with stand)  
removing and replacing 1564

left cover (3x550-sheet paper feeder with stand)  
removing and replacing 1474

left cover (550-sheet paper feeder)  
removing and replacing 1326

left door  
removing and replacing 332

left handle  
removing and replacing 398

left lower cover (1x550-sheet paper feeder with stand)  
removing and replacing 1406

left lower cover (2,500-sheet paper feeder with stand)  
removing and replacing 1575

- left lower cover (3x550-sheet paper feeder with stand)
  - removing and replacing 1485
- left rear cover
  - removing and replacing 343
- left upper front and left upper rear fans
  - removing and replacing 682
- lifter drive assemblies (Trays 3 and 4) (3x550-sheet paper feeder with stand)
  - removing and replacing 1548
- lifter drive assembly (1x550-sheet paper feeder with stand)
  - removing and replacing 1461
- lifter drive assembly (2,500-sheet paper feeder with stand)
  - removing and replacing 1637
- lifter drive assembly (550-sheet paper feeder)
  - removing and replacing 1343
- lifter drive assembly (Tray 5) (3x550-sheet paper feeder with stand)
  - removing and replacing 1555
- lower drawer holder cable assembly(550-sheet paper feeder)
  - removing and replacing 1387
- lower feed assembly (3-bin stapler/stacker)
  - removing and replacing 577
- M**
- main cover (M681dn/M681/M682dn/Flow M681f/E67650dh)
  - removing and replacing 300
- microswitch (3-bin stapler/stacker)
  - removing and replacing 609
- N**
- NFC accessory
  - part number 1649
- notes iii
- O**
- output bin
  - removing and replacing 346
- P**
- paper feed assembly (550-sheet paper feeder)
  - removing and replacing 1352
- paper feeder controller PCA (550-sheet paper feeder)
  - removing and replacing 1375
- paper pickup assemblies (2,500-sheet paper feeder with stand)
  - removing and replacing 1613
- paper pickup assemblies (3x550-sheet paper feeder with stand)
  - removing and replacing 1524
- paper pickup assembly (1x550-sheet paper feeder with stand)
  - removing and replacing 1445
- paper pickup assembly (550-sheet paper feeder)
  - removing and replacing 1363
- paper trays
  - part numbers 1649
- part numbers
  - accessories 1649
  - covers (M652/M653/E65050/E65060/E65150/E65160) 1662
  - covers (M681/M682/E67550/E67560/E67650/E67660) 1664
  - replacement parts 1651
  - supplies 1651
  - toner cartridges 1651
- parts lists and diagrams 1647
- 1x550-sheet feeder 1682
- 3x550-sheet feeder 1686
- 500-sheet feeder 1678
- covers 1662
- document feeder and scanner whole units 1660
- HCI 1690
- internal components, product 1666
- stapler/stacker 1694
- using 1659
- pickup alienation holder (1x550-sheet paper feeder with stand)
  - removing and replacing 1456
- pickup alienation holder (2,500-sheet paper feeder with stand)
  - removing and replacing 1631
- pickup alienation holder (3x550-sheet paper feeder with stand)
  - removing and replacing 1541
- pre-exposure PCA assembly (black)
  - removing and replacing 649
- pre-exposure PCA assembly (cyan, magenta, or yellow)
  - removing and replacing 660
- R**
- rear cover
  - removing and replacing 383
- rear cover (1x550-sheet paper feeder with stand)
  - removing and replacing 1401
- rear cover (2,500-sheet paper feeder with stand)
  - removing and replacing 1572
- rear cover (3-bin stapler/stacker)
  - removing and replacing 469
- rear cover (3x550-sheet paper feeder with stand)
  - removing and replacing 1482
- rear cover (550-sheet paper feeder)
  - removing and replacing 1324
- rear inner cover (3-bin stapler/stacker)
  - removing and replacing 496
- rear lower cover (1x550-sheet paper feeder with stand)
  - removing and replacing 1415
- rear lower cover (2,500-sheet paper feeder with stand)
  - removing and replacing 1584
- rear lower cover (3x550-sheet paper feeder with stand)
  - removing and replacing 1493
- rear upper cover (M681dn/M681/M682dn/Flow M681f/E67650dh)
  - removing and replacing 297
- removal orientation
  - removing orientation 7
- removal strategy
  - removing and replacing 3
- removing and replacing
  - 1x550-sheet paper feeder 9
  - 1x550-sheet paper feeder with stand 14, 1392
  - 2,550-sheet paper feeder with stand 26, 1563
  - 3-bin stapler/stacker (Flow M681z/Flow M682z/Flow E67660z) 447



3x550-sheet paper feeder with stand 19, 1470  
 550-sheet paper feeder 1317  
 auto-close assemblies (3x550-sheet paper feeder with stand) 1521  
 auto-close assembly (1x550-sheet paper feeder with stand) 1443  
 auto-close assembly (550-sheet paper feeder) 1333  
 auto-close assembly (Tray 3) (2,500-sheet paper feeder with stand) 1609  
 auto-close assembly (Tray 4) (2,500-sheet paper feeder with stand) 1611  
 cartridge fan 818  
 caster covers (3x550-sheet paper feeder with stand) 1471  
 control panel (M681/M682/E67550/E67560/E67650/E67660) 155  
 control panels (M652/M653/E65050/E65060/E65150/E65160) 113  
 controller PCA (1x550-sheet paper feeder with stand) 1467  
 controller PCA (2,500-sheet paper feeder with stand) 1644  
 controller PCA (3-bin stapler/stacker) 627  
 controller PCA (3x550-sheet paper feeder with stand) 1560  
 DC controller PCA 842  
 delivery assembly (M652/M653/E65050/E65060/E65150/E65160) 1171  
 delivery assembly (M681/M682/E67550/E67560/E67650/E67660) 1187  
 developer alienation motor 1159  
 DIMM 75  
 document feeder 405  
 document feeder hinges 411  
 document feeder rollers 87  
 document feeder separation roller cover 95  
 drawer connector and holder 1301  
 drawer connector holder and cable assembly (1x550-sheet paper feeder with stand) 1438  
 drawer connector holder and cable assembly (2,500-sheet paper feeder with stand) 1604  
 drawer connector holder and cable assembly (3x550-sheet paper feeder with stand) 1516  
 drive assemblies (Trays 3 and 5) (3x550-sheet paper feeder with stand) 1532  
 drive assembly (1x550-sheet paper feeder with stand) 1452  
 drive assembly (550-sheet paper feeder) 1336  
 drive assembly (Tray 3) (2,500-sheet paper feeder with stand) 1623  
 drive assembly (Tray 4) (2,500-sheet paper feeder with stand) 1627  
 drive assembly (Tray 4) (3x550-sheet paper feeder with stand) 1537  
 drum motor 1 969  
 drum motor 2 1016  
 drum motor 3 1027  
 dual in-line memory module 75  
 embedded MultiMedia Card 64  
 eMMC 64  
 environmental sensor PCA 811  
 estrangement detect PCA 770  
 face-down cover (M681dn/M681/M682dn/Flow M681f/E67650dh) 276  
 face-down front cover (M681dn/M681/M682dn/Flow M681f/E67650dh) 201  
 fan (3-bin stapler/stacker) 573  
 fax PCA (M681f/Flow M681f/Flow M681z/Flow M682z) 83  
 feed motor (1x550-sheet paper feeder with stand) 1449  
 feed motor (3-bin stapler/stacker) 622  
 feed motors (2,500-sheet paper feeder with stand) 1620  
 feed motors (3x550-sheet paper feeder with stand) 1528  
 feed roller assembly 1254  
 Foreign interface harness (FIH) 58  
 formatter 642  
 formatter cover 199  
 front door 321  
 front door (1x550-sheet paper feeder with stand) 1404  
 front fan 826  
 front lower cover (1x550-sheet paper feeder with stand) 1422  
 front lower cover (3x550-sheet paper feeder with stand) 1500  
 fuser 120  
 fuser drive assembly 1106  
 fuser motor 1094  
 hard disk drive 69  
 HDD 69  
 image scanner assembly 418  
 intermediate transfer belt (ITB) 105  
 internal USB ports 53  
 ITB 105  
 Jetdirect USB wireless print server 35  
 Jetdirect USB wireless print server with NFC 42  
 jogger (3-bin stapler/stacker) 539  
 jogger cover (3-bin stapler/stacker) 504  
 keyboard (Flow M681z/Flow M682z/Flow E67660z) 141  
 keyboard overlay (Flow M681z/Flow M682z/Flow E67660z) 150  
 laser scanner 963  
 left cover (1x550-sheet paper feeder with stand) 1393  
 left cover (2,500-sheet paper feeder with stand) 1564  
 left cover (3x550-sheet paper feeder with stand) 1474  
 left cover (550-sheet paper feeder) 1326  
 left door 332  
 left handle 398  
 left lower cover (1x550-sheet paper feeder with stand) 1406

left lower cover (2,500-sheet paper feeder with stand) 1575  
 left lower cover (3x550-sheet paper feeder with stand) 1485  
 left rear cover 343  
 left upper front and left upper rear fans 682  
 lifter drive assemblies (Trays 3 and 4) (3x550-sheet paper feeder with stand) 1548  
 lifter drive assembly 955  
 lifter drive assembly (1x550-sheet paper feeder with stand) 1461  
 lifter drive assembly (2,500-sheet paper feeder with stand) 1637  
 lifter drive assembly (550-sheet paper feeder) 1343  
 lifter drive assembly (Tray 5) (3x550-sheet paper feeder with stand) 1555  
 low-voltage power supply (LVPS) 847  
 lower drawer holder cable assembly (550-sheet paper feeder) 1387  
 lower feed assembly (3-bin stapler/stacker) 577  
 lower high-voltage power supply (HVPS) 854  
 LVPS 847  
 main cover (M681dn/M681f/M682dn/Flow M681f/E67650dh) 300  
 main drive assembly 1038  
 microswitch (3-bin stapler/stacker) 609  
 output bin 346  
 paper feed assembly (550-sheet paper feeder) 1352  
 paper feeder controller PCA (550-sheet paper feeder) 1375  
 paper pickup assemblies (2,500-sheet paper feeder with stand) 1613  
 paper pickup assemblies (3x550-sheet paper feeder with stand) 1524  
 paper pickup assembly (1x550-sheet paper feeder with stand) 1445  
 paper pickup assembly (550-sheet paper feeder) 1363  
 pickup alienation holder (1x550-sheet paper feeder with stand) 1456  
 pickup alienation holder (2,500-sheet paper feeder with stand) 1631  
 pickup alienation holder (3x550-sheet paper feeder with stand) 1541  
 pickup assembly 1277  
 pickup motor 1165  
 power supply fan 836  
 power switch PCA 671  
 pre-exposure PCA assembly (black) 649  
 pre-exposure PCA assembly (cyan, magenta, or yellow) 660  
 rear cover 383  
 rear cover (1x550-sheet paper feeder with stand) 1401  
 rear cover (2,500-sheet paper feeder with stand) 1572  
 rear cover (3-bin stapler/stacker) 469  
 rear cover (3x550-sheet paper feeder with stand) 1482  
 rear cover (550-sheet paper feeder) 1324  
 rear fan 907  
 rear inner cover (3-bin stapler/stacker) 496  
 rear lower cover (1x550-sheet paper feeder with stand) 1415  
 rear lower cover (2,500-sheet paper feeder with stand) 1584  
 rear lower cover (3x550-sheet paper feeder with stand) 1493  
 rear upper cover (M681dn/M681f/M682dn/Flow M681f/E67650dh) 297  
 registration assembly 1229  
 registration density sensor 1241  
 right corner cover (3-bin stapler/stacker) 500  
 right cover (M681dn/M681f/M682dn/Flow M681f/E67650dh) 238  
 right door 327  
 right door (1x550-sheet paper feeder with stand) 1398  
 right door (2,500-sheet paper feeder with stand) 1569  
 right door (3-bin stapler/stacker) 472  
 right door (3x550-sheet paper feeder with stand) 1479  
 right door (550-sheet paper feeder) 1318, 1321  
 right door link (1x550-sheet paper feeder with stand) 1395  
 right door link (2,500-sheet paper feeder with stand) 1566  
 right door link (3x550-sheet paper feeder with stand) 1476  
 right door switch (1x550-sheet paper feeder with stand) 1429  
 right door switch (2,500-sheet paper feeder with stand) 1590  
 right door switch (3x550-sheet paper feeder with stand) 1507  
 right front cover (3-bin stapler/stacker) 491  
 right handle 392  
 right lower cover (1x550-sheet paper feeder with stand) 1409  
 right lower cover (2,500-sheet paper feeder with stand) 1579  
 right lower cover (3-bin stapler/stacker) 518  
 right lower cover (3x550-sheet paper feeder with stand) 1488  
 right lower cover (550-sheet paper feeder) 1329  
 right rear cover 387  
 right upper cover (3-bin stapler/stacker) 476  
 scanner control board 443  
 secondary transfer assembly 1224  
 secondary transfer roller 100  
 size sensor (1x550-sheet paper feeder with stand) 1434  
 size sensor (3x550-sheet paper feeder with stand) 1512  
 size sensor (Tray 3) (2,500-sheet paper feeder with stand) 1595  
 size sensor (Tray 4) (2,500-sheet paper feeder with stand) 1599

size-detect switch (550-sheet paper feeder) 1378  
 solenoid assembly (3-bin stapler/stacker) 595  
 stacking wall cover (3-bin stapler/stacker) 549  
 staple cartridge and carrier (Flow M681z/Flow M682z/Flow E67660z) 60  
 staple cover (3-bin stapler/stacker) 481  
 staple door (3-bin stapler/stacker) 478  
 staple door lock arm (3-bin stapler/stacker) 526  
 staple rear cover (3-bin stapler/stacker) 511  
 stapler 485  
 stapler/stacker (Flow M681z/Flow M682z/Flow E67660z) 448  
 TCU 136  
 toner carry assembly 726  
 toner cartridges 132  
 toner collection unit 136  
 top cover (M652/M653/E65050/E65060/E65150/E65160) 336  
 top cover (M681dn/M681/M682dn/Flow M681f/E67650dh) 219  
 top front cover (M681dn/M681/M682dn/Flow M681f/E67650dh) 257  
 TPM 48  
 Tray 1 pickup roller 633  
 Tray 1 separation roller 637  
 Tray 2 and optional 550-sheet Trays 3–5 1310  
 Tray 4 (2,500-sheet paper feeder with stand) 1313  
 tray assembly (3-bin stapler/stacker) 531  
 tray lifter motor drive assembly (2,500-sheet paper feeder with stand) 1616  
 tray pin (3-bin stapler/stacker) 535  
 Trays 2 and 3 pickup and separation rollers 165  
 Trays 3–5 paper feeder stand pickup and separation rollers 180  
 trusted platform module 48  
 upper drawer holder and cable assembly (550-sheet paper feeder) 1383  
 upper feed assembly (3-bin stapler/stacker) 562  
 upper high-voltage power supply (HVPS) 861  
 white backing 124  
 removing parts  
   after-service checklist 6  
   before-service checklist 6  
   tools, required 4  
 replacement parts  
   part numbers 1651  
 replacing parts  
   about 3  
   after-service checklist 6  
   before-service checklist 6  
   screws 5  
   tools, required 4  
 revision history 1725  
 right corner cover (3-bin stapler/stacker)  
   removing and replacing 500  
 right cover (M681dn/M681/M682dn/Flow M681f/E67650dh)  
   removing and replacing 238  
 right door  
   removing and replacing 327  
 right door (1x550-sheet paper feeder with stand)  
   removing and replacing 1398  
 right door (2,500-sheet paper feeder with stand)  
   removing and replacing 1569  
 right door (3-bin stapler/stacker)  
   removing and replacing 472  
 right door (3x550-sheet paper feeder with stand)  
   removing and replacing 1479  
 right door (550-sheet paper feeder)  
   removing and replacing 1318, 1321  
 right door link (1x550-sheet paper feeder with stand)  
   removing and replacing 1395  
 right door link (2,500-sheet paper feeder with stand)  
   removing and replacing 1566  
 right door link (3x550-sheet paper feeder with stand)  
   removing and replacing 1476  
 right door switch (1x550-sheet paper feeder with stand)  
   removing and replacing 1429  
 right door switch (2,500-sheet paper feeder with stand)  
   removing and replacing 1590  
 right door switch (3x550-sheet paper feeder with stand)  
   removing and replacing 1507  
 right front cover (3-bin stapler/stacker)  
   removing and replacing 491  
 right handle  
   removing and replacing 392  
 right lower cover (1x550-sheet paper feeder with stand)  
   removing and replacing 1409  
 right lower cover (2,500-sheet paper feeder with stand)  
   removing and replacing 1579  
 right lower cover (3-bin stapler/stacker)  
   removing and replacing 518  
 right lower cover (3x550-sheet paper feeder with stand)  
   removing and replacing 1488  
 right lower cover (550-sheet paper feeder)  
   removing and replacing 1329  
 right rear cover  
   removing and replacing 387  
 right upper cover (3-bin stapler/stacker)  
   removing and replacing 476  
**S**  
 scanner control board  
   removing and replacing 443  
 screwdrivers, required 4  
 screws  
   installing 5  
   types of 5  
 secondary transfer assembly  
   removing and replacing 1224  
 secondary transfer roller  
   removing and replacing 100

service and support information  
     1648, 1652  
     WISE and CSN v, 2  
 service approach  
     removing and replacing 6  
 size sensor (1x550-sheet paper  
 feeder with stand)  
     removing and replacing 1434  
 size sensor (3x550-sheet paper  
 feeder with stand)  
     removing and replacing 1512  
 size sensor (Tray 3) (2,500-sheet  
 paper feeder with stand)  
     removing and replacing 1595  
 size sensor (Tray 4) (2,500-sheet  
 paper feeder with stand)  
     removing and replacing 1599  
 size-detect switch (550-sheet paper  
 feeder)  
     removing and replacing 1378  
 solenoid assembly (3-bin stapler/  
 stacker)  
     removing and replacing 595  
 stacking wall cover (3-bin stapler/  
 stacker)  
     removing and replacing 549  
 stand  
     part number 1649  
 staple cartridge and carrier (Flow  
 M681z/Flow M682z/Flow E67660z)  
     removing and replacing 60  
 staple cover (3-bin stapler/stacker)  
     removing and replacing 481  
 staple door (3-bin stapler/stacker)  
     removing and replacing 478  
 staple door lock arm (3-bin stapler/  
 stacker)  
     removing and replacing 526  
 staple rear cover (3-bin stapler/  
 stacker)  
     removing and replacing 511  
 stapler  
     removing and replacing 485  
 stapler/stacker  
     parts lists and diagrams 1694  
 stapler/stacker (Flow M681z/Flow  
 M682z/Flow E67660z)  
     removing and replacing 448  
 static, precautions for 4

supplies  
     part numbers 1651  
 switch, power PCA  
     removing and replacing 671  
**T**  
 TCU  
     removing and replacing 136  
 tips iii  
 toner carry assembly  
     removing and replacing 726  
 toner cartridges  
     part numbers 1651  
     removing and replacing 132  
 toner collection unit  
     removing and replacing 136  
 tools, required 4  
 top cover (M652/M653/E65050/  
 E65060/E65150/E65160)  
     removing and replacing 336  
 top cover (M681dn/M681/M682dn/  
 Flow M681f/E67650dh)  
     removing and replacing 219  
 top front cover (M681dn/M681/  
 M682dn/Flow M681f/E67650dh)  
     removing and replacing 257  
 TPM  
     removing and replacing 48  
 Tray 1 pickup roller  
     removing and replacing 633  
 Tray 1 separation roller  
     removing and replacing 637  
 Tray 2 and optional 550-sheet Trays  
 3–5  
     removing and replacing 1310  
 Tray 4 (2,500-sheet paper feeder with  
 stand)  
     removing and replacing 1313  
 tray assembly (3-bin stapler/stacker)  
     removing and replacing 531  
 tray lifter motor drive assembly  
 (2,500-sheet paper feeder with  
 stand)  
     removing and replacing 1616  
 tray pin (3-bin stapler/stacker)  
     removing and replacing 535  
 Trays 2 and 3 pickup and separation  
 rollers  
     removing and replacing 165

Trays 3–5 paper feeder stand pickup  
 and separation rollers  
     removing and replacing 180  
 trusted platform module  
     removing and replacing 48

**U**  
 upper drawer holder and cable  
 assembly(550-sheet paper feeder)  
     removing and replacing 1383  
 upper feed assembly (3-bin stapler/  
 stacker)  
     removing and replacing 562  
 USB ports, optional  
     part number 1649

**W**  
 warnings iii  
 Web-based Interactive Search Engine  
     WISE v, 2  
 white backing  
     removing and replacing 124  
 wireless print server  
     part number 1649  
 WISE  
     Web-based Interactive Search  
     Engine v, 2

