




Color LaserJet Enterprise M651 Color LaserJet Enterprise MFP M680


Repair Manual



M651n
M651dn

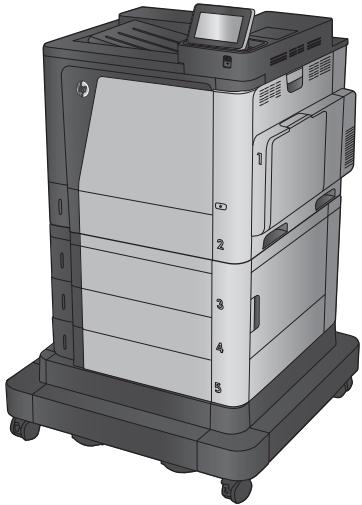


M651xh

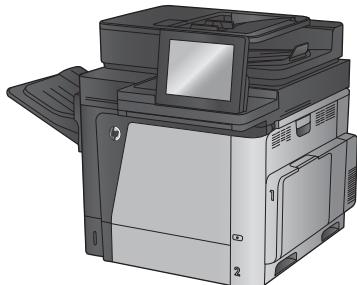

M680dn



M680f

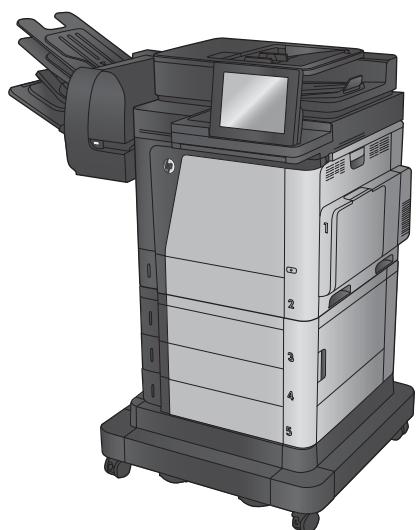

M680z



www.hp.com/support/colorljM651
www.hp.com/support/colorljMFPM680



HP Color LaserJet Enterprise M651 and MFP M680

Repair Manual

Copyright and License

© 2014 Copyright Hewlett-Packard Development Company, L.P.

Reproduction, adaptation, or translation without prior written permission is prohibited, except as allowed under the copyright laws.

The information contained herein is subject to change without notice.

The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Edition 1, 4/2014

Trademark Credits

Microsoft®, Windows®, Windows® XP, and Windows Vista® are U.S. registered trademarks of Microsoft Corporation.

Conventions used in this guide

 **TIP:** Helpful hints or shortcuts.

 **Reinstallation tip** Reinstallation helpful hints, shortcuts, or considerations.

 **NOTE:** Information that explains a concept or how to complete a task.

 **IMPORTANT:** Information that help the user to avoid potential product error conditions.

 **CAUTION:** Procedures that the user must follow to avoid losing data or damaging the product.

 **WARNING!** Procedures that the user must follow to avoid personal injury, catastrophic loss of data, or extensive damage to the product.

Table of contents

1 Removal and replacement	1
Removal and replacement strategy	2
Considerations during removal and replacement	2
Required tools	3
Types of screws	3
Service approach	3
Before performing service	4
After performing service	4
Parts removal order	4
Customer self repair (CSR) assemblies	5
Toner cartridges	5
Toner-collection unit	6
Tray	8
Formatter PCA	9
Install a replacement formatter	10
Fax PCA (M680)	12
Before proceeding, remove the following assemblies	12
Remove the fax PCA (M680)	12
Hard-disk drive (HDD) or solid-state memory (SSM)	13
Before proceeding, remove the following assemblies	13
Identify the storage device type	13
Remove the SSM (M651)	14
Remove the HDD	17
Reinstall the product firmware	19
Memory DIMM	21
Remove the memory DIMM	21
Reinstall the memory DIMM	22
Fuser	24
Intermediate transfer belt (ITB)	25
Control panel assembly (M651)	28
Control-panel assembly (M680)	32
Reinstall the control-panel assembly (M680)	35

Keyboard assembly (M680z)	37
Before proceeding, remove the following assemblies	37
Remove the keyboard assembly (M680z)	37
Reinstall the keyboard assembly (M680z)	41
Feed and separation rollers (Trays 2-5)	45
Pickup roller (Tray 1)	46
Reinstall the pickup roller (Tray 1)	49
Secondary transfer roller	50
Reinstall the secondary transfer roller	51
Standard output bin (M680)	52
Output bin bezel (M680)	53
Before proceeding, remove the following assemblies	53
Remove the output bin bezel	53
Document feeder white backing (M680)	54
Install a replacement document feeder white backing (M680)	55
Background selector (M680)	60
Reinstall the background selector (M680)	62
Document-feeder roller (M680)	63
Remove the document-feeder roller (M680)	63
Reinstall the document-feeder roller (M680)	65
Install a replacement document-feeder roller (M680)	65
Document-feeder separation pad and holder (M680)	66
Remove the document-feeder separation pad and holder (M680)	66
Install a replacement document-feeder separation pad and holder (M680)	68
Install a replacement document-feeder separation pad and holder (M680)	68
Document feeder and scanner (M680)	70
Document feeder mylar strip	70
Install a replacement document feeder mylar strip (M680)	71
Document-feeder roller cover	73
Reinstall the document-feeder roller cover	77
Scanner rear cover	79
Document feeder (ADF)	80
Before proceeding, remove the following assemblies	80
Remove the document feeder	80
Install a replacement document feeder	85
Document-feeder hinge assembly	89
Before proceeding, remove the following assemblies	89
Remove the document-feeder hinge assembly	89
Scanner control board (SCB) fan (M680)	90
Before proceeding, remove the following assemblies	90
Remove the scanner control board (SCB) fan	90

Install a replacement SCB fan	92
Scanner control board (SCB)	93
Before proceeding, remove the following assemblies	93
Remove the SCB	93
Install a scanner control board	99
Image scanner assembly	103
Before proceeding, remove the following assemblies	103
Remove the scanner assembly	103
Install a replacement scanner assembly	106
Scissor hinge assemblies	113
External panels, covers, and doors	115
Upper left cover (M651)	117
Before proceeding, remove the following assemblies	117
Remove the upper left cover	117
Fan cover (M680)	118
Before proceeding, remove the following assemblies	118
Remove the fan cover	118
Left rear cover	119
Before proceeding, remove the following assemblies	119
Remove the left rear cover	119
Left cover	120
Before proceeding, remove the following assemblies	120
Remove the left cover	120
Rear cover (M651)	121
Before proceeding, remove the following assemblies	121
Remove the rear cover (M651)	121
Rear cover (M680)	122
Before proceeding, remove the following assemblies	122
Remove the rear cover (M680)	122
Right-front cover	124
Before proceeding, remove the following assemblies	124
Remove the right-front cover	124
Front door assembly	126
Before proceeding, remove the following assemblies	126
Remove the front door assembly	126
Right door assembly	130
Face-down tray (M651)	134
Reinstall the face-down tray	135
Face-down rear cover (M651)	136
Before proceeding, remove the following assemblies	136
Remove the face-down rear cover (M651)	136

Upper cover (M651)	139
Before proceeding, remove the following assemblies	139
Remove the upper cover (M651)	139
Reinstall the upper cover (M651)	142
Front face-down cover and right-front upper cover (M651)	143
Before proceeding, remove the following assemblies	143
Remove the front face-down cover and right-front upper cover	143
Intermediate cover assembly (M680)	145
Before proceeding, remove the following assemblies	145
Remove the intermediate cover assembly (M680)	145
Right-rear cover	146
Before proceeding, remove the following assemblies	146
Remove the right-rear cover	146
Internal assemblies	147
IPTU (M680)	147
Before proceeding, remove the following assemblies	147
Remove the IPTU	147
Cassette feed guide	150
Reinstall the cassette feed guide	151
Secondary transfer assembly	152
Reinstall the secondary transfer assembly	153
Tray 1 separation pad	154
Before proceeding, remove the following assemblies	154
Remove the Tray 1 separation pad	154
Registration density (RD) sensor assembly	157
Before proceeding, remove the following assemblies	157
Remove the RD sensor assembly	157
Registration assembly	161
Before proceeding, remove the following assemblies	161
Remove the registration assembly	161
Install a replacement registration assembly	165
Paper-delivery fan (M651)	166
Before proceeding, remove the following assemblies	166
Remove the paper-delivery fan (M651)	166
Paper-delivery fan (M680)	168
Before proceeding, remove the following assemblies	168
Remove the paper-delivery fan (M680)	168
Residual-toner-feed motor	169
Before proceeding, remove the following assemblies	169
Remove the residual-toner-feed motor	169
Residual-toner transfer assembly	171

Before proceeding, remove the following assemblies	171
Remove the residual-toner transfer assembly	171
Cartridge fan and environmental sensor	174
Before proceeding, remove the following assemblies	174
Remove the cartridge fan and environmental sensor	174
Residual toner full sensor	178
Before proceeding, remove the following assemblies	178
Remove the residual toner full sensor	178
Delivery assembly (M651)	180
Before proceeding, remove the following assemblies	180
Remove the delivery assembly (M651)	180
Reinstall the delivery assembly (M651)	184
Delivery assembly (M680)	186
Before proceeding, remove the following assemblies	186
Remove the delivery assembly (M680)	186
Reinstall the delivery assembly (M680)	188
Duplex-drive assembly	189
Before proceeding, remove the following assemblies	189
Remove the duplex-drive assembly	189
Power-supply fan (M651)	190
Before proceeding, remove the following assemblies	190
Remove the power-supply fan (M651)	190
Power-supply fan (M680)	192
Before proceeding, remove the following assemblies	192
Remove the power-supply fan (M680)	192
Interconnect board (ICB) (M651)	194
Before proceeding, remove the following assemblies	194
Remove the interconnect board (M651)	194
Interconnect board (ICB) (M680)	196
Before proceeding, remove the following assemblies	196
Remove the ICB (M680)	196
DC controller PCA only	198
Before proceeding, remove the following assemblies	198
Remove the DC controller PCA only	198
Low-voltage power supply (LVPS)	200
Before proceeding, remove the following assemblies	200
Remove the low-voltage power supply	200
DC controller PCA and tray	204
Before proceeding, remove the following assemblies	204
Remove the DC controller PCA and tray	204
High-voltage power supply lower (HVPS-D)	207

Before proceeding, remove the following assemblies	207
Remove the high-voltage power supply lower	207
Reinstall the high-voltage power supply lower	211
Developing-disengagement motor	212
Before proceeding, remove the following assemblies	212
Remove the developing-disengagement motor	212
Exhaust fan and fan duct	213
Before proceeding, remove the following assemblies	213
Remove the exhaust fan and fan duct	213
Reinstall the exhaust fan and fan duct	215
Pickup motor	216
Before proceeding, remove the following assemblies	216
Remove the pickup motor	216
Lifter-drive assembly	217
Before proceeding, remove the following assemblies	217
Remove the lifter-drive assembly	217
Lifter base assembly	220
Before proceeding, remove the following assemblies	220
Remove the lifter base assembly	220
Reinstall the lifter base assembly	222
Paper-pickup drive assembly	223
Before proceeding, remove the following assemblies	223
Remove the paper-pickup drive assembly	223
Paper-pickup assembly	226
Before proceeding, remove the following assemblies	226
Remove the paper-pickup assembly	227
Laser/scanner assembly (Y/M)	233
Before proceeding, remove the following assemblies	233
Remove the laser/scanner assembly (Y/M)	234
Laser/scanner assembly (C/K)	237
Before proceeding, remove the following assemblies	237
Remove the laser/scanner assembly (C/K)	238
Reinstall the protective glass cleaner (PGC) actuators	240
High-voltage power supply upper (HVPS-T)	243
Before proceeding, remove the following assemblies	243
Remove the high-voltage power supply upper	244
Reinstall the high-voltage power supply upper	245
Yellow, magenta, cyan, and black drum motors	246
Before proceeding, remove the following assemblies	246
Remove the yellow, magenta, cyan, and black drum motors	247
Fuser motor	248

Before proceeding, remove the following assemblies	248
Remove the fuser motor	249
ITB motor	250
Before proceeding, remove the following assemblies	250
Remove the ITB motor	251
Main-drive assembly	252
Before proceeding, remove the following assemblies	252
Remove the main-drive assembly	252
Reinstall the main-drive assembly	257
Fuser drive assembly	262
Before proceeding, remove the following assemblies	262
Remove the fuser drive assembly	262
Reinstall the fuser drive assembly	266
Optional input and output accessories	267
1x500-sheet paper feeder	267
Front upper cover (1x500-sheet paper feeder)	269
Rear cover (1x500-sheet paper feeder)	270
Left cover (1x500-sheet paper feeder)	271
Before proceeding, remove the following assemblies	271
Remove the left cover (1x500-sheet paper feeder)	271
Right-front cover (1x500-sheet paper feeder)	272
Before proceeding, remove the following assemblies	272
Remove the right-front cover (1x500-sheet paper feeder)	272
Right cover (1x500-sheet paper feeder)	273
Before proceeding, remove the following assemblies	273
Remove the right cover (1x500-sheet paper feeder)	273
Paper-pickup assembly (1x500-sheet paper feeder)	274
Before proceeding, remove the following assemblies	274
Remove the pickup assembly (1x500-sheet paper feeder)	274
Lifter base assembly (1x500-sheet paper feeder)	277
Before proceeding, remove the following assemblies	277
Remove the lifter base assembly (1x500-sheet paper feeder)	277
Reinstall the lifter base assembly	278
Lifter assembly (1x500-sheet paper feeder)	279
Before proceeding, remove the following assemblies	279
Remove the lifter assembly (1x500-sheet paper feeder)	279
Pickup motor assembly (1x500-sheet paper feeder)	280
Before proceeding, remove the following assemblies	280
Remove the pickup motor assembly (1x500-sheet paper feeder)	280
Feeder PCA (1x500-sheet paper feeder)	281
Before proceeding, remove the following assemblies	281

Remove the feeder PCA (1x500-sheet paper feeder)	281
1x500-sheet paper feeder with cabinet	282
Rear cover (1x500-sheet paper feeder with cabinet)	284
Left cover (1x500-sheet paper feeder with cabinet)	285
Before proceeding, remove the following assemblies	285
Remove the left cover (1x500-sheet paper feeder with cabinet)	285
Stock box door (1x500-sheet paper feeder with cabinet)	286
Front upper cover (1x500-sheet paper feeder with cabinet)	287
Before proceeding, remove the following assemblies	287
Remove the front upper cover (1x500-sheet paper feeder with cabinet)	287
Right-front cover (1x500-sheet paper feeder with cabinet)	288
Before proceeding, remove the following assemblies	288
Remove the right-front cover (1x500-sheet paper feeder with cabinet) ..	288
Right door (1x500-sheet paper feeder with cabinet)	289
Right center cover (1x500-sheet paper feeder with cabinet)	291
Before proceeding, remove the following assemblies	291
Remove the right center cover (1x500-sheet paper feeder with cabinet)	291
Rear-right cover (1x500-sheet paper feeder with cabinet)	292
Before proceeding, remove the following assemblies	292
Remove the rear-right cover (1x500-sheet paper feeder with cabinet) ..	292
Paper-pickup assembly (1x500-sheet paper feeder with cabinet)	293
Before proceeding, remove the following assemblies	293
Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet)	293
Lifter base assembly (1x500-sheet paper feeder with cabinet)	296
Before proceeding, remove the following assemblies	296
Remove the lifter base assembly (1x500-sheet paper feeder with cabinet)	296
Lifter assembly (1x500-sheet paper feeder with cabinet)	297
Before proceeding, remove the following assemblies	297
Remove the lifter assembly (1x500-sheet paper feeder with cabinet) ..	297
Pickup motor assembly (1x500-sheet paper feeder with cabinet)	298
Before proceeding, remove the following assemblies	298
Remove the pickup motor (1x500-sheet paper feeder with cabinet) assembly	298
Feeder PCA (1x500-sheet paper feeder with cabinet)	299
Before proceeding, remove the following assemblies	299
Remove the feeder PCA (1x500-sheet paper feeder with cabinet)	299
2,500-sheet paper feeder HCI	300
Rear cover (2,500-sheet paper feeder HCI)	302

Left cover (2,500-sheet paper feeder HCI)	303
Front upper cover (2,500-sheet paper feeder HCI)	304
Right front cover (2,500-sheet paper feeder HCI)	305
Before proceeding, remove the following assemblies	305
Remove the right front cover (2,500-sheet paper feeder HCI)	305
Right door assembly (2,500-sheet paper feeder HCI)	306
Right center cover (2,500-sheet paper feeder HCI)	308
Before proceeding, remove the following assemblies	308
Remove the right center cover (2,500-sheet paper feeder HCI)	308
Right rear cover (2,500-sheet paper feeder HCI)	309
Before proceeding, remove the following assemblies	309
Remove the right rear cover (2,500-sheet paper feeder HCI)	309
Right lower cover (2,500-sheet paper feeder HCI)	310
Before proceeding, remove the following assemblies	310
Remove the right lower cover (2,500-sheet paper feeder HCI)	310
Tray 5 pickup assembly (2,500-sheet paper feeder HCI)	311
Before proceeding, remove the following assemblies	311
Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI)	311
Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI)	313
Before proceeding, remove the following assemblies	313
Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI)	313
Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI)	315
Before proceeding, remove the following assemblies	315
Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI)	315
Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI)	316
Before proceeding, remove the following assemblies	316
Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI) ..	316
Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)	317
Before proceeding, remove the following assemblies	317
Remove the Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)	317
Pickup motor (2,500-sheet paper feeder HCI)	318
Before proceeding, remove the following assemblies	318
Remove the pickup motor (2,500-sheet paper feeder HCI)	318
HCI PCA (2,500-sheet paper feeder HCI)	319
Before proceeding, remove the following assemblies	319
Remove the HCI PCA (2,500-sheet paper feeder HCI)	319
Stapling mailbox (M680)	320
Front cover (stapling mailbox)	321

Rear cover (stapling mailbox)	322
Top door (stapling mailbox)	323
Before proceeding, remove the following assemblies	323
Remove the stapling mailbox top door	323
Connector holder (stapling mailbox)	324
Before proceeding, remove the following assemblies	324
Remove the stapling mailbox connector holder	324
Top cover (stapling mailbox)	325
Before proceeding, remove the following assemblies	325
Remove the stapling mailbox top cover	325
Output bin 3 (stapling mailbox)	326
Output bin 3 driver PCA (stapling mailbox)	327
Stapler assembly (stapling mailbox)	329
Before proceeding, remove the following assemblies	329
Remove the stapler assembly	329
Stamp solenoid (stapling mailbox)	330
Before proceeding, remove the following assemblies	330
Remove the stapling mailbox stamp solenoid	330
Output bin sensor PCA (stapling mailbox)	331
Before proceeding, remove the following assemblies	331
Remove the stapling mailbox output bin sensor PCA	331
Stacking panel (stapling mailbox)	333
Before proceeding, remove the following assemblies	333
Remove the stapling mailbox stacking panel	333
Jogger assembly (stapling mailbox)	334
Before proceeding, remove the following assemblies	334
Remove the stapling mailbox jogger assembly	334
Flapper guide assembly (stapling mailbox)	336
Before proceeding, remove the following assemblies	336
Remove the flapper guide assembly	336
Reinstall the stapling mailbox flapper guide assembly	337
Flapper assembly (stapling mailbox)	338
Before proceeding, remove the following assemblies	338
Remove the stapling mailbox flapper assembly	338
Output bin solenoid (stapling mailbox)	339
Before proceeding, remove the following assemblies	339
Remove the stapling mailbox output bin solenoid	339
Output bin assembly (stapling mailbox)	340
Before proceeding, remove the following assemblies	340
Remove the stapling mailbox output bin assembly	340
Output bin 3 drive assembly (stapling mailbox)	342

Before proceeding, remove the following assemblies	342
Remove the output bin 3 drive assembly (stapling mailbox)	342
Stage-top sub-assembly (stapling mailbox)	345
Before proceeding, remove the following assemblies	345
Remove the stage-top sub-assembly (stapling mailbox)	345
Reinstall the stage-top sub-assembly (stapling mailbox)	353
Stage assembly (stapling mailbox)	354
Before proceeding, remove the following assemblies	354
Remove the stage assembly (stapling mailbox)	354
Entrance solenoid (stapling mailbox)	358
Before proceeding, remove the following assemblies	358
Remove the entrance solenoid (stapling mailbox)	358
Feed motor (stapling mailbox)	360
Before proceeding, remove the following assemblies	360
Remove the feed motor (stapling mailbox)	360
Paddle motor (stapling mailbox)	362
Before proceeding, remove the following assemblies	362
Remove the paddle motor (stapling mailbox)	362
2 Parts and diagrams	363
Order parts by authorized service providers	364
Order parts, accessories, and supplies	364
Related documentation and software	364
Supplies part numbers	365
Customer self-repair parts	366
Service replacement parts	368
Accessories	368
How to use the parts lists and diagrams	369
Document feeder and scanner assemblies	370
Document feeder assemblies	372
Scan control board (SCB)	376
Covers	378
Covers (M651)	378
Covers (M680)	380
Right door	382
Control panels	384
Internal assemblies	386
Internal assemblies (M651)	386
Internal assemblies (M680)	388
Internal assemblies (1 of 6)	390
Internal assemblies (2 of 6)	392

Internal assemblies (3 of 6)	394
Internal assemblies (4 of 6)	396
Internal assemblies (5 of 6)	398
Internal assemblies (6 of 6)	400
1x500-sheet paper feeder	402
1x500-sheet paper feeder covers	402
1x500-sheet paper feeder components	404
1x500-sheet paper feeder with cabinet	406
1x500-sheet paper feeder with cabinet covers	406
1x500-sheet paper feeder with cabinet components	408
2,500-sheet paper feeder HCl	410
2,500-sheet paper feeder HCl covers	410
2,500-sheet paper feeder HCl components (1 of 2)	412
2,500-sheet paper feeder HCl components (2 of 2)	414
Stapling mailbox	416
Stapling mailbox covers	416
Stapling mailbox assemblies (1 of 2)	418
Stapling mailbox assemblies (2 of 2)	420
Alphabetical parts list	422
Numerical parts list	432
Index	443

List of tables

Table 2-1	Order parts, accessories, and supplies	364
Table 2-2	Related documentation and software	364
Table 2-3	Supplies part numbers	365
Table 2-4	Customer self-repair parts	366
Table 2-5	Service replacement parts	368
Table 2-6	Accessories	368
Table 2-7	Document feeder and scanner assemblies (M680)	371
Table 2-8	Document feeder assemblies (M680, 1 of 2)	373
Table 2-9	Document feeder assemblies (M680, 2 of 2)	375
Table 2-10	Scan control board (SCB; M680)	377
Table 2-11	Covers (M651)	379
Table 2-12	Covers (M680)	381
Table 2-13	Right door	383
Table 2-14	Control panels	385
Table 2-15	Internal assemblies (M651)	387
Table 2-16	Internal assemblies (M680)	389
Table 2-17	Internal assemblies (1 of 6)	391
Table 2-18	Internal assemblies (2 of 6)	393
Table 2-19	Internal assemblies (3 of 6)	395
Table 2-20	Internal assemblies (4 of 6)	397
Table 2-21	Internal assemblies (5 of 6)	399
Table 2-22	Internal assemblies (6 of 6)	401
Table 2-23	1x500-sheet paper feeder covers	403
Table 2-24	1x500-sheet paper feeder components	405
Table 2-25	1x500-sheet paper feeder with cabinet covers	407
Table 2-26	1x500-sheet paper feeder with cabinet components	409
Table 2-27	2,500-sheet paper feeder HCI covers	411
Table 2-28	2,500-sheet paper feeder HCI components (1 of 2)	413
Table 2-29	2,500-sheet paper feeder HCI components (2 of 2)	415
Table 2-30	Stapling mailbox covers	417
Table 2-31	Stapling mailbox assemblies (1 of 2)	419
Table 2-32	Stapling mailbox assemblies (2 of 2)	421

Table 2-33	Alphabetical parts list	422
Table 2-34	Numerical parts list	432

List of figures

Figure 1-1	Screwdrivers	3
Figure 1-2	Remove the toner cartridges (1 of 2)	5
Figure 1-3	Remove the toner cartridges (2 of 2)	5
Figure 1-4	Remove the toner collection unit (1 of 3)	6
Figure 1-5	Remove the toner collection unit (2 of 3)	6
Figure 1-6	Remove the toner collection unit (3 of 3)	7
Figure 1-7	Remove the tray (1 of 2)	8
Figure 1-8	Remove the tray (2 of 2)	8
Figure 1-9	Remove the formatter	9
Figure 1-10	Formatter LEDs	11
Figure 1-11	Remove the fax PCA (M680)	12
Figure 1-12	Identify the SSM and HDD	13
Figure 1-13	Remove the SSM (1 of 5)	14
Figure 1-14	Remove the SSM (2 of 5)	14
Figure 1-15	Remove the SSM (3 of 5)	15
Figure 1-16	Remove the SSM (4 of 5)	15
Figure 1-17	Remove the SSM (5 of 5)	16
Figure 1-18	Remove the HDD (1 of 4)	17
Figure 1-19	Remove the HDD (2 of 4)	17
Figure 1-20	Remove the HDD (3 of 4)	18
Figure 1-21	Remove the HDD (4 of 4)	18
Figure 1-22	Remove the memory DIMM (1 of 2)	21
Figure 1-23	Remove the memory DIMM (2 of 2)	21
Figure 1-24	Reinstall the memory DIMM	22
Figure 1-25	Reinstall the memory DIMM	22
Figure 1-26	Reinstall the memory DIMM	23
Figure 1-27	Remove the fuser (1 of 2)	24
Figure 1-28	Remove the fuser (2 of 2)	24
Figure 1-29	Remove the intermediate transfer belt (1 of 4)	25
Figure 1-30	Remove the intermediate transfer belt (2 of 4)	25
Figure 1-31	Remove the intermediate transfer belt (3 of 4)	26
Figure 1-32	Remove the intermediate transfer belt (4 of 4)	27

Figure 1-33	Remove the control panel (M651; 1 of 8)	28
Figure 1-34	Remove the control panel (M651; 2 of 8)	28
Figure 1-35	Remove the control panel (M651; 3 of 8)	29
Figure 1-36	Remove the control panel (M651; 4 of 8)	29
Figure 1-37	Remove the control panel (M651; 5 of 8)	30
Figure 1-38	Remove the control panel (M651; 6 of 8)	30
Figure 1-39	Remove the control panel (M651; 7 of 8)	31
Figure 1-40	Remove the control panel (M651; 8 of 8)	31
Figure 1-41	Remove the control-panel assembly (M680; 1 of 7)	32
Figure 1-42	Remove the control-panel assembly (M680; 2 of 7)	32
Figure 1-43	Remove the control-panel assembly (M680; 3 of 7)	33
Figure 1-44	Remove the control-panel assembly (M680; 4 of 7)	33
Figure 1-45	Remove the control-panel assembly (M680; 5 of 7)	34
Figure 1-46	Remove the control-panel assembly (M680; 6 of 7)	34
Figure 1-47	Remove the control-panel assembly (M680; 7 of 7)	35
Figure 1-48	Reinstall the control-panel assembly (M680; 1 of 3)	35
Figure 1-49	Reinstall the control-panel assembly (M680; 2 of 3)	36
Figure 1-50	Reinstall the control-panel assembly (M680; 3 of 3)	36
Figure 1-51	Remove the keyboard assembly (M680z; 1 of 7)	37
Figure 1-52	Remove the keyboard assembly (M680z; 2 of 7)	38
Figure 1-53	Remove the keyboard assembly (M680z; 3 of 7)	38
Figure 1-54	Remove the keyboard assembly (M680z; 4 of 7)	39
Figure 1-55	Remove the keyboard assembly (M680z; 5 of 7)	39
Figure 1-56	Remove the keyboard assembly (M680z; 6 of 7)	40
Figure 1-57	Remove the keyboard assembly (M680z; 7 of 7)	40
Figure 1-58	Reinstall the keyboard assembly (M680z; 1 of 7)	41
Figure 1-59	Reinstall the keyboard assembly (M680z; 2 of 7)	41
Figure 1-60	Reinstall the keyboard assembly (M680z; 3 of 7)	42
Figure 1-61	Reinstall the keyboard assembly (M680z; 4 of 7)	42
Figure 1-62	Reinstall the keyboard assembly (M680z; 5 of 7)	43
Figure 1-63	Reinstall the keyboard assembly (M680z; 6 of 7)	43
Figure 1-64	Reinstall the keyboard assembly (M680z; 7 of 7)	44
Figure 1-65	Remove the feed and separation rollers (Trays 2-5)	45
Figure 1-66	Remove the pickup roller (Tray 1; 1 of 5)	46
Figure 1-67	Remove the pickup roller (Tray 1; 2 of 5)	46
Figure 1-68	Remove the pickup roller (Tray 1; 3 of 5)	47
Figure 1-69	Remove the pickup roller (Tray 1; 4 of 5)	47
Figure 1-70	Remove the pickup roller (Tray 1; 5 of 5)	48
Figure 1-71	Correct position of cover	49
Figure 1-72	Incorrect position of cover	49
Figure 1-73	Remove the transfer roller (1 of 3)	50

Figure 1-74	Remove the transfer roller (2 of 3)	50
Figure 1-75	Remove the transfer roller (3 of 3)	51
Figure 1-76	Reinstall the secondary transfer roller	51
Figure 1-77	Remove the standard output bin	52
Figure 1-78	Remove the output bin bezel (1 of 2)	53
Figure 1-79	Remove the output bin bezel (2 of 2)	53
Figure 1-80	Remove the document feeder white backing (M680; 1 of 2)	54
Figure 1-81	Remove the document feeder white backing (M680; 2 of 2)	54
Figure 1-82	Install a replacement document feeder white backing (1 of 9)	55
Figure 1-83	Install a replacement document feeder white backing (2 of 9)	55
Figure 1-84	Install a replacement document feeder white backing (3 of 9)	56
Figure 1-85	Install a replacement document feeder white backing (4 of 9)	56
Figure 1-86	Install a replacement document feeder white backing (5 of 9)	57
Figure 1-87	Install a replacement document feeder white backing (6 of 9)	57
Figure 1-88	Install a replacement document feeder white backing (7 of 9)	58
Figure 1-89	Install a replacement document feeder white backing (8 of 9)	58
Figure 1-90	Install a replacement document feeder white backing (9 of 9)	59
Figure 1-91	Remove the background selector (M680; 1 of 4)	60
Figure 1-92	Remove the background selector (M680; 2 of 4)	60
Figure 1-93	Remove the background selector (M680; 3 of 4)	61
Figure 1-94	Remove the background selector (M680; 4 of 4)	61
Figure 1-95	Reinstall the background selector (M680)	62
Figure 1-96	Remove the document-feeder roller (M680; 1 of 3)	63
Figure 1-97	Remove the document-feeder roller (M680; 2 of 3)	64
Figure 1-98	Remove the document-feeder roller (M680; 3 of 3)	64
Figure 1-99	Reinstall the document-feeder roller (M680)	65
Figure 1-100	Remove the document-feeder separation pad and holder (M680; 1 of 3)	66
Figure 1-101	Remove the document-feeder separation pad and holder (M680; 2 of 3)	67
Figure 1-102	Remove the document-feeder separation pad and holder (M680; 3 of 3)	67
Figure 1-103	Reinstall the document-feeder separation pad spring (M680; 1 of 2)	68
Figure 1-104	Reinstall the document-feeder separation pad spring (M680; 2 of 2)	68
Figure 1-105	Remove the document feeder mylar strip (M680; 1 of 3)	70
Figure 1-106	Remove the document feeder mylar strip (M680; 2 of 3)	70
Figure 1-107	Remove the document feeder mylar strip (M680; 3 of 3)	71
Figure 1-108	Install a replacement document feeder mylar strip (M680; 1 of 3)	71
Figure 1-109	Install a replacement document feeder mylar strip (M680; 2 of 3)	72
Figure 1-110	Install a replacement document feeder mylar strip (M680; 3 of 3)	72
Figure 1-111	Remove the document-feeder roller cover (1 of 10)	73
Figure 1-112	Remove the document-feeder roller cover (2 of 10)	73
Figure 1-113	Remove the document-feeder roller cover (3 of 10)	74
Figure 1-114	Remove the document-feeder roller cover (4 of 10)	74

Figure 1-115	Remove the document-feeder roller cover (5 of 10)	75
Figure 1-116	Remove the document-feeder roller cover (6 of 10)	75
Figure 1-117	Remove the document-feeder roller cover (7 of 10)	76
Figure 1-118	Remove the document-feeder roller cover (8 of 10)	76
Figure 1-119	Remove the document-feeder roller cover (9 of 10)	77
Figure 1-120	Remove the document-feeder roller cover (10 of 10)	77
Figure 1-121	Reinstall the document-feeder roller cover (1 of 2)	78
Figure 1-122	Reinstall the document-feeder roller cover (2 of 2)	78
Figure 1-123	Remove the scanner rear cover	79
Figure 1-124	Remove the document feeder (1 of 8)	80
Figure 1-125	Remove the document feeder (2 of 8)	81
Figure 1-126	Remove the document feeder (3 of 8)	81
Figure 1-127	Remove the document feeder (4 of 8)	82
Figure 1-128	Remove the document feeder (5 of 8)	82
Figure 1-129	Remove the document feeder (6 of 8)	83
Figure 1-130	Remove the document feeder (7 of 8)	83
Figure 1-131	Remove the document feeder (8 of 8)	84
Figure 1-132	Install the ferrite and holder (1 of 5)	85
Figure 1-133	Install the ferrite and holder (2 of 5)	85
Figure 1-134	Install the ferrite and holder (3 of 5)	86
Figure 1-135	Remove the document feeder (4 of 5)	86
Figure 1-136	Install the ferrite and holder (5 of 5)	87
Figure 1-137	Remove the document-feeder hinge assembly	89
Figure 1-138	Remove the scanner control board fan (1 of 3)	90
Figure 1-139	Remove the scanner control board fan (2 of 3)	90
Figure 1-140	Remove the scanner control board fan (3 of 3)	91
Figure 1-141	Install a replacement SCB fan (1 of 2)	92
Figure 1-142	Install a replacement SCB fan (2 of 2)	92
Figure 1-143	Remove the SCB (1 of 13)	93
Figure 1-144	Remove the SCB (2 of 13)	94
Figure 1-145	Remove the SCB (3 of 13)	94
Figure 1-146	Remove the SCB (4 of 13)	95
Figure 1-147	Remove the SCB (5 of 13)	95
Figure 1-148	Remove the SCB (6 of 13)	96
Figure 1-149	Remove the SCB (7 of 13)	96
Figure 1-150	Remove the SCB (8 of 13)	97
Figure 1-151	Remove the SCB (9 of 13)	97
Figure 1-152	Remove the SCB (10 of 13)	98
Figure 1-153	Remove the SCB (11 of 13)	98
Figure 1-154	Remove the SCB (12 of 13)	99
Figure 1-155	Remove the SCB (13 of 13)	99

Figure 1-156	Install the ferrite and holder (1 of 5)	100
Figure 1-157	Install the ferrite and holder (2 of 5)	100
Figure 1-158	Install the ferrite and holder (3 of 5)	101
Figure 1-159	Remove the document feeder (4 of 5)	101
Figure 1-160	Install the ferrite and holder (5 of 5)	102
Figure 1-161	Remove the scanner assembly (1 of 5)	103
Figure 1-162	Remove the scanner assembly (2 of 5)	104
Figure 1-163	Remove the scanner assembly (3 of 5)	104
Figure 1-164	Remove the scanner assembly (4 of 5)	105
Figure 1-165	Remove the scanner assembly (5 of 5)	105
Figure 1-166	Transfer the SCB to the replacement scanner assembly (1 of 6)	106
Figure 1-167	Transfer the SCB to the replacement scanner assembly (2 of 6)	107
Figure 1-168	Transfer the SCB to the replacement scanner assembly (3 of 6)	107
Figure 1-169	Transfer the SCB to the replacement scanner assembly (4 of 6)	108
Figure 1-170	Transfer the SCB to the replacement scanner assembly (5 of 6)	108
Figure 1-171	Transfer the SCB to the replacement scanner assembly (6 of 6)	109
Figure 1-172	Install the ferrite and holder (1 of 5)	109
Figure 1-173	Install the ferrite and holder (2 of 5)	110
Figure 1-174	Install the ferrite and holder (3 of 5)	110
Figure 1-175	Remove the document feeder (4 of 5)	111
Figure 1-176	Install the ferrite and holder (5 of 5)	111
Figure 1-177	Remove the scissor hinge assemblies (1 of 4)	113
Figure 1-178	Remove the scissor hinge assemblies (2 of 4)	113
Figure 1-179	Remove the scissor hinge assemblies (3 of 4)	114
Figure 1-180	Remove the scissor hinge assemblies (4 of 4)	114
Figure 1-181	Cover and door locations (M651)	115
Figure 1-182	Cover and door locations (M680)	116
Figure 1-183	Remove the upper left cover	117
Figure 1-184	Remove the fan cover	118
Figure 1-185	Remove the left rear cover	119
Figure 1-186	Remove the left cover	120
Figure 1-187	Remove the rear cover (M651)	121
Figure 1-188	Remove the rear cover (M680; 1 of 2)	122
Figure 1-189	Remove the rear cover (M680; 2 of 2)	123
Figure 1-190	Remove the right-front cover (1 of 3)	124
Figure 1-191	Remove the right-front cover (2 of 3)	125
Figure 1-192	Remove the right-front cover (3 of 3)	125
Figure 1-193	Remove the front door assembly (1 of 7)	126
Figure 1-194	Remove the front door assembly (2 of 7)	127
Figure 1-195	Remove the front door assembly (3 of 7)	127
Figure 1-196	Remove the front door assembly (4 of 7)	128

Figure 1-197	Remove the front door assembly (5 of 7)	128
Figure 1-198	Remove the front door assembly (6 of 7)	129
Figure 1-199	Remove the front door assembly (7 of 7)	129
Figure 1-200	Remove the right door assembly (1 of 8)	130
Figure 1-201	Remove the right door assembly (2 of 8)	130
Figure 1-202	Remove the right door assembly (3 of 8)	131
Figure 1-203	Remove the right door assembly (4 of 8)	131
Figure 1-204	Remove the right door assembly (5 of 8)	132
Figure 1-205	Remove the right door assembly (6 of 8)	132
Figure 1-206	Remove the right door assembly (7 of 8)	133
Figure 1-207	Remove the right door assembly (8 of 8)	133
Figure 1-208	Remove the face-down tray (1 of 2)	134
Figure 1-209	Remove the face-down tray (2 of 2)	134
Figure 1-210	Reinstall the face-down tray	135
Figure 1-211	Remove the face-down rear cover (M651; 1 of 5)	136
Figure 1-212	Remove the face-down rear cover (M651; 2 of 5)	136
Figure 1-213	Remove the face-down rear cover (M651; 3 of 5)	137
Figure 1-214	Remove the face-down rear cover (M651; 4 of 5)	138
Figure 1-215	Remove the face-down rear cover (M651; 5 of 5)	138
Figure 1-216	Remove the upper cover (M651; 1 of 6)	139
Figure 1-217	Remove the upper cover (M651; 2 of 6)	139
Figure 1-218	Remove the upper cover (M651; 3 of 6)	140
Figure 1-219	Remove the upper cover (M651; 4 of 6)	140
Figure 1-220	Remove the upper cover (M651; 5 of 6)	141
Figure 1-221	Remove the upper cover (M651; 6 of 6)	141
Figure 1-222	Reinstall the upper cover (M651)	142
Figure 1-223	Remove the front face-down cover and right-front upper cover (1 of 3)	143
Figure 1-224	Remove the front face-down cover and right-front upper cover (2 of 3)	144
Figure 1-225	Remove the front face-down cover and right-front upper cover (3 of 3)	144
Figure 1-226	Remove the intermediate cover assembly (M680)	145
Figure 1-227	Remove the right-rear cover	146
Figure 1-228	Remove the IPTU (1 of 5)	147
Figure 1-229	Remove the IPTU (2 of 5)	148
Figure 1-230	Remove the IPTU (3 of 5)	148
Figure 1-231	Remove the IPTU (4 of 5)	149
Figure 1-232	Remove the IPTU (5 of 5)	149
Figure 1-233	Remove the cassette feed guide (1 of 2)	150
Figure 1-234	Remove the cassette feed guide (2 of 2)	150
Figure 1-235	Reinstall the cassette feed guide	151
Figure 1-236	Remove the secondary transfer assembly (1 of 3)	152
Figure 1-237	Remove the secondary transfer assembly (2 of 3)	152

Figure 1-238	Remove the secondary transfer assembly (3 of 3)	153
Figure 1-239	Reinstall the secondary transfer assembly	153
Figure 1-240	Remove the Tray 1 separation pad (1 of 6)	154
Figure 1-241	Remove the Tray 1 separation pad (2 of 6)	154
Figure 1-242	Remove the Tray 1 separation pad (3 of 6)	155
Figure 1-243	Remove the Tray 1 separation pad (4 of 6)	155
Figure 1-244	Remove the Tray 1 separation pad (5 of 6)	156
Figure 1-245	Remove the Tray 1 separation pad (6 of 6)	156
Figure 1-246	Remove the RD sensor assembly (1 of 7)	157
Figure 1-247	Remove the RD sensor assembly (2 of 7)	157
Figure 1-248	Remove the RD sensor assembly (3 of 7)	158
Figure 1-249	Remove the RD sensor assembly (4 of 7)	158
Figure 1-250	Remove the RD sensor assembly (5 of 7)	159
Figure 1-251	Remove the RD sensor assembly (6 of 7)	159
Figure 1-252	Remove the RD sensor assembly (7 of 7)	160
Figure 1-253	Remove the registration assembly (1 of 8)	161
Figure 1-254	Remove the registration assembly (2 of 8)	161
Figure 1-255	Remove the registration assembly (3 of 8)	162
Figure 1-256	Remove the registration assembly (4 of 8)	162
Figure 1-257	Remove the registration assembly (5 of 8)	163
Figure 1-258	Remove the registration assembly (6 of 8)	163
Figure 1-259	Remove the registration assembly (7 of 8)	164
Figure 1-260	Remove the registration assembly (8 of 8)	164
Figure 1-261	Remove the paper-delivery fan (M651; 1 of 2)	166
Figure 1-262	Remove the paper-delivery fan (M651; 2 of 2)	167
Figure 1-263	Remove the paper-delivery fan (M680)	168
Figure 1-264	Remove the residual-toner-feed motor (M651)	169
Figure 1-265	Remove the residual-toner-feed motor (M680)	170
Figure 1-266	Remove the residual-toner transfer assembly (1 of 4)	171
Figure 1-267	Remove the residual-toner transfer assembly (2 of 4)	172
Figure 1-268	Remove the residual-toner transfer assembly (3 of 4)	172
Figure 1-269	Remove the residual-toner transfer assembly (4 of 4)	173
Figure 1-270	Remove the cartridge fan and environmental sensor (1 of 7)	174
Figure 1-271	Remove the cartridge fan and environmental sensor (2 of 7)	175
Figure 1-272	Remove the cartridge fan and environmental sensor (3 of 7)	175
Figure 1-273	Remove the cartridge fan and environmental sensor (4 of 7)	176
Figure 1-274	Remove the cartridge fan and environmental sensor (5 of 7)	176
Figure 1-275	Remove the cartridge fan and environmental sensor (6 of 7)	177
Figure 1-276	Remove the cartridge fan and environmental sensor (7 of 7)	177
Figure 1-277	Remove the residual toner full sensor (1 of 3)	178
Figure 1-278	Remove the residual toner full sensor (2 of 3)	179

Figure 1-279	Remove the residual toner full sensor (3 of 3)	179
Figure 1-280	Remove the delivery assembly (M651; 1 of 7)	180
Figure 1-281	Remove the delivery assembly (M651; 2 of 7)	181
Figure 1-282	Remove the delivery assembly (M651; 3 of 7)	181
Figure 1-283	Remove the delivery assembly (M651; 4 of 7)	182
Figure 1-284	Remove the delivery assembly (M651; 5 of 7)	182
Figure 1-285	Remove the delivery assembly (M651; 6 of 7)	183
Figure 1-286	Remove the delivery assembly (M651; 7 of 7)	183
Figure 1-287	Reinstall the delivery assembly (M651; 1 of 4)	184
Figure 1-288	Reinstall the delivery assembly (M651; 2 of 4)	184
Figure 1-289	Reinstall the delivery assembly (M651; 3 of 4)	185
Figure 1-290	Reinstall the delivery assembly (M651; 4 of 4)	185
Figure 1-291	Remove the delivery assembly (M680; 1 of 4)	186
Figure 1-292	Remove the delivery assembly (M680; 2 of 4)	187
Figure 1-293	Remove the delivery assembly (M680; 3 of 4)	187
Figure 1-294	Remove the delivery assembly (M680; 4 of 4)	188
Figure 1-295	Reinstall the delivery assembly (M680)	188
Figure 1-296	Remove the duplex-drive assembly	189
Figure 1-297	Remove the power-supply fan (M651; 1 of 2)	190
Figure 1-298	Remove the power-supply fan (M651; 2 of 2)	191
Figure 1-299	Remove the power-supply fan (M680; 1 of 3)	192
Figure 1-300	Remove the power-supply fan (M680; 2 of 3)	193
Figure 1-301	Remove the power-supply fan (M680; 3 of 3)	193
Figure 1-302	Remove the interconnect board (M651; 1 of 2)	194
Figure 1-303	Remove the interconnect board (M651; 2 of 2)	195
Figure 1-304	Remove the ICB (M680; 1 of 2)	196
Figure 1-305	Remove the ICB (M680; 2 of 2)	197
Figure 1-306	Remove the DC controller PCA only	199
Figure 1-307	Remove the low-voltage power supply (1 of 8)	200
Figure 1-308	Remove the low-voltage power supply (2 of 8)	201
Figure 1-309	Remove the low-voltage power supply (4 of 8)	201
Figure 1-310	Remove the low-voltage power supply (5 of 8)	202
Figure 1-311	Remove the low-voltage power supply (6 of 8)	202
Figure 1-312	Remove the low-voltage power supply (7 of 8)	203
Figure 1-313	Remove the low-voltage power supply (8 of 8)	203
Figure 1-314	Remove the DC controller PCA and tray (1 of 3)	205
Figure 1-315	Remove the DC controller PCA and tray (2 of 3)	205
Figure 1-316	Remove the DC controller PCA and tray (3 of 3)	206
Figure 1-317	Remove the high-voltage power supply lower (1 of 7)	208
Figure 1-318	Remove the high-voltage power supply lower (2 of 7)	208
Figure 1-319	Remove the high-voltage power supply lower (3 of 7)	209

Figure 1-320	Remove the high-voltage power supply lower (4 of 7)	209
Figure 1-321	Remove the high-voltage power supply lower (5 of 7)	210
Figure 1-322	Remove the high-voltage power supply lower (6 of 7)	210
Figure 1-323	Remove the high-voltage power supply lower (7 of 7)	211
Figure 1-324	Reinstall the high-voltage power supply lower	211
Figure 1-325	Remove the developing-disengagement motor	212
Figure 1-326	Remove the exhaust fan and fan duct (1 of 3)	214
Figure 1-327	Remove the exhaust fan and fan duct (2 of 3)	214
Figure 1-328	Remove the exhaust fan and fan duct (3 of 3)	215
Figure 1-329	Reinstall the exhaust fan and fan duct	215
Figure 1-330	Remove the pickup motor	216
Figure 1-331	Remove the lifter-drive assembly (1 of 3)	218
Figure 1-332	Remove the lifter-drive assembly (2 of 3)	218
Figure 1-333	Remove the lifter-drive assembly (3 of 3)	219
Figure 1-334	Remove the lifter base assembly (1 of 2)	220
Figure 1-335	Remove the lifter base assembly (2 of 2)	221
Figure 1-336	Reinstall the lifter base assembly (1 of 2)	222
Figure 1-337	Reinstall the lifter base assembly (2 of 2)	222
Figure 1-338	Remove the paper-pickup drive assembly (1 of 3)	224
Figure 1-339	Remove the paper-pickup drive assembly (2 of 3)	224
Figure 1-340	Remove the paper-pickup drive assembly (3 of 3)	225
Figure 1-341	Remove the paper-pickup assembly (1 of 11)	227
Figure 1-342	Remove the paper-pickup assembly (2 of 11)	227
Figure 1-343	Remove the paper-pickup assembly (3 of 11)	228
Figure 1-344	Remove the paper-pickup assembly (4 of 11)	228
Figure 1-345	Remove the paper-pickup assembly (5 of 11)	229
Figure 1-346	Remove the paper-pickup assembly (6 of 11)	229
Figure 1-347	Remove the paper-pickup assembly (7 of 11)	230
Figure 1-348	Remove the paper-pickup assembly (8 of 11)	230
Figure 1-349	Remove the paper-pickup assembly (9 of 11)	231
Figure 1-350	Remove the paper-pickup assembly (10 of 11)	231
Figure 1-351	Remove the paper-pickup assembly (11 of 11)	232
Figure 1-352	Remove the laser/scanner assembly (Y/M; 1 of 5)	234
Figure 1-353	Remove the laser/scanner assembly (Y/M; 2 of 5)	234
Figure 1-354	Remove the laser/scanner assembly (Y/M; 3 of 5)	235
Figure 1-355	Remove the laser/scanner assembly (Y/M; 4 of 5).	236
Figure 1-356	Remove the laser/scanner assembly (Y/M; 5 of 5)	236
Figure 1-357	Remove the laser/scanner assembly (C/K; 1 of 5)	238
Figure 1-358	Remove the laser/scanner assembly (C/K; 2 of 5)	238
Figure 1-359	Remove the laser/scanner assembly (C/K; 3 of 5)	239
Figure 1-360	Remove the laser/scanner assembly (C/K; 4 of 5)	239

Figure 1-361	Remove the laser/scanner assembly (C/K; 5 of 5)	240
Figure 1-362	Reinstall the PGC actuators (1 of 5)	240
Figure 1-363	Reinstall the PGC actuators (2 of 5)	241
Figure 1-364	Reinstall the PGC actuators (3 of 5)	241
Figure 1-365	Reinstall the PGC actuators (4 of 5)	242
Figure 1-366	Reinstall the PGC actuators (5 of 5)	242
Figure 1-367	Remove the high-voltage power supply upper (1 of 2)	244
Figure 1-368	Remove the high-voltage power supply upper (2 of 2)	244
Figure 1-369	Reinstall the high-voltage power supply upper	245
Figure 1-370	Remove the yellow, magenta, cyan, and black drum motors	247
Figure 1-371	Remove the fuser motor	249
Figure 1-372	Remove the ITB motor	251
Figure 1-373	Remove the main-drive assembly (1 of 7)	253
Figure 1-374	Remove the main-drive assembly (2 of 7)	253
Figure 1-375	Remove the main-drive assembly (3 of 7)	254
Figure 1-376	Remove the main-drive assembly (4 of 7)	254
Figure 1-377	Remove the main-drive assembly (5 of 7)	255
Figure 1-378	Remove the main-drive assembly (6 of 7)	255
Figure 1-379	Remove the main-drive assembly (7 of 7)	256
Figure 1-380	Reinstall the main-drive assembly (1 of 7)	257
Figure 1-381	Reinstall the main-drive assembly (2 of 7)	257
Figure 1-382	Reinstall the main-drive assembly (3 of 7)	258
Figure 1-383	Reinstall the main-drive assembly (4 of 7)	259
Figure 1-384	Reinstall the main-drive assembly (5 of 7)	260
Figure 1-385	Reinstall the main-drive assembly (6 of 7)	260
Figure 1-386	Reinstall the main-drive assembly (7 of 7)	261
Figure 1-387	Remove the fuser drive assembly (1 of 7)	263
Figure 1-388	Remove the fuser drive assembly (2 of 7)	263
Figure 1-389	Remove the fuser drive assembly (3 of 7)	264
Figure 1-390	Remove the fuser drive assembly (4 of 7)	264
Figure 1-391	Remove the fuser drive assembly (5 of 7)	265
Figure 1-392	Remove the fuser drive assembly (6 of 7)	265
Figure 1-393	Remove the fuser drive assembly (7 of 7)	266
Figure 1-394	Reinstall the fuser drive assembly	266
Figure 1-395	1x500-sheet paper feeder cover locations, front view	267
Figure 1-396	1x500-sheet paper feeder cover locations, rear view	268
Figure 1-397	Remove the front upper cover (1x500-sheet paper feeder)	269
Figure 1-398	Remove the rear cover (500-sheet paper feeder)	270
Figure 1-399	Remove the left cover (1x500-sheet paper feeder; 1 of 2)	271
Figure 1-400	Remove the left cover (1x500-sheet paper feeder; 2 of 2)	271
Figure 1-401	Remove the right-front cover (1x500-sheet paper feeder)	272

Figure 1-402	Remove the right cover (1x500-sheet paper feeder; 1 of 2)	273
Figure 1-403	Remove the right cover (1x500-sheet paper feeder; 2 of 2)	273
Figure 1-404	Remove the paper-pickup assembly (1x500-sheet paper feeder; 1 of 5)	274
Figure 1-405	Remove the paper-pickup assembly (1x500-sheet paper feeder; 2 of 5)	275
Figure 1-406	Remove the paper-pickup assembly (1x500-sheet paper feeder; 3 of 5)	275
Figure 1-407	Remove the paper-pickup assembly (1x500-sheet paper feeder; 4 of 5)	276
Figure 1-408	Remove the paper pickup assembly (1x500-sheet paper feeder; 5 of 5)	276
Figure 1-409	Remove the lifter base assembly (1x500-sheet paper feeder; 1 of 2)	277
Figure 1-410	Remove the lifter base assembly (1x500-sheet paper feeder; 2 of 2)	277
Figure 1-411	Reinstall the lifter base assembly (1x500-sheet paper feeder)	278
Figure 1-412	Remove the lifter assembly (1x500-sheet paper feeder; 1 of 2)	279
Figure 1-413	Remove the lifter assembly (1x500-sheet paper feeder; 2 of 2)	279
Figure 1-414	Remove the pickup motor assembly (1x500-sheet paper feeder; 1 of 2)	280
Figure 1-415	Remove the pickup motor assembly (1x500-sheet paper feeder; 2 of 2)	280
Figure 1-416	Remove the feeder PCA (1x500-sheet paper feeder)	281
Figure 1-417	1x500-sheet paper feeder with cabinet covers, front view	282
Figure 1-418	1x500-sheet paper feeder with cabinet covers, rear view	283
Figure 1-419	Remove the rear cover (1x500-sheet paper feeder with cabinet)	284
Figure 1-420	Remove the left cover (1x500-sheet paper feeder with cabinet)	285
Figure 1-421	Remove the stock box door (1x500-sheet paper feeder with cabinet; 1 of 2)	286
Figure 1-422	Remove the stock box door (1x500-sheet paper feeder with cabinet; 2 of 2)	286
Figure 1-423	Remove the front upper cover (1x500-sheet paper feeder with cabinet)	287
Figure 1-424	Remove the right-front cover (1x500-sheet paper feeder with cabinet)	288
Figure 1-425	Remove the right door (1x500-sheet paper feeder with cabinet; 1 of 3)	289
Figure 1-426	Remove the right door (1x500-sheet paper feeder with cabinet; 2 of 3)	289
Figure 1-427	Remove the right door (1x500-sheet paper feeder with cabinet; 3 of 3)	290
Figure 1-428	Remove the right center cover (1x500-sheet paper feeder with cabinet)	291
Figure 1-429	Remove the rear-right cover (1x500-sheet paper feeder with cabinet)	292
Figure 1-430	Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 1 of 4)	293
Figure 1-431	Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 2 of 4)	294
Figure 1-432	Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 3 of 4)	294
Figure 1-433	Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 4 of 4)	295
Figure 1-434	Remove the lifter base assembly (1x500-sheet paper feeder with cabinet; 1 of 2)	296
Figure 1-435	Remove the lifter base assembly (1x500-sheet paper feeder with cabinet; 2 of 2)	296
Figure 1-436	Remove the lifter assembly (1x500-sheet paper feeder with cabinet; 1 of 2)	297
Figure 1-437	Remove the lifter assembly (1x500-sheet paper feeder with cabinet; 2 of 2)	297
Figure 1-438	Remove the pickup motor assembly (1x500-sheet paper feeder with cabinet)	298
Figure 1-439	Remove the feeder PCA (1x500-sheet paper feeder with cabinet)	299
Figure 1-440	2,500-sheet paper feeder HCI covers, front view	300
Figure 1-441	2,500-sheet paper feeder HCI covers, rear view	301
Figure 1-442	Remove the rear cover (2,500-sheet paper feeder HCI; 1 of 2)	302

Figure 1-443	Remove the rear cover (2,500-sheet paper feeder HCI; 2 of 2)	302
Figure 1-444	Remove the left cover (2,500-sheet paper feeder HCI)	303
Figure 1-445	Remove the front upper cover (2,500-sheet paper feeder HCI)	304
Figure 1-446	Remove the right front cover (2,500-sheet paper feeder HCI)	305
Figure 1-447	Remove the right door (2,500-sheet paper feeder HCI; 1 of 3)	306
Figure 1-448	Remove the right door (2,500-sheet paper feeder HCI; 2 of 3)	306
Figure 1-449	Remove the right door (2,500-sheet paper feeder HCI; 3 of 3)	307
Figure 1-450	Remove the right center cover (2,500-sheet paper feeder HCI)	308
Figure 1-451	Remove the right rear cover (2,500-sheet paper feeder HCI)	309
Figure 1-452	Remove the right lower cover (2,500-sheet paper feeder HCI)	310
Figure 1-453	Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI; 1 of 3)	311
Figure 1-454	Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI; 2 of 3)	311
Figure 1-455	Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI; 3 of 3)	312
Figure 1-456	Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 1 of 4)	313
Figure 1-457	Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 2 of 4)	313
Figure 1-458	Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 3 of 4)	314
Figure 1-459	Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 4 of 4)	314
Figure 1-460	Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI; 1 of 2)	315
Figure 1-461	Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI; 2 of 2)	315
Figure 1-462	Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI; 1 of 2)	316
Figure 1-463	Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI; 2 of 2)	316
Figure 1-464	Remove the Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)	317
Figure 1-465	Remove the pickup motor (2,500-sheet paper feeder HCI)	318
Figure 1-466	Remove the HCI PCA (2,500-sheet paper feeder HCI)	319
Figure 1-467	Stapling mailbox covers, front view	320
Figure 1-468	Stapling mailbox covers, rear view	320
Figure 1-469	Remove the front cover (stapling mailbox)	321
Figure 1-470	Remove the rear cover (stapling mailbox)	322
Figure 1-471	Remove the top door (stapling mailbox)	323
Figure 1-472	Remove the holder connector (stapling mailbox)	324
Figure 1-473	Remove the top cover (stapling mailbox)	325
Figure 1-474	Remove output bin 3 (stapling mailbox; 1 of 2)	326
Figure 1-475	Remove output bin 3 (stapling mailbox; 2 of 2)	326
Figure 1-476	Remove the output bin 3 driver PCA (stapling mailbox; 1 of 3)	327
Figure 1-477	Remove the output bin 3 driver PCA (stapling mailbox; 2 of 3)	327
Figure 1-478	Remove the output bin 3 driver PCA (stapling mailbox; 3 of 3)	328
Figure 1-479	Remove the stapler assembly (stapling mailbox)	329
Figure 1-480	Remove the stamp solenoid (stapling mailbox; 1 of 2)	330
Figure 1-481	Remove the stamp solenoid (stapling mailbox; 2 of 2)	330
Figure 1-482	Remove the output bin sensor PCA (stapling mailbox; 1 of 2)	331
Figure 1-483	Remove the output bin sensor PCA (stapling mailbox; 2 of 2)	332

Figure 1-484	Remove the stacking panel (stapling mailbox; 1 of 2)	333
Figure 1-485	Remove the stacking panel (stapling mailbox; 2 of 2)	333
Figure 1-486	Remove the jogger assembly (stapling mailbox; 1 of 3)	334
Figure 1-487	Remove the jogger assembly (stapling mailbox; 2 of 3)	334
Figure 1-488	Remove the jogger assembly (stapling mailbox; 3 of 3)	335
Figure 1-489	Remove the flapper guide assembly (stapling mailbox)	336
Figure 1-490	Reinstall the flapper guide assembly (stapling mailbox)	337
Figure 1-491	Remove the flapper assembly (stapling mailbox)	338
Figure 1-492	Remove the output bin solenoid (stapling mailbox)	339
Figure 1-493	Remove the output bin assembly (stapling mailbox; 1 of 3)	340
Figure 1-494	Remove the output bin assembly (stapling mailbox; 2 of 3)	341
Figure 1-495	Remove the output bin assembly (stapling mailbox; 3 of 3)	341
Figure 1-496	Remove the output bin 3 drive assembly (stapling mailbox; 1 of 4)	342
Figure 1-497	Remove the output bin 3 drive assembly (stapling mailbox; 2 of 4)	343
Figure 1-498	Remove the output bin 3 drive assembly (stapling mailbox; 3 of 4)	343
Figure 1-499	Remove the output bin 3 drive assembly (stapling mailbox; 4 of 4)	344
Figure 1-500	Remove the stage-top sub-assembly (stapling mailbox; 1 of 14)	345
Figure 1-501	Remove the stage-top sub-assembly (stapling mailbox; 2 of 14)	346
Figure 1-502	Remove the stage-top sub-assembly (stapling mailbox; 3 of 14)	346
Figure 1-503	Remove the stage-top sub-assembly (stapling mailbox; 4 of 14)	347
Figure 1-504	Remove the stage-top sub-assembly (stapling mailbox; 5 of 14)	347
Figure 1-505	Remove the stage-top sub-assembly (stapling mailbox; 6 of 14)	348
Figure 1-506	Remove the stage-top sub-assembly (stapling mailbox; 7 of 14)	348
Figure 1-507	Remove the stage-top sub-assembly (stapling mailbox; 8 of 14)	349
Figure 1-508	Remove the stage-top sub-assembly (stapling mailbox; 9 of 14)	349
Figure 1-509	Remove the stage-top sub-assembly (stapling mailbox; 10 of 14)	350
Figure 1-510	Remove the stage-top sub-assembly (stapling mailbox; 11 of 14)	350
Figure 1-511	Remove the stage-top sub-assembly (stapling mailbox; 12 of 14)	351
Figure 1-512	Remove the stage-top sub-assembly (stapling mailbox; 13 of 14)	351
Figure 1-513	Remove the stage-top sub-assembly (stapling mailbox; 14 of 14)	352
Figure 1-514	Reinstall the stage-top sub-assembly (stapling mailbox; 1 of 2)	353
Figure 1-515	Reinstall the stage-top sub-assembly (stapling mailbox; 2 of 2)	353
Figure 1-516	Remove the stage assembly (stapling mailbox; 1 of 7)	354
Figure 1-517	Remove the stage assembly (stapling mailbox; 2 of 7)	355
Figure 1-518	Remove the stage assembly (stapling mailbox; 3 of 7)	355
Figure 1-519	Remove the stage assembly (stapling mailbox; 4 of 7)	356
Figure 1-520	Remove the stage assembly (stapling mailbox; 5 of 7)	356
Figure 1-521	Remove the stage assembly (stapling mailbox; 6 of 7)	357
Figure 1-522	Remove the stage assembly (stapling mailbox; 7 of 7)	357
Figure 1-523	Remove the entrance solenoid (stapling mailbox; 1 of 3)	358
Figure 1-524	Remove the entrance solenoid (stapling mailbox; 2 of 3)	359

Figure 1-525	Remove the entrance solenoid (stapling mailbox; 3 of 3)	359
Figure 1-526	Remove the feed motor (stapling mailbox; 1 of 3)	360
Figure 1-527	Remove the feed motor (stapling mailbox; 2 of 3)	361
Figure 1-528	Remove the feed motor (stapling mailbox; 3 of 3)	361
Figure 1-529	Remove the paddle motor (stapling mailbox)	362
Figure 2-1	Document feeder and scanner assemblies (M680)	370
Figure 2-2	Document feeder assemblies (M680, 1 of 2)	372
Figure 2-3	Document feeder assemblies (M680, 2 of 2)	374
Figure 2-4	Scan control board (SCB; M680)	376
Figure 2-5	Covers (M651)	378
Figure 2-6	Covers (M680)	380
Figure 2-7	Right door	382
Figure 2-8	Control panels	384
Figure 2-9	Internal assemblies (M651)	386
Figure 2-10	Internal assemblies (M680)	388
Figure 2-11	Internal assemblies (1 of 6)	390
Figure 2-12	Internal assemblies (2 of 6)	392
Figure 2-13	Internal assemblies (3 of 6)	394
Figure 2-14	Internal assemblies (4 of 6)	396
Figure 2-15	Internal assemblies (5 of 6)	398
Figure 2-16	Internal assemblies (6 of 6)	400
Figure 2-17	500-sheet paper feeder covers	402
Figure 2-18	500-sheet paper feeder components	404
Figure 2-19	1x500-sheet paper feeder with cabinet covers	406
Figure 2-20	1x500-sheet paper feeder with cabinet components	408
Figure 2-21	2,500-sheet paper feeder HCI covers	410
Figure 2-22	2,500-sheet paper feeder HCI components (1 of 2)	412
Figure 2-23	2,500-sheet paper feeder HCI components (2 of 2)	414
Figure 2-24	Stapling mailbox covers	416
Figure 2-25	Stapling mailbox assemblies (1 of 2)	418
Figure 2-26	Stapling mailbox assemblies (2 of 2)	420

1 Removal and replacement

- [Removal and replacement strategy](#)
- [Customer self repair \(CSR\) assemblies](#)
- [Document feeder and scanner \(M680\)](#)
- [External panels, covers, and doors](#)
- [Internal assemblies](#)
- [Optional input and output accessories](#)

Removal and replacement strategy

Considerations during removal and replacement

This chapter describes the removal and replacement of field-replaceable units (FRUs) only.

Replacing FRUs is generally the reverse of removal. Notes are included to provide directions for difficult or critical replacement procedures.

HP does not support repairing individual subassemblies or troubleshooting to the PCA component level.

⚠ WARNING! Never operate or service the product with the protective cover removed from the laser scanner assembly. The reflected beam, although invisible, can cause damage to the eyes.

The sheet-metal parts can have sharp edges. Be careful when handling sheet-metal parts.

Turn the product off, wait 5 seconds, and then remove the power cord before attempting to service the product. *If this warning is not followed, severe injury and damage to the product can result.* The power must be on for certain functional checks during troubleshooting. However, the power supply should be disconnected during parts removal.

⚠ CAUTION: 

Some parts are sensitive to electrostatic discharge (ESD). Look for the ESD reminder when removing product parts. Always perform service work at an ESD-protected workstation or mat. If an ESD workstation or mat is not available, touch the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.

Protect the ESD-sensitive assemblies by placing them in ESD pouches when they are out of the product.

Do not bend or fold the flat flexible cables (FFCs) during removal or installation.

📝 NOTE: To install a self-tapping screw, first turn it counterclockwise to align it with the existing thread pattern, and then carefully turn it clockwise to tighten. Do not overtighten. If a self-tapping screw-hole becomes stripped, repair the screw-hole or replace the affected assembly.

💡 TIP: For clarity, some figures in this chapter show assemblies removed that are not required to be removed to service the product (for example, the scanner and document feeder assemblies). The procedures in this manual are correct for this product.

Required tools

- #2 Phillips screwdriver with a magnetic tip and a 152-mm (6-in) shaft length




NOTE: For the best fit, use a JIS #2 Phillips screwdriver for the stapler/stacker.

- Small, flat-blade screwdriver
- Needle-nose pliers
- ESD strap (if one is available)
- Penlight

CAUTION: Always use a Phillips screwdriver (callout 1). Do not use a Pozidriv screwdriver (callout 2) or any motorized screwdriver. These can damage screws or screw threads.

Figure 1-1 Screwdrivers

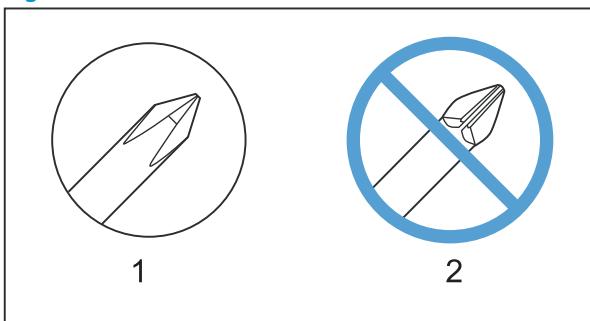

Types of screws

WARNING! Make sure that assemblies are replaced with the correct screw type. Using the incorrect screw (for example, substituting a long screw for the correct shorter screw) can cause damage to the product or interfere with product operation. Do not intermix screws that are removed from one assembly with the screws that are removed from another assembly.

For a complete list of screw types and part numbers, see the Parts chapter.

Service approach

The product uses a field repair strategy. Defective parts are diagnosed and replaced at the Field Replaceable Unit (FRU) assembly level. Repair normally begins by using the product internal diagnostics and the following two-step process:

1. Isolate the problem to the major system (for example, the network or server, or the product).
2. Troubleshoot the problem by using the procedures in the troubleshooting chapter.

After locating a faulty part, the product can usually be repaired at the assembly level by replacing FRUs. Some mechanical assemblies might need to be repaired at the subassembly level. Hewlett-Packard Company does not support replacement of components on the printed circuit assemblies.

The user replaces toner cartridges as they are depleted. Additional instructions about other user-replaceable parts are provided in this section.

The product tracks the amount of use on the customer-replaceable supplies by keeping a page count. The product prompts the user to replace certain items when a supply is depleted or a specific number of pages has been printed.

Swapping toner cartridges between products might cause a misrepresentation of supply life values and is not recommended.

Before performing service

⚠️ WARNING! Turn the product off, wait 5 seconds, and then remove the power cord before attempting to service the product. *If this warning is not followed, severe injury and damage to the product can result.* The power must be on for certain functional checks during troubleshooting. However, the power supply should be disconnected during parts removal.

1. Remove all paper.
2. Place the product on an ESD mat (if available). If an ESD workstation or mat is not available, touching the sheet-metal chassis to provide a static ground *before* touching an ESD-sensitive assembly.
3. Remove the toner cartridges.
4. Remove the toner collection unit (TCU)
5. Remove the trays.

After performing service

1. Reinstall the toner cartridges.
2. Reinstall the trays.
3. Return all paper to the trays.
4. Plug in the power cable and turn on the product.
5. Perform print-quality tests by printing from a host computer, the scanner glass, and the document feeder.

Parts removal order


If multiple assemblies must be removed to gain access to an assembly, the first step of the removal procedure lists all of the assemblies that must be removed to gain access to that assembly. Use these lists to determine which parts must be removed before removing other parts.

Customer self repair (CSR) assemblies

Toner cartridges


1. Open the front door.

Figure 1-2 Remove the toner cartridges (1 of 2)

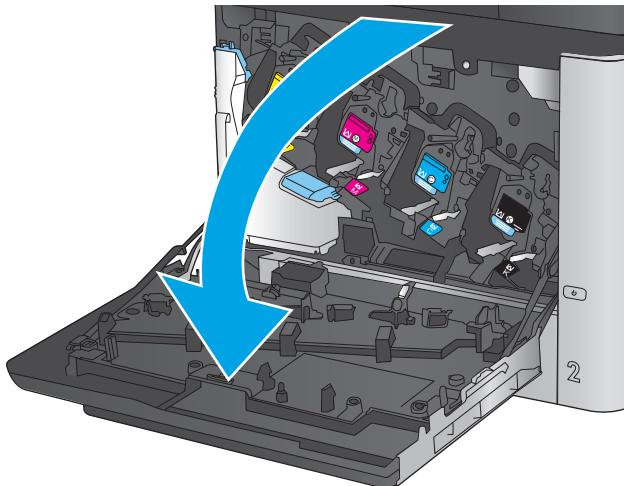

2. Grasp the handle of the toner cartridge and pull out to remove it.

Figure 1-3 Remove the toner cartridges (2 of 2)

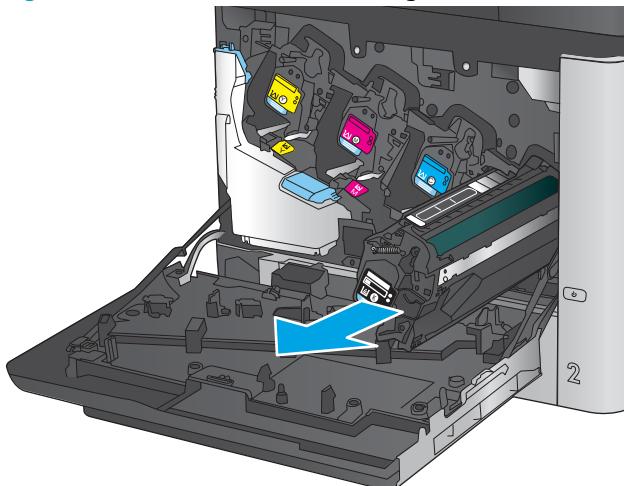


Toner-collection unit

 **NOTE:** The toner collection unit is designed for a single use. Do not attempt to empty the toner collection unit and reuse it. Doing so could lead to toner being spilled inside the product, which could result in reduced print quality. After use, return the toner collection unit to HP's Planet Partners program for recycling.


1. Open the front door.

Figure 1-4 Remove the toner collection unit (1 of 3)

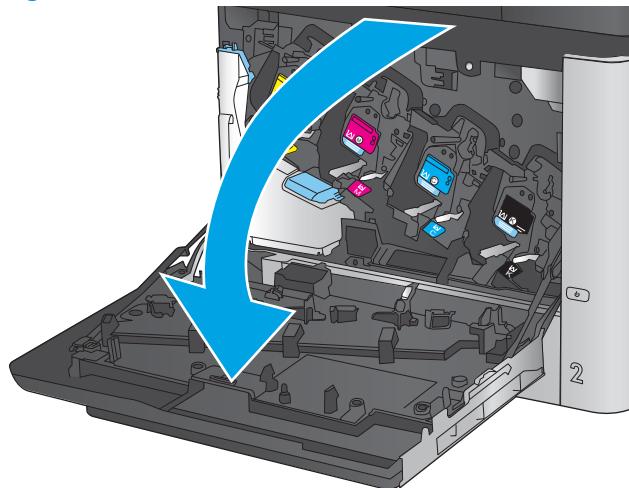


2. Grasp the top of the toner collection unit and remove it from the product.

Figure 1-5 Remove the toner collection unit (2 of 3)

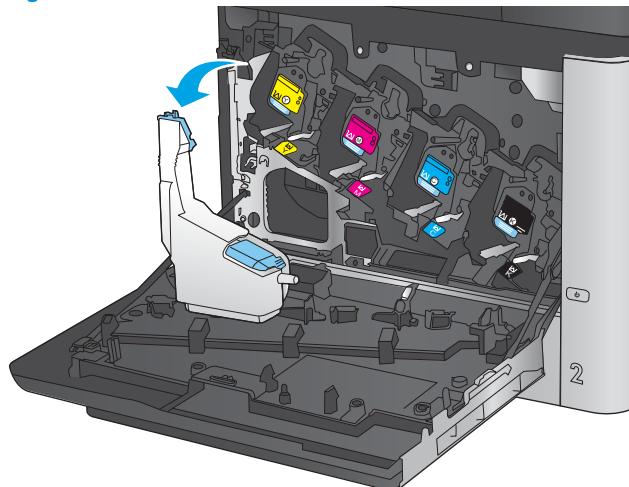

3. To prevent toner spills, place the attached cap over the opening at the top of the unit.

Figure 1-6 Remove the toner collection unit (3 of 3)

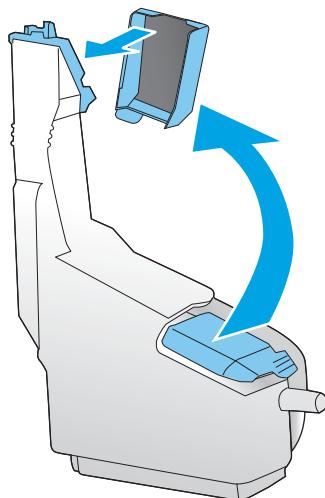


Tray



NOTE: Use this procedure to remove Tray 2 and the optional 500-sheet trays.

1. Pull the tray straight out of the product until it stops.

Figure 1-7 Remove the tray (1 of 2)

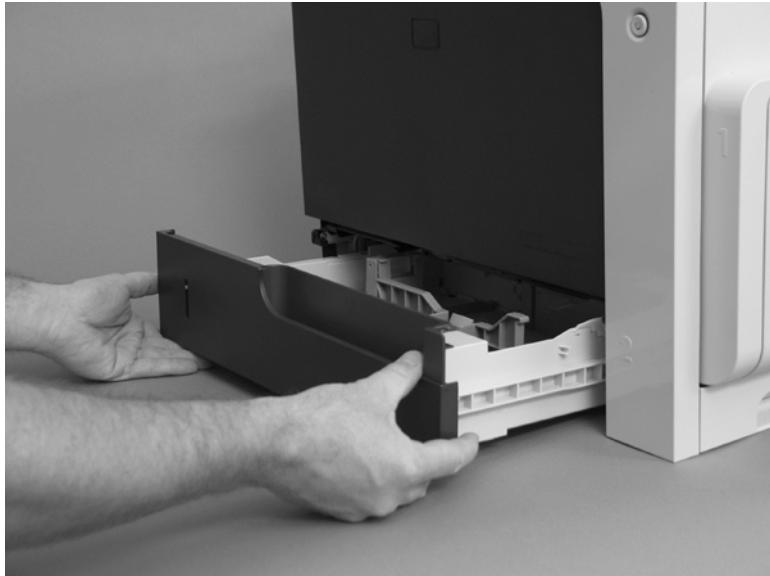

2. Push the tray in slightly, carefully lift up to release it, and then remove the tray.

Figure 1-8 Remove the tray (2 of 2)



Formatter PCA



CAUTION:  ESD sensitive assembly.

1. Turn the product off and disconnect the power and interface cable or interface cables.
2. Unscrew the formatter thumbscrews, and then firmly pull the formatter out of the product. Place the formatter on a clean, flat, grounded surface.



Reinstallation tip When reinstalling the formatter, push firmly on the right side to make sure the formatter is seated.

Figure 1-9 Remove the formatter



Install a replacement formatter

1. Remove the following components from the failed formatter, and then install them on the replacement assembly.

M651 models

- Hard-disk drive or solid-state memory. See [Hard-disk drive \(HDD\) or solid-state memory \(SSM\) on page 13](#).
- Memory DIMM. See [Memory DIMM on page 21](#)

M680 models

- Fax PCA. See [Fax PCA \(M680\) on page 12](#)
- Hard-disk drive. See [Hard-disk drive \(HDD\) or solid-state memory \(SSM\) on page 13](#).
- Memory DIMM. See [Memory DIMM on page 21](#)

2. Do the following:

- a. Reconnect any removed interface cables.
- b. Plug in the power cord.


3. Turn the product power on.

To verify that the formatter is correctly installed, observe the following functions of the LEDs on the formatter:

- The heartbeat LED (callout 1) illuminates if the formatter is functioning correctly.
 - While the product is initializing, the heartbeat LED illuminates solid red for about one second, and then turns solid green for about twenty seconds.
 - After the initialization sequence is complete, the heartbeat LED blinks continuously if the printer is functioning correctly.
- The connectivity LED (callout 2) indicates that the formatter is completely seated. It illuminates green when the product power is turned on and stays green if the formatter is properly seated.

If the LEDs do not correctly function, turn the product power off, remove the formatter, and then reinstall it (make sure that the formatter is fully seated before tightening the thumbscrews).

Figure 1-10 Formatter LEDs

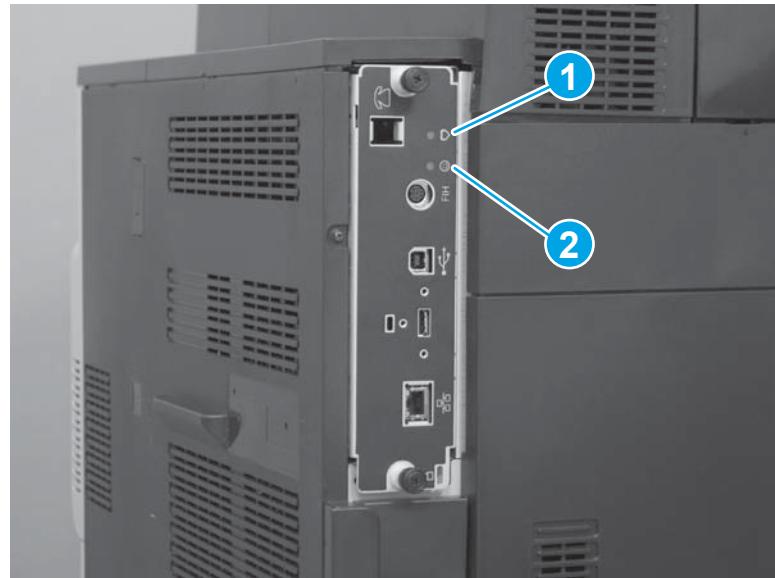

Fax PCA (M680)

Before proceeding, remove the following assemblies


- Formatter. See [Formatter PCA on page 9](#).

Remove the fax PCA (M680)

 **CAUTION:**  ESD sensitive assembly.

- ▲ Rotate the connector end of the fax PCA up and away from the formatter to release it. Remove the fax PCA.

Figure 1-11 Remove the fax PCA (M680)

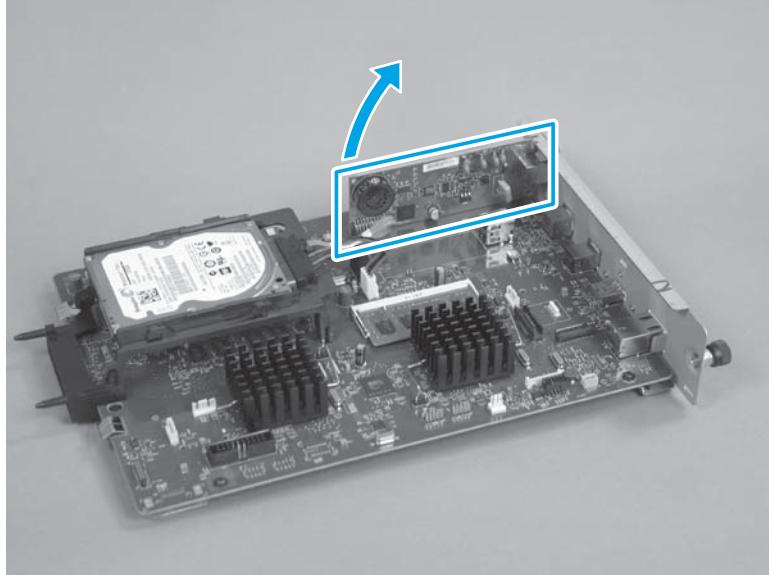


Hard-disk drive (HDD) or solid-state memory (SSM)

Before proceeding, remove the following assemblies

- Formatter. See [Formatter PCA on page 9](#).

Identify the storage device type

Figure 1-12 Identify the SSM and HDD

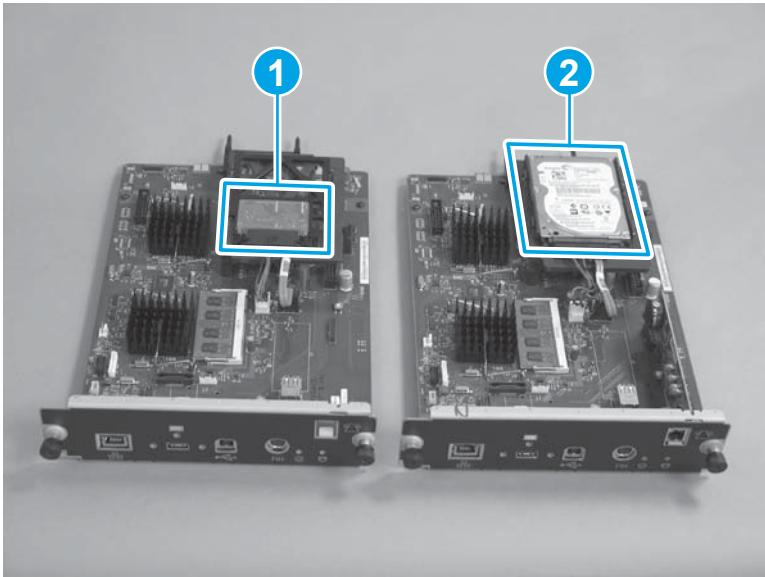


1. Solid-state memory (SSM). See [Remove the SSM \(M651\) on page 14](#).
2. Hard-disk drive (HDD). See [Remove the HDD on page 17](#).

Remove the SSM (M651)

CAUTION:  ESD sensitive assembly.


1. Disconnect two connectors.

Figure 1-13 Remove the SSM (1 of 5)

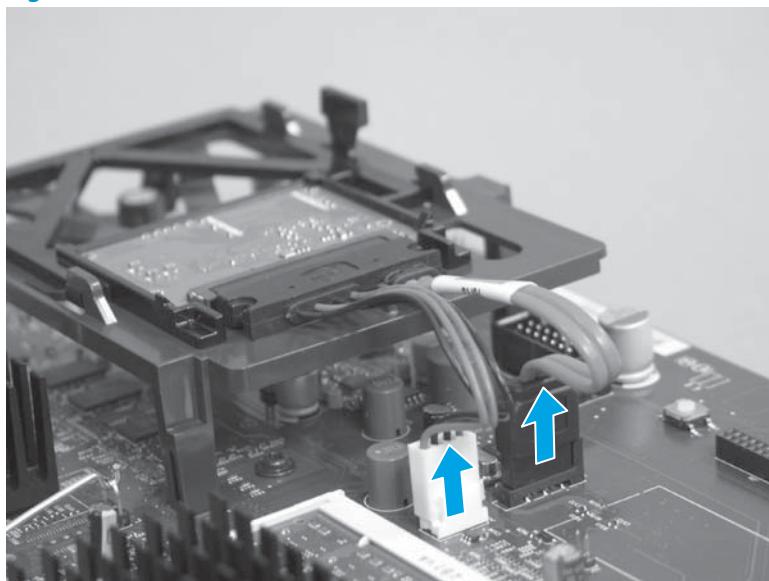


2. Push down on the two levers on each side of the bracket (callout 1), and hold them down, while sliding the bracket in the direction of the arrow (callout 2).

Figure 1-14 Remove the SSM (2 of 5)

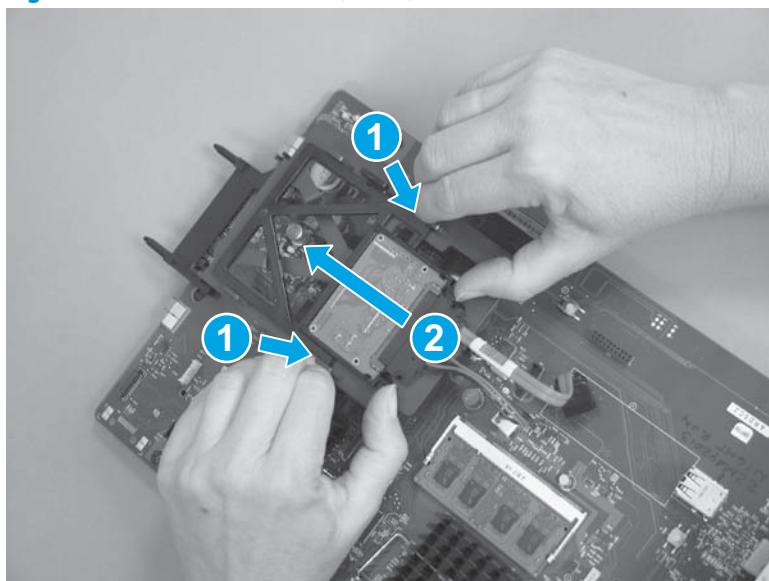


3. Remove the connector. (Transfer the connector to the new SSM.)

Figure 1-15 Remove the SSM (3 of 5)

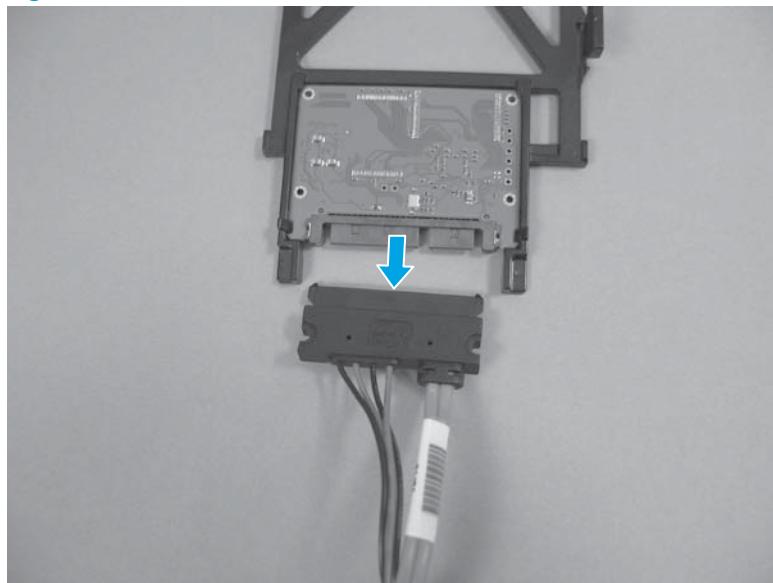

4. Spread the latches apart.


Figure 1-16 Remove the SSM (4 of 5)

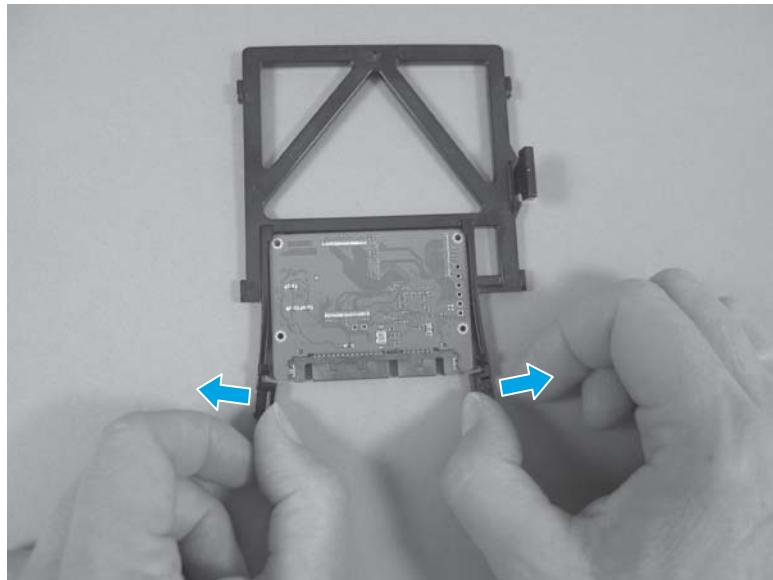

5. Lift the SSM out of the bracket.

 **NOTE:** If a replacement SSM is installed, reload the product firmware. See [Reinstall the product firmware on page 19](#).

Figure 1-17 Remove the SSM (5 of 5)

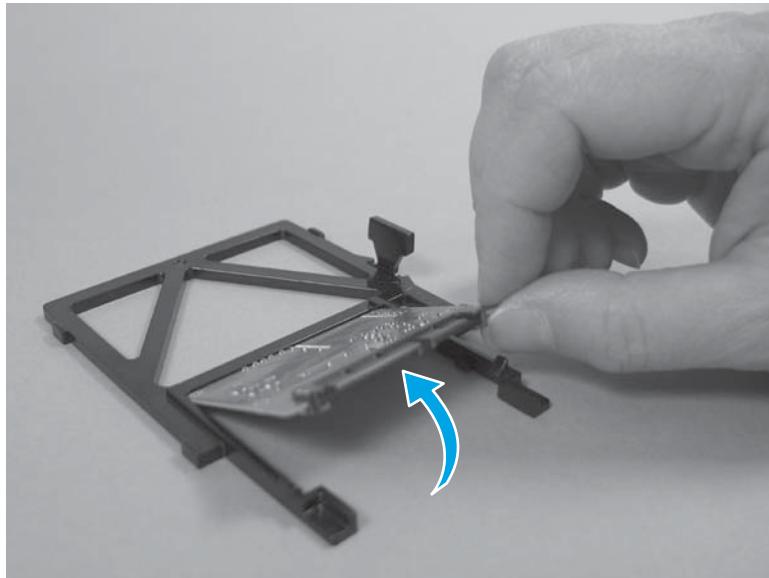


Remove the HDD

CAUTION:  ESD sensitive assembly.


1. Disconnect two connectors.

Figure 1-18 Remove the HDD (1 of 4)

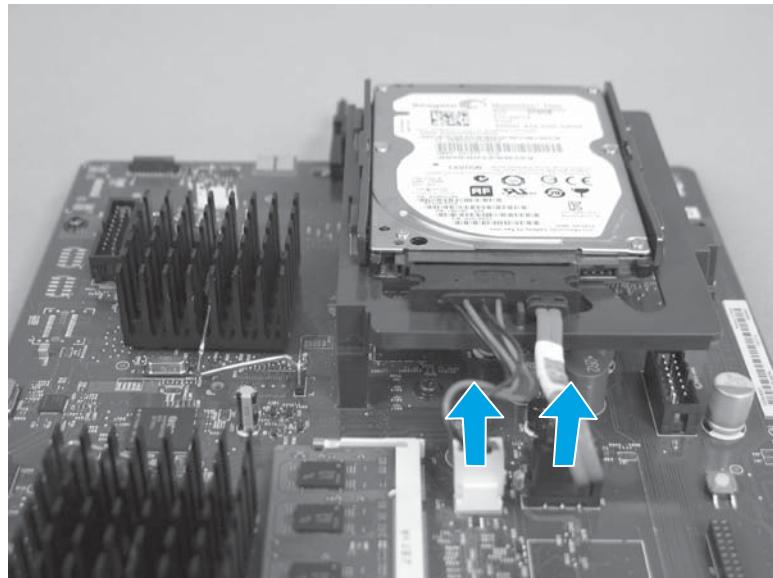


2. Depress the latches on each side of the bracket.

Figure 1-19 Remove the HDD (2 of 4)

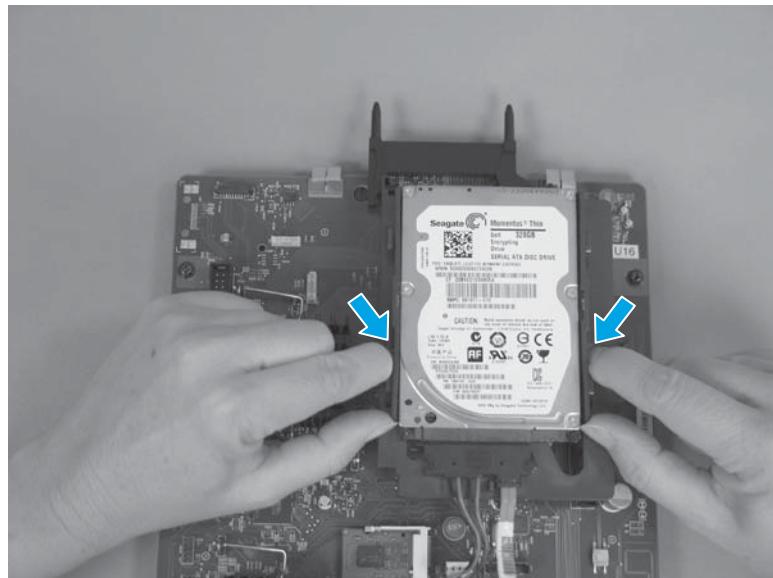

3. Slide the HDD in the direction of the arrow to remove it from the bracket.

Figure 1-20 Remove the HDD (3 of 4)

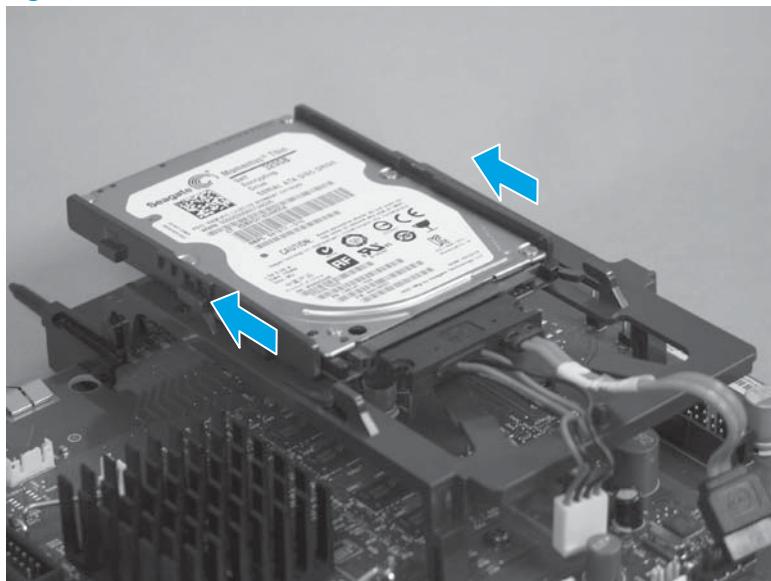

4. Remove the connector from the HDD. (Transfer the connector to the new HDD.)

 **NOTE:** If a replacement HDD is installed, reload the product firmware. See [Reinstall the product firmware on page 19](#).

Figure 1-21 Remove the HDD (4 of 4)



Reinstall the product firmware

 **NOTE:** If a replacement HDD or SSM is installed, use this procedure to reload the product firmware on the replacement drive.

If the HDD or SSM is removed so that it can be installed on a replacement formatter, skip this procedure.

1. Locate the product support Web site.
 - **In the US:**
 - Go to <http://www.hp.com/support/ljM651> or <http://www.hp.com/support/ljflowMFPM680>.
 - **Outside the US:**
 - Go to <http://www.hp.com/support>.
 - Select the appropriate country/region.
 - Select **Drivers & Downloads**
 - Enter the product name, and then select **Go**.
 - Select the appropriate product model.
2. Select **Cross operating system (BIOS, Firmware, Diagnostics, etc.)**.
3. Locate the firmware download, and then select **Download**.
4. Copy the firmware upgrade file to the root directory of a USB flash drive. The firmware upgrade file has a .bdl extension.
5. Insert the USB flash drive into the USB port on the product control panel, and then turn the product power on.
6. The following message displays on the control panel: **Error: 99.09.63 Incorrect Disk**. Touch the **OK** button to continue.
7. Wait for the **Pre-Boot** menu to appear on the control-panel display, and then touch the down arrow ▼ button to scroll to **3 Administrator**. Touch the **OK** button to select it.
8. Touch the down arrow ▼ button to scroll to **6 Manage Disk**. Touch the **OK** button to select it.
9. Touch the down arrow ▼ button to scroll to **+ 6 Boot Device**. Touch the **OK** button to select it.
10. Touch the down arrow ▼ button to scroll to **2 Erase / Unlock**. Touch the **OK** button to select it.
11. The message **Proceed with Requested Action** displays. Touch the **OK** button to select it.
12. Touch the back ⏪ button to return to the **Pre-Boot** menu home screen.
13. Touch the down arrow ▼ button to scroll to **3 Administrator**. Touch the **OK** button to select it.
14. Touch the down arrow ▼ button to scroll to **1 Download**. Touch the **OK** button to select it.
15. Touch the down arrow ▼ button to scroll to **3 USB Thumbdrive**. Touch the **OK** button to select it.

16. Touch the down arrow ▼ button to scroll to the firmware upgrade file that was downloaded earlier. Touch the **OK** button to select it.



NOTE: If no .bdl files are listed, try saving the file to a different USB flash drive.

17. Wait while the file transfers. When the transfer is complete, the message **Complete** displays on the screen.
18. Turn the product off, remove the USB flash drive, and then turn the product on. Wait for several minutes while the product initializes.

Memory DIMM

Before proceeding, remove the following assemblies


- Formatter. See [Formatter PCA on page 9](#).

Remove the memory DIMM

CAUTION:  ESD sensitive assembly.


1. Release two clips.

Figure 1-22 Remove the memory DIMM (1 of 2)

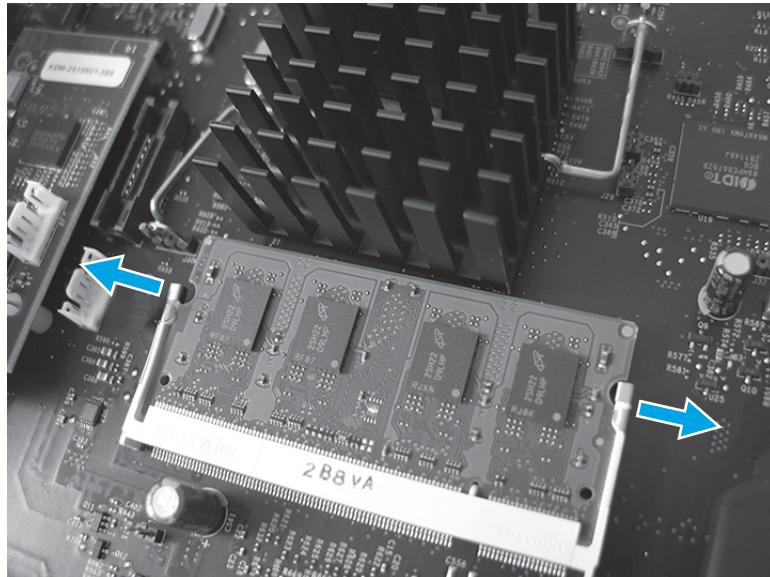

2. Rotate the DIMM upward (callout 1), and then remove it (callout 2).


Figure 1-23 Remove the memory DIMM (2 of 2)

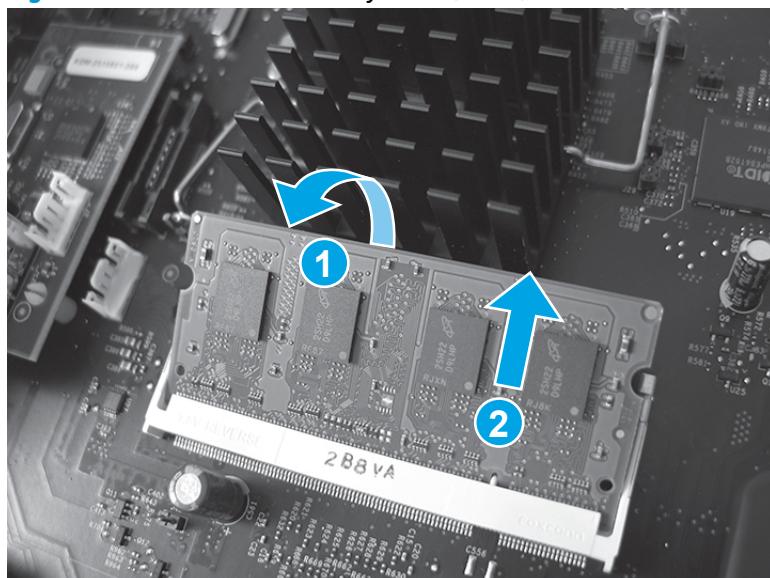

Reinstall the memory DIMM


1. Align the notch (callout 1) on the DIMM with the tab (callout 2) on the connector.

Figure 1-24 Reinstall the memory DIMM

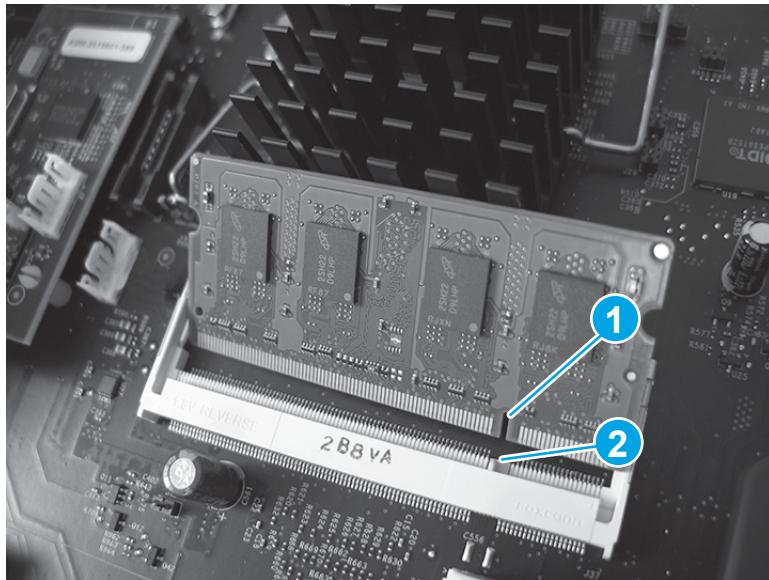


2. Slide the DIMM into the connector (callout 1), and then rotate the DIMM down, toward the formatter. (callout 2).

Figure 1-25 Reinstall the memory DIMM

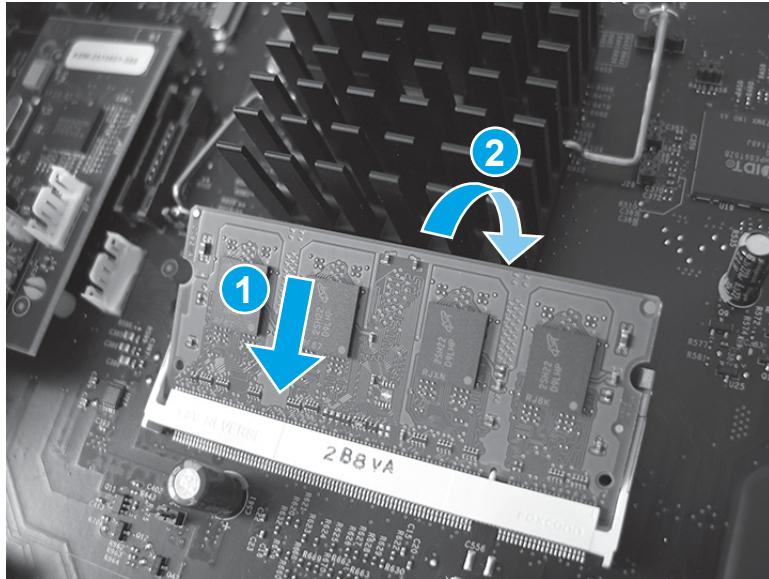

3. Make sure that the memory DIMM snaps into the holder.

Figure 1-26 Reinstall the memory DIMM

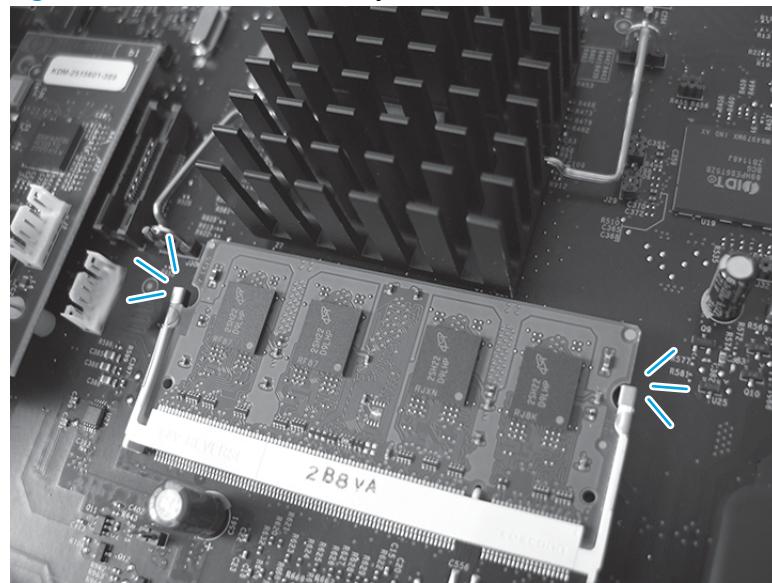

Fuser

⚠ CAUTION: The fuser might be hot. Allow enough time after turning off the product power for the fuser to cool.

💡 NOTE: The product detects a new fuser using a fusible link that blows after 100 pages have been printed. If a new fuser is installed for troubleshooting purposes, be sure to remove it before printing 100 pages.

1. Open the right-door assembly.

Figure 1-27 Remove the fuser (1 of 2)



2. Grasp the handles and squeeze the blue release levers.

Pull the fuser straight out of the product to remove it.

Figure 1-28 Remove the fuser (2 of 2)



Intermediate transfer belt (ITB)

⚠ CAUTION: Do not touch the black-plastic belt. Skin oils and fingerprints on the belt can cause print-quality problems. Always place the ITB on a flat surface in a safe and protected location.


1. Open the right-door assembly.

Figure 1-29 Remove the intermediate transfer belt (1 of 4)




2. Use the blue lever to lower the secondary transfer assembly.

Figure 1-30 Remove the intermediate transfer belt (2 of 4)

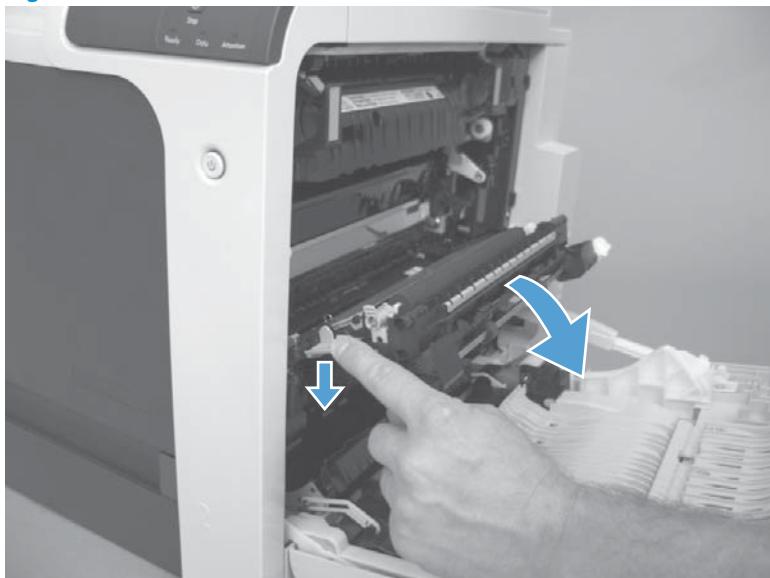

3. Grasp the small handles on the ITB and then pull the ITB out of the product until two large handles expand along the right- and left-side of the ITB.


Figure 1-31 Remove the intermediate transfer belt (3 of 4)

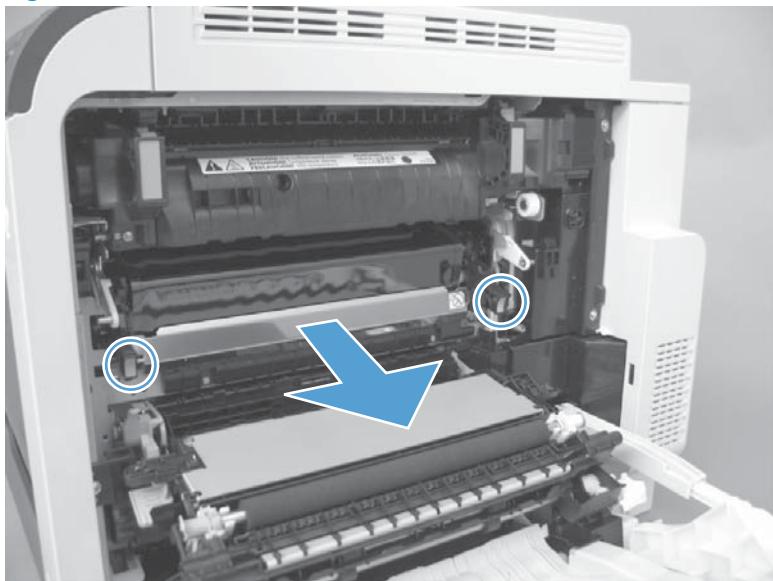


4. Grasp the large handles on the ITB and then pull the ITB straight out of the product to remove it.

⚠ CAUTION: The ITB is a sensitive assembly. Be careful when handling the ITB so that it is not damaged. Always place the ITB in a safe and protected location.

Figure 1-32 Remove the intermediate transfer belt (4 of 4)

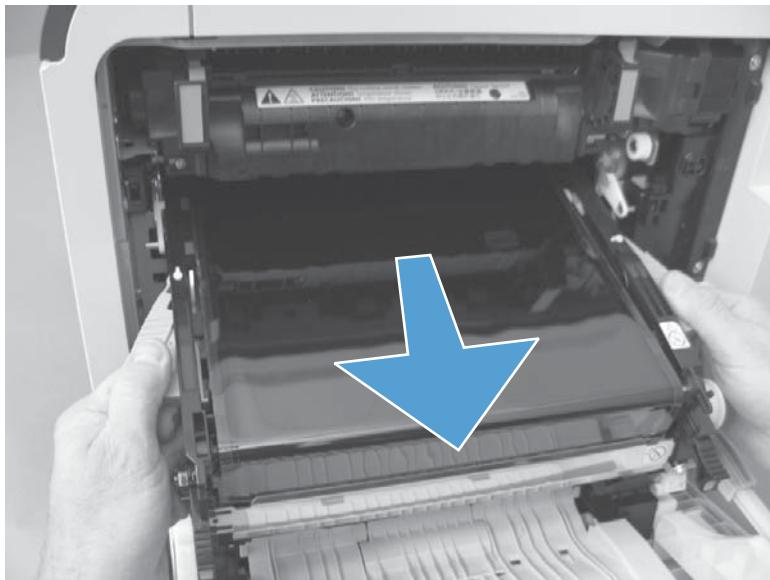

💡 Reinstallation tip If a replacement ITB is installed, make sure to remove the packing tape (callout 1) and the protective cover sheet (callout 2).

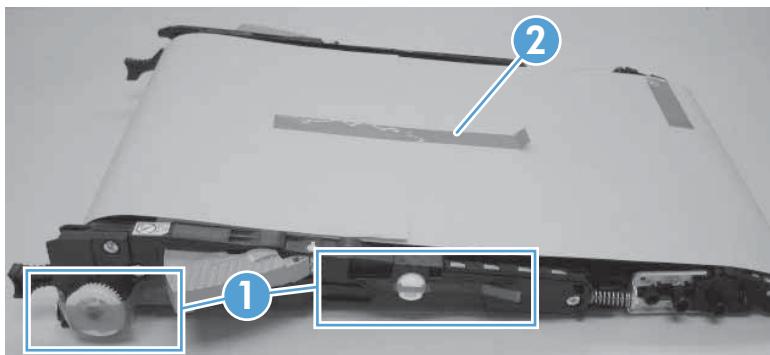

Control panel assembly (M651)

1. Tilt the control panel up.

Figure 1-33 Remove the control panel (M651; 1 of 8)




2. Release the latch on the control-panel cover, and remove the cover.

Figure 1-34 Remove the control panel (M651; 2 of 8)




3. Rotate the blue lever counterclockwise to unlock the control-panel assembly.

Figure 1-35 Remove the control panel (M651; 3 of 8)

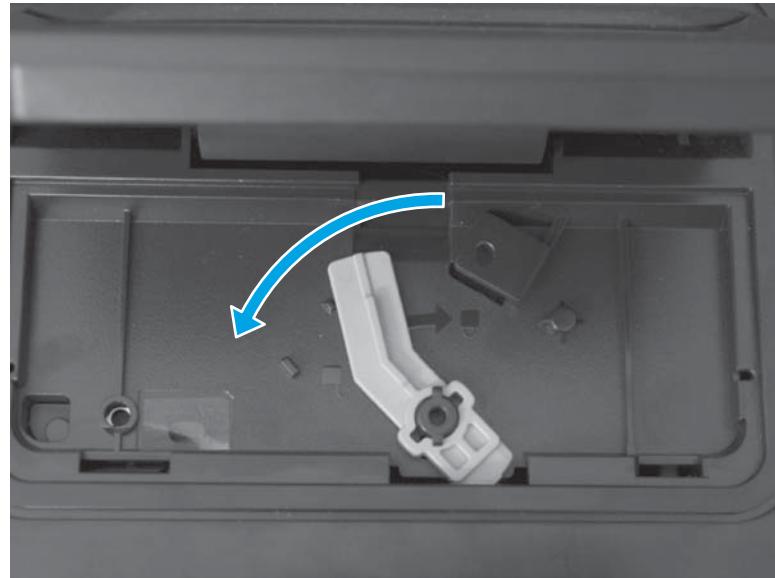


4. Lift the control-panel assembly out of the product.

Figure 1-36 Remove the control panel (M651; 4 of 8)

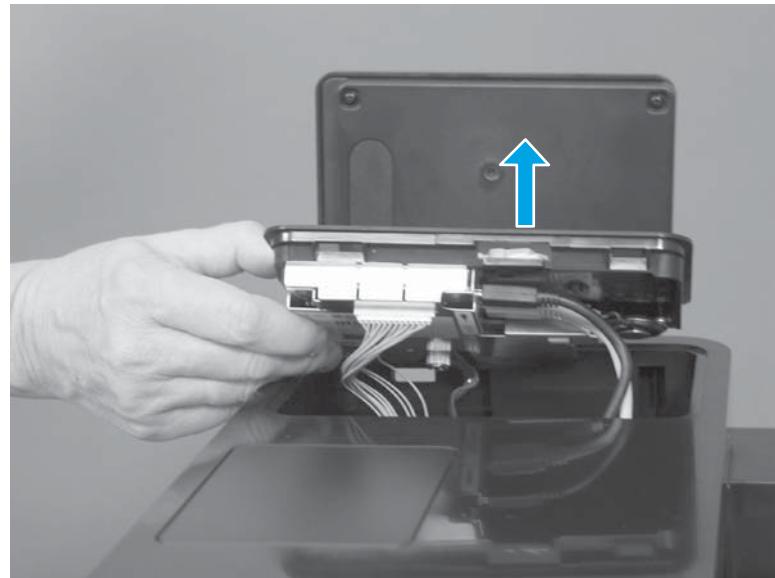


5. Tilt the control panel forward to gain access to the control-panel connectors.

Figure 1-37 Remove the control panel (M651; 5 of 8)

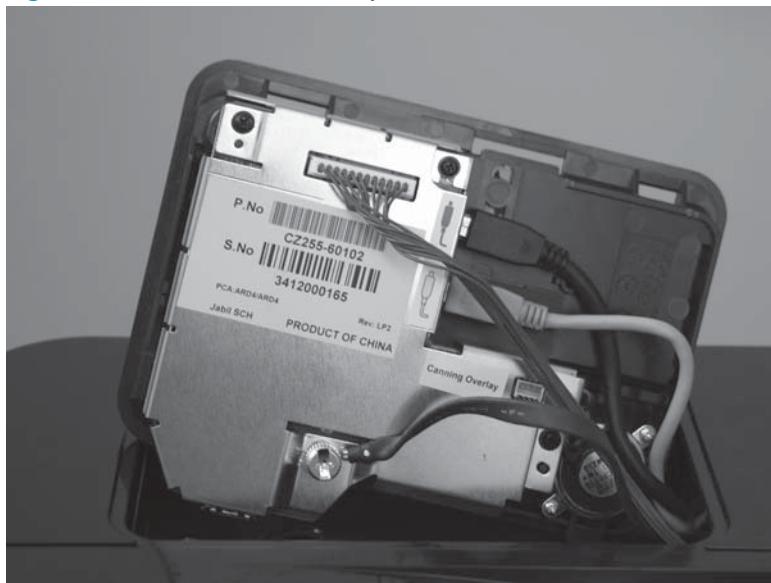


6. Remove one screw (callout 1), and then release one ground wire (callout 2).

Figure 1-38 Remove the control panel (M651; 6 of 8)

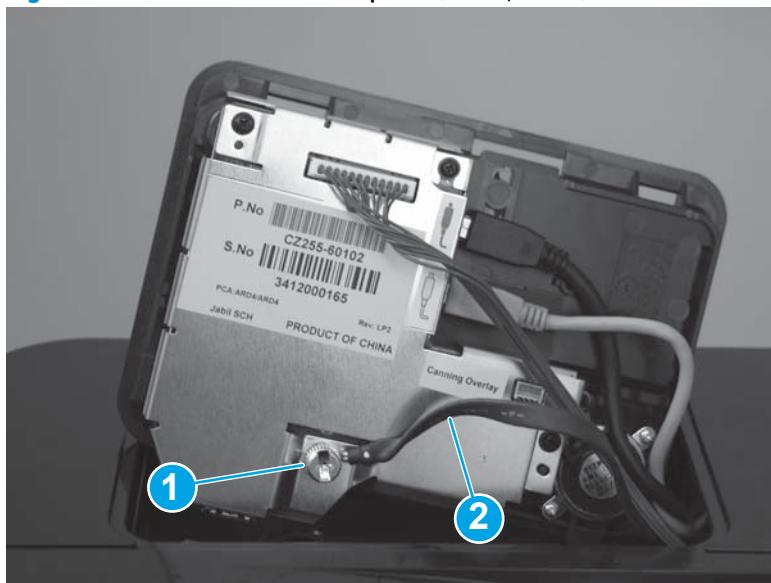


7. Disconnect two USB cables (callout 1), and then disconnect one connector (callout 2).

Figure 1-39 Remove the control panel (M651; 7 of 8)

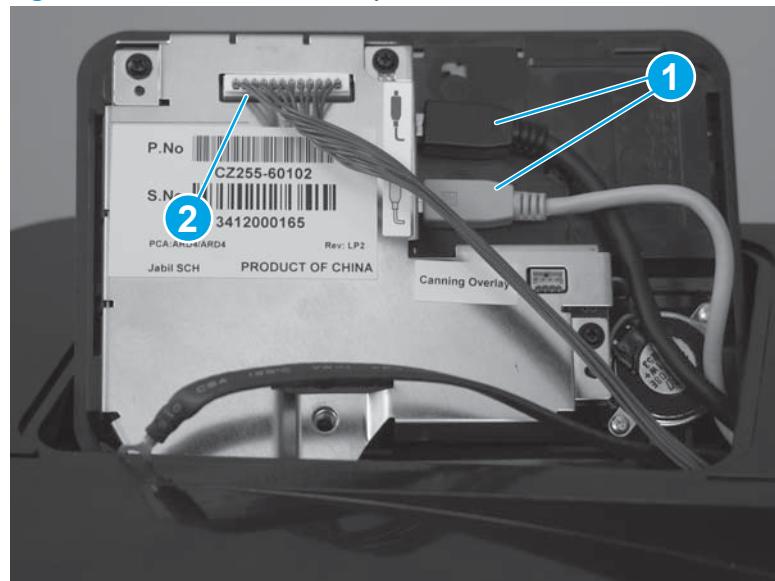

8. Lift the control-panel assembly up and away from the product to remove it.

Figure 1-40 Remove the control panel (M651; 8 of 8)

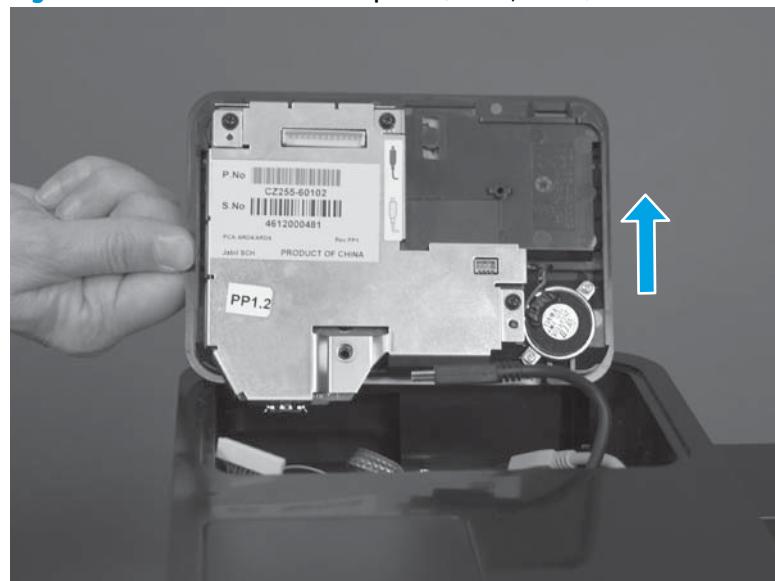

Control-panel assembly (M680)


1. Tilt the control panel up.

Figure 1-41 Remove the control-panel assembly (M680; 1 of 7)



2. Release one tab, and then remove the cover.

Figure 1-42 Remove the control-panel assembly (M680; 2 of 7)

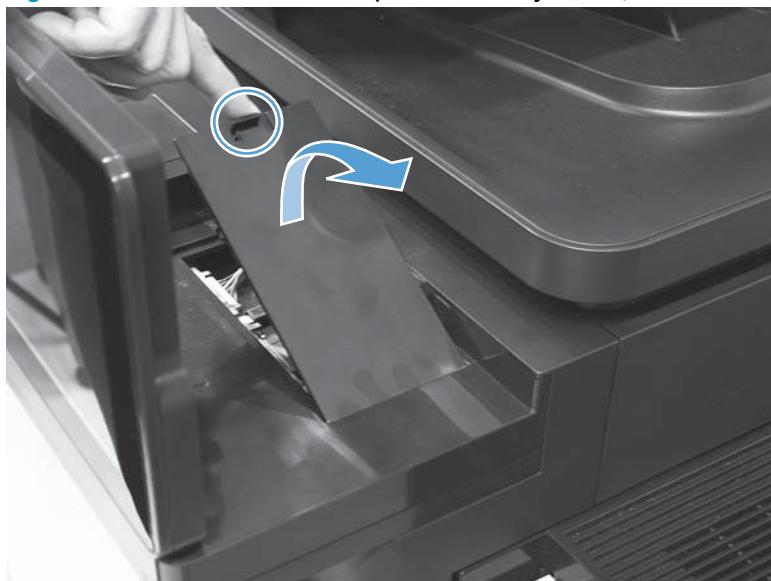

3. **M680z only:** Slide the keyboard about halfway out of the product.

Figure 1-43 Remove the control-panel assembly (M680; 3 of 7)



4. Disconnect two connectors.


Figure 1-44 Remove the control-panel assembly (M680; 4 of 7)



5. Remove one screw.


 **TIP:** Use the edge of a coin to loosen the screw.

Figure 1-45 Remove the control-panel assembly (M680; 5 of 7)

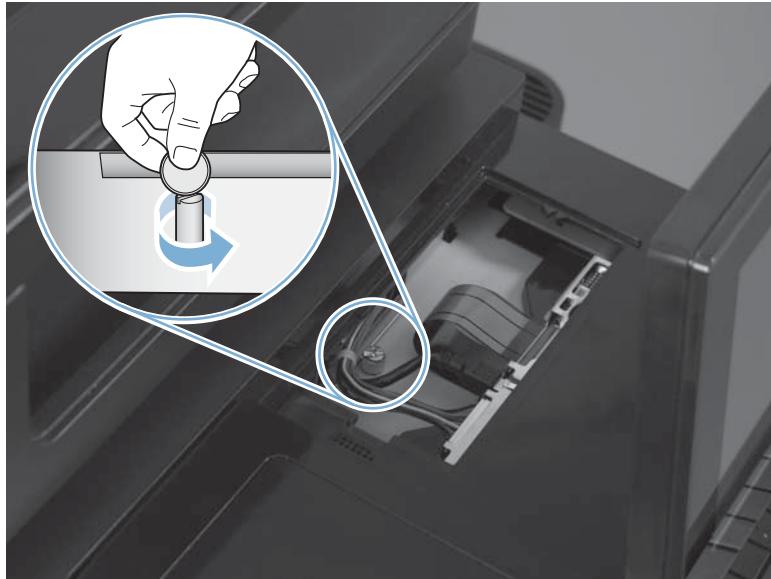

6. Slide the control panel toward the right door.


Figure 1-46 Remove the control-panel assembly (M680; 6 of 7)

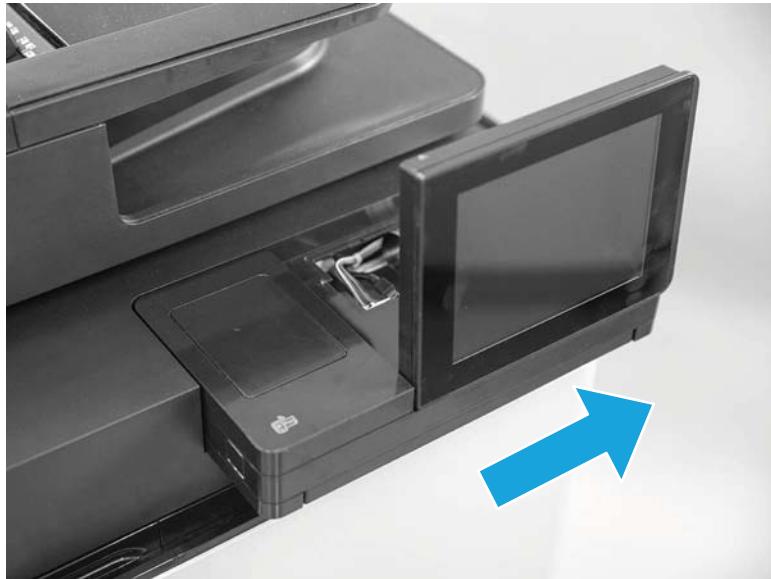

7. Slide the control panel towards the front of the product to remove it.

 **Reinstallation tip** If a replacement control-panel assembly is installed, remove the keyboard assembly so that it can be installed on the replacement control-panel assembly. See [Keyboard assembly \(M680z\) on page 37](#).


Figure 1-47 Remove the control-panel assembly (M680; 7 of 7)

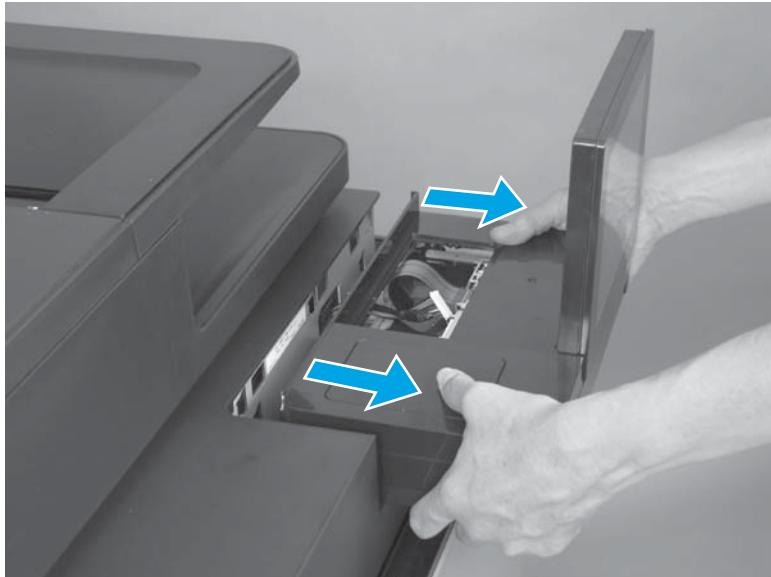

Reinstall the control-panel assembly (M680)


1. Insert the cable and wire harness (callout 1) into the opening at the back of the control panel (callout 2).

Figure 1-48 Reinstall the control-panel assembly (M680; 1 of 3)

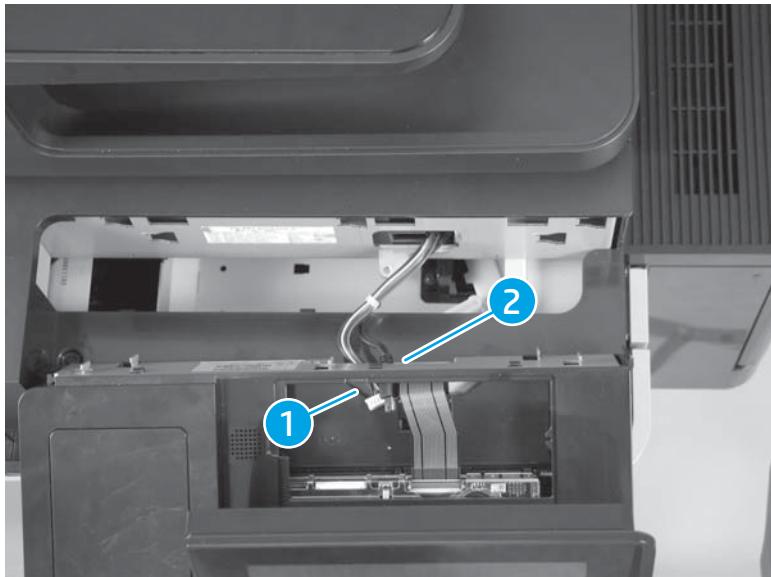


2. Insert the tabs on the control panel into the slots on the product.

Figure 1-49 Reinstall the control-panel assembly (M680; 2 of 3)

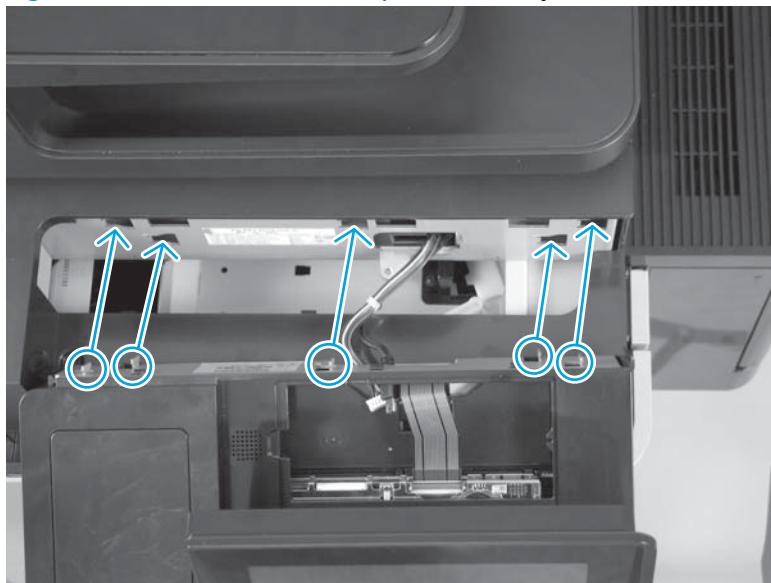

3. Slide the control panel toward the left door to secure it to the product.

Figure 1-50 Reinstall the control-panel assembly (M680; 3 of 3)

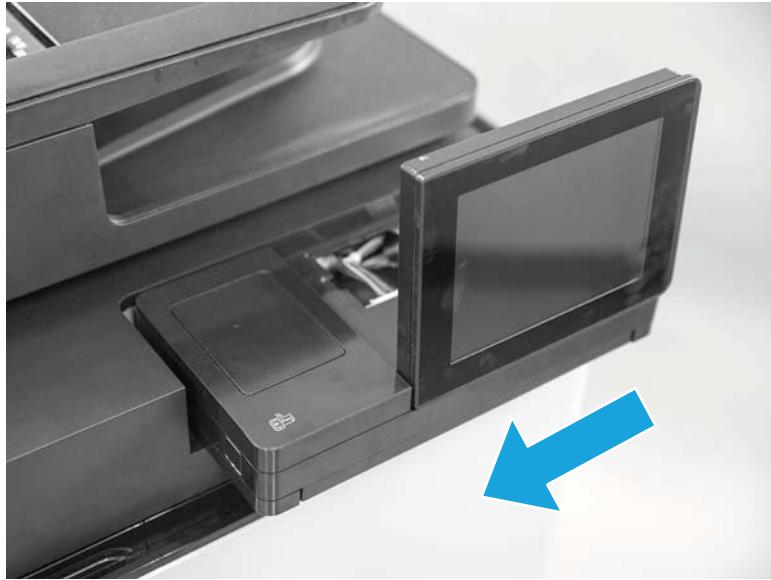

Keyboard assembly (M680z)

Before proceeding, remove the following assemblies

- Control panel. See [Control-panel assembly \(M680\) on page 32](#).

Remove the keyboard assembly (M680z)

- Place the control panel on a flat surface.

Figure 1-51 Remove the keyboard assembly (M680z; 1 of 7)




2. Open the hinged latch to release the flat cable.

IMPORTANT: This connector is a Zero Insertion Force (ZIF) connector that uses a hinged retainer to secure a flat cable. The hinged retainer must be opened to release the flat cable.

CAUTION: Be careful. Do not dislodge the latch from the connector when opening it.

Figure 1-52 Remove the keyboard assembly (M680z; 2 of 7)

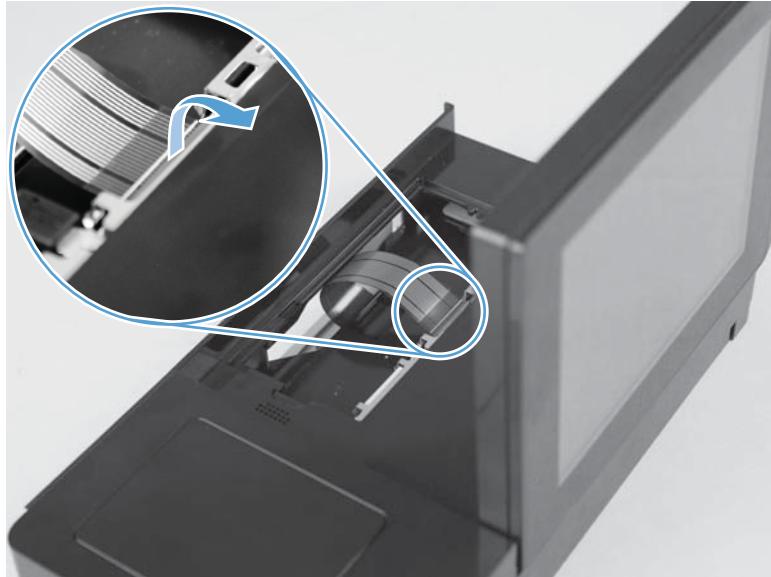

3. Disconnect the flat cable.

Figure 1-53 Remove the keyboard assembly (M680z; 3 of 7)



4. Tilt the screen down until it lays flat.

Figure 1-54 Remove the keyboard assembly (M680z; 4 of 7)



5. Slide the keyboard tray all of the way out of the control panel until it stops.

Figure 1-55 Remove the keyboard assembly (M680z; 5 of 7)




6. Turn the control panel face-down on the surface.

Figure 1-56 Remove the keyboard assembly (M680z; 6 of 7)



7. Release and hold two tabs (callout 1) while sliding the keyboard tray away from the control panel (callout 2) to remove it.


Figure 1-57 Remove the keyboard assembly (M680z; 7 of 7)

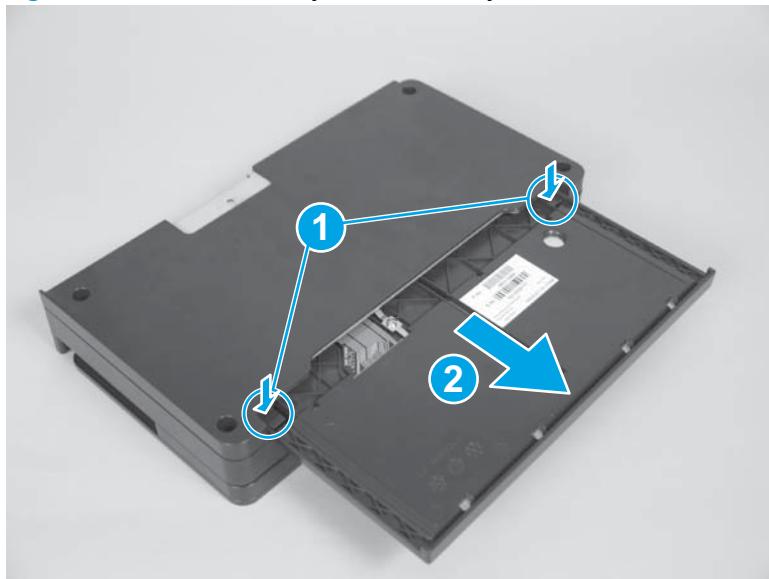

Reinstall the keyboard assembly (M680z)

1. Turn the keyboard tray upside down, and then position the flat cable (callout 1) inside the tray cavity. Align the edges of the tray (callout 2) with the slots in the control panel (callout 3).

Figure 1-58 Reinstall the keyboard assembly (M680z; 1 of 7)

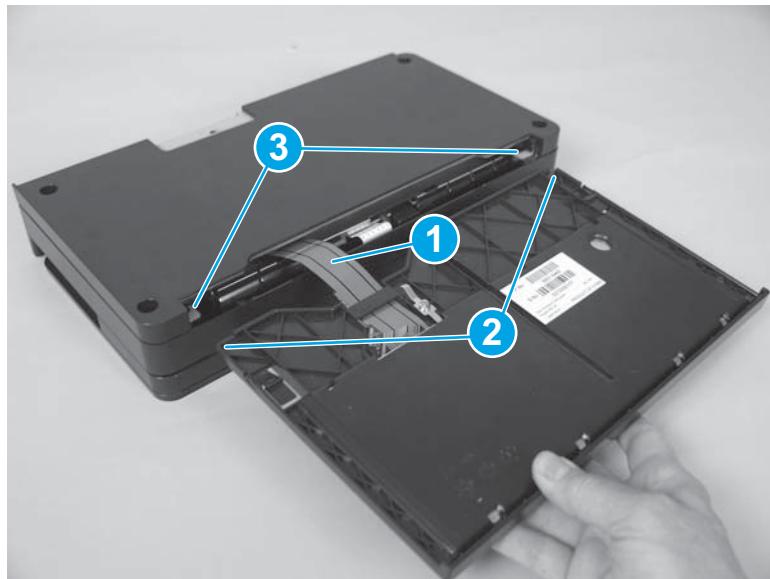


2. Slide the keyboard tray all the way into the control panel.

Figure 1-59 Reinstall the keyboard assembly (M680z; 2 of 7)



3. Turn the control panel face-up.

Figure 1-60 Reinstall the keyboard assembly (M680z; 3 of 7)

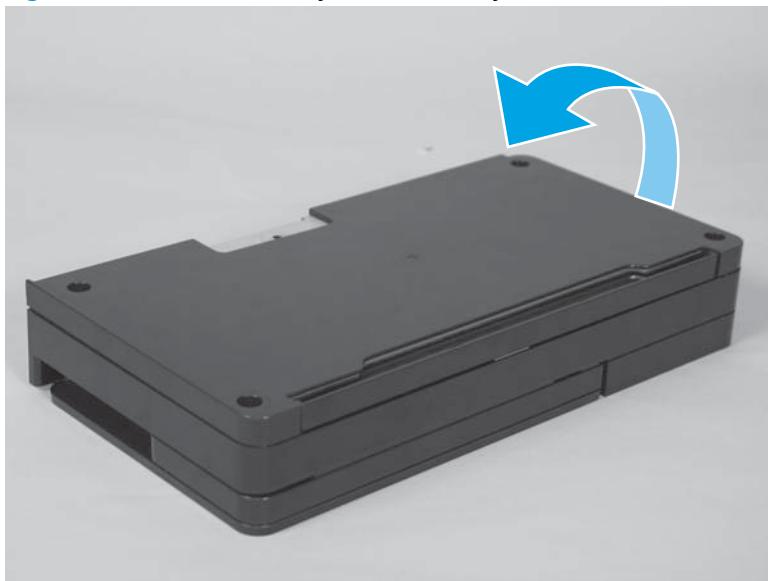

4. Tilt the screen up.


Figure 1-61 Reinstall the keyboard assembly (M680z; 4 of 7)



5. Open the hinged latch, and then position the flat cable in the connector.

⚠ CAUTION: Be careful. Do not dislodge the latch from the connector when opening it.

Figure 1-62 Reinstall the keyboard assembly (M680z; 5 of 7)

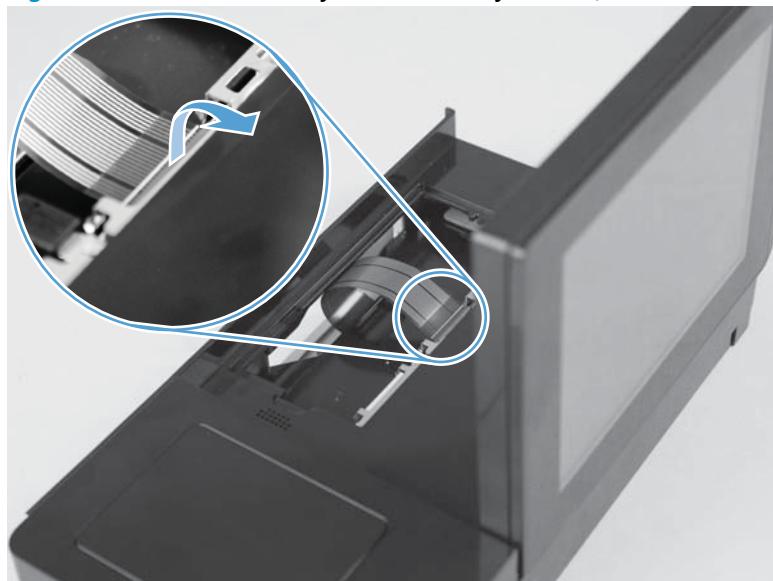


6. Use a finger to carefully close the latch to lock the flat cable into position.

⚠ IMPORTANT: **IMPORTANT:** This connector is a Zero Insertion Force (ZIF) connector that uses a hinged retainer to secure a flat cable. When the flat cable is reinstalled, fully insert the flat cable in the connector, and then close the hinged retainer to lock the flat cable into the connector and provide proper electrical contact. If the flat cable is not locked into the connector, no electrical contact will occur.

⚠ CAUTION: Be careful. Do not dislodge the latch from the connector when closing it.


Figure 1-63 Reinstall the keyboard assembly (M680z; 6 of 7)

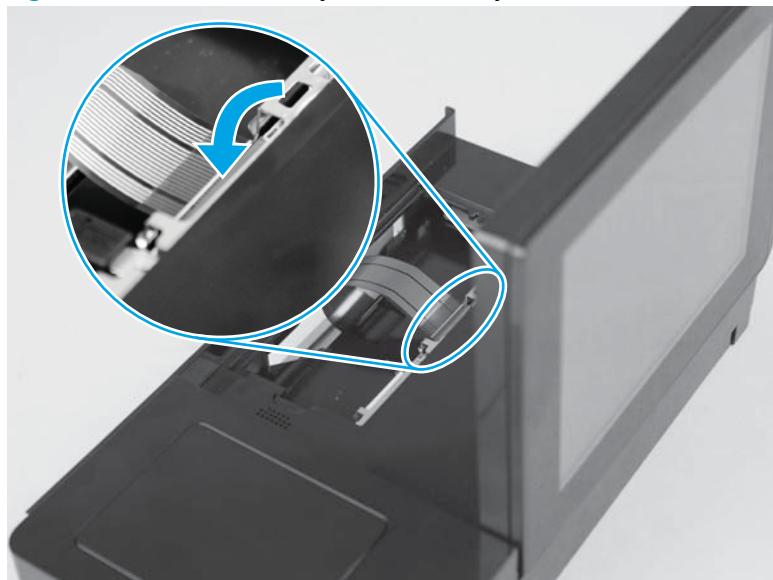

7. Slightly pull on the flat cable to verify that it is securely fastened in the connector.

⚠ CAUTION: Be careful. Do not use full force to pull on the flat cable. A slight pull on the cable is sufficient to verify that it is securely fastened.

Figure 1-64 Reinstall the keyboard assembly (M680z; 7 of 7)

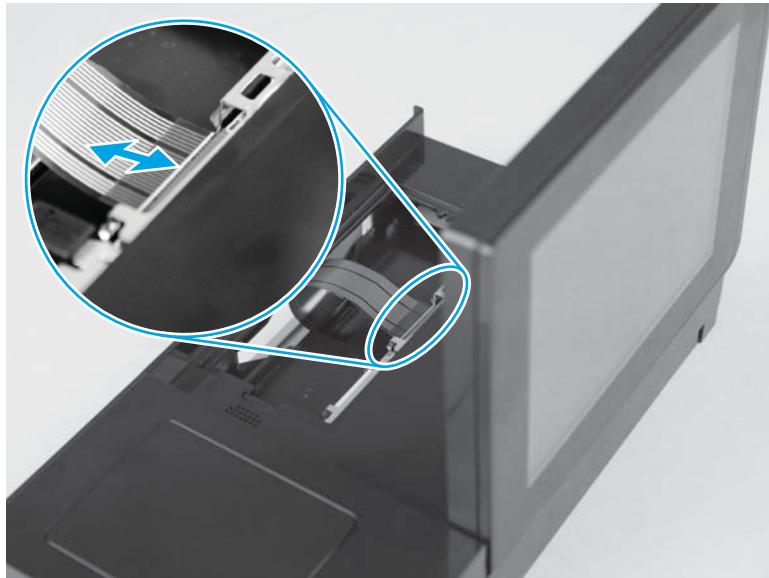

Feed and separation rollers (Trays 2-5)

⚠ CAUTION: Do not touch the spongy roller surface unless replacing the roller. Skin oils on the roller can cause paper pickup problems.

1. Locate the feed and separation rollers for the tray.

💡 TIP: The product does not need to be separated from the feeder to remove these rollers. Remove the tray, and then reach up into the cavity to remove the rollers.

2. Release two tabs, and then remove the rollers.

💡 Reinstallation tip When the rollers are reinstalled, make sure that they snap into place.

Figure 1-65 Remove the feed and separation rollers (Trays 2-5)



Pickup roller (Tray 1)

CAUTION: Do not touch the spongy roller surface unless replacing the roller. Skin oils on the roller can cause paper pickup problems.

1. Open Tray 1.

Figure 1-66 Remove the pickup roller (Tray 1; 1 of 5)



2. Push the top edge of the cover to release the tabs.

Figure 1-67 Remove the pickup roller (Tray 1; 2 of 5)




3. Open the right-door assembly, and then remove the cover.

Figure 1-68 Remove the pickup roller (Tray 1; 3 of 5)



4. Release the two blue tabs.

Figure 1-69 Remove the pickup roller (Tray 1; 4 of 5)

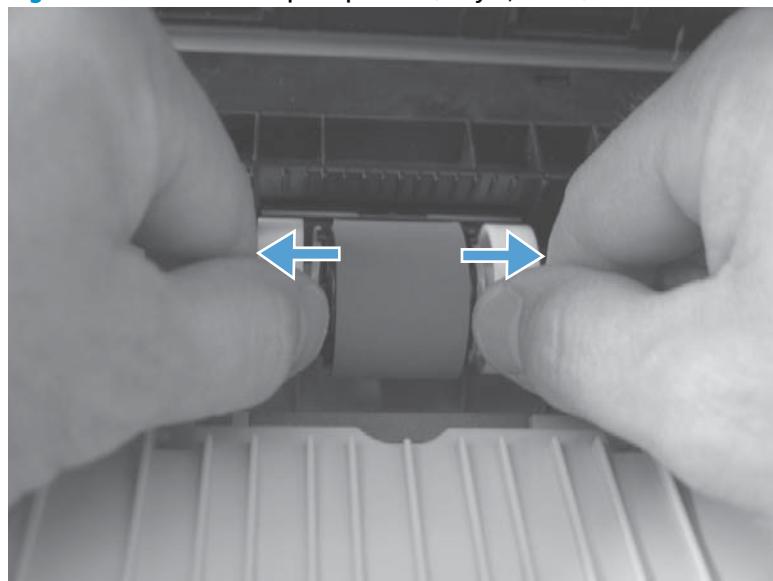

5. Rotate the roller body away from the product to remove it.

Figure 1-70 Remove the pickup roller (Tray 1; 5 of 5)




Reinstall the pickup roller (Tray 1)

- ▲ When reinstalling the pickup roller, make sure the roller cover is installed correctly. Incorrect installation can cause paper to jam.

Figure 1-71 Correct position of cover



Figure 1-72 Incorrect position of cover

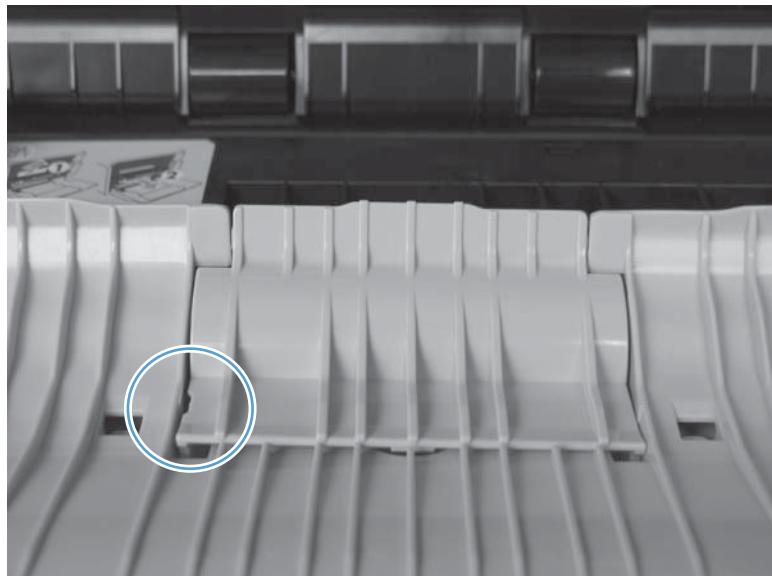

Secondary transfer roller

CAUTION: Do not touch the spongy roller surface unless replacing the roller. Skin oils on the roller can cause image quality problems.


1. Open the right-door assembly.

Figure 1-73 Remove the transfer roller (1 of 3)




2. Use the blue lever to lower the secondary transfer assembly.

Figure 1-74 Remove the transfer roller (2 of 3)

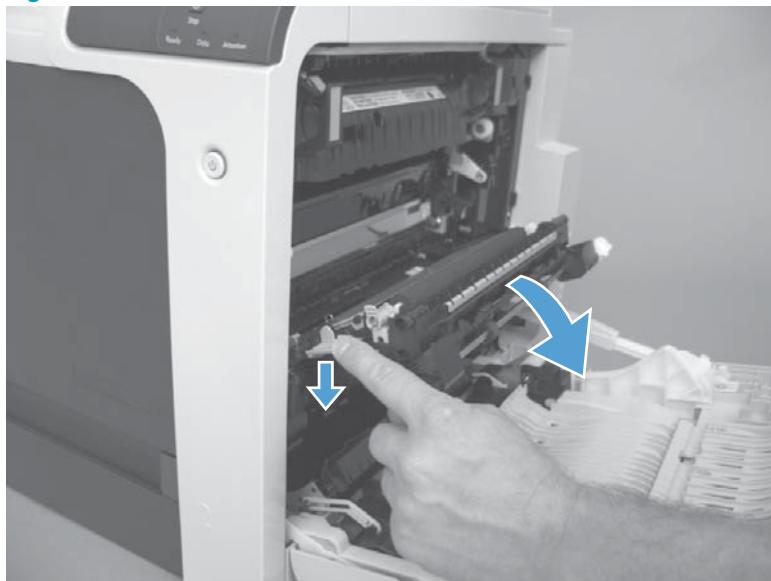

3. Grasp the roller shaft collars, and lift the transfer roller off of the product.


Figure 1-75 Remove the transfer roller (3 of 3)

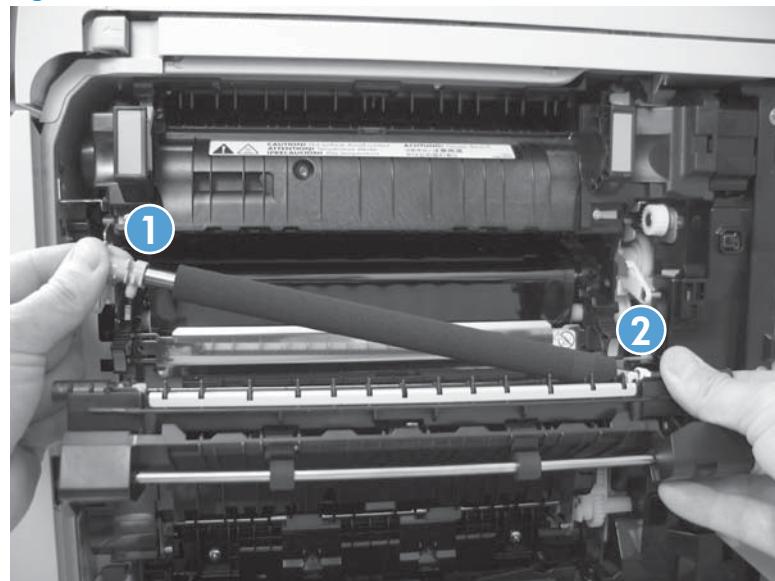

Reinstall the secondary transfer roller

When the secondary transfer roller is reinstalled, make sure that the pins on the shaft collars align with the holes in the mounting assembly. After installing the replacement secondary transfer roller, remove the protective cover.

Figure 1-76 Reinstall the secondary transfer roller

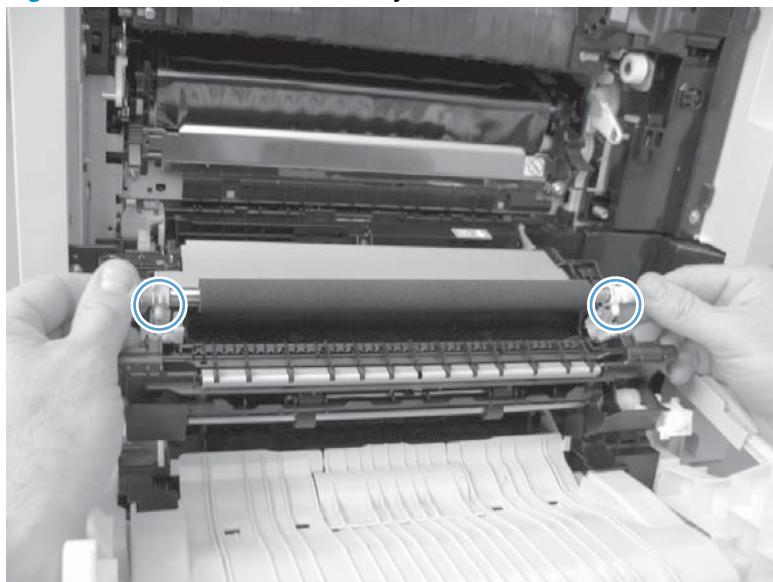

Standard output bin (M680)

- ▲ Lift and pull the output bin to remove.

Figure 1-77 Remove the standard output bin



Output bin bezel (M680)

Before proceeding, remove the following assemblies

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).

Remove the output bin bezel


1. Release the scanner latch.

Figure 1-78 Remove the output bin bezel (1 of 2)



2. Release two latches and lift the bezel up to remove it.

Figure 1-79 Remove the output bin bezel (2 of 2)

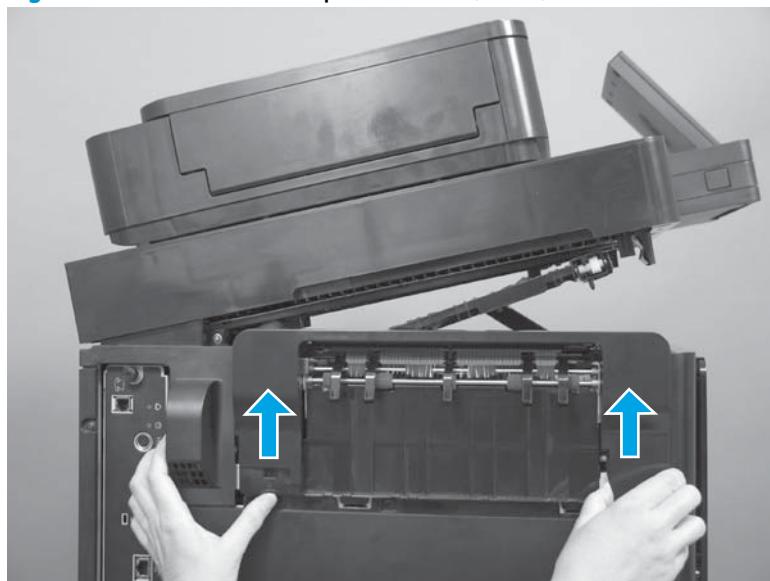

Document feeder white backing (M680)

1. Open the document feeder.

Figure 1-80 Remove the document feeder white backing (M680; 1 of 2)



2. Carefully remove the white backing. Remove any remaining adhesive.

Figure 1-81 Remove the document feeder white backing (M680; 2 of 2)



Install a replacement document feeder white backing (M680)


1. Place the new white backing on the scanner glass.

Figure 1-82 Install a replacement document feeder white backing (1 of 9)




2. Peel off the two strips of adhesive backing.

Figure 1-83 Install a replacement document feeder white backing (2 of 9)

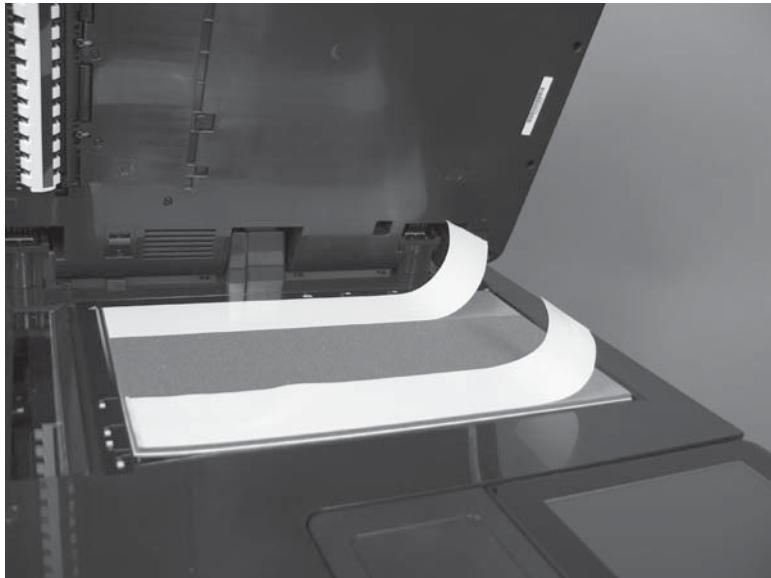

3. Place the two mylar strips onto the adhesive, as shown. Carefully align the mylar with the edges of the adhesive.

Figure 1-84 Install a replacement document feeder white backing (3 of 9)

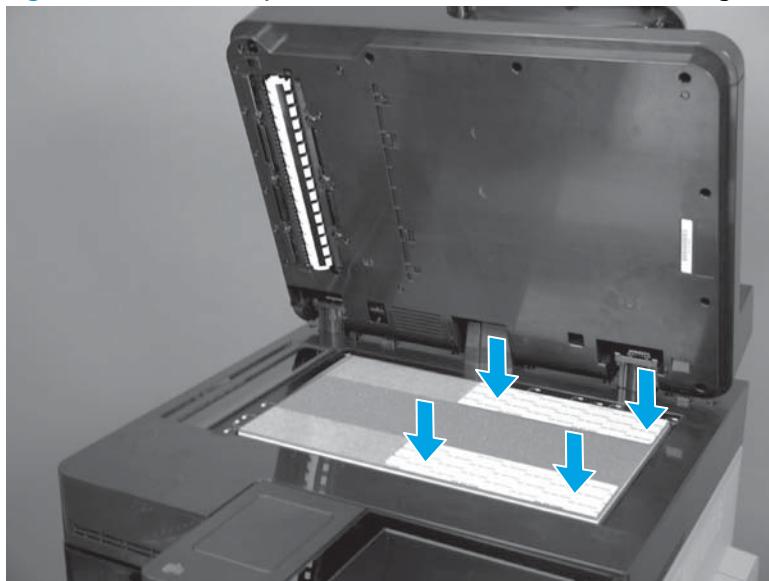


4. Peel off the two strips of adhesive backing.

Figure 1-85 Install a replacement document feeder white backing (4 of 9)




5. Verify that the white backing is aligned with the left rear corner of the scanner glass.

Figure 1-86 Install a replacement document feeder white backing (5 of 9)

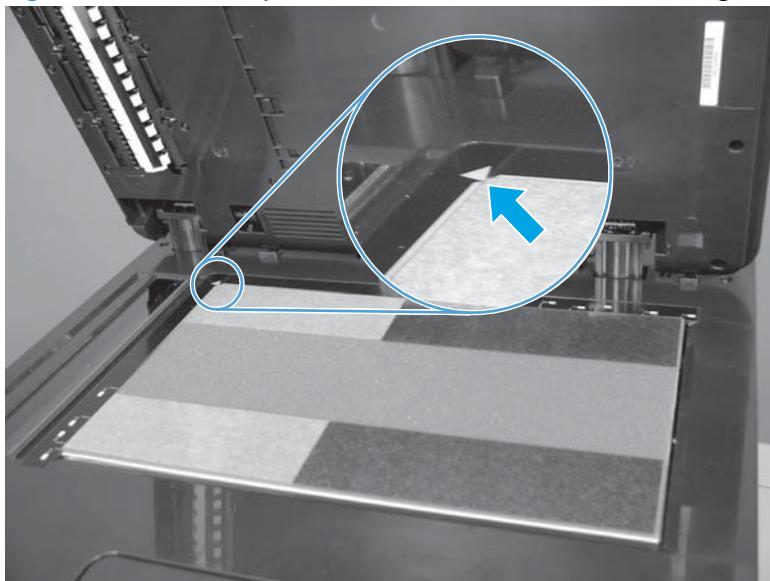


6. Close the document feeder. Press down firmly to adhere the white backing.

Figure 1-87 Install a replacement document feeder white backing (6 of 9)

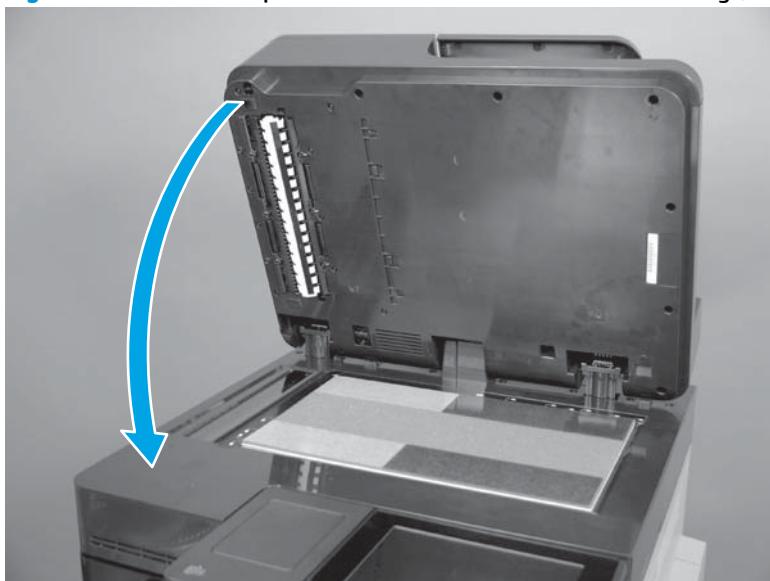


7. Open the document feeder.

Figure 1-88 Install a replacement document feeder white backing (7 of 9)

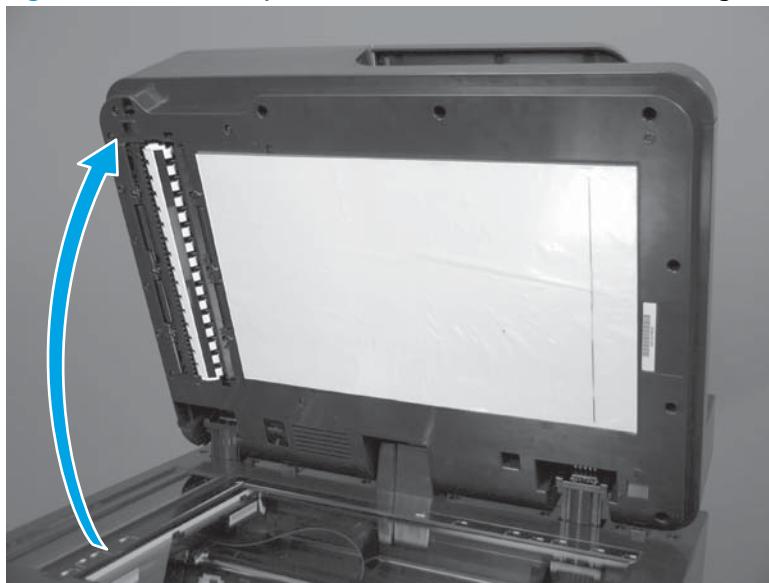


8. Press along the top and bottom of the white backing, over the areas with adhesive.

Figure 1-89 Install a replacement document feeder white backing (8 of 9)

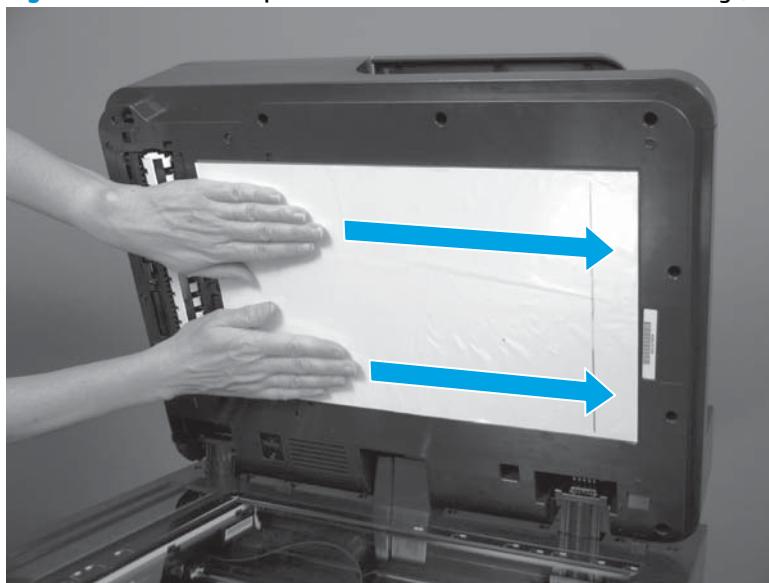

9. Peel off the plastic backing.


Figure 1-90 Install a replacement document feeder white backing (9 of 9)

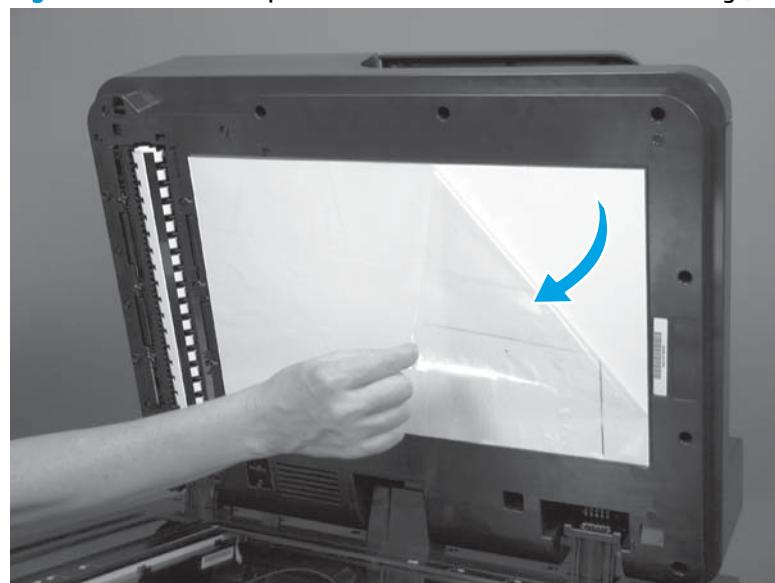

Background selector (M680)


1. Open the document-feeder door.

Figure 1-91 Remove the background selector (M680; 1 of 4)

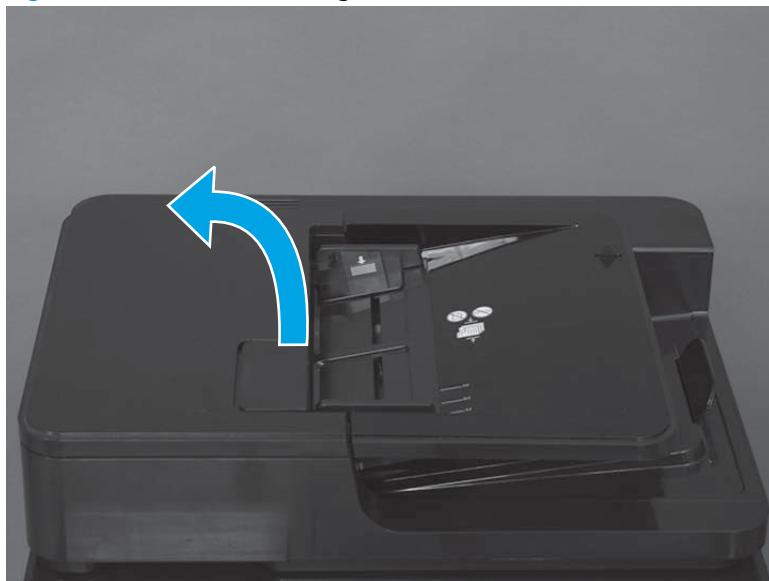


2. Rotate the input tray up.

Figure 1-92 Remove the background selector (M680; 2 of 4)

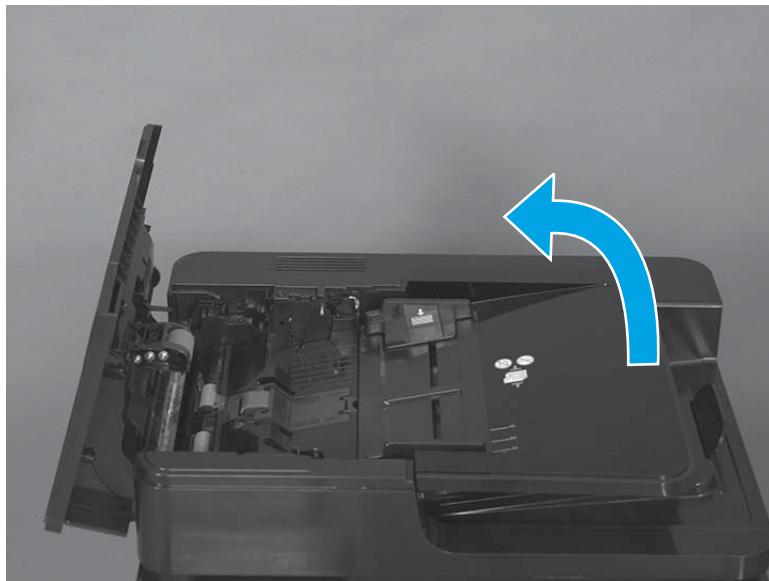


3. Release two tabs.

Figure 1-93 Remove the background selector (M680; 3 of 4)

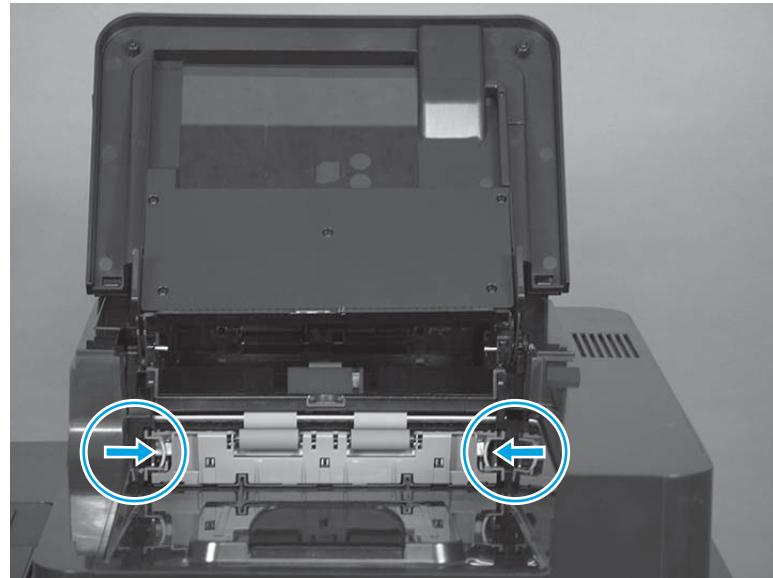

4. Slide the background selector away from the product to remove it.

Figure 1-94 Remove the background selector (M680; 4 of 4)

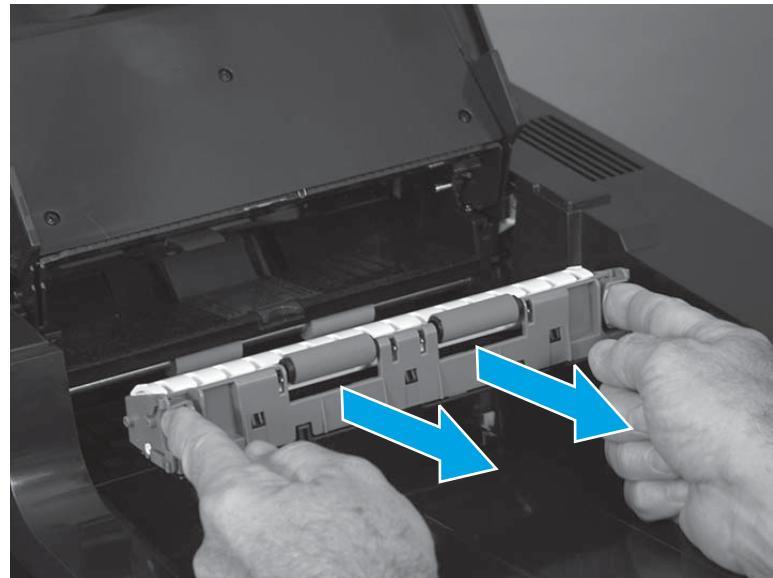


Reinstall the background selector (M680)

Push in on the background selector until the tabs snap into place.



NOTE: If jams occur after the assembly is installed, make sure that the assembly is fully seated.

Figure 1-95 Reinstall the background selector (M680)

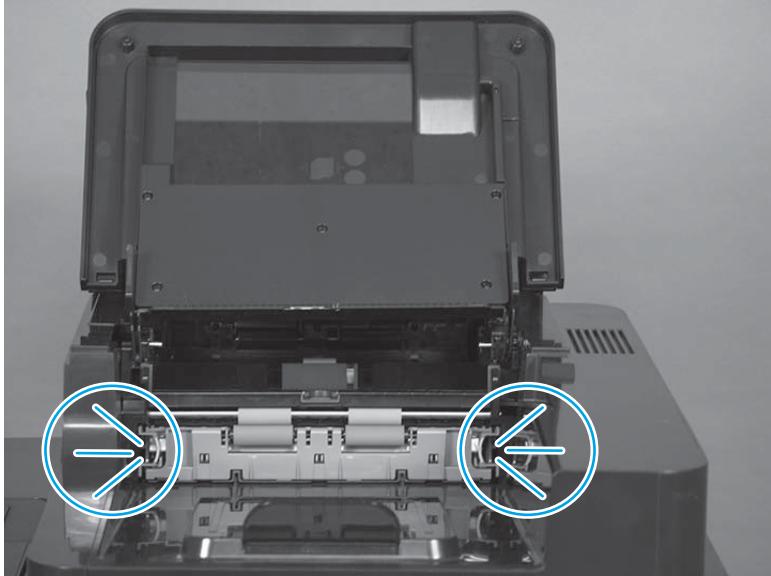

Document-feeder roller (M680)

Remove the document-feeder roller (M680)


⚠ CAUTION: Do not touch the spongy roller surface unless replacing the rollers. Skin oils deposited on the rollers might cause paper pickup problems.

>Note: The document-feeder roller and the document feeder separation pad are both part of the ADF roller maintenance kit.

If a replacement roller is installed, reset the [New Document Feeder Kit](#) firmware counter. See [Install a replacement document-feeder roller \(M680\) on page 65](#).

1. Open the document-feeder door.


Figure 1-96 Remove the document-feeder roller (M680; 1 of 3)

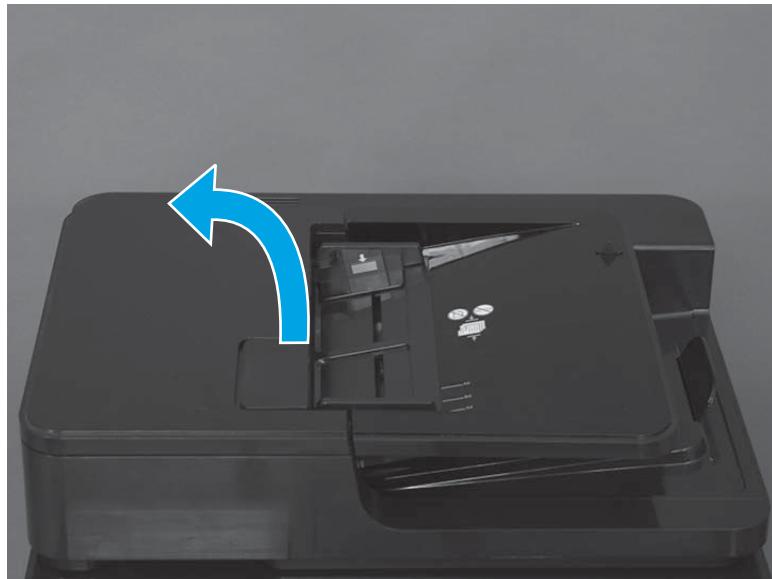

2. Release one tab, and then open the access door.


💡 Reinstallation tip When the roller is reinstalled, the access door must be fully closed. When closing the door, two audible clicks should be heard. If, after replacing the roller document feeder, a document feeder jam message appears on the control panel display, make sure that the access door is fully closed.

Figure 1-97 Remove the document-feeder roller (M680; 2 of 3)

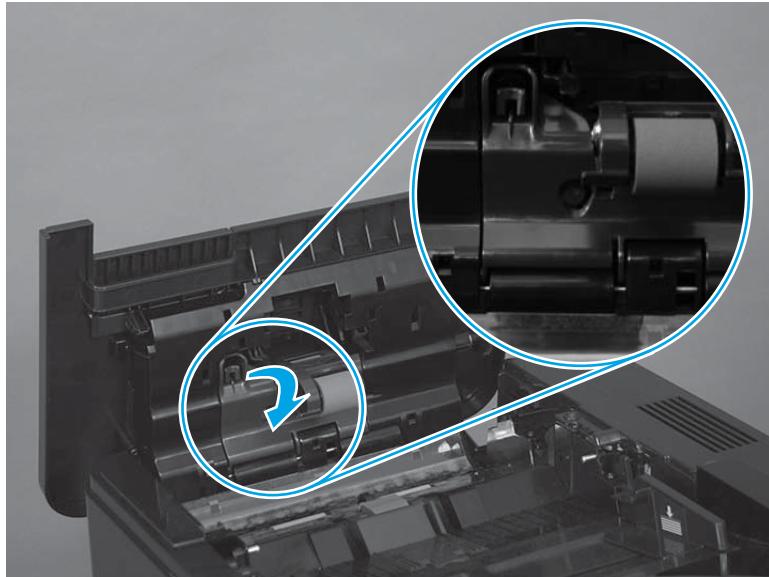

3. Slide the roller left, and then lift it up and out of the product.


Figure 1-98 Remove the document-feeder roller (M680; 3 of 3)

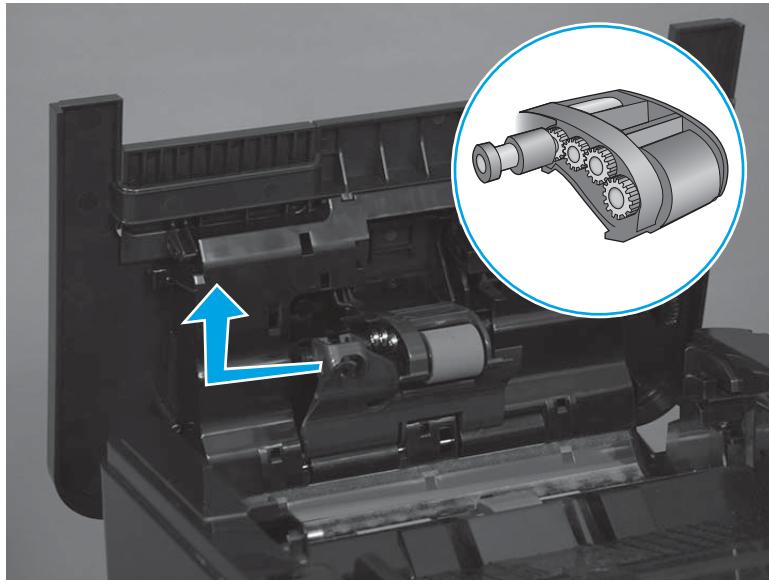

Reinstall the document-feeder roller (M680)

- ▲ The roller assembly is keyed. When reinstalling the roller assembly, position the hex-shaped fitting on the shaft toward the rear of the product.

Figure 1-99 Reinstall the document-feeder roller (M680)

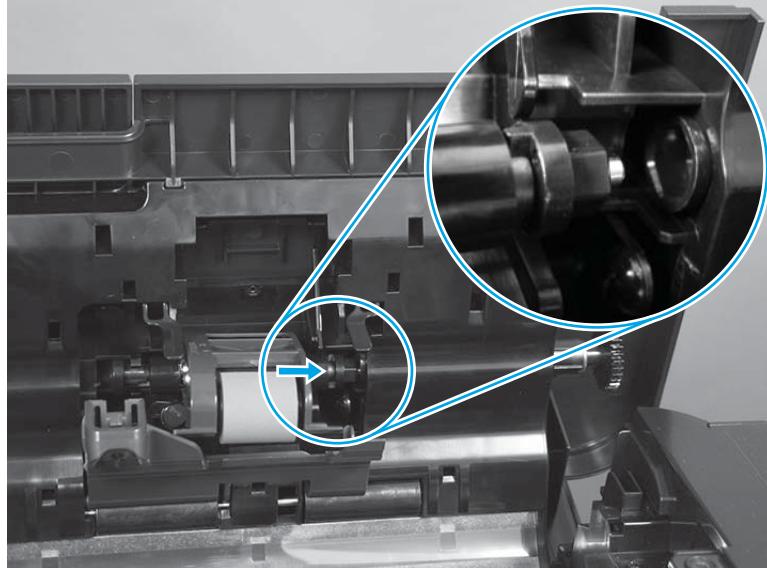

Install a replacement document-feeder roller (M680)

1. From the Home screen on the control panel, scroll to and touch the [Administration](#) button.
2. Open the following menus:
 - [Manage Supplies](#)
 - [Reset Supplies](#)
 - [New Document Feeder Kit](#)
3. Select the [Reset](#) item to reset the firmware counter.

Document-feeder separation pad and holder (M680)

Remove the document-feeder separation pad and holder (M680)


⚠ CAUTION: Do not touch the pad surface unless replacing the pad. Skin oils deposited on the pad might cause paper pickup problems.

>Note: The document-feeder roller and the document-feeder separation pad are both part of the ADF roller maintenance kit.

If a replacement separation pad is installed, reset the [New Document Feeder Kit firmware counter](#). See [Install a replacement document-feeder separation pad and holder \(M680\) on page 68](#).


1. Open the document-feeder door.

Figure 1-100 Remove the document-feeder separation pad and holder (M680; 1 of 3)

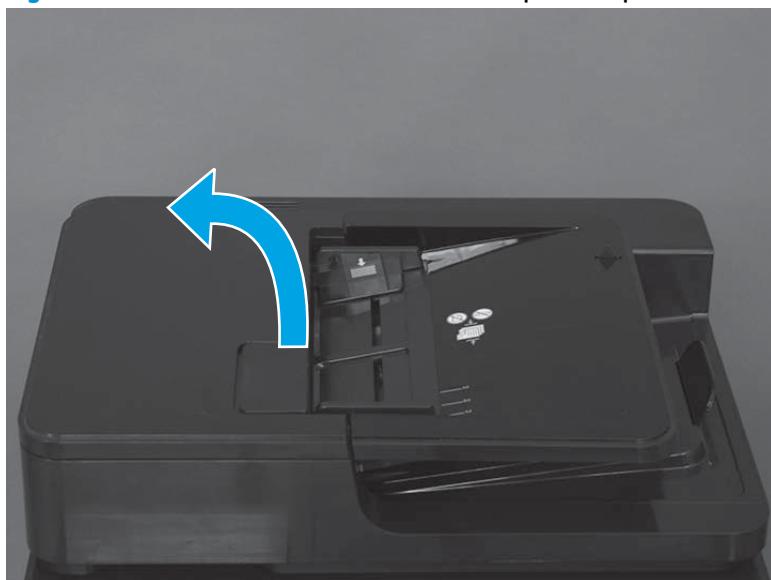

2. Release one tab.


Figure 1-101 Remove the document-feeder separation pad and holder (M680; 2 of 3)

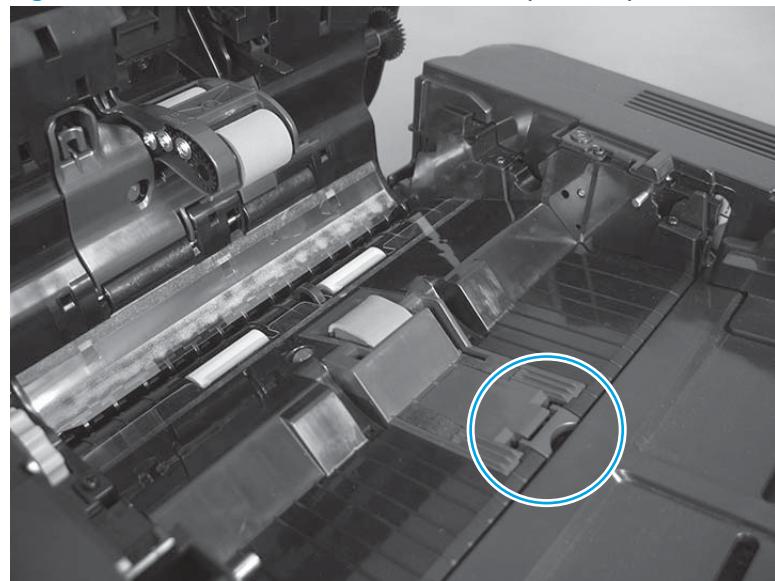

3. Rotate the separation pad and holder up (callout 1), and then lift it up (callout 2) to remove it.

CAUTION: The spring (callout 3) under the separation pad and holder can easily be dislodged when the holder is removed. If the spring is dislodged, see [Install a replacement document-feeder separation pad and holder \(M680\) on page 68](#) to install it.


Figure 1-102 Remove the document-feeder separation pad and holder (M680; 3 of 3)

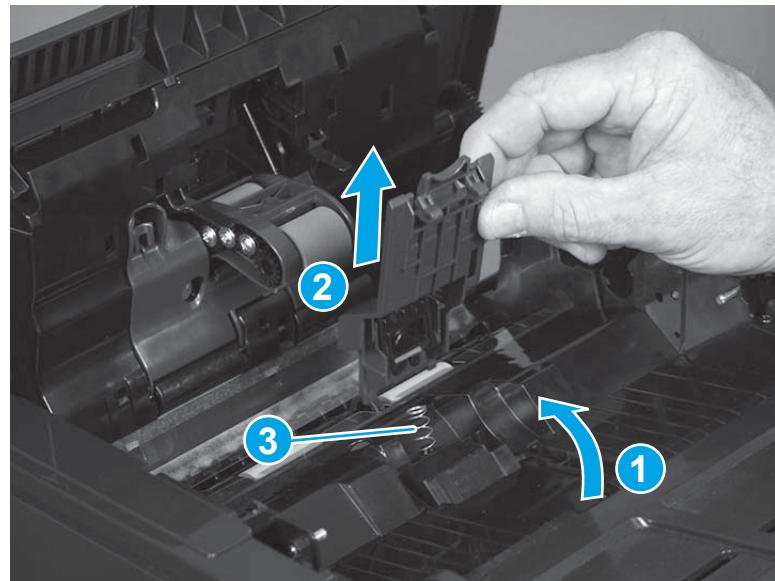

Install a replacement document-feeder separation pad and holder (M680)


1. Make sure that the separation-pad spring is securely positioned on the spring pedestal before installing a replacement separation pad and holder.

Figure 1-103 Reinstall the document-feeder separation pad spring (M680; 1 of 2)

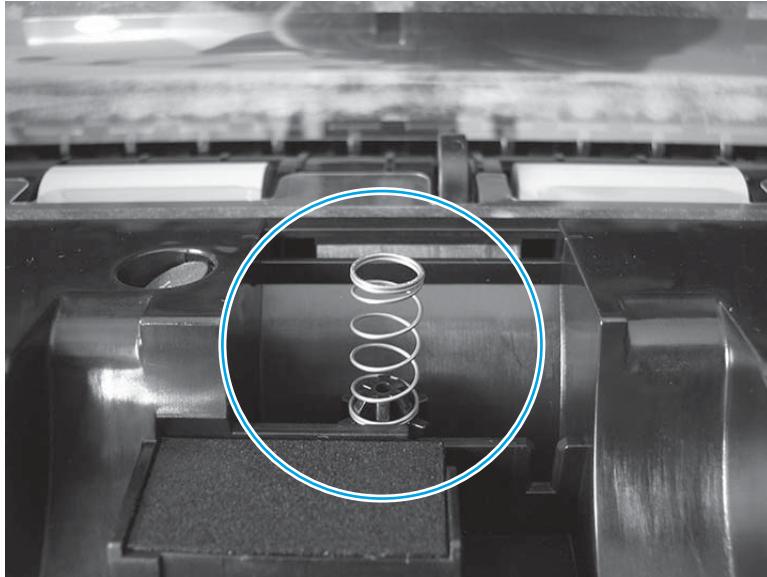

2. When the separation pad and holder is installed, make sure that the separation-pad spring (callout 1) is positioned under and behind the ridge (callout 2) on the bottom of the holder.

Figure 1-104 Reinstall the document-feeder separation pad spring (M680; 2 of 2)

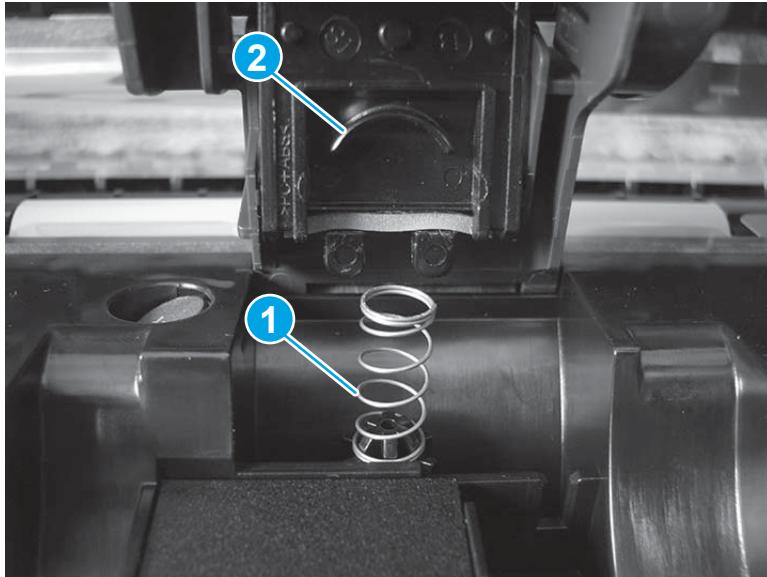

Install a replacement document-feeder separation pad and holder (M680)

1. From the Home screen on the control panel, scroll to and touch the **Administration** button.
2. Open the following menus:


- [Manage Supplies](#)
 - [Reset Supplies](#)
 - [New Document Feeder Kit](#)
3. Select the [Reset](#) item to reset the firmware counter.

Document feeder and scanner (M680)

Document feeder mylar strip


1. Open the document feeder cover.

Figure 1-105 Remove the document feeder mylar strip (M680; 1 of 3)

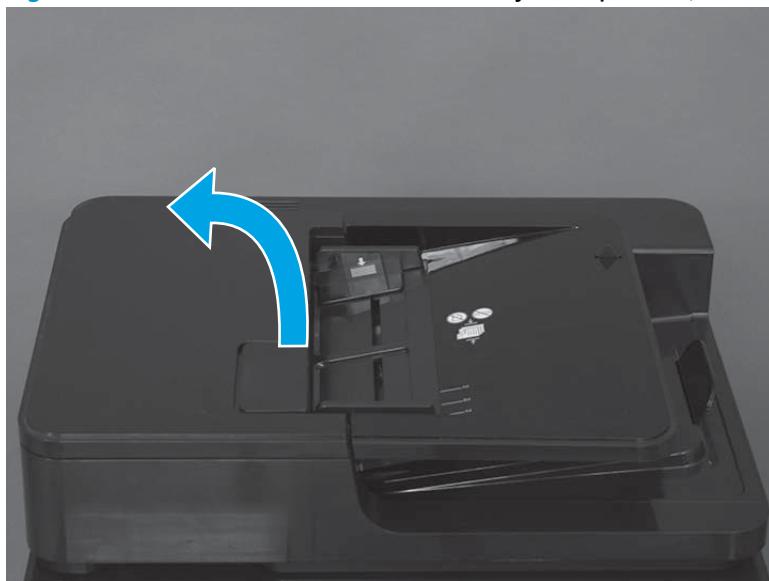


2. Locate the mylar strip.

Figure 1-106 Remove the document feeder mylar strip (M680; 2 of 3)

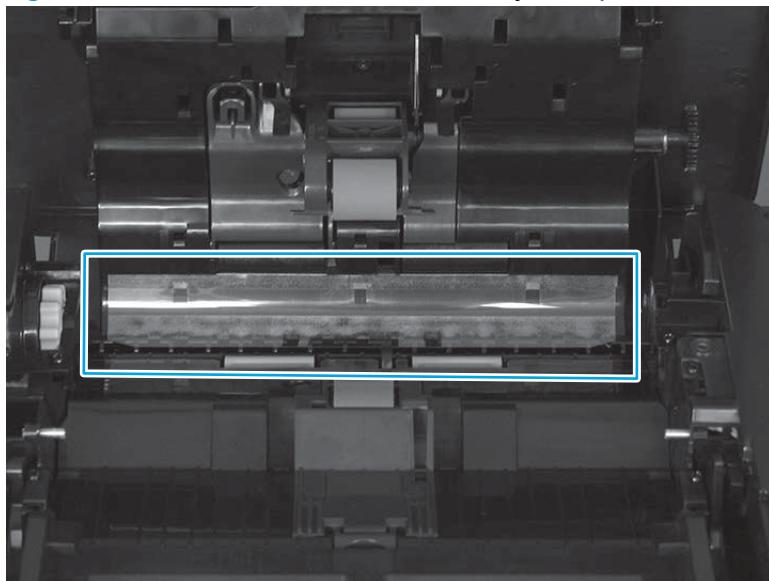

3. Carefully remove the mylar strip.

Figure 1-107 Remove the document feeder mylar strip (M680; 3 of 3)

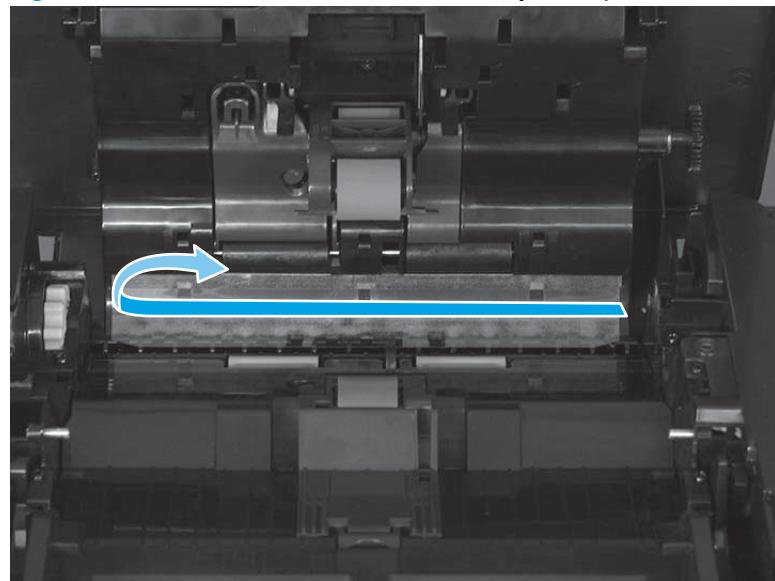


Install a replacement document feeder mylar strip (M680)

Use the following guidelines when installing the replacement mylar strip:

1. Skin oils on the mylar strip can cause paper pickup problems. Wash your hands before handling the replacement mylar strip.
2. When handling the replacement mylar strip, do not touch the adhesive portion of the strip.
3. Use a finger to remove any adhesive that remains after removing the mylar strip.


Figure 1-108 Install a replacement document feeder mylar strip (M680; 1 of 3)

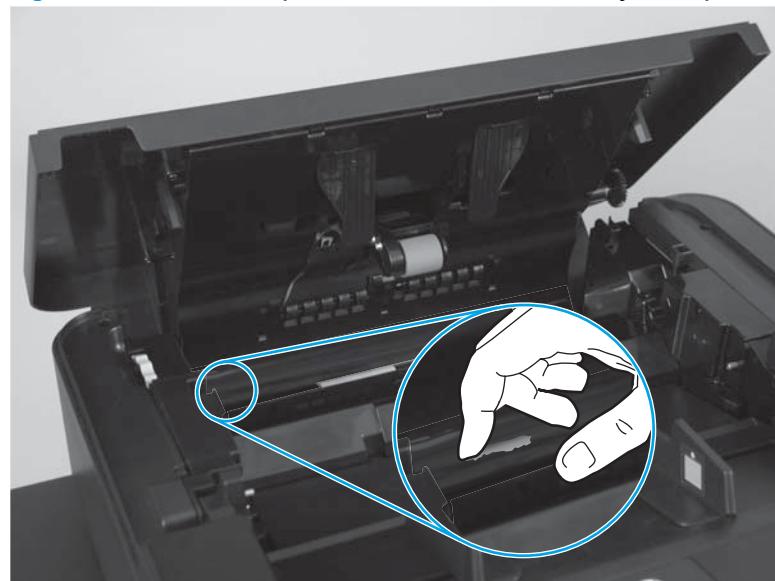

4. Remove the protective backing from the adhesive portion of the replacement mylar strip, and then position the strip as shown, with the beveled corners on the strip facing the document tray.


 **NOTE:** Make sure that the adhesive side of the guide is face down.

Figure 1-109 Install a replacement document feeder mylar strip (M680; 2 of 3)

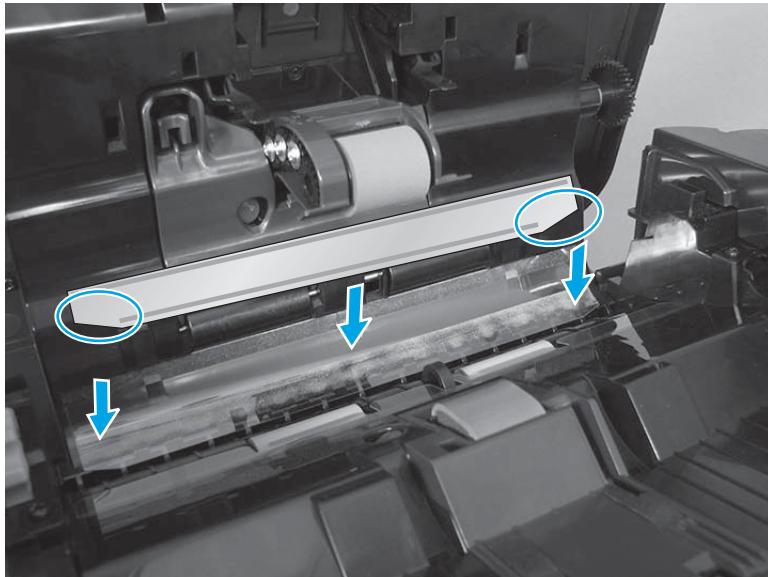

5. Press down firmly on the strip to adhere it to the product.


Figure 1-110 Install a replacement document feeder mylar strip (M680; 3 of 3)

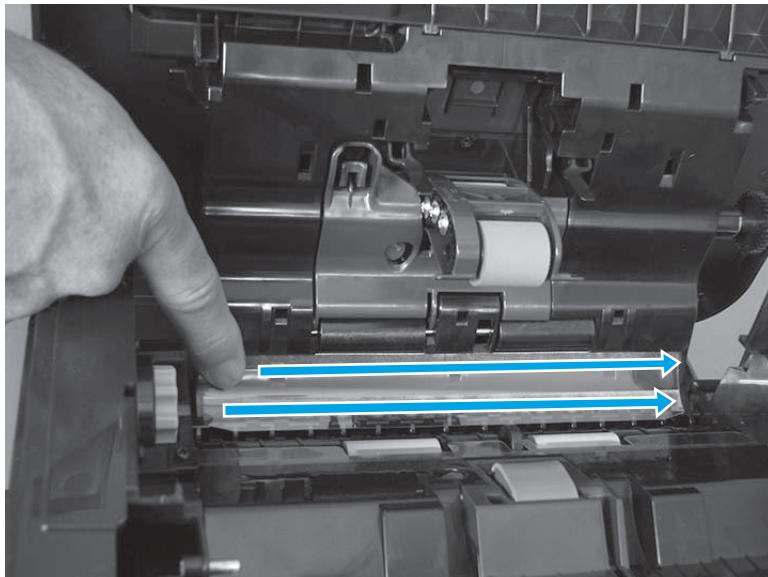

Document-feeder roller cover


1. Open the document-feeder cover.

Figure 1-111 Remove the document-feeder roller cover (1 of 10)

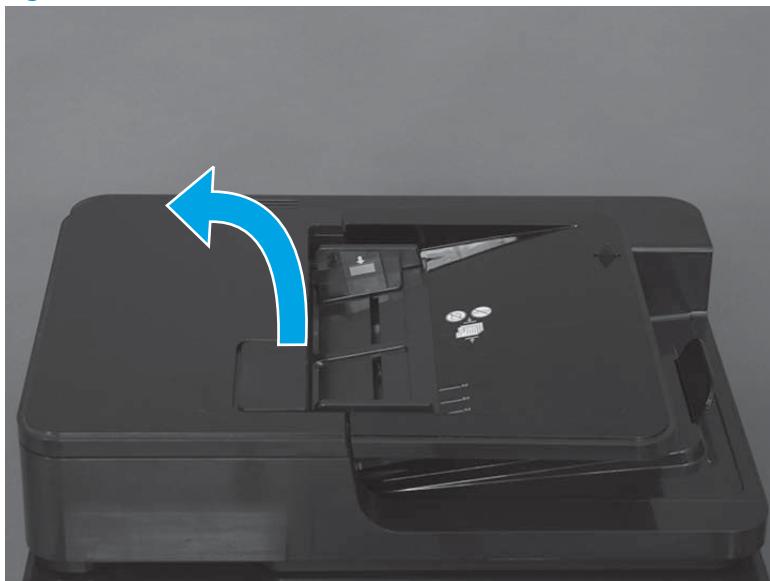


2. Remove four screws.

Figure 1-112 Remove the document-feeder roller cover (2 of 10)

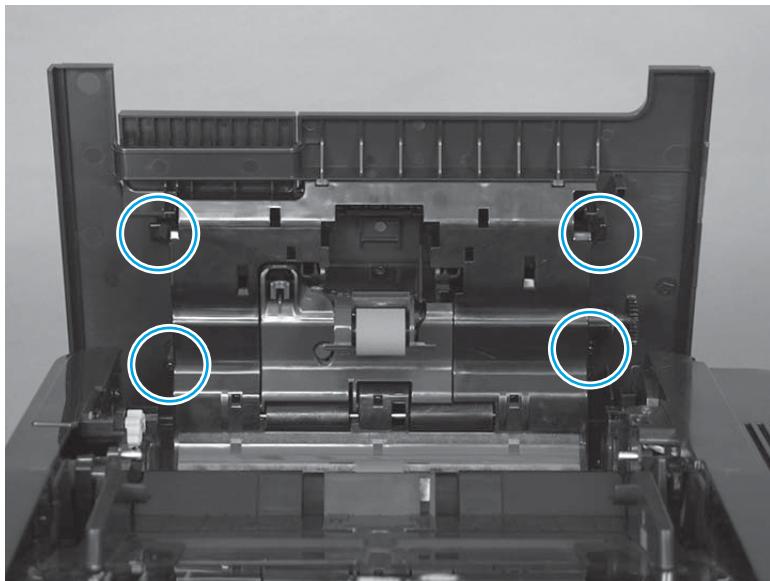


3. Before removing the cover, note the location of the tabs.

Figure 1-113 Remove the document-feeder roller cover (3 of 10)

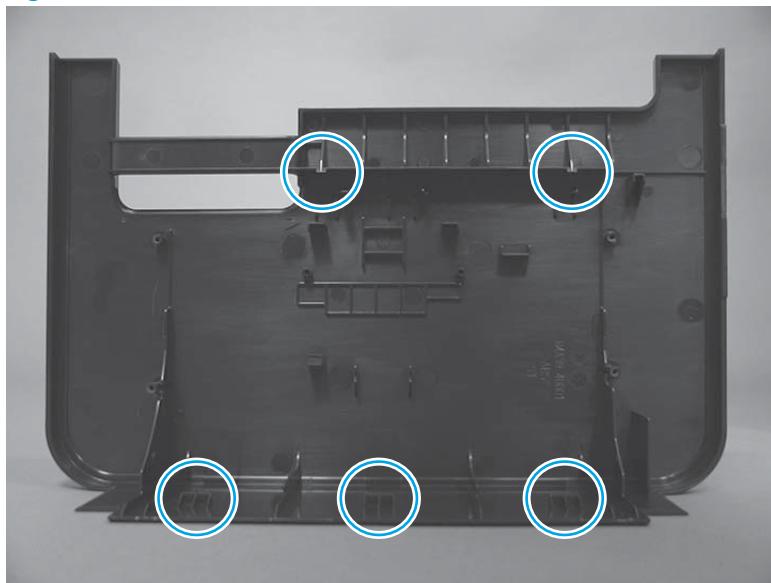


4. Release two tabs.

Figure 1-114 Remove the document-feeder roller cover (4 of 10)

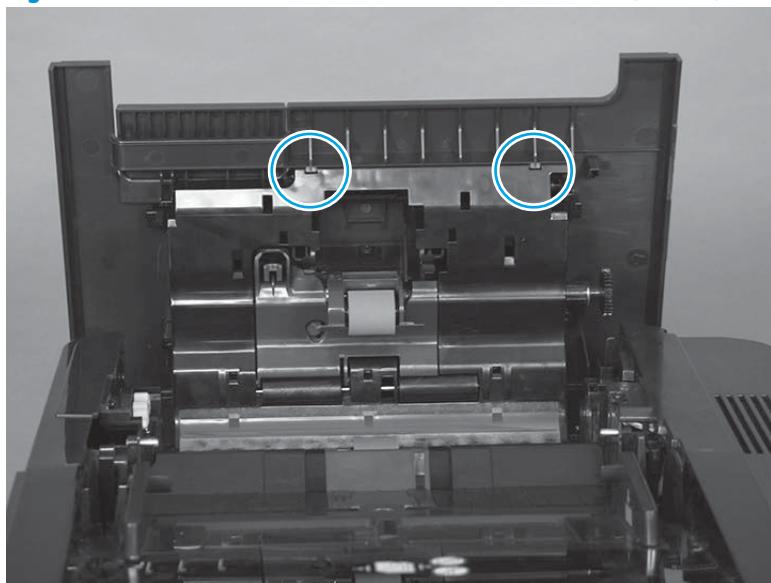

5. Close the document-feeder cover, and then release the remaining three tabs and remove the cover.


Figure 1-115 Remove the document-feeder roller cover (5 of 10)

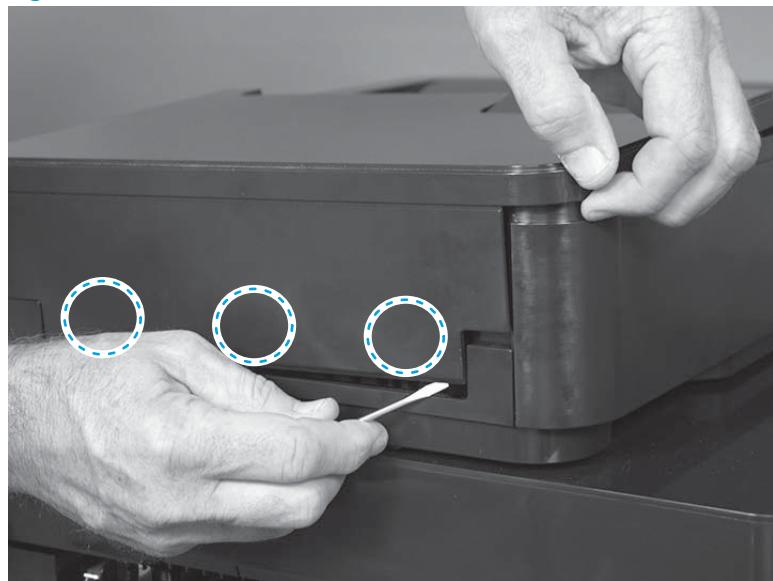

6. Remove three springs.


 **Reinstallation tip** Use needle nose pliers to reattach the spring. Attach the spring to the bottom hook first.

Figure 1-116 Remove the document-feeder roller cover (6 of 10)

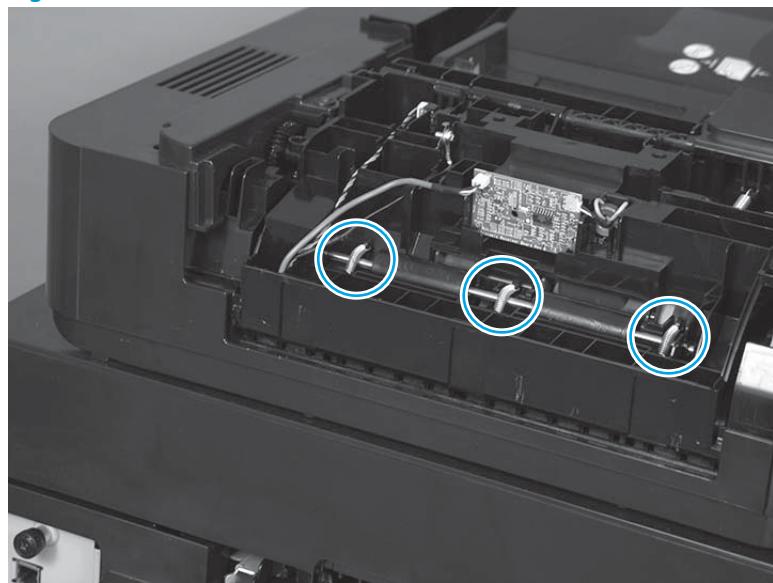


7. Lift the right end of the roller shaft up (callout 1), and then slide the shaft and rollers to the left (callout 2).

Figure 1-117 Remove the document-feeder roller cover (7 of 10)

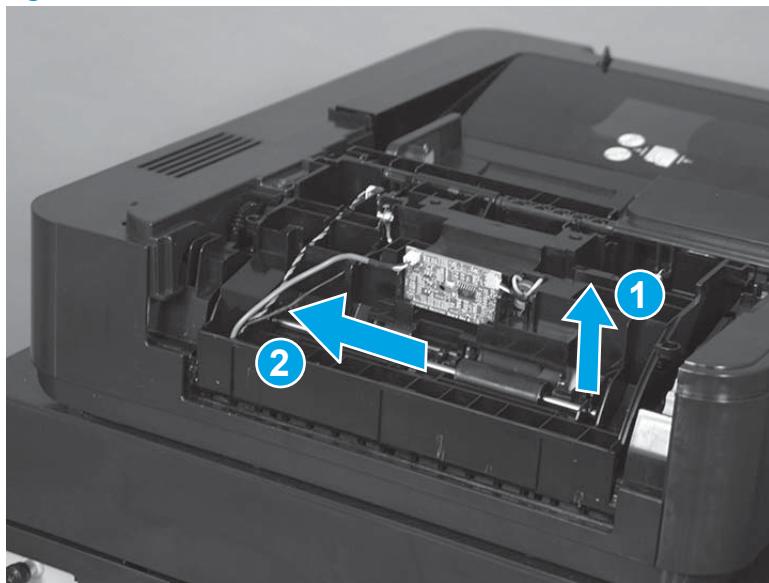


8. Open the document-feeder cover, open the ADF roller cover (callout 1), and move the ADF roller assembly out of the way (callout 2).

Figure 1-118 Remove the document-feeder roller cover (8 of 10)

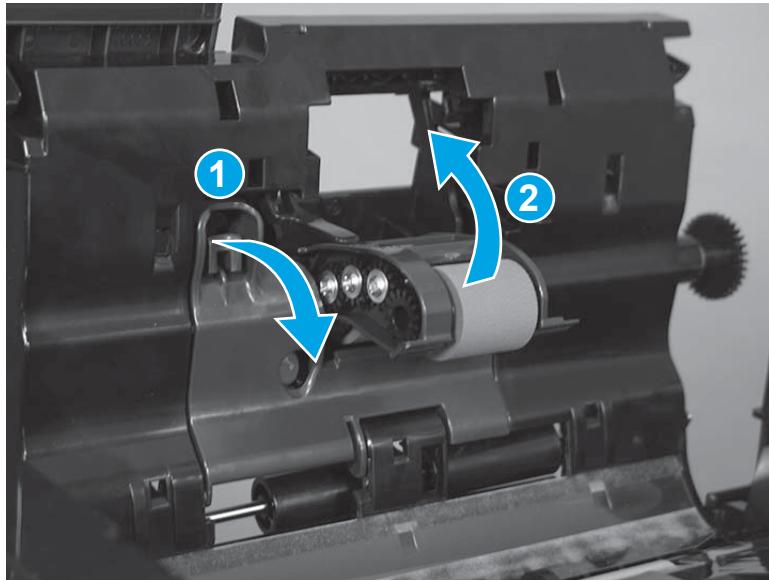


9. Release one hinge pin on the document-feeder roller cover.

Figure 1-119 Remove the document-feeder roller cover (9 of 10)

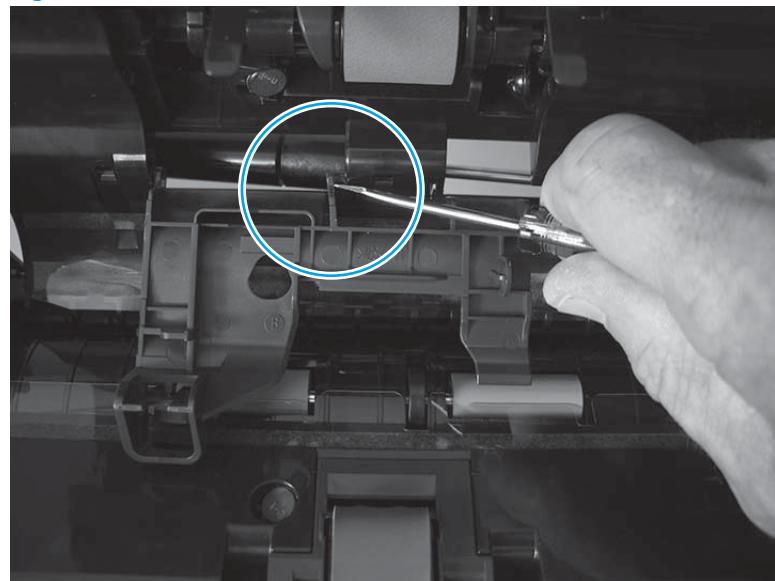

10. Remove the document-feeder roller cover.


Figure 1-120 Remove the document-feeder roller cover (10 of 10)

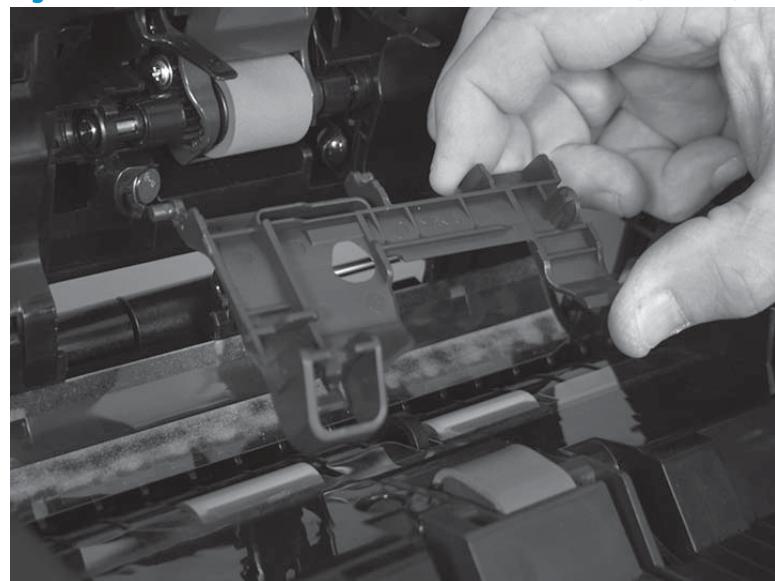

Reinstall the document-feeder roller cover


1. Make sure that the end of the roller shaft (callout 1) is correctly installed.

Figure 1-121 Reinstall the document-feeder roller cover (1 of 2)

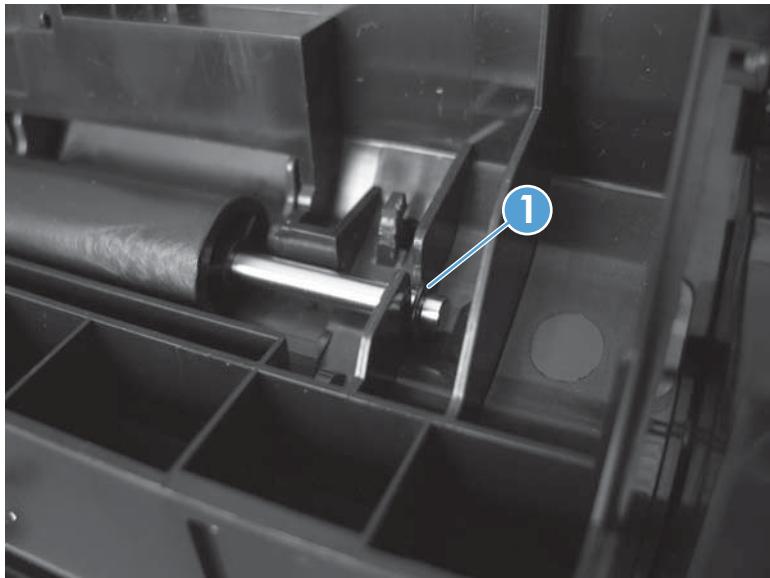

2. Make sure the document-feeder roller cover and document-feeder roller assembly are correctly positioned before trying to close the cover.


Figure 1-122 Reinstall the document-feeder roller cover (2 of 2)

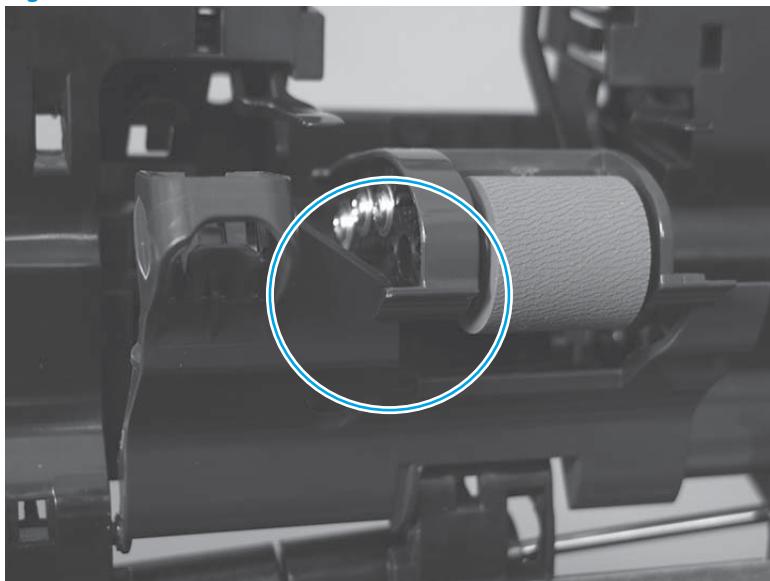

Scanner rear cover

- ▲ Remove four screws (callout 1), and then remove the scanner rear cover (callout 2).

Figure 1-123 Remove the scanner rear cover

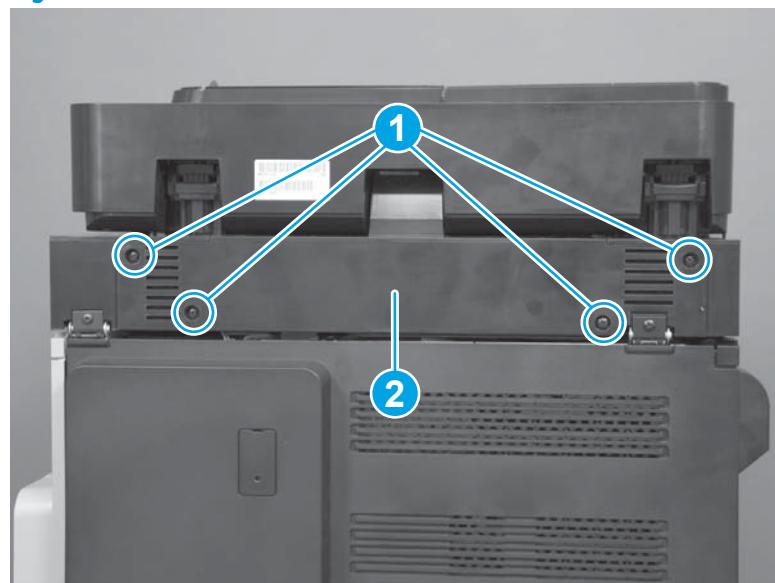

Document feeder (ADF)

Before proceeding, remove the following assemblies


- Scanner rear cover. See [Scanner rear cover on page 79](#).

Remove the document feeder

 **IMPORTANT:** When installing a replacement document feeder, see [Complete the document feeder replacement installation on page 87](#) after the product is reassembled.


 **NOTE:** If a replacement document feeder or scanner assembly is installed, you must install a replacement white backing on the document feeder. See [Document feeder white backing \(M680\) on page 54](#).

1. Loosen two document-feeder hinge-locking screws. Back them out about 13 mm (0.5 in).

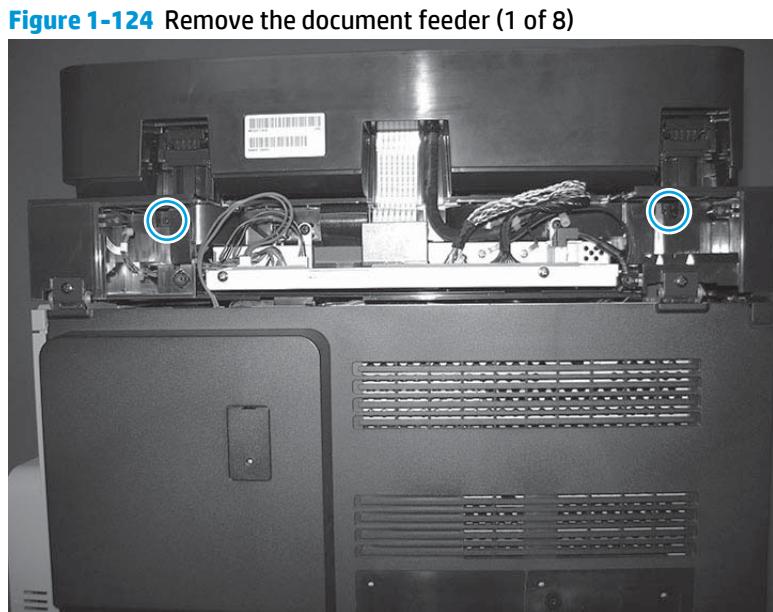

2. Firmly grasp the left-most ferrite (callout 1) as close to the SCB sheet-metal housing as possible.


Figure 1-125 Remove the document feeder (2 of 8)

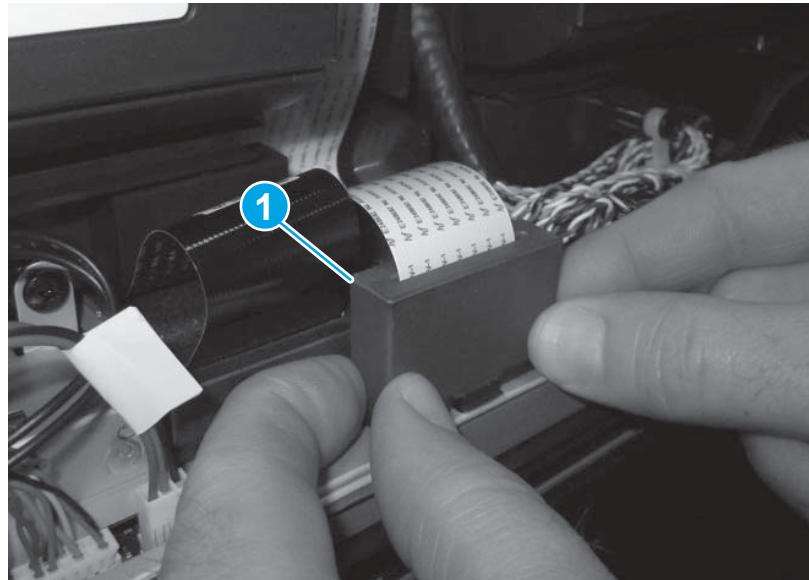

3. Carefully slide the ferrite forward to compress the locking tab (callout 1) on the ferrite holder, and to disengage the tabs at the back of the ferrite holder.

 **NOTE:** To avoid damaging the locking clip or the tabs on the back side of the holder, keep the ferrite vertical as it slides forward.


Figure 1-126 Remove the document feeder (3 of 8)

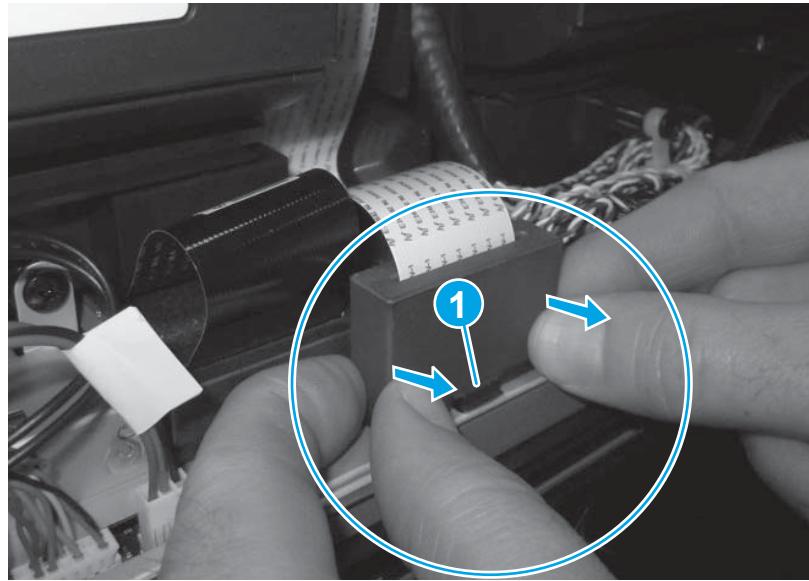

4. Carefully rotate the top of the ferrite holder forward (callout 1), and then remove the ferrite and holder (callout 2).


 **NOTE:** To reinstall the ferrite and holder, see [Special considerations for reinstalling the ferrite and holder on page 85](#).

Figure 1-127 Remove the document feeder (4 of 8)

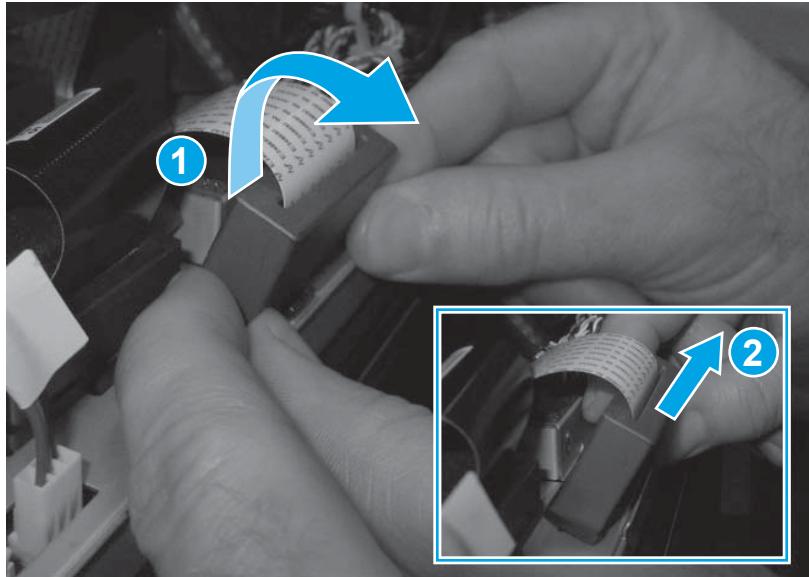

5. Pull straight up on the FCC to remove it.


Figure 1-128 Remove the document feeder (5 of 8)

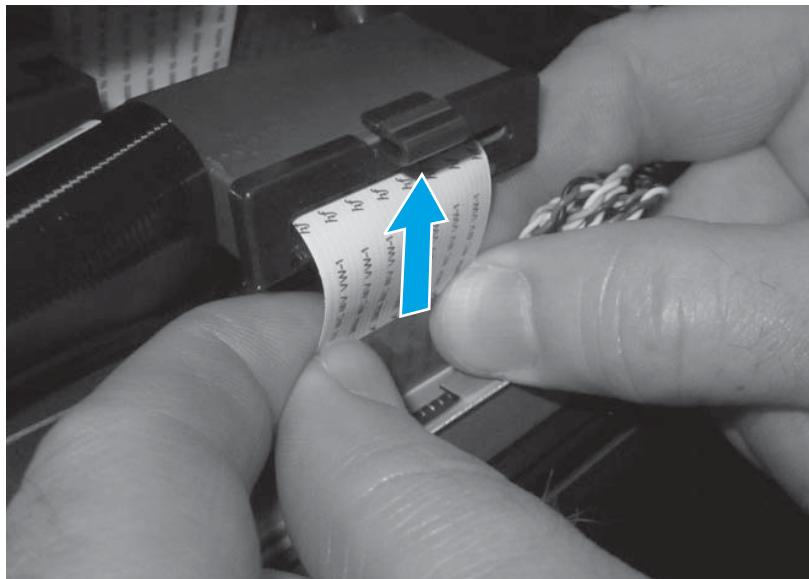

6. Disconnect two connectors (callout 1), remove one grounding wire screw (callout 2), and the wire bundle retainer (callout 3).


 **Reinstallation tip** When reinstalling the document feeder, position the wire harnesses and FFC in the opening in the cover (callout 4).

Figure 1-129 Remove the document feeder (6 of 8)

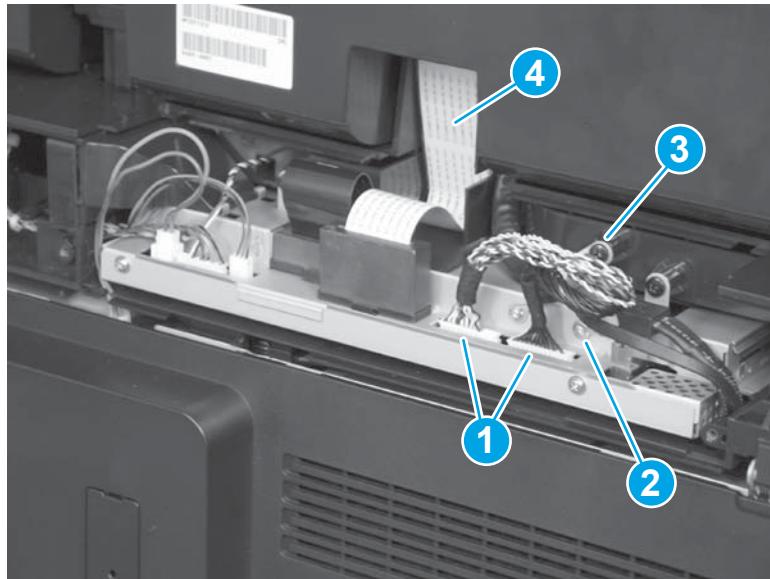

7. Open the document feeder, and lift it up until it stops.


Figure 1-130 Remove the document feeder (7 of 8)

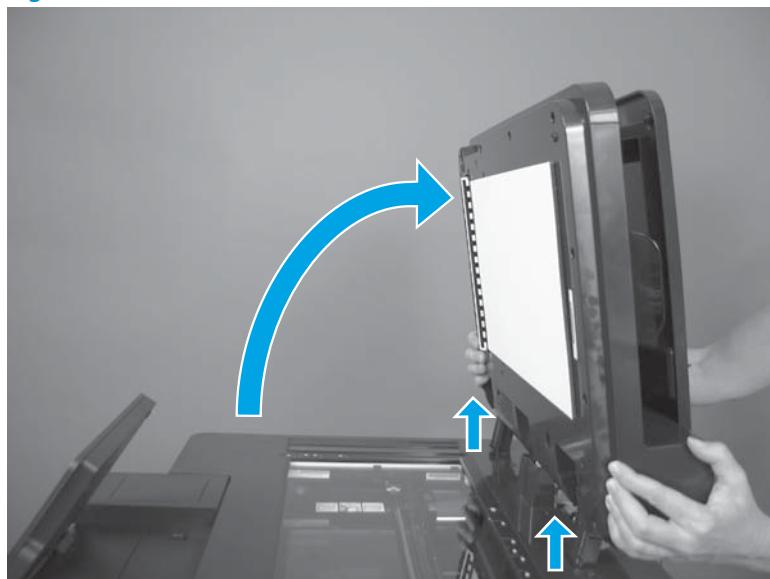

8. Tilt the document feeder back, and pull it straight up to remove it.

⚠ CAUTION: The document feeder weighs 5.8 kg (12.8 lb).

Figure 1-131 Remove the document feeder (8 of 8)

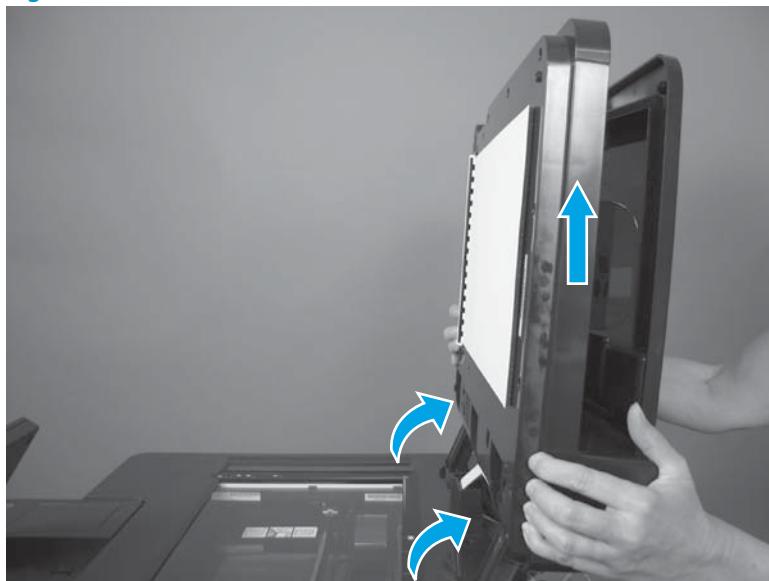


Install a replacement document feeder

 **NOTE:** If a replacement document feeder or scanner assembly is installed, install a replacement white backing on the document feeder. See [Document feeder white backing \(M680\) on page 54](#).

Special considerations for reinstalling the ferrite and holder


1. Insert the FFC through the opening in the ferrite, and verify that the tabs (callout 1) on the ferrite holder are not damaged.

Figure 1-132 Install the ferrite and holder (1 of 5)

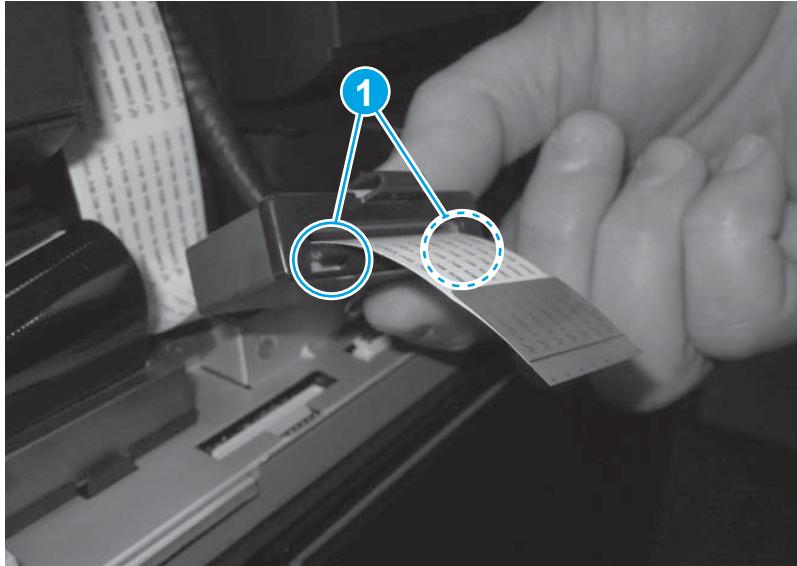

2. Push the FFC straight down into the connector to install it.


Figure 1-133 Install the ferrite and holder (2 of 5)

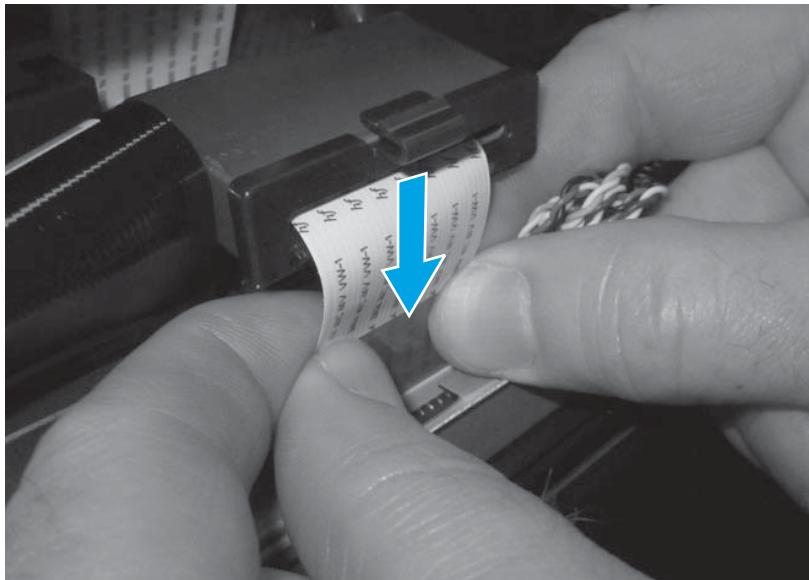

- 3.** Tilt the ferrite and holder forward, and then place it on the opening in the SCB sheet-metal housing (callout 1). Make sure that the locking tab on the holder is compressed against the SCB sheet-metal housing (callout 2).


Rotate the ferrite and holder backward until it is positioned flat against the SCB sheet-metal housing (callout 3).

Figure 1-134 Install the ferrite and holder (3 of 5)

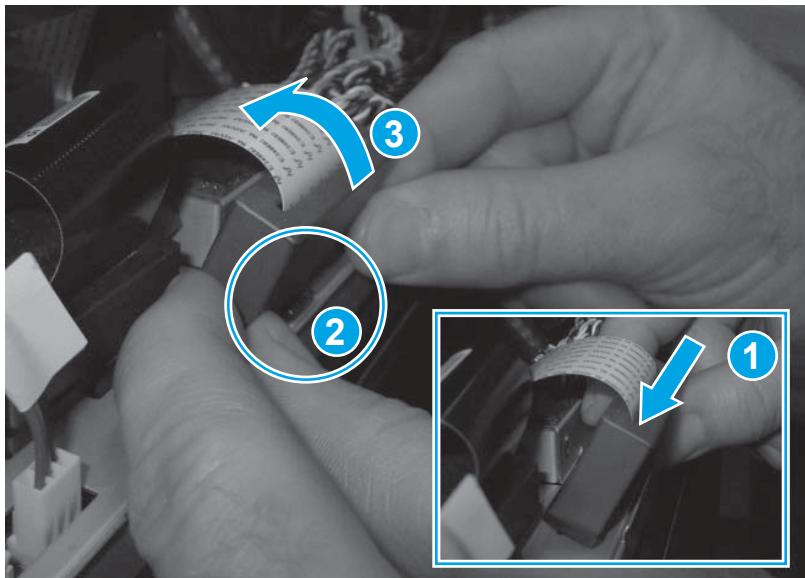

- 4.** Carefully slide the ferrite backward to release the locking tab (callout 1) on the ferrite holder, and to engage the tabs on the back of the ferrite holder with the SCB sheet-metal housing.

Figure 1-135 Remove the document feeder (4 of 5)

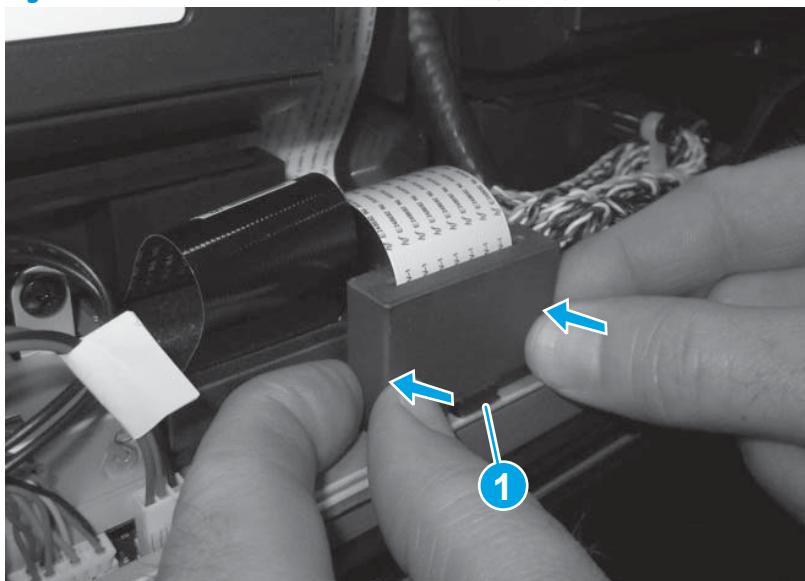

5. Verify that the ferrite and holder are securely fastened to the SCB sheet-metal housing, and that the holder is fully seated.

Figure 1-136 Install the ferrite and holder (5 of 5)



Complete the document feeder replacement installation

If a replacement document feeder is installed, perform the following tasks after reassembling the product:

1. Use the [Service](#) menu to reset the [Document Feeder Kit Interval](#) and [ADF Count](#) firmware counters.
 - a. From the Home screen on the control panel, scroll to and touch the [Device Maintenance](#) button.
 - b. Open the [Service](#) menu.
 - c. On the sign-in screen, select the [Service Access Code](#) option from the drop-down list.
 - d. Enter the following service access code for this product: 04068014.
 - e. Reset the following values:
 - [Document Feeder Kit Interval](#); set to zero
 - [ADF Count](#); set to zero
2. Use the [Manage Supplies](#) menu to reset the [New Document Feeder Kit](#) firmware counter.
 - a. From the Home screen on the control panel, scroll to and touch the [Supplies](#) button.
 - b. Open the following menus:

- [Manage Supplies](#)
 - [Reset Supplies](#)
 - [New Document Feeder Kit](#)
- c. Select the [Reset](#) item.
3. Use the [Calibration/Cleaning](#) menu to calibrate the scanner.
- a. From the Home screen on the control panel, scroll to and touch the [Device Maintenance](#) button.
 - b. Open the following menus:
 - [Calibration/Cleaning](#)
 - [Calibrate Scanner](#)
 - c. Touch the [Next](#) button to start the calibration process. Follow the on-screen prompts.
 - d. Wait while the product calibrates the scanner.

Document-feeder hinge assembly


Before proceeding, remove the following assemblies

- Document feeder. See [Document feeder \(ADF\) on page 80](#).

Remove the document-feeder hinge assembly

- ▲ For each hinge, remove four screws and remove the hinge assembly.

Figure 1-137 Remove the document-feeder hinge assembly

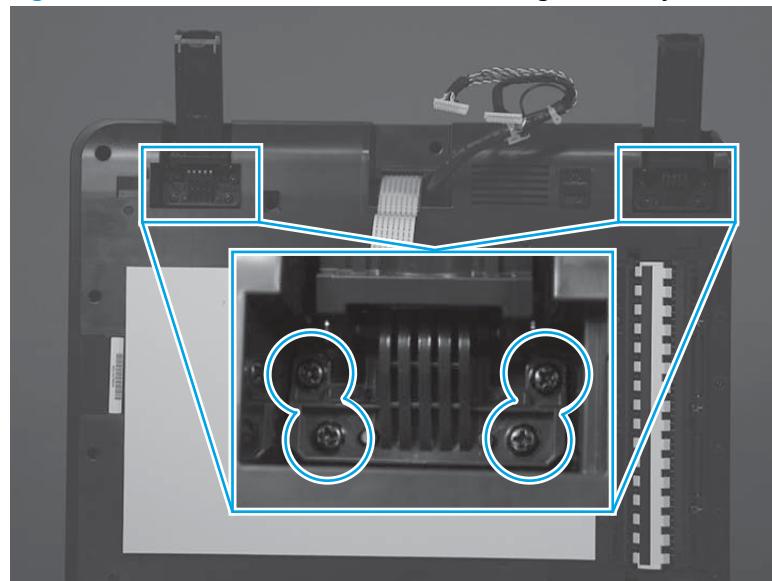

Scanner control board (SCB) fan (M680)

Before proceeding, remove the following assemblies

- Scanner rear cover. See [Scanner rear cover on page 79](#).




NOTE: This assembly is also called the scanner control board fan assembly kit.

Remove the scanner control board (SCB) fan


1. Disconnect one connector.

Figure 1-138 Remove the scanner control board fan (1 of 3)

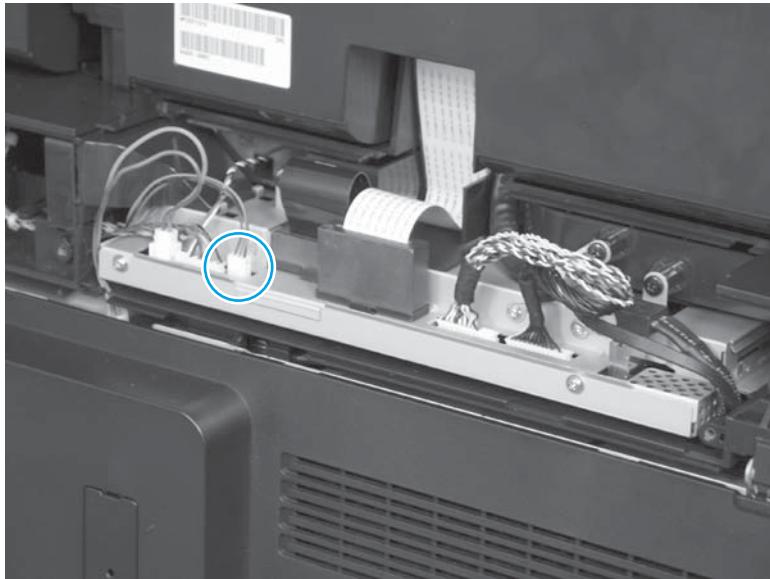


2. Slide the SCB fan (callout 1) and housing (callout 2) straight back to remove them.

Figure 1-139 Remove the scanner control board fan (2 of 3)

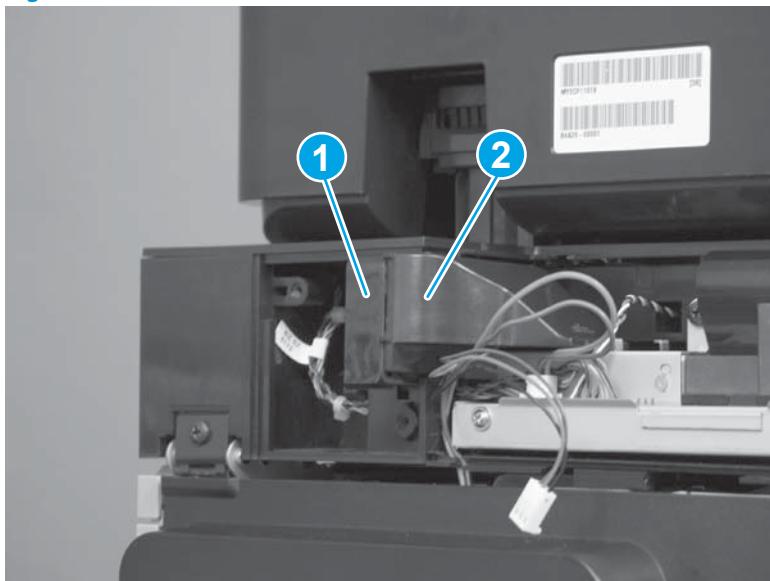

3. Separate the fan from the housing.


Figure 1-140 Remove the scanner control board fan (3 of 3)

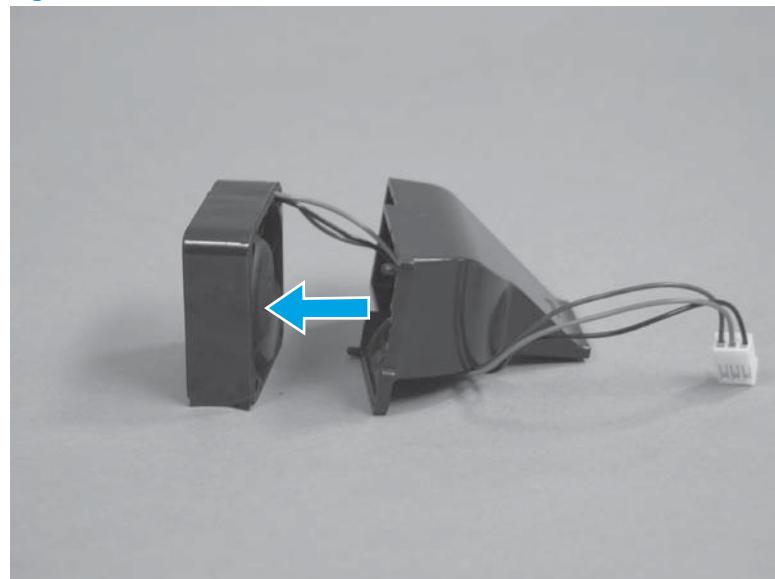

Install a replacement SCB fan


1. Peel the adhesive backing from the foam strip supplied with the replacement fan. Apply the foam strip to the fan, starting at the arrow (callout 1) and continuing around the fan (callout 2). Place the foam over the wires (callout 3).

Figure 1-141 Install a replacement SCB fan (1 of 2)

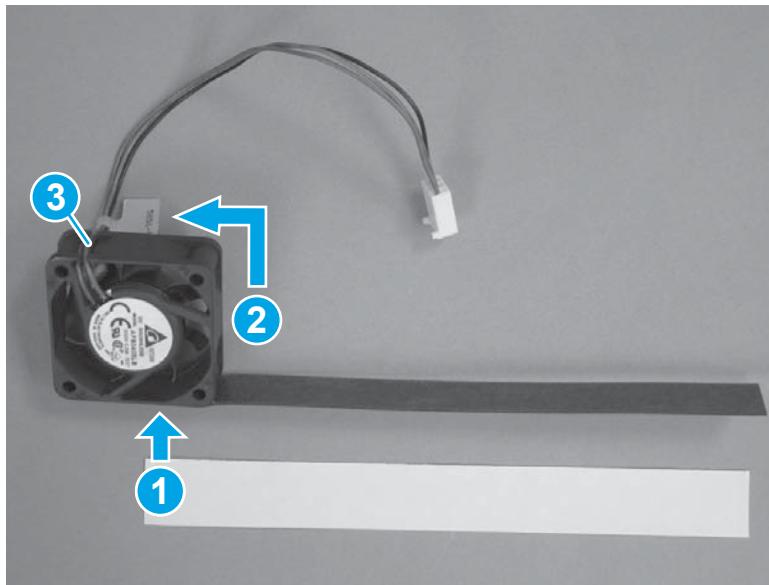

2. Install the replacement fan in the housing, and then reinstall the assembly in the product.

Figure 1-142 Install a replacement SCB fan (2 of 2)

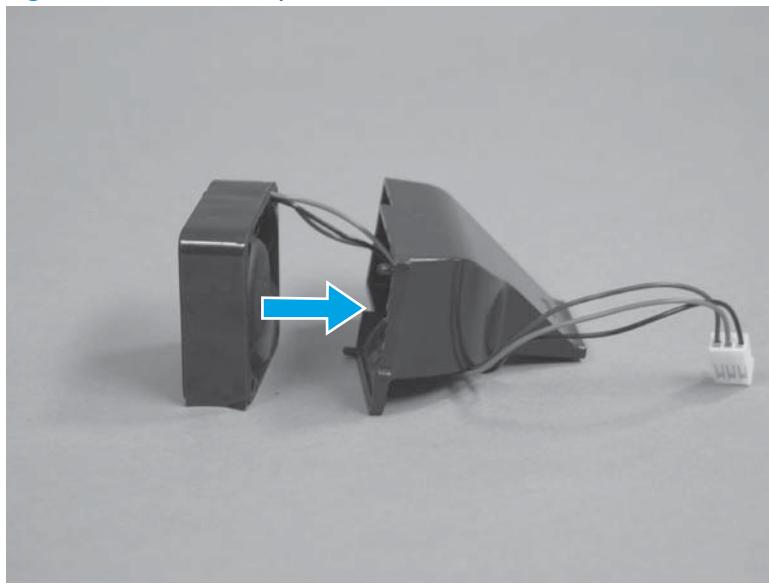

Scanner control board (SCB)

Before proceeding, remove the following assemblies


- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Scanner control board fan. See [Scanner control board \(SCB\) fan \(M680\) on page 90](#).

TIP: The following procedure describes removing the SCB without first removing the document feeder and scanner. If the document feeder and scanner are removed for other reasons, it is easier to remove the SCB after removing the scanner.

Remove the SCB

1. Firmly grasp the left-most ferrite (callout 1) as close to the SCB sheet-metal housing as possible.


Figure 1-143 Remove the SCB (1 of 13)

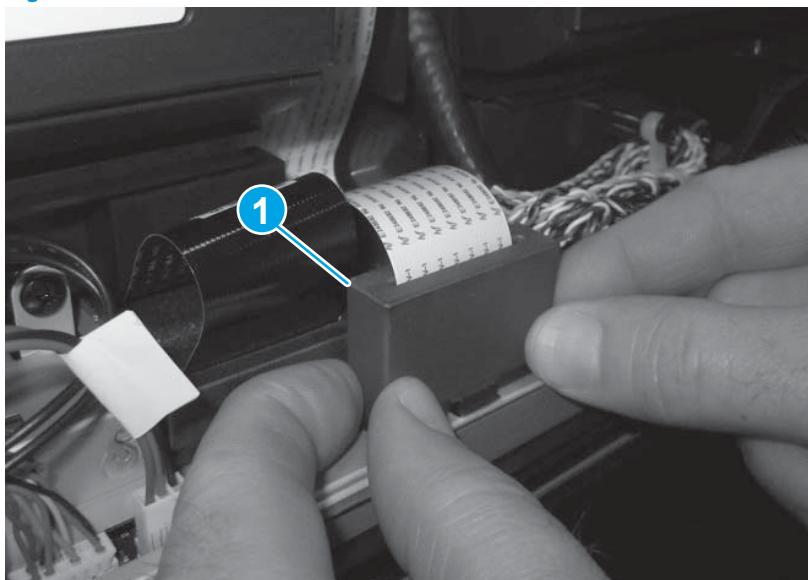

- Carefully slide the ferrite forward to compress the locking tab (callout 1) on the ferrite holder, and to disengage the tabs at the back of the ferrite holder.

 **NOTE:** To avoid damaging the locking clip or the tabs on the back side of the holder, keep the ferrite vertical as it slides forward.


Figure 1-144 Remove the SCB (2 of 13)

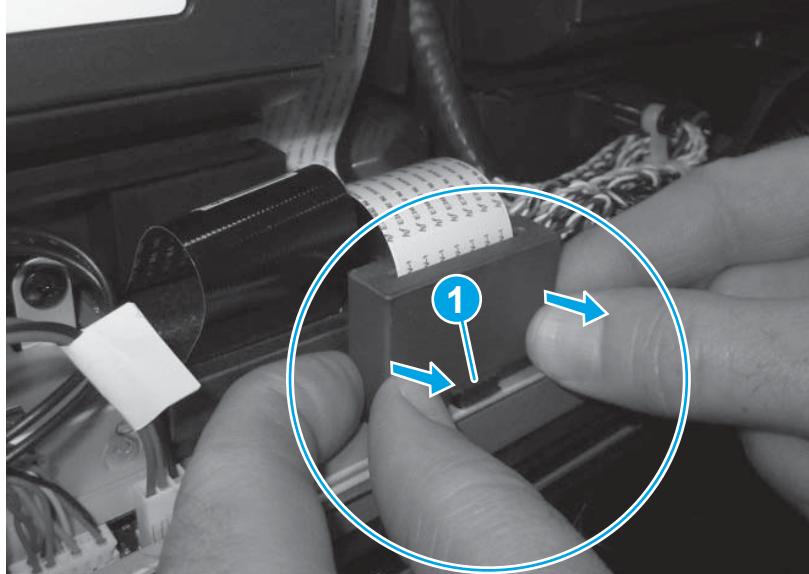

- Carefully rotate the top of the ferrite holder forward (callout 1), and then remove the ferrite and holder (callout 2).

 **NOTE:** To reinstall the ferrite and holder, see [Special considerations for reinstalling the ferrites and holders on page 99](#).


Figure 1-145 Remove the SCB (3 of 13)

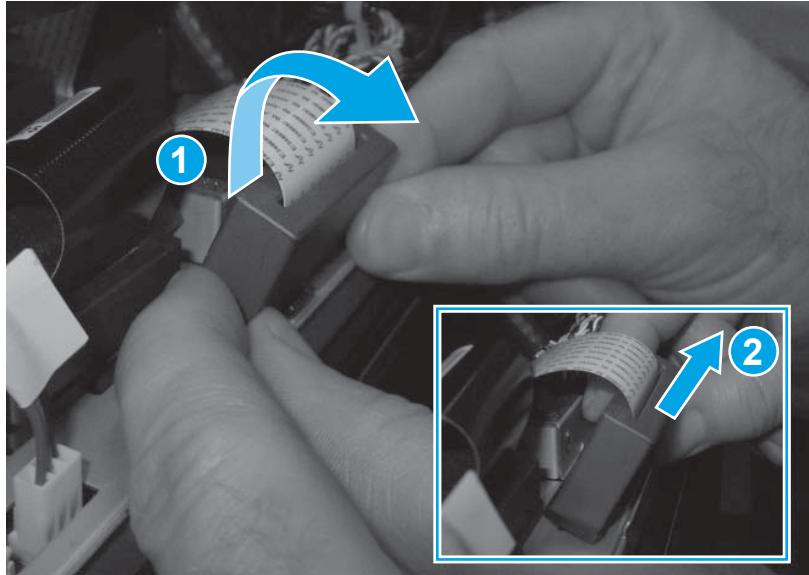

4. Pull straight up on the FCC to remove it.


Repeat this process for the right-most ferrite, holder, and the FFC.

Figure 1-146 Remove the SCB (4 of 13)

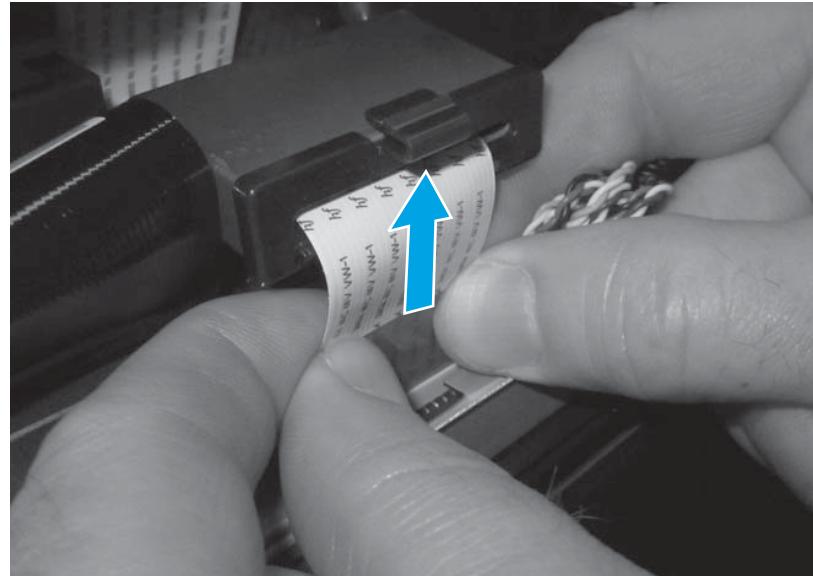


5. After disconnecting the two FFCs from the SCB, slide the ferrites off the FFCs.

Figure 1-147 Remove the SCB (5 of 13)

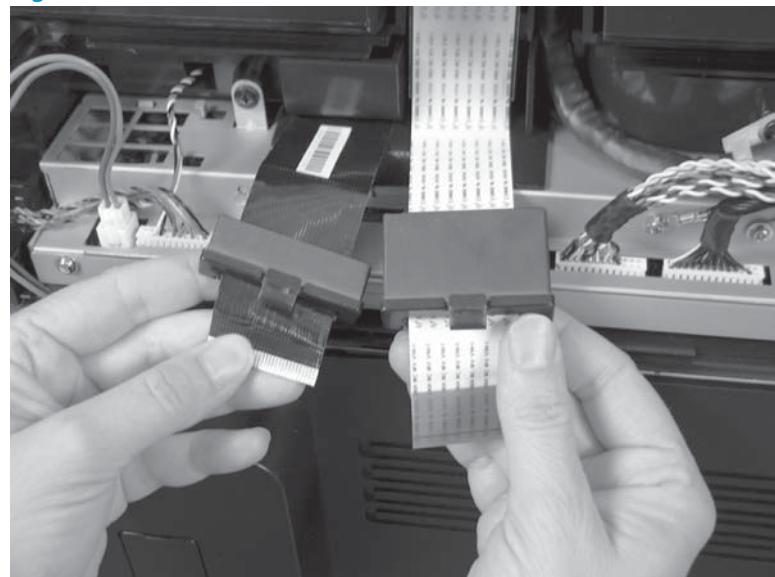

6. Disconnect five connectors (callout 1), two grounding wires (callout 2), and remove two screws (callout 3).

Figure 1-148 Remove the SCB (6 of 13)

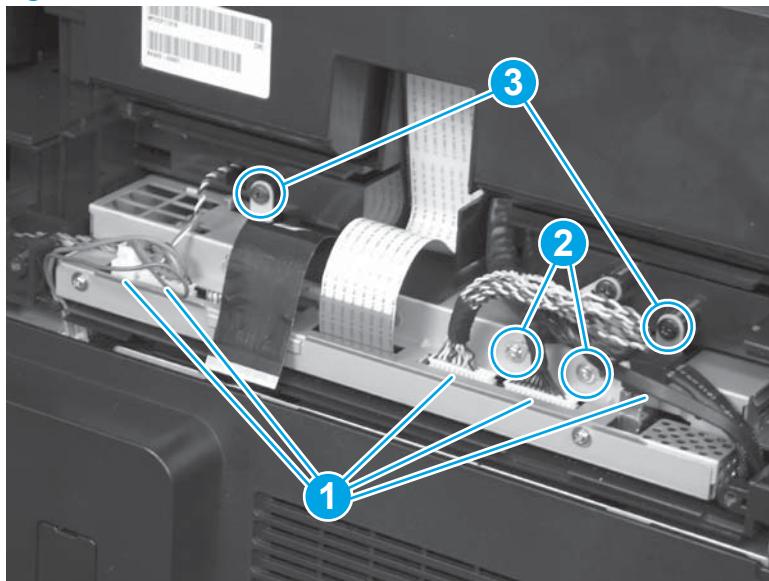


7. Release the scanner latch.

Figure 1-149 Remove the SCB (7 of 13)




8. Pull down the IPTU top cover.

Figure 1-150 Remove the SCB (8 of 13)

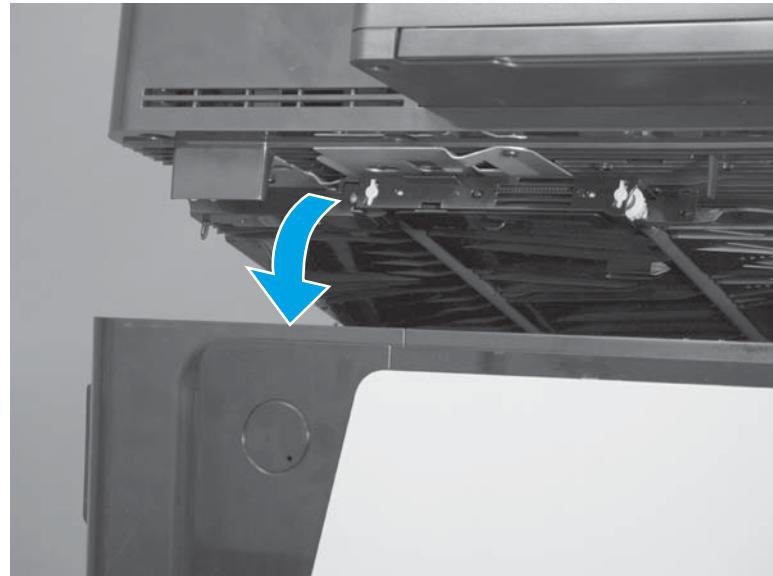

9. Pull the top of the front scanner hinge forward to release it.

Figure 1-151 Remove the SCB (9 of 13)

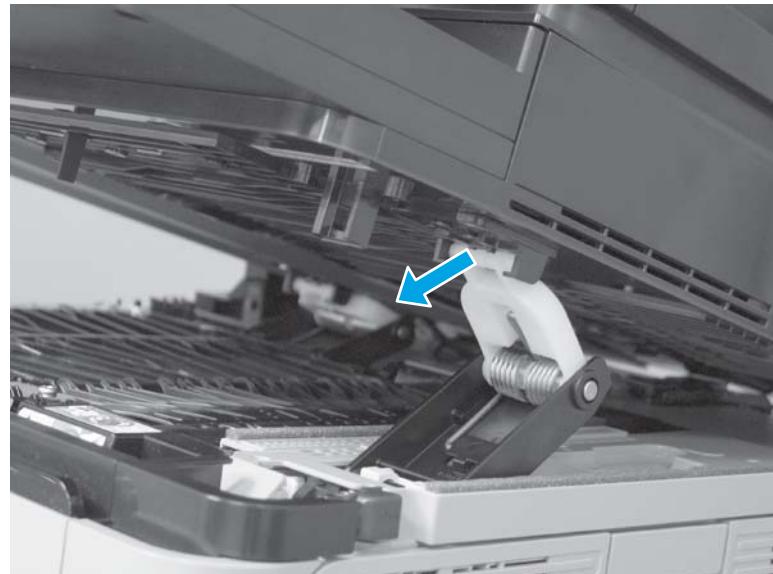


10. Pull the top of the rear scanner hinge forward to release it.

Figure 1-152 Remove the SCB (10 of 13)




11. Disconnect the USB cable (callout 1), and pull the grounding wire through the opening (callout 2).

Figure 1-153 Remove the SCB (11 of 13)

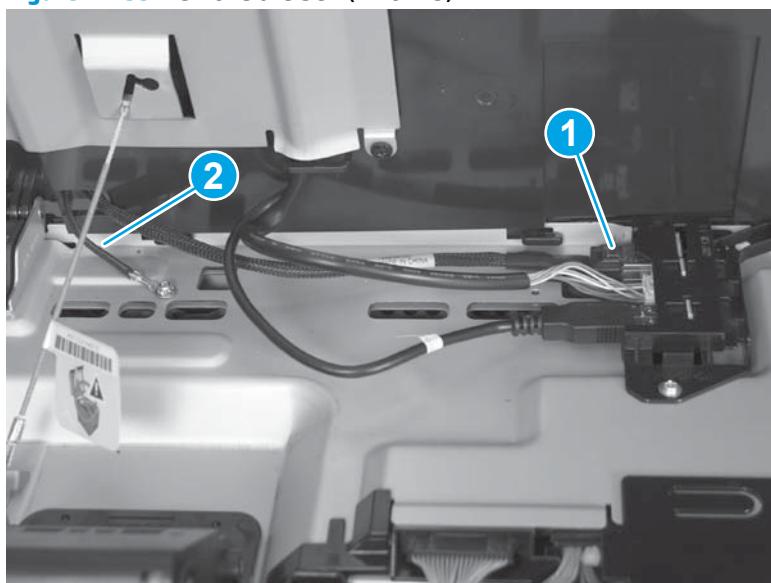


- 12.** Push the USB cable through the opening. Rotate it to fit through the opening. Remove the USB cable, and then close the scanner.

Figure 1-154 Remove the SCB (12 of 13)

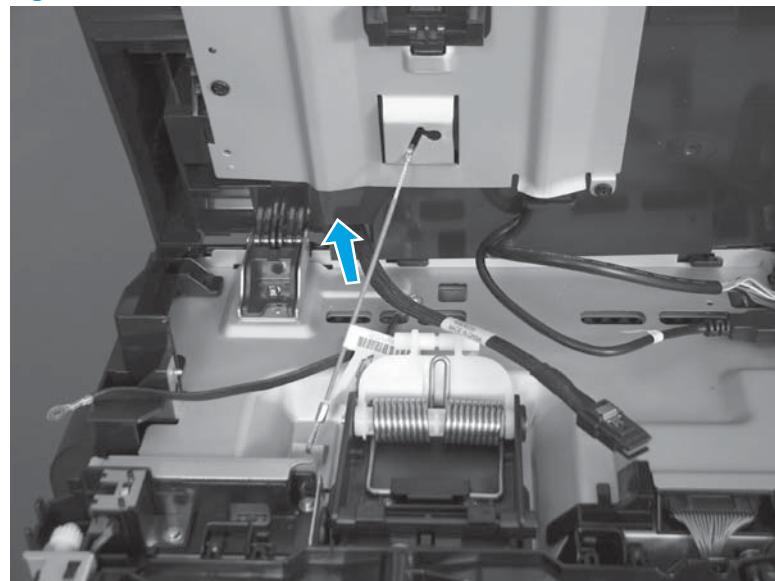

- 13.** From the rear of the product, pull the SCB straight back to remove it.

Figure 1-155 Remove the SCB (13 of 13)

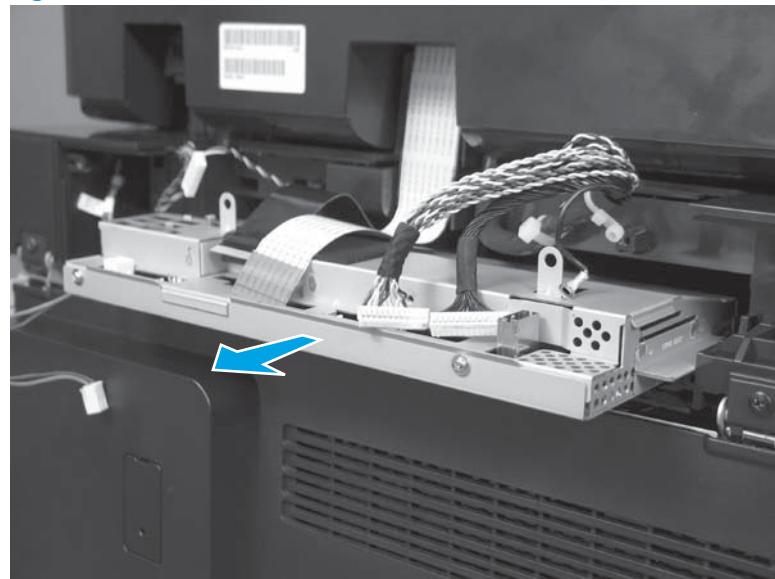


Install a scanner control board

Special considerations for reinstalling the ferrites and holders


1. Insert the document-feeder FFC through the opening in the left-most ferrite, and verify that the tabs (callout 1) on the ferrite holder are not damaged.

Figure 1-156 Install the ferrite and holder (1 of 5)

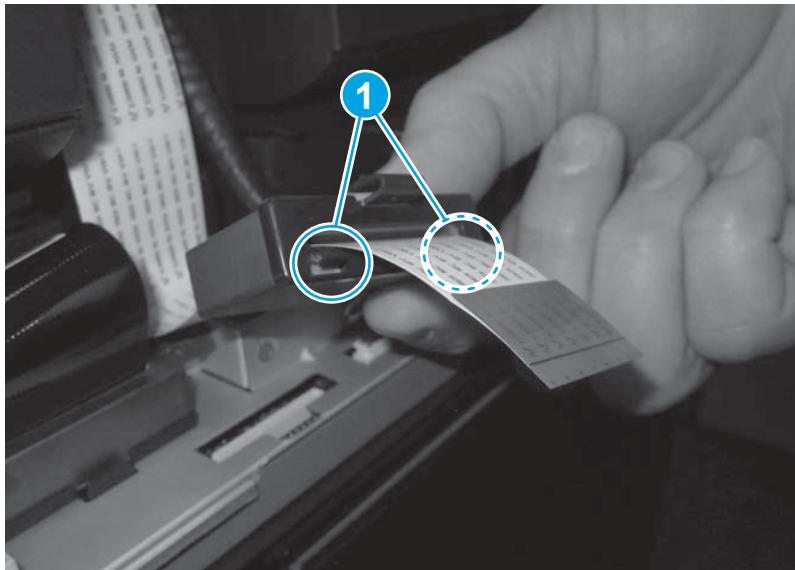

2. Push the FFC straight down into the connector to install it.


Figure 1-157 Install the ferrite and holder (2 of 5)

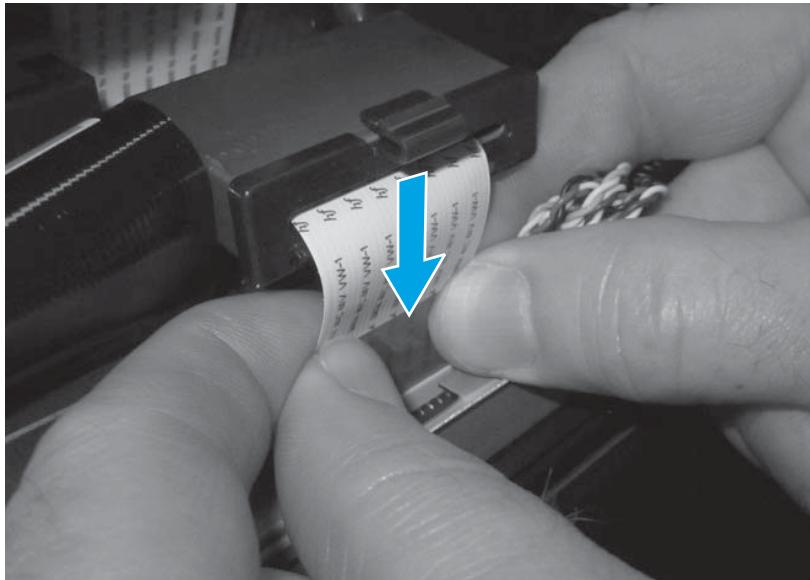

3. Tilt the ferrite and holder forward, and then place it on the opening in the SCB sheet-metal housing (callout 1). Make sure that the locking tab on the holder is compressed against the SCB sheet-metal housing (callout 2).


Rotate the ferrite and holder backward until it is positioned flat against the SCB sheet-metal housing (callout 3).

Figure 1-158 Install the ferrite and holder (3 of 5)

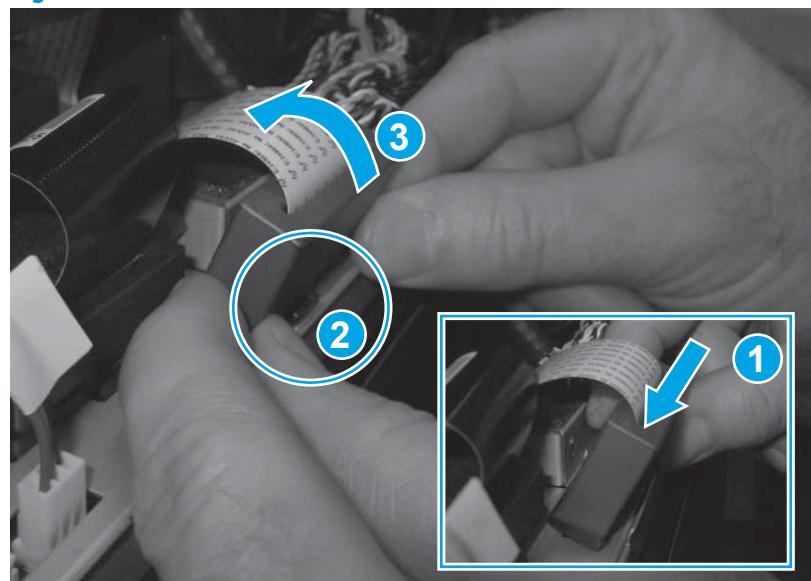

4. Carefully slide the ferrite backward to release the locking tab (callout 1) on the ferrite holder, and to engage the tabs on the back of the ferrite holder with the SCB sheet-metal housing.

Figure 1-159 Remove the document feeder (4 of 5)

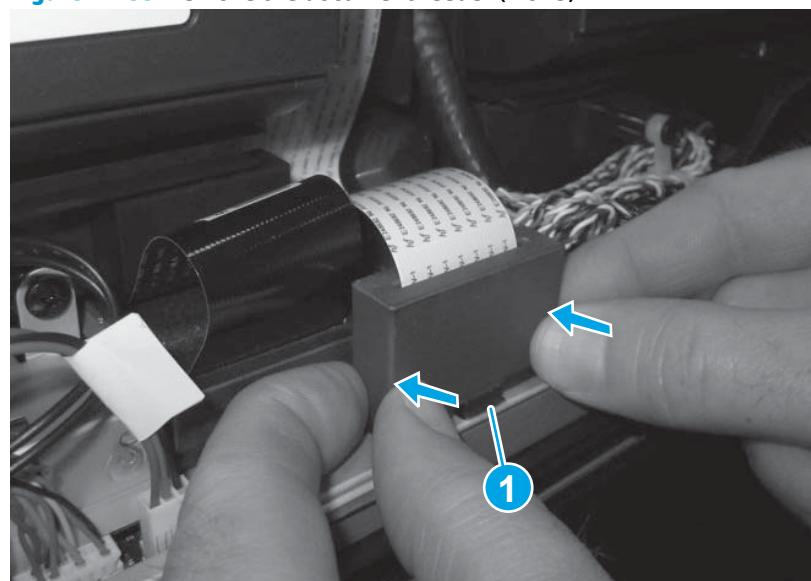

5. Verify that the ferrite and holder are securely fastened to the SCB sheet-metal housing, and that the holder is fully seated.

Repeat this process for the right-most ferrite, holder, and the FFC.

Figure 1-160 Install the ferrite and holder (5 of 5)



Image scanner assembly

Before proceeding, remove the following assemblies

- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Control panel assembly. See [Control-panel assembly \(M680\) on page 32](#).

 **NOTE:** If the scanner is being removed only to reach other assemblies, removing the control panel is not required. The photos in the following procedure show the control panel removed.


Remove the scanner assembly

 **IMPORTANT:** When installing a replacement scanner assembly, see [Complete the image scanner replacement installation on page 111](#) after the product is reassembled.

 **NOTE:** If a replacement document feeder or scanner assembly is installed, you must install a replacement white backing on the document feeder. See [Document feeder white backing \(M680\) on page 54](#).


1. Disconnect one grounding wire (callout 1) and one connector (callout 2). Remove two screws and the hinge covers (callout 3).

Figure 1-161 Remove the scanner assembly (1 of 5)

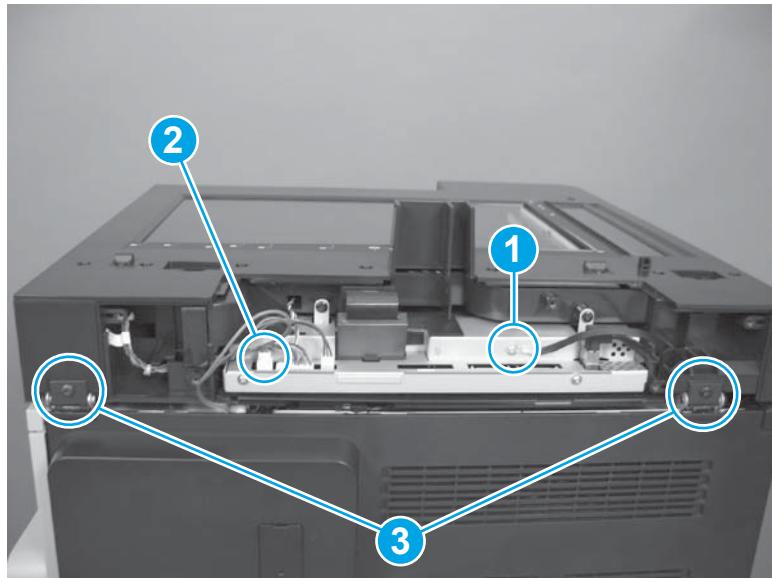


2. Hold down the top of the scanner firmly and release the scanner latch. Carefully open the scanner.

Figure 1-162 Remove the scanner assembly (2 of 5)

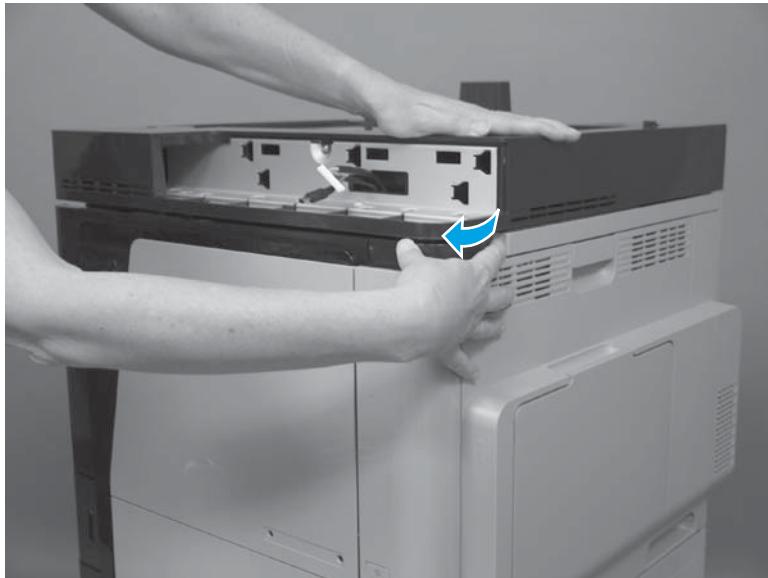

3. Pull down the IPTU top cover. Pull the top of the front scanner hinge forward to release it (callout 1). Pull the top of the rear scanner hinge forward to release it (callout 2).

Figure 1-163 Remove the scanner assembly (3 of 5)

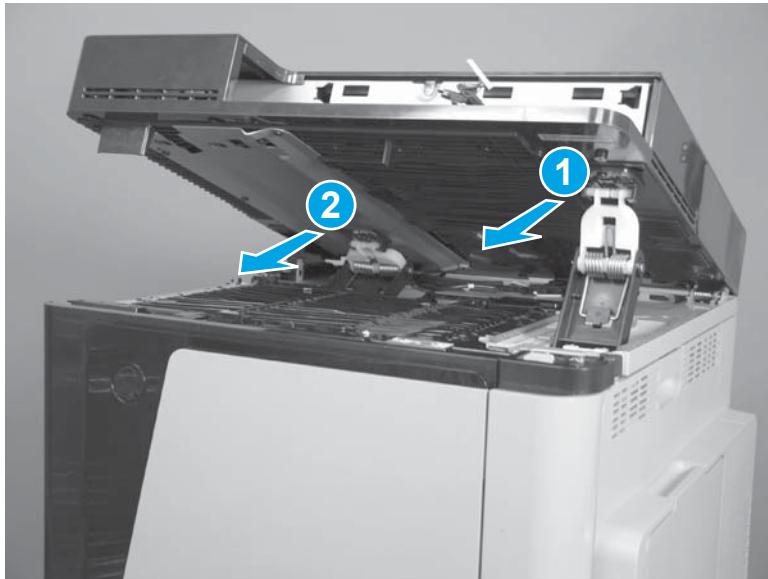


4. Disconnect three connectors (callout 1). Remove one screw, and remove the grounding wire (callout 2). Unthread the pink retaining wire from the slot (callout 3).

CAUTION: The scanner can fall backward after the retaining wire is removed.

Be careful not to drop the screw down into the product.


Figure 1-164 Remove the scanner assembly (4 of 5)

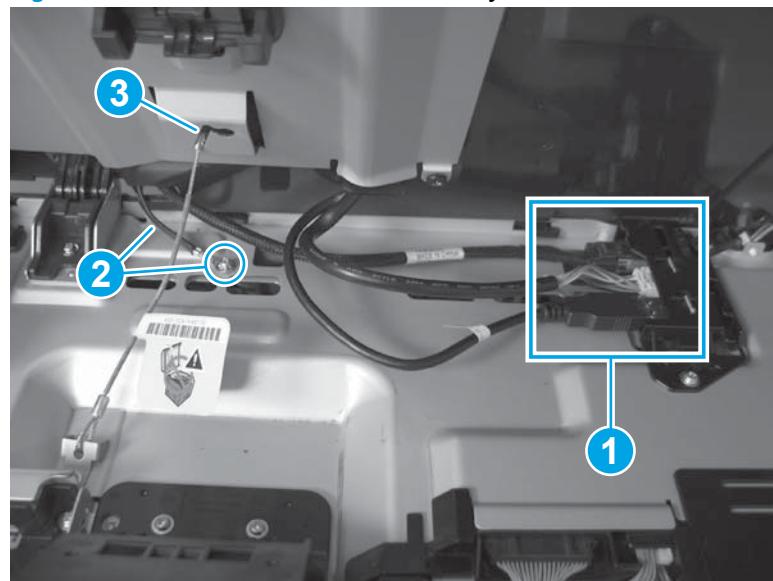

5. Rotate the scanner back and lift it straight up to remove it.

CAUTION: The scanner weighs 6.4 kg (14 lb).

Figure 1-165 Remove the scanner assembly (5 of 5)

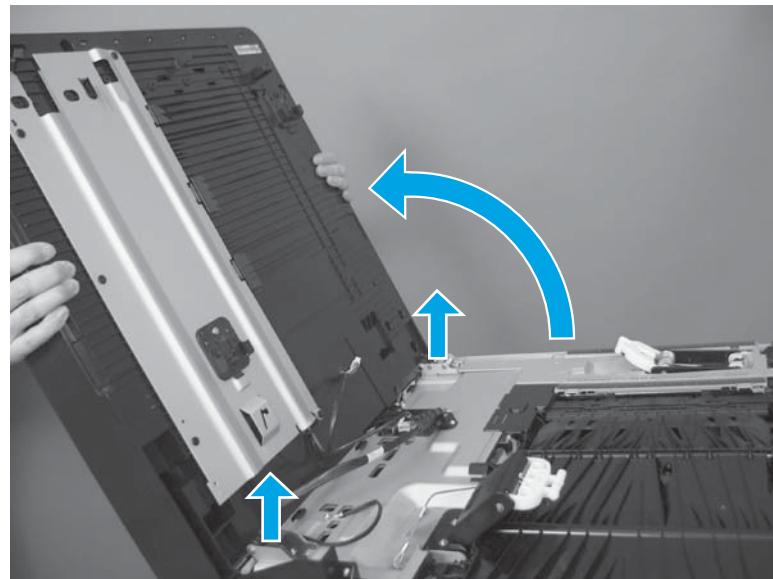


Install a replacement scanner assembly

 **NOTE:** If a replacement document feeder or scanner assembly is installed, install a replacement white backing on the document feeder. See [Document feeder white backing \(M680\) on page 54](#).


Transfer the scanner control board (SCB) to the replacement scanner assembly

 **NOTE:** The steps below show how to remove the left-most document-feeder ferrite and holder—which is removed when the document feeder is removed—from the SCB. The steps for removing the remaining right-most ferrite and holder (callout 1) on the SCB are identical.

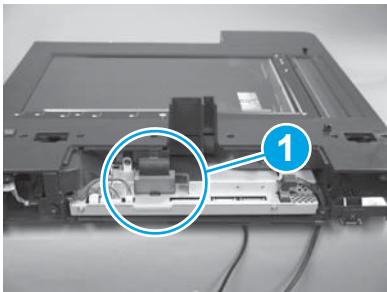


1. Disconnect one connector (callout 1), and push the cable through the opening (callout 2) to remove it.

Figure 1-166 Transfer the SCB to the replacement scanner assembly (1 of 6)

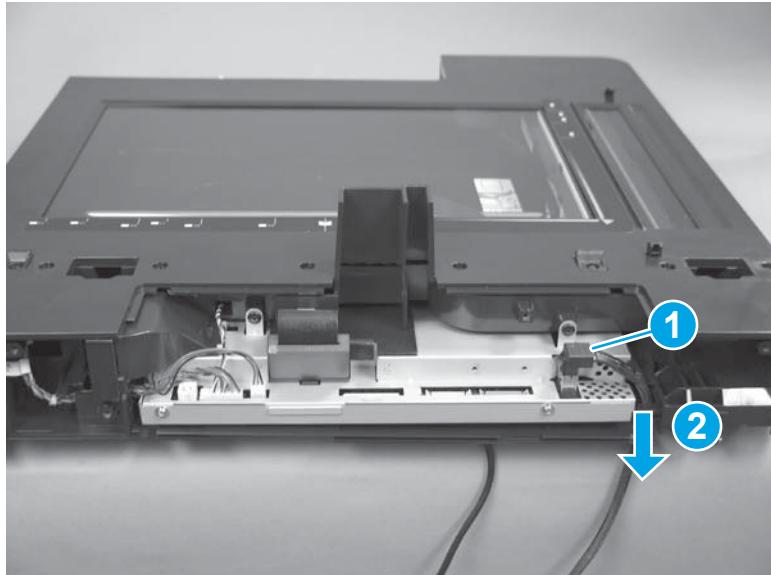

2. Firmly grasp the ferrite (callout 1) as close to the SCB sheet-metal housing as possible.


Figure 1-167 Transfer the SCB to the replacement scanner assembly (2 of 6)

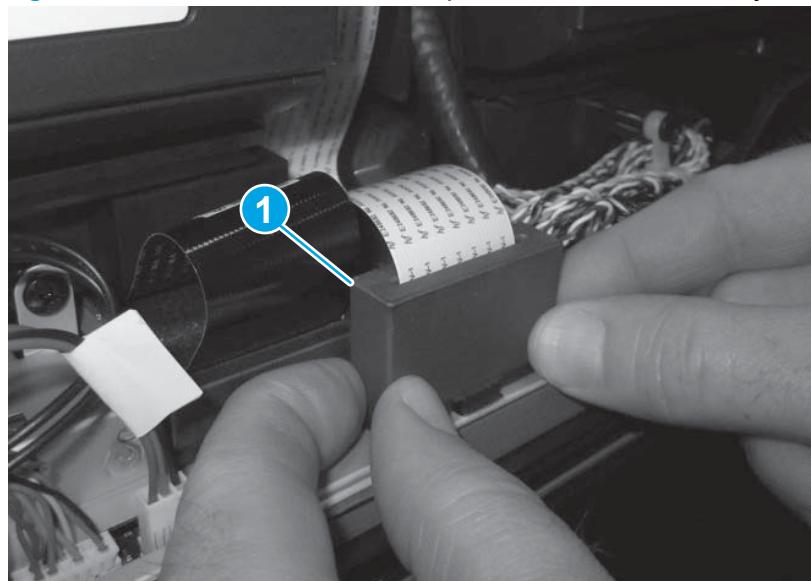

3. Carefully slide the ferrite forward to compress the locking tab (callout 1) on the ferrite holder, and to disengage the tabs at the back of the ferrite holder.

 **NOTE:** To avoid damaging the locking clip or the tabs on the back side of the holder, keep the ferrite vertical as it slides forward.


Figure 1-168 Transfer the SCB to the replacement scanner assembly (3 of 6)

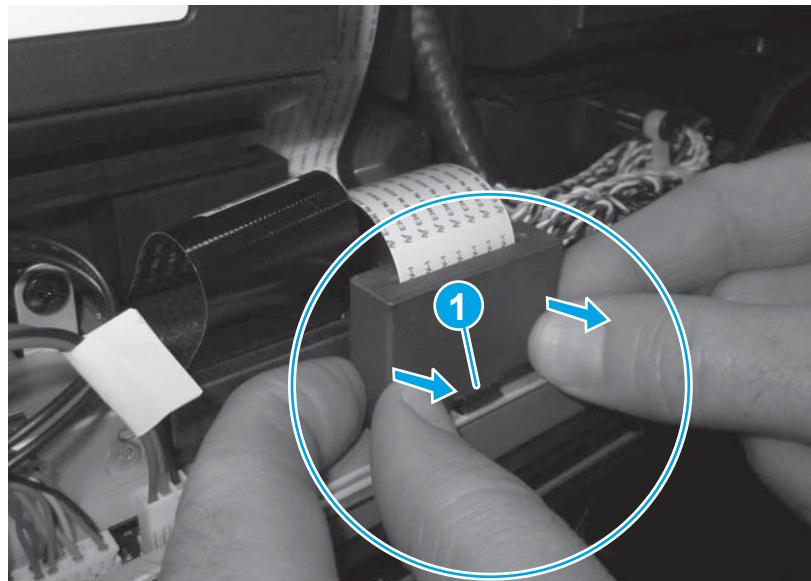

4. Carefully rotate the top of the ferrite holder forward (callout 1), and then remove the ferrite and holder (callout 2).


 **NOTE:** To reinstall the ferrite and holder, see [Special considerations for reinstalling the ferrite and holder on page 109](#).

Figure 1-169 Transfer the SCB to the replacement scanner assembly (4 of 6)

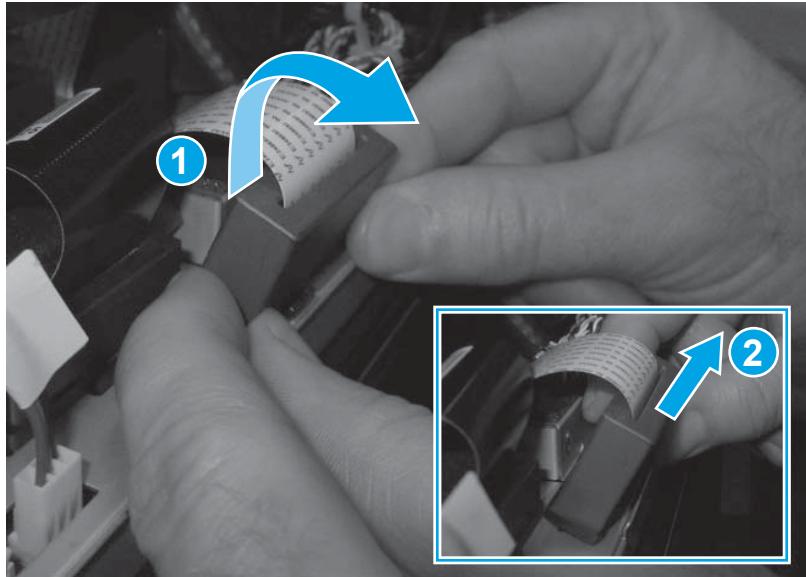


5. Pull straight up on the FCC to remove it.

Figure 1-170 Transfer the SCB to the replacement scanner assembly (5 of 6)

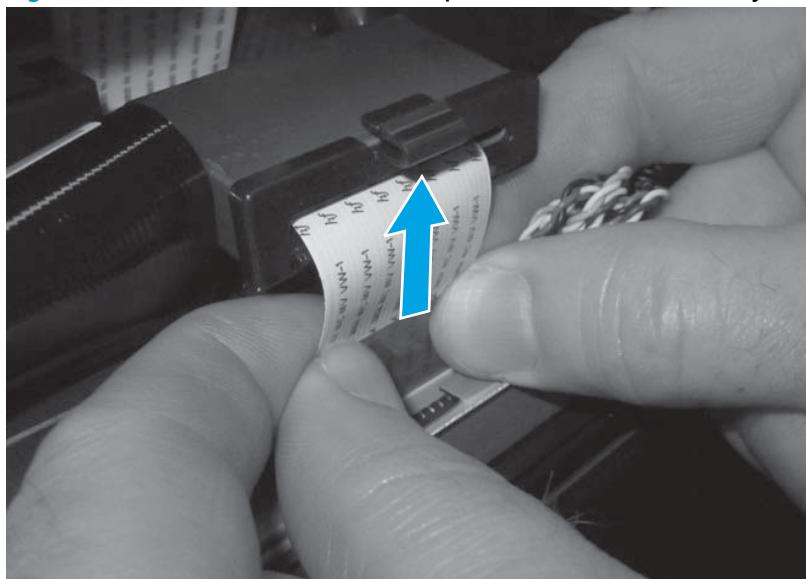

6. Remove two screws (callout 1), disconnect one connector (callout 2), and then remove the scan control board (callout 3) and SCB fan assembly (callout 4).


Figure 1-171 Transfer the SCB to the replacement scanner assembly (6 of 6)

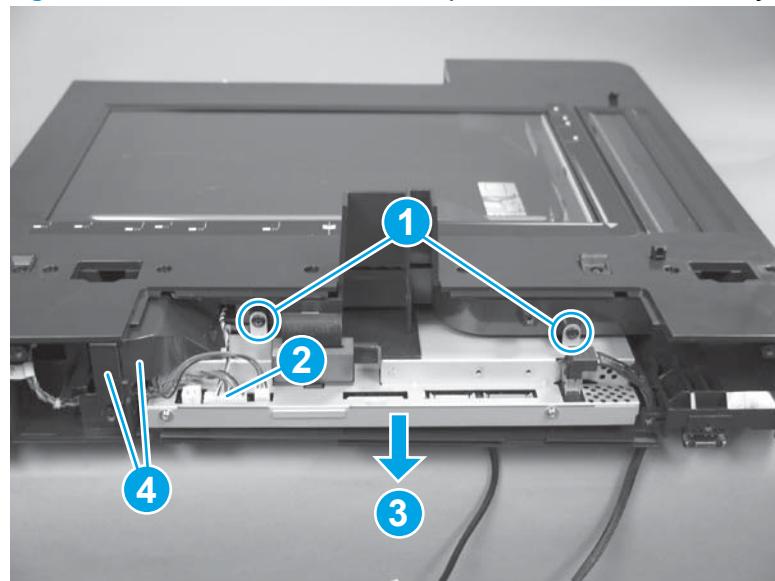

Special considerations for reinstalling the ferrite and holder


1. Insert the FFC through the opening in the ferrite, and verify that the tabs (callout 1) on the ferrite holder are not damaged.

Figure 1-172 Install the ferrite and holder (1 of 5)

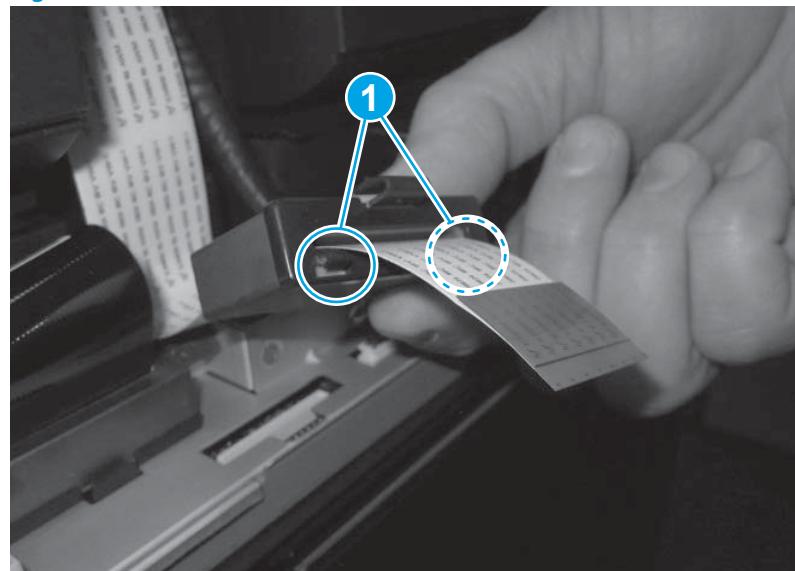

2. Push the FFC straight down into the connector to install it.


Figure 1-173 Install the ferrite and holder (2 of 5)

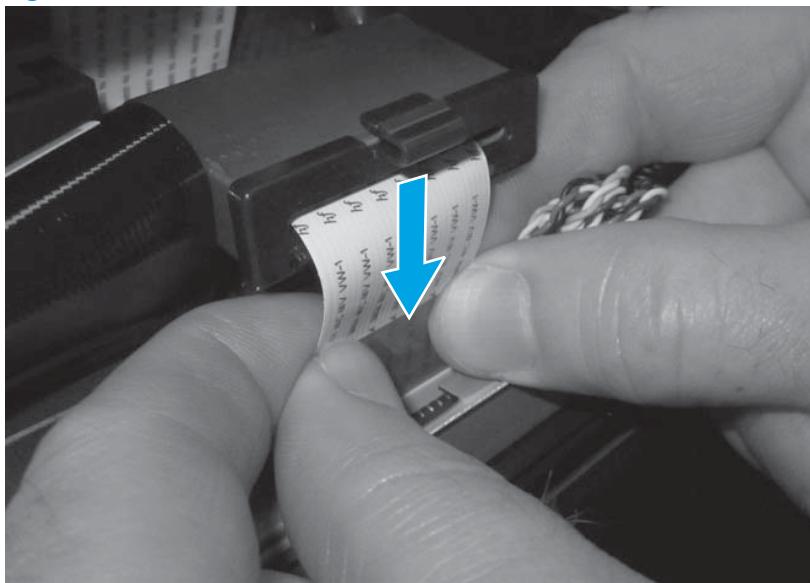

3. Tilt the ferrite and holder forward, and then place it on the opening in the SCB sheet-metal housing (callout 1). Make sure that the locking tab on the holder is compressed against the SCB sheet-metal housing (callout 2).


Rotate the ferrite and holder backward until it is positioned flat against the SCB sheet-metal housing (callout 3).

Figure 1-174 Install the ferrite and holder (3 of 5)

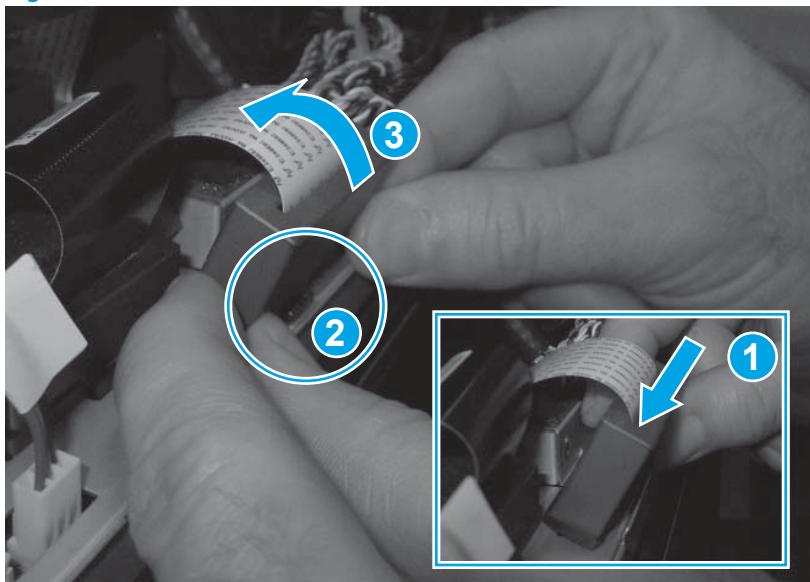

4. Carefully slide the ferrite backward to release the locking tab (callout 1) on the ferrite holder, and to engage the tabs on the back of the ferrite holder with the SCB sheet-metal housing.

Figure 1-175 Remove the document feeder (4 of 5)

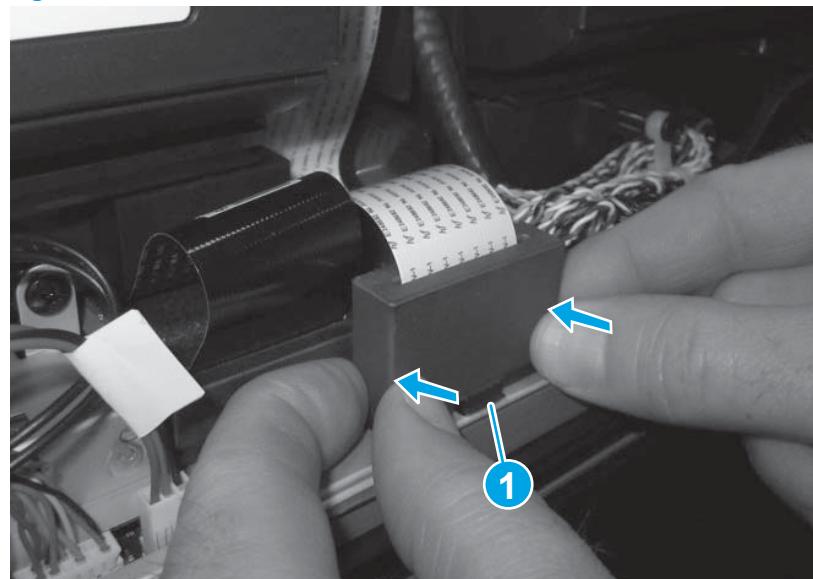

5. Verify that the ferrite and holder are securely fastened to the SCB sheet-metal housing, and that the holder is fully seated.

Figure 1-176 Install the ferrite and holder (5 of 5)



Complete the image scanner replacement installation

If a replacement scanner is installed, perform the following tasks after reassembling the product:

1. Use the **Service** menu to reset the **Flatbed Count** firmware counter.

- a. From the Home screen on the control panel, scroll to and touch the **Device Maintenance** button.
 - b. Open the **Service** menu.
 - c. On the sign-in screen, select the **Service Access Code** option from the drop-down list.
 - d. Enter the following service access code for this product: 04068014.
 - e. Reset the **Flatbed Count** to zero.
2. Use the **Calibration/Cleaning** menu to calibrate the scanner.
 - a. From the Home screen on the control panel, scroll to and touch the **Device Maintenance** button.
 - b. Open the following menus:
 - **Calibration/Cleaning**
 - **Calibrate Scanner**
 - c. Touch the **Next** button to start the calibration process. Follow the on-screen prompts.
 - d. Wait while the product calibrates the scanner.

Scissor hinge assemblies


1. Release the scanner latch.

Figure 1-177 Remove the scissor hinge assemblies (1 of 4)



2. Lower the IPTU top cover.


Figure 1-178 Remove the scissor hinge assemblies (2 of 4)

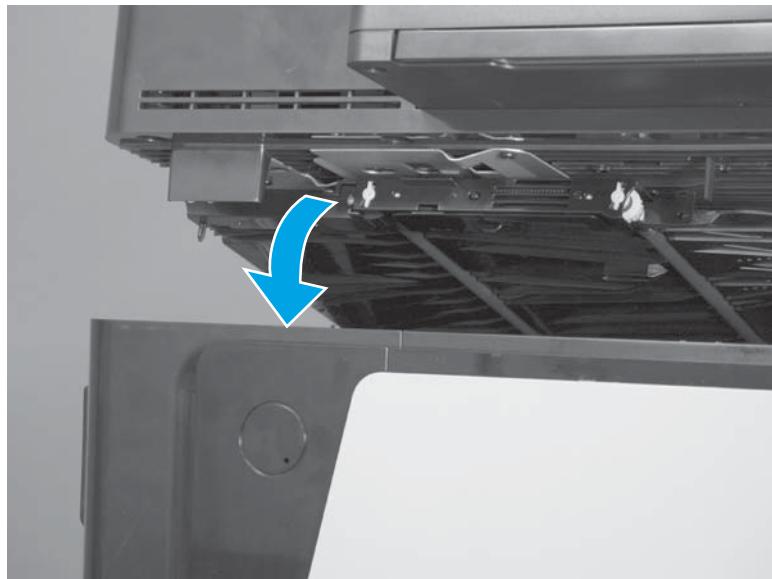

3. Pull the top and bottom of the front scissor hinge forward to release the hinge and remove it.


 **TIP:** Release the bottom of the hinge first, to make removal more easy.

Figure 1-179 Remove the scissor hinge assemblies (3 of 4)

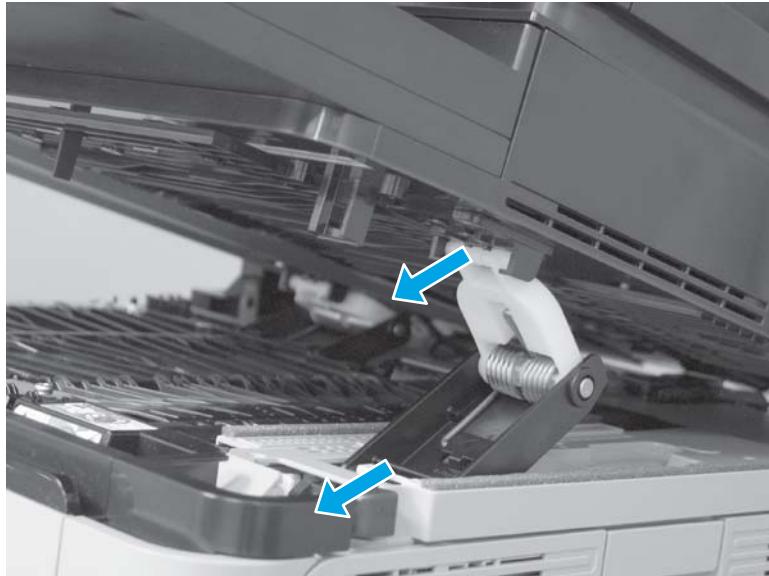


4. Pull the top and bottom of the rear scissor hinge forward to release the hinge and remove it.

Figure 1-180 Remove the scissor hinge assemblies (4 of 4)

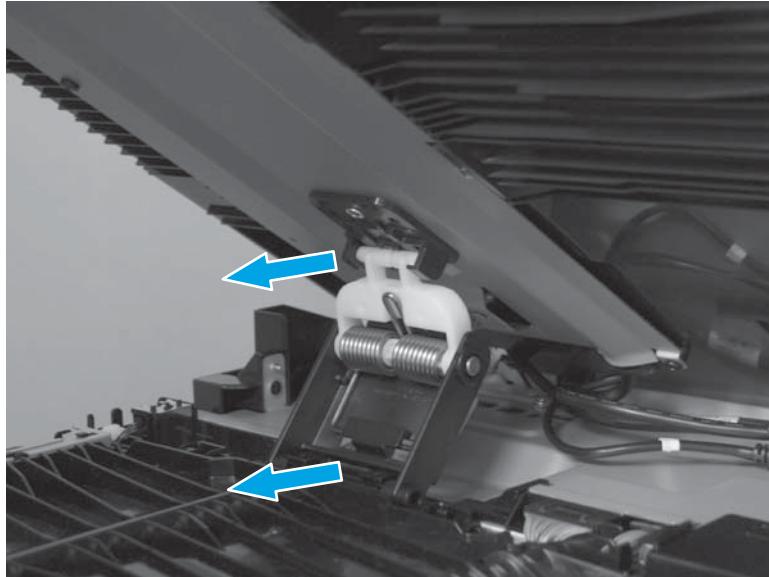


External panels, covers, and doors

Figure 1-181 Cover and door locations (M651)

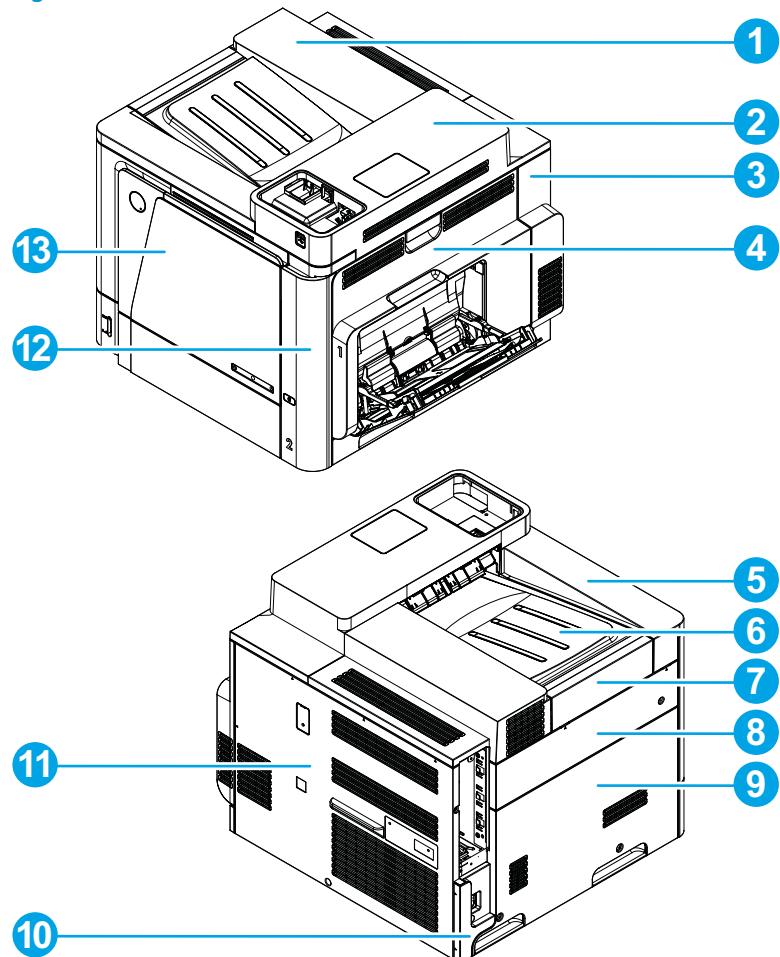

1	Face-down rear cover	8	Left upper cover
2	Upper cover	9	Left cover
3	Right rear cover	10	Left rear cover
4	Right door assembly	11	Rear cover assembly
5	Front face-down cover assembly	12	Right front cover
6	Face-down tray	13	Front door assembly
7	Left face-down cover		

Figure 1-182 Cover and door locations (M680)

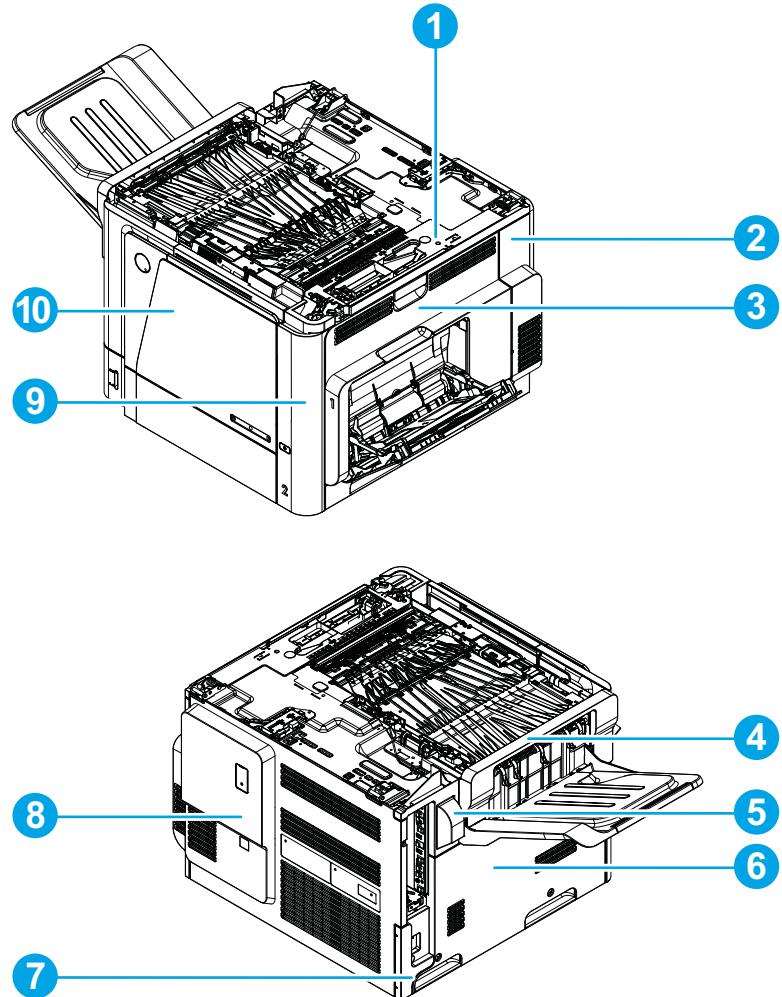

1	Intermediate cover (right-top cover)	6	Left cover
2	Right rear cover	7	Left rear cover
3	Right door assembly	8	Rear cover assembly
4	Tray cover (bezel)	9	Right front cover
5	Fan cover	10	Front door assembly

Upper left cover (M651)


Before proceeding, remove the following assemblies

- Formatter PCA. See [Formatter PCA on page 9](#).

Remove the upper left cover

- ▲ Open the front door. On the left side of the product remove one screw (callout 1), release two tabs (callout 2), release one tab (callout 3), and then remove the upper left cover (callout 4).

Figure 1-183 Remove the upper left cover

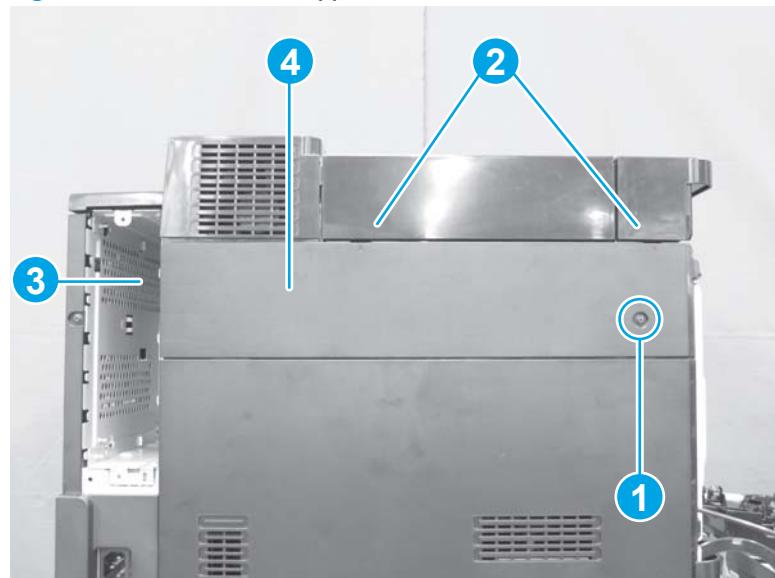

Fan cover (M680)


Before proceeding, remove the following assemblies

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Formatter PCA. See [Formatter PCA on page 9](#).
- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).

Remove the fan cover

- ▲ Remove one screw (callout 1), and then remove the fan cover (callout 2).

Figure 1-184 Remove the fan cover

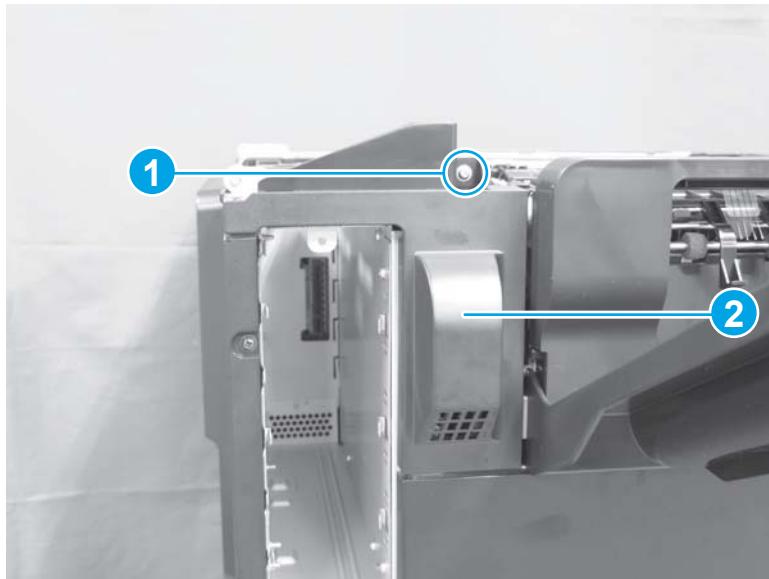

Left rear cover


Before proceeding, remove the following assemblies

- Formatter PCA. See [Formatter PCA on page 9](#).

Remove the left rear cover

- ▲ Remove one screw (callout 1), release two tabs (callout 2), and then remove the left-rear cover (callout 3).

Figure 1-185 Remove the left rear cover

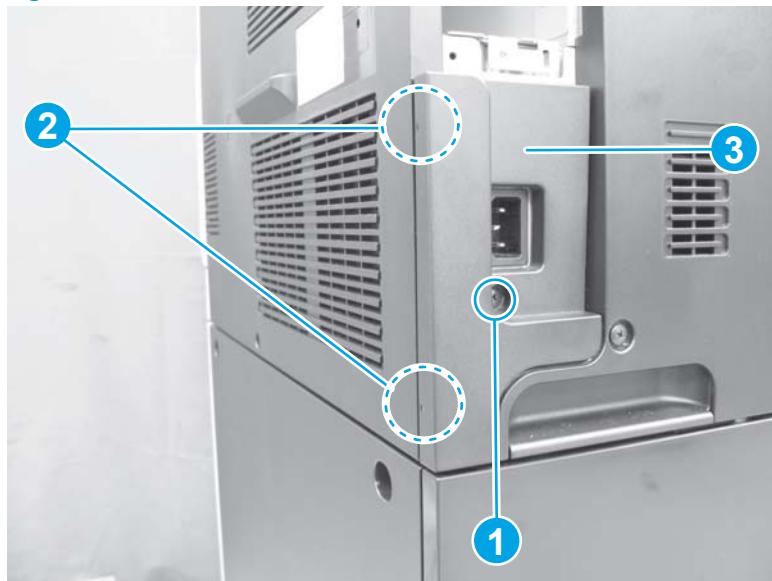

Left cover

Before proceeding, remove the following assemblies

M651 models

- Formatter PCA. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).


M680 models

- Formatter PCA. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).

Remove the left cover

- ▲ Remove four screws (callout 1), and then remove the left cover (callout 2).

Figure 1-186 Remove the left cover

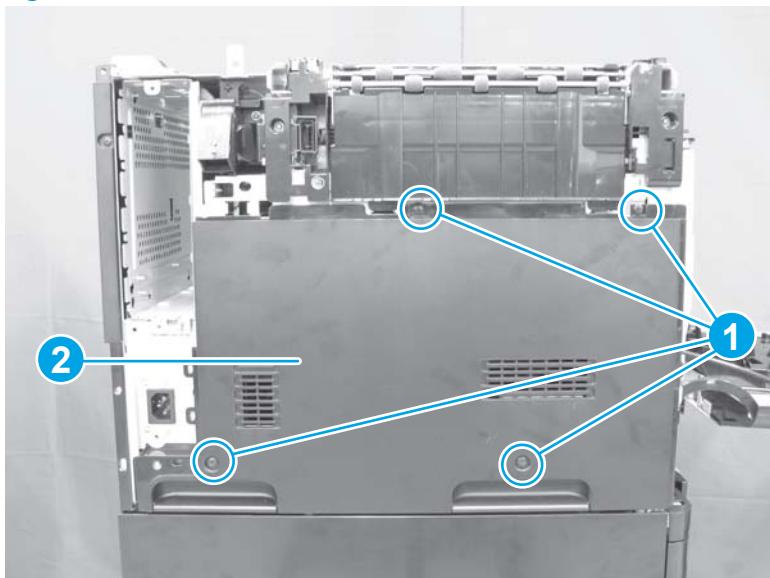

Rear cover (M651)


Before proceeding, remove the following assemblies

- Formatter PCA. See [Formatter PCA on page 9](#).
- Left rear cover. See [Left rear cover on page 119](#).

Remove the rear cover (M651)

- ▲ Remove two screws (callout 1), release four tabs (callout 2), and then remove the rear cover (callout 3).

Figure 1-187 Remove the rear cover (M651)

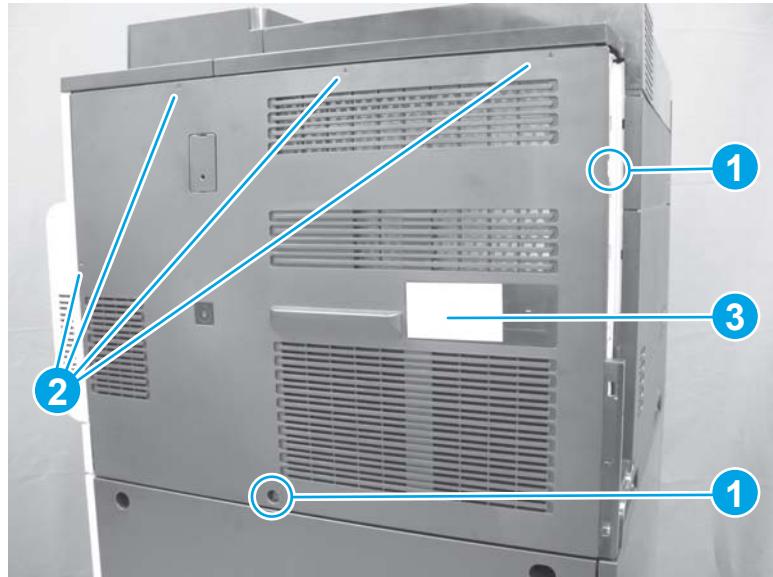

Rear cover (M680)


Before proceeding, remove the following assemblies

- Formatter PCA. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).

Remove the rear cover (M680)


1. Remove one screw (callout 1).

Figure 1-188 Remove the rear cover (M680; 1 of 2)

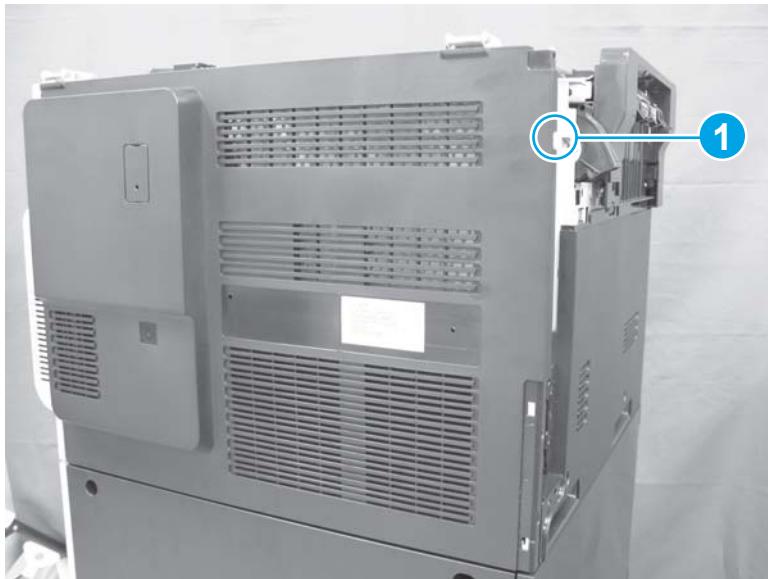

2. Release one tab (callout 1), and then slide the rear cover (callout 2) in the direction of the arrow to remove it.

Figure 1-189 Remove the rear cover (M680; 2 of 2)

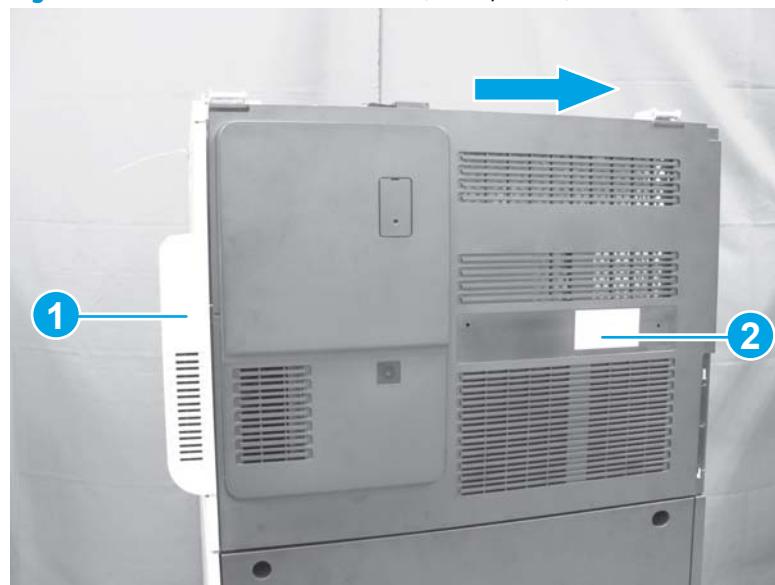

Right-front cover

Before proceeding, remove the following assemblies

M651 models

- None


M680 models

- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).

Remove the right-front cover


1. Open or remove Tray 2. Open the front door assembly, and remove one screw (callout 1).

Figure 1-190 Remove the right-front cover (1 of 3)

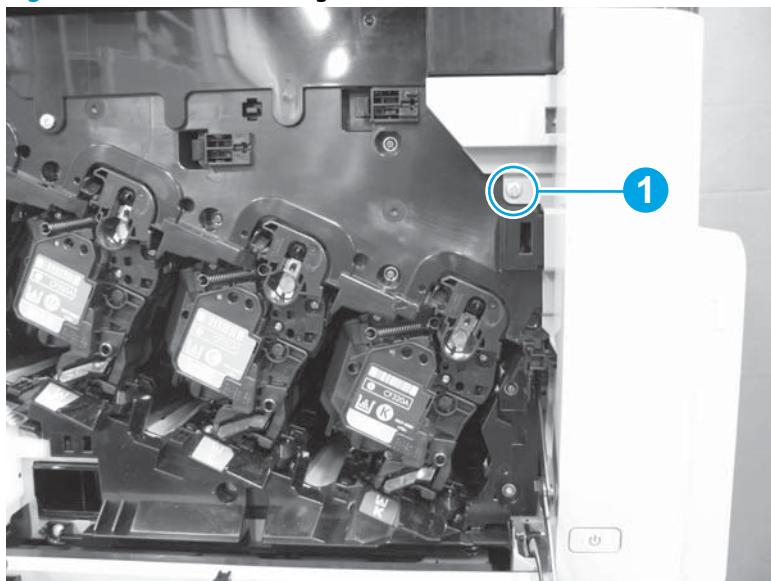


2. Open the right door assembly, and release two tabs (callout 1).

Figure 1-191 Remove the right-front cover (2 of 3)

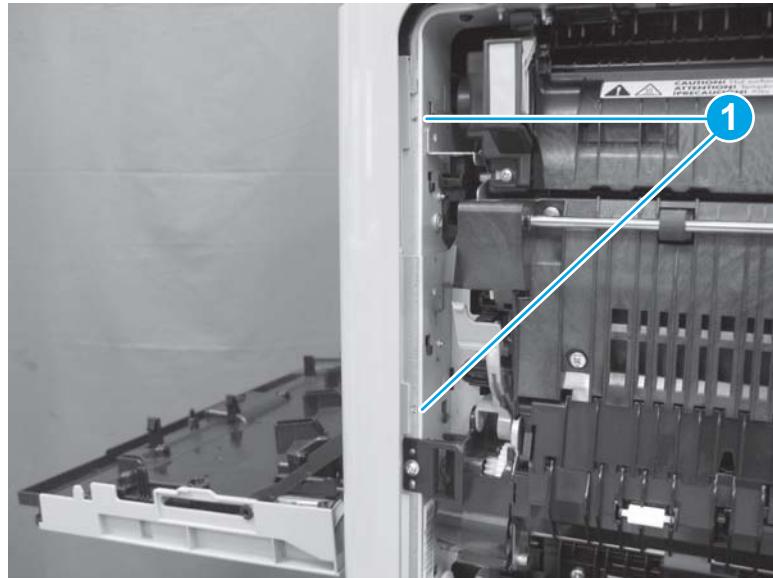

3. Remove the right-front cover assembly (callout 1).

Figure 1-192 Remove the right-front cover (3 of 3)

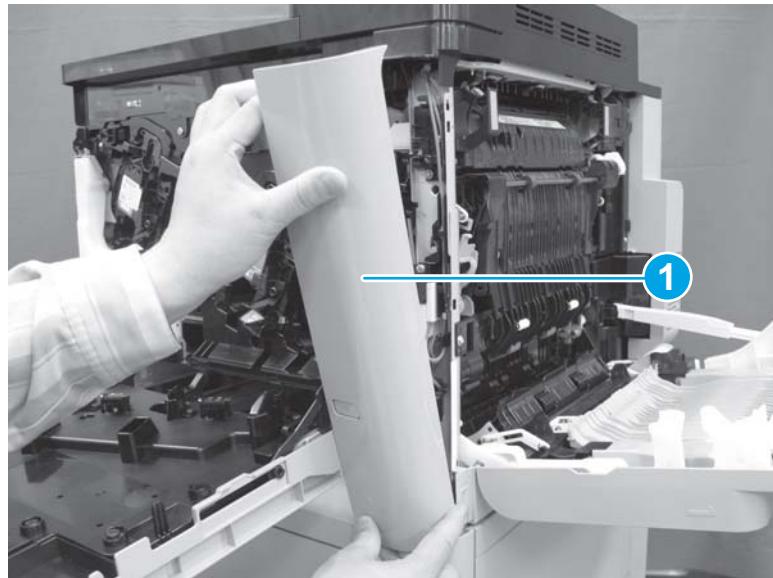

Front door assembly

Before proceeding, remove the following assemblies

M651 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter PCA. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).
- Right-front cover. See [Right-front cover on page 124](#).


M680 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter PCA. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).
- Right-front cover. See [Right-front cover on page 124](#).

Remove the front door assembly


1. On the left side of the product, remove four screws (callout 1), and then remove the metal plate (callout 2).

Figure 1-193 Remove the front door assembly (1 of 7)

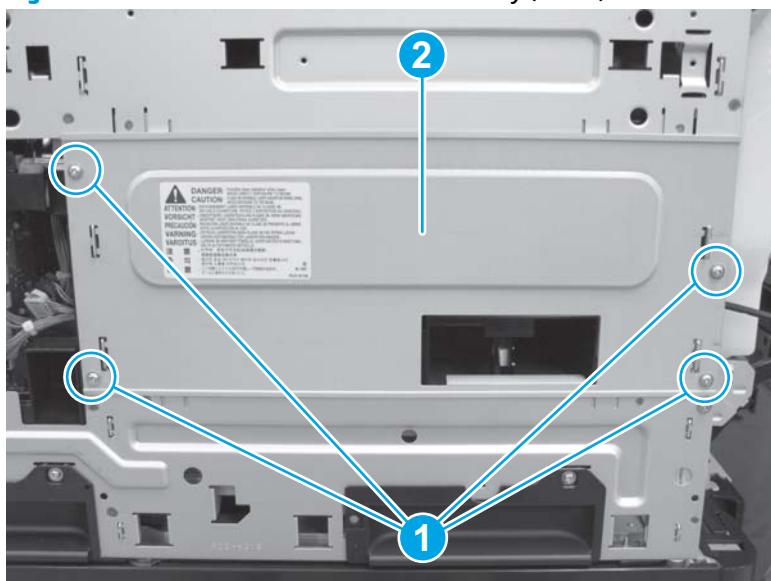


2. Unhook one spring (callout 1), and remove one screw (callout 2).

Figure 1-194 Remove the front door assembly (2 of 7)

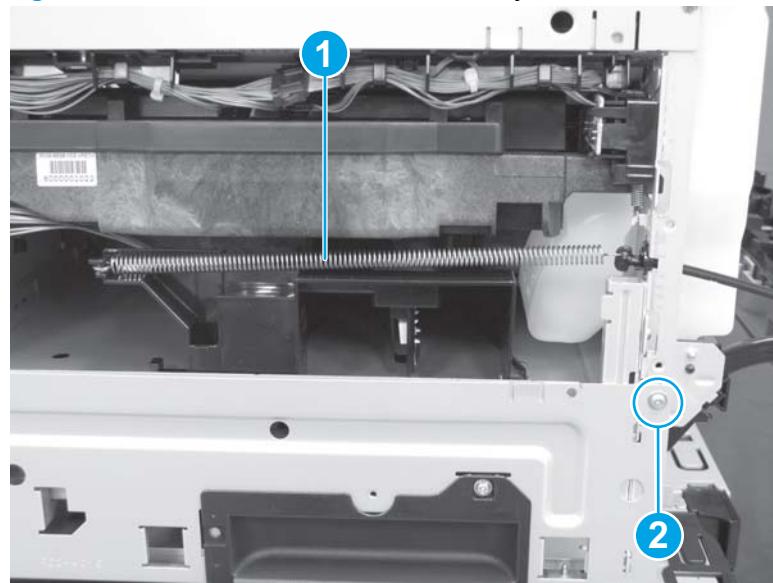


3. Inside the front door, remove one link (callout 1).

Figure 1-195 Remove the front door assembly (3 of 7)

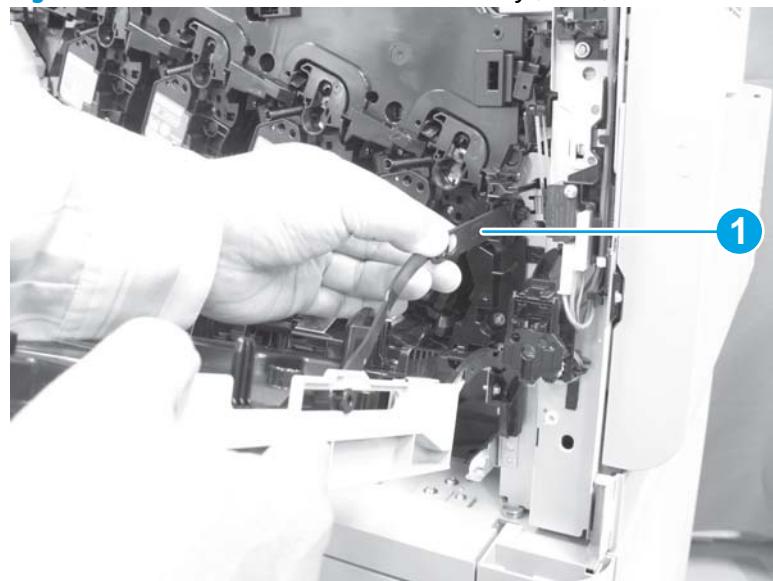


4. Remove two screws (callout 1).

Figure 1-196 Remove the front door assembly (4 of 7)

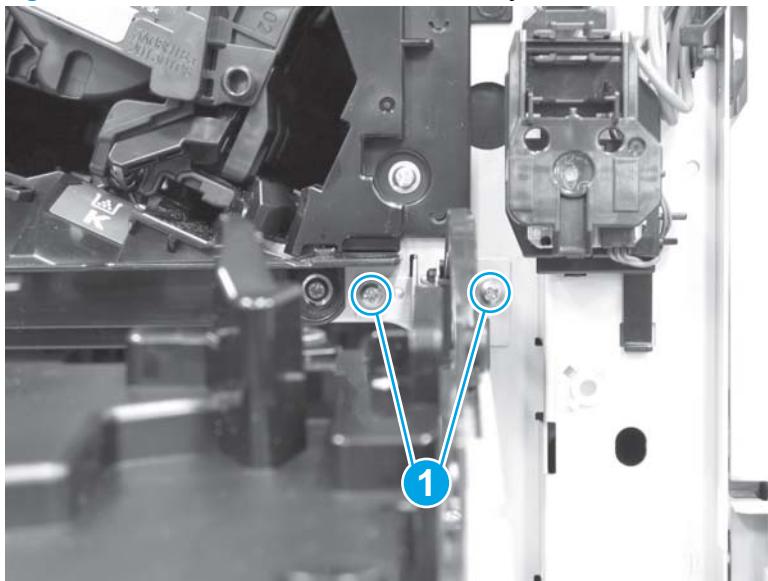


5. Below the toner-collection unit, remove one screw (callout 1).

Figure 1-197 Remove the front door assembly (5 of 7)

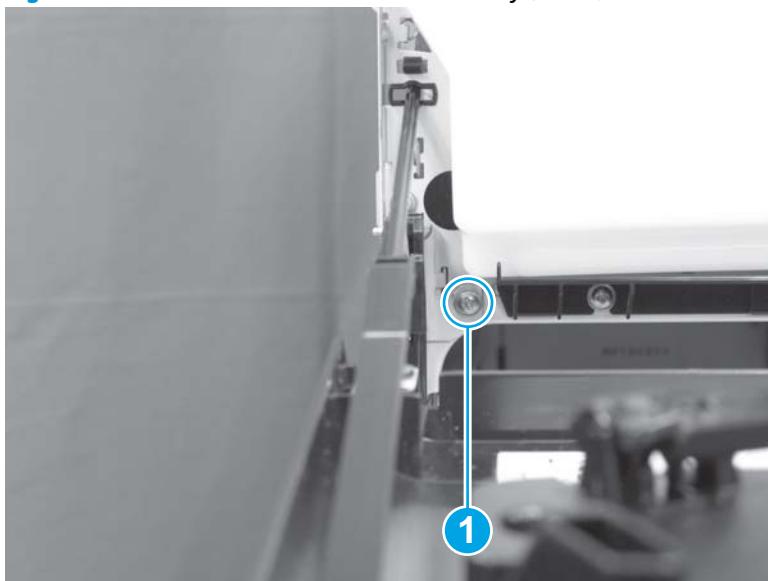


6. Rotate the link-arm (callout 1) 90 degrees and release it.

Figure 1-198 Remove the front door assembly (6 of 7)

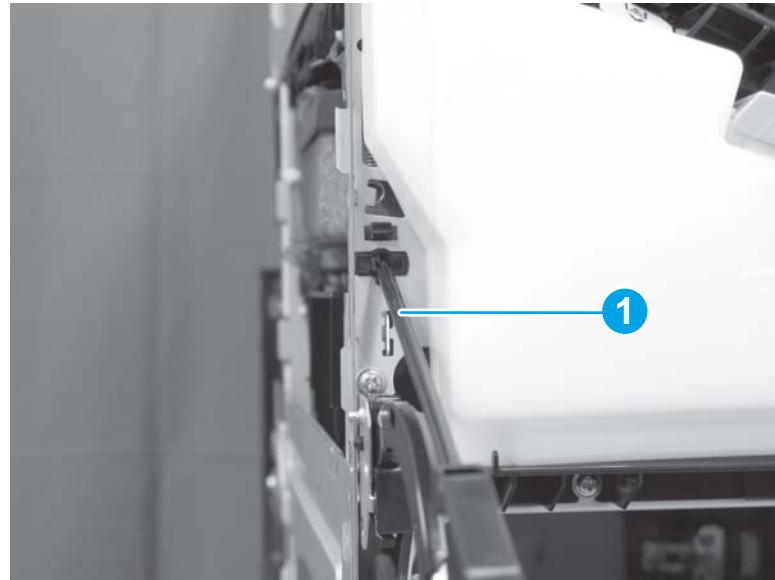

7. Remove the front door assembly (callout 1).


Figure 1-199 Remove the front door assembly (7 of 7)

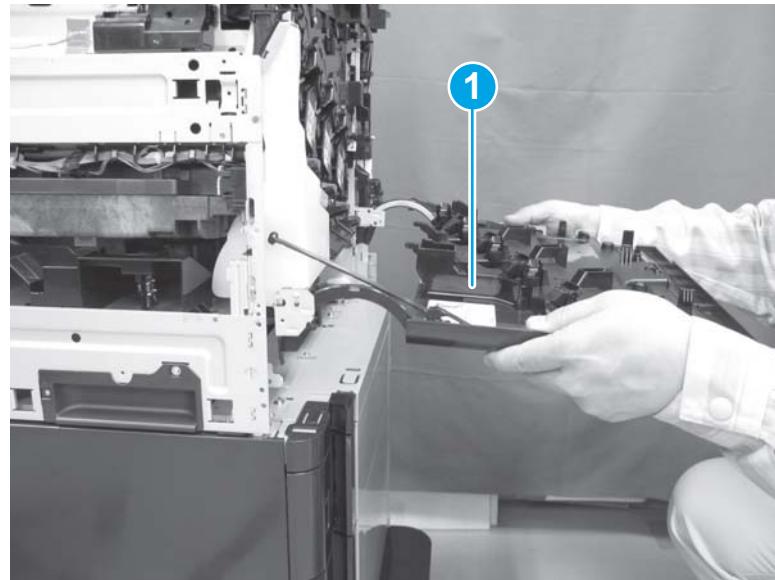

Right door assembly


1. Open the right-door assembly. Lift up the two link-arms and release them (callout 1). Close the feed guide (callout 2).

Figure 1-200 Remove the right door assembly (1 of 8)

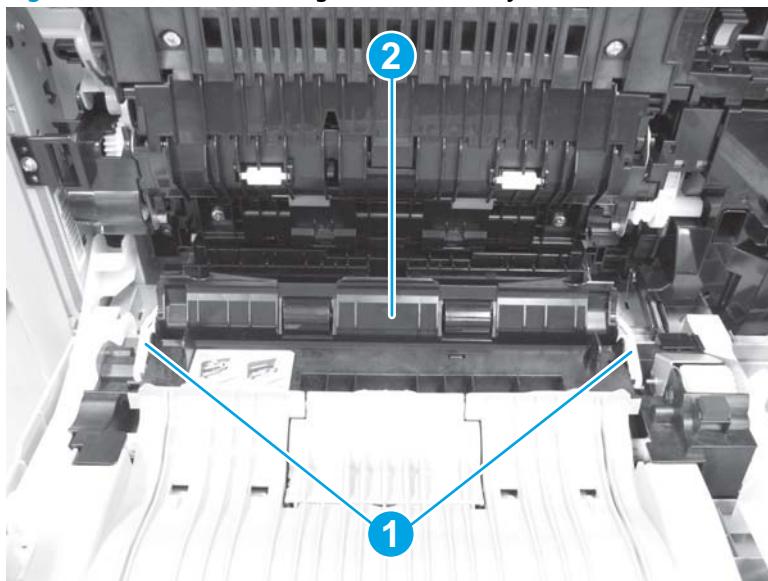


2. Release one tab (callout 1), and remove the cover (callout 2).

Figure 1-201 Remove the right door assembly (2 of 8)

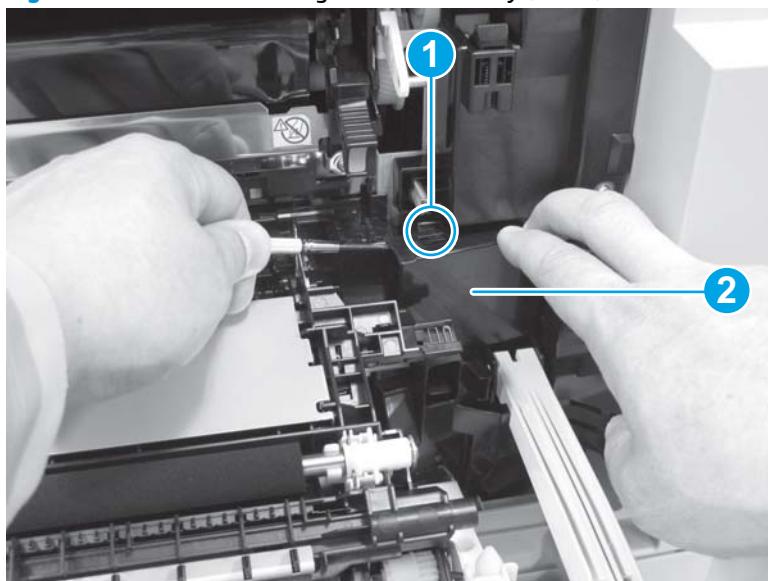


3. Disconnect two connectors (callout 1).

Figure 1-202 Remove the right door assembly (3 of 8)

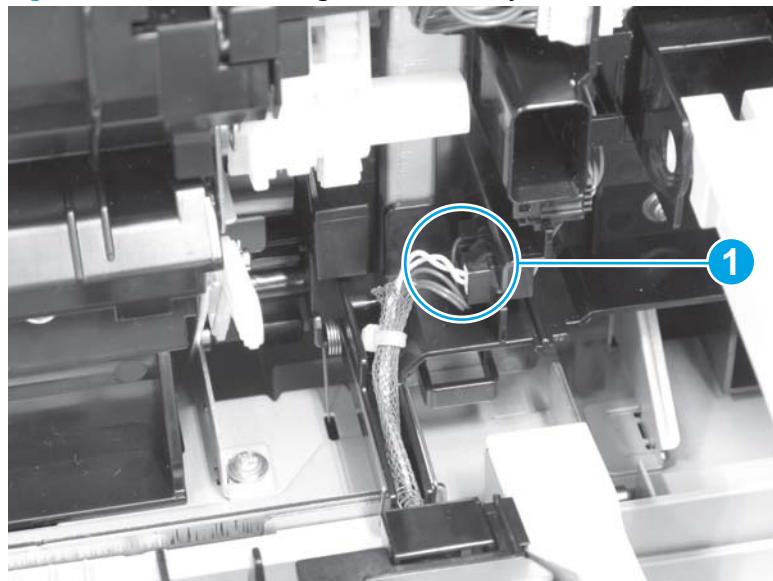


4. Remove two screws (callout 1), and then remove the right door hook (callout 2).

Figure 1-203 Remove the right door assembly (4 of 8)

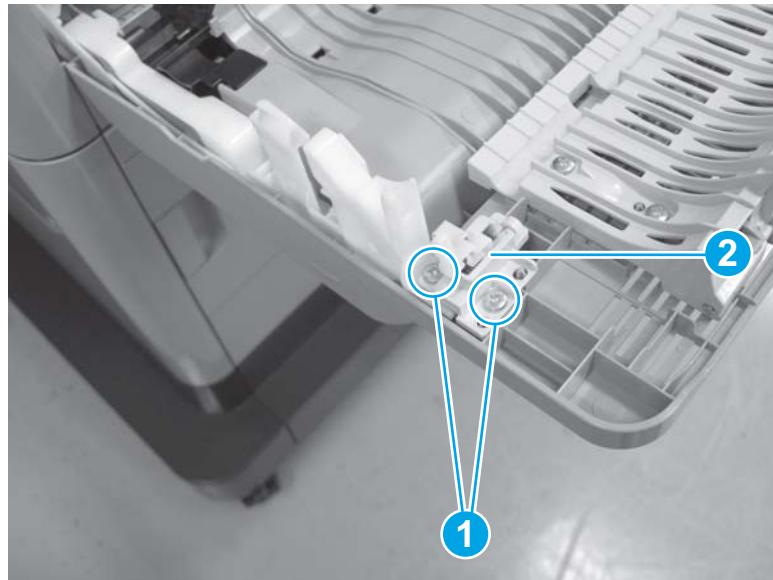


5. Remove one screw (callout 1), release the right door front arm (callout 2) from the right door link (callout 3). Lift up the right hinge cover.

Figure 1-204 Remove the right door assembly (5 of 8)

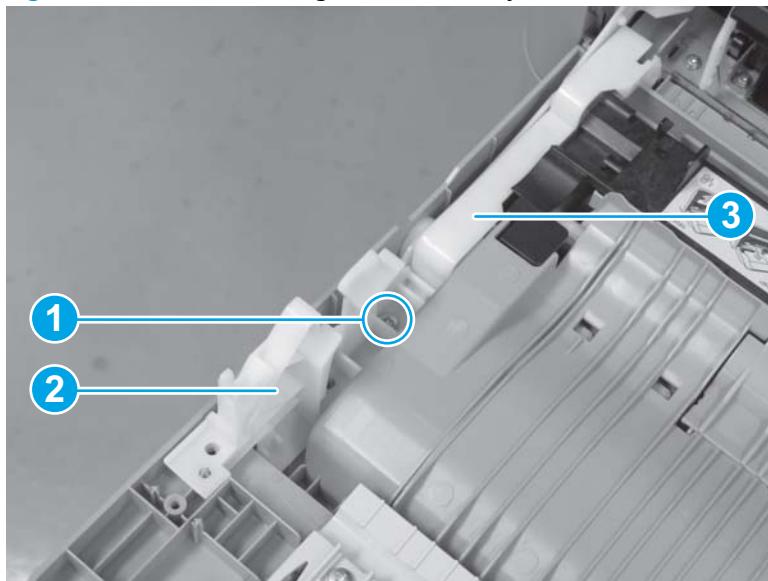

6. Lift up the hinge cover (callout 1) and remove it.


Figure 1-205 Remove the right door assembly (6 of 8)

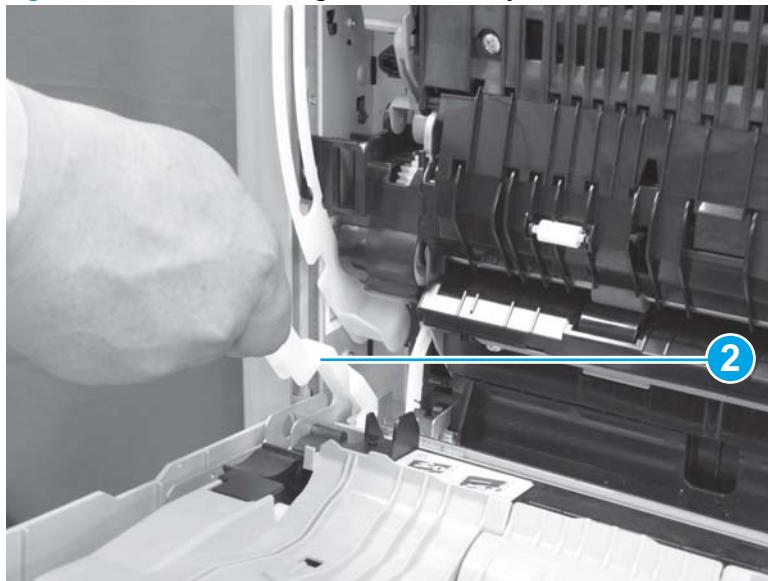

7. Release the shaft (callout 1), and then release the damper assembly (callout 2).


⚠ CAUTION: A strong spring is inside the damper assembly. Hold on to the assembly firmly as it releases.

Figure 1-206 Remove the right door assembly (7 of 8)

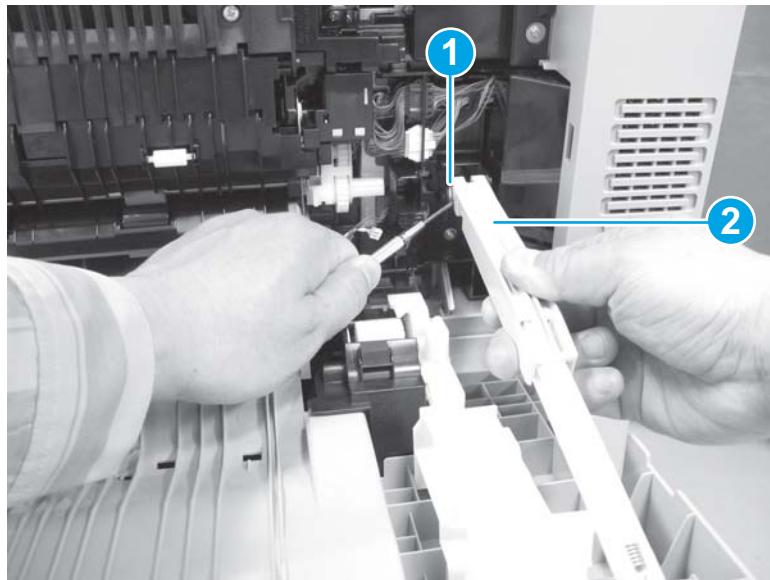

8. Slide the right door assembly (callout 1) toward the front of the product to remove it


Figure 1-207 Remove the right door assembly (8 of 8)

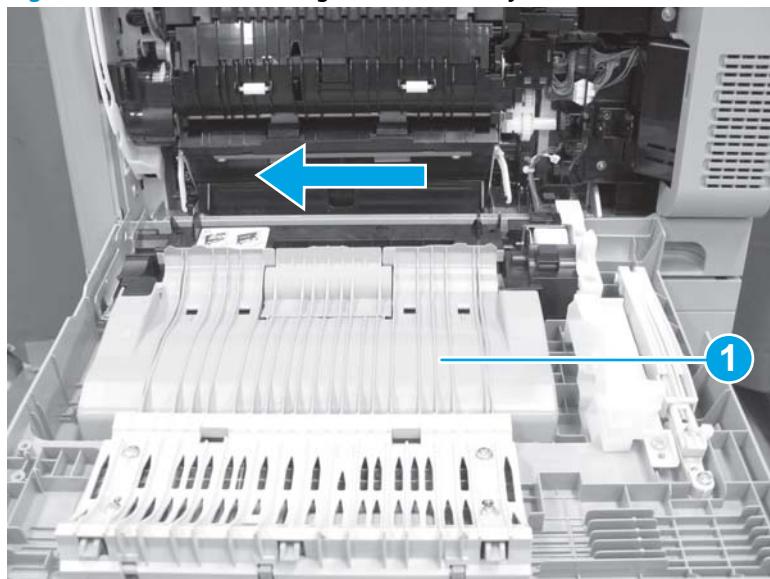

Face-down tray (M651)


- ▲ On top of the product, insert a flat-blade screwdriver to lift the face-down tray (callout 1) and release two tabs. Remove the face-down tray.

Figure 1-208 Remove the face-down tray (1 of 2)

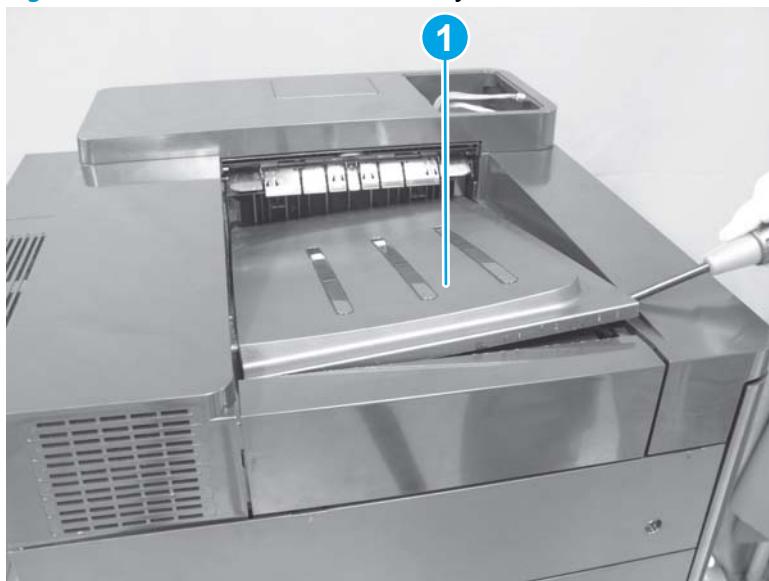

This photo shows the location of the tabs (callout 1).


Figure 1-209 Remove the face-down tray (2 of 2)

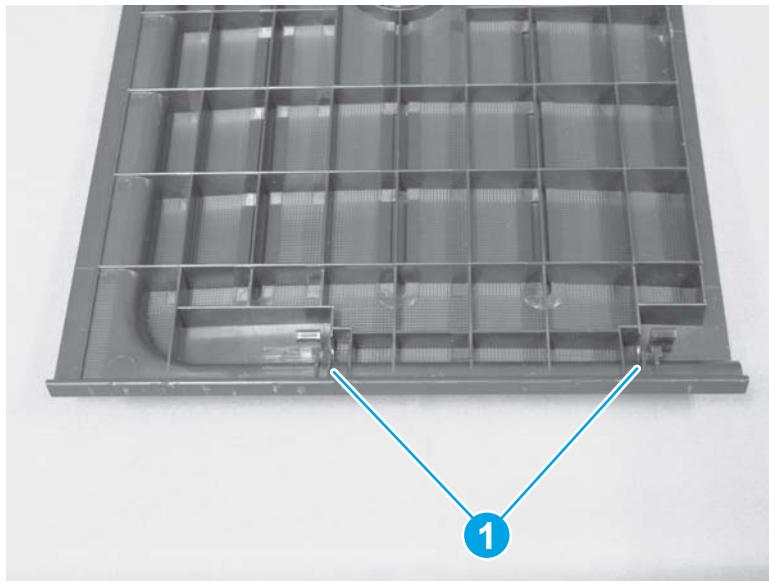

Reinstall the face-down tray

- ▲ When reinstalling the face-down tray, insert the post on the bottom of the tray into the spring (callout 1).

Figure 1-210 Reinstall the face-down tray

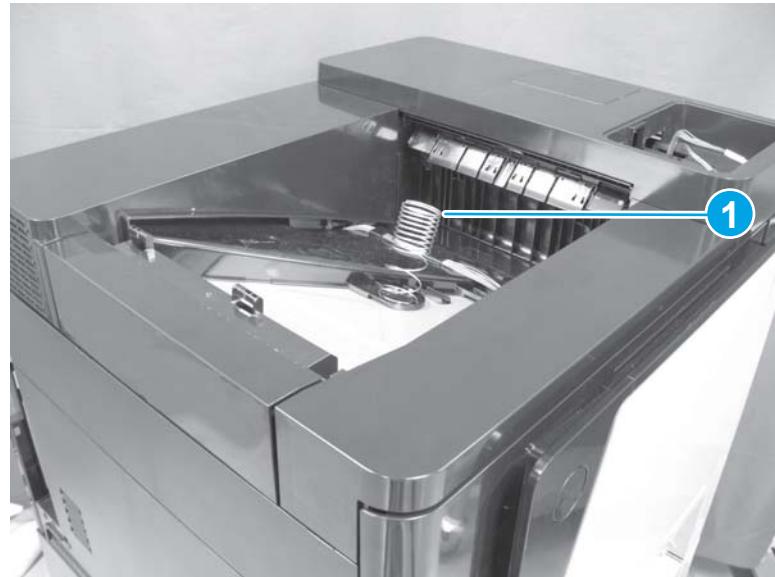

Face-down rear cover (M651)


Before proceeding, remove the following assemblies

- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).

Remove the face-down rear cover (M651)


1. Remove one screw (callout 1).

Figure 1-211 Remove the face-down rear cover (M651; 1 of 5)

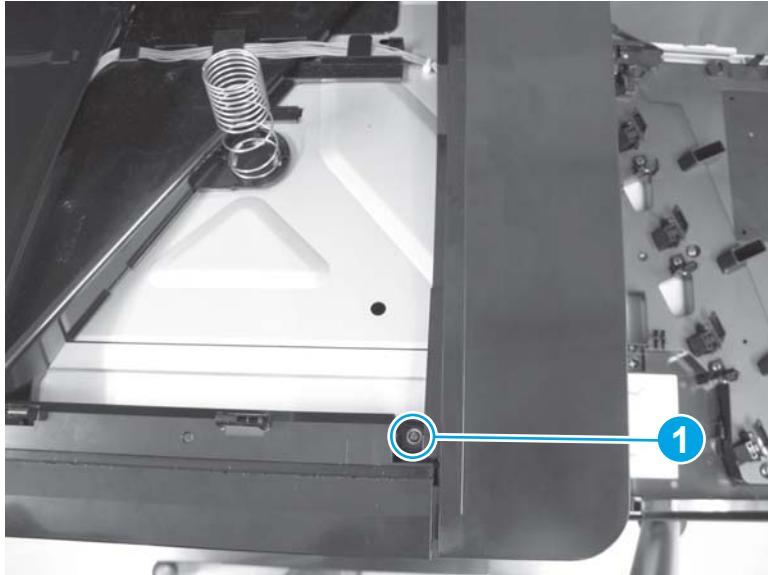


2. Remove one screw (callout 1), and then release one locator pin (callout 2).

Figure 1-212 Remove the face-down rear cover (M651; 2 of 5)

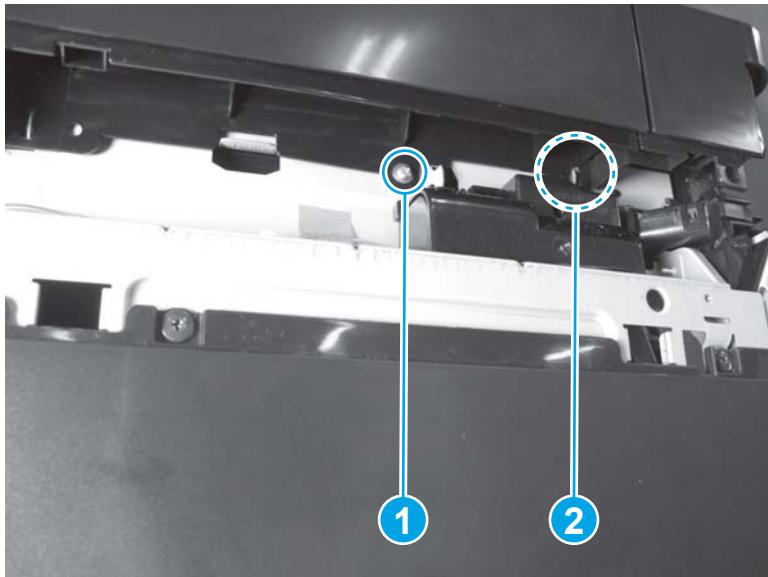

3. Release two tabs (callout 1).

Figure 1-213 Remove the face-down rear cover (M651; 3 of 5)

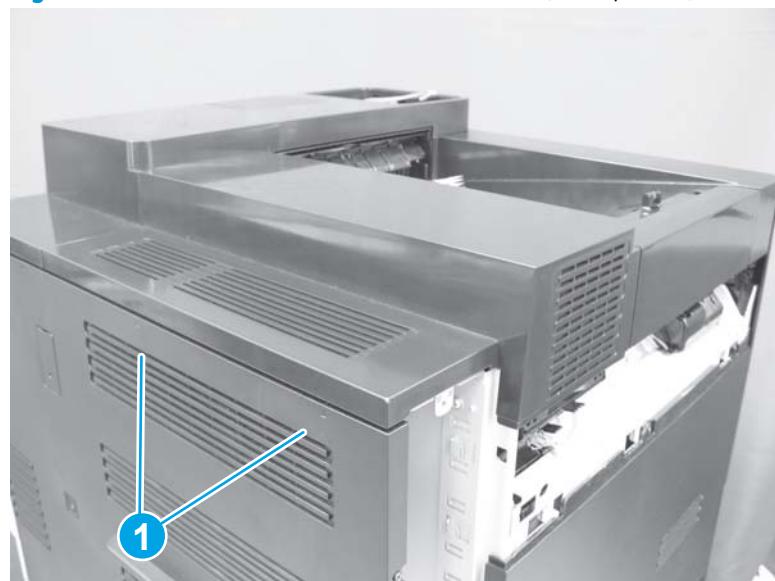

4. Lift up the left edge (callout 1) and release two locator pins (callout 2). Slide the face-down rear cover (callout 3) in the direction of the arrow to remove it.

Figure 1-214 Remove the face-down rear cover (M651; 4 of 5)


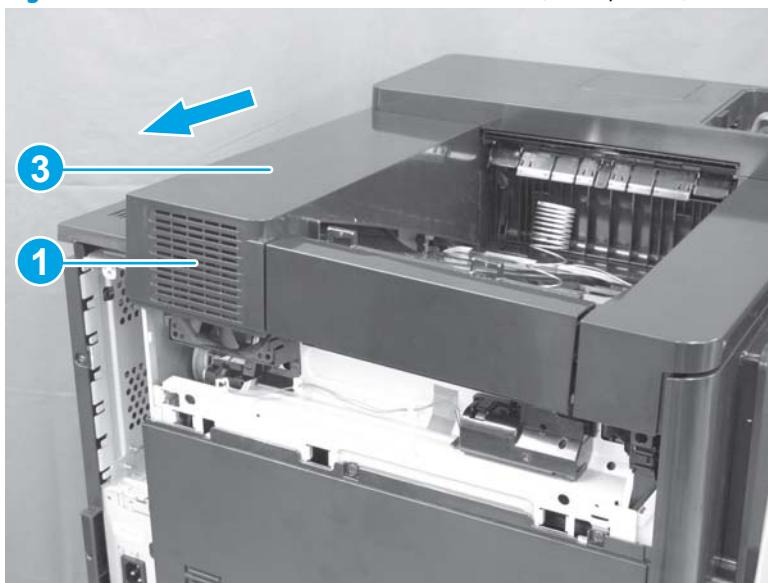


Figure 1-215 Remove the face-down rear cover (M651; 5 of 5)

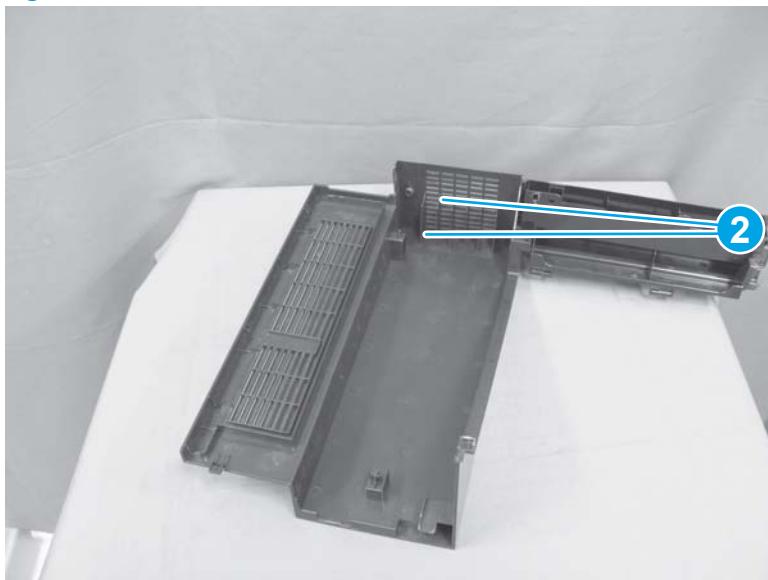

Upper cover (M651)


Before proceeding, remove the following assemblies

- Control panel assembly. See [Control panel assembly \(M651\) on page 28](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).

Remove the upper cover (M651)

1. Remove one screw (callout 1).

Figure 1-216 Remove the upper cover (M651; 1 of 6)

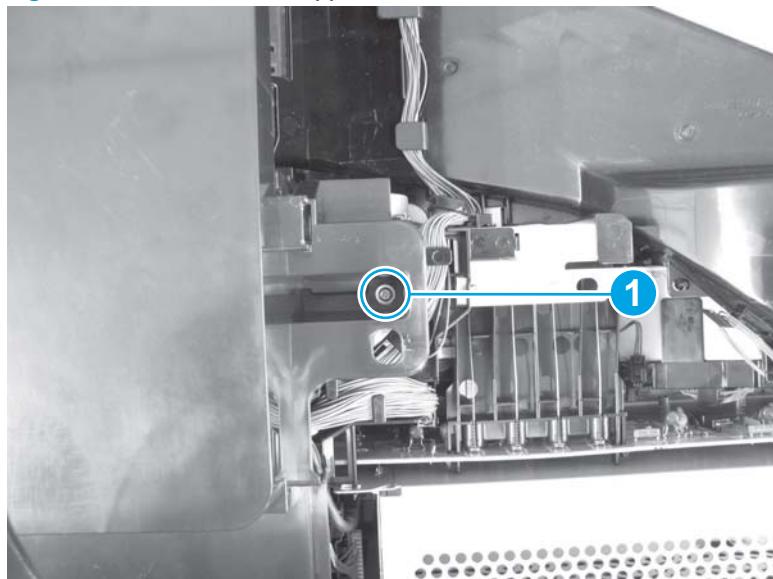


2. Remove one screw (callout 1).

Figure 1-217 Remove the upper cover (M651; 2 of 6)




3. Open the right door assembly, and then release one tab (callout 1).

Figure 1-218 Remove the upper cover (M651; 3 of 6)

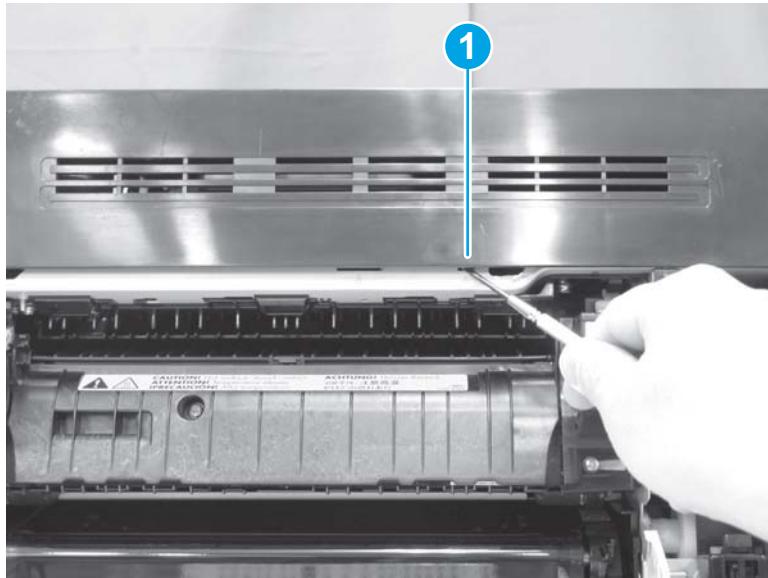


4. Release two tabs (callout 1), and then remove the upper cover assembly (callout 2).

Figure 1-219 Remove the upper cover (M651; 4 of 6)

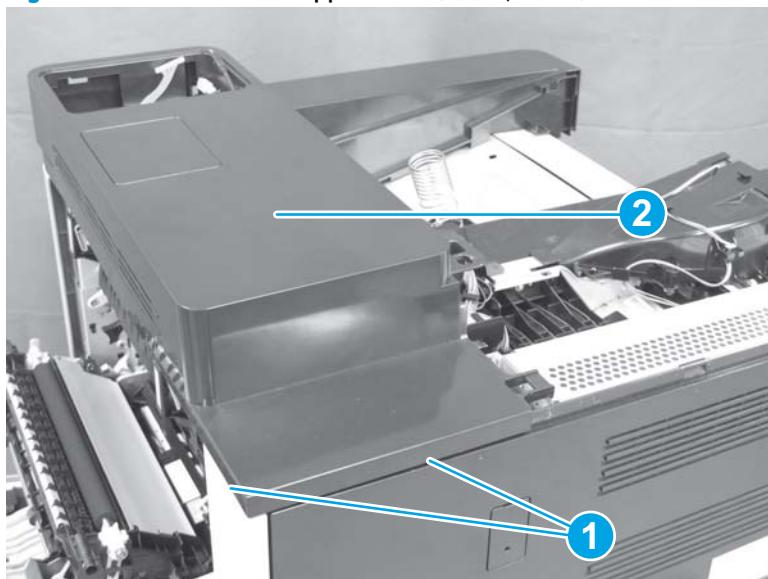


5. If replacing the upper cover, remove the hardware integration pocket cover (callout 1) from the upper cover (callout 2), and then install it on the replacement cover.

Figure 1-220 Remove the upper cover (M651; 5 of 6)

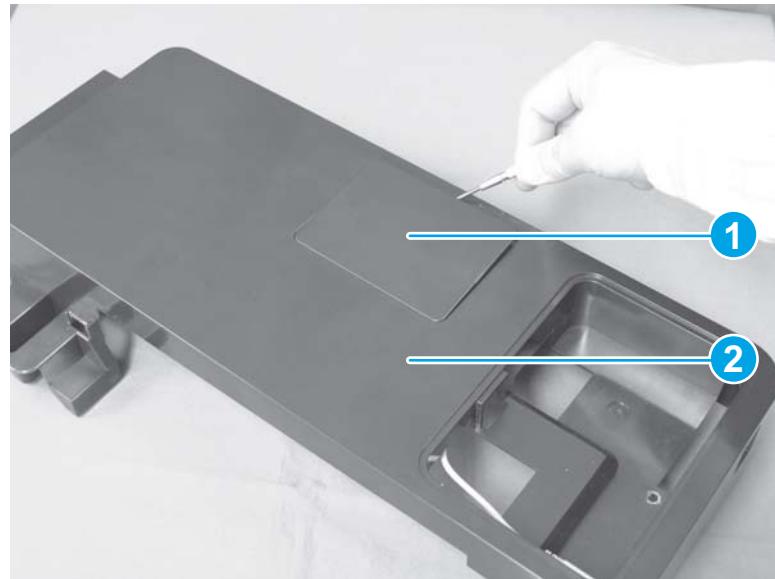

6. If replacing the upper cover, push the lever (callout 1) and pull out the cable tie. Remove the cable (callout 2) from the upper cover (callout 3), and then install it on the replacement cover.

Figure 1-221 Remove the upper cover (M651; 6 of 6)

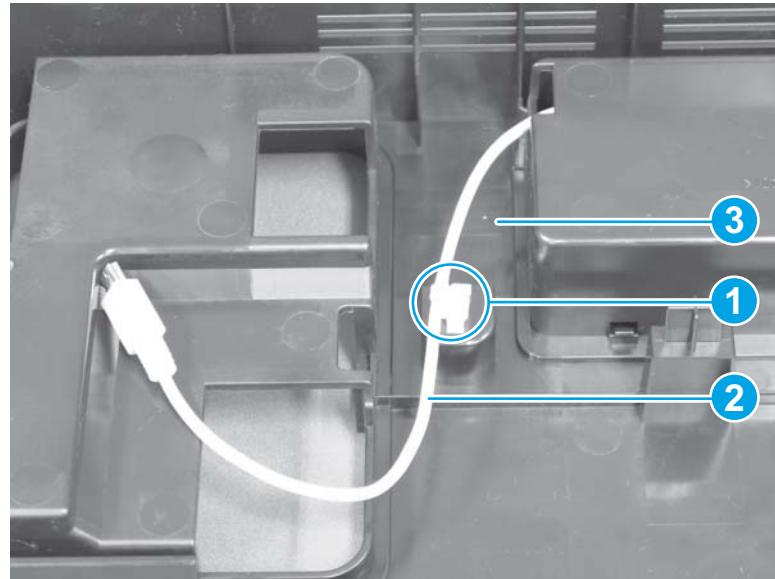


Reinstall the upper cover (M651)

When the cover is reinstalled, make sure that the white USB cable (callout 1), black USB cable, wire harness, and ground wire (callout 2), are routed through the correct openings in the cover.



NOTE: If the cables, wire harness, and ground wire are not correctly routed through the cover there might not be enough slack in them to reach the control panel when it is reinstalled.

Figure 1-222 Reinstall the upper cover (M651)

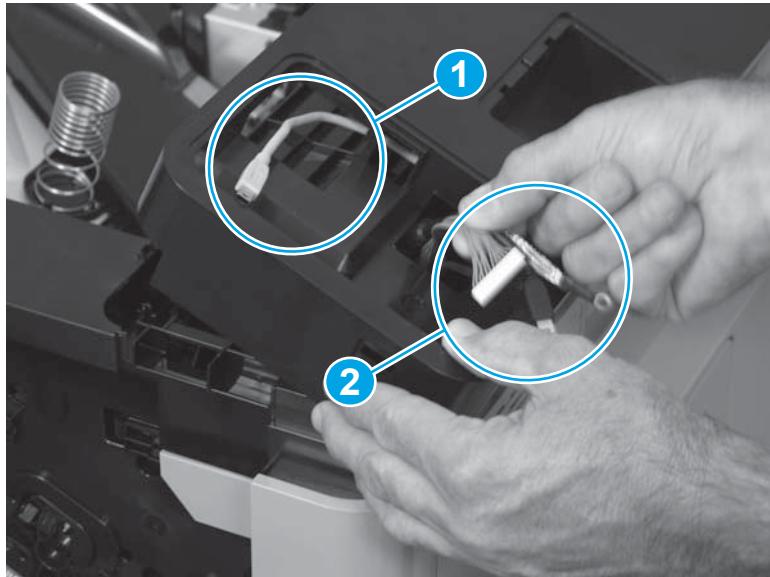

Front face-down cover and right-front upper cover (M651)


Before proceeding, remove the following assemblies

- Control panel assembly. See [Control panel assembly \(M651\) on page 28](#).
- Right-front cover. See [Right-front cover on page 124](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Upper cover. See [Upper cover \(M651\) on page 139](#).

Remove the front face-down cover and right-front upper cover


1. Remove one screw (callout 1), and remove the right-front upper cover (callout 2).

Figure 1-223 Remove the front face-down cover and right-front upper cover (1 of 3)

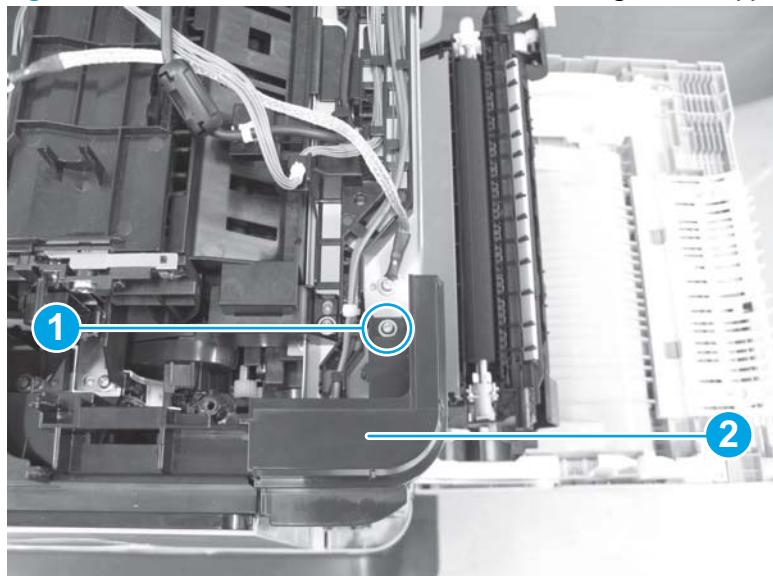


2. Remove one screw (callout 1).

Figure 1-224 Remove the front face-down cover and right-front upper cover (2 of 3)

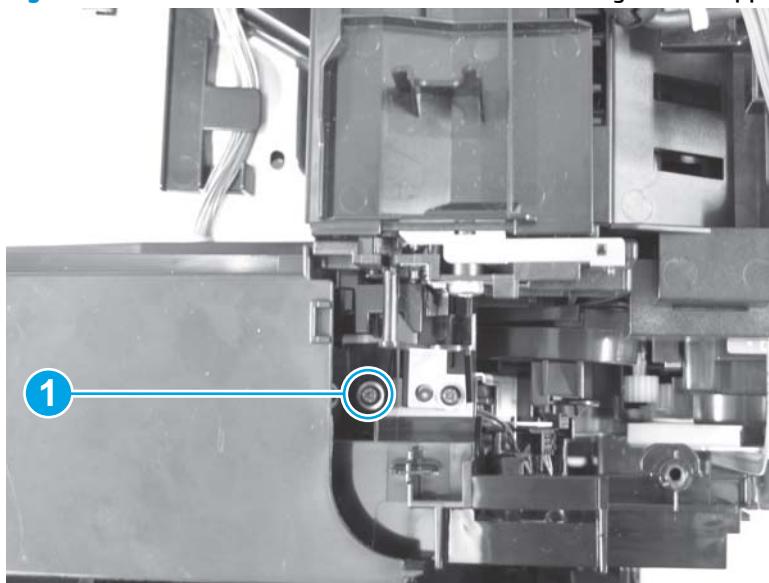

3. Remove one screw (callout 1), release two locator pins (callout 2), and then remove the front face-down cover assembly (callout 3).

Figure 1-225 Remove the front face-down cover and right-front upper cover (3 of 3)

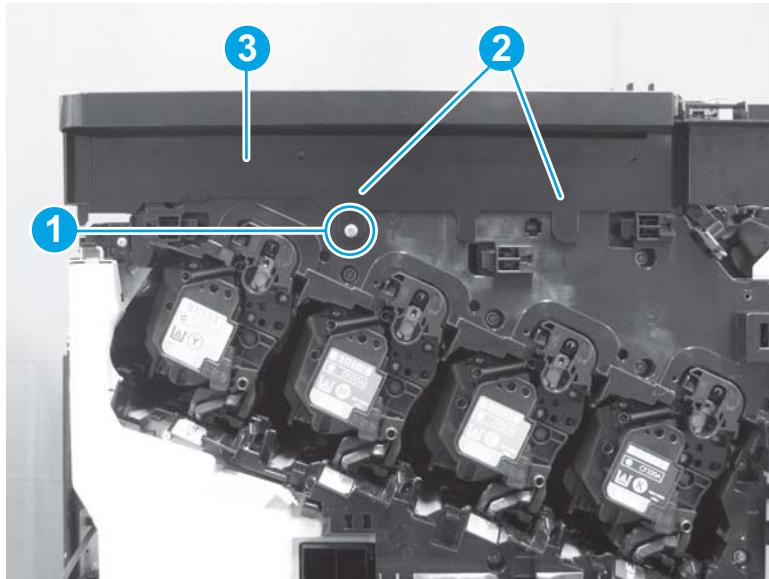

Intermediate cover assembly (M680)


Before proceeding, remove the following assemblies

- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Scissor hinge assembly (right only). See [Scissor hinge assemblies on page 113](#).
- Right front cover. See [Right-front cover on page 124](#).

Remove the intermediate cover assembly (M680)

- ▲ Release six tabs (callout 1), and then remove the intermediate cover assembly (callout 2).

Figure 1-226 Remove the intermediate cover assembly (M680)

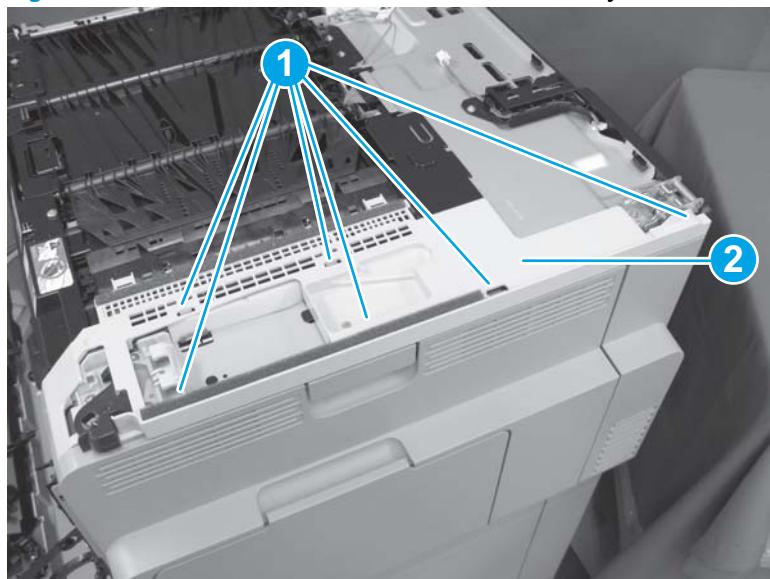

Right-rear cover

Before proceeding, remove the following assemblies

M651 models

- Control panel assembly. See [Control panel assembly \(M651\) on page 28](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Upper cover. See [Upper cover \(M651\) on page 139](#).

M680 models


- Document feeder assembly. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Right front cover. See [Right-front cover on page 124](#).
- Intermediate cover assembly. See [Intermediate cover assembly \(M680\) on page 145](#).

Remove the right-rear cover

▲ Release one tab (callout 1), and then slide the right-rear cover (callout 2) upward to remove it.

 **NOTE:** For the M680 product, carefully pry up on the corner of the grey-plastic bracket (callout 3) so the cover can slide upwards.

Figure 1-227 Remove the right-rear cover

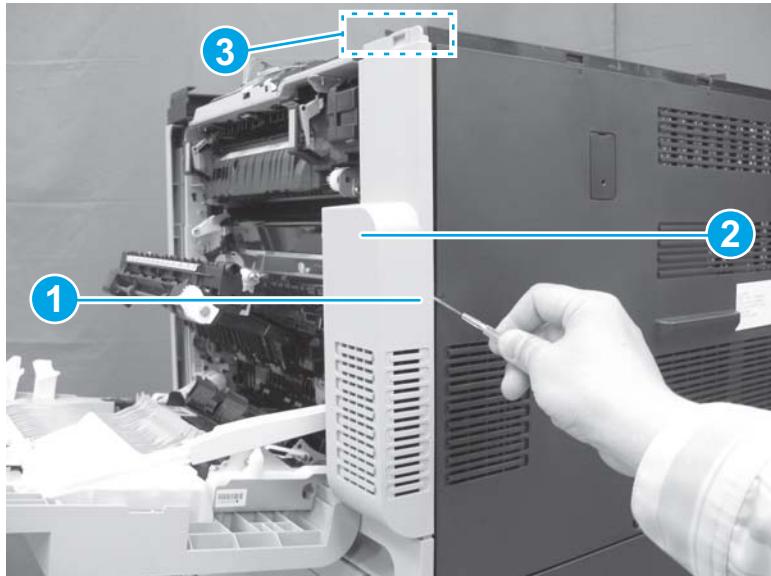

Internal assemblies

 **TIP:** For clarity, some photos in this chapter show assemblies removed that would not be removed to service the product. If necessary, remove the assemblies listed at the beginning of a procedure before proceeding to service the product.

IPTU (M680)

Before proceeding, remove the following assemblies

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).




NOTE: This assembly is also called the intermediate paper feed assembly.

Remove the IPTU


1. Open the front door and then remove three screws.

Figure 1-228 Remove the IPTU (1 of 5)

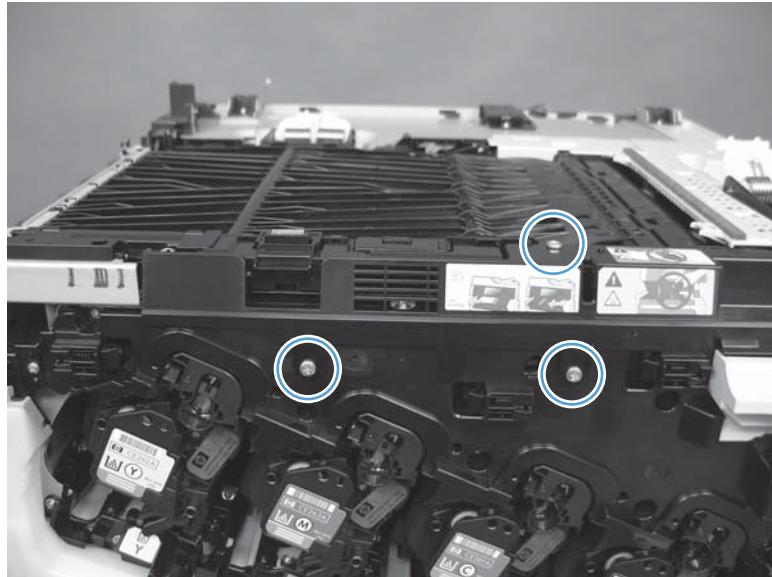


2. Lift the cover up on the right side to clear the pin, lift the paper path, rotate the cover on left side to release one tab (callout 1), and then remove the inner cover (callout 2).

Figure 1-229 Remove the IPTU (2 of 5)

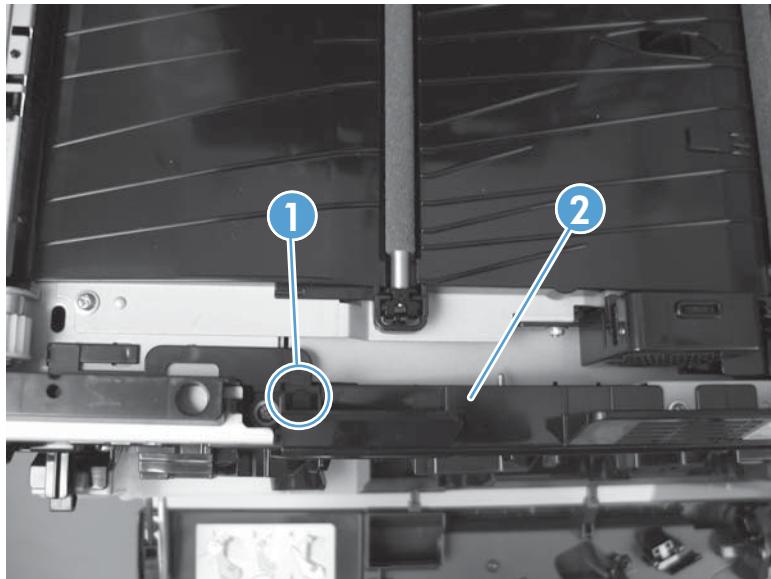


3. Remove two screws.

Figure 1-230 Remove the IPTU (3 of 5)

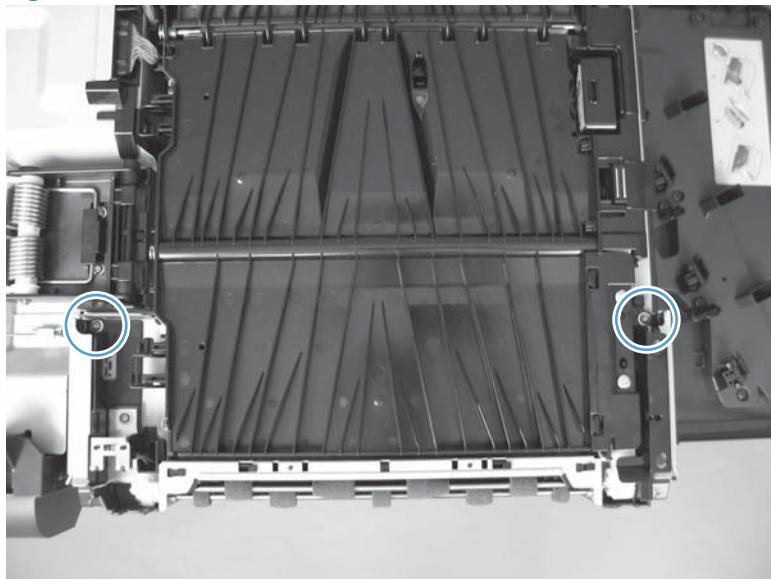


4. Remove two screws.

Figure 1-231 Remove the IPTU (4 of 5)

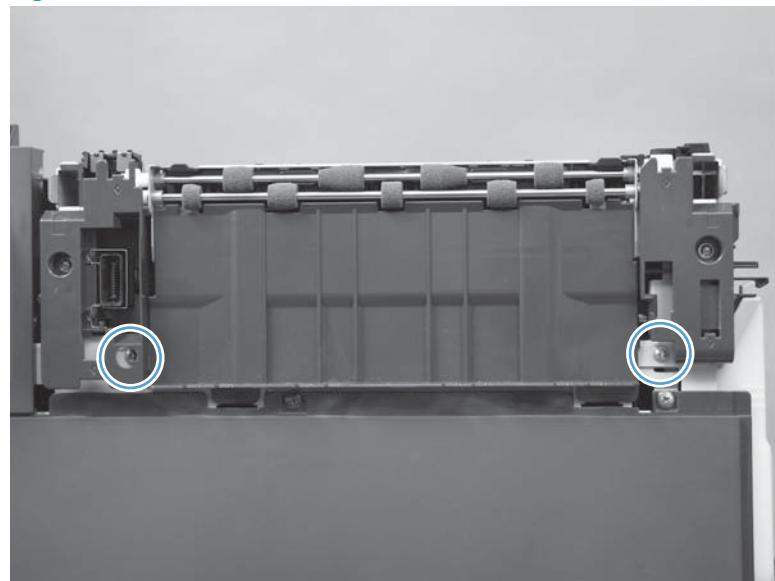

5. Disconnect one connector (callout 1) and then lift (callout 2) and slide the IPTU (callout 3) to remove.

Figure 1-232 Remove the IPTU (5 of 5)

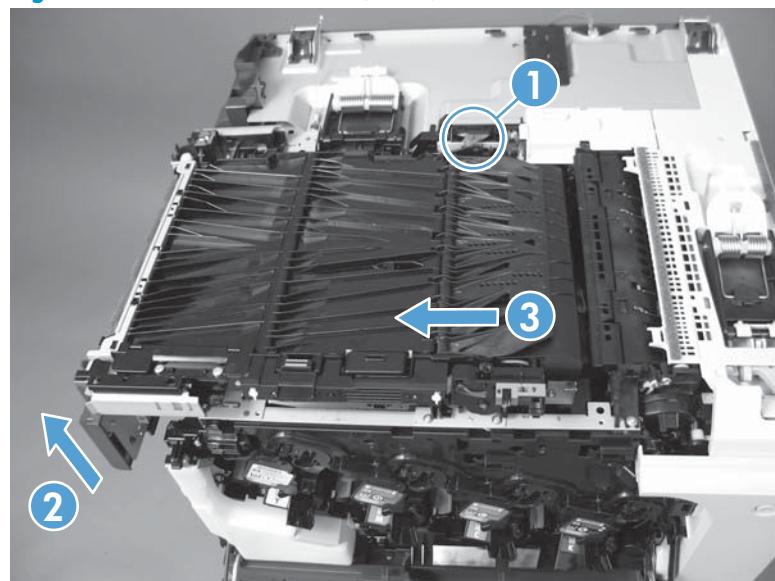

Cassette feed guide

 **TIP:** A page jammed in the product might be removed by removing the cassette feed guide.


1. Open the right-door assembly.

Figure 1-233 Remove the cassette feed guide (1 of 2)



2. Remove two screws (callout 1), and then remove the cassette feed guide (callout 2).


Figure 1-234 Remove the cassette feed guide (2 of 2)

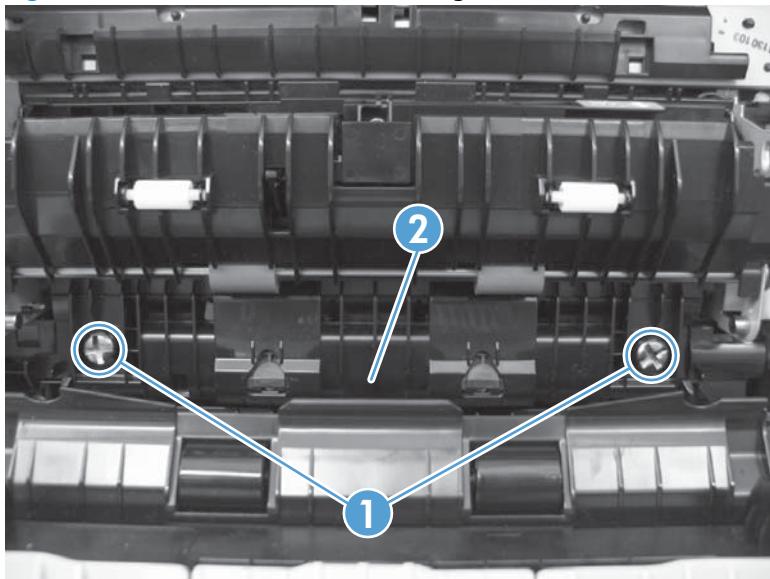

Reinstall the cassette feed guide

When reinstalling the cassette feed guide, make sure to correctly align each screw and pin with the corresponding hole and that the guide fits secure against the chassis.

Figure 1-235 Reinstall the cassette feed guide

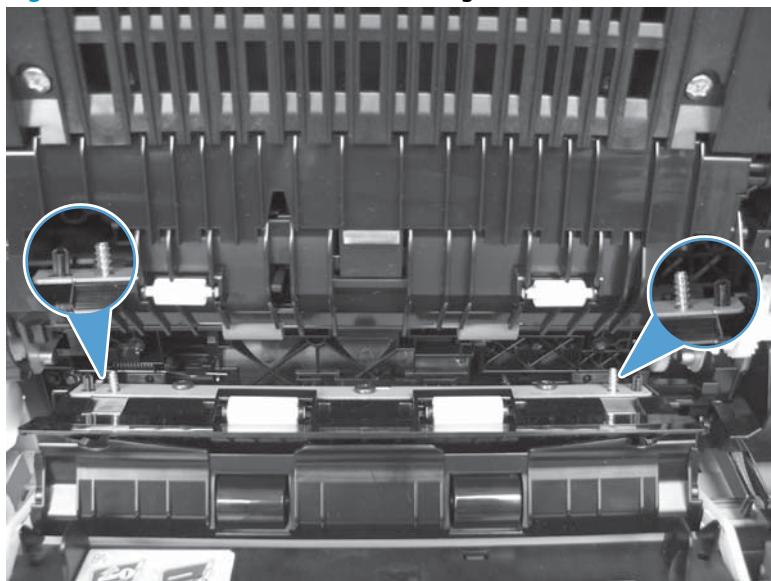

Secondary transfer assembly

The secondary transfer assembly includes the secondary transfer roller.

1. Open the right-door assembly.


Figure 1-236 Remove the secondary transfer assembly (1 of 3)



2. Release one tab and carefully remove the stopper.

 **NOTE:** The corner of the assembly might need to be slightly lifted to release the stopper pin from the hole in the chassis.


Figure 1-237 Remove the secondary transfer assembly (2 of 3)

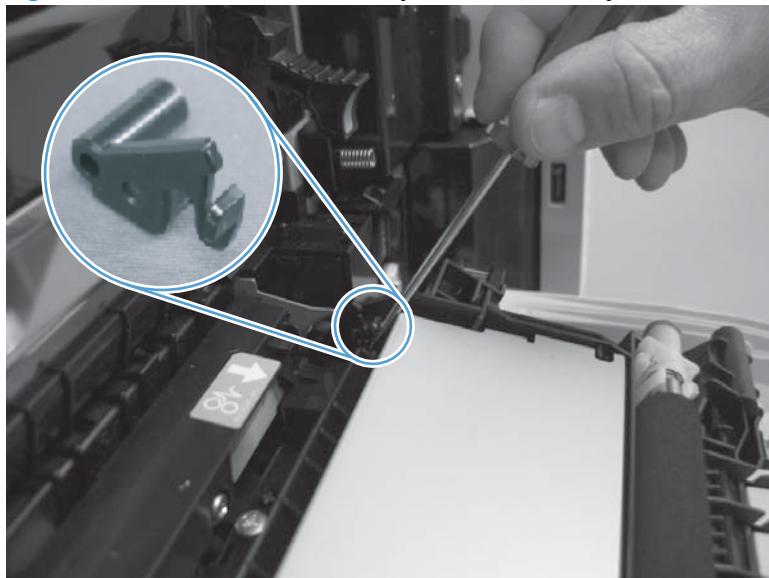

3. Remove the secondary transfer assembly.

⚠ CAUTION: Do not damage the blue release lever when removing the assembly.

Figure 1-238 Remove the secondary transfer assembly (3 of 3)

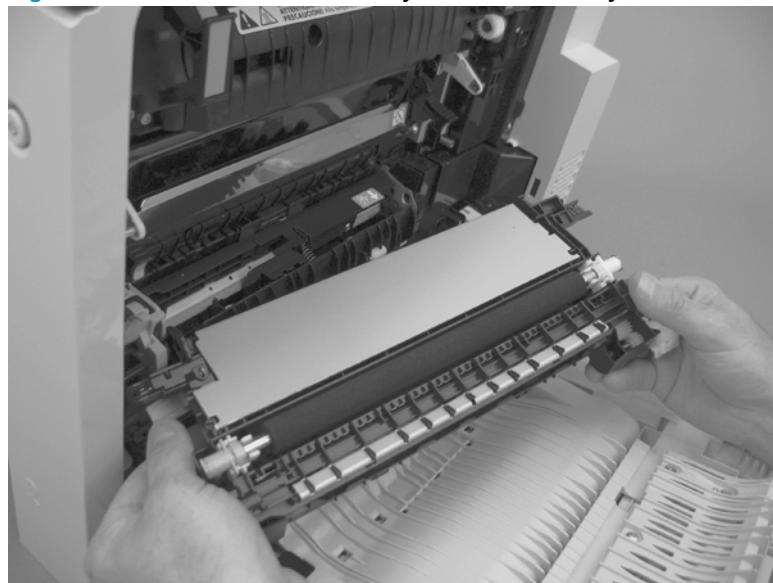

Reinstall the secondary transfer assembly

Press and hold the blue release lever when reinstalling the assembly.

Figure 1-239 Reinstall the secondary transfer assembly



Tray 1 separation pad


Before proceeding, remove the following assemblies

- Pickup roller. See [Pickup roller \(Tray 1\) on page 46](#).
- Right door assembly. See [Right door assembly on page 130](#).

Remove the Tray 1 separation pad


1. Remove two screws (callout 1) and the cover (callout 2).

Figure 1-240 Remove the Tray 1 separation pad (1 of 6)

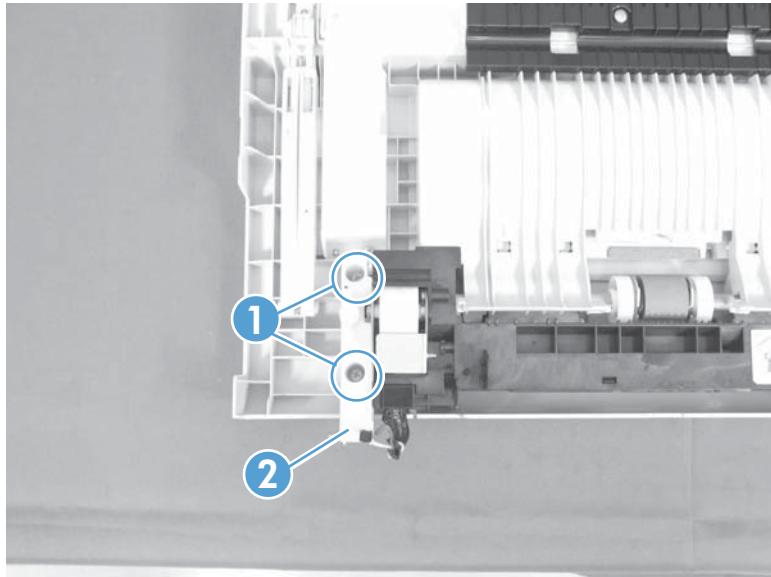


2. Remove two screws (callout 1) and separate Tray 1 (callout 2) from the door assembly.

Figure 1-241 Remove the Tray 1 separation pad (2 of 6)

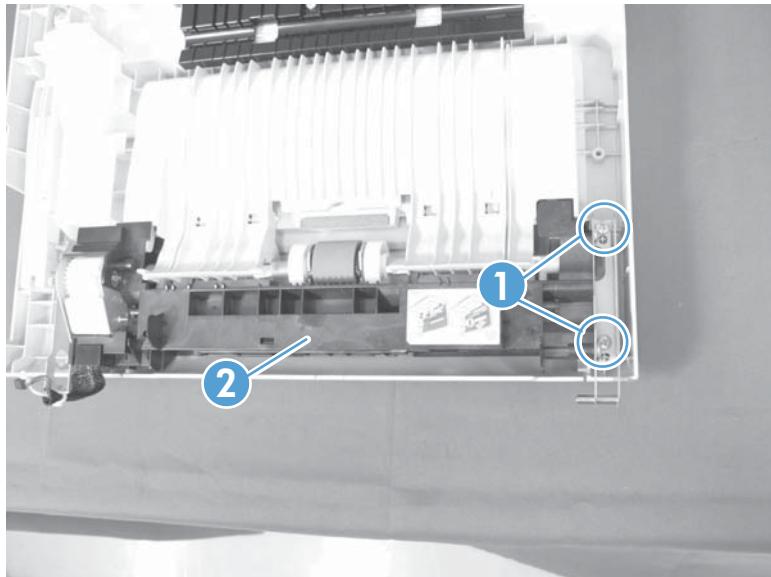

3. Release two tabs (callout 1) and slide the locking cap and sub roller toward the edge of the tray.


Figure 1-242 Remove the Tray 1 separation pad (3 of 6)

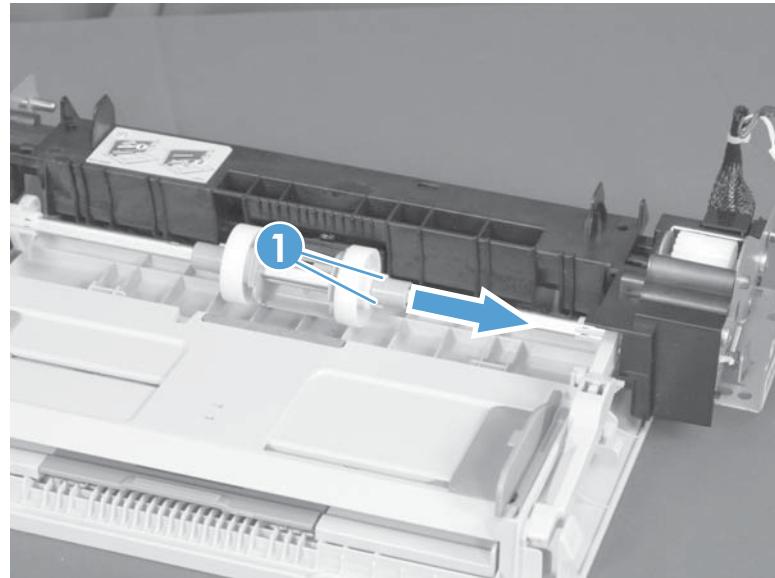

4. Release two tabs (callout 1) and slide the locking cap and sub roller toward the edge of the tray.

⚠ CAUTION: Do not damage the flag (callout 2).


Figure 1-243 Remove the Tray 1 separation pad (4 of 6)

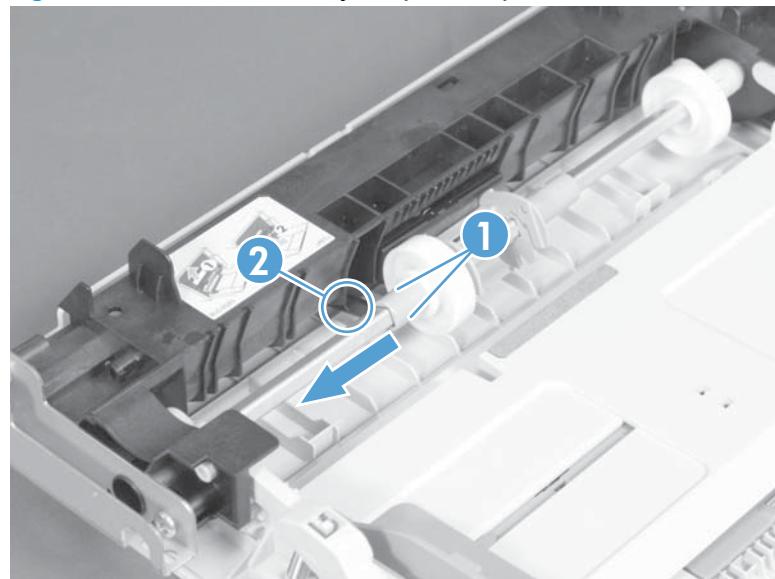

5. Release one tab (callout 1) and slide the pickup-roller holder toward the edge of the tray.


⚠ CAUTION: Do not damage the flag (callout 2).

Figure 1-244 Remove the Tray 1 separation pad (5 of 6)

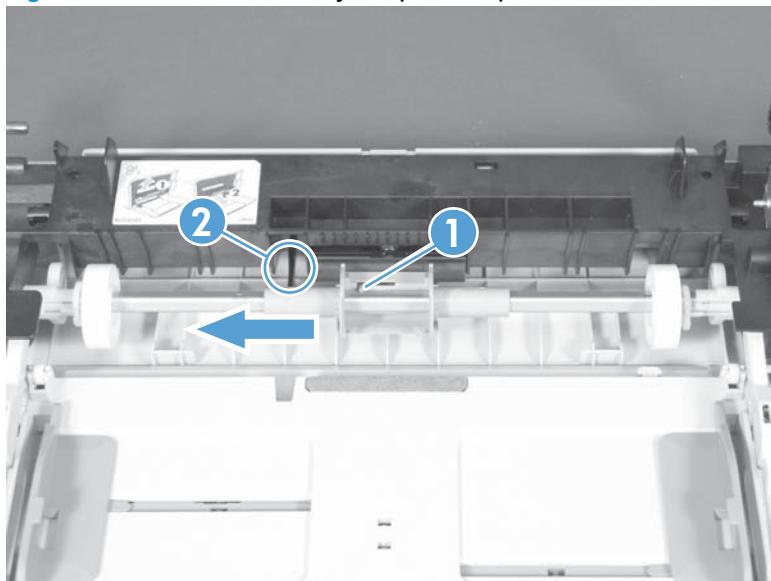

6. Release one tab (callout 1) and remove the separation pad.

Figure 1-245 Remove the Tray 1 separation pad (6 of 6)

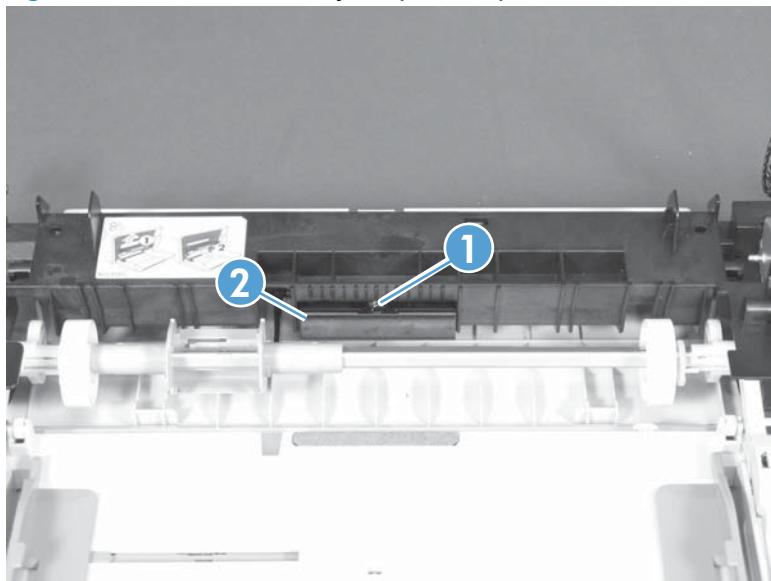

Registration density (RD) sensor assembly


Before proceeding, remove the following assemblies

- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Secondary transfer assembly. See [Secondary transfer assembly on page 152](#).

Remove the RD sensor assembly


1. Release one tab (callout 1), and then remove the cover (callout 2).

Figure 1-246 Remove the RD sensor assembly (1 of 7)

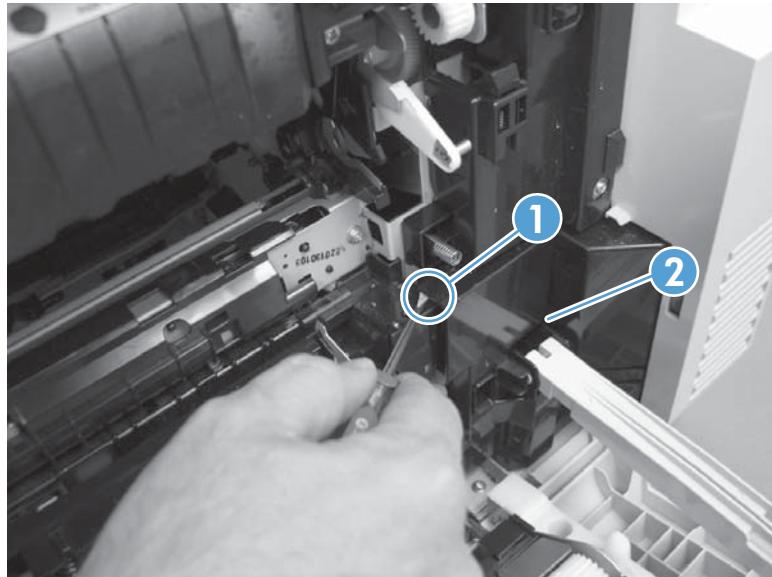

 **NOTE:** When reinstalling the cover, make sure that the tabs are seated correctly.


Figure 1-247 Remove the RD sensor assembly (2 of 7)

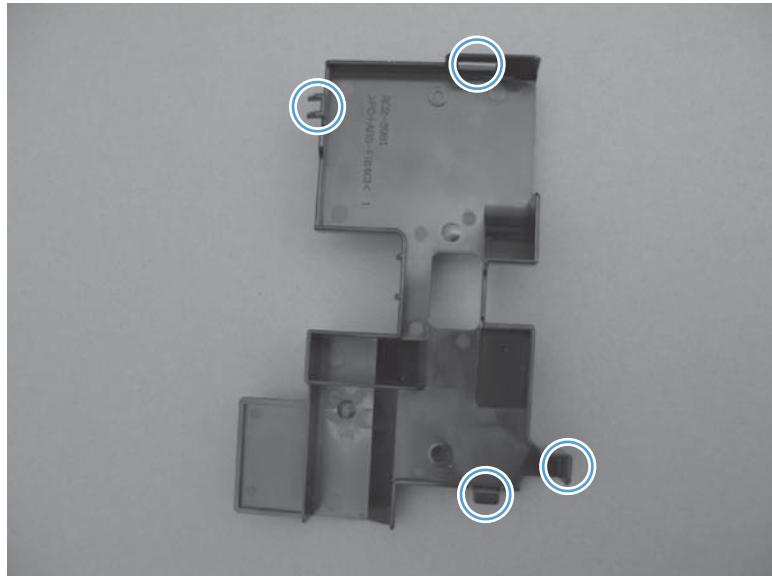

2. Release one tab, and then remove the wire-harness cover.


 **TIP:** Open the front door to make it easier to remove the cover.

Figure 1-248 Remove the RD sensor assembly (3 of 7)

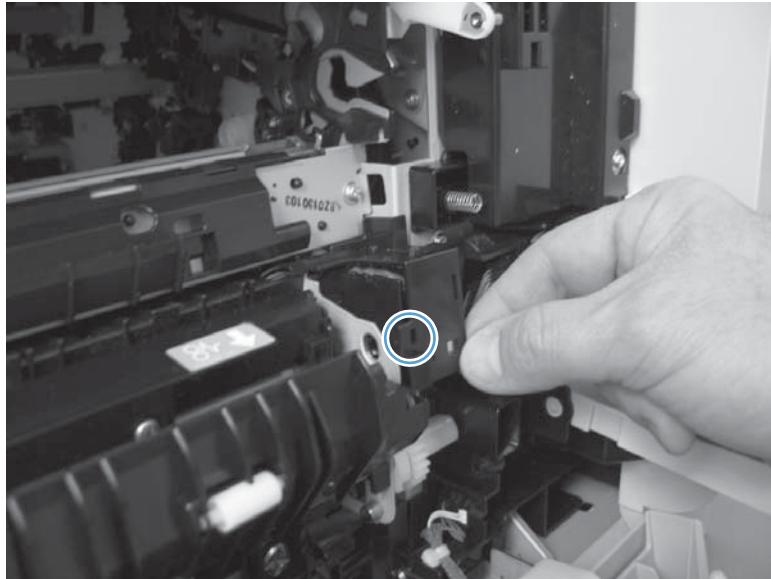


3. Disconnect three connectors.

Figure 1-249 Remove the RD sensor assembly (4 of 7)

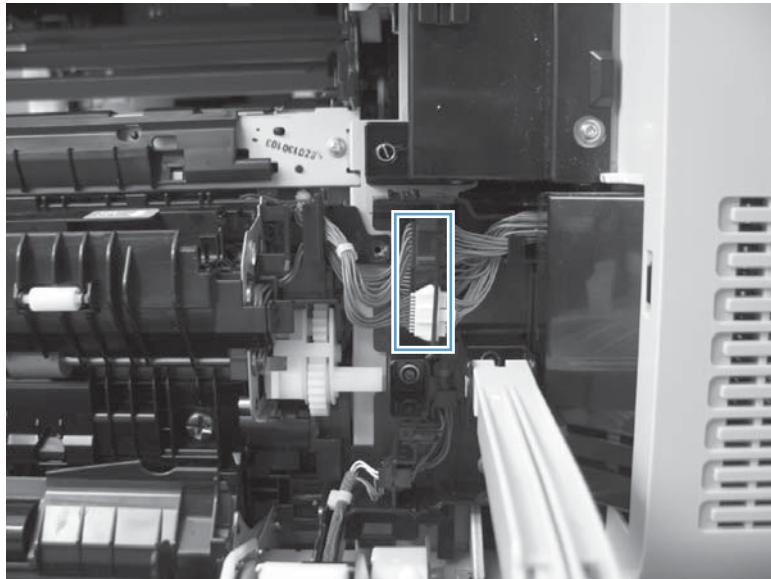


4. Remove two screws.

Figure 1-250 Remove the RD sensor assembly (5 of 7)

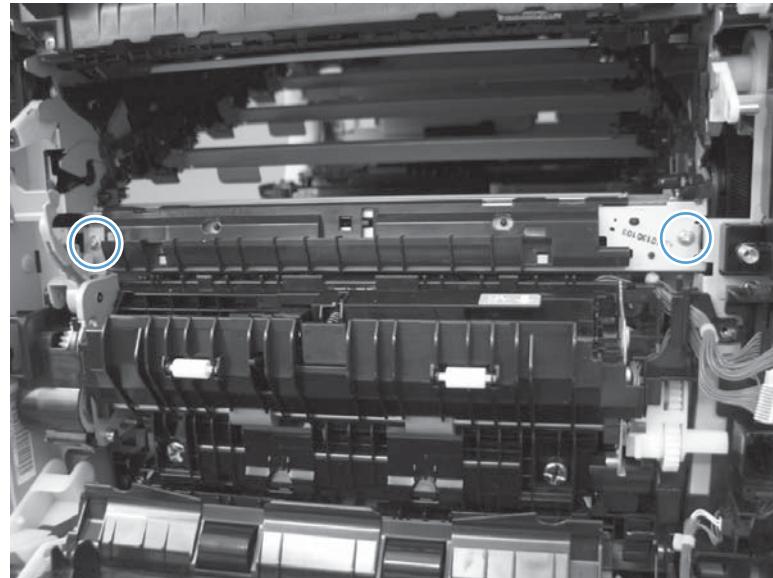

5. Slide the shutter toward the back side of the product. Keep the shutter in this position for the following step.


Figure 1-251 Remove the RD sensor assembly (6 of 7)

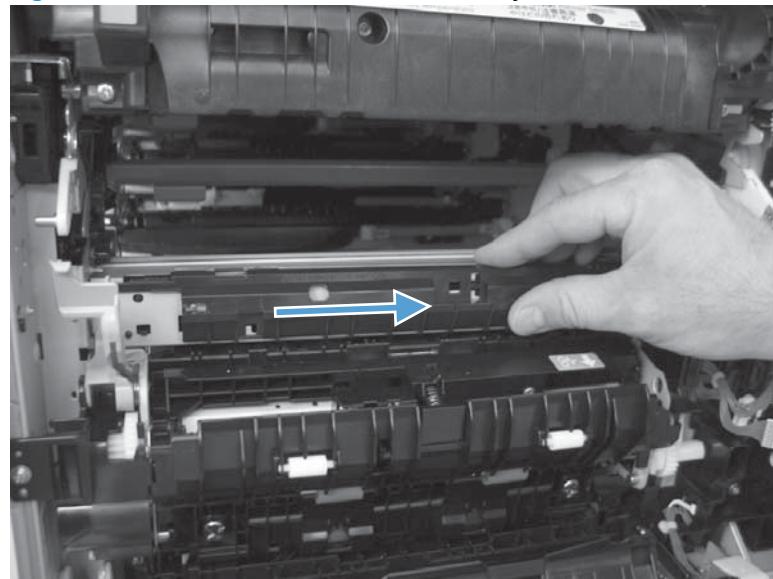

6. Carefully remove the assembly from the product.

⚠ CAUTION: Do not damage the shutter as it passes through the chassis.

Figure 1-252 Remove the RD sensor assembly (7 of 7)

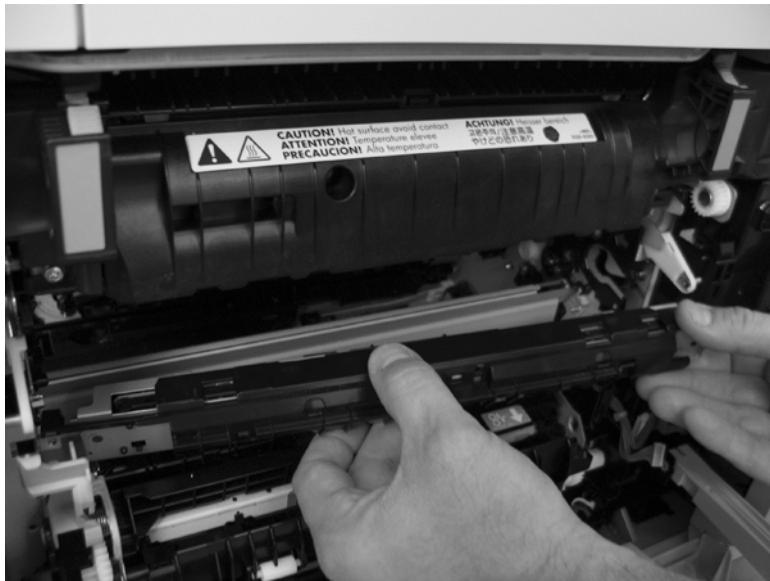

Registration assembly


Before proceeding, remove the following assemblies

- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Secondary transfer assembly. See [Secondary transfer assembly on page 152](#).

Remove the registration assembly


1. Release one tab (callout 1), and then remove the cover (callout 2).

Figure 1-253 Remove the registration assembly (1 of 8)

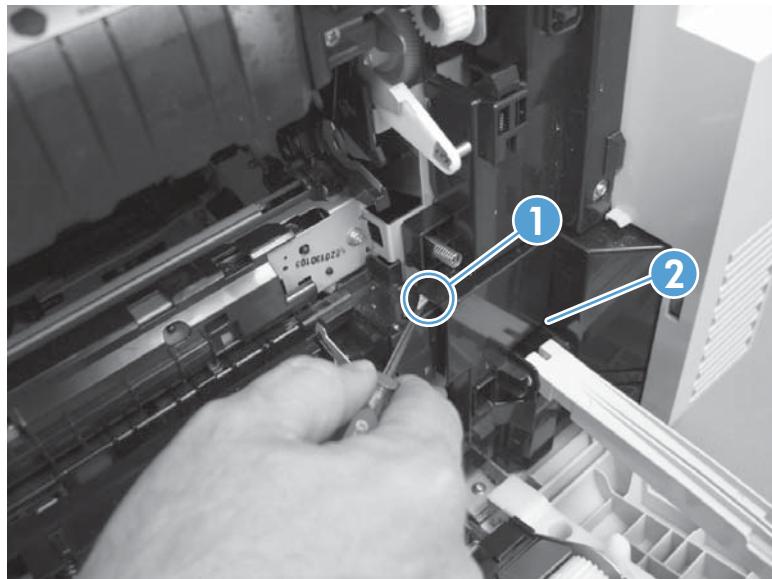

 **NOTE:** When reinstalling the cover, be sure that the tabs are seated correctly.


Figure 1-254 Remove the registration assembly (2 of 8)

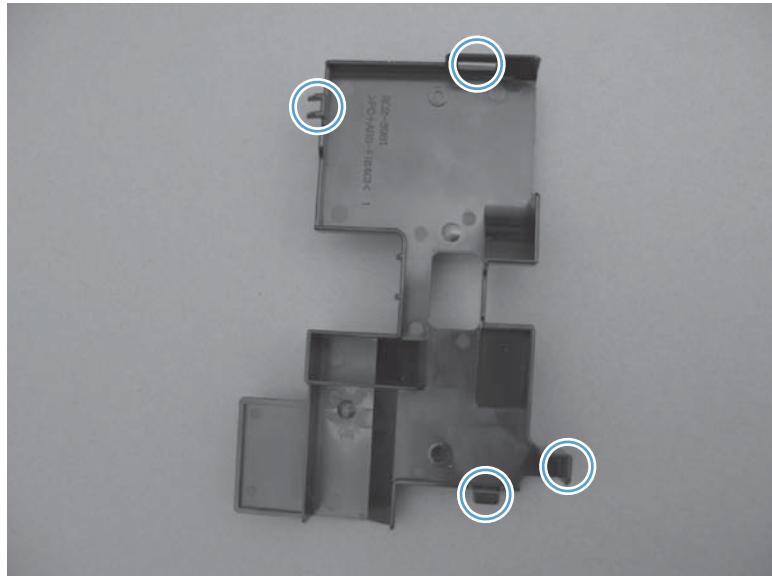

2. Release one tab, and then remove the wire-harness cover.


 **TIP:** To make the cover easier to remove, open the front-door assembly to close the RD-sensor shutter.

Figure 1-255 Remove the registration assembly (3 of 8)

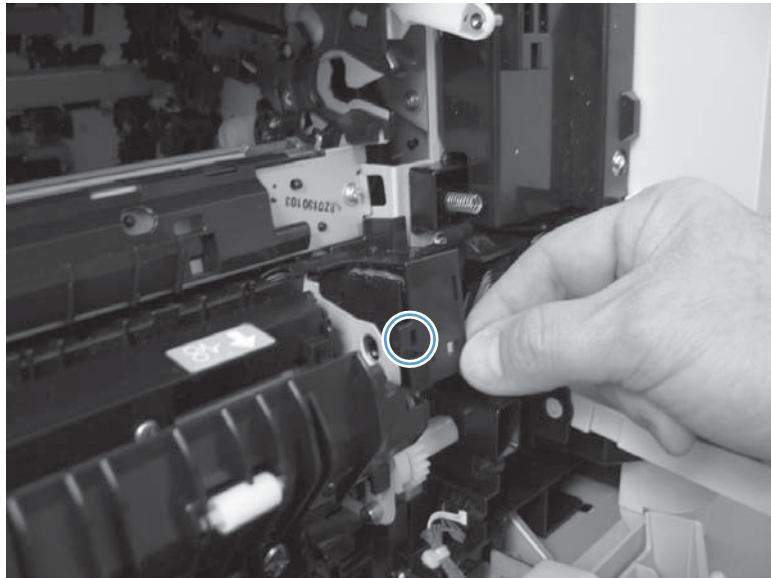


3. Disconnect three connectors.

Figure 1-256 Remove the registration assembly (4 of 8)

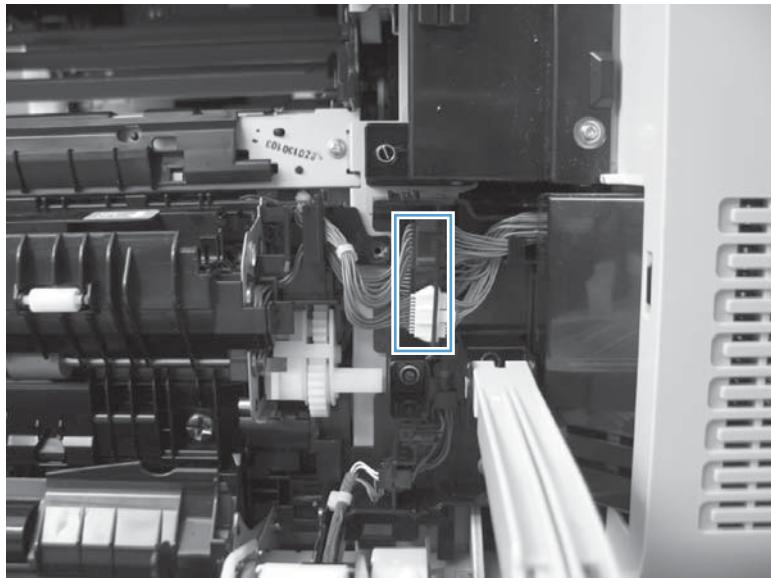


4. Remove two screws (callout 1), and then remove the cassette feed guide (callout 2).

Figure 1-257 Remove the registration assembly (5 of 8)

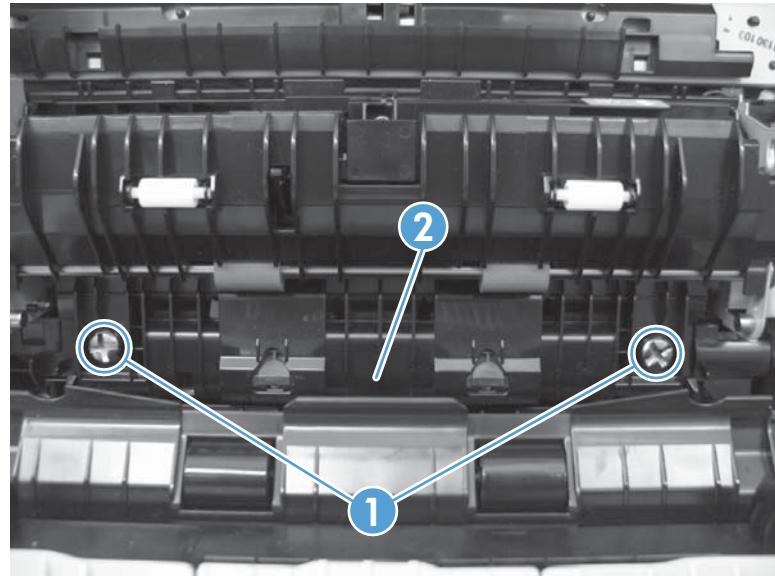


5. Remove four screws.

Figure 1-258 Remove the registration assembly (6 of 8)

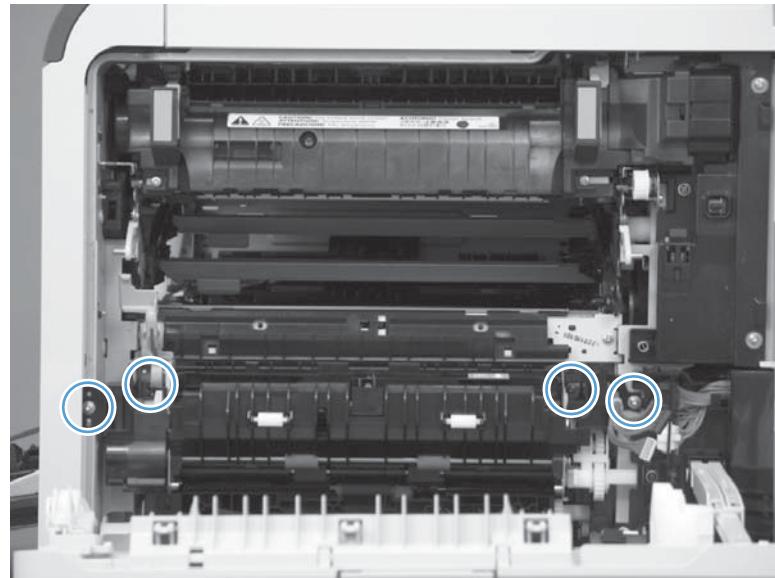

6. Release two pins and the front of the assembly.

Figure 1-259 Remove the registration assembly (7 of 8)

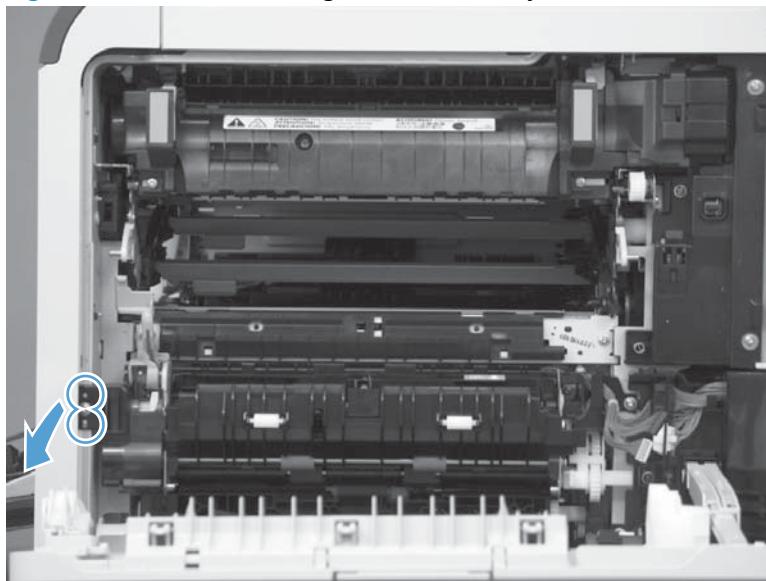

7. Remove the assembly from the product.

Reinstallation tip When the registration assembly is reinstalled, make sure that it is correctly positioned in the product. The tabs on the assembly must fit into the slots in the product chassis and the assembly fits securely up against the product chassis.

Figure 1-260 Remove the registration assembly (8 of 8)



Install a replacement registration assembly

After installing a replacement registration assembly, reset the counts for the registration roller and the media-sensor. Follow this procedure after reassembling the product:

1. From the Home screen on the product control panel, scroll to and touch the [Device Maintenance](#) button.
2. Touch the [Service](#) button.
3. The drop-down menu shows [User Access Code](#). Open the menu and select [Service Access Code](#).
4. Touch the [Access Code](#) field, and then enter the service code for this product:
 - **M651:** 04065114
 - **M680:** 04068014
5. Touch [OK](#) to open the [Service](#) menu.
6. Select [New Registration Roller](#) to reset the roller count.
7. Select [Media Sensor Value](#) to reset the media sensor.

Paper-delivery fan (M651)

Before proceeding, remove the following assemblies


- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).

Remove the paper-delivery fan (M651)

1. Remove one screw (callout 1), disconnect one connector (callout 2), and then release one wire retainer (callout 3).


 **TIP:** When the fan is reinstalled, the air must flow into the product. Check the arrows embossed on the fan frame that indicate air flow direction.

Figure 1-261 Remove the paper-delivery fan (M651; 1 of 2)

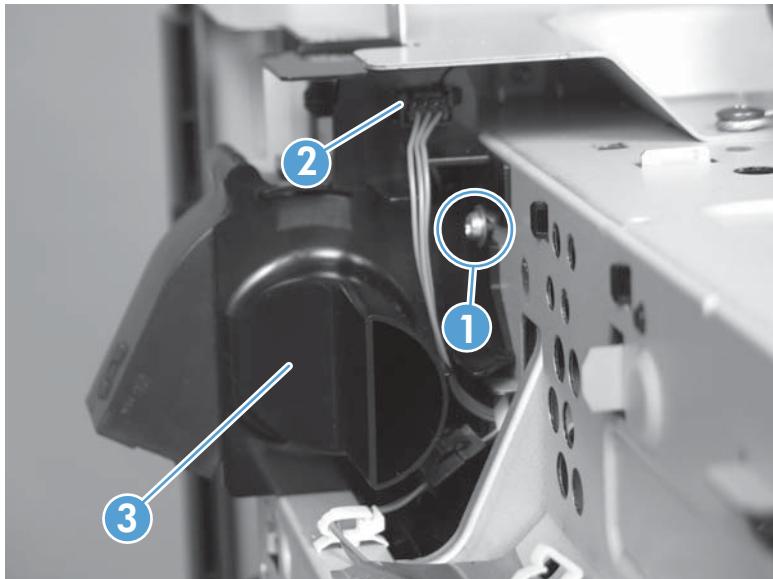

2. Release one tab (callout 1), and then remove the fan (callout 2).

Figure 1-262 Remove the paper-delivery fan (M651; 2 of 2)

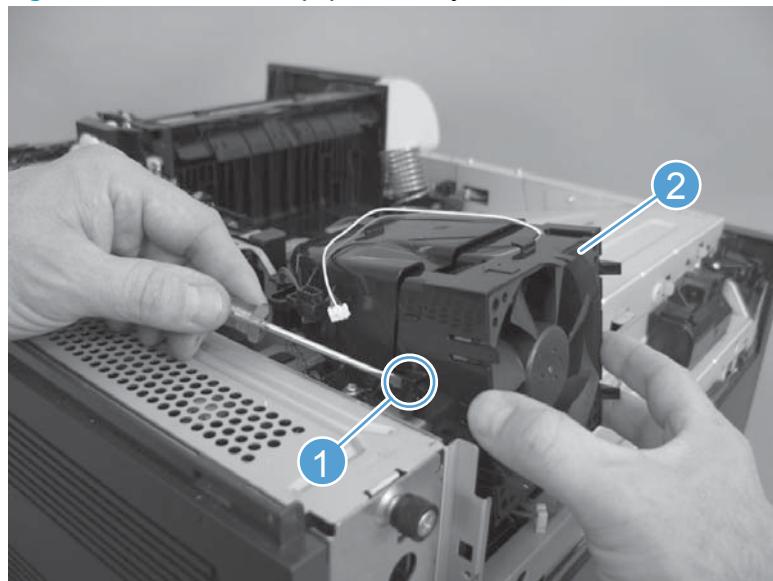

Paper-delivery fan (M680)


Before proceeding, remove the following assemblies

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- IPTU. See [IPTU \(M680\) on page 147](#).

Remove the paper-delivery fan (M680)

- ▲ Remove one screw (callout 1), disconnect one connector (callout 2), and then remove the fan (callout 3).

Figure 1-263 Remove the paper-delivery fan (M680)

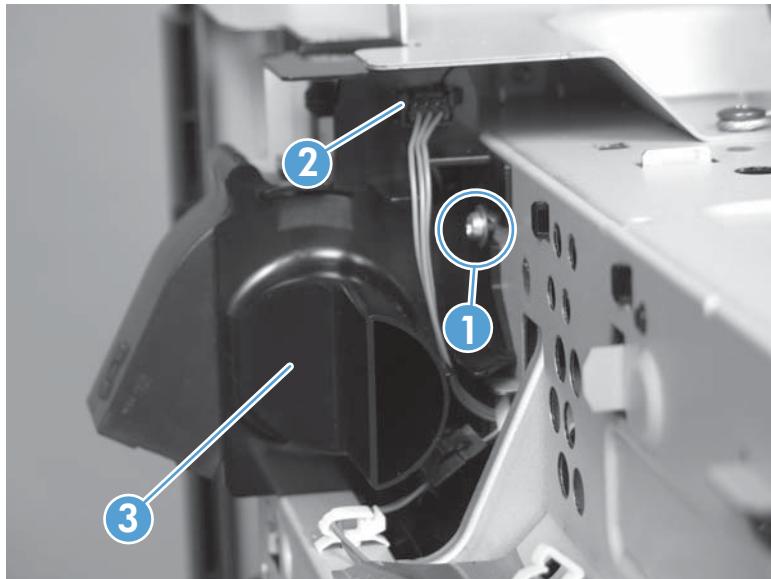

Residual-toner-feed motor

Before proceeding, remove the following assemblies

M651 models

- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper-left cover. See [Upper left cover \(M651\) on page 117](#).

M680 models

- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- IPTU. See [IPTU \(M680\) on page 147](#).
- Delivery fan. See [Paper-delivery fan \(M680\) on page 168](#).

Remove the residual-toner-feed motor

Remove one screw (callout 1), disconnect one connector (callout 2), and then remove the residual-toner-feed motor (callout 3).

 **Reinstallation tip** When the motor (callout 3) is reinstalled, make sure that the keyed shaft on the product and motor assembly are correctly aligned and engaged.

Figure 1-264 Remove the residual-toner-feed motor (M651)


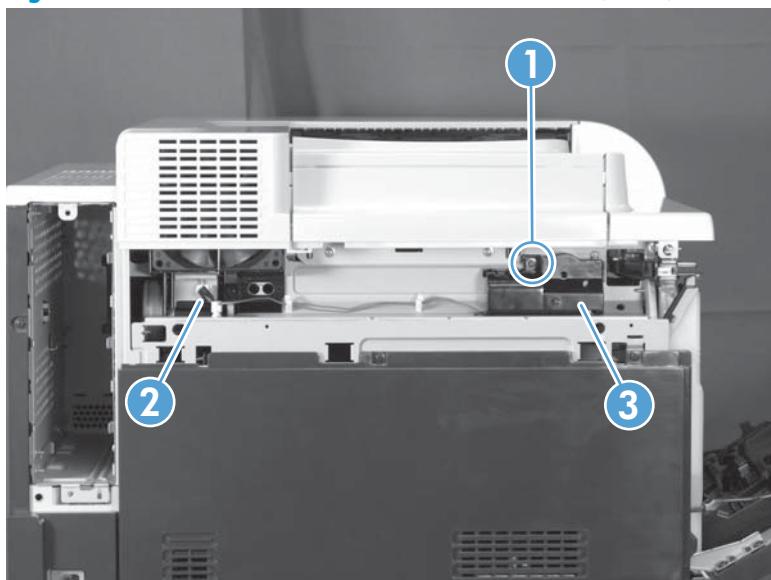


Figure 1-265 Remove the residual-toner-feed motor (M680)

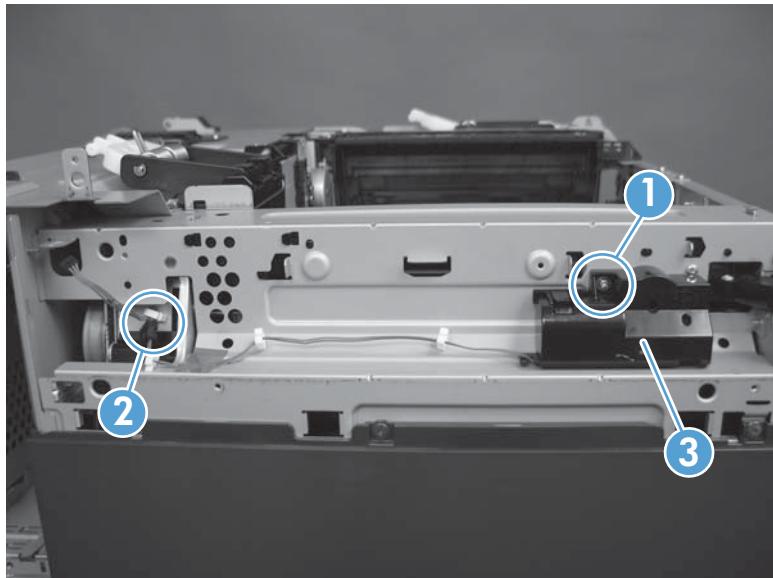

Residual-toner transfer assembly

Before proceeding, remove the following assemblies

M651 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper-left cover. See [Upper left cover \(M651\) on page 117](#).
- Residual-toner-feed motor. See [Residual-toner-feed motor on page 169](#).


M680 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- IPTU. See [IPTU \(M680\) on page 147](#).
- Delivery fan. See [Paper-delivery fan \(M680\) on page 168](#).
- Residual-toner-feed motor. See [Residual-toner-feed motor on page 169](#).

Remove the residual-toner transfer assembly


1. Remove one screw.

Figure 1-266 Remove the residual-toner transfer assembly (1 of 4)

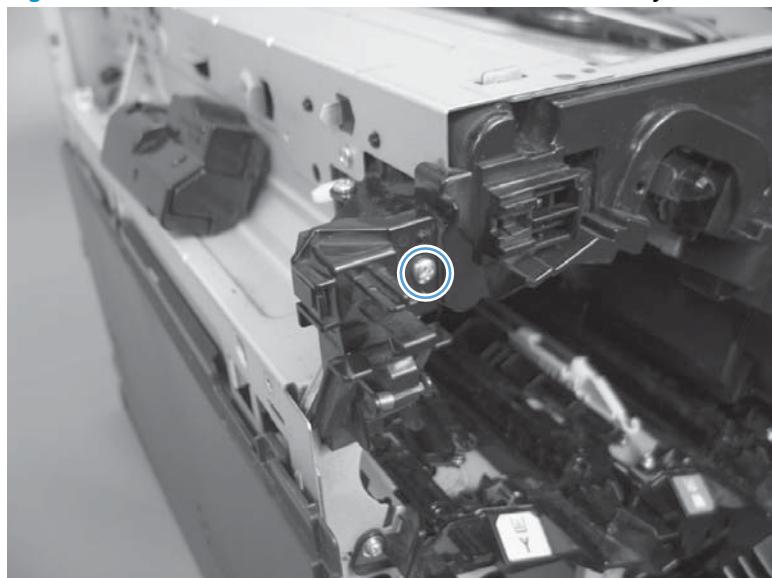


2. Release one tab, and then remove the waste toner duct.

Figure 1-267 Remove the residual-toner transfer assembly (2 of 4)

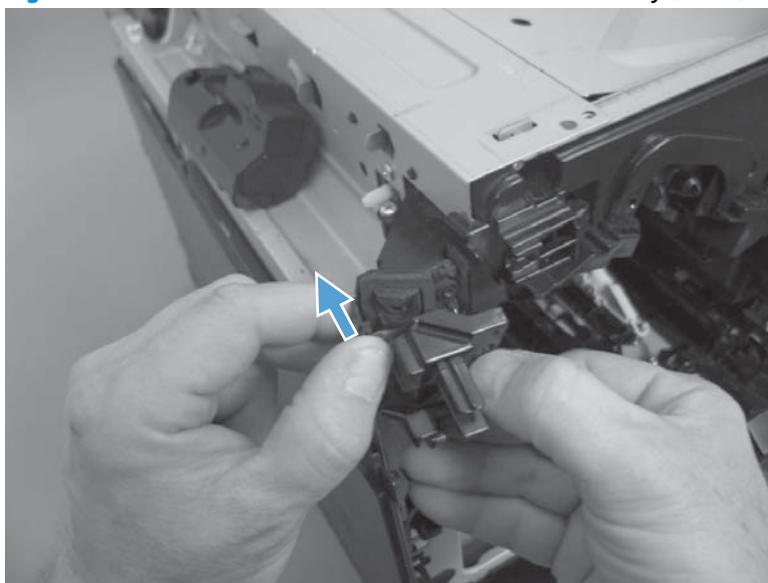

3. Remove one screw.


Figure 1-268 Remove the residual-toner transfer assembly (3 of 4)

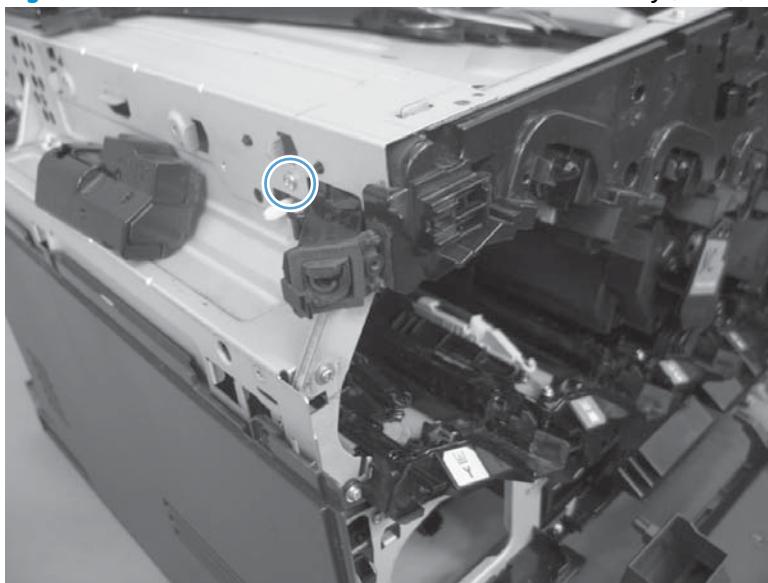

4. Push the residual-toner feed assembly into the product and then remove through the print cartridge cavity.

⚠ CAUTION: The waste toner feed assembly contains toner. Place a cloth below the work area to catch any spilled toner.

Figure 1-269 Remove the residual-toner transfer assembly (4 of 4)

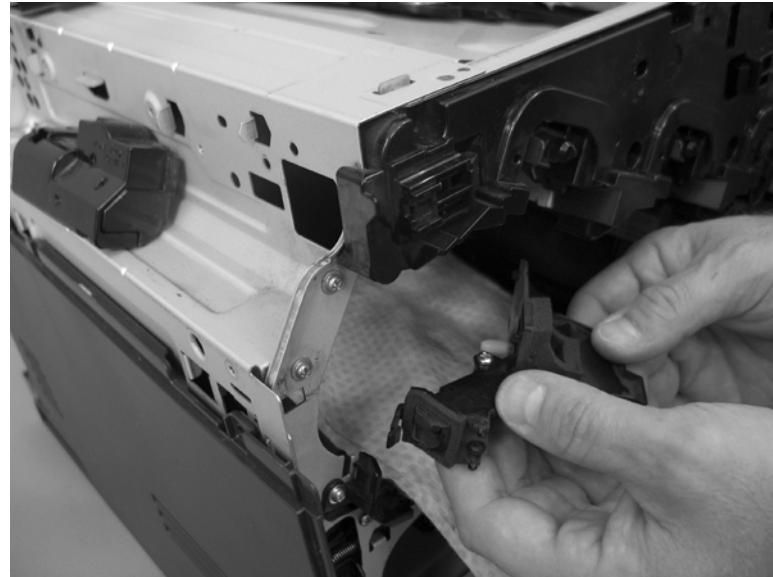

Cartridge fan and environmental sensor

Before proceeding, remove the following assemblies

M651 models

- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).


M680 models

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).

Remove the cartridge fan and environmental sensor

1. Remove four screws (callout 1), and then remove the sheet-metal plate (callout 2).


Figure 1-270 Remove the cartridge fan and environmental sensor (1 of 7)

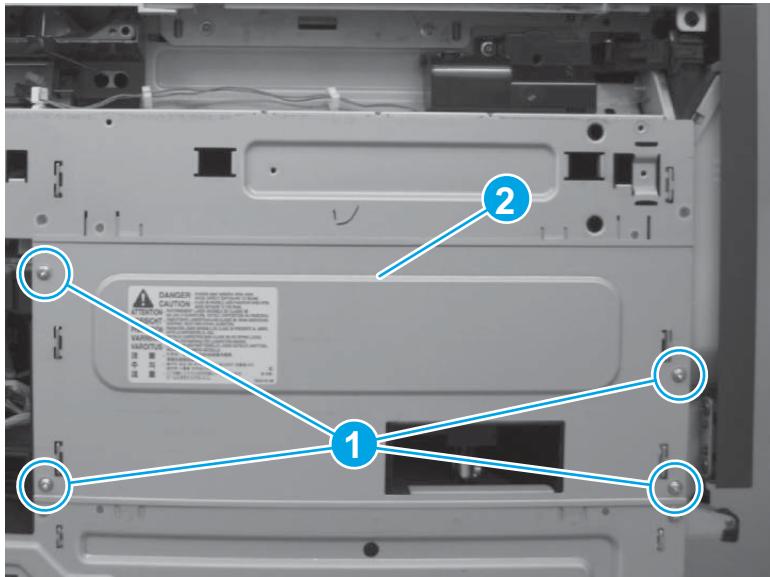

2. Release one spring.


 **TIP:** Close the front-door assembly to reduce tension in the spring.

Figure 1-271 Remove the cartridge fan and environmental sensor (2 of 7)

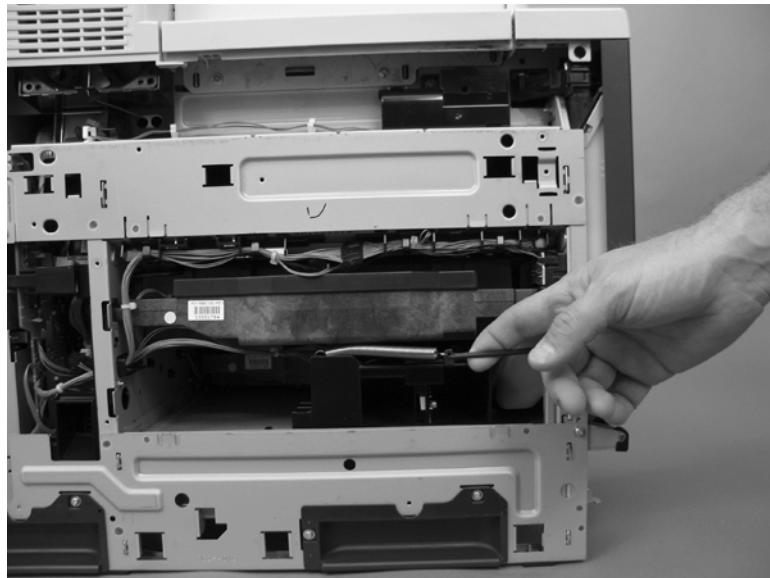

3. Release one tab and then slide the fan assembly toward the back of the product.


Figure 1-272 Remove the cartridge fan and environmental sensor (3 of 7)

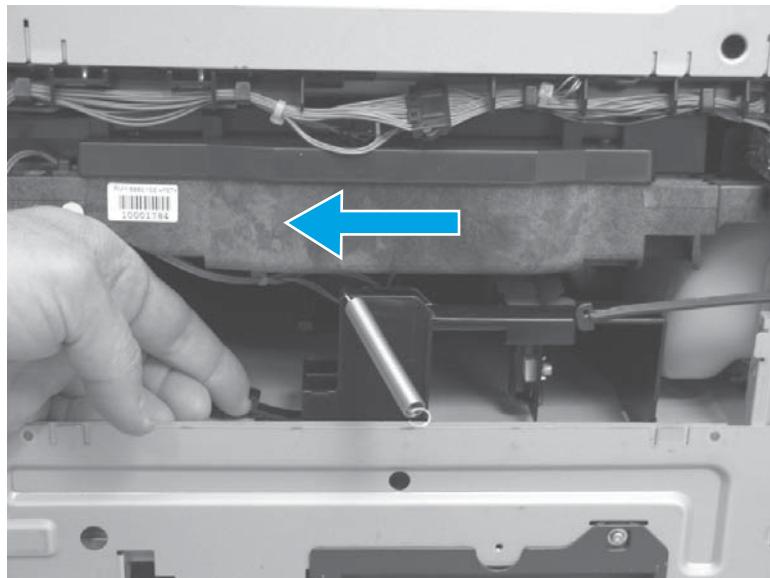

4. Pull the fan assembly out of the product, and then disconnect two connectors.


 **TIP:** One connector is below the sponge.

Figure 1-273 Remove the cartridge fan and environmental sensor (4 of 7)

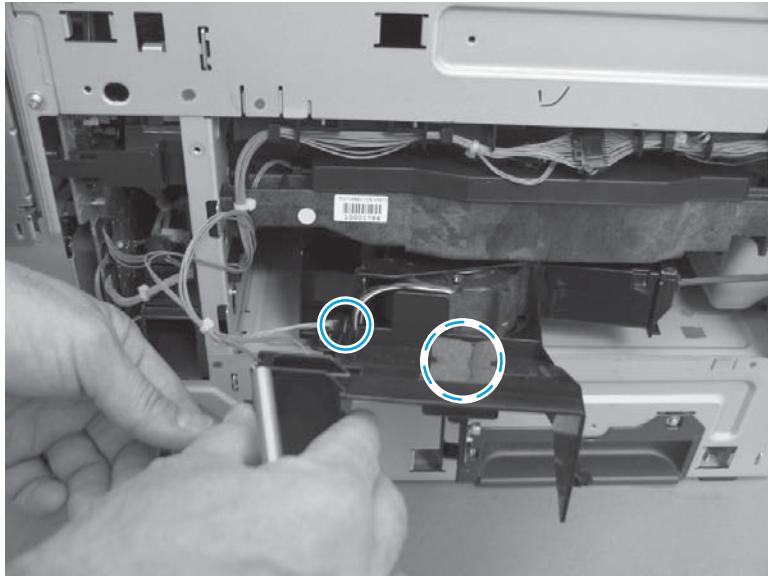


5. Release two tabs (callout 1), and then remove the cover (callout 2).

Figure 1-274 Remove the cartridge fan and environmental sensor (5 of 7)

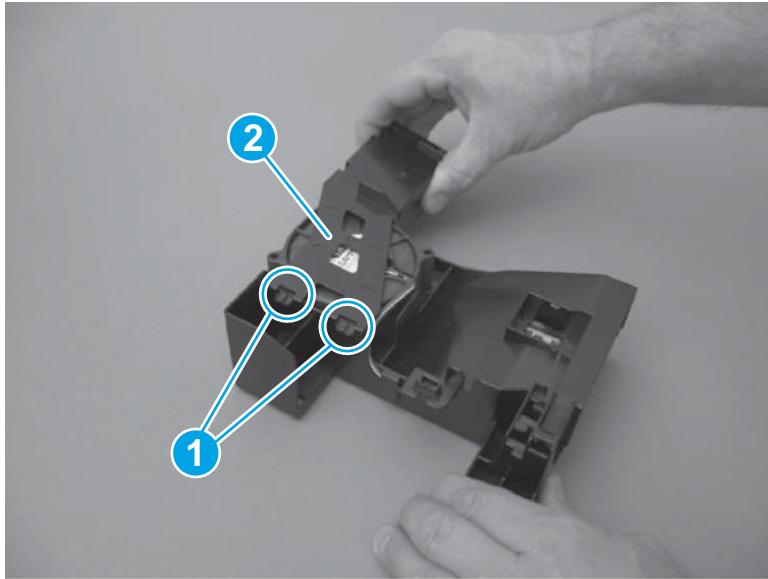

6. Disconnect one connector (callout 1), and then remove the fan (callout 2).

Figure 1-275 Remove the cartridge fan and environmental sensor (6 of 7)

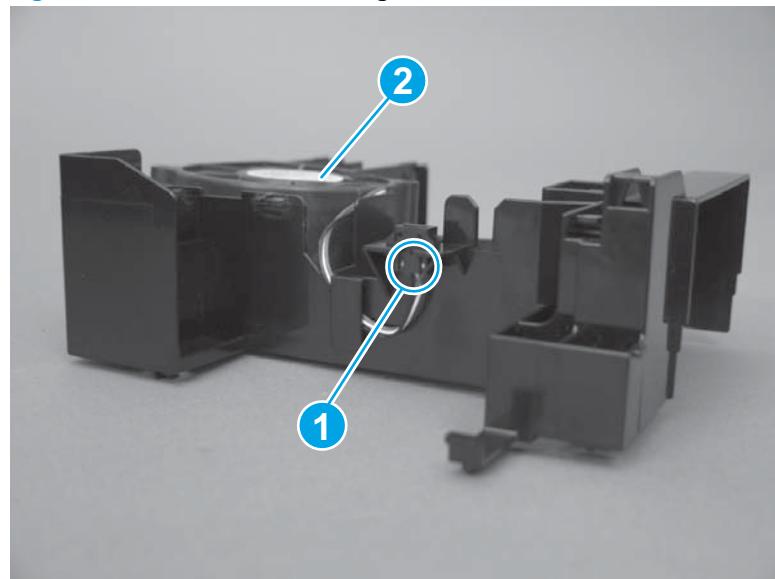


7. Carefully release one tab, and then remove the environmental sensor.



CAUTION:  ESD-sensitive assembly.

Figure 1-276 Remove the cartridge fan and environmental sensor (7 of 7)

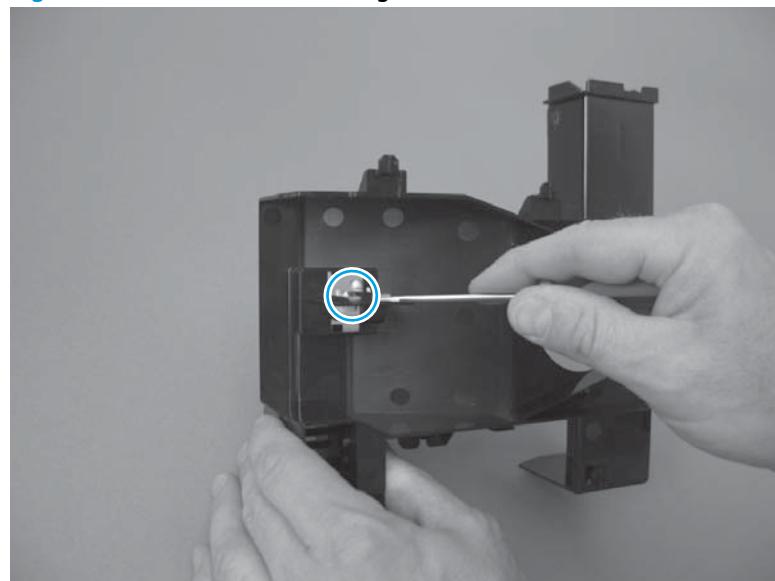

Residual toner full sensor

Before proceeding, remove the following assemblies

M651 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).


M680 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Left cover. See [Left cover on page 120](#).

Remove the residual toner full sensor


1. Remove four screws (callout 1), and then remove the sheet-metal plate (callout 2).

Figure 1-277 Remove the residual toner full sensor (1 of 3)

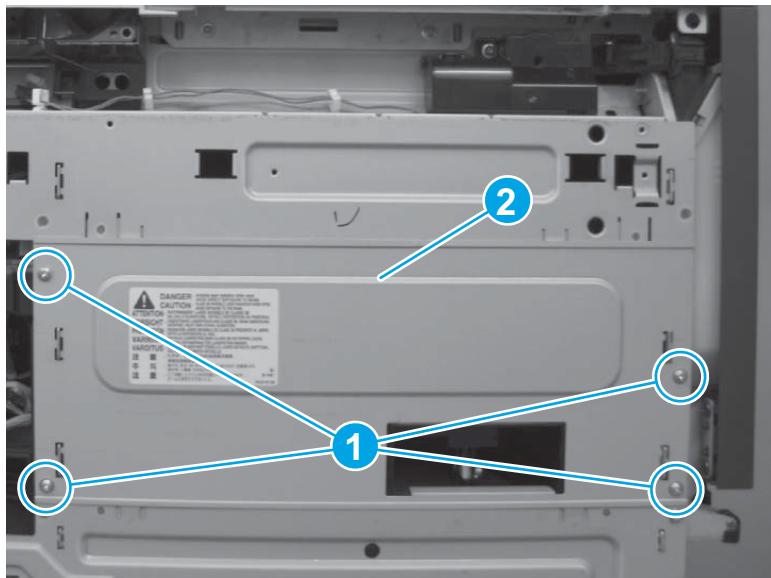


2. Open the front-door assembly, and then remove one screw.

Figure 1-278 Remove the residual toner full sensor (2 of 3)

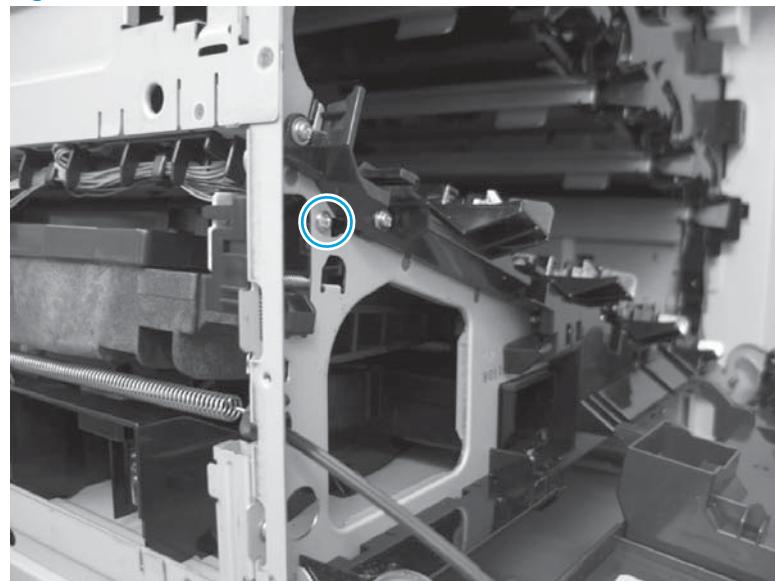

3. Disconnect two connectors (callout 1), and then remove the residual toner full sensor (callout 2).

Figure 1-279 Remove the residual toner full sensor (3 of 3)

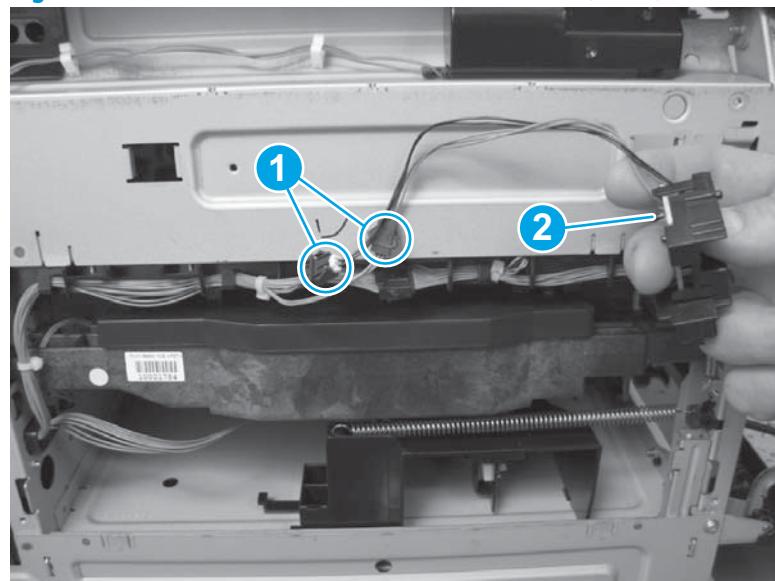

Delivery assembly (M651)

Before proceeding, remove the following assemblies

- Fuser. See [Fuser on page 24](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Control panel. See [Control panel assembly \(M651\) on page 28](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left-rear cover. See [Left rear cover on page 119](#).
- Right-front cover. See [Right-front cover on page 124](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Delivery fan. See [Paper-delivery fan \(M651\) on page 166](#).



NOTE: This assembly is also called the paper-delivery assembly.


Remove the delivery assembly (M651)

1. Remove one screw (callout 1), and then slide the fan duct (callout 2) in the direction of the arrow to release it from the delivery assembly.



NOTE: Do not remove the fan duct from the product.

Figure 1-280 Remove the delivery assembly (M651; 1 of 7)

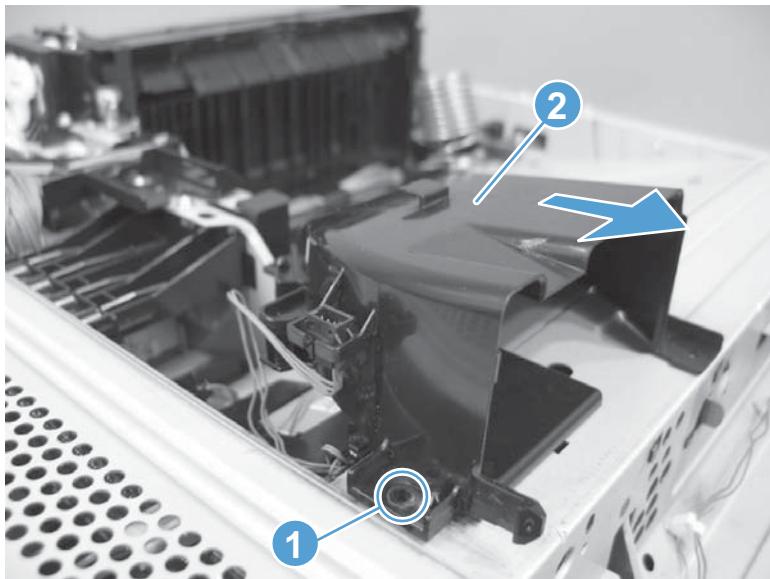


2. Remove two screws (callout 1), and then remove the paper guide (callout 2).

 **NOTE:** To create enough clearance to remove the paper guide (callout 2), press down on the duplex solenoid (callout 3).


 **TIP:** The fuser delivery sensor is installed on the rear of the paper guide. Leave the sensor attached to the guide, and rotate the paper guide toward the rear of the product to access the delivery assembly.

Figure 1-281 Remove the delivery assembly (M651; 2 of 7)

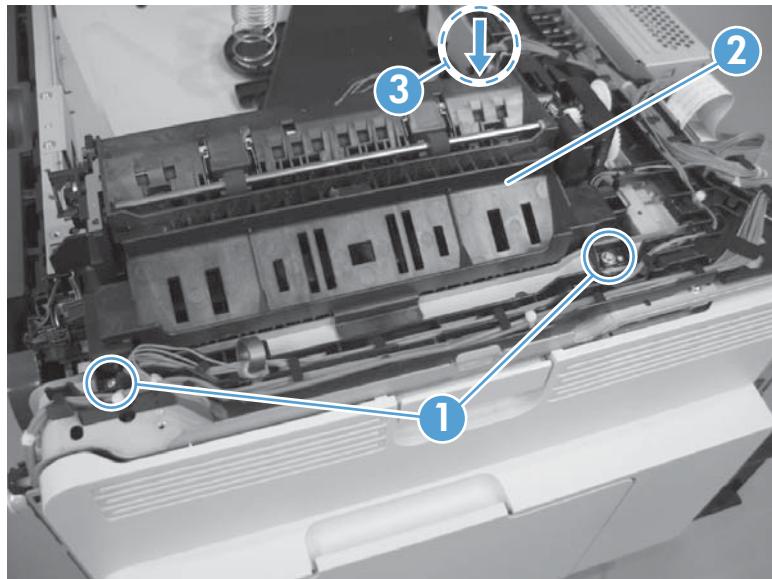

3. Release the wire harness from the guides (callout 1), and then disconnect one connector (callout 2).

Figure 1-282 Remove the delivery assembly (M651; 3 of 7)

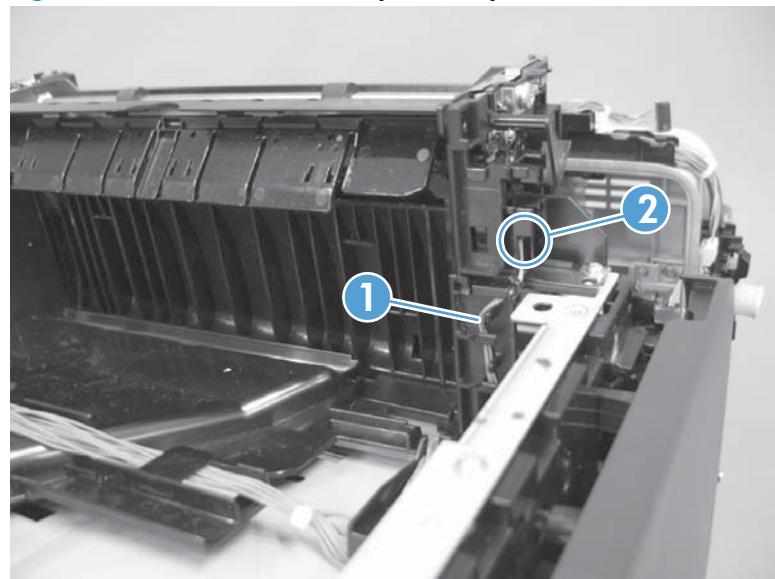


4. Remove two screws.

Figure 1-283 Remove the delivery assembly (M651; 4 of 7)




5. Pull one tab out, and then push the tab down to release the bushing.

Figure 1-284 Remove the delivery assembly (M651; 5 of 7)

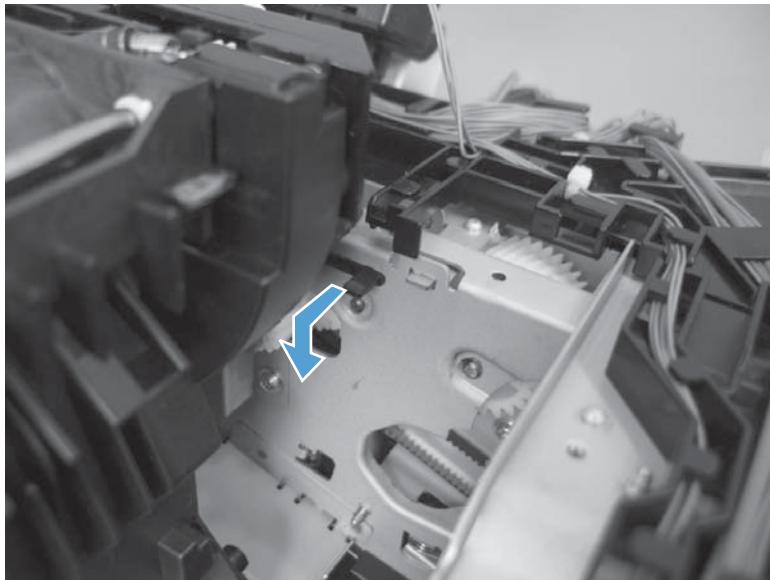


6. Remove two screws.

Figure 1-285 Remove the delivery assembly (M651; 6 of 7)

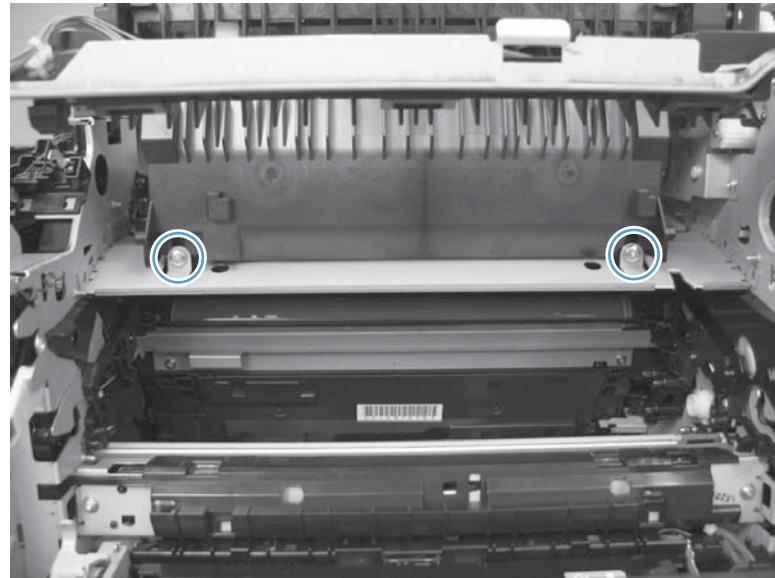

7. Remove the assembly.


Figure 1-286 Remove the delivery assembly (M651; 7 of 7)

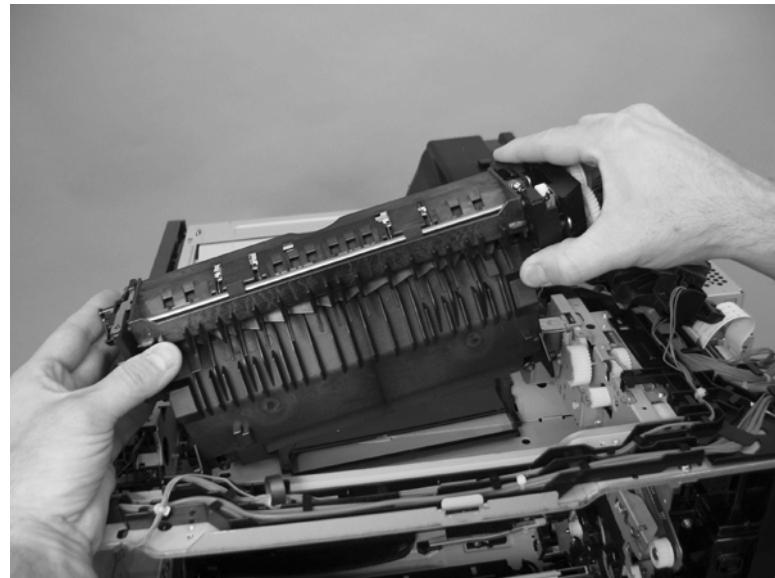

Reinstall the delivery assembly (M651)


1. Transfer the solenoid plunger from the discarded assembly to the new one.

Figure 1-287 Reinstall the delivery assembly (M651: 1 of 4)

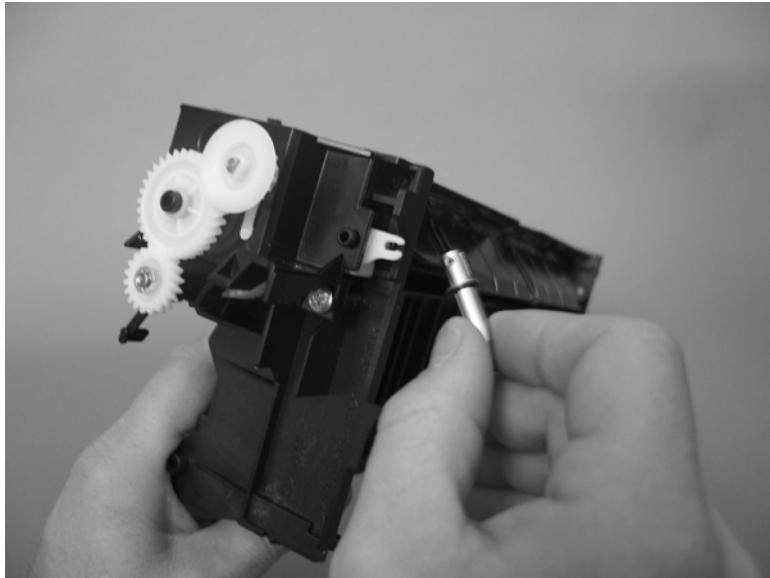


2. Transfer the output-bin full sensor from the discarded assembly to the new one. The sensor is held in place by one tab and two hooks (callout 1).

Figure 1-288 Reinstall the delivery assembly (M651: 2 of 4)

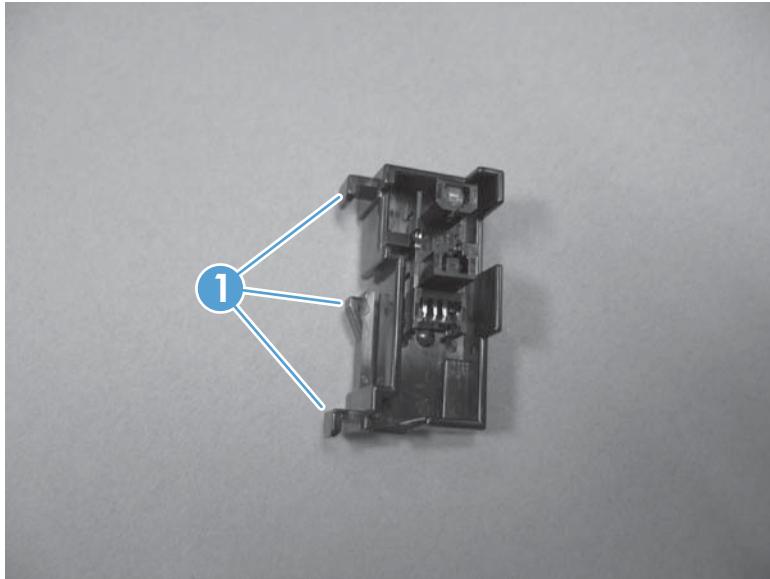

3. Hold the delivery assembly with the diverter (callout 1) in the depressed position to move the sensor flag (callout 2) away from the sensor. Release one tab (callout 3).


Figure 1-289 Reinstall the delivery assembly (M651: 3 of 4)

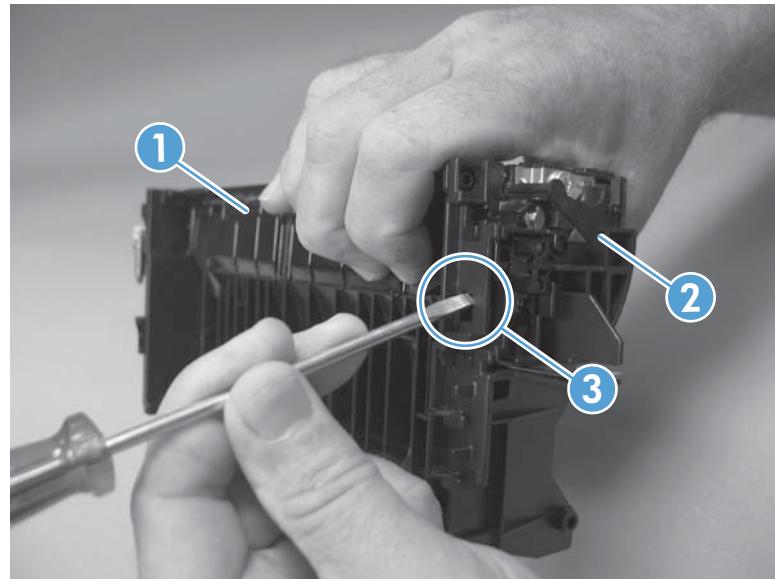

4. Slide the sensor up toward the top of the delivery assembly to release two hooks (callout 1), and then carefully remove the sensor from the assembly.

CAUTION: Do not damage the sensor holder or sensor flag when removing the sensor from the delivery assembly.

Figure 1-290 Reinstall the delivery assembly (M651: 4 of 4)

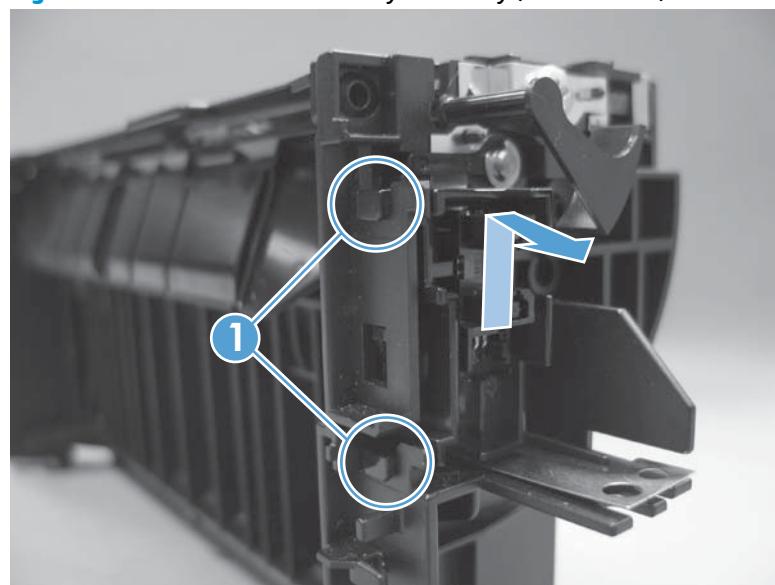

Delivery assembly (M680)

Before proceeding, remove the following assemblies

- Fuser. See [Fuser on page 24](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Intermediate cover. See [Intermediate cover assembly \(M680\) on page 145](#).
- IPTU. See [IPTU \(M680\) on page 147](#).




NOTE: This assembly is also called the paper-delivery assembly.

Remove the delivery assembly (M680)


1. Remove one black-plastic cover (callout 1), and then remove two screws (callout 2).

Figure 1-291 Remove the delivery assembly (M680; 1 of 4)

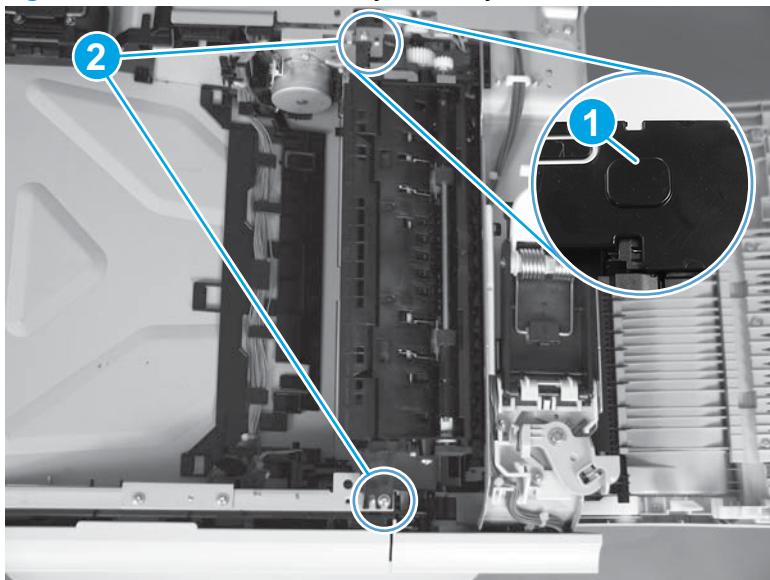

2. Pull one tab out, and then push the tab down to release the bushing.


Figure 1-292 Remove the delivery assembly (M680; 2 of 4)

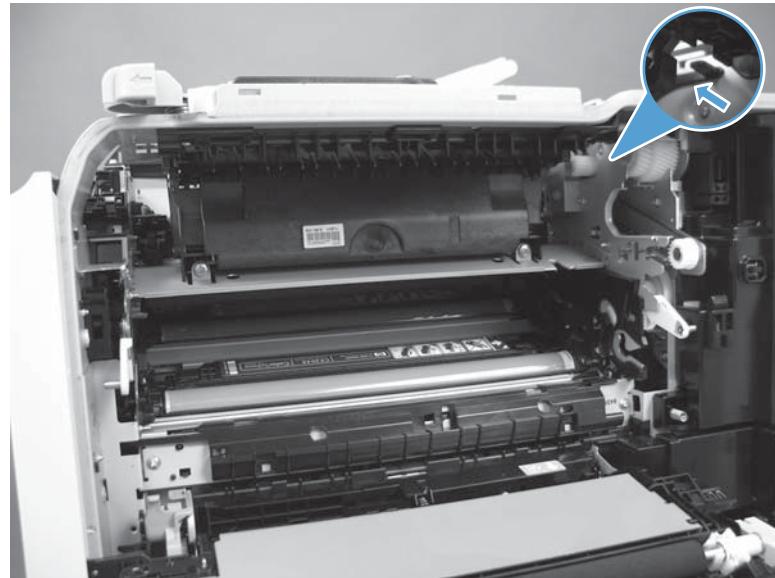

 **NOTE:** When reinstalling, make sure the tab is correctly installed and flush against the chassis.

3. Remove two screws.

Figure 1-293 Remove the delivery assembly (M680; 3 of 4)

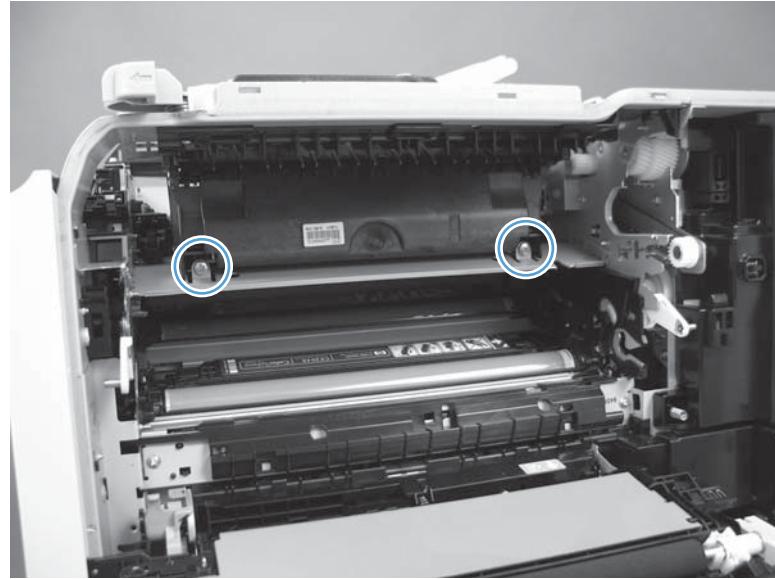

4. Remove the assembly.


Figure 1-294 Remove the delivery assembly (M680; 4 of 4)



Reinstall the delivery assembly (M680)

- ▲ Make sure that the solenoid plunger is correctly installed on the replacement assembly.

Figure 1-295 Reinstall the delivery assembly (M680)

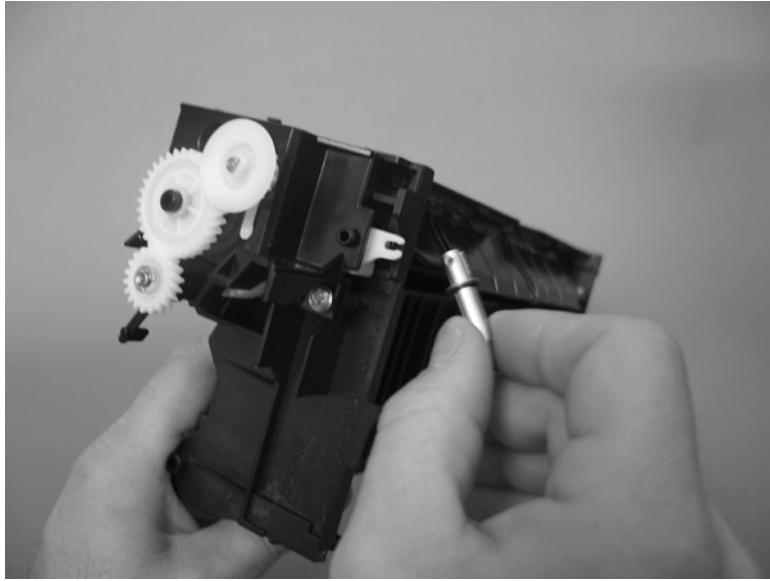

Duplex-drive assembly

Before proceeding, remove the following assemblies

M651 models

- Fuser. See [Fuser on page 24](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Control panel. See [Control panel assembly \(M651\) on page 28](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left-rear cover. See [Left rear cover on page 119](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Right-front cover. See [Right-front cover on page 124](#).
- Delivery fan. See [Paper-delivery fan \(M651\) on page 166](#).
- Delivery assembly. See [Delivery assembly \(M651\) on page 180](#).

M680 models

- Fuser. See [Fuser on page 24](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover). See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- IPTU. See [IPTU \(M680\) on page 147](#).
- Delivery assembly. See [Delivery assembly \(M680\) on page 186](#).




NOTE: This assembly is also called the duplexing-drive assembly.

Remove the duplex-drive assembly

- ▲ Disconnect two connectors (callout 1), remove two screws (callout 2), and then remove the assembly (callout 3).

NOTE: The figure below shows the M680 product. For the M651 assembly, the connectors and solenoid are located in slightly different positions than shown below.

Figure 1-296 Remove the duplex-drive assembly

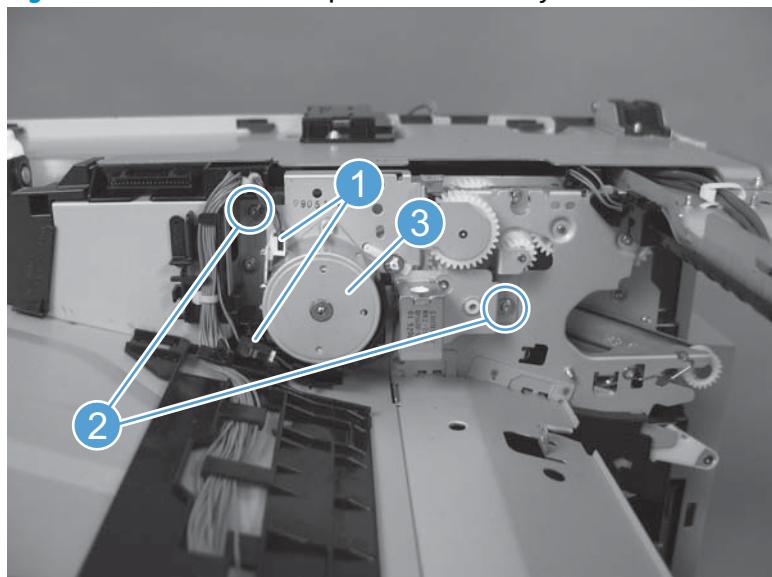

Power-supply fan (M651)


Before proceeding, remove the following assemblies

- Control panel assembly. See [Control panel assembly \(M651\) on page 28](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Upper cover. See [Upper cover \(M651\) on page 139](#).

Remove the power-supply fan (M651)

1. Release the fan cable from the DC controller.


Figure 1-297 Remove the power-supply fan (M651; 1 of 2)

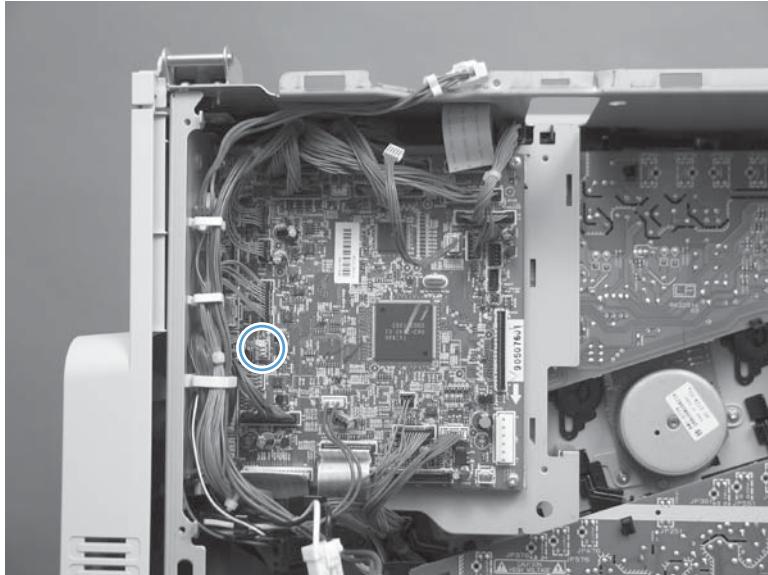

2. Release two tabs, and then remove the fan from the fan duct.

 **Reinstallation tip** When the fan is reinstalled, the air must flow into the product. Check the arrows embossed on the fan frame that indicate air flow direction.

Figure 1-298 Remove the power-supply fan (M651; 2 of 2)

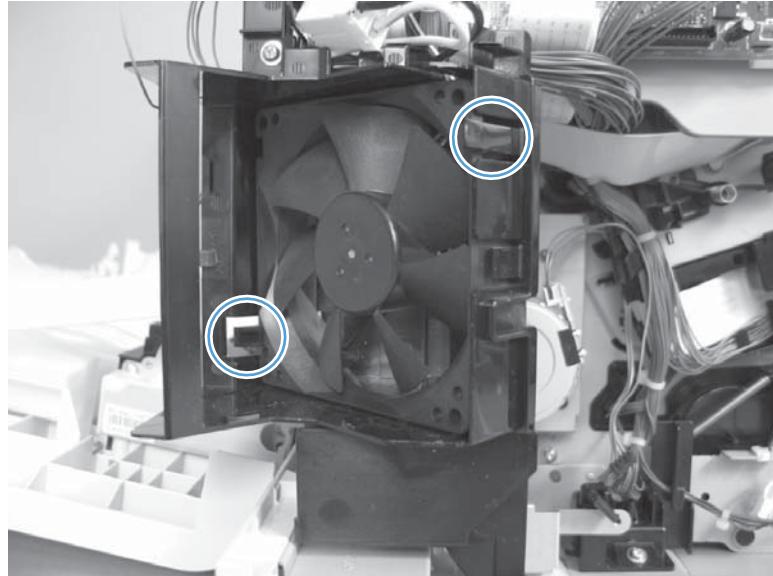

Power-supply fan (M680)


Before proceeding, remove the following assemblies

- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder (M680). See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly (M680). See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Right-rear cover. See [Right-rear cover on page 146](#).

Remove the power-supply fan (M680)


1. Release the fan cable from the DC controller (callout 1), and then release the wire harness from one retainer (callout 2).

Figure 1-299 Remove the power-supply fan (M680; 1 of 3)

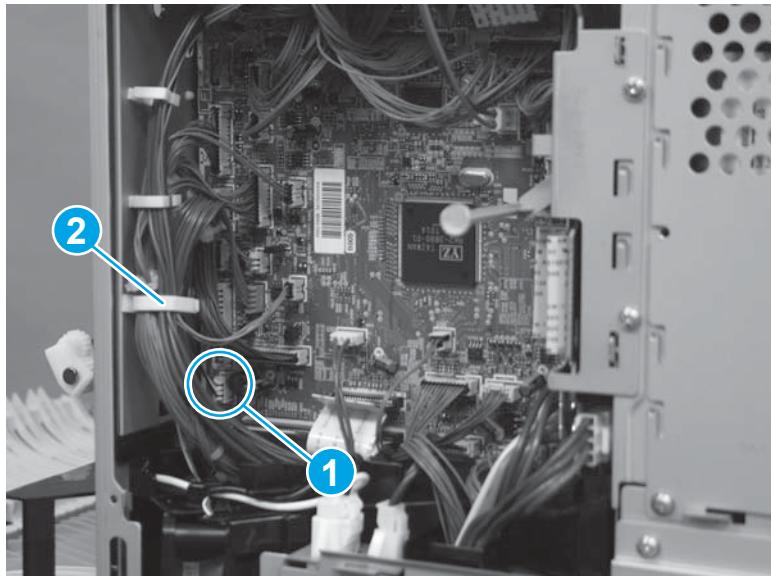

2. Release two tabs.


Figure 1-300 Remove the power-supply fan (M680; 2 of 3)

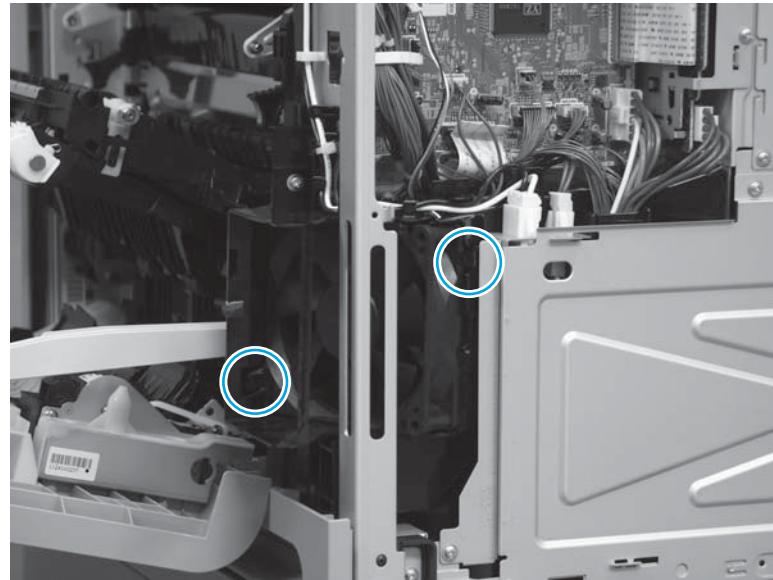

3. Remove the fan from the fan duct.

 **Reinstallation tip** When the fan is reinstalled, the air must flow into the product. Check the arrows embossed on the fan frame that indicate air flow direction.

Figure 1-301 Remove the power-supply fan (M680; 3 of 3)

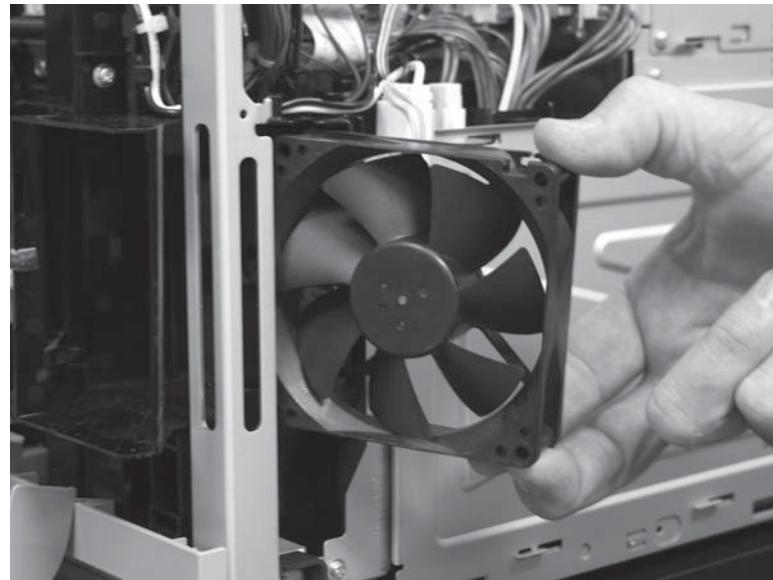

Interconnect board (ICB) (M651)

Before proceeding, remove the following assemblies

- Formatter PCA. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).



NOTE: This assembly is also called the inner connecting PCA assembly (M651).

Remove the interconnect board (M651)




WARNING! Do **not** remove the ICB from a product and then install it into a **different** product. Failure to follow this warning will result in severe damage to that product and cause it to be unusable. HP recommends that if the ICB is removed and replaced, the discarded ICB should be destroyed so that it can not accidentally be installed in a different product.



CAUTION:  ESD-sensitive assembly.


1. Disconnect two connectors (callout 1), one USB connector (callout 2), and then remove two screws (callout 3).

Figure 1-302 Remove the interconnect board (M651; 1 of 2)

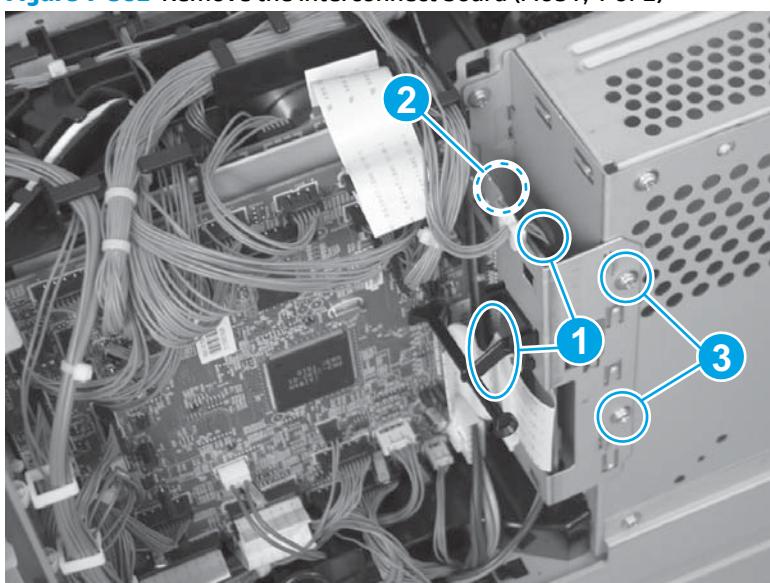

2. Carefully rotate and slide the ICB up and away from the chassis, disconnect one connector, and then remove the ICB.

Figure 1-303 Remove the interconnect board (M651; 2 of 2)

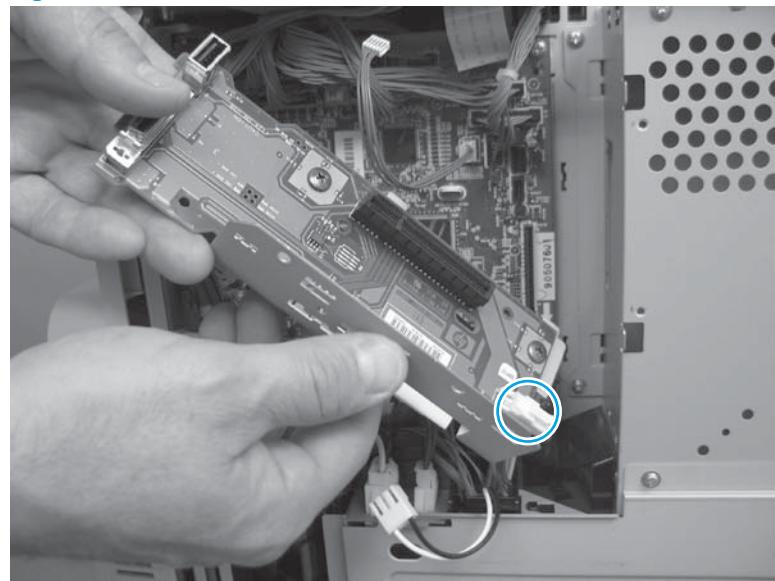

Interconnect board (ICB) (M680)

Before proceeding, remove the following assemblies

- Formatter. See [Formatter PCA on page 9](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).



NOTE: This assembly is also called the inner connecting PCA assembly (M680).

Remove the ICB (M680)




WARNING! Do not remove the ICB from a product and then install it into a **different** product. Failure to follow this warning will result in severe damage to that product and cause it to be unusable. HP recommends that if the ICB is removed and replaced, the discarded ICB should be destroyed so that it can not accidentally be installed in a different product.



CAUTION:  ESD-sensitive assembly.


1. Remove three screws (callout 1), disconnect one FFC (callout 2), and remove the small cover (callout 3).

Figure 1-304 Remove the ICB (M680; 1 of 2)

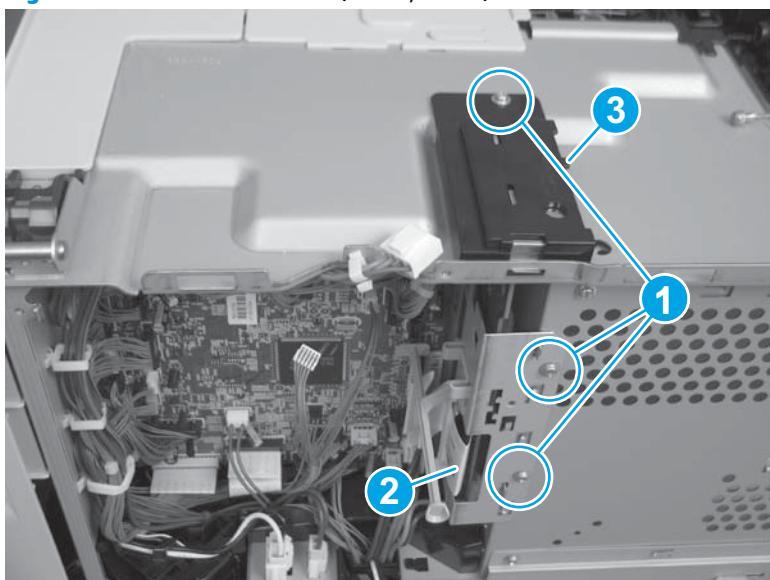

2. Carefully rotate and slide the ICB up and away from the chassis, disconnect one connector, and then remove the ICB.

Figure 1-305 Remove the ICB (M680; 2 of 2)

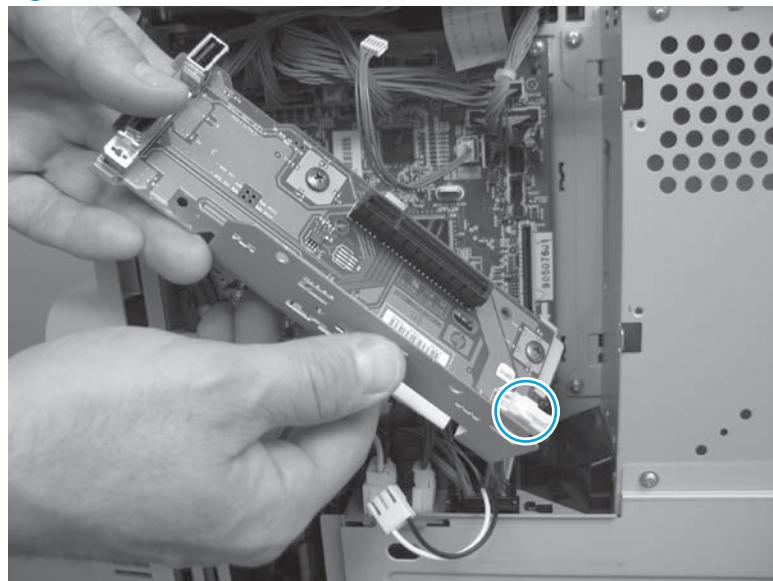

DC controller PCA only

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).



NOTE: This assembly is also called the DC controller PCA assembly.

Remove the DC controller PCA only



CAUTION: ESD-sensitive assembly.



NOTE: Use the following procedure to replace **only** the DC controller PCA. To access assemblies behind the DC controller, remove the PCA and the sheet-metal backing tray. See [DC controller PCA and tray on page 204](#).


▲ Disconnect all the connectors. Remove four screws and then remove the DC controller PCA



Reinstallation tip M651: The connector locations J101, J102, J106, and J154 are not used.

M680: The connector locations J101 and J102 are not used.

Figure 1-306 Remove the DC controller PCA only

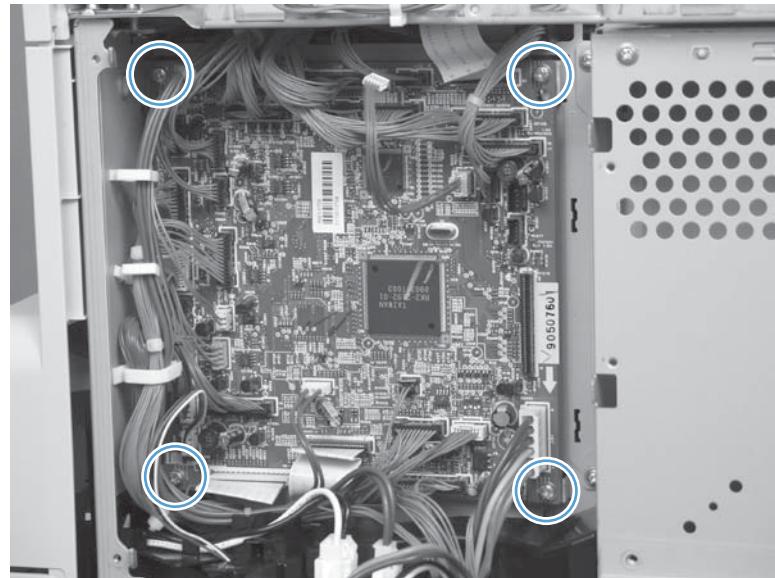

Low-voltage power supply (LVPS)

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).



NOTE: This assembly is also called the low-voltage power supply PCA assembly.


Remove the low-voltage power supply



CAUTION: ESD-sensitive assembly.


- Remove four screws, and then slide the sheet-metal plate to the left to remove it.

Figure 1-307 Remove the low-voltage power supply (1 of 8)

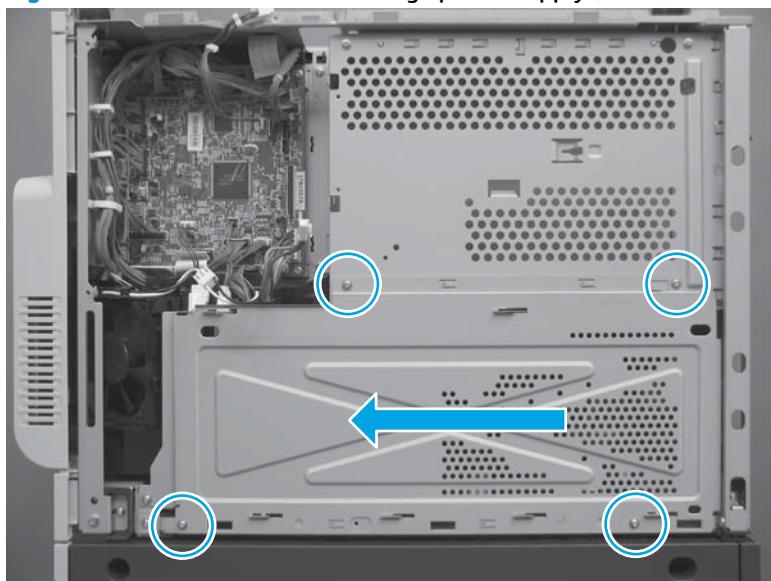


- 2.** Disconnect five connectors, and then release the wire harnesses from the guides as necessary.

Figure 1-308 Remove the low-voltage power supply (2 of 8)

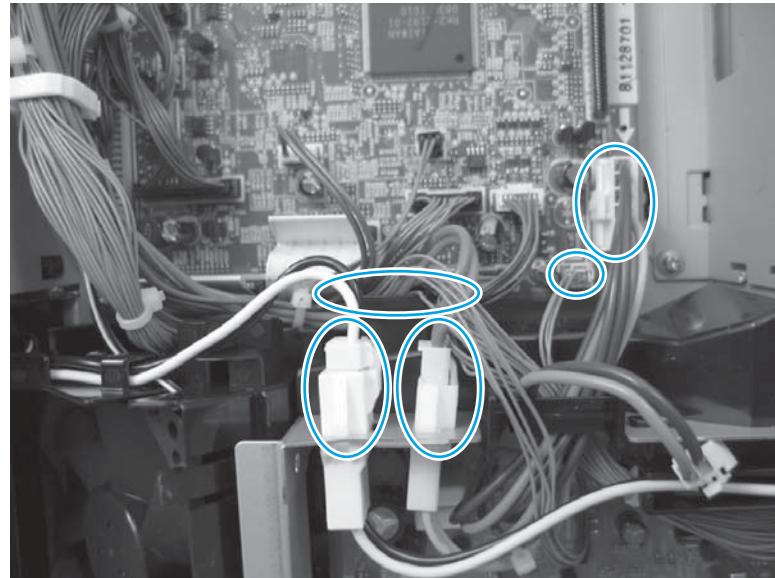


- 3.** Remove three screws.

Figure 1-309 Remove the low-voltage power supply (4 of 8)

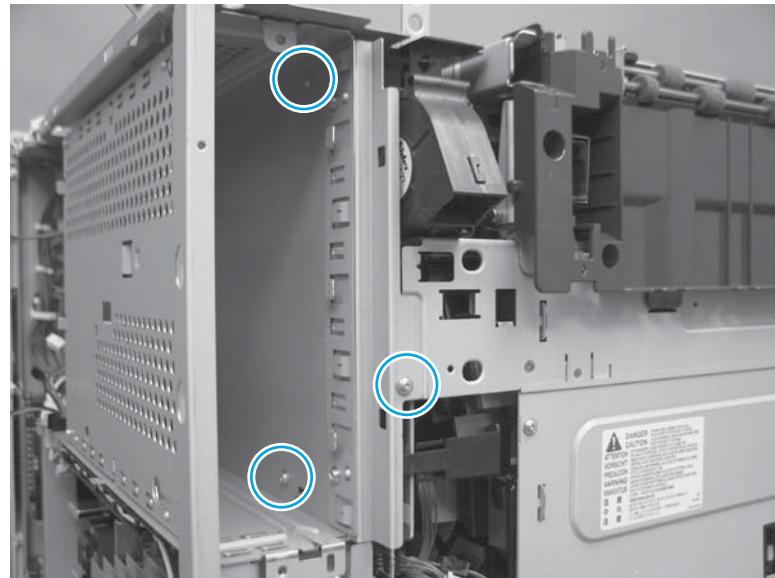


4. Remove three screws.

Figure 1-310 Remove the low-voltage power supply (5 of 8)

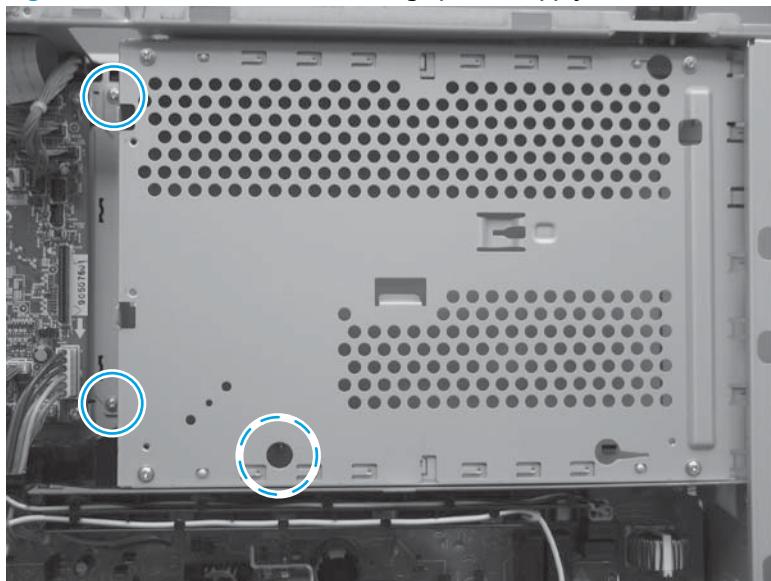


5. Slide the end of the formatter cage away from the product (callout 1) and the slide the cage out of the product (callout 2).

Figure 1-311 Remove the low-voltage power supply (6 of 8)

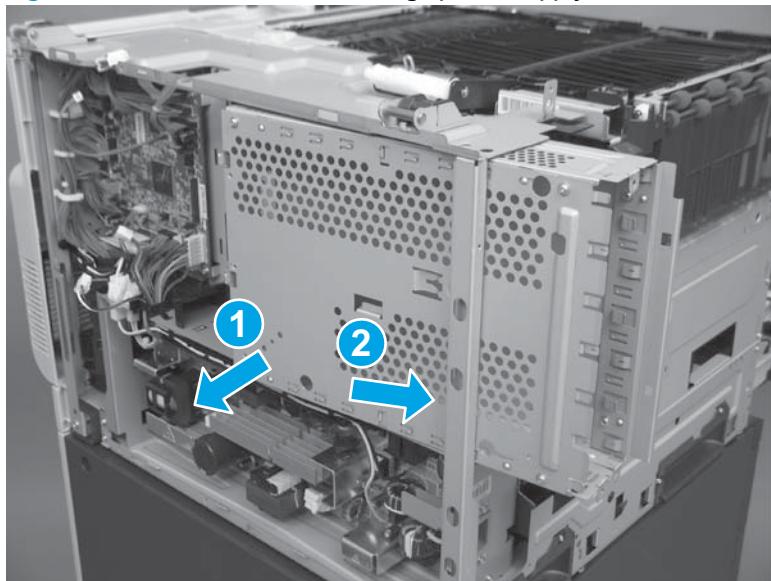


6. Remove two screws.

Figure 1-312 Remove the low-voltage power supply (7 of 8)

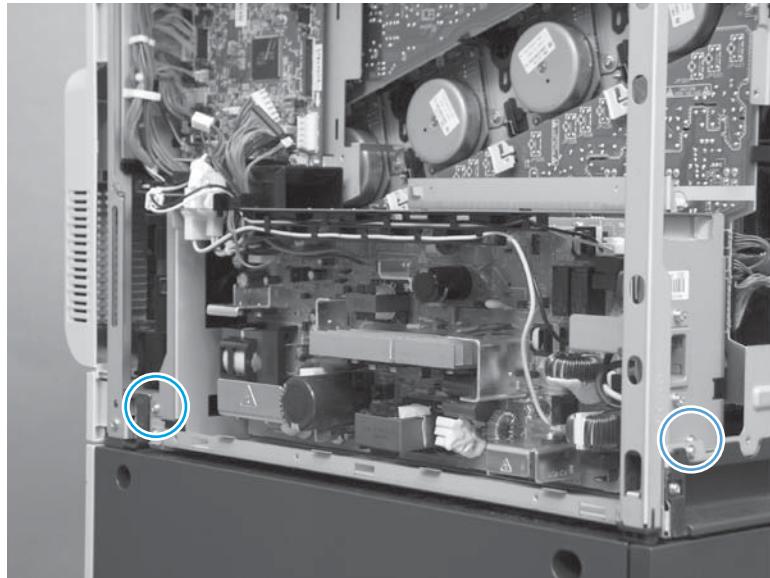

7. Slide and then lift the end of low-voltage power supply until it is free of the product. Remove the low-voltage power supply.

Figure 1-313 Remove the low-voltage power supply (8 of 8)

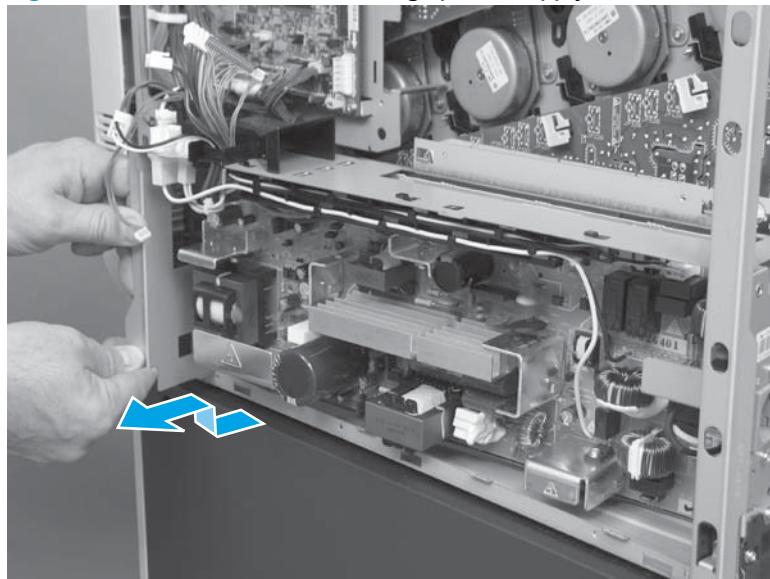

DC controller PCA and tray

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).

Remove the DC controller PCA and tray



CAUTION: ESD-sensitive assembly.

- Disconnect all the connectors.



Reinstallation tip M651: The connector locations J101, J102, J106, and J154 are not used.


M680: The connector locations J101 and J102 are not used.

Figure 1-314 Remove the DC controller PCA and tray (1 of 3)




2. Remove two screws.

Figure 1-315 Remove the DC controller PCA and tray (2 of 3)

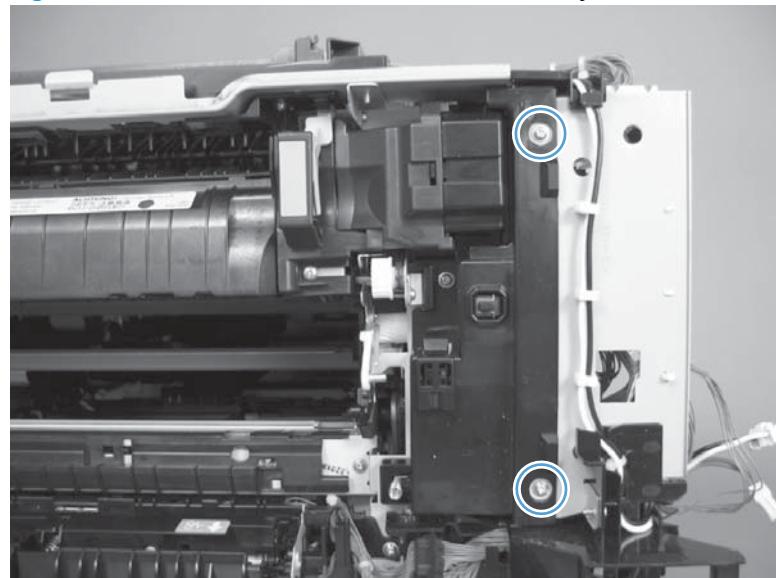

3. Disengage three tabs (two along the left edge of the PCA and one at the top-right corner of the PCA).

Figure 1-316 Remove the DC controller PCA and tray (3 of 3)

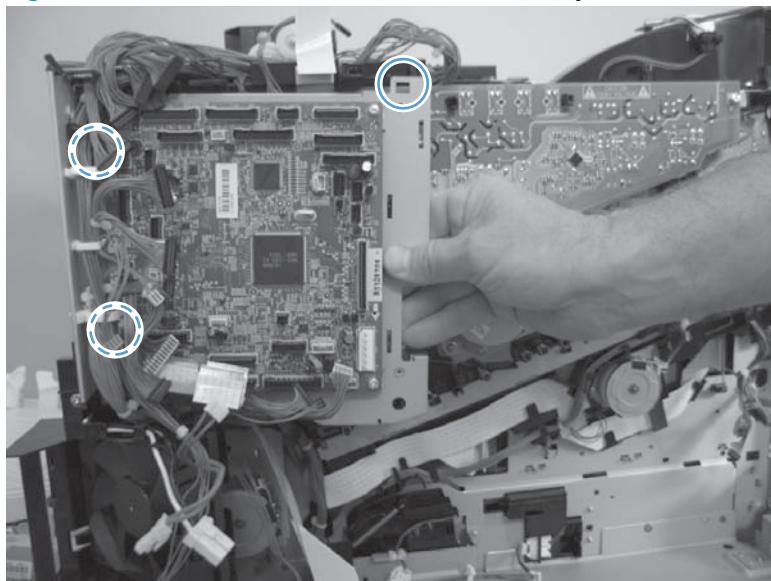

High-voltage power supply lower (HVPS-D)

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).



NOTE: This assembly is also called the high-voltage power supply PCA lower assembly.


Remove the high-voltage power supply lower



CAUTION: ESD-sensitive assembly.


1. Disconnect three connectors.

Figure 1-317 Remove the high-voltage power supply lower (1 of 7)

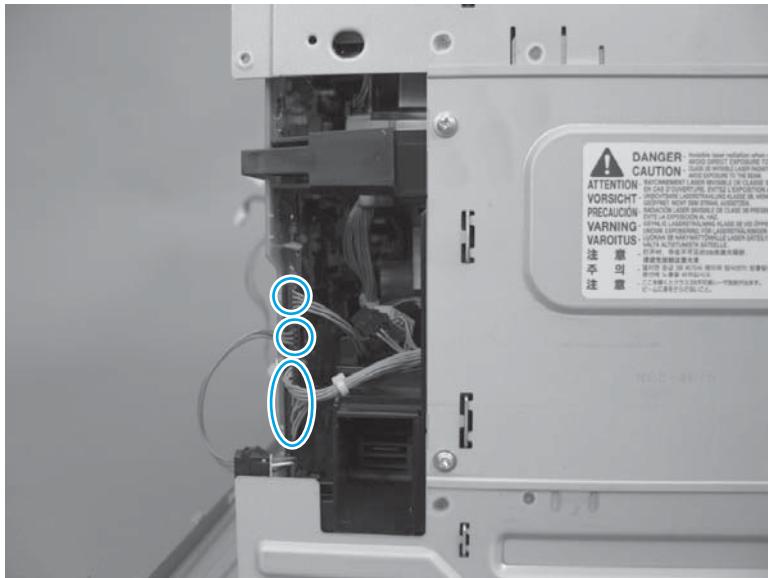

2. Remove three screws.

Figure 1-318 Remove the high-voltage power supply lower (2 of 7)

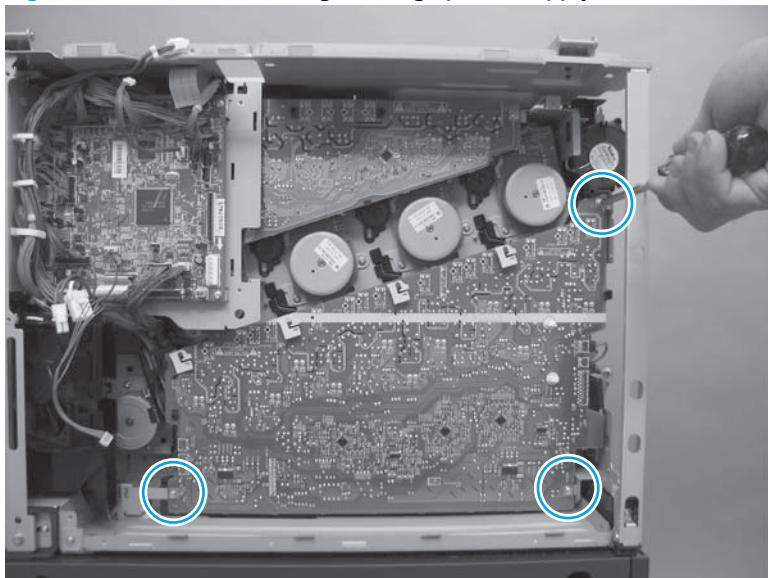

3. Release four locking clips.

 **NOTE:** Squeeze each locking clip to remove.

Figure 1-319 Remove the high-voltage power supply lower (3 of 7)



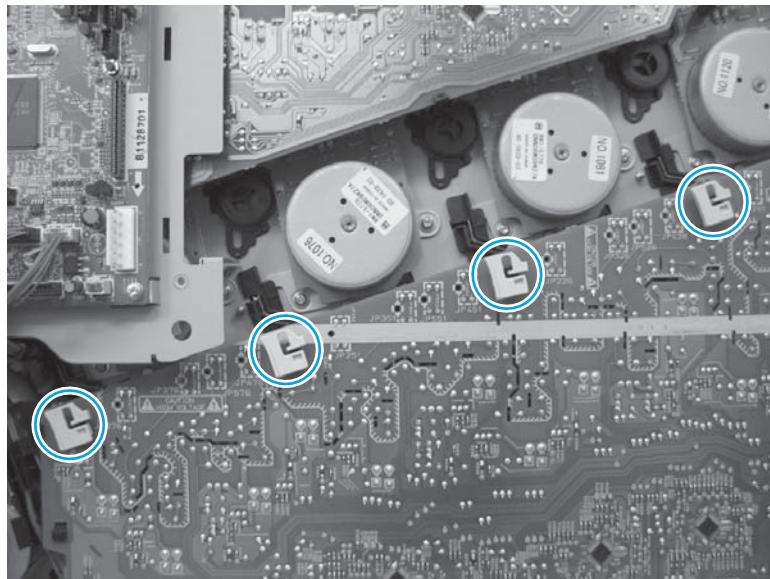


Figure 1-320 Remove the high-voltage power supply lower (4 of 7)

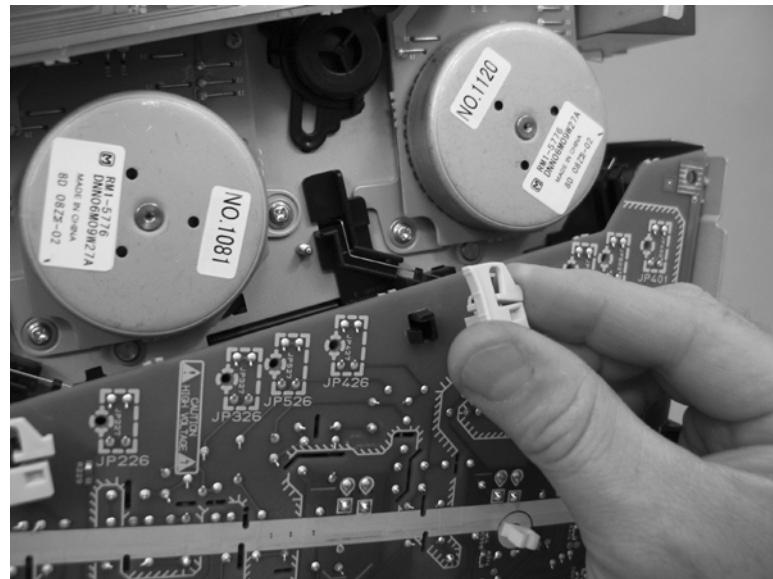

4. Release five tabs.


Figure 1-321 Remove the high-voltage power supply lower (5 of 7)

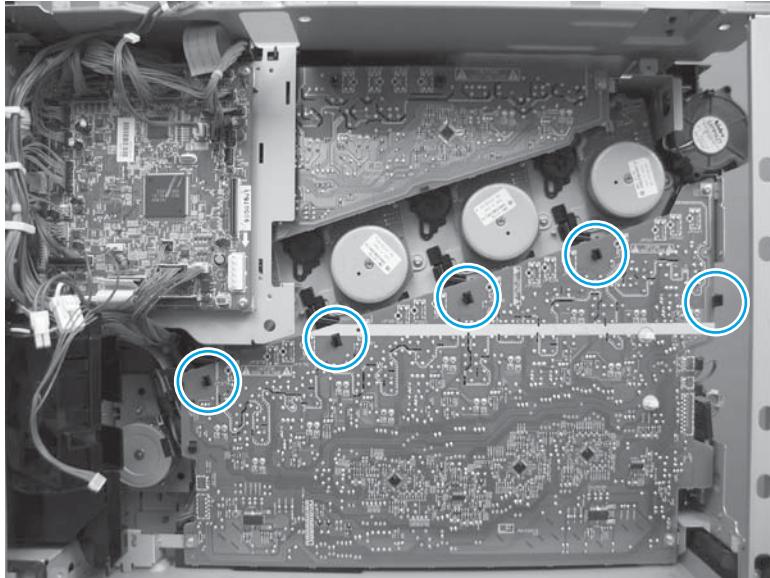

5. Rotate the top of the power supply away from the chassis, and then disconnect two connectors on the back of the power supply.


NOTE: Do not disconnect the FFC (callout 1). The FFC and the FFC wiring guide are supplied with the replacement assembly.

Figure 1-322 Remove the high-voltage power supply lower (6 of 7)

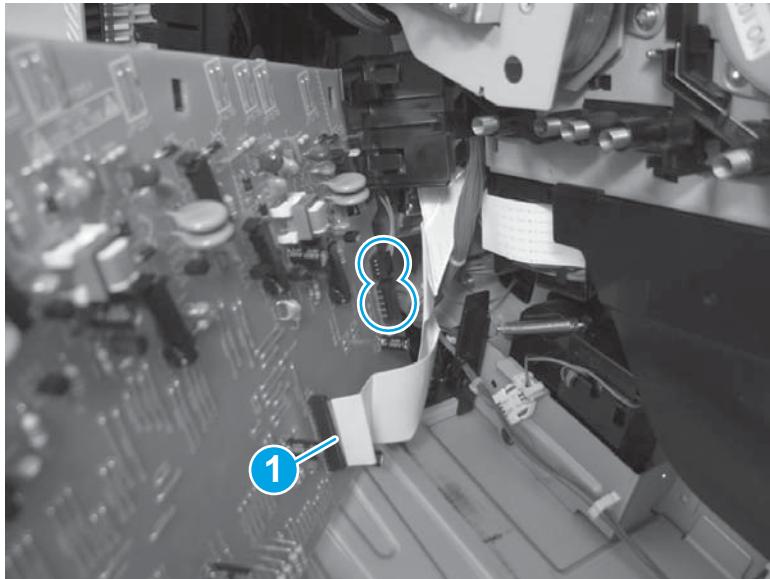

6. Disconnect one FFC (callout 1). Release **only** the wire harnesses from the guide (callout 2) and then remove the power supply.


Figure 1-323 Remove the high-voltage power supply lower (7 of 7)

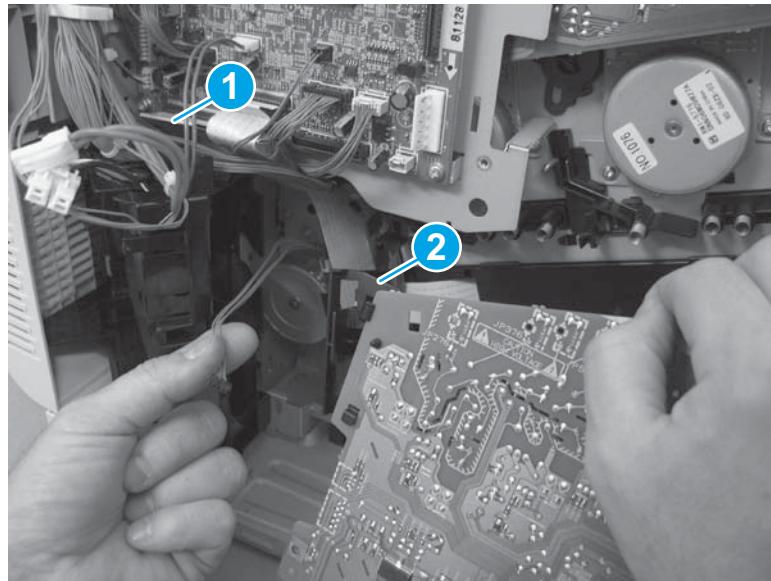

Reinstall the high-voltage power supply lower

When the power supply is reinstalled, look through the holes in the PCA and make sure that the high-voltage contact springs are correctly seated against the PCA.

Figure 1-324 Reinstall the high-voltage power supply lower

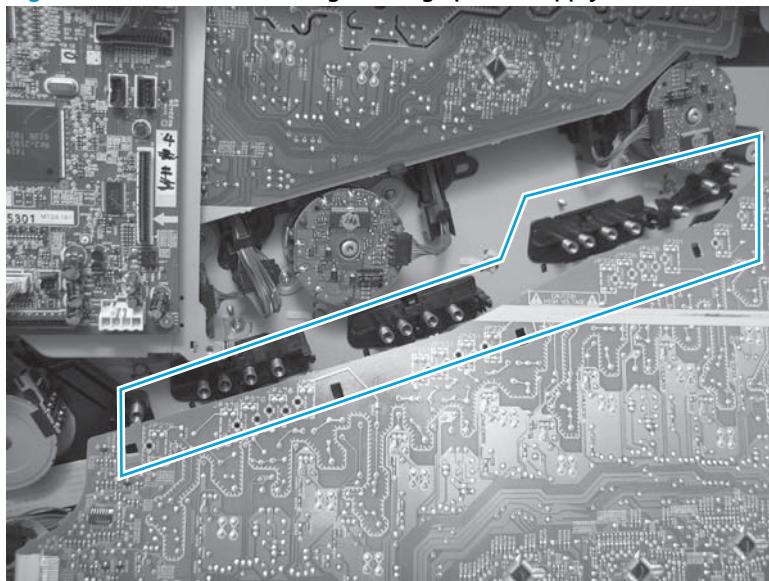

Developing-disengagement motor

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower (HVPS-D). See [High-voltage power supply lower \(HVPS-D\) on page 207](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower (HVPS-D). See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

Remove the developing-disengagement motor

- ▲ Remove two screws (callout 1), disconnect one connector (callout 2), and remove the motor.

Figure 1-325 Remove the developing-disengagement motor

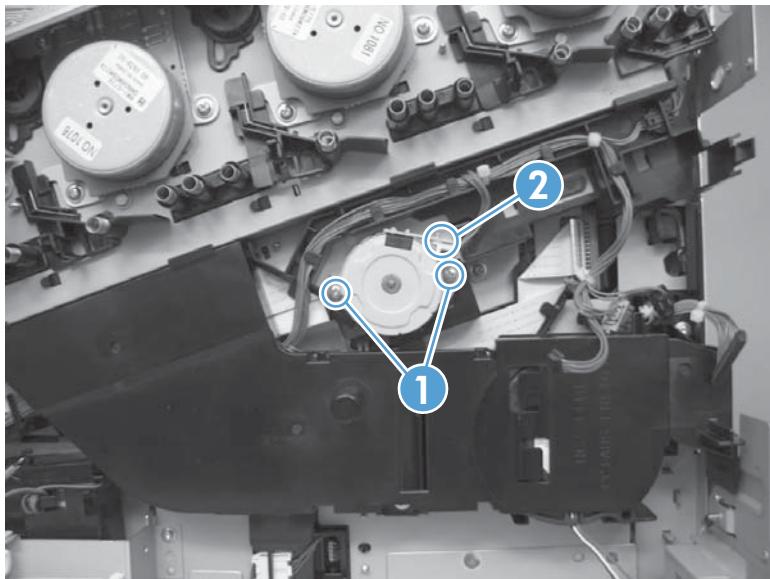

Exhaust fan and fan duct

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).




NOTE: This assembly is also called the cartridge duct assembly.

Remove the exhaust fan and fan duct


1. Remove two screws (callout 1), disconnect two connectors (callout 2), and then remove the exhaust fan and duct (callout 3) from the product.

Figure 1-326 Remove the exhaust fan and fan duct (1 of 3)

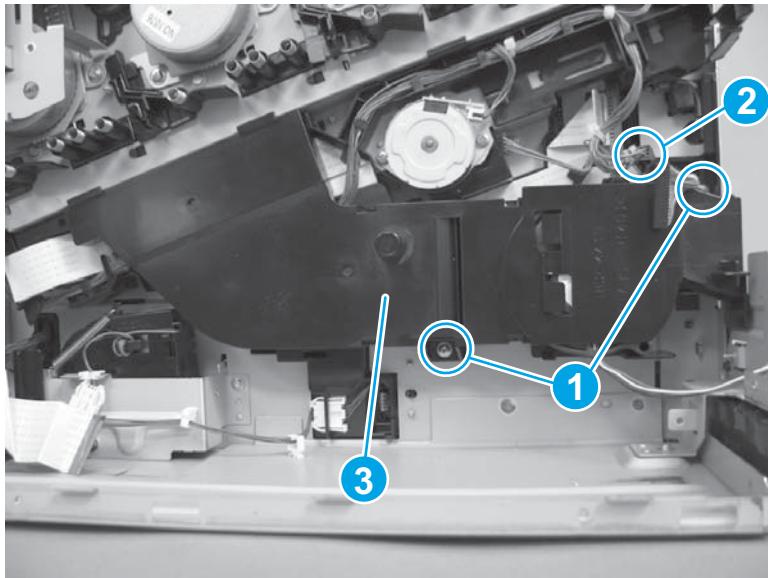


2. Release five tabs (callout 1) and remove the cover (callout 2).

Figure 1-327 Remove the exhaust fan and fan duct (2 of 3)

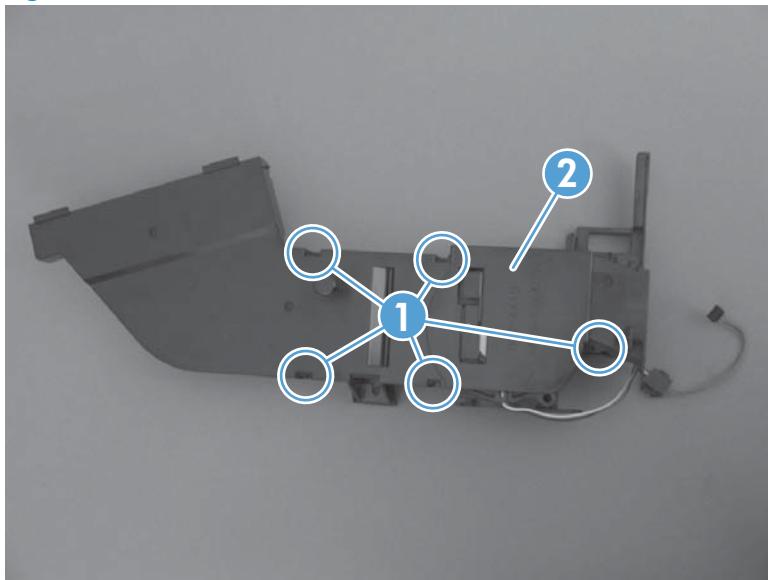

3. Disconnect one connector, and then remove the fan from the duct.


Figure 1-328 Remove the exhaust fan and fan duct (3 of 3)

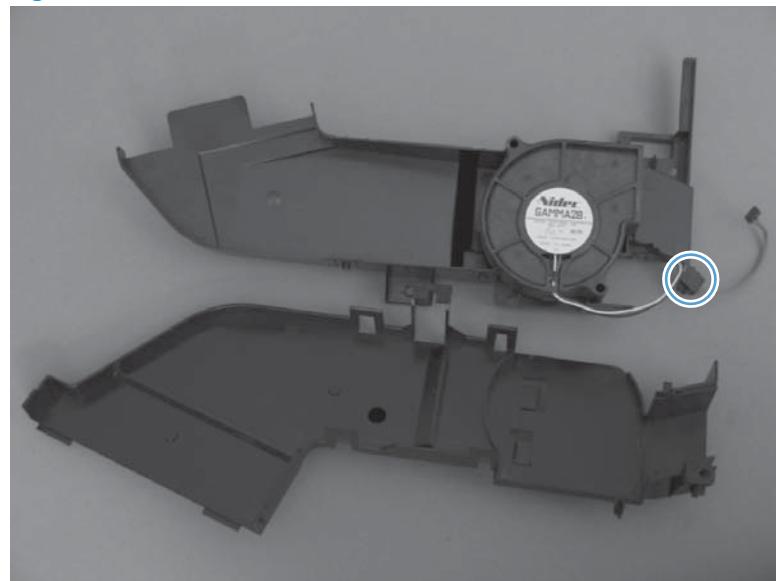

Reinstall the exhaust fan and fan duct

Be sure that the ferrite (callout 1) is correctly aligned in the FFC cable guide before attempting to reinstall the exhaust fan and duct.

Figure 1-329 Reinstall the exhaust fan and fan duct

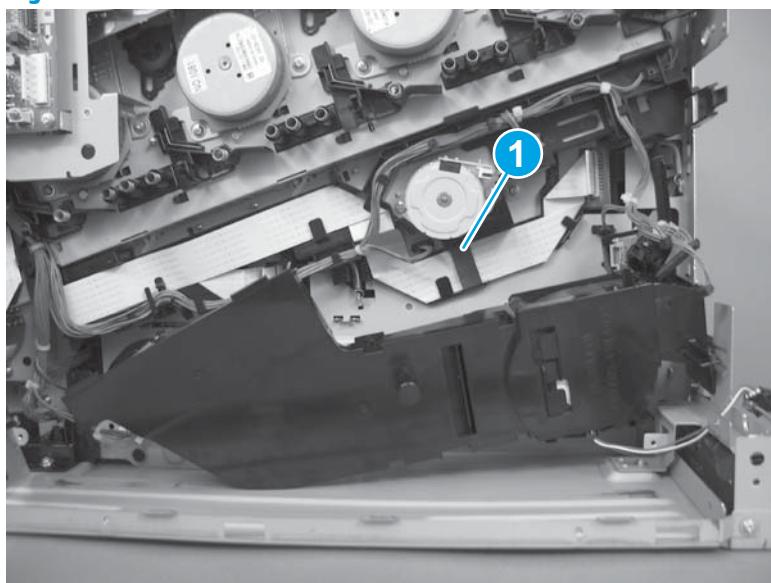

Pickup motor

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).

Remove the pickup motor

Remove two screws (callout 1), disconnect one connector (callout 2), and then remove the motor (callout 3).

Figure 1-330 Remove the pickup motor

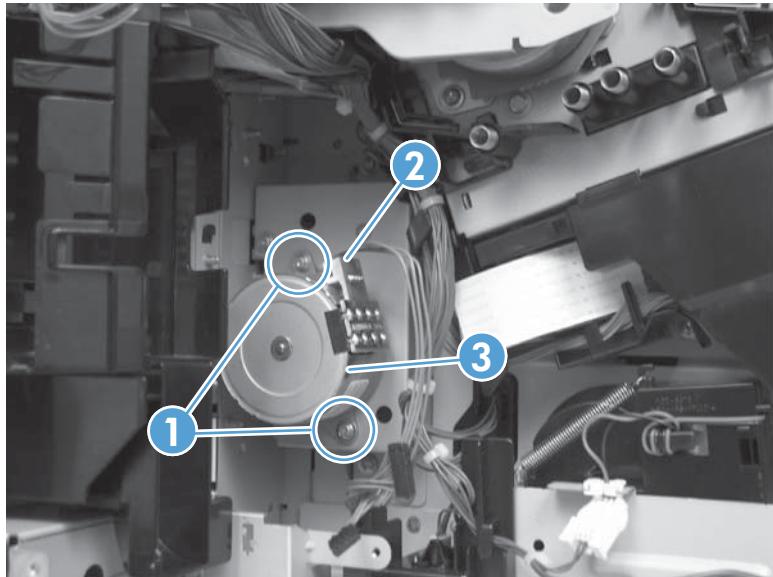

Lifter-drive assembly

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).


Remove the lifter-drive assembly

1. Remove one screw (callout 1), and then move the accessory-tray connector (callout 2) to access the screw behind it.




Reinstallation tip If the product is installed on the optional paper feeder, slightly separate the product and the feeder assembly to install this connector. Open the right door on the feeder. Use the blue handle to release the product-accessory lock, and then lift up on the edge of the product to create a slight gap between the product and the accessory.

Figure 1-331 Remove the lifter-drive assembly (1 of 3)

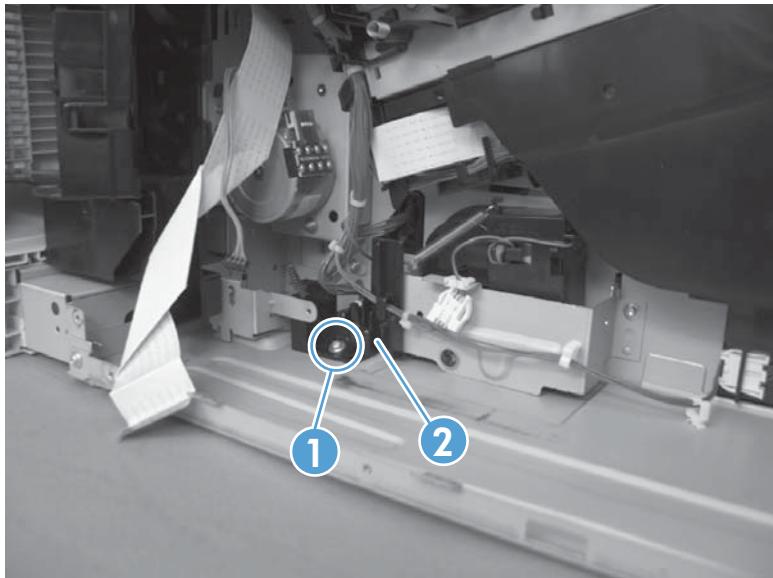

2. Disconnect one connector (callout 1), and then remove two screws (callout 2).

Figure 1-332 Remove the lifter-drive assembly (2 of 3)

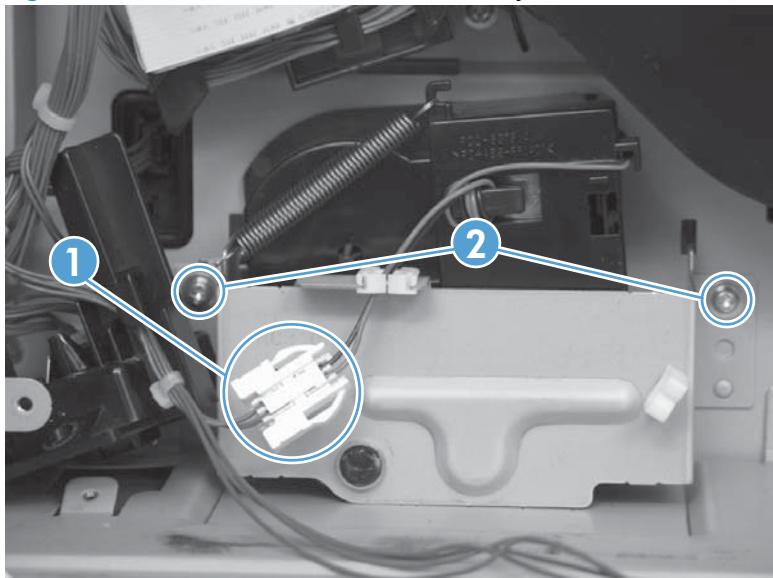


3. Remove the lifter assembly from the product.

⚠ CAUTION: The spring on the assembly is not captive. Do not lose the spring when the assembly is removed.

💡 Reinstallation tip Make sure that the lifter assembly moves up and down easily after reinstalling.

Figure 1-333 Remove the lifter-drive assembly (3 of 3)

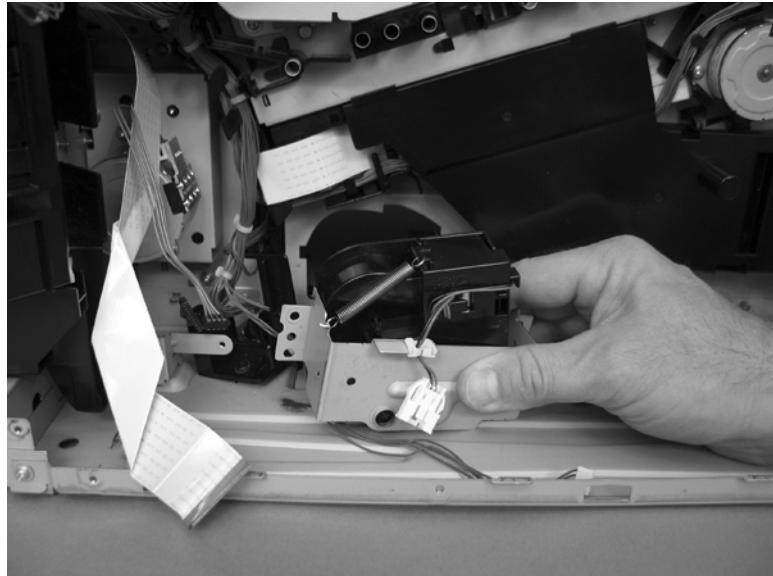

Lifter base assembly

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

Remove the lifter base assembly

1. Disconnect one connector.

Figure 1-334 Remove the lifter base assembly (1 of 2)

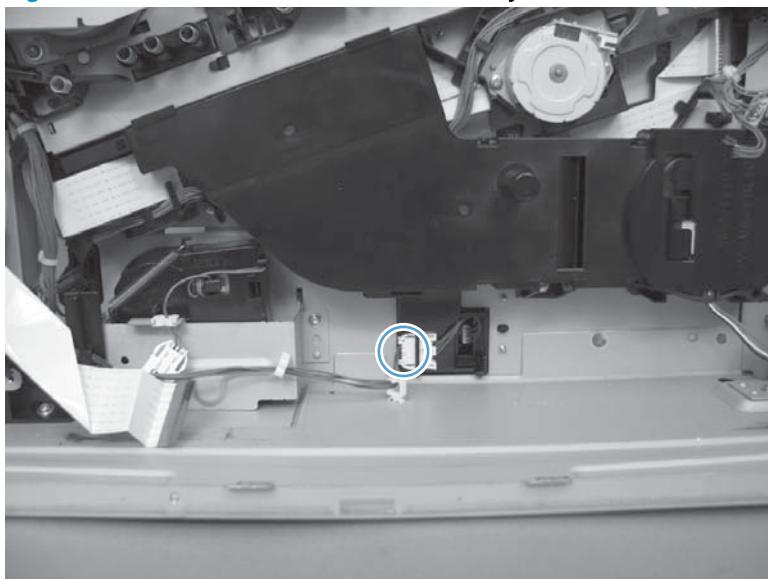


- From inside the Tray 2 cavity, remove four screws, and then remove the lifter base assembly.

 **NOTE:** Pull the assembly straight from the product without tipping to prevent the spring from falling from the assembly.

 **Reinstallation tip** If the tray does not completely close when reinstalled, push on the lever in the opening (callout 1) with a flat blade screwdriver to reset the spring in the closing mechanism.

Figure 1-335 Remove the lifter base assembly (2 of 2)

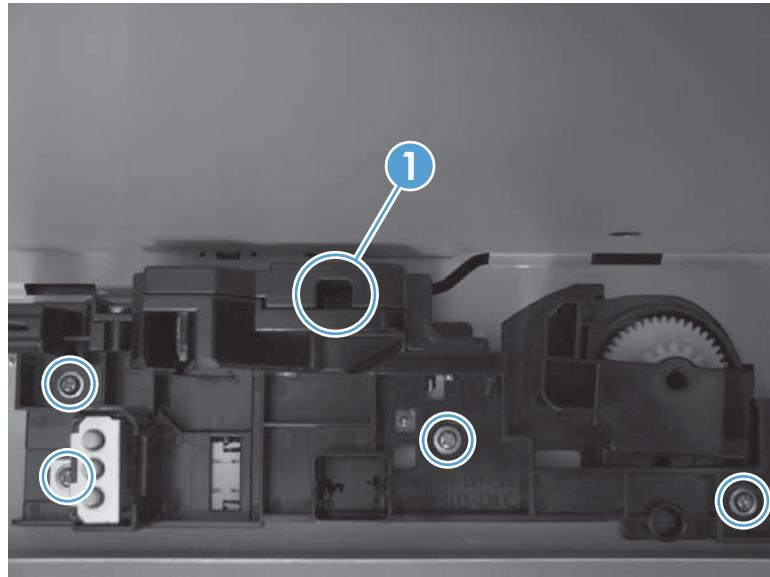

Reinstall the lifter base assembly

If the spring falls from the lifter base assembly, reinstall it in the lifter before reinstalling the lifter base assembly.


1. Make sure the black rubber end is seated on the spring.

Figure 1-336 Reinstall the lifter base assembly (1 of 2)



2. Place the spring in the lifter before installing the assembly on the product.

Figure 1-337 Reinstall the lifter base assembly (2 of 2)

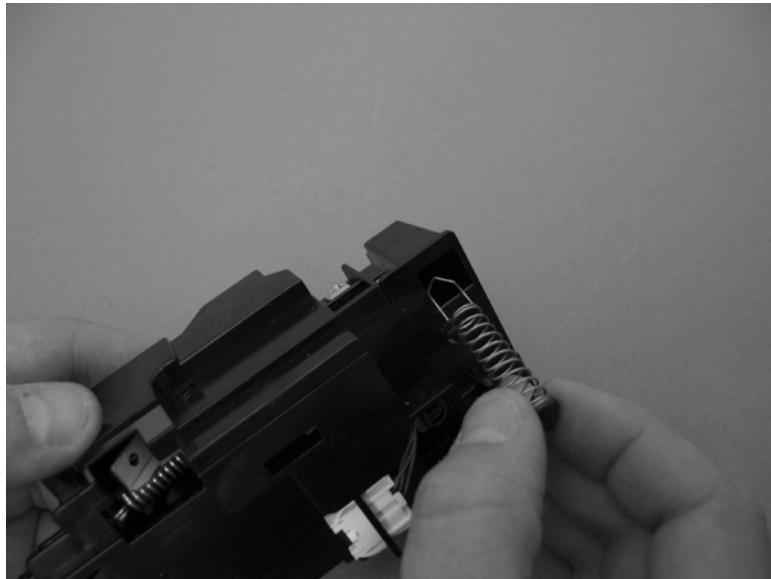

Paper-pickup drive assembly

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Power-supply fan. See [Power-supply fan \(M651\) on page 190](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Power-supply fan. See [Power-supply fan \(M680\) on page 192](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).


Remove the paper-pickup drive assembly



NOTE: To remove the pickup motor only, see [Pickup motor on page 216](#).


1. Release one tab (callout 1), and then remove the power-supply fan (callout 2).

Figure 1-338 Remove the paper-pickup drive assembly (1 of 3)

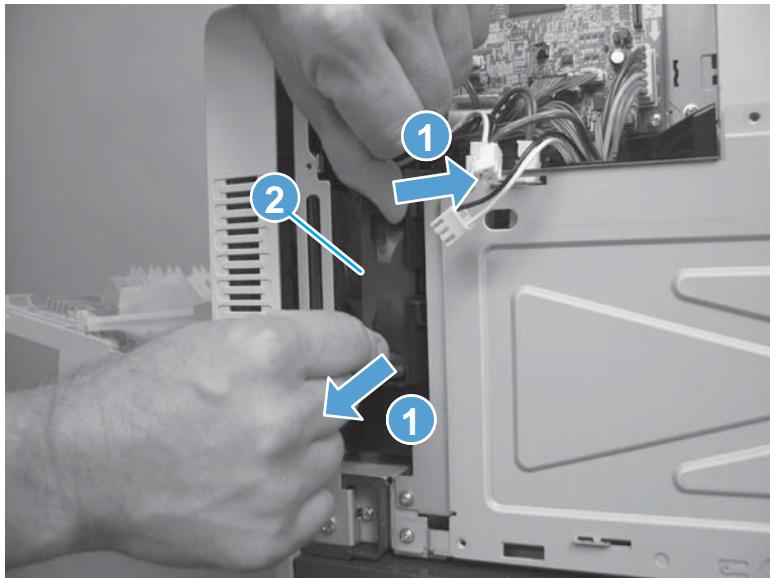

2. Remove two screws (callout 1), disconnect one connector (callout 2), and then remove the pickup motor (callout 3).


Figure 1-339 Remove the paper-pickup drive assembly (2 of 3)

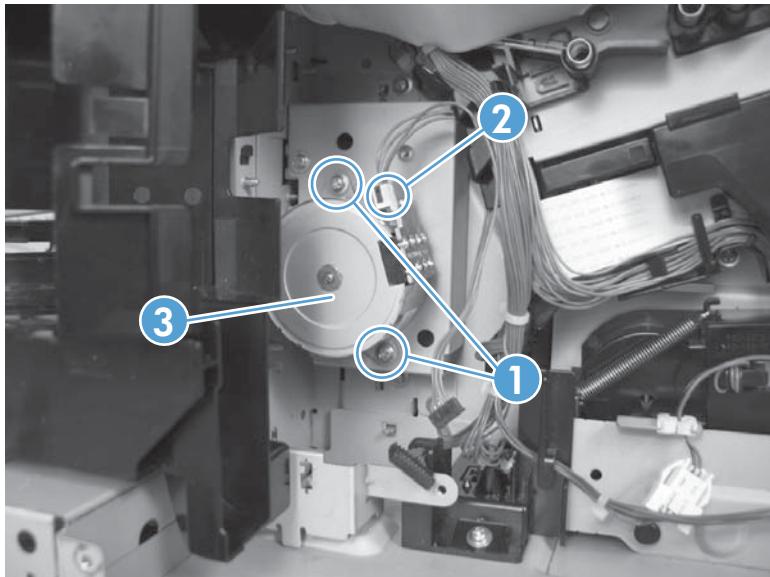

3. Remove three screws, and then remove the paper-pickup drive assembly.

 **NOTE:** The cams on the main-drive assembly can prevent the paper-pickup drive assembly from releasing from the product. If the assembly cannot be removed, remove the DC controller and tray to provide additional space. See [DC controller PCA and tray on page 204](#). The wire guide from the main-drive assembly might also need to be removed. See [Main-drive assembly on page 252](#).

Figure 1-340 Remove the paper-pickup drive assembly (3 of 3)

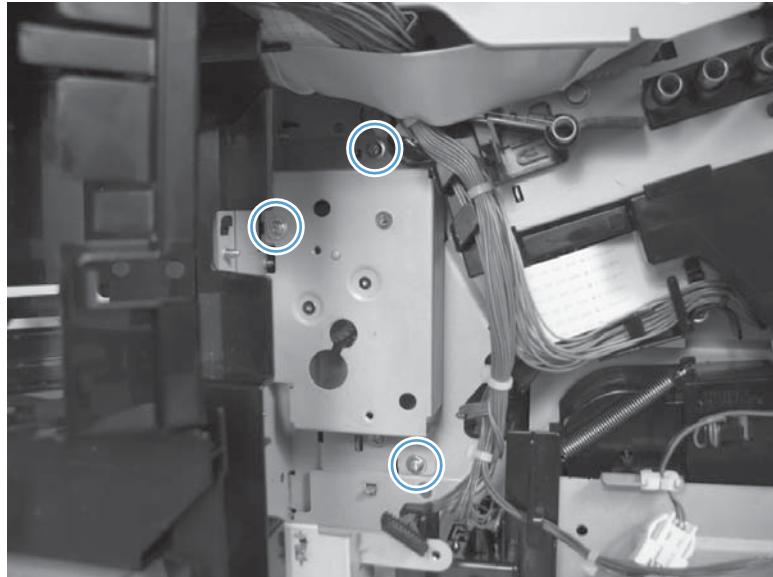

Paper-pickup assembly

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Secondary transfer assembly. See [Secondary transfer assembly on page 152](#).
- Registration assembly. See [Registration assembly on page 161](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

M680 models


- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Secondary transfer assembly. See [Secondary transfer assembly on page 152](#).
- Registration assembly. See [Registration assembly on page 161](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).

Remove the paper-pickup assembly

 **NOTE:** This task requires removing the three feed guides on the right side of the product before removing the paper-pickup assembly.


1. Remove one screw (callout 1), and then disconnect two connectors (callout 2).

Figure 1-341 Remove the paper-pickup assembly (1 of 11)

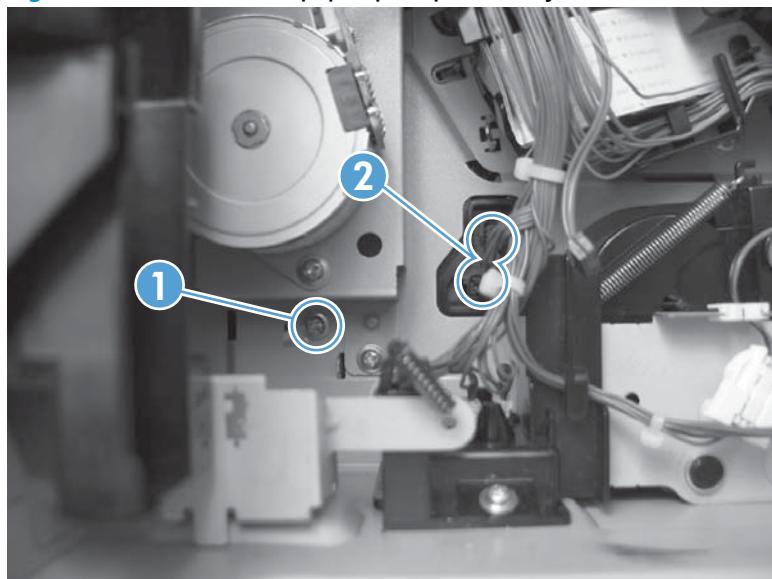

2. From the front of the product, remove one screw (callout 1), and then remove one tray rail (callout 2).

Figure 1-342 Remove the paper-pickup assembly (2 of 11)

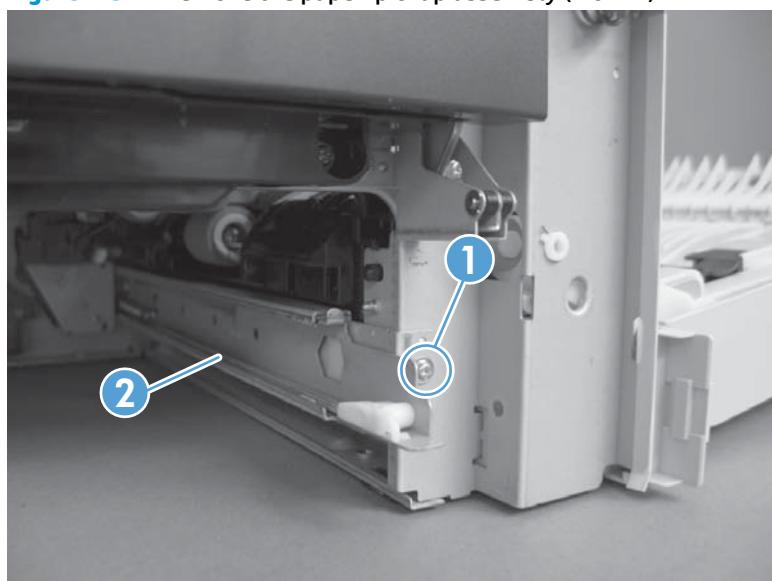


3. From the right side of the product, remove two screws (callout 1) and one cover (callout 2).

Figure 1-343 Remove the paper-pickup assembly (3 of 11)




4. Close the right-door assembly. Push in and then push up on the stopper to release.

Figure 1-344 Remove the paper-pickup assembly (4 of 11)

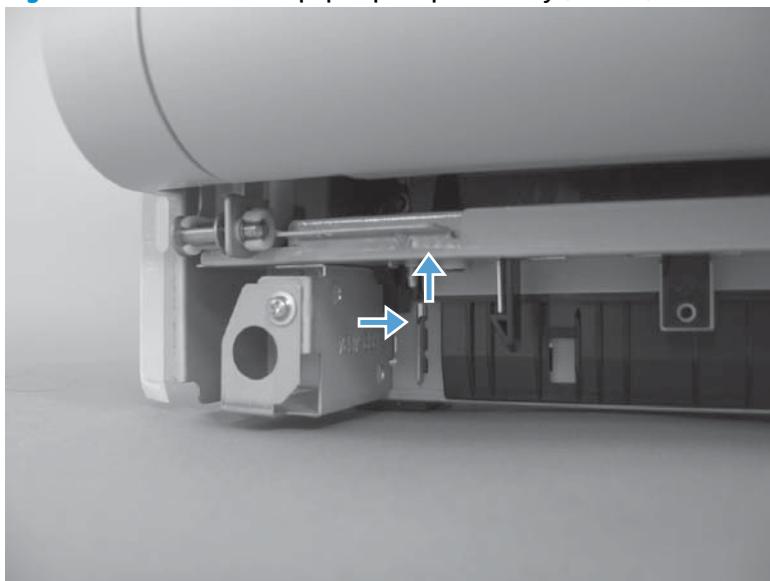


5. Open the right-door assembly. Lift the two link arms (callout 1) to release from the product, and then remove the paper-guide (callout 2).

Figure 1-345 Remove the paper-pickup assembly (5 of 11)

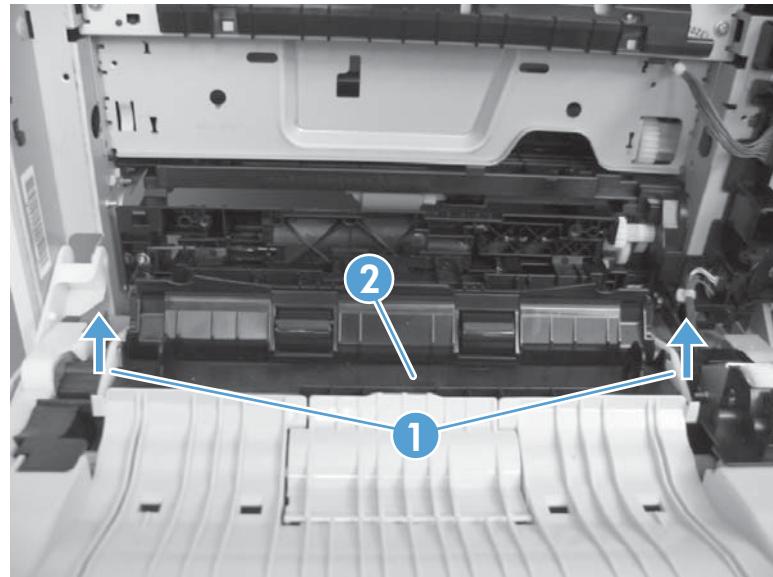

6. Close the right-door assembly. Push the two tabs toward each other, and then push up to release the feed guide.

Figure 1-346 Remove the paper-pickup assembly (6 of 11)

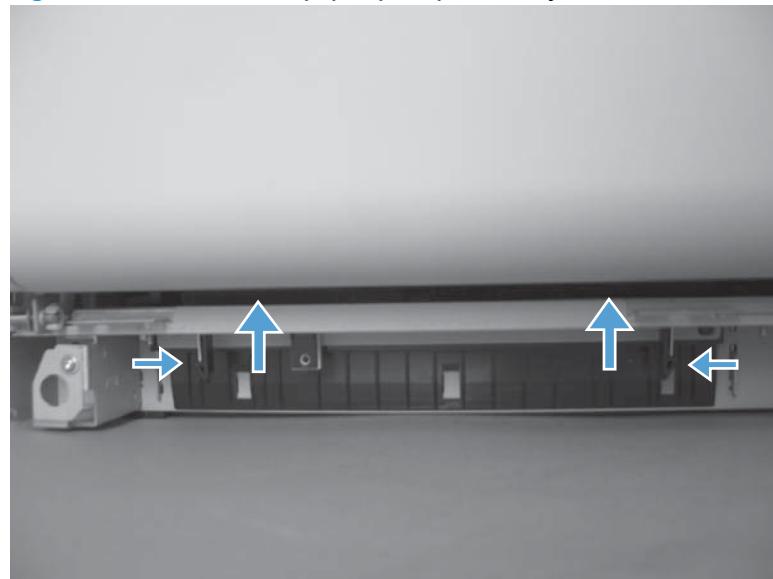


7. Open the right-door assembly, and then remove the feed guide.

Figure 1-347 Remove the paper-pickup assembly (7 of 11)




8. Remove two screws (callout 1), and then remove two brackets (callout 2).

Figure 1-348 Remove the paper-pickup assembly (8 of 11)

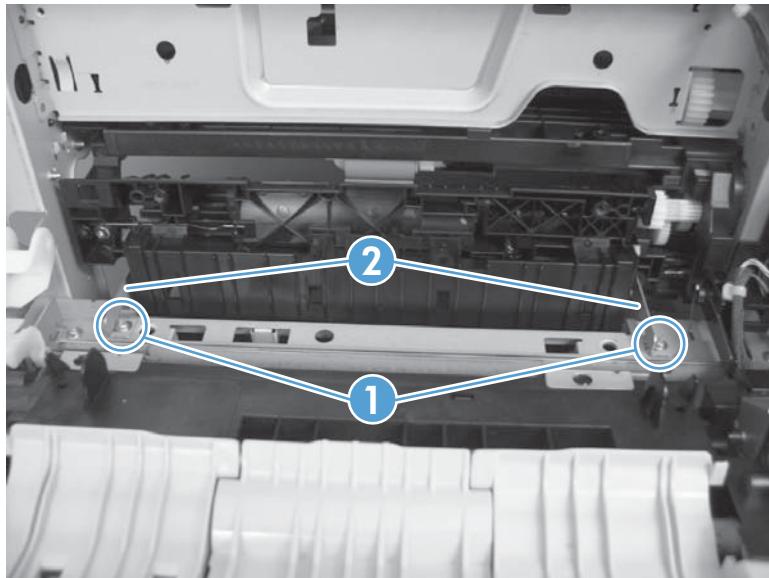


9. Release one tab (callout 1), and then slide the feed guide (callout 2) toward the front of the product to remove.

Figure 1-349 Remove the paper-pickup assembly (9 of 11)

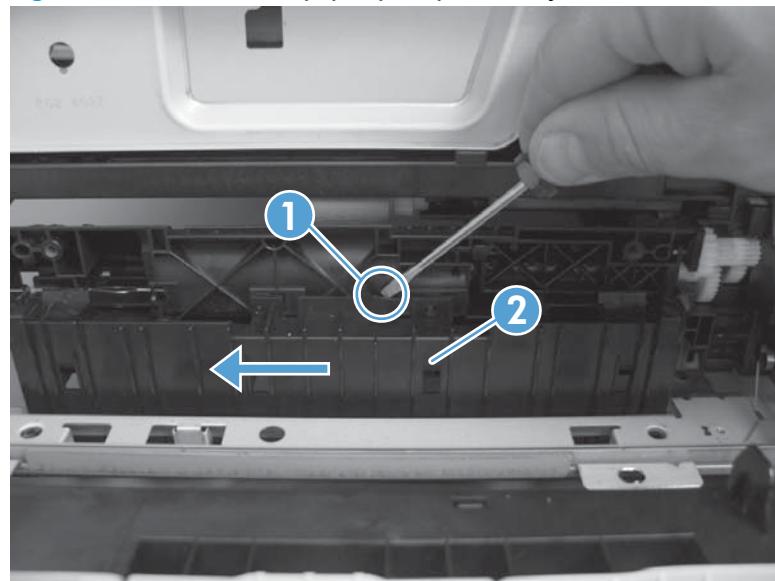

10. Remove one screw.

Figure 1-350 Remove the paper-pickup assembly (10 of 11)

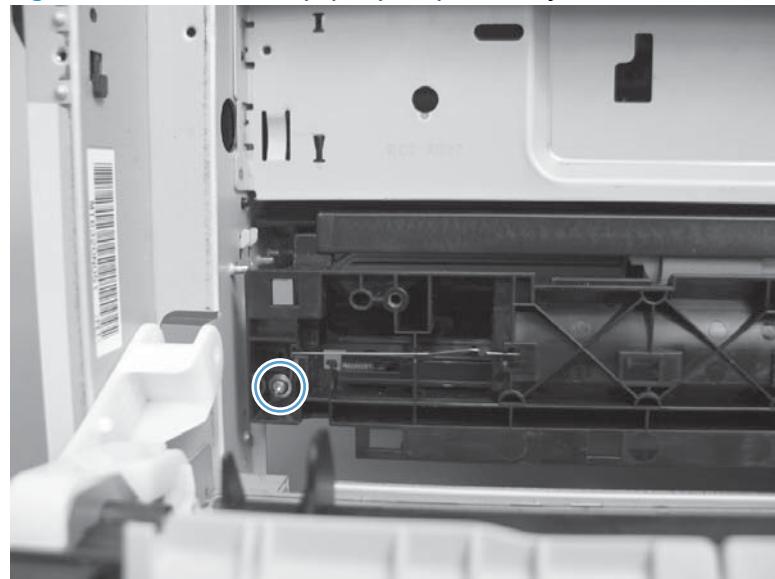

11. Remove the paper-pickup assembly.

Figure 1-351 Remove the paper-pickup assembly (11 of 11)



Laser/scanner assembly (Y/M)

Before proceeding, remove the following assemblies

M651 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Cartridge fan and environmental sensor. See [Cartridge fan and environmental sensor on page 174](#).
- Residual toner full sensor. See [Residual toner full sensor on page 178](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).

M680 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Cartridge fan and environmental sensor. See [Cartridge fan and environmental sensor on page 174](#).
- Residual toner full sensor. See [Residual toner full sensor on page 178](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).

Remove the laser/scanner assembly (Y/M)


 **NOTE:** The product has two laser/scanner assemblies. The yellow/magenta laser/scanner is removed first, and it is to the left of the cyan/black laser/scanner.

 **Reinstallation tip** After installing a new laser/scanner assembly, be sure to calibrate the product.

1. Release one spring.

 **CAUTION:** The spring is not captive. Do not lose the spring when it is removed. Use a pair of needle-nose pliers to safely retain the spring when it is removed. Do not use a flat blade screwdriver to remove the spring; the spring could forcibly leave the product and cause personal injury.

Figure 1-352 Remove the laser/scanner assembly (Y/M; 1 of 5)

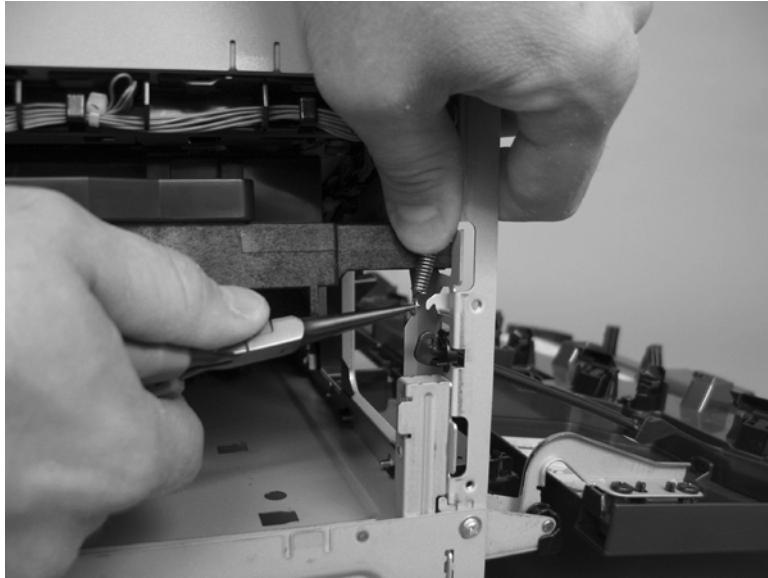

2. Disconnect one connector.

Figure 1-353 Remove the laser/scanner assembly (Y/M; 2 of 5)




3. Release one spring (callout 1), and then disconnect one FFC (callout 2).

⚠ CAUTION: The spring is not captive. Do not lose the spring when it is removed. Use a pair of needle-nose pliers to safely retain the spring when it is removed. Do not use a flat blade screwdriver to remove the spring; the spring could forcibly leave the product and cause person injury.

💡 Reinstallation tip When reinstalled, the ferrite (callout 3) must be correctly positioned on the wire guide (in the provided slots) so that the fan duct will fully seat in the product when it is reinstalled.

When the spring is reinstalled, make sure that the laser/scanner fits tightly up against the product chassis, and make sure that the FFC is fully seated in the connector. The locator tabs on the front and rear of the scanner must be firmly seated in the slots in the chassis.


Figure 1-354 Remove the laser/scanner assembly (Y/M; 3 of 5)

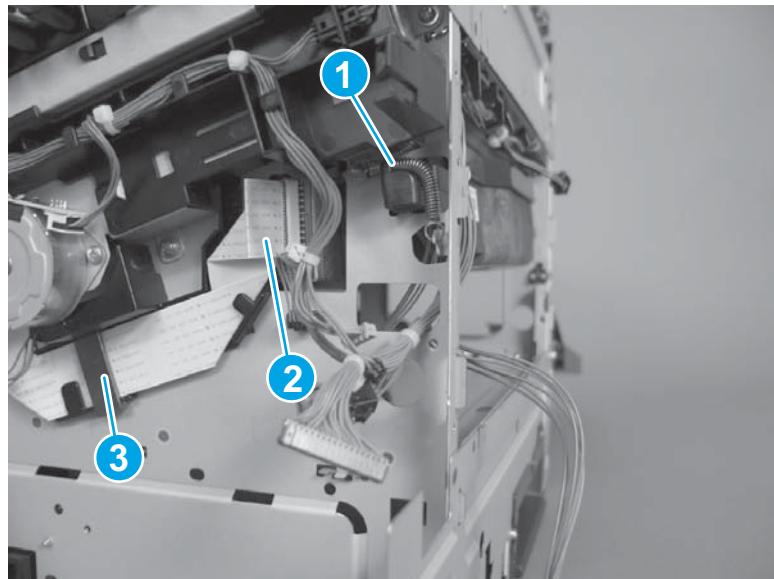

4. Rotate the front of the laser/scanner assembly down (callout 1), and then slide it toward the right (callout 2). Lower the left corner, and then rotate the left corner out of the product (callout 3).

Reinstallation tip When the scanner is reinstalled, make sure that the tab on the front of the laser/scanner is inserted in the alignment hole in the product chassis. See callout 1 in [Figure 1-356 Remove the laser/scanner assembly \(Y/M; 5 of 5\) on page 236](#)


Figure 1-355 Remove the laser/scanner assembly (Y/M; 4 of 5).

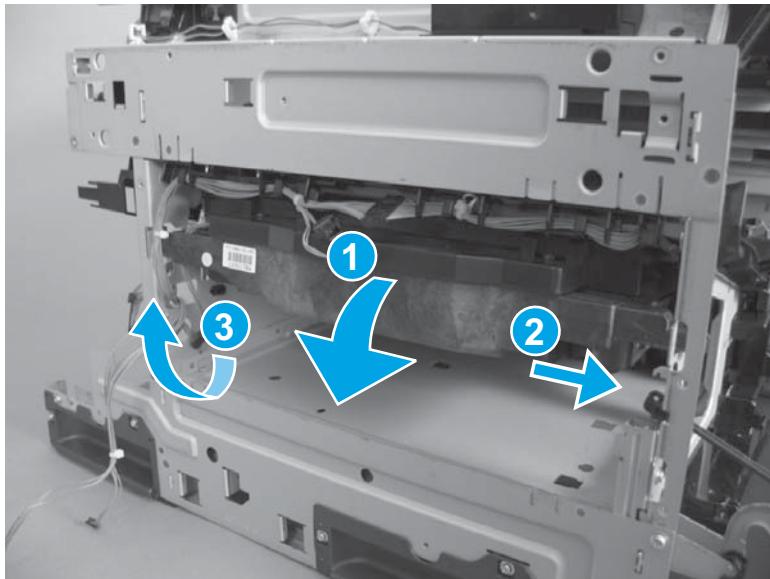

5. Pull the laser/scanner assembly out of the product to remove it.

Reinstallation tip When the scanner is removed, locate the alignment tab (callout 1) on the front of the laser/scanner. The tab must be inserted in the alignment hole in the product chassis when the assembly is reinstalled.

Figure 1-356 Remove the laser/scanner assembly (Y/M; 5 of 5)

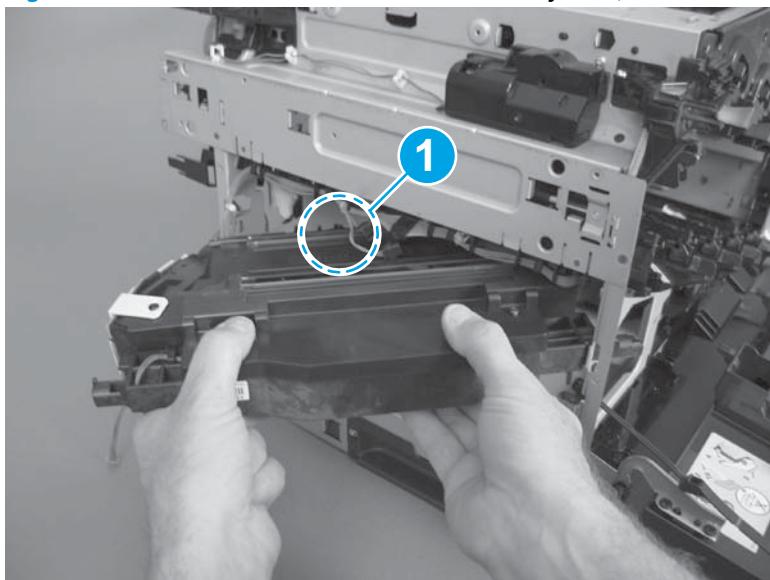

Laser/scanner assembly (C/K)

Before proceeding, remove the following assemblies

M651 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Cartridge fan and environmental sensor. See [Cartridge fan and environmental sensor on page 174](#).
- Residual toner full sensor. See [Residual toner full sensor on page 178](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).
- Laser/scanner assembly (Y/M). See [Laser/scanner assembly \(Y/M\) on page 233](#).

M680 models

- Toner-collection unit. See [Toner-collection unit on page 6](#).
- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Cartridge fan and environmental sensor. See [Cartridge fan and environmental sensor on page 174](#).
- Residual toner full sensor. See [Residual toner full sensor on page 178](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- High-voltage power supply lower. See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).
- Laser/scanner assembly (Y/M). See [Laser/scanner assembly \(Y/M\) on page 233](#).

Remove the laser/scanner assembly (C/K)


 **Reinstallation tip** After installing a new laser/scanner assembly, be sure to calibrate the product.

1. Release one spring (callout 1), and then disconnect one FFC (callout 2).

 **CAUTION:** The spring is not captive. Do not lose the spring when it is removed. Use a pair of needle-nose pliers to safely retain the spring when it is removed. Do not use a flat blade screwdriver to remove the spring; the spring could forcibly leave the product and cause personal injury.


 **Reinstallation tip** When the spring is reinstalled, make sure that the laser/scanner fits tightly up against the product chassis, and make sure that the FFC is fully seated in the connector. The locator tabs on the front of the scanner must be firmly seated in the slots in the chassis.

Figure 1-357 Remove the laser/scanner assembly (C/K; 1 of 5)

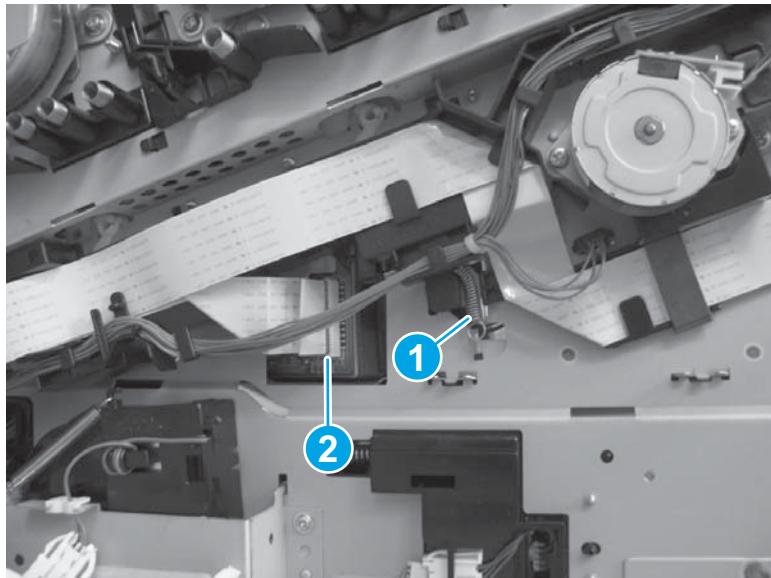

2. Disconnect one connector.


Figure 1-358 Remove the laser/scanner assembly (C/K; 2 of 5)

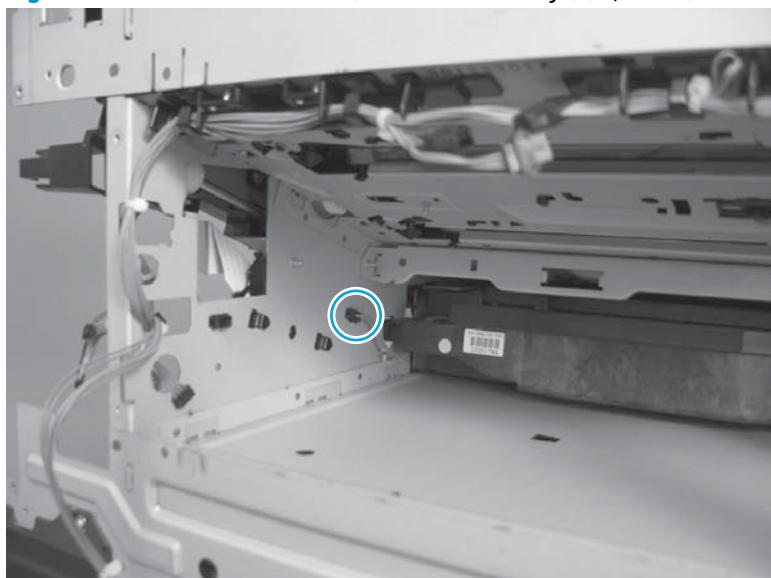

3. Remove five screws (callout 1), and then remove the cover (callout 2).

⚠ CAUTION: Be careful. The PGC actuators are easily dislodged when the cover is removed. See [Figure 1-362 Reinstall the PGC actuators \(1 of 5\) on page 240](#). To reinstall the actuators, see [Reinstall the protective glass cleaner \(PGC\) actuators on page 240](#).

Figure 1-359 Remove the laser/scanner assembly (C/K; 3 of 5)

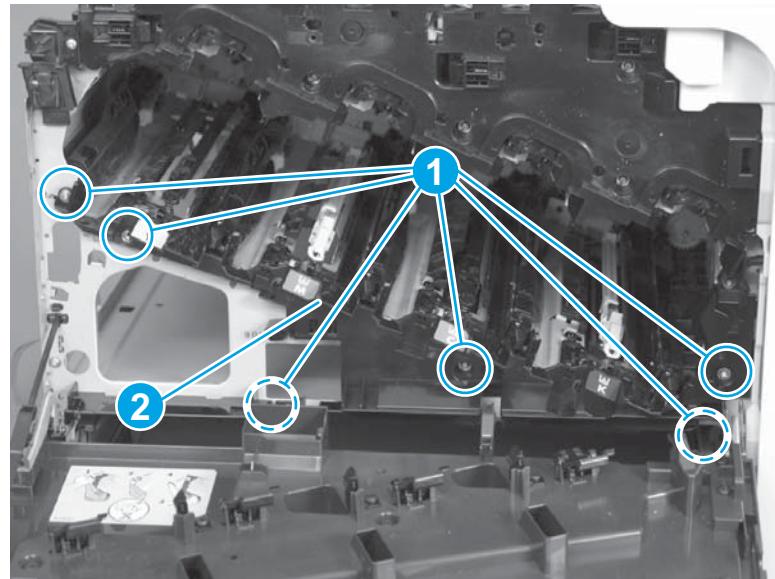


4. Release one spring.

⚠ CAUTION: The spring is not captive. Do not lose the spring when it is removed. Use a pair of needle-nose pliers to safely retain the spring when it is removed. Do not use a flat blade screwdriver to remove the spring; the spring could forcibly leave the product and cause personal injury.

💡 Reinstallation tip When the spring is reinstalled, make sure that the laser/scanner fits tightly up against the product chassis.


Figure 1-360 Remove the laser/scanner assembly (C/K; 4 of 5)

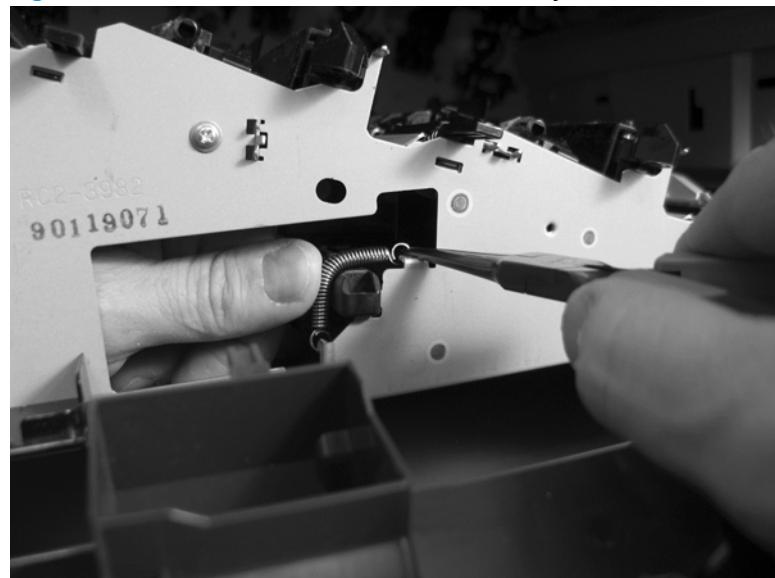

5. Rotate the corner of the assembly away from the product until the PCA is visible, and then remove the assembly from the product.

Reinstallation tip When the laser/scanner is correctly positioned in the chassis, the plastic parts which protrude at the front and rear of the product will be firmly seated against the locator tabs on the chassis. Verify that the assembly is correctly seated, and then install the spring.

Figure 1-361 Remove the laser/scanner assembly (C/K; 5 of 5)

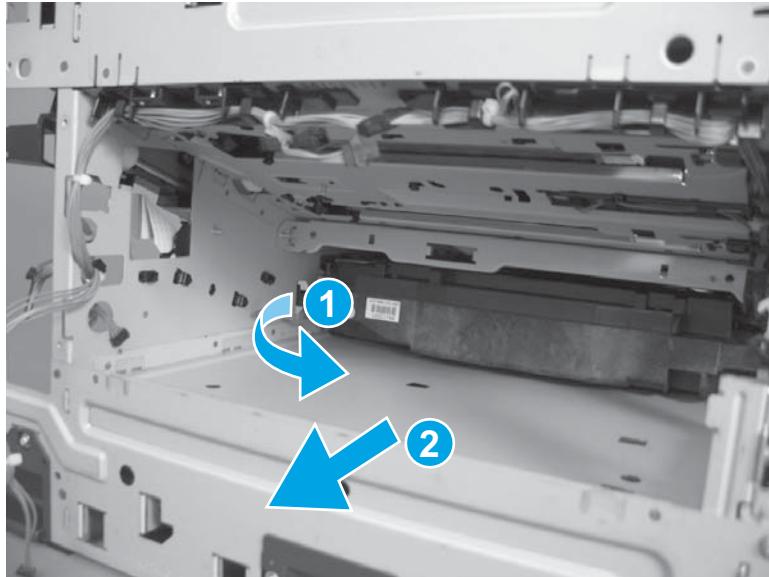


Reinstall the protective glass cleaner (PGC) actuators

1. The following figure shows a dislodged PGC actuator.

TIP: If the actuator and spring are only slightly dislodged, it might be easy to push them back into place.

Figure 1-362 Reinstall the PGC actuators (1 of 5)

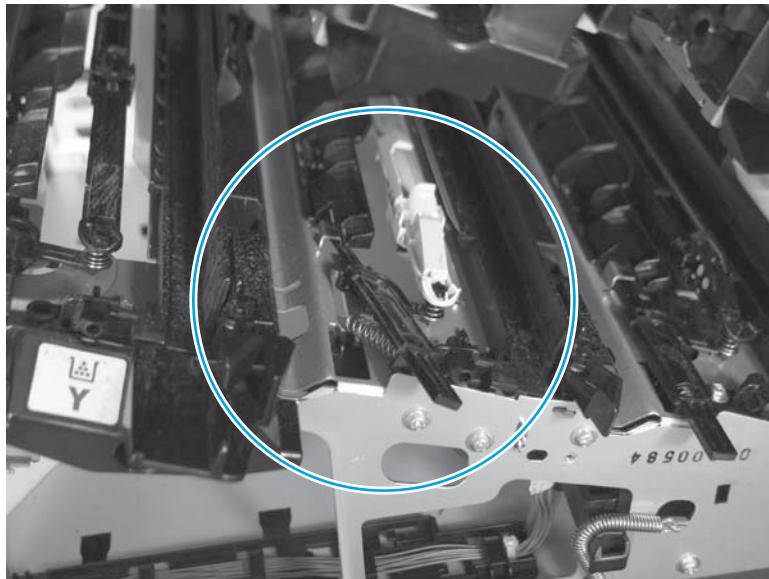

2. Remove the actuator and spring from the product. Install the spring on the actuator.


Figure 1-363 Reinstall the PGC actuators (2 of 5)



3. Before proceeding, take note of the following:


- **Callout 1:** The pin on the actuator will be installed into the slot in the chassis.
- **Callout 2:** The pin on the pivot arm will be installed into the slot on the actuator.
- **Callout 3:** The end of the spring will be installed onto the tab on the chassis.

Figure 1-364 Reinstall the PGC actuators (3 of 5)

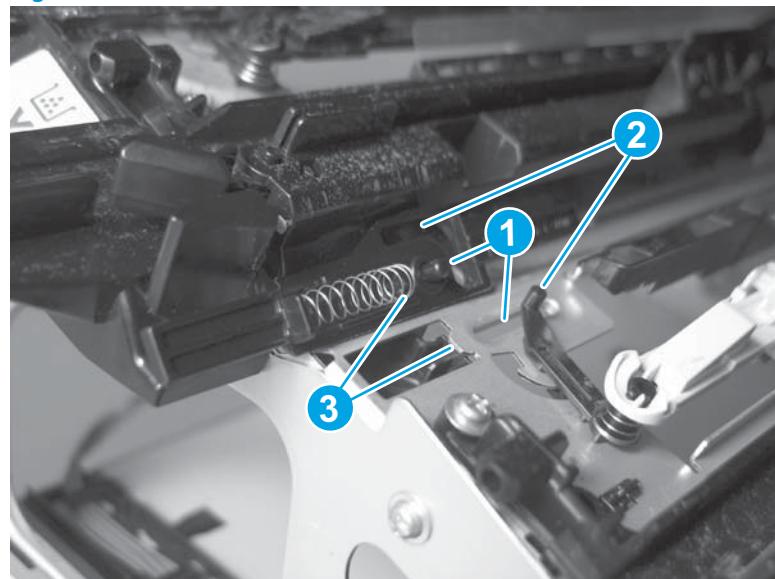


4. Place the end of the actuator into the PGC rod, and then use a small flat blade screw driver to fasten the end of the spring on the tab on the chassis.

Figure 1-365 Reinstall the PGC actuators (4 of 5)

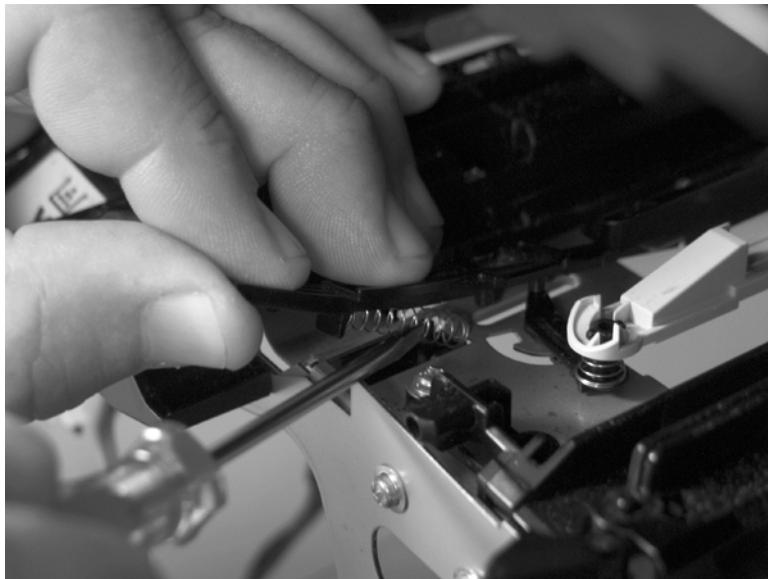

5. Push down on the actuator to seat it into place. Verify that the actuator is correctly installed. The PGC actuator must move freely when push on.

Figure 1-366 Reinstall the PGC actuators (5 of 5)

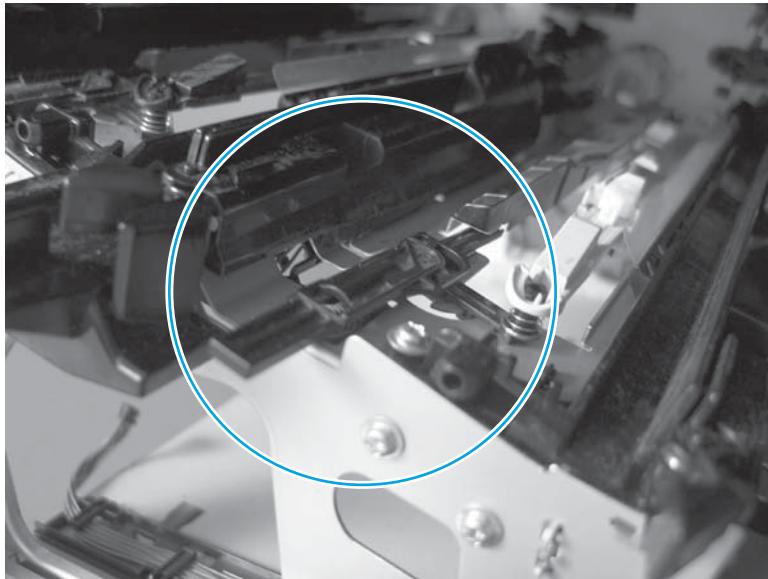

High-voltage power supply upper (HVPS-T)

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).



NOTE: This assembly is also called the high-voltage power supply PCA upper assembly.


Remove the high-voltage power supply upper



CAUTION: ESD-sensitive assembly.


1. Remove three screws (callout 1), and then release four tabs (callout 2).

Figure 1-367 Remove the high-voltage power supply upper (1 of 2)

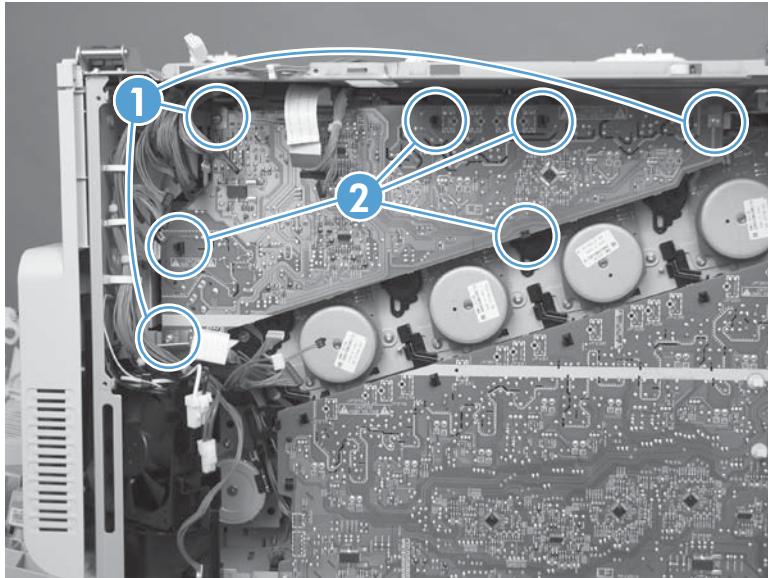

2. Disconnect one connector (callout 1) and then remove the power supply. **Do not** disconnect two connectors (callout 2).

Figure 1-368 Remove the high-voltage power supply upper (2 of 2)

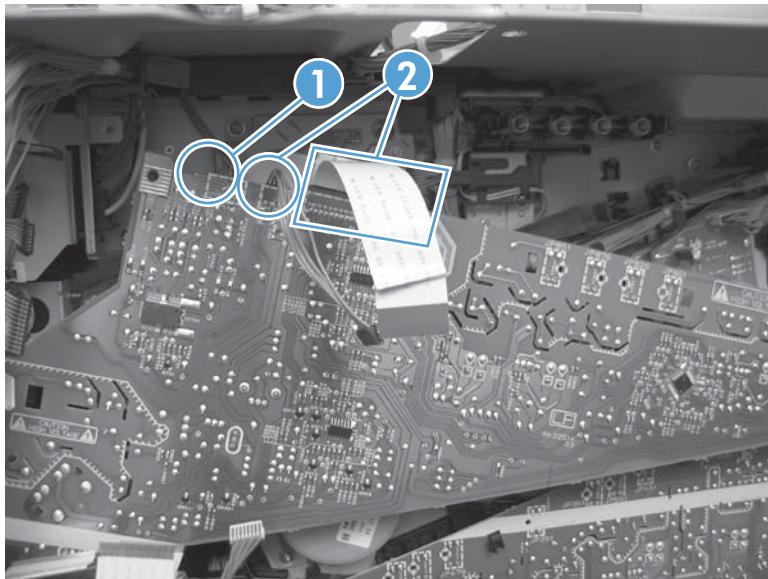

Reinstall the high-voltage power supply upper

When the power supply is reinstalled, look through the holes in the PCA and make sure that the high-voltage contact springs are correctly seated against the PCA.

 **NOTE:** For a replacement power supply, remove one wire harness (callout 1) and then install it on the replacement power supply.

Figure 1-369 Reinstall the high-voltage power supply upper



Yellow, magenta, cyan, and black drum motors

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).

M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).




NOTE: This assembly is also called the main DC motor assembly.

Remove the yellow, magenta, cyan, and black drum motors

- ▲ For each motor, remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor (callout 3)

Figure 1-370 Remove the yellow, magenta, cyan, and black drum motors

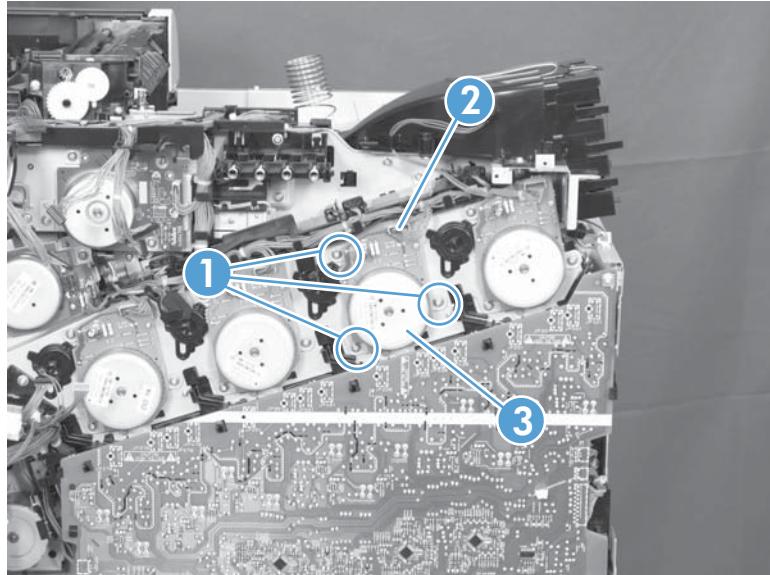

Fuser motor

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).

Remove the fuser motor

- ▲ Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor (callout 3).

Figure 1-371 Remove the fuser motor

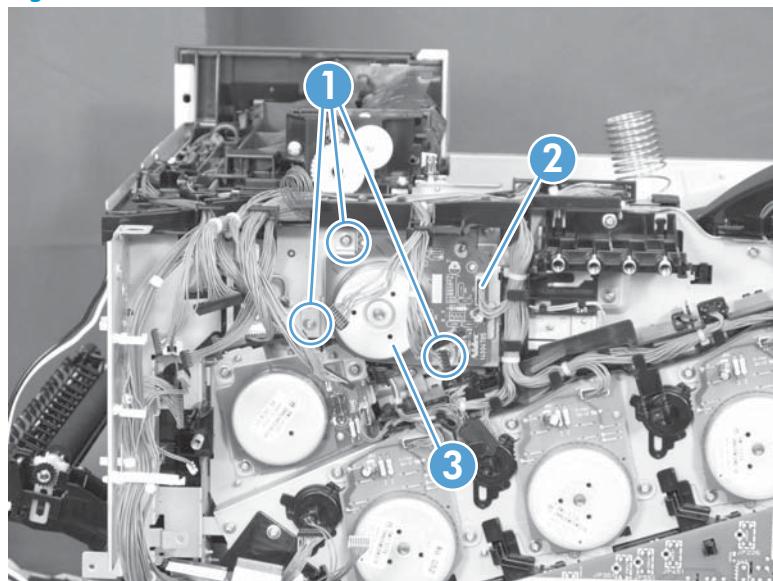

ITB motor

Before proceeding, remove the following assemblies

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).

Remove the ITB motor

- ▲ Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor (callout 3).

Figure 1-372 Remove the ITB motor

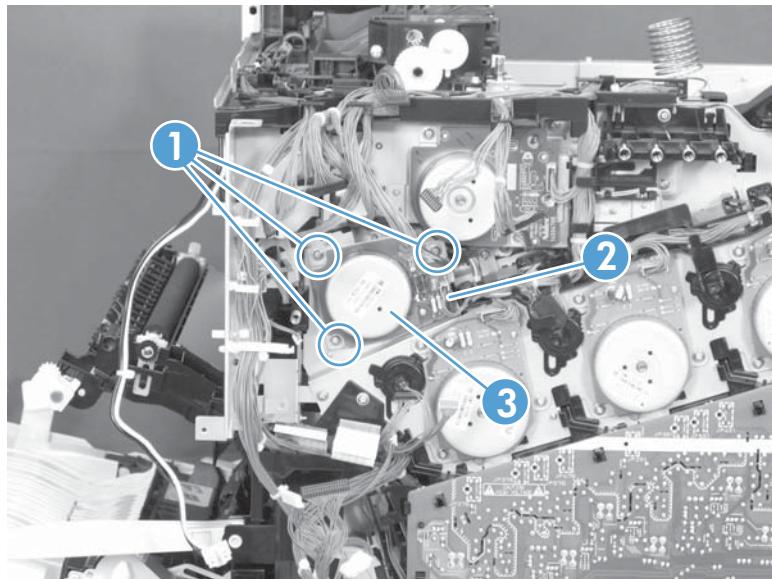

Main-drive assembly

Before proceeding, remove the following assemblies



NOTE: Removing the main-drive assembly typically requires more than 2 hours to complete.

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply lower (HVPS-D). See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).
- Yellow, magenta, cyan, and black drum motors. See [Yellow, magenta, cyan, and black drum motors on page 246](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Intermediate transfer belt (ITB). See [Intermediate transfer belt \(ITB\) on page 25](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply lower (HVPS-D). See [High-voltage power supply lower \(HVPS-D\) on page 207](#).
- Exhaust fan and fan duct. See [Exhaust fan and fan duct on page 213](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).
- Yellow, magenta, cyan, and black drum motors. See [Yellow, magenta, cyan, and black drum motors on page 246](#).

Remove the main-drive assembly

1. Remove one screw and then release the fan from the chassis.


Figure 1-373 Remove the main-drive assembly (1 of 7)

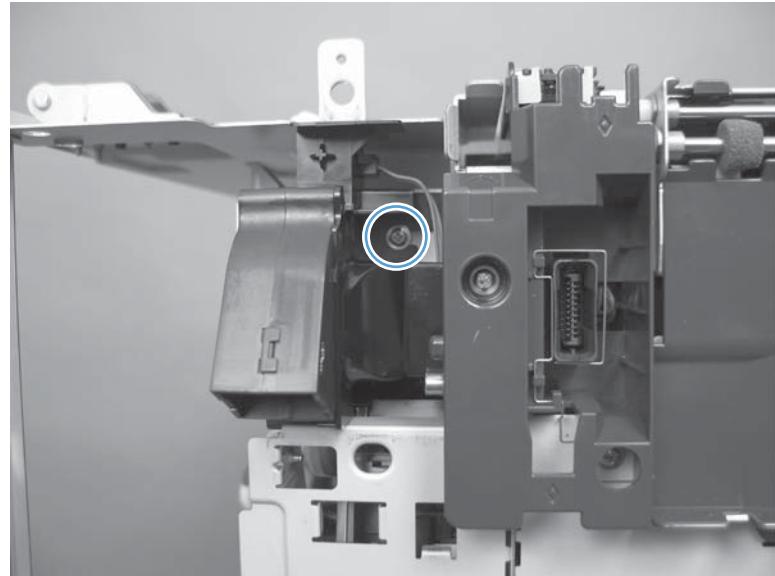

2. Remove eight connectors (callout 1), and then release the wire harnesses from the guides (callout 2).

 **NOTE:** Leave the wire harnesses with the product.


Figure 1-374 Remove the main-drive assembly (2 of 7)

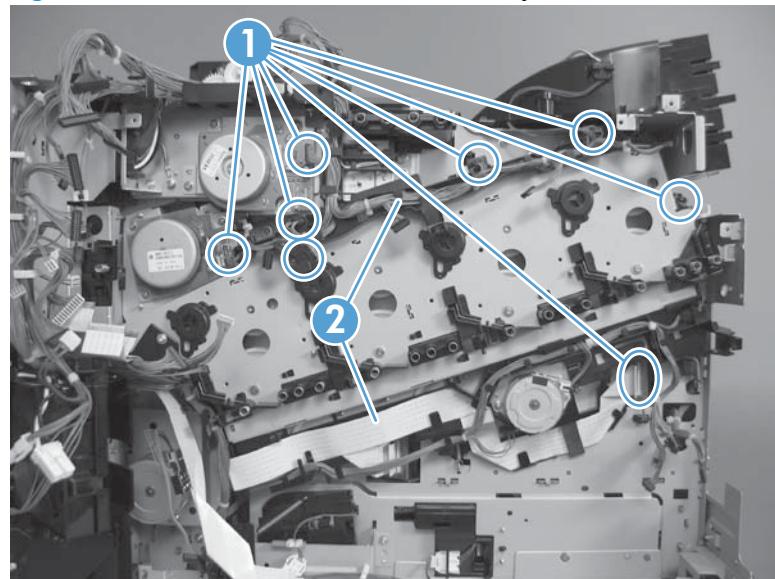

3. Remove two screws (callout 1), disconnect one connector (callout 2), and then remove the developing-disengagement motor.

 **NOTE:** When the motor is reinstalled, make sure the motor PCA is positioned at the top of the assembly.


Figure 1-375 Remove the main-drive assembly (3 of 7)

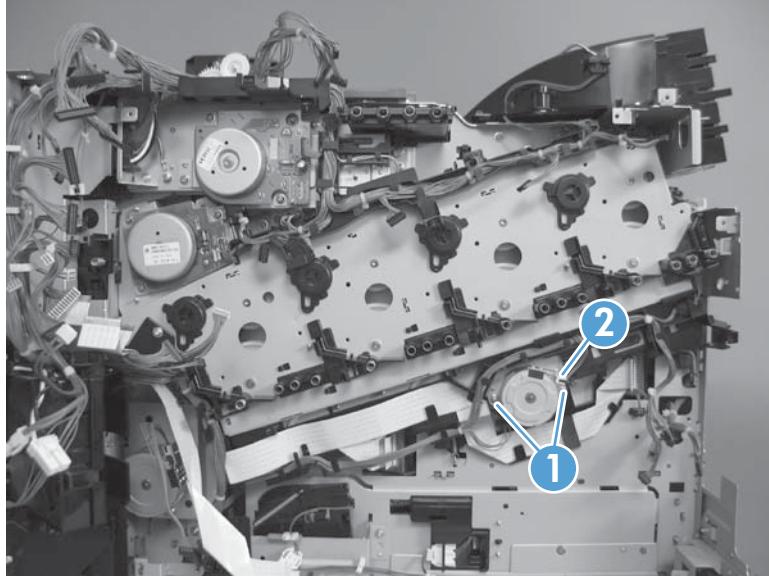

4. Remove one screw (callout 1), and then remove the wire guide from the main-drive assembly (callout 2).


 **Reinstallation tip** Leave the wire harnesses connected to the wire guide and attached to the product for easier reinstallation.

Figure 1-376 Remove the main-drive assembly (4 of 7)

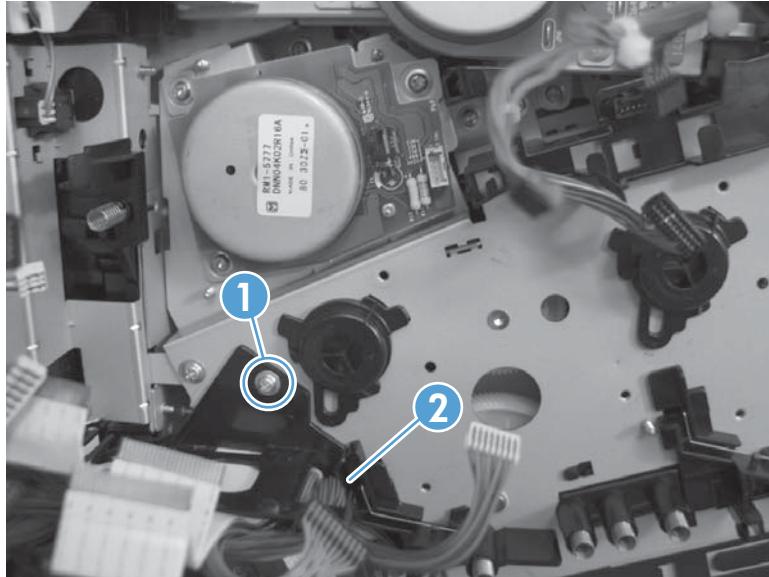

5. Remove 10 screws.


Figure 1-377 Remove the main-drive assembly (5 of 7)

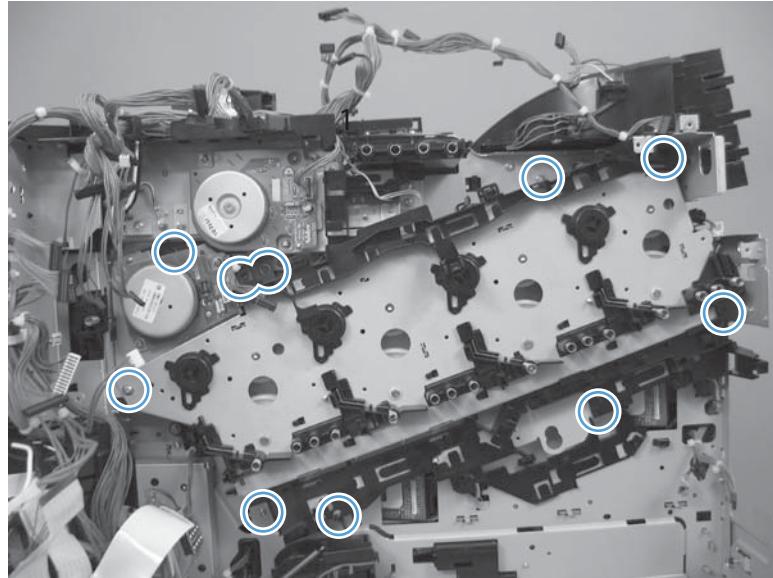

6. Separate the main-drive assembly from the product.

CAUTION: The assembly is still attached to the product by one wire harness. Do not attempt to completely remove the assembly until proceeding to the following step.

Figure 1-378 Remove the main-drive assembly (6 of 7)

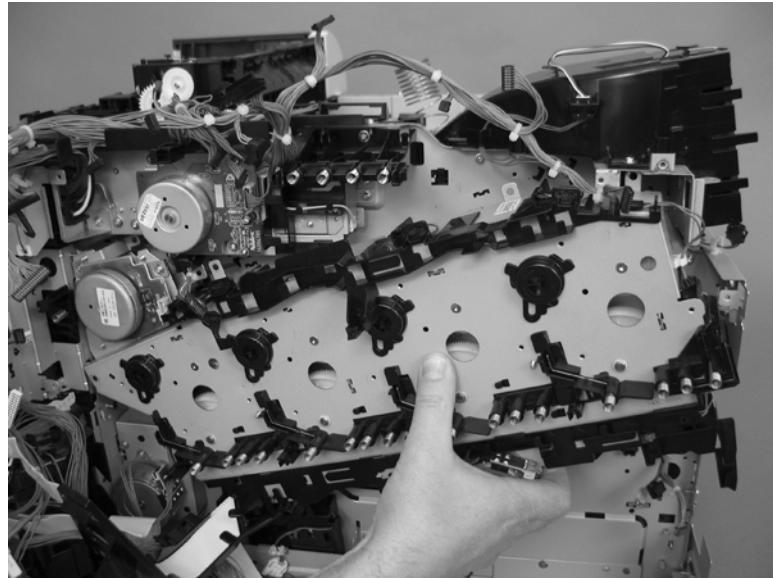


7. Release the wire harness (callout 1) from the guides, and then remove the main-drive assembly from the product.

⚠ CAUTION: Be careful when removing the assembly. The cams on the backside of the assembly can be dislodged. If the cams become dislodged, install them on the shafts as shown in [Figure 1-380 Reinstall the main-drive assembly \(1 of 7\) on page 257](#).

The black cam must be installed on the shaft furthest away from the developing-disengagement motor. The white cams are interchangeable.

💡 Reinstallation tip It might be easier to pass the harness (callout 1) over the edge of the assembly chassis after the main-drive assembly is reinstalled.


Figure 1-379 Remove the main-drive assembly (7 of 7)

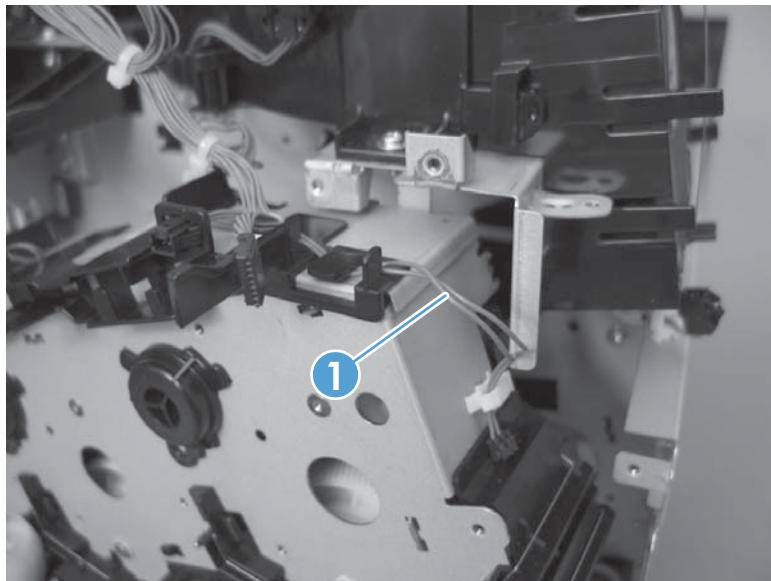

Reinstall the main-drive assembly

1. Locate the cams (callout 1) on the back side of the assembly.


Figure 1-380 Reinstall the main-drive assembly (1 of 7)

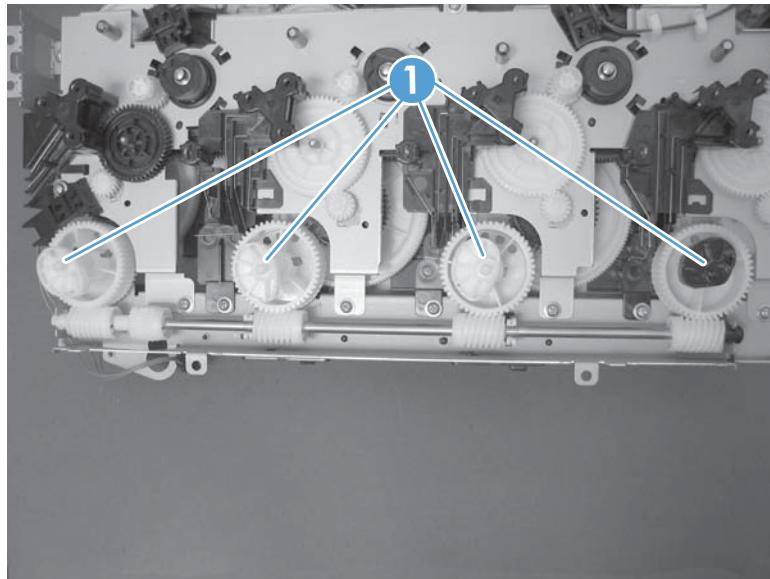

2. Slowly rotate the shaft near the black cam.

IMPORTANT: Do not touch the plastic gears or cams. Do not wipe away any of the grease that is applied to these assemblies. Always rotate the gears and cams by rotating the metal drive shaft.

Figure 1-381 Reinstall the main-drive assembly (2 of 7)

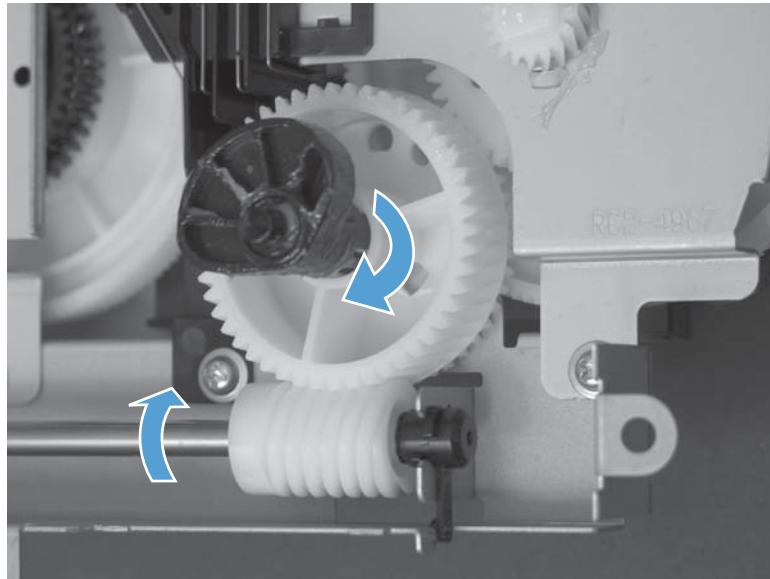


3. Continue to rotate the shaft until the holes in the black-cam gear align as shown below.

When correctly aligned, the *bottom-most* hole in the gear is aligned with a hole in the sheet-metal chassis.

 **NOTE:** The holes in the other cam gears have a different alignment. Make sure that the holes in the black-cam gear are correctly aligned.

Figure 1-382 Reinstall the main-drive assembly (3 of 7)

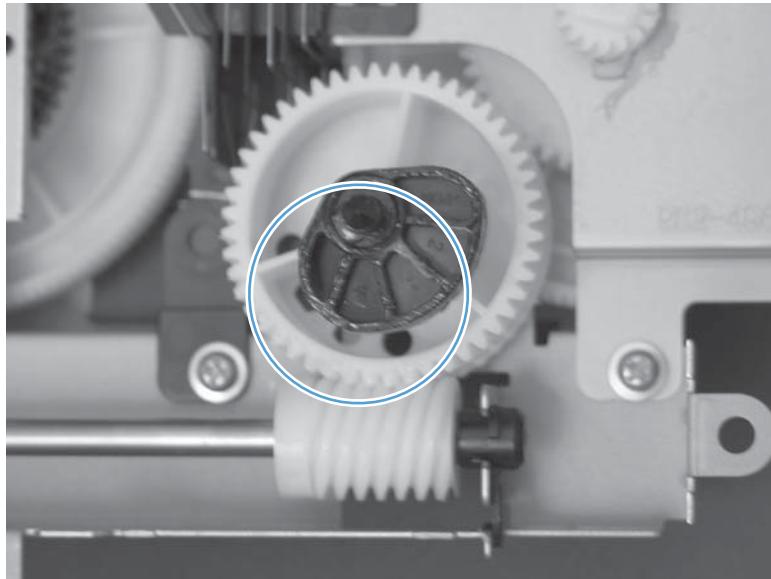

4. Verify that the cams (callout 1) align correctly.


TIP: The second cam in from the right (the white cam to the left of the black cam), should have the *second* hole aligned with the hole in the sheet-metal chassis.

The third cam in from the right, should have the *third* hole aligned with the hole in the sheet-metal chassis.

The fourth cam in from the right (the cam nearest the developing-disengagement motor), should have the *fourth* hole aligned with the hole in the sheet-metal chassis.


If the second, third, or fourth cams do not correctly align, do the following. Hold the long drive shaft, gently tilt the cam and gear away from the shaft to allow clearance to rotate the gear until the correct hole in the gear aligns with the hole in the chassis.

Figure 1-383 Reinstall the main-drive assembly (4 of 7)

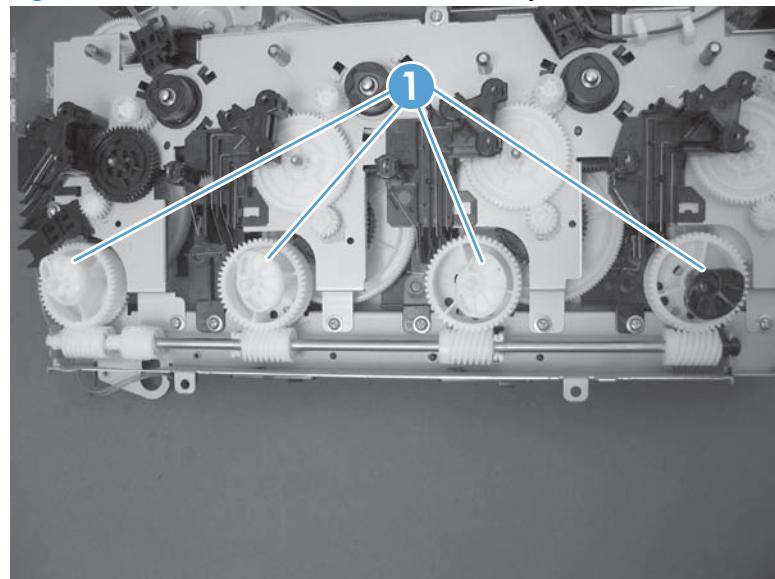

- When the cams align correctly, they easily fit into the holes in the chassis.


Figure 1-384 Reinstall the main-drive assembly (5 of 7)

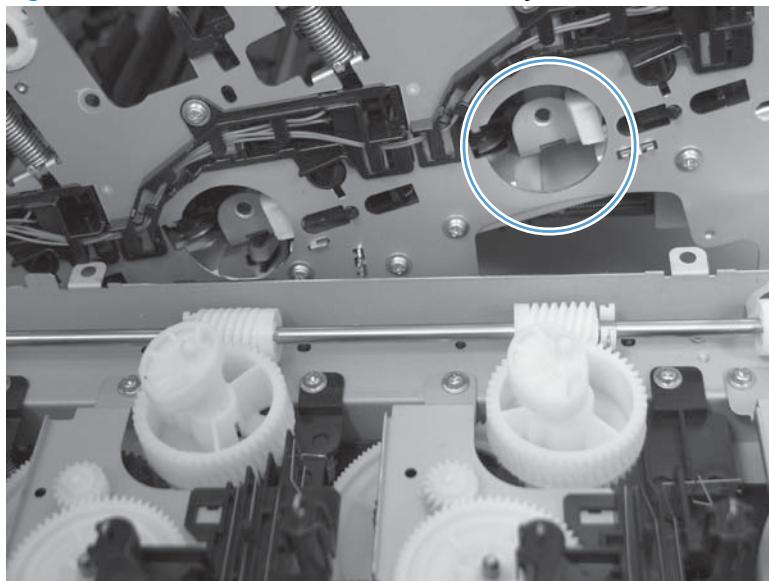

- When placing the assembly on the chassis, align the holes in the assembly with the holes in the chassis.

 **Reinstallation tip** If the upper-left corner of the assembly is difficult to seat, try rotating the ITB motor to align the gear shaft with the hole in the chassis.

Figure 1-385 Reinstall the main-drive assembly (6 of 7)

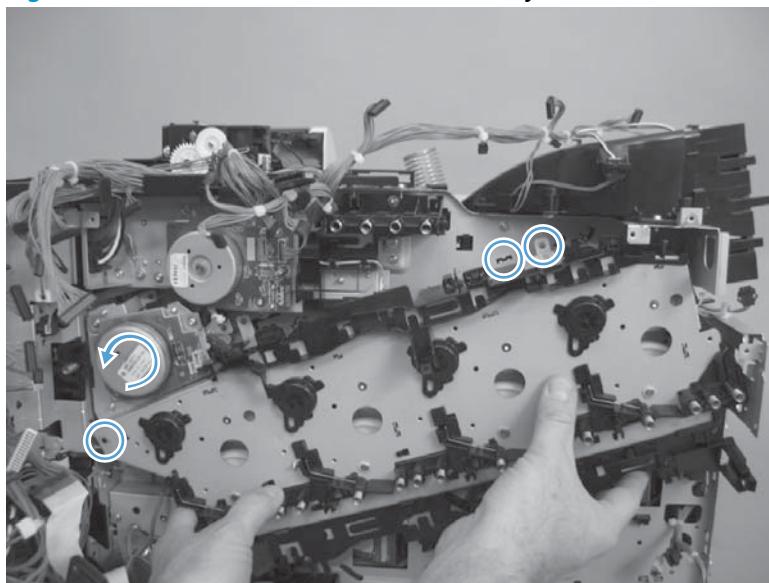


- When the assembly is correctly installed, the tabs are flat against the chassis.

 **TIP:** After reassembling the product, use the [Troubleshooting](#) menu to print a [Color Band Test](#) page.

If the test page shows one or more color planes are not printing (usually in the upper left corner of the page), the cam or cams for the missing color plane are not correctly aligned. Repeat the reinstall the main-drive assembly procedure.

Figure 1-386 Reinstall the main-drive assembly (7 of 7)

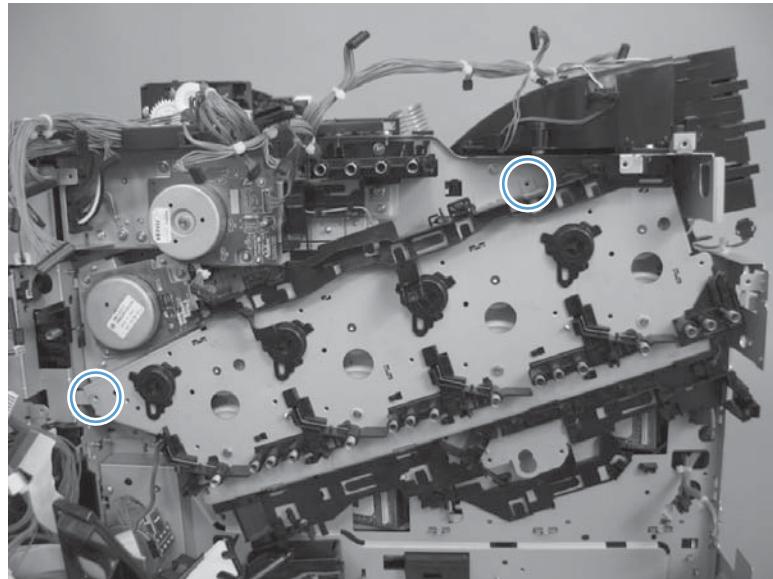

Fuser drive assembly

Before proceeding, remove the following assemblies



NOTE: Removing the fuser-drive assembly typically requires more than 2 hours to complete.

M651 models

- Formatter. See [Formatter PCA on page 9](#).
- Upper left cover. See [Upper left cover \(M651\) on page 117](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M651\) on page 121](#).
- Face-down tray. See [Face-down tray \(M651\) on page 134](#).
- Face-down rear cover. See [Face-down rear cover \(M651\) on page 136](#).
- Interconnect board. See [Interconnect board \(ICB\) \(M651\) on page 194](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).
- Yellow, magenta, cyan, and black drum motors. See [Yellow, magenta, cyan, and black drum motors on page 246](#).
- Main-drive assembly. See [Main-drive assembly on page 252](#).


M680 models

- Formatter. See [Formatter PCA on page 9](#).
- Standard output bin. See [Standard output bin \(M680\) on page 52](#).
- Output bin bezel. See [Output bin bezel \(M680\) on page 53](#).
- Scanner rear cover. See [Scanner rear cover on page 79](#).
- Document feeder. See [Document feeder \(ADF\) on page 80](#).
- Scanner assembly. See [Image scanner assembly on page 103](#).
- Fan cover. See [Fan cover \(M680\) on page 118](#).
- Left rear cover. See [Left rear cover on page 119](#).
- Rear cover. See [Rear cover \(M680\) on page 122](#).
- Interconnect board (ICB). See [Interconnect board \(ICB\) \(M680\) on page 196](#).
- Low-voltage power supply. See [Low-voltage power supply \(LVPS\) on page 200](#).
- DC controller and tray. See [DC controller PCA and tray on page 204](#).
- High-voltage power supply upper (HVPS-T). See [High-voltage power supply upper \(HVPS-T\) on page 243](#).
- Yellow, magenta, cyan, and black drum motors. See [Yellow, magenta, cyan, and black drum motors on page 246](#).
- Main-drive assembly. See [Main-drive assembly on page 252](#).

Remove the fuser drive assembly


1. Remove one screw (callout 1), and then remove the cover (callout 2).

Figure 1-387 Remove the fuser drive assembly (1 of 7)

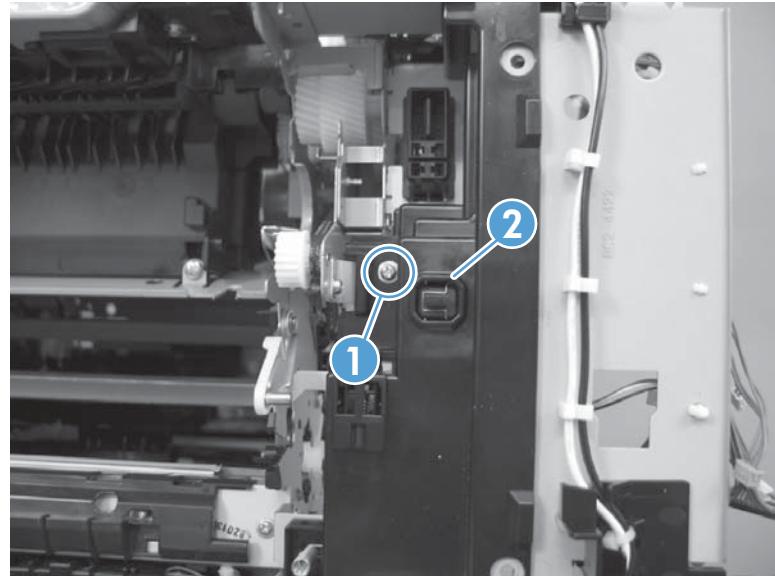


2. Release the wire harness (callout 1) from the guides.

Figure 1-388 Remove the fuser drive assembly (2 of 7)

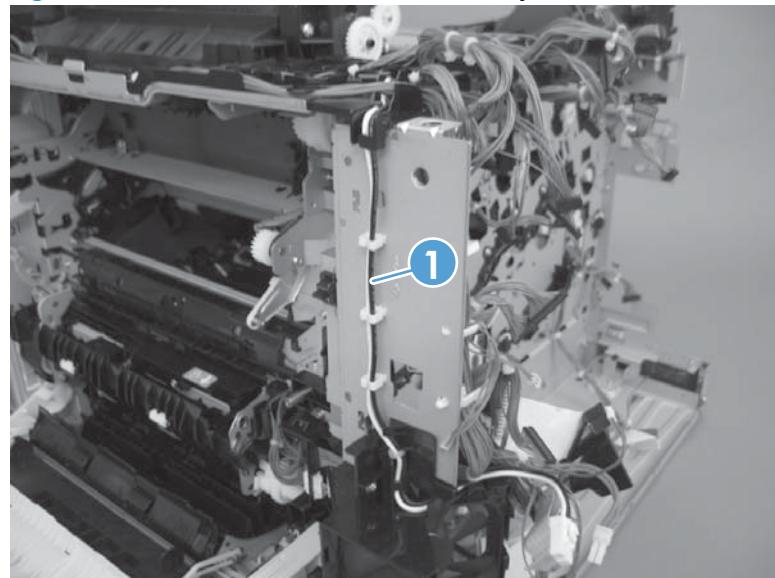

3. Remove two screws (callout 1), one static wire (callout 2), and one switch (callout 3).


Figure 1-389 Remove the fuser drive assembly (3 of 7)

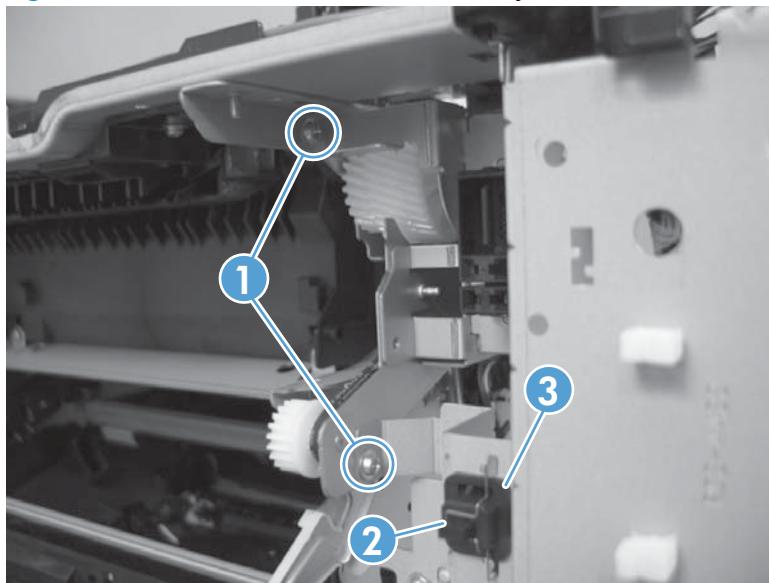

4. Release one tab, and then slide the wire harness holder (callout 1) to release it from the fuser-drive assembly.


NOTE: Releasing the wire harness provides clearance when the assembly is removed. The harness does not need to be removed.

Figure 1-390 Remove the fuser drive assembly (4 of 7)

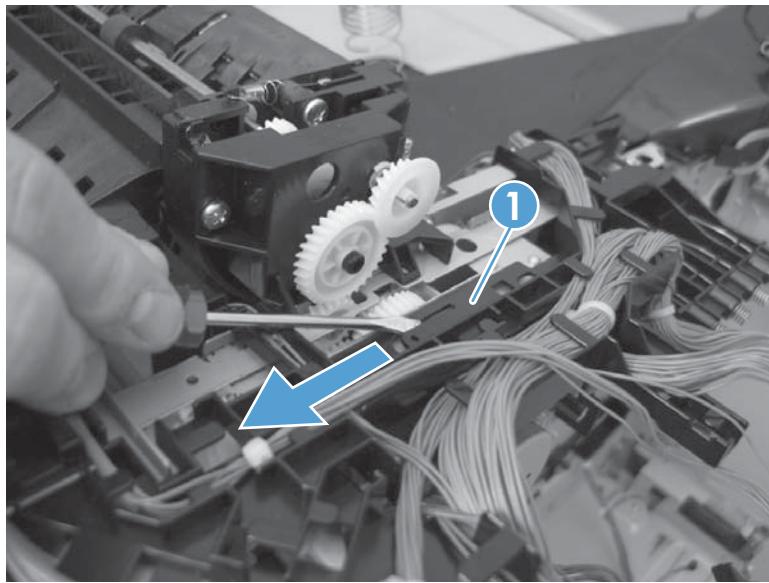


5. Disconnect two connectors.

Figure 1-391 Remove the fuser drive assembly (5 of 7)

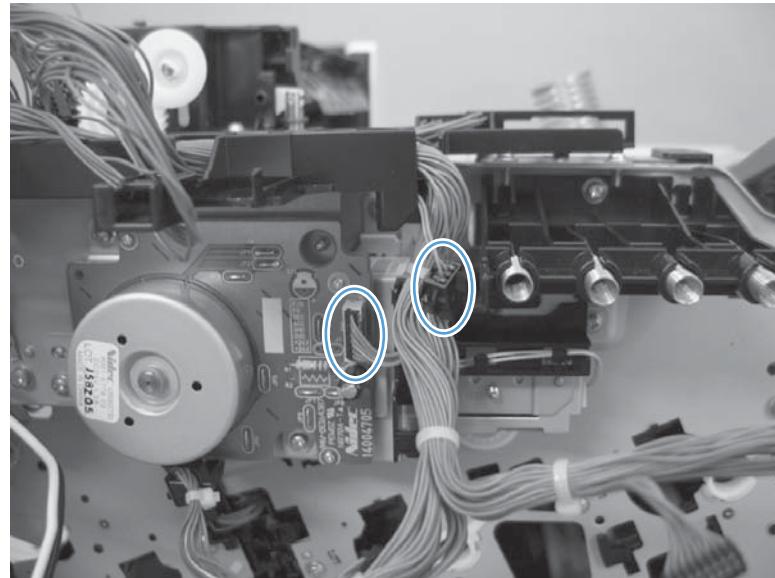


6. Remove three screws.

Figure 1-392 Remove the fuser drive assembly (6 of 7)

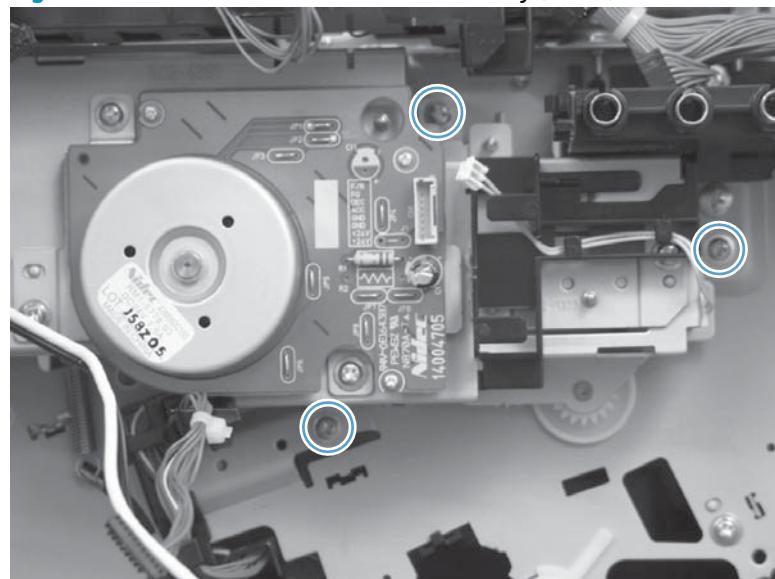

7. Carefully remove the assembly.


Figure 1-393 Remove the fuser drive assembly (7 of 7)

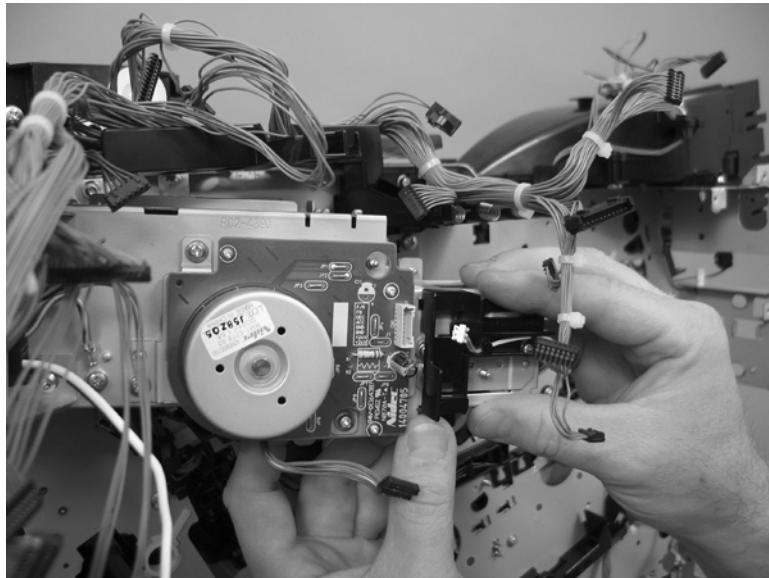

Reinstall the fuser drive assembly

- ▲ Rotate the motor until the gears align, and the assembly is flat against the chassis.

Figure 1-394 Reinstall the fuser drive assembly

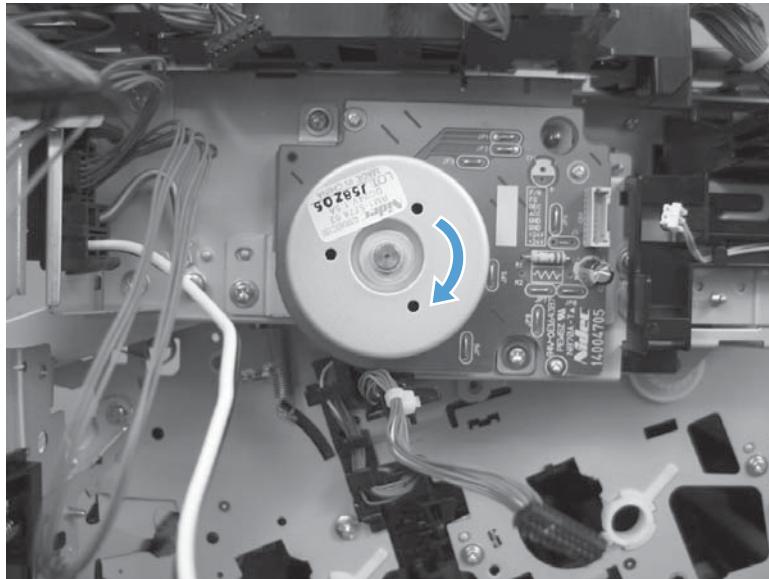


Optional input and output accessories

1x500-sheet paper feeder



NOTE: HP recommends removing the output accessory from the product before servicing.

Figure 1-395 1x500-sheet paper feeder cover locations, front view

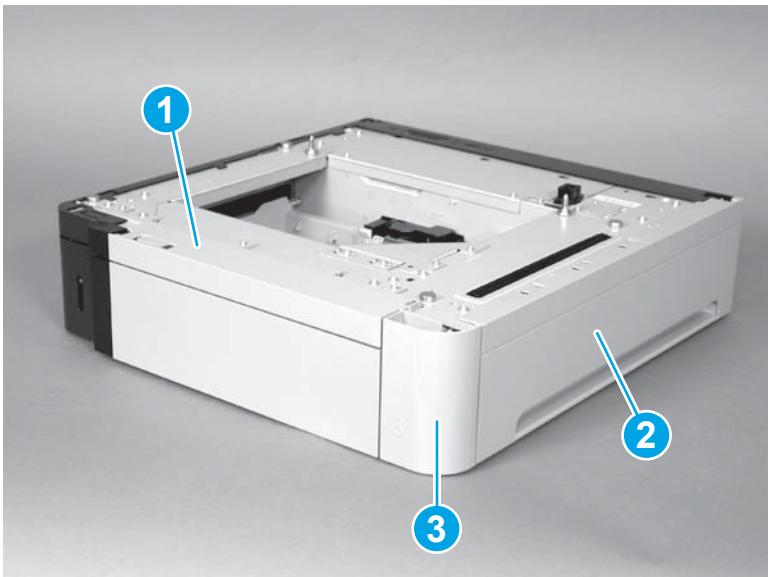


1 Front upper cover

2 Right front cover

3 Right cover

Figure 1-396 1x500-sheet paper feeder cover locations, rear view

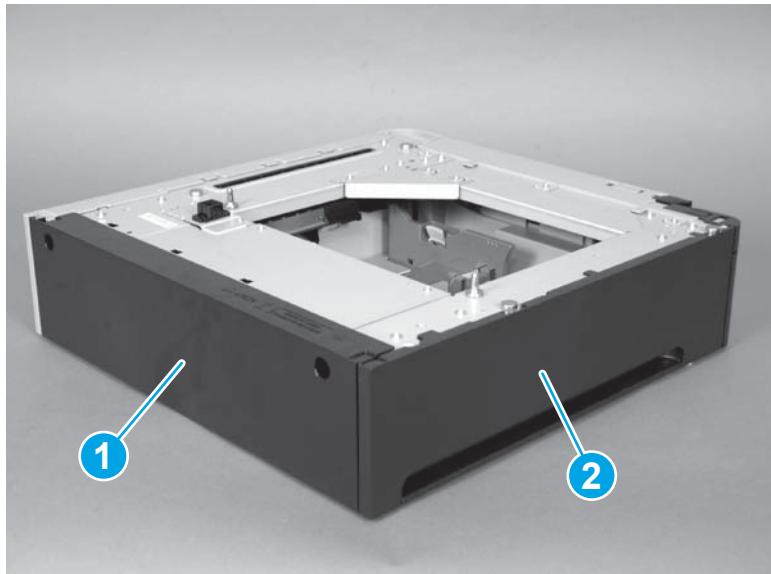


1 Rear cover

2 Left cover

Front upper cover (1x500-sheet paper feeder)

- ▲ Remove three screws (callout 1), release two tabs (callout 2), and then remove the front upper cover.


Figure 1-397 Remove the front upper cover (1x500-sheet paper feeder)

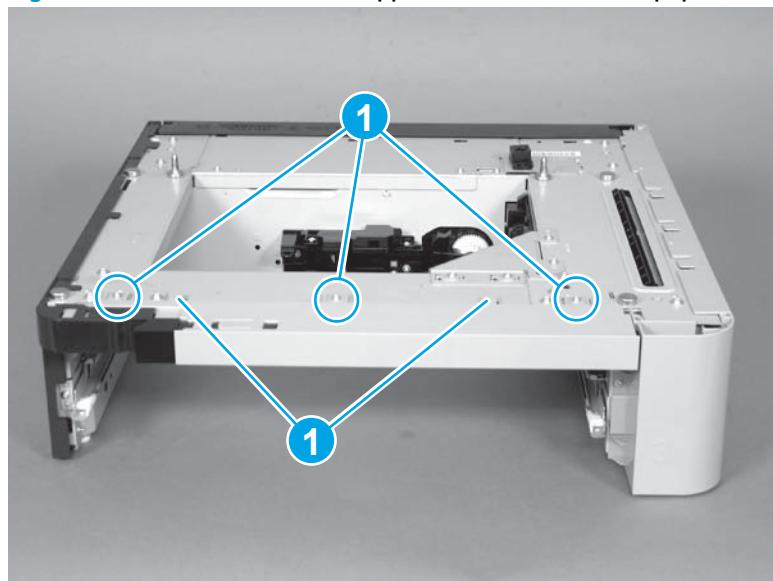

Rear cover (1x500-sheet paper feeder)

- ▲ Remove two screws (callout 1), and then remove the rear cover (callout 2).

Figure 1-398 Remove the rear cover (500-sheet paper feeder)

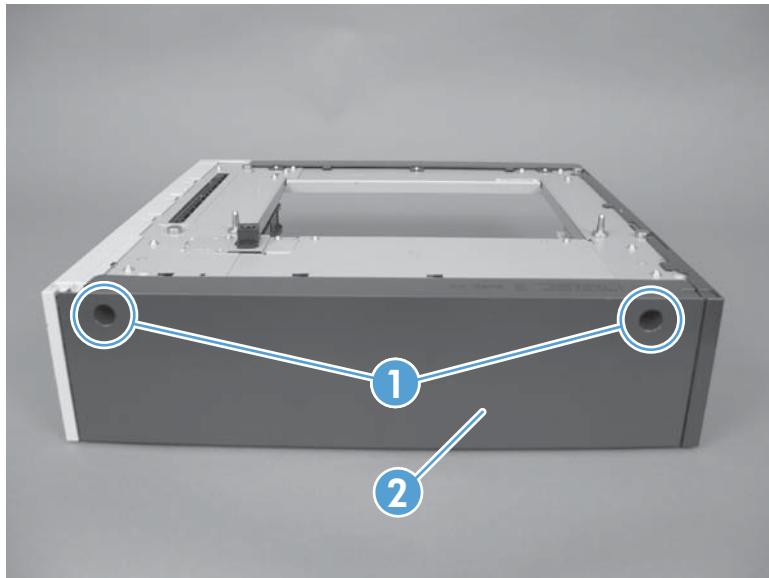

Left cover (1x500-sheet paper feeder)


Before proceeding, remove the following assemblies

- Rear cover (500-sheet paper feeder). See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).

Remove the left cover (1x500-sheet paper feeder)


1. Release three tabs.

Figure 1-399 Remove the left cover (1x500-sheet paper feeder; 1 of 2)

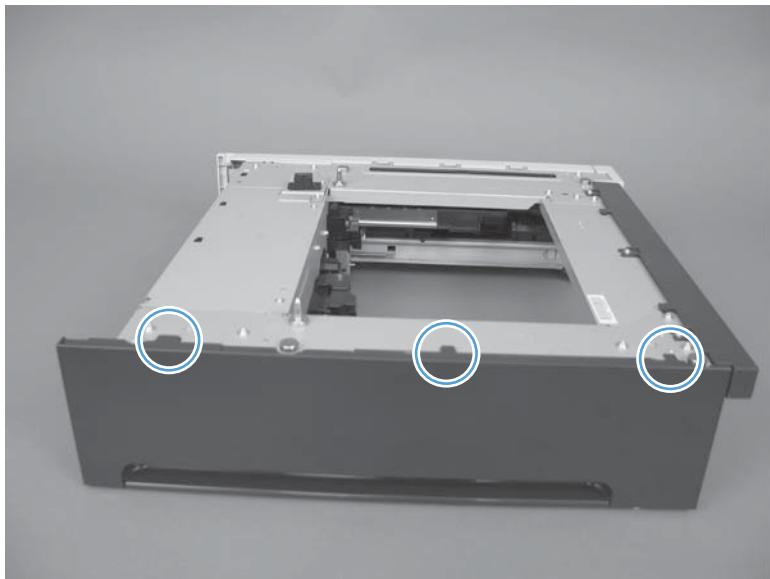

2. Pull the top of the cover out (callout 1), and then press down (callout 2) to remove the cover.

Figure 1-400 Remove the left cover (1x500-sheet paper feeder; 2 of 2)

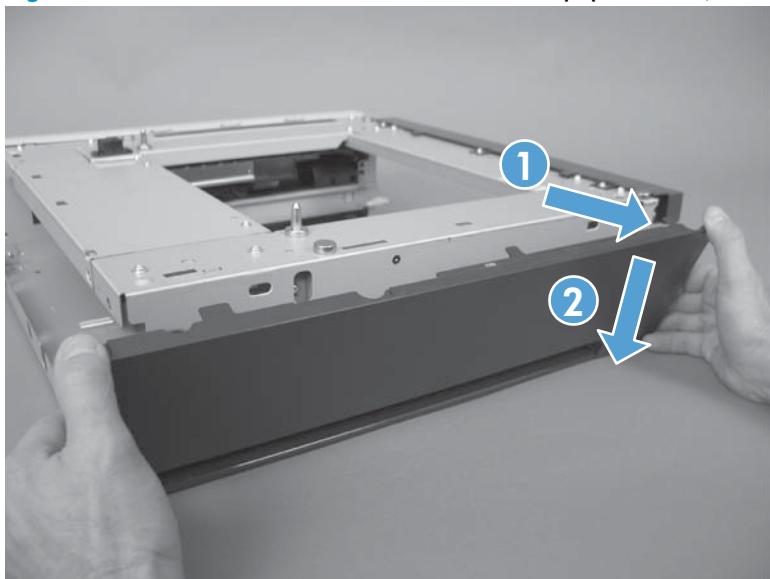

Right-front cover (1x500-sheet paper feeder)

Before proceeding, remove the following assemblies

- Front upper cover. See [Front upper cover \(1x500-sheet paper feeder\) on page 269](#).

Remove the right-front cover (1x500-sheet paper feeder)

- ▲ Remove one screw, and then rotate the right-front cover to the right to remove it.

Figure 1-401 Remove the right-front cover (1x500-sheet paper feeder)



Right cover (1x500-sheet paper feeder)

Before proceeding, remove the following assemblies


- Right front cover. See [Right-front cover \(1x500-sheet paper feeder\) on page 272](#).

Remove the right cover (1x500-sheet paper feeder)

- Reach inside the paper feeder, and then release three tabs (callout 1 and callout 2).


TIP: Use a finger to release the left-most and center tabs (callout 1). However, it might be easier to release the right-most tab (callout 2) by using a long-barreled flat-blade screwdriver.

Figure 1-402 Remove the right cover (1x500-sheet paper feeder; 1 of 2)

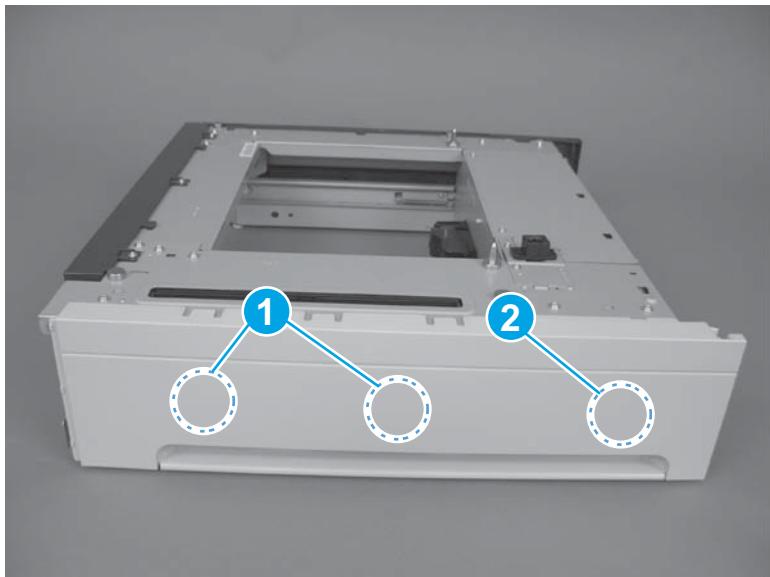

- Rotate the top of the cover away from the assembly (callout 1) to remove it.

Figure 1-403 Remove the right cover (1x500-sheet paper feeder; 2 of 2)

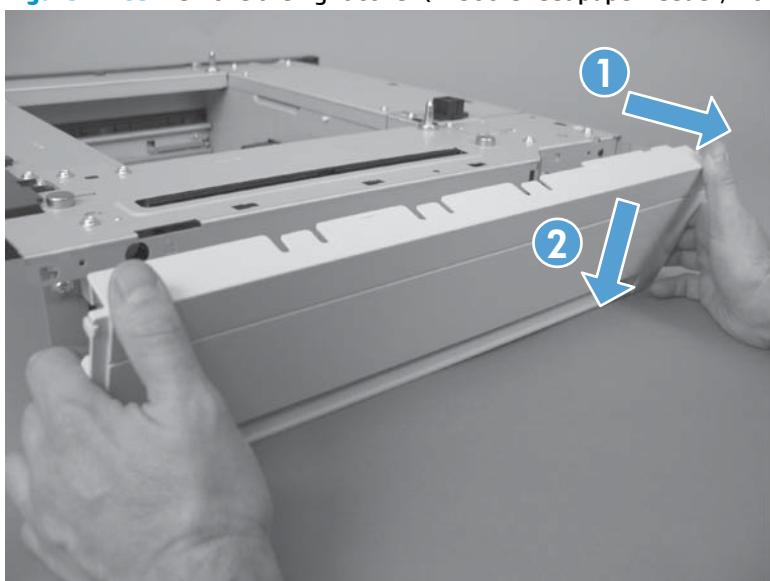

Paper-pickup assembly (1x500-sheet paper feeder)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).
- Front upper cover. See [Front upper cover \(1x500-sheet paper feeder\) on page 269](#).
- Right front cover. See [Right-front cover \(1x500-sheet paper feeder\) on page 272](#).
- Right cover See [Right cover \(1x500-sheet paper feeder\) on page 273](#).

Remove the pickup assembly (1x500-sheet paper feeder)


1. Remove one screw (callout 1), and then remove the tray rail (callout 2).

Figure 1-404 Remove the paper-pickup assembly (1x500-sheet paper feeder; 1 of 5)

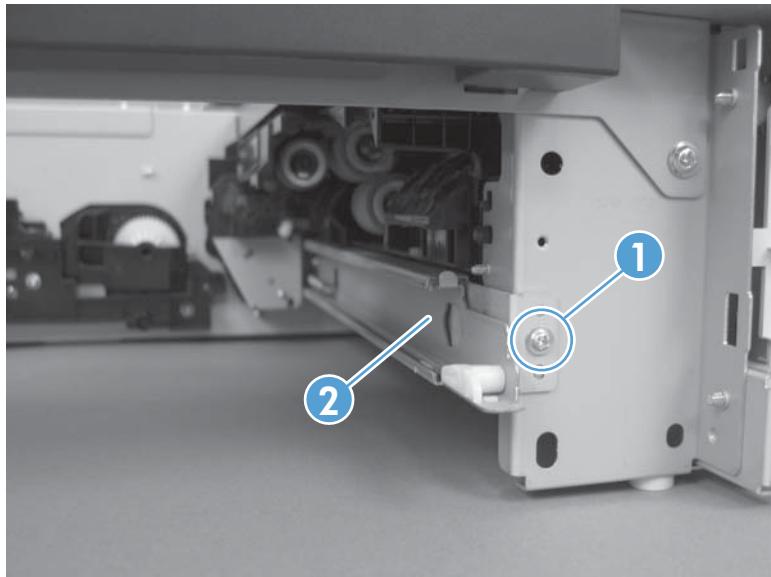


2. Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor assembly (callout 3).

Figure 1-405 Remove the paper-pickup assembly (1x500-sheet paper feeder; 2 of 5)

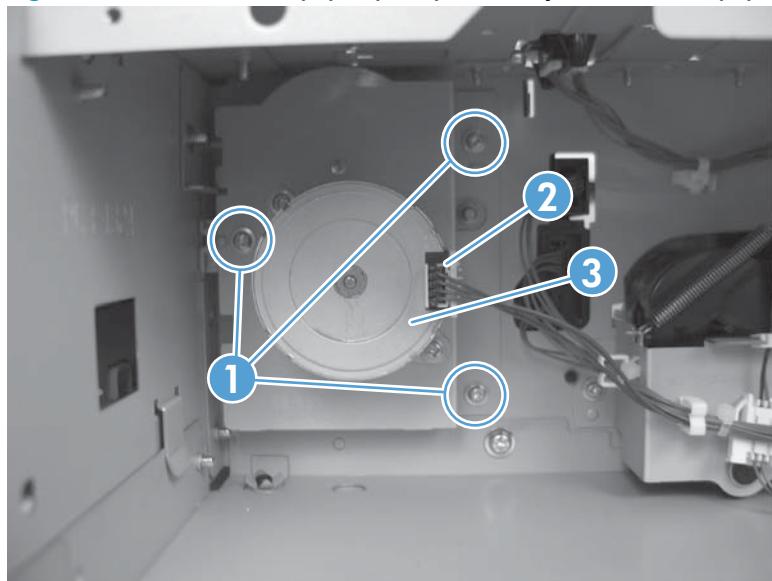


3. Remove one screw (callout 1), and then disconnect three connectors (callout 2).

Figure 1-406 Remove the paper-pickup assembly (1x500-sheet paper feeder; 3 of 5)

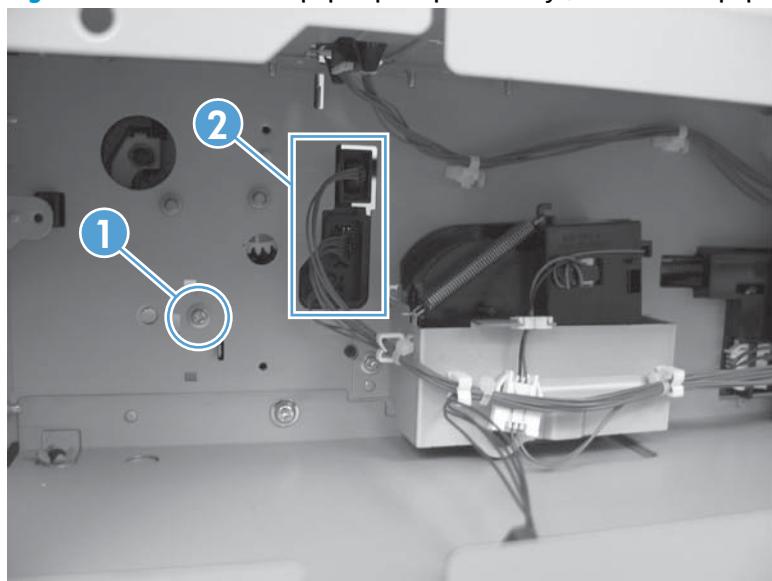


4. On the right side, remove one screw.

Figure 1-407 Remove the paper-pickup assembly (1x500-sheet paper feeder; 4 of 5)

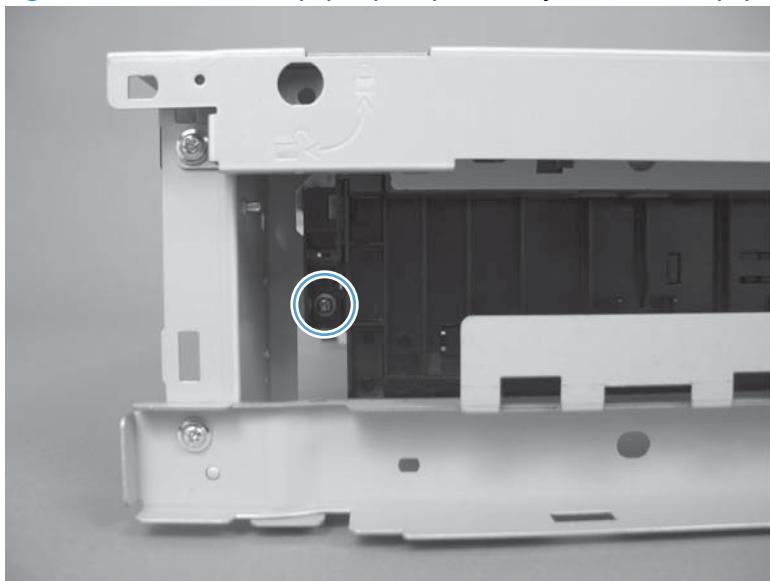

5. Place the paper feeder so the rear side is down. Move the top of the assembly to the right (callout 1) until the post (callout 2) is free from the hole. Lift the assembly (callout 3), and then pull the bottom of the assembly (callout 4) to remove.

Figure 1-408 Remove the paper pickup assembly (1x500-sheet paper feeder; 5 of 5)

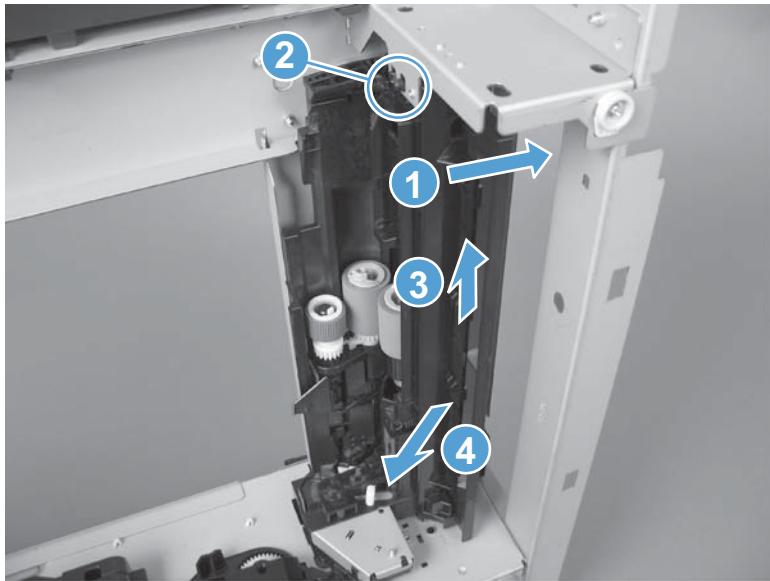

Lifter base assembly (1x500-sheet paper feeder)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).

Remove the lifter base assembly (1x500-sheet paper feeder)


1. From the rear of the paper feeder, disconnect one connector (callout 1).

Figure 1-409 Remove the lifter base assembly (1x500-sheet paper feeder; 1 of 2)

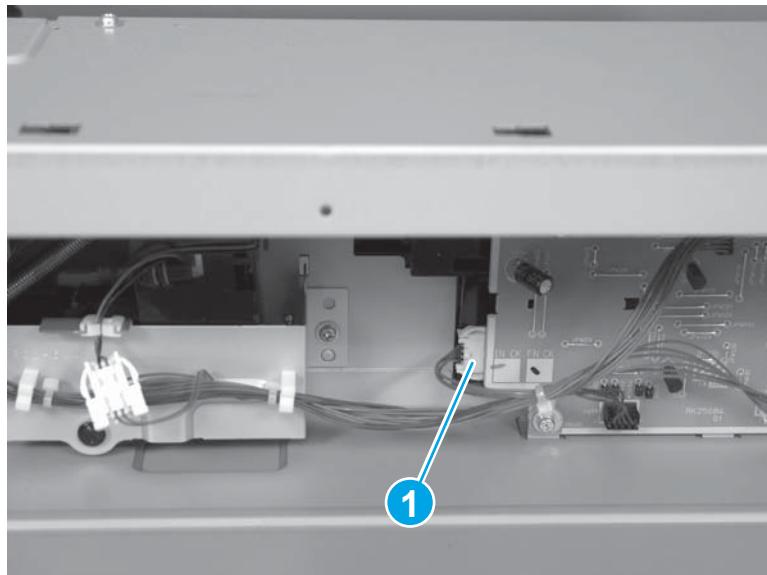

2. From the inside of the paper feeder, remove four screws (callout 1), and then remove the lifter base assembly (callout 2).

Figure 1-410 Remove the lifter base assembly (1x500-sheet paper feeder; 2 of 2)

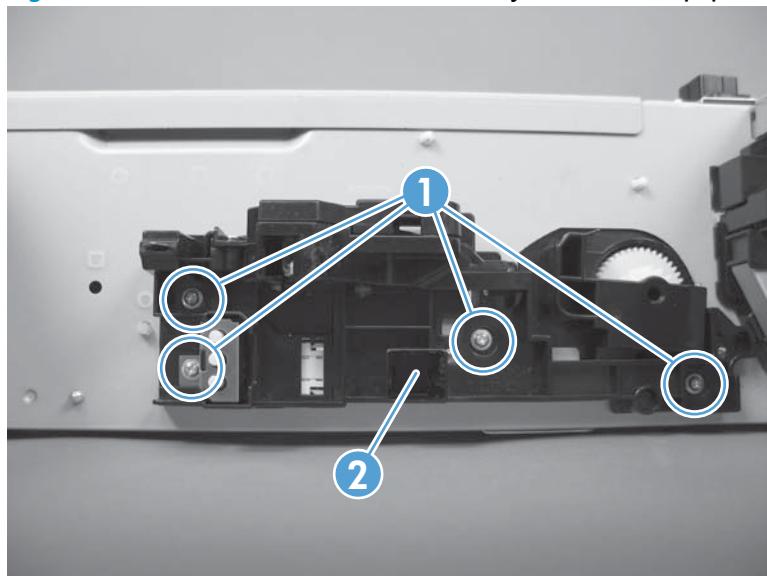


Reinstall the lifter base assembly

If the spring falls from the lifter base assembly, reinstall it before reinstalling the lifter base assembly.

Reinstall the lifter base assembly

- ▲ Place the spring in the assembly before reinstalling the assembly.

Figure 1-411 Reinstall the lifter base assembly (1x500-sheet paper feeder)

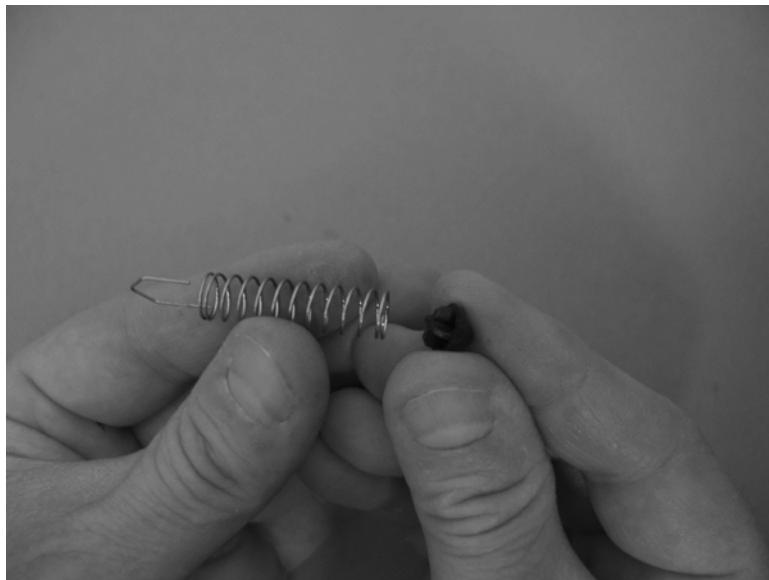

Lifter assembly (1x500-sheet paper feeder)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).

Remove the lifter assembly (1x500-sheet paper feeder)


1. Disconnect one connector (callout 1), and then release the wire harnesses (callout 2) from the guides (callout 3).

Figure 1-412 Remove the lifter assembly (1x500-sheet paper feeder; 1 of 2)

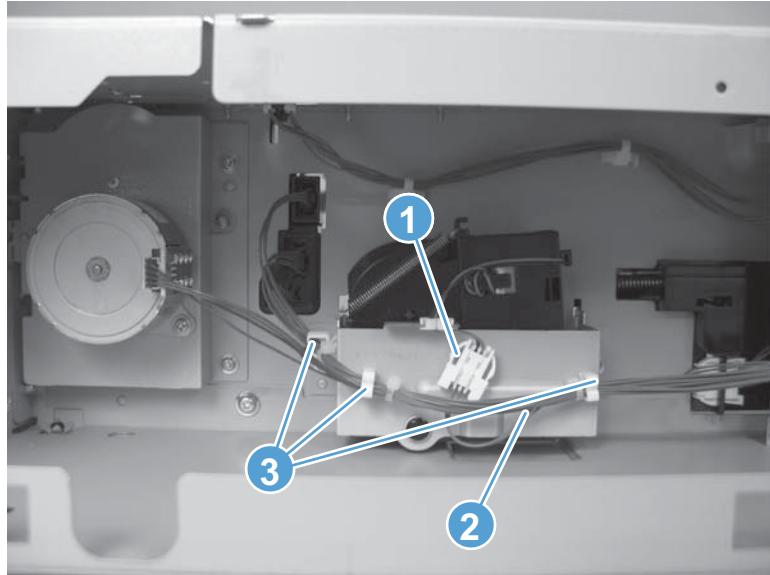

2. Remove two screws (callout 1), and then remove the sheet-metal plate (callout 2). Remove one spring (callout 3), and then remove the lifter drive assembly.

Figure 1-413 Remove the lifter assembly (1x500-sheet paper feeder; 2 of 2)

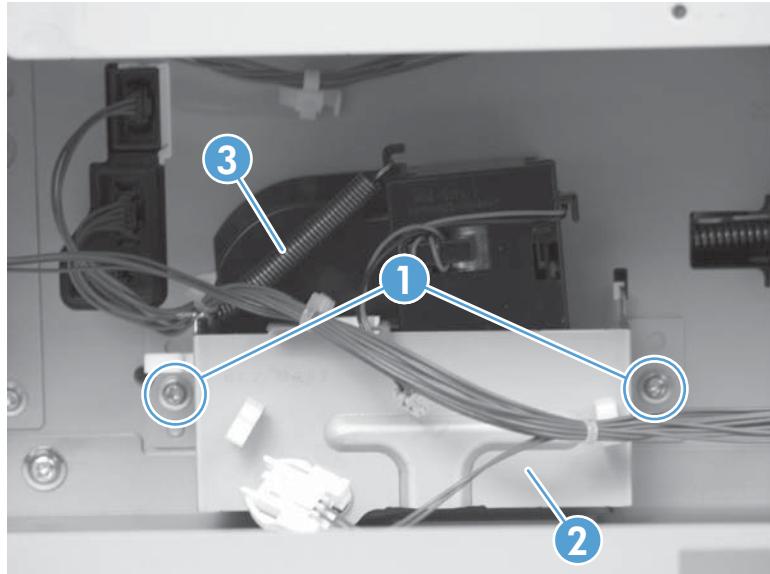

Pickup motor assembly (1x500-sheet paper feeder)


Before proceeding, remove the following assemblies

- Rear cover (1x500-sheet paper feeder). See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).

Remove the pickup motor assembly (1x500-sheet paper feeder)


1. Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the pickup motor assembly (callout 3).

Figure 1-414 Remove the pickup motor assembly (1x500-sheet paper feeder; 1 of 2)

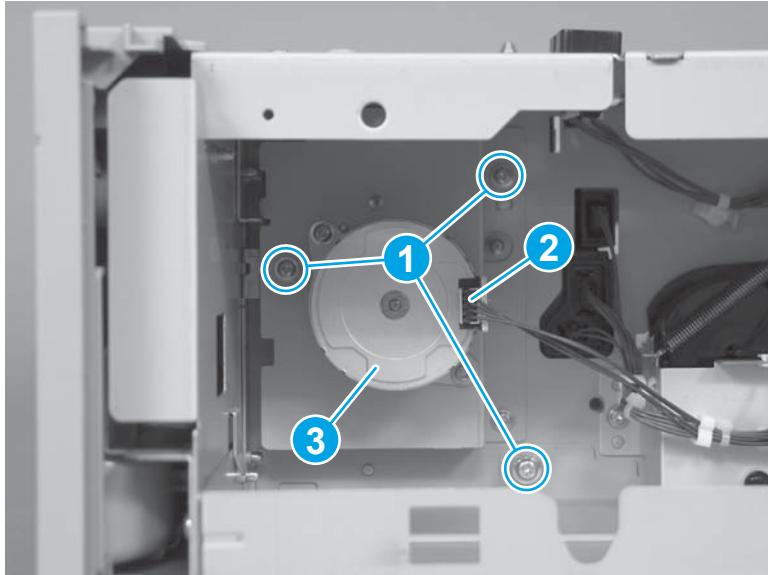

2. Remove two screws (callout 1) and then separate the paper-pickup motor (callout 2) from the paper-pickup drive assembly (callout 3).

Figure 1-415 Remove the pickup motor assembly (1x500-sheet paper feeder; 2 of 2)

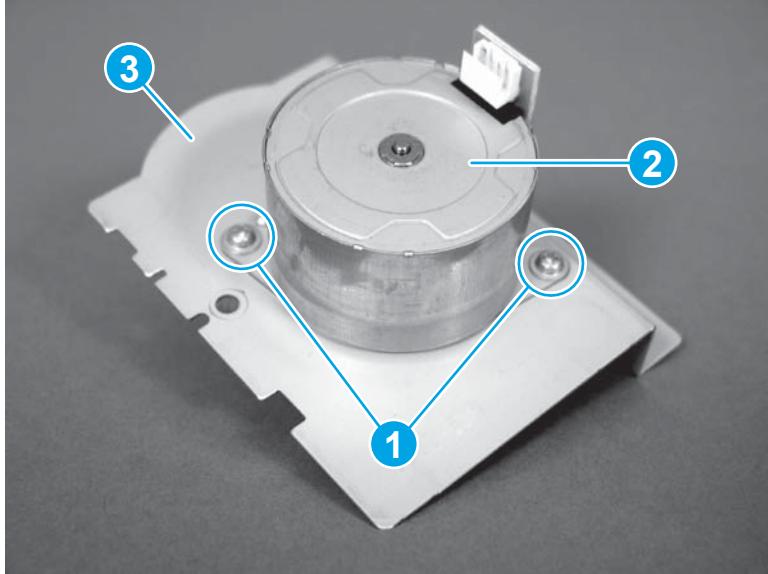

Feeder PCA (1x500-sheet paper feeder)

Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder\) on page 270](#).


Remove the feeder PCA (1x500-sheet paper feeder)



CAUTION: ESD-sensitive assembly.

- ▲ Disconnect four connectors (callout 1), remove two screws (callout 2), release three tabs (callout 3), and then remove the PCA.

Figure 1-416 Remove the feeder PCA (1x500-sheet paper feeder)

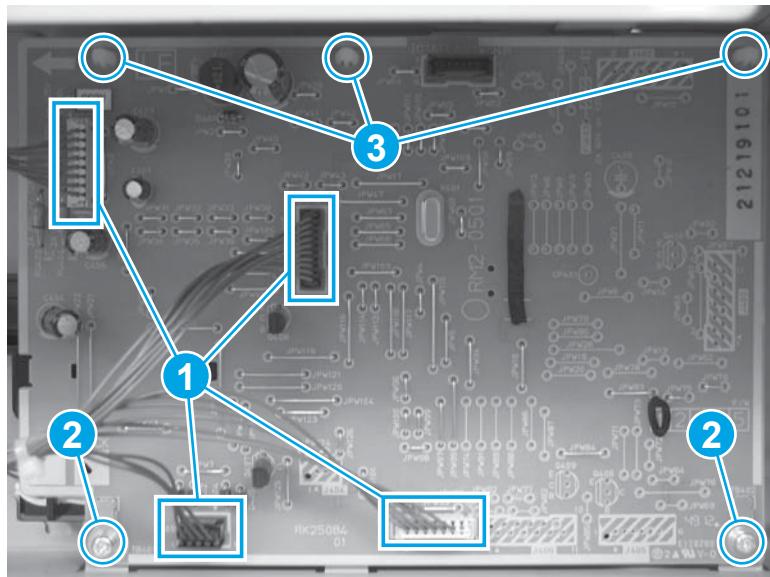


1x500-sheet paper feeder with cabinet




NOTE: HP recommends removing the output accessory from the product before servicing.

Figure 1-417 1x500-sheet paper feeder with cabinet covers, front view

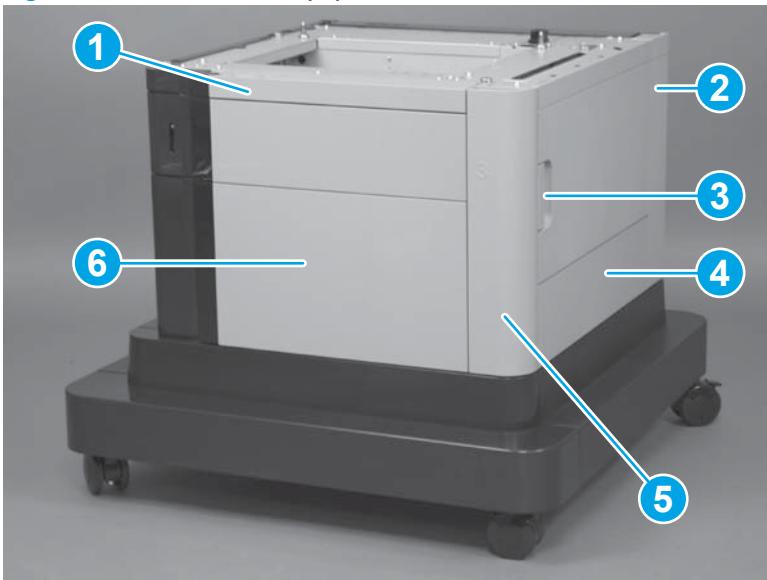

- | | |
|---|-----------------------------|
| 1 | Front upper cover |
| 2 | Right rear cover |
| 3 | Right door assembly |
| 4 | Right center cover |
| 5 | Right front cover |
| 6 | Stock box door (front door) |

Figure 1-418 1x500-sheet paper feeder with cabinet covers, rear view

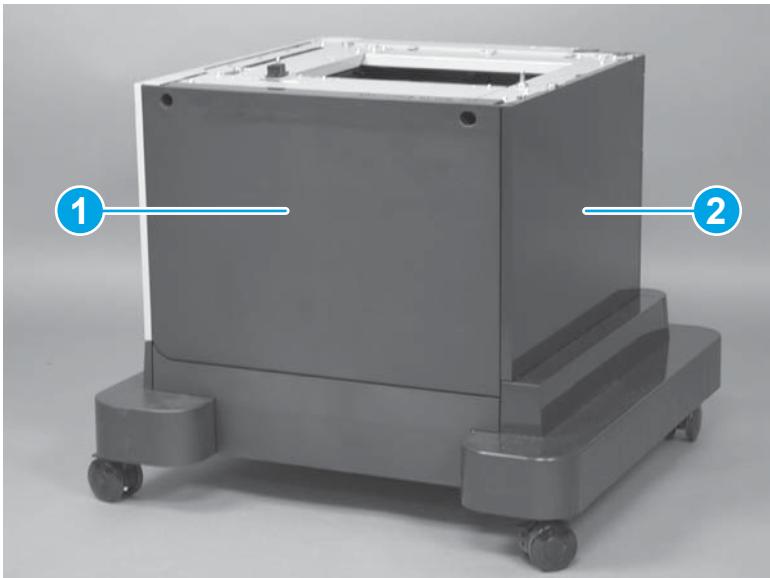


1 Rear cover

2 Left cover

Rear cover (1x500-sheet paper feeder with cabinet)

- ▲ Remove two screws (callout 1), and then remove the rear cover (callout 2).

Figure 1-419 Remove the rear cover (1x500-sheet paper feeder with cabinet)

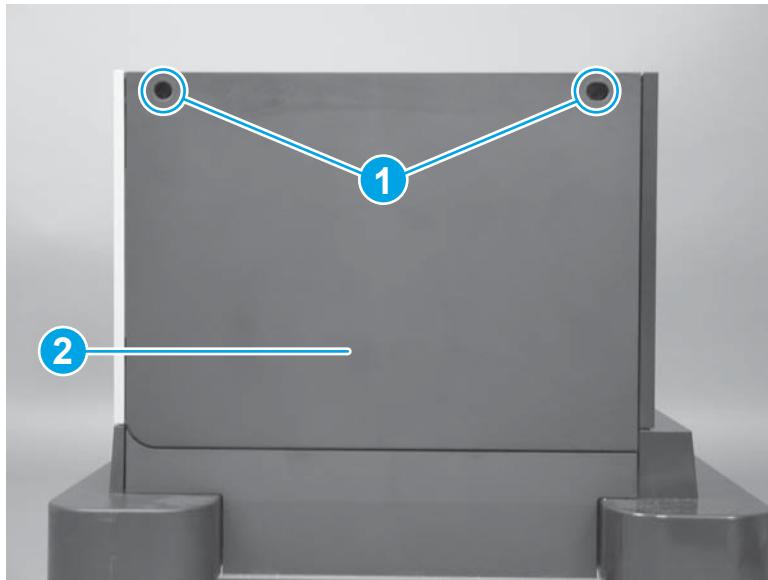

Left cover (1x500-sheet paper feeder with cabinet)

Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).


 **NOTE:** The output accessory must be removed from the product before servicing this assembly.

Remove the left cover (1x500-sheet paper feeder with cabinet)

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).

 **NOTE:** The figure below shows the 2,500-sheet paper feeder. However, this procedure is valid for the 1x500-sheet accessory.


Figure 1-420 Remove the left cover (1x500-sheet paper feeder with cabinet)

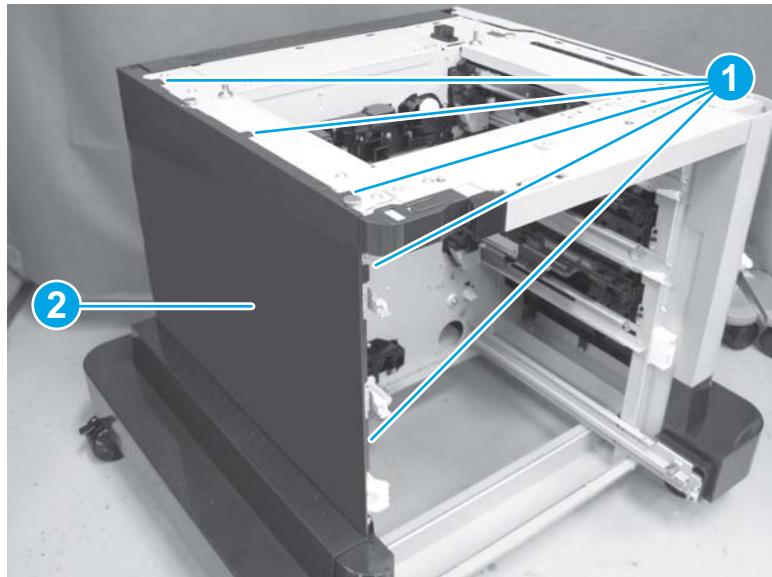

Stock box door (1x500-sheet paper feeder with cabinet)


- Release one tab (callout 1), and then remove the stopper (callout 2).

Figure 1-421 Remove the stock box door (1x500-sheet paper feeder with cabinet; 1 of 2)

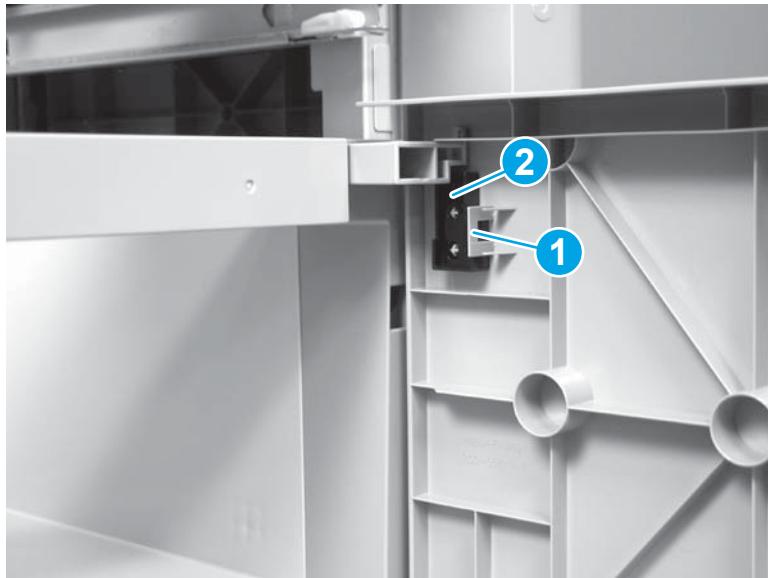

- Release the link arm (callout 1), and then remove the front door (callout 2).

Figure 1-422 Remove the stock box door (1x500-sheet paper feeder with cabinet; 2 of 2)

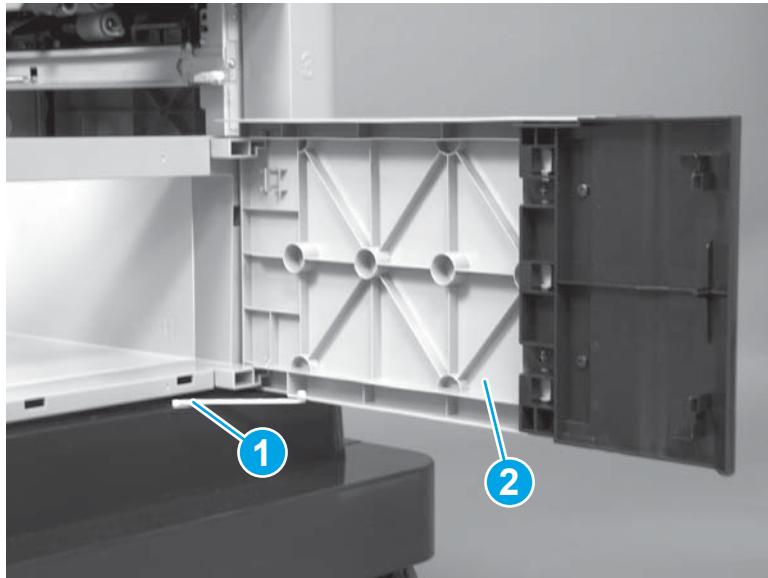

Front upper cover (1x500-sheet paper feeder with cabinet)

Before proceeding, remove the following assemblies


- Stock box door (front door). See [Stock box door \(1x500-sheet paper feeder with cabinet\) on page 286](#).

 **NOTE:** The output accessory must be removed from the product before servicing this assembly.

Remove the front upper cover (1x500-sheet paper feeder with cabinet)

- ▲ Remove three screws (callout 1), release two tabs (callout 2), and then remove the front upper cover (callout 3).

Figure 1-423 Remove the front upper cover (1x500-sheet paper feeder with cabinet)

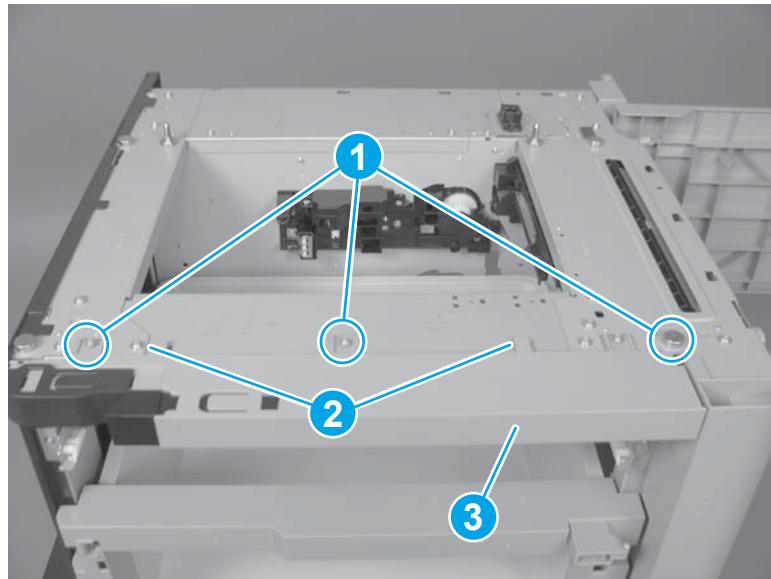

Right-front cover (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Stock box door (front door). See [Stock box door \(1x500-sheet paper feeder with cabinet\) on page 286](#).
- Front upper cover. See [Front upper cover \(1x500-sheet paper feeder with cabinet\) on page 287](#).

Remove the right-front cover (1x500-sheet paper feeder with cabinet)

- ▲ Open the right door. Remove one screw (callout 1), and then remove the right-front cover (callout 2).


Figure 1-424 Remove the right-front cover (1x500-sheet paper feeder with cabinet)

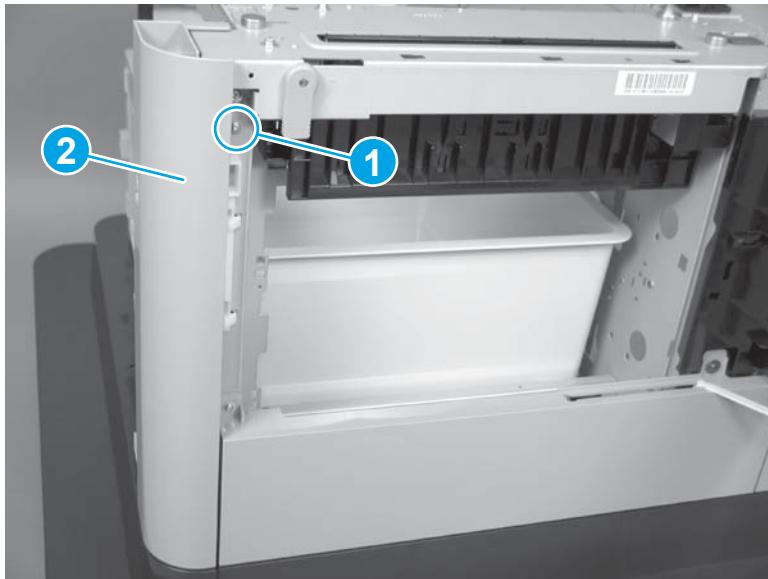

Right door (1x500-sheet paper feeder with cabinet)


1. Open the right door, release one tab (callout 1), and then remove the stopper (callout 2).

Figure 1-425 Remove the right door (1x500-sheet paper feeder with cabinet; 1 of 3)

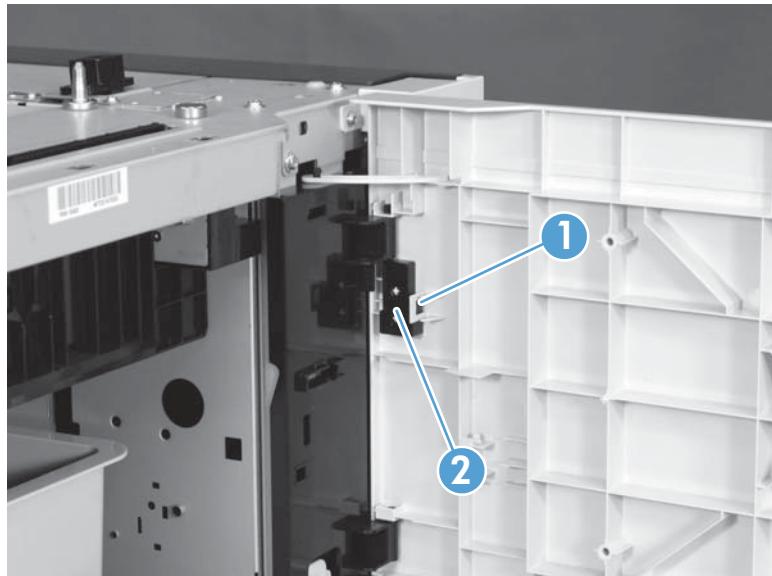


2. Close the right door slightly, and then release the upper link arm.

Figure 1-426 Remove the right door (1x500-sheet paper feeder with cabinet; 2 of 3)

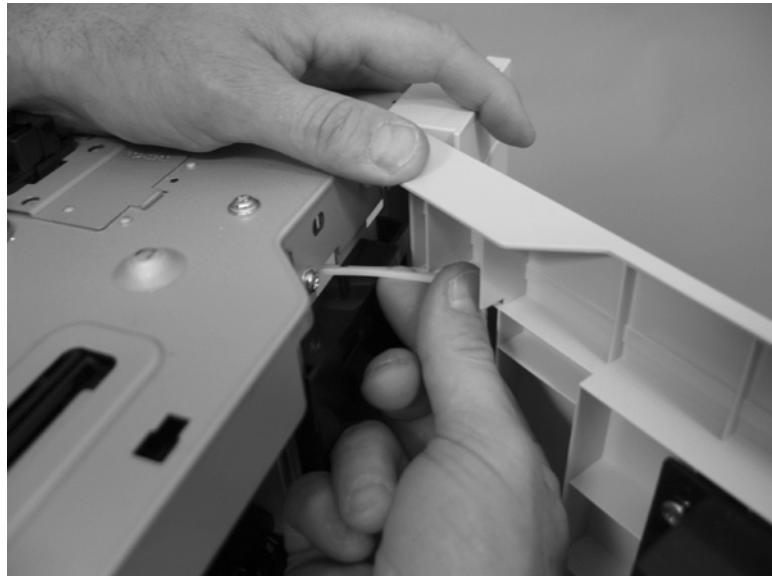

3. Slide the door to release the lower link arm, and then remove the right door.

Figure 1-427 Remove the right door (1x500-sheet paper feeder with cabinet; 3 of 3)

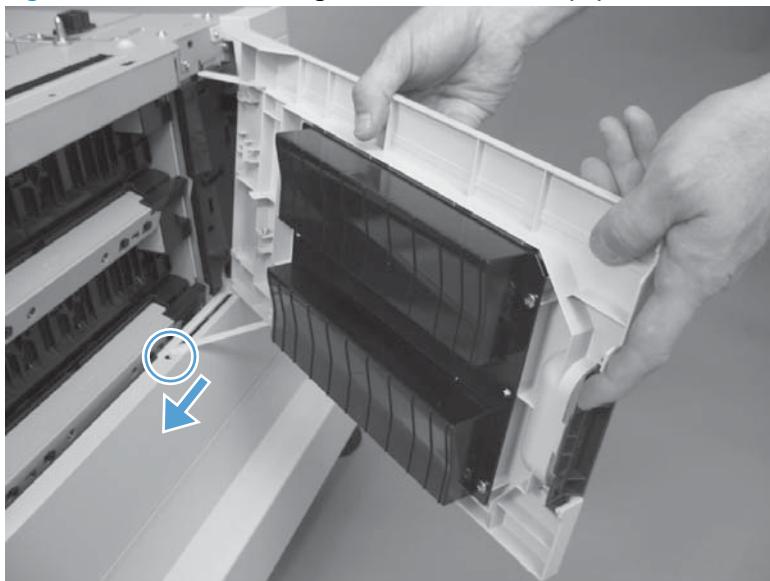

Right center cover (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Right door. See [Right door \(1x500-sheet paper feeder with cabinet\) on page 289](#).

Remove the right center cover (1x500-sheet paper feeder with cabinet)

- ▲ Remove two screws (callout 1), release one tab (callout 2), and then remove the right center cover (callout 3).

Figure 1-428 Remove the right center cover (1x500-sheet paper feeder with cabinet)

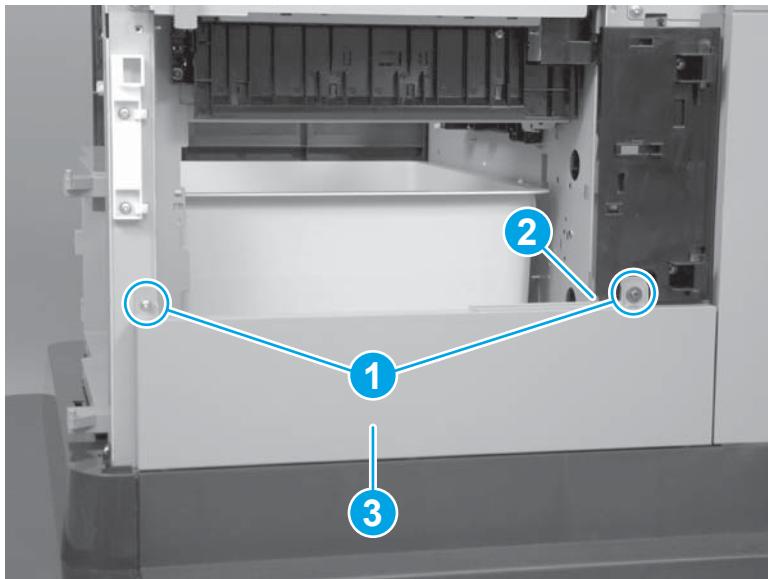

Rear-right cover (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Right door . See [Right door \(1x500-sheet paper feeder with cabinet\) on page 289](#).

Remove the rear-right cover (1x500-sheet paper feeder with cabinet)

- ▲ Remove one screw (callout 1), and then remove the rear-right cover (callout 2).

Figure 1-429 Remove the rear-right cover (1x500-sheet paper feeder with cabinet)

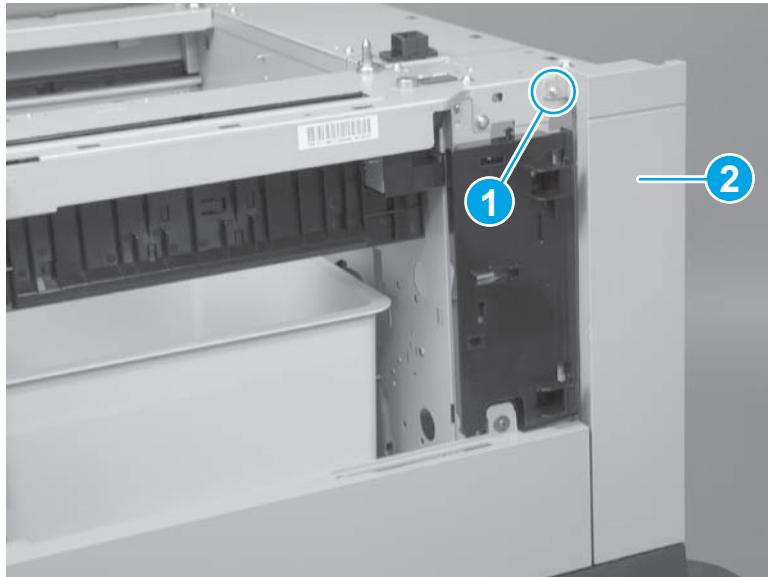

Paper-pickup assembly (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).
- Stock box door. See [Stock box door \(1x500-sheet paper feeder with cabinet\) on page 286](#)
- Front upper cover. See [Front upper cover \(1x500-sheet paper feeder with cabinet\) on page 287](#).
- Right front cover. See [Right-front cover \(1x500-sheet paper feeder with cabinet\) on page 288](#).

Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet)


1. Remove one screw (callout 1), and then remove the tray rail (callout 2).

Figure 1-430 Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 1 of 4)

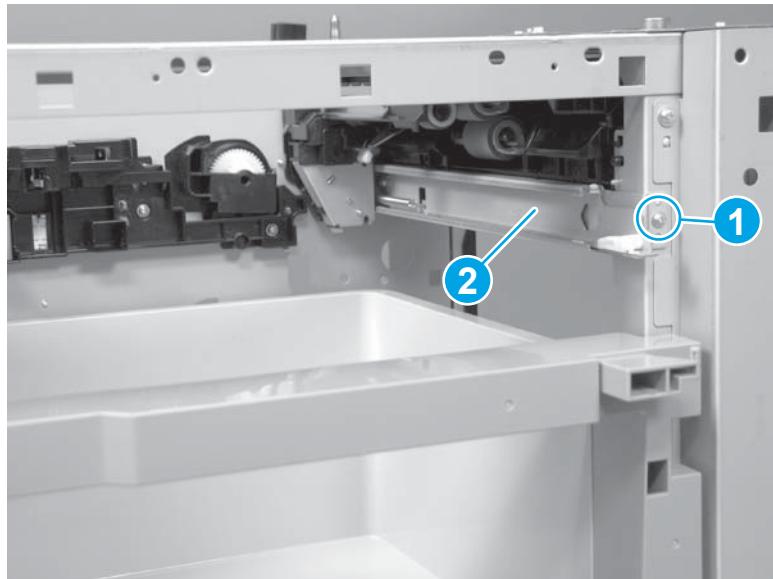


2. Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor assembly (callout 3).

Figure 1-431 Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 2 of 4)

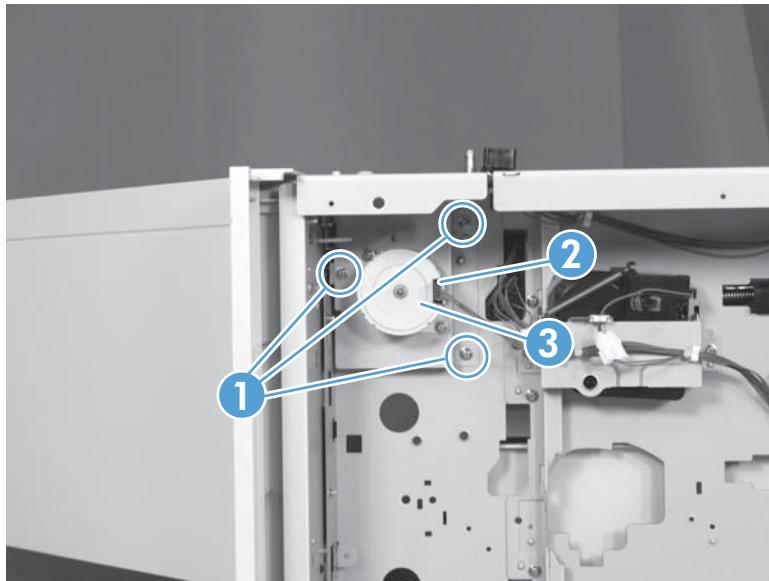


3. Remove one screw (callout 1), and then disconnect three connectors (callout 2).

Figure 1-432 Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 3 of 4)

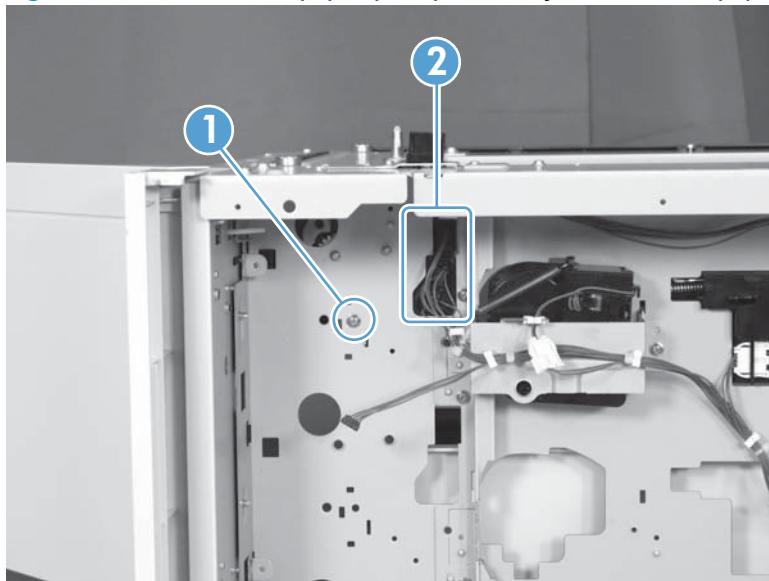

4. Remove one screw (callout 1), and then remove the paper-pickup assembly (callout 2).

Figure 1-433 Remove the paper-pickup assembly (1x500-sheet paper feeder with cabinet; 4 of 4)

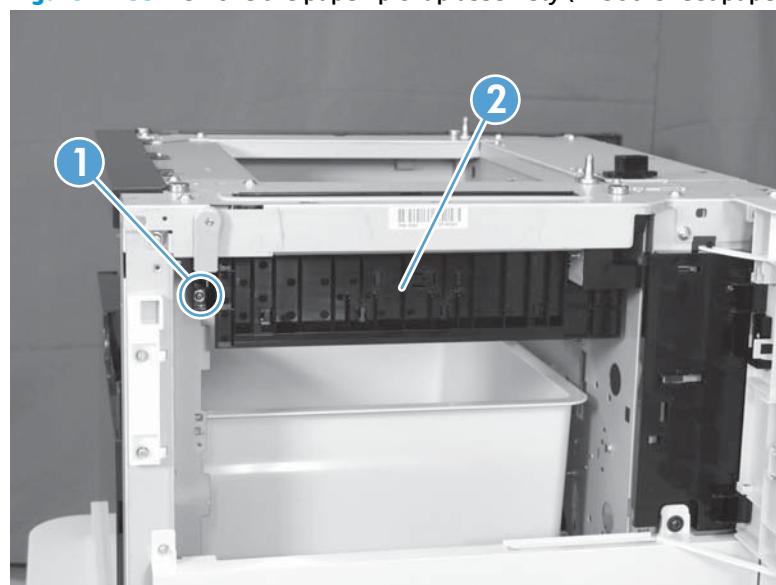

Lifter base assembly (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).

Remove the lifter base assembly (1x500-sheet paper feeder with cabinet)


1. Disconnect one connector (callout 1).

Figure 1-434 Remove the lifter base assembly (1x500-sheet paper feeder with cabinet; 1 of 2)

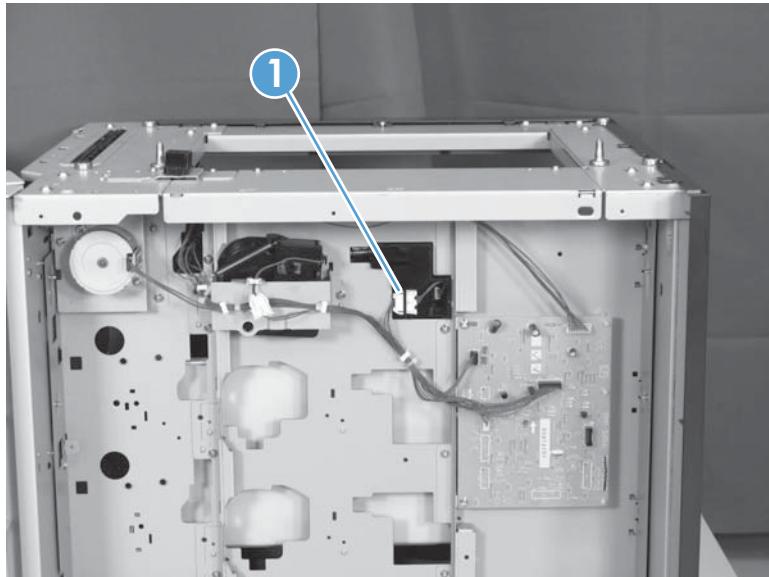

2. Remove four screws (callout 1), and then remove the lifter assembly (callout 2).

Figure 1-435 Remove the lifter base assembly (1x500-sheet paper feeder with cabinet; 2 of 2)

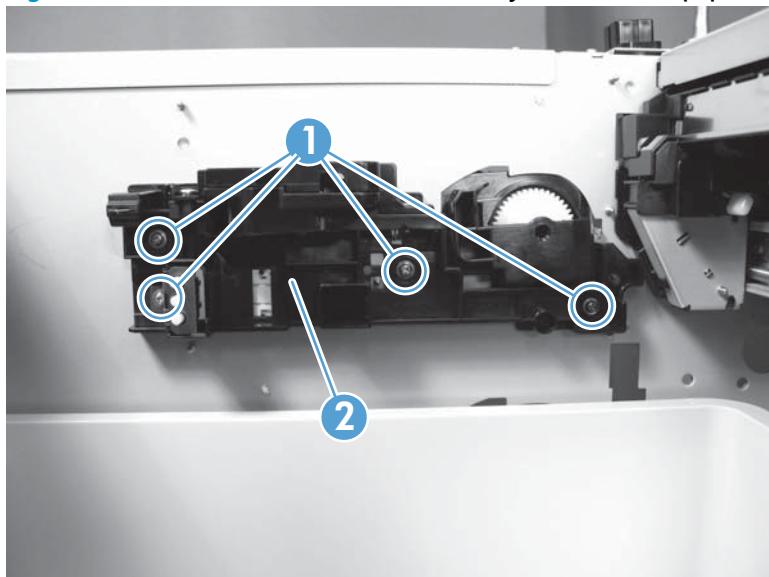

Lifter assembly (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).

Remove the lifter assembly (1x500-sheet paper feeder with cabinet)


1. Disconnect one connector (callout 1), and then release the wire harnesses (callout 3) from the guides (callout 2).

Figure 1-436 Remove the lifter assembly (1x500-sheet paper feeder with cabinet; 1 of 2)

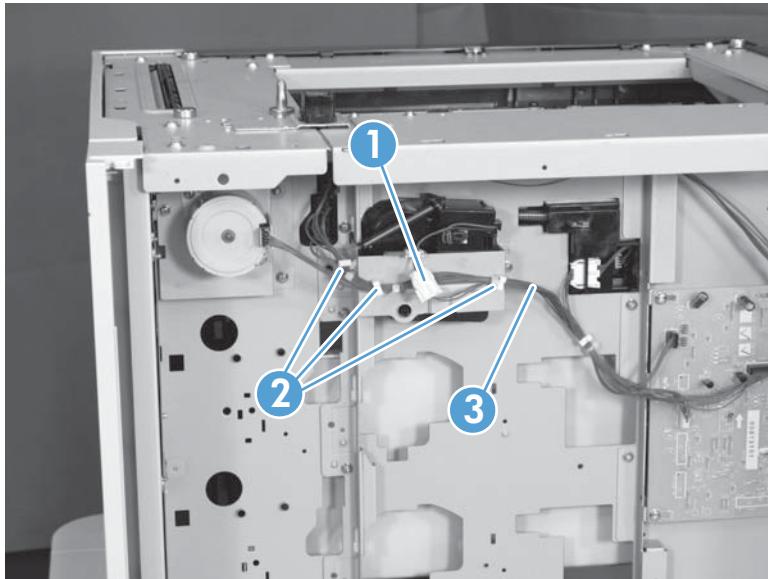

2. Remove two screws (callout 1), and then remove the sheet-metal plate (callout 2). Remove one spring (callout 3), and then remove the lifter drive assembly.

Figure 1-437 Remove the lifter assembly (1x500-sheet paper feeder with cabinet; 2 of 2)

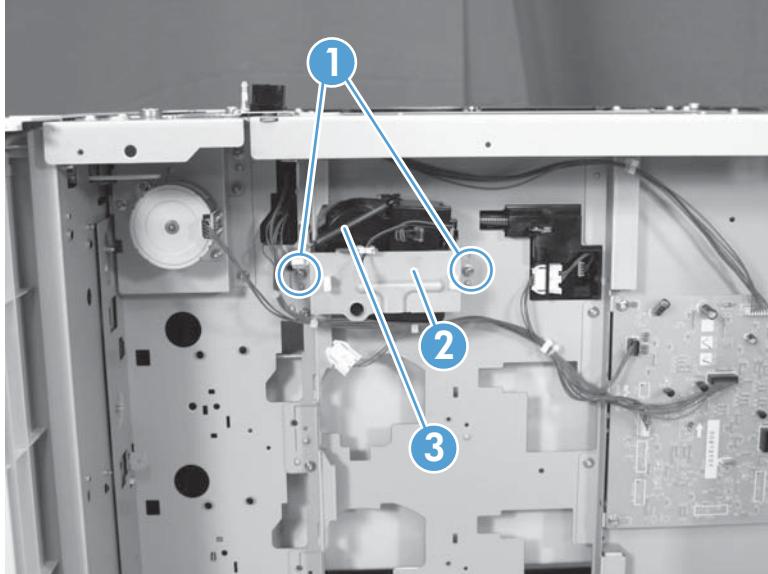

Pickup motor assembly (1x500-sheet paper feeder with cabinet)


Before proceeding, remove the following assemblies

- Rear cover (optional paper feeder). See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).

Remove the pickup motor (1x500-sheet paper feeder with cabinet) assembly

- ▲ Remove three screws (callout 1), disconnect one connector (callout 2), and then remove the motor assembly (callout 3).

Figure 1-438 Remove the pickup motor assembly (1x500-sheet paper feeder with cabinet)

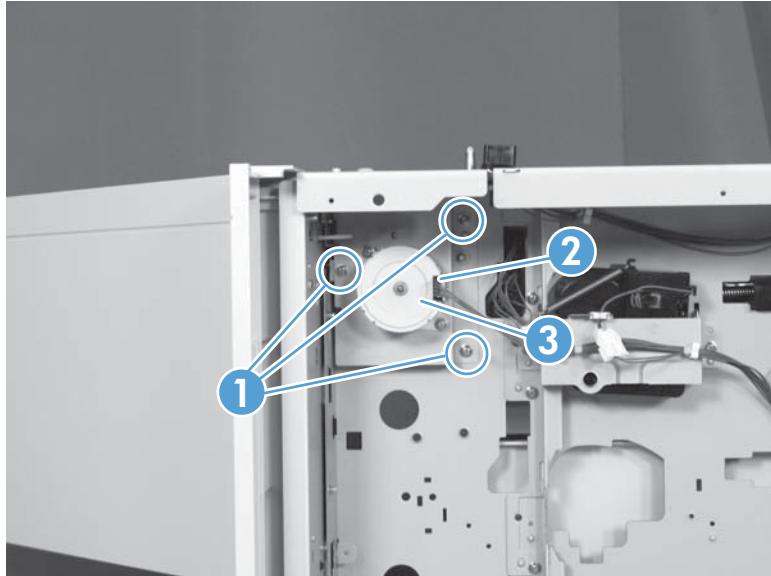

Feeder PCA (1x500-sheet paper feeder with cabinet)

Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(1x500-sheet paper feeder with cabinet\) on page 284](#).

Remove the feeder PCA (1x500-sheet paper feeder with cabinet)




CAUTION:



ESD-sensitive assembly.

- ▲ Disconnect four connectors (callout 1), and remove two screws (callout 2). Release three tabs (callout 3), and then remove the PCA.

Figure 1-439 Remove the feeder PCA (1x500-sheet paper feeder with cabinet)

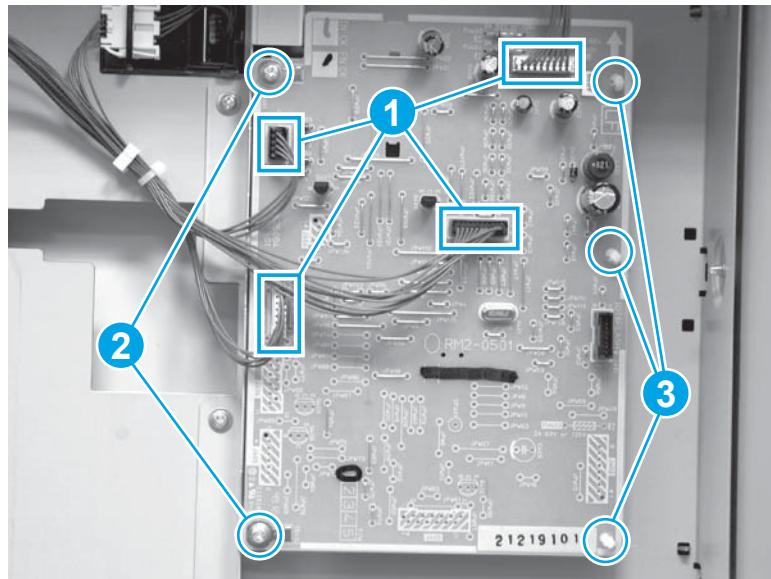


2,500-sheet paper feeder HCI




NOTE: HP recommends removing the output accessory from the product before servicing.

Figure 1-440 2,500-sheet paper feeder HCI covers, front view

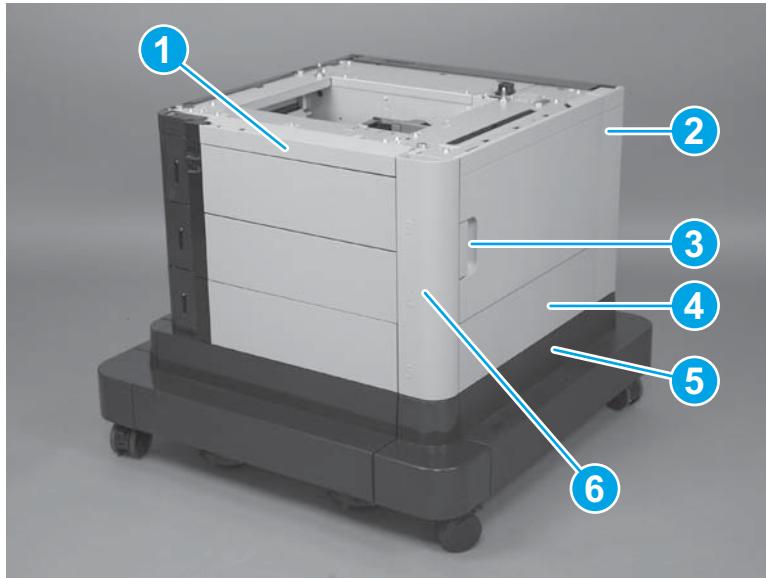

- | | |
|---|---------------------|
| 1 | Front upper cover |
| 2 | Right rear cover |
| 3 | Right door assembly |
| 4 | Right center cover |
| 5 | Right lower cover |
| 6 | Right front cover |

Figure 1-441 2,500-sheet paper feeder HCI covers, rear view

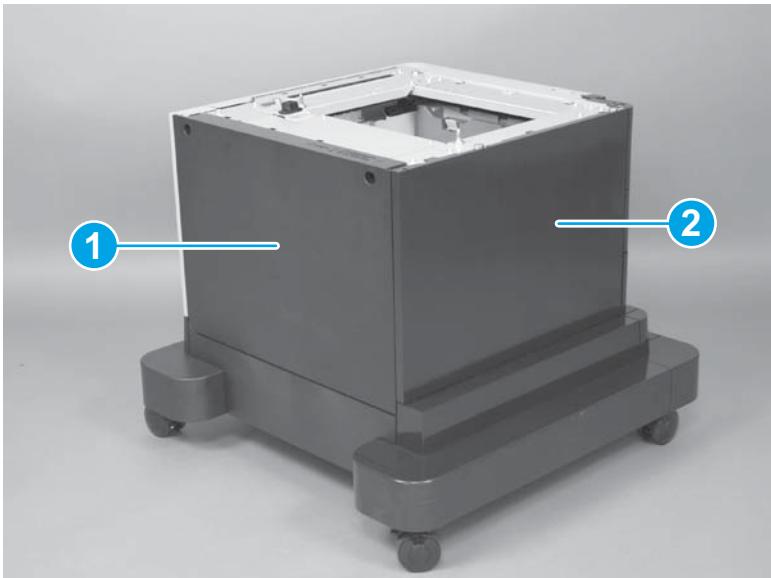


1 Rear cover

2 Left cover

Rear cover (2,500-sheet paper feeder HCI)


1. Remove two screws (callout 1), and then remove the rear cover assembly (callout 2).

Figure 1-442 Remove the rear cover (2,500-sheet paper feeder HCI; 1 of 2)

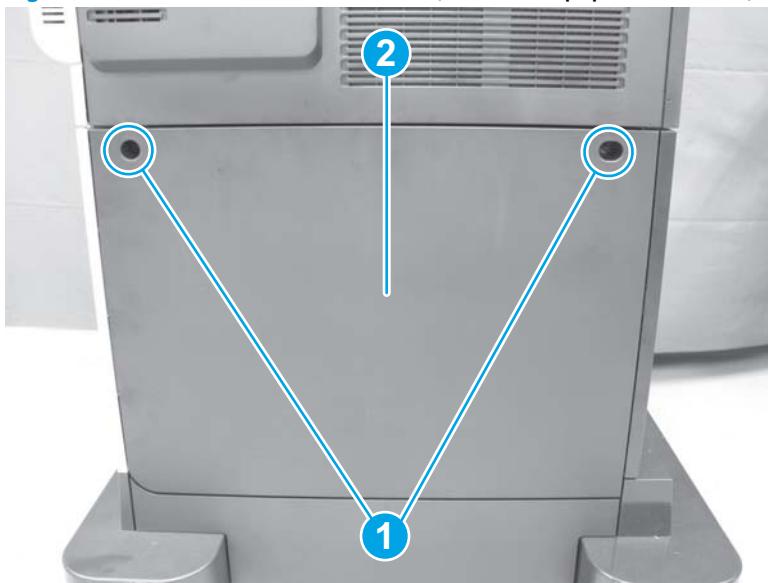

2. To separate the lower rear cover from the rear cover: Remove two screws (callout 1) and remove the rear cover (callout 2) from the lower rear cover (callout 3).

Figure 1-443 Remove the rear cover (2,500-sheet paper feeder HCI; 2 of 2)

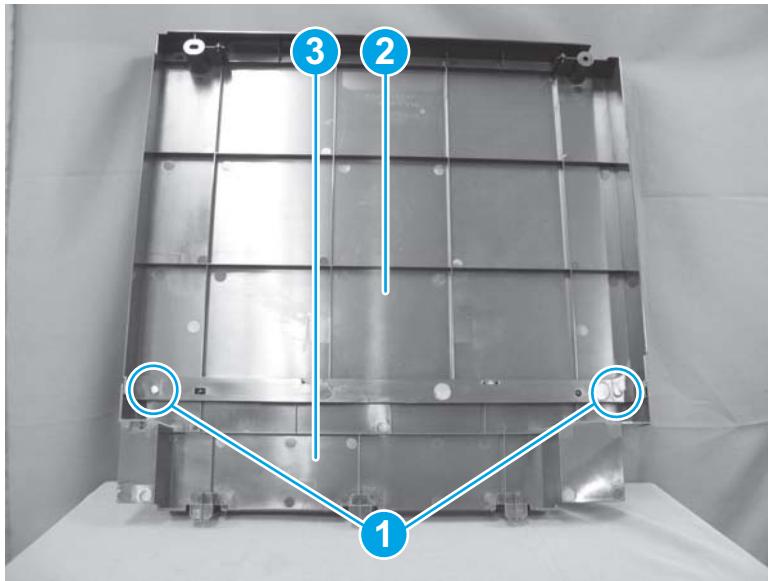


Left cover (2,500-sheet paper feeder HCI)

 **NOTE:** The output accessory must be removed from the product before servicing this assembly.

- ▲ Release five tabs (callout 1), and then remove the left cover (callout 2).

Figure 1-444 Remove the left cover (2,500-sheet paper feeder HCI)

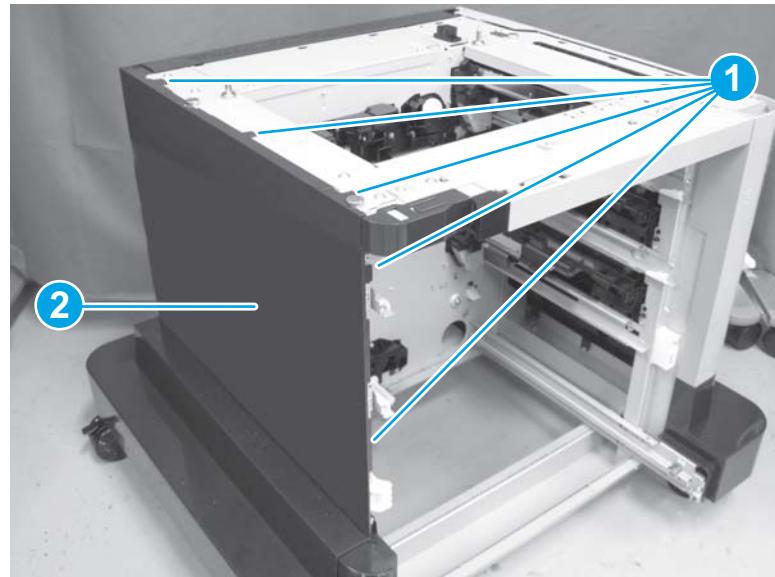


Front upper cover (2,500-sheet paper feeder HCI)

 **NOTE:** The output accessory must be removed from the product before servicing this assembly.

- ▲ Remove three screws (callout 1), release two tabs (callout 2), and remove the front upper cover (callout 3).

Figure 1-445 Remove the front upper cover (2,500-sheet paper feeder HCI)

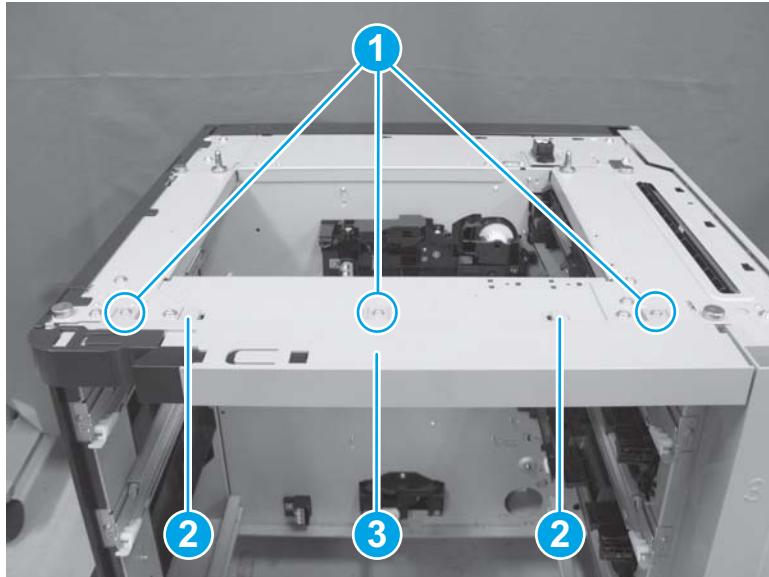

Right front cover (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Front upper cover. See [Front upper cover \(2,500-sheet paper feeder HCI\) on page 304](#).

Remove the right front cover (2,500-sheet paper feeder HCI)

- ▲ Open the right door. Remove one screw (callout 1), and then lift the right front cover (callout 2) to remove it.


Figure 1-446 Remove the right front cover (2,500-sheet paper feeder HCI)

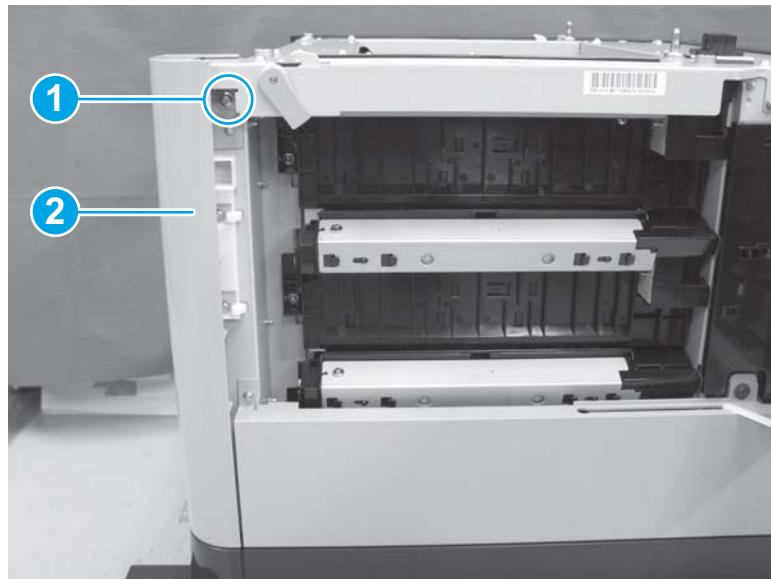

Right door assembly (2,500-sheet paper feeder HCl)


1. Open the right door, release one tab (callout 1), and then remove the stopper (callout 2)

Figure 1-447 Remove the right door (2,500-sheet paper feeder HCl; 1 of 3)

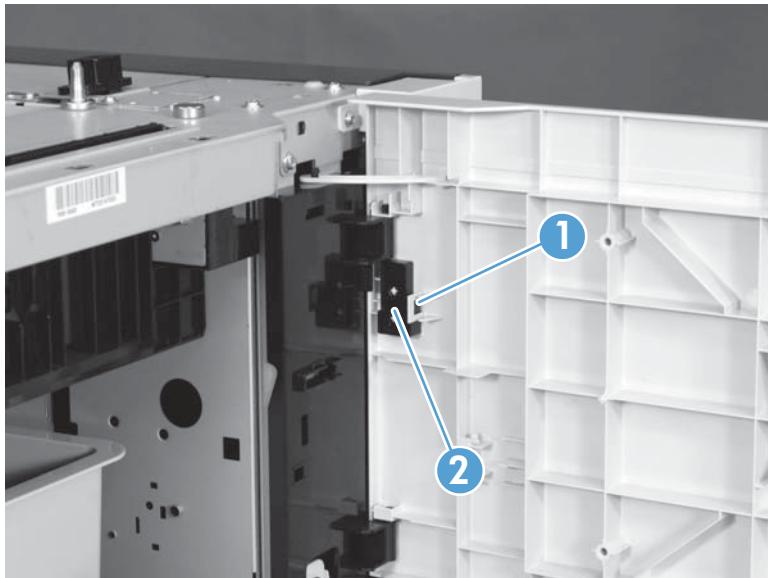


2. Close the right door slightly, and then release the upper link arm.

Figure 1-448 Remove the right door (2,500-sheet paper feeder HCl; 2 of 3)

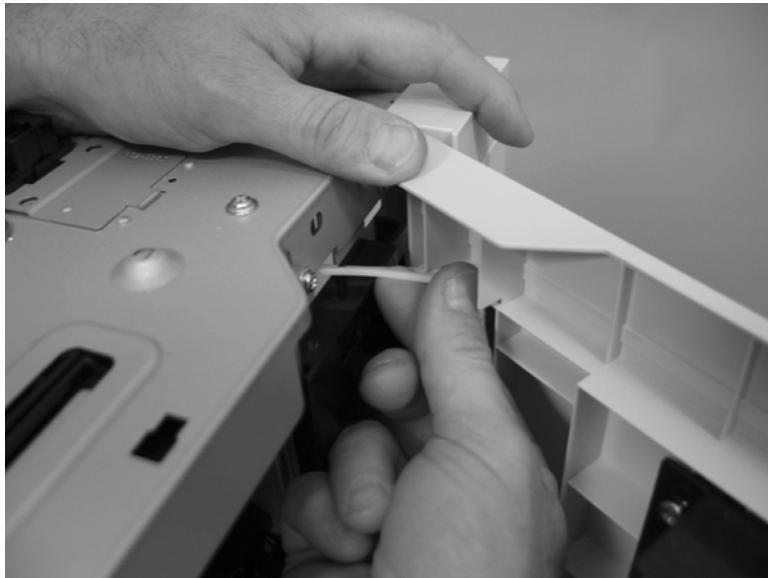

3. Slide the door to release the lower link arm, lift the door up to release the hinge pins, and then remove the right door.

Figure 1-449 Remove the right door (2,500-sheet paper feeder HCI; 3 of 3)

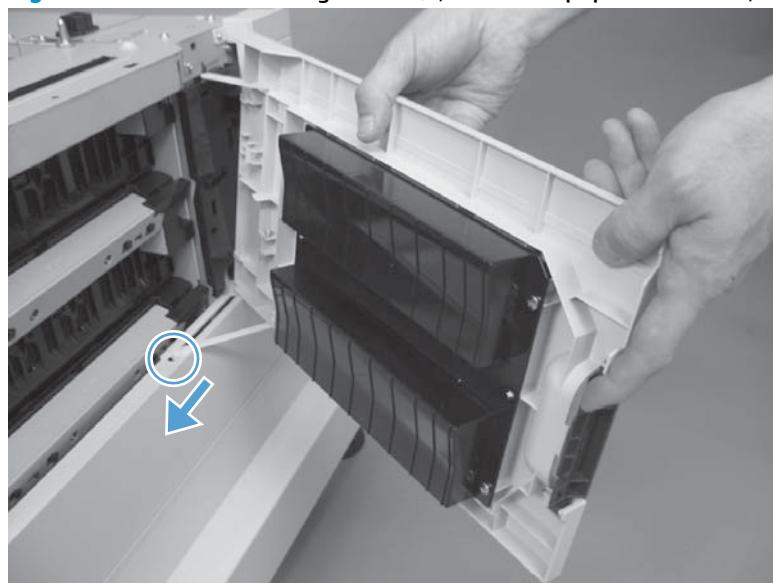

Right center cover (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Right door assembly. See [Right door assembly \(2,500-sheet paper feeder HCI\) on page 306](#).

Remove the right center cover (2,500-sheet paper feeder HCI)

- ▲ Remove two screws (callout 1), release one tab (callout 2), and then remove the right center cover (callout 3).

Figure 1-450 Remove the right center cover (2,500-sheet paper feeder HCI)

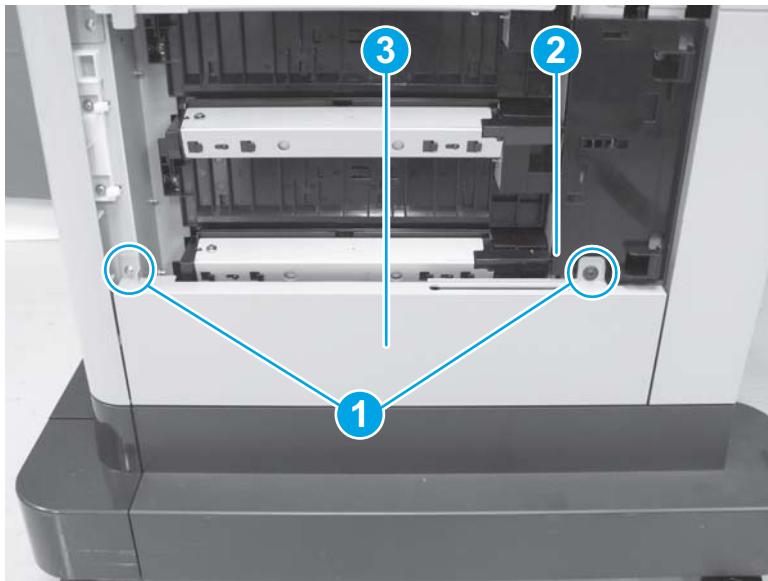

Right rear cover (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Right door assembly. See [Right door assembly \(2,500-sheet paper feeder HCI\) on page 306](#).

Remove the right rear cover (2,500-sheet paper feeder HCI)

- ▲ Remove one screw (callout 1), and then remove the right rear cover (callout 2).

Figure 1-451 Remove the right rear cover (2,500-sheet paper feeder HCI)

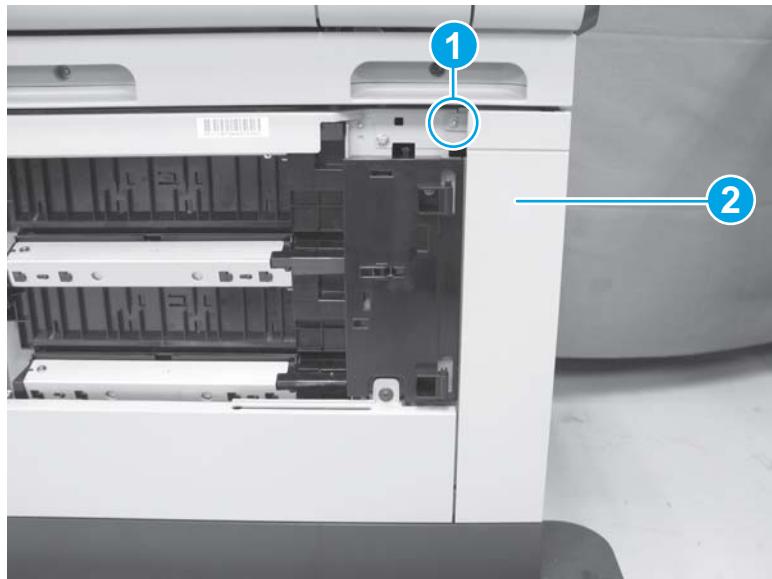

Right lower cover (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Right door assembly. See [Right door assembly \(2,500-sheet paper feeder HCI\) on page 306](#).
- Right center cover. See [Right center cover \(2,500-sheet paper feeder HCI\) on page 308](#).
- Right rear cover. See [Right rear cover \(2,500-sheet paper feeder HCI\) on page 309](#).

Remove the right lower cover (2,500-sheet paper feeder HCI)

- ▲ Remove two screws (callout 1), and then remove the right lower cover (callout 2).

Figure 1-452 Remove the right lower cover (2,500-sheet paper feeder HCI)

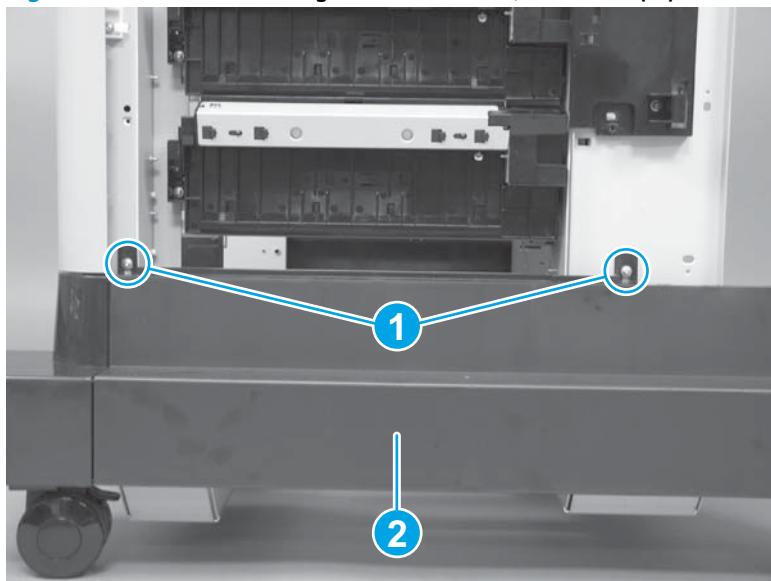

Tray 5 pickup assembly (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).
- Right door. See [Right door assembly \(2,500-sheet paper feeder HCI\) on page 306](#).
- Right center cover. See [Right center cover \(2,500-sheet paper feeder HCI\) on page 308](#).

Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI)


1. Remove one screw (callout 1). Remove the cover (callout 2) and the rail (callout 3).

Figure 1-453 Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI; 1 of 3)

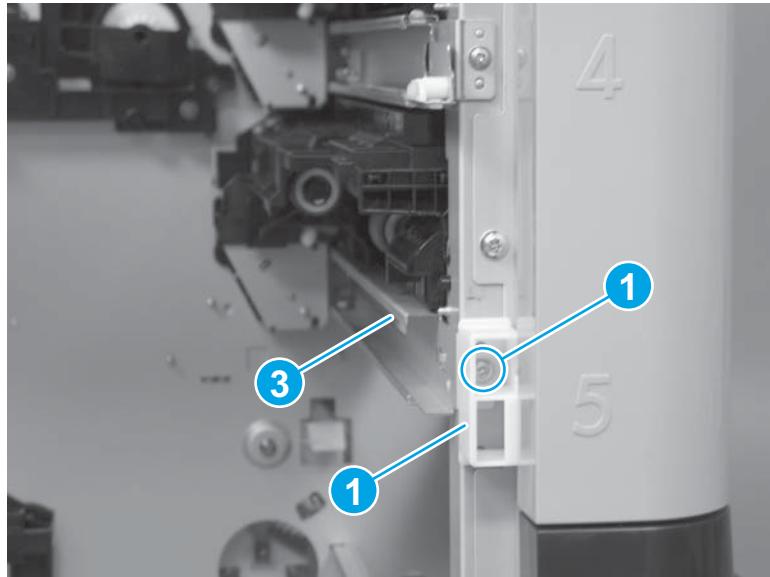


2. On the back of the accessory, remove one screw (callout 1), and disconnect three connectors (callout 2).

Figure 1-454 Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCI; 2 of 3)

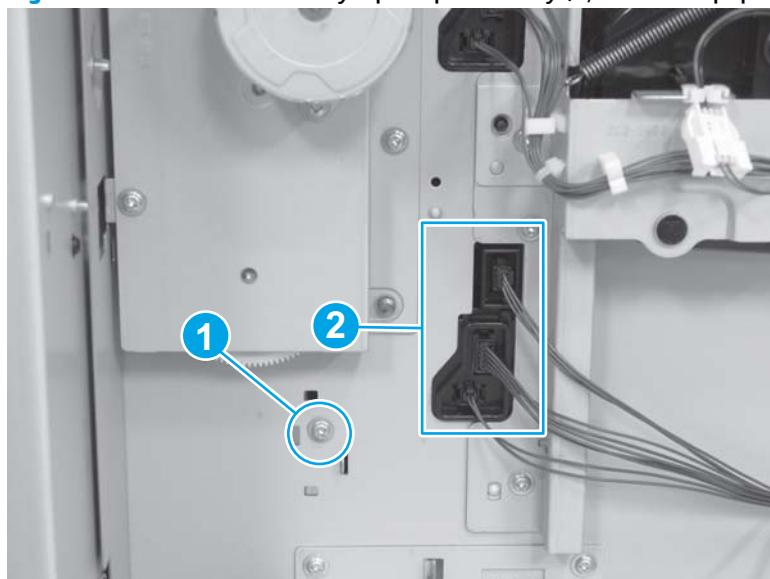

3. On the right side, remove one screw (callout 1), and then remove the pickup assembly (callout 2).

Figure 1-455 Remove the Tray 5 pickup assembly (2,500-sheet paper feeder HCl; 3 of 3)

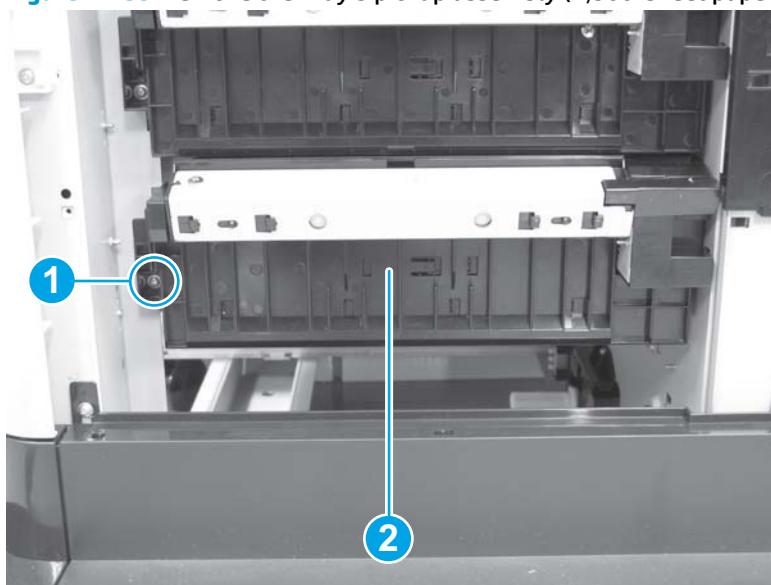

Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI)

Before proceeding, remove the following assemblies


- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).

Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI)

 **NOTE:** The following procedure shows removing the pickup assemblies for both Tray 3 and Tray 4. It is not necessary to remove or replace both assemblies at the same time, though.


1. Remove two screws (callout 1) and then remove the rails (callout 2).

Figure 1-456 Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 1 of 4)

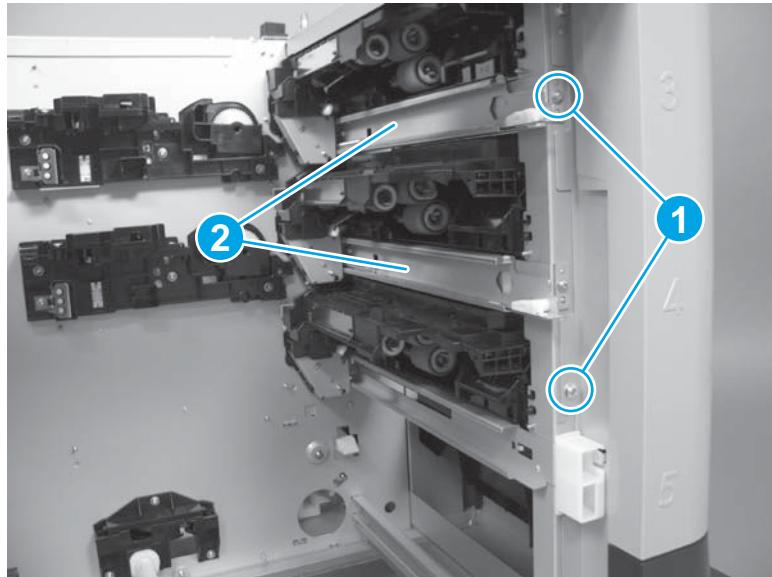


2. Disconnect two connectors (callout 1), remove four screws (callout 2), and then remove the drive assembly.

Figure 1-457 Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI; 2 of 4)

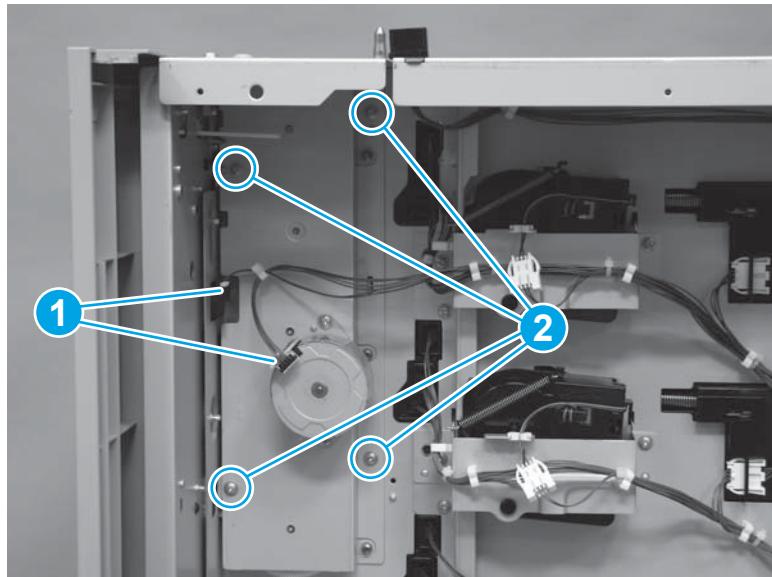


3. Remove two screws (callout 1), and disconnect two sets of three connectors (callout 2).

Figure 1-458 Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCl; 3 of 4)

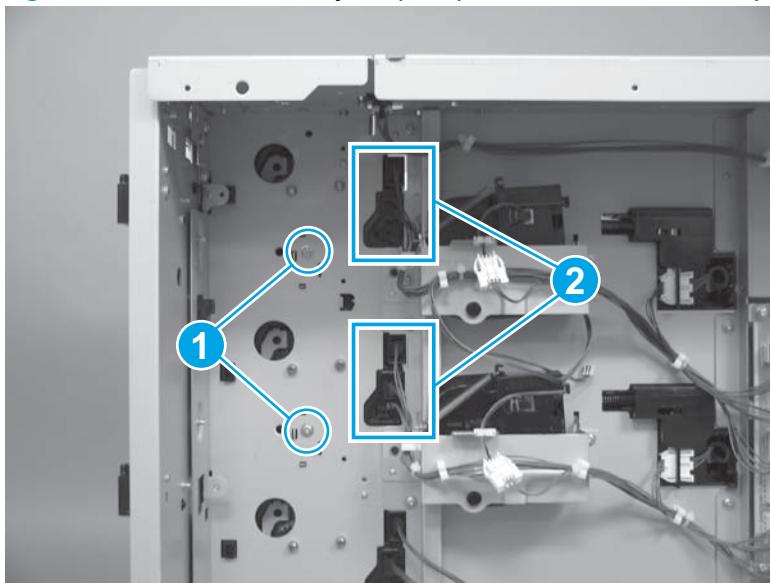

4. Remove two screws (callout 1), and then remove the pickup assemblies (callout 2).

Figure 1-459 Remove the Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCl; 4 of 4)

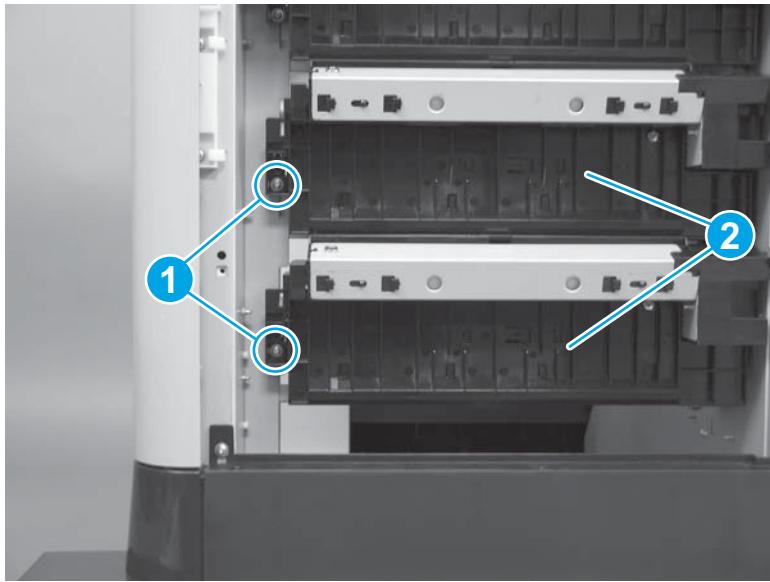

Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI)

Before proceeding, remove the following assemblies


- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).

Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI)

 **NOTE:** The following procedure shows removing the lifter base assemblies for both Tray 3 and Tray 4. It is not necessary to remove or replace both assemblies at the same time, though.


1. Disconnect two connectors (callout 1).

Figure 1-460 Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI; 1 of 2)

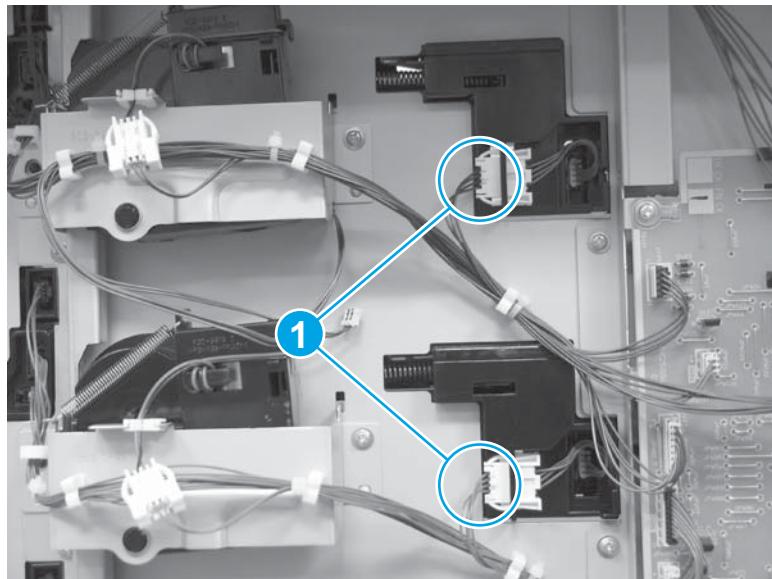

2. Remove eight screws (callout 1), and then remove the lifter base assemblies (callout 2)

Figure 1-461 Remove the Tray 3-4 lifter base assemblies (2,500-sheet paper feeder HCI; 2 of 2)

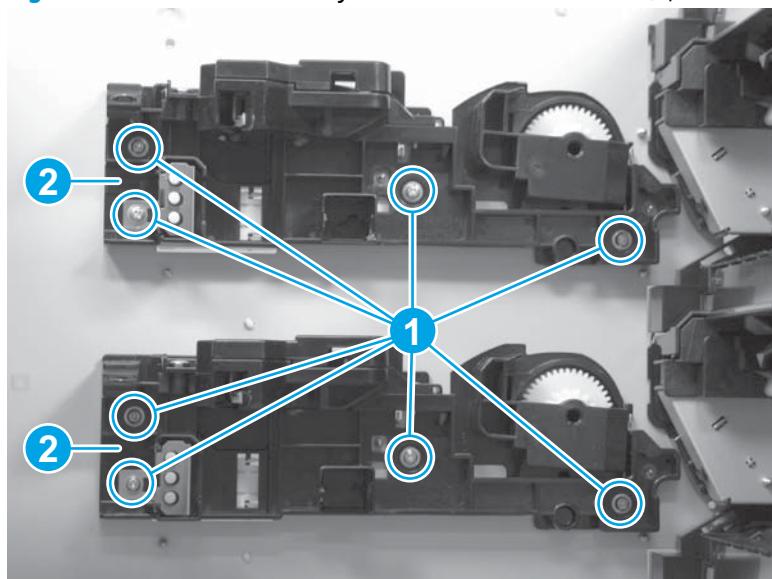

Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI)

Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).


Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI)



NOTE: The following procedure shows removing the lifter assemblies for both Tray 3 and Tray 4. It is not necessary to remove or replace both assemblies at the same time, though.


1. Disconnect two connectors (callout 1) and then release the cables from the clamps (callout 2).

Figure 1-462 Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI; 1 of 2)

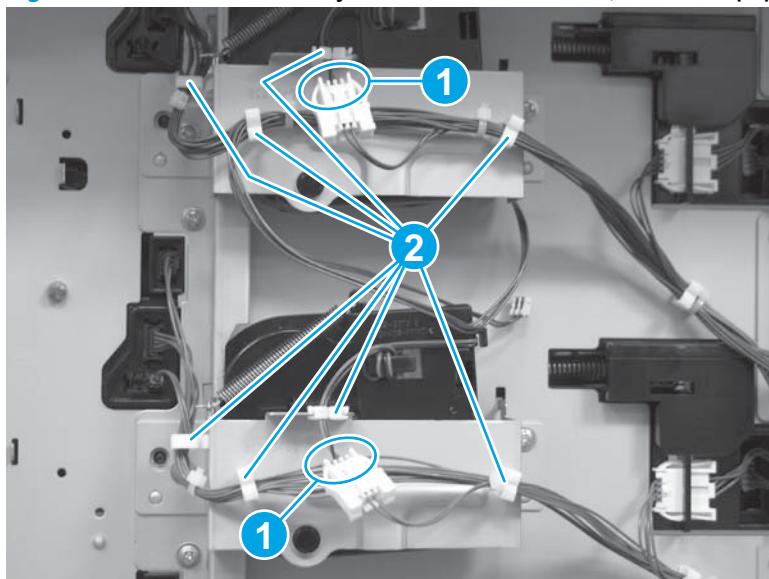

2. Unhook two springs (callout 1), remove four screws (callout 2), remove the metal plates (callout 3), and then remove the lifter assemblies (callout 4).

Figure 1-463 Remove the Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI; 2 of 2)

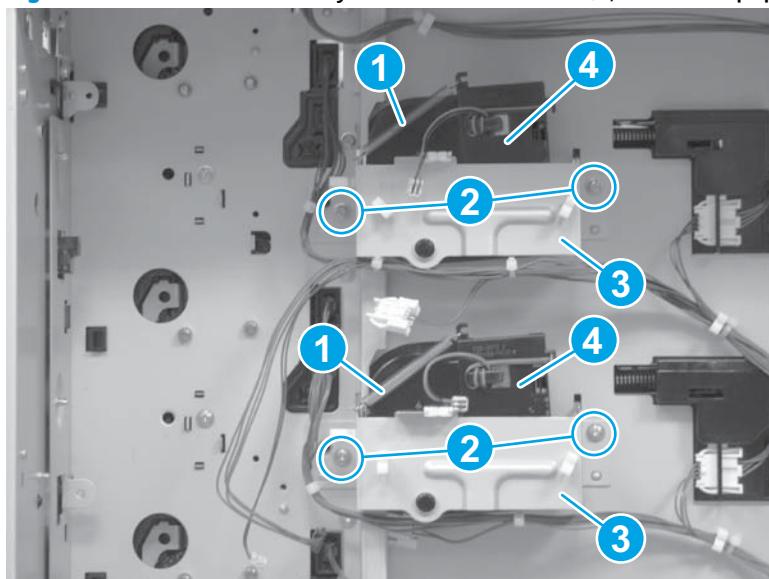

Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).
- Right door. See [Right door assembly \(2,500-sheet paper feeder HCI\) on page 306](#).
- Right center cover. See [Right center cover \(2,500-sheet paper feeder HCI\) on page 308](#).
- Right rear cover. See [Right rear cover \(2,500-sheet paper feeder HCI\) on page 309](#).
- Right lower cover. See [Right lower cover \(2,500-sheet paper feeder HCI\) on page 310](#).

Remove the Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)

- ▲ On the back of the accessory, disconnect one connector (callout 1), remove four screws (callout 2), and then remove the Tray 5 lifter drive assembly (callout 3).

Figure 1-464 Remove the Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)

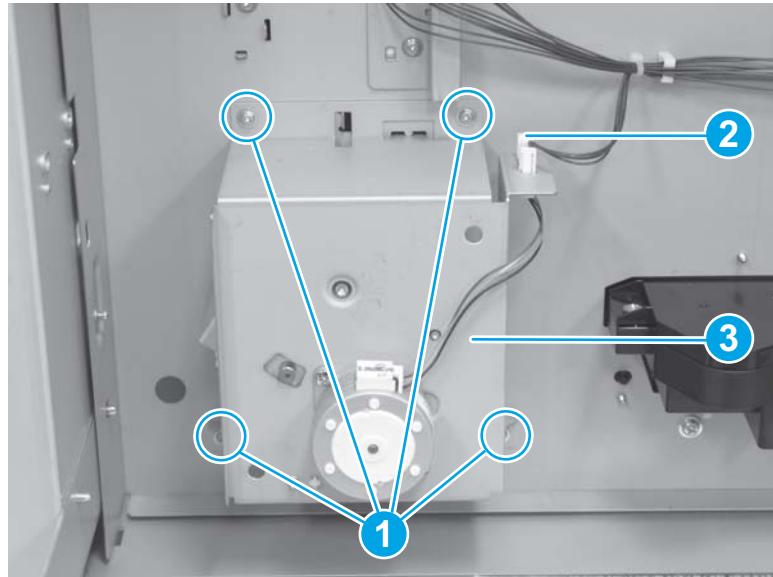

Pickup motor (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).

Remove the pickup motor (2,500-sheet paper feeder HCI)

- ▲ Disconnect one connector (callout 1), remove two screws (callout 2), and then remove the pickup motor (callout 3).

Figure 1-465 Remove the pickup motor (2,500-sheet paper feeder HCI)

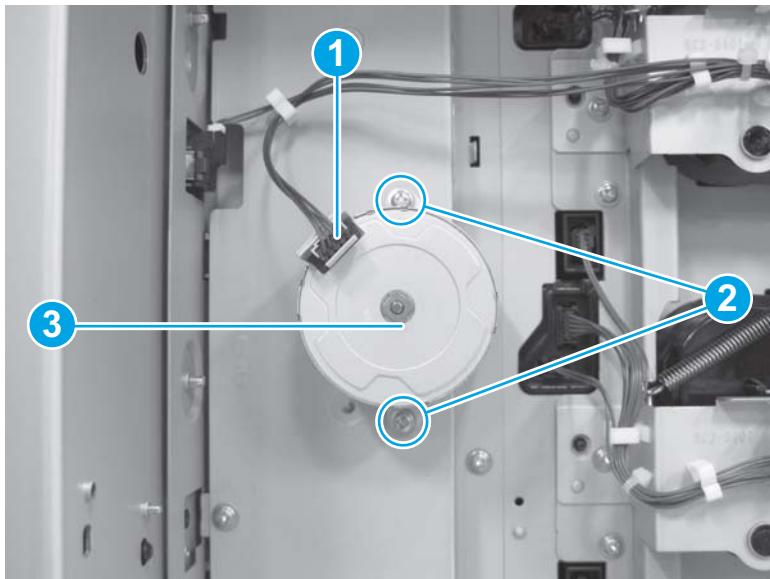

HCI PCA (2,500-sheet paper feeder HCI)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(2,500-sheet paper feeder HCI\) on page 302](#).

Remove the HCI PCA (2,500-sheet paper feeder HCI)

- ▲ Disconnect all the connectors from the HCI HCI PCA. Remove two screws (callout 1), release three tabs (callout 2), and then remove the PCA (callout 3).

Figure 1-466 Remove the HCI PCA (2,500-sheet paper feeder HCI)

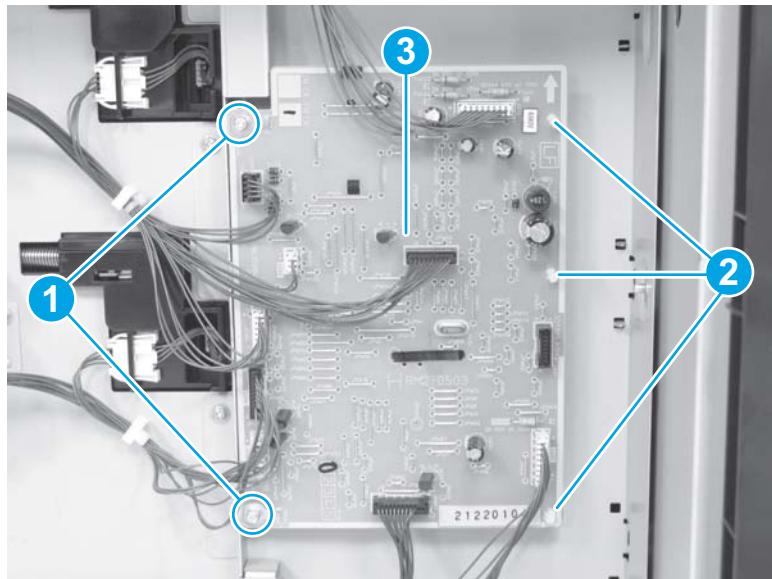


Stapling mailbox (M680)



NOTE: HP recommends removing the output accessory from the product before servicing.

Figure 1-467 Stapling mailbox covers, front view

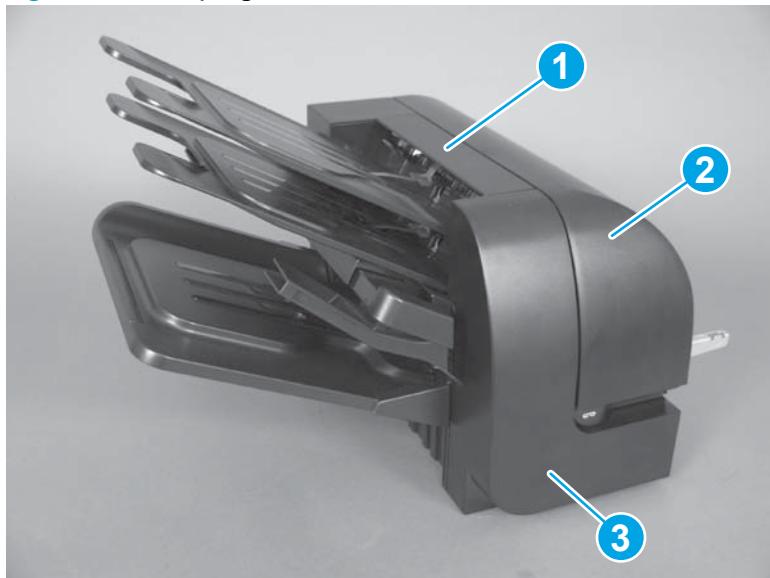


1 Top cover

2 Top door

3 Front door

Figure 1-468 Stapling mailbox covers, rear view

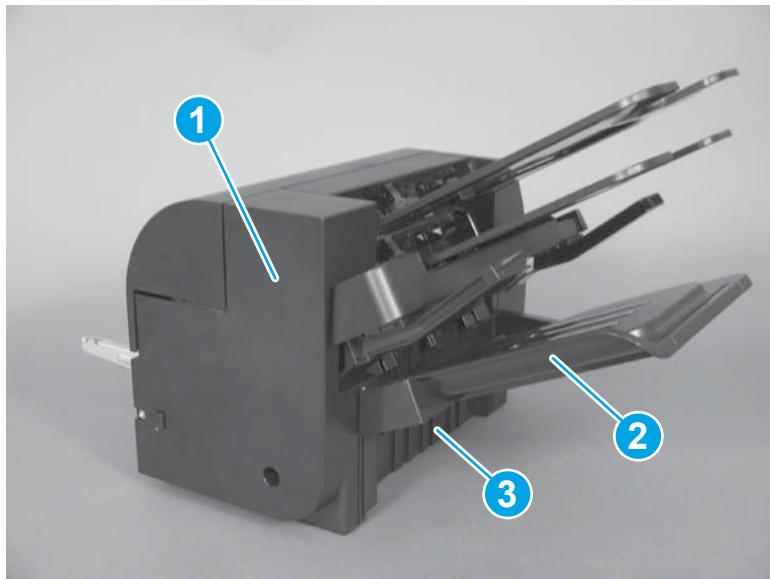

1 Rear cover


2 Tray assembly

3 Stacking panel

Front cover (stapling mailbox)

- ▲ Open the stapling mailbox door, remove one screw (callout 1), release two tabs (callout 2), and then remove the front cover (callout 3).


Figure 1-469 Remove the front cover (stapling mailbox)

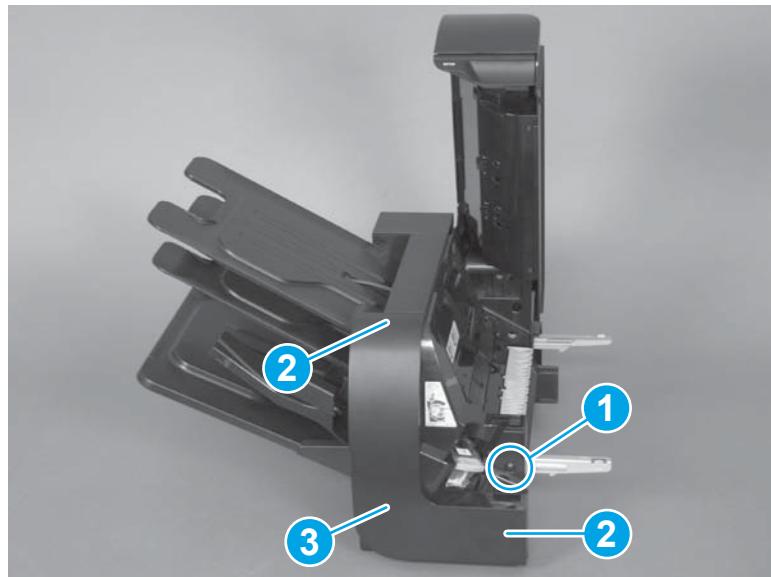

Rear cover (stapling mailbox)

- ▲ Remove two screws (callout 1), release one tab (callout 2), and then remove the rear cover (callout 3).

Figure 1-470 Remove the rear cover (stapling mailbox)

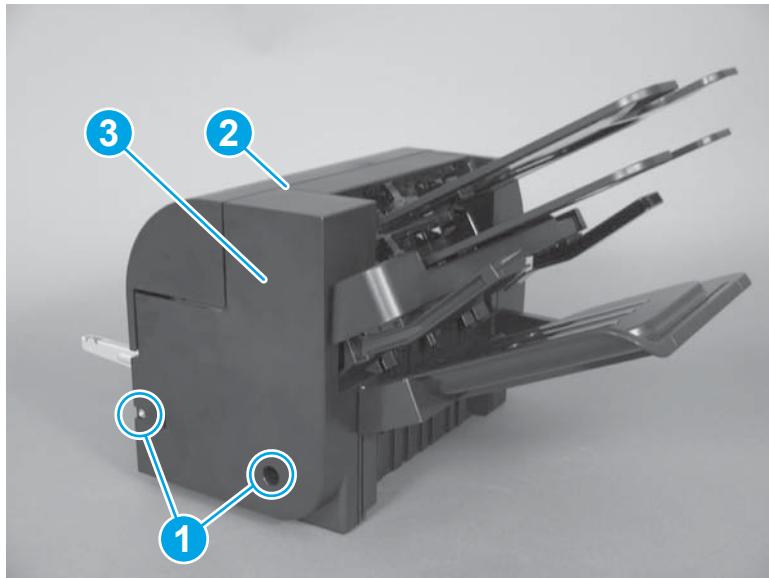

Top door (stapling mailbox)

Before proceeding, remove the following assemblies


- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).

Remove the stapling mailbox top door

- ▲ Remove three screws (callout 1), and then remove the stapling mailbox door (callout 2).

 **NOTE:** The black-plastic push button (callout 3) can be easily dislodged when the door is removed. Do not lose the push button.

Figure 1-471 Remove the top door (stapling mailbox)

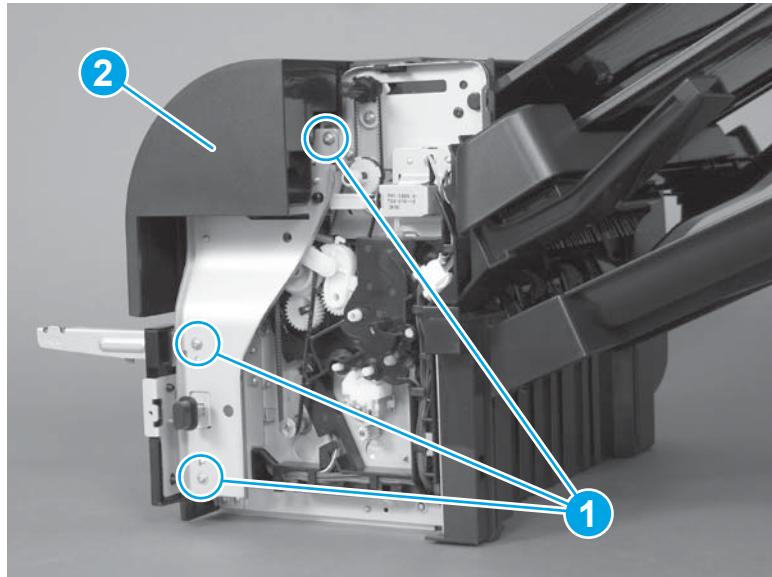

Connector holder (stapling mailbox)

Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).

Remove the stapling mailbox connector holder

- ▲ Remove one screw, and then remove the holder connector.

Figure 1-472 Remove the holder connector (stapling mailbox)



Top cover (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).

Remove the stapling mailbox top cover

- ▲ Remove one screw (callout 1), and then remove the top cover (callout 2).


Figure 1-473 Remove the top cover (stapling mailbox)

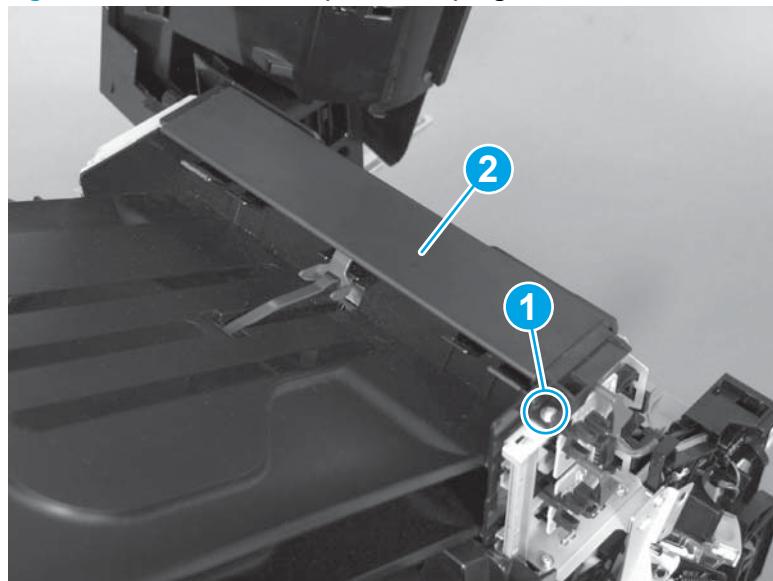

Output bin 3 (stapling mailbox)

1. Squeeze and pull two stoppers to remove from the output bin.


Figure 1-474 Remove output bin 3 (stapling mailbox; 1 of 2)

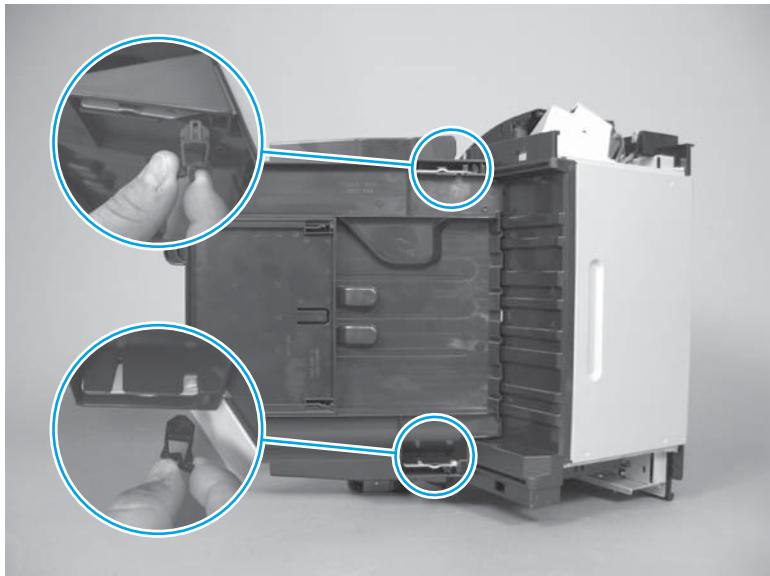

 **NOTE:** When reinstalling the output bin, make sure the two stoppers are installed in the correct position.

2. Release two tabs (callout 1) and slide the output bin 3 (callout 2) to remove.

Figure 1-475 Remove output bin 3 (stapling mailbox; 2 of 2)

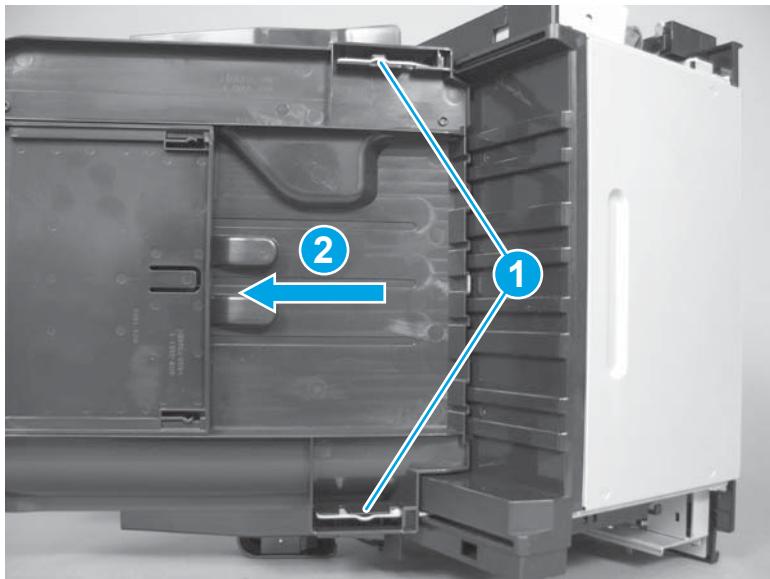


Output bin 3 driver PCA (stapling mailbox)

 **CAUTION:**  ESD-sensitive assembly.

 **NOTE:** This assembly is also called the MBM PCA.

1. Remove two screws, and slide the PCA cover off to remove it.


Figure 1-476 Remove the output bin 3 driver PCA (stapling mailbox; 1 of 3)

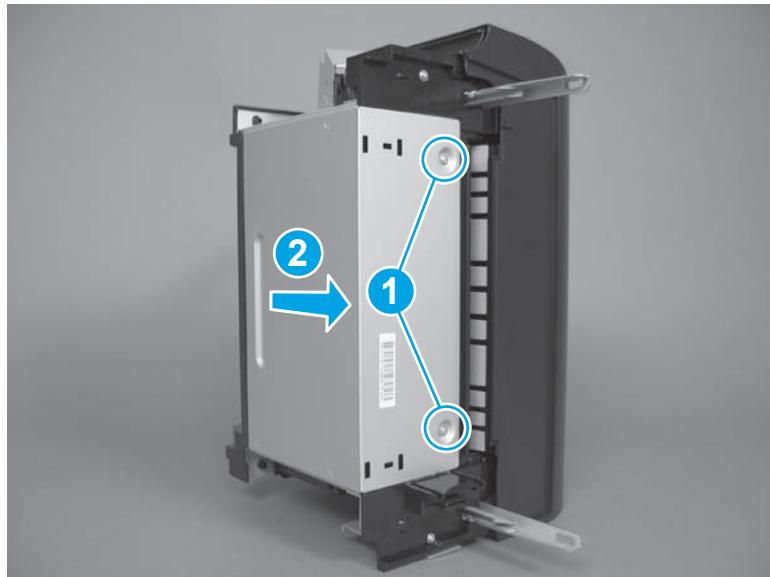

2. Release the cables (callout 1) from the cable guide (callout 2).

 **NOTE:** Be careful not to damage components (callout 3) on the PCA.


Figure 1-477 Remove the output bin 3 driver PCA (stapling mailbox; 2 of 3)

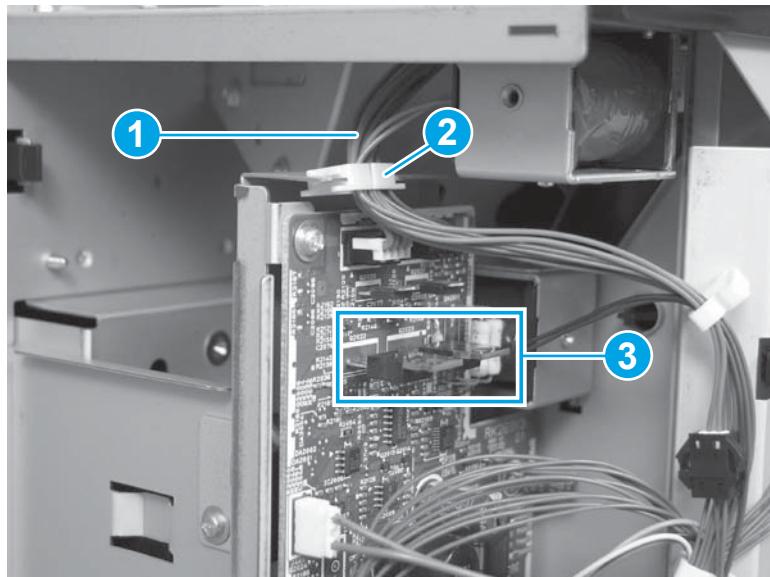

3. Remove two screws (callout 1), disconnect all connectors from the PCA, and then remove the PCA.

 **NOTE:** The connectors for J460 and J466 are empty.

Figure 1-478 Remove the output bin 3 driver PCA (stapling mailbox; 3 of 3)

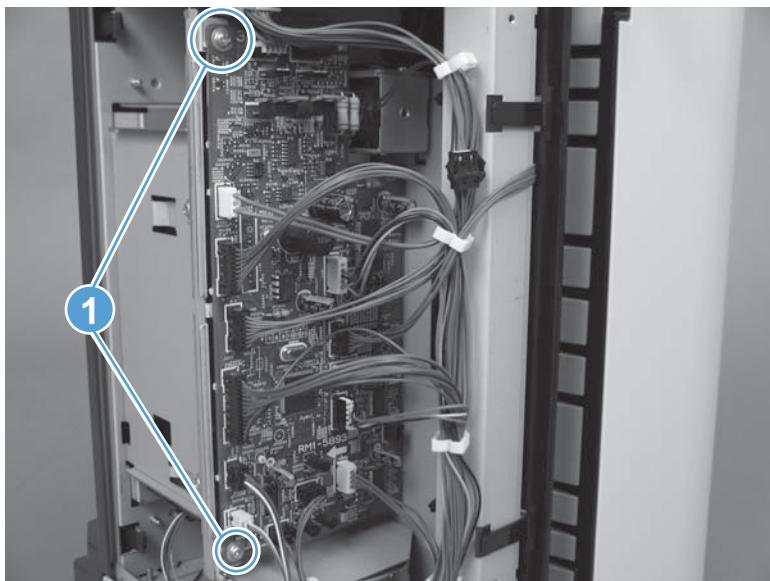

Stapler assembly (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).

Remove the stapler assembly

- ▲ Remove three screws (callout 1), disconnect two connectors (callout 2), and then remove the stapler assembly (callout 3).

Figure 1-479 Remove the stapler assembly (stapling mailbox)

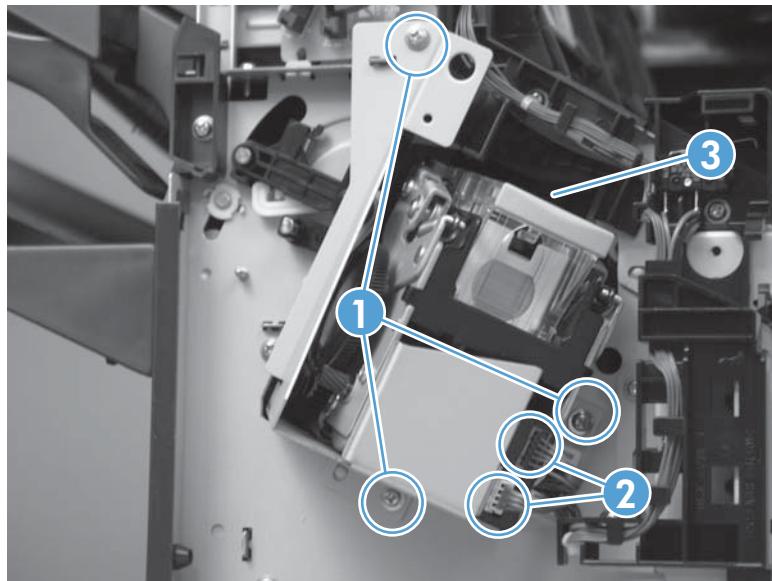

Stamp solenoid (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Controller PCA. See [Output bin 3 driver PCA \(stapling mailbox\) on page 327](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).

Remove the stapling mailbox stamp solenoid


1. Disconnect one connector (callout 1), and then release the cables (callout 2) from the cable guides (callout 3).

Figure 1-480 Remove the stamp solenoid (stapling mailbox; 1 of 2)

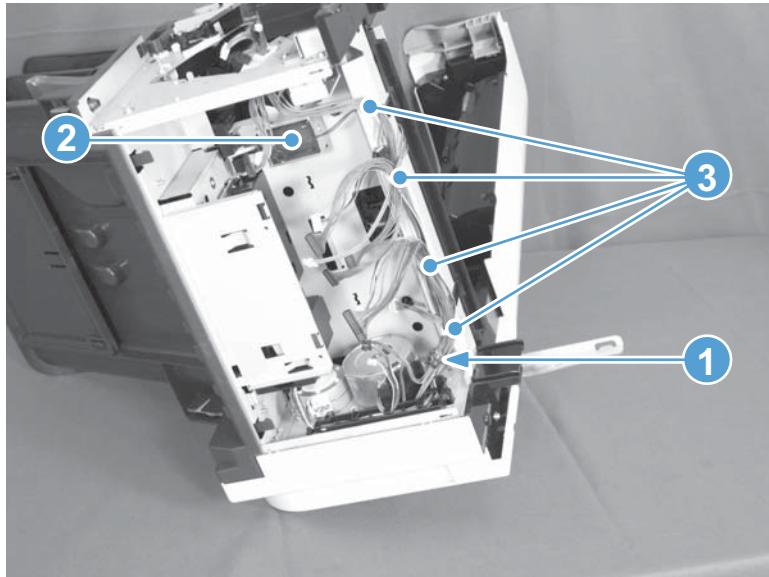

2. Remove two screws (callout 1), and then remove the stamp solenoid (callout 2).

Figure 1-481 Remove the stamp solenoid (stapling mailbox; 2 of 2)

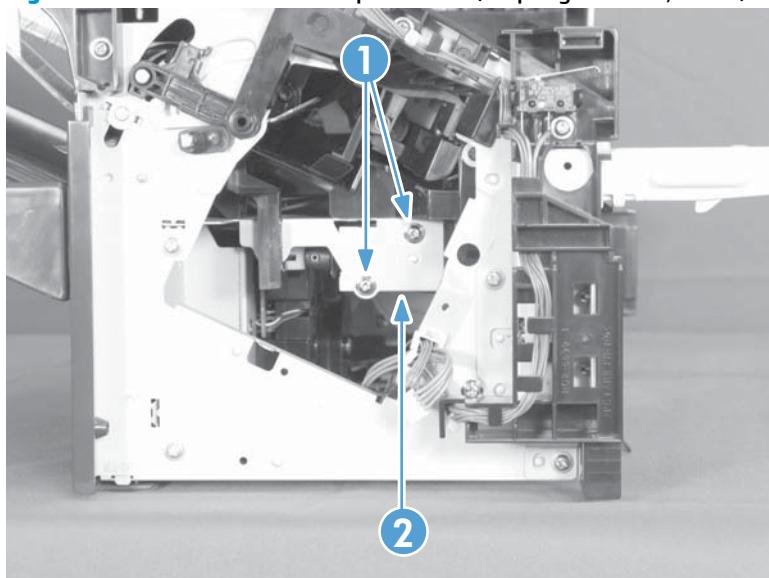

Output bin sensor PCA (stapling mailbox)

Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).


Remove the stapling mailbox output bin sensor PCA



ESD-sensitive assembly.

1. Remove one screw (callout 1) and disconnect one connector (callout 2).

Figure 1-482 Remove the output bin sensor PCA (stapling mailbox; 1 of 2)

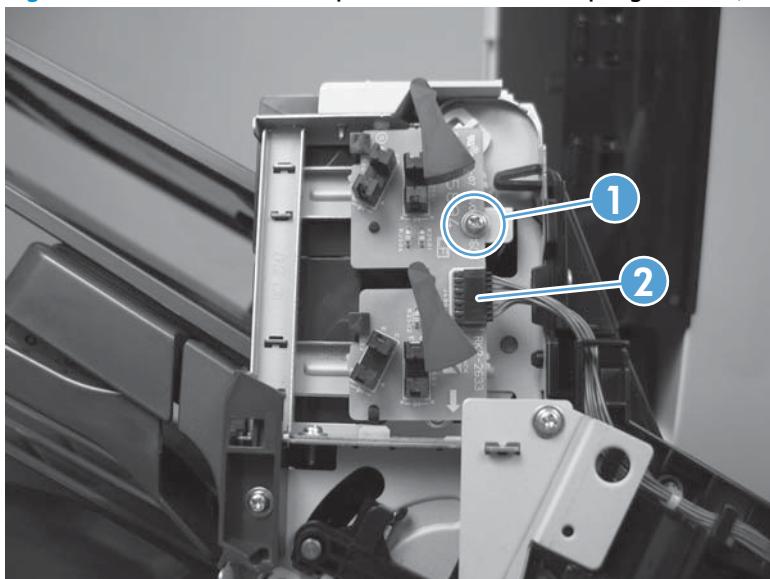


2. Release two tabs (callout 1), clear one post (callout 2), and slide the PCA to remove (callout 3).

⚠ CAUTION: Be careful not to damage the flags (callout 4) when removing and installing the PCA.

💡 Reinstallation tip When reinstalling, make sure the PCA is seated correctly with the tabs (callout 1) and post (callout 2).

Figure 1-483 Remove the output bin sensor PCA (stapling mailbox; 2 of 2)

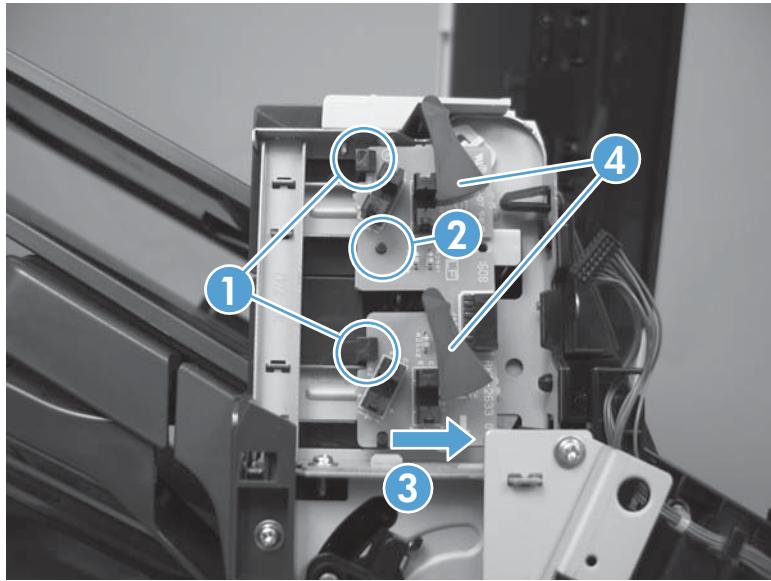

Stacking panel (stapling mailbox)

Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Output bin 3. See [Output bin 3 \(stapling mailbox\) on page 326](#).

Remove the stapling mailbox stacking panel


1. Remove two screws (callout 1), and slide the PCA cover (callout 2) to remove it.

Figure 1-484 Remove the stacking panel (stapling mailbox; 1 of 2)



2. Place the accessory stapler-side down. Release two tabs (callout 1) and then remove the stacking panel (callout 2).

Figure 1-485 Remove the stacking panel (stapling mailbox; 2 of 2)

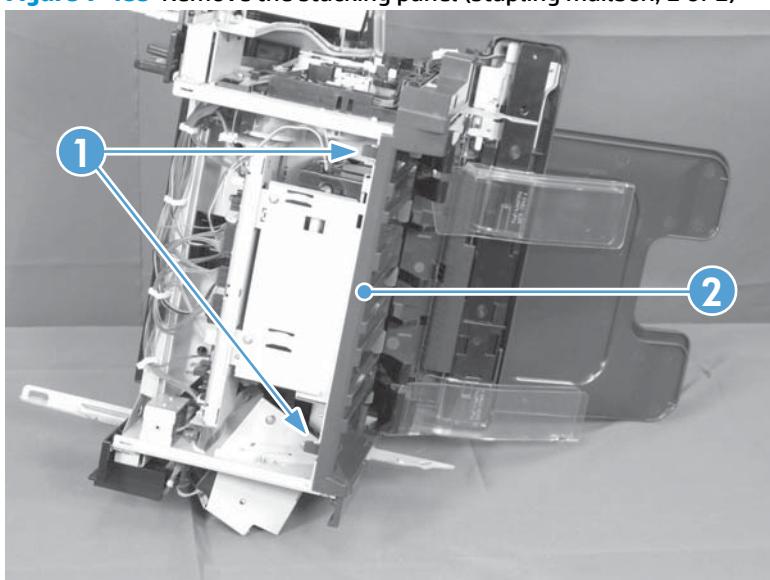

Jogger assembly (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).

Remove the stapling mailbox jogger assembly


1. Disconnect two connectors (callout 1).

Figure 1-486 Remove the jogger assembly (stapling mailbox; 1 of 3)

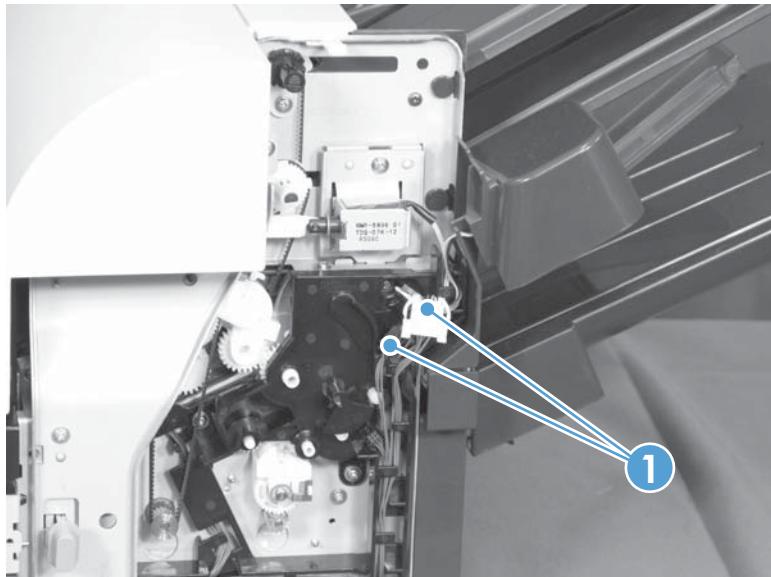


2. Remove one screw.

Figure 1-487 Remove the jogger assembly (stapling mailbox; 2 of 3)

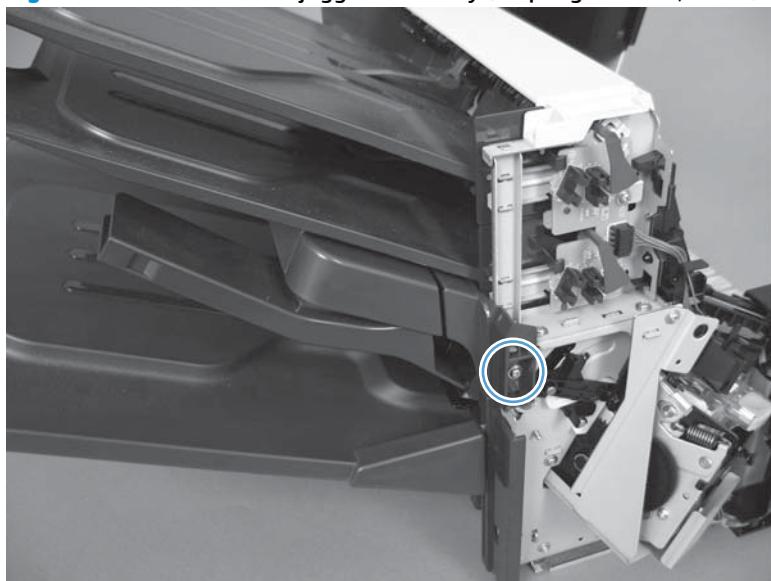

3. Disengage pin and remove the jogger assembly.

Figure 1-488 Remove the jogger assembly (stapling mailbox; 3 of 3)

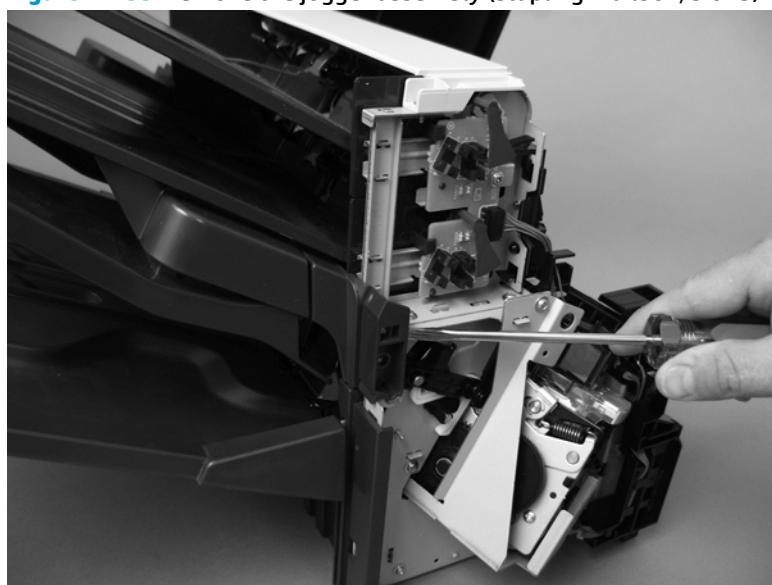

Flapper guide assembly (stapling mailbox)

Before proceeding, remove the following assemblies


- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).

Remove the flapper guide assembly

- ▲ Remove two screws (callout 1), release one tab (callout 2), and then remove the flapper guide assembly (callout 3).

 **NOTE:** Make sure to reinstall the stepped screw on the left side of the assembly.


Figure 1-489 Remove the flapper guide assembly (stapling mailbox)

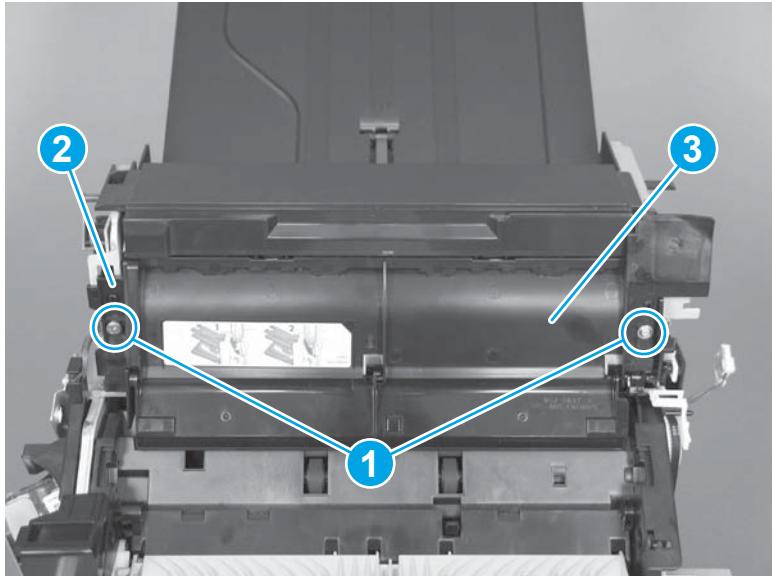

Reinstall the stapling mailbox flapper guide assembly

- ▲ When reinstalling the assembly, makes sure to correctly reattach the two pieces of the assembly.

Figure 1-490 Reinstall the flapper guide assembly (stapling mailbox)

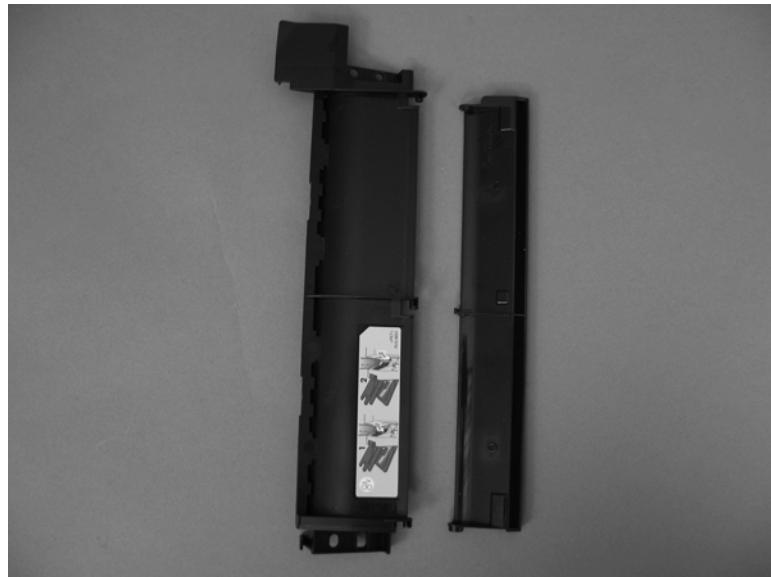

Flapper assembly (stapling mailbox)

Before proceeding, remove the following assemblies


- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).
- Flapper guide assembly. See [Flapper guide assembly \(stapling mailbox\) on page 336](#).

Remove the stapling mailbox flapper assembly

- ▲ Release one tab (callout 1), release the solenoid arm (callout 2), and then remove the flapper assembly (callout 3).

 **Reinstallation tip** When reinstalling the assembly, make sure to correctly reattach the solenoid and arm.

Figure 1-491 Remove the flapper assembly (stapling mailbox)

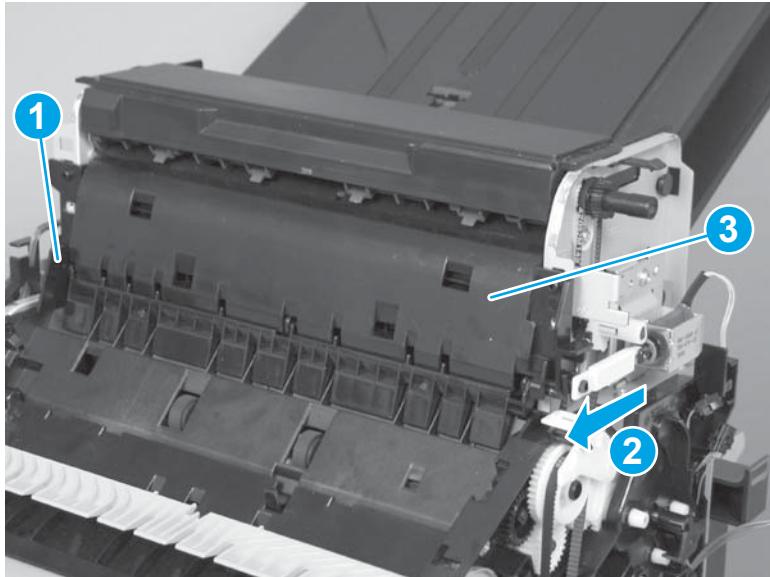

Output bin solenoid (stapling mailbox)


Before proceeding, remove the following assemblies

- Stapling mailbox rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Stapling mailbox top door. See [Top door \(stapling mailbox\) on page 323](#).

Remove the stapling mailbox output bin solenoid

- ▲ Disconnect one connector (callout 1), remove one screw (callout 2), disconnect the solenoid arm (callout 3), and then remove the solenoid (callout 4) and bracket (callout 5).

Figure 1-492 Remove the output bin solenoid (stapling mailbox)

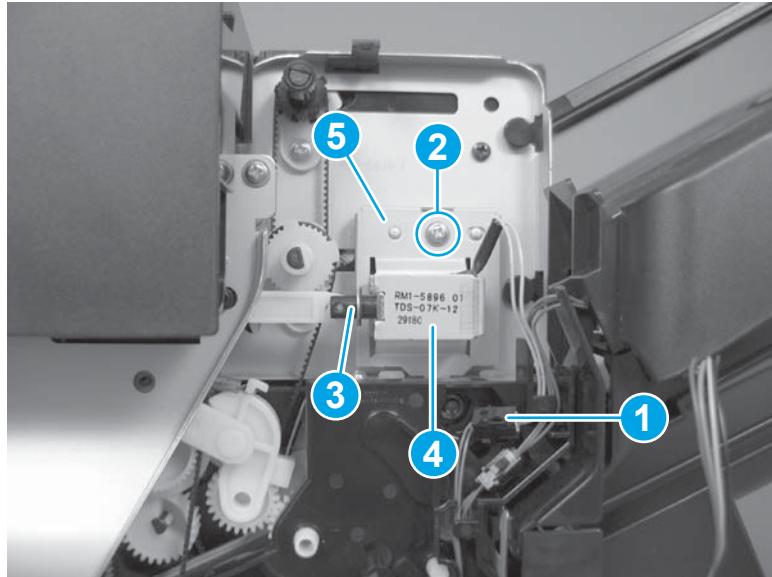

Output bin assembly (stapling mailbox)


Before proceeding, remove the following assemblies

- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Output bin sensor PCA. See [Output bin sensor PCA \(stapling mailbox\) on page 331](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).
- Flapper guide assembly. See [Flapper guide assembly \(stapling mailbox\) on page 336](#).
- Flapper assembly. See [Flapper assembly \(stapling mailbox\) on page 338](#).
- Output bin solenoid. See [Output bin solenoid \(stapling mailbox\) on page 339](#).

Remove the stapling mailbox output bin assembly


1. Remove two screws (callout 1).

Figure 1-493 Remove the output bin assembly (stapling mailbox; 1 of 3)

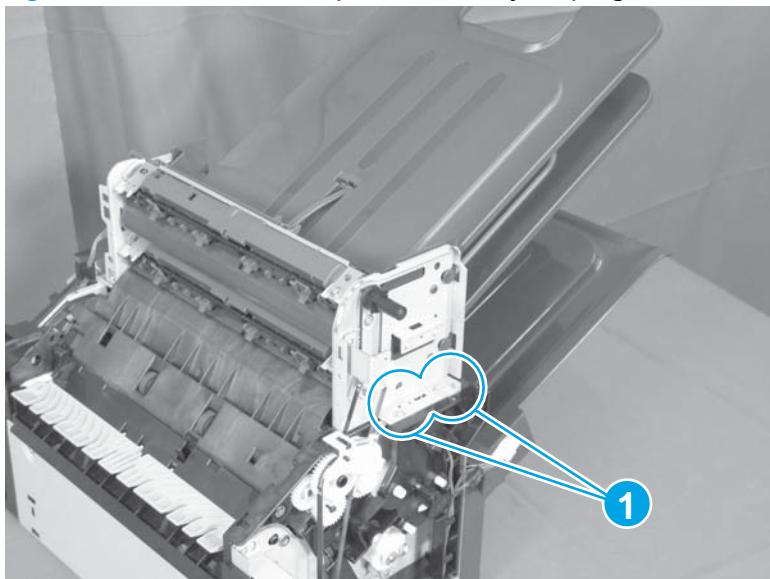

2. Remove two screws.

Figure 1-494 Remove the output bin assembly (stapling mailbox; 2 of 3)

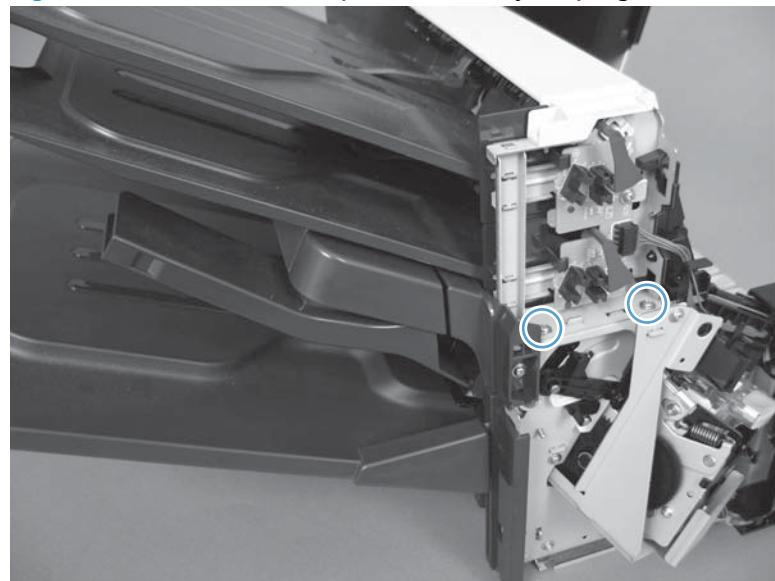

3. Remove the belt and then remove the assembly.

Figure 1-495 Remove the output bin assembly (stapling mailbox; 3 of 3)



Output bin 3 drive assembly (stapling mailbox)

Before proceeding, remove the following assemblies


- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Output bin 3. See [Output bin 3 \(stapling mailbox\) on page 326](#).
- Stacking panel. See [Stacking panel \(stapling mailbox\) on page 333](#).

Remove the output bin 3 drive assembly (stapling mailbox)

1. Release one spring (callout 1).


 **NOTE:** If the spring is out of reach, lower the tray support until there is clearance (as shown in the next step).

Figure 1-496 Remove the output bin 3 drive assembly (stapling mailbox; 1 of 4)

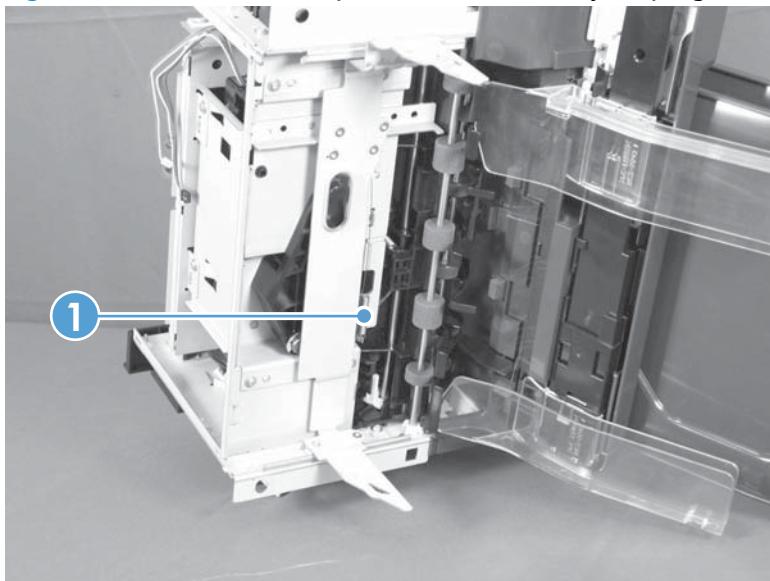


2. Disconnect two connectors.

Figure 1-497 Remove the output bin 3 drive assembly (stapling mailbox; 2 of 4)

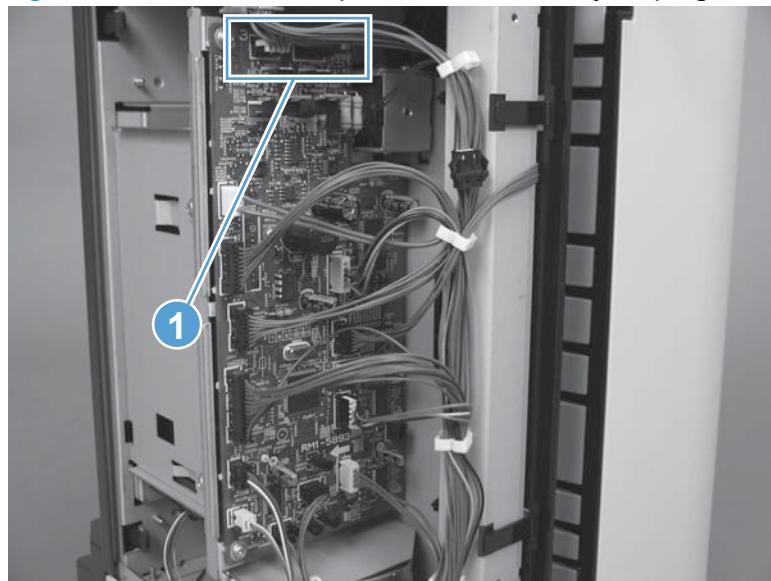


3. Using a screwdriver to disengage the gear (callout 1) and then slide the tray support (callout 2) to remove it.

Figure 1-498 Remove the output bin 3 drive assembly (stapling mailbox; 3 of 4)

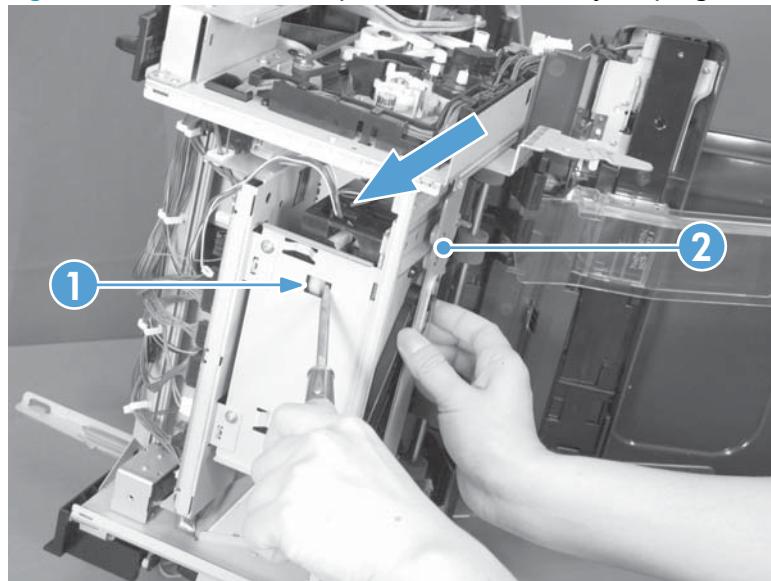

4. Remove four screws and then remove the output bin 3 drive assembly.

Figure 1-499 Remove the output bin 3 drive assembly (stapling mailbox; 4 of 4)

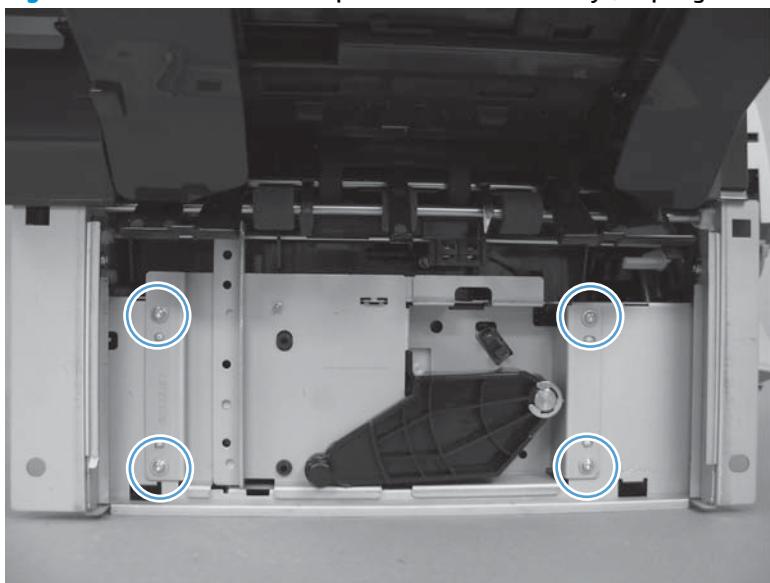

Stage-top sub-assembly (stapling mailbox)

Before proceeding, remove the following assemblies


- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).
- Output bin sensor PCA. See [Output bin sensor PCA \(stapling mailbox\) on page 331](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).
- Flapper guide assembly. See [Flapper guide assembly \(stapling mailbox\) on page 336](#).
- Flapper assembly. See [Flapper assembly \(stapling mailbox\) on page 338](#).
- Output bin solenoid. See [Output bin solenoid \(stapling mailbox\) on page 339](#).
- Output bin assembly. See [Output bin assembly \(stapling mailbox\) on page 340](#).

Remove the stage-top sub-assembly (stapling mailbox)

1. Release one tab (callout 1), and then remove the gear stopper (callout 2).


 **Reinstallation tip** When the stopper is removed, the gears (callout 3) are not captive. If the gears are dislodged, use the figure below to reinstall them.

Figure 1-500 Remove the stage-top sub-assembly (stapling mailbox; 1 of 14)

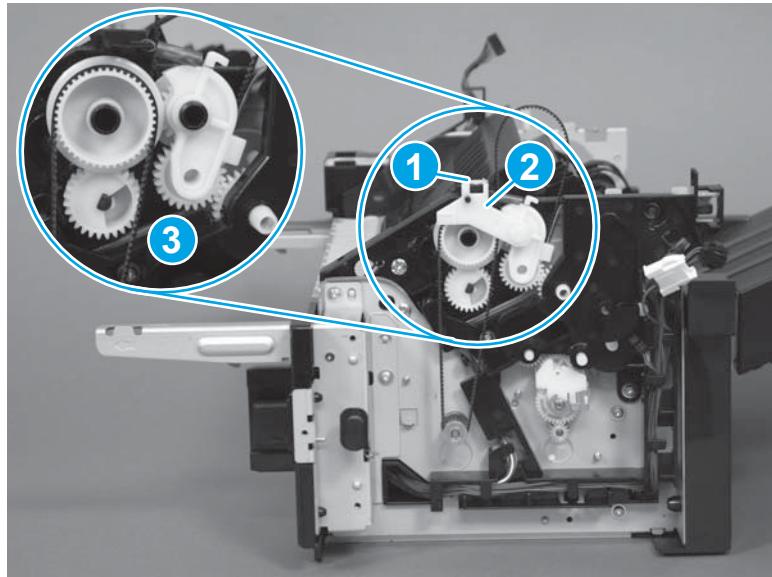


2. Remove one gear (callout 1) and remove one belt (callout 2).

Figure 1-501 Remove the stage-top sub-assembly (stapling mailbox; 2 of 14)

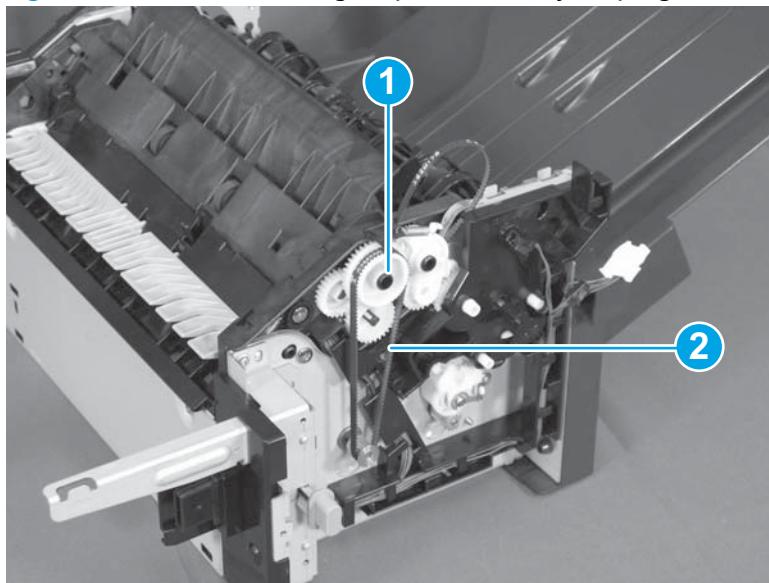


3. Remove one spring (callout 1) and the swing gear (callout 2).

Figure 1-502 Remove the stage-top sub-assembly (stapling mailbox; 3 of 14)

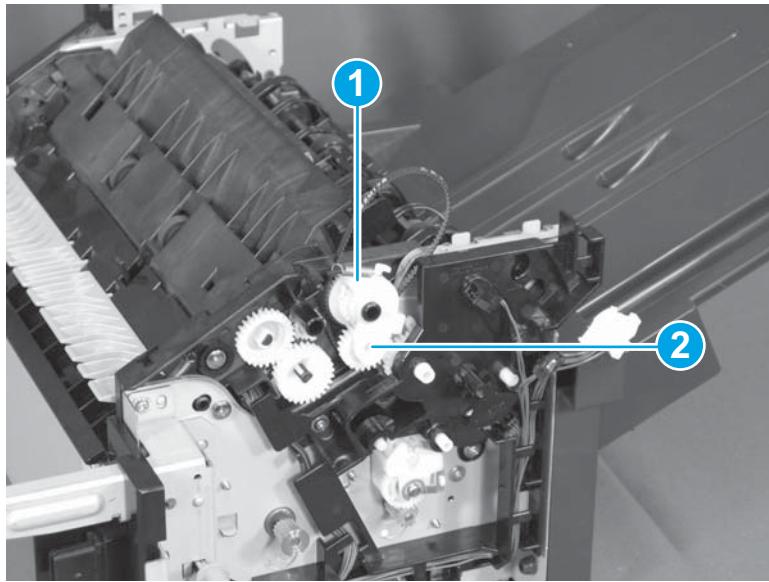


4. Remove one gear (callout 1) and one belt (callout 2).

Figure 1-503 Remove the stage-top sub-assembly (stapling mailbox; 4 of 14)

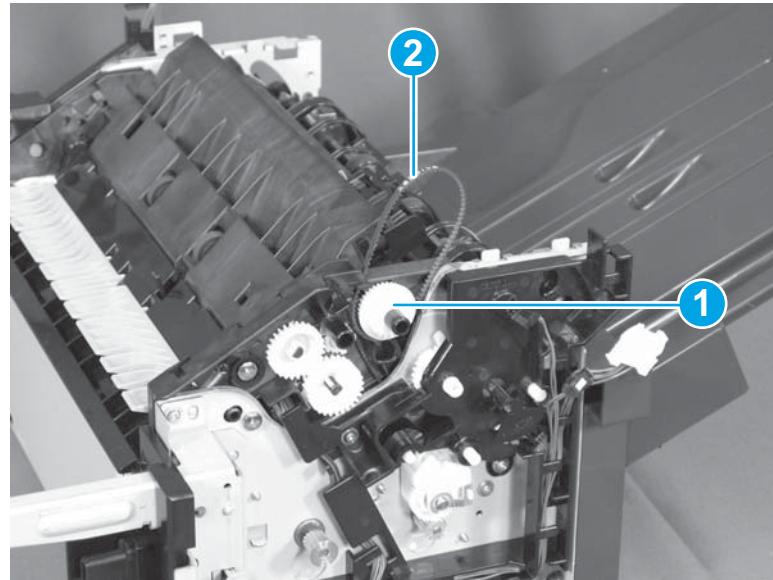


5. Remove two screws (callout 1). Slide the PCA cover in the direction of the arrow to remove it.

Figure 1-504 Remove the stage-top sub-assembly (stapling mailbox; 5 of 14)

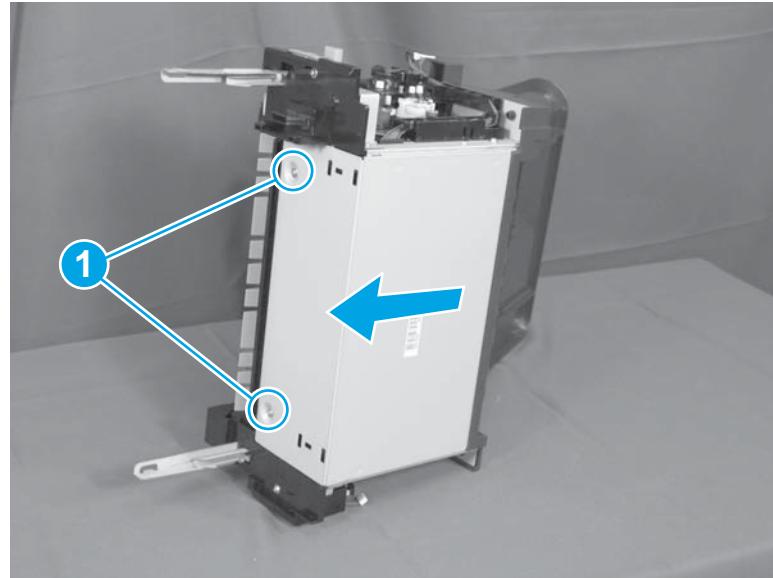


6. Disconnect one connector (callout 1), and then release the wire harness from two retainers (callout 2).

Figure 1-505 Remove the stage-top sub-assembly (stapling mailbox; 6 of 14)

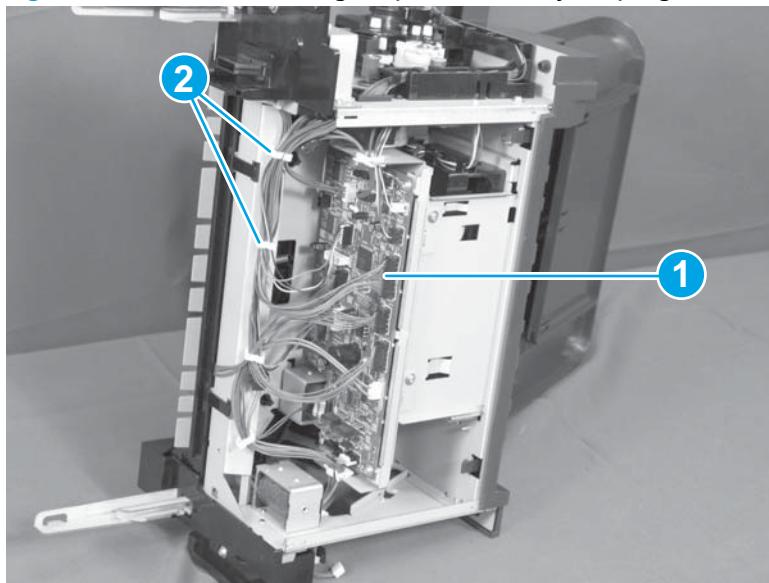


7. Disconnect one connector (callout 1). Release the cables (callout 2) from the guide (callout 3).

Figure 1-506 Remove the stage-top sub-assembly (stapling mailbox; 7 of 14)

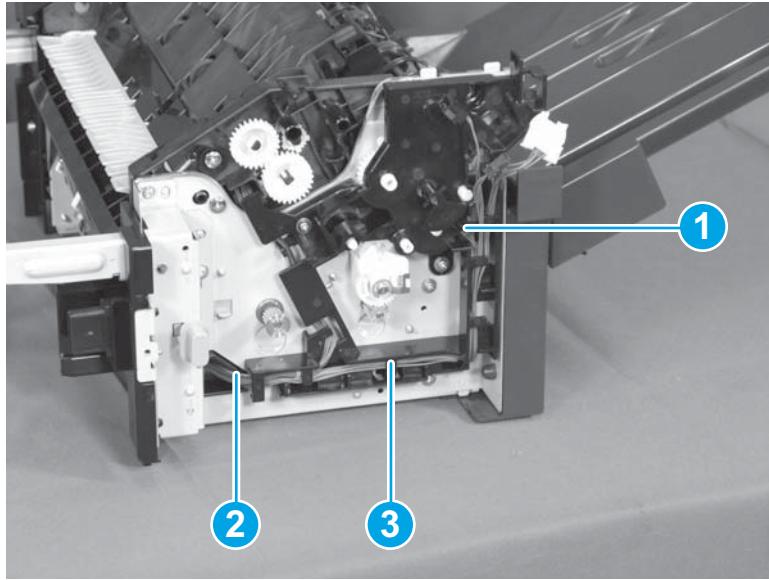

8. Release one tab (callout 1), and remove the sensor flag (callout 2).

Figure 1-507 Remove the stage-top sub-assembly (stapling mailbox; 8 of 14)

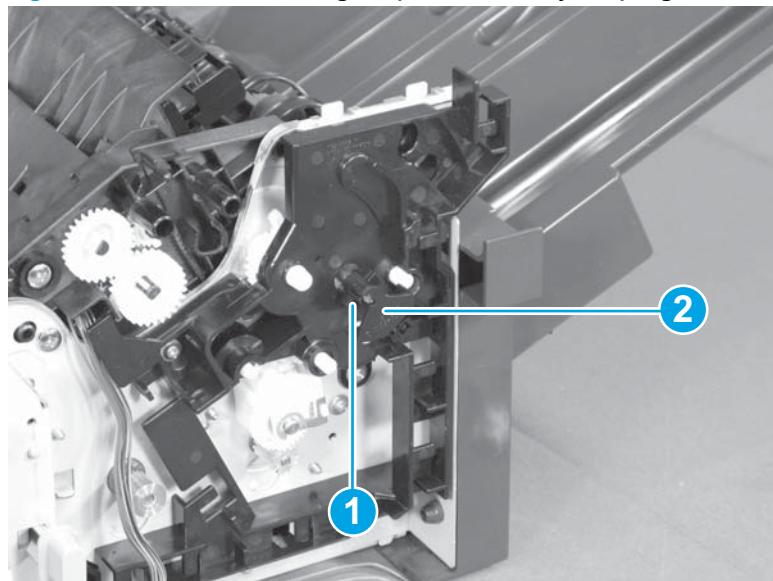


9. Remove two screws (callout 1), and then remove the cable guide and gear cover (callout 2).

NOTE: The gears and belts behind this cover are not captive. If the gears or belts are dislodged when the cover is removed, see [Reinstall the stage-top sub-assembly \(stapling mailbox\) on page 353](#) to replace them.


TIP: Position the assembly so that the cover is face up before removing the screws to prevent the gears and belts from falling off when the cover is removed.

Figure 1-508 Remove the stage-top sub-assembly (stapling mailbox; 9 of 14)

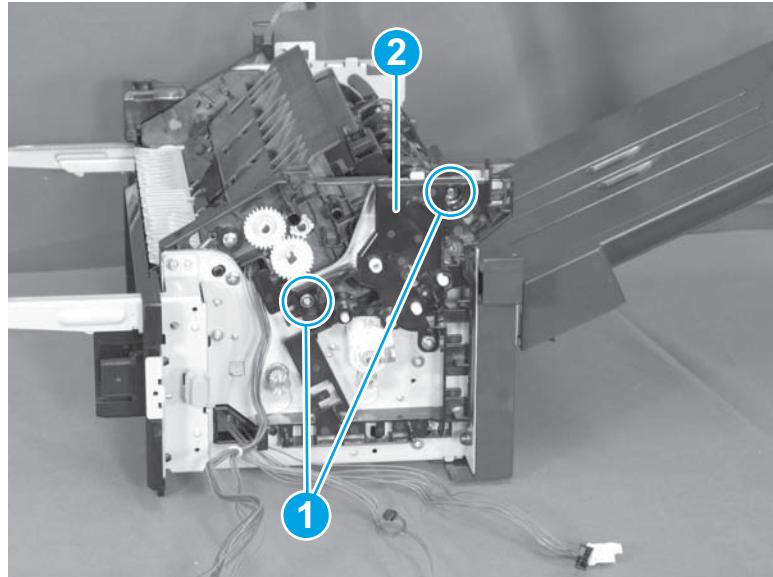


10. Remove two screws (callout 1), and then remove one gear (callout 2).

Figure 1-509 Remove the stage-top sub-assembly (stapling mailbox; 10 of 14)

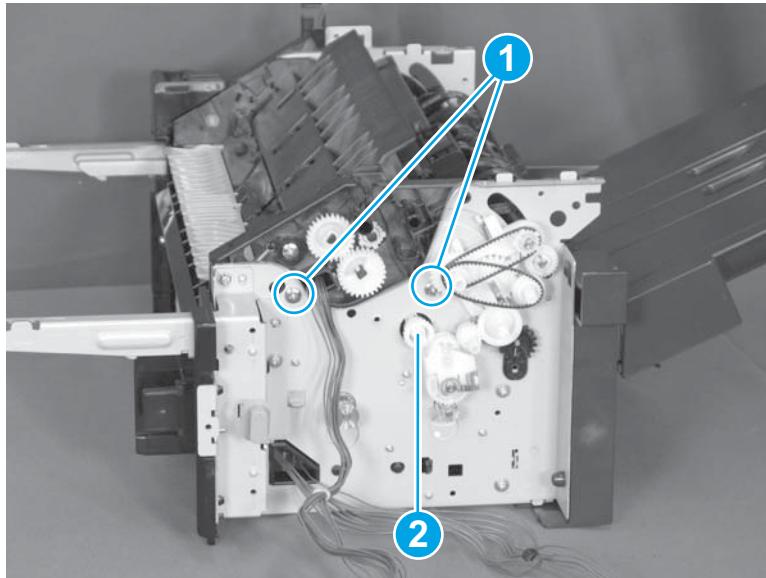


11. Release the cables (callout 1) from the cable guide (callout 2).

Figure 1-510 Remove the stage-top sub-assembly (stapling mailbox; 11 of 14)

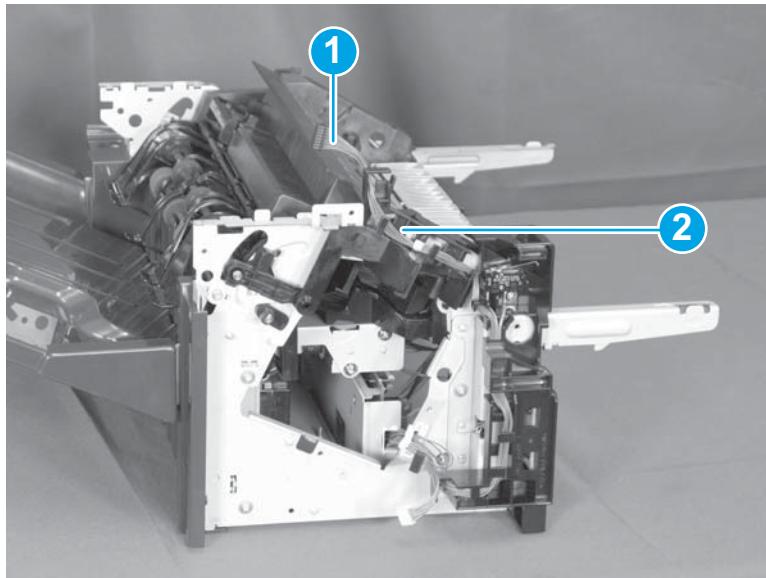


- 12.** Remove two screws (callout 1) and shift the cable guide (callout 2).

Figure 1-511 Remove the stage-top sub-assembly (stapling mailbox; 12 of 14)

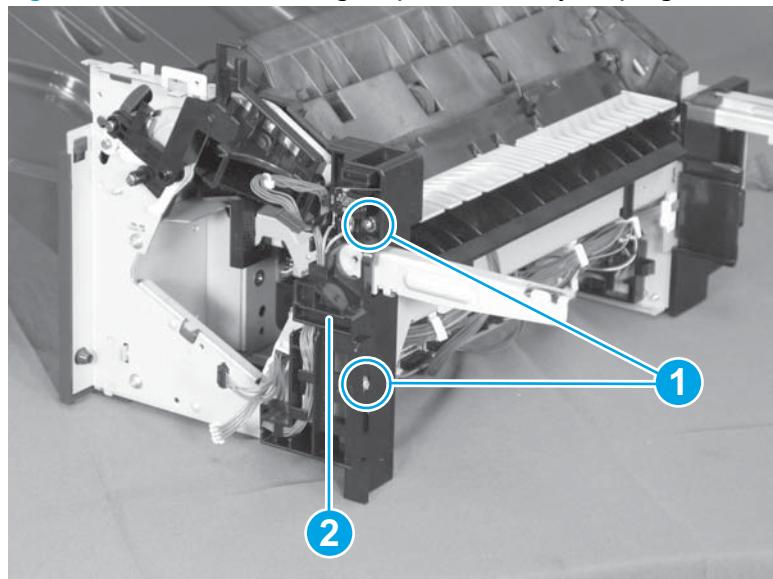


- 13.** Remove one screw (callout 1), and then remove the cable guide (callout 2).

Figure 1-512 Remove the stage-top sub-assembly (stapling mailbox; 13 of 14)

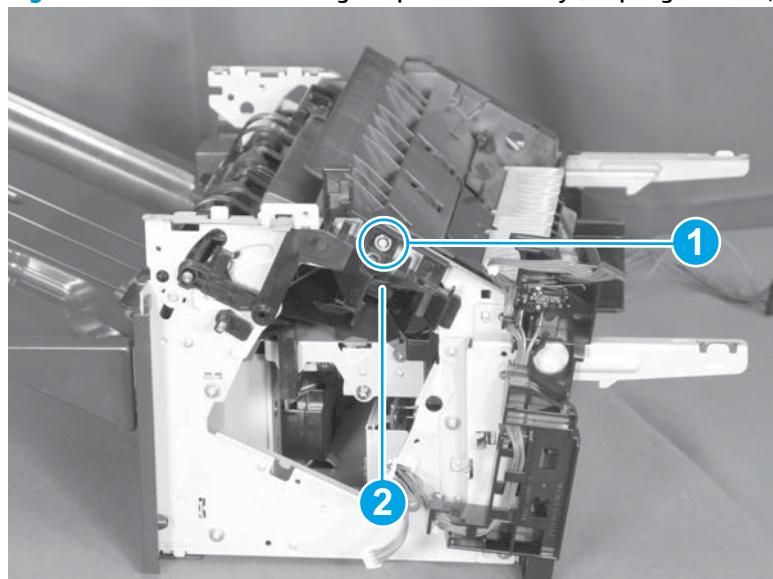

14. Release two locator pins (callout 1), and then remove the stage-top sub-assembly (callout 2).


Figure 1-513 Remove the stage-top sub-assembly (stapling mailbox; 14 of 14)

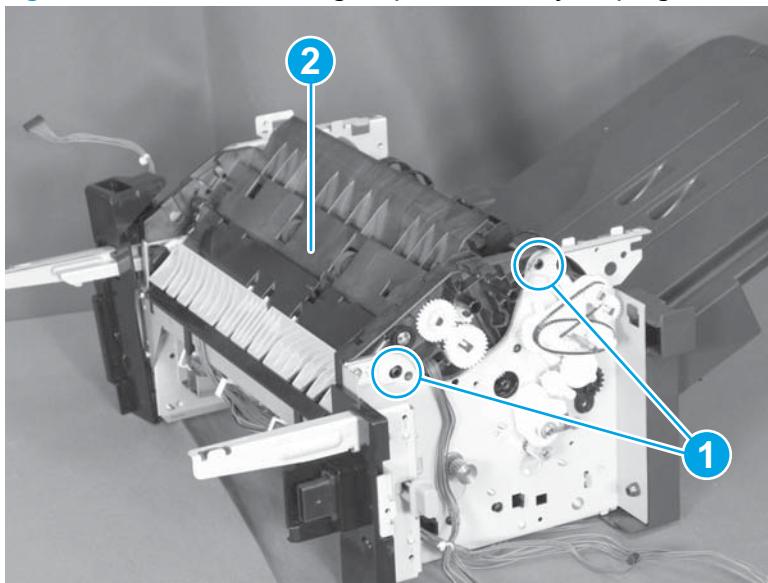

Reinstall the stage-top sub-assembly (stapling mailbox)


If the gears or belts are dislodged when the gear cover is removed, use the figure below to replace them in the correct positions.

Figure 1-514 Reinstall the stage-top sub-assembly (stapling mailbox; 1 of 2)

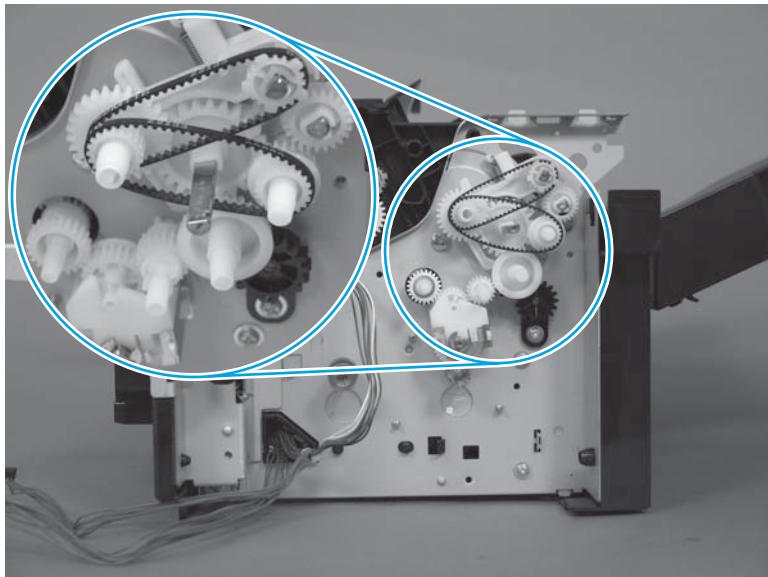

When reinstalling the stage-top sub-assembly, insert the guide (callout 1) on the stage-top sub-assembly under the shaft (callout 2) on the output bin 3 upper delivery roller.

Figure 1-515 Reinstall the stage-top sub-assembly (stapling mailbox; 2 of 2)

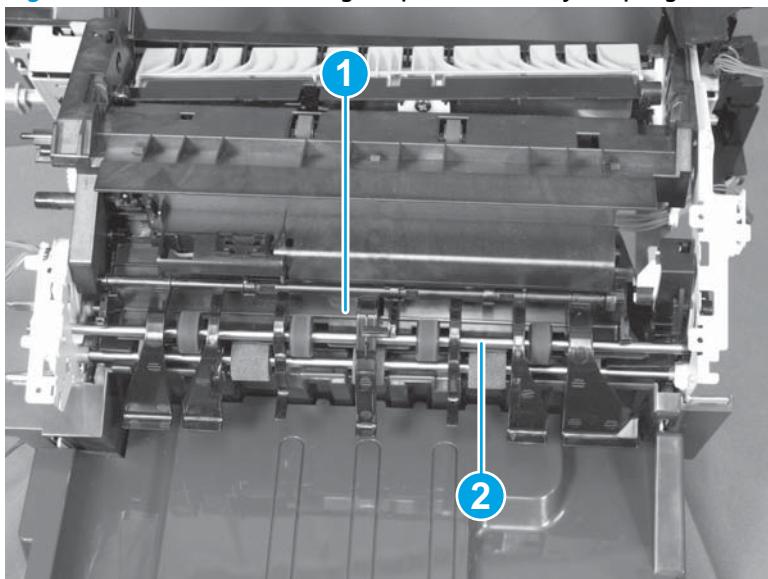

Stage assembly (stapling mailbox)

Before proceeding, remove the following assemblies


- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).
- Output bin sensor PCA. See [Output bin sensor PCA \(stapling mailbox\) on page 331](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).
- Flapper guide assembly. See [Flapper guide assembly \(stapling mailbox\) on page 336](#).
- Flapper assembly. See [Flapper assembly \(stapling mailbox\) on page 338](#).
- Output bin solenoid. See [Output bin solenoid \(stapling mailbox\) on page 339](#).
- Output bin assembly. See [Output bin assembly \(stapling mailbox\) on page 340](#).
- Stage-top sub-assembly. See [Stage-top sub-assembly \(stapling mailbox\) on page 345](#).

Remove the stage assembly (stapling mailbox)

1. Release one tab (callout 1), and then remove the bushing (callout 2).


⚠ CAUTION: The tab (callout 1) is fragile and can be easily broken.

Figure 1-516 Remove the stage assembly (stapling mailbox; 1 of 7)

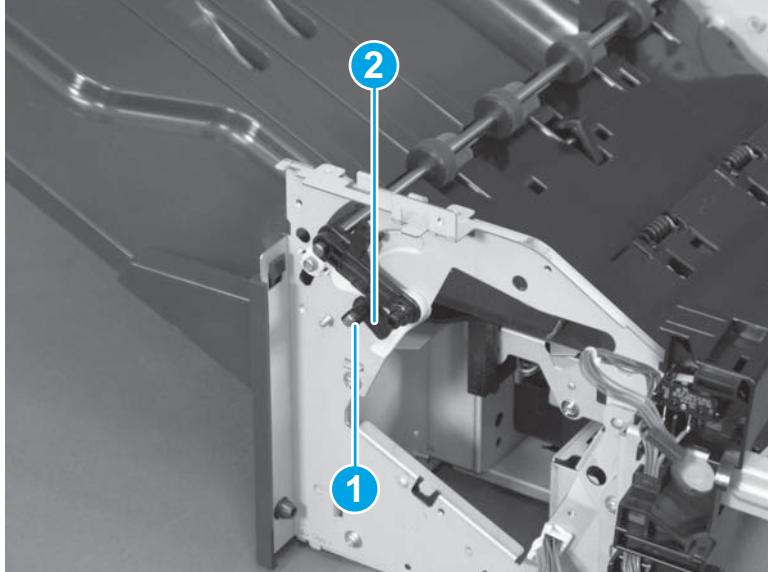


2. Remove two belts (callout 1), and then remove three gears (callout 2).

Figure 1-517 Remove the stage assembly (stapling mailbox; 2 of 7)

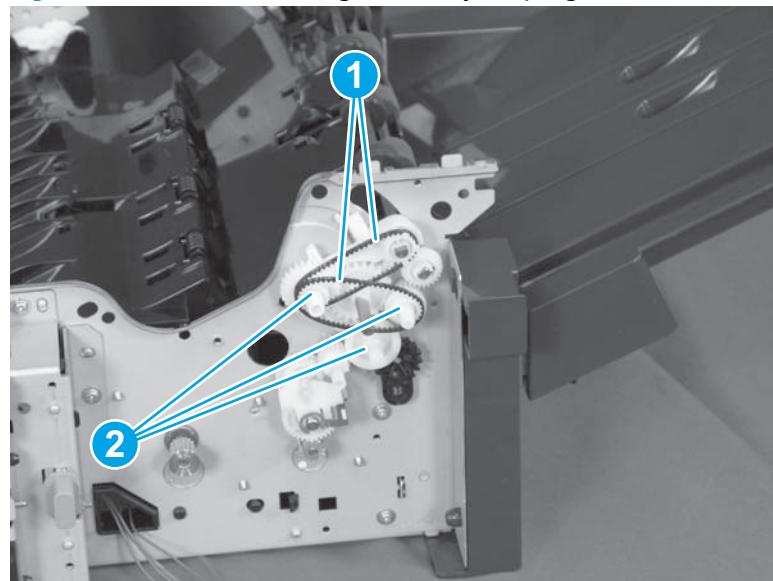


3. Pull out the shaft (callout 1).

Figure 1-518 Remove the stage assembly (stapling mailbox; 3 of 7)

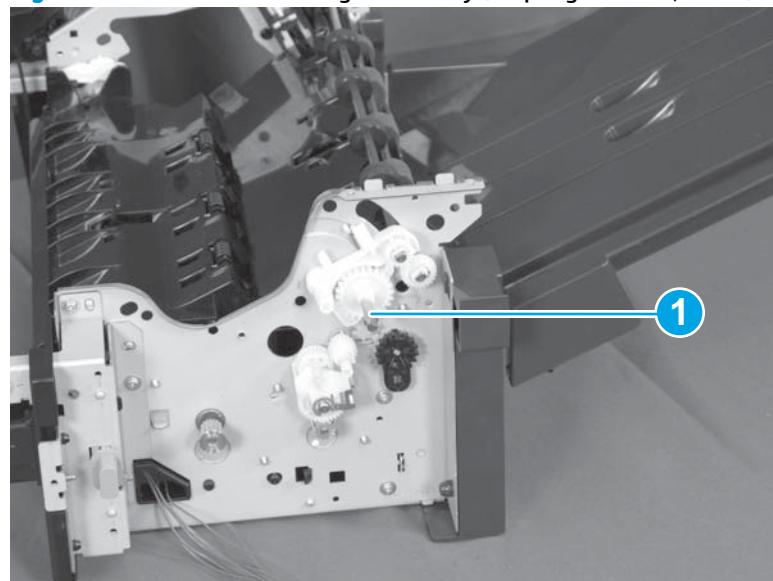


4. Remove one screw (callout 1), and shift the connector unit (callout 2).

Figure 1-519 Remove the stage assembly (stapling mailbox; 4 of 7)

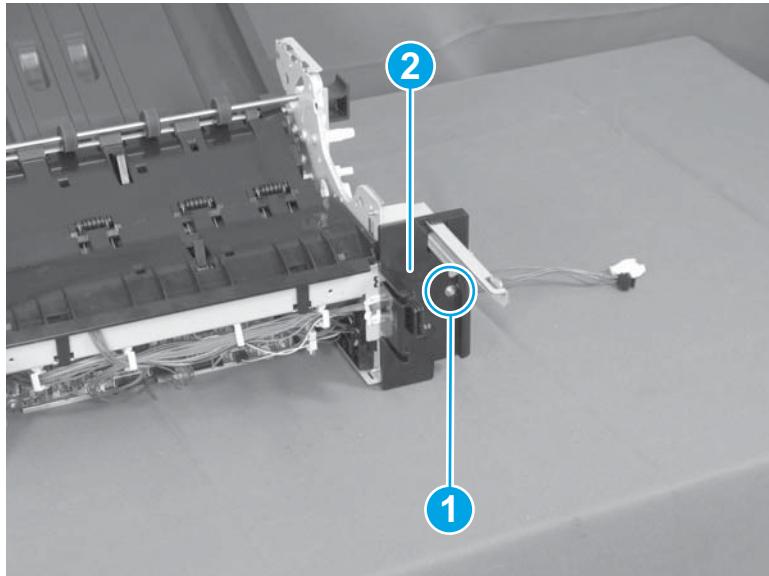


5. Disconnect one connector (callout 1).

Figure 1-520 Remove the stage assembly (stapling mailbox; 5 of 7)

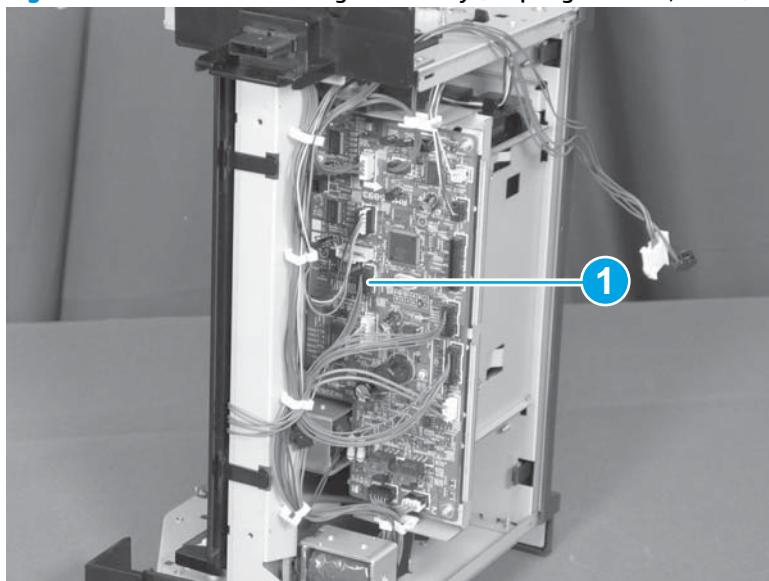


6. Release two tabs (callout 1), and then release the solenoid arm (callout 2). Slide the solenoid arm in the direction of the arrow to remove it.

Figure 1-521 Remove the stage assembly (stapling mailbox; 6 of 7)

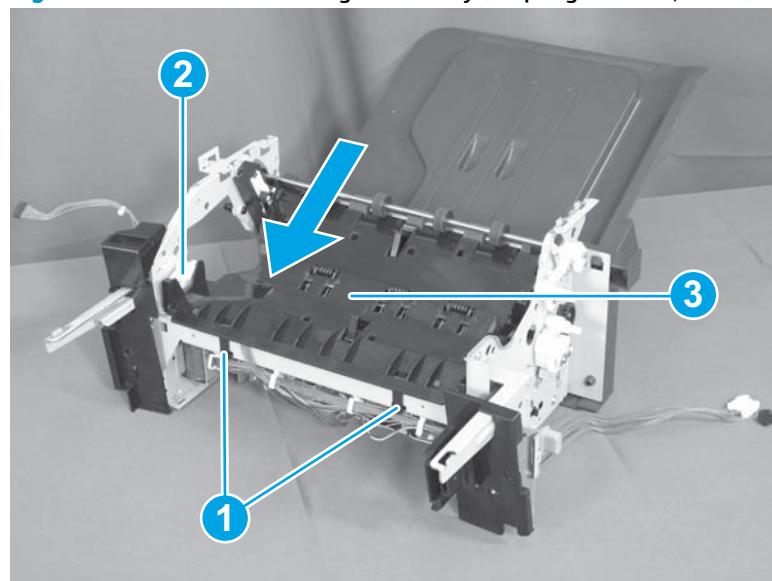

7. Remove one screw (callout 1), and then separate the stage unit (callout 2) from the stamp unit (callout 3).

Figure 1-522 Remove the stage assembly (stapling mailbox; 7 of 7)

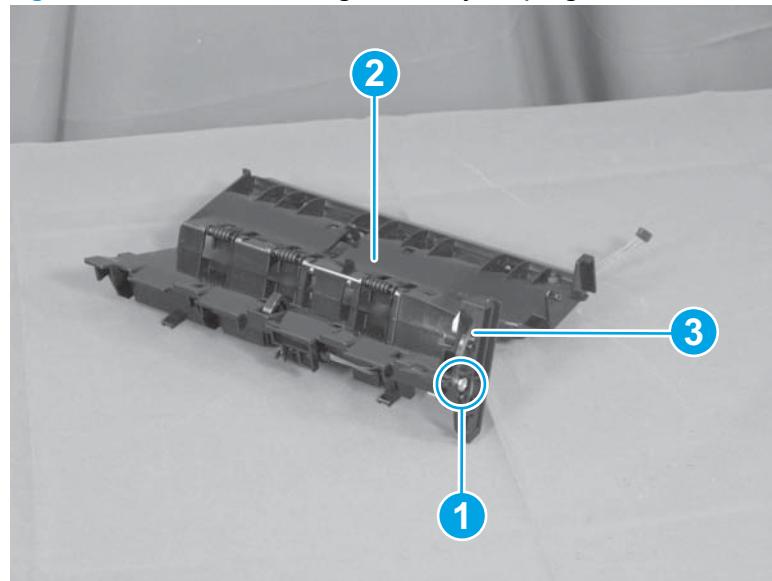

Entrance solenoid (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Top door. See [Top door \(stapling mailbox\) on page 323](#).
- Top cover. See [Top cover \(stapling mailbox\) on page 325](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).
- Output bin sensor PCA. See [Output bin sensor PCA \(stapling mailbox\) on page 331](#).
- Jogger assembly. See [Jogger assembly \(stapling mailbox\) on page 334](#).
- Flapper guide assembly. See [Flapper guide assembly \(stapling mailbox\) on page 336](#).
- Flapper assembly. See [Flapper assembly \(stapling mailbox\) on page 338](#).
- Output bin solenoid. See [Output bin solenoid \(stapling mailbox\) on page 339](#).
- Output bin assembly. See [Output bin assembly \(stapling mailbox\) on page 340](#).
- Stage-top sub-assembly. See [Stage-top sub-assembly \(stapling mailbox\) on page 345](#).
- Stage assembly. See [Stage assembly \(stapling mailbox\) on page 354](#).

Remove the entrance solenoid (stapling mailbox)


1. Release two tabs and remove the switch (callout 1). Release the cables (callout 2), and remove the cable guide (callout 3).

Figure 1-523 Remove the entrance solenoid (stapling mailbox; 1 of 3)

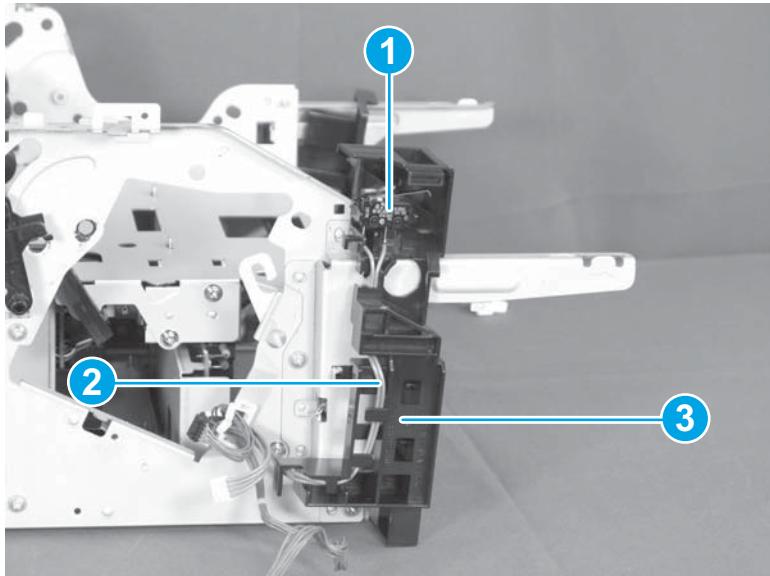


2. Remove two screws (callout 1), and then remove the joint arm (callout 2).

Figure 1-524 Remove the entrance solenoid (stapling mailbox; 2 of 3)

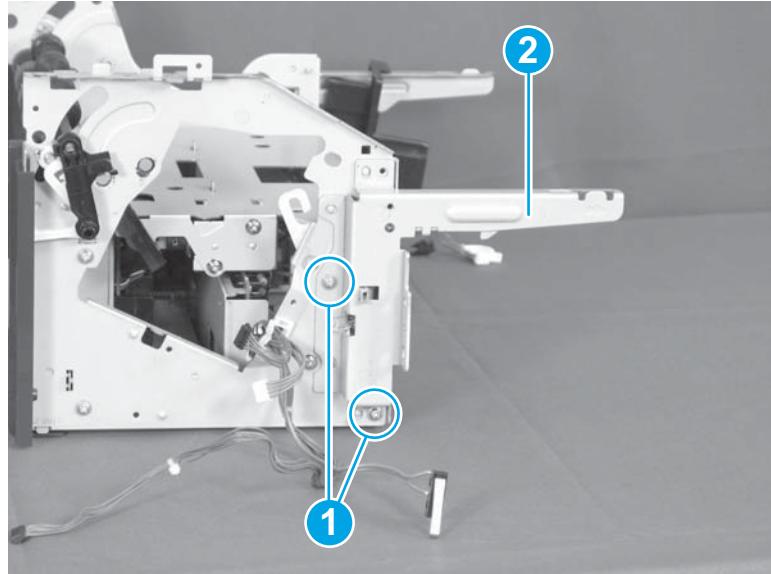

3. Disconnect one connector (callout 1), remove two screws (callout 2), and remove the entrance solenoid (callout 3).

Figure 1-525 Remove the entrance solenoid (stapling mailbox; 3 of 3)

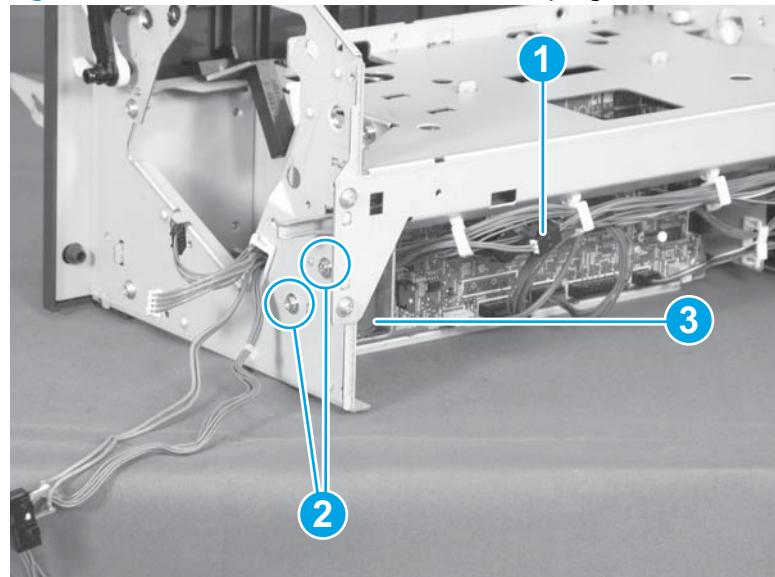

Feed motor (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Controller PCA. See [Output bin 3 driver PCA \(stapling mailbox\) on page 327](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).
- Stamp solenoid. See [Stamp solenoid \(stapling mailbox\) on page 330](#).

Remove the feed motor (stapling mailbox)


1. Release the cables (callout 1) from the cable guide (callout 2).

Figure 1-526 Remove the feed motor (stapling mailbox; 1 of 3)

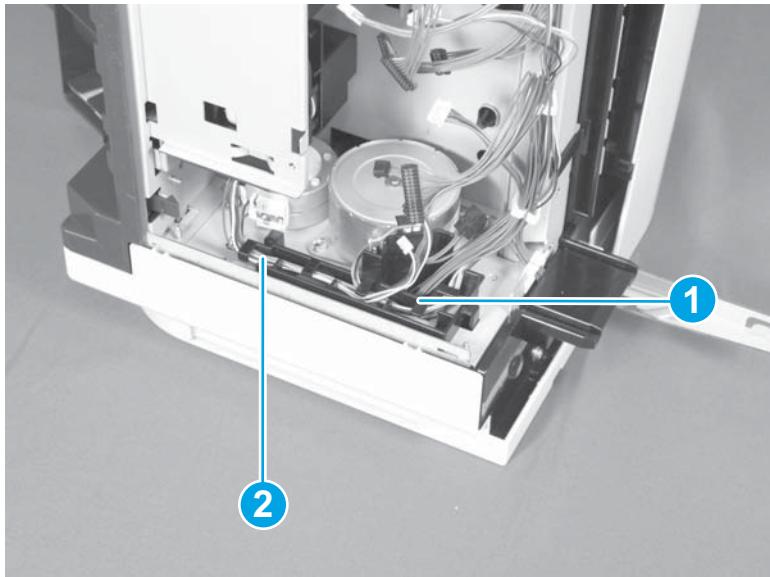


2. Release two tabs (callout 1), and then remove the cable guide (callout 2).

Figure 1-527 Remove the feed motor (stapling mailbox; 2 of 3)

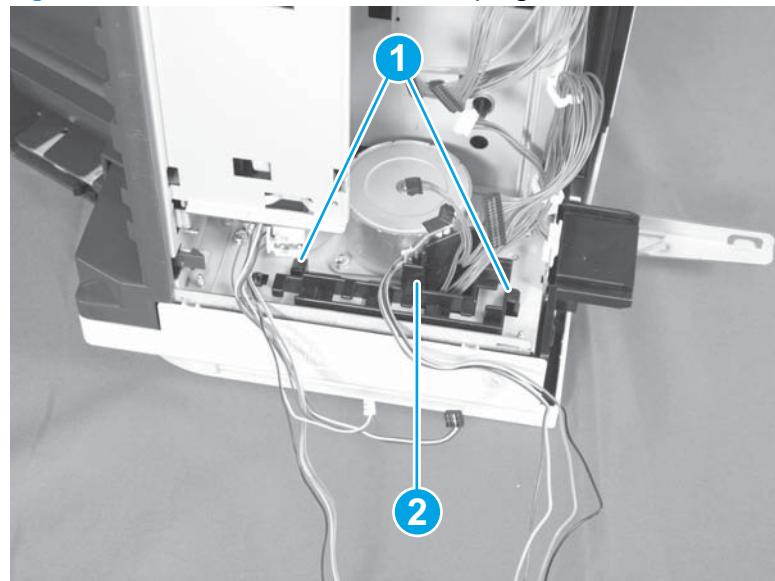

3. Remove two screws (callout 1). Slide the feed motor (callout 2) in the direction of the arrow to remove it.

Figure 1-528 Remove the feed motor (stapling mailbox; 3 of 3)

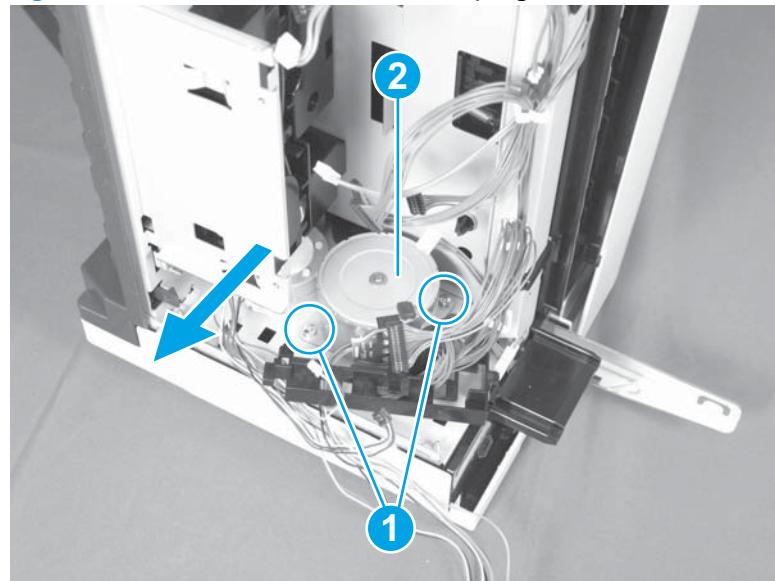

Paddle motor (stapling mailbox)


Before proceeding, remove the following assemblies

- Front cover. See [Front cover \(stapling mailbox\) on page 321](#).
- Rear cover. See [Rear cover \(stapling mailbox\) on page 322](#).
- Output bin 3. See [Output bin 3 \(stapling mailbox\) on page 326](#).
- Controller PCA. See [Output bin 3 driver PCA \(stapling mailbox\) on page 327](#).
- Stapler assembly. See [Stapler assembly \(stapling mailbox\) on page 329](#).
- Stamp solenoid. See [Stamp solenoid \(stapling mailbox\) on page 330](#).
- Stacking panel. See [Stacking panel \(stapling mailbox\) on page 333](#).
- Feed motor. See [Feed motor \(stapling mailbox\) on page 360](#).

Remove the paddle motor (stapling mailbox)

- ▲ Remove two screws (callout 1). Slide the paddle motor (callout 2) in the direction of the arrow to remove it.

Figure 1-529 Remove the paddle motor (stapling mailbox)

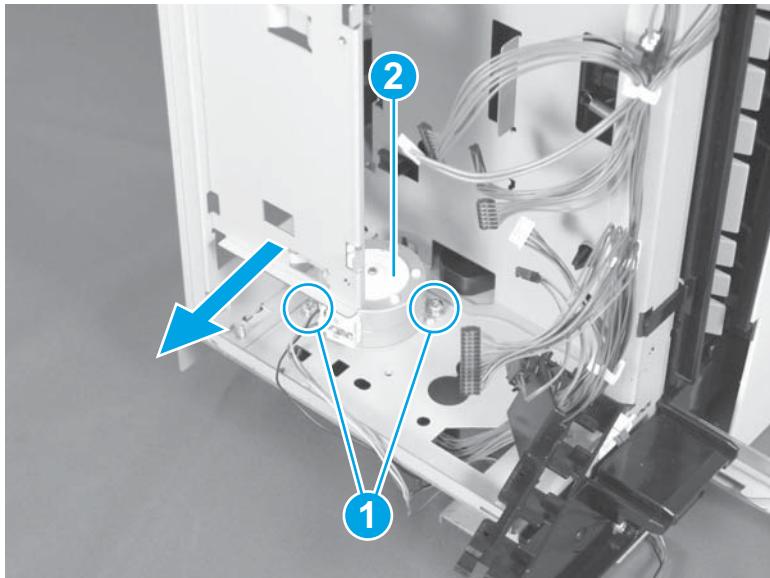

2 Parts and diagrams

- [Order parts by authorized service providers](#)
- [How to use the parts lists and diagrams](#)
- [Document feeder and scanner assemblies](#)
- [Document feeder assemblies](#)
- [Scan control board \(SCB\)](#)
- [Covers](#)
- [Right door](#)
- [Control panels](#)
- [Internal assemblies](#)
- [1x500-sheet paper feeder](#)
- [1x500-sheet paper feeder with cabinet](#)
- [2,500-sheet paper feeder HCI](#)
- [Stapling mailbox](#)
- [Alphabetical parts list](#)
- [Numerical parts list](#)

Order parts by authorized service providers

Order parts, accessories, and supplies

Table 2-1 Order parts, accessories, and supplies

Order supplies and paper	www.hp.com/go/suresupply
Order genuine HP parts or accessories	www.hp.com/buy/parts
Order through service or support providers	Contact an HP-authorized service or support provider.
Order using HP software	For information about using the HP software to order parts, accessories, and supplies, see the product user guide.

Related documentation and software

Table 2-2 Related documentation and software

Item	Description	Part number
<i>HP Color LaserJet Enterprise M651 User Guide</i>	Product user guide	CZ255-90907 (M651)
<i>HP Color LaserJet Enterprise MFP M680 User Guide</i>		CZ248-90907 (M680)
<i>HP Color LaserJet Enterprise M651/MFP M680 Repair Manual</i>	English repair manual	Not applicable
<i>HP Color LaserJet Enterprise M651/MFP M680 Troubleshooting Manual</i>	English troubleshooting manual	Not applicable

Supplies part numbers

Table 2-3 Supplies part numbers

Item	Description	Part number
HP LaserJet toner cartridges (M651)	Black toner cartridge, high capacity	CF330X (new) CF330-67901 (service)
	Black toner cartridge	CF320A (new) CF320-67901 (service)
	Cyan toner cartridge	CF331A (new) CF331-67901 (service)
	Yellow toner cartridge	CF332A (new) CF332-67901 (service)
	Magenta toner cartridge	CF333A (new) CF333-67901 (service)
HP LaserJet toner cartridges (M680)	Black toner cartridge, high capacity	CF320X (new) CF320-67902 (service)
	Black toner cartridge	CF320A (new) CF320-67901 (service)
	Cyan toner cartridge	CF321A (new) CF321-67901 (service)
	Yellow toner cartridge	CF322A (new) CF322-67901 (service)
	Magenta toner cartridge	CF323A (new) CF323-67901 (service)

Customer self-repair parts

The following customer self-repair parts are available for the product.

Each kit includes parts and installation instructions. The customer self repair (CSR) level indicates the expected difficulty the customer will experience when replacing this part:

- **A:** Easy
- **B:** Difficult

Table 2-4 Customer self-repair parts

Item	Description	CSR level	Part number
Control panel replacement kit (M651)	● Control panel assembly (M651)	A	5851-5950
Control panel replacement kit (M680)	● Control panel assembly (M680)	A	5851-5952
Stapling mailbox replacement kit	● 900-sheet, 3-bin stapling mailbox	A	CZ248-67902
Stapler cartridge replacement kit	● HP staple cartridge refill	A	C8085-60541
1x500-sheet paper feeder kit	● 500-sheet paper tray	A	CZ248-67903
1x500-sheet paper feeder with cabinet kit	● 500-sheet paper feeder and cabinet	A	CZ248-67904
2,500-sheet paper feeder HCI	● 2,500-sheet feeder accessory	A	CZ248-67905
HP LaserJet postcard media insert tray	● HP LaserJet postcard media insert tray	A	CC497-67902
Formatter replacement kit (M651)	● Formatter PCA ● Formatter tray ● Disk drive cradle ● Screw, M3 x 5.6 MM	A	CZ255-67901
Formatter replacement kit (China only; M651)	● Formatter PCA ● Formatter tray ● Disk drive cradle ● Screw, M3 x 5.6 MM	A	CZ255-67902
Formatter replacement kit (M680)	● Formatter PCA ● Formatter tray ● Disk drive cradle ● Screw, M3 x 5.6 MM	A	CZ248-67901
Formatter replacement kit (China only; M680)	● Formatter PCA ● Formatter tray ● Disk drive cradle ● Screw, M3 x 5.6 MM	A	CZ248-67906

Table 2-4 Customer self-repair parts (continued)

Item	Description	CSR level	Part number
Analog fax accessory kit (M680)	<ul style="list-style-type: none">● HP LaserJet MFP Analog Fax Accessory 500	A	A2W77-67910
USB wireless print server kit	<ul style="list-style-type: none">● Wireless Print Server	A	J8026-61001
NFC accessory kit	<ul style="list-style-type: none">● NFC accessory	A	J8029-61001
Hard disk drive replacement kit	<ul style="list-style-type: none">● 320 GB hard drive● Rail, disk drive - L/R	B	CZ248-67907
Hard disk drive replacement kit (government SKU)	<ul style="list-style-type: none">● 500 GB FIPS - Gov't SKU #201 hard drive● Rail, disk drive - L/R	B	CZ248-67908
Solid-state memory (SSM) kit (M651)	<ul style="list-style-type: none">● 8 GB SSM module● SSM retainer bracket	B	CZ255-67903
1 GB memory DIMM	<ul style="list-style-type: none">● 1 GB memory DIMM	A	A2W77-67912
ADF roller maintenance kit (M680)	<ul style="list-style-type: none">● ADF roller replacement kit	A	L2725-60002
Maintenance image transfer kit	<ul style="list-style-type: none">● Image transfer kit	A	CC493-67910
Toner collection unit kit	<ul style="list-style-type: none">● Toner collection unit	A	CC493-67913
Fuser replacement kit	<ul style="list-style-type: none">● Fuser	A	CC493-67911 (110V) CC493-67912 (220V)
NOTE: Make sure to order the correct part number for the rated voltage of the product.			
Tray 1 roller kit	<ul style="list-style-type: none">● Tray 1 pickup roller	A	CC493-67906
Tray 2–5 feed/separation roller kit	<ul style="list-style-type: none">● Paper feed/separation rollers	A	CC493-67907
Output bin bezel assembly	<ul style="list-style-type: none">● Tray cover	A	CZ248-67912
Intermediate transfer belt (ITB) service kit	<ul style="list-style-type: none">● Intermediate transfer belt (ITB)● Secondary transfer (T2) roller assembly	A	CC493-67909
Secondary transfer (T2) roller kit	<ul style="list-style-type: none">● Secondary transfer (T2) roller assembly	A	CC493-67908
ADF white backing kit (M680)	<ul style="list-style-type: none">● ADF white backing● Mylar	A	5851-6084
Backside background selector kit (M680)	<ul style="list-style-type: none">● Backside background selector	A	5851-5022
Separation pad spring kit	<ul style="list-style-type: none">● Separation pad spring	A	5851-4879
U.S. English keyboard kit (M680)	<ul style="list-style-type: none">● U.S. English keyboard	A	5851-5380

Table 2-4 Customer self-repair parts (continued)

Item	Description	CSR level	Part number
U.K. English keyboard kit (M680)	• U.K. English keyboard	A	5851-5008
Keyboard overlay kit (M680)	• Keyboard overlay	A	5851-6019 (FR, IT, RU, DE, ES: UK Kybd) 5851-6020 (FR-CN, ES-LA, ES: US Kybd) 5851-6021 (FR-SW, DE-SW, DA: UK Kybd) 5851-6022 (ZHTW, ZHCN) 5851-6023 (ES, PT) 5851-6024 (JA-KG, JA-KT)

Service replacement parts

Table 2-5 Service replacement parts

Item	Description	Part number
Main drive assembly kit	• Main drive assembly	CC493-67915
Laser scanner assembly service kit	• Laser scanner assembly	CZ248-67913
Registration assembly service kit	• Registration assembly	CZ255-67904
Scan control board (SCB) kit (M680)	• SCB assembly	CZ248-67914
Scan control board (SCB) fan assembly kit (M680)	• SCB cooling fan • SCB cooling fan foam	5851-6083
Image scanner whole unit kit (M680)	• Image scanner whole unit • ADF white backing • Mylar	CZ248-67915
ADF whole unit kit (M680)	• ADF whole unit • ADF white backing	CZ248-67916
Mylar kit (M680)	• Mylar separator HR • Mylar deskew	5851-4998

Accessories

Table 2-6 Accessories

Item	Description	Part number
500-sheet paper tray	Input tray accessory	CZ261
500-sheet paper feeder and cabinet	Input tray and storage cabinet accessory	CZ262

Table 2-6 Accessories (continued)

Item	Description	Part number
2,500-sheet high-capacity input (HCI) feeder	2,500-sheet feeder accessory	CZ263
Stapling mailbox	900-sheet, 3-bin stapling mailbox accessory	CZ264
HP LaserJet MFP analog fax accessory 500	Analog fax accessory	CC487A
HP LaserJet postcard media insert tray	Tray insert for printing small-size paper	CC497A
HP Jetdirect 2700w USB wireless print server	Accessory for wireless printing	J8026A
HP Jetdirect 2800w NFC/wireless direct accessory	Wireless direct accessory for “touch” printing from mobile devices	J8029A

How to use the parts lists and diagrams

The figures in this chapter show the major subassemblies in the product and their component parts. A parts list table follows each exploded view assembly diagram. Each table lists the item number, the associated part number, and the description of each part. If a part is not listed in the table, then it is not a field replacement unit (FRU).

 **CAUTION:** Be sure to order the correct part. When looking for part numbers for electrical components, pay careful attention to the voltage that is listed in the description column. Doing so will ensure that the part number selected is for the correct model.

 **NOTE:** In this manual, the abbreviation “PCA” stands for “printed circuit-board assembly.” Components described as a PCA might consist of a single circuit board or a circuit board plus other parts, such as cables and sensors.

Document feeder and scanner assemblies

Figure 2-1 Document feeder and scanner assemblies (M680)

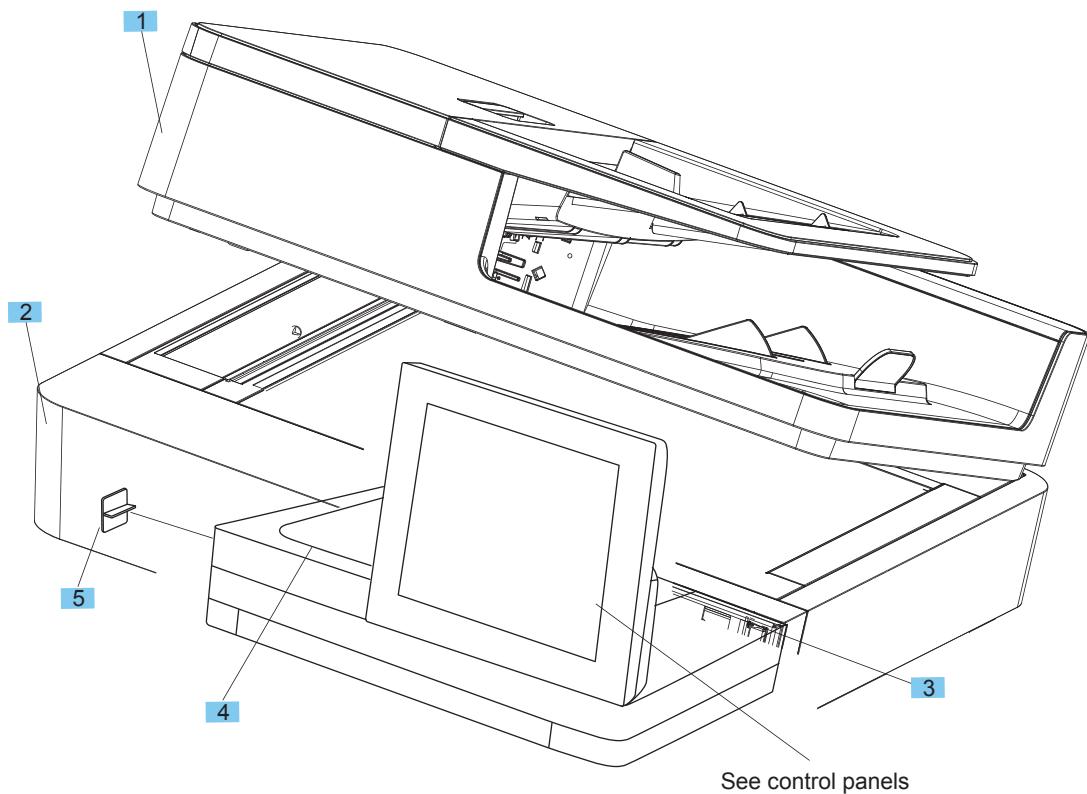


Table 2-7 Document feeder and scanner assemblies (M680)

Ref	Description	Part number	Qty
1	Kit, document feeder, complete with white backing (M680) ¹	CZ248-67916	1
2	Kit, image scanner assembly, complete with white backing (M680) ²	CZ248-67915	1
3	Cover, control panel access (M680)	5042-9118	1
4	Cover, HIP (M680)	5851-5361	1
5	Cover, USB (M680)	5851-5360	1

¹ When the document feeder assembly is replaced, use the [Service](#) menu to set the [Document feeder Kit Interval](#), [ADF Count](#), and [Clean Rollers Count](#) values to zero.

² When the image scanner assembly is replaced, use the [Service](#) menu to set the [Flatbed Count](#) value to zero.

Document feeder assemblies

Figure 2-2 Document feeder assemblies (M680, 1 of 2)

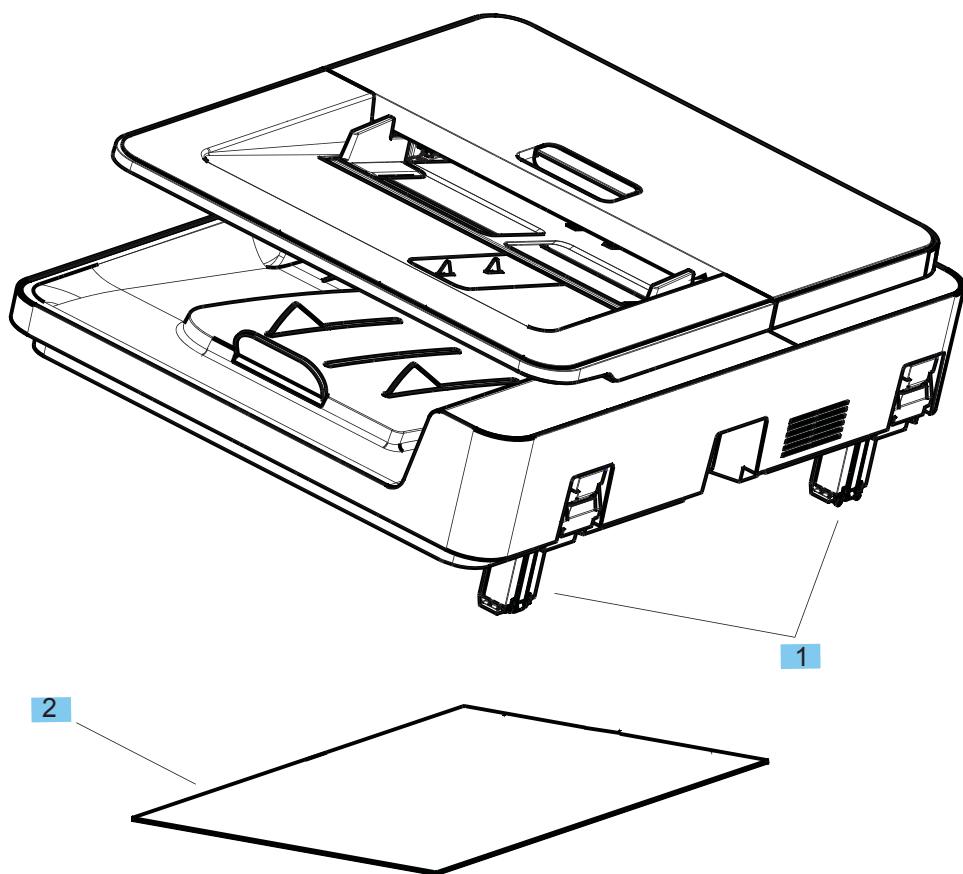


Table 2-8 Document feeder assemblies (M680, 1 of 2)

Ref	Description	Part number	Qty
1	Assembly, Hinge HR	B4A39-60011	2
2	Kit, ADF white backing (M680)	5851-6084	1

Figure 2-3 Document feeder assemblies (M680, 2 of 2)

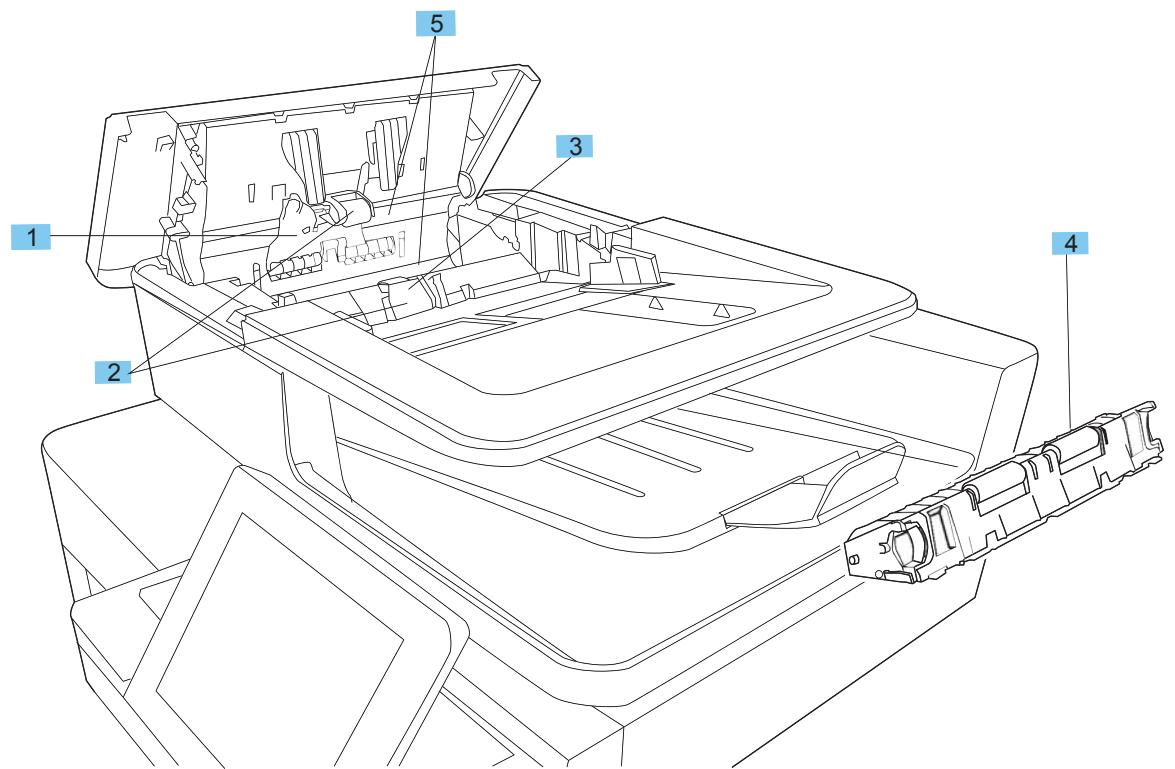


Table 2-9 Document feeder assemblies (M680, 2 of 2)

Ref	Description	Part number	Qty
1	Cover, document-feeder roller (M680)	CC355-40013	1
2	Kit, ADF roller maintenance (M680) (includes roller and separation pad)	L2725-60002	1
3	Kit, ADF separation pad spring (M680)	5851-4879	1
4	Kit, background selector for backside scan (M680)	5851-5022	1
5	Kit, document feeder mylar strips (M680)	5851-4998	2

Scan control board (SCB)

Figure 2-4 Scan control board (SCB; M680)

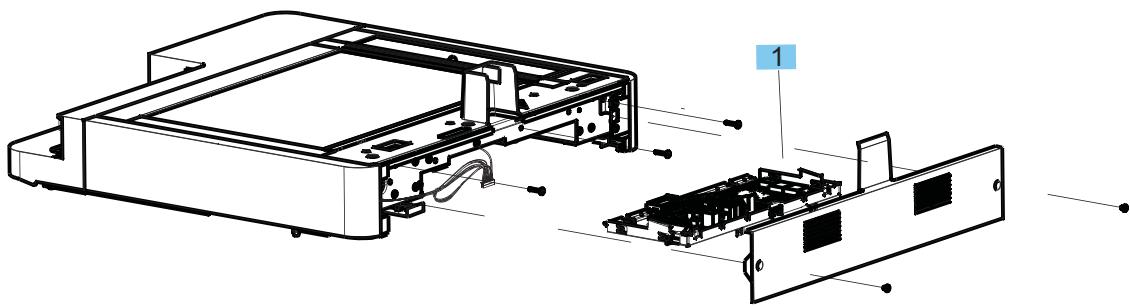


Table 2-10 Scan control board (SCB; M680)

Ref	Description	Part number	Qty
1	Scanner control board (M680)	CZ248-67914	1
Not shown	Kit, scanner control board fan assembly (M680)	5851-6083	1

Covers

Covers (M651)

Figure 2-5 Covers (M651)

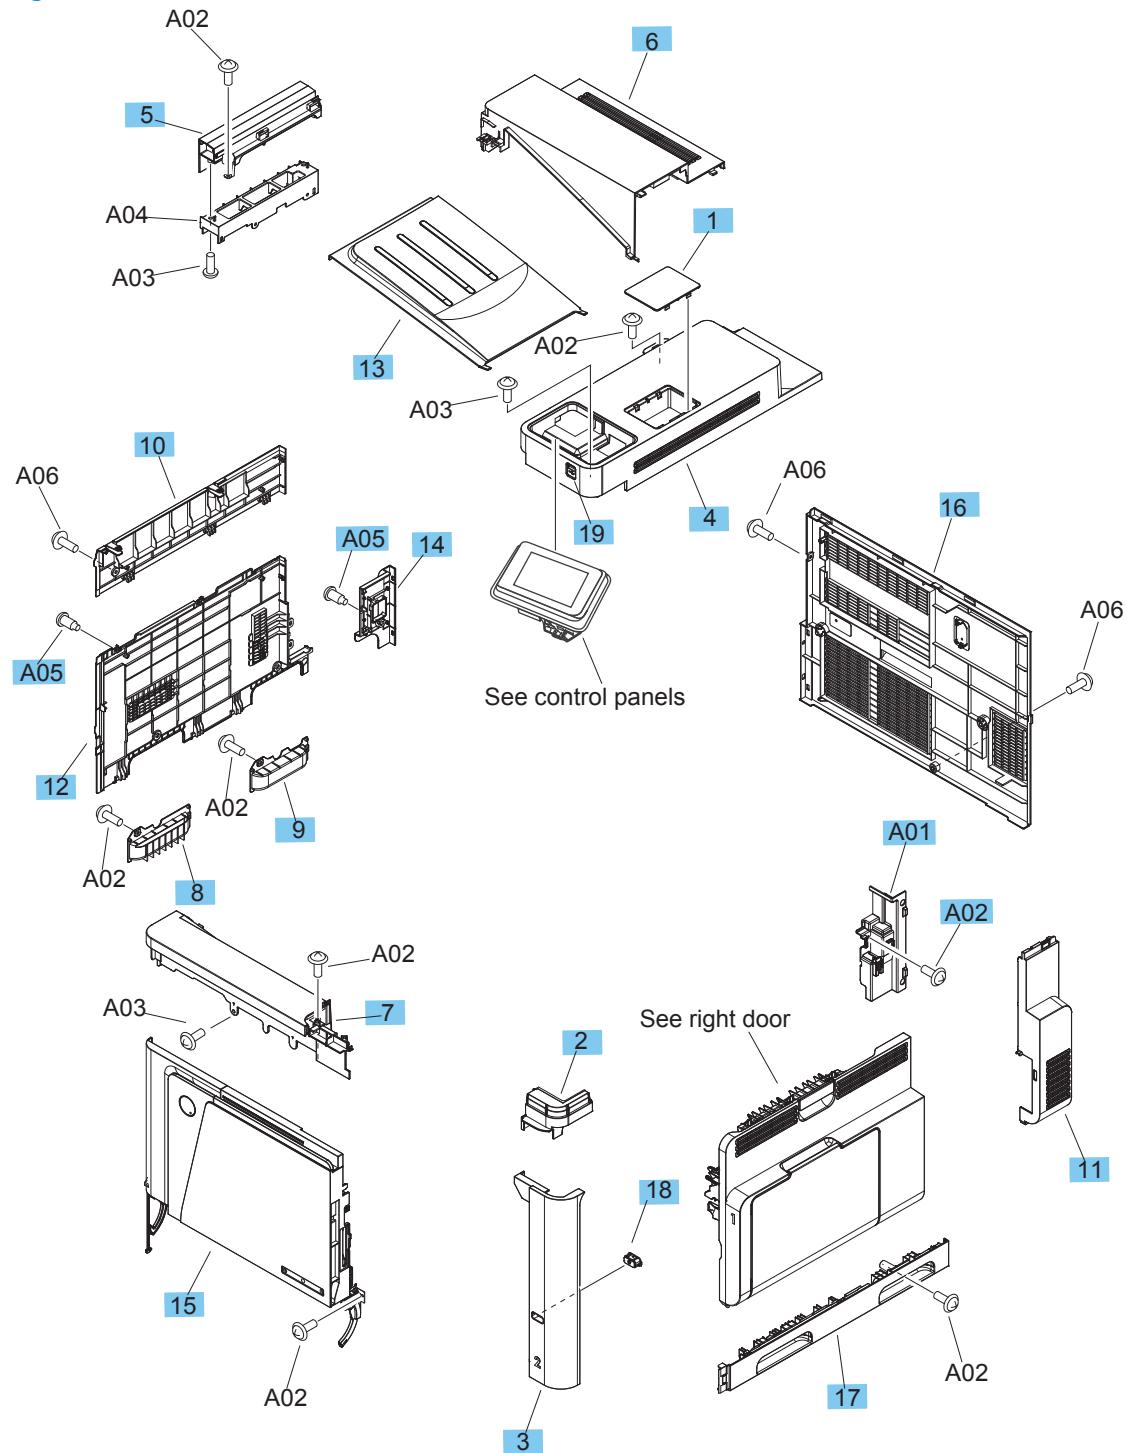


Table 2-11 Covers (M651)

Ref	Description	Part number	Qty
1	Cover, HIP (M651)	RC3-3948-000CN	1
2	Cover, right front, upper (M651)	RC3-5550-000CN	1
3	Cover, right front	RC3-5551-000CN	1
4	Cover, upper	RC3-5553-000CN	1
5	Cover, face-down, left	RC3-5555-000CN	1
6	Cover, face-down, rear	RC3-5556-000CN	1
7	Cover, front face-down	RM2-0392-000CN	1
8	Grip, left front	RC3-5625-000CN	1
9	Grip, left rear	RC3-5626-000CN	1
10	Cover, upper left	RC3-5627-000	1
11	Cover, right rear	RC3-5628-000CN	1
12	Cover, left	RC3-5629-000CN	1
13	Tray, face-down	RC3-5631-000CN	1
14	Cover, left rear	RC3-5632-000CN	1
15	Assembly, front door	RM2-0200-000CN	1
16	Cover, rear (M651)	RM2-0202-000CN	1
17	Assembly, right handle cover	RM2-0210-000CN	1
18	Assembly, switch button	RM2-0402-000CN	1
19	Cover, USB	5851-5136	1
A01	Cover, inner	RM1-5520-000CN	1
A02	Screw, D, M3x8	XA9-1671-000CN	1
A05	Screw, stepped	XA9-1671-000CN	2

Covers (M680)

Figure 2-6 Covers (M680)

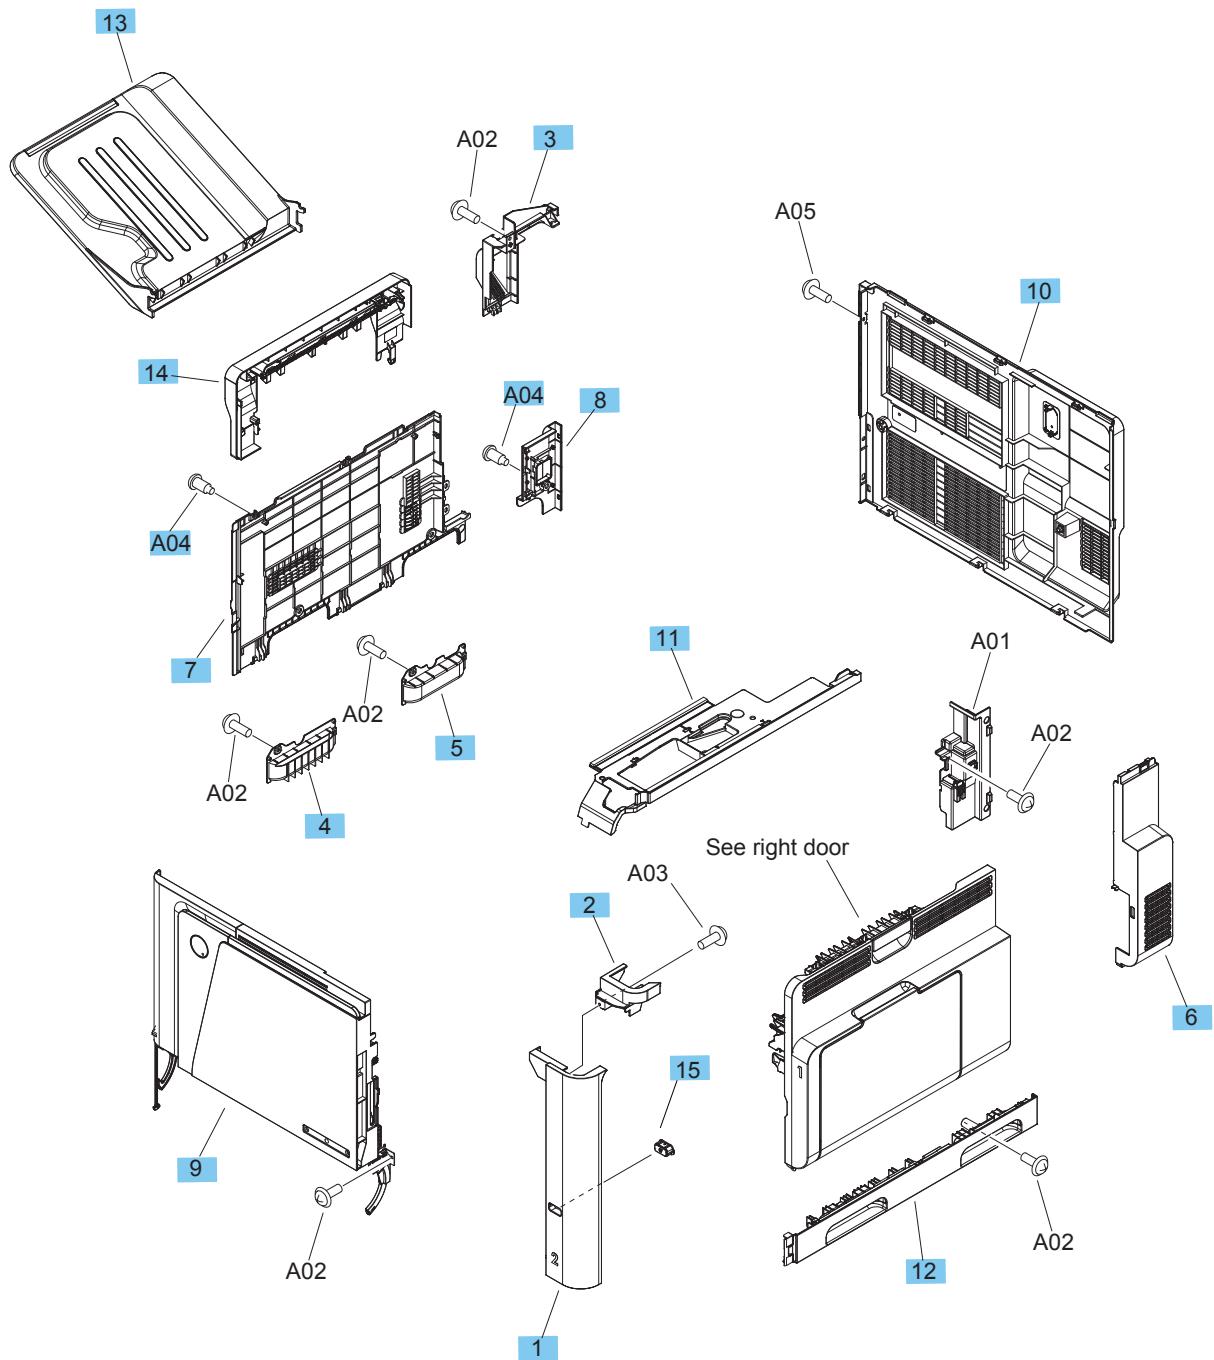


Table 2-12 Covers (M680)

Ref	Description	Part number	Qty
1	Cover, right front	RC3-5551-000CN	1
2	Cover, right front, upper (M680)	RC3-5582-000CN	1
3	Cover, fan (M680)	RC3-5593-000CN	1
4	Grip, left front	RC3-5625-000CN	1
5	Grip, left rear	RC3-5626-000CN	1
6	Cover, right rear	RC3-5628-000CN	1
7	Cover, left	RC3-5629-000CN	1
8	Cover, left rear	RC3-5632-000CN	1
9	Assembly, front door	RM2-0200-000CN	1
10	Cover, rear (M680)	RM2-0205-000CN	1
11	Assembly, intermediate cover	RM2-0206-000CN	1
12	Assembly, right handle cover	RM2-0210-000CN	1
13	Bin, standard output	RM2-0214-000CN	1
14	Bezel, output bin (M680)	CZ248-67912	1
15	Assembly, switch button	RM2-0402-000CN	1
A01	Cover, inner	RM1-5520-000CN	1
A02	Screw, D, M3x8	XA9-1671-000CN	1
A04	Screw, stepped	XA9-1671-000CN	2

Right door

Figure 2-7 Right door

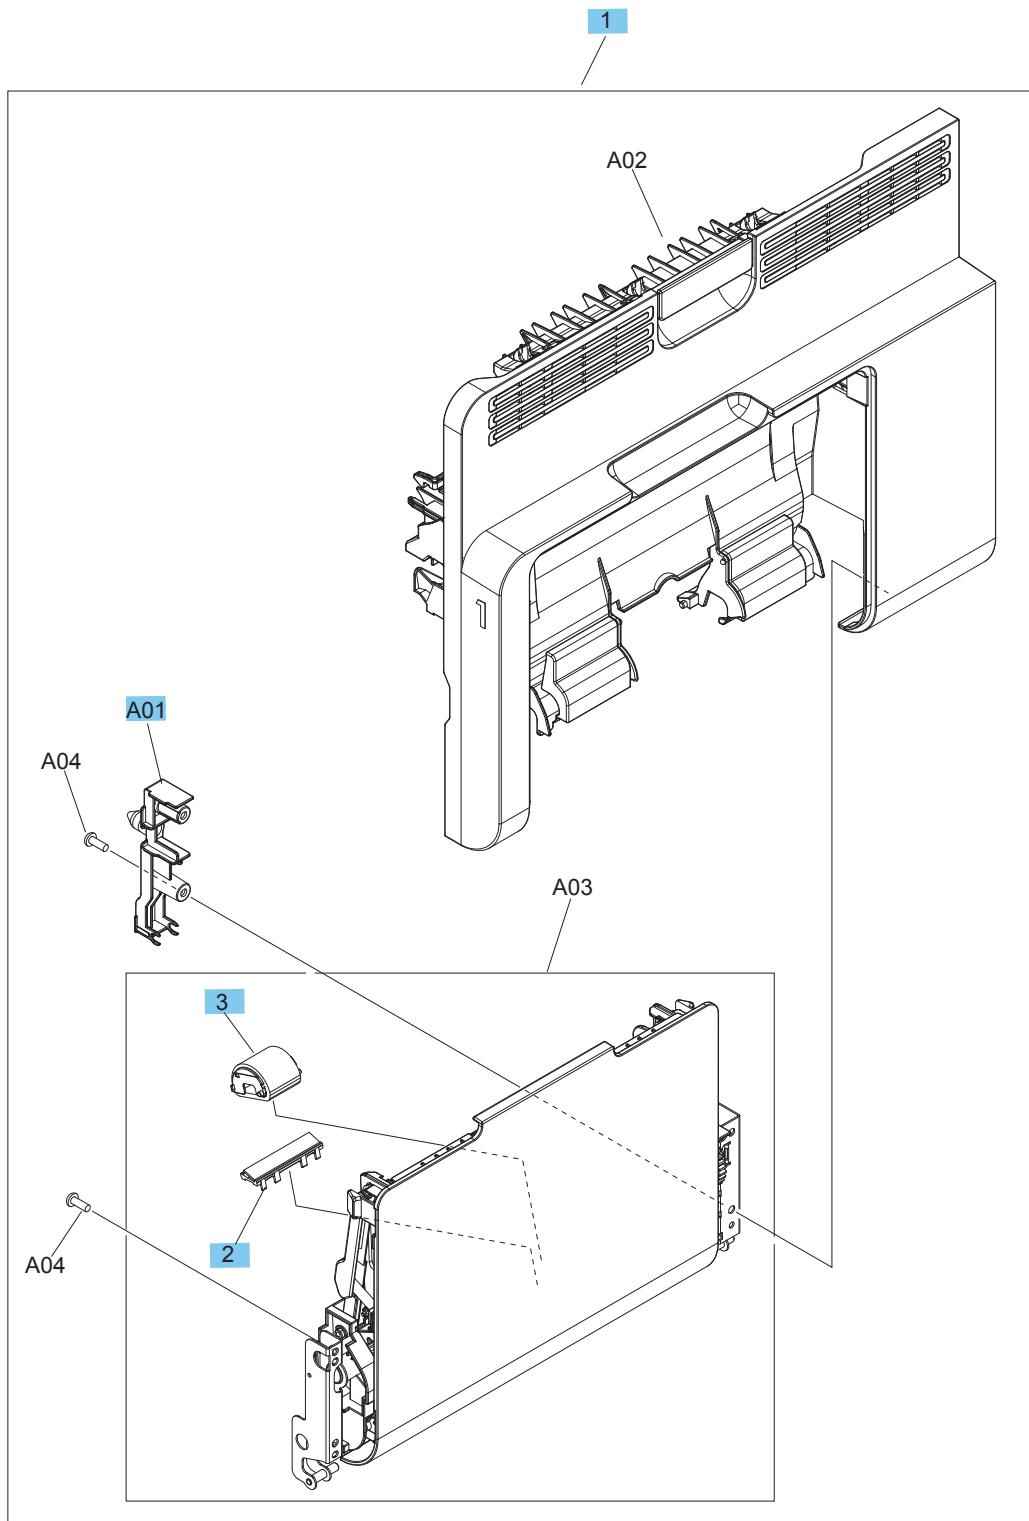


Table 2-13 Right door

Ref	Description	Part number	Qty
1	Assembly, right door	RM2-0208-000CN	1
2	Pad, Tray 1 separation	RL1-1937-000CN	1
3	Kit, Tray 1 roller	CC493-67906	1
A01	Cover, M.R. crossmember	RC2-4747-000CN	1

Control panels

Figure 2-8 Control panels

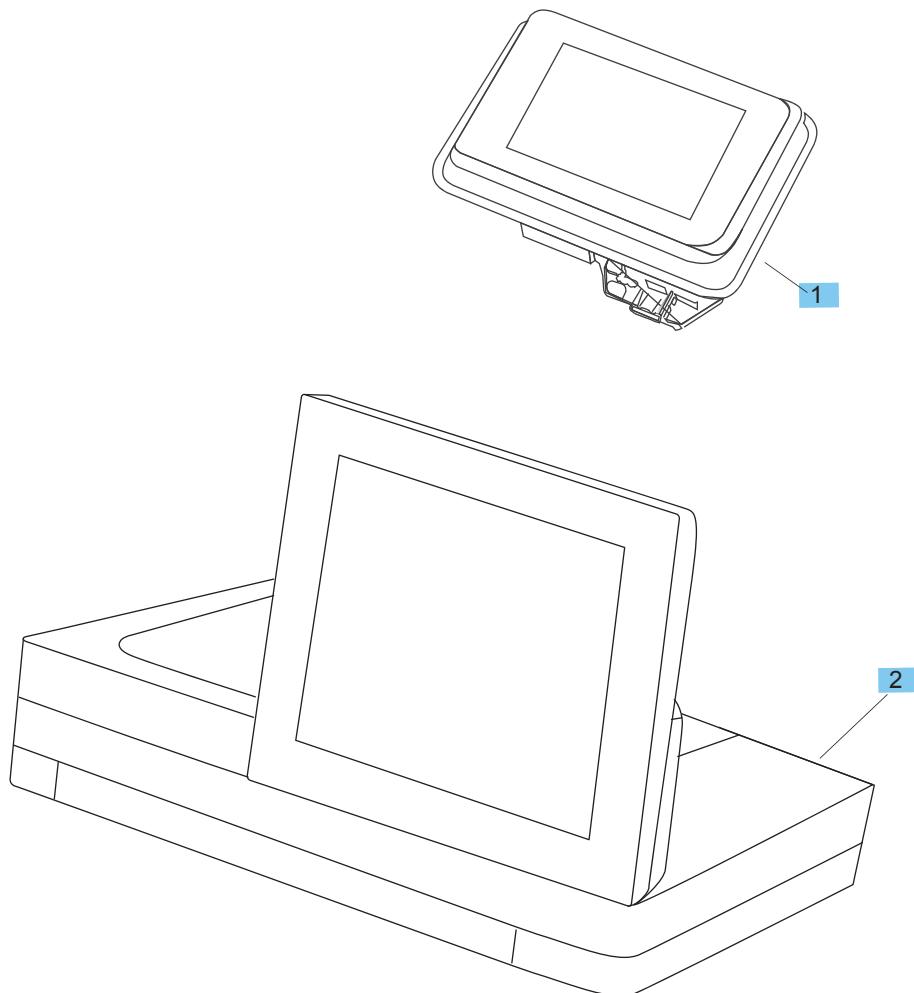


Table 2-14 Control panels

Ref	Description	Part number	Qty
1	Kit, control panel (M651)	5851-5950	1
2	Kit, control panel (without keyboard) (M680)	5851-5952	1
Not shown	Kit, U.S. English keyboard (M680)	5851-5380	1
Not shown	Kit, U.K. English keyboard (M680)	5851-5008	1

Internal assemblies

Internal assemblies (M651)

Figure 2-9 Internal assemblies (M651)

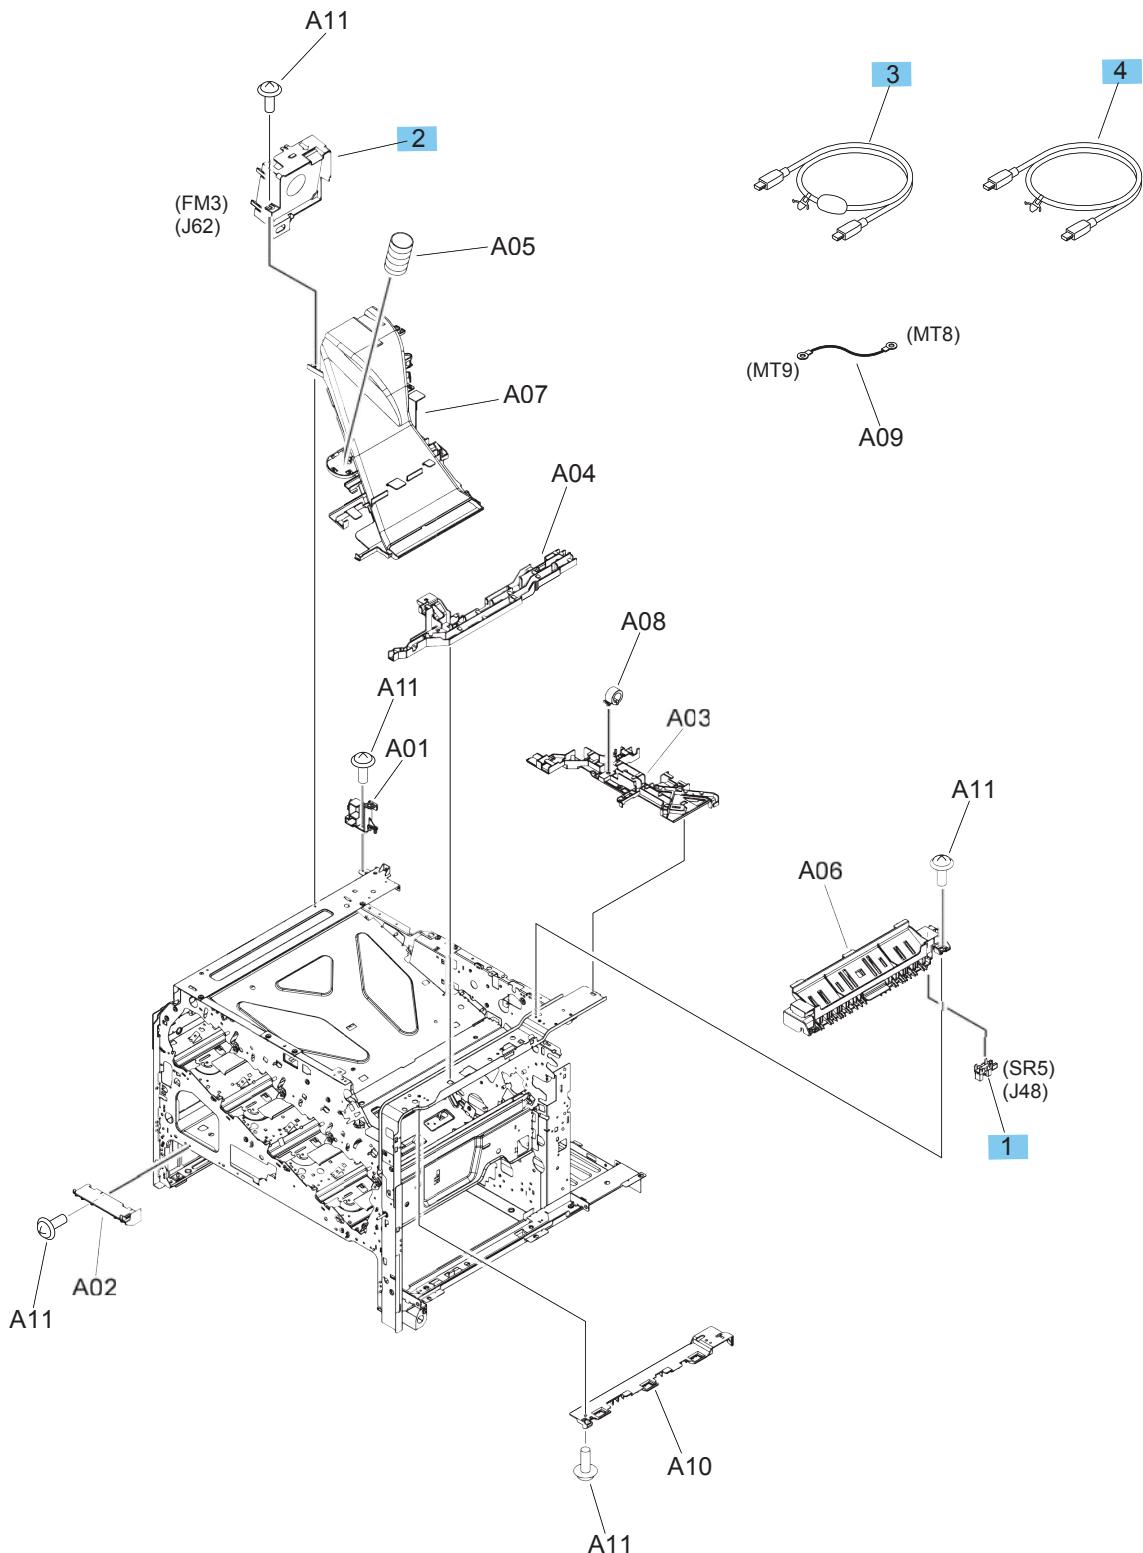


Table 2-15 Internal assemblies (M651)

Ref	Description	Part number	Qty
1	Photointerrupter	WG8-5935-000CN	1
2	Assembly, paper-delivery fan (M651)	RM1-5501-000CN	1
3	Cable, USB, IS	RK2-5077-000CN	1
4	Cable, USB, SH	RK2-5078-000CN	1

Internal assemblies (M680)

Figure 2-10 Internal assemblies (M680)

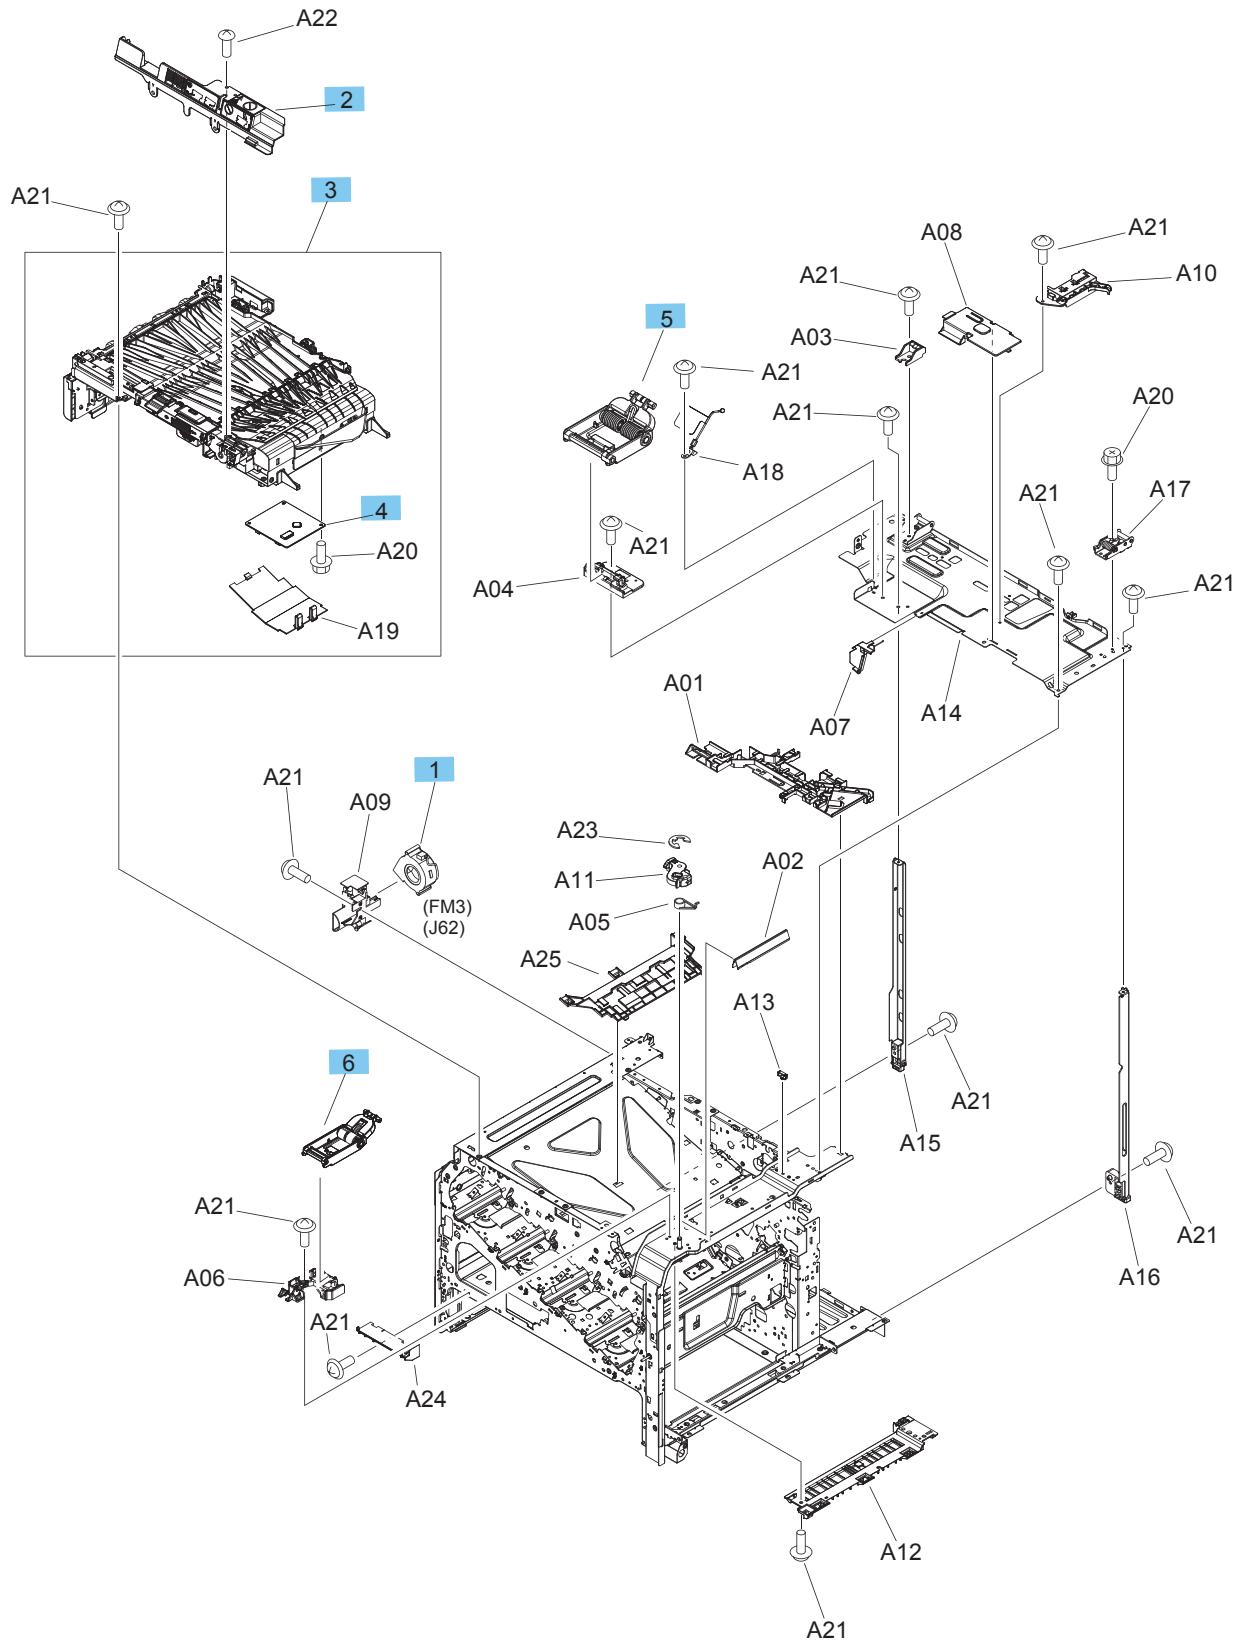


Table 2-16 Internal assemblies (M680)

Ref	Description	Part number	Qty
1	Assembly, paper-delivery fan (M680)	RK2-2575-000CN	1
2	Assembly, IPTU inner cover	RL1-3976-000CN	1
3	Assembly, intermediate paper feed	RM2-0216-000CN	1
4	Assembly, IPTU driver PCA	RM2-0474-000CN	1
5	Assembly, scissors hinge, left	RM1-5616-000	1
6	Assembly, scissors hinge, right	RM2-5771-000CN	1

Internal assemblies (1 of 6)

Figure 2-11 Internal assemblies (1 of 6)

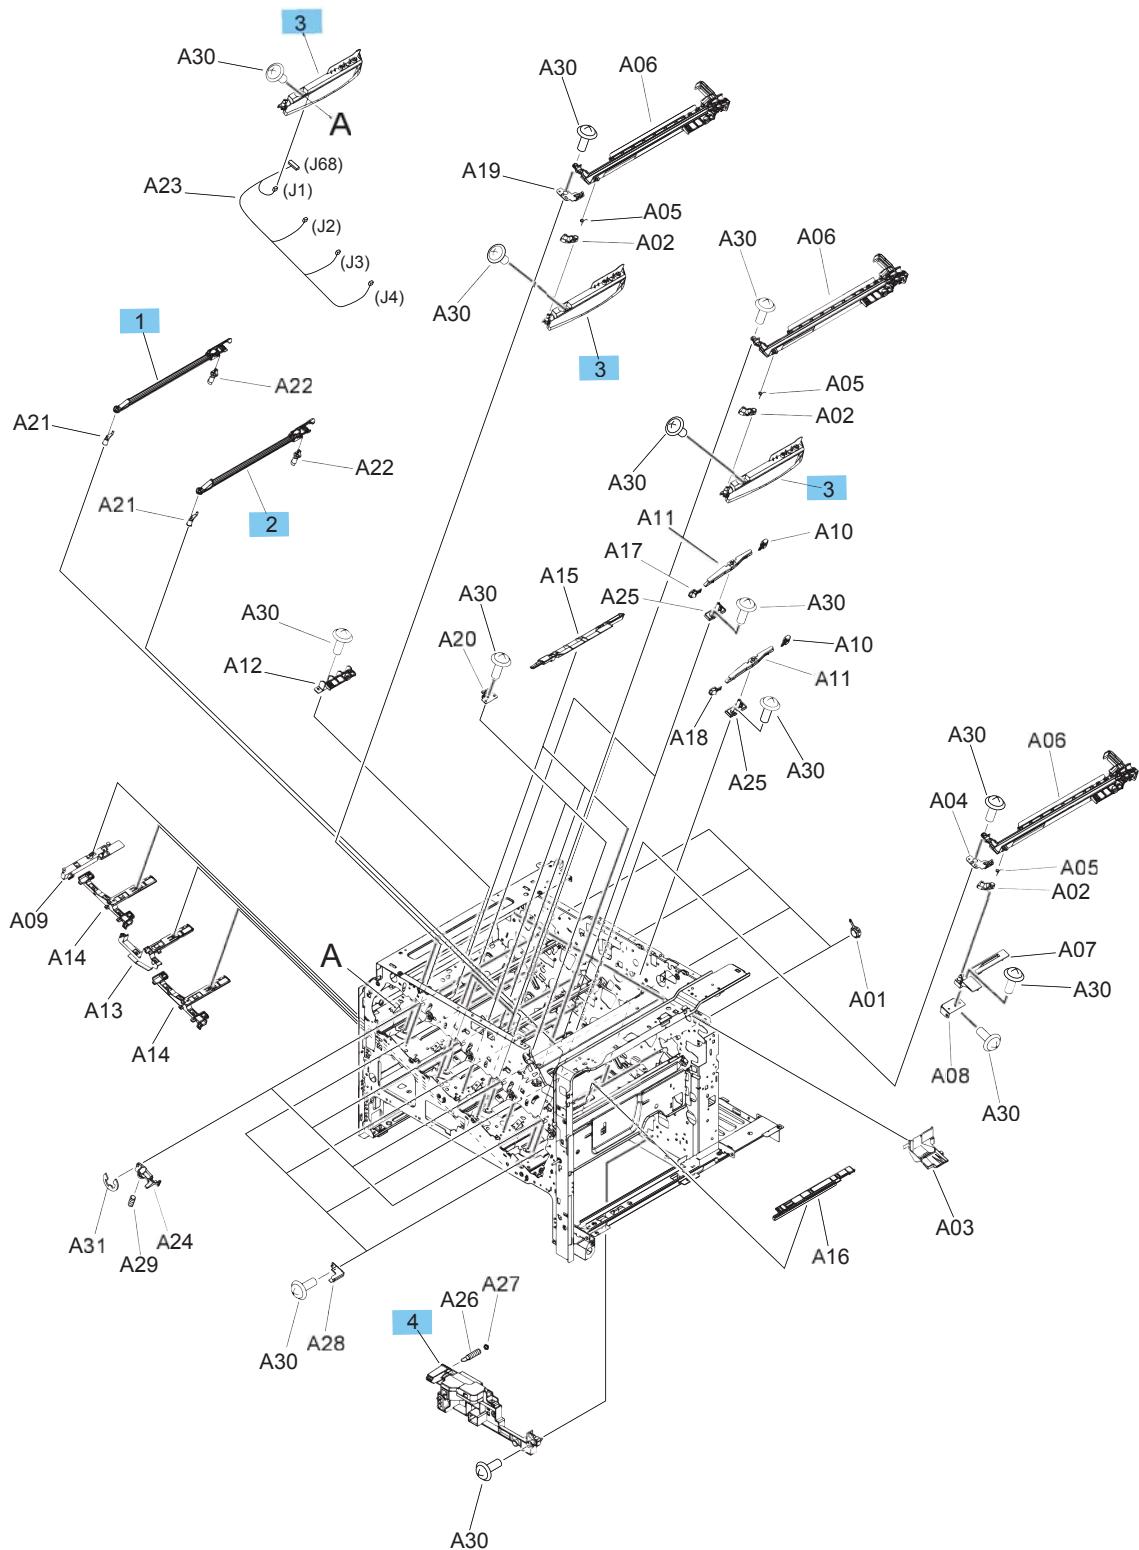


Table 2-17 Internal assemblies (1 of 6)

Ref	Description	Part number	Qty
1	Assembly, shutter	RM1-5488-000CN	2
2	Assembly, shutter	RM1-5489-000CN	2
3	Assembly, toner remain PCA	RM1-5771-000CN	4
4	Assembly, lifter base	RM1-5913-000CN	1

Internal assemblies (2 of 6)

Figure 2-12 Internal assemblies (2 of 6)

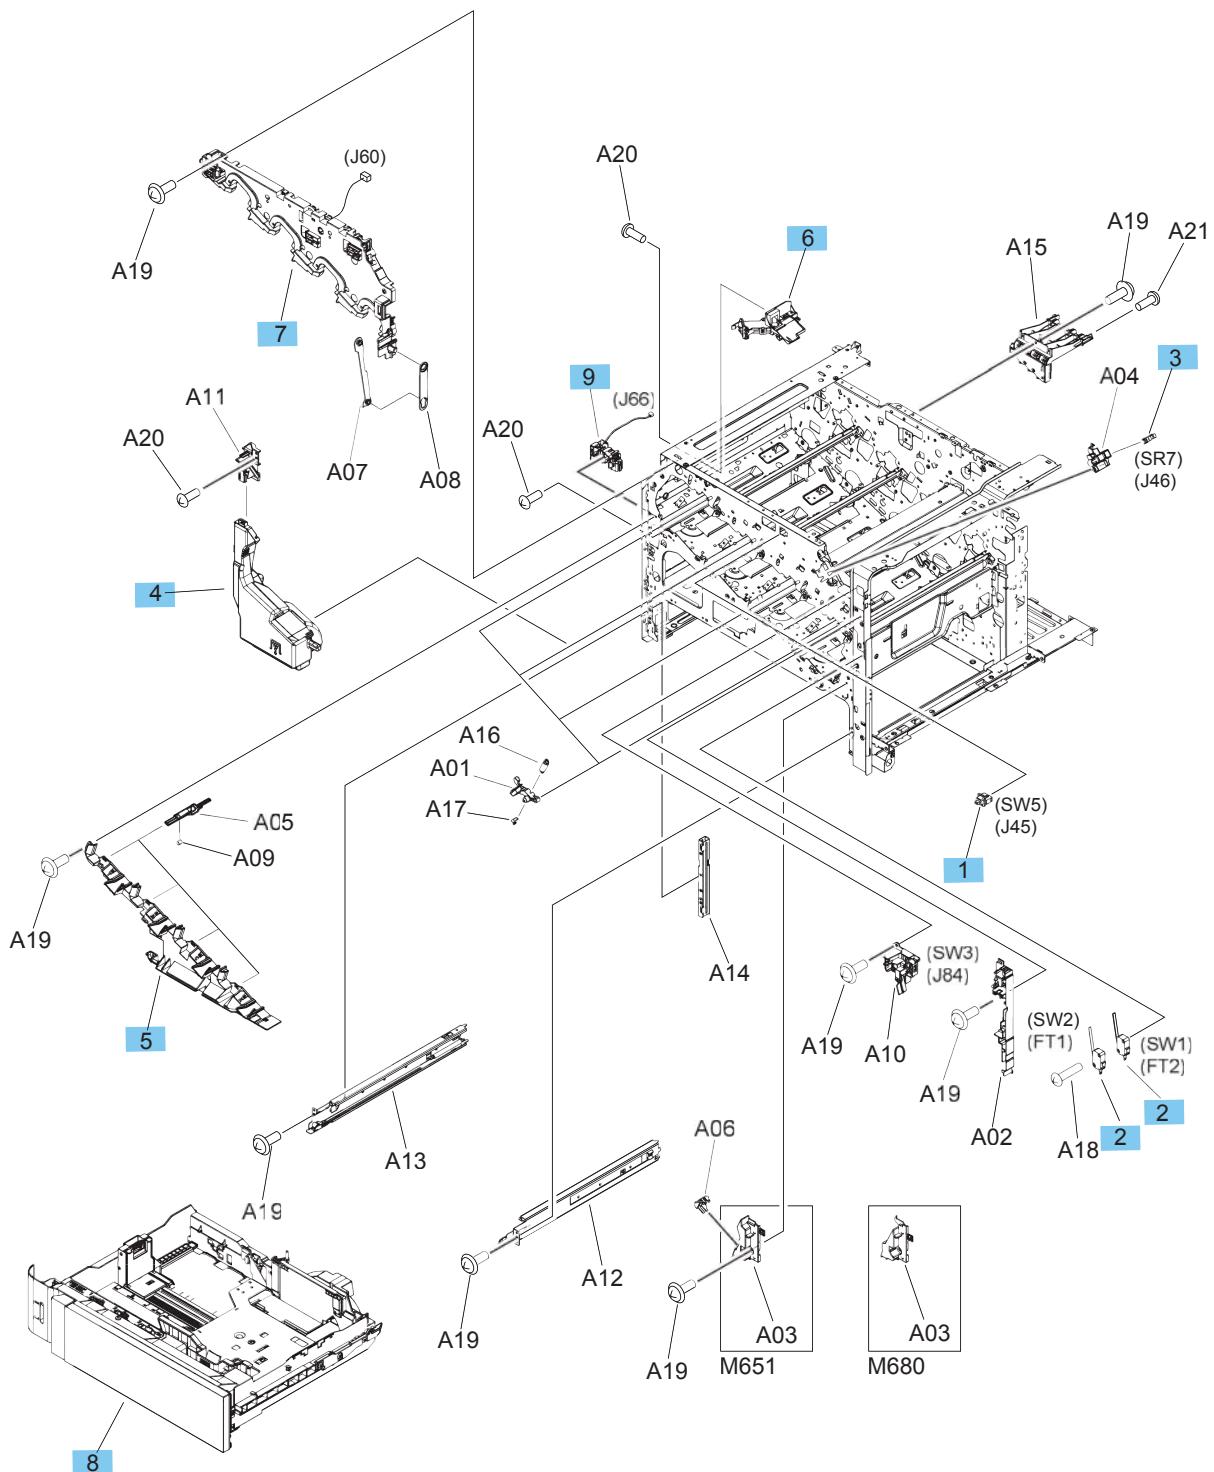


Table 2-18 Internal assemblies (2 of 6)

Ref	Description	Part number	Qty
1	Switch, push	WC2-5637-000CN	1
2	Switch	WC4-5303-000CN	2
3	Photointerrupter	WG8-5935-000CN	1
4	Kit, toner collection unit	CC493-67913	1
5	Assembly, front inner cover lower	RM1-5598-000CN	1
6	Assembly, residual-toner transfer	RM2-0399-000CN	1
7	Assembly, front inner cover upper	RM2-0219-000CN	1
8	Tray	RM2-0340-000CN	1
9	Sensor, residual toner full	RM2-0397-000CN	1

Internal assemblies (3 of 6)

Figure 2-13 Internal assemblies (3 of 6)

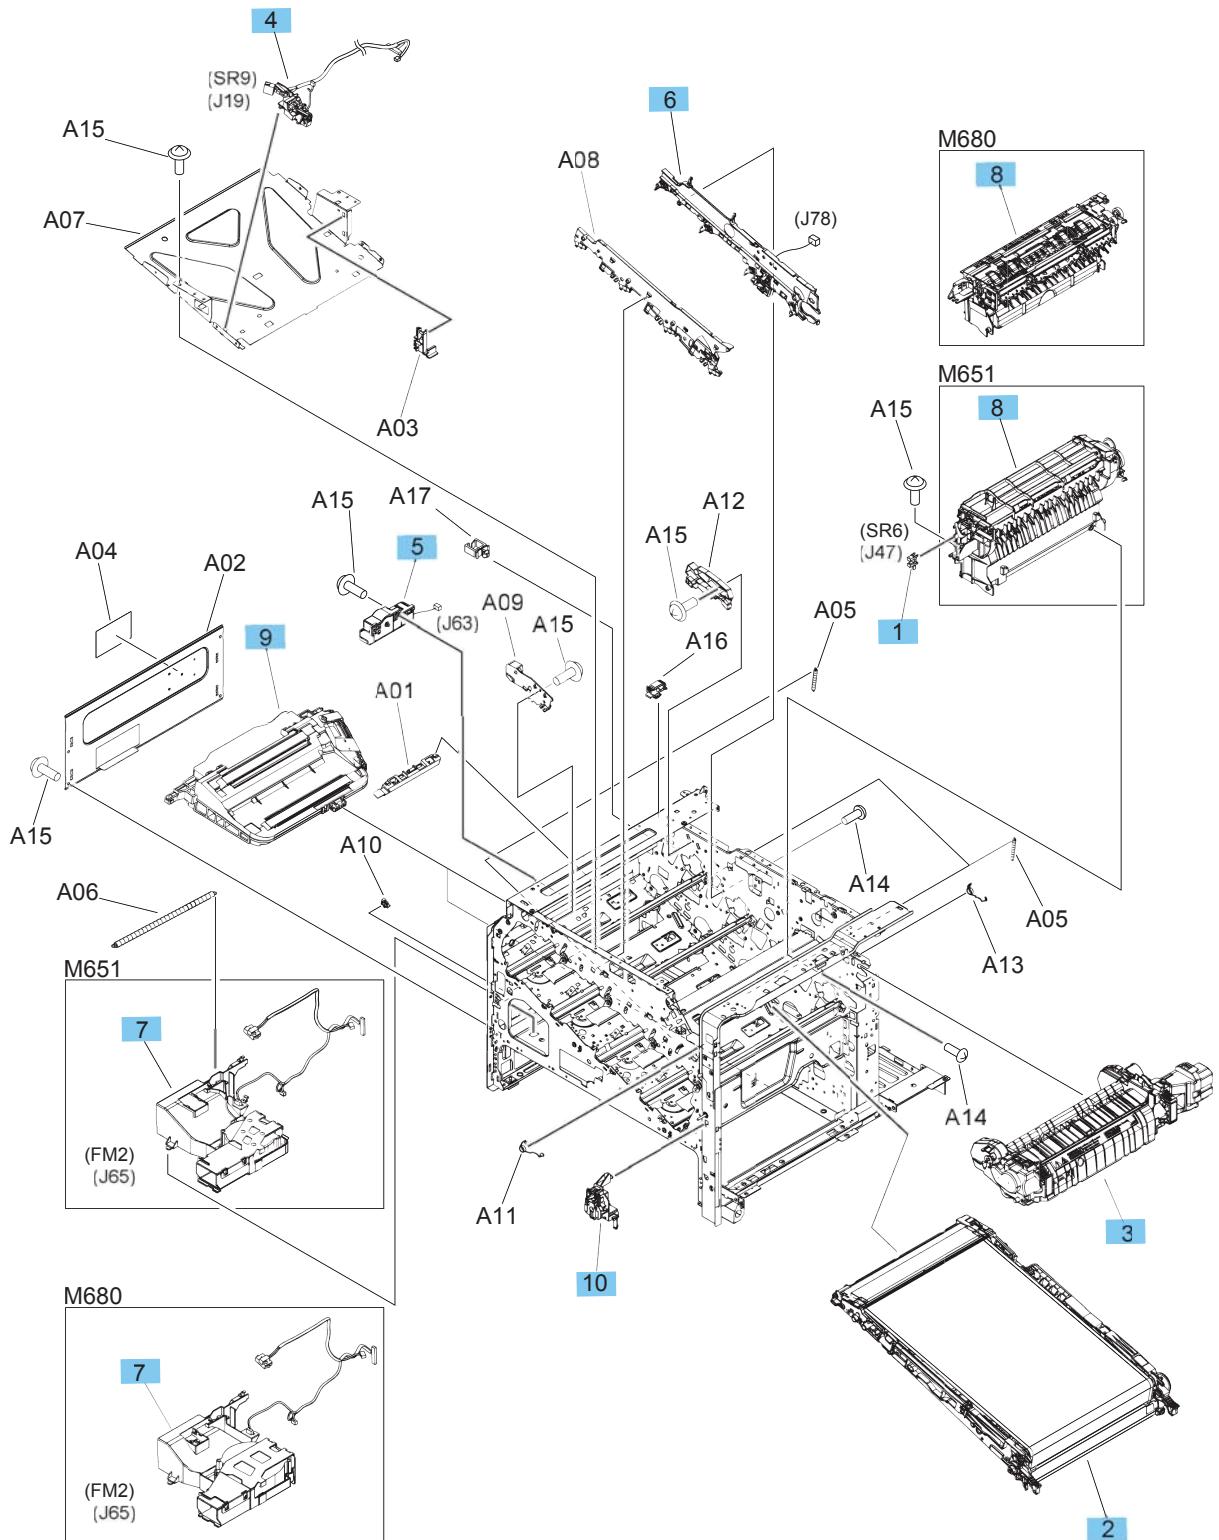


Table 2-19 Internal assemblies (3 of 6)

Ref	Description	Part number	Qty
1	Photointerrupter	WG8-5935-000CN	1
2	Kit, intermediate transfer belt (includes secondary transfer roller)	CC493-67909	2
3	Kit, fuser replacement, 110V	CC493-67911	1
3	Kit, fuser replacement, 220V	CC493-67912	1
4	Assembly, position detect	RM1-5604-000CN	1
5	Assembly, residual-toner-feed motor	RM1-5605-010CN	1
6	Assembly, rear pre-exposure	RM2-0500-000CN	1
7	Assembly, cartridge fan (M651)	RM2-0212-000CN	1
7	Assembly, cartridge fan (M680)	RM2-0213-000CN	1
8	Assembly, paper-delivery (M651)	RM2-0223-000CN	1
8	Assembly, paper-delivery (M680)	RM1-5615-000CN	1
9	Kit, laser scanner assembly	CZ248-67913	2
10	Assembly, main switch	RM2-0386-000CN	1

Internal assemblies (4 of 6)

Figure 2-14 Internal assemblies (4 of 6)

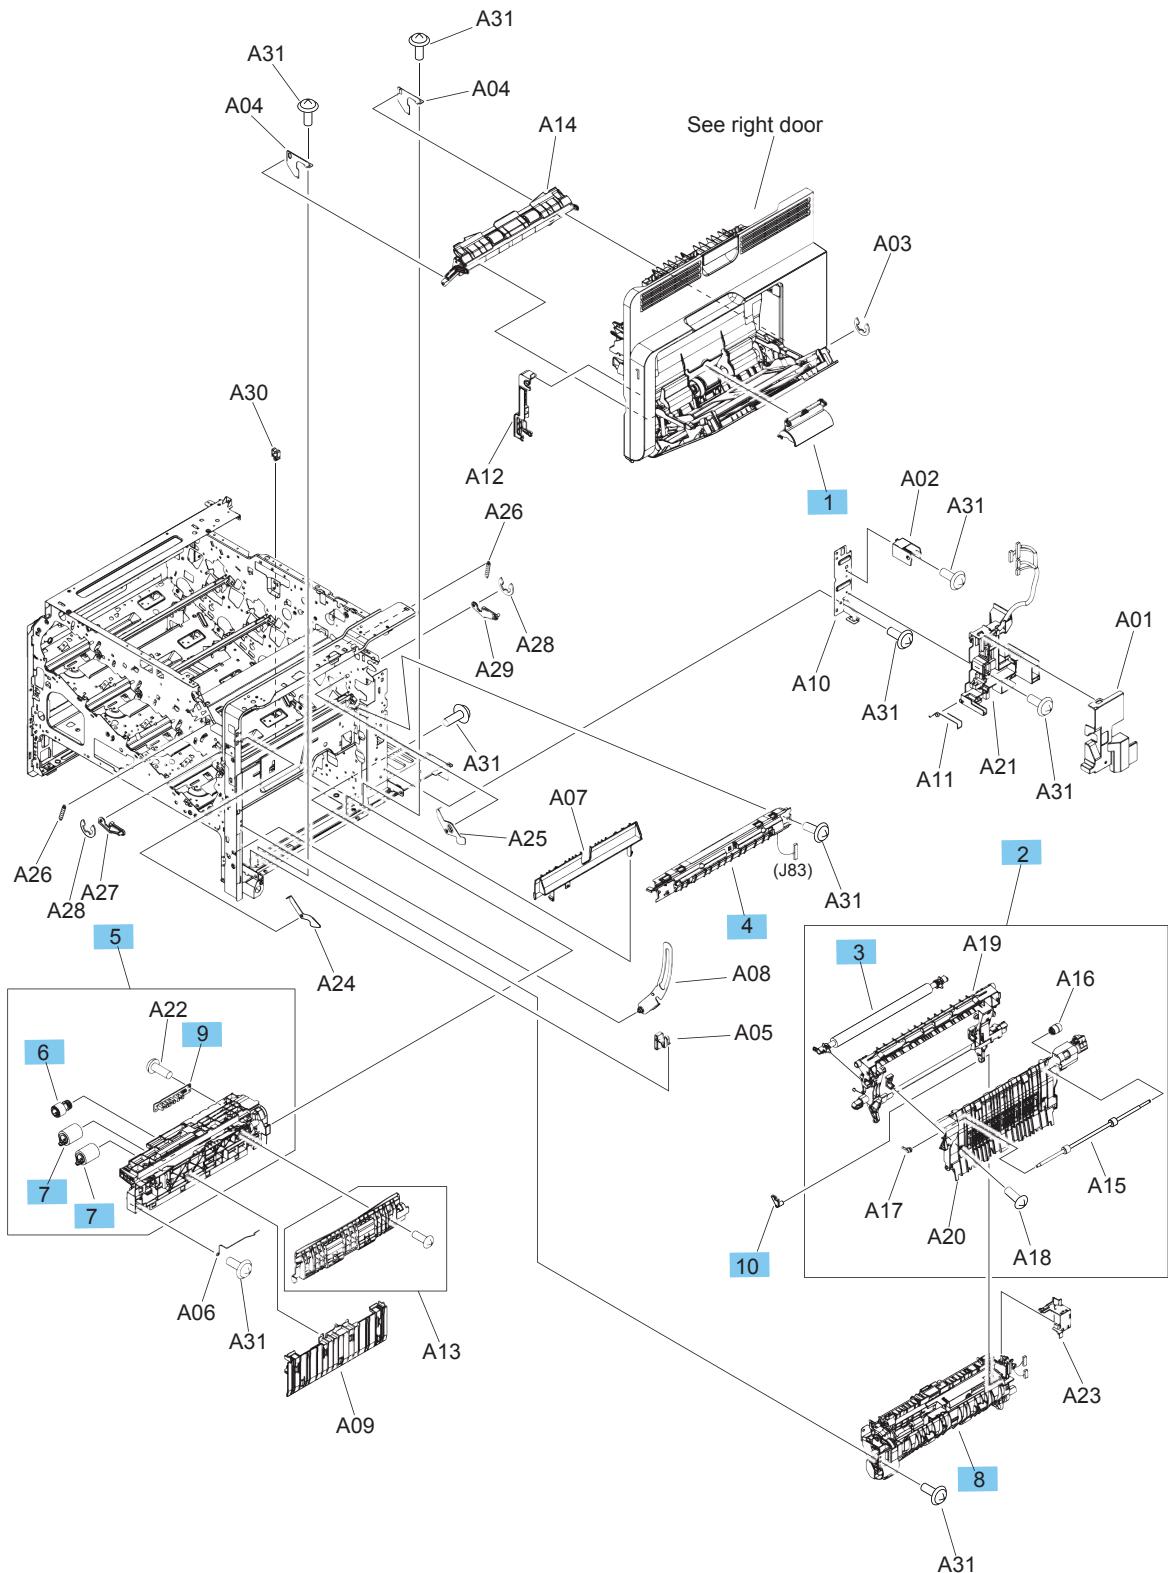


Table 2-20 Internal assemblies (4 of 6)

Ref	Description	Part number	Qty
1	Cover, roller	RC3-5630-000CN	1
2	Assembly, secondary transfer	RM1-5564-040CN	1
3	Kit, secondary transfer (T2) roller	CC493-67908	1
4	Assembly, registration density (RD) sensor	RM1-5641-000CN	1
5	Assembly, paper-pickup	RM1-5919-000CN	1
6	Roller, paper pickup	RL1-2099-000CN	1
7	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	2
8	Kit, registration assembly	CZ255-67904	1
9	Assembly, paper sensor PCA	RM1-5853-000CN	1
10	Shaft, support	RC2-4162-000CN	1

Internal assemblies (5 of 6)

Figure 2-15 Internal assemblies (5 of 6)

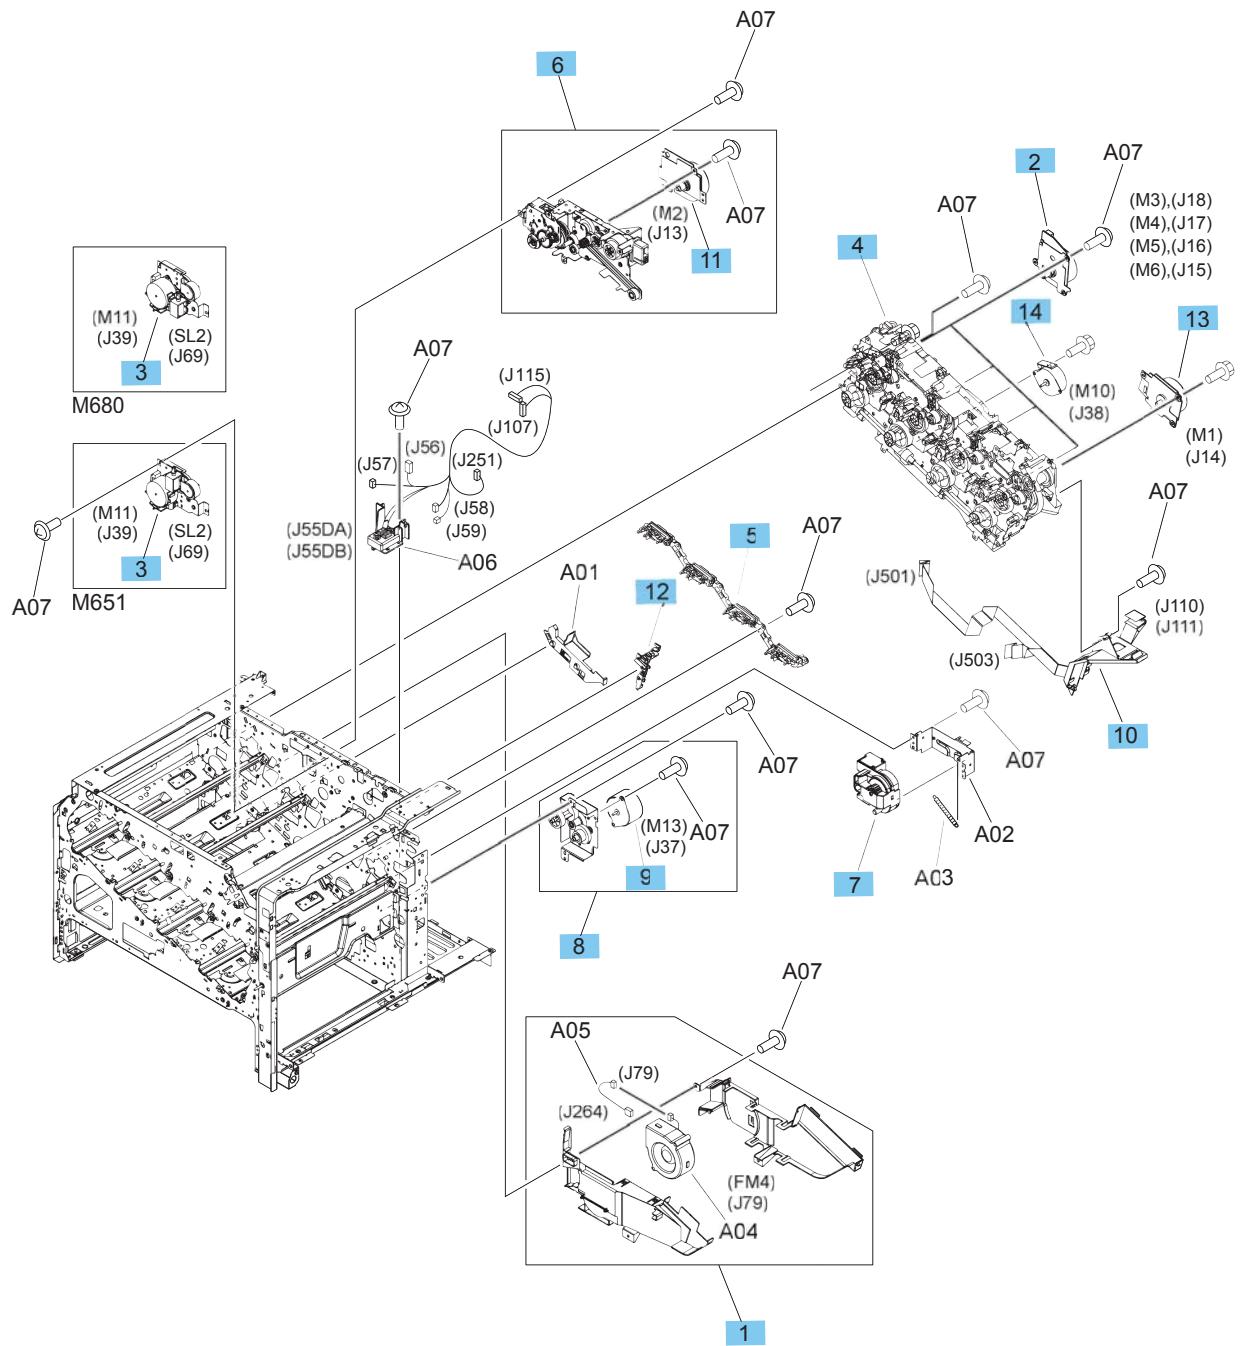


Table 2-21 Internal assemblies (5 of 6)

Ref	Description	Part number	Qty
1	Assembly, cartridge duct	RM1-5497-010CN	1
2	Motor, main DC	RM1-5521-010CN	4
3	Assembly, duplexing-drive (M651)	RM1-5546-000CN	1
3	Assembly, duplexing drive (M680)	RM1-4973-000CN	1
4	Kit, main drive assembly	CC493-67915	1
5	Assembly, tag holder	RM1-5638-000CN	1
6	Assembly, fuser drive	RM1-5656-000CN	1
7	Assembly, lifter	RM1-5914-000CN	1
8	Assembly, paper-pickup drive	RM2-0385-000CN	1
9	Motor, pickup	RK2-5053-000CN	1
10	Assembly, flexible flat cable	RM2-0393-000CN	1
11	Motor, fuser	RM1-4983-000CN	1
12	Guide, cable	RC2-4468-000CN	1
13	Motor, ITB	RM1-5777-000CN	1
14	Motor, developing disengagement	RK2-2415-000CN	1

Internal assemblies (6 of 6)

Figure 2-16 Internal assemblies (6 of 6)

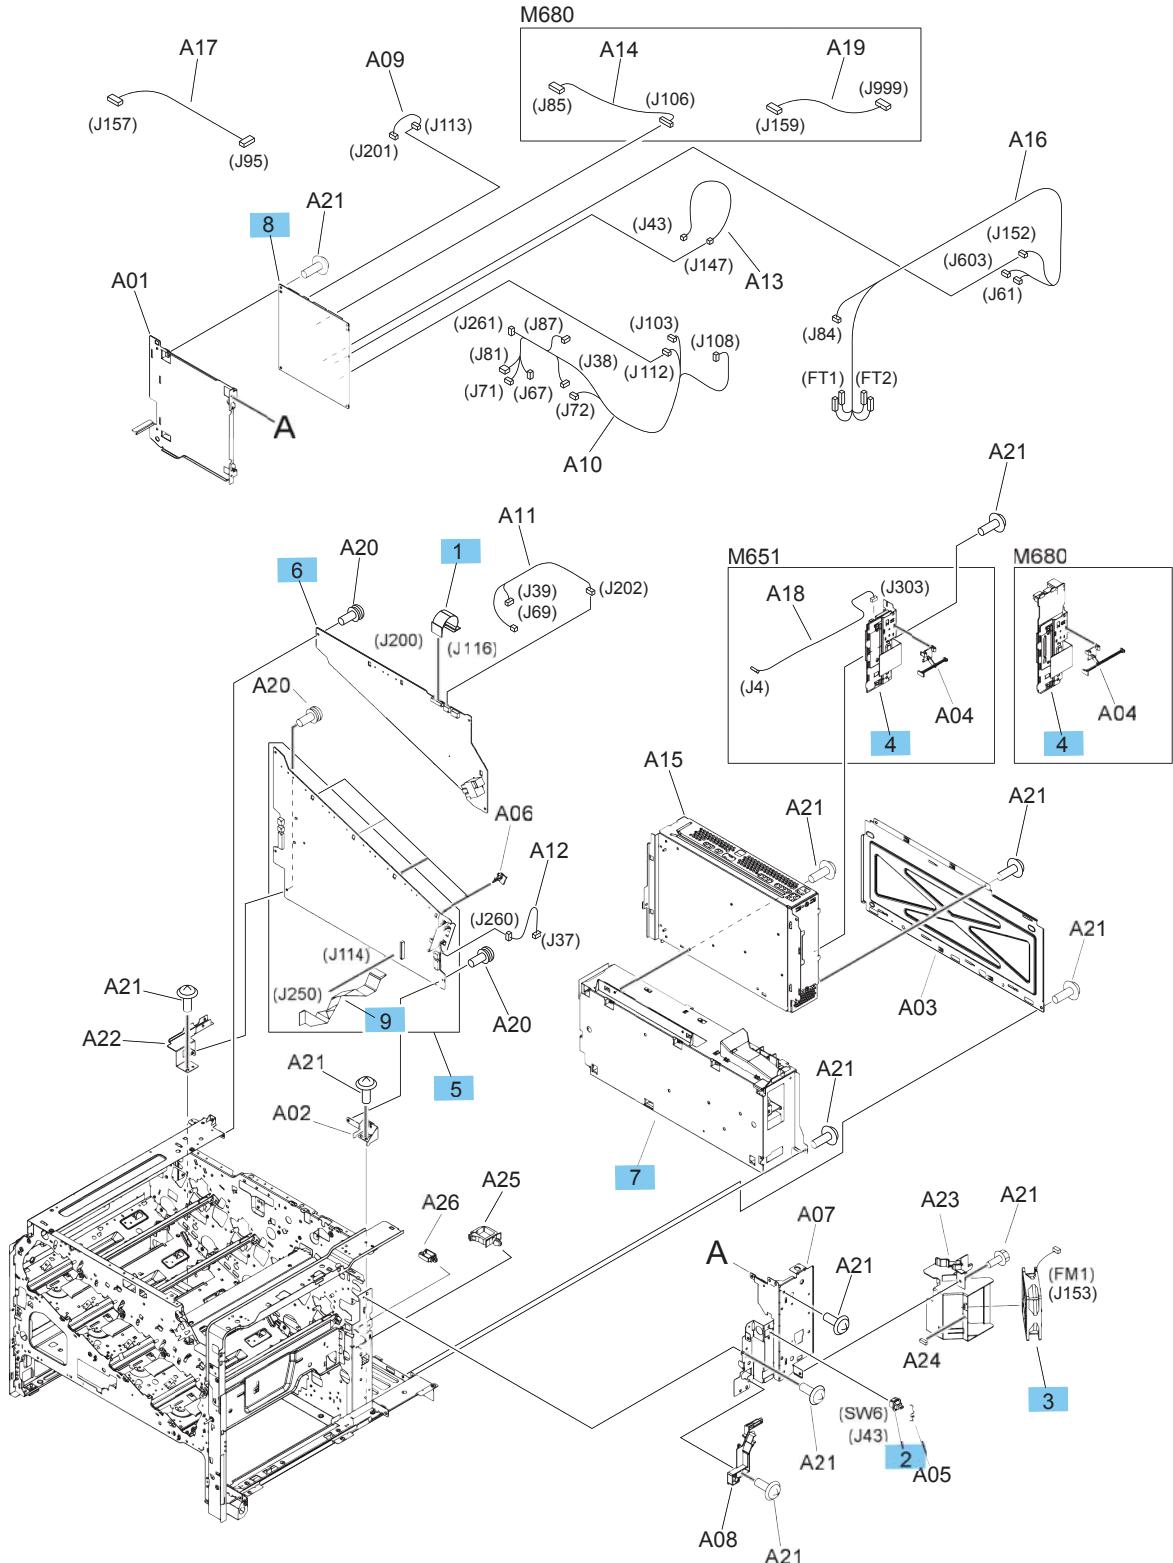


Table 2-22 Internal assemblies (6 of 6)

Ref	Description	Part number	Qty
1	Cable, flexible flat, H.V.T.	RK2-5072-000CN	1
2	Switch, push	WC2-5637-000CN	1
3	Fan, power-supply	RK2-2577-000CN	1
4	Assembly, inner connecting PCA (M651)	RM2-0221-000CN	1
4	Assembly, inner connecting PCA (M680)	RM2-0220-000CN	1
5	Assembly, high-voltage power supply PCA, lower	RM2-0460-000CN	1
6	Assembly, high-voltage power supply PCA, upper	RM2-0462-000CN	1
7	Assembly, low-voltage power supply PCA 110-127V	RM2-0464-000CN	1
7	Assembly, low-voltage power supply PCA 220-240V	RM2-0466-000CN	1
8	Assembly, DC controller PCA	RM2-0498-000CN	1
9	Cable, flexible flat	RK2-5070-000CN	1
Not shown	Kit, formatter replacement (M651)	CZ255-67901	1
Not shown	Kit, formatter replacement (China only; M651)	CZ255-67902	1
Not shown	Kit, formatter replacement (M680)	CZ248-67901	1
Not shown	Kit, formatter replacement (China only; M680)	CZ248-67906	1

1x500-sheet paper feeder

1x500-sheet paper feeder covers

Figure 2-17 500-sheet paper feeder covers

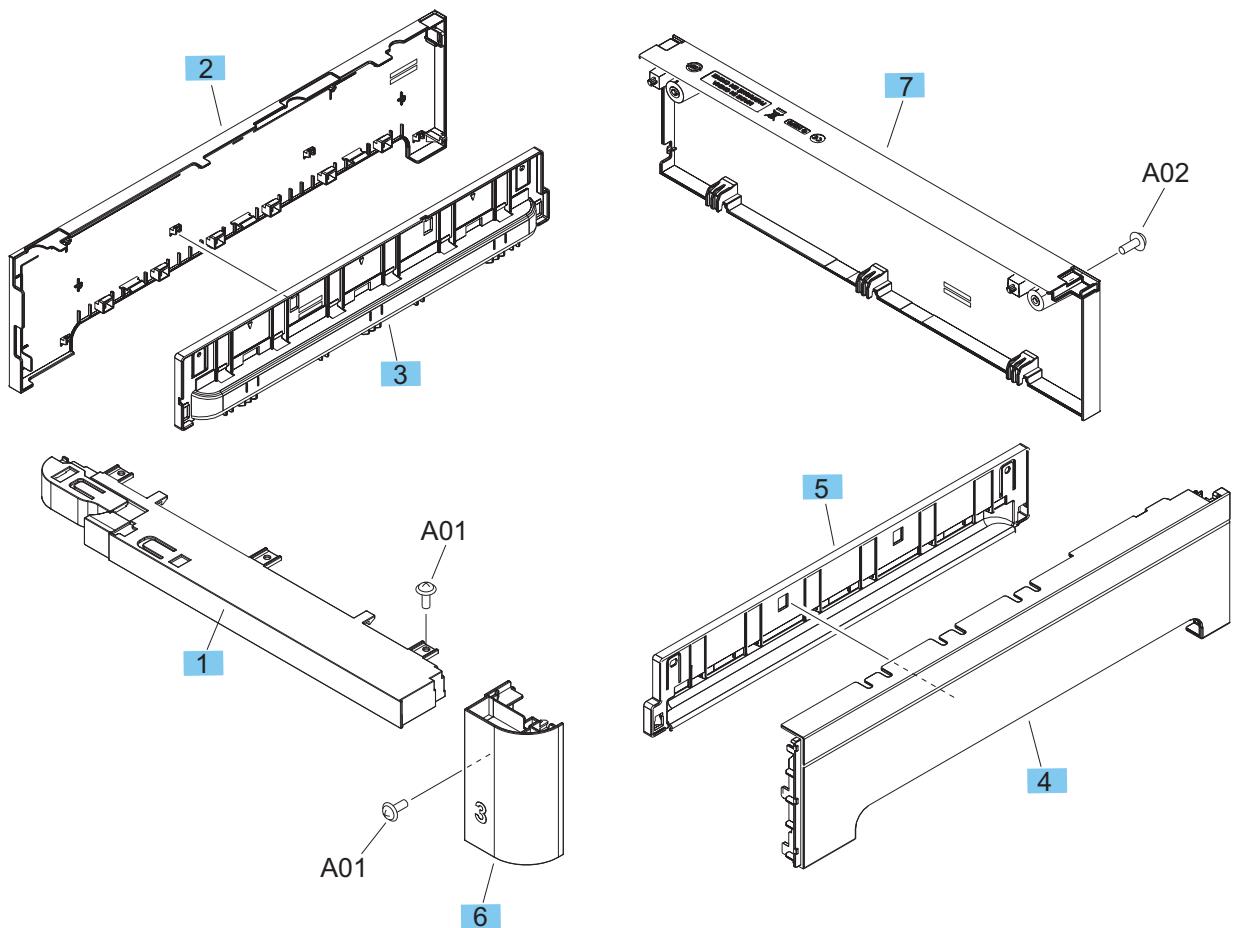


Table 2-23 1x500-sheet paper feeder covers

Ref	Description	Part number	Qty
1	Assembly, front upper cover	RM2-0364-000CN	1
2	Cover, left (1x500-sheet paper feeder)	RC3-5530-000CN	1
3	Cover, handle, left	RC3-5531-000CN	1
4	Cover, right	RC3-5532-000CN	1
5	Cover, handle, right	RC3-5533-000CN	1
6	Cover, right front (1x500-sheet paper feeder)	RC3-5522-000CN	1
7	Cover, rear (1x500-sheet paper feeder)	RC3-5534-000CN	1

1x500-sheet paper feeder components

Figure 2-18 500-sheet paper feeder components

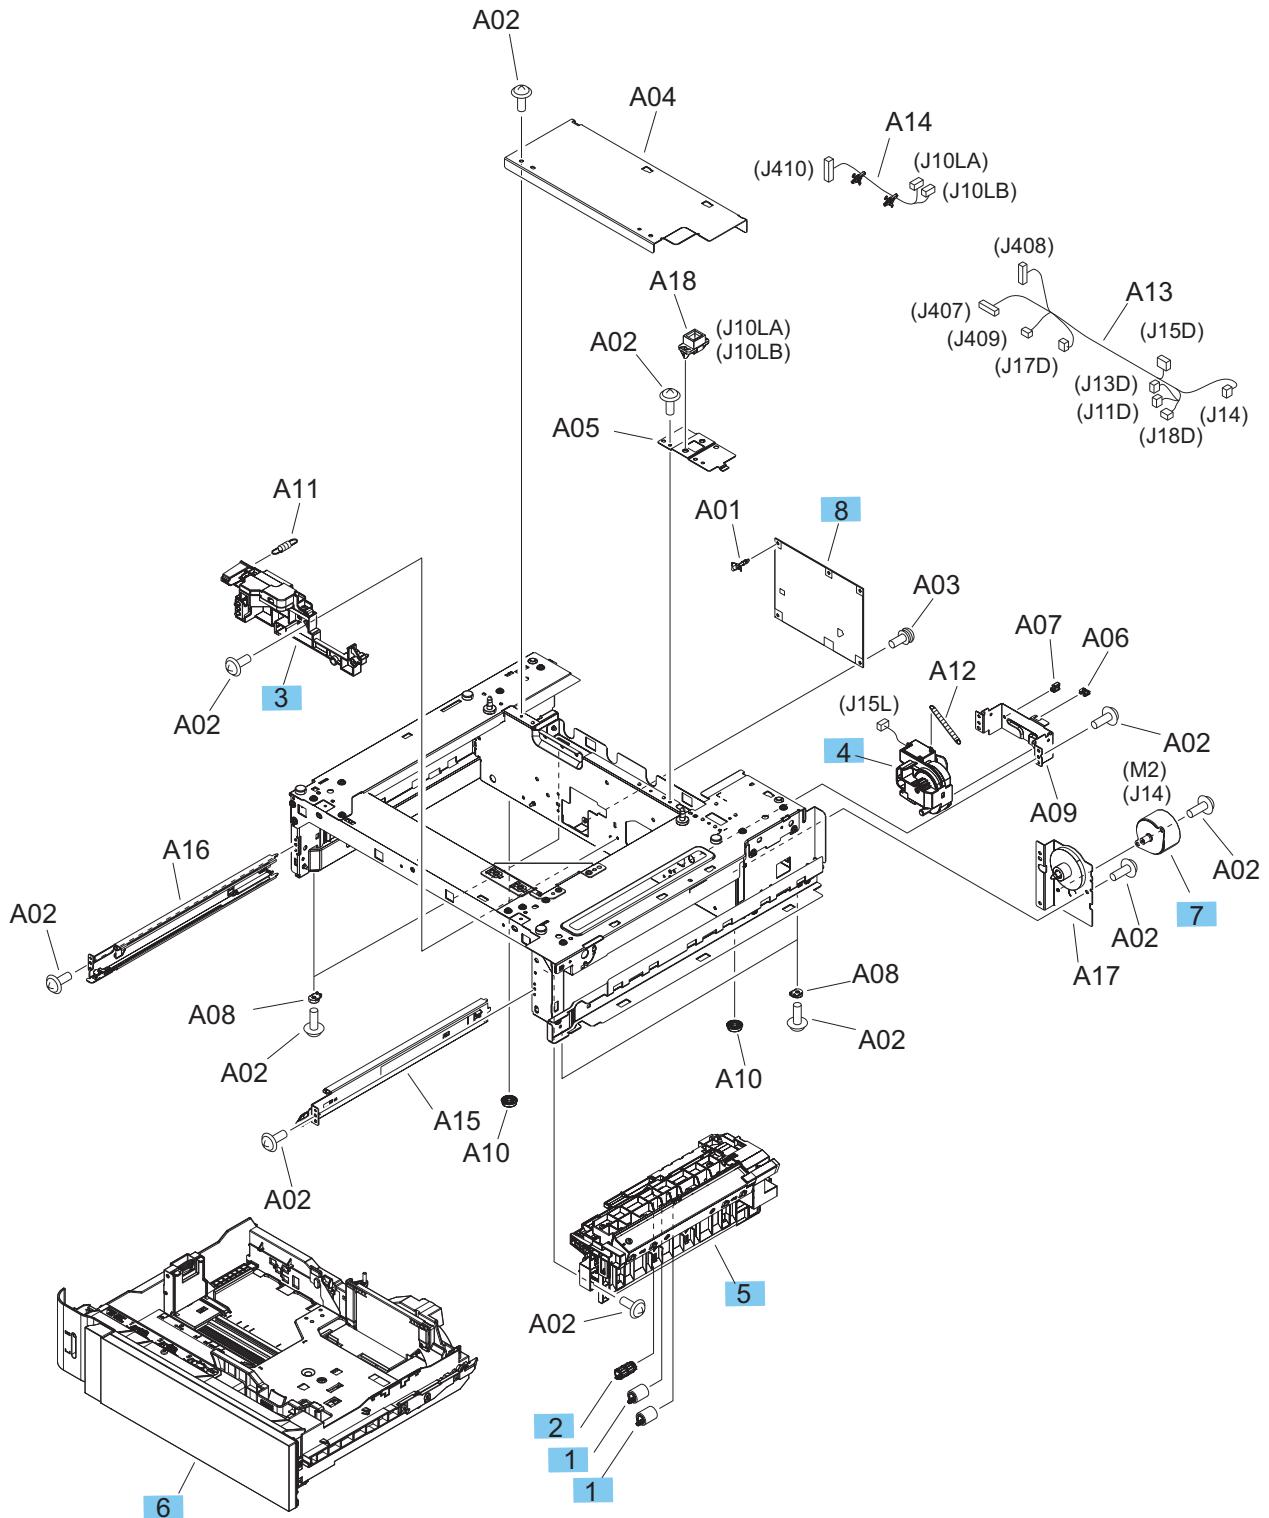


Table 2-24 1x500-sheet paper feeder components

Ref	Description	Part number	Qty
1	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	2
2	Roller, paper pickup	RL1-2099-000CN	1
3	Assembly, lifter base	RM1-5913-000CN	1
4	Assembly, lifter	RM1-5914-000CN	1
5	Assembly, paper-pickup (1x500-sheet paper feeder)	RM2-0341-000CN	1
6	Tray	RM2-0340-000CN	1
7	Motor, DC	RK2-5085-000CN	1
8	Assembly, feeder PCA	RM2-0501-000CN	1

1x500-sheet paper feeder with cabinet

1x500-sheet paper feeder with cabinet covers

Figure 2-19 1x500-sheet paper feeder with cabinet covers

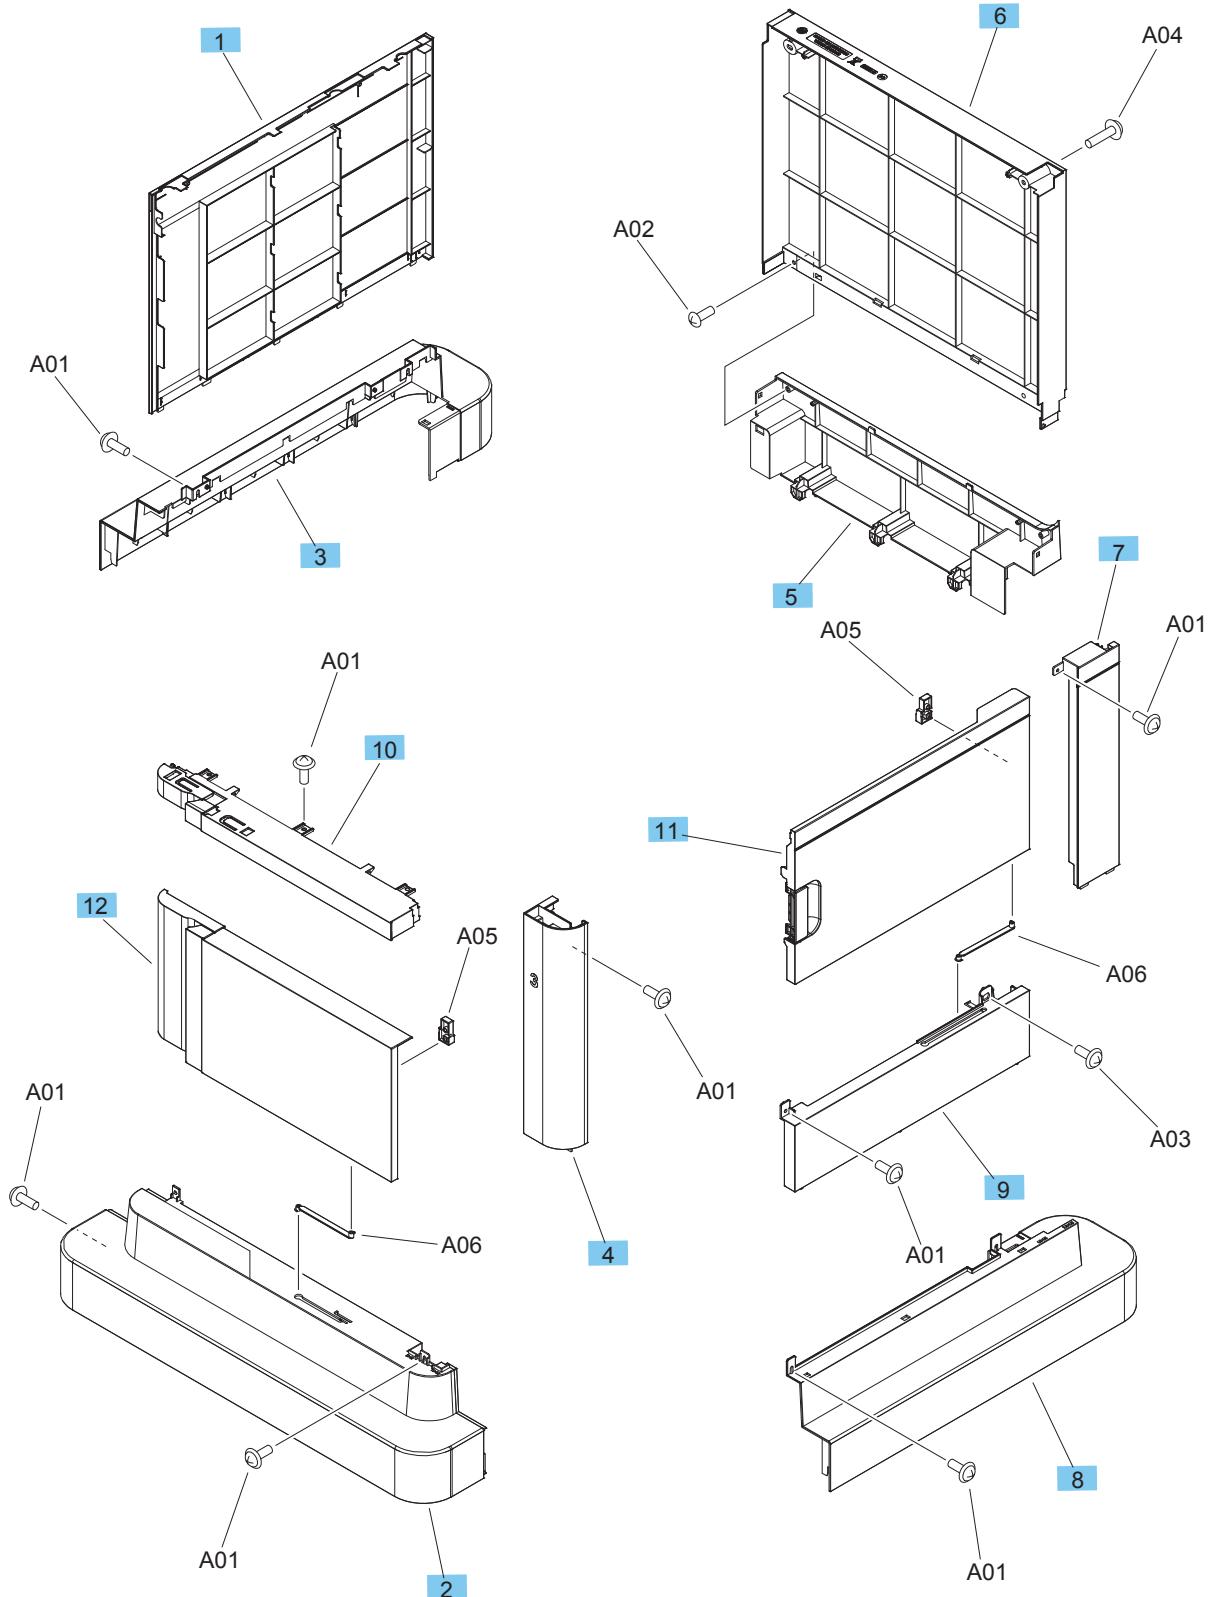


Table 2-25 1x500-sheet paper feeder with cabinet covers

Ref	Description	Part number	Qty
1	Cover, left (1x500-sheet paper feeder with cabinet)	RC3-5499-000CN	1
2	Cover, front lower	RC3-5514-000CN	1
3	Cover, left lower	RC3-5515-000CN	1
4	Cover, right front (1x500-sheet paper feeder with cabinet)	RC3-5520-000CN	1
5	Cover, rear lower	RC3-5523-000CN	1
6	Cover, rear (1x500-sheet paper feeder with cabinet)	RC3-5524-000CN	1
7	Cover, right rear (1x500-sheet paper feeder with cabinet)	RC3-5525-000CN	1
8	Cover, right lower	RC3-5526-000CN	1
9	Cover, right center	RC3-5527-000CN	1
10	Assembly, front upper cover	RM2-0364-000CN	1
11	Assembly, right door (1x500-sheet paper feeder with cabinet)	RM2-0368-000CN	1
12	Assembly, stock box door	RM2-0369-000CN	1

1x500-sheet paper feeder with cabinet components

Figure 2-20 1x500-sheet paper feeder with cabinet components

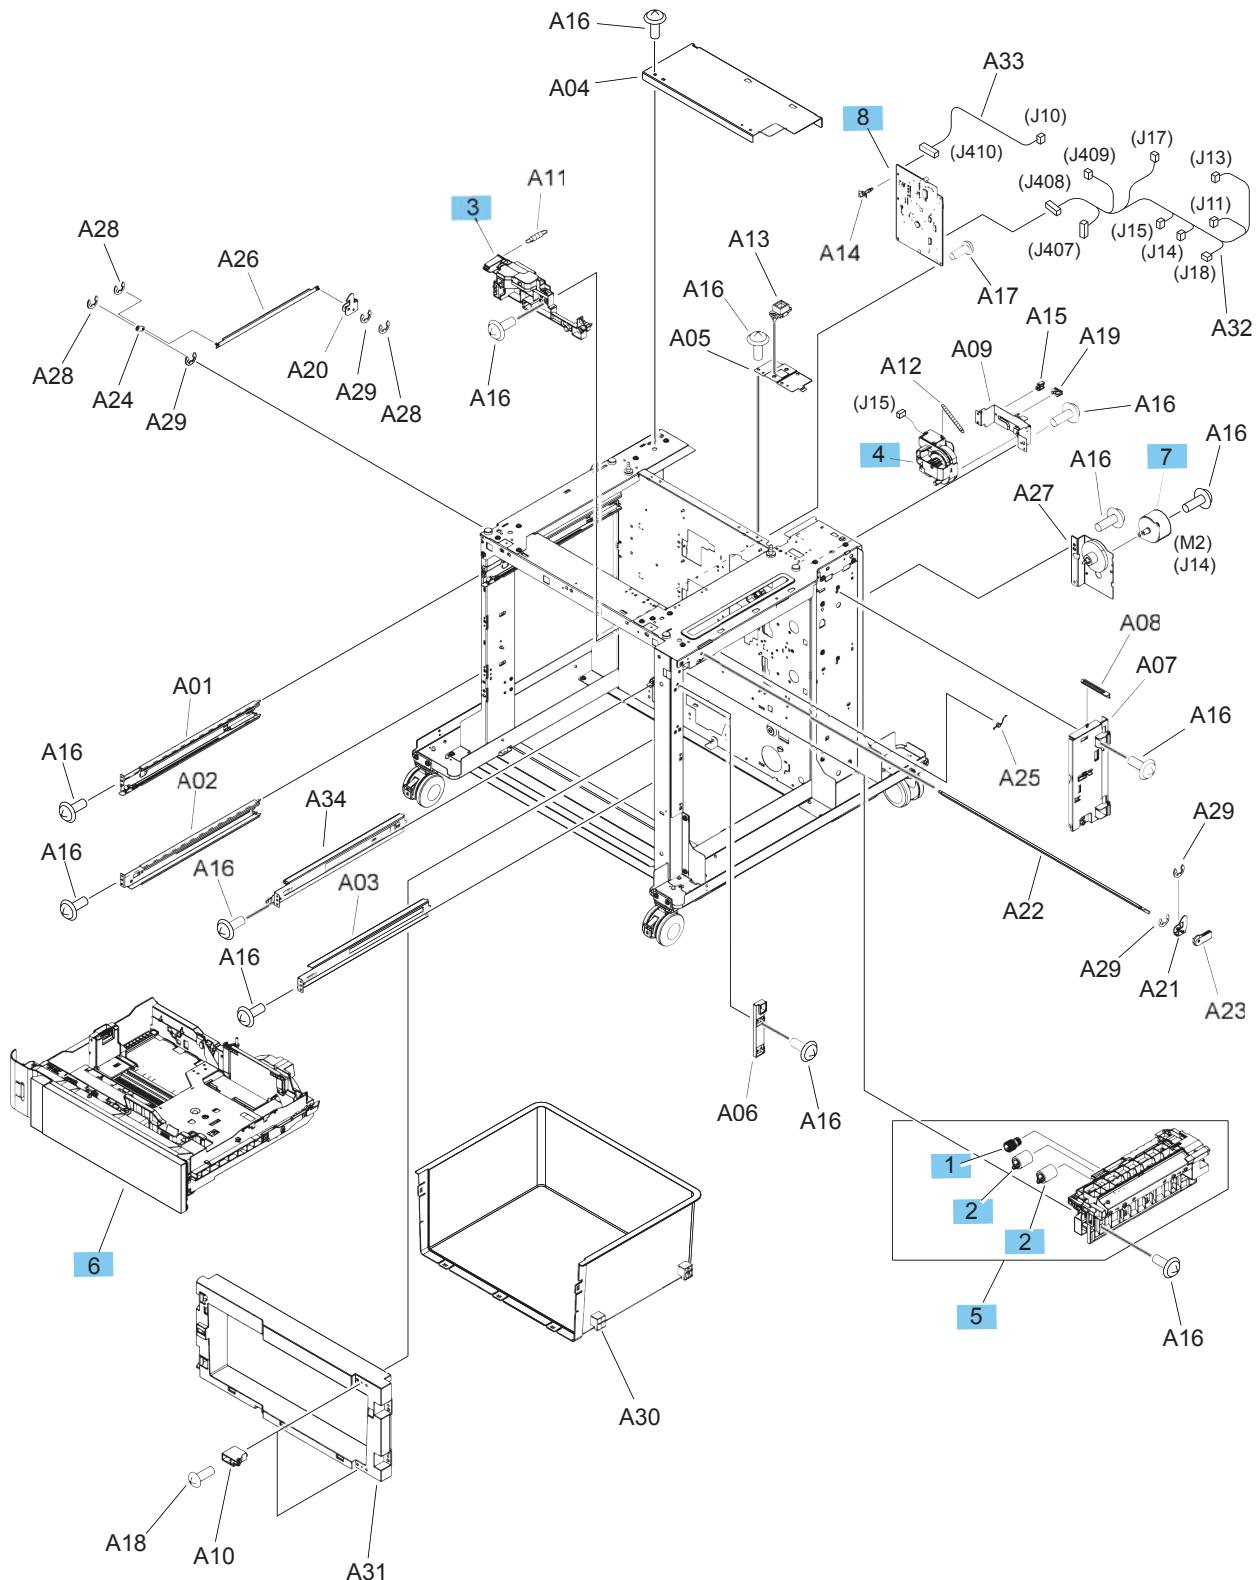


Table 2-26 1x500-sheet paper feeder with cabinet components

Ref	Description	Part number	Qty
1	Roller, paper pickup	RL1-2099-000CN	1
2	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	2
3	Assembly, lifter base	RM1-5913-000CN	1
4	Assembly, lifter	RM1-5914-000CN	1
5	Assembly, paper-pickup (1x500-sheet paper feeder with cabinet)	RM2-0341-000CN	1
6	Tray	RM2-0340-000CN	1
7	Motor, DC	RK2-5085-000CN	1
8	Assembly, feeder PCA	RM2-0501-000CN	1

2,500-sheet paper feeder HCI

2,500-sheet paper feeder HCI covers

Figure 2-21 2,500-sheet paper feeder HCI covers

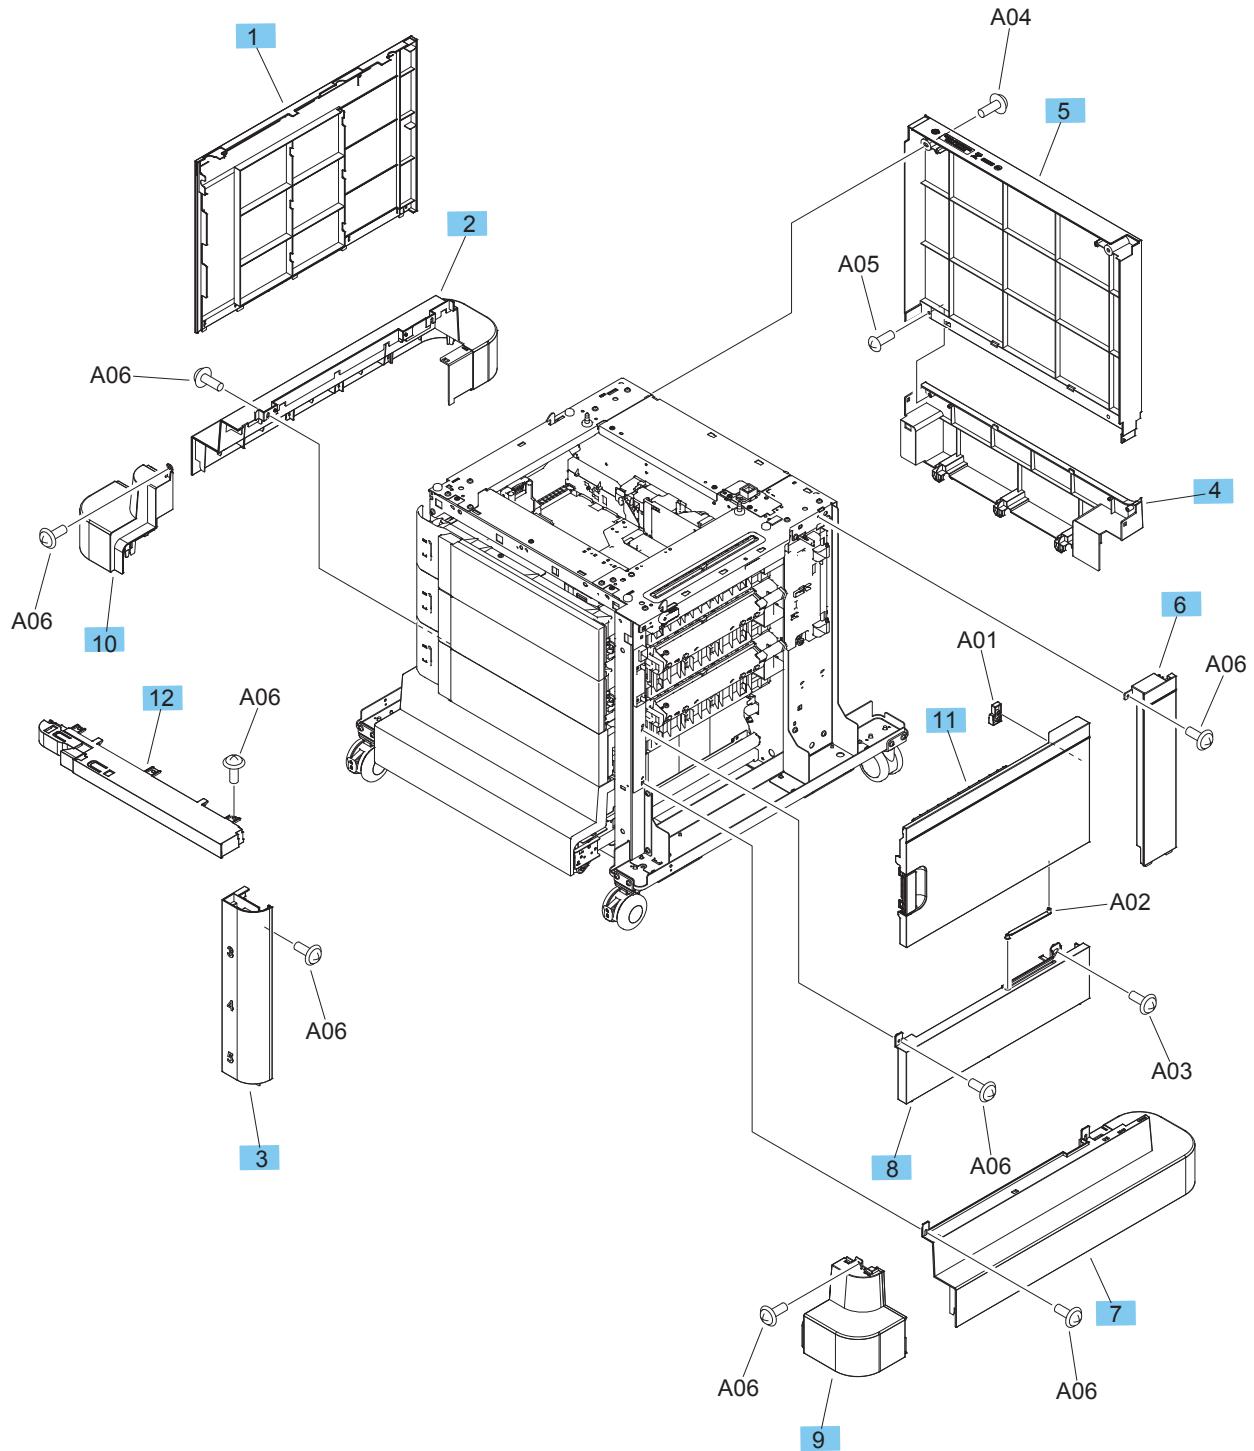


Table 2-27 2,500-sheet paper feeder HCI covers

Ref	Description	Part number	Qty
1	Cover, left (2,500-sheet paper feeder HCI)	RC3-5499-000CN	1
2	Cover, left lower	RC3-5515-000CN	1
3	Cover, right front (2,500-sheet paper feeder HCI)	RC3-5521-000CN	1
4	Cover, rear lower	RC3-5523-000CN	1
5	Cover, rear (2,500-sheet paper feeder HCI)	RC3-5524-000CN	1
6	Cover, right rear (2,500-sheet paper feeder HCI)	RC3-5525-000CN	1
7	Cover, right lower	RC3-5526-000CN	1
8	Cover, right center	RC3-5527-000CN	1
9	Cover, front lower right	RC3-5535-000CN	1
10	Cover, front lower left	RC3-5536-000CN	1
11	Assembly, right door (2,500-sheet paper feeder HCI)	RM2-0362-000CN	1
12	Assembly, front upper cover	RM2-0364-000CN	1

2,500-sheet paper feeder HCI components (1 of 2)

Figure 2-22 2,500-sheet paper feeder HCI components (1 of 2)

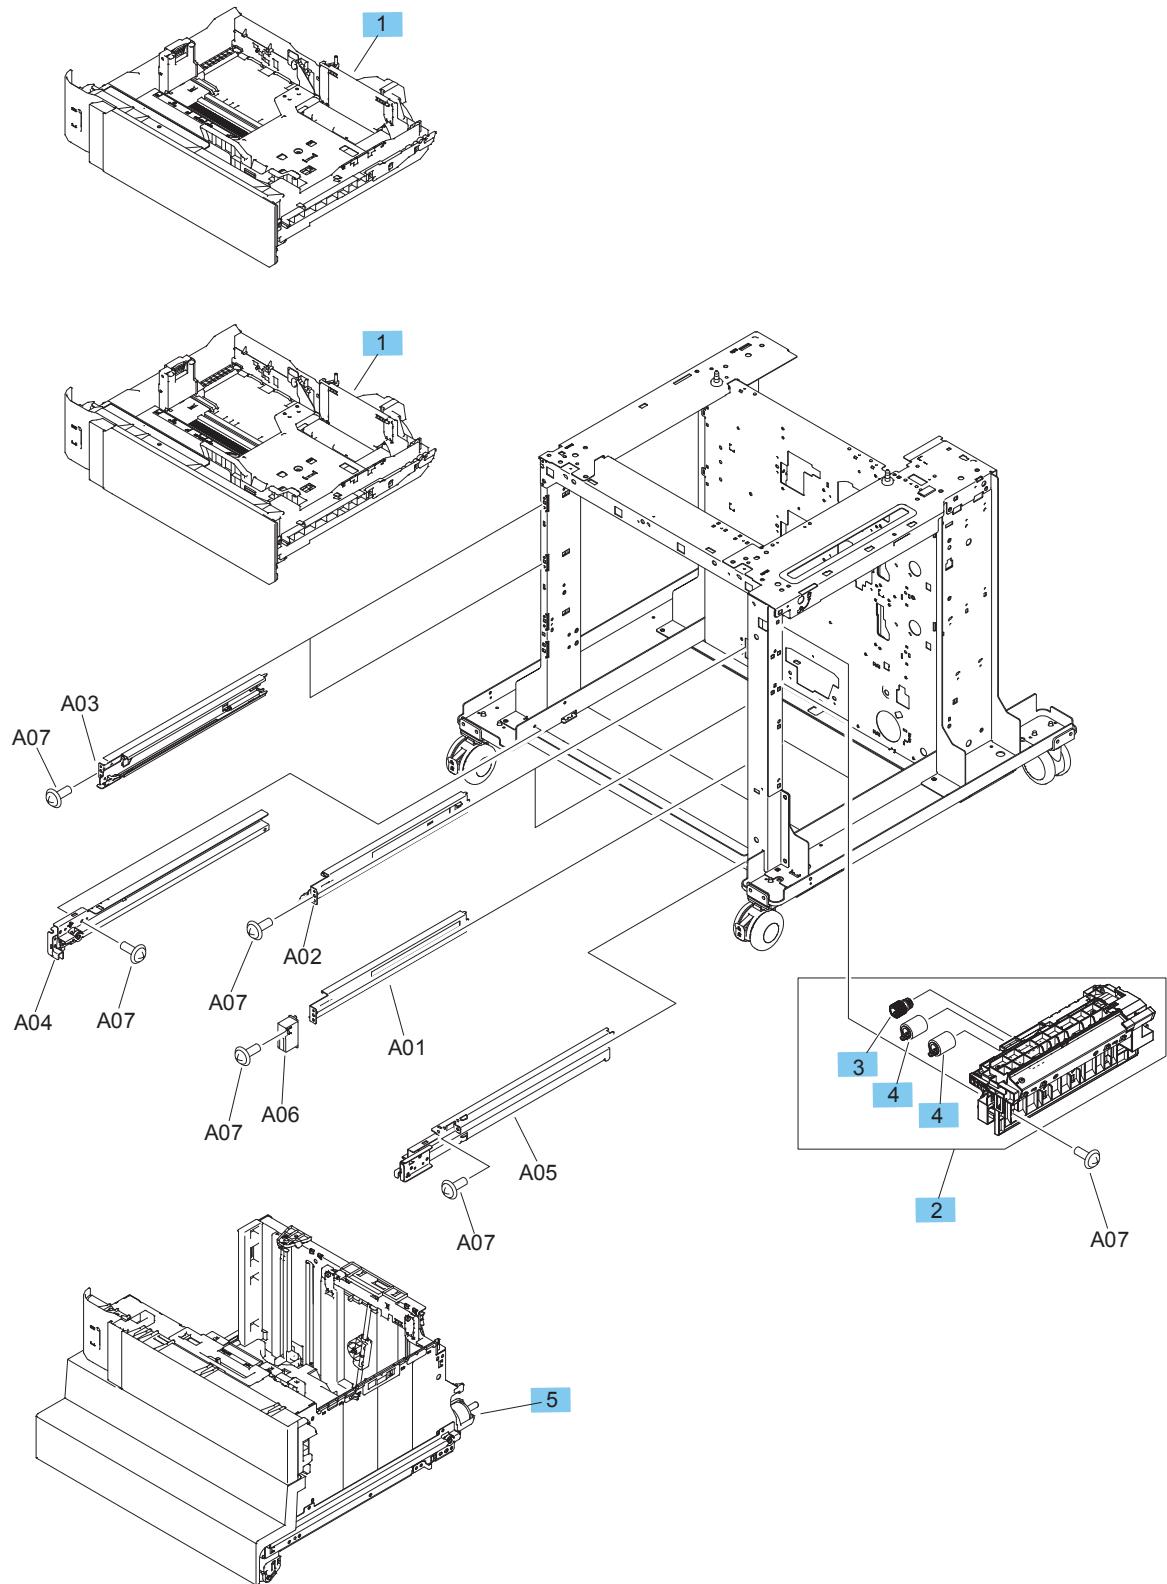


Table 2-28 2,500-sheet paper feeder HCl components (1 of 2)

Ref	Description	Part number	Qty
1	Tray	RM2-0340-000CN	2
2	Assembly, paper-pickup (2,500-sheet paper feeder HCl)	RM2-0341-000CN	3
3	Roller, paper pickup	RL1-2099-000CN	3
4	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	6
5	Assembly, tray	RM2-0351-000CN	1

2,500-sheet paper feeder HCI components (2 of 2)

Figure 2-23 2,500-sheet paper feeder HCI components (2 of 2)

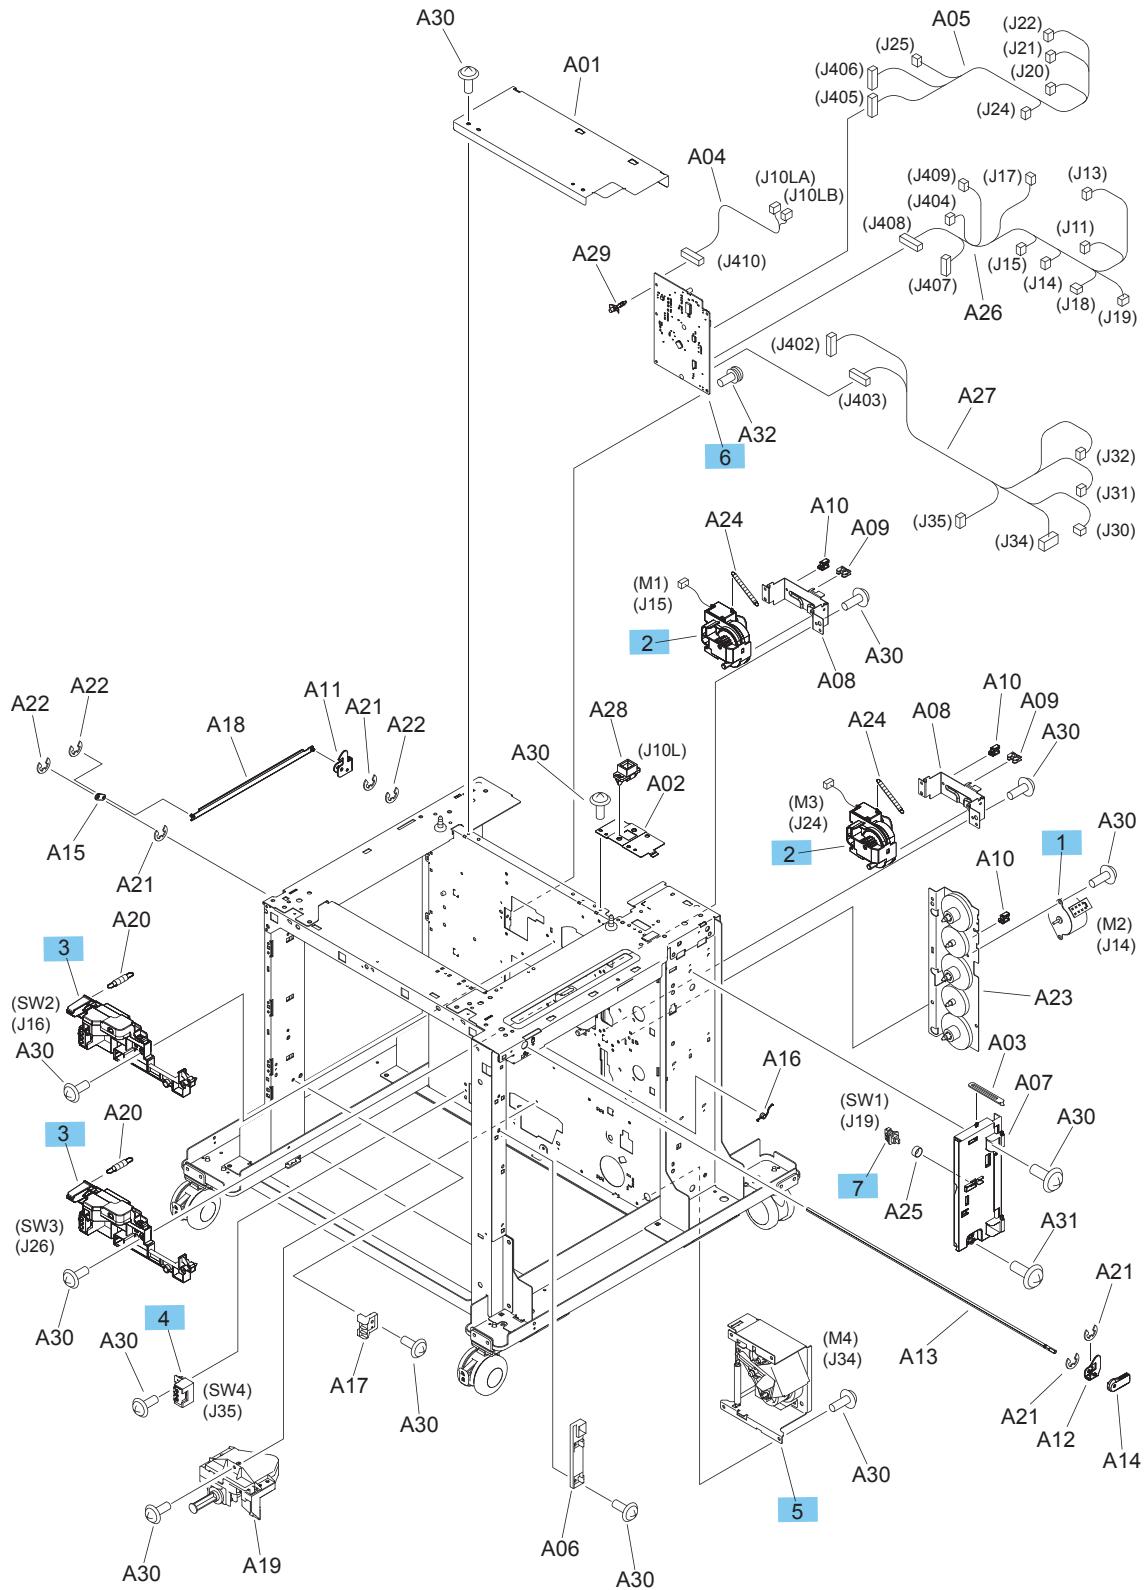


Table 2-29 2,500-sheet paper feeder HCl components (2 of 2)

Ref	Description	Part number	Qty
1	Motor, DC	RK2-5085-000CN	1
2	Assembly, lifter	RM1-5914-000CN	2
3	Assembly, lifter base	RM1-5913-000CN	2
4	Assembly, tray size sensor	RM2-0350-000CN	1
5	Assembly, lifter drive	RM2-0346-000CN	1
6	Assembly, HCl PCA	RM2-0371-000CN	1
7	Switch, push	WC2-5637-000CN	1

Stapling mailbox

Stapling mailbox covers

Figure 2-24 Stapling mailbox covers

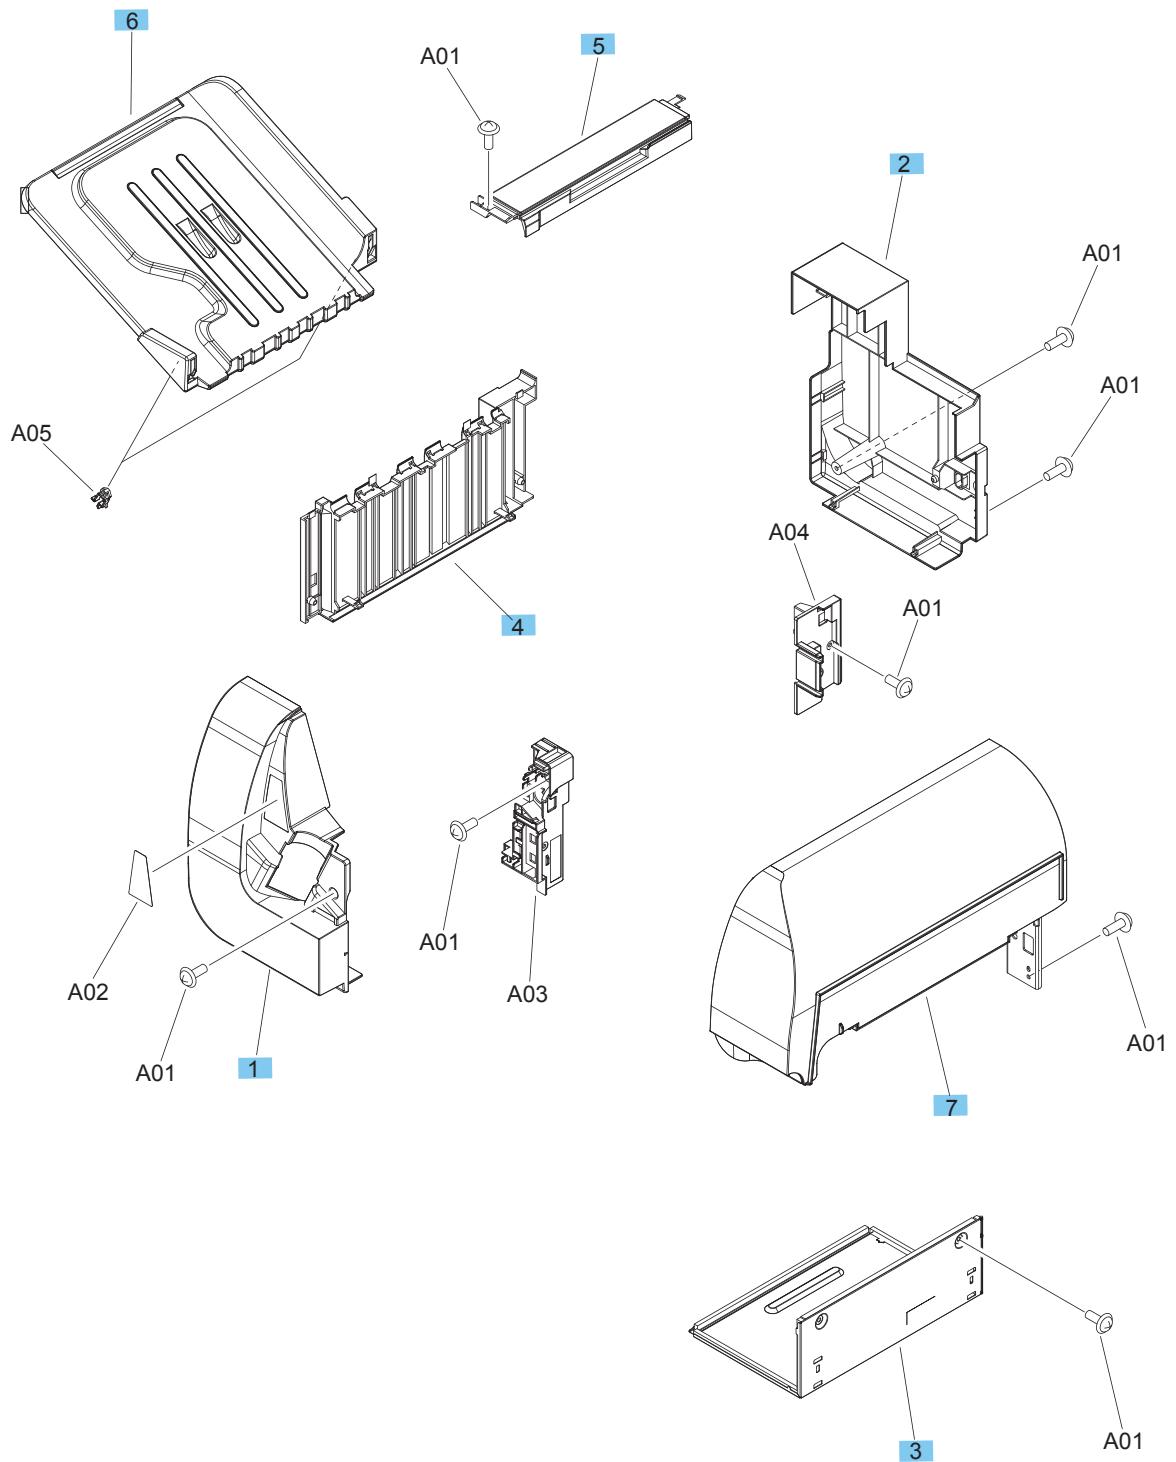


Table 2-30 Stapling mailbox covers

Ref	Description	Part number	Qty
1	Cover, front	RC4-1938-000CN	1
2	Cover, rear (stapling mailbox)	RC4-1939-000CN	1
3	Cover, bottom	RL1-2438-000CN	1
4	Panel, stacking	RL2-0501-000CN	1
5	Cover, top	RL2-0502-000CN	1
6	Assembly, output bin	RM2-5240-000CN	1
7	Assembly, top door	RM2-5237-000CN	1

Stapling mailbox assemblies (1 of 2)

Figure 2-25 Stapling mailbox assemblies (1 of 2)

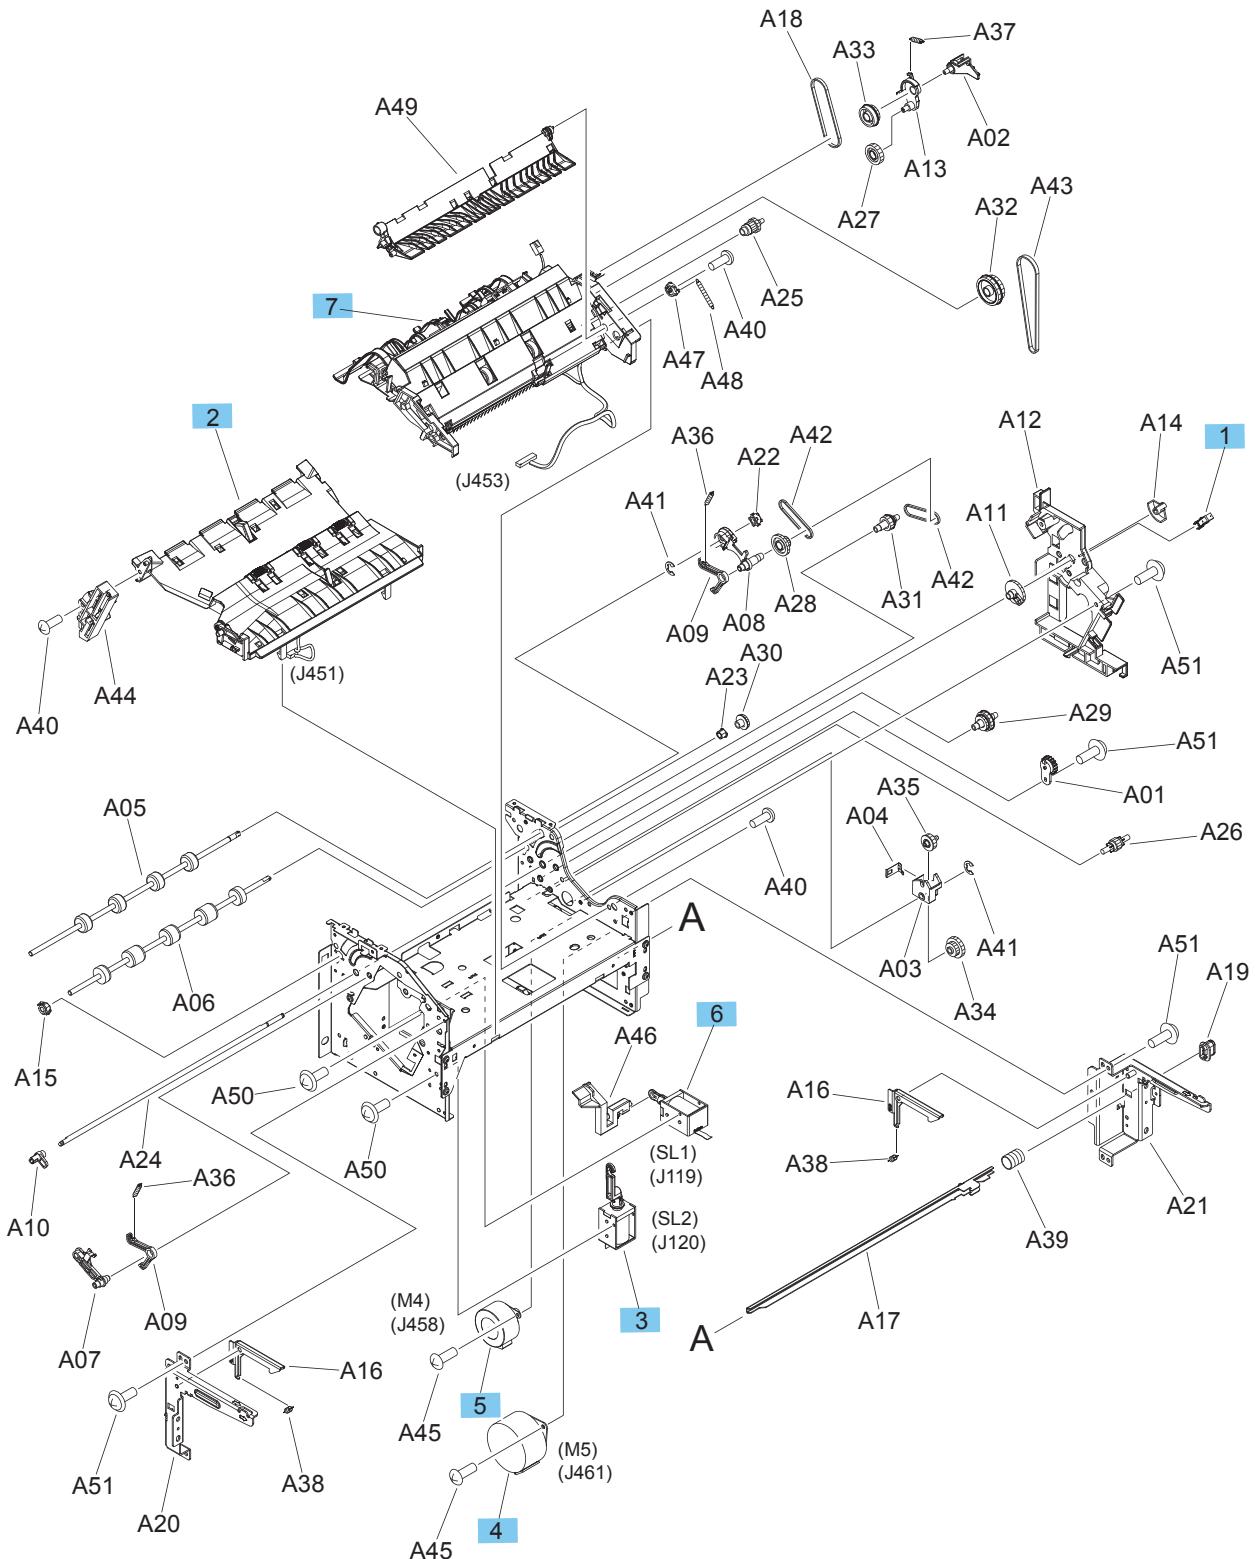


Table 2-31 Stapling mailbox assemblies (1 of 2)

Ref	Description	Part number	Qty
1	Photointerrupter	WG8-5935-000CN	1
2	Assembly, stage	RM1-5159-000CN	1
3	Assembly, entrance solenoid	RM1-6663-000CN	1
4	Motor, feed	RK2-2635-000CN	1
5	Motor, paddle	RK2-2637-000CN	1
6	Assembly, stamp solenoid	RM1-6664-000CN	1
7	Subassembly, stage top	RM1-7437-010CN	1

Stapling mailbox assemblies (2 of 2)

Figure 2-26 Stapling mailbox assemblies (2 of 2)

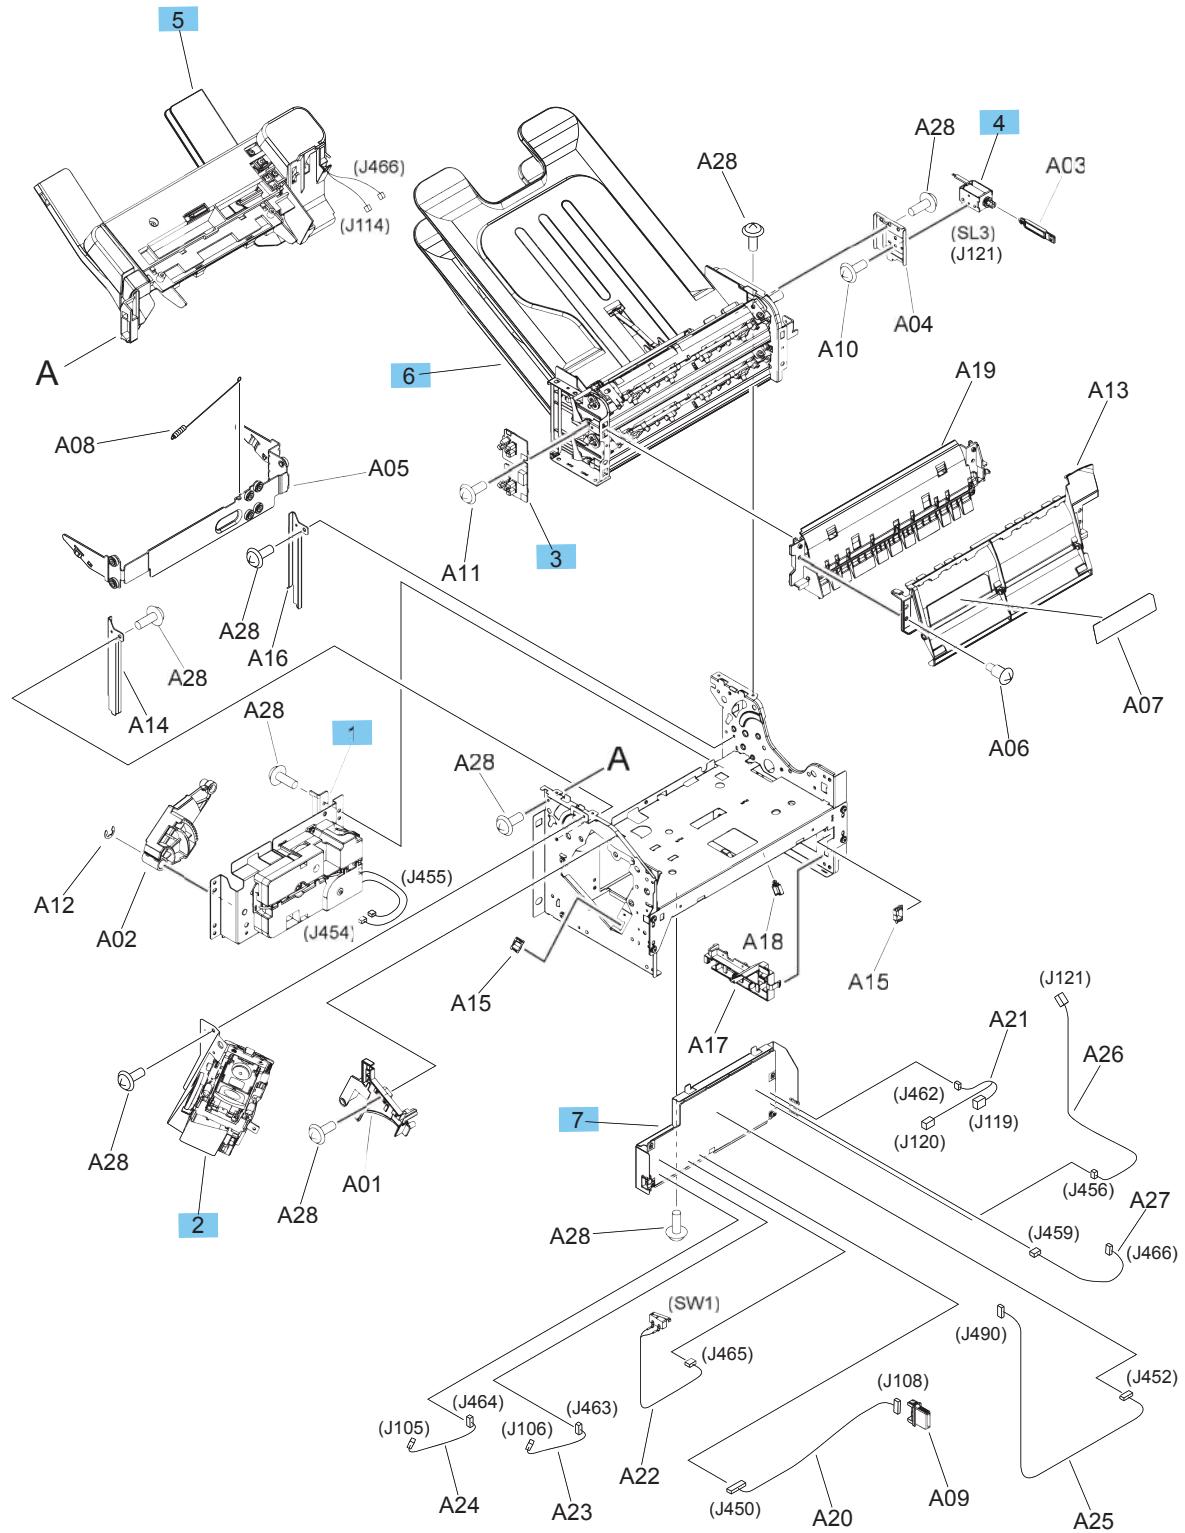


Table 2-32 Stapling mailbox assemblies (2 of 2)

Ref	Description	Part number	Qty
1	Assembly, output bin 3 bin drive	RM1-5156-000CN	1
2	Assembly, stapler	RM1-5166-000CN	1
3	Assembly, output bin sensor PCA	RM1-5894-000CN	1
4	Assembly, bin solenoid	RM1-5896-000CN	1
5	Assembly, jogger	RM2-5235-000CN	1
6	Assembly, output bin 3	RM2-5241-000CN	1
7	Assembly, output bin 3 driver PCA	RM2-5245-000CN	1

Alphabetical parts list

Table 2-33 Alphabetical parts list

Description	Part number	Table and page
Assembly, `high-voltage power supply PCA, upper	RM2-0462-000CN	Internal assemblies (6 of 6) on page 401
Assembly, bin solenoid	RM1-5896-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, cartridge duct	RM1-5497-010CN	Internal assemblies (5 of 6) on page 399
Assembly, cartridge fan (M651)	RM2-0212-000CN	Internal assemblies (3 of 6) on page 395
Assembly, cartridge fan (M680)	RM2-0213-000CN	Internal assemblies (3 of 6) on page 395
Assembly, DC controller PCA	RM2-0498-000CN	Internal assemblies (6 of 6) on page 401
Assembly, duplexing drive (M680)	RM1-4973-000CN	Internal assemblies (5 of 6) on page 399
Assembly, duplexing-drive (M651)	RM1-5546-000CN	Internal assemblies (5 of 6) on page 399
Assembly, entrance solenoid	RM1-6663-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Assembly, feeder PCA	RM2-0501-000CN	1x500-sheet paper feeder with cabinet components on page 409
Assembly, feeder PCA	RM2-0501-000CN	1x500-sheet paper feeder components on page 405
Assembly, flexible flat cable	RM2-0393-000CN	Internal assemblies (5 of 6) on page 399
Assembly, front door	RM2-0200-000CN	Covers (M651) on page 379
Assembly, front door	RM2-0200-000CN	Covers (M680) on page 381
Assembly, front inner cover lower	RM1-5598-000CN	Internal assemblies (2 of 6) on page 393
Assembly, front inner cover upper	RM2-0219-000CN	Internal assemblies (2 of 6) on page 393
Assembly, front upper cover	RM2-0364-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Assembly, front upper cover	RM2-0364-000CN	1x500-sheet paper feeder covers on page 403
Assembly, front upper cover	RM2-0364-000CN	2,500-sheet paper feeder HCI covers on page 411
Assembly, fuser drive	RM1-5656-000CN	Internal assemblies (5 of 6) on page 399
Assembly, HCI PCA	RM2-0371-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Assembly, high-voltage power supply PCA, lower	RM2-0460-000CN	Internal assemblies (6 of 6) on page 401
Assembly, Hinge HR	B4A39-60011	Document feeder assemblies (M680, 1 of 2) on page 373
Assembly, inner connecting PCA (M651)	RM2-0221-000CN	Internal assemblies (6 of 6) on page 401
Assembly, inner connecting PCA (M680)	RM2-0220-000CN	Internal assemblies (6 of 6) on page 401
Assembly, intermediate cover	RM2-0206-000CN	Covers (M680) on page 381
Assembly, intermediate paper feed	RM2-0216-000CN	Internal assemblies (M680) on page 389
Assembly, IPTU driver PCA	RM2-0474-000CN	Internal assemblies (M680) on page 389
Assembly, IPTU inner cover	RL1-3976-000CN	Internal assemblies (M680) on page 389
Assembly, jogger	RM2-5235-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, lifter base	RM1-5913-000CN	Internal assemblies (1 of 6) on page 391
Assembly, lifter base	RM1-5913-000CN	1x500-sheet paper feeder with cabinet components on page 409
Assembly, lifter base	RM1-5913-000CN	1x500-sheet paper feeder components on page 405
Assembly, lifter base	RM1-5913-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Assembly, lifter drive	RM2-0346-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Assembly, lifter	RM1-5914-000CN	1x500-sheet paper feeder with cabinet components on page 409
Assembly, lifter	RM1-5914-000CN	1x500-sheet paper feeder components on page 405
Assembly, lifter	RM1-5914-000CN	Internal assemblies (5 of 6) on page 399
Assembly, lifter	RM1-5914-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Assembly, low-voltage power supply PCA 110-127V	RM2-0464-000CN	Internal assemblies (6 of 6) on page 401
Assembly, low-voltage power supply PCA 220-240V	RM2-0466-000CN	Internal assemblies (6 of 6) on page 401
Assembly, main switch	RM2-0386-000CN	Internal assemblies (3 of 6) on page 395

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Assembly, output bin 3 bin drive	RM1-5156-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, output bin 3 driver PCA	RM2-5245-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, output bin 3	RM2-5241-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, output bin sensor PCA	RM1-5894-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, output bin	RM2-5240-000CN	Stapling mailbox covers on page 417
Assembly, paper sensor PCA	RM1-5853-000CN	Internal assemblies (4 of 6) on page 397
Assembly, paper-delivery (M651)	RM2-0223-000CN	Internal assemblies (3 of 6) on page 395
Assembly, paper-delivery (M680)	RM1-5615-000CN	Internal assemblies (3 of 6) on page 395
Assembly, paper-delivery fan (M651)	RM1-5501-000CN	Internal assemblies (M651) on page 387
Assembly, paper-delivery fan (M680)	RK2-2575-000CN	Internal assemblies (M680) on page 389
Assembly, paper-pickup (1x500-sheet paper feeder with cabinet)	RM2-0341-000CN	1x500-sheet paper feeder with cabinet components on page 409
Assembly, paper-pickup (1x500-sheet paper feeder)	RM2-0341-000CN	1x500-sheet paper feeder components on page 405
Assembly, paper-pickup (2,500-sheet paper feeder HCI)	RM2-0341-000CN	2,500-sheet paper feeder HCI components (1 of 2) on page 413
Assembly, paper-pickup drive	RM2-0385-000CN	Internal assemblies (5 of 6) on page 399
Assembly, paper-pickup	RM1-5919-000CN	Internal assemblies (4 of 6) on page 397
Assembly, position detect	RM1-5604-000CN	Internal assemblies (3 of 6) on page 395
Assembly, rear pre-exposure	RM2-0500-000CN	Internal assemblies (3 of 6) on page 395
Assembly, registration density (RD) sensor	RM1-5641-000CN	Internal assemblies (4 of 6) on page 397
Assembly, residual-toner transfer	RM2-0399-000CN	Internal assemblies (2 of 6) on page 393
Assembly, residual-toner-feed motor	RM1-5605-010CN	Internal assemblies (3 of 6) on page 395
Assembly, right door	RM2-0208-000CN	Right door on page 383

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Assembly, right door (1x500-sheet paper feeder with cabinet)	RM2-0368-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Assembly, right door (2,500-sheet paper feeder HCI)	RM2-0362-000CN	2,500-sheet paper feeder HCI covers on page 411
Assembly, right handle cover	RM2-0210-000CN	Covers (M651) on page 379
Assembly, right handle cover	RM2-0210-000CN	Covers (M680) on page 381
Assembly, scissors hinge, left	RM1-5616-000	Internal assemblies (M680) on page 389
Assembly, scissors hinge, right	RM2-5771-000CN	Internal assemblies (M680) on page 389
Assembly, secondary transfer	RM1-5564-040CN	Internal assemblies (4 of 6) on page 397
Assembly, shutter	RM1-5488-000CN	Internal assemblies (1 of 6) on page 391
Assembly, shutter	RM1-5489-000CN	Internal assemblies (1 of 6) on page 391
Assembly, stage	RM1-5159-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Assembly, stamp solenoid	RM1-6664-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Assembly, stapler	RM1-5166-000CN	Stapling mailbox assemblies (2 of 2) on page 421
Assembly, stock box door	RM2-0369-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Assembly, switch button	RM2-0402-000CN	Covers (M651) on page 379
Assembly, switch button	RM2-0402-000CN	Covers (M680) on page 381
Assembly, tag holder	RM1-5638-000CN	Internal assemblies (5 of 6) on page 399
Assembly, toner remain PCA	RM1-5771-000CN	Internal assemblies (1 of 6) on page 391
Assembly, top door	RM2-5237-000CN	Stapling mailbox covers on page 417
Assembly, tray	RM2-0351-000CN	2,500-sheet paper feeder HCI components (1 of 2) on page 413
Assembly, tray size sensor	RM2-0350-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Bezel, output bin (M680)	CZ248-67912	Covers (M680) on page 381
Bin, standard output	RM2-0214-000CN	Covers (M680) on page 381
Cable, flexible flat	RK2-5070-000CN	Internal assemblies (6 of 6) on page 401
Cable, flexible flat, H.V.T.	RK2-5072-000CN	Internal assemblies (6 of 6) on page 401

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Cable, USB, IS	RK2-5077-000CN	Internal assemblies (M651) on page 387
Cable, USB, SH	RK2-5078-000CN	Internal assemblies (M651) on page 387
Cover, bottom	RL1-2438-000CN	Stapling mailbox covers on page 417
Cover, control panel access (M680)	5042-9118	Document feeder and scanner assemblies (M680) on page 371
Cover, document-feeder roller (M680)	CC355-40013	Document feeder assemblies (M680, 2 of 2) on page 375
Cover, face-down, left	RC3-5555-000CN	Covers (M651) on page 379
Cover, face-down, rear	RC3-5556-000CN	Covers (M651) on page 379
Cover, fan (M680)	RC3-5593-000CN	Covers (M680) on page 381
Cover, front face-down	RM2-0392-000CN	Covers (M651) on page 379
Cover, front lower	RC3-5514-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, front lower left	RC3-5536-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, front lower right	RC3-5535-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, front	RC4-1938-000CN	Stapling mailbox covers on page 417
Cover, handle, left	RC3-5531-000CN	1x500-sheet paper feeder covers on page 403
Cover, handle, right	RC3-5533-000CN	1x500-sheet paper feeder covers on page 403
Cover, HIP (M651)	RC3-3948-000CN	Covers (M651) on page 379
Cover, HIP (M680)	5851-5361	Document feeder and scanner assemblies (M680) on page 371
Cover, inner	RM1-5520-000CN	Covers (M651) on page 379
Cover, inner	RM1-5520-000CN	Covers (M680) on page 381
Cover, left	RC3-5629-000CN	Covers (M680) on page 381
Cover, left (1x500-sheet paper feeder with cabinet)	RC3-5499-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, left (1x500-sheet paper feeder)	RC3-5530-000CN	1x500-sheet paper feeder covers on page 403
Cover, left (2,500-sheet paper feeder HCI)	RC3-5499-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, left lower	RC3-5515-000CN	1x500-sheet paper feeder with cabinet covers on page 407

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, left lower	RC3-5515-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, left rear	RC3-5632-000CN	Covers (M651) on page 379
Cover, left rear	RC3-5632-000CN	Covers (M680) on page 381
Cover, left	RC3-5629-000CN	Covers (M651) on page 379
Cover, M.R. crossmember	RC2-4747-000CN	Right door on page 383
Cover, rear (1x500-sheet paper feeder with cabinet)	RC3-5524-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, rear (1x500-sheet paper feeder)	RC3-5534-000CN	1x500-sheet paper feeder covers on page 403
Cover, rear (2,500-sheet paper feeder HCI)	RC3-5524-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, rear (M651)	RM2-0202-000CN	Covers (M651) on page 379
Cover, rear (M680)	RM2-0205-000CN	Covers (M680) on page 381
Cover, rear (stapling mailbox)	RC4-1939-000CN	Stapling mailbox covers on page 417
Cover, rear lower	RC3-5523-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, rear lower	RC3-5523-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, right center	RC3-5527-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, right center	RC3-5527-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, right front (1x500-sheet paper feeder with cabinet)	RC3-5520-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, right front (1x500-sheet paper feeder)	RC3-5522-000CN	1x500-sheet paper feeder covers on page 403
Cover, right front (2,500-sheet paper feeder HCI)	RC3-5521-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, right front, upper (M651)	RC3-5550-000CN	Covers (M651) on page 379
Cover, right front, upper (M680)	RC3-5582-000CN	Covers (M680) on page 381
Cover, right front	RC3-5551-000CN	Covers (M651) on page 379
Cover, right front	RC3-5551-000CN	Covers (M680) on page 381
Cover, right lower	RC3-5526-000CN	1x500-sheet paper feeder with cabinet covers on page 407
Cover, right lower	RC3-5526-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, right rear (1x500-sheet paper feeder with cabinet)	RC3-5525-000CN	1x500-sheet paper feeder with cabinet covers on page 407

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Cover, right rear (2,500-sheet paper feeder HCI)	RC3-5525-000CN	2,500-sheet paper feeder HCI covers on page 411
Cover, right rear	RC3-5628-000CN	Covers (M651) on page 379
Cover, right rear	RC3-5628-000CN	Covers (M680) on page 381
Cover, right	RC3-5532-000CN	1x500-sheet paper feeder covers on page 403
Cover, roller	RC3-5630-000CN	Internal assemblies (4 of 6) on page 397
Cover, top	RL2-0502-000CN	Stapling mailbox covers on page 417
Cover, upper left	RC3-5627-000	Covers (M651) on page 379
Cover, upper	RC3-5553-000CN	Covers (M651) on page 379
Cover, USB	5851-5136	Covers (M651) on page 379
Cover, USB (M680)	5851-5360	Document feeder and scanner assemblies (M680) on page 371
Fan, power-supply	RK2-2577-000CN	Internal assemblies (6 of 6) on page 401
Grip, left front	RC3-5625-000CN	Covers (M651) on page 379
Grip, left front	RC3-5625-000CN	Covers (M680) on page 381
Grip, left rear	RC3-5626-000CN	Covers (M651) on page 379
Grip, left rear	RC3-5626-000CN	Covers (M680) on page 381
Guide, cable	RC2-4468-000CN	Internal assemblies (5 of 6) on page 399
Kit, ADF roller maintenance (M680) (includes roller and separation pad)	L2725-60002	Document feeder assemblies (M680, 2 of 2) on page 375
Kit, ADF separation pad spring (M680)	5851-4879	Document feeder assemblies (M680, 2 of 2) on page 375
Kit, ADF white backing (M680)	5851-6084	Document feeder assemblies (M680, 1 of 2) on page 373
Kit, background selector for backside scan (M680)	5851-5022	Document feeder assemblies (M680, 2 of 2) on page 375
Kit, control panel (M651)	5851-5950	Control panels on page 385
Kit, control panel (without keyboard) (M680)	5851-5952	Control panels on page 385
Kit, document feeder mylar strips (M680)	5851-4998	Document feeder assemblies (M680, 2 of 2) on page 375
Kit, document feeder, complete with white backing (M680) ¹	CZ248-67916	Document feeder and scanner assemblies (M680) on page 371
Kit, formatter replacement (China only; M651)	CZ255-67902	Internal assemblies (6 of 6) on page 401

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Kit, formatter replacement (China only; M680)	CZ248-67906	Internal assemblies (6 of 6) on page 401
Kit, formatter replacement (M651)	CZ255-67901	Internal assemblies (6 of 6) on page 401
Kit, formatter replacement (M680)	CZ248-67901	Internal assemblies (6 of 6) on page 401
Kit, fuser replacement, 110V	CC493-67911	Internal assemblies (3 of 6) on page 395
Kit, fuser replacement, 220V	CC493-67912	Internal assemblies (3 of 6) on page 395
Kit, image scanner assembly, complete with white backing (M680) ²	CZ248-67915	Document feeder and scanner assemblies (M680) on page 371
Kit, intermediate transfer belt (includes secondary transfer roller)	CC493-67909	Internal assemblies (3 of 6) on page 395
Kit, laser scanner assembly	CZ248-67913	Internal assemblies (3 of 6) on page 395
Kit, main drive assembly	CC493-67915	Internal assemblies (5 of 6) on page 399
Kit, registration assembly	CZ255-67904	Internal assemblies (4 of 6) on page 397
Kit, scanner control board fan assembly (M680)	5851-6083	Scan control board (SCB; M680) on page 377
Kit, secondary transfer (T2) roller	CC493-67908	Internal assemblies (4 of 6) on page 397
Kit, toner collection unit	CC493-67913	Internal assemblies (2 of 6) on page 393
Kit, Tray 1 roller	CC493-67906	Right door on page 383
Kit, U.K. English keyboard (M680)	5851-5008	Control panels on page 385
Kit, U.S. English keyboard (M680)	5851-5380	Control panels on page 385
Motor, DC	RK2-5085-000CN	1x500-sheet paper feeder with cabinet components on page 409
Motor, DC	RK2-5085-000CN	1x500-sheet paper feeder components on page 405
Motor, DC	RK2-5085-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Motor, developing disengagement	RK2-2415-000CN	Internal assemblies (5 of 6) on page 399
Motor, feed	RK2-2635-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Motor, fuser	RM1-4983-000CN	Internal assemblies (5 of 6) on page 399

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Motor, ITB	RM1-5777-000CN	Internal assemblies (5 of 6) on page 399
Motor, main DC	RM1-5521-010CN	Internal assemblies (5 of 6) on page 399
Motor, paddle	RK2-2637-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Motor, pickup	RK2-5053-000CN	Internal assemblies (5 of 6) on page 399
Pad, Tray 1 separation	RL1-1937-000CN	Right door on page 383
Panel, stacking	RL2-0501-000CN	Stapling mailbox covers on page 417
Photointerrupter	WG8-5935-000CN	Internal assemblies (M651) on page 387
Photointerrupter	WG8-5935-000CN	Internal assemblies (2 of 6) on page 393
Photointerrupter	WG8-5935-000CN	Internal assemblies (3 of 6) on page 395
Photointerrupter	WG8-5935-000CN	Stapling mailbox assemblies (1 of 2) on page 419
Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	1x500-sheet paper feeder with cabinet components on page 409
Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	1x500-sheet paper feeder components on page 405
Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	2,500-sheet paper feeder HCI components (1 of 2) on page 413
Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	CC493-67907	Internal assemblies (4 of 6) on page 397
Roller, paper pickup	RL1-2099-000CN	Internal assemblies (4 of 6) on page 397
Roller, paper pickup	RL1-2099-000CN	1x500-sheet paper feeder components on page 405
Roller, paper pickup	RL1-2099-000CN	1x500-sheet paper feeder with cabinet components on page 409
Roller, paper pickup	RL1-2099-000CN	2,500-sheet paper feeder HCI components (1 of 2) on page 413
Scanner control board (M680)	CZ248-67914	Scan control board (SCB; M680) on page 377
Screw, D, M3x8	XA9-1671-000CN	Covers (M651) on page 379
Screw, D, M3x8	XA9-1671-000CN	Covers (M680) on page 381

Table 2-33 Alphabetical parts list (continued)

Description	Part number	Table and page
Screw, stepped	XA9-1671-000CN	Covers (M651) on page 379
Screw, stepped	XA9-1671-000CN	Covers (M680) on page 381
Sensor, residual toner full	RM2-0397-000CN	Internal assemblies (2 of 6) on page 393
Shaft, support	RC2-4162-000CN	Internal assemblies (4 of 6) on page 397
Subassembly, stage top	RM1-7437-010CN	Stapling mailbox assemblies (1 of 2) on page 419
Switch	WC4-5303-000CN	Internal assemblies (2 of 6) on page 393
Switch, push	WC2-5637-000CN	Internal assemblies (2 of 6) on page 393
Switch, push	WC2-5637-000CN	Internal assemblies (6 of 6) on page 401
Switch, push	WC2-5637-000CN	2,500-sheet paper feeder HCI components (2 of 2) on page 415
Tray, face-down	RC3-5631-000CN	Covers (M651) on page 379
Tray	RM2-0340-000CN	1x500-sheet paper feeder with cabinet components on page 409
Tray	RM2-0340-000CN	2,500-sheet paper feeder HCI components (1 of 2) on page 413
Tray	RM2-0340-000CN	1x500-sheet paper feeder components on page 405
Tray	RM2-0340-000CN	Internal assemblies (2 of 6) on page 393

Numerical parts list

Table 2-34 Numerical parts list

Part number	Description	Table and page
5042-9118	Cover, control panel access (M680)	Document feeder and scanner assemblies (M680) on page 371
5851-4879	Kit, ADF separation pad spring (M680)	Document feeder assemblies (M680, 2 of 2) on page 375
5851-4998	Kit, document feeder mylar strips (M680)	Document feeder assemblies (M680, 2 of 2) on page 375
5851-5008	Kit, U.K. English keyboard (M680)	Control panels on page 385
5851-5022	Kit, background selector for backside scan (M680)	Document feeder assemblies (M680, 2 of 2) on page 375
5851-5136	Cover, USB	Covers (M651) on page 379
5851-5360	Cover, USB (M680)	Document feeder and scanner assemblies (M680) on page 371
5851-5361	Cover, HIP (M680)	Document feeder and scanner assemblies (M680) on page 371
5851-5380	Kit, U.S. English keyboard (M680)	Control panels on page 385
5851-5950	Kit, control panel (M651)	Control panels on page 385
5851-5952	Kit, control panel (without keyboard) (M680)	Control panels on page 385
5851-6083	Kit, scanner control board fan assembly (M680)	Scan control board (SCB; M680) on page 377
5851-6084	Kit, ADF white backing (M680)	Document feeder assemblies (M680, 1 of 2) on page 373
B4A39-60011	Assembly, Hinge HR	Document feeder assemblies (M680, 1 of 2) on page 373
CC355-40013	Cover, document-feeder roller (M680)	Document feeder assemblies (M680, 2 of 2) on page 375
CC493-67906	Kit, Tray 1 roller	Right door on page 383
CC493-67907	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	Internal assemblies (4 of 6) on page 397
CC493-67907	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	1x500-sheet paper feeder components on page 405
CC493-67907	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	1x500-sheet paper feeder with cabinet components on page 409
CC493-67907	Roller, paper feed/separation (part of Tray 2-5 feed/separation roller kit)	2,500-sheet paper feeder HCI components (1 of 2) on page 413
CC493-67908	Kit, secondary transfer (T2) roller	Internal assemblies (4 of 6) on page 397

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
CC493-67909	Kit, intermediate transfer belt (includes secondary transfer roller)	Internal assemblies (3 of 6) on page 395
CC493-67911	Kit, fuser replacement, 110V	Internal assemblies (3 of 6) on page 395
CC493-67912	Kit, fuser replacement, 220V	Internal assemblies (3 of 6) on page 395
CC493-67913	Kit, toner collection unit	Internal assemblies (2 of 6) on page 393
CC493-67915	Kit, main drive assembly	Internal assemblies (5 of 6) on page 399
CZ248-67901	Kit, formatter replacement (M680)	Internal assemblies (6 of 6) on page 401
CZ248-67906	Kit, formatter replacement (China only; M680)	Internal assemblies (6 of 6) on page 401
CZ248-67912	Bezel, output bin (M680)	Covers (M680) on page 381
CZ248-67913	Kit, laser scanner assembly	Internal assemblies (3 of 6) on page 395
CZ248-67914	Scanner control board (M680)	Scan control board (SCB; M680) on page 377
CZ248-67915	Kit, image scanner assembly, complete with white backing (M680) ²	Document feeder and scanner assemblies (M680) on page 371
CZ248-67916	Kit, document feeder, complete with white backing (M680) ¹	Document feeder and scanner assemblies (M680) on page 371
CZ255-67901	Kit, formatter replacement (M651)	Internal assemblies (6 of 6) on page 401
CZ255-67902	Kit, formatter replacement (China only; M651)	Internal assemblies (6 of 6) on page 401
CZ255-67904	Kit, registration assembly	Internal assemblies (4 of 6) on page 397
L2725-60002	Kit, ADF roller maintenance (M680) (includes roller and separation pad)	Document feeder assemblies (M680, 2 of 2) on page 375
RC2-4162-000CN	Shaft, support	Internal assemblies (4 of 6) on page 397
RC2-4468-000CN	Guide, cable	Internal assemblies (5 of 6) on page 399
RC2-4747-000CN	Cover, M.R. crossmember	Right door on page 383
RC3-3948-000CN	Cover, HIP (M651)	Covers (M651) on page 379
RC3-5499-000CN	Cover, left (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5499-000CN	Cover, left (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI covers on page 411

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RC3-5514-000CN	Cover, front lower	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5515-000CN	Cover, left lower	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5515-000CN	Cover, left lower	2,500-sheet paper feeder HCI covers on page 411
RC3-5520-000CN	Cover, right front (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5521-000CN	Cover, right front (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI covers on page 411
RC3-5522-000CN	Cover, right front (1x500-sheet paper feeder)	1x500-sheet paper feeder covers on page 403
RC3-5523-000CN	Cover, rear lower	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5523-000CN	Cover, rear lower	2,500-sheet paper feeder HCI covers on page 411
RC3-5524-000CN	Cover, rear (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5524-000CN	Cover, rear (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI covers on page 411
RC3-5525-000CN	Cover, right rear (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5525-000CN	Cover, right rear (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI covers on page 411
RC3-5526-000CN	Cover, right lower	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5526-000CN	Cover, right lower	2,500-sheet paper feeder HCI covers on page 411
RC3-5527-000CN	Cover, right center	1x500-sheet paper feeder with cabinet covers on page 407
RC3-5527-000CN	Cover, right center	2,500-sheet paper feeder HCI covers on page 411
RC3-5530-000CN	Cover, left (1x500-sheet paper feeder)	1x500-sheet paper feeder covers on page 403
RC3-5531-000CN	Cover, handle, left	1x500-sheet paper feeder covers on page 403
RC3-5532-000CN	Cover, right	1x500-sheet paper feeder covers on page 403
RC3-5533-000CN	Cover, handle, right	1x500-sheet paper feeder covers on page 403
RC3-5534-000CN	Cover, rear (1x500-sheet paper feeder)	1x500-sheet paper feeder covers on page 403

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RC3-5535-000CN	Cover, front lower right	2,500-sheet paper feeder HCI covers on page 411
RC3-5536-000CN	Cover, front lower left	2,500-sheet paper feeder HCI covers on page 411
RC3-5550-000CN	Cover, right front, upper (M651)	Covers (M651) on page 379
RC3-5551-000CN	Cover, right front	Covers (M651) on page 379
RC3-5551-000CN	Cover, right front	Covers (M680) on page 381
RC3-5553-000CN	Cover, upper	Covers (M651) on page 379
RC3-5555-000CN	Cover, face-down, left	Covers (M651) on page 379
RC3-5556-000CN	Cover, face-down, rear	Covers (M651) on page 379
RC3-5582-000CN	Cover, right front, upper (M680)	Covers (M680) on page 381
RC3-5593-000CN	Cover, fan (M680)	Covers (M680) on page 381
RC3-5625-000CN	Grip, left front	Covers (M651) on page 379
RC3-5625-000CN	Grip, left front	Covers (M680) on page 381
RC3-5626-000CN	Grip, left rear	Covers (M651) on page 379
RC3-5626-000CN	Grip, left rear	Covers (M680) on page 381
RC3-5627-000	Cover, upper left	Covers (M651) on page 379
RC3-5628-000CN	Cover, right rear	Covers (M651) on page 379
RC3-5628-000CN	Cover, right rear	Covers (M680) on page 381
RC3-5629-000CN	Cover, left	Covers (M651) on page 379
RC3-5629-000CN	Cover, left	Covers (M680) on page 381
RC3-5630-000CN	Cover, roller	Internal assemblies (4 of 6) on page 397
RC3-5631-000CN	Tray, face-down	Covers (M651) on page 379
RC3-5632-000CN	Cover, left rear	Covers (M651) on page 379
RC3-5632-000CN	Cover, left rear	Covers (M680) on page 381
RC4-1938-000CN	Cover, front	Stapling mailbox covers on page 417
RC4-1939-000CN	Cover, rear (stapling mailbox)	Stapling mailbox covers on page 417
RK2-2415-000CN	Motor, developing disengagement	Internal assemblies (5 of 6) on page 399
RK2-2575-000CN	Assembly, paper-delivery fan (M680)	Internal assemblies (M680) on page 389
RK2-2577-000CN	Fan, power-supply	Internal assemblies (6 of 6) on page 401

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RK2-2635-000CN	Motor, feed	Stapling mailbox assemblies (1 of 2) on page 419
RK2-2637-000CN	Motor, paddle	Stapling mailbox assemblies (1 of 2) on page 419
RK2-5053-000CN	Motor, pickup	Internal assemblies (5 of 6) on page 399
RK2-5070-000CN	Cable, flexible flat	Internal assemblies (6 of 6) on page 401
RK2-5072-000CN	Cable, flexible flat, H.V.T.	Internal assemblies (6 of 6) on page 401
RK2-5077-000CN	Cable, USB, IS	Internal assemblies (M651) on page 387
RK2-5078-000CN	Cable, USB, SH	Internal assemblies (M651) on page 387
RK2-5085-000CN	Motor, DC	1x500-sheet paper feeder components on page 405
RK2-5085-000CN	Motor, DC	1x500-sheet paper feeder with cabinet components on page 409
RK2-5085-000CN	Motor, DC	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RL1-1937-000CN	Pad, Tray 1 separation	Right door on page 383
RL1-2099-000CN	Roller, paper pickup	Internal assemblies (4 of 6) on page 397
RL1-2099-000CN	Roller, paper pickup	1x500-sheet paper feeder components on page 405
RL1-2099-000CN	Roller, paper pickup	1x500-sheet paper feeder with cabinet components on page 409
RL1-2099-000CN	Roller, paper pickup	2,500-sheet paper feeder HCI components (1 of 2) on page 413
RL1-2438-000CN	Cover, bottom	Stapling mailbox covers on page 417
RL1-3976-000CN	Assembly, IPTU inner cover	Internal assemblies (M680) on page 389
RL2-0501-000CN	Panel, stacking	Stapling mailbox covers on page 417
RL2-0502-000CN	Cover, top	Stapling mailbox covers on page 417
RM1-4973-000CN	Assembly, duplexing drive (M680)	Internal assemblies (5 of 6) on page 399
RM1-4983-000CN	Motor, fuser	Internal assemblies (5 of 6) on page 399

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RM1-5156-000CN	Assembly, output bin 3 bin drive	Stapling mailbox assemblies (2 of 2) on page 421
RM1-5159-000CN	Assembly, stage	Stapling mailbox assemblies (1 of 2) on page 419
RM1-5166-000CN	Assembly, stapler	Stapling mailbox assemblies (2 of 2) on page 421
RM1-5488-000CN	Assembly, shutter	Internal assemblies (1 of 6) on page 391
RM1-5489-000CN	Assembly, shutter	Internal assemblies (1 of 6) on page 391
RM1-5497-010CN	Assembly, cartridge duct	Internal assemblies (5 of 6) on page 399
RM1-5501-000CN	Assembly, paper-delivery fan (M651)	Internal assemblies (M651) on page 387
RM1-5520-000CN	Cover, inner	Covers (M651) on page 379
RM1-5520-000CN	Cover, inner	Covers (M680) on page 381
RM1-5521-010CN	Motor, main DC	Internal assemblies (5 of 6) on page 399
RM1-5546-000CN	Assembly, duplexing-drive (M651)	Internal assemblies (5 of 6) on page 399
RM1-5564-040CN	Assembly, secondary transfer	Internal assemblies (4 of 6) on page 397
RM1-5598-000CN	Assembly, front inner cover lower	Internal assemblies (2 of 6) on page 393
RM1-5604-000CN	Assembly, position detect	Internal assemblies (3 of 6) on page 395
RM1-5605-010CN	Assembly, residual-toner-feed motor	Internal assemblies (3 of 6) on page 395
RM1-5615-000CN	Assembly, paper-delivery (M680)	Internal assemblies (3 of 6) on page 395
RM1-5616-000	Assembly, scissors hinge, left	Internal assemblies (M680) on page 389
RM1-5638-000CN	Assembly, tag holder	Internal assemblies (5 of 6) on page 399
RM1-5641-000CN	Assembly, registration density (RD) sensor	Internal assemblies (4 of 6) on page 397
RM1-5656-000CN	Assembly, fuser drive	Internal assemblies (5 of 6) on page 399
RM1-5771-000CN	Assembly, toner remain PCA	Internal assemblies (1 of 6) on page 391
RM1-5777-000CN	Motor, ITB	Internal assemblies (5 of 6) on page 399

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RM1-5853-000CN	Assembly, paper sensor PCA	Internal assemblies (4 of 6) on page 397
RM1-5894-000CN	Assembly, output bin sensor PCA	Stapling mailbox assemblies (2 of 2) on page 421
RM1-5896-000CN	Assembly, bin solenoid	Stapling mailbox assemblies (2 of 2) on page 421
RM1-5913-000CN	Assembly, lifter base	Internal assemblies (1 of 6) on page 391
RM1-5913-000CN	Assembly, lifter base	1x500-sheet paper feeder components on page 405
RM1-5913-000CN	Assembly, lifter base	1x500-sheet paper feeder with cabinet components on page 409
RM1-5913-000CN	Assembly, lifter base	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RM1-5914-000CN	Assembly, lifter	Internal assemblies (5 of 6) on page 399
RM1-5914-000CN	Assembly, lifter	1x500-sheet paper feeder components on page 405
RM1-5914-000CN	Assembly, lifter	1x500-sheet paper feeder with cabinet components on page 409
RM1-5914-000CN	Assembly, lifter	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RM1-5919-000CN	Assembly, paper-pickup	Internal assemblies (4 of 6) on page 397
RM1-6663-000CN	Assembly, entrance solenoid	Stapling mailbox assemblies (1 of 2) on page 419
RM1-6664-000CN	Assembly, stamp solenoid	Stapling mailbox assemblies (1 of 2) on page 419
RM1-7437-010CN	Subassembly, stage top	Stapling mailbox assemblies (1 of 2) on page 419
RM2-0200-000CN	Assembly, front door	Covers (M651) on page 379
RM2-0200-000CN	Assembly, front door	Covers (M680) on page 381
RM2-0202-000CN	Cover, rear (M651)	Covers (M651) on page 379
RM2-0205-000CN	Cover, rear (M680)	Covers (M680) on page 381
RM2-0206-000CN	Assembly, intermediate cover	Covers (M680) on page 381
RM2-0208-000CN	Assembly, right door	Right door on page 383
RM2-0210-000CN	Assembly, right handle cover	Covers (M651) on page 379
RM2-0210-000CN	Assembly, right handle cover	Covers (M680) on page 381
RM2-0212-000CN	Assembly, cartridge fan (M651)	Internal assemblies (3 of 6) on page 395

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RM2-0213-000CN	Assembly, cartridge fan (M680)	Internal assemblies (3 of 6) on page 395
RM2-0214-000CN	Bin, standard output	Covers (M680) on page 381
RM2-0216-000CN	Assembly, intermediate paper feed	Internal assemblies (M680) on page 389
RM2-0219-000CN	Assembly, front inner cover upper	Internal assemblies (2 of 6) on page 393
RM2-0220-000CN	Assembly, inner connecting PCA (M680)	Internal assemblies (6 of 6) on page 401
RM2-0221-000CN	Assembly, inner connecting PCA (M651)	Internal assemblies (6 of 6) on page 401
RM2-0223-000CN	Assembly, paper-delivery (M651)	Internal assemblies (3 of 6) on page 395
RM2-0340-000CN	Tray	Internal assemblies (2 of 6) on page 393
RM2-0340-000CN	Tray	1x500-sheet paper feeder components on page 405
RM2-0340-000CN	Tray	1x500-sheet paper feeder with cabinet components on page 409
RM2-0340-000CN	Tray	2,500-sheet paper feeder HCI components (1 of 2) on page 413
RM2-0341-000CN	Assembly, paper-pickup (1x500-sheet paper feeder)	1x500-sheet paper feeder components on page 405
RM2-0341-000CN	Assembly, paper-pickup (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet components on page 409
RM2-0341-000CN	Assembly, paper-pickup (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI components (1 of 2) on page 413
RM2-0346-000CN	Assembly, lifter drive	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RM2-0350-000CN	Assembly, tray size sensor	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RM2-0351-000CN	Assembly, tray	2,500-sheet paper feeder HCI components (1 of 2) on page 413
RM2-0362-000CN	Assembly, right door (2,500-sheet paper feeder HCI)	2,500-sheet paper feeder HCI covers on page 411
RM2-0364-000CN	Assembly, front upper cover	1x500-sheet paper feeder covers on page 403
RM2-0364-000CN	Assembly, front upper cover	1x500-sheet paper feeder with cabinet covers on page 407
RM2-0364-000CN	Assembly, front upper cover	2,500-sheet paper feeder HCI covers on page 411

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RM2-0368-000CN	Assembly, right door (1x500-sheet paper feeder with cabinet)	1x500-sheet paper feeder with cabinet covers on page 407
RM2-0369-000CN	Assembly, stock box door	1x500-sheet paper feeder with cabinet covers on page 407
RM2-0371-000CN	Assembly, HCI PCA	2,500-sheet paper feeder HCI components (2 of 2) on page 415
RM2-0385-000CN	Assembly, paper-pickup drive	Internal assemblies (5 of 6) on page 399
RM2-0386-000CN	Assembly, main switch	Internal assemblies (3 of 6) on page 395
RM2-0392-000CN	Cover, front face-down	Covers (M651) on page 379
RM2-0393-000CN	Assembly, flexible flat cable	Internal assemblies (5 of 6) on page 399
RM2-0397-000CN	Sensor, residual toner full	Internal assemblies (2 of 6) on page 393
RM2-0399-000CN	Assembly, residual-toner transfer	Internal assemblies (2 of 6) on page 393
RM2-0402-000CN	Assembly, switch button	Covers (M651) on page 379
RM2-0402-000CN	Assembly, switch button	Covers (M680) on page 381
RM2-0460-000CN	Assembly, high-voltage power supply PCA, lower	Internal assemblies (6 of 6) on page 401
RM2-0462-000CN	Assembly, high-voltage power supply PCA, upper	Internal assemblies (6 of 6) on page 401
RM2-0464-000CN	Assembly, low-voltage power supply PCA 110-127V	Internal assemblies (6 of 6) on page 401
RM2-0466-000CN	Assembly, low-voltage power supply PCA 220-240V	Internal assemblies (6 of 6) on page 401
RM2-0474-000CN	Assembly, IPTU driver PCA	Internal assemblies (M680) on page 389
RM2-0498-000CN	Assembly, DC controller PCA	Internal assemblies (6 of 6) on page 401
RM2-0500-000CN	Assembly, rear pre-exposure	Internal assemblies (3 of 6) on page 395
RM2-0501-000CN	Assembly, feeder PCA	1x500-sheet paper feeder components on page 405
RM2-0501-000CN	Assembly, feeder PCA	1x500-sheet paper feeder with cabinet components on page 409
RM2-5235-000CN	Assembly, jogger	Stapling mailbox assemblies (2 of 2) on page 421
RM2-5237-000CN	Assembly, top door	Stapling mailbox covers on page 417

Table 2-34 Numerical parts list (continued)

Part number	Description	Table and page
RM2-5240-000CN	Assembly, output bin	Stapling mailbox covers on page 417
RM2-5241-000CN	Assembly, output bin 3	Stapling mailbox assemblies (2 of 2) on page 421
RM2-5245-000CN	Assembly, output bin 3 driver PCA	Stapling mailbox assemblies (2 of 2) on page 421
RM2-5771-000CN	Assembly, scissors hinge, right	Internal assemblies (M680) on page 389
WC2-5637-000CN	Switch, push	Internal assemblies (2 of 6) on page 393
WC2-5637-000CN	Switch, push	Internal assemblies (6 of 6) on page 401
WC2-5637-000CN	Switch, push	2,500-sheet paper feeder HCI components (2 of 2) on page 415
WC4-5303-000CN	Switch	Internal assemblies (2 of 6) on page 393
WG8-5935-000CN	Photointerrupter	Internal assemblies (M651) on page 387
WG8-5935-000CN	Photointerrupter	Internal assemblies (2 of 6) on page 393
WG8-5935-000CN	Photointerrupter	Internal assemblies (3 of 6) on page 395
WG8-5935-000CN	Photointerrupter	Stapling mailbox assemblies (1 of 2) on page 419
XA9-1671-000CN	Screw, D, M3x8	Covers (M651) on page 379
XA9-1671-000CN	Screw, stepped	Covers (M651) on page 379
XA9-1671-000CN	Screw, D, M3x8	Covers (M680) on page 381
XA9-1671-000CN	Screw, stepped	Covers (M680) on page 381

Index

Symbols/Numerics

- 1x500-sheet input tray
 - part number 368
- 1x500-sheet paper feeder and cabinet
 - part number 368
- 1x500-sheet paper feeder
 - paper-pickup assembly, removing 274
- 2,500-sheet high-capacity input (HCI) feeder
 - part number 368

A

- accessories
 - ordering 364
 - part number 368
- ADF
 - removing 80
- ADF roller maintenance kit (M680)
 - location 375, 428, 433
 - roller, reinstalling 65, 68
 - roller, removing 63
 - separation pad, reinstalling 68
 - separation pad, removing 66
- ADF white backing (M680)
 - location 373, 428, 432
 - removing 54
 - replacing 55
- after-service checklist 4

B

- background selector (M680)
 - location 375, 428, 432
 - removing 60
 - replacing 62
- before-service checklist 4
- bezel
 - removing 53

C

- calibrate
 - scanner 106
- cartridge
 - ordering 365
 - part number 365
- cartridge duct assembly
 - location 399, 422, 437
 - removing 213
- cartridge fan
 - location 395, 422, 438
 - removing 174
- cartridges
 - removing 5
- cassette feed guide
 - reinstalling 151
 - removing 150
- cautions iii
- connector holder (stapling mailbox)
 - removing 324
- control panel (M651)
 - location 378
 - removing 28
- control panel (M680)
 - location 370
 - removing 32
- conventions, document iii
- covers
 - front upper cover (1x500-sheet paper feeder with cabinet),
 - location 407, 422, 439
 - front upper cover (1x500-sheet paper feeder with cabinet),
 - removing 287
 - front upper cover (1x500-sheet paper feeder), location 403, 422, 439
 - front upper cover (1x500-sheet paper feeder), removing 269

- left cover (1x500-sheet paper feeder with cabinet), location 407, 426, 433
- left cover (1x500-sheet paper feeder with cabinet),
 - removing 285
- left cover (1x500-sheet paper feeder), location 403, 426, 434
- left cover (1x500-sheet paper feeder), removing 271
- rear cover (1x500-sheet paper feeder with cabinet), location 407, 427, 434
- rear cover (1x500-sheet paper feeder with cabinet),
 - removing 284
- rear cover (1x500-sheet paper feeder), location 403, 427, 434
- rear cover (1x500-sheet paper feeder), removing 270
- rear-right cover (1x500-sheet paper feeder with cabinet),
 - location 407, 427, 434
- rear-right cover (1x500-sheet paper feeder with cabinet),
 - removing 292
- right center cover (1x500-sheet paper feeder with cabinet),
 - location 407, 427, 434
- right center cover (1x500-sheet paper feeder with cabinet),
 - removing 291
- right cover (1x500-sheet paper feeder), location 403, 428, 434
- right cover (1x500-sheet paper feeder), removing 273

- right door (1x500-sheet paper feeder with cabinet), location 407, 425, 440
- right door (1x500-sheet paper feeder with cabinet), removing 289
- right-front cover (1x500-sheet paper feeder with cabinet), location 407, 427, 434
- right-front cover (1x500-sheet paper feeder with cabinet), removing 288
- right-front cover (1x500-sheet paper feeder), location 403, 427, 434
- right-front cover (1x500-sheet paper feeder), removing 272
- stock box door (1x500-sheet paper feeder with cabinet), location 407, 425, 440
- stock box door (1x500-sheet paper feeder with cabinet), removing 286
- customer self-repair parts part numbers 366
- D**
- DC controller PCA and tray location 401, 422, 440 removing 204
- DC controller PCA assembly location 401, 422, 440 removing 198
- DC controller PCA only location 401, 422, 440 removing 198
- delivery assembly (M651) location 395, 424, 439 reinstalling 184 removing 180
- delivery assembly (M680) location 395, 424, 437 reinstalling 188 removing 186
- developing disengagement motor location 399, 429, 435
- developing-disengagement motor removing 212
- diagrams 363
- DIMM removing and replacing 21
- document conventions iii
- document feeder location 371, 428, 433 removing 80 replacing 85
- document feeder mylar strip removing 70
- document feeder mylar strip (M680) replacing 71
- document feeder roller cover reinstalling 77 removing 73
- document feeder white backing (M680) location 373, 428, 432 removing 54 replacing 55
- document-feeder eparation pad and holder (M680) replacement 68
- document-feeder hinge assembly removing 89
- document-feeder hinge HR assembly location 373, 423, 432
- document-feeder roller (M680) location 375, 428, 433 reinstalling 65 removing 63 replacement 65
- document-feeder roller cover location 375, 426, 432 reinstalling 77 removing 73
- document-feeder separation pad and holder (M680) location 375, 428, 433 removing 66
- document-feeder separation pad spring (M680) reinstalling 68
- drum motors location 399, 430, 437 removing 246
- duplex-drive assembly location 399, 422, 437 removing 189
- duplexing-drive assembly location 399, 422, 437 removing 189
- E**
- electrostatic discharge (ESD) 2
- entrance solenoid (stapling mailbox) location 419, 422, 438 removing 358
- environmental sensor removing 174
- ESD electrostatic discharge (ESD) 2
- exhaust fan location 399, 422, 437 reinstalling 215 removing 213
- F**
- face-down rear cover (M651) location 379, 426, 435 removing 136
- face-down tray (M651) location 379, 431, 435 reinstalling 135 removing 134
- fan cover (M680) location 381, 426, 435 removing 118
- fans cartridge, removing 174 exhaust, location 399, 422, 437 exhaust, removing 213
- paper-delivery (M651), removing 166
- paper-delivery (M680), removing 168
- power-supply fan (M651), location 401, 428, 435
- power-supply fan (M651), removing 190
- power-supply fan (M680), location 401, 428, 435
- power-supply fan (M680), removing 192
- fax PCA (M680) removing 12
- feed motor (stapling mailbox) location 419, 429, 436 removing 360

feeder PCA (1x500-sheet paper feeder with cabinet)	fuser motor	installation 2
location 409, 422, 440	location 399, 429, 436	screws 2
removing 299	removing 248	<i>See also</i> replacing parts
feeder PCA (1x500-sheet paper feeder)		interconnect board (ICB) (M651)
location 405, 422, 440		location 401, 423, 439
removing 281		removing 194
field-replaceable units (FRUs)		interconnect board (ICB) (M680)
replacing 2		location 401, 423, 439
flapper assembly (stapling mailbox)		removing 196
removing 338		intermediate cover assembly (M680)
flapper guide assembly (stapling mailbox)		location 381, 423, 438
removing 336		removing 145
formatter		intermediate paper feed assembly (M680)
PCA, removing 9		location 389, 423, 439
front cover (stapling mailbox)		removing 147
location 417, 426, 435		intermediate transfer belt (ITB)
removing 321		location 395, 429, 433
front door assembly		removing 25
location 379, 381, 422, 407, 438		IPTU (M680)
removing 126		location 389, 423, 439
front face-down cover (M651)		removing 147
location 379, 426, 440		ITB
removing 143		location 395, 429, 433
front upper cover (1x500-sheet paper feeder with cabinet)		removing 25
location 407, 422, 439		ITB motor
removing 287		location 399, 430, 437
front upper cover (1x500-sheet paper feeder)		removing 250
location 403, 422, 439		
removing 269		J
front upper cover (2,500-sheet paper feeder HCI)		jogger assembly (stapling mailbox)
location 411, 422, 439		location 421, 423, 440
removing 304		removing 334
FRUs (field-replaceable units)		
replacing 2		K
fuser		keyboard assembly (M680z)
location 395, 429, 433		location 385, 429, 432
removing 24		removing 37
fuser drive assembly		
location 399, 422, 437		L
reinstalling 266		laser scanner
removing 262		warnings for servicing 2
		laser/scanner assembly (C/K)
		location 395, 429, 433
		removing 237
		laser/scanner assembly (Y/M)
		location 395, 429, 433
		removing 233
		left cover
		location 379, 427, 435
		removing 120

left cover (1x500-sheet paper feeder with cabinet)
location 407, 426, 433
removing 285

left cover (1x500-sheet paper feeder)
location 403, 426, 434
removing 271

left cover (2,500-sheet paper feeder HCI)
location 411, 426, 433
removing 303

left rear cover
location 381, 427, 435
removing 119

left scissors hinge assembly
location 389, 425, 437

lifter assembly
location 399, 423, 438

lifter assembly (1x500-sheet paper feeder with cabinet)
location 409, 423, 438
removing 297

lifter assembly (1x500-sheet paper feeder)
location 405, 423, 438
removing 279

lifter base assembly
removing 220

lifter base assembly (1x500-sheet paper feeder with cabinet)
location 409, 423, 438
removing 296

lifter base assembly (1x500-sheet paper feeder)
location 405, 423, 438
removing 277

lifter-drive assembly
removing 217

low-voltage power supply
location 401, 423, 440
removing 200

low-voltage power supply PCA assembly
location 401, 423, 440
removing 200

lower rear cover (2,500-sheet paper feeder HCI)
removing 302

M

main-drive assembly
location 399, 429, 433
removing 252

memory DIMM
removing and replacing 21

motors
developing disengagement, location 399, 429, 435
developing-disengagement, removing 212

drum motor, location 399, 430, 437

drum motor, removing 246

fuser, location 399, 429, 436

fuser, removing 248

ITB, location 399, 430, 437

ITB, removing 250

main DC motor assembly, location 399, 430, 437

main DC motor assembly, removing 246

pickup (1x500-sheet paper feeder with cabinet), location 409, 429, 436

pickup (1x500-sheet paper feeder with cabinet), removing 298

pickup (1x500-sheet paper feeder), location 405, 429, 436

pickup (1x500-sheet paper feeder), removing 280

pickup, location 399, 430, 436

pickup, removing 216

residual-toner-feed, removing 169

N

notes iii

O

order parts by authorized service providers
order parts 364

ordering
product documents 364
supplies and accessories 364
toner cartridge 365

output bin
location 381, 425, 439
removing 52

output bin 3 (stapling mailbox)
location 421, 424, 441
removing 326

output bin 3 assembly
removing 326

output bin 3 drive assembly (stapling mailbox)
location 421, 424, 437
removing 342

output bin 3 driver PCA (stapling mailbox)
location 421, 424, 441
removing 327

output bin assembly (stapling mailbox)
location 417, 424, 441
removing 340

output bin bezel (M680)
location 381, 425, 433
removing 53

output bin sensor PCA (stapling mailbox)
location 421, 424, 438
removing 331

output bin solenoid (stapling mailbox)
location 421, 422, 438
removing 339

P

paddle motor (stapling mailbox)
location 419, 430, 436
removing 362

paper feeder
paper-pickup assembly, location 405, 424, 439

paper pickup assembly
removing 226

paper pickup drive assembly (1x500-sheet paper feeder)
removing 280

paper-delivery assembly (M651)
location 395, 424, 439
removing 180

paper-delivery assembly (M680)
removing 186

paper-delivery fan (M651)	pickup motor (1x500-sheet paper feeder)	registration density (RD) sensor assembly
location 387, 424, 437	location 405, 429, 436	location 397, 424, 437
removing 166	removing 280	removing 157
paper-delivery fan (M680)	pickup motor (2,500-sheet paper feeder HCI)	related documentation and software order parts 364
location 389, 424, 435	location 415, 429, 436	removal order
removing 168	removing 318	removing order 4
paper-pickup assembly	pickup motor assembly (1x500-sheet paper feeder)	removal strategy
location 397, 424, 438	location 405, 429, 436	removing and replacing 2
paper-pickup assembly (1x500-sheet paper feeder with cabinet)	removing 280	removing parts
location 409, 424, 439	power-supply fan (M651)	after-service checklist 4
removing 293	location 401, 428, 435	before-service checklist 4
paper-pickup assembly (1x500-sheet paper feeder),	removing 190	service approach 3
removing 274	power-supply fan (M680)	tools, required 3
paper-pickup drive assembly	location 401, 428, 435	repair approach 3
location 399, 424, 440	removing 192	replacement parts
removing 223		part numbers 366
part number		replacing parts
accessories 368		about 2
toner cartridge 365		after-service checklist 4
part numbers		before-service checklist 4
customer self-repair parts 366		screws 2
replacement parts 366		service approach 3
parts 363		tools, required 3
parts lists and diagrams		residual toner full sensor
covers 378		location 393, 431, 440
document feeder and scanner assemblies 370		removing 178
document feeder assemblies 372		residual-toner transfer assembly
internal assemblies 386		location 393, 424, 440
internal assemblies (1 of 6) 390		removing 171
internal assemblies (3 of 8) 392, 394, 396, 398, 400		residual-toner-feed motor
internal assemblies (M651) 386		location 395, 424, 437
internal assemblies (M680) 388		removing 169
right door 382		right center cover (1x500-sheet paper feeder with cabinet)
scan control board (SCB) 376		location 407, 427, 434
using 369		removing 291
pickup motor		right center cover (2,500-sheet paper feeder HCI)
location 399, 430, 436		location 411, 377, 434
removing 216		removing 308
pickup motor (1x500-sheet paper feeder with cabinet)		right cover (1x500-sheet paper feeder)
location 409, 429, 436		location 403, 428, 434
removing 298		removing 273
	registration assembly	right door (1x500-sheet paper feeder with cabinet)
	location 397, 429, 433	location 407, 425, 440
	removing 161	removing 289
	resetting counts 165	

- right door assembly
 location 378, 380
 removing 130
- right door assembly (2,500-sheet paper feeder HCI)
 location 411, 425, 439
 removing 306
- right front cover (2,500-sheet paper feeder HCI)
 location 411, 427, 434
 removing 305
- right lower cover (2,500-sheet paper feeder HCI)
 location 411, 427, 434
 removing 310
- right rear cover (2,500-sheet paper feeder HCI)
 location 411, 428, 434
 removing 309
- right scissors hinge assembly
 location 389, 425, 441
- right-front cover
 location 379, 381, 427, 435
 removing 124
- right-front cover (1x500-sheet paper feeder with cabinet)
 location 407, 427, 434
 removing 288
- right-front cover (1x500-sheet paper feeder)
 location 403, 427, 434
 removing 272
- right-front upper cover (M651)
 location 379, 427, 435
 removing 143
- right-rear cover
 location 379, 381, 428, 435
 removing 146
- roller
 feed and separation roller
 (1x500-sheet paper deck tray),
 location 409, 430, 432
- feed and separation roller
 (1x500-sheet paper feeder tray),
 location 405, 430, 432
- feed and separation roller (2,500-sheet paper feeder trays),
 location 413, 385, 432
- feed and separation roller (Tray 2), location 397, 430, 432
- feed and separation roller (Trays 2–5), removing 45
- pickup roller (Tray 1), location 383, 429, 432
- pickup roller (Tray 1), removing 46
- Tray 1 roller, location 383, 429, 432
- S**
- scanner
 calibrate 106
- scanner assembly
 replacing 106
- scanner control board
 location 377, 430, 433
 removing 93
 replacing 99
- scanner control board fan (M680)
 location 377, 429, 432
 removing 90
- scanner rear cover
 removing 79
- SCB
 removing 93
- SCB fan (M680)
 location 377, 429, 432
 removing 90
- scissor hinge assemblies
 location 389, 425, 437
 removing 113
- screwdrivers, required 3
- screws
 installing 2
 types of 3
- secondary transfer assembly
 location 397, 425, 437
 removing 152
- secondary transfer roller
 location 397, 429, 432
 removing 50
- sensors
 environmental, removing 174
 toner-collection sensor,
 removing 178
- service approach 3
- service replacement parts
 order parts 368
- solid state module (SSM)
 removing 13
- SSM
 removing 13
- stacking panel (stapling mailbox)
 location 417, 430, 436
 removing 333
- stage assembly (stapling mailbox)
 location 419, 425, 437
 removing 354
- stage-top sub-assembly (stapling mailbox)
 location 419, 431, 438
 reinstalling 353
 removing 345
- stamp solenoid (stapling mailbox)
 location 419, 425, 438
 removing 330
- standard output bin (M680)
 location 381, 425, 439
 removing 52
- stapler assembly (stapling mailbox)
 location 421, 425, 437
 removing 329
- Stapling mailbox
 part number 368
- static, precautions for 2
- stock box door (1x500-sheet paper feeder with cabinet)
 front door, location 407, 425, 440
 front door, removing 286
- supplies
 ordering 364
- supplies part numbers
 order parts 365
- T**
- tips iii
- toner cartridge
 ordering 365
 part number 365
- toner cartridges
 removing 5
- toner collection unit
 location 393, 429, 433
 removing 6
- tools, required 3
- top cover (stapling mailbox)
 location 417, 428, 436
 removing 325

top door (stapling mailbox)
 location 417, 425, 440
 removing 323

tray
 paper-pickup assembly (1x500-sheet paper feeder), location
 405, 424, 439

Tray 1 separation pad
 location 383, 430, 436
 removing 154

Tray 3-4 lifter assemblies (2,500-sheet paper feeder HCI)
 location 415, 423, 438
 removing 316

Tray 3-4 lifter base assemblies
(2,500-sheet paper feeder HCI)
 location 415, 423, 438
 removing 315

Tray 3-4 paper-pickup assemblies
(2,500-sheet paper feeder HCI)
 location 413, 424, 439

Tray 3-4 pickup assemblies (2,500-sheet paper feeder HCI)
 removing 313

Tray 5 lifter drive assembly (2,500-sheet paper feeder HCI)
 location 415, 423, 439
 removing 317

Tray 5 paper-pickup assembly
(2,500-sheet paper feeder HCI)
 location 413, 424, 439

Tray 5 pickup assembly (2,500-sheet paper feeder HCI)
 removing 311

trays
 location, 1x500-sheet paper deck
 tray 409, 431, 439
 location, 2,500-sheet paper
 feeder 1x500 trays 413, 431, 439
 location, 500-sheet paper feeder
 tray 405, 431, 439
 location, Tray 2 393, 431, 439
 removing 8

troubleshooting
 service approach 3

W

warnings iii

U
U.K. English keyboard (M680)
 location 385, 429, 432

© 2014 Hewlett-Packard Development Company, L.P.

www.hp.com

