




Brother Laser MFC SERVICE MANUAL

MODEL

**DCP-9030CDN/L3510CDW/L3517CDW
DCP-L3550CDW/L3551CDW
HL-L3290CDW
MFC-9150CDN/9350CDW
MFC-L3710CW/L3730CDN/L3735CDN
MFC-L3745CDW/L3750CDW/L3770CDW**

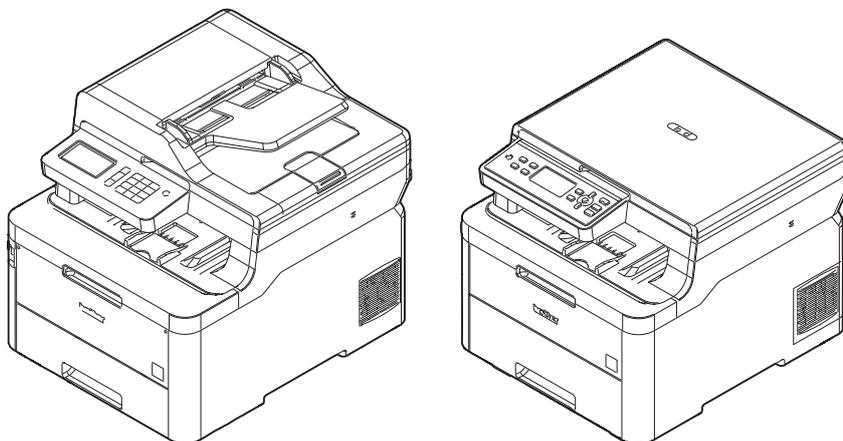

Read this manual thoroughly before maintenance work.
Keep this manual in a convenient place for quick and easy reference at all times.

March 2018
SM-FAX191
8CE7*
Ver.1

Trademarks

BROTHER is either a trademark or a registered trademark of Brother Industries, Ltd.

Microsoft and Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries.

Apple, App Store and Mac are trademarks of Apple Inc., registered in the U.S. and other countries.

AirPrint and the AirPrint logo are trademarks of Apple Inc., registered in the U.S. and other countries.

Wi-Fi is a registered trademark of Wi-Fi Alliance®.

Android is a trademark of Google Inc.

Google Play is a trademark of Google Inc.

Mopria® and the Mopria® Logo are registered trademarks and service marks of Mopria Alliance, Inc. in the United States and other countries. Unauthorized use is strictly prohibited.

Each company whose software title is mentioned in this manual has a Software License Agreement specific to its proprietary programs.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Open Source Licensing Remarks

This product includes open-source software.

Go to the manual download selection of your model's home page of Brother Solutions Center at support.brother.com to view the Open Source Licensing Remarks and Copyright Information.

Copyright and License

©2018 Brother Industries, Ltd. All rights reserved.

This product includes software developed by the following vendors:

©1983-1998 PACIFIC SOFTWARES, INC. ALL RIGHTS RESERVED.

©2008 Devicescape Software, Inc. All rights reserved.

This product includes the "KASAGO TCP/IP" software developed by ZUKEN ELMIC, Inc.

Copyright 1989-2014 Datalight, Inc., All Rights Reserved.

FlashFX® Copyright 1998-2014 Datalight, Inc.

U.S. Patent Office 5,860,082/6,260,156

CONTENTS

SAFETY INFORMATION

CHAPTER 1 SUPPLEMENTAL SPECIFICATIONS

1. GENERAL	1-1
2. NETWORK CONNECTIVITY.....	1-7
3. SERVICE INFORMATION	1-7
4. SUPPLIES	1-8
5. MEDIA SPECIFICATIONS	1-13
6. FAX (ONLY FOR THE MODELS WITH FAX FUNCTION).....	1-17
7. COPY.....	1-18
8. SCANNER	1-19

CHAPTER 2 ERROR INDICATION AND TROUBLESHOOTING

1. INTRODUCTION	2-1
1.1 Precautions.....	2-1
1.2 Checks before Commencing Troubleshooting.....	2-3
2. OVERVIEW.....	2-5
2.1 Cross-section Drawing	2-5
2.1.1 Printer part.....	2-5
2.1.2 Scanner part	2-7
2.2 Paper Feeding	2-8
2.2.1 Printer part.....	2-8
2.2.2 Scanner part	2-10
2.3 Operation of Each Part and Location of Parts	2-11
2.4 Block Diagram	2-15
2.5 Main Components.....	2-16
3. ERROR INDICATIONS.....	2-17
3.1 Error Codes	2-17
3.2 Error Message	2-26
3.2.1 Non touch panel models.....	2-26

3.2.2 Touch panel models.....	2-42
3.3 Communication Errors.....	2-58
4. TROUBLESHOOTING	2-62
4.1 Error Cause and Remedy.....	2-62
4.2 Troubleshooting for Paper Feeding Problems.....	2-106
4.2.1 No paper feeding from T1.....	2-106
4.2.2 No paper feeding from MP tray.....	2-107
4.2.3 No paper feeding from manual feed slot.....	2-108
4.2.4 Multiple sheets of paper are fed.....	2-108
4.2.5 Paper becomes wrinkled.....	2-109
4.2.6 Paper is fed at an angle.....	2-109
4.2.7 Paper curls.....	2-109
4.2.8 Unable to perform 2-sided printing.....	2-110
4.2.9 Paper jam.....	2-111
4.3 Troubleshooting for Image Defects.....	2-116
4.3.1 Image defect examples.....	2-116
4.3.2 Troubleshooting image defect.....	2-117
4.4 Troubleshooting for Software Problems.....	2-136
4.4.1 Unable to receive data.....	2-136
4.5 Troubleshooting for Network Problems.....	2-137
4.5.1 Cannot make a print through network connection.....	2-137
4.5.2 Cannot connect to access point.....	2-137
4.6 Troubleshooting for Control Panel Problems.....	2-138
4.6.1 Nothing is displayed on the LCD.....	2-138
4.6.2 Nothing is displayed on the LED.....	2-138
4.6.3 Unable to perform panel operation.....	2-139
4.7 Troubleshooting for Toner Cartridge and Drum Unit Problems.....	2-140
4.7.1 New toner not detected.....	2-140
4.7.2 Toner cartridge not detected.....	2-140
4.7.3 Toner replacement message displayed on LCD is not cleared.....	2-140
4.7.4 Drum error.....	2-141
4.7.5 Drum replacement message displayed on LCD is not cleared.....	2-141
4.8 Troubleshooting for Fuser Unit Problems.....	2-142
4.8.1 Fuser unit failure.....	2-142
4.9 Troubleshooting for LED ASSY Problems.....	2-142
4.9.1 LED ASSY failure.....	2-142
4.10 Troubleshooting for PCB Problems.....	2-143
4.10.1 Main PCB failure.....	2-143

4.10.2 Full memory	2-143
4.11 Troubleshooting for Document Feeding Problems	2-144
4.11.1 No document is fed	2-144
4.11.2 Multiple documents are fed	2-144
4.11.3 Document jam	2-145
4.11.4 Document becomes wrinkled	2-146
4.11.5 Document size is not detected correctly	2-146
4.12 Troubleshooting for Image Defects	2-147
4.12.1 Defect examples	2-147
4.12.2 Troubleshooting according to image defect	2-147
4.13 Troubleshooting for Fax Problems	2-152
4.13.1 Fax cannot be sent	2-152
4.13.2 Fax cannot be received	2-153
4.13.3 Communication error occurs	2-153
4.13.4 Receive buffer full during receiving into memory	2-153
4.14 Troubleshooting for Other Problems	2-154
4.14.1 Cannot make print	2-154
4.14.2 Problem of USB direct interface	2-154
4.14.3 Cannot update firmware	2-155
4.14.4 "Tray removed" message does not disappear	2-155

CHAPTER 3 DISASSEMBLY/REASSEMBLY

1. SAFETY PRECAUTIONS	3-1
2. PACKING	3-2
3. SCREW CATALOGUE	3-3
4. SCREW TORQUE LIST	3-4
5. LUBRICATION	3-6
6. OVERVIEW OF GEARS	3-8
7. HARNESS ROUTING	3-9
8. DISASSEMBLY FLOW	3-26
9. DISASSEMBLY PROCEDURE	3-27
9.1 Preparation	3-27
9.2 Paper tray / T1 separation pad ASSY	3-28
9.3 Back cover	3-29
9.4 Rear flapper sub ASSY	3-31

9.5 Fuser cover ASSY / Fuser unit	3-32
9.6 Cord hook	3-37
9.7 Side cover L	3-38
9.8 Side cover R	3-39
9.9 Back cover lower	3-40
9.10 Document scanner unit	3-41
9.11 ADF unit (For models with ADF)	3-44
9.11.1 ADF unit	3-44
9.11.2 Document separation roller ASSY	3-47
9.11.3 ADF separation holder ASSY	3-49
9.11.4 Second side CIS unit / Second side CIS flat cable (Only for models with duplex scanning)	3-50
9.11.5 Document detection sensor PCB / Document scanning position sensor PCB	3-55
9.12 Document cover ASSY (For models without ADF)	3-56
9.13 Panel unit	3-58
9.13.1 Key PCB / Panel PCB / Touch panel ASSY / LCD	3-59
9.13.2 Panel PCB / LCD ASSY	3-61
9.14 Panel flat cable / First side CIS unit / First side CIS flat cable	3-63
9.15 Modem flat cable / Modem PCB	3-70
9.16 Joint cover ASSY	3-71
9.17 LED unit	3-74
9.18 Speaker unit	3-76
9.19 NFC PCB	3-77
9.20 LED control flat cable / LED control PCB	3-79
9.21 LED ASSY (Y/M/C/K) / LED ASSY flat cable (Y/M/C/K)	3-82
9.22 MP paper guide ASSY / MP cover ASSY / USB host PCB (Only for MP models)	3-85
9.23 MP roller holder ASSY (Only for MP models)	3-89
9.24 MP unit (Only for MP models)	3-91
9.25 Manual feed cover ASSY / USB host PCB (Only for Manual feed models)	3-92
9.26 High-voltage power supply PCB / Develop release sensor PCB	3-94
9.27 Fan	3-97
9.28 WLAN PCB	3-98
9.29 Main PCB	3-99
9.30 Cartridge sensor relay flat cable	3-101
9.31 Develop release clutch / Process drive unit / High-voltage power supply flat cable / Process motor flat cable / Paper feed motor flat cable	3-102
9.32 T1 pick-up clutch / Registration clutch / Paper feed drive unit	3-111
9.33 Eject sensor PCB	3-113

9.34 Roller holder ASSY	3-114
9.35 Paper feed unit	3-115
9.36 Paper eject ASSY	3-117
9.37 Duplex tray	3-118
9.38 Low-voltage power supply PCB.....	3-119
9.39 Registration mark sensor L PCB / Registration mark sensor R PCB	3-123

CHAPTER 4 ADJUSTMENTS AND UPDATING OF SETTINGS, REQUIRED AFTER PARTS REPLACEMENT

1. IF YOU REPLACE THE MAIN PCB.....	4-1
1.1 Configure for Country/Region and Model (Function code 74)	4-2
1.2 Installing the Firmware (Sub Firmware and Main Firmware).....	4-2
1.2.1 Checking firmware version	4-2
1.2.2 Installing firmware.....	4-3
1.3 Initializing the EEPROM of the Main PCB (Function code 01)	4-5
1.4 Adjusting Touch Panel (Function code 61)	4-5
1.5 Continuous Adjustments of Density and Registration Sensor (Function code 73)	4-5
1.6 Acquisition of White Level Data (Function code 55).....	4-5
1.7 Setting the Serial Number (Function code 80)	4-5
2. IF YOU REPLACE THE REGISTRATION MARK SENSOR ASSY OR LED ASSY	4-8
2.1 Continuous Adjustments of Density and Registration Sensor (Function code 73)	4-8
3. IF YOU REPLACE THE LOW-VOLTAGE POWER SUPPLY PCB	4-9
3.1 Resetting Irregular Power Supply Counter of the Low-voltage Power Supply PCB (Reset counters for consumable parts (Function code 88)).....	4-9
4. IF YOU REPLACE THE LCD, PANEL UNIT OR PANEL PCB.....	4-10
4.1 Adjusting Touch Panel (Function code 61) (Touch panel models only)	4-10
4.2 Checking LCD Operation (Function code 12).....	4-10
5. IF YOU REPLACE THE ADF UNIT, FIRST SIDE CIS UNIT, SECOND SIDE CIS UNIT OR DOCUMENT SCANNER UNIT	4-11
5.1 Acquisition of White Level Data (Function code 55).....	4-11
5.2 Scanning and Printing Check	4-11
6. IF YOU REPLACE THE FUSER UNIT	4-12
6.1 Resetting Printed Pages Counter of the Fuser Unit (Reset counters for consumable parts (Function code 88)).....	4-12
7. IF YOU REPLACE A PF KIT.....	4-13

7.1 Resetting Printed Pages Counter of a PF Kit (Reset counters for consumable parts (Function code 88)).....	4-13
--	------

CHAPTER 5 SERVICE FUNCTIONS

1. MAINTENANCE MODE.....5-1

1.1 How to Enter Maintenance Mode	5-1
1.1.1 Method of entering maintenance mode for service personnel.....	5-1
1.1.2 Method of entering end-user accessible maintenance mode	5-2
1.2 List of Maintenance Mode Functions	5-3
1.3 Details of Maintenance Mode Functions.....	5-4
1.3.1 Initialize EEPROM parameters (Function code 01, 91).....	5-4
1.3.2 Transition to shipping state (Function code 03).....	5-5
1.3.3 ADF performance test (Function code 08)	5-6
1.3.4 Monochrome print quality test pattern (Function code 09)	5-7
1.3.5 Set worker switches (WSW) and print worker switch setting data (Function code 10, 11)	5-8
1.3.6 Check LCD operation (Function code 12)	5-12
1.3.7 Check control panel key operation (Function code 13)	5-14
1.3.8 Save the NetConfig information (Function code 18).....	5-15
1.3.9 Display software version (Function code 25).....	5-16
1.3.10 Check sensor operation (Function code 32).....	5-17
1.3.11 Display LAN connection status (Function code 33)	5-20
1.3.12 Set PC-Print functions (Function code 43)	5-21
1.3.13 Change USB No. return value / Switching Dither Pattern / Switching of ON/OFF of DirectPrint Color mode-Improve Gray Color / Switching of timing to execute Auto Registration / Adjust left-end print position / Adjust upper-end print position / Change of the transfer current setting / Change of ghost reduction setting / Change of function switch / Change of drum developing bias correction value in endurance deterioration of drum / Switching of black toner discharge compensation (Function code 45).....	5-24
1.3.14 Adjust printable range for each speed level (Function code 46).....	5-33
1.3.15 Transfer received fax data / log information (fax models only) (Function code 53)	5-35
1.3.16 Fine-tune scanning position (Function code 54).....	5-37
1.3.17 Acquire white level data and set CIS scan area (Function code 55)	5-38
1.3.18 Check consumables function (Function code 57).....	5-39
1.3.19 Adjust touch panel (Function code 61)	5-46
1.3.20 Adjustment of color registration (Adjustment of inter-color position alignment) (Function code 66)	5-47
1.3.21 Continuous print test (Function code 67).....	5-52

1.3.22 LED ASSY test pattern print (Function code 68)	5-56
1.3.23 Print frame pattern (1-sided printing) (Function code 69)	5-57
1.3.24 Print frame pattern (2-sided printing) (Function code 70)	5-58
1.3.25 Color test pattern (Function code 71)	5-59
1.3.26 Sensitivity adjustment of density sensor (Function code 72).....	5-62
1.3.27 Continuous adjustments of density / registration sensor (Function code 73)	5-63
1.3.28 Configure for country/region and model (Function code 74)	5-64
1.3.29 Print maintenance information (Function code 77).....	5-69
1.3.30 Check fan operation (Function code 78)	5-71
1.3.31 Delete fax data (Function code 79)	5-72
1.3.32 Display machine log information (Function code 80).....	5-73
1.3.33 Display machine error code (Function code 82).....	5-78
1.3.34 Developing bias voltage correction (Function code 83).....	5-79
1.3.35 Send communication log information to telephone line (Function code 87)	5-80
1.3.36 Reset counters for consumable parts (Function code 88).....	5-81
1.3.37 Quit maintenance mode (Function code 99)	5-82
2. OTHER SERVICE FUNCTIONS.....	5-83
2.1 Change ON/OFF setting of color registration	5-83
2.2 Print Communication Error List.....	5-84

CHAPTER 6 WIRING DIAGRAM

1. WIRING DIAGRAM	6-1
--------------------------------	------------

CHAPTER 7 PERIODICAL MAINTENANCE

1. PRECAUTIONS.....	7-1
2. PERIODICAL REPLACEMENT PARTS	7-2
2.1 Preparation	7-2
2.2 Fuser unit.....	7-3
2.3 PF kit 1	7-10
2.4 PF kit MP	7-12

APPENDIX 1 SERIAL NUMBERING SYSTEM

APPENDIX 2 DELETING USER SETTING INFORMATION

APPENDIX 3 INSTALLING THE MAINTENANCE PRINTER DRIVER

SAFETY INFORMATION

■ Definitions of Warnings, Cautions, Notes and Memos

The following conventions are used in this manual:

Mark	Contents
	WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injuries.
	CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injuries.
	IMPORTANT indicates a potentially hazardous situation which, if not avoided, may result in damage to property or loss of product functionality.
	Prohibition icons indicate actions that must not be performed.
	Electrical Hazard icons alert you to possible electrical shock.
	Fire hazard icons alert you to the possibility of fire.
	Hot Surface icons warn you not to touch product parts that are hot.
Note	Notes tell you how you should respond to a situation that may arise or give tips about how the operation works with other features.
Memo	Memo tells you bits of knowledge to help understand the machine.

■ To use the Machine Safely

Please keep these instructions for later reference and read them before attempting any maintenance. If you do not follow these safety instructions, there is a possibility of a fire, electrical shock, burn or suffocation.

WARNING




ELECTRICAL HAZARDS

Failure to follow the warnings in this section may create the risk of an electrical shock. In addition, you could create an electrical short, which may create the risk of a fire.



There are high voltage electrodes inside the product. Before you access the inside of the product, including for routine maintenance such as cleaning, make sure you have unplugged the telephone line cord first (MFC models only) and then the power cord from the AC power outlet, as well as any telephone (RJ-11) (MFC models only) or Ethernet (RJ-45) cables (Network models only) from the product. Never push objects of any kind into this product through cabinet slots, since they may touch dangerous voltage points or short out parts.

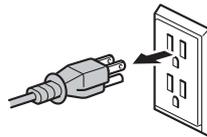

DO NOT handle the plug with wet hands.



DO NOT use this product during an electrical storm.



Always make sure the plug is fully inserted. DO NOT use the product or handle the cord if the cord has become worn or frayed.



DO NOT allow this product to come into contact with water. This product should not be used around standing water, including a bath tub, sink, or swimming pool; around appliances containing water, including a refrigerator; or in a wet basement.



This product should be connected to an AC power source within the range indicated on the rating label. DO NOT connect it to a DC power source or inverter. If you are not sure what kind of power source you have, contact a qualified electrician.




Power Cord Safety:

- This product is equipped with a grounded plug. This plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, call your electrician to replace your obsolete outlet. DO NOT attempt to defeat the purpose of the grounded plug.
- DO NOT allow anything to rest on the power cord.
- DO NOT place this product where people might step on the cord.
- DO NOT place this product in a position where the cord is stretched or strained, as it may become worn or frayed.
- DO NOT use the product if the power cord is frayed or damaged. Doing so may cause an electrical shock or fire.
- DO NOT pull on the middle of the AC power cord; pulling on the middle may cause the cord to separate from the plug. Doing this might cause an electrical shock.
- DO NOT use any undesignated cables (or optional devices). Doing so may cause a fire or injuries. Installation must be performed properly according to the user's guide.
- Brother strongly recommends that you DO NOT use any type of extension cord.



- DO NOT put a toner cartridge, a toner cartridge and drum unit assembly, or waste toner box into a fire. It could explode, resulting in injuries.
- DO NOT use flammable substances, any type of spray, or an organic solvent/liquid containing alcohol or ammonia to clean the inside or outside of the product. Doing so could cause a fire or electrical shock. Instead, use only a dry, lint-free cloth.

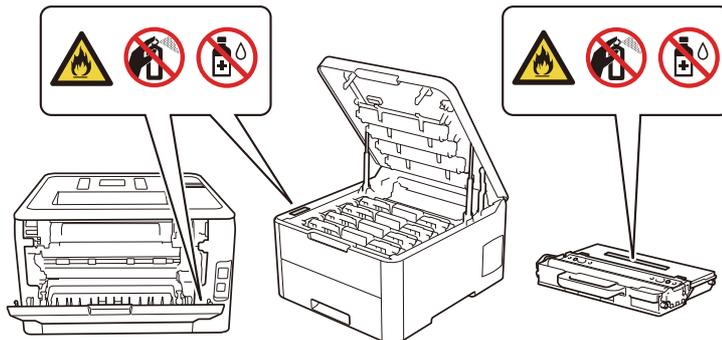

DO NOT attempt to operate this product when a paper jam or stray pieces of paper are inside the product. Prolonged contact of the paper with the fuser unit could cause a fire.




DO NOT use a vacuum cleaner to clean up scattered toner. Doing this might cause the toner dust to ignite inside the vacuum cleaner, potentially starting a fire. Please carefully clean the toner dust with a dry, lint-free soft cloth and dispose of it according to local regulations.




HOT SURFACE

Immediately after using the product, some internal parts of the product will be extremely hot. Wait at least 10 minutes for the product to cool down before you touch the internal parts of the product.

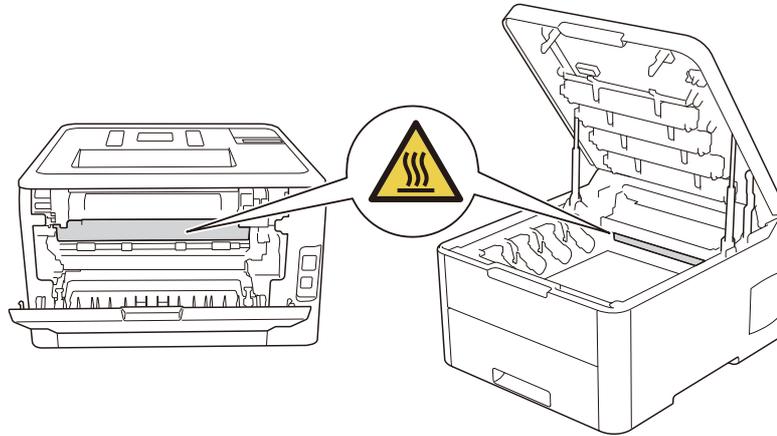

When you move the product, carry the product as shown in the illustration.


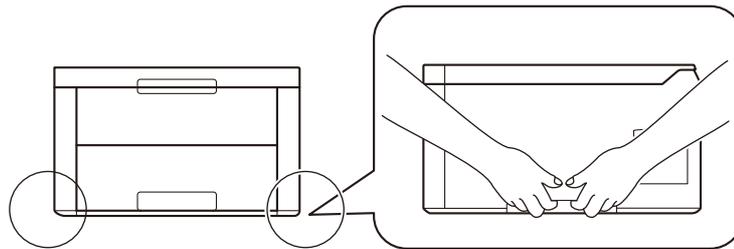


(HL-L3290CDW/DCP-L3551CDW/MFC-L3710CW/MFC-L3750CDW/MFC-L3770CDW)
To prevent possible injuries, at least two people should lift the product by holding it from the front and back.






Some areas of the product can cause injury if covers (shaded) are closed with force. Take care when placing your hand in the areas shown in the illustrations, and **DO NOT** close the covers with force.

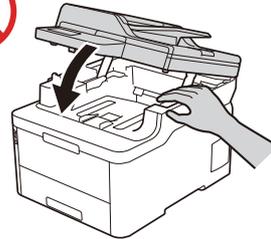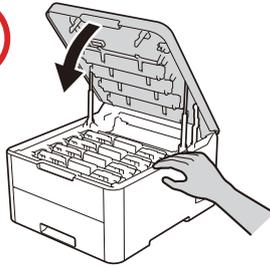

To prevent injuries, be careful not to put your fingers in the areas shown in the illustrations.

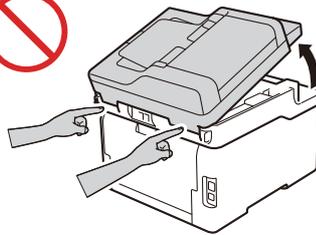

(MFC models only)

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to people. These important safety precautions including the following:

- (1) **DO NOT** use this product near water or locations that may become wet, for example, near a bath tub, wash bowl, kitchen sink or washing machine, in a wet basement or near a swimming pool.
- (2) Avoid using this product during an electrical storm. There may be a remote risk of electric shock from lightning.
- (3) **DO NOT** use this product to report a gas leak in the vicinity of the leak.
- (4) Use only the power cord provided with the product.

Read all of the instructions. Save them for later reference.



(MFC models only)

To reduce the risk of shock or fire, use only a No. 26 AWG or larger telecommunication line cord.

■ Standard Telephone and FCC Notices (MFC Models Only)

These notices are in effect on models sold and used in the United States only.

When programming emergency numbers or making test calls to emergency numbers:

- Remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
- Perform these activities in the off-peak hours, such as early morning or late evening.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the back side of this equipment is a label that contains, among other information, a product identifier in the format US: AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

You may safely connect this equipment to the telephone line by means of a standard modular jack, USOC RJ11C.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The Ringer Equivalence Number (REN) is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 06 is a REN of 0.6). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice is not practical, the telephone company will notify you as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

If trouble is experienced with this equipment, for repair or warranty information, contact Brother Customer Service (see the *Online User's Guide: Brother Numbers*). If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved.

Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

If your home has specially wired alarm equipment connected to the telephone line, ensure the installation of this equipment does not disable your alarm equipment. If you have questions about what will disable the alarm equipment, call your telephone company or a qualified installer.

The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or electronic device to send any message via a telephone fax machine unless such messages clearly contain, in a margin at the top or bottom of each transmitted page, or on the first page of the transmission, the date and time it is sent and an identification of the business or other entity or other individual sending the message and the telephone number of the sending machine or such business, other entity or individual. To program this information into your machine, see the *Quick Setup Guide: Set the Date and Time and Set Your Station ID*.

If you are not able to solve a problem with your product, contact Brother Customer Service (see the *Online User's Guide: Brother Numbers*).



WARNING

For protection against the risk of electrical shock, always disconnect all cables from the walloutlet before the equipment is installed, serviced, or modified.

IMPORTANT

- This equipment may not be used on coin service lines provided by the telephone company or connected to party lines.
- Brother cannot accept any financial or other responsibilities that may be the result of your use of this information, including direct, special or consequential damages. There are no warranties extended or granted by this document.
- A grounded plug should be plugged into a grounded AC power outlet after checking the rating of the local power supply for the product to operate properly and safely.

CHAPTER 1 SUPPLEMENTAL SPECIFICATIONS

1. GENERAL

The function comparative table for models as described in this Service Manual are shown below.

Model		HL-L3290CDW	DCP-L3510CDW	DCP-L3517CDW	DCP-L3550CDW	DCP-L3551CDW	DCP-9030CDN	MFC-L3710CW
Wired/Wireless LAN		Wireless			Wired/Wireless		Wired	Wireless
Auto Duplex Print		✓						N/A
Duplex Scan		N/A						
ADF		N/A			50 sheets			
Auto Duplex Copy		N/A						
Scanning Method		CIS						
LCD	Type	16 characters x 2 lines			3.7" TFT ColorLCD (9.3 cm / 93.4 mm)	16 characters x 2 lines	3.7" TFT ColorLCD (9.3 cm / 93.4 mm)	
	Dimension (W x L)	1.85 x 0.43 inch			81.65 mm x 45.36 mm (3.21 x 1.79 inch)	1.85 x 0.43 inch	81.65 mm x 45.36 mm (3.21 x 1.79 inch)	
FB		Up to A4/LTR						
FAX		N/A						33,600 bps (Fax)
NFC		N/A						
External IC Card Reader		N/A						
USB Host (front)		N/A						
USB Host (rear)		N/A						
PCL/PS		PCL6, BR-Script3, PDF Version 1.7, XPS Version 1.0						
Paper Input	Standard Tray	250 sheets						
	MP Tray	N/A						
	Manual Feed Slot	1 sheet						
	ADF	N/A			50 sheets			
Paper Output		150 sheets face down (80 g/m ²) 1 sheet face-up (straight paper path)						

Specifications are subject to change without notice.

Model		HL-L3290CDW	DCP-L3510CDW	DCP-L3517CDW	DCP-L3550CDW	DCP-L3551CDW	DCP-9030CDN	MFC-L3710CW
Warm Up Time	From Sleep Mode	Less than 24 sec. at 73.4F (23°C/50%)	Less than 28 sec. at 73.4F (23°C/50%)				Less than 24 sec. at 73.4F (23°C/50%)	Less than 28 sec. at 73.4F (23°C/50%)
	From Power ON	Less than 25 sec. at 73.4F (23°C/50%)	Less than 29 sec. at 73.4F (23°C/50%)				Less than 25 sec. at 73.4F (23°C/50%)	Less than 29 sec. at 73.4F (23°C/50%)
FPOT	From Ready Mode	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 115V	Less than 15.5/15.5 secs (Mono/Color) at 73.4F (23°C) / 230V				Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 15.5/15.5 secs (Mono/Color) at 73.4F (23°C) / 115V Less than 15.5/15.5 secs (Mono/Color) at 73.4F (23°C) / 230V (For OCE and EU)
	From Sleep Mode	Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 115V	Less than 32/32 secs (Mono/Color) at 73.4F (23°C) / 230V				Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 32/32 secs (Mono/Color) at 73.4F (23°C) / 115V (For US) Less than 32/32 secs (Mono/Color) at 73.4F (23°C) / 230V (For OCE and EU)
Mono Print Speed (A4/Letter)		Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)				Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)
Full Color Print Speed (A4/Letter)		Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)				Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)

Specifications are subject to change without notice.

Model	HL-L3290CDW	DCP-L3510CDW	DCP-L3517CDW	DCP-L3550CDW	DCP-L3551CDW	DCP-9030CDN	MFC-L3710CW
Mono Duplex Print Speed (A4/Letter)	8/8 sides per minute (4/4 sheets per minute)	6/6 sides per minute (3/3 sheets per minute)				8/8 sides per minute (4/4 sheets per minute)	N/A
Full Color Duplex Print Speed (A4/Letter)	8/8 sides per minute (4/4 sheets per minute)	6/6 sides per minute (3/3 sheets per minute)				8/8 sides per minute (4/4 sheets per minute)	N/A
Processor	MAIN: Cortex-A9 800MHz SUB: ARM946 133MHz						
Back Up Clock	Up to 60 hours						
Setting Lock	✓						
Secure Function Lock	✓ (Version.3.0) (100 registerable users)						
Dimensions (W x D x H)	Carton Size	589 x 523 x 521 mm 23.2 x 20.6 x 20.5 inch		589 x 523 x 568 mm 23.2 x 20.6 x 22.4 inch		599 x 543 x 576 mm 23.6 x 21.4 x 22.7 inch	589 x 523 x 568 mm 23.2 x 20.6 x 22.4 inch
	Machine Size	410 x 475 x 368 mm 16.1 x 18.7 x 14.5 inch		410 x 475 x 414 mm 16.1 x 18.7 x 16.3 inch			
Weights	With Carton	25.6 kg / 56.5 lb	26.0 kg / 57.4 lb	27.4 kg / 60.4 lb (Except for Russia) 27.6 kg / 60.9 lb (For Russia)	27.6 kg / 60.8 lb (For LTN) 27.4 kg / 60.4 lb (For OCE) 27.9 kg / 61.4 lb (For ASA)	27.4 kg / 60.4 lb	26.7 kg / 58.8 lb (For US and OCE) 26.7 kg / 59.0 lb (For EU)
	Without Carton, with toner/drum	21.7 kg / 47.8 lb		23.2 kg / 51.2 lb	23.4 kg / 51.5 lb (For LTN) 23.2 kg / 51.2 lb (For OCE) 23.5 kg / 51.7 lb (For ASA)	23.2 kg / 51.2 lb	22.5 kg / 49.5 lb (For US) 22.5 kg / 49.6 lb (For EU and OCE)
	Without Carton and toner/drum	17.2 kg / 37.9 lb		18.8 kg / 41.3 lb			18.0 kg / 39.7 lb

Specifications are subject to change without notice.

Model	MFC- L3730CDN	MFC- L3735CDN	MFC- 9150CDN	MFC- L3750CDW	MFC- L3745CDW	MFC- L3770CDW	MFC- 9350CDW	
Wired/Wireless LAN	Wired			Wired/Wireless				
Auto Duplex Print	✓							
Duplex Scan	N/A					✓		
ADF	50 sheets							
Auto Duplex Copy	N/A					✓		
Scanning Method	CIS					Dual CIS		
LCD	Type	3.7" TFT ColorLCD (9.3 cm / 93.4 mm)						
	Dimension (W x L)	81.65 mm x 45.36 mm (3.21 x 1.79 inch)						
FB	Up to A4/LTR							
FAX	33,600 bps (Fax)							
NFC	N/A					✓ (Link to Solutions Center / Print&Scan / Easy WLAN setting)		
External IC Card Reader	N/A							
USB Host (front)	N/A			✓				
USB Host (rear)	N/A							
PCL/PS	PCL6, BR-Script3, PDF Version 1.7, XPS Version 1.0							
Paper Input	Standard Tray	250 sheets						
	MP Tray	N/A					30 sheets Envelope: 3 envelopes up to 6 mm thick	
	Manual Feed Slot	1 sheet					N/A	
	ADF	50 sheets						
Paper Output	150 sheets face down (80 g/m ²) 1 sheet face-up (straight paper path)							

Specifications are subject to change without notice.

Model		MFC-L3730CDN	MFC-L3735CDN	MFC-9150CDN	MFC-L3750CDW	MFC-L3745CDW	MFC-L3770CDW	MFC-9350CDW
Warm Up Time	From Sleep Mode	Less than 28 sec. at 73.4F (23°C/50%)	Less than 24 sec. at 73.4F (23°C/50%)					
	From Power ON	Less than 29 sec. at 73.4F (23°C/50%)	Less than 25 sec. at 73.4F (23°C/50%)					
FPOT	From Ready Mode	Less than 15.5/15.5 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 115V (For US)	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 115V (For US)	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 14/14 secs (Mono/Color) at 73.4F (23°C) / 230V
	From Sleep Mode	Less than 32/32 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 230V	Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 115V (For US)	Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 230V (For LTN, EU, OCE and ASA)	Less than 30/30 secs (Mono/Color) at 73.4F (23°C) / 230V		
Mono Print Speed (A4/Letter)		Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)			Up to 22/23 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	
Full Color Print Speed (A4/Letter)		Up to 18/19 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)			Up to 22/23 ppm (Quiet Mode: Up to 12/12 ppm)	Up to 24/25 ppm (Quiet Mode: Up to 12/12 ppm)	

Specifications are subject to change without notice.

Model		MFC-L3730CDN	MFC-L3735CDN	MFC-9150CDN	MFC-L3750CDW	MFC-L3745CDW	MFC-L3770CDW	MFC-9350CDW
Mono Duplex Print Speed (A4/Letter)		6/6 sides per minute (3/3 sheets per minute)	8/8 sides per minute (4/4 sheets per minute)					
Full Color Duplex Print Speed (A4/Letter)		6/6 sides per minute (3/3 sheets per minute)	8/8 sides per minute (4/4 sheets per minute)					
Processor		MAIN: Cortex-A9 800MHz SUB: ARM946 133MHz						
Back Up Clock		Up to 60 hours						
Setting Lock		✓						
Secure Function Lock		✓ (Version.3.0) (100 registerable users)						
Dimensions (W x D x H)	Carton Size	589 x 523 x 568 mm 23.2 x 20.6 x 22.4 inch	599 x 543 x 576 mm 23.6 x 21.4 x 22.7 inch	589 x 523 x 568 mm 23.2 x 20.6 x 22.4 inch	623 x 523 x 568 mm 24.5 x 20.6 x 22.4 inch	633 x 543 x 576 mm 24.9 x 21.4 x 22.7 inch		
	Machine Size	410 x 475 x 414 mm 16.1 x 18.7 x 16.3 inch				410 x 509 x 414 mm 16.1 x 20.0 x 16.3 inch		
Weights	With Carton	27.6 kg / 60.9 lb	27.9 kg / 61.5 lb	27.6 kg / 60.8 lb	27.6 kg/60.7 lb (For US) 27.8 kg / 61.2 lb (For LTN) 27.6 kg/60.9 lb (For EU) 27.6 kg / 60.8 lb (For OCE) 28.1 kg / 62.0 lb (For ASA)	27.6 kg / 60.8 lb	28.8 kg/63.4 lb (For US) 28.8 kg / 63.6 lb (For EU except for Russia) 29.0 kg / 63.9 lb (For Russia) 28.8 kg / 63.5 lb (For OCE) 29.3 kg / 64.5 lb (For ASA)	29.0 kg / 64.0 lb
	Without Carton, with toner/ drum	23.4 kg / 51.5 lb	23.5 kg / 51.9 lb	23.4 kg / 51.6 lb	23.4 kg /51.5 lb (For US and EU) 23.5 kg /51.9 lb (For LTN) 23.4 kg /51.6 lb (For OCE) 23.6 kg /52.1 lb (For ASA)	23.4kg / 51.6lb	24.5 kg / 53.9 lb (For US) 24.5 kg / 54.0 lb (For EU and ASA) 24.7 kg / 54.5 lb (For ASA)	24.5 kg / 54.0 lb
	Without Carton and toner/ drum	18.9 kg / 41.7 lb					20.0 kg / 44.1 lb	

Specifications are subject to change without notice.

2. NETWORK CONNECTIVITY

Model		All models
Wired Network	Network Node Type	N/A
Wireless Network	Network Node Type	NC-8900w type2

3. SERVICE INFORMATION

Model	HL- L3290CDW	DCP- L3510CDW	DCP- L3517CDW	DCP- L3550CDW	DCP- L3551CDW	DCP- 9030CDN	MFC- L3710CW
Machine Life	100,000 pages (A4/LTR) or 5 years						
Part Life (ADF)	N/A			50,000 pages or 5 years			
Part Life (Document Scanner Unit)	50,000 pages or 5 years						
MTBF	4,000 hours						
MTTR	0.5 hours						
Maximum Monthly Print Volume	Up to 30,000 pages						
Periodical Maintenance Parts	Fuser Unit	50,000 pages (2 pages/job) (Service replacement)					
	PF Kit	50,000 pages (Service replacement)					
	PF Kit MP	N/A					

Model	MFC- L3730CDN	MFC- L3735CDN	MFC- 9150CDN	MFC- L3750CDW	MFC- L3745CDW	MFC- L3770CDW	MFC- 9350CDW
Machine Life	100,000 pages (A4/LTR) or 5 years						
Part Life (ADF)	50,000 pages or 5 years						
Part Life (Document Scanner Unit)	50,000 pages or 5 years						
MTBF	4,000 hours						
MTTR	0.5 hours						
Maximum Monthly Print Volume	Up to 30,000 pages						
Periodical Maintenance Parts	Fuser Unit	50,000 pages (2 pages/job) (Service replacement)					
	PF Kit	50,000 pages (Service replacement)					
	PF Kit MP	N/A				50,000 pages (Service Replacement)	

Specifications are subject to change without notice.

4. SUPPLIES

Model		HL-L3290CDW	DCP-L3510CDW			DCP-L3517CDW	DCP-L3550CDW	
Toner Cartridge	Starter Toner	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798						
	Standard Toner	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798 (For EU)	For ARL: CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For ASA)	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798 (For EU)	For Russia: BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For EU)
	High Capacity Toner	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For EU)	For ARL: BK: Approx. 2,500 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For ASA)	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798		
When printing A4/Letter size one-sided pages in accordance with ISO/IEC 19798 Shelf life: 2 years without opening (6 months after opening)								
Drum Unit	Life expectancy: Approximately 18,000 pages (1 page/job) The life expectancy varies according to the use condition. Shelf life: 2 years without opening (6 months after opening)							
The shelf life of toner cartridge and drum unit is guaranteed under the normal condition as below; (Temperature) Normal condition: 0 to 40°C * Storage condition at the temperature of 40 to 50°C: Up to 5 days * Storage condition at the temperature of -20 to 0°C: Up to 5 days (Humidity) Normal condition: 35 to 85%RH (without condensation) * Storage condition at the humidity of 85 to 95%RH: Up to 5 days (without condensation) * Storage condition at the humidity of 10 to 35%RH: Up to 5 days (without condensation)								
Belt Unit	Approx. 50,000 pages (2 pages/job)							
Waste Toner Box	Approx. 50,000 pages (5 pages/job)							

Specifications are subject to change without notice.

Model		DCP-L3551CDW			DCP-9030CDN	MFC-L3710CW		
Toner Cartridge	Starter Toner	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798			BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798		
	Standard Toner	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For LTN)	For NZ: BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For ASA)	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For US)	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798 (For EU)	For NZ: BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For OCE)
	High Capacity Toner	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798			BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For US and EU)	For NZ: BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For OCE)		
When printing A4/Letter size one-sided pages in accordance with ISO/IEC 19798 Shelf life: 2 years without opening (6 months after opening)								
Drum Unit	Life expectancy: Approximately 18,000 pages (1 page/job) The life expectancy varies according to the use condition. Shelf life: 2 years without opening (6 months after opening)							
The shelf life of toner cartridge and drum unit is guaranteed under the normal condition as below; (Temperature) Normal condition: 0 to 40°C * Storage condition at the temperature of 40 to 50°C: Up to 5 days * Storage condition at the temperature of -20 to 0°C: Up to 5 days (Humidity) Normal condition: 35 to 85%RH (without condensation) * Storage condition at the humidity of 85 to 95%RH: Up to 5 days (without condensation) * Storage condition at the humidity of 10 to 35%RH: Up to 5 days (without condensation)								
Belt Unit	Approx. 50,000 pages (2 pages/job)							
Waste Toner Box	Approx. 50,000 pages (5 pages/job)							

Specifications are subject to change without notice.

Model		MFC-L3730CDN	MFC-L3735CDN	MFC-9150CDN	MFC-L3750CDW		
Toner Cartridge	Starter Toner	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798		BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798		
	Standard Toner	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For US and LTN)	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798 (For EU)	For ARL: CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For ASA)
	High Capacity Toner	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798		BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For US, LTN and EU)	For ARL: BK: Approx. 2,500 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For ASA)	
When printing A4/Letter size one-sided pages in accordance with ISO/IEC 19798 Shelf life: 2 years without opening (6 months after opening)							
Drum Unit	Life expectancy: Approximately 18,000 pages (1 page/job) The life expectancy varies according to the use condition. Shelf life: 2 years without opening (6 months after opening)						
The shelf life of toner cartridge and drum unit is guaranteed under the normal condition as below; (Temperature) Normal condition: 0 to 40°C * Storage condition at the temperature of 40 to 50°C: Up to 5 days * Storage condition at the temperature of -20 to 0°C: Up to 5 days (Humidity) Normal condition: 35 to 85%RH (without condensation) * Storage condition at the humidity of 85 to 95%RH: Up to 5 days (without condensation) * Storage condition at the humidity of 10 to 35%RH: Up to 5 days (without condensation)							
Belt Unit	Approx. 50,000 pages (2 pages/job)						
Waste Toner Box	Approx. 50,000 pages (5 pages/job)						

Specifications are subject to change without notice.

Model		MFC-L3745CDW	MFC-L3770CDW				MFC-9350CDW
Toner Cartridge	Starter Toner	BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798				BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	
	Standard Toner	For ARL: CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For US)	For Eastern and Western Europe: BK: Approx. 1,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,000 pages in accordance with ISO/IEC 19798 For Russia: BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For EU)	For NZ: BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For OCE) For ARL: CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798 (For ASA)	BK: Approx. 1,400 pages in accordance with ISO/IEC 19798 CMY: Approx. 1,300 pages in accordance with ISO/IEC 19798
	High Capacity Toner	For ARL: BK: Approx. 2,500 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For US and EU)		For NZ: BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 For ARL: BK: Approx. 2,500 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For OCE)	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798 (For ASA)	BK: Approx. 3,000 pages in accordance with ISO/IEC 19798 CMY: Approx. 2,300 pages in accordance with ISO/IEC 19798

Specifications are subject to change without notice.

Model	MFC-L3745CDW	MFC-L3770CDW	MFC-9350CDW
When printing A4/Letter size one-sided pages in accordance with ISO/IEC 19798 Shelf life: 2 years without opening (6 months after opening)			
Drum Unit	Life expectancy: Approximately 18,000 pages (1 page/job) The life expectancy varies according to the use condition. Shelf life: 2 years without opening (6 months after opening)		
The shelf life of toner cartridge and drum unit is guaranteed under the normal condition as below; (Temperature) Normal condition: 0 to 40°C * Storage condition at the temperature of 40 to 50°C: Up to 5 days * Storage condition at the temperature of -20 to 0°C: Up to 5 days (Humidity) Normal condition: 35 to 85%RH (without condensation) * Storage condition at the humidity of 85 to 95%RH: Up to 5 days (without condensation) * Storage condition at the humidity of 10 to 35%RH: Up to 5 days (without condensation)			
Belt Unit	Approx. 50,000 pages (2 pages/job)		
Waste Toner Box	Approx. 50,000 pages (5 pages/job)		

Specifications are subject to change without notice.

5. MEDIA SPECIFICATIONS

Model		HL- L3290CDW	DCP- L3510CDW	DCP- L3517CDW	DCP- L3550CDW	DCP- L3551CDW	DCP- 9030CDN	MFC- L3710CW
Media Types	Standard Tray	Plain Paper, Thin Paper, Thick Paper, Recycled Paper						
	MP Tray	N/A						
	Manual Feed Slot	Plain Paper, Thin Paper, Thick Paper, Recycled Paper, Bond, Label, Envelope, Env. Thin, Env.Thick, Glossy Paper						
	Optional Tray	N/A						
	Duplex	Plain Paper, Thin Paper, Thick Paper, Recycled Paper						N/A
	ADF	N/A			Plain Paper, Thin Paper, Recycled Paper			
Paper Input	Optional Tray	N/A						
	Optional Tray - Tower Feed Type	N/A						
	ADF	N/A			50 sheets			
Media Weight	Standard Tray	60 to 163 g/m ² (16 to 43 lb) Notes: half speed and straight paper output with more than 163 g/m ² (43 lb)						
	MP Tray	N/A						
	Manual Feed Slot	60 to 163 g/m ² (16 to 43 lb)						
	Optional Tray	N/A						
	Duplex	60 to 163 g/m ² (16 to 43 lb)						N/A
	ADF	N/A			60 to 105 g/m ² (16 to 28 lb)			

Specifications are subject to change without notice.

Model		HL-L3290CDW	DCP-L3510CDW	DCP-L3517CDW	DCP-L3550CDW	DCP-L3551CDW	DCP-9030CDN	MFC-L3710CW	
Media Size	Standard Tray	A4, Letter, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal	A4, Letter, A5, A5 (Long Edge), A6, Executive		A4, Letter, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal (For LTN)	A4, Letter, B5 (JIS), A5, A5 (Long Edge), A6, Executive, 16K (195 x 270 mm)	A4, Letter, A5, A5 (Long Edge), A6, Executive (For US)	A4, Letter, A5, A5 (Long Edge), A6, Executive (For EU and OCE)	
	MP Tray	N/A							
	Manual Feed Slot	Width 76.2 to 216 mm, Length 116 to 355.6 mm (Width 3.0 to 8.5 inch, Length 4.57 to 14 inch) Envelope; COM-10, DL, C5, Monarch							
	Optional Tray	N/A							
	Duplex	Letter, Legal, Folio, Mexico Legal, India Legal	A4			Letter, Legal, Folio, Mexico Legal, India Legal (For LTN)	A4	N/A	
	ADF	N/A			Width 105 to 215.9 mm, Length 147.3 to 355.6 mm (Width 4.1 to 8.5 inch, Length 5.8 to 14.0 inch)				

Specifications are subject to change without notice.

Model		MFC- L3730CDN	MFC- L3735CDN	MFC- 9150CDN	MFC- L3750CDW	MFC- L3745CDW	MFC- L3770CDW	MFC- 9350CDW	
Media Types	Standard Tray	Plain Paper, Thin Paper, Thick Paper, Recycled Paper							
	MP Tray	N/A					Plain Paper, Thin Paper, Thick Paper, Recycled Paper, Bond, Label, Envelope, Env. Thin, Env.Thick, Glossy Paper (only a single sheet)		
	Manual Feed Slot	Plain Paper, Thin Paper, Thick Paper, Recycled Paper, Bond, Label, Envelope, Env. Thin, Env.Thick, Glossy Paper					N/A		
	Optional Tray	N/A							
	Duplex	Plain Paper, Thin Paper, Thick Paper, Recycled Paper							
	ADF	Plain Paper, Thin Paper, Recycled Paper							
	Paper Input	Optional Tray	N/A						
Optional Tray - Tower Feed Type		N/A							
ADF		50 sheets							
Media Weight	Standard Tray	60 to 163 g/m ² (16 to 43 lb) Notes: half speed and straight paper output with more than 163 g/m ² (43 lb)							
	MP Tray	N/A					60 to 163 g/m ² (16 to 43 lb)		
	Manual Feed Slot	60 to 163 g/m ² (16 to 43 lb)					N/A		
	Optional Tray	N/A							
	Duplex	60 to 163 g/m ² (16 to 43 lb)							
	ADF	60 to 105 g/m ² (16 to 28 lb)							

Specifications are subject to change without notice.

Model		MFC-L3730CDN	MFC-L3735CDN	MFC-9150CDN	MFC-L3750CDW	MFC-L3745CDW	MFC-L3770CDW	MFC-9350CDW	
Media Size	Standard Tray	A4, Letter, A5, A5 (Long Edge), A6, Executive	A4, Letter, B5 (JIS)*, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal *B5 (JIS) is only for TWN.	A4, Letter, B5 (JIS), A5, A5 (Long Edge), A6, Executive, 16K (195 x 270 mm)	A4, Letter, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal (For US and LTN) A4, Letter, A5, A5 (Long Edge), A6, Executive (For EU and OCE) A4, Letter, B5 (JIS)*, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal *B5 (JIS) is only for TWN. (For ASA)	A4, Letter, A5, A5 (Long Edge), A6, Executive	A4, Letter, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal (For US) A4, Letter, A5, A5 (Long Edge), A6, Executive (For EU and OCE) A4, Letter, B5 (JIS)*, A5, A5 (Long Edge), A6, Executive, Legal, Folio, Mexico Legal, India Legal *B5 (JIS) is only for TWN. (For ASA)	A4, Letter, B5 (JIS), A5, A5 (Long Edge), A6, Executive, 16K (195 x 270 mm)	
	MP Tray	N/A					Width 76.2 to 216 mm, Length 116 to 355.6 mm (Width 3.0 to 8.5 inch, Length 4.57 to 14 inch) Envelope; COM-10, DL, C5, Monarch		
	Manual Feed Slot	Width 76.2 to 216 mm, Length 116 to 355.6 mm (Width 3.0 to 8.5 inch, Length 4.57 to 14 inch) Envelope; COM-10, DL, C5, Monarch					N/A		
	Optional Tray	N/A							
	Duplex	A4				Letter, Legal, Folio, Mexico Legal, India Legal (For US and LTN) A4 (For EU, OCE and ASA)	A4	Letter, Legal, Folio, Mexico Legal, India Legal (For US)	A4
	ADF	Width 105 to 215.9 mm, Length 147.3 to 355.6 mm (Width 4.1 to 8.5 inch, Length 5.8 to 14.0 inch)							

Specifications are subject to change without notice.

6. FAX (ONLY FOR THE MODELS WITH FAX FUNCTION)

Model	HL-L3290CDW	DCP-L3510CDW	DCP-L3517CDW	DCP-L3550CDW	DCP-L3551CDW	DCP-9030CDN	MFC-L3710CW
Modem Speed	N/A						33,600 bps (Fax)
Transmission Speed	N/A						Approx. 2.5 sec. (ITU-T Test Chart, Std Resolution, JBIG)
ITU-T Group	N/A						Super G3
Color FAX/ Document (Send/Receive)	N/A						
Color FAX/ Memory (Send/Receive)	N/A						
Internet FAX (ITU T.37 Simple Mode)	N/A						Yes (by SST)
Internet FAX (ITU T.38)	N/A						

Model	MFC-L3730CDN	MFC-L3735CDN	MFC-9150CDN	MFC-L3750CDW	MFC-L3745CDW	MFC-L3770CDW	MFC-9350CDW
Modem Speed	33,600 bps (Fax)						
Transmission Speed	Approx. 2.5 sec. (ITU-T Test Chart, Std Resolution, JBIG)						
ITU-T Group	Super G3						
Color FAX/ Document (Send/Receive)	N/A						
Color FAX/ Memory (Send/Receive)	N/A						
Internet FAX (ITU T.37 Simple Mode)	Yes (by SST)						
Internet FAX (ITU T.38)	N/A						

Specifications are subject to change without notice.

7. COPY

Model		HL- L3290CDW	DCP- L3510CDW	DCP- L3517CDW	DCP- L3550CDW	DCP- L3551CDW	DCP- 9030CDN	MFC- L3710CW
Copy Speed (A4/ Letter)	Mono Copy Speed (A4/Letter)	Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)				Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)
	Full Color Copy Speed (A4/Letter)	Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)				Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)
First Copy Out Time	From Ready Mode and Paper Tray	Less than 15/16 secs at 73.4F (23°C) / 115V (Mono/Color)	Less than 17.5/17.5 secs at 73.4F (23°C) / 230V (Mono/Color)				Less than 15/16 secs at 73.4F (23°C) / 115V (Mono/Color)	Less than 17.5/17.5 secs at 73.4F (23°C) / 230V (Mono/Color)
	From Sleep Mode and Paper Tray	Less than 31/32 secs at 73.4F (23°C) / 115V (Mono/Color)	Less than 34/34 secs at 73.4F (23°C) / 230V (Mono/Color)				Less than 31/32 secs at 73.4F (23°C) / 115V (Mono/Color)	Less than 34/34 secs at 73.4F (23°C) / 230V (Mono/Color)
Print Resolution (dpi)		600 x 600 dpi						
Auto Duplex Copy		N/A						

Model		MFC- L3730CDN	MFC- L3735CDN	MFC- 9150CDN	MFC- L3750CDW	MFC- L3745CDW	MFC- L3770CDW	MFC- 9350CDW
Copy Speed (A4/ Letter)	Mono Copy Speed (A4/Letter)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)	Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)					
	Full Color Copy Speed (A4/Letter)	Up to 18/19 cpm (Quiet mode: Up to 12/12 cpm)	Up to 24/25 cpm (Quiet mode: Up to 12/12 cpm)					
First Copy Out Time	From Ready Mode and Paper Tray	Less than 17.5/17.5 secs at 73.4F (23°C) / 230V (Mono/Color)	Less than 15/16 secs at 73.4F (23°C) / 115V (Mono/Color)					
	From Sleep Mode and Paper Tray	Less than 34/34 secs at 73.4F (23°C) / 230V (Mono/Color)	Less than 31/32 secs at 73.4F (23°C) / 115V (Mono/Color)					
Print Resolution (dpi)		600 x 600 dpi						
Auto Duplex Copy		N/A					Yes	

Specifications are subject to change without notice.

8. SCANNER

Model		HL- L3290CDW	DCP- L3510CDW	DCP- L3517CDW	DCP- L3550CDW	DCP- L3551CDW	DCP- 9030CDN	MFC- L3710CW
Resolution (Optical)	FB	Max. 1,200 x 2,400 dpi						
	ADF	N/A			Max. 600 x 600 dpi			
Resolution (Interpolated)		Max. 19,200 x 19,200 dpi						
Scanning Speed (Mono/ Color) Multiple Sheets In Accordance with ISO/ IEC17991	Scanning Speed (Mono/ Color) Multiple Sheets	N/A			27/21 ipm (A4) 29/22 ipm (LTR) In accordance with ISO/IEC17991			
	Duplex Scanning Speed (Mono/ Color) Multiple sheets	N/A						

Model		MFC- L3730CDN	MFC- L3735CDN	MFC- 9150CDN	MFC- L3750CDW	MFC- L3745CDW	MFC- L3770CDW	MFC- 9350CDW
Resolution (Optical)	FB	Max. 1,200 x 2,400 dpi						
	ADF	Max. 600 x 600 dpi						
Resolution (Interpolated)		Max. 19,200 x 19,200 dpi						
Scanning Speed (Mono/ Color) Multiple Sheets In Accordance with ISO/ IEC17991	Scanning Speed (Mono/ Color) Multiple Sheets	27/21 ipm (A4) 29/22 ipm (LTR) In accordance with ISO/IEC17991						
	Duplex Scanning Speed (Mono/ Color) Multiple sheets	N/A					54/32 ipm (A4) 58/34 ipm (LTR) In accordance with ISO/IEC17991	

Specifications are subject to change without notice.

CHAPTER 2 ERROR INDICATION AND TROUBLESHOOTING


1. INTRODUCTION

Troubleshooting is the countermeasure procedures that the service personnel should follow if an error or malfunction occurs with the machine. It is impossible to anticipate all of the possible troubles which may occur in future and determine the troubleshooting procedures, so this chapter covers some sample troubles. However, those samples will help the service personnel pinpoint and repair other defective elements.

1.1 Precautions

Be sure to observe and follow all the precautions to prevent any secondary problems from happening during troubleshooting.

- (1) Always turn OFF the power and unplug the power cable before removing any covers or PCBs, adjusting the machine and so on. If you need to take voltage measurements with the power switched on, take the greatest of care not to receive an electric shock.
- (2) When connecting or disconnecting cable connectors, make sure that you hold the connector body and not the cables.
- (3) Static electricity charged in your body may damage electronic parts. Before handling the PCBs, touch a metal portion of the machine to discharge static electricity charged in your body. When transporting PCBs, be sure to wrap them in conductive sheets. When replacing the PCBs, put on a grounding wrist band and perform the job on a antistatic mat. Also take care not to touch the conductor sections on the flat cables.
- (4) Follow the warning by all means.

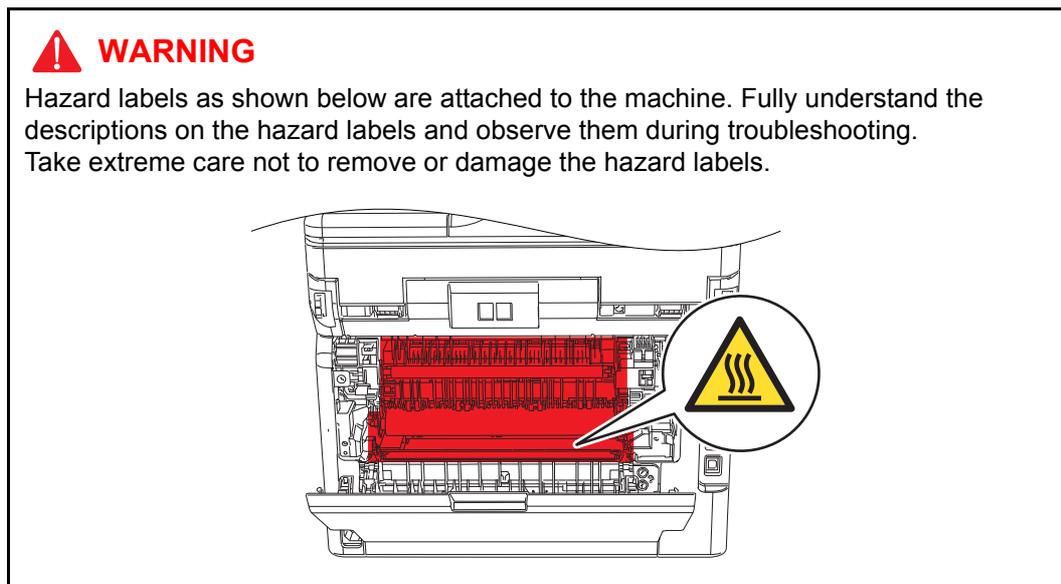

⚠ WARNING

DO NOT use any flammable spray or flammable solvent such as alcohol, benzene, or thinner in or around the machine. Otherwise a fire or electric shock may result.



- (5) Check again that the portions and parts repaired or removed during the repair work function properly when the repair is completed.

A certain interface or function could be set to invalid to serve the needs of customers. Ask sales representative if this is the case before performing the check.

1.2 Checks before Commencing Troubleshooting

Check the following items before attempting to repair the machine.

■ Operating environment

- (1) The machine is placed on a flat, stable surface.
- (2) The machine is used in a clean environment where the temperature is between 10 °C (50 °F) and 32 °C (89.6 °F) and the relative humidity is maintained between 20 % and 80 %.
- (3) Ensure the machine is not exposed to direct sunlight, excessive heat, moisture, or dust.
- (4) Keep the machine horizontal when you carry it. To prevent injuries when moving or lifting this machine, make sure to use at least two people.

■ Power supply

- (1) The AC input power supply described on the rating plate of the machine should be within ± 10 % of the rated voltage.
- (2) The AC input power supply is within the regulated value.
- (3) The cables and harnesses are connected correctly.
- (4) The fuses are not blown.

■ Paper

- (1) A recommended type of paper is being used.
- (2) The paper is not damp.
- (3) The paper is not short-grained paper or acid paper.

■ Consumable parts

- (1) The drum unit (including the toner cartridge) is installed correctly.
- (2) The belt unit and the waste toner box are installed correctly.

■ Others

- (1) Condensation

When the machine is moved from a cold place into a warm room, condensation may occur inside the machine, causing various problems as listed below.

- Condensation on the surface of optical devices such as the LED ASSY, lens, reflecting mirror, and protection glass, etc., may cause light print image.
- If the exposure drum is cold, the electrical resistance of the photosensitive layer is increased, making it impossible to obtain the correct contrast when printing.
- Condensation on the charge unit may cause corona charge leakage.
- Condensation on the plate and separation pad ASSY may cause paper feed problems.

If condensation has occurred, leave the machine for at least two hours to allow it to reach room temperature.

- (2) Low temperature

The motor may not drive normally under the low temperature environment. This is due to there being too much load to drive each unit. In this case, increase the room temperature.

■ Cleaning

Use a soft dry lint-free cloth.

WARNING

DO NOT use any flammable spray or flammable solvent such as alcohol, benzene, or thinner to clean the machine. **DO NOT** use these articles near the machine.



2. OVERVIEW

2.1 Cross-section Drawing

2.1.1 Printer part

■ Manual feed

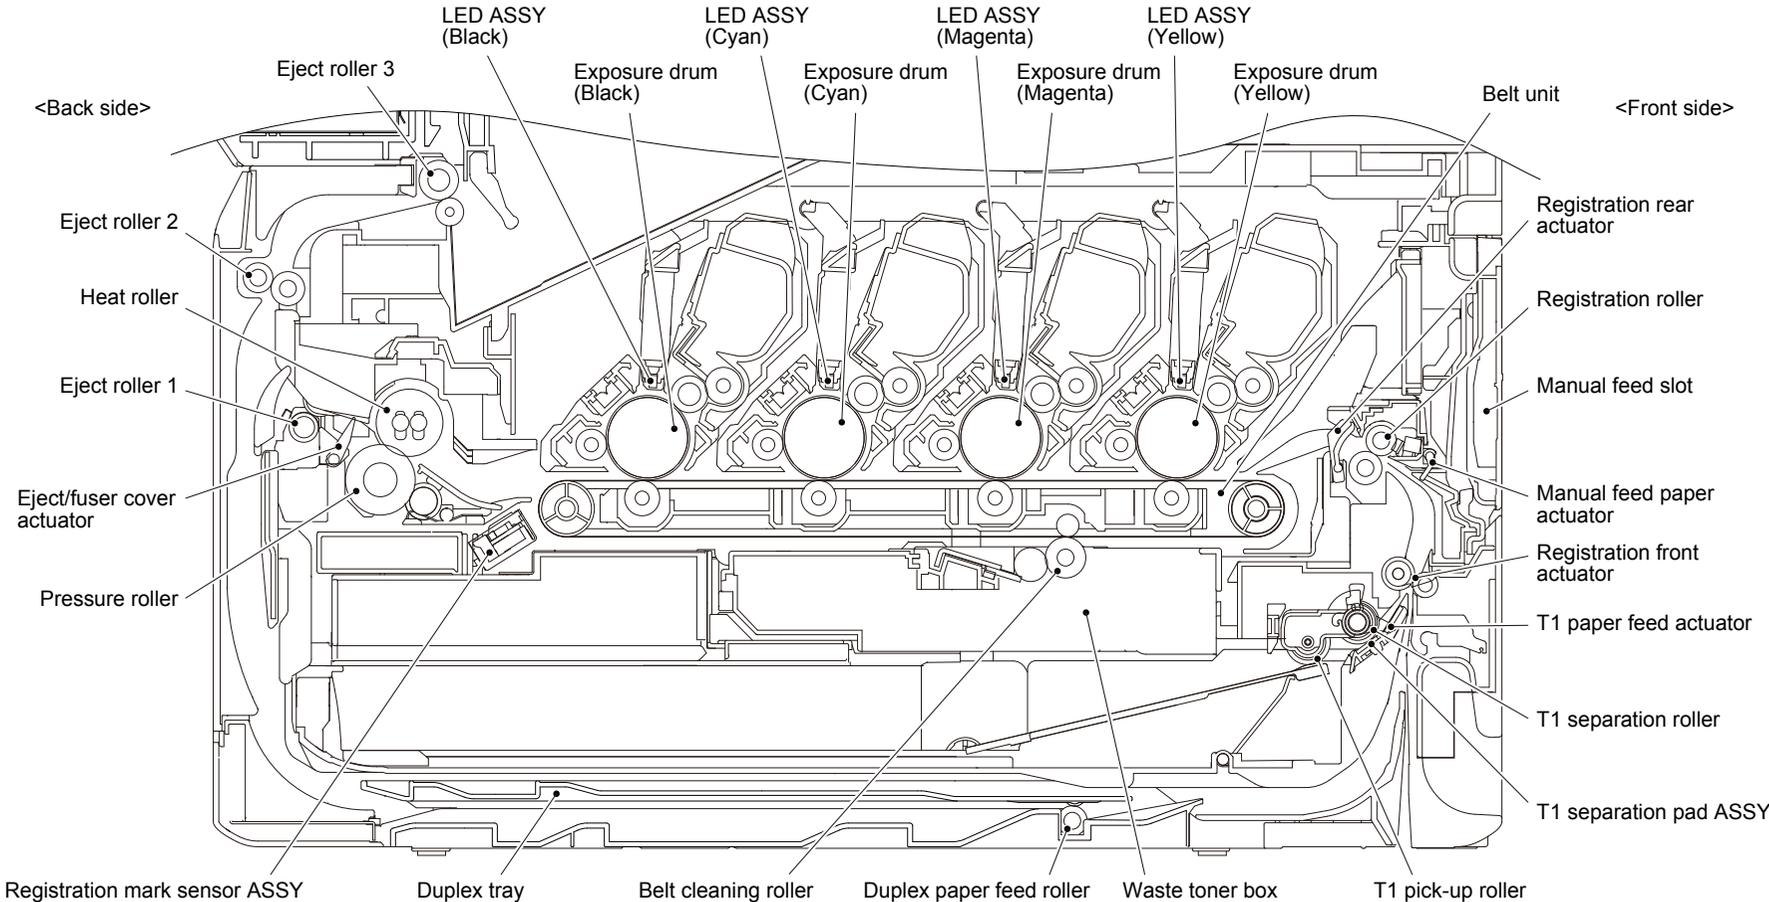


Fig. 2-1

■ MP

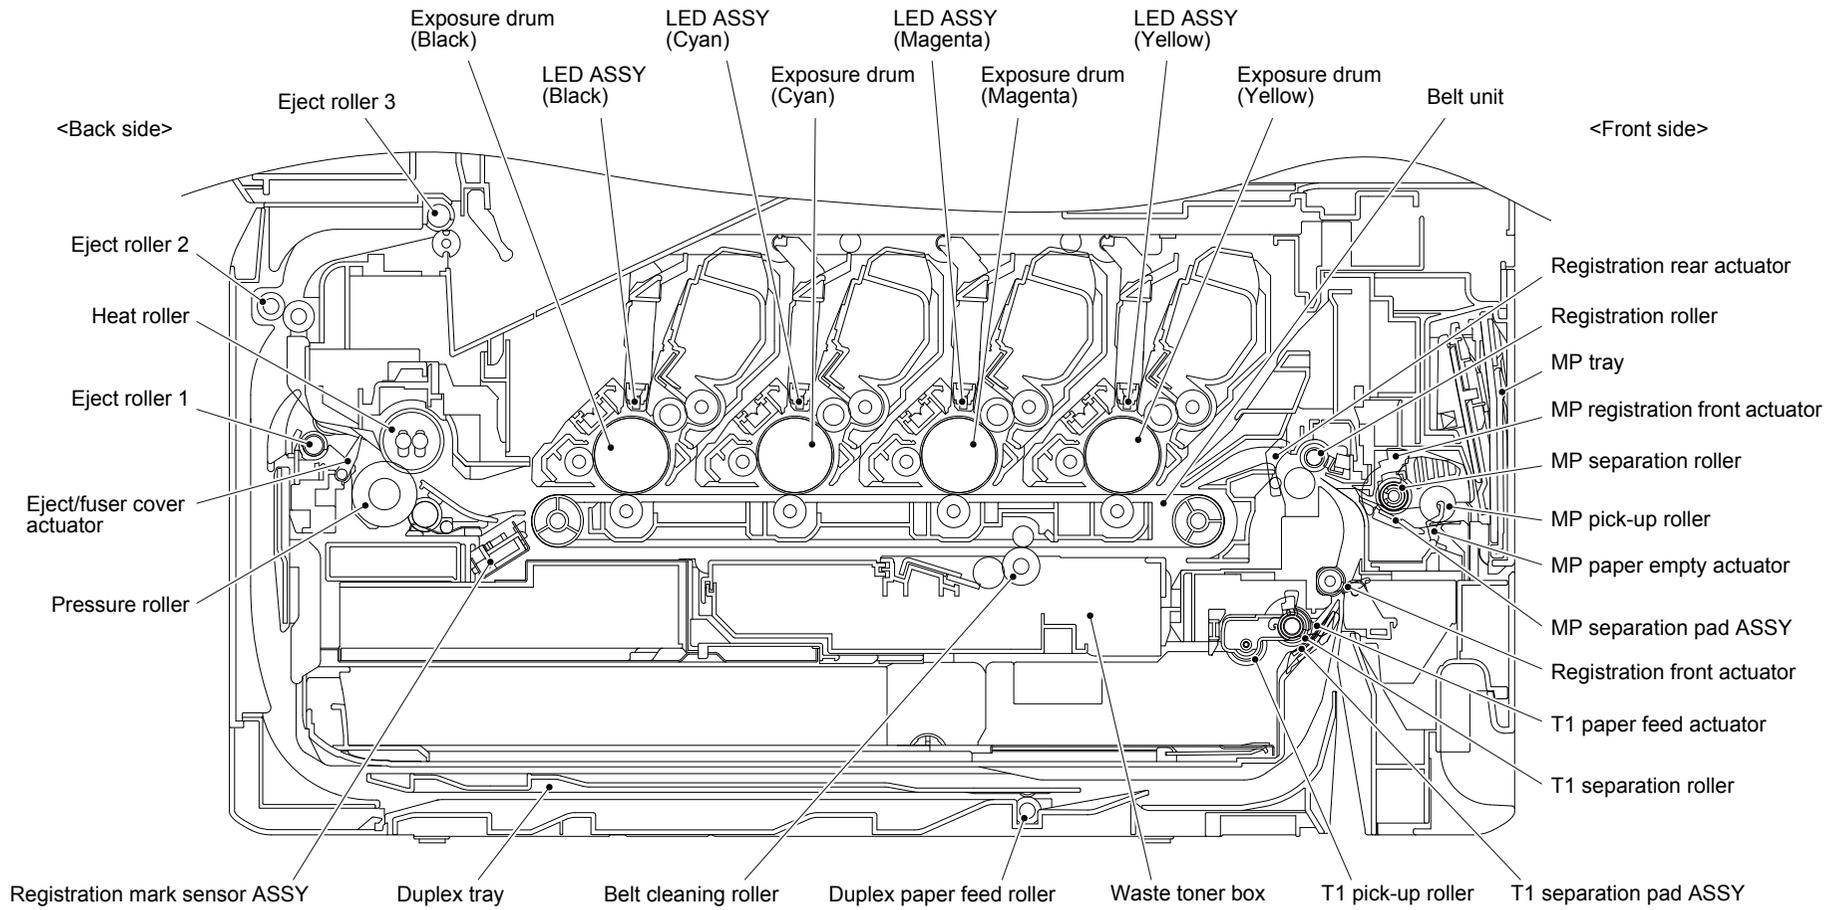


Fig. 2-2

2.1.2 Scanner part

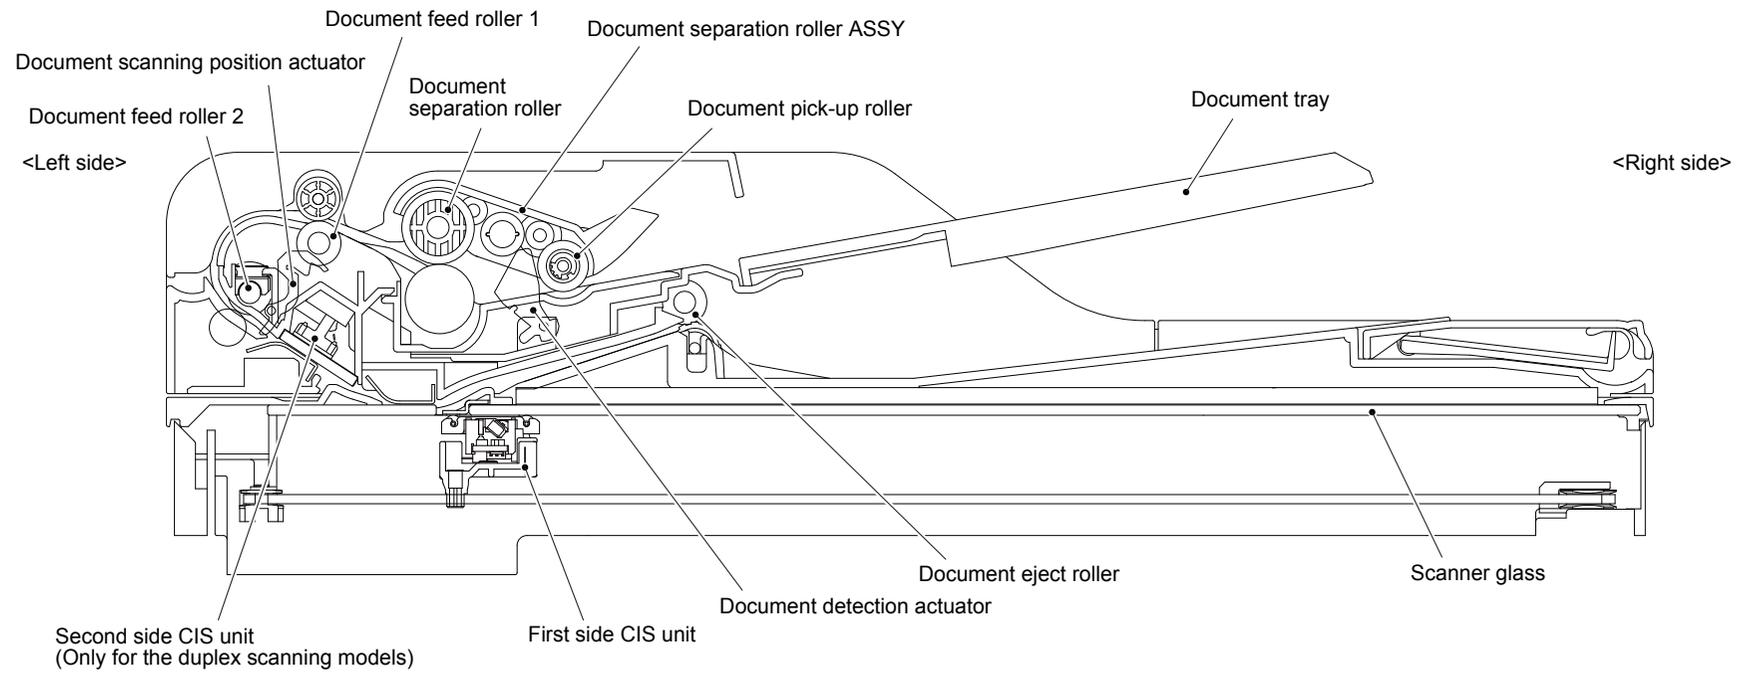


Fig. 2-3

2.2 Paper Feeding

2.2.1 Printer part

■ Manual feed

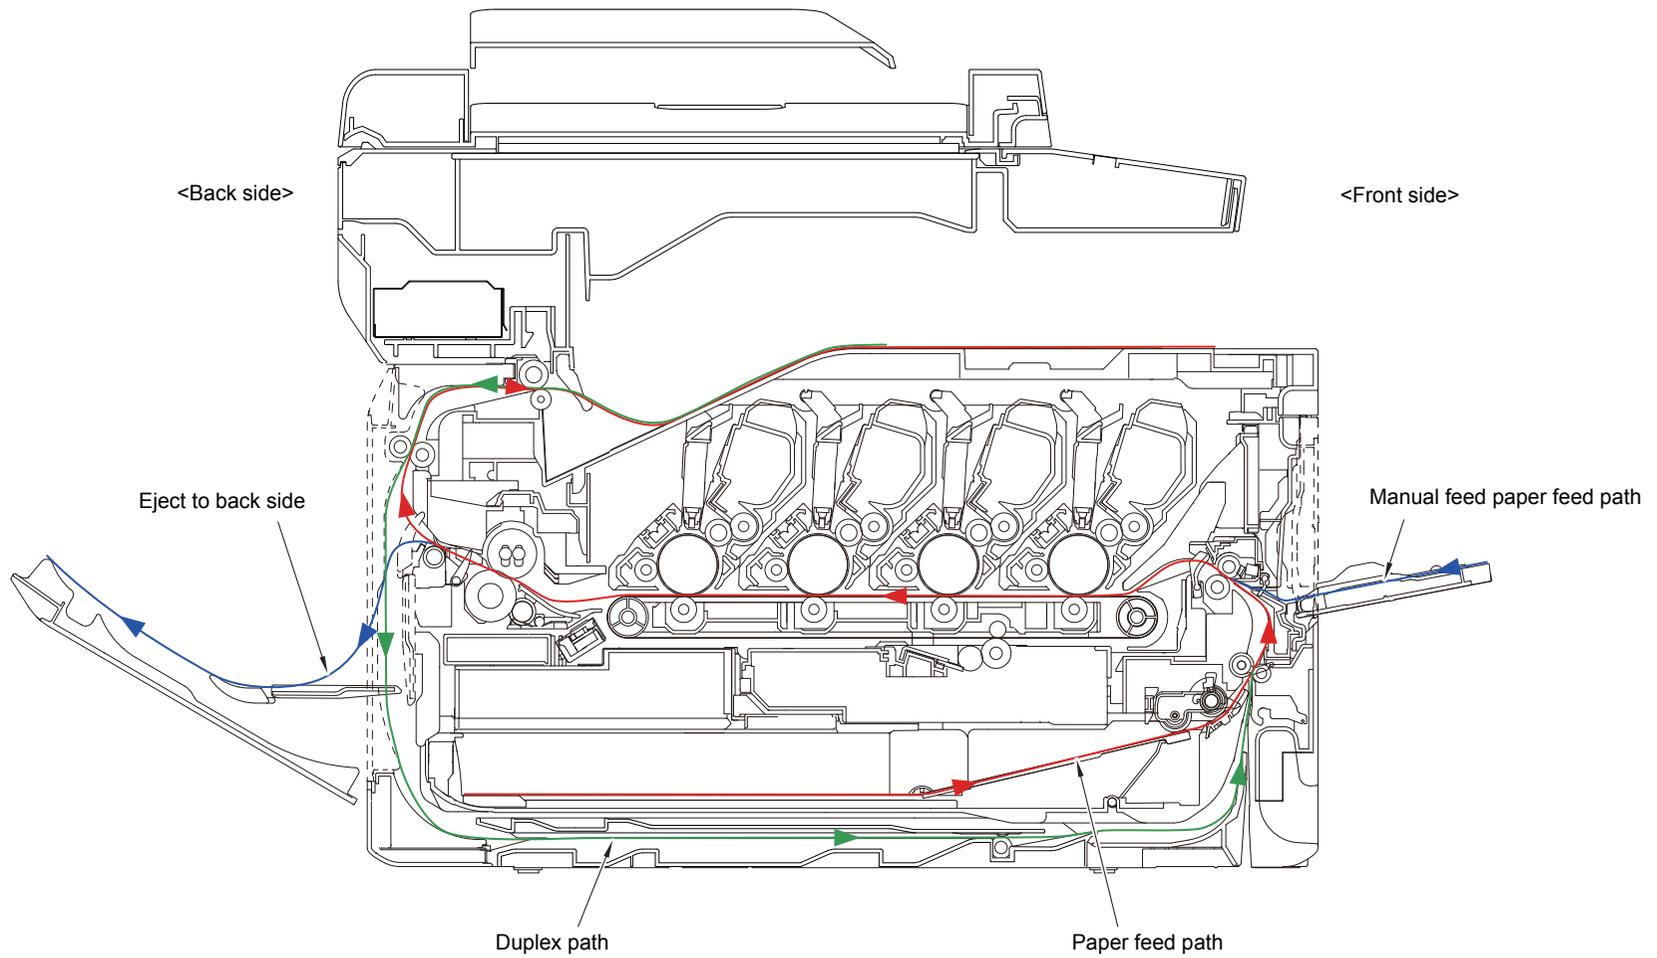


Fig. 2-4

■ MP

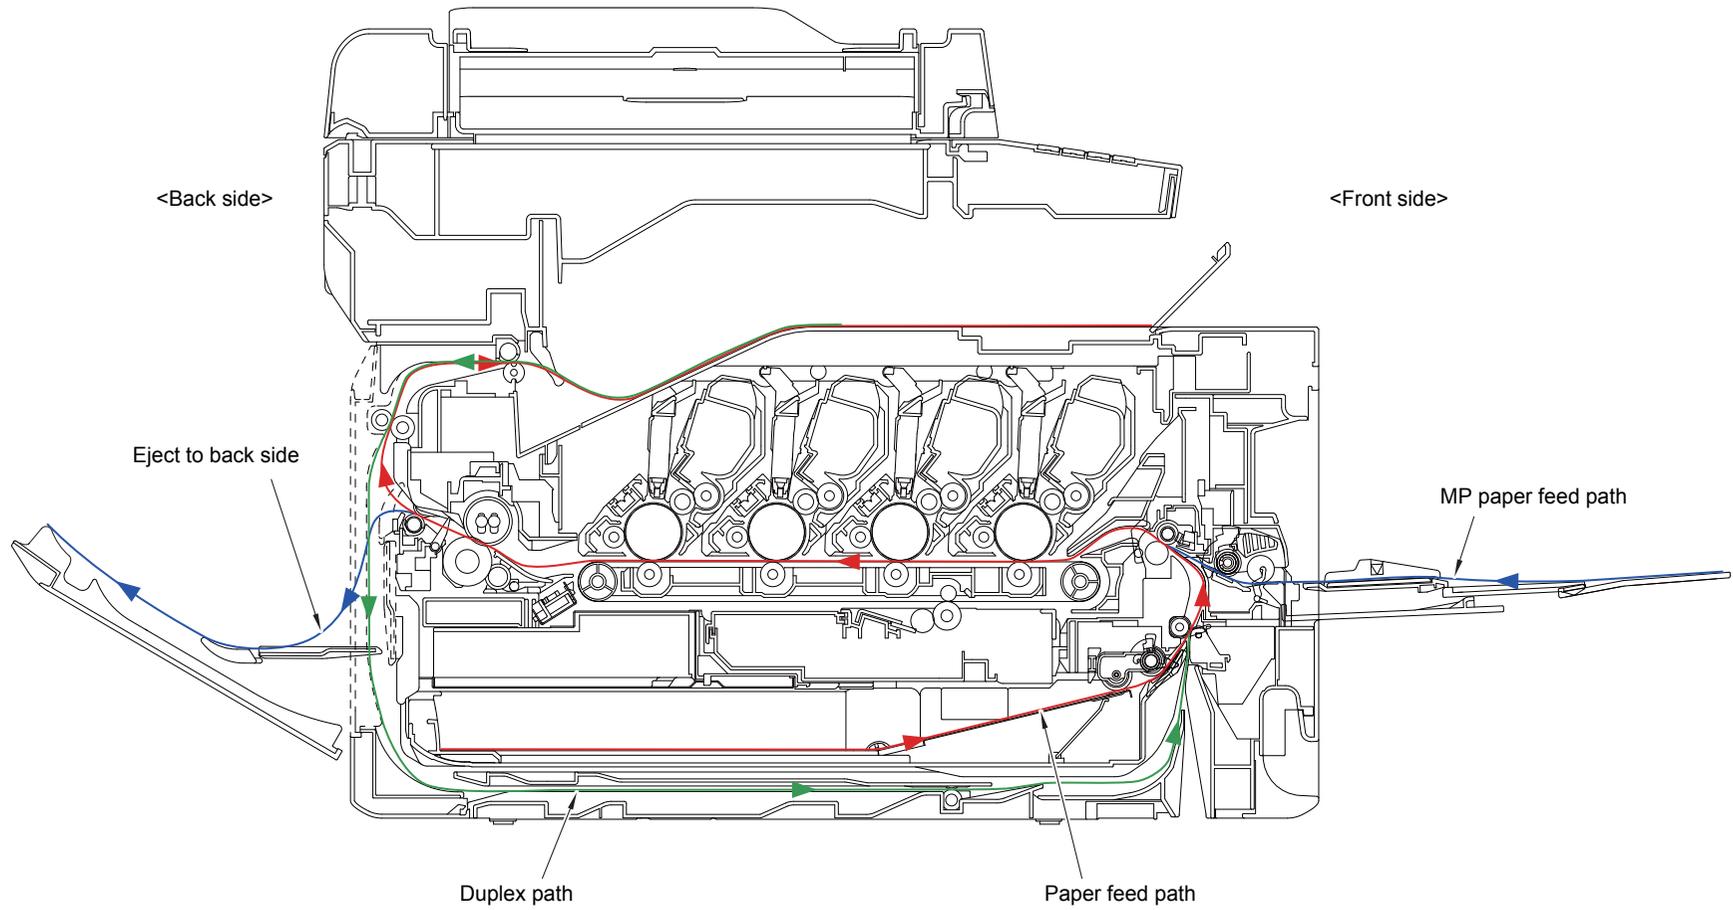


Fig. 2-5

2.2.2 Scanner part

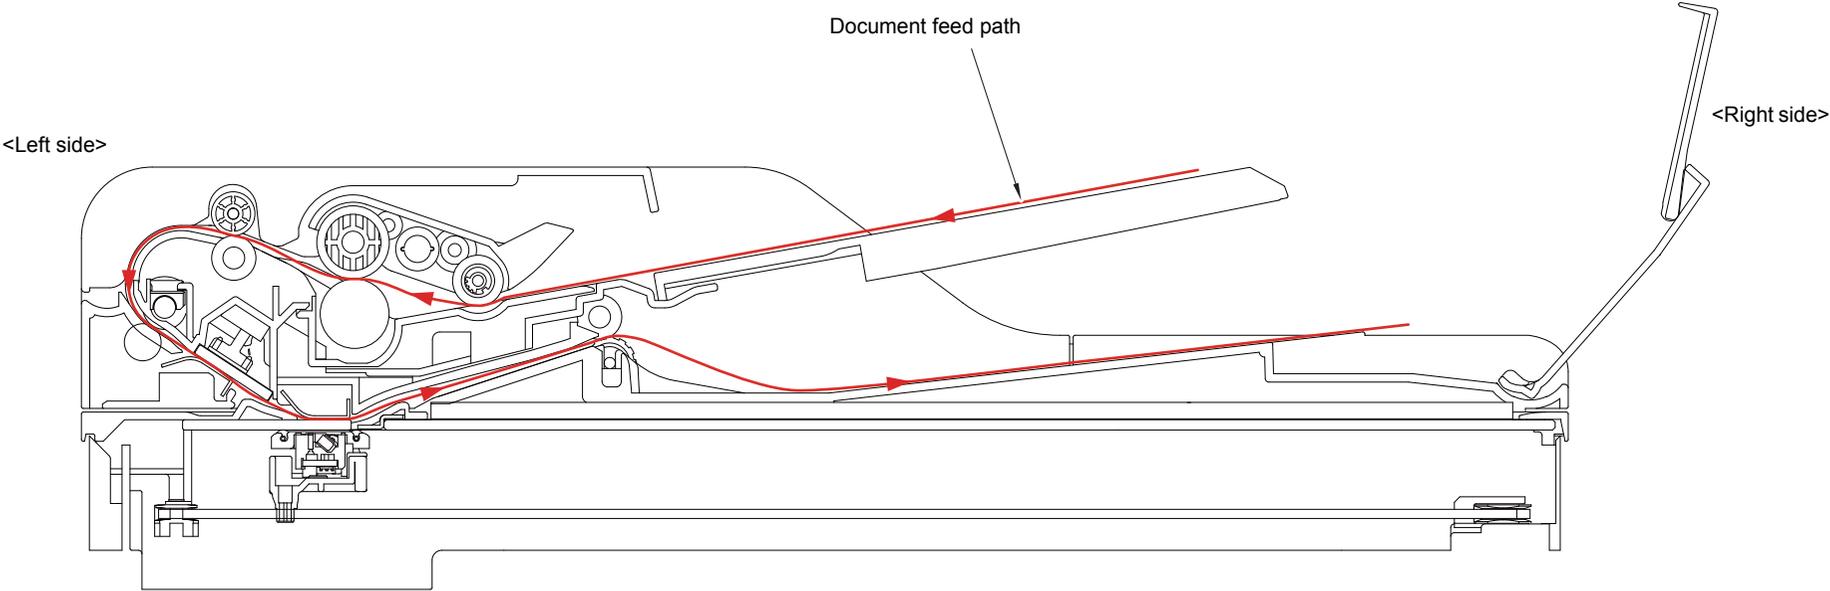


Fig. 2-6

2.3 Operation of Each Part and Location of Parts

Part name	Operation
T1 separation roller, T1 separation pad ASSY	Separates paper fed from the T1 into single sheets.
T1 paper feed actuator (T1 paper feed sensor)	Detects the T1 (open / closed). Detects paper jams in the T1. Determines whether paper is fed from the T1.
Registration front actuator (Registration front sensor)	Detects the front edge of the paper to control the registration roller drive. Detects paper jams in the front section of the machine. Determines whether paper is fed from the T1.
Registration roller	Corrects the paper alignment when the paper makes contact with the stopped registration roller. After the correction, it rotates to feed the paper to the belt unit.
Registration rear actuator (Registration rear sensor)	Detects paper pass and adjusts the writing start position for the paper. Detects paper jams in the front or center section of the machine. Detects the rear edge of the paper to determine the paper size.
Belt unit	Feeds the paper to the drum unit and transfers toner on the paper.
Heat roller, Pressure roller	Fuses the toner transferred to paper by heat and pressure, and feeds paper to the eject roller 1.
Eject actuator (Eject sensor)/ Fuser cover actuator (Fuser cover sensor)	Detects whether or not paper is ejected from the fuser unit. In the case of the 2-sided printing, detects the rear edge of paper and adjusts the timing of the eject roller 2 and 3 switching. Detects paper jam in the rear section of the machine. Detects open fuser cover.
Eject roller 1	Feeds the paper ejected from the fuser unit to eject roller 2.
Eject roller 2	Feeds the paper to the eject roller 3. In the case of the 2-sided printing, after the front of the sheet is printed and the paper is fed to the eject roller 3 up to a certain point, the eject roller 2 rotates conversely and feeds the paper fed from the eject roller 3 to the duplex tray.
Eject roller 3	Ejects the paper to the face-down output tray. In the case of the 2-sided printing, after the front of the sheet is printed and the paper is fed up to a certain point, the eject roller 3 rotates conversely, and the paper is fed to the eject roller 2.
Duplex paper feed roller	Feeds the paper passing through the duplex tray to the registration roller
Belt cleaning roller	Feeds the collected waste toner to the belt unit.
Top cover sensor	Detects open / closed top cover.
Back cover sensor	Detects open / closed back cover.
MP paper pick-up roller	Feeds paper from the MP tray to the MP separation roller.
MP separation roller, MP separation pad	Separates the paper fed from the MP tray into single sheets.
MP paper empty actuator (MP paper empty sensor)	Detects the paper in the MP tray. Detects paper jams in the MP tray.

Part name	Operation
MP registration front actuator (MP registration front sensor)	Detects paper jams in MP part.
Document pick-up roller	Feeds document from the document tray.
Document separation roller, ADF separation pad	Separates the document fed from the document tray into single sheets.
Document detection actuator (Document detection sensor)	Detects whether a document is set in the ADF.
Document scanning position actuator (Document scanning position sensor)	Detects the document scanning start position. Detects a document jam in the ADF.
Document eject roller	Feeds the document to the output tray.
ADF cover sensor	Detects open / closed ADF cover.
Registration mark sensor L/R	Checks a phase of each color.
Develop release sensor	Detects the develop roller is separated from the exposure drum.
New toner sensor x4 (Inside of the high-voltage power supply PCB)	When exchange to the new toner cartridge, detects the kinds of toner and add 1 to the reset of the developing bias and to the exchange count.
Toner sensor x4 (Inside of the high-voltage power supply PCB)	Detects the toner cartridge is set.
Waste toner sensor	Detects a certain amount of waste toner in the waste toner box.
External temperature/humidity sensor	Detects external temperature and humidity around the machine.
T1 pick-up clutch	Drives the T1 pick-up roller at the timing of paper feeding.
Registration clutch	Controls the activation of the registration roller for the paper alignment adjustment.
Develop release clutch	Controls the disengagement of the develop roller (all colors).
Develop release clutch K	Controls the rotation of the develop roller.
MP solenoid	Presses the MP paper pick-up roller against the paper when feeding from the MP tray.

■ Location of sensors and clutches

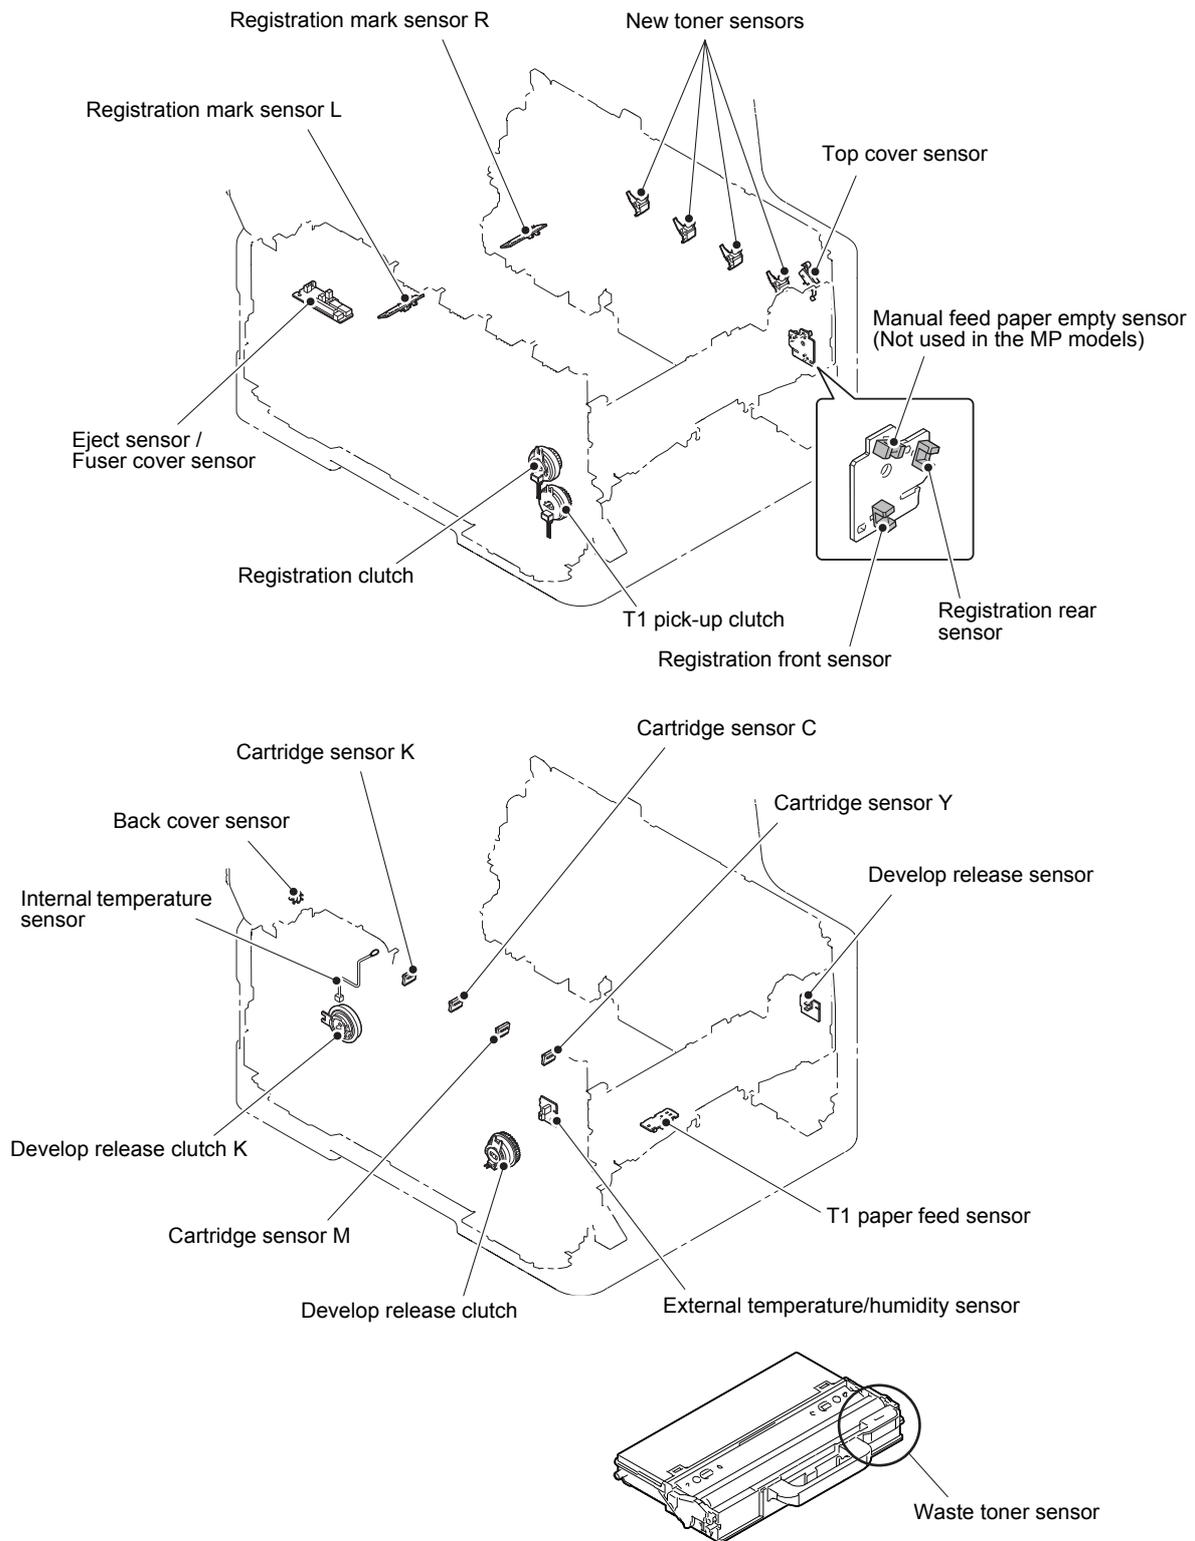


Fig. 2-7

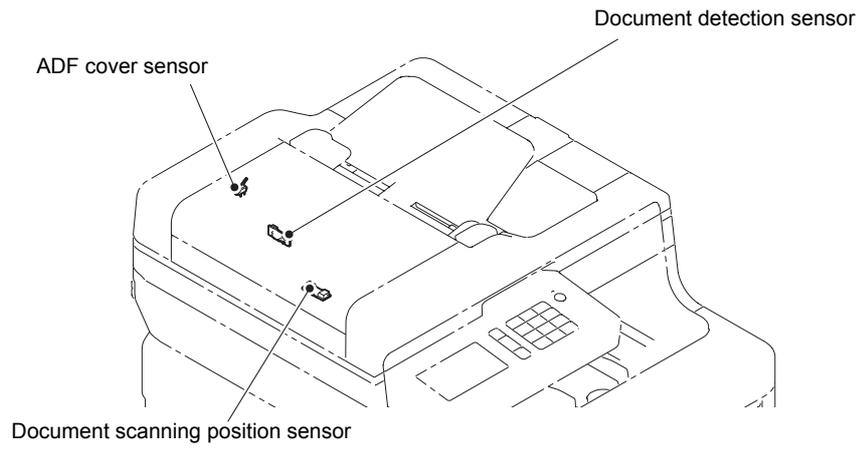


Fig. 2-8

2.4 Block Diagram

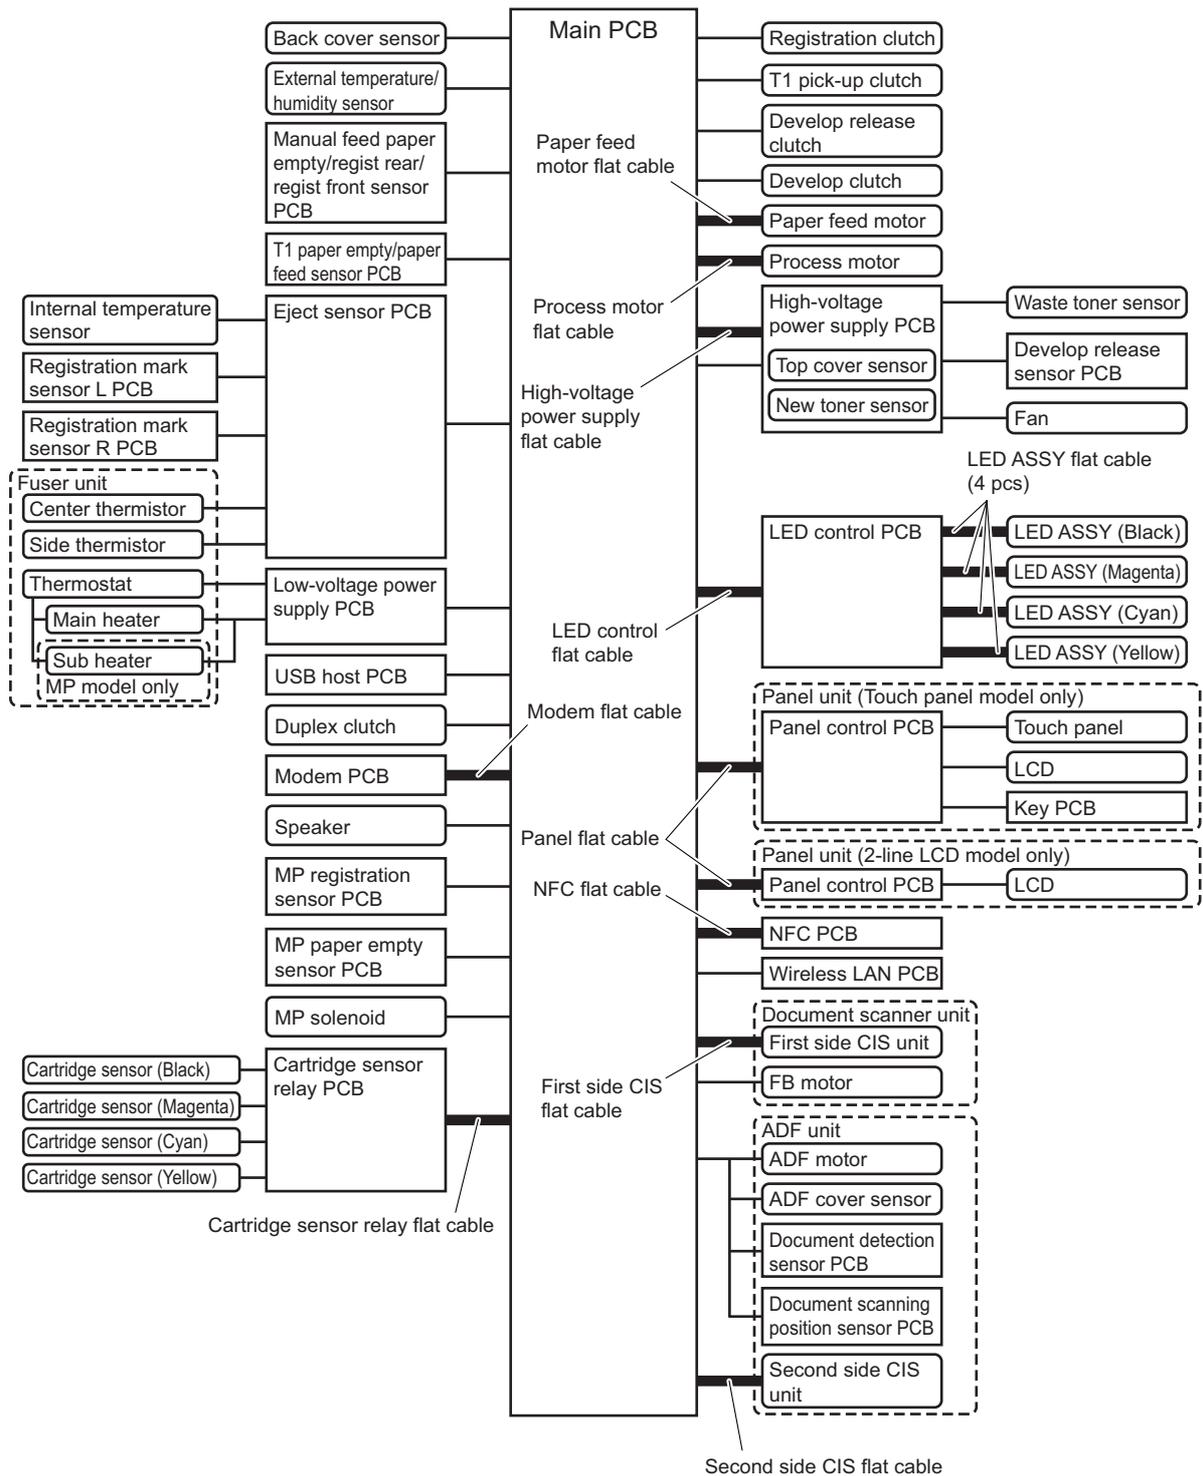


Fig. 2-9

2.5 Main Components

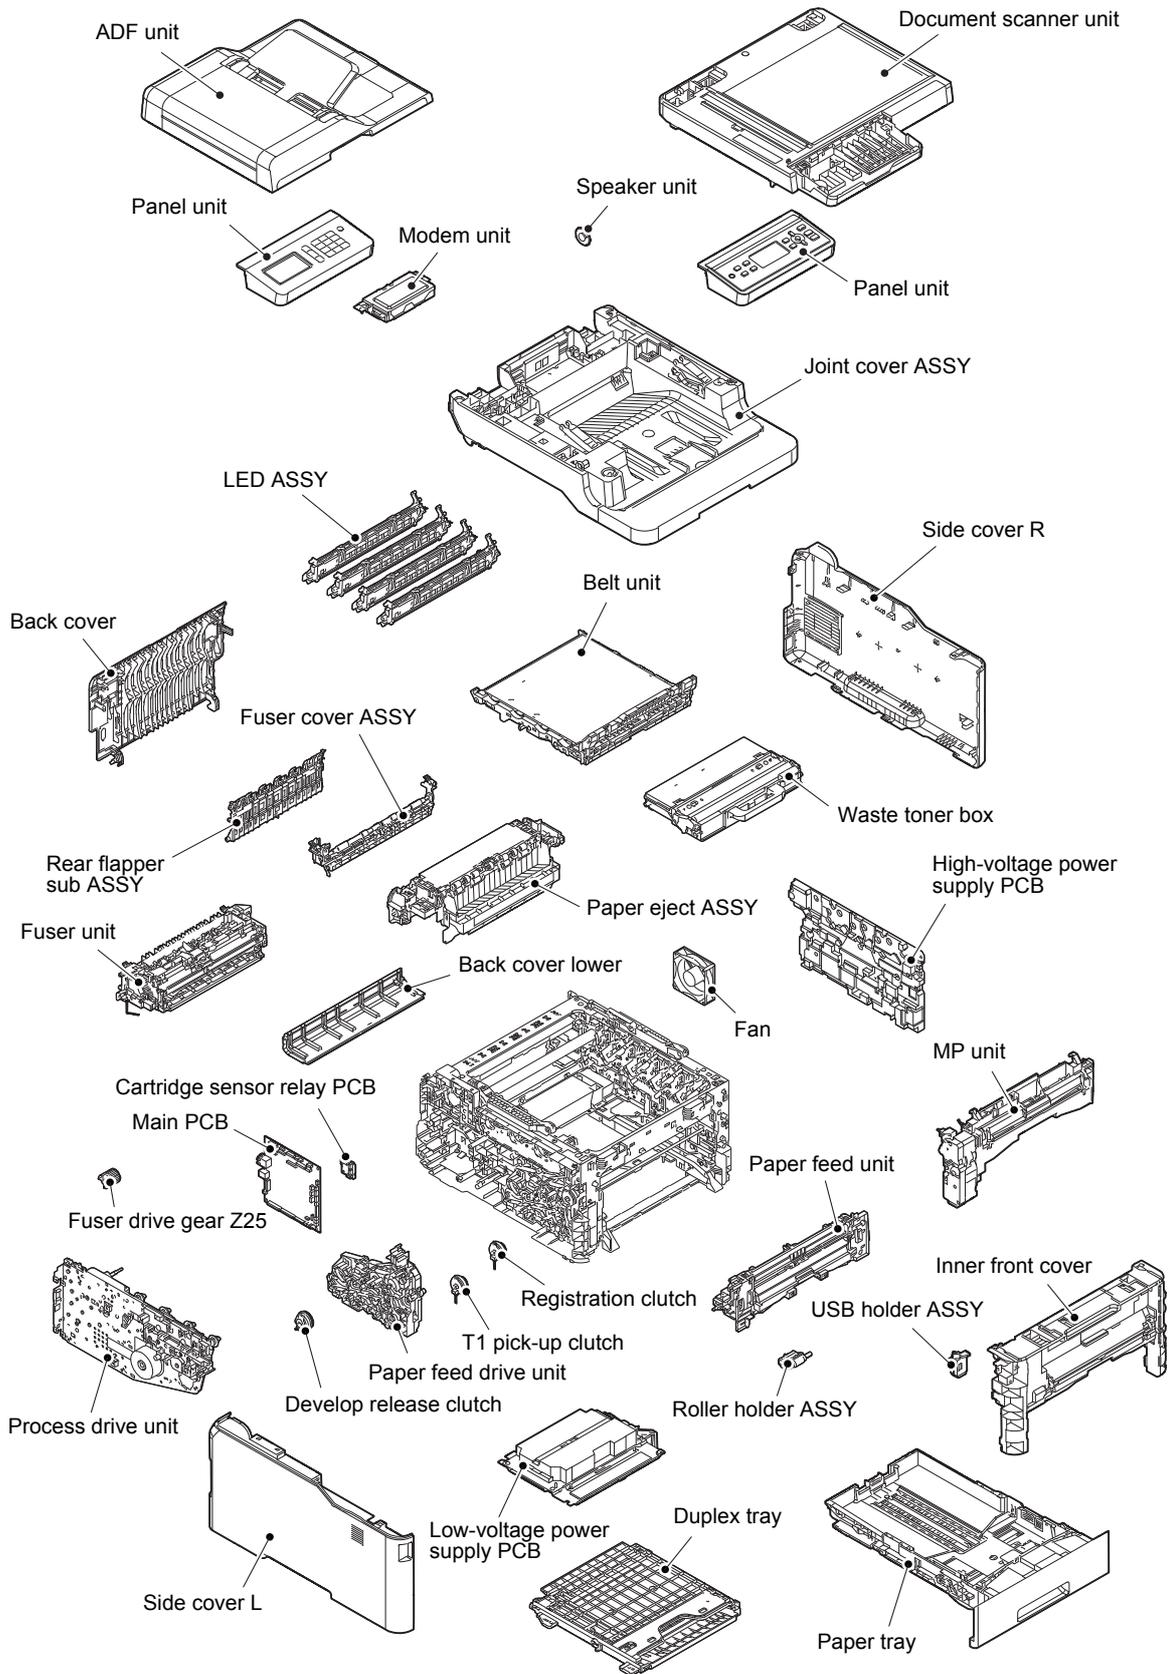


Fig. 2-10

3. ERROR INDICATIONS

This machine includes a self-diagnosis function. If the machine does not work normally it judges that an error has occurred, and indicates the corresponding error message on the LCD, which in turn helps the service personnel to quickly find out the problem.

3.1 Error Codes

*1 The shaded errors hardly occur under normal use. They may be caused by noise around the installation site, variation in power supply voltage, or software failure. The errors are reset by plugging in or unplugging the AC cord if they have occurred. If an error occurs repeatedly, please contact Brother distributors.

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
0101	ASIC error or motor driver error occurred.	2-62	050A	The hardware detected a temperature error through the center thermistor or the side thermistor of the fuser unit.	2-64
0102	*1		050B	When the center thermistor of the fuser unit was lower than the idle temperature, the side thermistor detected a temperature higher than the specified temperature.	2-64
0201	Cannot detect the synchronized signal of the paper feed motor. The speed of the paper feed motor does not stabilize within the specified time.	2-62	050C	When the center thermistor of the fuser unit was higher than the idle temperature, the side thermistor detected a temperature lower than the specified temperature.	2-64
0202	Cannot detect the synchronized signal of the process motor. The speed of the process motor does not stabilize within the specified time.	2-62	050D	*1	
0203	*1		050F	*1	
0300	*1		0800	An error occurred in the internal temperature sensor.	2-64
0305	*1		0900	Detected irregular power supply for more than 100 times.	2-65
0401	*1		0A01	*1	
0402	*1		0A02	Main PCB detected the fan failure.	2-65
0405	*1		0A03	*1	
0501	The center thermistor of the fuser unit has not reached the specified temperature within the specified time.	2-63	0B01	An error occurred in the high-voltage power supply PCB while operating.	2-66
0502	The center thermistor of the fuser unit has not reached the specified temperature within the specified time after it was heated normally to the certain level.	2-63	0B02	An error occurred in the high-voltage power supply PCB when the machine was in the ready state.	2-66
0503	The center thermistor of the fuser unit detected a temperature higher than the specified value.	2-63	0C00	An error occurred in the density sensor.	2-66
0504	After the heat unit was heated normally, the center thermistor of the fuser unit detected a temperature lower than the specified value.	2-63	0D01	*1	
0505	The center thermistor of the fuser unit detected a temperature rise greater than the specified value within the specified time.	2-63	0D02	*1	
0506	The center thermistor of the fuser unit detected a temperature fall greater than the specified value within the specified time.	2-63	0D03	*1	
0508	*1		0D04	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
0E00	An error occurred during the high-voltage power supply PCB ID check.	2-66	1F00	*1	
1003	The registration mark sensor R is dirty and cannot normally receive reflected light.	2-67	1F02	*1	
1004	The registration mark sensor L is dirty and cannot normally receive reflected light.	2-67	2000	*1	
1100	*1		2001	*1	
1200	*1		2002	*1	
1300	*1		2003	*1	
1400	Condensation occurred in the machine.	2-67	2100	Toner cartridge other than black is installed.	2-69
1500	*1		2101	Toner cartridge other than yellow is installed.	2-69
1701	*1		2102	Toner cartridge other than cyan is installed.	2-69
1801	*1		2103	Toner cartridge other than magenta is installed.	2-69
1802	*1		2200	Cartridge sensor detected that the toner cartridge does not support black was installed.	2-69
1803	*1		2201	Cartridge sensor detected that the toner cartridge does not support yellow was installed.	2-69
1808	*1		2202	Cartridge sensor detected that the toner cartridge does not support cyan was installed.	2-69
1901	*1		2203	Cartridge sensor detected that the toner cartridge does not support magenta was installed.	2-69
1A01	*1		2400	Black toner cartridge is not recognized by the cartridge sensor.	2-70
1B01	*1		2401	Yellow toner cartridge is not recognized by the cartridge sensor.	2-70
1C00	*1		2402	Cyan toner cartridge is not recognized by the cartridge sensor.	2-70
1D01	A communication error occurred in the LED ASSY (black).	2-68	2403	Magenta toner cartridge is not recognized by the cartridge sensor.	2-70
1D02	A communication error occurred in the LED ASSY (yellow).	2-68	2500	Black toner cartridge could not communicate with the cartridge sensor.	2-70
1D03	A communication error occurred in the LED ASSY (magenta).	2-68	2501	Yellow toner cartridge could not communicate with the cartridge sensor.	2-70
1D04	A communication error occurred in the LED ASSY (cyan).	2-68	2502	Cyan toner cartridge could not communicate with the cartridge sensor.	2-70
1E01	Main PCB and LED control PCB cannot access each other.	2-68	2503	Magenta toner cartridge could not communicate with the cartridge sensor.	2-70
1E02	Cannot read/write in the main PCB and LED control PCB.	2-68	2601	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
2602	*1		3003	*1	
2603	*1		3102	*1	
2604	*1		3202	*1	
2605	*1		3301	*1	
2701	*1		3302	*1	
2702	*1		3401	*1	
2703	*1		3402	*1	
2801	*1		3501	*1	
2802	*1		3601	*1	
2803	*1		3701	*1	
2804	*1		3702	*1	
2805	*1		3703	*1	
2806	*1		3801	A temperature error occurred in the external temperature/humidity sensor.	2-71
2901	*1		3802	*1	
2902	*1		3900	*1	
2903	*1		3A00	A communication error occurred between the controller and engine in main PCB.	2-71
2904	*1		3B01	*1	
			3B02	*1	
2905	*1		3B03	*1	
2906	*1		4000	*1	
2A01	*1		4001	Number of the black drum unit rotations reaches the upper limit soon.	2-72
2A02	*1		4002	Number of the yellow drum unit rotations reaches the upper limit soon.	2-72
2A03	*1		4003	Number of the magenta drum unit rotations reaches the upper limit soon.	2-72
2B01	*1		4004	Number of the cyan drum unit rotations reaches the upper limit soon.	2-72
2B02	*1		4200	*1	
2C01	*1		4201	Number of the black drum unit rotations has reached the upper limit.	2-72
2C02	*1		4202	Number of the yellow drum unit rotations has reached the upper limit.	2-72
2D01	*1		4203	Number of the magenta drum unit rotations has reached the upper limit.	2-72
2E00	Could not communicate with the cartridge sensor on the machine side.	2-71	4204	Number of the cyan drum unit rotations has reached the upper limit.	2-72
2E01	*1		4209	*1	
2E02	Cartridge sensor on the machine side does not work.	2-71	4300	Number of pages printed with the belt unit will reach the upper limit soon. (90%)	2-72
2E03	*1		4400	Number of pages printed with the belt unit has reached the upper limit.	2-72
2E04	Cartridge sensor version on the machine side is not available.	2-71	4500	Number of used pages for the fuser unit has reached the upper limit.	2-73
2F01	*1		4600	*1	
2F03	*1		4700	The waste toner sensor detected that the waste toner box is almost full.	2-73
3001	*1		4800	After the waste toner sensor detected that the waste toner box was almost full, pages more than the specified number have been printed.	2-73
3002	*1		4900	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
4A00	*1		5005	*1	
4B01	Dot counter of the toner cartridge (black) or develop roller counter reaches the upper limit soon.	2-74	5006	*1	
4B02	Dot counter of the toner cartridge (yellow) or develop roller counter reaches the upper limit soon.	2-74	5100	*1	
4B03	Dot counter of the toner cartridge (magenta) or develop roller counter reaches the upper limit soon.	2-74	5200	*1	
4B04	Dot counter of the toner cartridge (cyan) or develop roller counter reaches the upper limit soon.	2-74	5301	*1	
4B06	*1		5302	*1	
4C01	Dot counter of the toner cartridge (black) or develop roller counter has reached the upper limit was detected.	2-74	5401	*1	
4C02	Dot counter of the toner cartridge (yellow) or develop roller counter has reached the upper limit was detected.	2-74	5402	*1	
4C03	Dot counter of the toner cartridge (magenta) or develop roller counter has reached the upper limit was detected.	2-74	5406	*1	
4C04	Dot counter of the toner cartridge (cyan) or develop roller counter has reached the upper limit was detected.	2-74	5502	*1	
4C05	During printing, dot counter of color toner cartridge or develop roller counter has reached the upper limit was detected.	2-74	5602	*1	
4C06	*1		5702	*1	
4D01	*1		5801	*1	
4E01	*1		5802	*1	
4F01	The new toner sensor of the toner cartridge (black) could not detect a new cartridge properly.	2-75	5902	*1	
4F02	The new toner sensor of the toner cartridge (yellow) could not detect a new cartridge properly.	2-75	5A02	*1	
4F03	The new toner sensor of the toner cartridge (magenta) could not detect a new cartridge properly.	2-75	5B02	*1	
4F04	The new toner sensor of the toner cartridge (cyan) could not detect a new cartridge properly.	2-75	5C02	*1	
4F05	*1		5D02	*1	
5001	Number of used pages for the PF kit MP has reached the upper limit.	2-75	5E00	*1	
5002	Number of used pages for the PF kit 1 has reached the upper limit.	2-75	6001	The top cover sensor detected that the top cover was open.	2-76
5003	*1		6002	*1	
5004	*1		6003	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
6004	The eject sensor detected that the fuser cover was open.	2-76	6602	*1	
6007	*1		6701	*1	
6101	Developing terminal voltage detected that the toner cartridge (black) was not installed.	2-76	6801	The internal temperature sensor detected a temperature higher than the specified value.	2-79
6102	Developing terminal voltage detected that the toner cartridge (yellow) was not installed.	2-76	6802	*1	
6103	Developing terminal voltage detected that the toner cartridge (magenta) was not installed.	2-76	6901	Some fuser unit errors occurred at power-ON or upon recovery from sleep mode.	2-80
6104	Developing terminal voltage detected that the toner cartridge (cyan) was not installed.	2-76	6902	After the error was detected at the fuser unit, power was turned ON again and the error is being checked. (If power is turned OFF and ON after error code 6901 occurred, this code is displayed for about 15 minutes.)	2-80
6106	*1		6A00	Electric discharge that may be caused by dirt on the corona wire of the drum unit was detected.	2-81
6200	*1		6B01	Electric discharge was detected when the number of the black drum unit rotations had become more than twice of the upper limit.	2-81
6201	GRID terminal signal detected that the black drum unit was not installed.	2-77	6B02	Electric discharge was detected when the number of the yellow drum unit rotations had become more than twice of the upper limit.	2-81
6202	GRID terminal signal detected that the yellow drum unit was not installed.	2-77	6B03	Electric discharge was detected when the number of the magenta drum unit rotations had become more than twice of the upper limit.	2-81
6203	GRID terminal signal detected that the magenta drum unit was not installed.	2-77	6B04	Electric discharge was detected when the number of the cyan drum unit rotations had become more than twice of the upper limit.	2-81
6204	GRID terminal signal detected that the cyan drum unit was not installed.	2-77	6B0A	*1	
6208	*1		6C01	*1	
6209	*1		6C02	*1	
620A	Electrified terminal or GRID terminal signal detected that the black drum was not installed when the machine was turned ON.	2-77	6C03	*1	
620B	Electrified terminal or GRID terminal signal detected that the yellow drum was not installed when the machine was turned ON.	2-77	6C04	*1	
620C	Electrified terminal or GRID terminal signal detected that the magenta drum was not installed when the machine was turned ON.	2-77	6D00	*1	
620D	Electrified terminal or GRID terminal signal detected that the cyan drum was not installed when the machine was turned ON.	2-77	6E00	The develop release sensor detected the develop roller disengagement or engagement failure.	2-81
6300	The electrodes of the high-voltage power supply PCB detected that no waste toner box was set.	2-79	6F00	Detected that supply power is unstable (less than 100 times).	2-82
6400	The registration mark sensor detected that no belt unit was set.	2-79	7000	After the registration rear sensor detects paper pass, the eject sensor does not detect paper pass.	2-82

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
7001	*1		7804	*1	
7002	*1		7805	*1	
7003	*1		7900	When feeding from the manual feed slot, the registration rear sensor does not detect the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass. Or the registration rear sensor detected the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass.	2-85
7004	*1		7A01	*1	
7100	After the registration rear sensor detects the end of paper pass and the specified period of time has passed, the eject sensor continues to detect paper pass.	2-83	7A02	*1	
7101	*1		7B01	*1	
7102	*1		7B02	*1	
7103	*1		7B03	*1	
7104	*1		7B04	*1	
7105	*1		7B05	*1	
7106	*1		7C00	*1	
7200	When the paper is fed from the MP tray, after the MP registration front sensor detects paper pass, the registration rear sensor does not detect paper pass after a set period of time.	2-84	7D00	*1	
7300	*1		7E00	*1	
7301	*1		7F00	*1	
7302	When printing from the T1, the registration front sensor does not detect paper pass within the specified time after the T1 paper feed sensor detected paper pass.	2-84	8000	*1	
7400	*1		8100	*1	
7401	*1		8401	*1	
7402	*1		8402	*1	
7500	*1		8403	*1	
7501	*1		8501	The T1 paper feed sensor detected that the T1 is open when printing from the T1 (before the registration of printing in the engine).	2-86
7502	*1		8502	*1	
7601	*1		8503	*1	
7602	*1		8504	*1	
7701	*1		8505	The T1 paper feed sensor detected that the T1 is open when printing from the T1 (after the registration of printing in the engine).	2-86
7702	*1		8506	*1	
7800	After the first side is printed in 2-sided printing, the registration front sensor does not detect paper pass after a set period of time.	2-85	8507	*1	
7801	*1		8508	*1	
7802	*1		8601	*1	
7803	*1		8602	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
8603	*1		8C00	There is no paper in the manual feed slot when printing from the manual feed slot.	2-87
8604	*1		8D01	The registration rear sensor detected that the paper loaded in the T1 was smaller than the specified size.	2-87
8701	*1		8D02	The paper size indicated for printing data while the back cover is closed was under the specified value.	2-88
8702	*1		8E01	Paper size is not set to the specified size when receiving fax.	2-88
8703	*1		8E02	Detected that the size of paper set in the T1 was over 10 mm shorter than letter size during receiving fax data or printing a list or report.	2-88
8708	*1		8F01	*1	
8709	*1		8F02	*1	
870A	*1		8F03	*1	
870B	*1		9001	The size of paper loaded in the MP tray and the one specified from the driver are not same when printing from the MP tray.	2-89
870C	*1		9002	The size of paper loaded in the T1 and the one specified from the driver are not same when printing from the T1.	2-89
870D	*1		9003	*1	
870E	*1		9004	*1	
870F	*1		9005	*1	
8801	*1		9006	*1	
8802	*1		9102	*1	
8808	*1		9103	*1	
8809	*1		9104	*1	
880A	*1		9105	*1	
8901	*1		9200	*1	
8902	*1		9201	When printing from the MP tray, paper type setting in the machine does not match the setting in the driver.	2-89
8903	The back cover sensor detected the open state when 2-sided printing is started (before the registration of printing in the engine).	2-86	9202	When printing from the T1, paper type setting in the machine does not match the setting in the driver.	2-89
8904	The back cover sensor detected the open state during 2-sided printing (after the registration of printing in the engine).	2-86	9203	*1	
8A01	The registration rear sensor detected that the paper fed was smaller or larger than the specified size in 2-sided printing.	2-87	9204	*1	
8A02	*1		9205	*1	
8B01	*1		9206	*1	

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
9301	When printing from the MP tray, the MP paper empty sensor detected that no paper was in the MP tray.	2-89	9A01	An error occurred with the value measured during auto color registration performed from the control panel.	2-95
9302	When printing from the T1, the T1 paper feed sensor detected that no paper was in the T1.	2-90	9A02	Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	2-95
9303	*1		9A03	An error occurred during patch data printing in auto color registration performed from the control panel.	2-96
9304	*1		9B01	*1	
9305	*1		9B02	*1	
9306	*1		9B03	*1	
9309	Detected that there was no paper set in all trays when TrayAuto was selected for printing.	2-90	9B04	*1	
9501	*1		9B05	*1	
9502	*1		9B06	*1	
9503	*1		9C01	*1	
9504	*1		9C02	*1	
9505	*1		9C03	*1	
9601	*1		9C06	*1	
9608	*1		9C07	*1	
9701	For 2-sided printing, paper size setting of the printer driver that was not supported by 2-sided printing was selected.	2-91	9D02	*1	
9702	When printing from the T1, the size of paper specified from the driver set the size which was not supported by the T1.	2-91	9D03	*1	
9703	*1		9D04	*1	
9704	*1		9D05	*1	
9705	*1		A000	Image processing was not completed correctly because the number of pixels required for image processing is insufficient in the scanned second side data.	2-96
9706	*1		A200	The document scanning position sensor detected that the document length was 90 cm or more during the one-side scanning.	2-97
9801	An error occurred with the value measured during color density adjustment performed from the control panel.	2-91	A300	The document scanning position sensor has not detected the document passing even after the document has been fed for the specified time.	2-97
9802	Dot counter or develop roller counter of color toner has reached the upper limit during color density adjustment performed from the control panel.	2-92	A400	The ADF cover sensor detected that the ADF cover was open.	2-98
9803	Density patch measurement ended unsuccessfully during color density adjustment performed from the control panel.	2-92	A500	When scanning the fax, white or black correction data for the first side CIS unit was not within the correct range (first time).	2-98
9804	An error occurred with the value measured during density sensor sensitivity calibration.	2-92	A600	When scanning the fax, white or black correction data for the first side CIS unit was not within the correct range (second time).	2-98
9901	An error occurred with the value measured during manual color registration performed from the control panel.	2-93	A700	Color parameter in the ROM does not match the first side or second side CIS.	2-99
9902	Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	2-93	A800	*1	
9903	An error occurred during patch data printing in manual color registration performed from the control panel.	2-94	A900	A scanning error occurred while processing the scanned image.	2-99

Error Codes	Description	Refer to:	Error Codes	Description	Refer to:
AB00	*1		D100	An error occurred while initializing the modem.	2-103
AC00	When scanning the fax, white or black correction data for the second side CIS was not within the correct range (first time).	2-99	D200	Detected that the modem PCB is not connected.	2-103
AD00	Image processing cannot be completed correctly because the number of pixels required for image processing is insufficient in the scanned first side data.	2-99	D800	An error occurred while initializing the touch panel.	2-103
AE00	*1		D900	*1	
AF00	Home position is still being detected even after the first side CIS unit was moved.	2-100	DA00	*1	
B000	Detected that the first side CIS flat cable or second side CIS flat cable was not inserted correctly when function code 55 was executed.	2-100	DB00	A communication error occurred between the main ASIC and the recording ASIC.	2-104
B700	*1		E000	An error occurred in the ROM check sum.	2-104
B800	*1		E001	*1	
B900	*1		E002	*1	
BB00	A white level not within the standard was scanned when function code 55 was executed.	2-100	E100	Program error	2-104
BC00	When scanning the fax, white or black correction data for the second side CIS was not within the correct range (second time).	2-101	E500	An error occurred during access to the DRAM in the main PCB.	2-104
BD00	A black level not within the standard was scanned when function code 55 was executed.	2-101	E600	Write error in the EEPROM of the main PCB	2-104
BF00	The document scanning position sensor detected that the document length was 400 mm or longer and could not be fed to ADF (double-side restoration).	2-101	E701	System error in the flash ROM	2-104
C001	Timeout occurred with access request sent to server due to incorrect server address, network disconnection, or inactive server.	2-102	E702	Read error in the flash ROM	2-104
C002	User authentication is unavailable due to incorrect user name, incorrect password, or asynchronous date and time between the machine and server.	2-102	E900	An error occurred while initializing the NFC.	2-104
C003	Cannot access to the file because the directory name is wrong, writing into directory is not permitted, or writing into file is locked or not permitted.	2-102	EC00	Overcurrent was caused because a USB device that did not meet the specifications was inserted into the USB port.	2-105
C004	Cannot acquire current time which is required for user authentication because the time has not been acquired.	2-102	ED00	*1	
C100	Failed to save data to a USB flash memory when the USB DUMP was running.	2-102	EE00	*1	
C700	The memory is insufficient to expand the data of PC-Print.	2-103	F900	The spec code was not entered correctly.	2-105
C800	The memory used to store secure print data exceeded the memory size for secure print data.	2-103	FA01	*1	
C900	Storage memory was full and data could not be saved.	2-103	FA02	*1	
CA00	*1		FA03	*1	

3.2 Error Message

The error messages displayed on the LCD of the machine and their descriptions are shown in the table below.

3.2.1 Non touch panel models

Error message		Description	Error codes	Refer to:
First line	Second line			
Belt End Soon	-	Number of pages printed with the belt unit will reach the upper limit soon.	4300	2-72
Calibrate	Calibration failed. Insufficient Toner for Calibration.	Dot counter or develop roller counter of color toner has reached the upper limit during color density adjustment performed from the control panel.	9802	2-92
	Calibration failed. Press OK.	Density patch measurement ended unsuccessfully during color density adjustment performed from the control panel.	9803	2-92
		An error occurred with the value measured during density sensor sensitivity calibration.	9804	2-92
	Calibration failed. Turn the power off and then back on again.	An error occurred with the value measured during color density adjustment performed from the control panel.	9801	2-91
Cannot Detect	Put the Toner Cartridge back in.	Black toner cartridge is not recognized by the cartridge sensor.	2400	2-70
		Yellow toner cartridge is not recognized by the cartridge sensor.	2401	2-70
		Cyan toner cartridge is not recognized by the cartridge sensor.	2402	2-70
		Magenta toner cartridge is not recognized by the cartridge sensor.	2403	2-70

Error message		Description	Error codes	Refer to:
First line	Second line			
Cartridge Error	Open the Top Cover. Check color and position of toner cartridges.	Toner cartridge other than black is installed.	2100	2-69
		Toner cartridge other than yellow is installed.	2101	2-69
		Toner cartridge other than cyan is installed.	2102	2-69
		Toner cartridge other than magenta is installed.	2103	2-69
	Put the Black (BK) Toner Cartridge back in.	The new toner sensor of the toner cartridge (black) could not detect a new cartridge properly.	4F01	2-75
	Put the Cyan (C) Toner Cartridge back in.	The new toner sensor of the toner cartridge (cyan) could not detect a new cartridge properly.	4F04	2-75
	Put the Magenta (M) Toner Cartridge back in.	The new toner sensor of the toner cartridge (magenta) could not detect a new cartridge properly.	4F03	2-75
	Put the Yellow (Y) Toner Cartridge back in.	The new toner sensor of the toner cartridge (yellow) could not detect a new cartridge properly.	4F02	2-75
Condensation	Leave switched ON. Fully open the Top cover. Wait 30 minutes, switch OFF and close cover, then switch	Condensation occurred in the machine.	1400	2-67
Cooling Down	Wait for a while	The internal temperature sensor detected a temperature higher than the specified value.	6801	2-79
Cover is Open	Close the ADF Cover, then press the Stop Key.	The ADF cover sensor detected that the ADF cover was open.	A400	2-98
	Close the Fuser Cover which can be found behind the Back Cover of the machine.	The eject sensor detected that the fuser cover was open.	6004	2-76
	Close the Top Cover.	The top cover sensor detected that the top cover was open.	6001	2-76

Error message		Description	Error codes	Refer to:
First line	Second line			
Document Jam	Clear the scanner jam, then press the Stop Key.	The document scanning position sensor detected that the document length was 90 cm or more during the one-side scanning.	A200	2-97
		The document scanning position sensor has not detected the document passing even after the document has been fed for the specified time.	A300	2-97
Drum !	Slide the Green tab on Drum Unit. Black (BK)/ Cyan (C)/ Magenta (M)/ Yellow (Y).	Electrified terminal or GRID terminal signal detected that the black drum was not installed when the machine was turned ON.	620A	2-77
		Electrified terminal or GRID terminal signal detected that the cyan drum was not installed when the machine was turned ON.	620D	2-77
		Electrified terminal or GRID terminal signal detected that the magenta drum was not installed when the machine was turned ON.	620C	2-77
		Electrified terminal or GRID terminal signal detected that the yellow drum was not installed when the machine was turned ON.	620B	2-77
		Electric discharge that may be caused by dirt on the corona wire of the drum unit was detected.	6A00	2-81
Drum End Soon: BK	-	Number of the black drum unit rotations reaches the upper limit soon.	4001	2-72
Drum End Soon: C	-	Number of the cyan drum unit rotations reaches the upper limit soon.	4004	2-72
Drum End Soon: M	-	Number of the magenta drum unit rotations reaches the upper limit soon.	4003	2-72
Drum End Soon: Y	-	Number of the yellow drum unit rotations reaches the upper limit soon.	4002	2-72

Error message		Description	Error codes	Refer to:
First line	Second line			
Drum Stop	Replace the Drum Unit. Black (BK)/	Electric discharge was detected when the number of the black drum unit rotations had become more than twice of the upper limit.	6B01	2-81
	Replace the Drum Unit. Cyan (C)	Electric discharge was detected when the number of the cyan drum unit rotations had become more than twice of the upper limit.	6B04	2-81
	Replace the Drum Unit. Magenta (M)	Electric discharge was detected when the number of the magenta drum unit rotations had become more than twice of the upper limit.	6B03	2-81
	Replace the Drum Unit. Yellow (Y).	Electric discharge was detected when the number of the yellow drum unit rotations had become more than twice of the upper limit.	6B02	2-81
Ignore Data	Press Stop Key	Detected undecodable data during printing. Received undecodable PS data.	---	4.14.1
Jam 2-sided	Pull out Tray 1 completely. Check inside the machine or open the Back Cover to remove the jammed paper.	After the first side is printed in 2-sided printing, the registration front sensor does not detect paper pass after a set period of time.	7800	2-85
Jam Inside	Open the TOP Cover, pull out the Drum Unit completely and remove the jammed paper.	After the registration rear sensor detects paper pass, the eject sensor does not detect paper pass.	7000	2-82
Jam Manual Feed	Pull out the jammed paper from Manual Feed and press Start.	When feeding from the manual feed slot, the registration rear sensor does not detect the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass. Or the registration rear sensor detected the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass.	7900	2-85

Error message		Description	Error codes	Refer to:
First line	Second line			
Jam MP Tray	Pull out the jammed paper from MP Tray and press Start.	When the paper is fed from the MP tray, after the MP registration front sensor detects paper pass, the registration rear sensor does not detect paper pass after a set period of time.	7200	2-84
Jam Rear	Open the Back Cover and remove the jammed paper, then press Start.	After the registration rear sensor detects the end of paper pass and the specified period of time has passed, the eject sensor continues to detect paper pass.	7100	2-83
Jam Tray 1	Remove the jammed paper from Tray 1.	When printing from the T1, the registration front sensor does not detect paper pass within the specified time after the T1 paper feed sensor detected paper pass.	7302	2-84
Log Access Error	Authentication Error, contact your administrator.	User authentication is unavailable due to incorrect user name, incorrect password, or asynchronous date and time between the machine and server.	C002	2-102
	File Access Error, contact your administrator.	Cannot access to the file because the directory name is wrong, writing into directory is not permitted, or writing into file is locked or not permitted.	C003	2-102
	Server Timeout, contact your administrator.	Timeout occurred with access request sent to server due to incorrect server address, network disconnection, or inactive server.	C001	2-102
	Wrong Date&Time, contact your administrator.	Cannot acquire current time which is required for user authentication because the time has not been acquired.	C004	2-102
Machine Error	-	Detected that the modem PCB is not connected.	D200	2-103
Machine Error F9	-	The spec code was not entered correctly.	F900	2-105
Manual Feed	Load Paper.	There is no paper in the manual feed slot when printing from the manual feed slot.	8C00	2-87

Error message		Description	Error codes	Refer to:
First line	Second line			
Media Mismatch	Reload correct paper in the MP Tray, then press Start.	When printing from the MP tray, paper type setting in the machine does not match the setting in the driver.	9201	2-89
	Reload correct paper in Tray 1, then press Start.	When printing from the T1, paper type setting in the machine does not match the setting in the driver.	9202	2-89
No Belt Unit	Open the TOP Cover, pull out all 4 Drum Unit completely and install the Belt Unit.	The registration mark sensor detected that no belt unit was set.	6400	2-79
No Drum Unit	Open the Top Cover, then install the Drum Unit. Black(BK)	GRID terminal signal detected that the black drum unit was not installed.	6201	2-77
	Open the Top Cover, then install the Drum Unit. Cyan(C)	GRID terminal signal detected that the cyan drum unit was not installed.	6204	2-77
	Open the Top Cover, then install the Drum Unit. Magenta(M)	GRID terminal signal detected that the magenta drum unit was not installed.	6203	2-77
	Open the Top Cover, then install the Drum Unit. Yellow(Y).	GRID terminal signal detected that the yellow drum unit was not installed.	6202	2-77
No HUB Support	-	USB host HUB connection error	---	4.14.2
No Paper	Reload paper in Tray.	Detected that there was no paper set in all trays when TrayAuto was selected for printing.	9309	2-90
No Paper MP	Reload paper in MP Tray.	When printing from the MP tray, the MP paper empty sensor detected that no paper was in the MP tray.	9301	2-89
No Paper T1	Reload paper in Tray 1.	When printing from the T1, the T1 paper feed sensor detected that no paper was in the T1.	9302	2-90

Error message		Description	Error codes	Refer to:
First line	Second line			
No Toner	Open the Top Cover, then install Toner Cartridge.	Black toner cartridge could not communicate with the cartridge sensor.	2500	2-70
		Yellow toner cartridge could not communicate with the cartridge sensor.	2501	2-70
		Cyan toner cartridge could not communicate with the cartridge sensor.	2502	2-70
		Magenta toner cartridge could not communicate with the cartridge sensor.	2503	2-70
	Open the TOP Cover, then install Toner Cartridge. Black(BK).	Developing terminal voltage detected that the toner cartridge (black) was not installed.	6101	2-76
	Open the TOP Cover, then install Toner Cartridge. Cyan(C).	Developing terminal voltage detected that the toner cartridge (cyan) was not installed.	6104	2-76
	Open the TOP Cover, then install Toner Cartridge. Magenta(M).	Developing terminal voltage detected that the toner cartridge (magenta) was not installed.	6103	2-76
Open the TOP Cover, then install Toner Cartridge. Yellow(Y).	Developing terminal voltage detected that the toner cartridge (yellow) was not installed.	6102	2-76	
No Tray T1	Reinstall Tray 1	The T1 paper feed sensor detected that the T1 is open when printing from the T1 (before the registration of printing in the engine).	8501	2-86
		The T1 paper feed sensor detected that the T1 is open when printing from the T1 (after the registration of printing in the engine).	8505	2-86
No Waste Toner	Install the Waste Toner Box.	The electrodes of the high-voltage power supply PCB detected that no waste toner box was set.	6300	2-79
Out of Memory	Press Stop Key	The memory is insufficient to expand the data of PC-Print.	C700	2-103

Error message		Description	Error codes	Refer to:
First line	Second line			
Print Data Full	Print Data is full. Press stop and delete the previously stored data.	The memory used to store secure print data exceeded the memory size for secure print data.	C800	2-103
Print Unable 01	Turn the power off and then back on again.	ASIC error or motor driver error occurred.	0101	2-62
Print Unable 02	Turn the power off and then back on again.	Cannot detect the synchronized signal of the paper feed motor. The speed of the paper feed motor does not stabilize within the specified time.	0201	2-62
		Cannot detect the synchronized signal of the process motor. The speed of the process motor does not stabilize within the specified time.	0202	2-62
Print Unable 05	Turn the power off and then back on again.	Detected the fuser unit temperature error.	0501	2-63
			0502	2-63
			0503	2-63
			0504	2-63
			0505	2-63
			0506	2-63
			050A	2-64
			050B	2-64
050C	2-64			
Print Unable 08	Turn the power off and then back on again.	An error occurred in the internal temperature sensor.	0800	2-64
Print Unable 09	Turn the power off and then back on again.	Detected irregular power supply for more than 100 times.	0900	2-65
Print Unable 0A	Turn the power off and then back on again.	Main PCB detected the fan failure.	0A02	2-65
Print Unable 0B	Turn the power off and then back on again.	An error occurred in the high-voltage power supply PCB while operating.	0B01	2-66
		An error occurred in the high-voltage power supply PCB when the machine was in the ready state.	0B02	2-66

Error message		Description	Error codes	Refer to:
First line	Second line			
Print Unable 0C	Turn the power off and then back on again.	An error occurred in the density sensor.	0C00	2-66
Print Unable 0E	Turn the power off and then back on again.	An error occurred during the high-voltage power supply PCB ID check.	0E00	2-66
Print Unable 10	Turn the power off and then back on again.	The registration mark sensor R is dirty and cannot normally receive reflected light.	1003	2-67
		The registration mark sensor L is dirty and cannot normally receive reflected light.	1004	2-67
Print Unable 1D	Turn the power off and then back on again.	A communication error occurred in the LED ASSY (black).	1D01	2-68
		A communication error occurred in the LED ASSY (yellow).	1D02	2-68
		A communication error occurred in the LED ASSY (magenta).	1D03	2-68
		A communication error occurred in the LED ASSY (cyan).	1D04	2-68
Print Unable 1E	Turn the power off and then back on again.	Main PCB and LED control PCB cannot access each other.	1E01	2-68
		Cannot read/write in the main PCB and LED control PCB.	1E02	2-68
Print Unable 2E	Turn the power off and then back on again.	Could not communicate with the cartridge sensor on the machine side.	2E00	2-71
		Cartridge sensor on the machine side does not work.	2E02	2-71
		Cartridge sensor version on the machine side is not available.	2E04	2-71
Print Unable 38	Turn the power off and then back on again.	A temperature error occurred in the external temperature/humidity sensor.	3801	2-71
Print Unable 3A	Turn the power off and then back on again.	A communication error occurred between the controller and engine in main PCB.	3A00	2-71
Print Unable A7	Turn the power off and then back on again.	Color parameter in the ROM does not match the first side or second side CIS.	A700	2-99
Print Unable A9	Turn the power off and then back on again.	A scanning error occurred while processing the scanned image.	A900	2-99

Error message		Description	Error codes	Refer to:
First line	Second line			
Print Unable C1	Turn the power off and then back on again.	Failed to save data to a USB flash memory when the USB DUMP was running.	C100	2-102
Print Unable D1	Turn the power off and then back on again.	An error occurred while initializing the modem.	D100	2-103
Print Unable E0	Turn the power off and then back on again.	An error occurred at the ROM check sum in the firmware.	E000	2-104
Print Unable E1	Turn the power off and then back on again.	Program error	E100	2-104
Print Unable E5	Turn the power off and then back on again.	An error occurred during access to the DRAM in the main PCB.	E500	2-104
Print Unable E6	Turn the power off and then back on again.	Write error in the EEPROM of the main PCB	E600	2-104
Print Unable E7	Turn the power off and then back on again.	Detected an error in main PCB.	E701	2-104
			E702	2-104
Print Unable E9	Turn the power off and then back on again.	An error occurred while initializing the NFC.	E900	2-104
Print Unable ZC	Turn the power off and then back on again.	Detected that supply power is unstable (less than 100 times).	6F00	2-82

Error message		Description	Error codes	Refer to:
First line	Second line			
Registration	Registration failed. Insufficient Toner for Registration.	Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	9A02	2-95
	Registration failed. Press OK.	Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	9902	2-93
		An error occurred during patch data printing in manual color registration performed from the control panel.	9903	2-94
		An error occurred during patch data printing in auto color registration performed from the control panel.	9A03	2-96
	Registration failed. Turn the power off and then back on again.	An error occurred with the value measured during auto color registration performed from the control panel.	9A01	2-95
		An error occurred with the value measured during manual color registration performed from the control panel.	9901	2-93
Replace Belt	-	Number of pages printed with the belt unit has reached the upper limit.	4400	2-72
Replace Drum: BK	-	Number of the black drum unit rotations has reached the upper limit.	4201	2-72
Replace Drum: C	-	Number of the cyan drum unit rotations has reached the upper limit.	4204	2-72
Replace Drum: M	-	Number of the magenta drum unit rotations has reached the upper limit.	4203	2-72
Replace Drum: Y	-	Number of the yellow drum unit rotations has reached the upper limit.	4202	2-72
Replace Fuser	-	Number of used pages for the fuser unit has reached the upper limit.	4500	2-73

Error message		Description	Error codes	Refer to:
First line	Second line			
Replace PF Kit1	-	Number of used pages for the PF kit 1 has reached the upper limit.	5002	2-75
Replace PF KitMP	-	Number of used pages for the PF kit MP has reached the upper limit.	5001	2-75
Replace Toner	Open the Top Cover, replace Toner Cartridge. Black (BK).	Dot counter of the toner cartridge (black) or develop roller counter has reached the upper limit was detected.	4C01	2-74
	Open the Top Cover, replace Toner Cartridge. Cyan (C).	Dot counter of the toner cartridge (cyan) or develop roller counter has reached the upper limit was detected.	4C04	2-74
	Open the Top Cover, replace Toner Cartridge. Cyan (C)/ Magenta (M)/ Yellow (Y).	During printing, dot counter of color toner cartridge or develop roller counter has reached the upper limit was detected.	4C05	2-74
	Open the Top Cover, replace Toner Cartridge. Magenta (M).	Dot counter of the toner cartridge (magenta) or develop roller counter has reached the upper limit was detected.	4C03	2-74
	Open the Top Cover, replace Toner Cartridge. Yellow (Y).	Dot counter of the toner cartridge (yellow) or develop roller counter has reached the upper limit was detected.	4C02	2-74
Replace WT Box	Replace the Waste Toner Box inside the machine.	After the waste toner sensor detected that the waste toner box was almost full, pages more than the specified number have been printed.	4800	2-73
Scan Unable	Document is too long for 2-sided scanning. Press Stop key.	The document scanning position sensor detected that the document length was 400 mm or longer and could not be fed to ADF (double-side restoration).	BF00	2-101
	Remove the original document. Turn the power off, then on again.	Image processing cannot be completed correctly because the number of pixels required for image processing is insufficient in the scanned first side data.	AD00	2-99

Error message		Description	Error codes	Refer to:
First line	Second line			
Scan Unable A0	Turn the power off, then on again.	Image processing was not completed correctly because the number of pixels required for image processing is insufficient in the scanned second side data.	A000	2-96
Scan Unable AF	Turn the power off and then back on again.	Home position is still being detected even after the first side CIS unit was moved.	AF00	2-100
Scanner Error	-	A white level not within the standard was scanned when function code 55 was executed.	BB00	2-100
		A black level not within the standard was scanned when function code 55 was executed.	BD00	2-101
SCANNER ERROR FB SCANNER ERROR ADF	-	Detected that the first side CIS flat cable or second side CIS flat cable was not inserted correctly when function code 55 was executed.	B000	2-100
Self-Diagnostic	Turn the power off, then on again. Leave the machine for 15 min.	Some fuser unit errors occurred at power-ON or upon recovery from sleep mode.	6901	2-80
	Will Automatically Restart within 15 minutes.	After the error was detected at the fuser unit, power was turned ON again and the error is being checked. (If power is turned OFF and ON after error code 6901 occurred, this code is displayed for about 15 minutes.)	6902	2-80
Short paper	Open the Back Cover and then press Start.	The registration rear sensor detected that the paper loaded in the T1 was smaller than the specified size.	8D01	2-87
Size Error	Specify the correct paper size for Tray 1.	When printing from the T1, the size of paper specified from the driver set the size which was not supported by the T1.	9702	2-91

Error message		Description	Error codes	Refer to:
First line	Second line			
Size Error DX	Press Stop Key. Specify the correct paper and load the same size paper as the Printer driver setting.	For 2-sided printing, paper size setting of the printer driver that was not supported by 2-sided printing was selected.	9701	2-91
	Specify the correct paper.	The registration rear sensor detected that the paper fed was smaller or larger than the specified size in 2-sided printing.	8A01	2-87
Size mismatch	Fax received. Set correct paper size in menu.	Paper size is not set to the specified size when receiving fax.	8E01	2-88
	Reload correct paper in the MP Tray, then press Start.	The size of paper loaded in the MP tray and the one specified from the driver are not same when printing from the MP tray.	9001	2-89
	Reload correct paper in Tray1, then press Start.	The size of paper loaded in the T1 and the one specified from the driver are not same when printing from the T1.	9002	2-89
	Reload correct paper.	Detected that the size of paper set in the T1 was over 10 mm shorter than letter size during receiving fax data or printing a list or report.	8E02	2-88
Small paper	Open the Back Cover and then press Start.	The paper size indicated for printing data while the back cover is closed was under the specified value.	8D02	2-88
Storage Full	There is no space in the Flash Memory.	Storage memory was full and data could not be saved.	C900	2-103
Toner Error	One or more Toner Cartridges are not detected. Pull out and reinsert all 4 Toner Cartridges.	The develop release sensor detected the develop roller disengagement or engagement failure.	6E00	2-81
Toner Low: BK	-	Dot counter of the toner cartridge (black) or develop roller counter reaches the upper limit soon.	4B01	2-74
Toner Low: C	-	Dot counter of the toner cartridge (cyan) or develop roller counter reaches the upper limit soon.	4B04	2-74

Error message		Description	Error codes	Refer to:
First line	Second line			
Toner Low: M	-	Dot counter of the toner cartridge (magenta) or develop roller counter reaches the upper limit soon.	4B03	2-74
Toner Low: Y	-	Dot counter of the toner cartridge (yellow) or develop roller counter reaches the upper limit soon.	4B02	2-74
Unusable Device	Remove the Device. Turn the power off and back on again	Overcurrent was caused because a USB device that did not meet the specifications was inserted into the USB port.	EC00	2-105
	-	A USB device that did not meet the specifications was inserted into the USB port.	---	4.14.2
Update Fail:05	Check the firmware update file and try again.	Failed to analyze the firmware during the automatic firmware update with USB flash memory.	---	4.14.3
Update Fail:06	Check the firmware update file and try again.	There is a file that contains more than 119 words in "FIRM" folder during the automatic firmware update with USB flash memory.	---	4.14.3
Update Fail:07	Check the firmware update file and try again.	There is a firmware not for the machine model during the automatic firmware update with USB flash memory.	---	4.14.3
Update Fail:08	Check the firmware update file and try again.	Unable to update the firmware because other function is working during the automatic firmware update with USB flash memory.	---	4.14.3
Wrong Paper Size	Reload correct paper in the MP Tray or press Start.	When printing from the MP tray, the size of paper set in the MP tray does not match the size specified by the driver.	---	4.14.1
	Reload correct paper in Tray 1 or press Start.	When printing from the T1, the size of paper set in the T1 does not match the size specified by the driver.	---	4.14.1

Error message		Description	Error codes	Refer to:
First line	Second line			
Wrong Toner	Open the Top Cover, then install Toner Cartridge.	Cartridge sensor detected that the toner cartridge does not support black was installed.	2200	2-69
		Cartridge sensor detected that the toner cartridge does not support yellow was installed.	2201	2-69
		Cartridge sensor detected that the toner cartridge does not support cyan was installed.	2202	2-69
		Cartridge sensor detected that the toner cartridge does not support magenta was installed.	2203	2-69
WT Box End Soon	-	The waste toner sensor detected that the waste toner box is almost full.	4700	2-73
2-sided Disabled	Close the Back Cover of the machine.	The back cover sensor detected the open state when 2-sided printing is started (before the registration of printing in the engine).	8903	2-86
		The back cover sensor detected the open state during 2-sided printing (after the registration of printing in the engine).	8904	2-86

3.2.2 Touch panel models

Error message		Description	Error codes	Refer to:
First line	Second line			
Calibration	Calibration failed. Insufficient Toner for Calibration.	Dot counter or develop roller counter of color toner has reached the upper limit during color density adjustment performed from the control panel.	9802	2-92
	Calibration failed. Press [OK]	Density patch measurement ended unsuccessfully during color density adjustment performed from the control panel.	9803	2-92
		An error occurred with the value measured during density sensor sensitivity calibration.	9804	2-92
	Calibration failed. Turn the power off and then back on again.	An error occurred with the value measured during color density adjustment performed from the control panel.	9801	2-91
Cannot Detect	Put the Toner Cartridge back in.	Black toner cartridge is not recognized by the cartridge sensor.	2400	2-70
		Yellow toner cartridge is not recognized by the cartridge sensor.	2401	2-70
		Cyan toner cartridge is not recognized by the cartridge sensor.	2402	2-70
		Magenta toner cartridge is not recognized by the cartridge sensor.	2403	2-70

Error message		Description	Error codes	Refer to:
First line	Second line			
Cartridge Error	Open the Top Cover. Check color and position of toner cartridges.	Toner cartridge other than black is installed.	2100	2-69
		Toner cartridge other than yellow is installed.	2101	2-69
		Toner cartridge other than cyan is installed.	2102	2-69
		Toner cartridge other than magenta is installed.	2103	2-69
	Put the Black (BK) Toner Cartridge back in.	The new toner sensor of the toner cartridge (black) could not detect a new cartridge properly.	4F01	2-75
	Put the Cyan (C) Toner Cartridge back in.	The new toner sensor of the toner cartridge (cyan) could not detect a new cartridge properly.	4F04	2-75
	Put the Magenta (M) Toner Cartridge back in.	The new toner sensor of the toner cartridge (magenta) could not detect a new cartridge properly.	4F03	2-75
Put the Yellow (Y) Toner Cartridge back in.	The new toner sensor of the toner cartridge (yellow) could not detect a new cartridge properly.	4F02	2-75	
Condensation	Leave switched ON. Fully open the TOP Cover. Wait 30 minutes, switch OFF and close cover, then switch ON.	Condensation occurred in the machine.	1400	2-67
Cooling Down	Wait for a while	The internal temperature sensor detected a temperature higher than the specified value.	6801	2-79
Cover is Open	Close the ADF Cover.	The ADF cover sensor detected that the ADF cover is open in the ready state.	A400	2-98
	Close the ADF Cover, then press Stop[x].	The ADF cover sensor detected that the ADF cover is open during scanning.		
	Close the Back Cover of the Machine	The eject sensor detected that the fuser cover was open.	6004	2-76
	Close the Top Cover.	The top cover sensor detected that the top cover was open.	6001	2-76

Error message		Description	Error codes	Refer to:
First line	Second line			
Document Jam	Clear the scanner jam, then press Stop[x].	The document scanning position sensor detected that the document length was 90 cm or more during the one-side scanning.	A200	2-97
		The document scanning position sensor has not detected the document passing even after the document has been fed for the specified time.	A300	2-97
Drum !	Open the Top Cover. Pull out the drum unit and toner cartridge. Slide the Green tab on Drum Unit.	Electric discharge that may be caused by dirt on the corona wire of the drum unit was detected.	6A00	2-81
	Open the Top Cover. Black Pull out the drum unit and toner cartridge. Slide the Green tab on Drum Unit.	Electrified terminal or GRID terminal signal detected that the black drum was not installed when the machine was turned ON.	620A	2-77
	Open the Top Cover. Cyan Pull out the drum unit and toner cartridge. Slide the Green tab on Drum Unit.	Electrified terminal or GRID terminal signal detected that the cyan drum was not installed when the machine was turned ON.	620D	2-77
	Open the Top Cover. Magenta Pull out the drum unit and toner cartridge. Slide the Green tab on Drum Unit.	Electrified terminal or GRID terminal signal detected that the magenta drum was not installed when the machine was turned ON.	620C	2-77
	Open the Top Cover. Yellow Pull out the drum unit and toner cartridge. Slide the Green tab on Drum Unit.	Electrified terminal or GRID terminal signal detected that the yellow drum was not installed when the machine was turned ON.	620B	2-77

Error message		Description	Error codes	Refer to:
First line	Second line			
Drum Stop	Replace the Drum Unit. Refer to the instructions in the carton of the new drum.	Electric discharge was detected when the number of the drum unit rotations had become more than twice of the upper limit.	6B01	2-81
			6B02	2-81
			6B03	2-81
			6B04	2-81
Ignore Data	Press Cancel [x]	Undecodable PS data is received.	---	4.14.1
Jam 2-sided	Pull the paper tray completely. Check inside the machine. Or open the Back Cover to remove the jammed paper.	After the first side is printed in 2-sided printing, the registration front sensor does not detect paper pass after a set period of time.	7800	2-85
Jam Inside	Open the Top Cover, Pull out all four drum and toner cartridge assemblies Remove the jammed paper	After the registration rear sensor detects paper pass, the eject sensor does not detect paper pass.	7000	2-82
Jam Manual Feed	Pull out the jammed paper from Manual Feed and press [Retry].	When feeding from the manual feed slot, the registration rear sensor does not detect the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass. Or the registration rear sensor detected the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass.	7900	2-85
Jam MP Tray	Remove the jammed paper from MP Tray and press [Retry].	When the paper is fed from the MP tray, after the MP registration front sensor detects paper pass, the registration rear sensor does not detect paper pass after a set period of time.	7200	2-84
Jam Rear	Open the Back Cover and remove the jammed paper, then press [Retry].	After the registration rear sensor detects the end of paper pass and the specified period of time has passed, the eject sensor continues to detect paper pass.	7100	2-83

Error message		Description	Error codes	Refer to:
First line	Second line			
Jam Tray 1	Remove the jammed paper from Tray 1.	When printing from the T1, the registration front sensor does not detect paper pass within the specified time after the T1 paper feed sensor detected paper pass.	7302	2-84
Log Access Error	Authentication error, contact your administrator.	User authentication is unavailable due to incorrect user name, incorrect password, or asynchronous date and time between the machine and server.	C002	2-102
	File Access Error, contact your administrator.	Cannot access to the file because the directory name is wrong, writing into directory is not permitted, or writing into file is locked or not permitted.	C003	2-102
	Server Timeout, contact your administrator.	Timeout occurred with access request sent to server due to incorrect server address, network disconnection, or inactive server.	C001	2-102
	Wrong Date&Time, contact your administrator.	Cannot acquire current time which is required for user authentication because the time has not been acquired.	C004	2-102
Machine Error	-	Detected that the modem PCB is not connected.	D200	2-103
Machine Error F9	-	The spec code was not entered correctly.	F900	2-105
Maintenance	Replace Fuser	Number of used pages for the fuser unit has reached the upper limit.	4500	2-73
	Replace PF Kit MP	Number of used pages for the PF kit MP has reached the upper limit.	5001	2-75
	Replace PF Kit 1	Number of used pages for the PF kit 1 has reached the upper limit.	5002	2-75
Manual Feed	Load paper.	There is no paper in the manual feed slot when printing from the manual feed slot.	8C00	2-87

Error message		Description	Error codes	Refer to:
First line	Second line			
Media Type Mismatch	Reload correct paper in MP Tray, then press [Retry].	When printing from the MP tray, paper type setting in the machine does not match the setting in the driver.	9201	2-89
	Reload correct paper in Tray1, then press [Retry].	When printing from the T1, paper type setting in the machine does not match the setting in the driver.	9202	2-89
No Belt Unit	Open the Top Cover, pull out all 4 Drum Units completely and install the Belt Unit.	The registration mark sensor detected that no belt unit was set.	6400	2-79
No Drum Unit	Open the Top Cover, then install the Drum Unit. Black	GRID terminal signal detected that the black drum unit was not installed.	6201	2-77
	Open the Top Cover, then install the Drum Unit. Cyan	GRID terminal signal detected that the cyan drum unit was not installed.	6204	2-77
	Open the Top Cover, then install the Drum Unit. Magenta	GRID terminal signal detected that the magenta drum unit was not installed.	6203	2-77
	Open the Top Cover, then install the Drum Unit. Yellow	GRID terminal signal detected that the yellow drum unit was not installed.	6202	2-77
No HUB Support	No HUB Support.	USB host HUB connection error	---	4.14.2
No Paper	No Paper T1	Detected that there was no paper set in the T1 when printing from the T1.	---	4.2.1
	Reload paper in Tray.	Detected that there was no paper set in all trays when TrayAuto was selected for printing. (At Fax / List printing)	---	4.2.1
		Detected that there was no paper set in all trays when TrayAuto was selected for printing.	9309	2-90

Error message		Description	Error codes	Refer to:
First line	Second line			
No Paper MP	Reload paper in MP Tray.	When paper was fed from the MP tray, the MP paper empty sensor detected that no paper was in the MP tray. (At Fax / List printing)	---	4.2.2
		When printing from the MP tray, the MP paper empty sensor detected that no paper was in the MP tray.	9301	2-89
No Paper T1	Reload paper in Tray 1.	When paper was fed from the T1, the T1 paper feed sensor detected that no paper was in the T1. (At Fax / List printing)	---	4.2.1
		When printing from the T1, the T1 paper feed sensor detected that no paper was in the T1.	9302	2-90
No Toner	Open the Top Cover, then install Toner Cartridge. Black(BK).	Developing terminal voltage detected that the toner cartridge (black) was not installed.	6101	2-76
	Open the Top Cover, then install Toner Cartridge. Cyan(C).	Developing terminal voltage detected that the toner cartridge (cyan) was not installed.	6104	2-76
	Open the Top Cover, then install Toner Cartridge. Magenta(M).	Developing terminal voltage detected that the toner cartridge (magenta) was not installed.	6103	2-76
	Open the Top Cover, then install Toner Cartridge. Yellow(Y).	Developing terminal voltage detected that the toner cartridge (yellow) was not installed.	6102	2-76
No Tray T1	Reinstall Tray 1.	The T1 paper feed sensor detected that the T1 is open when printing from the T1 (before the registration of printing in the engine).	8501	2-86
		The T1 paper feed sensor detected that the T1 is open when printing from the T1 (after the registration of printing in the engine).	8505	2-86
No Waste Toner	Install the Waste Toner Box.	The electrodes of the high-voltage power supply PCB detected that no waste toner box was set.	6300	2-79

Error message		Description	Error codes	Refer to:
First line	Second line			
Out of Fax Memory	Delete unwanted fax data.	The memory becomes full when Fax preview is ON.	---	4.10.2
	Print fax data from All settings > Fax > Print Fax	The memory becomes full when Fax preview is OFF and memory reception is ON.	---	4.10.2
Out of Memory	Press Stop[x].	The memory is insufficient to expand the data of PC-Print.	C700	2-103
Paper loaded in MP Tray	Current MP Tray Settings Change the settings?	No paper was in the MP tray.	---	4.2.2
Print Data Full	Print Data is full. Press Stop[x] and delete the previously stored data.	The memory used to store secure print data exceeded the memory size for secure print data.	C800	2-103
Print Unable 01	Turn the power off and then back on again.	ASIC error or motor driver error occurred.	0101	2-62
Print Unable 02	Turn the power off and then back on again.	Cannot detect the synchronized signal of the paper feed motor. The speed of the paper feed motor does not stabilize within the specified time.	0201	2-62
		Cannot detect the synchronized signal of the process motor. The speed of the process motor does not stabilize within the specified time.	0202	2-62
Print Unable 05	Turn the power off and then back on again.	Detected the fuser unit temperature error.	0501	2-63
			0502	2-63
			0503	2-63
			0504	2-63
			0505	2-63
			0506	2-63
			050A	2-64
			050B	2-64
050C	2-64			
Print Unable 08	Turn the power off and then back on again.	An error occurred in the internal temperature sensor.	0800	2-64

Error message		Description	Error codes	Refer to:
First line	Second line			
Print Unable 09	Turn the power off and then back on again.	Detected irregular power supply for more than 100 times.	0900	2-65
Print Unable 0A	Turn the power off and then back on again.	Main PCB detected the fan failure.	0A02	2-65
Print Unable 0B	Turn the power off and then back on again.	An error occurred in the high-voltage power supply PCB while operating.	0B01	2-66
		An error occurred in the high-voltage power supply PCB when the machine was in the ready state.	0B02	2-66
Print Unable 0C	Turn the power off and then back on again.	An error occurred in the density sensor.	0C00	2-66
Print Unable 0E	Turn the power off and then back on again.	An error occurred during the high-voltage power supply PCB ID check.	0E00	2-66
Print Unable 10	Turn the power off and then back on again.	The registration mark sensor R is dirty and cannot normally receive reflected light.	1003	2-67
		The registration mark sensor L is dirty and cannot normally receive reflected light.	1004	2-67
Print Unable 1D	Turn the power off and then back on again.	A communication error occurred in the LED ASSY (black).	1D01	2-68
		A communication error occurred in the LED ASSY (yellow).	1D02	2-68
		A communication error occurred in the LED ASSY (magenta).	1D03	2-68
		A communication error occurred in the LED ASSY (cyan).	1D04	2-68
Print Unable 1E	Turn the power off and then back on again.	Main PCB and LED control PCB cannot access each other.	1E01	2-68
		Cannot read/write in the main PCB and LED control PCB.	1E02	2-68
Print Unable 2E	Turn the power off and then back on again.	Could not communicate with the cartridge sensor on the machine side.	2E00	2-71
		Cartridge sensor on the machine side does not work.	2E02	2-71
		Cartridge sensor version on the machine side is not available.	2E04	2-71

Error message		Description	Error codes	Refer to:
First line	Second line			
Print Unable 38	Turn the power off and then back on again.	A temperature error occurred in the external temperature/humidity sensor.	3801	2-71
Print Unable 3A	Turn the power off and then back on again.	A communication error occurred between the controller and engine in main PCB.	3A00	2-71
Print Unable A7	Turn the power off and then back on again.	Color parameter in the ROM does not match the first side or second side CIS.	A700	2-99
Print Unable C1	Turn the power off and then back on again.	Failed to save data to a USB flash memory when the USB DUMP was running.	C100	2-102
Print Unable D1	Turn the power off and then back on again.	An error occurred while initializing the modem.	D100	2-103
Print Unable DB	Turn the power off and then back on again.	A communication error occurred between the main ASIC and the recording ASIC.	DB00	2-104
Print Unable E0	Turn the power off and then back on again.	An error occurred at the ROM check sum in the firmware.	E000	2-104
Print Unable E1	Turn the power off and then back on again.	Program error	E100	2-104
Print Unable E5	Turn the power off and then back on again.	An error occurred during access to the DRAM in the main PCB.	E500	2-104
Print Unable E6	Turn the power off and then back on again.	Write error in the EEPROM of the main PCB	E600	2-104
Print Unable E7	Turn the power off and then back on again.	Detected an error in main PCB.	E701	2-104
			E702	2-104
Print Unable E9	Turn the power off and then back on again.	An error occurred while initializing the NFC.	E900	2-104
Print Unable ZC	Turn the power off and then back on again.	Detected that supply power is unstable (less than 100 times).	6F00	2-82

Error message		Description	Error codes	Refer to:
First line	Second line			
Registration	Registration failed. Insufficient Toner for Registration.	Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	9A02	2-95
		Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.	9902	2-93
	Registration failed. Press [OK]	An error occurred during patch data printing in manual color registration performed from the control panel.	9903	2-94
		An error occurred during patch data printing in auto color registration performed from the control panel.	9A03	2-96
	Registration failed. Turn the power off and then back on again.	An error occurred with the value measured during manual color registration performed from the control panel.	9901	2-93
		An error occurred with the value measured during auto color registration performed from the control panel.	9A01	2-95
Replace Toner	Open the Top Cover. Pull out the drum unit with toner to be replaced. Press the green lever. Replace toner.	Dot counter of the toner cartridge (black) or develop roller counter has reached the upper limit was detected.	4C01	2-74
		Dot counter of the toner cartridge (yellow) or develop roller counter has reached the upper limit was detected.	4C02	2-74
		Dot counter of the toner cartridge (magenta) or develop roller counter has reached the upper limit was detected.	4C03	2-74
		Dot counter of the toner cartridge (cyan) or develop roller counter has reached the upper limit was detected.	4C04	2-74
		During printing, dot counter of color toner cartridge or develop roller counter has reached the upper limit was detected.	4C05	2-74

Error message		Description	Error codes	Refer to:
First line	Second line			
Replace WT Box	Replace the Waste Toner Box inside the machine.	After the waste toner sensor detected that the waste toner box was almost full, pages more than the specified number have been printed.	4800	2-73
Scan Unable	Remove the original document. Turn the power off, then on again.	Image processing cannot be completed correctly because the number of pixels required for image processing is insufficient in the scanned first side data.	AD00	2-99
	Document is too long for 2-sided scanning. Press Stop[x].	The document scanning position sensor detected that the document length was 400 mm or longer and could not be fed to ADF (double-side restoration).	BF00	2-101
Scan Unable A0	Turn the power off, then on again.	Image processing was not completed correctly because the number of pixels required for image processing is insufficient in the scanned second side data.	A000	2-96
Scan Unable A9	Turn the power off and then back on again.	A scanning error occurred while processing the scanned image.	A900	2-99
Scan Unable AF	Turn the power off and then back on again.	Home position is still being detected even after the first side CIS unit was moved.	AF00	2-100
Scanner Error	-	A white level not within the standard was scanned when function code 55 was executed.	BB00	2-100
	-	A black level not within the standard was scanned when function code 55 was executed.	BD00	2-101
Self-Diagnostic	Turn the power off, then on again. Leave the machine for 15 min.	Some fuser unit errors occurred at power-ON or upon recovery from sleep mode.	6901	2-80
	Will Automatically Restart within 15 minutes.	After the error was detected at the fuser unit, power was turned ON again and the error is being checked. (If power is turned OFF and ON after error code 6901 occurred, this code is displayed for about 15 minutes.)	6902	2-80

Error message		Description	Error codes	Refer to:
First line	Second line			
Short paper	Open the Back Cover and then press [Retry].	The registration rear sensor detected that the paper loaded in the T1 was smaller than the specified size.	8D01	2-87
Size Error	Specify the correct paper size for Tray 1.	When printing from the T1, the size of paper specified from the driver set the size which was not supported by the T1.	9702	2-91
Size Error 2-sided	Press [OK]. Specify the correct paper and load the same size paper as the Printer driver setting.	For 2-sided printing, paper size setting of the printer driver that was not supported by 2-sided printing was selected.	9701	2-91
	Specify the correct paper	The registration rear sensor detected that the paper fed was smaller or larger than the specified size in 2-sided printing.	8A01	2-87
Size mismatch	Reload correct paper in MP Tray, then press [Retry].	The size of paper loaded in the MP tray and the one specified from the driver are not same when printing from the MP tray.	9001	2-89
	Reload correct paper in Tray1, then press [Retry].	The size of paper loaded in the T1 and the one specified from the driver are not same when printing from the T1.	9002	2-89
	Fax received. Set correct paper size in menu.	Paper size is not set to the specified size when receiving fax.	8E01	2-88
	Reload correct paper.	Detected that the size of paper set in the T1 was over 10 mm shorter than letter size during receiving fax data or printing a list or report.	8E02	2-88
Small paper	Open the Back Cover and then press [Retry].	The paper size indicated for printing data while the back cover is closed was under the specified value.	8D02	2-88
Storage Full	There is no space in the Flash Memory.	Storage memory was full and data could not be saved.	C900	2-103

Error message		Description	Error codes	Refer to:
First line	Second line			
Supplies	Belt End Soon	Number of pages printed with the belt unit will reach the upper limit soon.	4300	2-72
	Drum End Soon Black	Number of the black drum unit rotations reaches the upper limit soon.	4001	2-72
	Drum End Soon Cyan	Number of the cyan drum unit rotations reaches the upper limit soon.	4004	2-72
	Drum End Soon Magenta	Number of the magenta drum unit rotations reaches the upper limit soon.	4003	2-72
	Drum End Soon Yellow	Number of the yellow drum unit rotations reaches the upper limit soon.	4002	2-72
	Replace Belt	Number of pages printed with the belt unit has reached the upper limit.	4400	2-72
	Replace Drum Black	Number of the black drum unit rotations has reached the upper limit.	4201	2-72
	Replace Drum Cyan	Number of the cyan drum unit rotations has reached the upper limit.	4204	2-72
	Replace Drum Magenta	Number of the magenta drum unit rotations has reached the upper limit.	4203	2-72
	Replace Drum Yellow	Number of the yellow drum unit rotations has reached the upper limit.	4202	2-72
	Toner Low: BK	Dot counter of the toner cartridge (black) or develop roller counter reaches the upper limit soon.	4B01	2-74
	Toner Low: C	Dot counter of the toner cartridge (cyan) or develop roller counter reaches the upper limit soon.	4B04	2-74
	Toner Low: M	Dot counter of the toner cartridge (magenta) or develop roller counter reaches the upper limit soon.	4B03	2-74
	Toner Low: Y	Dot counter of the toner cartridge (yellow) or develop roller counter reaches the upper limit soon.	4B02	2-74
	WT Box End Soon	The waste toner sensor detected that the waste toner box is almost full.	4700	2-73

Error message		Description	Error codes	Refer to:
First line	Second line			
Toner Error	One or more Toner Cartridges are not detected. Pull out and reinsert all 4 Toner Cartridges.	The develop release sensor detected the develop roller disengagement or engagement failure.	6E00	2-81
Touchscreen Initialization Failed	Remove any material which is on the touchscreen.	An error occurred while initializing the touch panel.	D800	2-103
Tray removed	Current Tray Settings Change the settings?	T1 has not been closed yet.	---	4.14.4
Unable to Update:0001	Check the firmware update file and try again.	Unable to receive the system needed during the automatic firmware update with USB flash memory.	---	4.14.3
Unable to Update:0002		There is no "FIRM" folder in the USB flash memory during the automatic firmware update with USB flash memory.		
Unable to Update:0003		There is no target file in "FIRM" folder during the automatic firmware update with USB flash memory.		
Unable to Update:0004		Unable to access to the USB flash memory during the automatic firmware update with USB flash memory.		
Unable to Update:0005		Failed to analyze the firmware during the automatic firmware update with USB flash memory.		
Unable to Update:0006		There is a file that contains more than 119 words in "FIRM" folder during the automatic firmware update with USB flash memory.		
Unable to Update:0007		There is a firmware not for the machine model during the automatic firmware update with USB flash memory.		
Unable to Update:0008		Unable to update the firmware because other function is working during the automatic firmware update with USB flash memory.		

Error message		Description	Error codes	Refer to:
First line	Second line			
Unusable Device	Remove the Device. Turn the power off and back on again.	Overcurrent was caused because a USB device that did not meet the specifications was inserted into the USB port.	EC00	2-105
	-	A USB device that did not meet the specifications was inserted into the USB port.	---	4.14.1
Wrong Paper Size MP	Reload correct paper in MP Tray or press [Retry].	When printing from the MP tray, the size of paper set in the MP tray does not match the size specified by the driver.	---	4.14.1
Wrong Paper Size T1	Reload correct paper in Tray 1 or press [Retry].	When printing from the T1, the size of paper set in the T1 does not match the size specified by the driver.	---	4.14.1
Wrong Toner Cartridge	Open the Top Cover, then install Toner Cartridge.	Cartridge sensor detected that the toner cartridge does not support black was installed.	2200	2-69
		Cartridge sensor detected that the toner cartridge does not support yellow was installed.	2201	2-69
		Cartridge sensor detected that the toner cartridge does not support cyan was installed.	2202	2-69
		Cartridge sensor detected that the toner cartridge does not support magenta was installed.	2203	2-69
2-sided Disabled	Close the Back Cover of the machine.	The back cover sensor detected the open state when 2-sided printing is started (before the registration of printing in the engine).	8903	2-86
		The back cover sensor detected the open state during 2-sided printing (after the registration of printing in the engine).	8904	2-86

3.3 Communication Errors

Code 1	Code 2	Cause	Refer to:
10	07	No document set when calling.	4.11.1
10	08	Wrong fax number called.	4.13.1
11	01	No dial tone detected before dialing.	4.13.1
11	02	Busy tone detected before dialing.	4.13.1
11	03	2nd dial tone not detected.	4.13.1
11	05	No loop current detected.	4.13.1
11	06	Busy tone detected after dialing or receiving a call.	4.13.1
11	07	No response from the receiver in sending.	4.13.1
11	08	No response from the remote station in sending Session Initiation Protocol (SIP).	4.13.3
11	10	No tone detected after dialing.	4.13.1
11	11	No acknowledgement returned after Fax2 net command was sent.	4.13.1
13	12	Error signal received after Fax2 net command was sent.	4.13.1
16	09	No Cipher registration	4.13.1
17	01	Called using a dial number that cannot be used for the NGN line (33 digits or longer or non numeric characters).	4.13.2
17	07	No response from the caller in receiving.	4.13.2
1C	01	Detected that access to the NGN line was not authorized. (T38: 403 Forbidden)	4.13.3
1C	02	No file or folder (directory) found as a result of search via the NGN line. (T38: 404 Not Found)	4.13.3
1C	03	Remote station does not support the NGN line. (T38: 488 Not Acceptable Here)	4.13.3
1C	04	SIP (Session Initiation Protocol) connection not possible. (T38) USW NGN fax setting is OFF or calling attempted before acquisition of SIP information.	4.13.3
1C	05	Internal error detected in the communication network. (T38)	4.13.3
1C	06	SIP Server timeout (T38)	4.13.3
1C	08	An error other than 1C01,1C02,1C03,1C04,1C06,1D01,1D02 or 1D04 was detected.	4.13.3
1D	01	Detected that the NGN line was busy. (T38: 486 Busy)	4.13.3
1D	02	Detected that the NGN line was temporarily unavailable. (T38: 480 Temporarily Unavailable)	4.13.3
1D	04	Network cable not connected (Link Down detected) or not connected to the Network. (T38)	4.13.3

Code 1	Code 2	Cause	Refer to:
20	01	Unable to detect flag field.	4.13.3
20	02	Carrier was OFF for 200 ms or longer.	4.13.3
20	03	Abort detected ("1" in succession for 7 bits or more).	4.13.3
20	04	Overrun detected.	4.13.3
20	05	A frame received for 3 seconds or more.	4.13.3
20	06	CRC error in answerback.	4.13.3
20	07	Echo command received.	4.13.3
20	08	Invalid command received.	4.13.3
20	09	Command ignored in document setting or damping-out at turn-around transmission.	4.13.3
20	0A	T5 time-out error	4.13.3
20	0B	CRP received.	4.13.3
20	0C	EOR or NULL received.	4.13.3
20	0D	Corresponding command not received although the FIF command sending bit is ON.	4.13.3
20	0E	EOR command received.	4.13.3
20	13	Line disconnected without receiving DCN after receiving the last page. (After receiving EOP and sending CFR, received BYE before receiving DCN.) (T38)	4.13.3
32	01	Remote terminal only with V.29 capability in 2,400 or 4,800 bps transmission.	4.13.3
32	02	Remote terminal not ready for polling.	4.13.3
32	10	Remote terminal not equipped with password function or its password switch is OFF.	4.13.3
32	11	Remote terminal not equipped with or not ready for confidential mailbox function.	4.13.3
32	12	Remote terminal not equipped with or not ready for relay broadcasting function.	4.13.3
32	13	No confidential mail in the remote terminal.	4.13.3
32	14	Available memory space of the remote terminal is less than that required for reception of confidential mails or relay broad-casting instruction.	4.13.3
32	15	Remote terminal not equipped with Cipher receiving function.	4.13.3
32	16	Remote terminal not equipped with SEP function.	4.13.3
32	17	Remote terminal not equipped with SUB function.	4.13.3
32	18	Remote terminal not equipped with color function.	4.13.3
40	02	Illegal coding system requested.	4.13.3
40	03	Illegal recording width requested.	4.13.3

Code 1	Code 2	Cause	Refer to:
40	05	ECM requested although not allowed.	4.13.3
40	06	Polled while not ready.	4.13.3
40	07	No document to be sent when polled.	4.11.1
40	10	Nation code or manufacturer code not correct.	4.13.1
40	11	Group number not registered for relay broad-casting was specified or the number of addressees specified exceeded the maximum allowable number.	4.13.1
40	12	Retrieval attempted while not ready for retrieval.	4.13.1
40	13	Polled by any other manufacturers' terminal while waiting for secure polling.	4.13.1
40	14	Common key not registered although it needs to be used.	4.13.1
40	15	Black / Red data reception is requested when Black / Red receiving function is disabled.	4.13.3
40	16	Cipher transmission is requested when Cipher receiving function is disabled.	4.13.3
40	17	Invalid resolution selected.	4.13.3
40	20	Invalid full color mode selected.	4.13.3
50	01	Vertical resolution capability changed after compensation of background color.	4.13.3
63	01	"Password + last 4 digits of telephone number" does not match.	4.13.1
63	02	Password not correct	4.13.1
63	03	Polling ID not correct	4.13.1
63	04	Specified confidential ID and MailBox ID do not match.	4.13.1
63	05	Relay broad-casting ID not correct	4.13.1
63	06	Specified Retrieval ID and MailBox Retrieval ID do not match.	4.13.1
63	07	Select receiving ID not correct	4.13.2
63	08	Cipher Key not correct	4.13.2
74	xx	DCN received	4.13.3
80	01	Fallback impossible.	4.13.3
90	01	Unable to detect video signals or commands within 6 seconds after CFR is transmitted.	4.13.3
90	02	Received PPS containing invalid page count or block count.	4.13.3
A0	03	Error correction sequence not terminated even at final transmission speed after fallback.	4.13.3
A0	11	Receive buffer empty (5-second time-out)	4.13.2
A0	12	Receive buffer full during operation except receiving into memory.	4.13.4
A0	13	Decoding error continued on 500 lines or more.	4.13.3

Code 1	Code 2	Cause	Refer to:
A0	14	Decoding error continued for 15 seconds or more.	4.13.3
A0	15	Time-out: 13 seconds or more for one-line transmission.	4.13.3
A0	16	RTC not found or carrier OFF detected for 6 seconds.	4.13.3
A0	17	RTC found but no command detected for 60 seconds or longer.	4.13.3
A0	19	No video data to be sent.	4.13.3
A0	20	Cannot continue receiving color fax (remaining ink low).	4.13.3
A8	01	RTN, PIN, or ERR received (sending terminal).	4.13.3
A9	01	RTN, PIN, or ERR sent (receiving terminal).	4.13.3
AA	18	Receive buffer full during receiving data into memory.	4.13.4
B0	01	Polarity reversion detected.	4.13.2
B0	02	Unable to receive the next-page data.	4.13.2
B0	03	Unable to receive polling during turn-around transmission due to call reservation.	4.13.2
B0	04	PC interface error	4.13.2
C0	01	No common modulation mode or failed to poll.	4.13.3
C0	02	Unable to detect JM.	4.13.3
C0	03	Unable to detect CM.	4.13.3
C0	04	Unable to detect CJ.	4.13.3
C0	10	Cannot finish V. 34 negotiation or training.	4.13.3
C0	11	Modem error detected during V. 34 negotiation or training.	4.13.3
C0	20	Modem error detected while sending commands.	4.13.3
C0	21	Modem error detected while receiving commands.	4.13.3
C0	22	Control channel connection time-out.	4.13.3
C0	30	Modem error detected while sending video signals.	4.13.3
C0	31	Modem error detected while receiving video signals.	4.13.3
E0	01	Failed to detect 1,300 Hz signal in burn-in operation.	4.13.3
E0	02	Failed to detect PB signals in burn-in operation.	4.13.3
E0	03	Unable to detect commands in burn-in operation when RS232C is used.	4.13.3

4. TROUBLESHOOTING

4.1 Error Cause and Remedy

■ Error code 0101

ASIC error or motor driver error occurred.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 0201

Cannot detect the synchronized signal of the paper feed motor. The speed of the paper feed motor does not stabilize within the specified time.

Step	Cause	Remedy
1	Connection failure of the paper feed motor flat cable	Reconnect the paper feed motor flat cable.
2	Connection failure of the low-voltage power supply harness	Reconnect the low-voltage power supply harness.
3	Paper feed motor flat cable failure	Replace the paper feed motor flat cable.
4	Damaged parts in paper feed drive unit	Replace the paper feed drive unit.
5	Damaged parts in process drive unit	Replace the process drive unit.
6	Damaged fuser unit	Replace the fuser unit.
7	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
8	Main PCB failure	Replace the main PCB.

■ Error code 0202

Cannot detect the synchronized signal of the process motor. The speed of the process motor does not stabilize within the specified time.

Step	Cause	Remedy
1	Connection failure of the process motor flat cable	Reconnect the process motor flat cable.
2	Connection failure of the low-voltage power supply harness	Reconnect the low-voltage power supply harness.
3	Process motor flat cable failure	Replace the process motor flat cable.
4	Damaged parts in process drive unit	Replace the process drive unit.
5	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
6	Main PCB failure	Replace the main PCB.

■ **Error code 0501**

The center thermistor of the fuser unit has not reached the specified temperature within the specified time.

Error code 0502

The center thermistor of the fuser unit has not reached the specified temperature within the specified time after it was heated normally to the certain level.

Error code 0503

The center thermistor of the fuser unit detected a temperature higher than the specified value.

Error code 0504

After the heat unit was heated normally, the center thermistor of the fuser unit detected a temperature lower than the specified value.

Error code 0505

The center thermistor of the fuser unit detected a temperature rise greater than the specified value within the specified time.

Error code 0506

The center thermistor of the fuser unit detected a temperature fall greater than the specified value within the specified time.

<User Check>

- Turn OFF the power switch. After several seconds, turn ON the power again and check that this error is reset.

Step	Cause	Remedy
1	Connection failure of the center or side thermistor harness of the fuser unit	Reconnect the center or side thermistor harness of the fuser unit.
2	Connection failure of the fuser unit heater harness	Reconnect the fuser unit heater harness.
3	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
4	Connection failure of the low-voltage power supply harness	Reconnect the low-voltage power supply harness.
5	Eject sensor PCB failure	Replace the eject sensor PCB.
6	Fuser unit failure	Replace the fuser unit.
7	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
8	Main PCB failure	Replace the main PCB.

■ Error code 050A

The hardware detected a temperature error through the center thermistor or the side thermistor of the fuser unit.

Error code 050B

When the center thermistor of the fuser unit was lower than the idle temperature, the side thermistor detected a temperature higher than the specified temperature.

Error code 050C

When the center thermistor of the fuser unit was higher than the idle temperature, the side thermistor detected a temperature lower than the specified temperature.

<User Check>

- Turn OFF the power switch. After several seconds, turn ON the power again and check that this error is reset.

Step	Cause	Remedy
1	Connection failure of the center or side thermistor harness of the fuser unit	Reconnect the center or side thermistor harness of the fuser unit.
2	Connection failure of the fuser unit heater harness	Reconnect the fuser unit heater harness.
3	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
4	Connection failure of the low-voltage power supply harness	Reconnect the low-voltage power supply harness.
5	Eject sensor PCB failure	Replace the eject sensor PCB.
6	Fuser unit failure	Replace the fuser unit.
7	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
8	Main PCB failure	Replace the main PCB.

■ Error code 0800

An error occurred in the internal temperature sensor.

Step	Cause	Remedy
1	Connection failure of the internal temperature sensor harness	Reconnect the internal temperature sensor harness.
2	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
3	Eject sensor PCB failure	Replace the eject sensor PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 0900

Detected irregular power supply for more than 100 times.

<User Check>

- Turn OFF the power switch. After several seconds, turn ON the power again and check that this error is reset.

Step	Cause	Remedy
1	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB. Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5 to reset the irregular power supply detection counter after the replacement.
2	Main PCB failure	Replace the main PCB.

Note:

The irregular power supply detection error (Error code 0900) of the low-voltage power supply PCB occurs when there is a large distortion in the power supply voltage supplied to the machine. In this case, if the same power supply is used, the same error might occur again even if the low-voltage power supply PCB is replaced. For this reason, be sure to ask the user to rearrange the installation environment.

■ Error code 0A02

Main PCB detected the fan failure.

Step	Cause	Remedy
1	Connection failure of the fan harness	Reconnect the fan harness.
2	Connection failure of the high-voltage power supply flat cable	Reconnect the high-voltage power supply flat cable.
3	Fan failure	Replace the fan.
4	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
5	Main PCB failure	Replace the main PCB.

■ Error code 0B01

An error occurred in the high-voltage power supply PCB while operating.

■ Error code 0B02

An error occurred in the high-voltage power supply PCB when the machine was in the ready state.

<User Check>

- Slide the green tab of the drum unit to left and right for two to three times to clean the corona wire for all the four colors.
- There is a possibility of condensation. Turn the power switch OFF and ON, then open the top cover and the back cover and leave the machine more than 30 minutes.
- Replace the drum unit.

Step	Cause	Remedy
1	Dirt on the machine, the drum unit, the belt unit and the waste toner box terminal.	Clean the machine, the drum unit, the belt unit and the waste toner box terminal. (Refer to Fig. 2-11 (P2-78), Fig. 2-12 (P2-78), Fig. 2-16 (P2-119) and Fig. 2-17 (P2-123).)
2	Connection failure of the high-voltage power supply flat cable	Reconnect the high-voltage power supply flat cable.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 0C00

An error occurred in the density sensor.

Step	Cause	Remedy
1	Connection failure of the registration mark sensor L harness	Reconnect the registration mark sensor L harness.
2	Eject sensor PCB failure	Replace the eject sensor PCB.
3	Registration mark sensor L PCB failure	Replace the registration mark sensor L PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 0E00

An error occurred during the high-voltage power supply PCB ID check.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

■ Error code 1003

The registration mark sensor R is dirty and cannot normally receive reflected light.

<User Check>

- Clean the dirt on the belt unit or replace the belt unit.
- Replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor R	Clean the registration mark sensor R part of the registration mark sensor R PCB.
2	Dirt by toner inside the machine	Clean inside of the machine.
3	Registration mark sensor R PCB failure	Replace the registration mark sensor R PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 1004

The registration mark sensor L is dirty and cannot normally receive reflected light.

<User Check>

- Clean the dirt on the belt unit or replace the belt unit.
- Replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L	Clean the registration mark sensor L part of the registration mark sensor L PCB.
2	Dirt by toner inside the machine	Clean inside of the machine.
3	Registration mark sensor L PCB failure	Replace the registration mark sensor L PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 1400

Condensation occurred in the machine.

<User Check>

- Open the top and back covers and leave them for 30 minutes or more with the power ON. After that, close the top and back covers and turn OFF and ON the power switch.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 1D01**

A communication error occurred in the LED ASSY (black).

Error code 1D02

A communication error occurred in the LED ASSY (yellow).

Error code 1D03

A communication error occurred in the LED ASSY (magenta).

Error code 1D04

A communication error occurred in the LED ASSY (cyan).

Step	Cause	Remedy
1	Connection failure of an LED ASSY flat cable	Reconnect an LED ASSY flat cable.
2	Connection failure of the LED control flat cable	Reconnect the LED control flat cable.
3	An LED ASSY flat cable failure	Replace an LED ASSY flat cable.
4	LED control PCB failure	Replace the LED control PCB.
5	An LED ASSY failure	Replace an LED ASSY.
6	Main PCB failure	Replace the main PCB.

■ **Error code 1E01**

Main PCB and LED control PCB cannot access each other.

Error code 1E02

Cannot read/write in the main PCB and LED control PCB.

Step	Cause	Remedy
1	Connection failure of the LED control flat cable	Reconnect the LED control flat cable.
2	LED control PCB failure	Replace the LED control PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code 2100**

Toner cartridge other than black is installed.

Error code 2101

Toner cartridge other than yellow is installed.

Error code 2102

Toner cartridge other than cyan is installed.

Error code 2103

Toner cartridge other than magenta is installed.

<User Check>

- Install the toner cartridge on the specified place.
- Use the genuine toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 2200**

Cartridge sensor detected that the toner cartridge does not support black was installed.

Error code 2201

Cartridge sensor detected that the toner cartridge does not support yellow was installed.

Error code 2202

Cartridge sensor detected that the toner cartridge does not support cyan was installed.

Error code 2203

Cartridge sensor detected that the toner cartridge does not support magenta was installed.

<User Check>

- Reinstall the toner cartridge.
- Use the genuine toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 2400**

Black toner cartridge is not recognized by the cartridge sensor.

Error code 2401

Yellow toner cartridge is not recognized by the cartridge sensor.

Error code 2402

Cyan toner cartridge is not recognized by the cartridge sensor.

Error code 2403

Magenta toner cartridge is not recognized by the cartridge sensor.

<User Check>

- Reinstall the toner cartridge.
- Use the genuine toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 2500**

Black toner cartridge could not communicate with the cartridge sensor.

Error code 2501

Yellow toner cartridge could not communicate with the cartridge sensor.

Error code 2502

Cyan toner cartridge could not communicate with the cartridge sensor.

Error code 2503

Magenta toner cartridge could not communicate with the cartridge sensor.

<User Check>

- Reinstall the toner cartridge.
- Use the genuine toner cartridge.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirt on a cartridge sensor	Clean a cartridge sensor terminal.
2	Connection failure of a cartridge sensor harness	Reconnect a cartridge sensor harness.
3	Connection failure of the cartridge sensor relay flat cable	Reconnect the cartridge sensor relay flat cable.
4	Main PCB failure	Replace the main PCB.

■ **Error code 2E00**

Could not communicate with the cartridge sensor on the machine side.

Error code 2E02

Cartridge sensor on the machine side does not work.

Error code 2E04

Cartridge sensor version on the machine side is not available.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 3801**

A temperature error occurred in the external temperature/humidity sensor.

Step	Cause	Remedy
1	Connection failure of the external temperature/humidity sensor harness	Reconnect the external temperature/humidity sensor harness.
2	Main PCB failure	Replace the main PCB.

■ **Error code 3A00**

A communication error occurred between the controller and engine in main PCB.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 4001**

Number of the black drum unit rotations reaches the upper limit soon.

Error code 4002

Number of the yellow drum unit rotations reaches the upper limit soon.

Error code 4003

Number of the magenta drum unit rotations reaches the upper limit soon.

Error code 4004

Number of the cyan drum unit rotations reaches the upper limit soon.

Error code 4201

Number of the black drum unit rotations has reached the upper limit. (Printing does not stop.)

Error code 4202

Number of the yellow drum unit rotations has reached the upper limit. (Printing does not stop.)

Error code 4203

Number of the magenta drum unit rotations has reached the upper limit. (Printing does not stop.)

Error code 4204

Number of the cyan drum unit rotations has reached the upper limit. (Printing does not stop.)

<User Check>

- Prepare a new drum unit.

Step	Cause	Remedy
1	Replace the drum unit with a new one and reset the drum counter. If the error display is not cleared, the main PCB is faulty.	Replace the main PCB.

■ **Error code 4300**

Number of pages printed with the belt unit will reach the upper limit soon. (90%)

Error code 4400

Number of pages printed with the belt unit has reached the upper limit. (Printing does not stop.)

<User Check>

- Prepare a new belt unit.

Step	Cause	Remedy
1	Replace the belt unit with a new one and reset the belt counter. If the error display is not cleared, the main PCB is faulty.	Replace the main PCB.

■ Error code 4500

Number of used pages for the fuser unit has reached the upper limit. (Printing does not stop.)

Step	Cause	Remedy
1	End of life of the fuser unit	Replace the fuser unit. Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5 to reset the fuser unit counter after the replacement.
2	Replace the fuser unit with a new one and reset the fuser unit counter. If the error display is not cleared, the main PCB is faulty.	Replace the main PCB.

■ Error code 4700

The waste toner sensor detected that the waste toner box is almost full.

Error code 4800

After the waste toner sensor detected that the waste toner box was almost full, pages more than the specified number have been printed.

<User Check>

- Replace the waste toner box.

Step	Cause	Remedy
1	Connection failure of the high-voltage power supply flat cable	Reconnect the high-voltage power supply flat cable.
2	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code 4B01**

Dot counter of the toner cartridge (black) or develop roller counter reaches the upper limit soon.

Error code 4B02

Dot counter of the toner cartridge (yellow) or develop roller counter reaches the upper limit soon.

Error code 4B03

Dot counter of the toner cartridge (magenta) or develop roller counter reaches the upper limit soon.

Error code 4B04

Dot counter of the toner cartridge (cyan) or develop roller counter reaches the upper limit soon.

<User Check>

- Prepare a new toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 4C01**

Dot counter of the toner cartridge (black) or develop roller counter has reached the upper limit was detected.

Error code 4C02

Dot counter of the toner cartridge (yellow) or develop roller counter has reached the upper limit was detected.

Error code 4C03

Dot counter of the toner cartridge (magenta) or develop roller counter has reached the upper limit was detected.

Error code 4C04

Dot counter of the toner cartridge (cyan) or develop roller counter has reached the upper limit was detected.

Error code 4C05

During printing, dot counter of color toner cartridge or develop roller counter has reached the upper limit was detected.

<User Check>

- Replace the toner cartridge whose counter reached the upper limit.

Step	Cause	Remedy
1	Replace the toner cartridge with a new one and reset the toner counter. If the error display is not cleared, the main PCB is faulty.	Replace the main PCB.

■ **Error code 4F01**

The new toner sensor of the toner cartridge (black) could not detect a new cartridge properly.

Error code 4F02

The new toner sensor of the toner cartridge (yellow) could not detect a new cartridge properly.

Error code 4F03

The new toner sensor of the toner cartridge (magenta) could not detect a new cartridge properly.

Error code 4F04

The new toner sensor of the toner cartridge (cyan) could not detect a new cartridge properly.

<User Check>

- Replace the toner cartridge with a new toner cartridge again.
- If the machine is on the uneven surface, place it on a level surface.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

■ **Error code 5001**

Number of used pages for the PF kit MP has reached the upper limit. (Printing does not stop.)

Step	Cause	Remedy
1	End of life of the PF kit MP	Replace the PF kit MP. Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5 to reset the PF kit MP counter after the replacement.
2	If the error display is not cleared after the PF kit MP counter has been reset, the main PCB is faulty.	Replace the main PCB.

■ **Error code 5002**

Number of used pages for the PF kit 1 has reached the upper limit. (Printing does not stop.)

Step	Cause	Remedy
1	End of life of the PF kit 1	Replace the PF kit 1. Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5 to reset the PF kit 1 counter after the replacement.
2	If the error display is not cleared after the PF kit 1 counter has been reset, the main PCB is faulty.	Replace the main PCB.

■ **Error code 6001**

The top cover sensor detected that the top cover was open.

<User Check>

- Close the top cover.

Step	Cause	Remedy
1	Connection failure of the HVPS harness	Reconnect the HVPS harness.
2	Main PCB failure	Replace the main PCB.

■ **Error code 6004**

The eject sensor detected that the fuser cover was open.

<User Check>

- Close the fuser cover.

Step	Cause	Remedy
1	Eject actuator coming off or caught in some sections of the machine	Reattach the eject actuator.
2	Fuser cover attachment failure	Reattach the fuser cover.
3	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
4	Eject sensor PCB failure	Replace the eject sensor PCB.
5	Main PCB failure	Replace the main PCB.

■ **Error code 6101**

Developing terminal voltage detected that the toner cartridge (black) was not installed.

Error code 6102

Developing terminal voltage detected that the toner cartridge (yellow) was not installed.

Error code 6103

Developing terminal voltage detected that the toner cartridge (magenta) was not installed.

Error code 6104

Developing terminal voltage detected that the toner cartridge (cyan) was not installed.

<User Check>

- Set the toner cartridge correctly.

Step	Cause	Remedy
1	Dirt on the developing terminal of the machine	Clean the developing terminal of the machine. (Refer to Fig. 2-11 (P2-78).)
2	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code 6201**

GRID terminal signal detected that the black drum unit was not installed.

Error code 6202

GRID terminal signal detected that the yellow drum unit was not installed.

Error code 6203

GRID terminal signal detected that the magenta drum unit was not installed.

Error code 6204

GRID terminal signal detected that the cyan drum unit was not installed.

Error code 620A

Electrified terminal or GRID terminal signal detected that the black drum was not installed when the machine was turned ON.

Error code 620B

Electrified terminal or GRID terminal signal detected that the yellow drum was not installed when the machine was turned ON.

Error code 620C

Electrified terminal or GRID terminal signal detected that the magenta drum was not installed when the machine was turned ON.

Error code 620D

Electrified terminal or GRID terminal signal detected that the cyan drum was not installed when the machine was turned ON.

<User Check>

- Set the drum unit correctly.

Step	Cause	Remedy
1	Dirt on the electrified (corona wire) terminals or GRID terminals of the drum unit and those of the machine	Clean the electrified (corona wire) terminals or GRID terminals of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the high-voltage power supply PCB terminal	Clean the high-voltage power supply PCB terminal.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
4	Main PCB failure	Replace the main PCB.

■ Electrodes location of main body

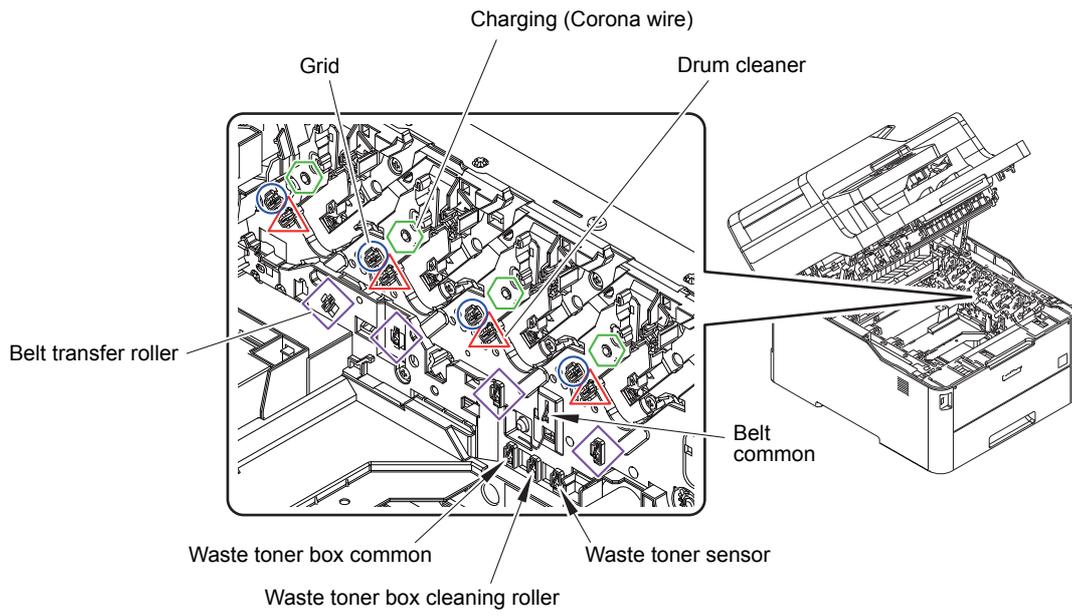


Fig. 2-11

■ Electrodes location of the drum unit

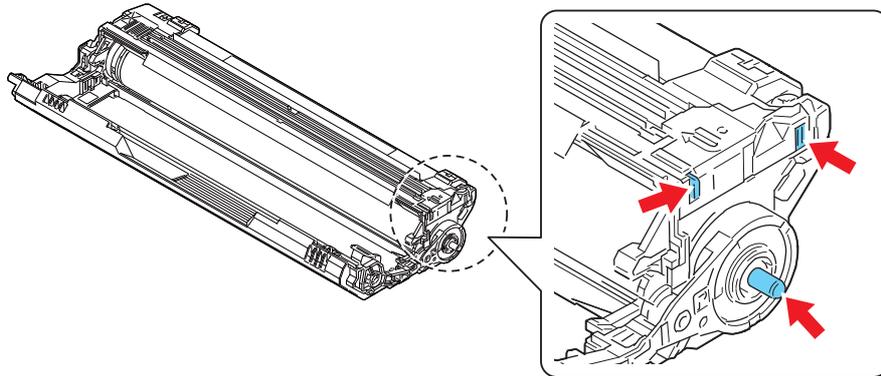


Fig. 2-12

■ Error code 6300

The electrodes of the high-voltage power supply PCB detected that no waste toner box was set.

<User Check>

- Re-insert the waste toner box in the correct position.

Step	Cause	Remedy
1	Dirt on the electrodes of the waste toner box and those of the machine	Clean the electrodes of the waste toner box and those of the machine. (Refer to Fig. 2-11 (P2-78).)
2	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
3	Main PCB failure	Replace the main PCB.

■ Error code 6400

The registration mark sensor detected that no belt unit was set.

<User Check>

- Re-insert the belt unit.

Step	Cause	Remedy
1	Connection failure of the registration mark sensor L harness	Reconnect the registration mark sensor L harness.
2	Registration mark sensor L PCB failure	Replace the registration mark sensor L PCB.
3	Main PCB failure	Replace the main PCB.

■ Error code 6801

The internal temperature sensor detected a temperature higher than the specified value.

<User Check>

- Lower the room temperature.
- Keep the machine away from heating appliances.
- Check that the fan is not clogged.

Step	Cause	Remedy
1	Connection failure of the internal temperature sensor harness	Reconnect the internal temperature sensor harness.
2	Main PCB failure	Replace the main PCB.

■ Error code 6901

Some fuser unit errors occurred at power-ON or upon recovery from sleep mode.

Error code 6902

After the error was detected at the fuser unit, power was turned ON again and the error is being checked. (If power is turned OFF and ON after error code 6901 occurred, this code is displayed for about 15 minutes.)

Step	Cause	Remedy
1	Connection failure of a fuser unit harness	Reconnect the fuser unit harness.
2	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
3	Fuser unit failure	Replace the fuser unit.
4	Eject sensor PCB failure	Replace the eject sensor PCB.
5	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
6	Main PCB failure	Replace the main PCB.

Note:

- Turn OFF the power switch. After the fuser unit has cooled sufficiently, turn ON the power switch again and leave the machine for 15 minutes. This problem may then be cleared.
- To release the fuser unit error after taking appropriate measures, enter the maintenance mode once and quit it with the function code 99.

■ Error code 6A00

Electric discharge that may be caused by dirt on the corona wire of the drum unit was detected.

Error code 6B01

Electric discharge was detected when the number of the black drum unit rotations had become more than twice of the upper limit.

Error code 6B02

Electric discharge was detected when the number of the yellow drum unit rotations had become more than twice of the upper limit.

Error code 6B03

Electric discharge was detected when the number of the magenta drum unit rotations had become more than twice of the upper limit.

Error code 6B04

Electric discharge was detected when the number of the cyan drum unit rotations had become more than twice of the upper limit.

<User Check>

- Slide the green tab of each drum unit to left and right for two to three times to clean the corona wire.
- Clean the electrode of each drum unit. (Refer to [Fig. 2-12 \(P2-78\)](#).)
- Replace each drum unit.

Step	Cause	Remedy
1	Dirt on the GRID terminals of the machine	Clean the GRID terminals of the machine. (Refer to Fig. 2-11 (P2-78) .)
2	Dirt on the high-voltage power supply PCB terminal	Clean the high-voltage power supply PCB terminal.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
4	Main PCB failure	Replace the main PCB.

■ Error code 6E00

The develop release sensor detected the develop roller disengagement or engagement failure.

Step	Cause	Remedy
1	Develop release clutch attachment failure	Refer to " P3-105 Assembling Note " to assemble the develop release clutch.
2	Connection failure of the develop release sensor harness	Reconnect the develop release sensor harness.
3	Develop release sensor failure	Replace the develop release sensor PCB.
4	Develop release clutch failure	Replace the process drive unit.
5	Main PCB failure	Replace the main PCB.

■ Error code 6F00

Detected that supply power is unstable (less than 100 times).

<User Check>

- Turn the power switch OFF and then back ON again.
- Use a noise filter on the power supply.

Step	Cause	Remedy
1	The power supply waveform is incorrect	Install a voltage stabilizer in the power supply part.

■ Error code 7000

After the registration rear sensor detects paper pass, the eject sensor does not detect paper pass.

<User Check>

- Remove the jammed paper.

Step	Cause	Remedy
1	Foreign object inside the machine	Remove the foreign object.
2	Eject actuator coming off or caught in some sections of the machine	Reattach the eject actuator.
3	Fuser cover attachment failure	Reattach the fuser cover.
4	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
5	Damaged fuser drive gear Z25	Replace the fuser drive gear Z25.
6	Damaged gears in the process drive system	Replace the process drive unit.
7	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
8	Eject sensor failure	Replace the eject sensor PCB.
9	Fuser unit failure	Replace the fuser unit.
10	Main PCB failure	Replace the main PCB.

■ Error code 7100

After the registration rear sensor detects the end of paper pass and the specified period of time has passed, the eject sensor continues to detect paper pass.

<User Check>

- Remove the jammed paper.
- Check if the back cover is open during 2-sided printing.

Step	Cause	Remedy
1	Foreign object in the rear of the machine	Remove the foreign object.
2	Eject actuator caught in some sections of the machine	Reattach the eject actuator.
3	Fuser cover attachment failure	Reattach the fuser cover.
4	Back cover attachment failure	Reattach the back cover.
5	Eject sensor failure	Replace the eject sensor PCB.
6	Back cover failure	Replace the back cover.
7	Paper eject ASSY failure	Replace the paper eject ASSY.
8	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
9	Fuser unit failure	Replace the fuser unit.
10	Main PCB failure	Replace the main PCB.

■ **Error code 7200**

When the paper is fed from the MP tray, after the MP registration front sensor detects paper pass, the registration rear sensor does not detect paper pass after a set period of time.

<User Check>

- Remove the jammed paper.
- Add the paper properly using the MP tray paper guide.
- Check if the papers loaded in the MP tray is not held down with your hand.
- Check if the double feed occurs in the MP tray.
- Close the top cover correctly.
- Check if the machine is used with the MP tray support and MP flap are in closed state.

Step	Cause	Remedy
1	Foreign object in the rear of the machine	Remove the foreign object.
2	Registration rear actuator coming off or caught in some sections of the machine	Reattach the registration rear actuator.
3	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
4	MP unit attachment failure	Reattach the MP unit.
5	MP separation pad worn out	Replace the PF kit MP.
6	Registration rear sensor failure	Replace the paper feed unit.
7	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
8	Main PCB failure	Replace the main PCB.

■ **Error code 7302**

When printing from the T1, the registration front sensor does not detect paper pass within the specified time after the T1 paper feed sensor detected paper pass.

<User Check>

- Remove the jammed paper.
- Add the paper properly using the T1 paper guide.

Step	Cause	Remedy
1	Foreign object in the front of the machine	Remove the foreign object.
2	Registration front actuator attachment failure	Reattach the registration front actuator.
3	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
4	Manual feed paper empty/regist rear/regist front sensor PCB failure	Replace the paper feed unit.
5	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
6	Main PCB failure	Replace the main PCB.

■ Error code 7800

After the first side is printed in 2-sided printing, the registration front sensor does not detect paper pass after a set period of time.

<User Check>

- Remove the jammed paper.
- Close the back cover correctly.

Step	Cause	Remedy
1	Foreign object in the rear of the machine or duplex tray	Remove the foreign object.
2	Connection failure of the duplex clutch harness	Reconnect the duplex clutch harness.
3	Duplex clutch failure	Replace the paper feed unit.
4	Paper eject roller failure	Replace the paper eject ASSY.
5	Duplex unit failure	Replace the duplex unit.
6	Main PCB failure	Replace the main PCB.

■ Error code 7900

When feeding from the manual feed slot, the registration rear sensor does not detect the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass. Or the registration rear sensor detected the paper pass within the specified time after the manual feed paper empty sensor detected the paper pass.

<User Check>

- Remove the jammed paper.
- Set the paper individually in the manual feed slot.

Step	Cause	Remedy
1	Foreign object in the rear of the machine or manual feed slot	Remove the foreign object.
2	Manual feed cover ASSY attachment failure	Reattach the manual feed cover ASSY.
3	Registration rear actuator attachment failure	Reattach the registration rear actuator.
4	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
5	Manual feed paper empty/regist rear/regist front sensor PCB failure	Replace the paper feed unit.
6	Main PCB failure	Replace the main PCB.

■ Error code 8501

The T1 paper feed sensor detected that the T1 is open when printing from the T1 (before the registration of printing in the engine).

<User Check>

- Close the T1 correctly.

Step	Cause	Remedy
1	T1 paper feed actuator coming off or caught in some sections of the machine	Reattach the T1 paper feed actuator.
2	T1 paper feed sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ Error code 8505

The T1 paper feed sensor detected that the T1 is open when printing from the T1 (after the registration of printing in the engine).

<User Check>

- Close the T1 correctly.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 8903

The back cover sensor detected the open state when 2-sided printing is started (before the registration of printing in the engine).

Error code 8904

The back cover sensor detected the open state during 2-sided printing (after the registration of printing in the engine).

<User Check>

- Close the back cover correctly.

Step	Cause	Remedy
1	Connection failure of the back cover sensor harness	Reconnect the back cover sensor harness.
2	Back cover sensor attachment failure	Reattach the back cover sensor.
3	Breakage of boss that presses the back cover sensor	Replace the back cover.
4	Main PCB failure	Replace the main PCB.

■ Error code 8A01

The registration rear sensor detected that the paper fed was smaller or larger than the specified size in 2-sided printing.

<User Check>

- Use specified paper.

Step	Cause	Remedy
1	Registration rear actuator caught in some sections of the machine	Reattach the registration rear actuator.
2	Registration rear sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ Error code 8C00

There is no paper in the manual feed slot when printing from the manual feed slot.

<User Check>

- Load paper to the manual feed slot.

Step	Cause	Remedy
1	Manual feed actuator caught in some sections of the machine	Reattach the manual feed actuator.
2	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
3	Manual feed paper empty sensor failure	Replace the paper feed unit.
4	Main PCB failure	Replace the main PCB.

■ Error code 8D01

The registration rear sensor detected that the paper loaded in the T1 was smaller than the specified size.

<User Check>

- Open the back cover and print using the straight paper path.
- Length of the paper is 114 mm or more.

Step	Cause	Remedy
1	Registration rear actuator caught in some sections of the machine	Reattach the registration rear actuator.
2	Registration rear sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ **Error code 8D02**

The paper size indicated for printing data while the back cover is closed was under the specified value.

<**User Check**>

- Length of the paper is 114 mm or more.

Step	Cause	Remedy
1	Registration rear actuator caught in some sections of the machine	Reattach the registration rear actuator.
2	Registration rear sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ **Error code 8E01**

Paper size is not set to the specified size when receiving fax.

<**User Check**>

- Set the paper size to A4 or Letter-size in the machine.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code 8E02**

Detected that the size of paper set in the T1 was over 10 mm shorter than letter size during receiving fax data or printing a list or report.

<**User Check**>

- Set A4 or Letter-size paper.

Step	Cause	Remedy
1	Registration rear actuator caught in some sections of the machine	Reattach the registration rear actuator.
2	Registration rear sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ **Error code 9001**

The size of paper loaded in the MP tray and the one specified from the driver are not same when printing from the MP tray.

Error code 9002

The size of paper loaded in the T1 and the one specified from the driver are not same when printing from the T1.

<User Check>

- Change the driver setting to be matched with the size of the paper set in the paper tray.

Step	Cause	Remedy
1	Registration rear actuator caught in some sections of the machine	Reattach the registration rear actuator.
2	Registration rear sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.

■ **Error code 9201**

When printing from the MP tray, paper type setting in the machine does not match the setting in the driver.

Error code 9202

When printing from the T1, paper type setting in the machine does not match the setting in the driver.

<User Check>

- Use the same paper type setting for the machine and driver.

Step	Cause	Remedy
1	Malfunction of the main PCB	Install the latest main firmware.
2	Main PCB failure	Replace the main PCB.

■ **Error code 9301**

When printing from the MP tray, the MP paper empty sensor detected that no paper was in the MP tray.

<User Check>

- Load paper to the MP tray.

Step	Cause	Remedy
1	MP paper empty actuator caught in some sections of the machine	Reattach the MP paper empty actuator.
2	Connection failure of the MP paper empty sensor harness	Reconnect the MP paper empty sensor harness.
3	Main PCB failure	Replace the main PCB.

■ **Error code 9302**

When printing from the T1, the T1 paper feed sensor detected that no paper was in the T1.

<User Check>

- Set paper in the T1.

Step	Cause	Remedy
1	Connection failure of the T1 paper empty/paper feed sensor harness	Reconnect the T1 paper empty/paper feed sensor harness.
2	Connection failure of the T1 pick-up clutch harness	Reconnect the T1 pick-up clutch harness.
3	T1 paper feed actuator caught in some sections of the machine	Reattach the T1 paper feed actuator.
4	Abrasion of the PF kit 1	Replace the PF kit 1.
5	T1 paper feed sensor failure	Replace the paper feed unit.
6	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
7	Paper feed motor failure	Replace the process drive unit.
8	Main PCB failure	Replace the main PCB.

■ **Error code 9309**

Detected that there was no paper set in all trays when TrayAuto was selected for printing.

<User Check>

- Set paper in the paper tray.

Step	Cause	Remedy
1	Connection failure of the MP paper empty sensor harness	Reconnect the MP paper empty sensor harness.
2	Connection failure of the T1 paper empty/paper feed sensor harness	Reconnect the T1 paper empty/paper feed sensor harness.
3	Connection failure of the T1 pick-up clutch harness	Reconnect the T1 pick-up clutch harness.
4	T1 paper feed actuator caught in some sections of the machine	Reattach the T1 paper feed actuator.
5	Abrasion of the PF kit 1	Replace the PF kit 1.
6	T1/MP paper empty sensor PCB failure	Replace the paper feed unit.
7	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
8	Paper feed motor failure	Replace the process drive unit.
9	Main PCB failure	Replace the main PCB.

■ Error code 9701

For 2-sided printing, paper size setting of the printer driver that was not supported by 2-sided printing was selected.

■ Error code 9702

When printing from the T1, the size of paper specified from the driver set the size which was not supported by the T1.

<User Check>

- Select the specified paper size in the driver and set paper with the same size to the specified T1.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 9801

An error occurred with the value measured during color density adjustment performed from the control panel.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L	Clean the registration mark sensor L.
2	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
3	Connection failure of the registration mark sensor L harness	Reconnect the registration mark sensor L harness.
4	Density sensor failure	Replace the registration mark sensor L PCB.
5	Main PCB failure	Replace the main PCB.

■ Error code 9802

Dot counter or develop roller counter of color toner has reached the upper limit during color density adjustment performed from the control panel.

<User Check>

- Replace the corresponding toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 9803

Density patch measurement ended unsuccessfully during color density adjustment performed from the control panel.

Error code 9804

An error occurred with the value measured during density sensor sensitivity calibration.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L	Clean the registration mark sensor L.
2	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
3	Connection failure of the registration mark sensor L harness	Reconnect the registration mark sensor L harness.
4	Density sensor failure	Replace the registration mark sensor L PCB.
5	Main PCB failure	Replace the main PCB.

■ Error code 9901

An error occurred with the value measured during manual color registration performed from the control panel.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L / registration mark sensor R	Clean the registration mark sensor L / registration mark sensor R.
2	Connection failure of the registration mark sensor L / registration mark sensor R harness	Reconnect the registration mark sensor L / registration mark sensor R harness.
3	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
4	Registration mark sensor L or registration mark sensor R failure	Replace the registration mark sensor ASSY.
5	Main PCB failure	Replace the main PCB.

■ Error code 9902

Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.

<User Check>

- Replace the corresponding toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 9903

An error occurred during patch data printing in manual color registration performed from the control panel.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L / registration mark sensor R	Clean the registration mark sensor L / registration mark sensor R.
2	Connection failure of the registration mark sensor L / registration mark sensor R harness	Reconnect the registration mark sensor L / registration mark sensor R harness.
3	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
4	Registration mark sensor L or registration mark sensor R failure	Replace the registration mark sensor ASSY.
5	Main PCB failure	Replace the main PCB.

■ Error code 9A01

An error occurred with the value measured during auto color registration performed from the control panel.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L / registration mark sensor R	Clean the registration mark sensor L / registration mark sensor R.
2	Connection failure of the registration mark sensor L / registration mark sensor R harness	Reconnect the registration mark sensor L / registration mark sensor R harness.
3	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
4	Registration mark sensor L or registration mark sensor R failure	Replace the registration mark sensor ASSY.
5	Main PCB failure	Replace the main PCB.

■ Error code 9A02

Dot counter or develop roller counter of color toner has reached the upper limit during auto color registration performed from the control panel.

<User Check>

- Replace the corresponding toner cartridge.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ Error code 9A03

An error occurred during patch data printing in auto color registration performed from the control panel.

<User Check>

- Check if the toner cartridges are set in the correct order of colors.
- Replace the toner cartridge.
- Replace the drum unit.
- If the belt unit has a scratch, replace it.
- If “WT Box End Soon” is displayed on the LCD and the belt unit has dirt, replace the waste toner box.

Step	Cause	Remedy
1	Dirt on the registration mark sensor L / registration mark sensor R	Clean the registration mark sensor L / registration mark sensor R.
2	Connection failure of the registration mark sensor L / registration mark sensor R harness	Reconnect the registration mark sensor L / registration mark sensor R harness.
3	Failure in printed measurement	If failure occurs when printing “K/W/Y/M/C” in “Function code 71”, refer to “4.3 Troubleshooting for Image Defects” in this chapter and take a measure.
4	Registration mark sensor L or registration mark sensor R failure	Replace the registration mark sensor ASSY.
5	Main PCB failure	Replace the main PCB.

■ Error code A000

Image processing was not completed correctly because the number of pixels required for image processing is insufficient in the scanned second side data.

Step	Cause	Remedy
1	Incorrect correction data for second side CIS unit	Execute “Set CIS scan area (Function code 55)”.
2	Second side CIS unit failure	Replace the second side CIS unit.
3	Main PCB failure	Replace the main PCB.

■ Error code A200

The document scanning position sensor detected that the document length was 90 cm or more during the one-side scanning.

<User Check>

- Use the paper less than A4 size.
- Remove the jammed document.

Step	Cause	Remedy
1	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.
2	Document scanning position sensor failure	Replace the document scanning position sensor PCB.
3	Main PCB failure	Replace the main PCB.

■ Error code A300

The document scanning position sensor has not detected the document passing even after the document has been fed for the specified time.

<User Check>

- Adjust the document guide to suit the document size.
- Remove the jammed document.

Step	Cause	Remedy
1	Foreign object inside the ADF	Remove the foreign objects inside the ADF.
2	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.
3	Connection failure of the document scanning position sensor harness	Reconnect the document scanning position sensor harness.
4	Document scanning position sensor failure	Replace the document scanning position sensor PCB.
5	Main PCB failure	Replace the main PCB.

■ Error code A400

The ADF cover sensor detected that the ADF cover was open.

<User Check>

- Close the ADF cover correctly.

Step	Cause	Remedy
1	ADF cover actuator caught in some sections of the machine	Reattach the ADF cover actuator.
2	ADF cove sensor attachment failure	Reattach the ADF cover sensor.
3	ADF cover attachment failure	Reattach the ADF cover.
4	Connection failure of the ADF cover sensor harness.	Reconnect the ADF cover sensor harness.
5	Damage of the ADF cover	Replace the ADF cover.
6	ADF cover sensor failure	Replace the ADF unit.
7	Main PCB failure	Replace the main PCB.

■ Error code A500

When scanning the fax, white or black correction data for the first side CIS unit was not within the correct range (first time).

Error code A600

When scanning the fax, white or black correction data for the first side CIS unit was not within the correct range (second time).

Step	Cause	Remedy
1	Incorrect correction data for first side CIS unit	Execute "Acquire white level data (Function code 55)".
2	Damaged first side CIS flat cable	Replace the first side CIS flat cable.
3	First side CIS unit failure	Replace the first side CIS unit.
4	White tape failure	Replace the document scanner unit.
5	Main PCB failure	Replace the main PCB.

■ Error code A700

Color parameter in the ROM does not match the first side or second side CIS.

■ Error code A900

A scanning error occurred while processing the scanned image.

Step	Cause	Remedy
1	Incorrect correction data for first side or second side CIS unit	Execute "Set CIS scan area (Function code 55)".
2	Damaged first side CIS flat cable	Replace the first side CIS flat cable.
3	Damaged second side CIS flat cable	Replace the second side CIS flat cable.
4	First side CIS unit failure	Replace the first side CIS unit.
5	Second side CIS unit failure	Replace the second side CIS unit.
6	Main PCB failure	Replace the main PCB.

■ Error code AC00

When scanning the fax, white or black correction data for the second side CIS was not within the correct range (first time).

Step	Cause	Remedy
1	Incorrect correction data for second side CIS unit	Execute "Acquire white level data (Function code 55)".
2	Dirt on the white tape on the second side document hold	Clean the white tape on the second side document hold.
3	Damaged second side CIS flat cable	Replace the second side CIS flat cable.
4	Second side CIS unit failure	Replace the second side CIS unit.
5	White tape failure	Replace the ADF unit.
6	Main PCB failure	Replace the main PCB.

■ Error code AD00

Image processing cannot be completed correctly because the number of pixels required for image processing is insufficient in the scanned first side data.

Step	Cause	Remedy
1	Incorrect correction data for first side CIS unit	Execute "Set CIS scan area (Function code 55)".
2	Connection failure of the first side CIS flat cable	Reconnect the first side CIS flat cable.
3	First side CIS unit failure	Replace the first side CIS unit.
4	White tape failure	Replace the document scanner unit.
5	Main PCB failure	Replace the main PCB.

■ **Error code AF00**

Home position is still being detected even after the first side CIS unit was moved.

Step	Cause	Remedy
1	Dust on the CIS guide shaft	Remove the dust on the CIS guide shaft.
2	CIS drive belt coming off	Reattach the CIS drive belt.
3	Wrong wiring of the first side CIS flat cable	Reattach the first side CIS flat cable.
4	Connection failure of the FB motor harness	Reconnect the FB motor harness.
5	Damaged first side CIS flat cable	Replace the first side CIS flat cable.
6	First side CIS unit failure	Replace the first side CIS unit.
7	FB motor failure	Replace the document scanner unit.
8	Main PCB failure	Replace the main PCB.

■ **Error code B000**

Detected that the first side CIS flat cable or second side CIS flat cable was not inserted correctly when function code 55 was executed.

Step	Cause	Remedy
1	Connection failure of the first side CIS flat cable	Reconnect the first side CIS flat cable.
2	Connection failure of the second side CIS flat cable	Reconnect the second side CIS flat cable.
3	Damaged first side CIS flat cable	Replace the first side CIS flat cable.
4	Damaged second side CIS flat cable	Replace the second side CIS flat cable.
5	First side CIS unit failure	Replace the first side CIS unit.
6	Second side CIS unit failure	Replace the second side CIS unit.
7	Main PCB failure	Replace the main PCB.

■ **Error code BB00**

A white level not within the standard was scanned when function code 55 was executed.

Step	Cause	Remedy
1	Dirt on the second side document hold	Clean the second side document hold.
2	First side CIS unit failure	Replace the first side CIS unit.
3	Second side CIS unit failure	Replace the second side CIS unit.
4	Second side document hold failure	Replace the ADF unit.
5	White tape failure	Replace the document scanner unit.
6	Main PCB failure	Replace the main PCB.

■ Error code BC00

When scanning the fax, white or black correction data for the second side CIS was not within the correct range (second time).

Step	Cause	Remedy
1	Incorrect correction data for second side CIS unit	Execute "Acquire white level data (Function code 55)".
2	Dirt on the white tape on the second side document hold	Clean the white tape on the second side document hold.
3	Damaged second side CIS flat cable	Replace the second side CIS flat cable.
4	Second side CIS unit failure	Replace the second side CIS unit.
5	White tape failure	Replace the ADF unit.
6	Main PCB failure	Replace the main PCB.

■ Error code BD00

A black level not within the standard was scanned when function code 55 was executed.

Step	Cause	Remedy
1	Dirt on the second side document hold	Clean the second side document hold.
2	First side CIS unit failure	Replace the first side CIS unit.
3	Second side CIS unit failure	Replace the second side CIS unit.
4	Second side document hold failure	Replace the ADF unit.
5	White tape failure	Replace the document scanner unit.
6	Main PCB failure	Replace the main PCB.

■ Error code BF00

The document scanning position sensor detected that the document length was 400 mm or longer and could not be fed to ADF (double-side restoration).

<User Check>

- Set the specified size paper.

Step	Cause	Remedy
1	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.
2	Document scanning position sensor failure	Replace the document scanning position sensor PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code C001**

Timeout occurred with access request sent to server due to incorrect server address, network disconnection, or inactive server.

Error code C002

User authentication is unavailable due to incorrect user name, incorrect password, or asynchronous date and time between the machine and server.

Error code C003

Cannot access to the file because the directory name is wrong, writing into directory is not permitted, or writing into file is locked or not permitted.

Error code C004

Cannot acquire current time which is required for user authentication because the time has not been acquired.

<User Check>

- Refer to the online User's Guide to set the network again.
- Check the LAN cable routing.
- Check the wireless LAN settings.

Step	Cause	Remedy
1	Connection failure of the wireless LAN PCB connector	Reconnect the wireless LAN PCB connector.
2	Wireless LAN PCB failure	Replace the wireless LAN PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code C100**

Failed to save data to a USB flash memory when the USB DUMP was running.

<User Check>

- Check that there is enough space in the USB flash memory.
- Replace the USB flash memory.

Step	Cause	Remedy
1	Connection failure of the USB host harness	Reconnect the USB host harness.
2	USB host PCB failure	Replace the USB host PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code C700**

The memory is insufficient to expand the data of PC-Print.

Error code C800

The memory used to store secure print data exceeded the memory size for secure print data.

Error code C900

Storage memory was full and data could not be saved.

<User Check>

- Print the print data stored in the memory.
- Divide the print data and print them separately.
- Organize data inside the storage memory.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code D100**

An error occurred while initializing the modem.

Error code D200

Detected that the modem PCB is not connected.

Step	Cause	Remedy
1	Connection failure of the modem flat cable	Reconnect the modem flat cable.
2	Modem flat cable failure	Replace the modem flat cable.
3	Modem PCB failure	Replace the modem PCB.
4	Main PCB failure	Replace the main PCB.

■ **Error code D800**

An error occurred while initializing the touch panel.

Step	Cause	Remedy
1	Connection failure of the panel flat cable	Reconnect the panel flat cable.
2	Touch panel ASSY failure	Replace the touch panel ASSY.
3	Panel PCB failure	Replace the panel PCB.
4	Main PCB failure	Replace the main PCB.

■ **Error code DB00**

A communication error occurred between the main ASIC and the recording ASIC.

Error code E000

An error occurred in the ROM check sum.

Error code E100

Program error

<User Check>

- Install the latest main firmware.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code E500**

An error occurred during access to the DRAM in the main PCB.

Error code E600

Write error in the EEPROM of the main PCB

Error code E701

System error in the flash ROM

Error code E702

Read error in the flash ROM

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ **Error code E900**

An error occurred while initializing the NFC.

Step	Cause	Remedy
1	Connection failure of the NFC flat cable	Reconnect the NFC flat cable.
2	NFC PCB failure	Replace the NFC PCB.
3	Main PCB failure	Replace the main PCB.

■ **Error code EC00**

Overcurrent was caused because a USB device that did not meet the specifications was inserted into the USB port.

<User Check>

- Disconnect the USB device from the USB flash memory port and turn the machine OFF. Turn the machine ON again after a while.
- Replace the USB device with a different one.

Step	Cause	Remedy
1	USB host PCB failure	Replace the USB host PCB.
2	Main PCB failure	Replace the main PCB.

■ **Error code F900**

The spec code was not entered correctly.

Step	Cause	Remedy
1	The power was turned OFF while function code 74 was running.	Reenter the spec code. (Refer to "1.3.28 Configure for country/region and model (Function code 74)" in Chapter 5.)
2	Main PCB failure	Replace the main PCB.

4.2 Troubleshooting for Paper Feeding Problems

Problems related to paper feeding are end user recoverable if following the User Check items. If the same problem occurs again, follow each procedure in the order of the number described in the Step column in the tables below.

4.2.1 No paper feeding from T1

<User Check>

- Check that the paper is set in the T1 correctly.
- Check that there is not too much paper set in the T1.
- Flip over the paper in the T1 or rotate the paper 180°.
- Check that the thickness of the paper is 60 to 163 g/m².
- Check if the paper feeding from the T1 is set.
- Flip through the paper and reset it in the T1.
- Clean the T1 pick-up roller.

Step	Cause	Remedy
1	Dirt on the paper dust cleaning roller of the T1	Refer to the figure below to clean the paper dust cleaning roller and inside of the paper dust cleaning roller cover.
2	T1 roller holder ASSY attachment failure	Reattach the T1 roller holder ASSY correctly.
3	Connection failure of the paper feed motor flat cable	Reconnect the paper feed motor flat cable.
4	Connection failure of the T1 paper empty/paper feed sensor harness	Reconnect the T1 paper empty/paper feed sensor harness.
5	Connection failure of the T1 pick-up clutch harness	Reconnect the T1 pick-up clutch harness.
6	Abrasion of the T1 pick-up roller	Replace the PF kit 1.
7	Damaged gear/lift gear	Replace the T1.
8	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
9	Paper feed motor failure	Replace the process drive unit.
10	Paper feed unit failure	Replace the paper feed unit.
11	Damaged fuser unit	Replace the fuser unit.
12	Main PCB failure	Replace the main PCB.

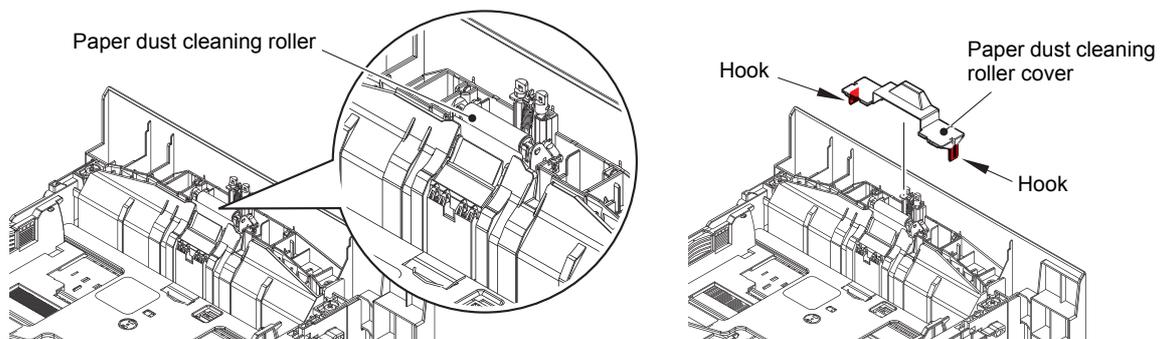


Fig. 2-13

4.2.2 No paper feeding from MP tray

<User Check>

- Check that the paper is set in the MP tray deeply.
- Check that too much paper is not loaded in the MP tray.
- Check if the machine is used with the MP tray support and MP flap are in closed state.
- Check that the thickness of the paper is 60 to 163 g/m².
- Check that the T1 is not set as the paper tray by the printer driver.
- Flip through the paper and reset it in the MP tray.
- Clean the MP paper pick-up roller.
- Check whether the paper tray is closed correctly.

Step	Cause	Remedy
1	MP roller holder ASSY attachment failure	Reattach the MP roller holder ASSY correctly.
2	Connection failure of the paper feed motor flat cable	Reconnect the paper feed motor flat cable.
3	Connection failure of the MP paper empty sensor harness	Reconnect the MP paper empty sensor harness.
4	Connection failure of the MP registration sensor harness	Reconnect the MP registration sensor harness.
5	Abrasion of the MP paper pick-up roller	Replace the PF kit MP.
6	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
7	Paper feed motor failure	Replace the process drive unit.
8	Paper feed unit failure	Replace the paper feed unit.
9	Damaged fuser unit	Replace the fuser unit.
10	Main PCB failure	Replace the main PCB.

4.2.3 No paper feeding from manual feed slot

<User Check>

- Check that the paper is set into the deepest part of the manual feed slot.
- Check that multiple sheets of paper are not set in the manual feed slot.
- Check that the thickness of the paper is 60 to 163 g/m².
- Check that the T1 is not set as the pick-up tray.
- Check that the T1 is closed correctly.

Step	Cause	Remedy
1	Manual feed paper actuator coming off	Reattach the manual feed paper actuator.
2	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
3	Manual feed paper empty/regist rear/regist front sensor PCB failure	Replace the paper feed unit.
4	Paper feed drive unit failure	Replace the paper feed drive unit.
5	Damaged fuser unit	Replace the fuser unit.
6	Main PCB failure	Replace the main PCB.

4.2.4 Multiple sheets of paper are fed

<User Check>

- Check that there is not too much paper set in each paper tray.
- Check that the paper is set in each paper tray correctly.
- Flip over the paper in each paper tray or rotate the paper 180°.
- Check that the thickness of the paper is 60 to 163 g/m².
- Flip through the paper and reset it in the paper tray.

Step	Cause	Remedy
1	Abrasion of a separation pad ASSY	Replace the appropriate PF kit.

4.2.5 Paper becomes wrinkled

<User Check>

- Check that the paper is set in each paper tray correctly.
- Flip over the paper in each paper tray or rotate the paper 180°.
- Adjust each paper guide according to each paper size.
- Check that the thickness of the paper is 60 to 163 g/m².
- Check that the paper is not damp.
- Check that there is no dust stuck to the heat roller or pressure roller of the fuser unit.
- Check that the type of paper is appropriate.
- Check that the right and left envelope levers of the fuser unit are not set in the different positions.

Step	Cause	Remedy
1	Paper eject ASSY failure	Replace the paper eject ASSY.
2	Fuser unit failure	Replace the fuser unit.

4.2.6 Paper is fed at an angle

<User Check>

- Check that the paper is set in each paper tray correctly.
- Flip over the paper in each paper tray or rotate the paper 180°.
- Adjust each paper guide according to each paper size.
- Check that the thickness of the paper is 60 to 163 g/m².
- Check that there is not too much paper set in the paper tray.
- Check that the type of paper is appropriate.
- Clean each paper pick up roller.
- Check that the green envelope lever of the fuser cover is not lowered on only one side.

Step	Cause	Remedy
1	One-side abrasion of the paper pick up rollers	Replace the appropriate PF kit.
2	Paper feed unit failure	Replace the paper feed unit.

4.2.7 Paper curls

<User Check>

- Change the driver setting to be matched with the size of the paper set in the paper tray.
- Select "Reduce Paper Curl" in the driver.
- Check that the paper is set in each paper tray correctly.
- Open the back cover and try printing with straight paper ejection mode.

Step	Cause	Remedy
1	Fuser unit failure	Replace the fuser unit.
2	Main PCB failure	Replace the main PCB.

4.2.8 Unable to perform 2-sided printing

<User Check>

- Close the back cover completely.
- Close the T1 completely.
- Set the driver setting to 2-sided printing.
- Use A4 or Letter paper specified by the manufacturer.

Step	Cause	Remedy
1	Eject actuator coming off	Reattach the eject actuator.
2	Back cover failure	Replace the back cover.
3	Duplex clutch failure	Replace the paper feed unit.
4	Duplex unit failure	Replace the duplex unit.
5	Eject sensor failure	Replace the eject sensor PCB.
6	Paper eject ASSY failure	Replace the paper eject ASSY.
7	Main PCB failure	Replace the main PCB.

4.2.9 Paper jam

■ Paper jam at the T1

<User Check>

- Check that the paper is set in the T1 correctly.
- Flip over the paper in the T1 or rotate the paper 180°.
- Adjust each paper guide according to the paper size.
- Check that there is not too much paper set.
- Check that the thickness of the paper is 60 to 163 g/m².
- Flip through the paper and reset it in the T1.

Step	Cause	Remedy
1	Foreign object around the T1	Remove the foreign object.
2	Paper dust cleaning roller attachment failure	Reattach the paper dust cleaning roller.
3	Paper feed actuator coming off	Reattach the paper feed actuator.
4	Registration front actuator coming off	Reattach the registration front actuator.
5	Connection failure of the manual feed paper empty/regist rear/regist front sensor harness	Reconnect the manual feed paper empty/regist rear/regist front sensor harness.
6	Connection failure of the registration clutch harness	Reconnect the registration clutch harness.
7	Connection failure of the T1 paper empty/paper feed sensor harness	Reconnect the T1 paper empty/paper feed sensor harness.
8	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
9	Paper feed motor failure	Replace the process drive unit.
10	Paper feed unit failure	Replace the paper feed unit.
11	Damaged fuser unit	Replace the fuser unit.
12	Main PCB failure	Replace the main PCB.

■ Paper jam at the MP tray

<User Check>

- Check that the paper is set in the MP tray correctly.
- Flip over the paper in the MP tray or rotate the paper 180°.
- Adjust each paper guide according to each paper size.
- Check that there is not too much paper set.
- Check that the thickness of the paper is 60 to 163 g/m².
- Flip through the paper and reset it in the MP tray.

Step	Cause	Remedy
1	Foreign object around the MP tray	Remove the foreign object.
2	Connection failure of the MP paper empty sensor harness	Reconnect the MP paper empty sensor harness.
3	MP registration front actuator coming off	Reattach the MP registration front actuator.
4	Connection failure of the registration solenoid harness	Reconnect the registration solenoid harness.
5	MP paper empty sensor failure	Replace the MP paper empty sensor PCB.
6	Paper feed motor failure	Replace the process drive unit.
7	Paper feed unit failure	Replace the paper feed unit.
8	Damaged fuser unit	Replace the fuser unit.
9	Main PCB failure	Replace the main PCB.

■ Paper jam at the manual feed slot

<User Check>

- Check that the paper is set in the manual feed slot correctly.
- Flip over the paper in the manual feed slot or rotate the paper 180°.
- Adjust the paper guide according to the paper size.
- Check that multiple sheets of paper are not set.
- Check that the thickness of the paper is 60 to 163 g/m².

Step	Cause	Remedy
1	Foreign object around the manual feed slot	Remove the foreign object.
2	Registration front actuator coming off	Reattach the registration front actuator.
3	Connection failure of the registration clutch harness	Reconnect the registration clutch harness.
4	Damaged gears in the paper feed drive unit	Replace the paper feed drive unit.
5	Paper feed motor failure	Replace the process drive unit.
6	Damaged fuser unit	Replace the fuser unit.
7	Main PCB failure	Replace the main PCB.

■ Paper jam at the paper feeding section at the center of the machine

<User Check>

- Check that the paper is set in each paper tray correctly.
- Flip over the paper in each paper tray or rotate the paper 180°.
- Adjust each paper guide according to the paper size.
- Check that there is not too much paper set in each paper tray.
- Check that the thickness of the paper is 60 to 163 g/m².
- Flip through the paper and reset it in the paper tray.
- Check that the belt unit is installed correctly.
- Replace the drum unit.
- Replace the belt unit.

Step	Cause	Remedy
1	Foreign object inside the machine	Remove the foreign object.
2	Eject actuator coming off	Reattach the eject actuator.
3	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
4	Fuser cover attachment failure	Reattach the fuser cover.
5	Damaged fuser drive gear	Replace the fuser drive gear.
6	Eject sensor failure	Replace the eject sensor PCB.
7	Registration rear sensor failure	Replace the paper feed unit.
8	Paper feed motor or process motor failure	Replace the process drive unit.
9	Damaged fuser unit	Replace the fuser unit.
10	Main PCB failure	Replace the main PCB.

■ Paper jam at the eject section

<User Check>

- Check that the paper is set in each paper tray correctly.
- Flip over the paper in each paper tray or rotate the paper 180°.
- Adjust each paper guide according to the paper size.
- Check that there is not too much paper set in each paper tray.
- Check that the thickness of the paper is 60 to 163 g/m².
- Flip through the paper and reset it in the paper tray.

Step	Cause	Remedy
1	Foreign object in the rear of the machine	Remove the foreign object.
2	Eject actuator coming off	Reattach the eject actuator.
3	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
4	Fuser cover attachment failure	Reattach the fuser cover.
5	Eject sensor failure	Replace the eject sensor PCB.
6	Paper feed motor or process motor failure	Replace the process drive unit.
7	Paper eject unit failure	Replace the paper eject unit.
8	Damaged fuser unit	Replace the fuser unit.
9	Main PCB failure	Replace the main PCB.

■ Paper jam at the duplex tray

<User Check>

- Flip over the paper in each paper tray or rotate the paper 180°.
- Check that the thickness of the paper is 60 to 163 g/m² for the duplex tray.
- Flip through the paper and reset it in the paper tray.
- Use A4 or Letter paper specified by the manufacturer.

Step	Cause	Remedy
1	Foreign object in the duplex paper feeding system	Remove the foreign object.
2	Fuser cover attachment failure	Reattach the fuser cover.
3	Back cover failure	Replace the back cover.
4	T1 duplex paper feeding system failure	Replace the T1.
5	Duplex clutch failure	Replace the paper feed unit.
6	Duplex unit failure	Replace the duplex unit.
7	Main PCB failure	Replace the main PCB.

4.3 Troubleshooting for Image Defects

4.3.1 Image defect examples


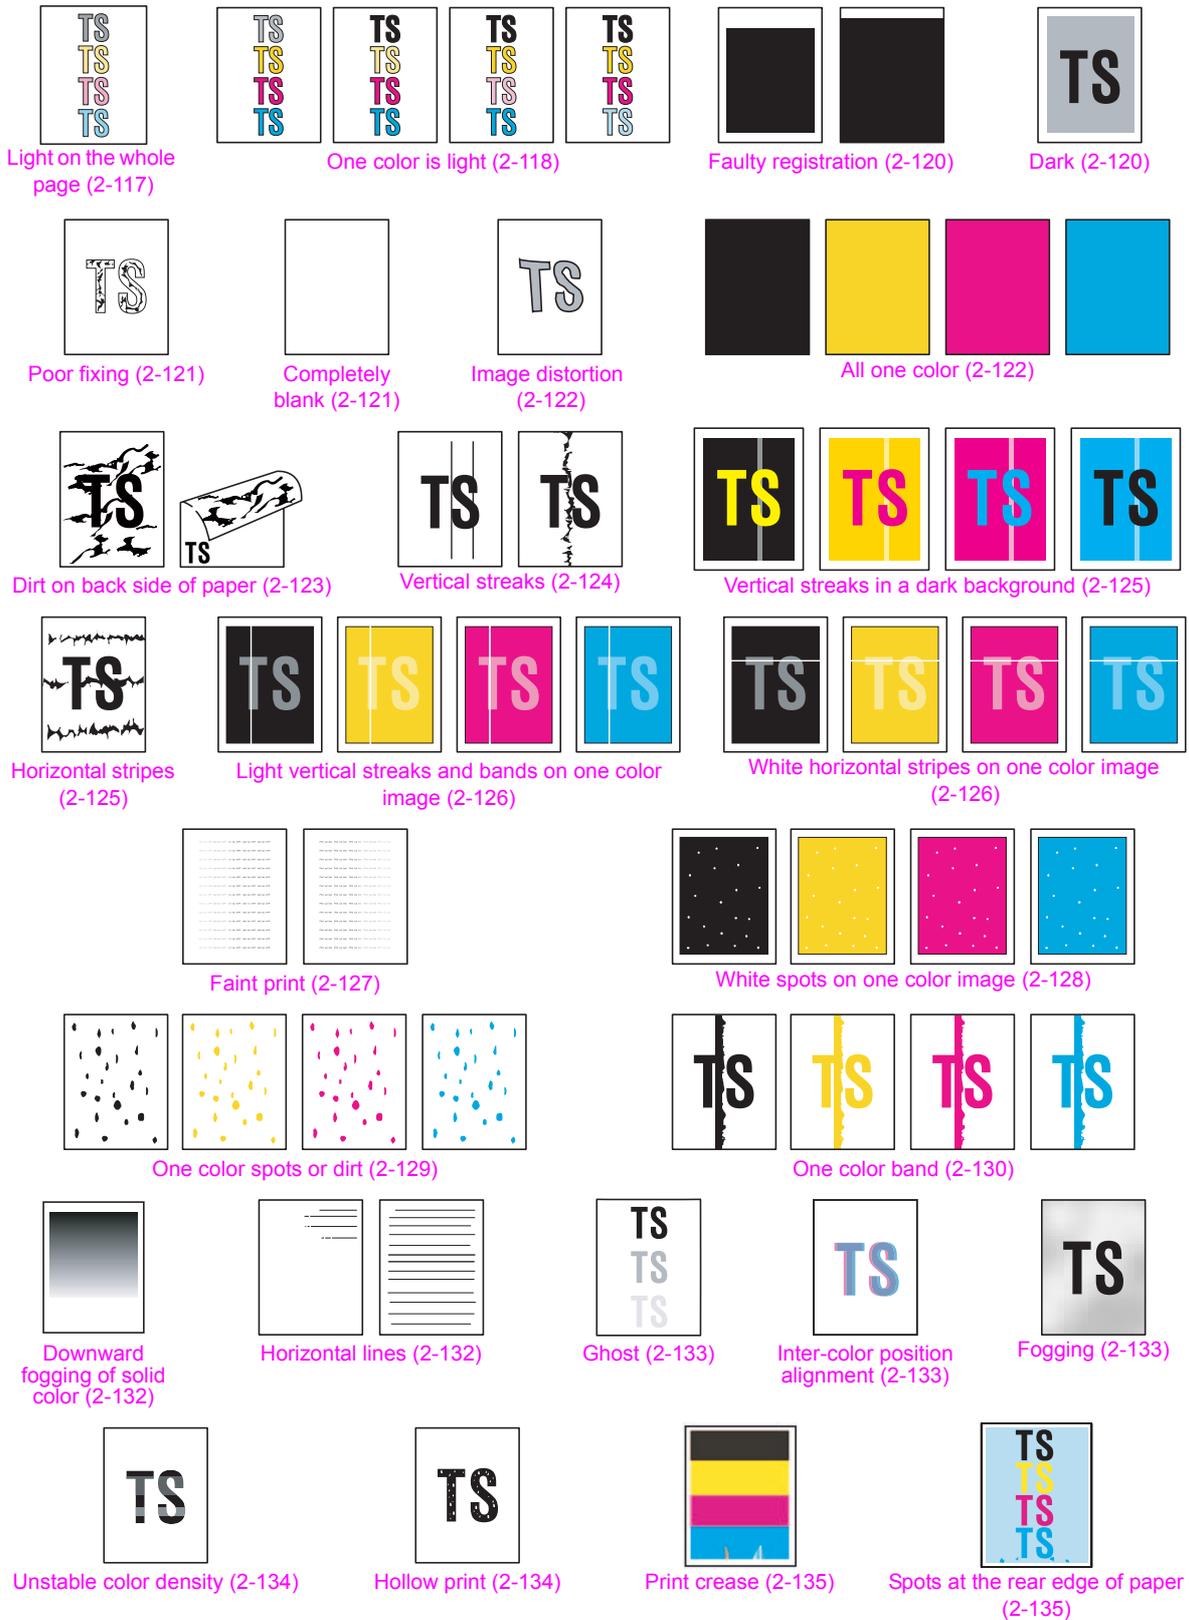


Fig. 2-14

4.3.2 Troubleshooting image defect

Image defect related problems are end user recoverable if following the User Check items. If the same problem occurs again, follow each procedure in the order of the number described in the Step column in the tables below.

■ Light on the whole page

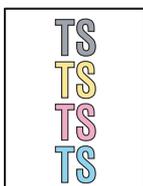


<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- If the whole page is light, toner save mode may be ON. Turn OFF the toner save mode.
- Adjust the color calibration from the control panel.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Replace the belt unit with a new one.
- Turn ON the power switch, and leave the machine for a while (condensation).
- Check if paper is not damp.
- Use specified paper.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the high-voltage power supply PCB and those of the machine	Clean the electrodes of the high-voltage power supply PCB and those of the machine.
3	Dirt on the density sensor	Clean the registration mark sensor L.
4	Density sensor failure	Replace the registration mark sensor L PCB.
5	Fuser unit failure	Replace the fuser unit.
6	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
7	Main PCB failure	Replace the main PCB.

■ One color is light

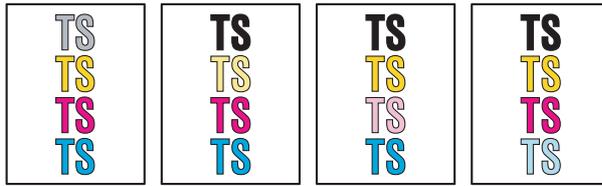

<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Adjust the color calibration from the control panel.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Wipe the LED ASSY with a soft, lint-free cloth. (Refer to the figure below.)
- Use specified paper.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	Dirt on the electrodes of the high-voltage power supply PCB	Clean the electrodes of the high-voltage power supply PCB.
4	Density sensor failure	Replace the registration mark sensor L PCB.
5	Fuser unit failure	Replace the fuser unit.
6	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
7	LED ASSY failure	Replace the appropriate LED ASSY.
8	Main PCB failure	Replace the main PCB.



Fig. 2-15

■ Electrodes location of belt unit


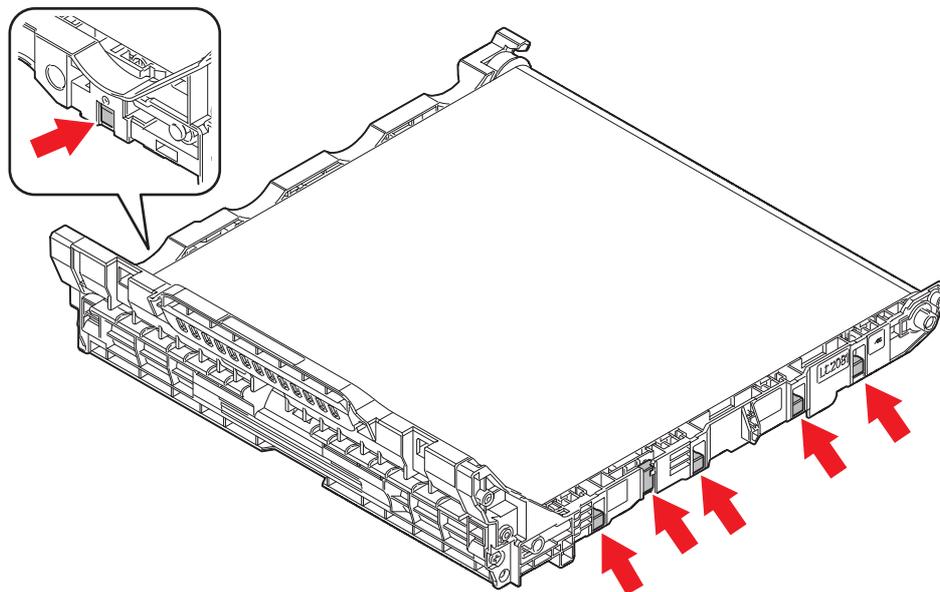


Fig. 2-16

■ Faulty registration

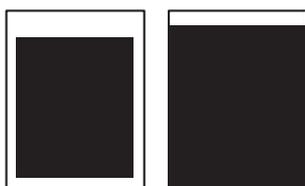

<User Check>

- Check whether appropriate paper type is selected on the driver.
- Install the latest main firmware.

Step	Cause	Remedy
1	Registration rear actuator coming off	Reattach the registration rear actuator.
2	Main PCB failure	Replace the main PCB.

■ Dark




<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- If a new toner cartridge has been detected, check that it was not replaced with another toner cartridge.
- Execute density adjustment from the control panel.
- Clean the corona wire of the drum unit.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Replace the belt unit with a new one.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78) .)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119) .)
3	Dirt on the electrodes of the high-voltage power supply PCB	Clean the electrodes of the high-voltage power supply PCB.
4	Density sensor failure	Replace the registration mark sensor L PCB.
5	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
6	Main PCB failure	Replace the main PCB.

■ Poor fixing

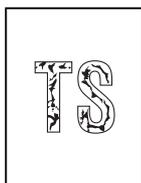

<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Clean the corona wire of the drum unit.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Replace the belt unit with a new one.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	Fuser unit failure	Replace the fuser unit.
4	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
5	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
6	Main PCB failure	Replace the main PCB.

■ Completely blank




<User Check>

- Clean the corona wire of the drum unit.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Install the latest main firmware.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	Connection failure of the LED control flat cable	Reconnect the LED control flat cable.
4	LED control flat cable failure	Replace the LED control flat cable.
5	Dirt on the electrodes of the high-voltage power supply PCB and those of the machine	Clean the electrodes of the high-voltage power supply PCB and those of the machine.
6	Main PCB failure	Replace the main PCB.

■ Image distortion

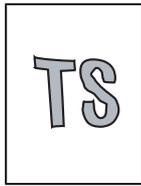


<User Check>

- Replace the belt unit with a new one.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

■ All one color

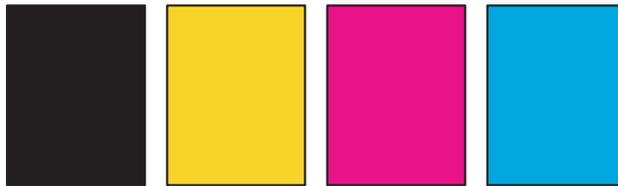


<User Check>

- Clean the corona wire of the drum unit.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	LED control flat cable failure	Replace the LED control flat cable.
4	Dirt on the electrodes of the high-voltage power supply PCB and those of the machine	Clean the electrodes of the high-voltage power supply PCB and those of the machine.
5	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
6	LED ASSY failure	Replace the appropriate LED ASSY.
7	Main PCB failure	Replace the main PCB.

■ Dirt on back side of paper

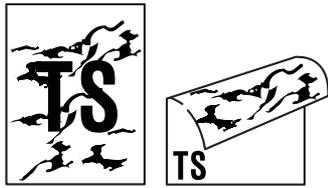

<User Check>

- This problem may disappear after printing multiple sheets of paper.
- Replace the drum unit with a new one.
- Replace the belt unit.
- Replace the waste toner box.

Step	Cause	Remedy
1	Dirt in the paper feed system	Wipe dirt off.
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	Dirt on the electrodes of the waste toner box and those of the machine	Clean the electrodes of the waste toner box and those of the machine. (Refer to Fig. 2-11 (P2-78) and below.)
4	Dirt on the fuser unit	Replace the fuser unit.
5	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ Electrodes location of waste toner box


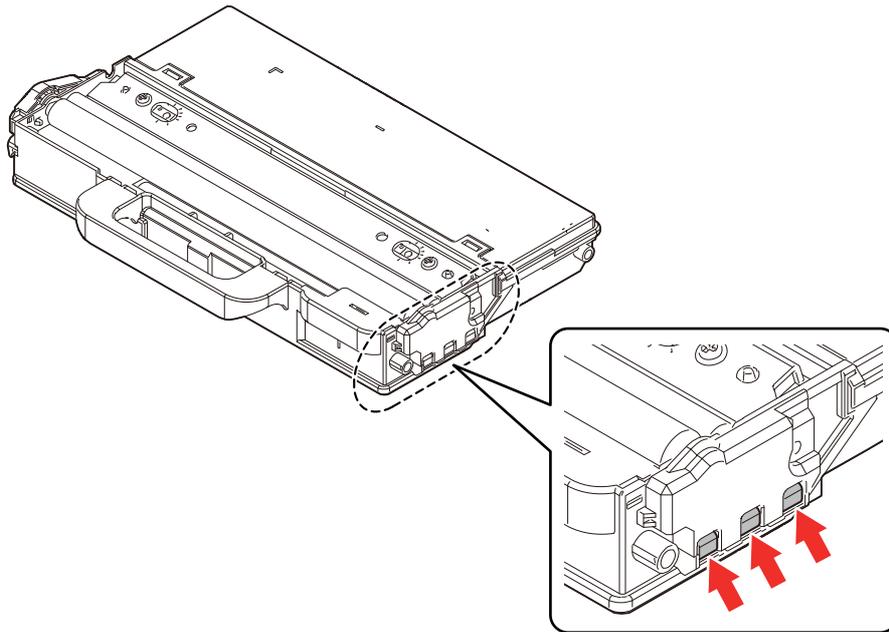


Fig. 2-17

■ Vertical streaks

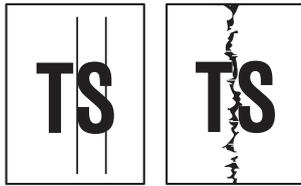

<User Check>

- Clean the corona wire of the drum unit.
- Return the corona wire cleaning tab to the “▲” position.
- This problem may disappear after printing multiple sheets of paper.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Wipe the LED ASSY with a soft, lint-free cloth.
(Refer to Fig. 2-15 (P2-118).)

Step	Cause	Remedy
1	Dirt in the paper feed system	Wipe dirt off.
2	A ground wire or ground plate installation failure (Grounding is not performed correctly.)	Retighten the screws of each ground wire or ground plate. Repair the bend of the tray ground spring of the T1. (Refer to the figure below.)
3	Dirt on the fuser unit	Replace the fuser unit.
4	LED ASSY failure	Replace the appropriate LED ASSY.


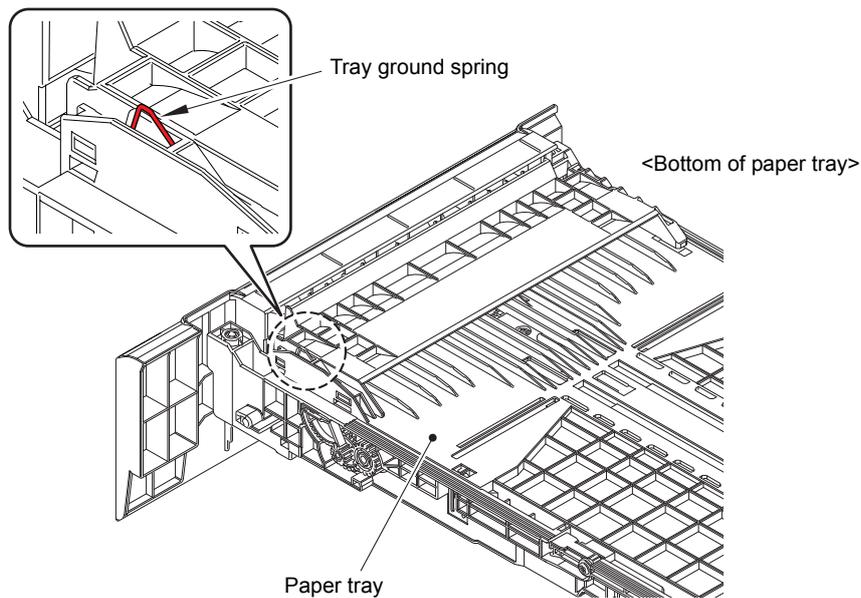


Fig. 2-18

■ Vertical streaks in a dark background

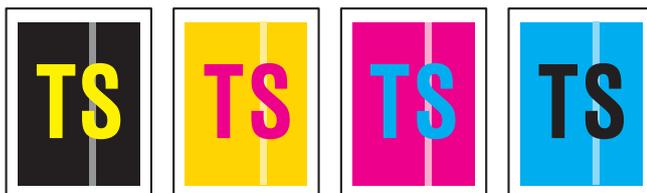

<User Check>

- Clean the corona wire of the drum unit.
- This problem may disappear after printing multiple sheets of paper.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Turn ON the power switch, and leave the machine for a while.
- Wipe the LED ASSY with a soft, lint-free cloth. (Refer to Fig. 2-15 (P2-118).)
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirty charge electrodes	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-12 (P2-78) and Fig. 2-11 (P2-78).)
2	LED ASSY failure	Replace the appropriate LED ASSY.

■ Horizontal stripes



<User Check>

- Clean the corona wire of the drum unit.
- This problem may disappear after printing multiple sheets of paper.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirty charge electrodes	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-12 (P2-78) and Fig. 2-11 (P2-78).)
2	A ground wire or ground plate installation failure (Grounding is not performed correctly.)	Retighten the screws of each ground wire or ground plate. Repair the bend of the tray ground spring of the T1. (Refer to Fig. 2-18 (P2-124).)
3	Scratch or dirt on the fuser unit	Replace the fuser unit.
4	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ **Light vertical streaks and bands on one color image**




<User Check>

- Clean the corona wire of the drum unit.
- Check that there is no dust on the toner cartridge.
- Refer to [<How to clean the drum unit>](#) to remove the dirt from the exposure drum using a cotton applicator.
- Wipe the LED ASSY with a soft, lint-free cloth. (Refer to [Fig. 2-15 \(P2-118\)](#).)
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirty charge electrodes	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-12 (P2-78) and Fig. 2-11 (P2-78) .)
2	LED ASSY failure	Replace the appropriate LED ASSY.

■ **White horizontal stripes on one color image**

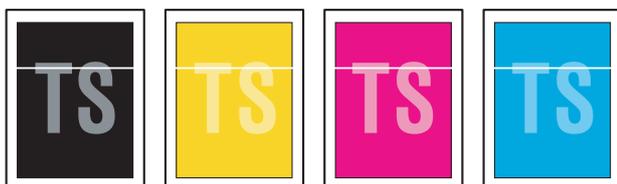


<User Check>

- This problem may disappear after printing multiple sheets of paper.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirty charge electrodes	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-12 (P2-78) and Fig. 2-11 (P2-78) .)
2	Scratch or dirt on the fuser unit	Replace the fuser unit.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ **Faint print**

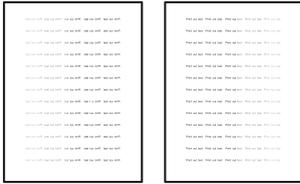


<User Check>

- Check that the machine is positioned on a level surface.
- Wipe the LED ASSY with a soft, lint-free cloth. (Refer to [Fig. 2-15 \(P2-118\)](#).)
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	LED ASSY failure	Replace the appropriate LED ASSY.
2	Main PCB failure	Replace the main PCB.

■ White spots on one color image

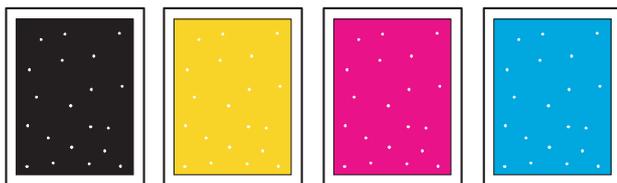

<User Check>

- Check that the fan is not clogged.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Replace the belt unit with a new one.

Step	Cause	Remedy
1	Dirt on the paper dust cleaning roller of the T1	Refer to the Fig. 2-13 (P2-106) to clean the paper dust cleaning roller.
2	Clogged filter	Clean the filter.
3	Scratch or dirt on the fuser unit	Replace the fuser unit.
4	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.


Note:

Image defects which appear periodically may be caused by failure of rollers. Refer to the table below and determine the cause based on the pitch at which defects appear on the image.

<itches on images caused by rollers>

Part name	The pitch which appears in the image
Develop roller of the toner cartridge	29 mm
Exposure drum of the drum unit	94.5 mm
Heat roller of the fuser unit	78.5 mm
Pressure roller of the fuser unit	78.5 mm

■ One color spots or dirt

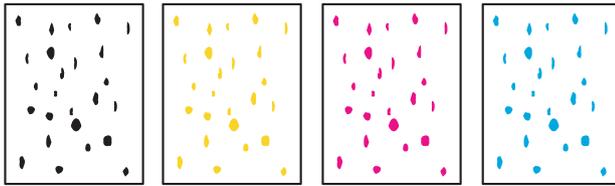

<User Check>


- Check if damp paper is used.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.
- Replace the belt unit with a new one.

Step	Cause	Remedy
1	Dirt on the paper dust cleaning roller of the T1	Refer to the Fig. 2-13 (P2-106) to clean the paper dust cleaning roller.
2	Clogged filter	Clean the filter.
3	Scratch or dirt on the fuser unit	Replace the fuser unit.
4	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

Note:

Image defects which appear periodically may be caused by failure of rollers. Refer to <Pitches on images caused by rollers> and determine the cause based on the pitch at which defects appear on the image.

■ One color band

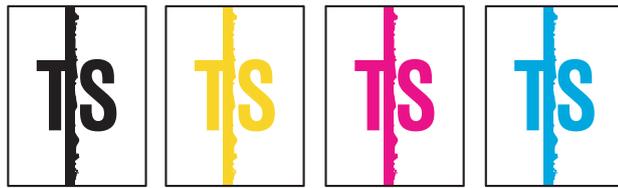

<User Check>

- Clean the corona wire of the drum unit.
- Clean the corona wire by sliding the green tab of the drum unit to the left end.
- This problem may disappear after printing multiple sheets of paper.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	A ground wire or ground plate installation failure (Grounding is not performed correctly.)	Retighten the screws of each ground wire or ground plate. Repair the bend of the tray ground spring of the T1. (Refer to Fig. 2-18 (P2-124).)
2	LED ASSY failure	Replace the appropriate LED ASSY.

<How to clean the drum unit (the shape of the drum is different from the actual one)>

- (1) Remove the appropriate toner cartridge from the drum unit. Check where the image distortion occurs by placing the print sample in front of the drum unit.



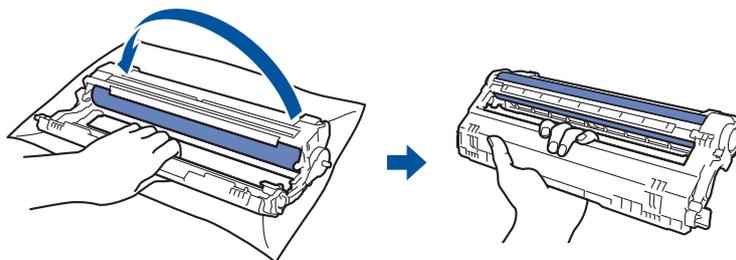


Fig. 2-19

< Examples of image distortion >

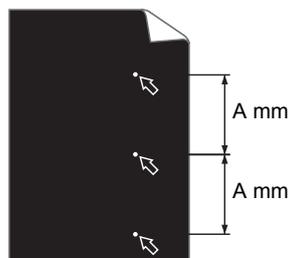

White dots repeat in A mm distance on the black page with printed images.

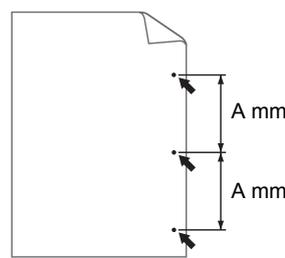

Black dots repeat in A mm distance on the page.

Fig. 2-20

Refer to the table <Pitches on images caused by rollers> for what represents the value A.

- (2) Turn the drum unit gear by hand so that the glued exposure drum surface comes to the front.

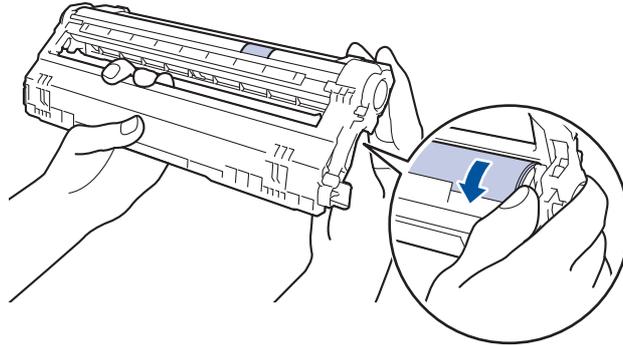


Fig. 2-21

- (3) If the position of the dirt on the drum and the dots on the print sample matches, wipe the exposure drum surface with a cotton bud until the dirt and paper dust comes off.


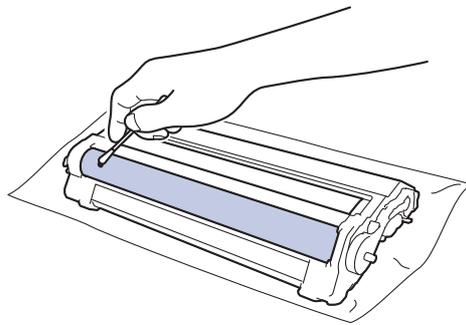


Fig. 2-22

Note:

Do not clean the exposure drum surface with anything sharp like a ball pointed pen.

■ **Downward fogging of solid color**

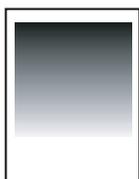


<User Check>

- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

■ **Horizontal lines**

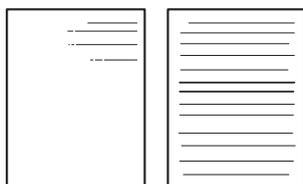

<User Check>

- This problem may disappear after printing multiple sheets of paper.
- Refer to [<How to clean the drum unit>](#) to remove the dirt from the exposure drum using a cotton applicator.
- Replace the drum unit with a new one.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	Dirty charge electrodes	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-12 (P2-78) and Fig. 2-11 (P2-78) .)
2	Scratch or dirt on the fuser unit	Replace the fuser unit.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ Ghost




<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Check whether appropriate paper type is selected on the driver.
- Select “Improve Toner Fixing” in the driver.
- Make a print in the color mode.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Scratch or dirt on the fuser unit	Replace the fuser unit.
2	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ Inter-color position alignment

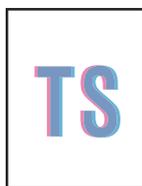


<User Check>

- Implement the adjustment of color registration (adjustment of inter-color position alignment).
- Replace the belt unit with a new one.
- Replace the drum unit with a new one.
- Replace the waste toner box with a new one.

Step	Cause	Remedy
1	Registration mark sensor L or registration mark sensor R failure	Replace the registration mark sensor ASSY.
2	Main PCB failure	Replace the main PCB.

■ Fogging

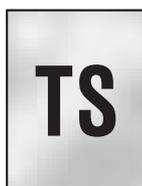

<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Check if the acid paper is not used.
- This problem may disappear after printing multiple sheets of paper.
- Replace the toner cartridge with a new one.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

Note:

This problem tends to occur when the life of the drum unit or toner cartridge is expiring.

■ Unstable color density




<User Check>

- Make a print on a different type of paper.
- Replace the belt unit with a new one.
- Replace the waste toner box with a new one.
- Replace the toner cartridge with a new one.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the belt unit and those of the machine	Clean the electrodes of the belt unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-16 (P2-119).)
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
4	LED ASSY failure	Replace the appropriate LED ASSY.
5	Main PCB failure	Replace the main PCB.

■ Hollow print

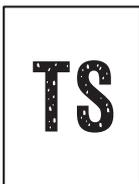

<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Refer to <How to clean the drum unit> to remove the dirt from the exposure drum using a cotton applicator.
- Replace the toner cartridge with a new one.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Dirt on the paper dust cleaning roller of the T1	Refer to the Fig. 2-13 (P2-106) to clean the paper dust cleaning roller.
2	Scratch or dirt on the fuser unit	Replace the fuser unit.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.

■ **Print crease**



<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- Change the paper to thick paper.
- Check if paper is not damp.
- Check if the thickness of the paper is properly set in the driver.
- For Plain paper, check whether the envelope levers are at the top. Even so, if print wrinkles occur, lower the envelope levers to the position “B” to perform printing. (Refer to the figure below.)

Step	Cause	Remedy
1	Fuser unit failure	Replace the fuser unit.

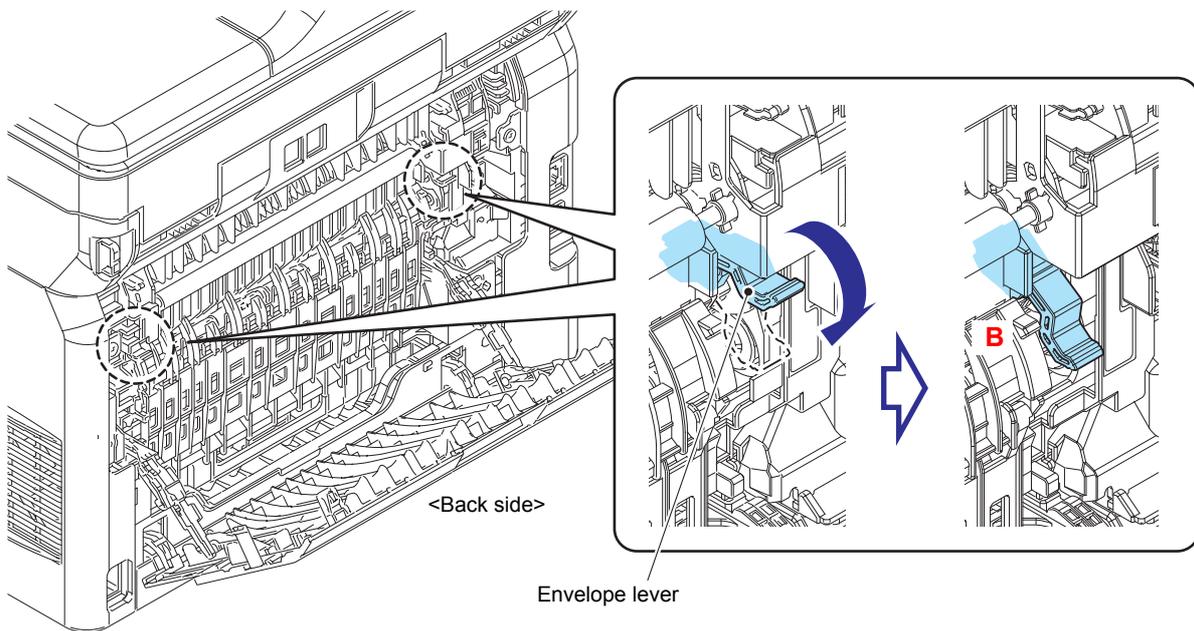


Fig. 2-23

■ **Spots at the rear edge of paper**



<User Check>

- Check the usage environment of the machine. Using the machine in hot-humid or cold-dry conditions can cause this problem.
- For thick paper such as Thick paper or Envelope, perform printing with the envelope levers lowered to the bottom; for non-thick paper such as Plain paper, perform printing with the envelope levers lowered to the position “B”. (Refer to the figure above.)

Step	Cause	Remedy
1	Fuser unit failure	Replace the fuser unit.

4.4 Troubleshooting for Software Problems

The end user can solve problems pertaining to software, for instance, print cannot be made from a computer although test print and printer setting print can be made from the machine, by following the User Check items. If the same problem occurs again, follow each procedure in the order of the number described in the Step column in the tables below.

4.4.1 Unable to receive data

<User Check>

- Check that the USB cable or LAN cable is not damaged.
- When using an interface switch, check that the correct machine is selected.
- Check the relevant section in the online User's Guide.
- Check the driver settings.
- Reset the machine to the default settings.

Step	Cause	Remedy
1	Machine connection	For Macintosh, check the Product ID*. When it is wrong, update the firmware.
2	Main PCB failure	Replace the main PCB.

* Follow the procedures below to verify the product ID in Macintosh.

- (1) Select [About This Mac] from the [Apple] menu.
- (2) Click the [More Info...] in the [About This Mac] dialog box.
- (3) Select [USB] under the [Hardware] in [Contents] on the left side.
- (4) Select the machine [MFC-XXXX] from [USB Device Tree].
- (5) Check [Product ID] in [MFC-XXXX].

■ Product ID (Hexadecimal)

MFC-L3770CDW : 043Fh

MFC-9350CDW : 0440h

MFC-L3750CDW : 0441h

MFC-L3745CDW : 0442h

MFC-L3730CDN : 0445h

MFC-L3735CDN : 0443h

MFC-9150CDN : 0444h

MFC-L3710CW : 0446h

DCP-L3550CDW : 0448h

DCP-L3551CDW : 044Ch

DCP-9030CDN : 0447h

DCP-L3550CDN : 0449h

DCP-L3510CDW : 044Bh

HL-L3290CDW : 044Ah

4.5 Troubleshooting for Network Problems

4.5.1 Cannot make a print through network connection

<User Check>

- Check the relevant section in the Network Setting Guide.
- Check the network connection.
- Reset the network.
- Check the LAN cable.

Step	Cause	Remedy
1	Connection failure of the wireless LAN PCB connector	Reconnect the wireless LAN PCB connector.
2	Wireless LAN PCB failure	Replace the wireless LAN PCB.
3	LAN terminal pin deformation Main PCB failure	Replace the main PCB.

4.5.2 Cannot connect to access point

<User Check>

- Check the wireless LAN settings.
- Check the access point settings.
- Change the machine installation location.
- Set the access point manually.

Step	Cause	Remedy
1	Wireless LAN PCB failure	Replace the wireless LAN PCB.
2	Main PCB failure	Replace the main PCB.

4.6 Troubleshooting for Control Panel Problems

4.6.1 Nothing is displayed on the LCD

<User Check>

- Turn the power switch OFF and then back ON again.
- Unplug the AC cord and then plug it again.

Step	Cause	Remedy
1	Connection failure of the panel flat cable	Reconnect the panel flat cable.
2	Connection failure of the low-voltage power supply harness	Reconnect the low-voltage power supply harness.
3	Connection failure of the high-voltage power supply flat cable (Touch panel models only)	Reconnect the high-voltage power supply flat cable.
4	Connection failure of the LCD flat cable	Reconnect the LCD flat cable.
5	AC cord failure	Replace the AC cord.
6	Panel flat cable failure	Replace the panel flat cable.
7	LCD failure	Replace the LCD.
8	Panel PCB failure	Replace the panel PCB.
9	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
10	Main PCB failure	Replace the main PCB.

4.6.2 Nothing is displayed on the LED

<User Check>

- Turn the power switch OFF and then back ON again.

Step	Cause	Remedy
1	Connection failure of the key flat cable	Reconnect the key flat cable.
2	Panel flat cable failure	Replace the panel flat cable.
3	Key PCB failure	Replace the key PCB.
4	Main PCB failure	Replace the main PCB.

4.6.3 Unable to perform panel operation

<User Check>

- Turn the power switch OFF and then back ON again.

Step	Cause	Remedy
1	Connection failure of the panel flat cable	Reconnect the panel flat cable.
2	Connection failure of the touch panel flat cable	Reconnect the touch panel flat cable.
3	Panel PCB failure	Replace the panel PCB.
4	Touch panel ASSY failure	Replace the touch panel ASSY.
5	Key PCB failure	Replace the key PCB.
6	Main PCB failure	Replace the main PCB.

4.7 Troubleshooting for Toner Cartridge and Drum Unit Problems

4.7.1 New toner not detected

<User Check>

- Check if the supplied toner cartridge is installed.
- Be sure to set a new toner cartridge.
- Check that the genuine toner cartridge is set.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

4.7.2 Toner cartridge not detected

<User Check>

- Re-assemble the toner cartridge.
- Replace the toner cartridge with a new one.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

4.7.3 Toner replacement message displayed on LCD is not cleared

<User Check>

- Be sure to set a new toner cartridge.
- Check that the genuine toner cartridge is set.

Step	Cause	Remedy
1	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
2	Main PCB failure	Replace the main PCB.

4.7.4 Drum error

<User Check>

- Clean the corona wire of the drum unit.
- Replace the drum unit with a new one.

Step	Cause	Remedy
1	Dirt on the electrodes of the drum unit and those of the machine	Clean the electrodes of the drum unit and those of the machine. (Refer to Fig. 2-11 (P2-78) and Fig. 2-12 (P2-78).)
2	Dirt on the electrodes of the high-voltage power supply PCB and those of the machine	Clean the electrodes of the high-voltage power supply PCB and those of the machine.
3	High-voltage power supply PCB failure	Replace the high-voltage power supply PCB.
4	Main PCB failure	Replace the main PCB.

4.7.5 Drum replacement message displayed on LCD is not cleared

<User Check>

- Reset the drum counter according to the manual.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

4.8 Troubleshooting for Fuser Unit Problems

4.8.1 Fuser unit failure

Step	Cause	Remedy
1	Connection failure of the center thermistor harness	Reconnect the center thermistor harness.
2	Connection failure of the side thermistor harness	Reconnect the side thermistor harness.
3	Connection failure of the heater harness	Reconnect the heater harness.
4	Connection failure of the eject sensor harness	Reconnect the eject sensor harness.
5	Eject sensor PCB failure	Replace the eject sensor PCB.
6	Low-voltage power supply PCB failure	Replace the low-voltage power supply PCB.
7	Fuser unit failure	Replace the fuser unit.
8	Main PCB failure	Replace the main PCB.

Note:

- Turn the power switch OFF and then ON again. Leave the machine for 15 minutes. This problem may then be cleared.
- The machine may recover from the error, when the test printing of the maintenance mode for service personnel is started. However, conducting this operation while the heater has not yet cooled may cause the fuser unit to melt. Be careful.

4.9 Troubleshooting for LED ASSY Problems

4.9.1 LED ASSY failure

<User Check>

- Turn ON the power switch, then open the top cover and the back cover. Leave the machine for a while to remove condensation.

Step	Cause	Remedy
1	LED ASSY attachment failure	Reattach an LED ASSY.
2	Connection failure of the LED ASSY flat cable	Reconnect an LED ASSY flat cable.
3	Connection failure of the LED control flat cable	Reconnect the LED control flat cable.
4	LED ASSY flat cable failure	Replace an LED ASSY flat cable.
5	LED control flat cable failure	Replace the LED control flat cable.
6	LED control PCB failure	Replace the LED control PCB.
7	LED ASSY failure	Replace an LED ASSY.
8	Main PCB failure	Replace the main PCB.

4.10 Troubleshooting for PCB Problems

4.10.1 Main PCB failure

<User Check>

- Turn the power switch OFF and then back ON again.
- Install the latest main firmware.
- Check the print limit ID.
- Check that the print data is not damaged.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

4.10.2 Full memory

<User Check>

- Print the accumulated data.
- Reduce the amount or resolution of the data.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

4.11 Troubleshooting for Document Feeding Problems

4.11.1 No document is fed

<User Check>

- Set the document properly and check that the display on the LCD changes.
- Check that the number of paper set has not exceeded the upper limit in the document tray.
- Check that the ADF cover is closed correctly.

Step	Cause	Remedy
1	Document detection actuator coming off	Reattach the document detection actuator.
2	Connection failure of the ADF motor harness	Reconnect the ADF motor harness.
3	Document detection sensor failure	Replace the document detection sensor PCB.
4	Document separation roller failure	Replace the document separation roller ASSY.
5	Damaged ADF drive gear	Replace the ADF unit.
6	Main PCB failure	Replace the main PCB.

4.11.2 Multiple documents are fed

<User Check>

- Check that the thickness of the document is 60 to 105 g/m².
- Check that the number of paper set has not exceeded the upper limit in the document tray.

Step	Cause	Remedy
1	Abrasion of ADF separation pad ASSY	Replace the ADF separation holder ASSY.

4.11.3 Document jam

■ Paper jam in the ADF cover

<User Check>

- Check that the thickness of the document is 60 to 105 g/m².
- Check that the paper used for the document is not shorter than 147.3 mm.
- Check that the ADF cover is closed correctly.
- Check that the number of paper set has not exceeded the upper limit in the document tray.

Step	Cause	Remedy
1	Foreign object inside the area around ADF cover	Remove the foreign object.
2	Document pinch roller coming off	Reattach the document pinch roller.
3	Damaged ADF drive gear	Replace the ADF unit.
4	Main PCB failure	Replace the main PCB.

■ Paper jam in the ADF

<User Check>

- Check that the thickness of the document is 60 to 105 g/m².
- Check whether the document is smaller or larger than the specifications.
- Check whether the document is wet or wrinkled.
- Check that the document guide is adjusted to suit the document size.

Step	Cause	Remedy
1	Foreign object inside the ADF	Remove the foreign object.
2	Document scanning position actuator coming off	Reattach the document scanning position actuator.
3	Document pinch roller coming off	Reattach the document pinch roller.
4	Connection failure of the document scanning position sensor harness	Check the connection of the document scanning position sensor harness, and reconnect it if necessary.
5	Second side document hold coming off	Reattach the second side document hold.
6	First side document hold coming off	Reattach the first side document hold.
7	Fed at an angle and jammed due to abrasion of document separation roller	Replace the document separation roller ASSY.
8	Document scanning position sensor failure	Replace the document scanning position sensor PCB.
9	Main PCB failure	Replace the main PCB.

■ **Paper jam in the paper eject section of the ADF**

<User Check>

- Check that the thickness of the document is 60 to 105 g/m².

Step	Cause	Remedy
1	Foreign object in the ADF document eject path	Remove the foreign object.
2	Document pinch roller coming off	Reattach the document pinch roller.
3	Abrasion of document eject roller	Replace the ADF unit.
4	Main PCB failure	Replace the main PCB.

4.11.4 Document becomes wrinkled

<User Check>

- Check that the document is not curled.
- Check that the document guide is adjusted to suit the document size.

Step	Cause	Remedy
1	Abrasion of document separation roller	Replace the document separation roller ASSY.
2	Abrasion of document feed roller	Replace the ADF unit.

4.11.5 Document size is not detected correctly

<User Check>

- Check that the document size is within the standard.

Step	Cause	Remedy
1	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.
2	ADF motor failure	Replace the ADF unit.
3	Main PCB failure	Replace the main PCB.

4.12 Troubleshooting for Image Defects

4.12.1 Defect examples


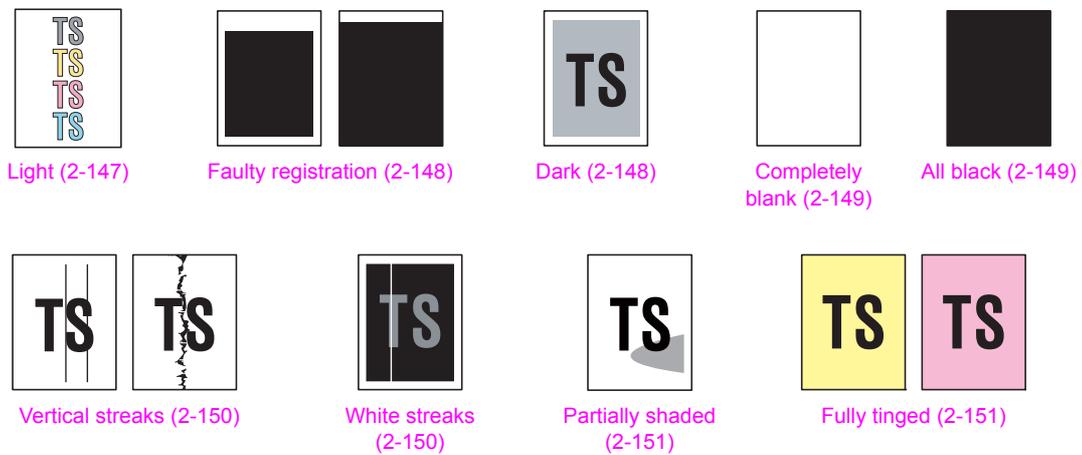


Fig. 2-24

4.12.2 Troubleshooting according to image defect

■ Light

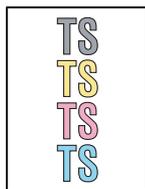


<User Check>

- Check that the contrast setting is not too light.
- Clean the scanner glass or first side/second side scanner glass strip.
- Clean the first side/second side document hold.

Step	Cause	Remedy
1	Incorrect white level correction data	Execute "Acquire white level data (Function code 55)".
2	First or second side CIS unit failure	Replace the first or second side CIS unit.
3	Main PCB failure	Replace the main PCB.

■ Faulty registration

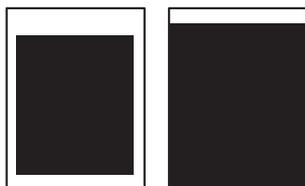

- First side (Document scanner unit)

Step	Cause	Remedy
1	Deviation of the scanning start position	Execute "Fine adjustment of scan start position (Function code 54)".
2	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.

- Second side (ADF unit)

Step	Cause	Remedy
1	Deviation of the scanning start position	Execute "Fine adjustment of scan start position (Function code 54)".
2	Document scanning position actuator caught in some sections of the machine	Reattach the document scanning position actuator.

■ Dark



<User Check>

- Check that the contrast setting is not too dark.
- Clean the first side/second side document hold.

Step	Cause	Remedy
1	Incorrect white level correction data	Execute "Acquire white level data (Function code 55)".
2	First or second side CIS unit failure	Replace the first or second side CIS unit.
3	Main PCB failure	Replace the main PCB.

■ **Completely blank**



<User Check>

- Check that the document is not reversed.

Step	Cause	Remedy
1	Incorrect white level correction data	Execute “Acquire white level data (Function code 55)”.
2	First or second side CIS flat cable failure	Replace the first or second side CIS flat cable.
3	First or second side CIS unit failure	Replace the first or second side CIS unit.
4	Main PCB failure	Replace the main PCB.

■ **All black**




<User Check>

- Install all the latest firmwares.

Step	Cause	Remedy
1	Incorrect white level correction data	Execute “Acquire white level data (Function code 55)”.
2	First or second side CIS flat cable failure	Replace the first or second side CIS flat cable.
3	First or second side CIS unit failure	Replace the first or second side CIS unit.
4	Main PCB failure	Replace the main PCB.

■ **Vertical streaks**

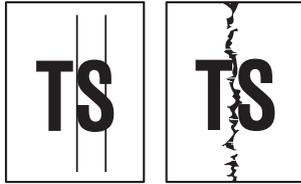

<User Check>

- Clean the scanner glass or first side/second side scanner glass strip.
- Clean the first side/second side document hold.

Step	Cause	Remedy
1	Dirt inside of scanner glass	Clean the inside of the scanner glass.
2	Dirt inside of first side/second side scanner glass strip	Clean the inside of the first side/second side scanner glass strip.
3	First or second side CIS unit failure	Replace the first or second side CIS unit.
4	Scratch on scanner glass	Replace the document scanner unit.
5	Scratch on second side scanner glass strip	Replace the ADF unit.

■ **White streaks**



<User Check>

- Clean the scanner glass or first side/second side scanner glass strip.
- Clean the first side/second side document hold.

Step	Cause	Remedy
1	Dirt inside of scanner glass	Clean the inside of the scanner glass.
2	Dirt inside of first side/second side scanner glass strip	Clean the inside of the first side/second side scanner glass strip.
3	First or second side CIS unit failure	Replace the first or second side CIS unit.
4	Scratch on scanner glass	Replace the document scanner unit.
5	Scratch on second side scanner glass strip	Replace the ADF unit.

■ Partially shaded




<User Check>

- Clean the scanner glass.

Step	Cause	Remedy
1	Dirt inside of scanner glass	Clean the inside of scanner glass.
2	Deformed document sponge	Replace the document scanner unit.

■ Fully tinged

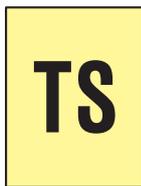

<User Check>

- Clean the scanner glass or first side/second side scanner glass strip.

Step	Cause	Remedy
1	Incorrect white level correction data	Execute "Acquire white level data (Function code 55)".
2	First or second side CIS unit failure	Replace the first or second side CIS unit.
3	Main PCB failure	Replace the main PCB.

4.13 Troubleshooting for Fax Problems

4.13.1 Fax cannot be sent

<User Check>

- Check that the line cord is inserted into the socket correctly.
- Check that the dial function setting (tone/pulse) is correct.
- Check that the fax document is set in the ADF correctly.
- Check that the number to be dialed is saved correctly in the telephone directory.
- Check that the receiver's machine works normally or the function you want to perform is equipped with the receiver's machine.
- Move the machine to the other place to check whether there is any noise source near the machine.
- Replace the telephone line.

Step	Cause	Remedy
1	Connection failure of the modem flat cable	Reconnect the modem flat cable.
2	Connection failure of the CIS flat cable	Reconnect the CIS flat cable.
3	Connection failure of the panel flat cable	Reconnect the panel flat cable.
4	Connection failure of the touch panel flat cable	Reconnect the touch panel flat cable.
5	Connection failure of the key flat cable	Reconnect the key flat cable.
6	Connection failure of the document detection sensor harness	Reconnect the document detection sensor harness.
7	Document detection actuator coming off	Reattach the document detection actuator.
8	First or second side CIS flat cable failure	Replace the first or second side CIS flat cable.
9	First or second side CIS unit failure	Replace the first or second side CIS unit.
10	ADF drive gear failure	Replace the ADF unit.
11	Document scanner unit failure	Replace the document scanner unit.
12	Panel PCB failure	Replace the panel PCB.
13	Key PCB failure	Replace the key PCB.
14	Modem PCB failure	Replace the modem PCB.
15	Main PCB failure	Replace the main PCB.

4.13.2 Fax cannot be received

<User Check>

- Check that the line cord is inserted into the socket correctly.
- Check that the receiving mode setting is correct.
- Check that the receiver's machine works normally or the function you want to perform is equipped with the receiver's machine.
- Move the machine to the other place to check whether there is any noise source near the machine.
- Replace the telephone line.

Step	Cause	Remedy
1	Connection failure of the modem flat cable	Reconnect the modem flat cable.
2	Modem PCB failure	Replace the modem PCB.
3	Main PCB failure	Replace the main PCB.

4.13.3 Communication error occurs

<User Check>

- Check whether there is any noise source near the machine.
- Replace the telephone line.

Step	Cause	Remedy
1	Connection failure of the modem flat cable	Reconnect the modem flat cable.
2	Modem PCB failure	Replace the modem PCB.
3	Main PCB failure	Replace the main PCB.

4.13.4 Receive buffer full during receiving into memory

<User Check>

- Print the print data stored in the memory.
- Divide the print data and print it.

Step	Cause	Remedy
1	Main PCB failure	Replace the main PCB.

4.14 Troubleshooting for Other Problems

4.14.1 Cannot make print

<User Check>

- Turn the power switch OFF and then back ON again.
- Check that the USB cable is connected to the host correctly.
- Check that the LAN cable is connected to the host correctly.
- Replace the USB cable.
- Replace the LAN cable.
- Check that the maximum printable page number has not been exceeded.
- Check that the PC-Print is not forbidden.
- Check the print limit ID.
- Check the network connection.
- Check the relevant section in the Network Setting Guide.
- Check that the print data is not damaged.
- Install the latest main firmware.
- Match the document size with the one specified in the driver.

Step	Cause	Remedy
1	Connection failure of the wireless LAN connector	Reconnect the wireless LAN connector.
2	Wireless LAN PCB failure	Replace the wireless LAN PCB.
3	Main PCB failure	Replace the main PCB.

4.14.2 Problem of USB direct interface

<User Check>

- Wait for one minute while connecting the USB flash memory and check if it works normally.
- Connect the USB flash memory again.
- Replace the USB flash memory.
- Check that the extension of data in the USB flash memory is correct.
- Check that the USB device out of specification is not connected.
- Check that the multiple USB devices are not connected to the machine.

Step	Cause	Remedy
1	Connection failure of the USB host harness	Reconnect the USB host harness.
2	USB host PCB failure	Replace the USB host PCB.
3	Main PCB failure	Replace the main PCB.

4.14.3 Cannot update firmware

<User Check>

- Make sure that there is no other function running.
- Turn the power switch OFF and then back ON again.

Step	Cause	Remedy
1	Firmware version does not match	Reinstall the latest sub firmware and main firmware in this order.
2	In case of update failure by interruption, the firmware might not correctly written in the ROM	Update the firmware again by the following procedure.* (Touch panel model) 1) Turn OFF the machine. 2) Turn ON the machine while pressing the  . 3) Double-click the "Filedg32.exe" to start, and select "Brother Maintenance USB Printer". 4) Drag and drop the firmware (upd file) in the FILEDG32 screen. Update is started.
3	Firmware file has a problem during updating with USB flash memory	Check if it is firmware of another model, or check the number of filename characters and its extension.
4	USB flash memory has a problem during updating with USB flash memory	Replace the USB flash memory.
5	Main PCB failure	Replace the main PCB.

* By the above update procedure, the other models firmware can be updated to the machine. Check that the firmware is right and update correctly. If the other models firmware was updated by mistake, the machine may repeat power ON/OFF or not powered ON. In such case, replace the main PCB.

4.14.4 "Tray removed" message does not disappear

<User Check>

- Close the tray correctly.

Step	Cause	Remedy
1	Paper feed actuator coming off	Reattach the paper feed actuator.
2	Paper feed sensor failure	Replace the paper feed unit.
3	Main PCB failure	Replace the main PCB.


CHAPTER 3 DISASSEMBLY/REASSEMBLY

1. SAFETY PRECAUTIONS

To avoid creating secondary problems by mishandling, follow the warnings and precautions below during maintenance work.


 **WARNING**

Some parts inside the machine are extremely hot immediately after the machine is used. When opening the Top cover or Back cover to access any parts inside the machine, never touch the shaded parts shown in the following figures.

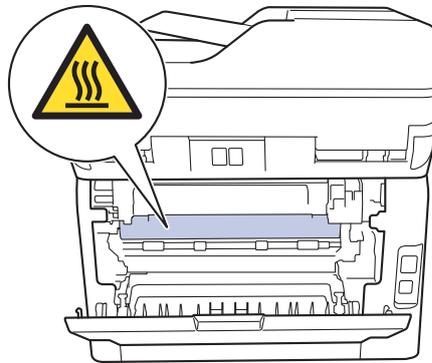

- Be careful not to lose screws, washers, or other parts removed.
- Be sure to apply grease to the applicable positions specified in this chapter.
- When using soldering irons or other heat-generating tools, take care not to accidentally damage parts such as wires, PCBs and covers.
- Static electricity charged in your body may damage electronic parts. When transporting PCBs, be sure to wrap them in conductive sheets.
- When replacing the PCBs and all the other related parts, put on a grounding wrist band and perform the job on a static mat. Also take care not to touch the conductor sections on the flat cables or on the wire harnesses.
- After disconnecting flat cables, check that each cable is not damaged at its end or shortcircuited.
- When connecting flat cables, do not insert them at an angle. After insertion, check that the cables are not at an angle.
- When connecting or disconnecting harnesses, hold the connector body, not the cables. If the connector has a lock, release the connector lock first to release it.
- After a repair, check not only the repaired portion but also harness treatment. Also check that other related portions are functioning properly.
- There must be no damage in the Insulation sheet.
- After a repair, update the firmware to the latest version.
- Violently closing the Top cover without mounting the Toner cartridge and the Drum unit can damage the machine.
- When replacing the PCBs, check that there is no foreign object on the parts surface of the PCBs or on the soldering surface.

2. PACKING

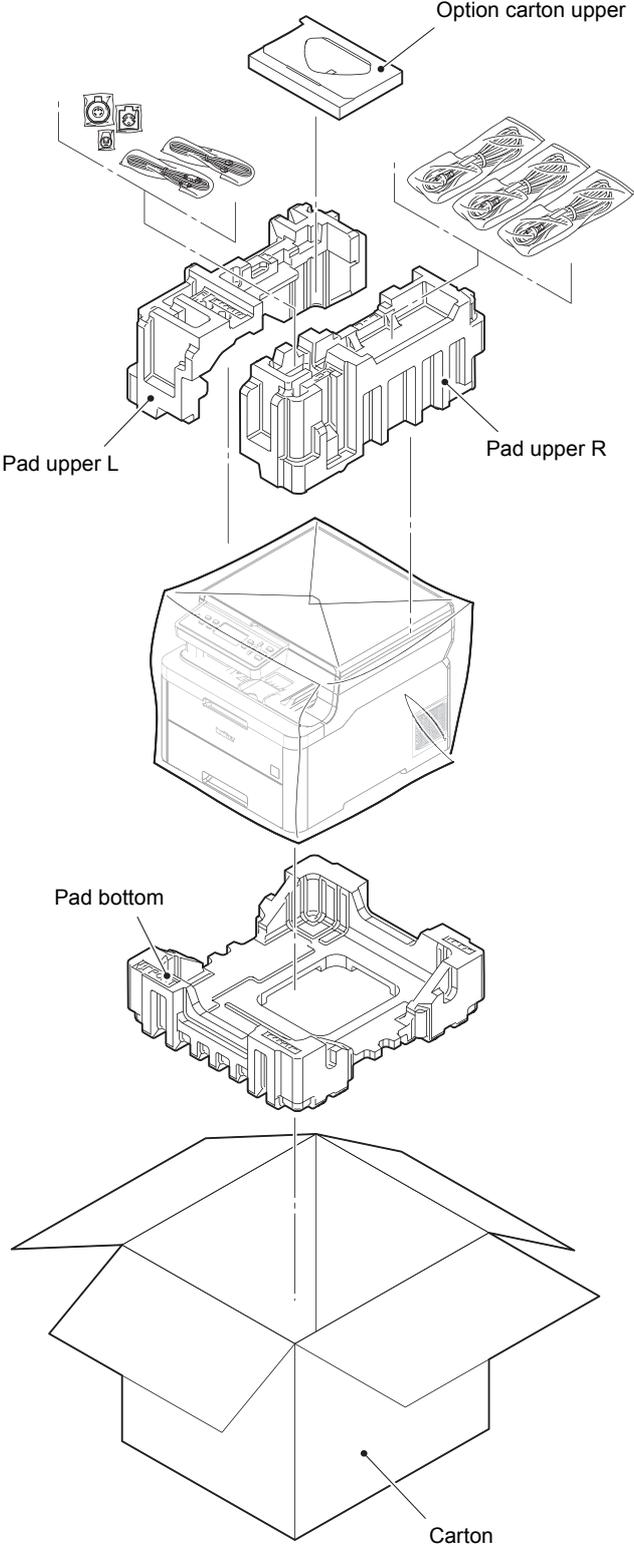

3. SCREW CATALOGUE

Taptite bind B

Taptite bind B M4x12	
Taptite bind B M3x10	

Taptite bind S

Taptite bind S M3x5	
------------------------	--

Taptite pan (washer)

Taptite pan (washer) B M4x12DA	
-----------------------------------	--

Taptite pan B

Taptite pan B M4x14	
------------------------	--

Taptite cup B

Taptite cup B M3x8	
Taptite cup B M3x10	

Screw cup

Screw cup M3x8	
Screw cup M3x8 SR	
Screw cup M3x6	

Taptite cup S

Taptite cup S M3x6 SR	
Taptite cup S M3x8 SR	

Screw pan (S/P washer)

Screw pan (S/P washer) M3x12DB	
-----------------------------------	--

Screw pan

Screw pan M4x8	
-------------------	--


4. SCREW TORQUE LIST

Location of screw	Screw type	Q'ty	Tightening torque N·m (kgf·cm)
Fuser cover L	Taptite bind B M3x10	1	0.5±0.05 (5±0.5)
Fuser cover R	Taptite bind B M3x10	1	0.5±0.05 (5±0.5)
Fuser unit	Taptite pan (washer) B M4x12DA	2	0.7±0.1 (7±1)
Side cover L	Taptite bind B M4x12	2	0.8±0.1 (8±1)
Side cover R	Taptite bind B M4x12	2	0.8±0.1 (8±1)
Main shield cover plate ASSY	Screw cup M3x8 (black)	4	0.45±0.05 (4.5±0.5)
ADF ground wire	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
FB ground wire	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
Panel ground wire	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
ADF unit (For models with ADF)	Taptite bind B M4x12	1	0.8±0.1 (8±1)
Hinge ASSY L (For models with ADF)	Taptite bind B M4x12	3	0.8±0.1 (8±1)
Hinge R support (For models with ADF)	Taptite cup B M3x10	1	0.5±0.1 (5±1)
Hinge arm R (For models with ADF)	Taptite cup B M3x10	3	0.5±0.1 (5±1)
ADF separation holder ASSY	Taptite cup B M3x10	1	0.5±0.1 (5±1)
ADF front cover	Taptite bind B M3x10	4	0.5±0.1 (5±1)
Upper document chute	Taptite cup B M3x10	6	0.5±0.1 (5±1)
ADF ground wire	Taptite cup S M3x6 SR	1	0.8±0.1 (8±1)
Hinge arm L (For models without ADF)	Taptite bind B M4x12	3	0.5±0.1 (5±1)
Hinge arm R (For models without ADF)	Taptite bind B M4x12	3	0.5±0.1 (5±1)
Panel unit	Taptite cup B M3x10	4	0.5±0.1 (5±1)
Key PCB pressure (Touch panel models)	Taptite cup B M3x10	5	0.45±0.05 (4.5±0.5)
Shield cover (Touch panel models)	Screw pan (S/P washer) M3x12DB	4	0.45±0.05 (4.5±0.5)
Shield plate (Touch panel models)	Screw pan (S/P washer) M3x12DB	2	0.45±0.05 (4.5±0.5)
Dress cover	Taptite cup B M3x10	2	0.5±0.1 (5±1)
Document scanner top cover	Taptite bind B M4x12	5	0.8±0.1 (8±1)
Modem ground wire L	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
Modem ground wire R	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
Modem plate	Taptite bind B M4x12	2	0.8±0.1 (8±1)
Modem shield cover	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
Modem PCB	Screw cup M3x8 (black)	3	0.45±0.05 (4.5±0.5)
LED ground wire	Taptite pan (washer) B M4x12DA	1	0.75±0.05 (7.5±0.5)
Modem ground wire L	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
Open button cover	Taptite bind B M4x12	8	0.8±0.1 (8±1)
Modem ground wire R	Taptite cup S M3x8 SR	1	0.55±0.05 (5.5±0.5)
LED unit	Taptite bind B M4x12	5	0.8±0.1 (8±1)

Location of screw	Screw type	Q'ty	Tightening torque N·m (kgf·cm)
Joint side cover R	Taptite bind B M4x12	2	0.8±0.1 (8±1)
Joint side cover L	Taptite bind B M4x12	1	0.8±0.1 (8±1)
Joint back cover	Taptite bind B M4x12	2	0.8±0.1 (8±1)
LED PCB shield plate	Screw cup M3x8 SR	3	0.45±0.05 (4.5±0.5)
LED control PCB	Screw cup M3x8 SR	2	0.45±0.05 (4.5±0.5)
MP maintenance cover (For MP models)	Taptite pan B M4x14	2	0.8±0.1 (8±1)
Inner front cover (For MP models)	Taptite bind B M4x12	2	0.8±0.1 (8±1)
	Taptite pan (washer) B M4x12DA	1	0.8±0.1 (8±1)
USB holder ASSY	Taptite bind B M3x10	2	0.4±0.05 (4±0.5)
USB ground plate	Screw pan (S/P washer) M3x12DB	2	0.5±0.05 (5±0.5)
T1 paper feed guide (For MP models)	Taptite bind B M4x12 (black)	2	0.8±0.1 (8±1)
MP unit (For MP models)	Taptite bind B M4x12	4	0.8±0.1 (8±1)
HVPS ground plate front	Taptite pan (washer) B M4x12DA	1	0.75±0.05 (7.5±0.5)
	Taptite cup S M3x8 SR	1	0.75±0.05 (7.5±0.5)
HVPS ground plate rear	Taptite pan (washer) B M4x12DA	1	0.75±0.05 (7.5±0.5)
High-voltage power supply PCB	Taptite bind B M4x12	2	0.75±0.05 (7.5±0.5)
Main PCB	Screw cup M3x8 (black)	3	0.45±0.05 (4.5±0.5)
Cartridge sensor relay PCB	Screw cup M3x8 (black)	1	0.45±0.05 (4.5±0.5)
DEV clutch cover	Taptite cup S M3x8 SR	1	0.75±0.05 (7.5±0.5)
Process drive unit	Taptite cup S M3x8 SR	2	0.75±0.05 (7.5±0.5)
	Taptite pan (washer) B M4x12DA	1	0.75±0.05 (7.5±0.5)
	Taptite bind B M4x12	7	0.75±0.05 (7.5±0.5)
Paper feed drive unit	Taptite bind B M4x12	5	0.7±0.1 (7±1)
Paper feed unit	Taptite bind B M4x12	4	0.8±0.1 (8±1)
Paper eject ASSY	Taptite bind B M4x12	1 (Side)	0.8±0.1 (8±1)
		2 (Top)	1.1±0.1 (11±1)
DX drive cover	Taptite bind B M4x12	1	0.8±0.1 (8±1)
Duplex tray	Taptite bind B M4x12	2	0.8±0.1 (8±1)
Wire cover	Taptite bind B M4x12	1	0.75±0.05 (7.5±0.5)
Cover plate	Taptite pan (washer) B M4x12DA	1	0.75±0.05 (7.5±0.5)
	Taptite cup S M3x8 SR	1	0.75±0.05 (7.5±0.5)
	Taptite bind B M4x12	2	0.5±0.05 (5±0.5)
LVPS ground wire	Screw pan M4x8	1	0.6±0.05 (6±0.5)
LVPS plate lower ASSY	Taptite pan (washer) B M4x12DA	4	0.75±0.05 (7.5±0.5)
	Taptite cup S M3x8 SR	2	0.5±0.05 (5±0.5)
Low-voltage power supply PCB	Taptite cup S M3x6 SR	3	0.6±0.05 (6±0.5)
Registration mark sensor ASSY	Taptite bind S M3x5	1	0.5±0.05 (5±0.5)


5. LUBRICATION

The kind of the lubricating oil (Maker name)	Lubrication point	Quantity of lubrication
FLOIL BG-10KS (Kanto Kasei)	T1 pick-up clutch	1.5 mm dia. ball (BG1.5)
	Registration clutch	1.5 mm dia. ball (BG1.5)

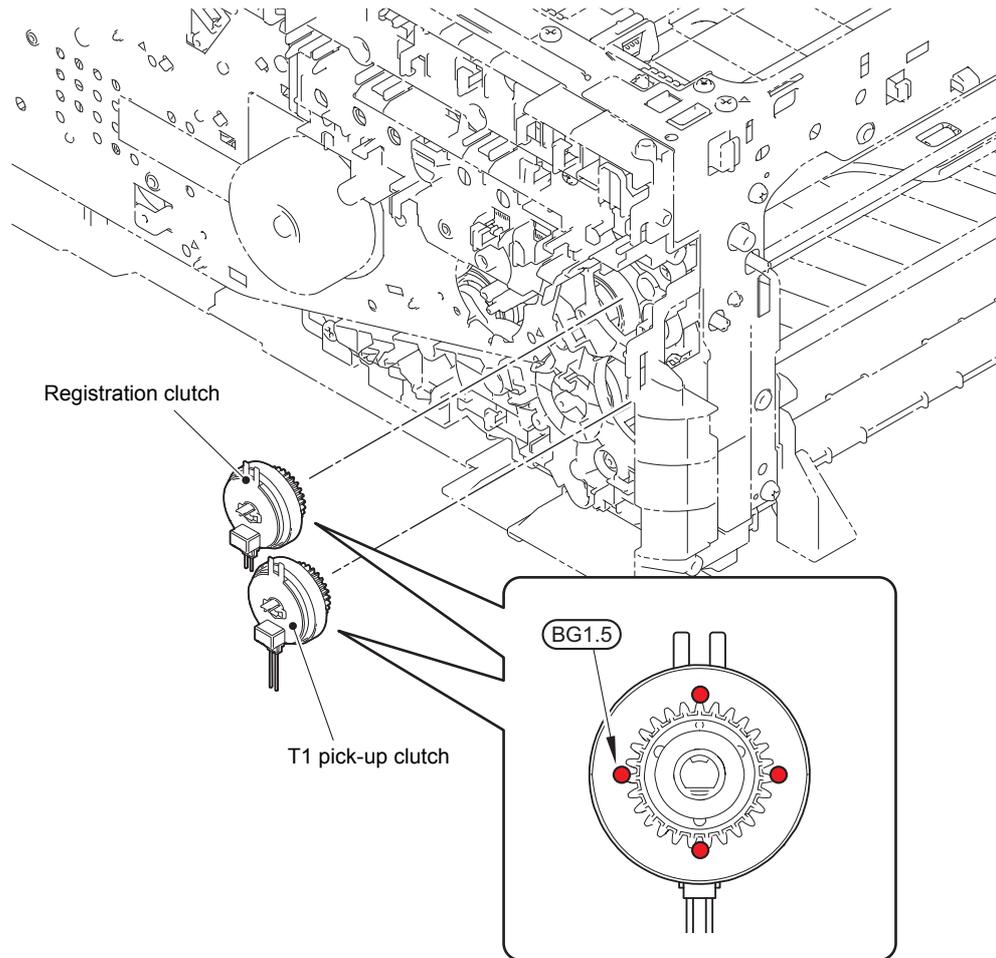

BG1.5: FLOIL BG-10KS (1.5 mm dia. ball)

The kind of the lubricating oil (Maker name)	Lubrication point	Quantity of lubrication
PERMALUB BAN-5 (Nippeco)	Document separation roller ASSY	1.5 to 2.0 mm dia. ball <u>1.5 to 2.0</u>

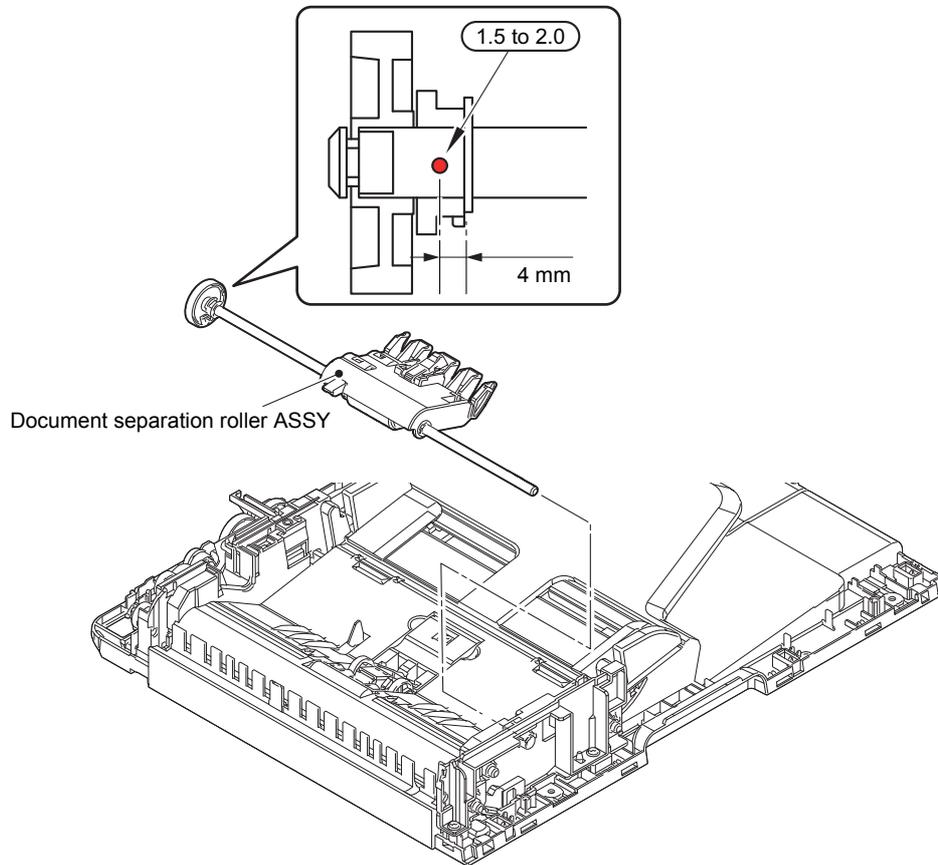


1.5 to 2.0: PERMALUB BAN-5 (1.5 to 2.0 mm dia. ball)


6. OVERVIEW OF GEARS

When ordering repair parts, refer to the parts reference list.

<Layout view>

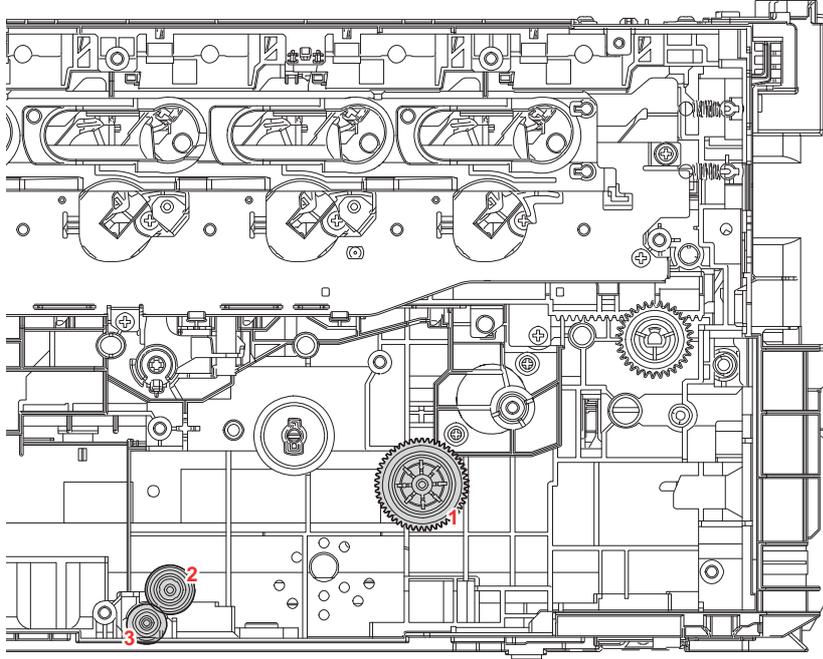

<Development view>

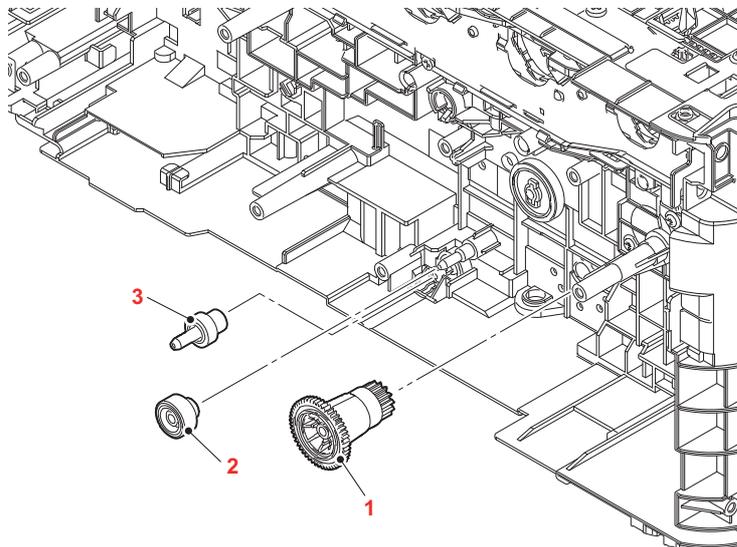


<Name of gears>

1	LY6131	PP gear Z14-51
2	D009RS	DX joint gear Z19
3	D009SV	DX input gear Z15


* These parts are subject to change without notice.

7. HARNESS ROUTING

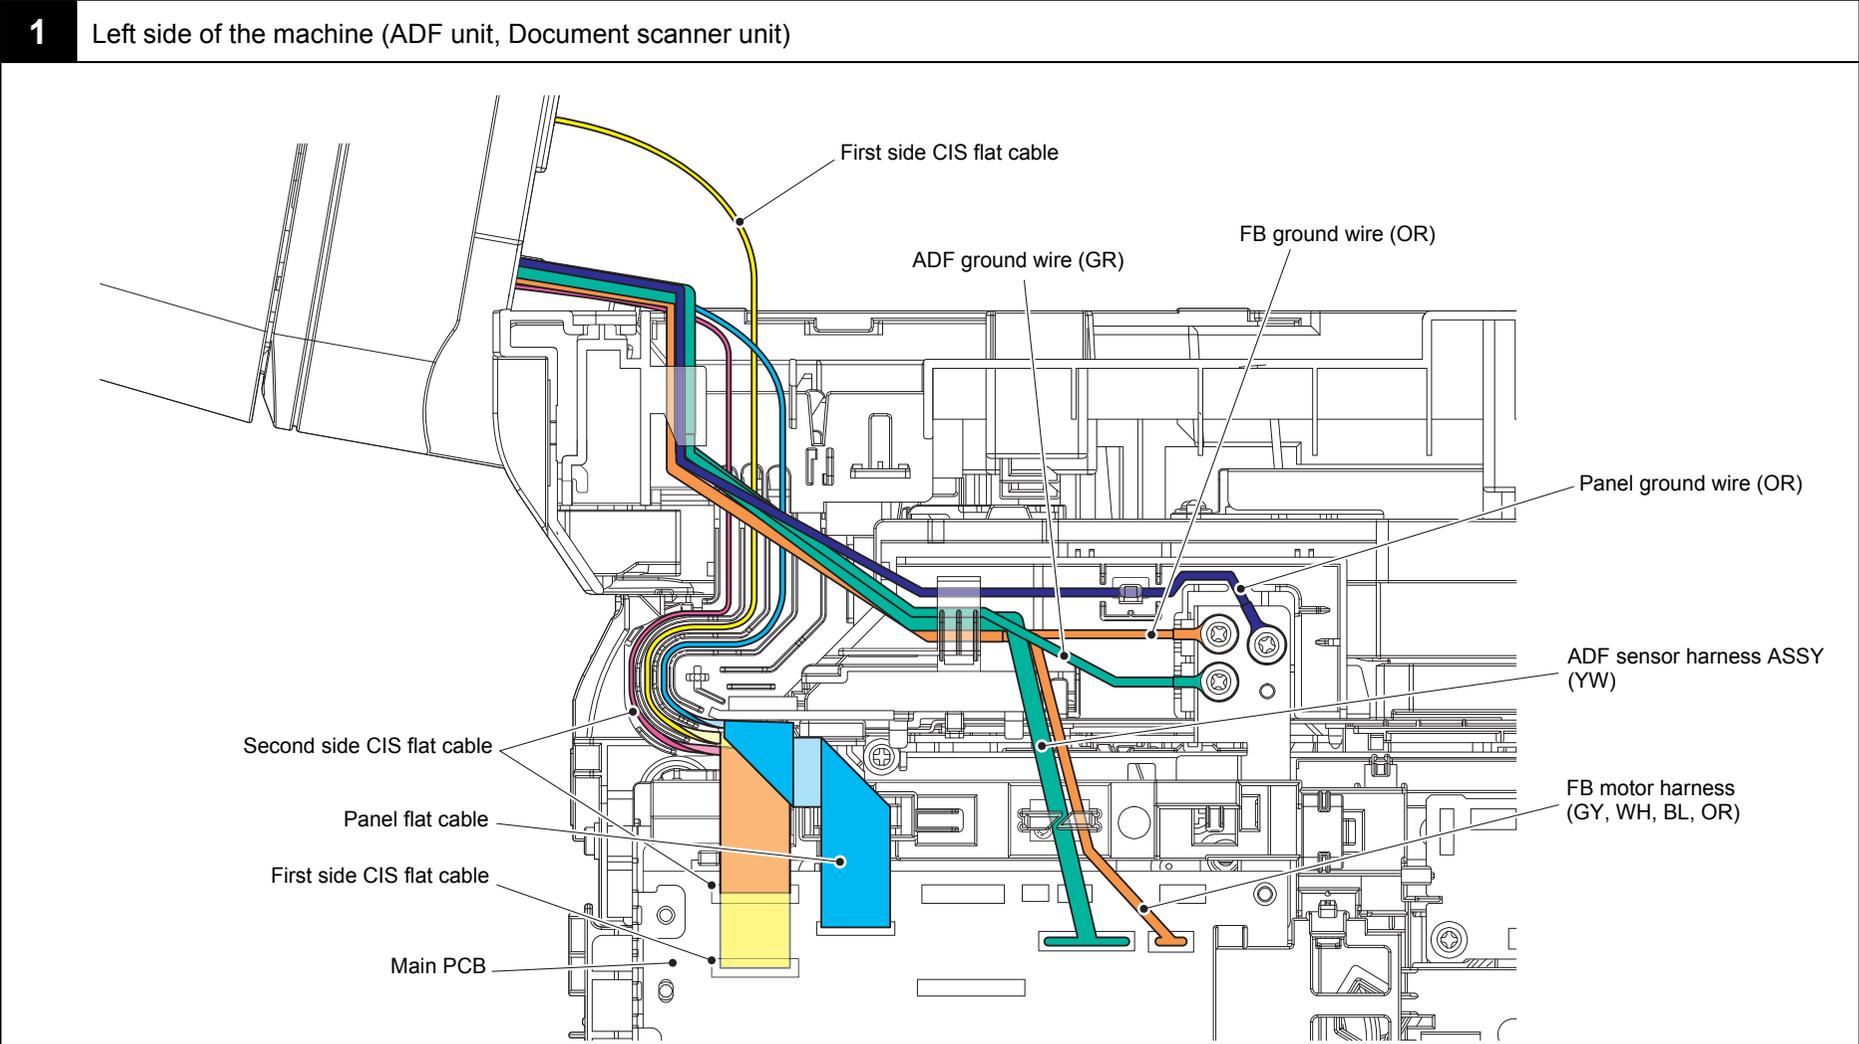


Harness colors may be changed for any reason.

2 Top side of the machine (ADF unit, Document scanner unit, Modem unit)

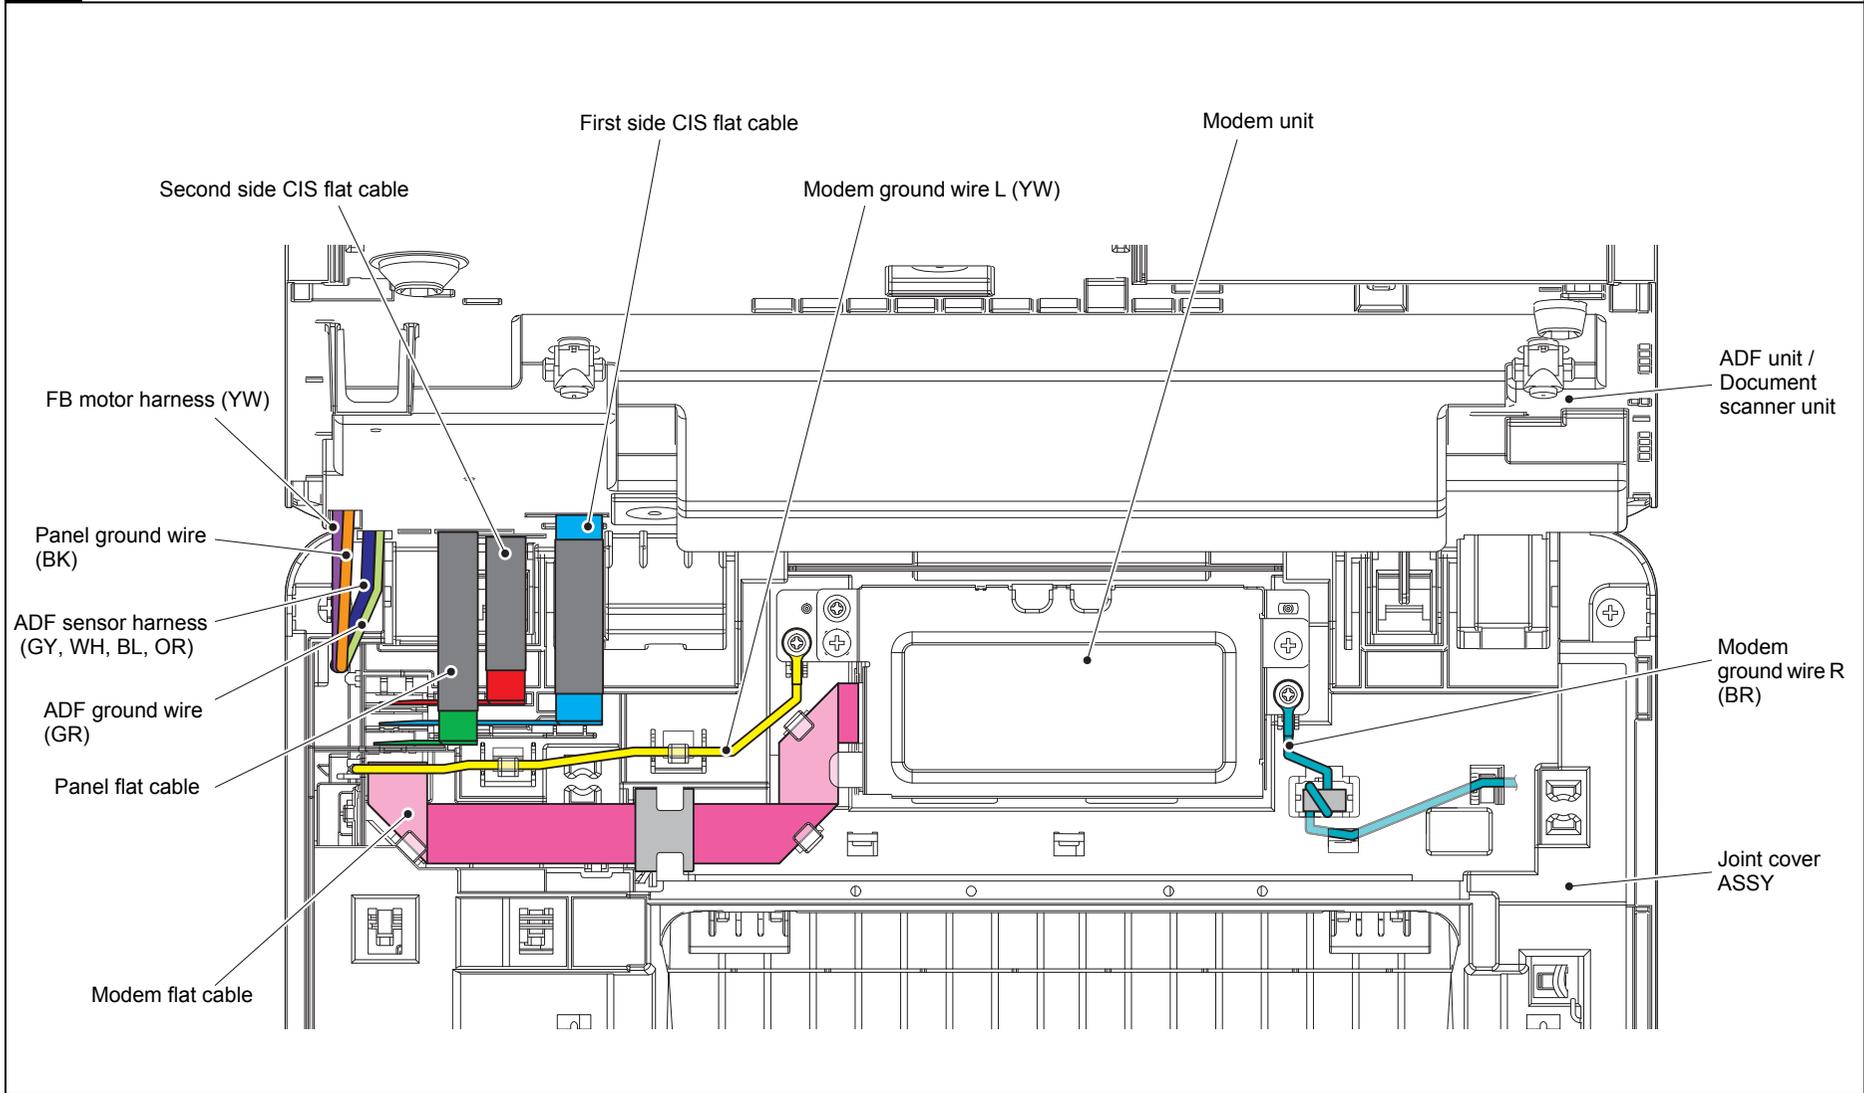


Harness colors may be changed for any reason.


3 ADF unit

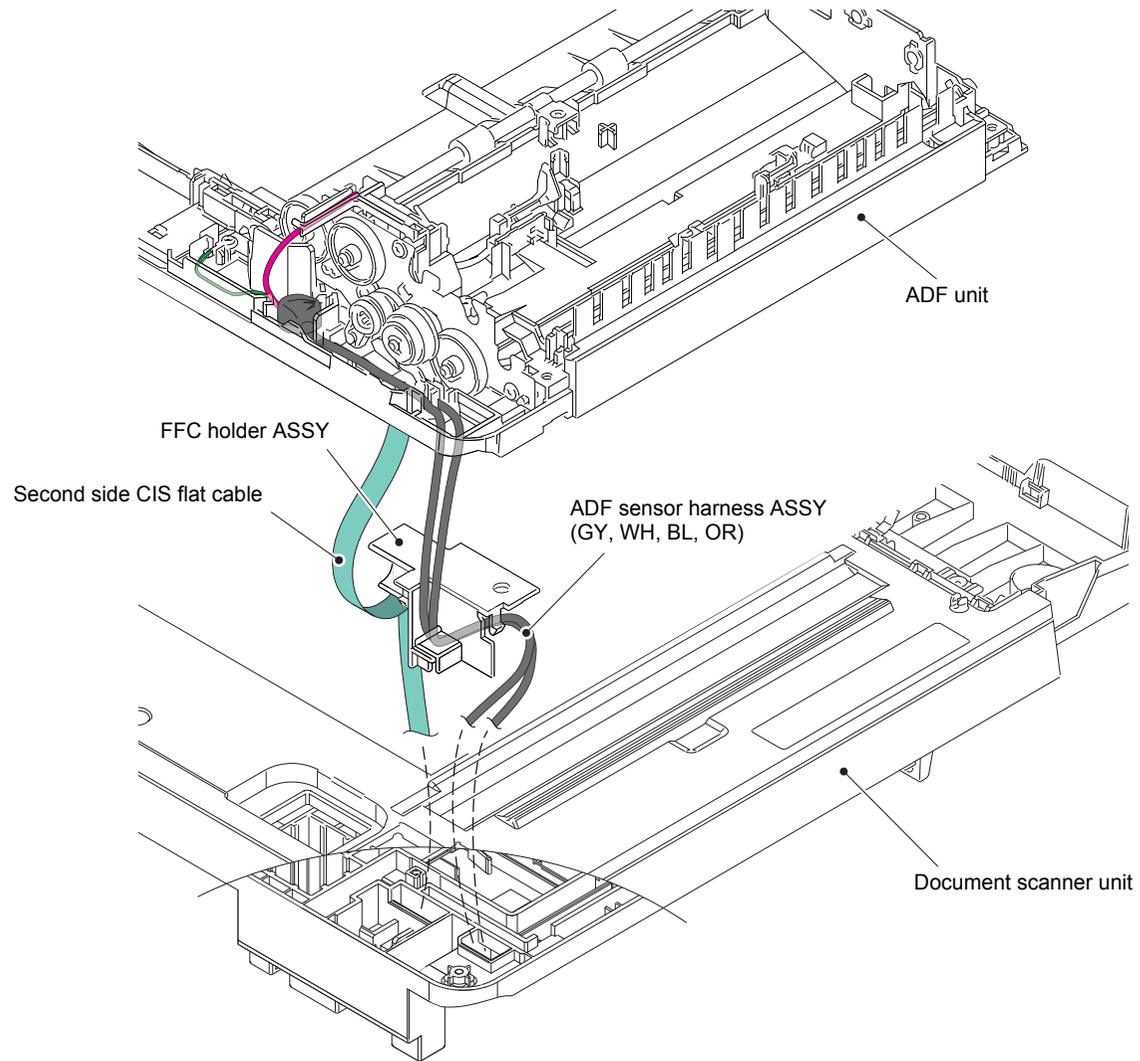


Harness colors may be changed for any reason.

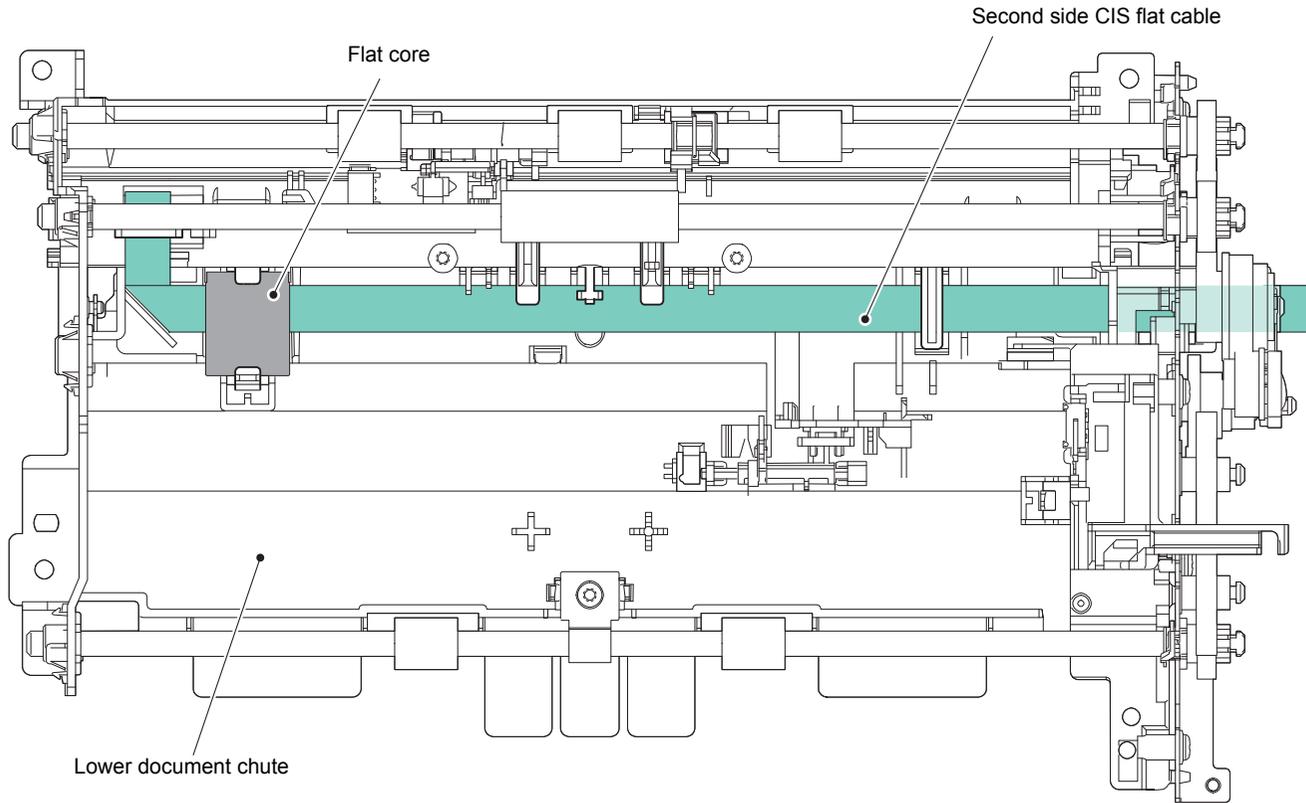

5 Panel unit

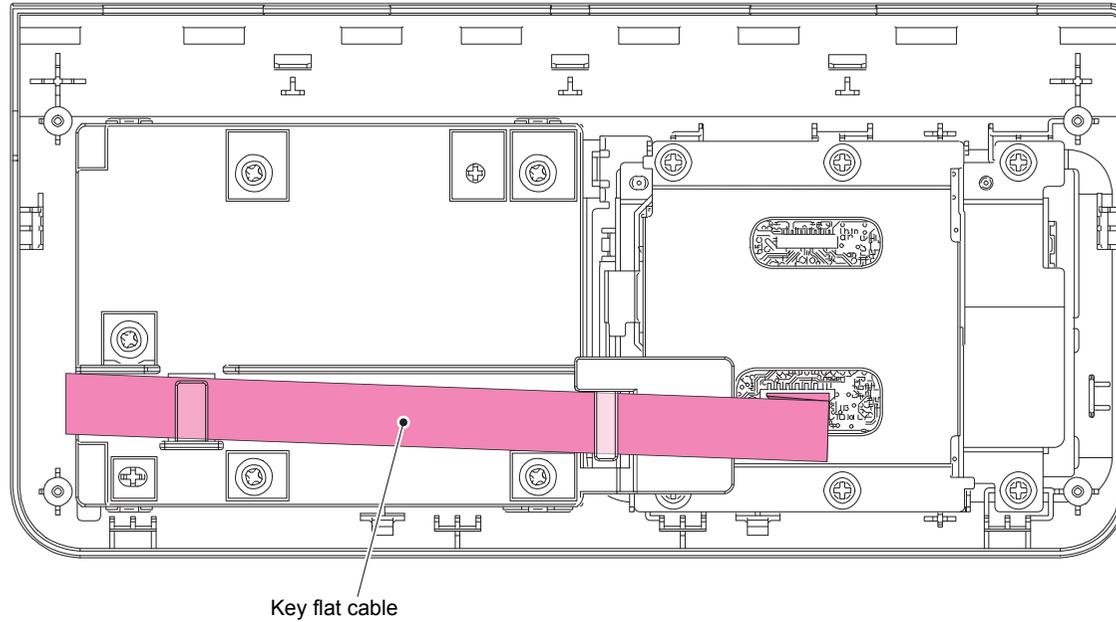


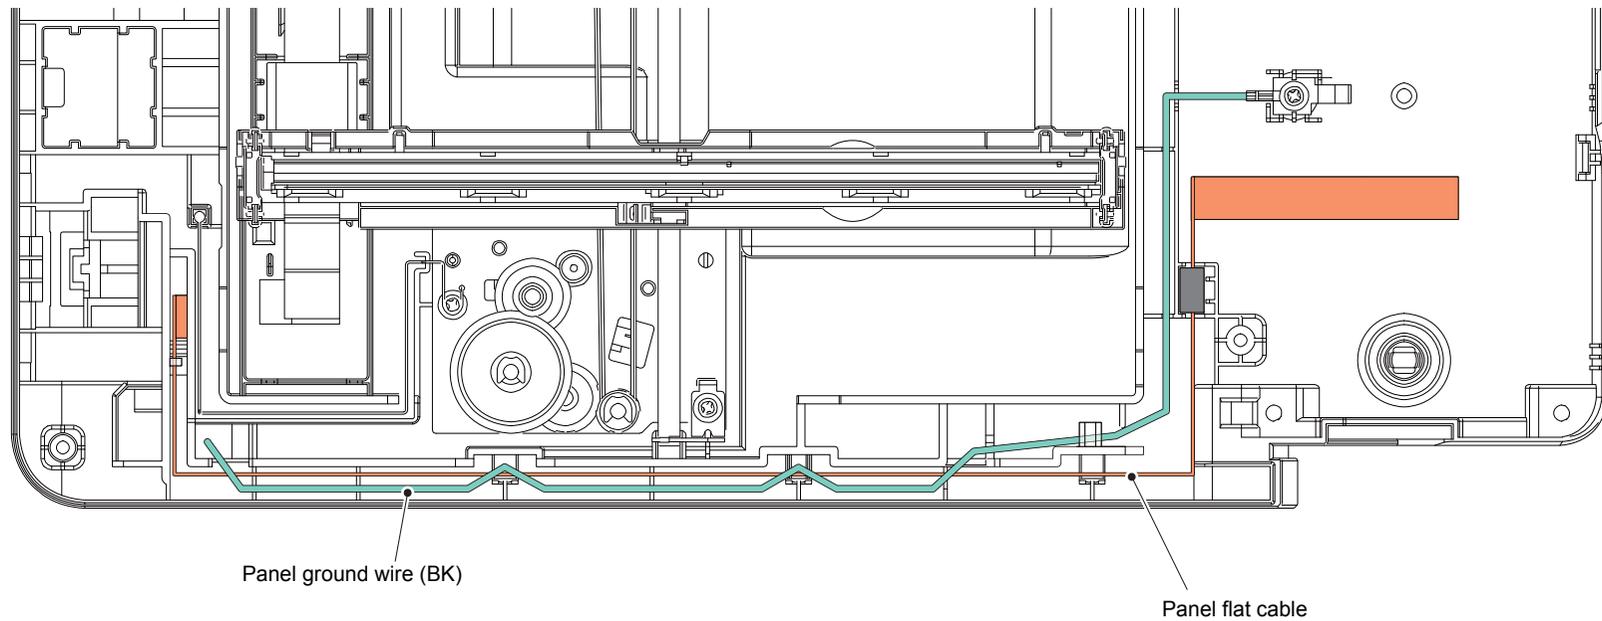

Harness colors may be changed for any reason.


7

Left side of the machine (LED unit, NFC PCB)

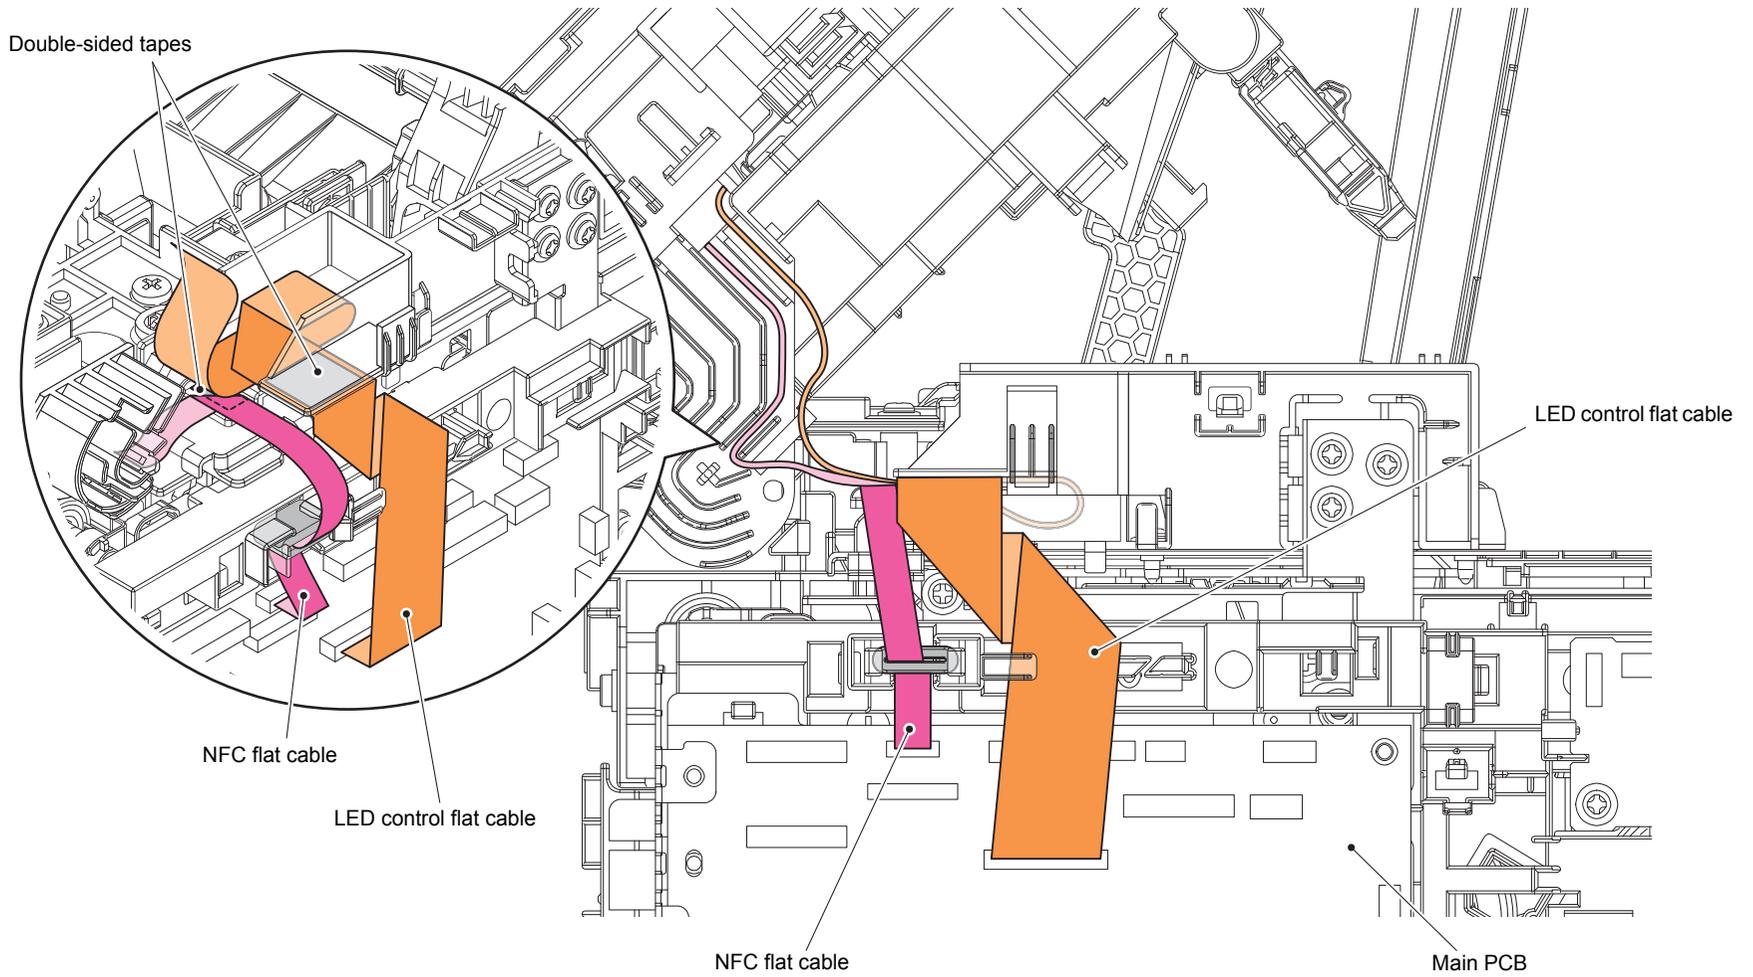


8

Left side of the machine (Modem unit)

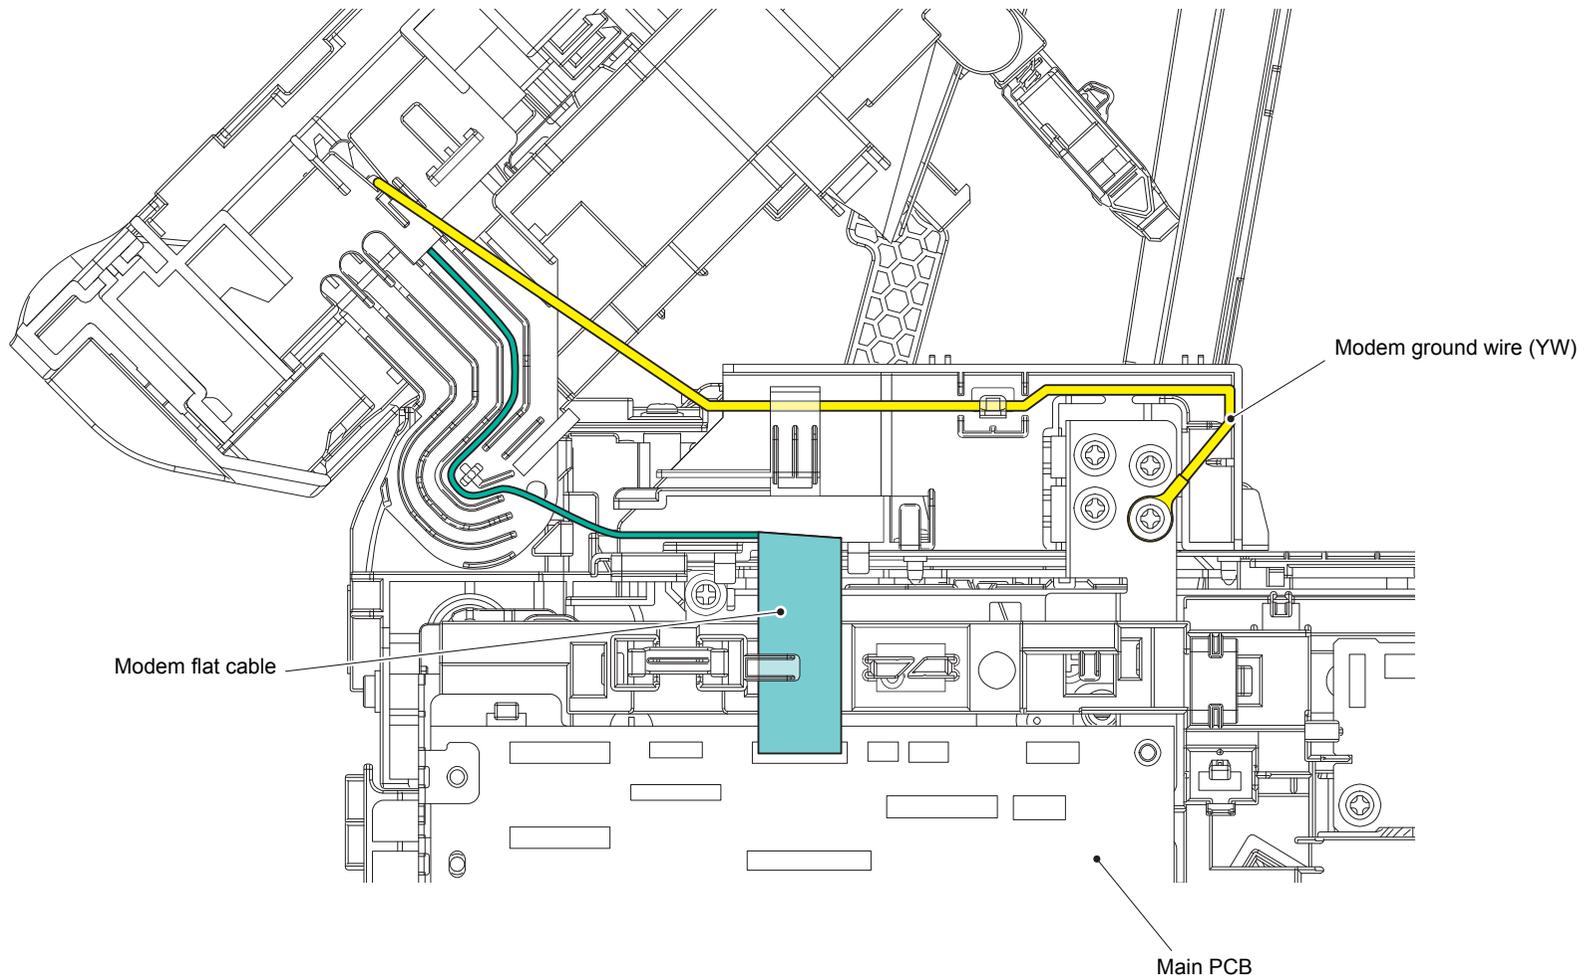


Harness colors are subject to change for some reason.

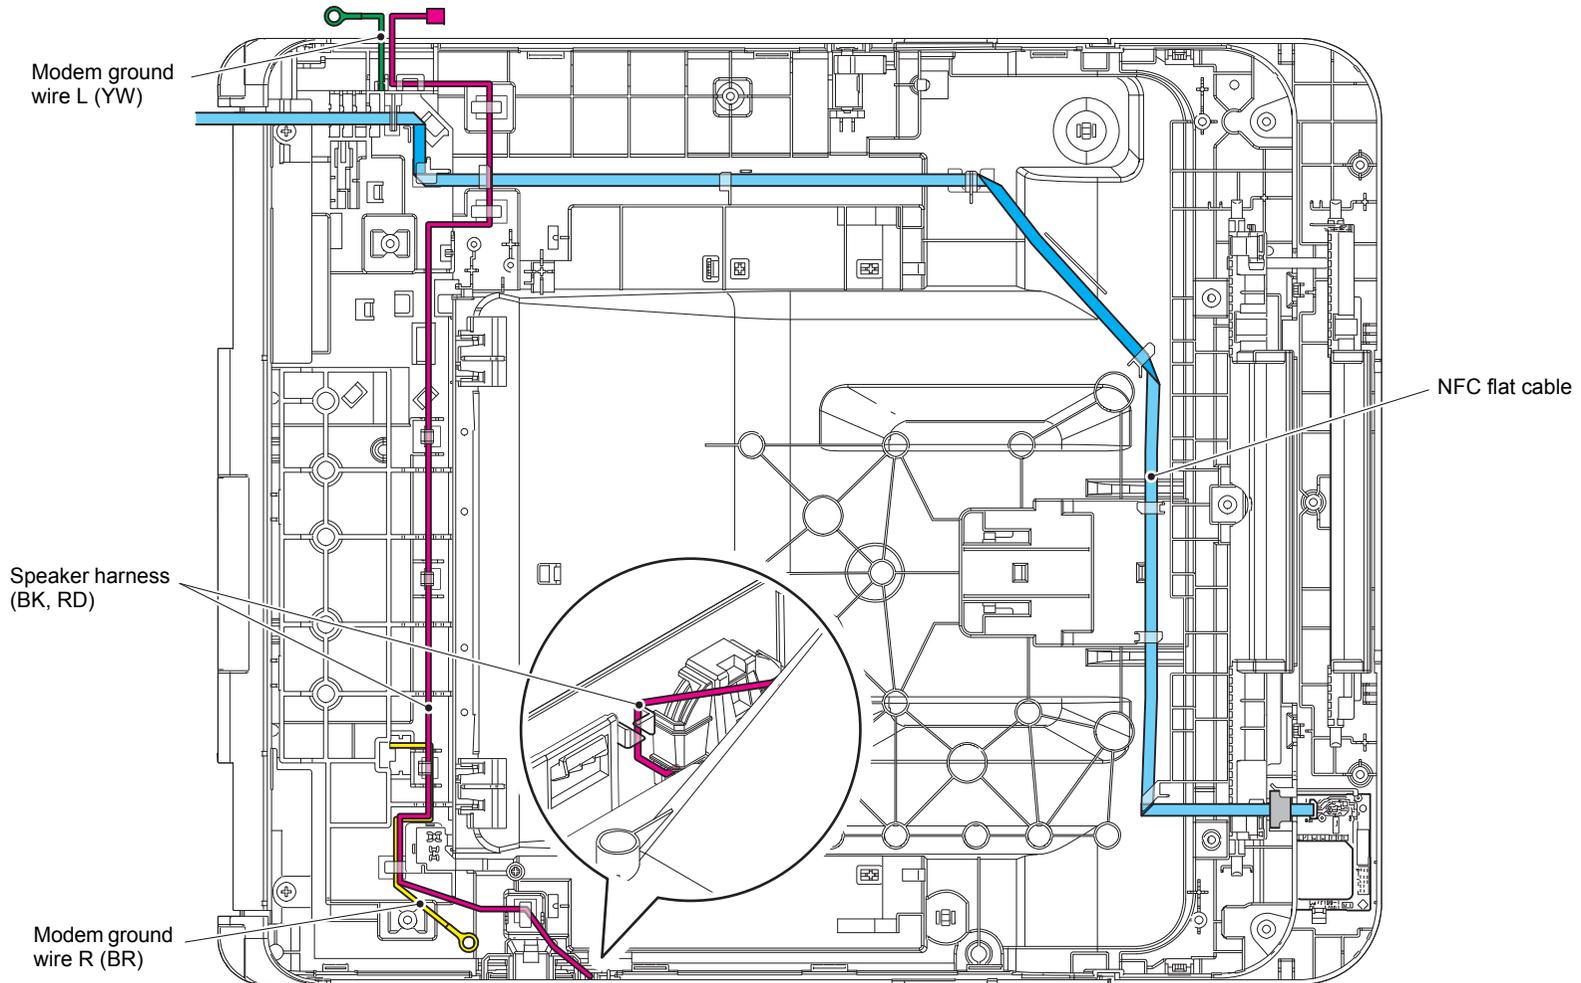


Harness colors are subject to change for some reason.

10 Main PCB, Cartridge sensor relay PCB

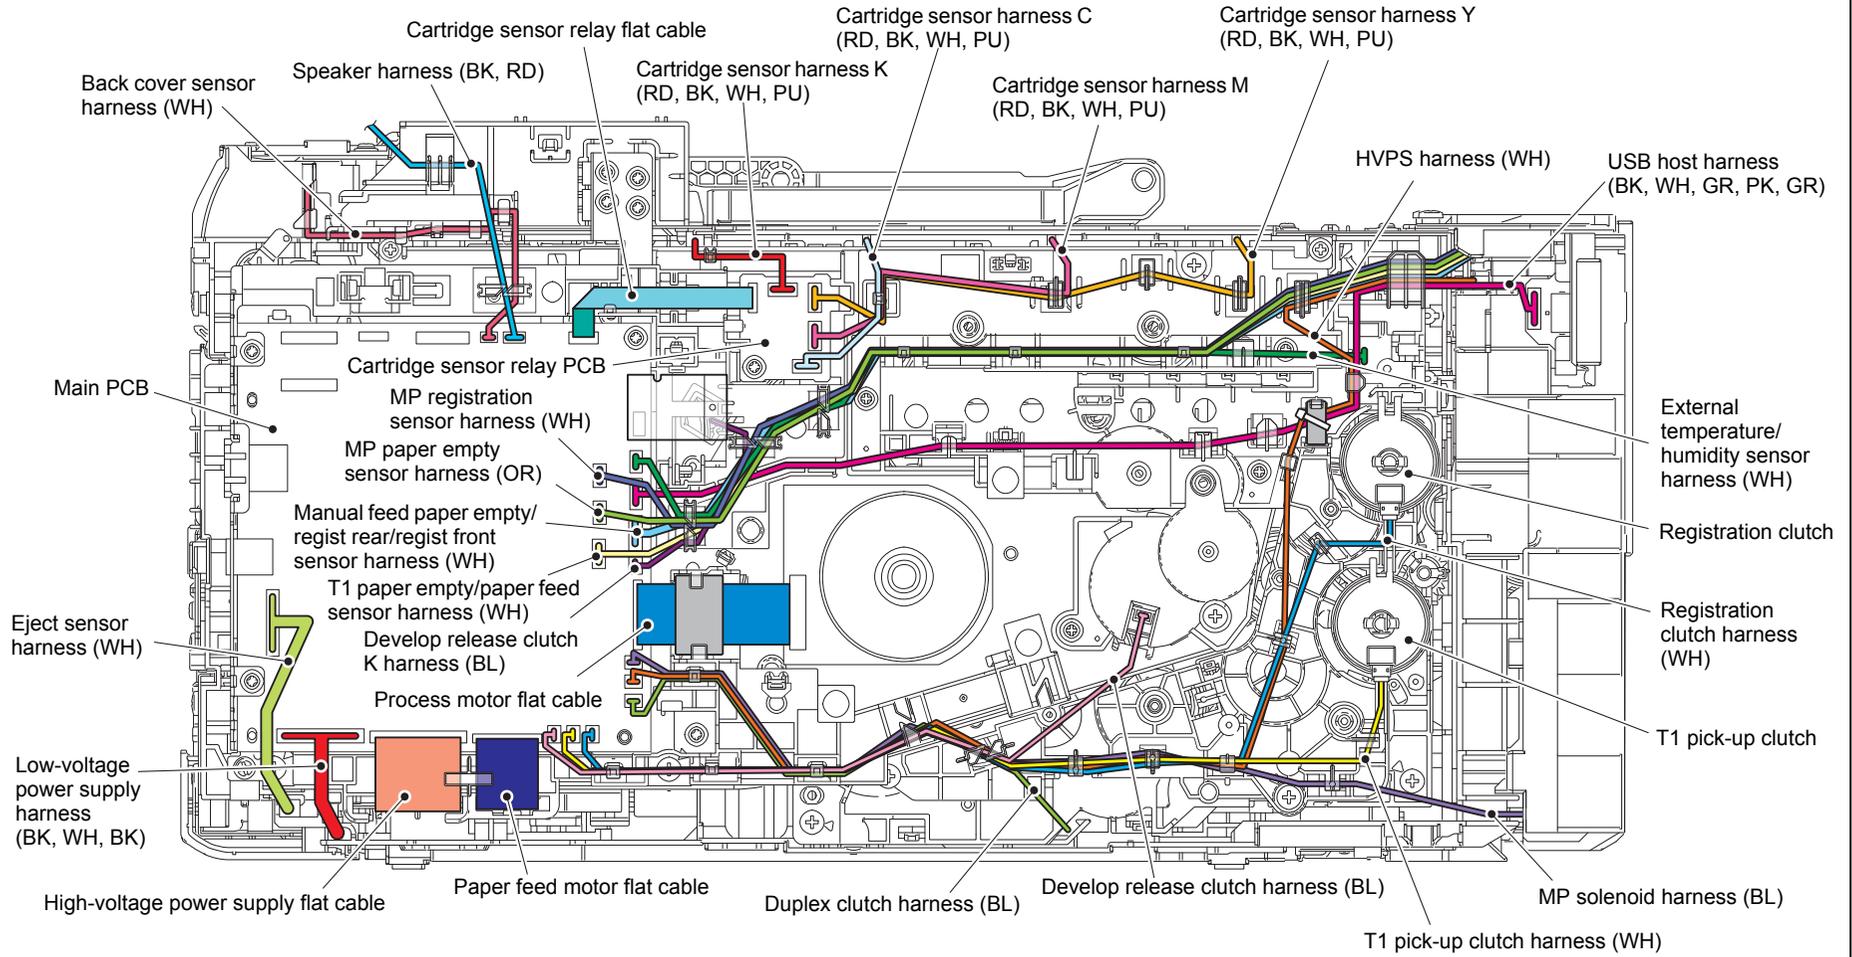


Harness colors are subject to change for some reason.

11 High-voltage power supply PCB, Fan harness, LED ground wire

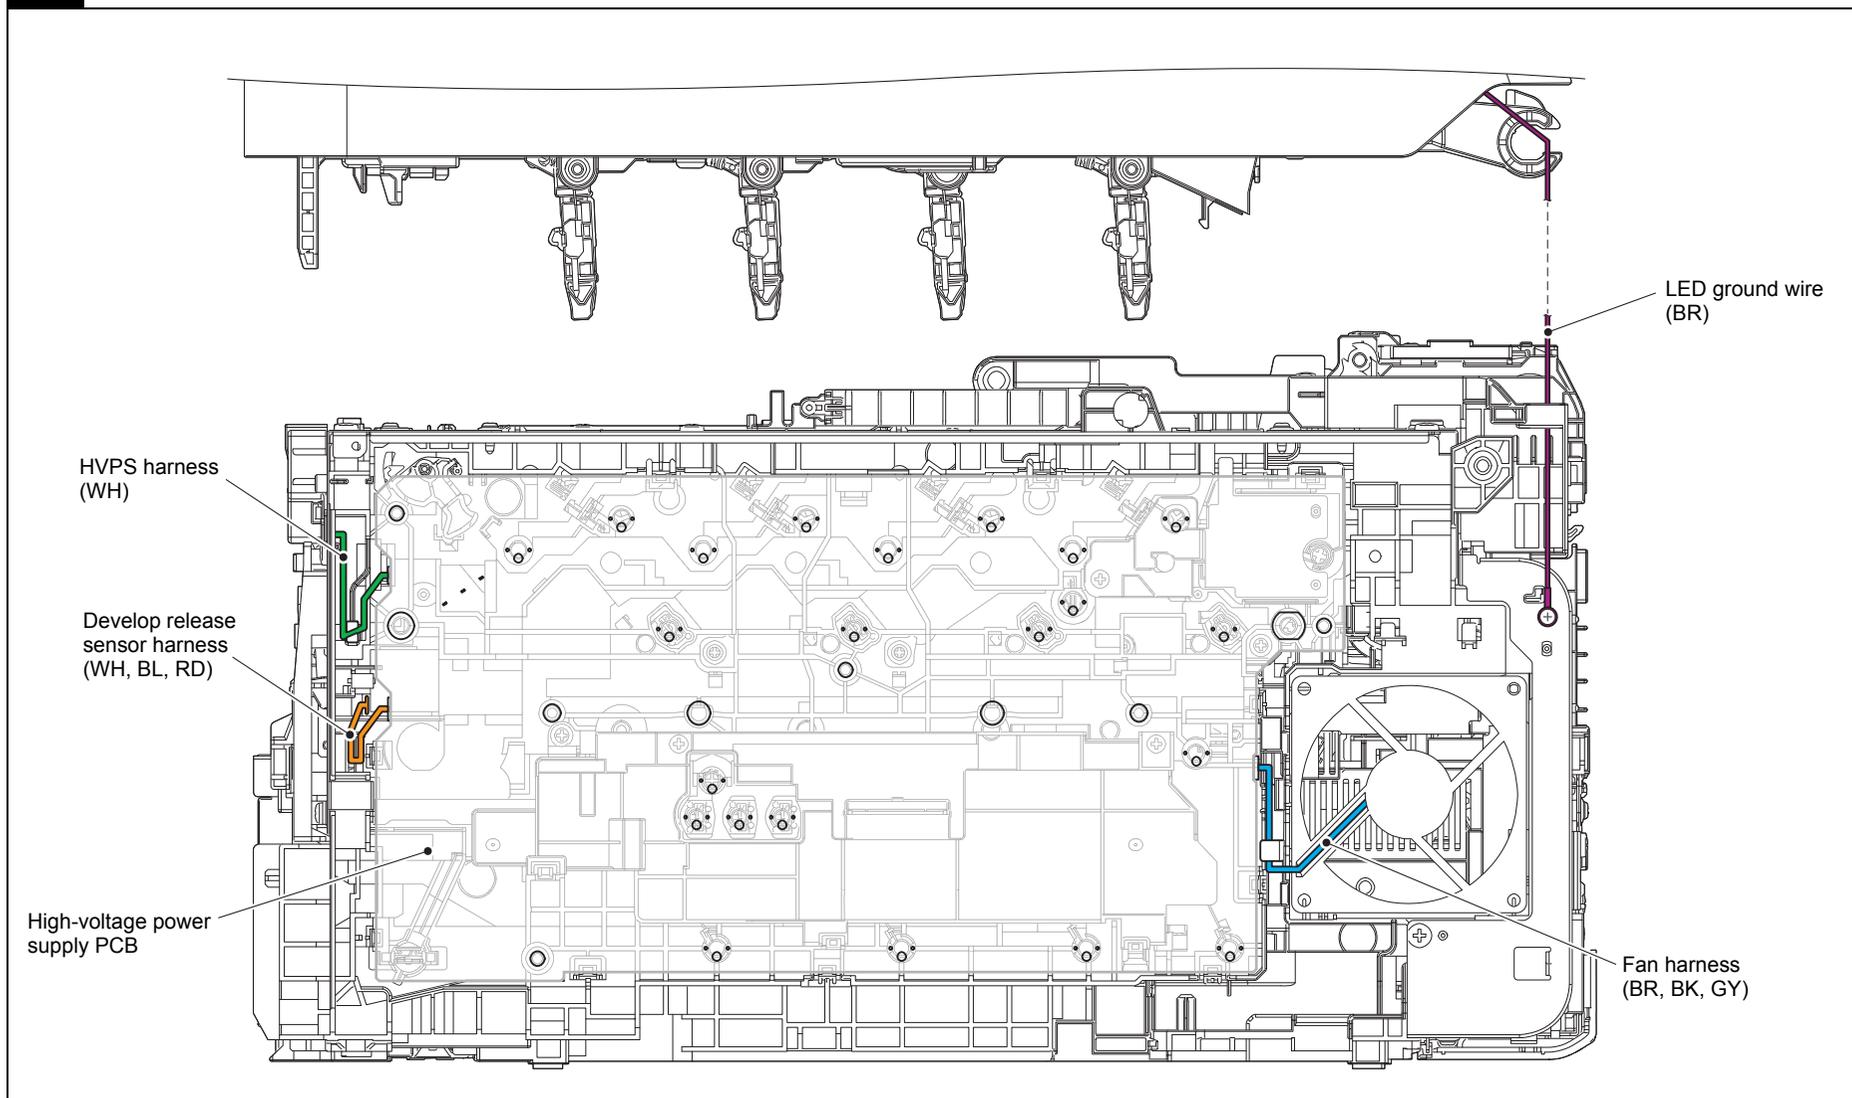


Harness colors are subject to change for some reason.

12 LED unit

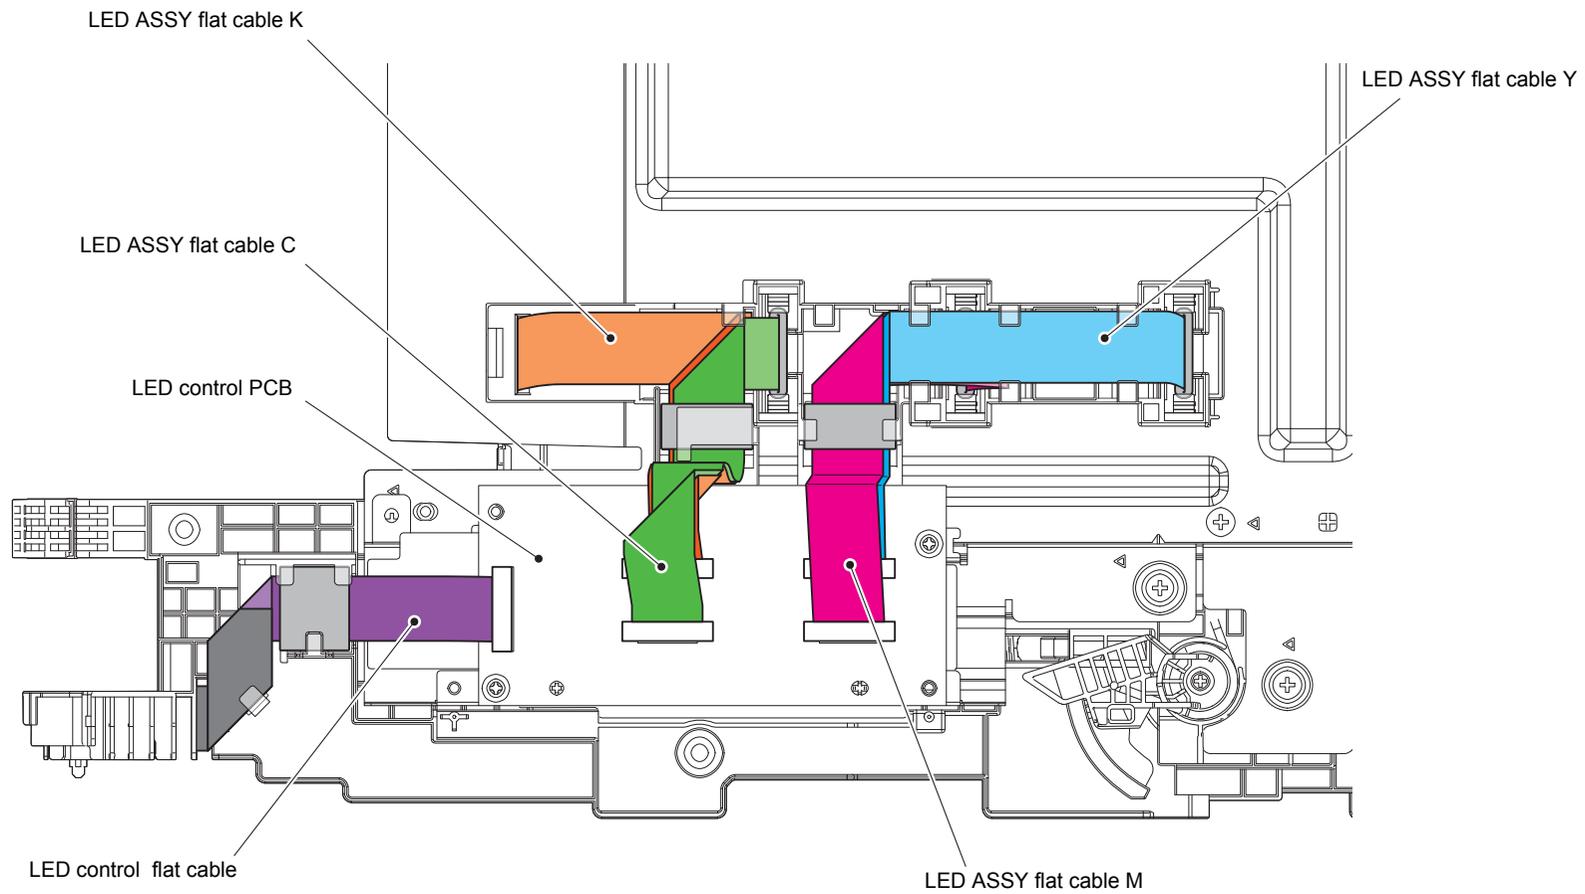


13 High-voltage power supply flat cable

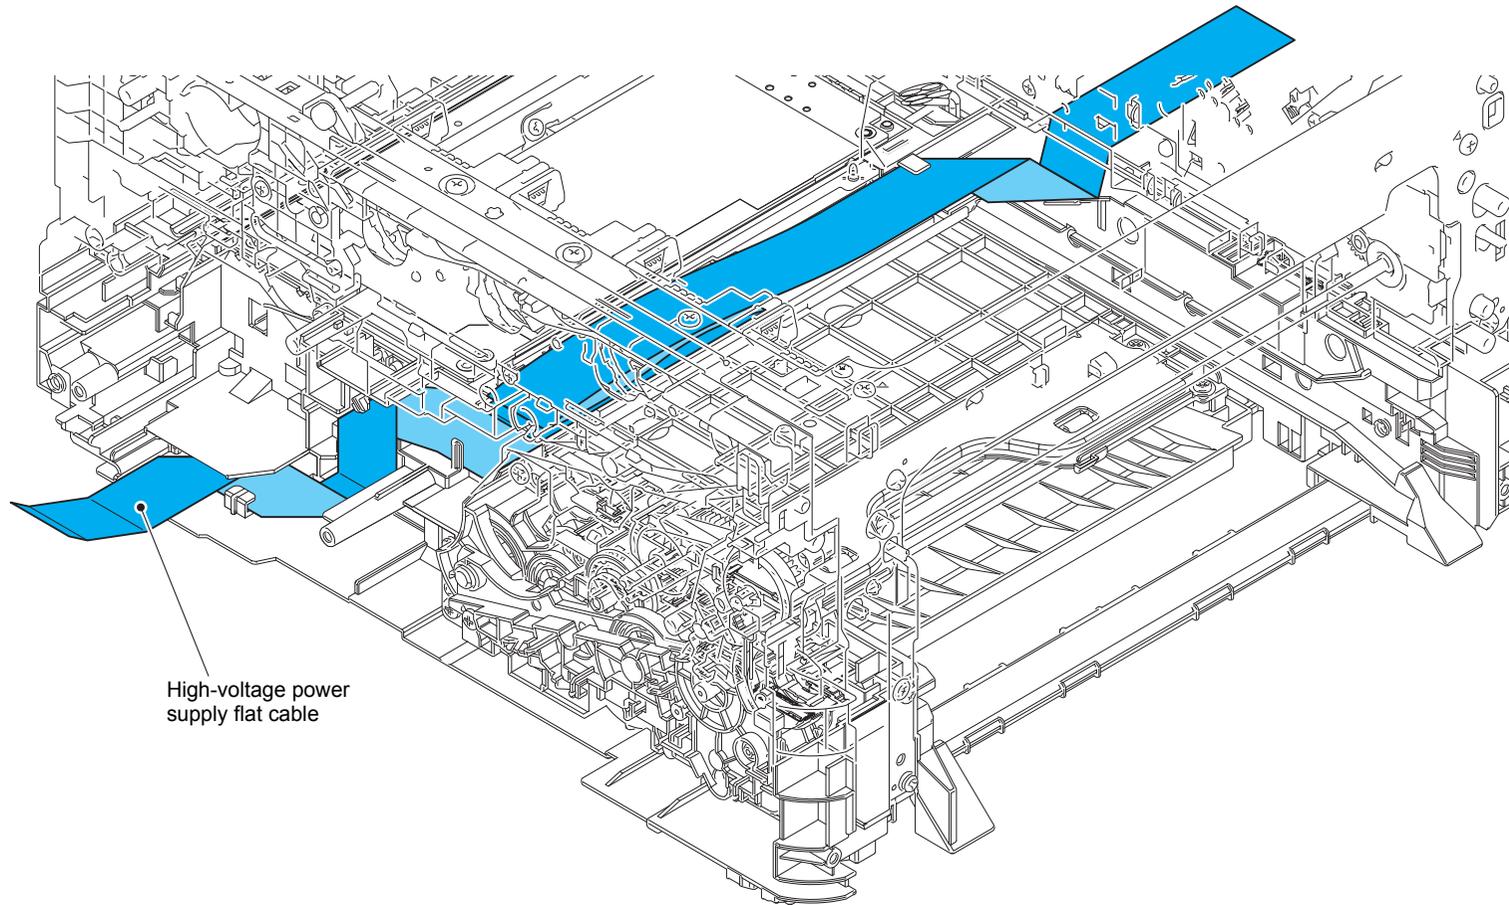


High-voltage power supply flat cable

14 Process drive unit

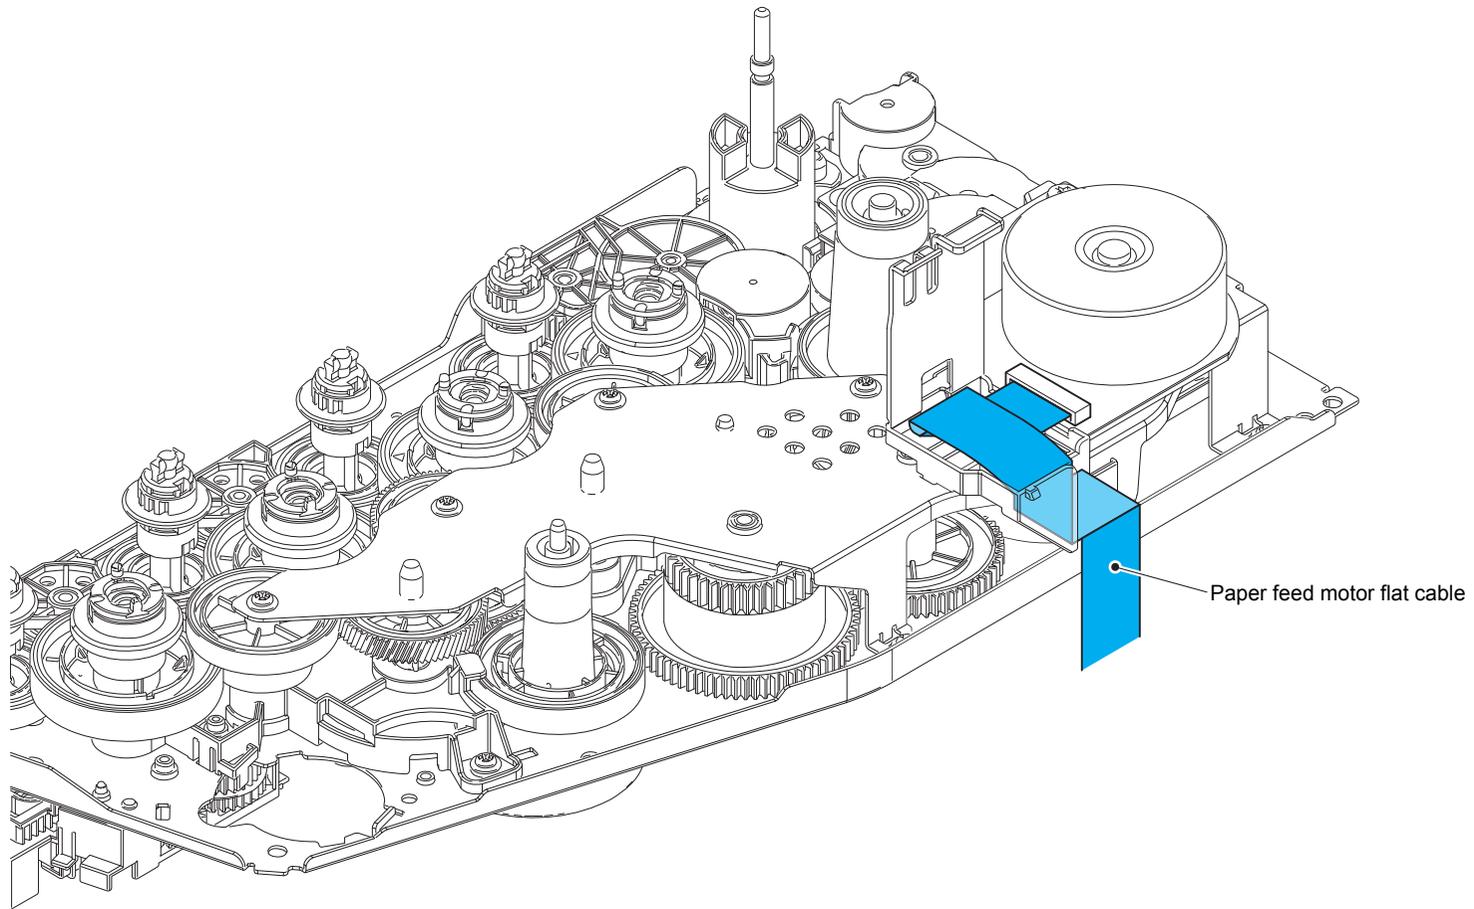


15 Registration mark sensor ASSY, Eject sensor PCB

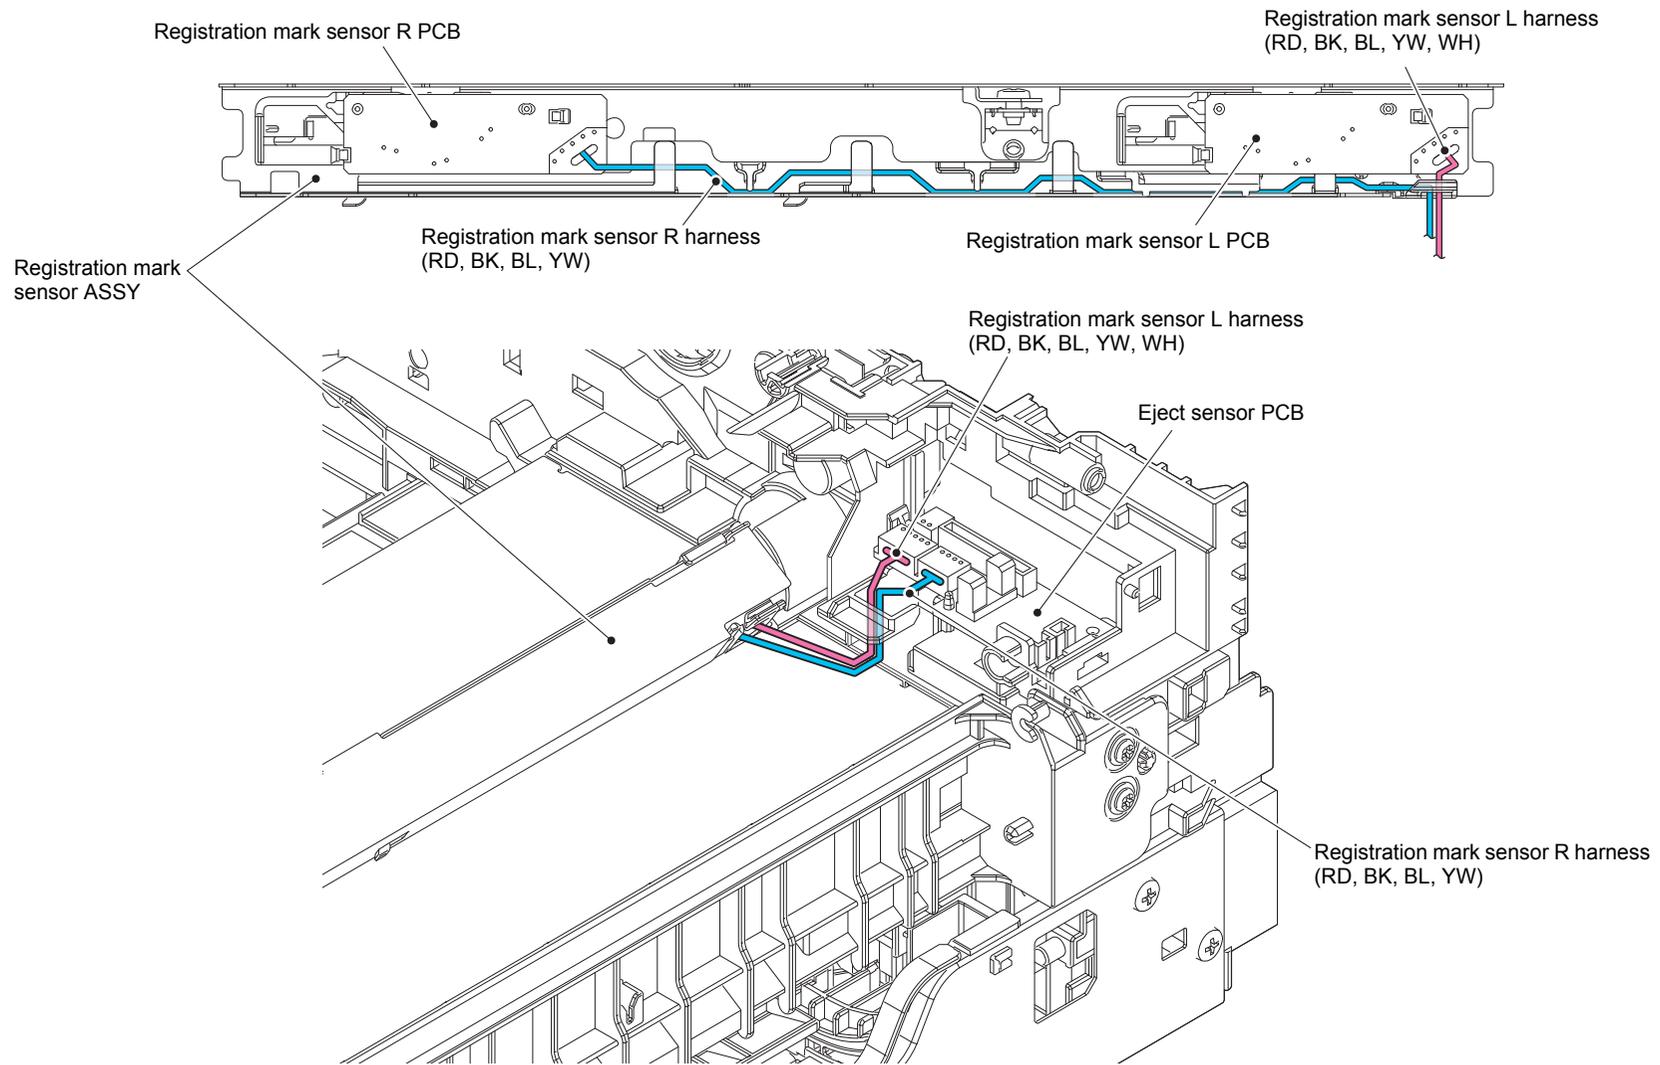


Harness colors are subject to change for some reason.

16 Front side of the machine

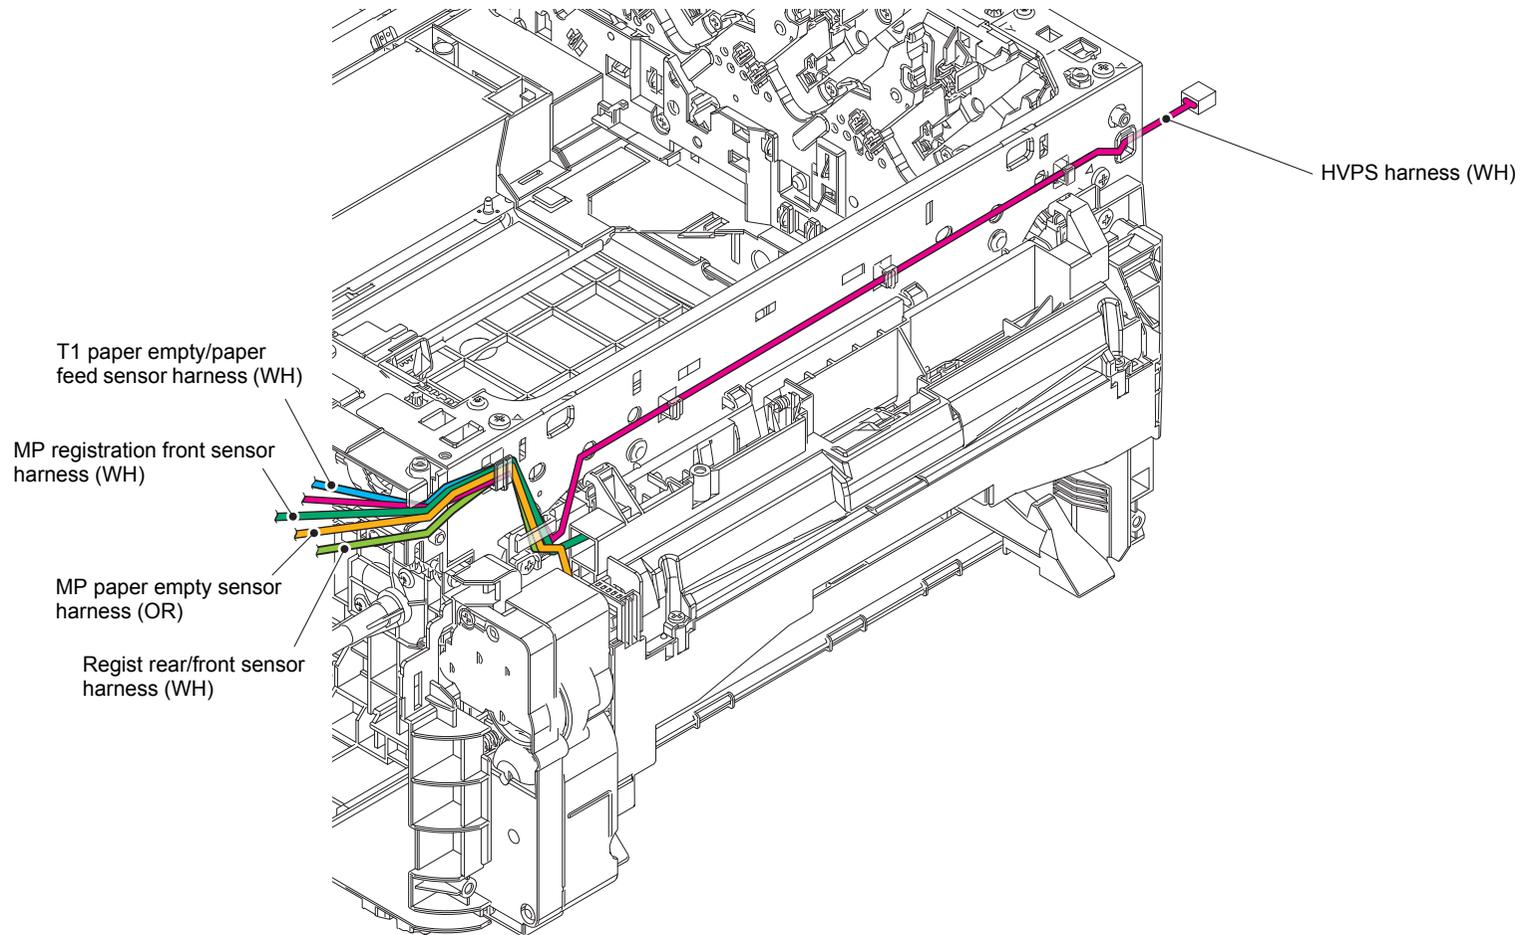

Harness colors are subject to change for some reason.

17 LVPS

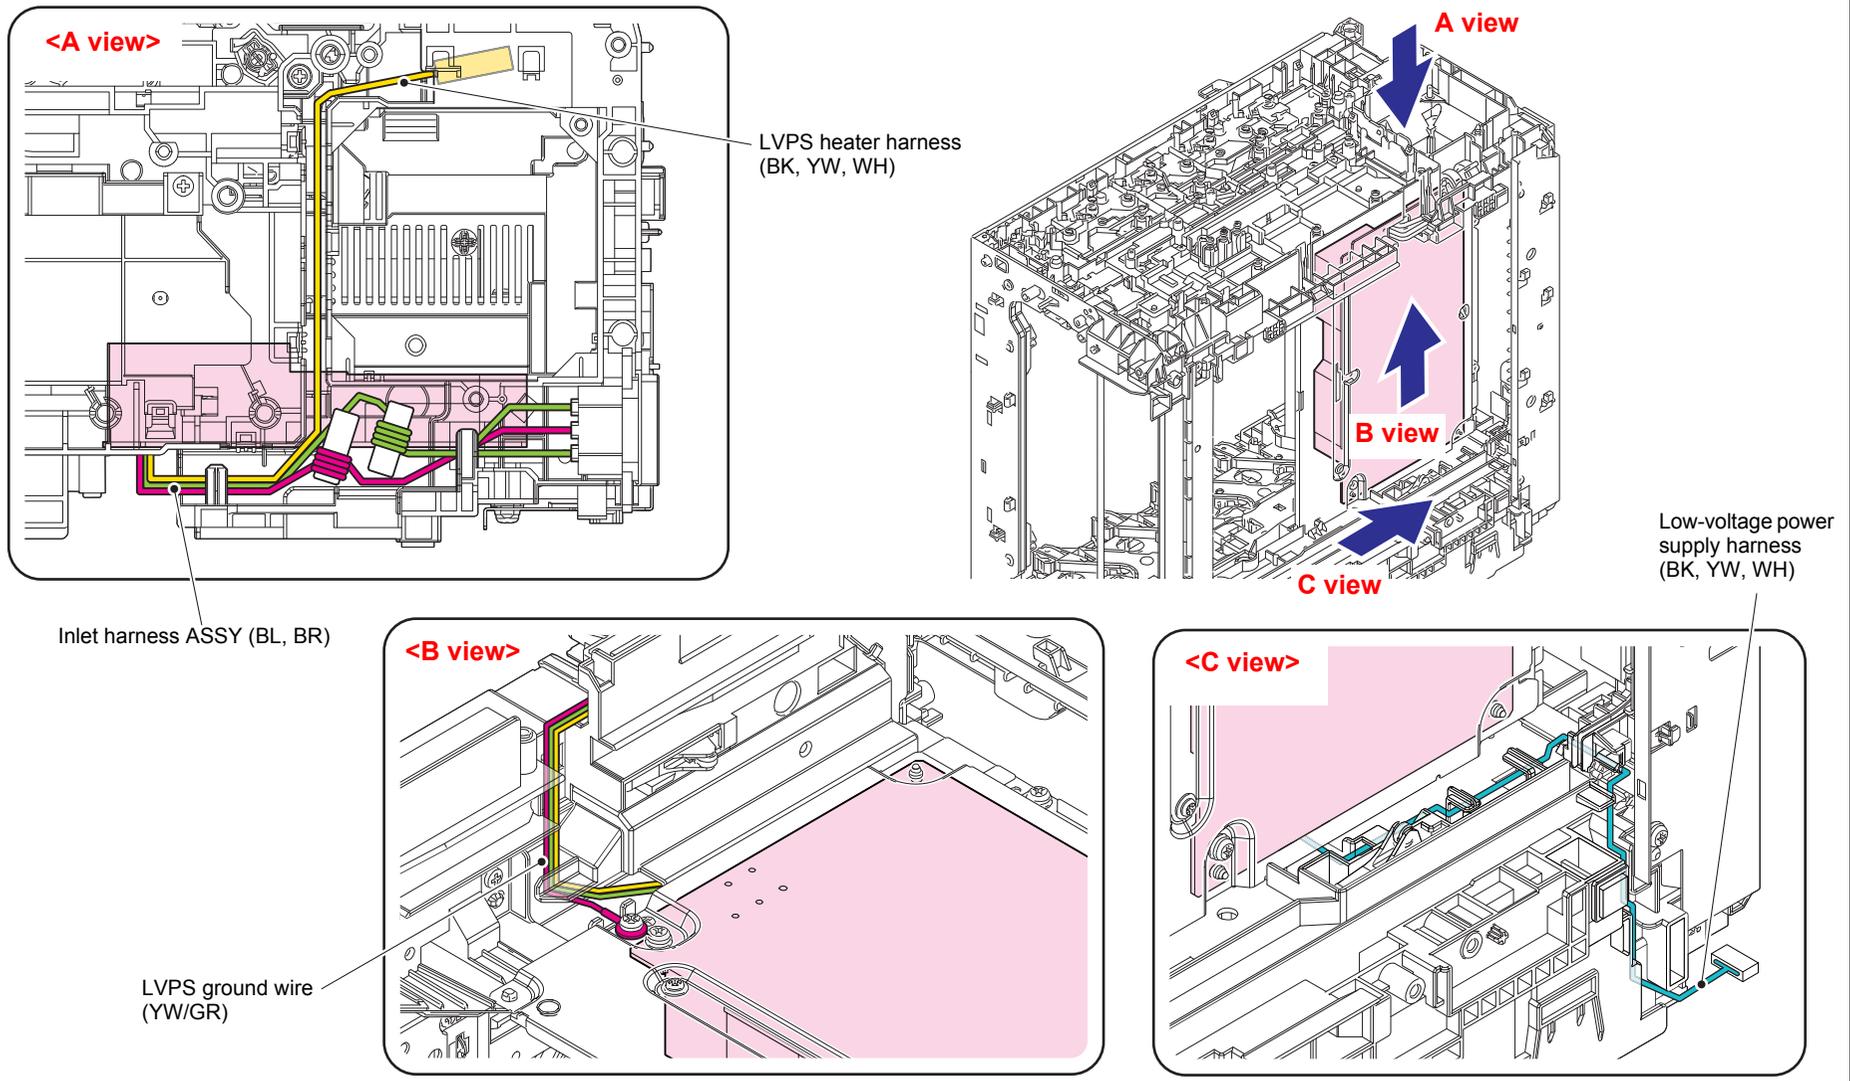

Harness colors are subject to change for some reason.

9. DISASSEMBLY PROCEDURE

9.1 Preparation

■ Disconnecting cables and removing accessories

Prior to proceeding with the disassembly procedure,

- (1) Unplug
 - the AC cord,
 - the USB cable, if connected,
 - the LAN cable, if connected,
 - the USB flash memory drive, if connected, and
 - the Line cord, if connected.
- (2) Remove
 - the Toner cartridge & Drum unit,
 - the Belt unit,
 - the Waste toner box,
 - the Paper tray,
 - the LAN port cap, and
 - the EXT cap.

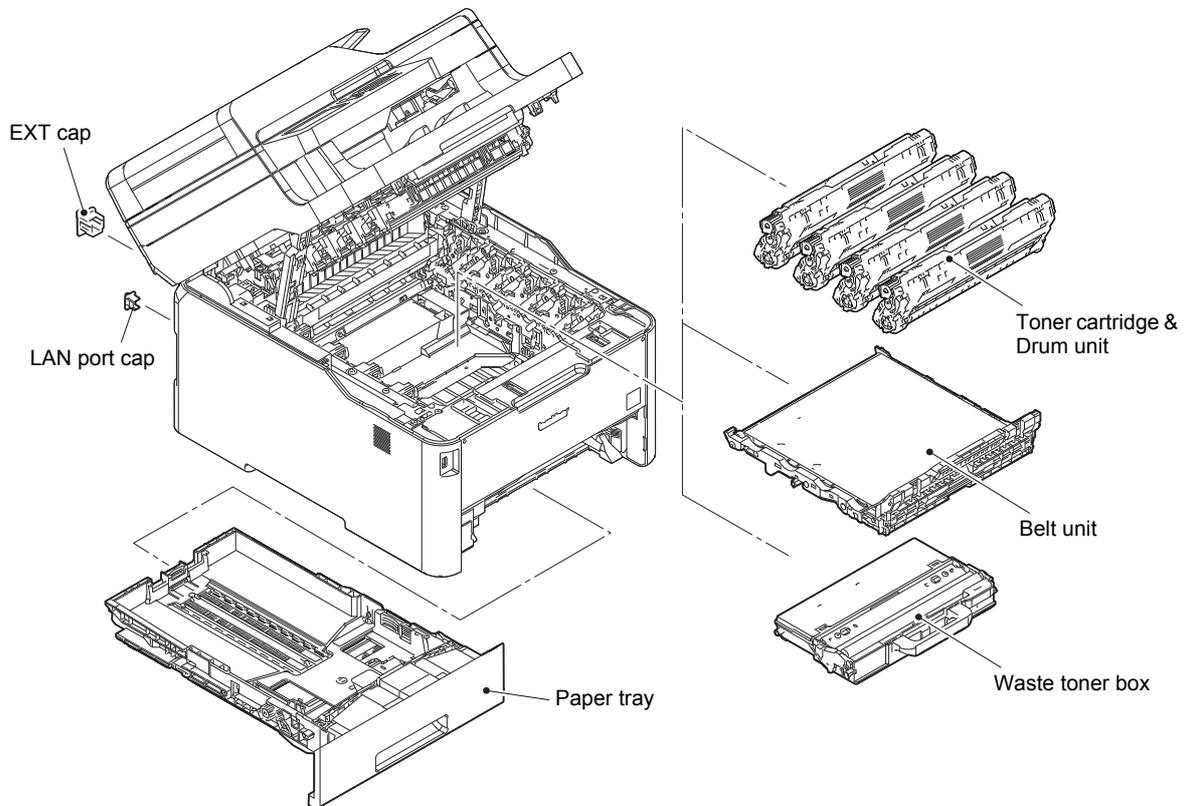


Fig. 3-1

9.2 Paper tray / T1 separation pad ASSY

- (1) Release each Hook of the T1 separation pad ASSY from the Paper tray.
- (2) Push both side Arms on the T1 separation pad ASSY inwards to remove the Pins, and remove the T1 separation pad ASSY from the Paper tray.
- (3) Remove the Separation pad spring from the Paper tray.

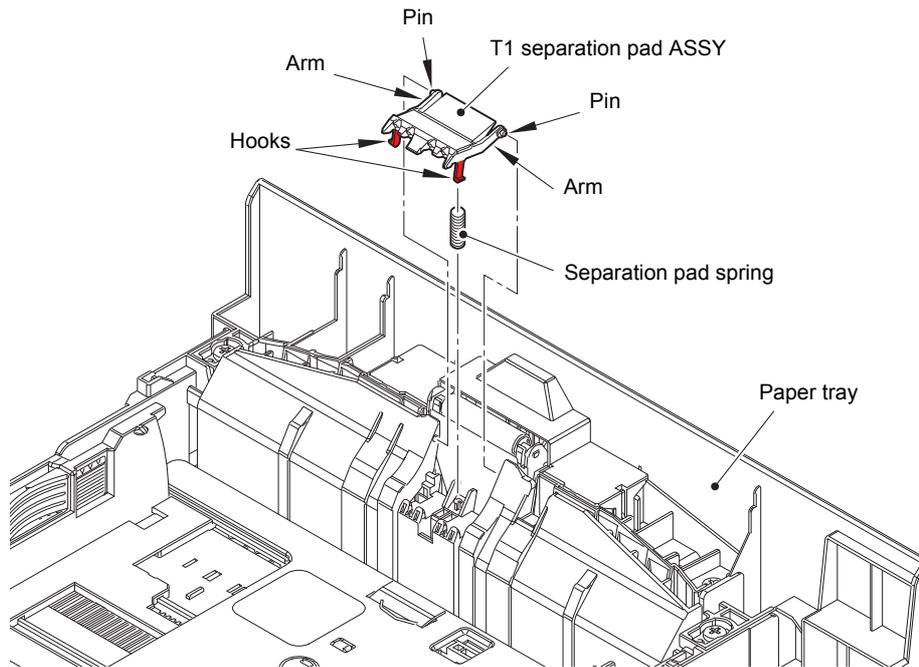


Fig. 3-2

9.3 Back cover

- (1) Open the Back cover ASSY.
- (2) Remove the Back cover stopper arm L/R from the A part.

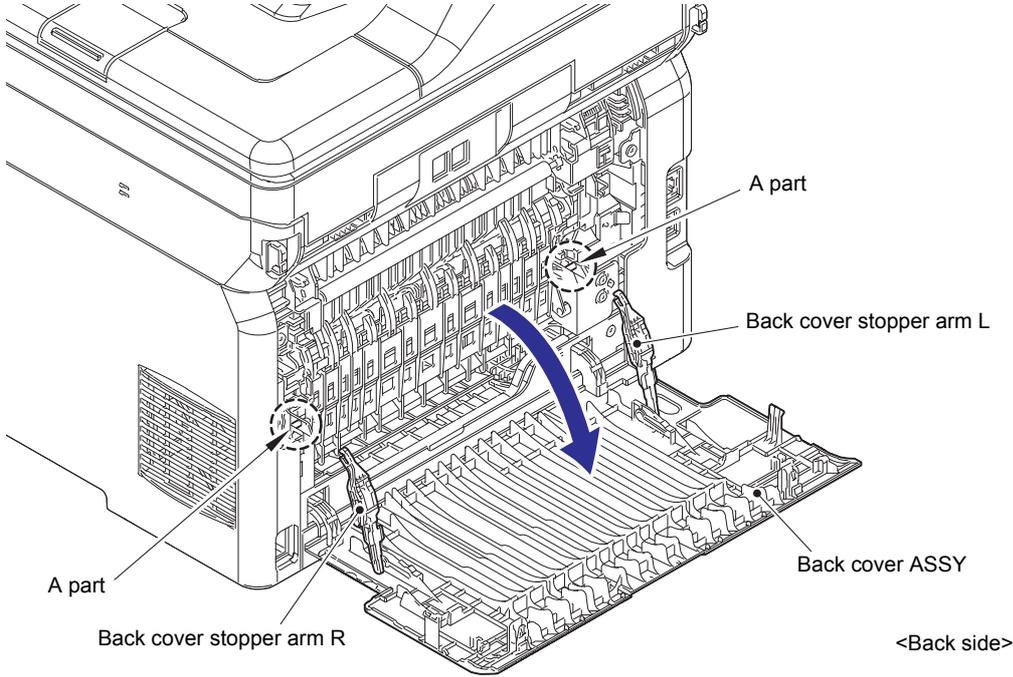


Fig. 3-3

- (3) Release the Boss of the Back cover ASSY from the Bush on the Frame L to remove the Back cover ASSY. (3a → 3b)

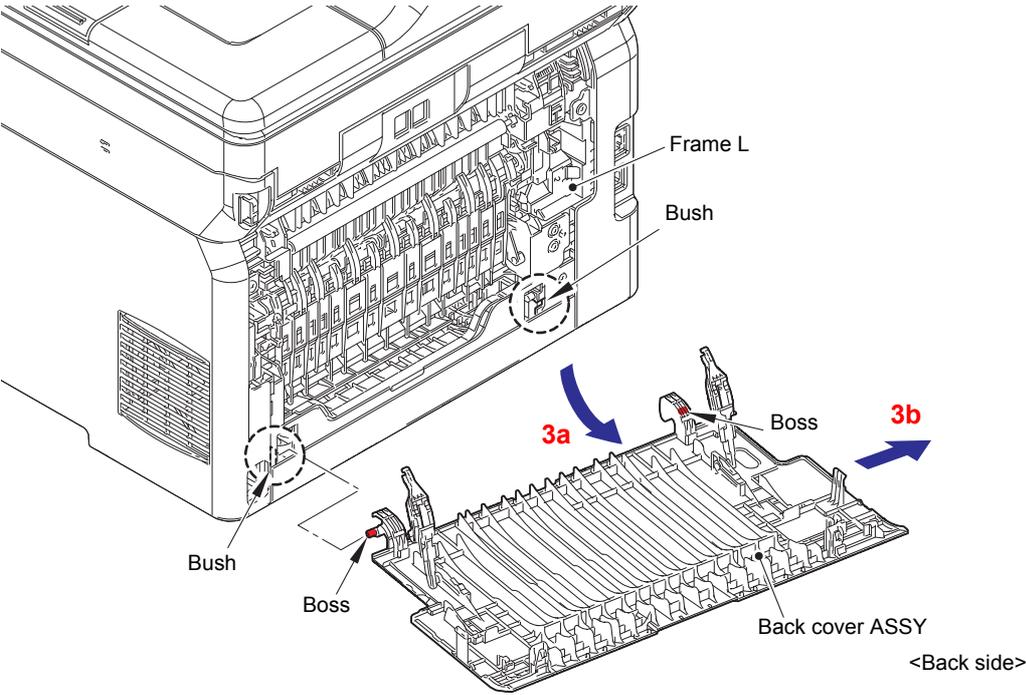


Fig. 3-4

- (4) Remove the Collar 5 to remove the Back cover stopper arm L from the Back cover.
- (5) Remove the Collar 5 to remove the Back cover stopper arm R from the Back cover.

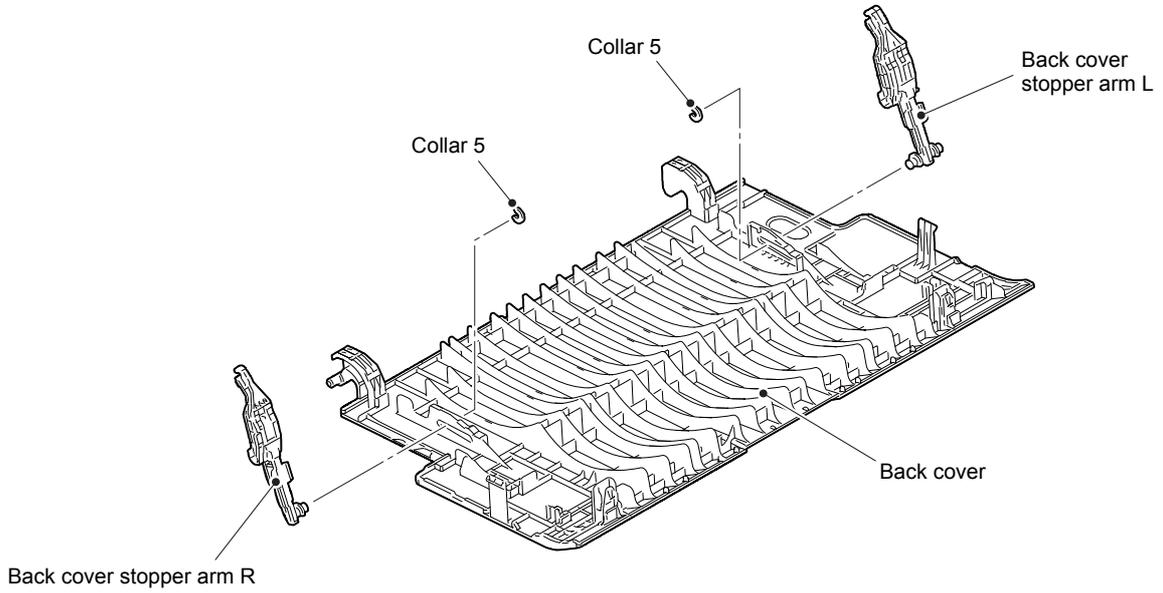


Fig. 3-5

9.4 Rear flapper sub ASSY

(1) Remove the Rear flapper sub ASSY from each Boss.

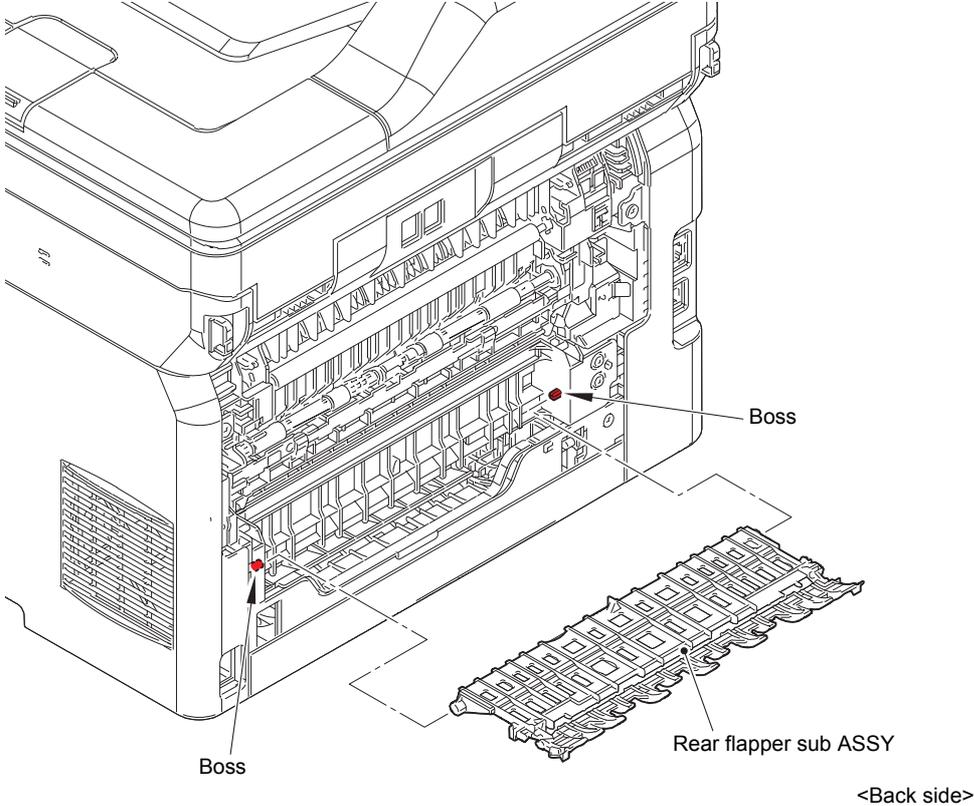


Fig. 3-6

9.5 Fuser cover ASSY / Fuser unit

- (1) Remove the Taptite bind B M3x10 screw to remove the Fuser cover L.

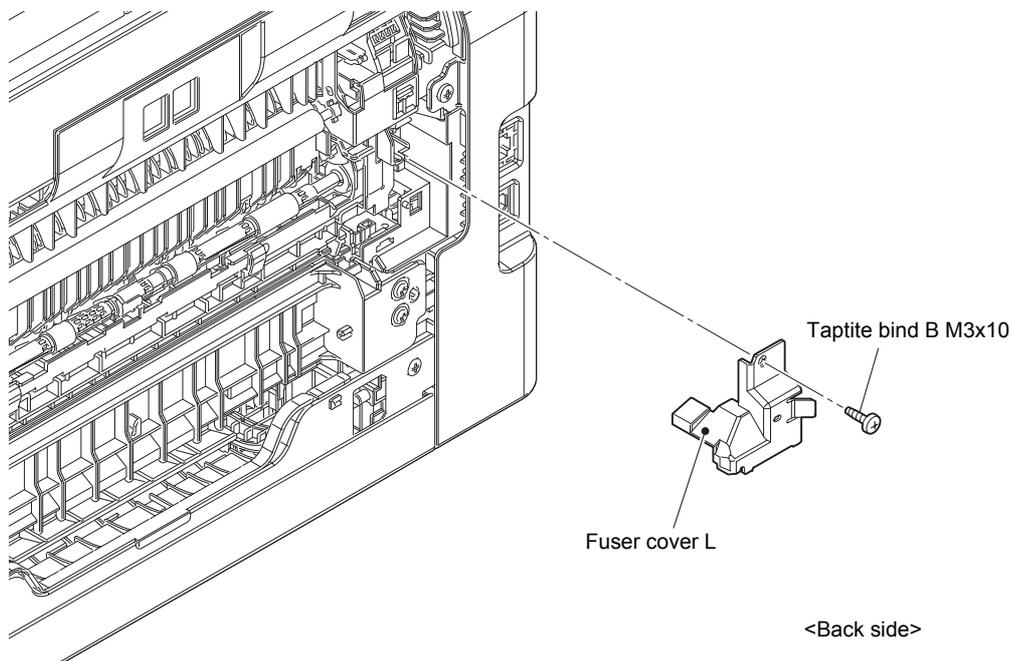


Fig. 3-7

Assembling Note:

- When attaching the Fuser cover L, tighten the screw while pushing the Fuser cover L in the direction of the arrow. When the Fuser cover L is attached without pushing it, the Boss of the Frame L may come off.

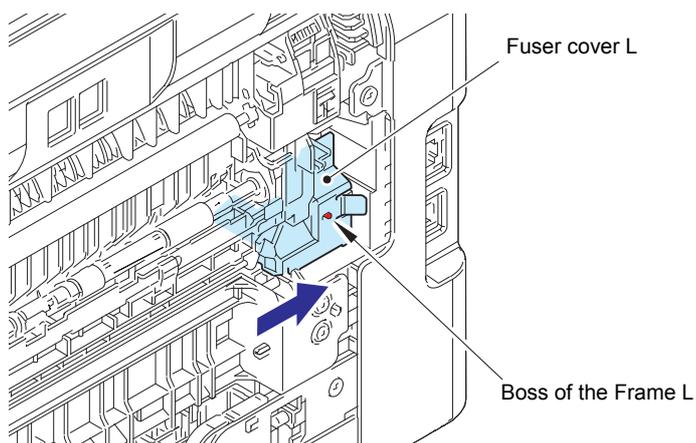


Fig. 3-8

(2) Release the lock of the Fuser cover lock lever L/R to open the Fuser cover ASSY.

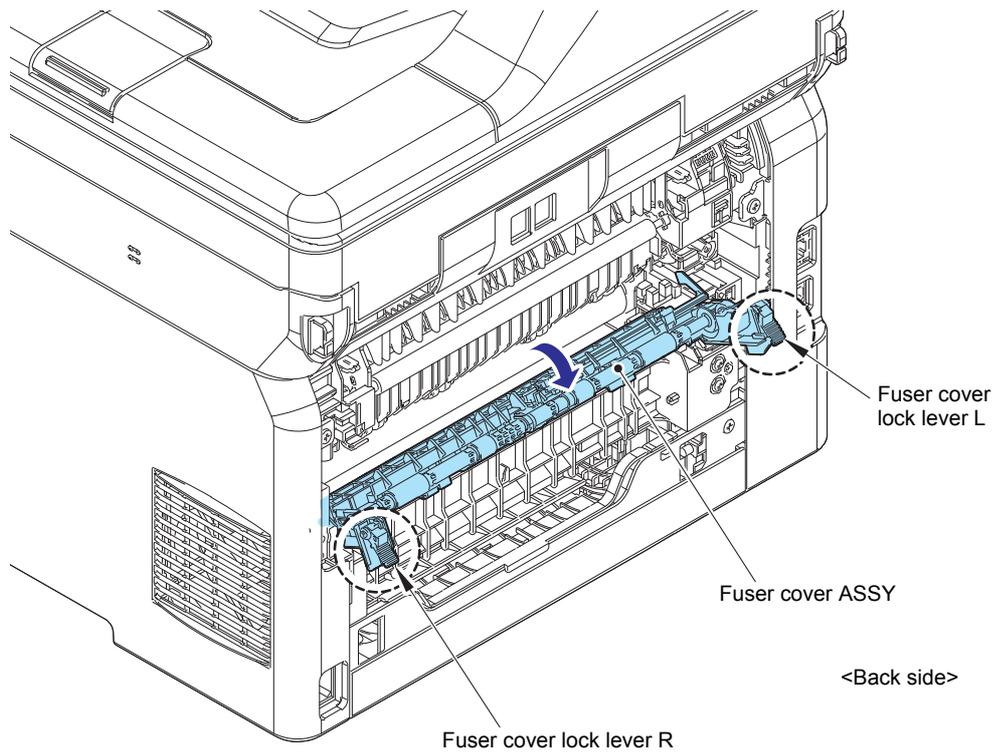


Fig. 3-9

(3) Slide the Fuser cover ASSY in the direction of the arrow and remove it to the front.

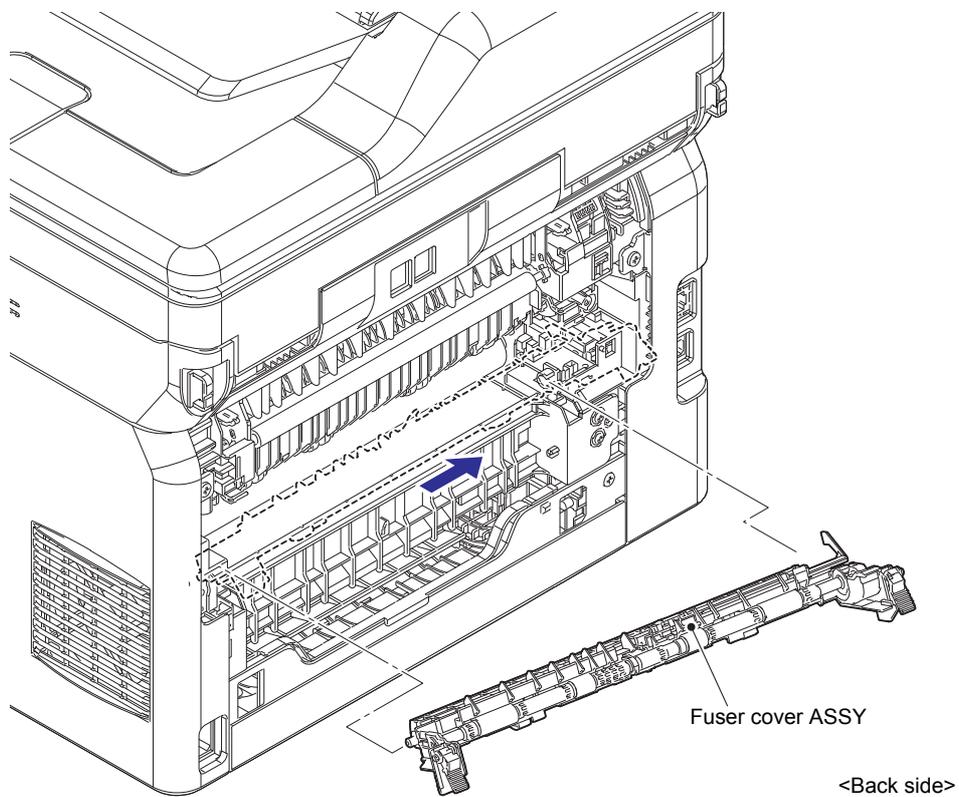


Fig. 3-10

- (4) Remove the Taptite bind B M3x10 screw to remove the Fuser cover R.

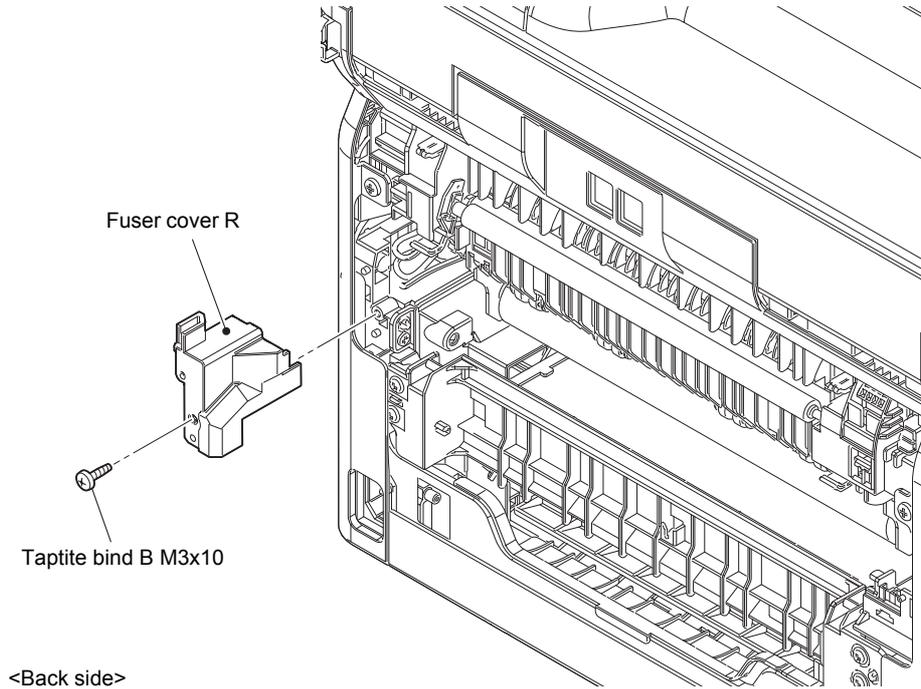


Fig. 3-11

- (5) Disconnect the Center thermistor harness and the Side thermistor harness from the Eject sensor PCB.

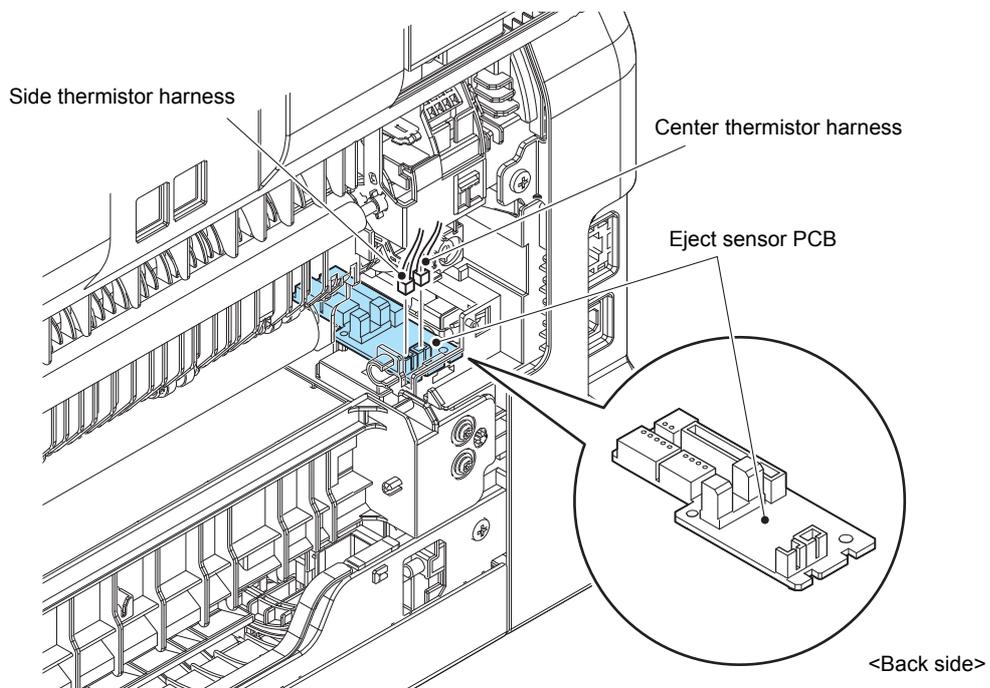


Fig. 3-12

- (6) Remove the two Taptite pan (washer) B M4x12DA screws. Pull out the Fuser unit on the Frame L side in the direction of arrow 6a and then remove it in the direction of arrow 6b.
- (7) Disconnect the Heater harness of the Fuser unit from the LVPS heater harness.

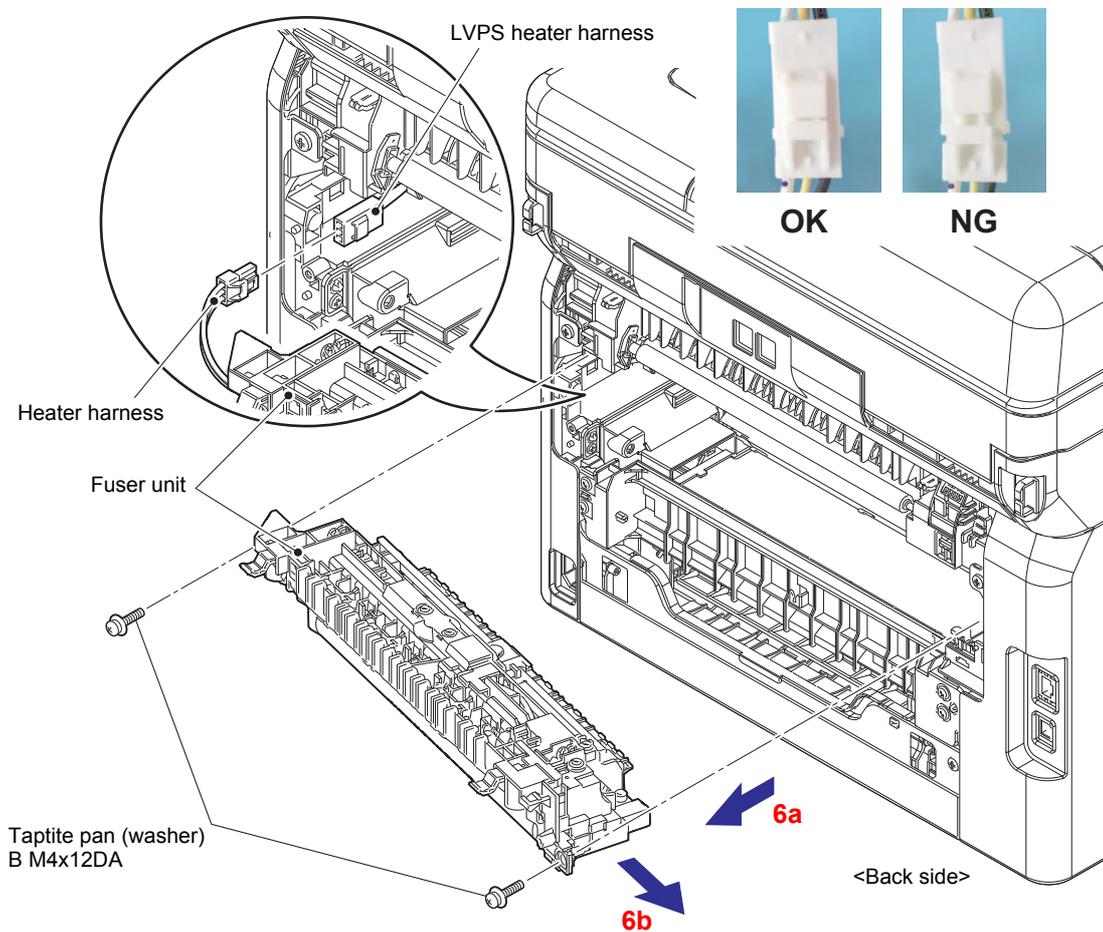


Fig. 3-13

Assembling Note:

- After connecting the Heater harness, pull the Connector on the Heater harness side while holding the Connector on the LVPS heater harness side to make sure it is locked.

Note:

- Do not apply a physical impact or vibration to the Fuser unit.

Assembling Note:

- After connecting the Heater harness of the Fuser unit to the LVPS heater harness, the Heater harness is housed so that it does not come out of the Frame R.

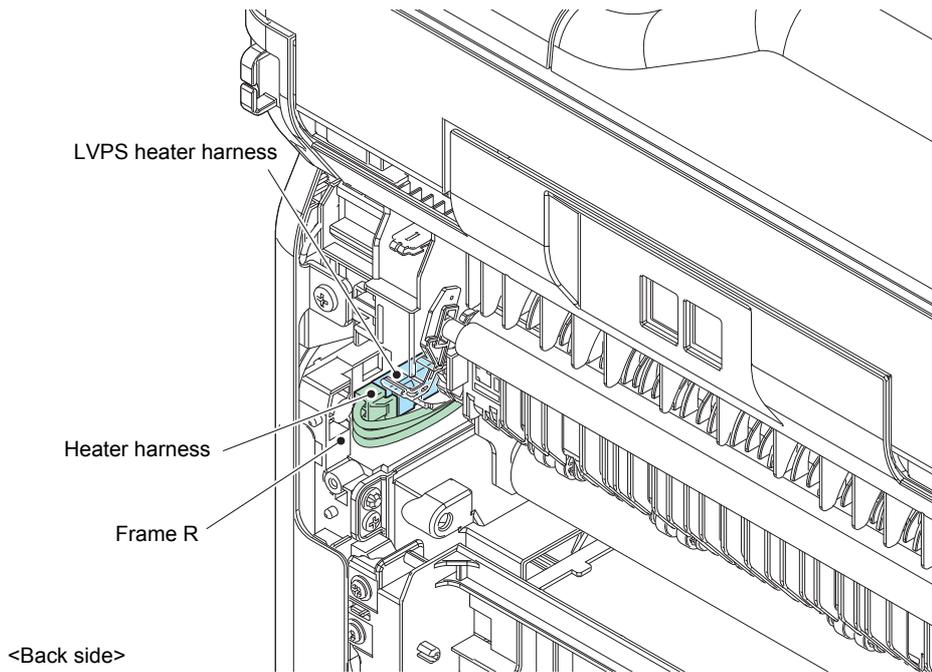


Fig. 3-14

9.6 Cord hook

(1) Remove the Cord hook. (Two locations)

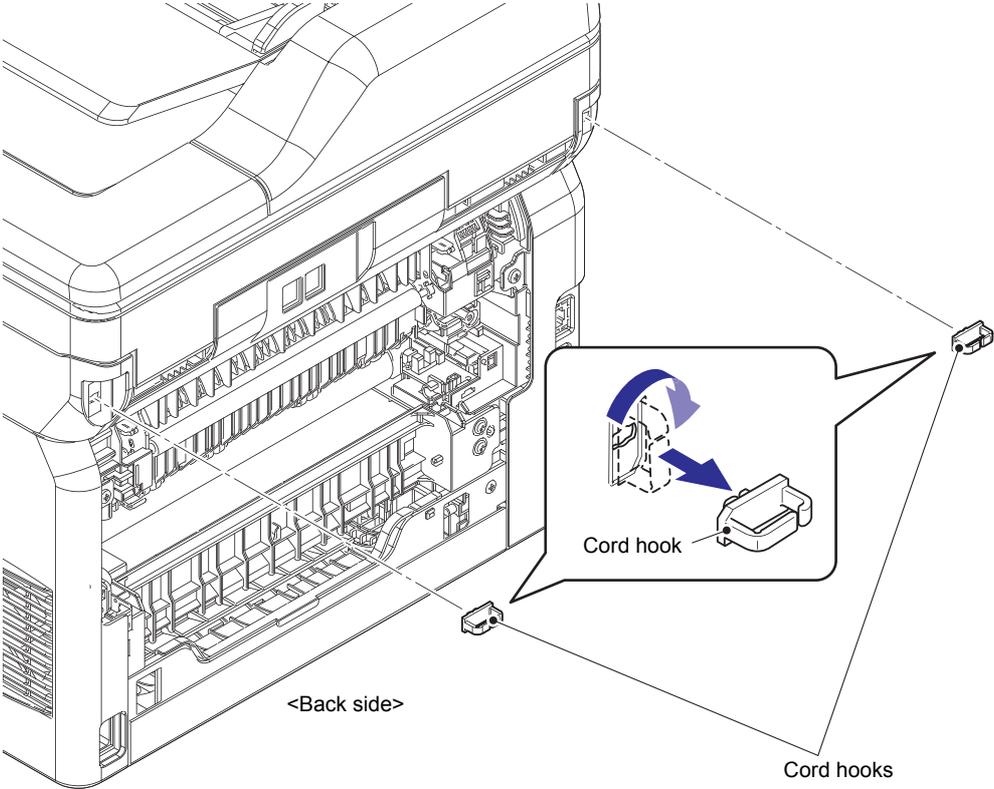


Fig. 3-15

9.7 Side cover L

- (1) Open the Top cover and Manual feed slot or MP cover ASSY.
- (2) Remove the two Taptite bind B M4x12 screws.
- (3) Release the Hooks A, B, C, and the Hook D in order of arrow A to C, and remove the Side cover L.

Note:

Release the Hooks D while pushing them by using a flat-blade screwdriver or similar tool.

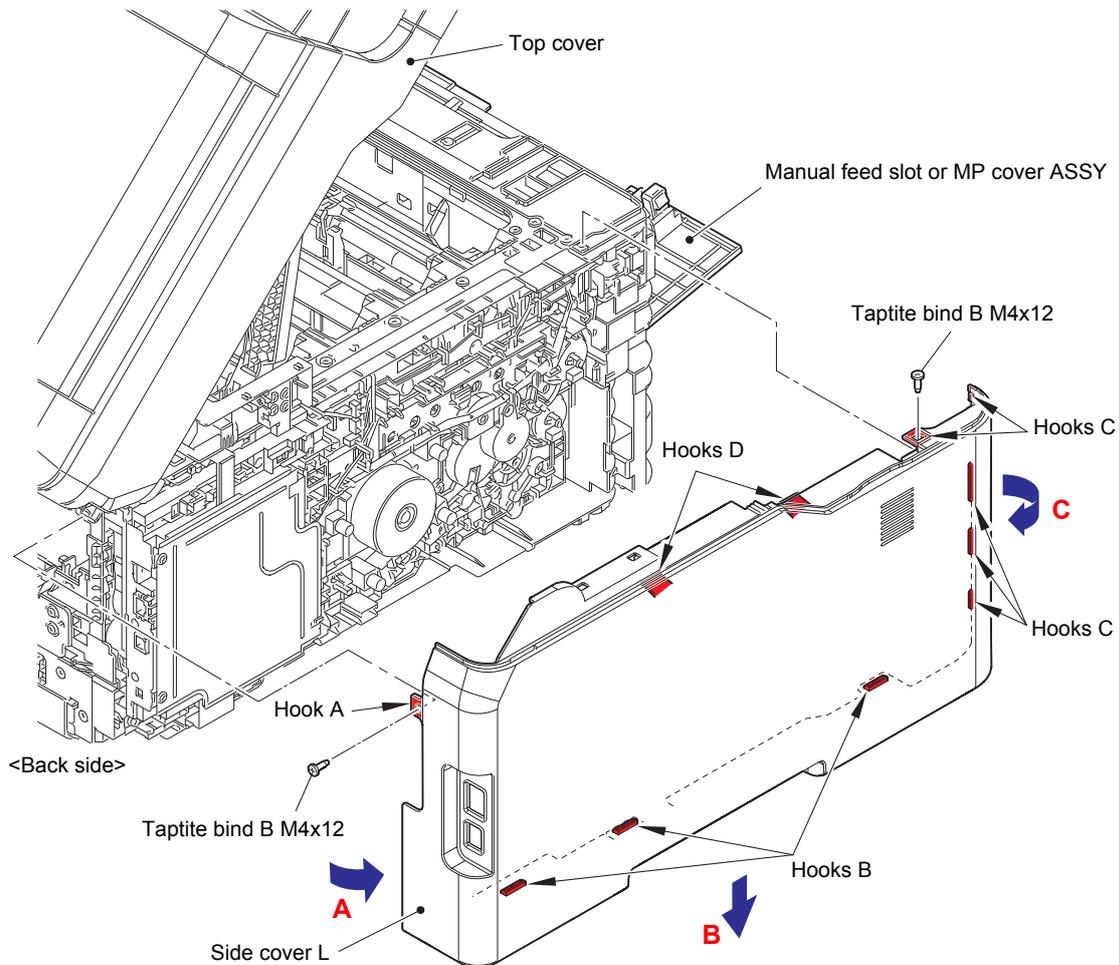


Fig. 3-16

9.8 Side cover R

- (1) Remove the two Taptite bind B M4x12 screws.
- (2) Release the Hooks A, B, C, and the Hook D in order of arrow A to C, and remove the Side cover R.

Note:
Release the Hooks D while pushing them by using a flat-blade screwdriver or similar tool.

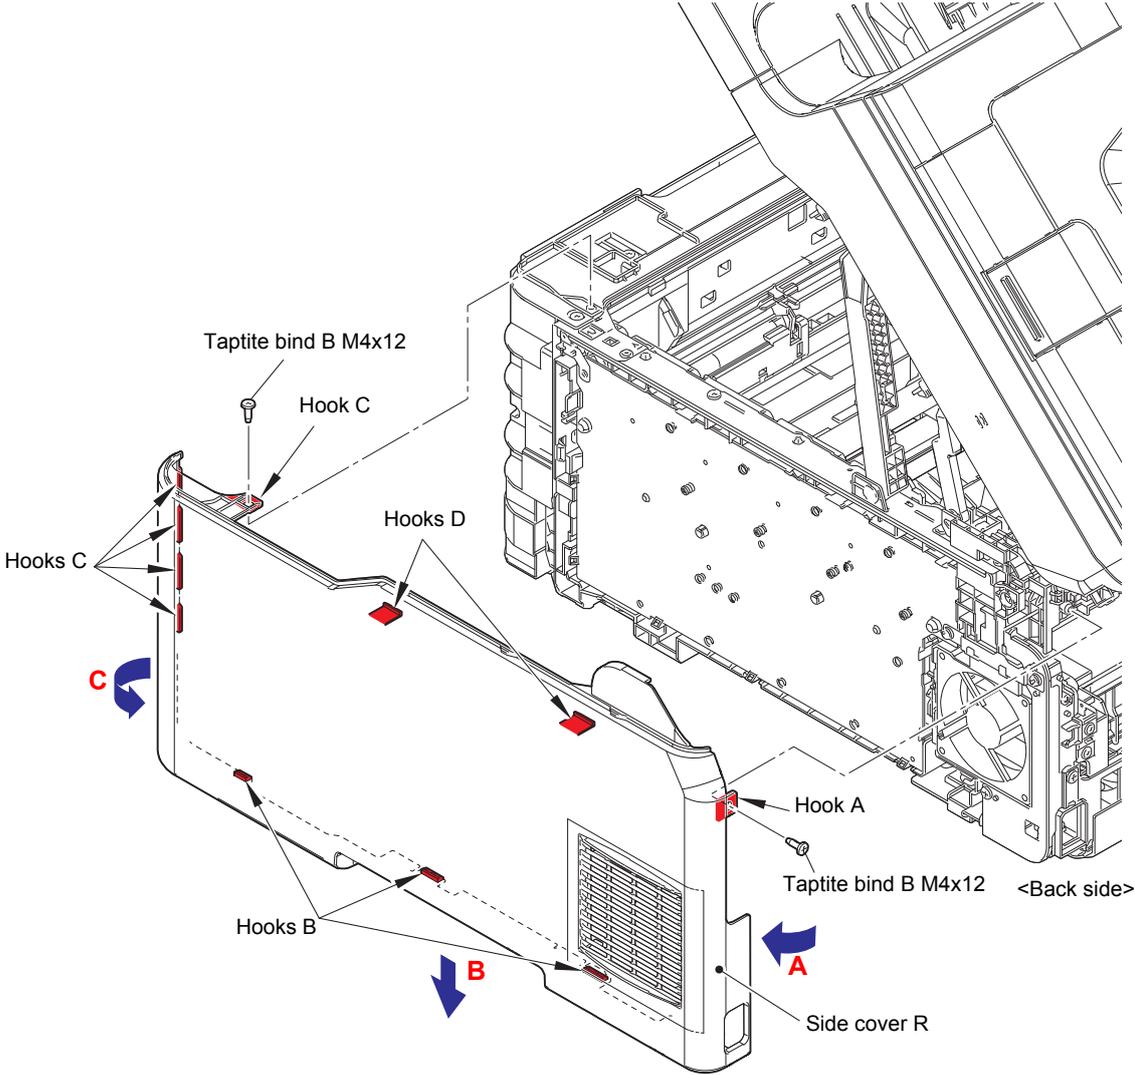


Fig. 3-17

9.9 Back cover lower

(1) Release each hook to remove the Back cover lower.

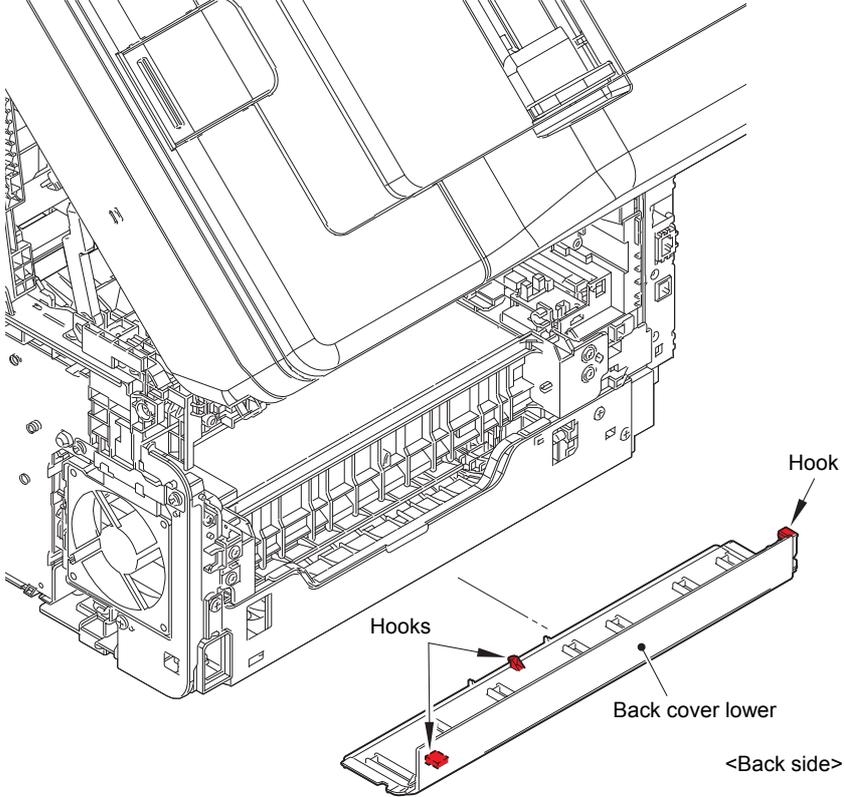


Fig. 3-18

9.10 Document scanner unit

- (1) Remove the four Screw cup M3x8 (black) screws to remove the Main shield cover plate ASSY.
- (2) Remove the three Screw cup M3x8 (black) screws to remove the ADF ground wire, the FB ground wire, and the Panel ground wire from the Main shield plate. Release the Panel ground wire from the securing fixtures.

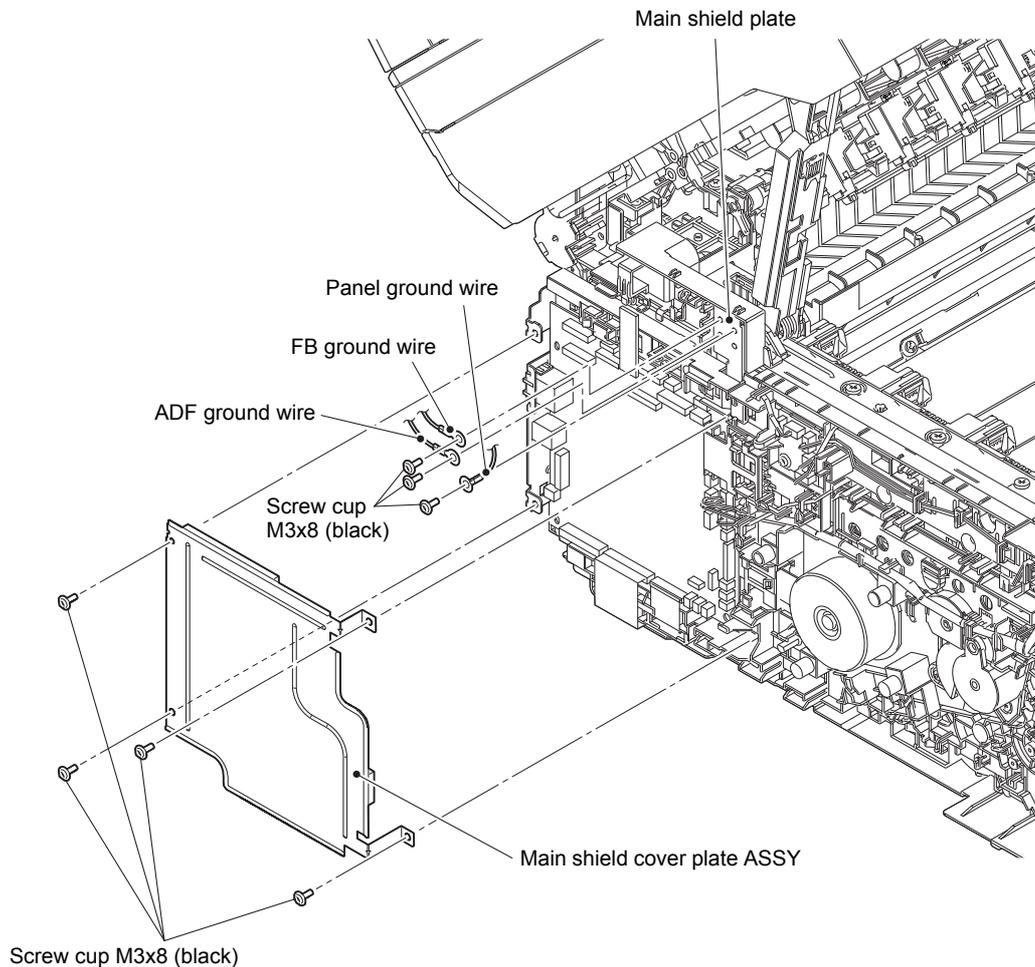


Fig. 3-19

Harness routing: Refer to "1. Left side of the machine (ADF unit, Document scanner unit)".

- (3) Disconnect the First side CIS flat cable, the Second side CIS flat cable, and the Panel flat cable from the Main PCB.
- (4) Disconnect the FB motor harness and the ADF sensor harness from the Main PCB. Release the FB motor harness, the FB ground wire, the ADF motor harness and the ADF ground wire from the securing fixtures.

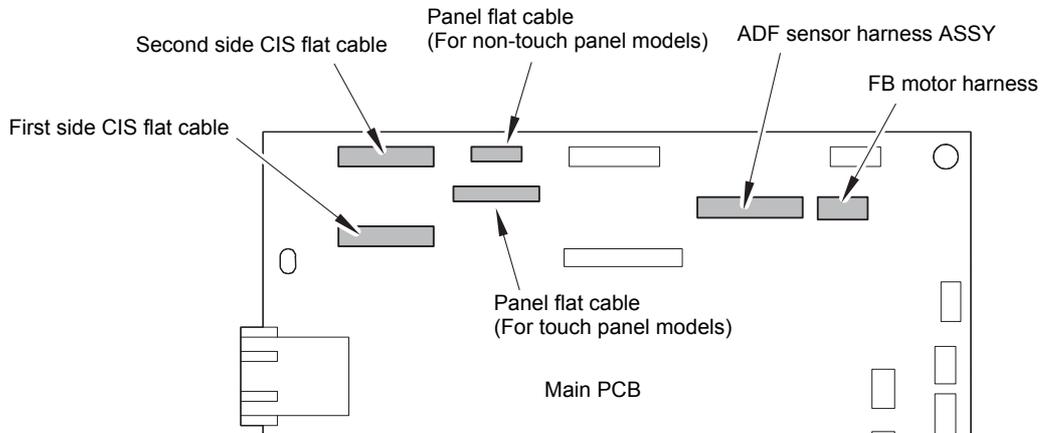


Fig. 3-20

Harness routing: Refer to "1. Left side of the machine (ADF unit, Document scanner unit)".

- (5) Remove the FFC holder cover.

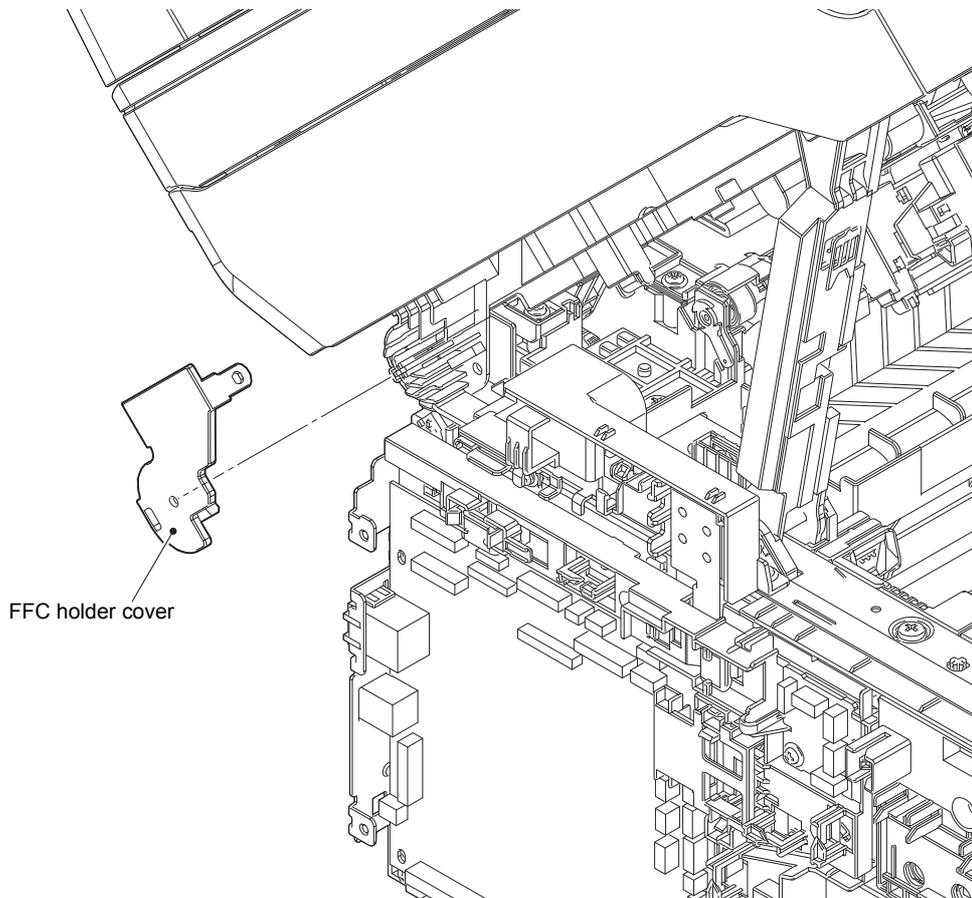


Fig. 3-21

- (6) Close the Top cover and Manual feed slot or MP cover ASSY.
- (7) Push the FB lock lever to open the Document scanner unit.
- (8) Release the First side CIS flat cable, the Second side CIS flat cable, and the Panel flat cable from the securing fixtures.
- (9) Release the Joint parts of Pull arm L from the Pull arm hinge to remove it from the Pull arm guide. Release the Joint parts of Pull arm R from the Pull arm hinge to remove it from the Pull arm guide.
- (10) Remove each Pull arm spring from the Pull arm L and the Pull arm R.
- (11) Open the Document scanner unit approximately 30 degrees to remove it upward. Pull out each Flat cable, each Harness, and each FG ground wire through each Hole of the Top cover.

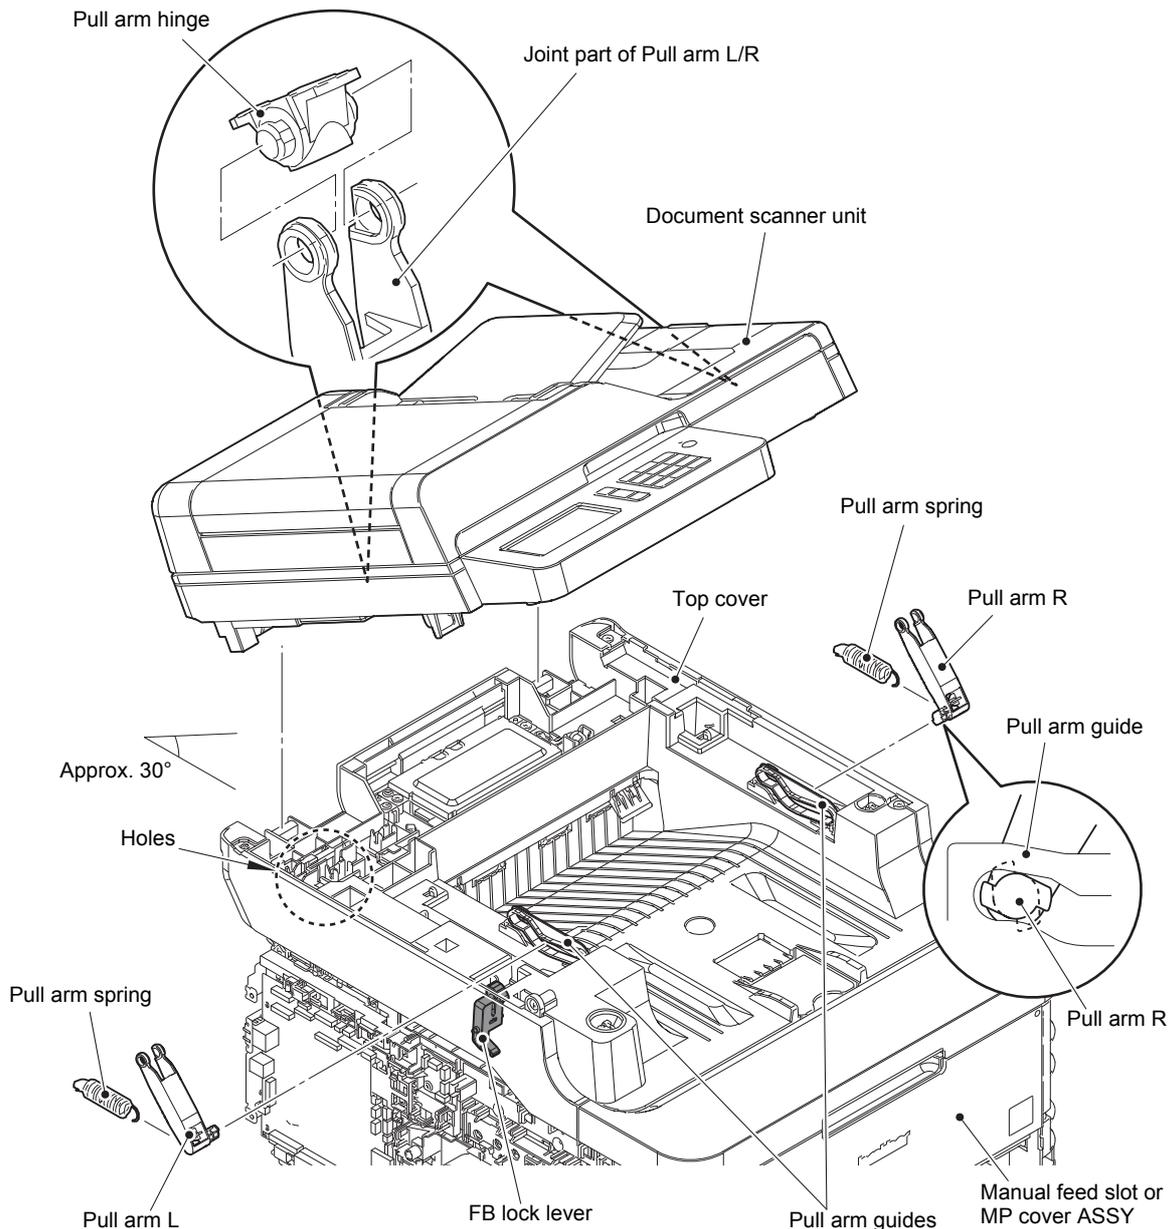


Fig. 3-22

Harness routing: Refer to "1. Left side of the machine (ADF unit, Document scanner unit), 2. Top side of the machine (ADF unit, Document scanner unit, Modem unit)".

Assembling Note:

- If you replaced the Document scanner unit, refer to "5. IF YOU REPLACE THE ADF UNIT, FIRST SIDE CIS UNIT, SECOND SIDE CIS UNIT OR DOCUMENT SCANNER UNIT" in Chapter 4 to configure settings.

9.11 ADF unit (For models with ADF)

9.11.1 ADF unit

- (1) Remove the Taptite bind B M4x12 screw from the Hinge L.
- (2) Open the ADF unit. Release the Hook of the FFC holder ASSY to remove the FFC holder ASSY from the Document scanner unit.
- (3) Lift the ADF unit, and remove the ADF unit from the Document scanner unit while pushing the Hook of the Hinge R. Pull out the ADF sensor harness ASSY and the Second side CIS flat cable through each Hole.
- (4) Remove the FFC holder ASSY from the ADF sensor harness ASSY and the Second side CIS flat cable.

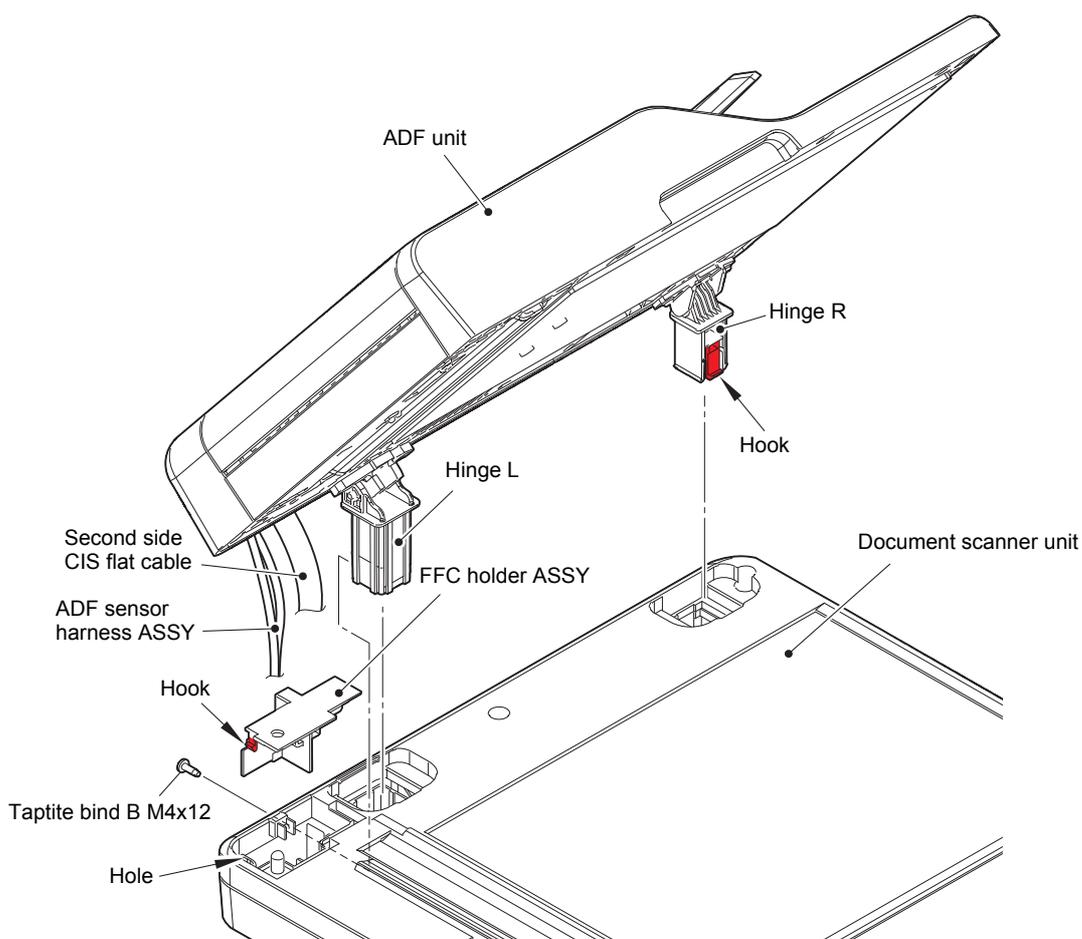


Fig. 3-23

Assembling Note:

- If you replaced the ADF unit, refer to “5. IF YOU REPLACE THE ADF UNIT, FIRST SIDE CIS UNIT, SECOND SIDE CIS UNIT OR DOCUMENT SCANNER UNIT” in Chapter 4 to configure settings.

Assembling Note:

- Attach the FFC holder ASSY to the ADF sensor harness ASSY and the Second side CIS flat cable as shown in the figure below.

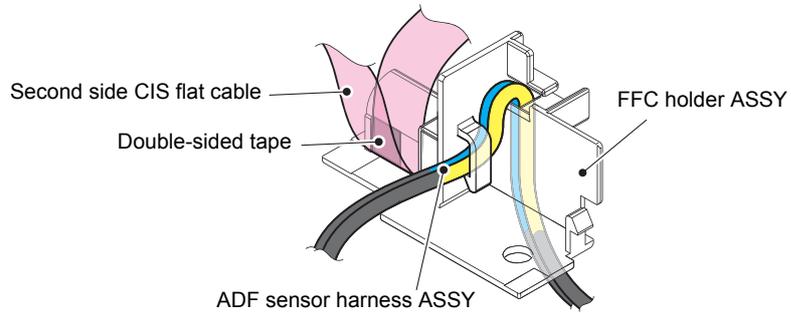


Fig. 3-24

- (5) Remove the three Taptite bind B M4x12 screws to remove the Hinge ASSY L from the ADF unit.

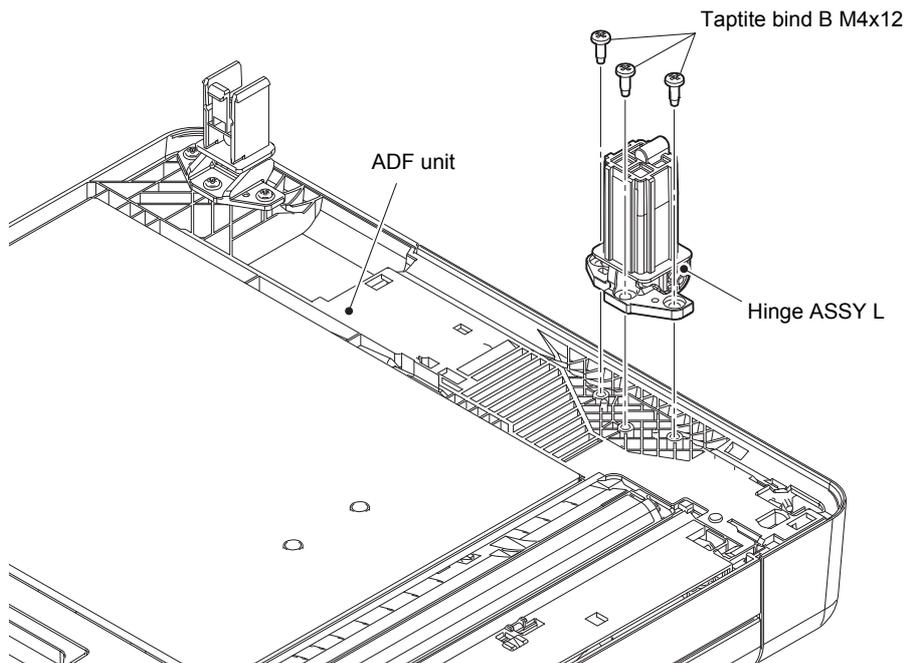


Fig. 3-25

- (6) Remove the Taptite cup B M3x10 screw to remove the Hinge R support and the Hinge R from the Hinge arm R.
- (7) Remove the three Taptite cup B M3x10 screws to remove the Hinge arm R from the ADF unit.

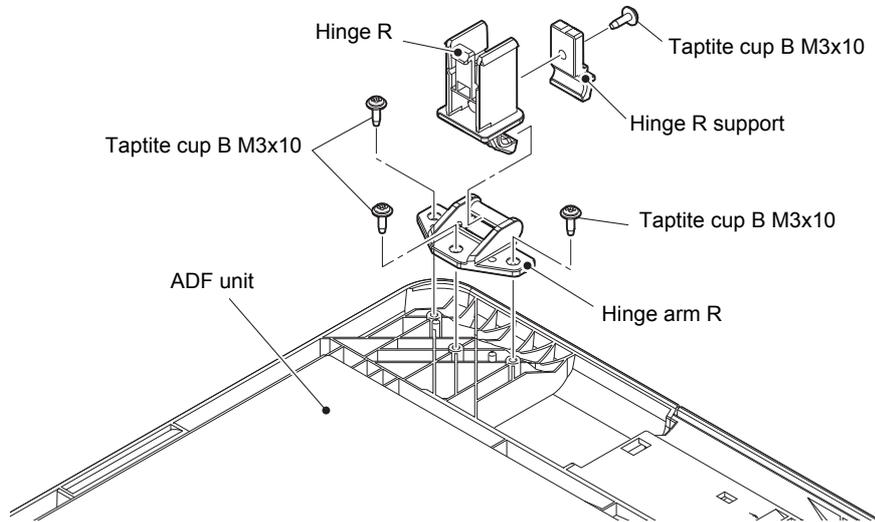


Fig. 3-26

9.11.2 Document separation roller ASSY

- (1) Open the ADF cover.
- (2) Release each Hook to remove the Gear cover from the ADF unit.

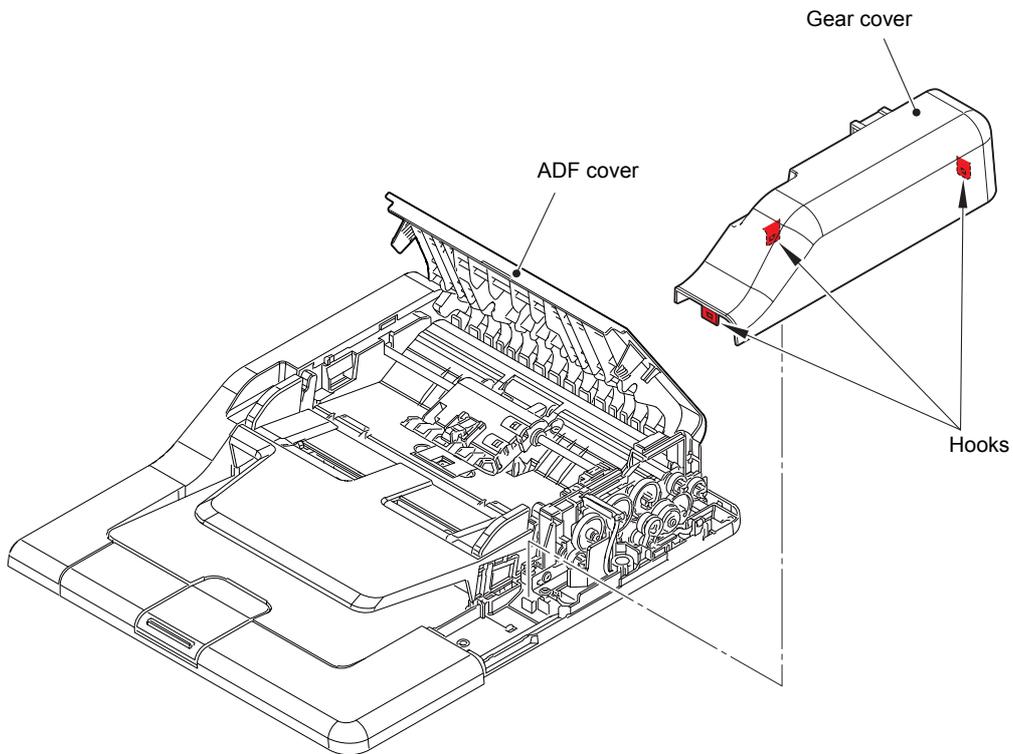


Fig. 3-27

- (3) Release the Lock of the Conductive bushing to remove the Document separation roller ASSY from the ADF unit.

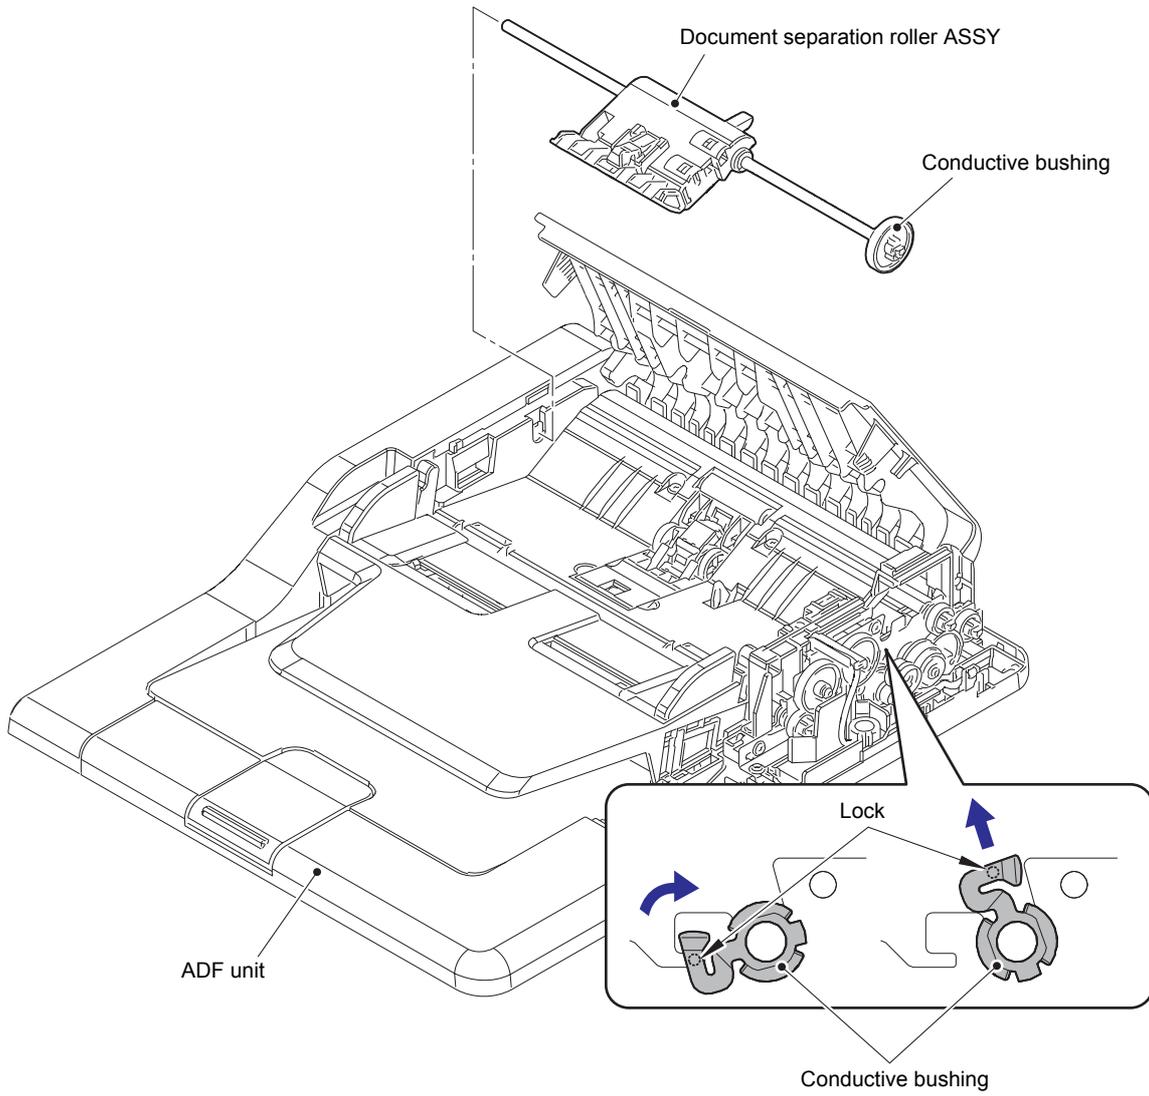


Fig. 3-28

9.11.3 ADF separation holder ASSY

- (1) Remove the Taptite cup B M3x10 screw to remove the ADF separation holder ASSY from the ADF unit.

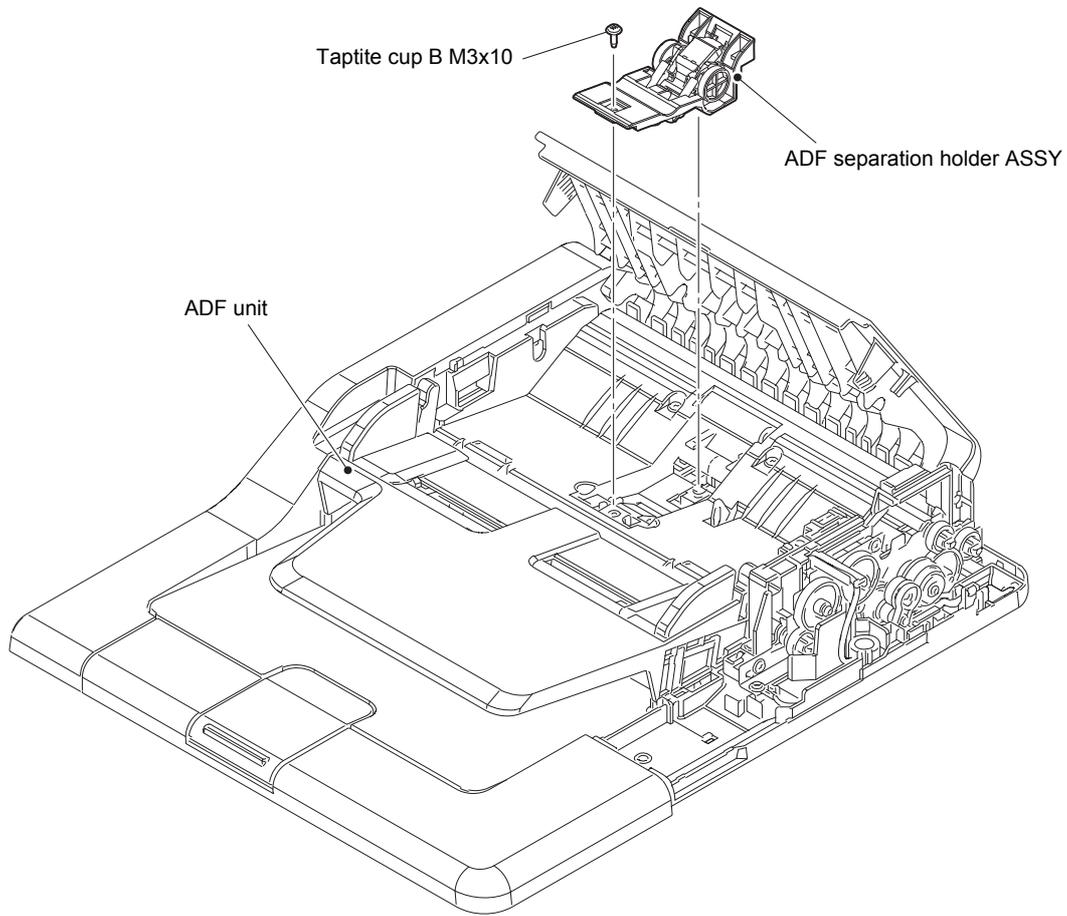


Fig. 3-29

9.11.4 Second side CIS unit / Second side CIS flat cable

(Only for models with duplex scanning)

- (1) Remove the four Taptite bind B M3x10 screws. Release each Hook to remove the ADF front cover from the ADF unit.
- (2) Remove the six Taptite cup B M3x10 screws to remove the Upper document chute from the ADF unit.

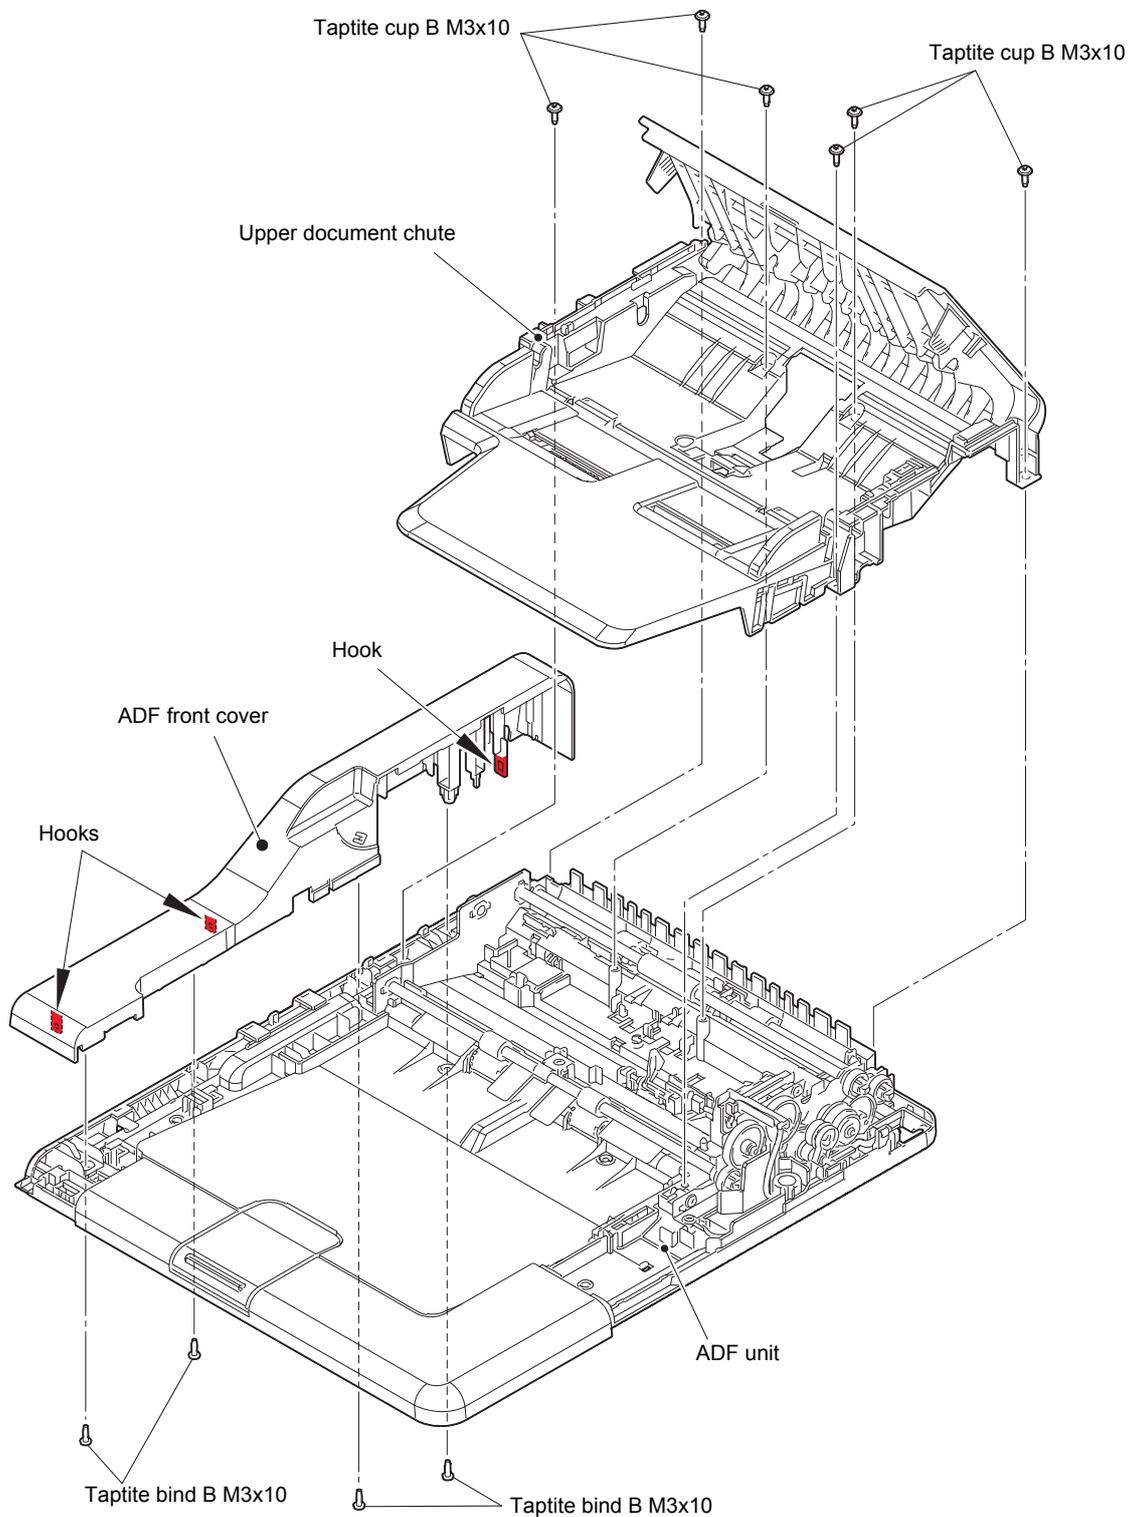


Fig. 3-30

- (3) Remove the Taptite cup S M3x6 SR screw.
- (4) Release the ADF sensor harness ASSY and ADF ground wire from the securing fixtures, and pull it out through the Hole of the Document cover.
- (5) Remove the Lower document chute from the Document cover, and pull out the Second side CIS flat cable through the Hole of the Document cover.

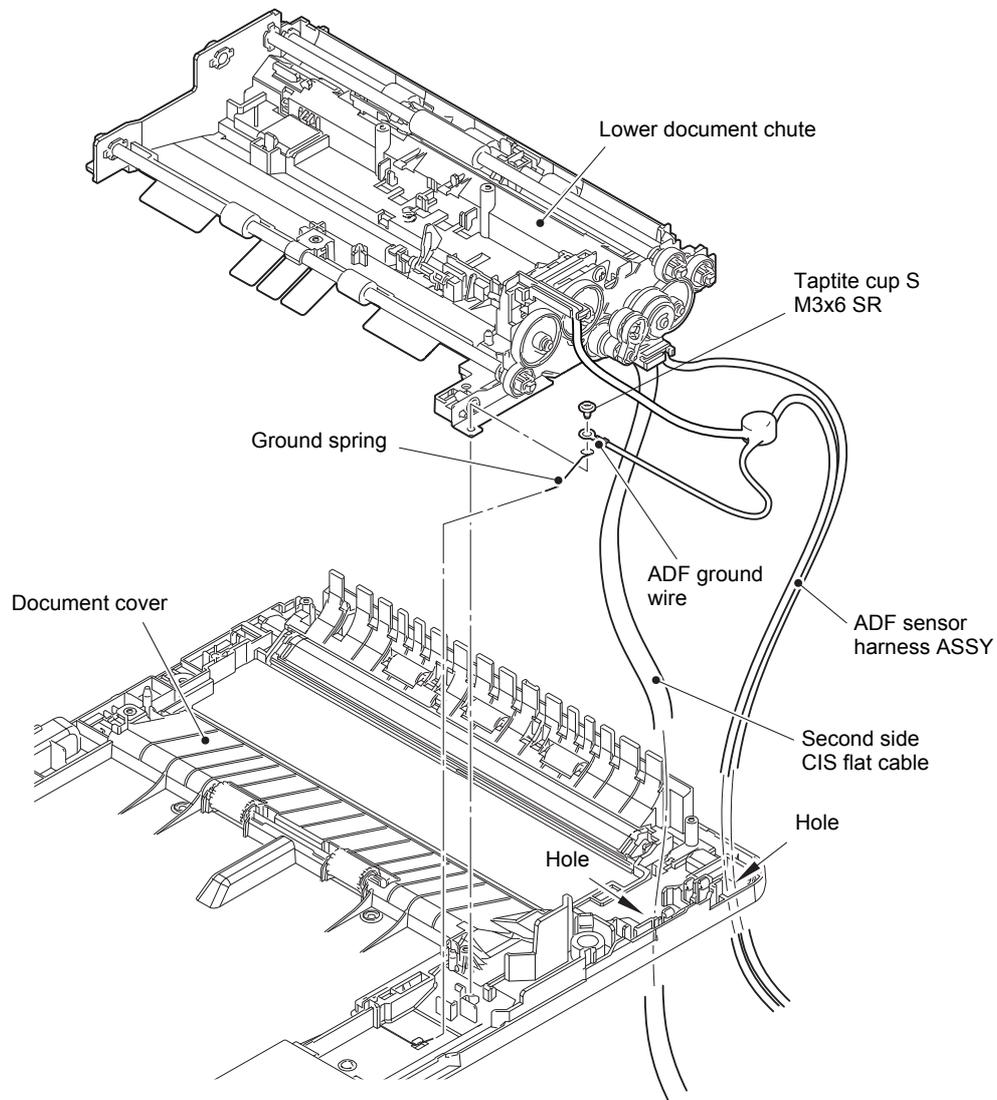


Fig. 3-31

Harness routing: Refer to "3. ADF unit".

- (6) Release the Second side CIS flat cable from the securing fixtures.
- (7) Lift the Hook and slide the Second side scanner glass strip in the direction of arrow 7a. Lift the left end of the Second side scanner glass strip to remove it in the direction of arrow 7b.

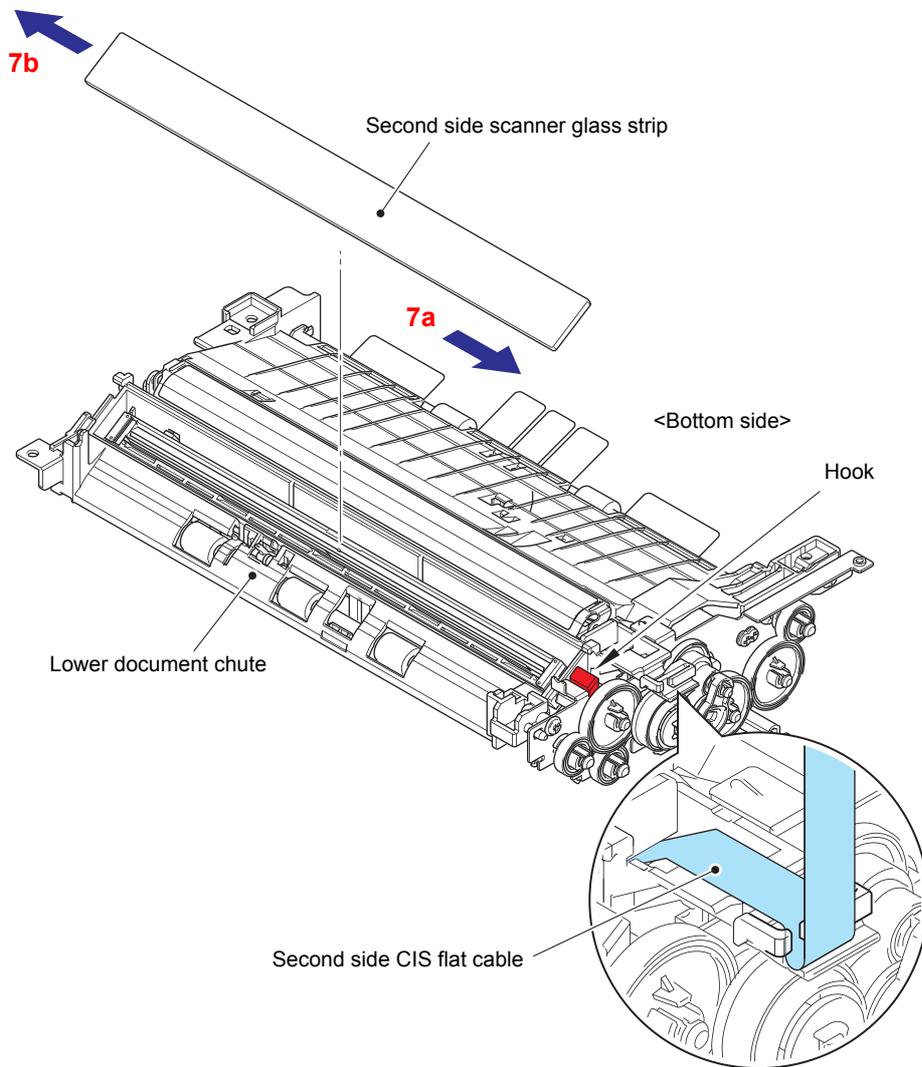


Fig. 3-32

Harness routing: Refer to "4. Lower document chute".

- (8) Remove the Second side CIS unit from the Lower document chute, and disconnect the Second side CIS flat cable from the Second side CIS unit.
- (9) Remove the two CIS spacers from the Second side CIS unit.

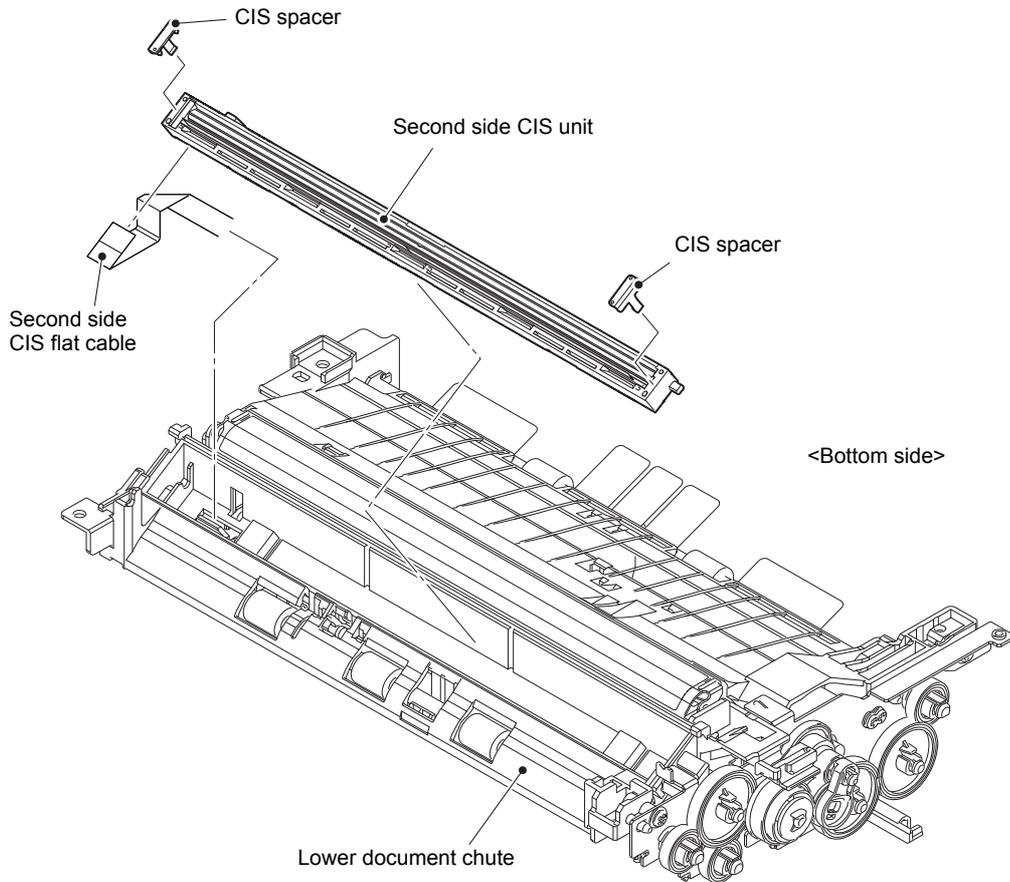


Fig. 3-33

- (10) Pull out the Second side CIS flat cable through the Hole and the Flat core to remove it from the Lower document chute.

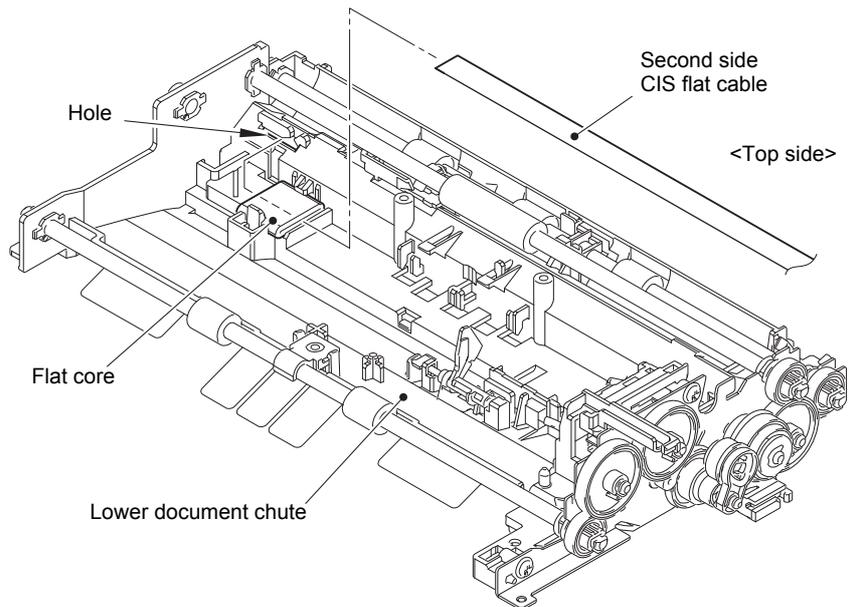


Fig. 3-34

Harness routing: Refer to "4. Lower document chute".

Assembling Note:

- Fold the Second side CIS flat cable at the positions described below.

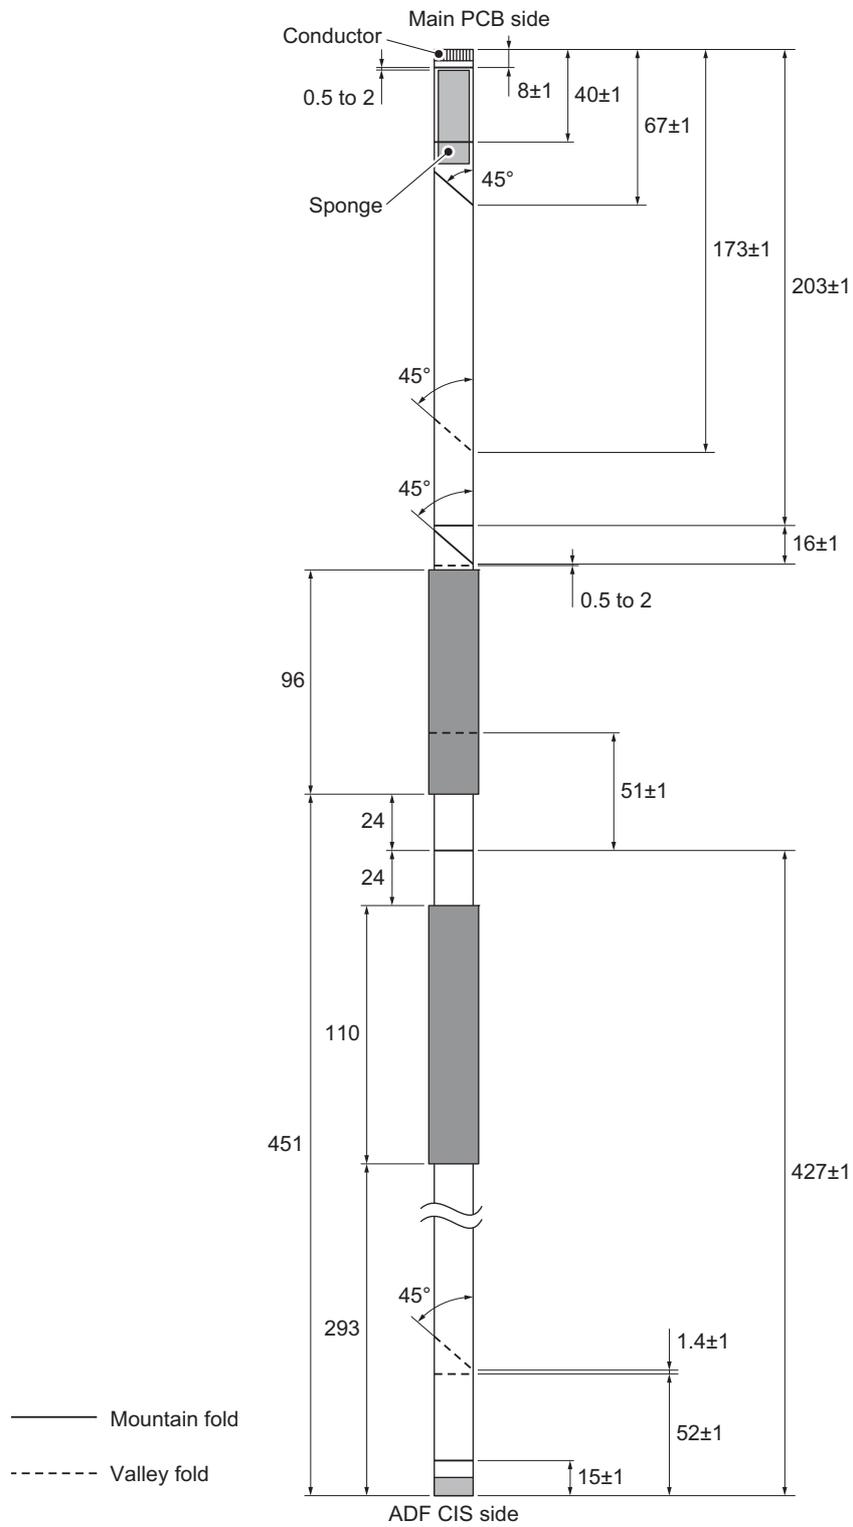


Fig. 3-35

9.11.5 Document detection sensor PCB / Document scanning position sensor PCB

- (1) Push the Hook of the Lower document chute to remove the Document detection sensor PCB from the Lower document chute. Disconnect the ADF sensor harness ASSY from the Document detection sensor PCB.
- (2) Release the Lock of the Conductive bushing to remove the Document feed roller 1 from the Lower document chute.
- (3) Rotate the Document scanning position actuator in the direction of the arrow. Push the Hook of the Lower document chute to remove the Document scanning position sensor PCB from the Lower document chute. Disconnect the ADF sensor harness ASSY from the Document scanning position sensor PCB.

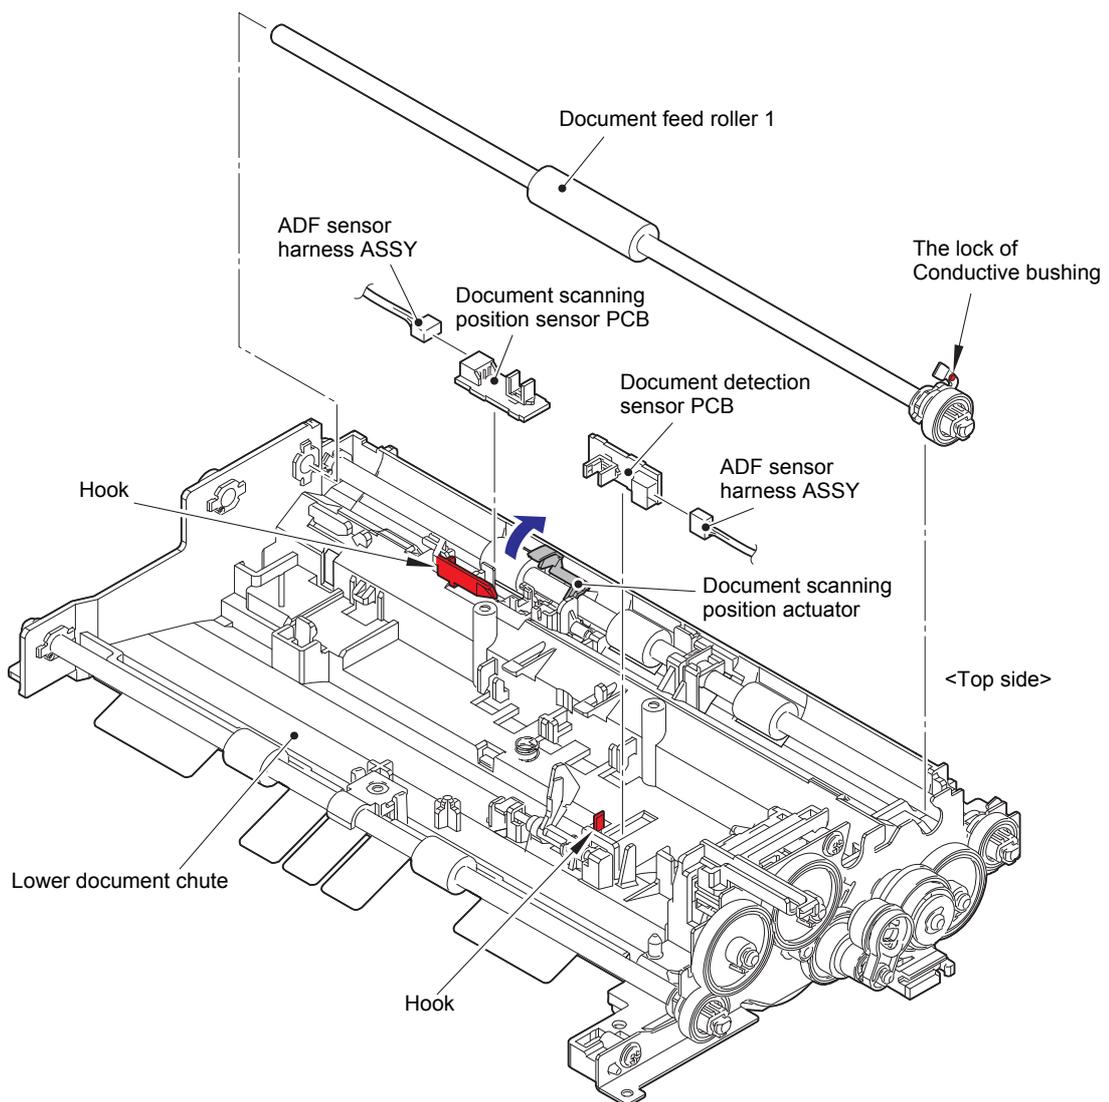


Fig. 3-36

9.12 Document cover ASSY (For models without ADF)

- (1) Remove the Hook of the Hinge L and the Hook of the Hinge R to remove the Document cover ASSY upward.

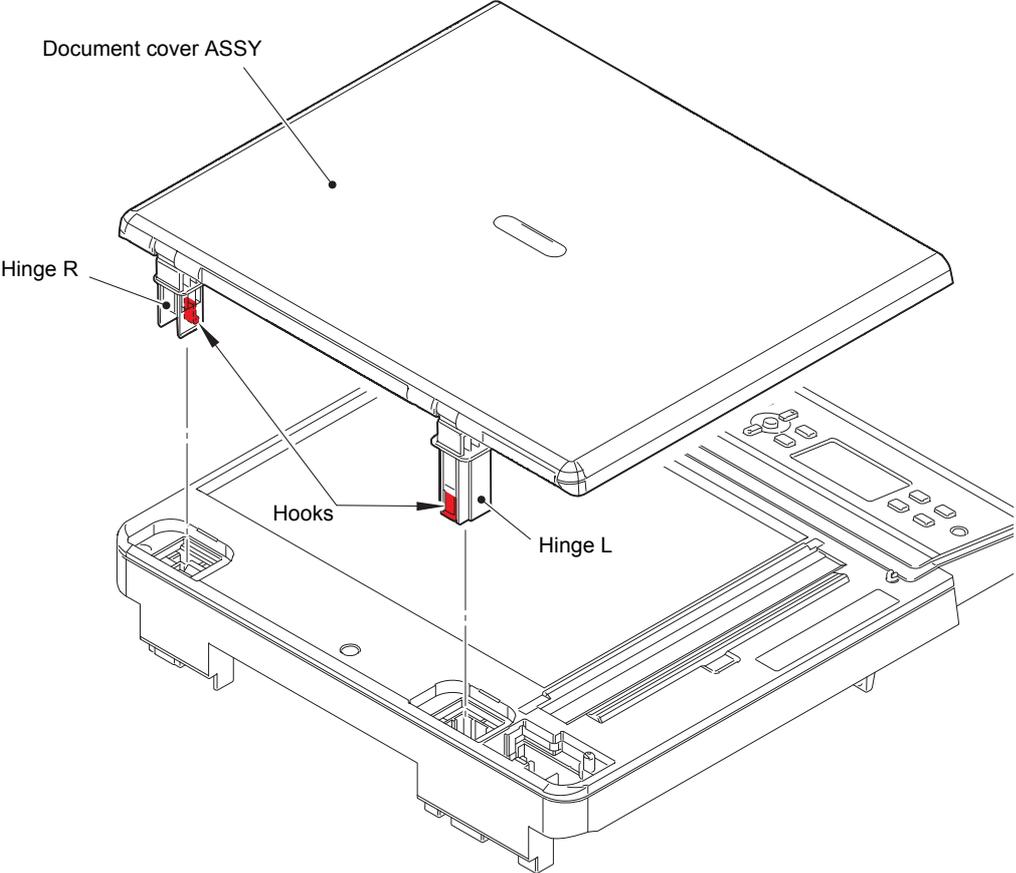


Fig. 3-37

- (2) Remove the three Taptite bind B M4x12 screws to remove the Hinge arm L and the Hinge L from the Document cover ASSY.
- (3) Remove the three Taptite bind B M4x12 screws to remove the Hinge arm R and the Hinge R from the Document cover ASSY.

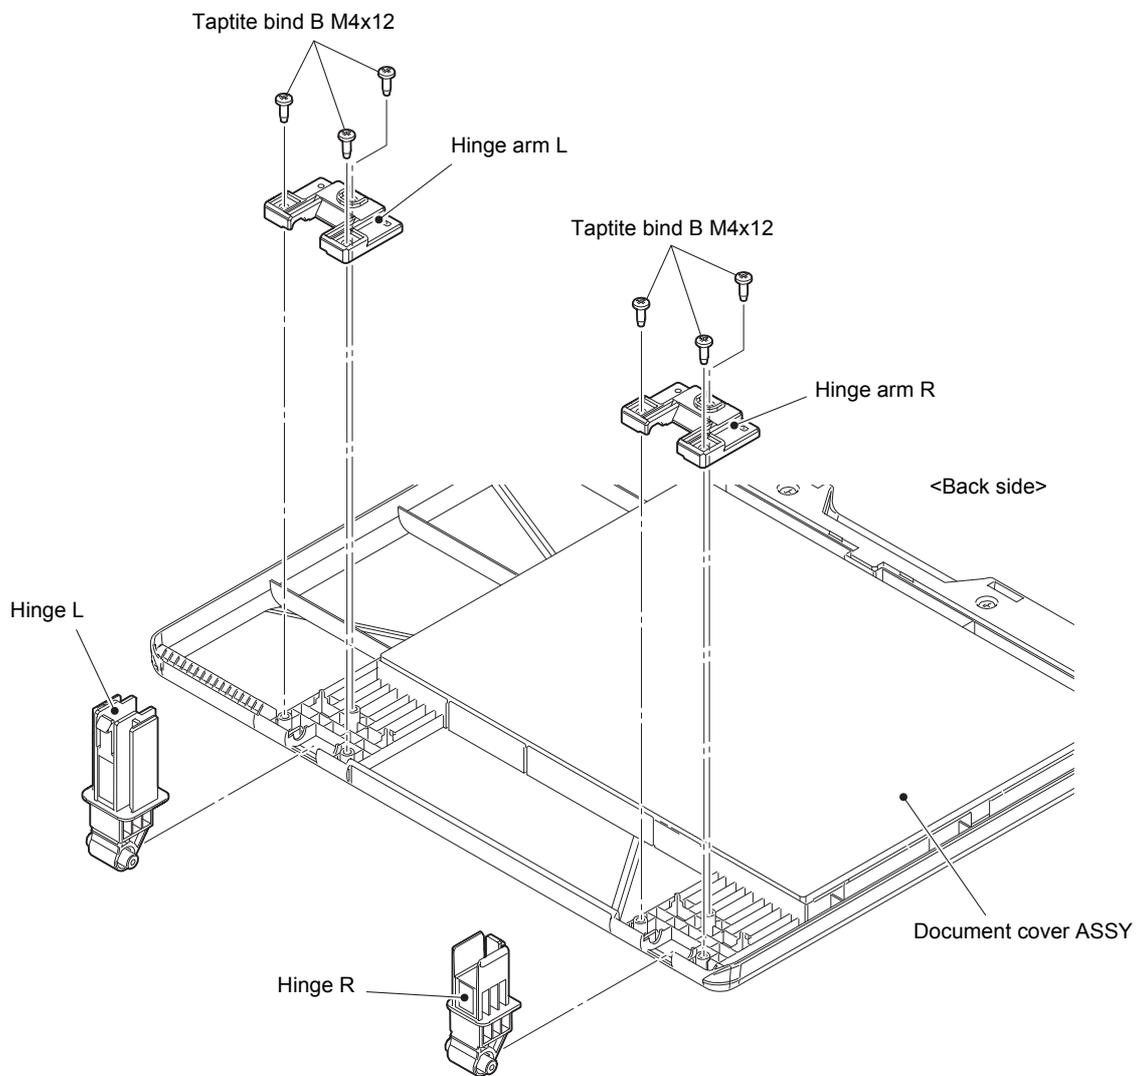


Fig. 3-38

9.13 Panel unit

- (1) Remove the four Taptite cup B M3x10 screws. Release each Hook to remove the Panel unit. Disconnect the Panel flat cable from the Panel PCB.

Note:

- When removing the Panel unit, DO NOT pull the Panel unit strongly because it is connected to the Panel flat cable.

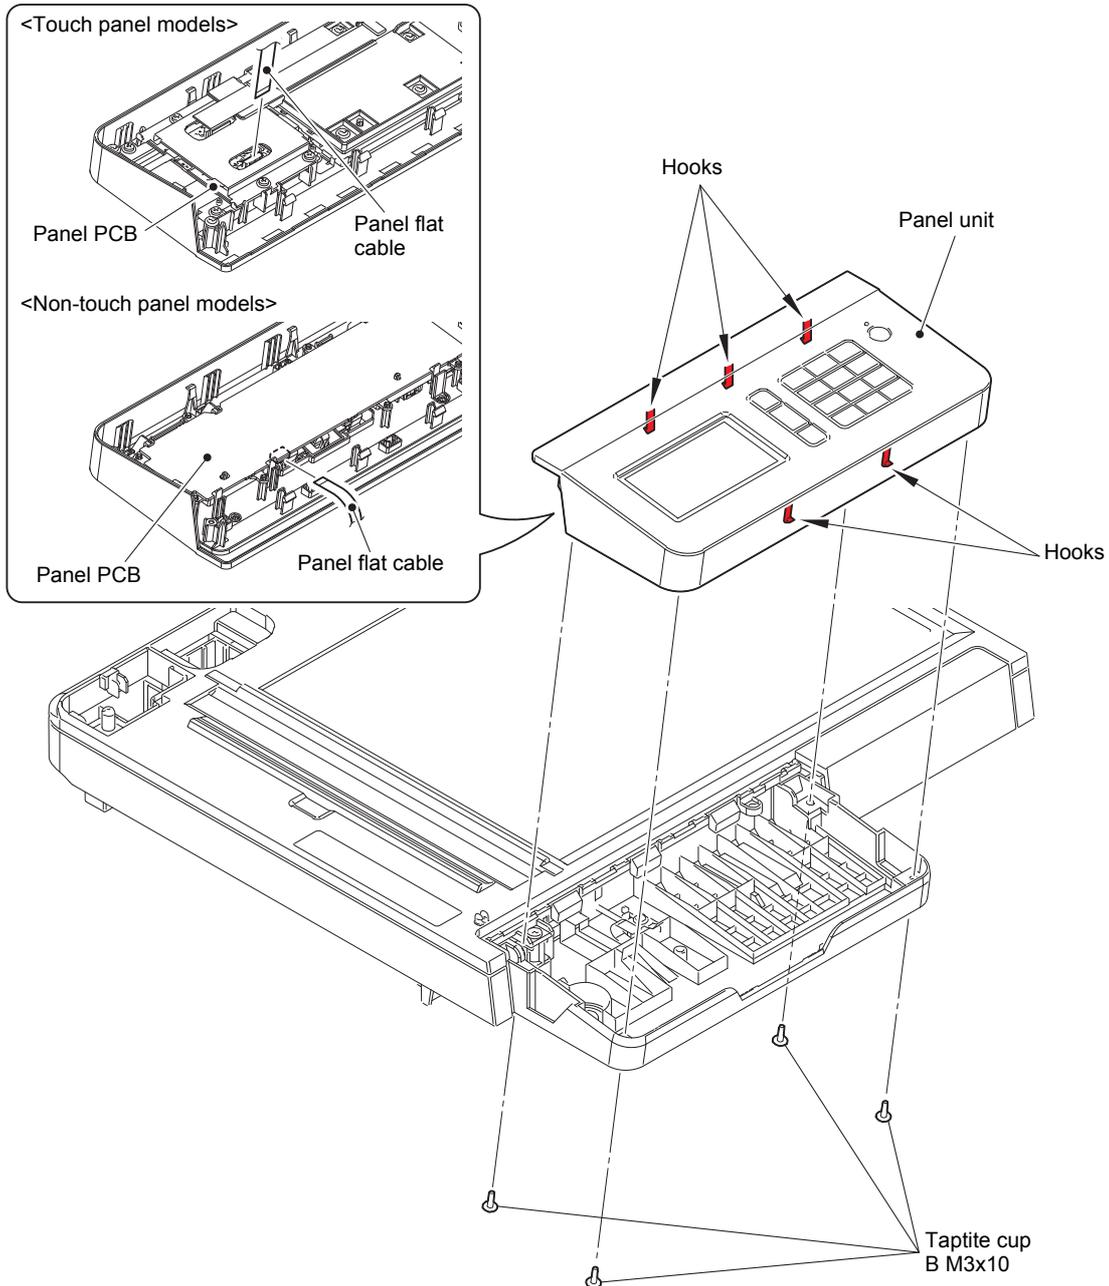


Fig. 3-39

Assembling Note:

- If you replaced the Panel unit, refer to "4. IF YOU REPLACE THE LCD, PANEL UNIT OR PANEL PCB" in Chapter 4 to configure settings.

■ For Touch panel models

9.13.1 Key PCB / Panel PCB / Touch panel ASSY / LCD

- (1) Disconnect the Key flat cable from the Panel PCB, and release it from the securing fixtures.
- (2) Remove the five Taptite cup B M3x10 screws to remove the Key PCB pressure from the Panel unit.
- (3) Remove the Key PCB from the Panel unit.
- (4) Remove the four Screw pan (S/P washer) M3x12DB screws to remove the Shield cover from the Panel unit.
- (5) Release the Lock to disconnect the LCD flat cable from the Panel PCB. Disconnect the Touch panel flat cable from the Panel PCB to remove the Panel PCB from the Panel unit.
- (6) Remove the Protective sheet from the Double-sided tape to remove it from the Panel unit.

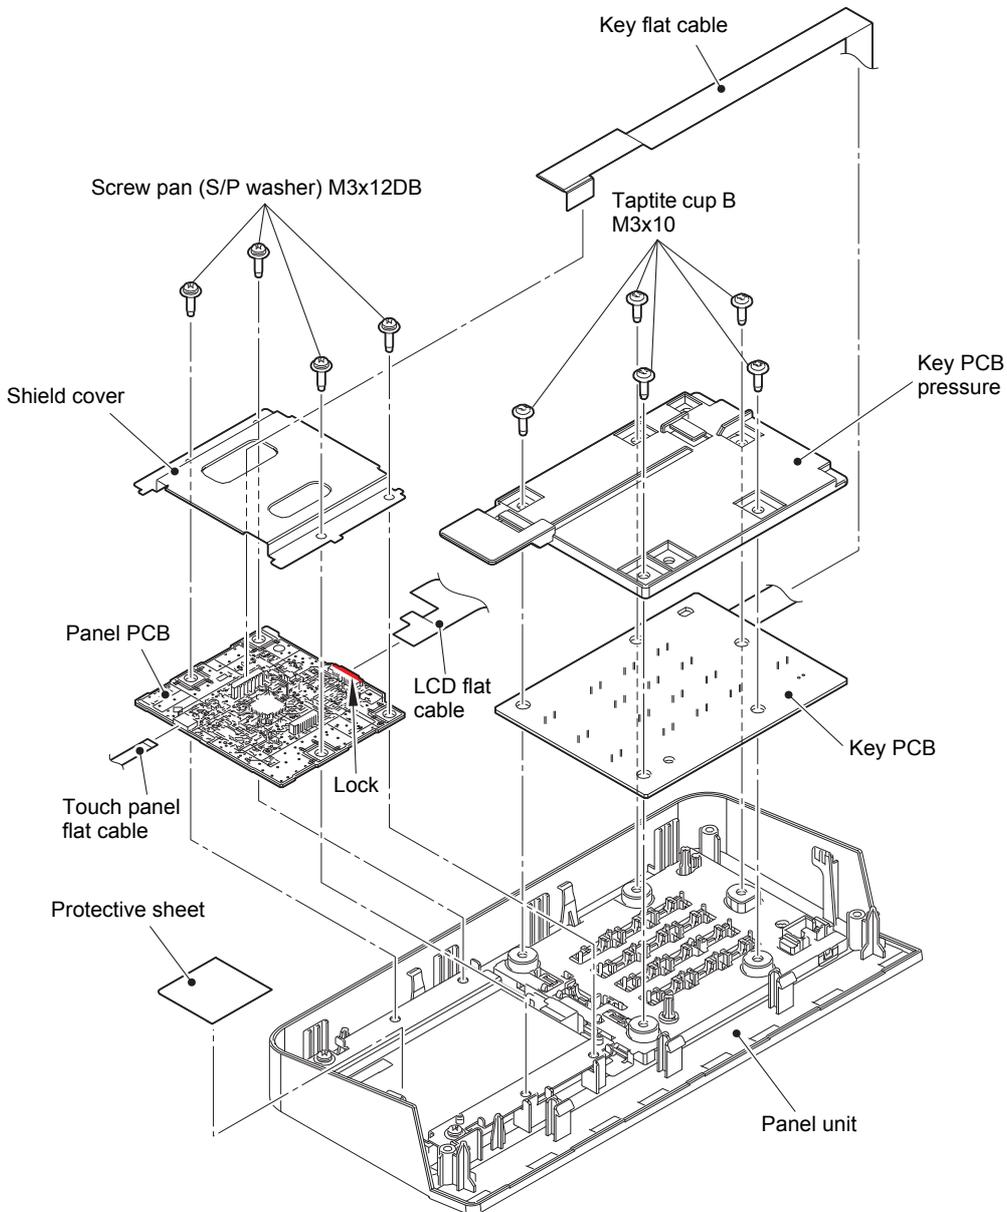


Fig. 3-40

Harness routing: Refer to "5. Panel unit".

- (7) Remove the two Screw pan (S/P washer) M3x12DB screws to remove the Shield plate from the Panel unit.
- (8) Remove the LCD from the Panel unit.
- (9) Remove the LCD blind film from the Panel unit.
- (10) Remove the Key holder ASSY from the Panel unit.
- (11) Remove the Touch panel ASSY from the Panel unit.

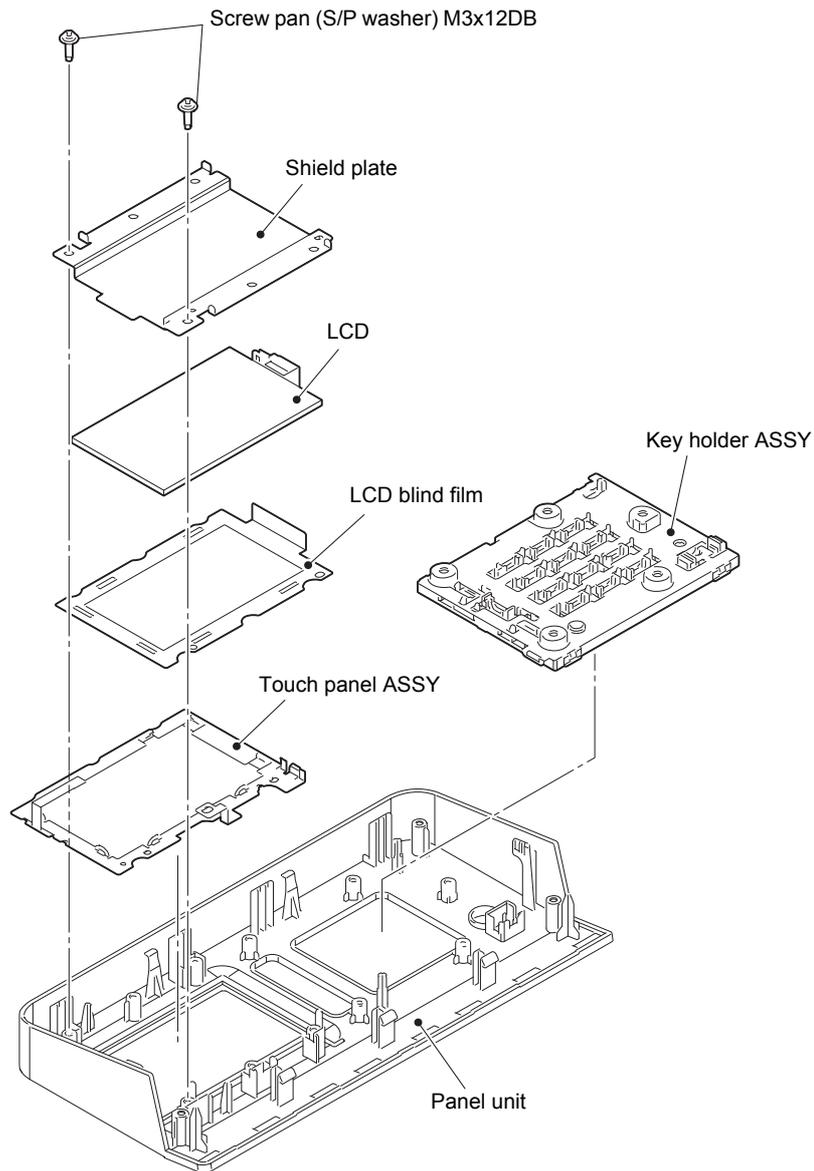


Fig. 3-41

Assembling Note:

- If you replaced the Touch panel ASSY, refer to “4. IF YOU REPLACE THE LCD, PANEL UNIT OR PANEL PCB” in Chapter 4 to configure settings.

■ For Non-touch panel models

9.13.2 Panel PCB / LCD ASSY

- (1) Release each Hook to remove the Panel PCB from the Panel unit.
- (2) Release the Lock to disconnect the LCD flat cable from the Panel PCB.
- (3) Remove the Rubber key L and the Rubber key R from the Panel unit.

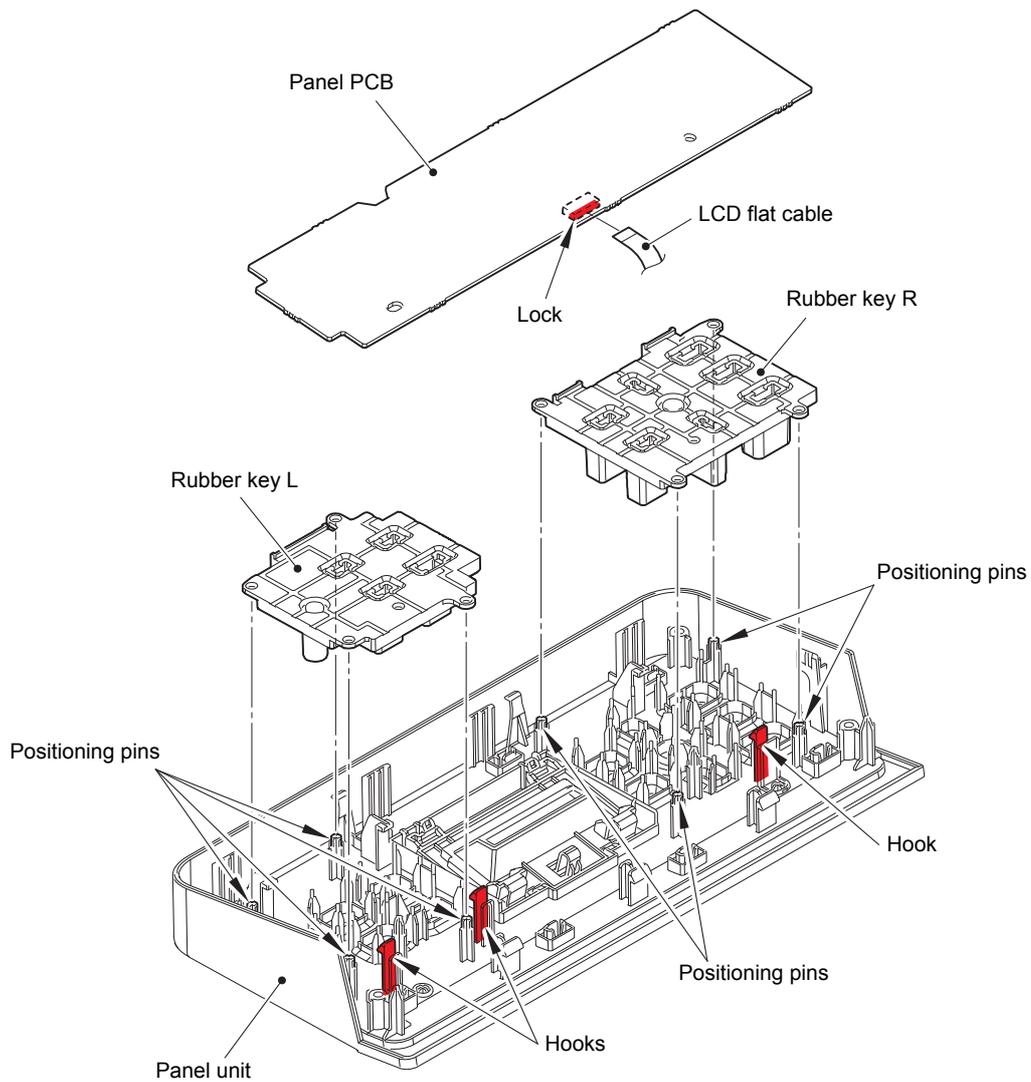


Fig. 3-42

Assembling Note:

- Make sure that the Positioning pins are inserted to the Rubber key L/R.

- (4) Release each Hook to remove the LCD ASSY from the Panel unit.
- (5) Release each Hook to remove the Panel cover from the Panel unit.

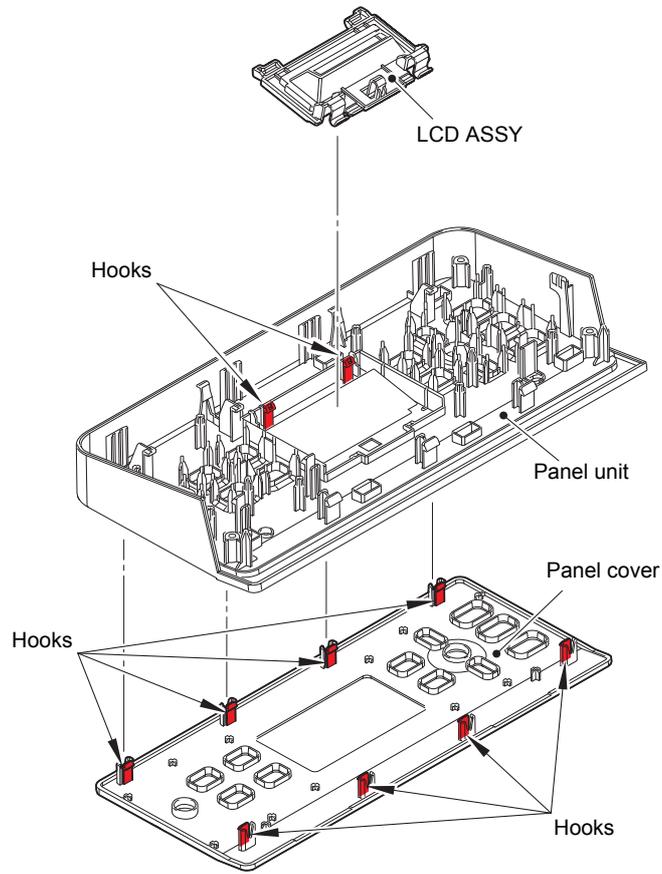


Fig. 3-43

9.14 Panel flat cable / First side CIS unit / First side CIS flat cable

Note:

- Disassemble in a dust-free location.

- (1) Remove the two Taptite cup B M3x10 screws. Release the hook to remove the Dress cover from the Document scanner bottom cover ASSY.
- (2) Remove the five Taptite bind B M4x12 screws to remove the Document scanner top cover from the Document scanner bottom cover ASSY.
- (3) Release the Panel flat cable from the securing fixtures to remove the Panel flat cable from the Document scanner bottom cover ASSY.

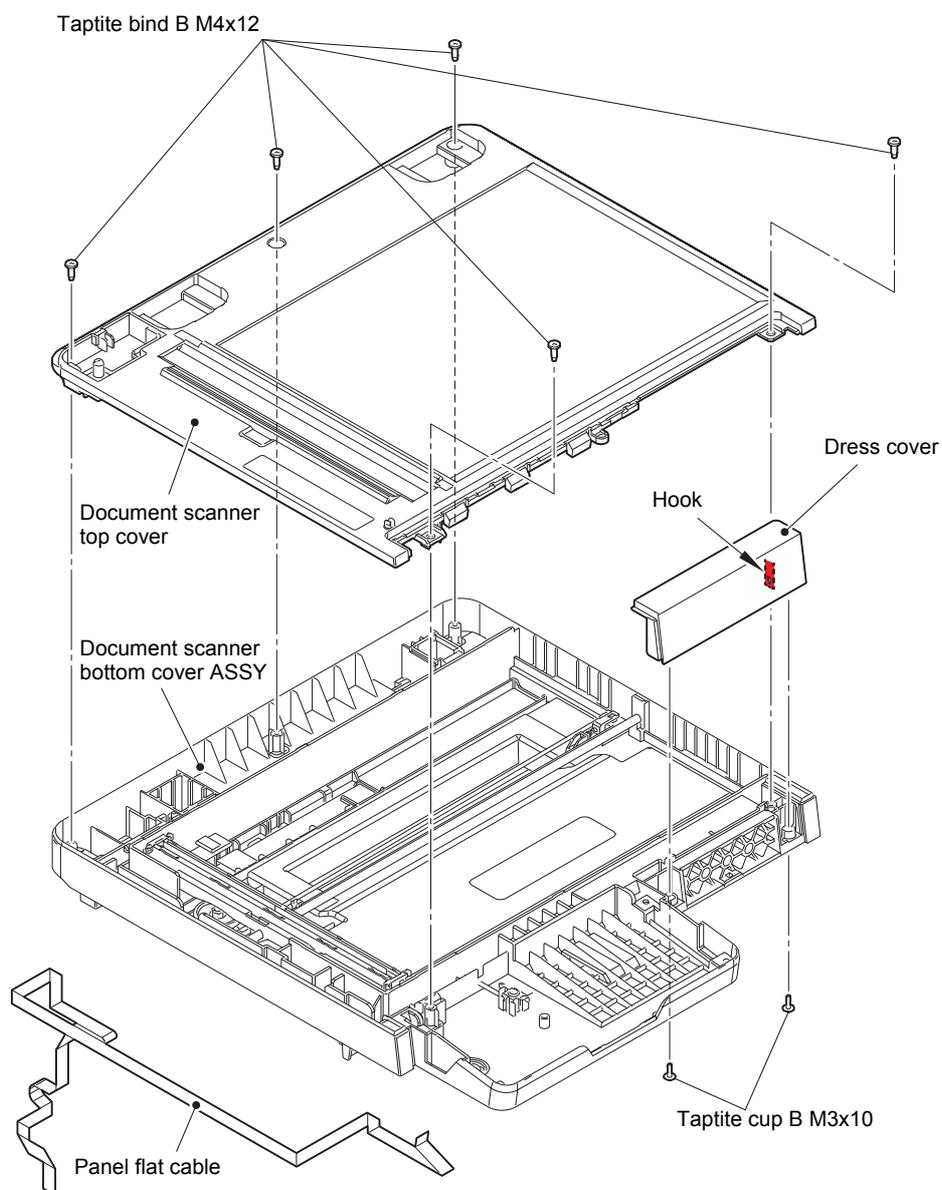


Fig. 3-44

Harness routing: Refer to "6. Document scanner unit".

Assembling Note:

- Fold the Panel flat cable at the positions described below.

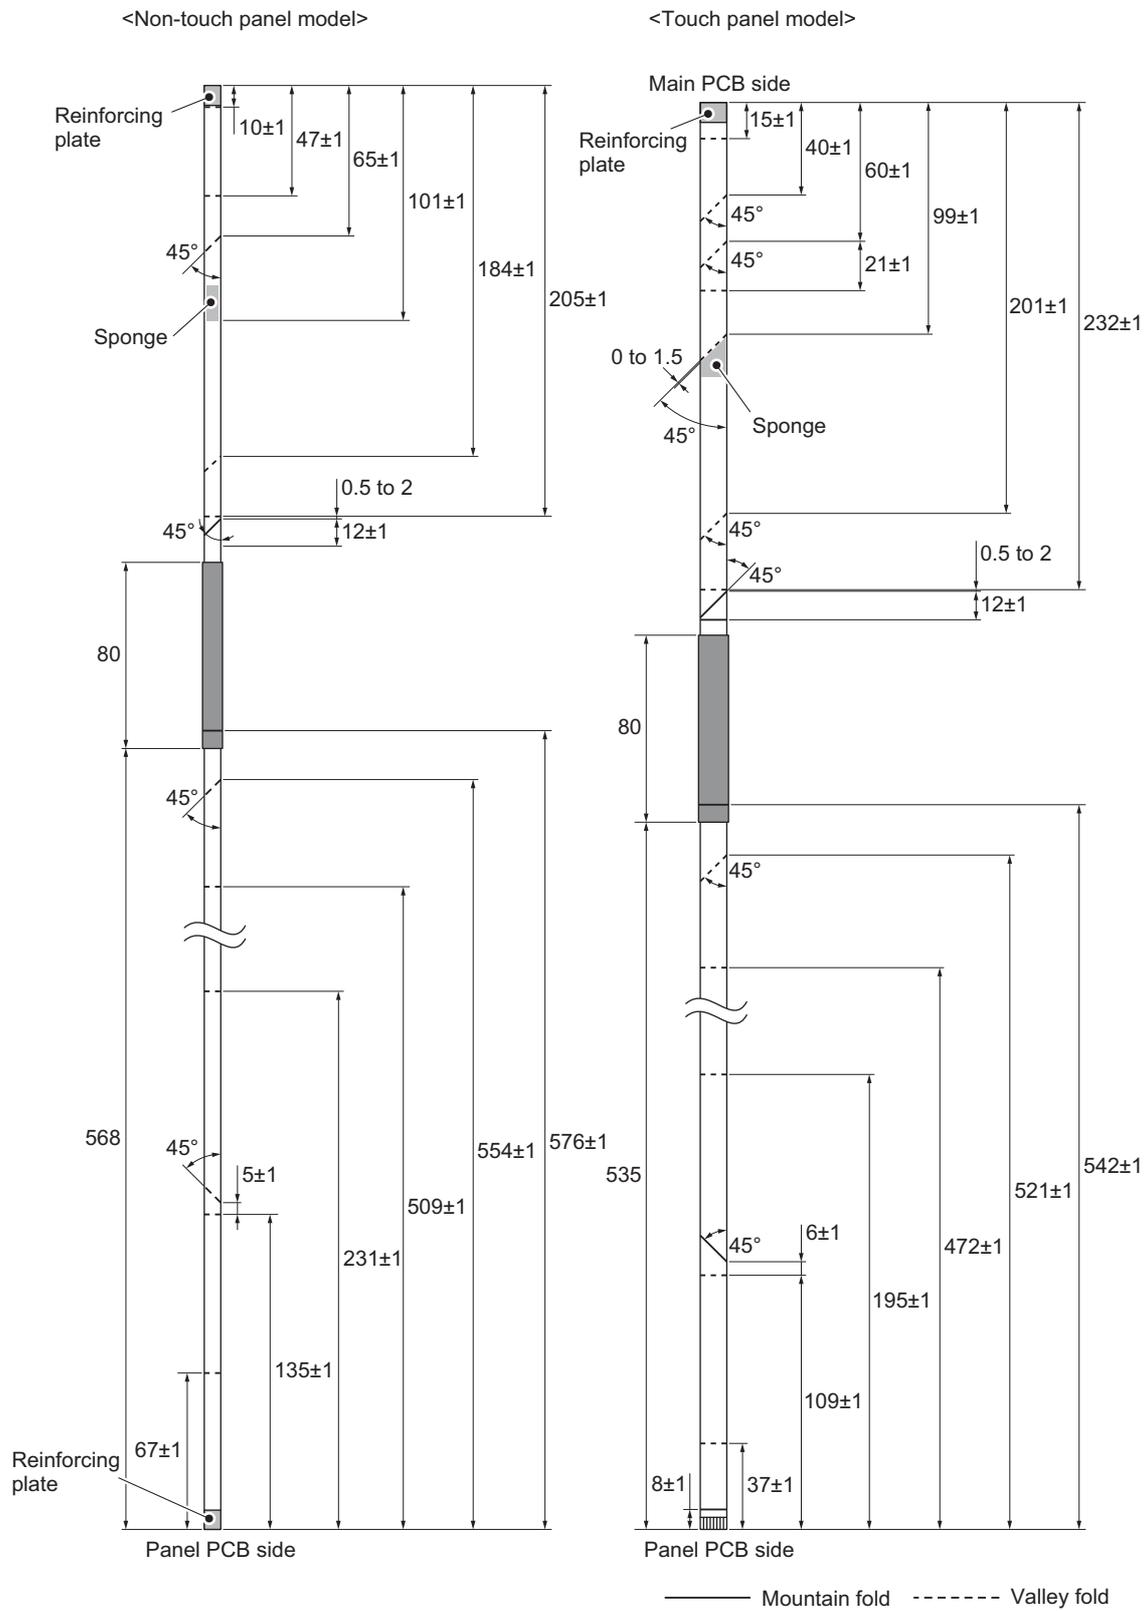


Fig. 3-45

Assembling Note:

- If you replaced the First side CIS unit, refer to “5. IF YOU REPLACE THE ADF UNIT, FIRST SIDE CIS UNIT, SECOND SIDE CIS UNIT OR DOCUMENT SCANNER UNIT” in Chapter 4 to configure settings.

- (4) Slide the CIS carriage slowly to the location as shown in the figure below.
- (5) Open the First side CIS unit approximately 90 degrees to the CIS carriage, and remove it from the CIS carriage. Disconnect the First side CIS flat cable from the First side CIS unit.

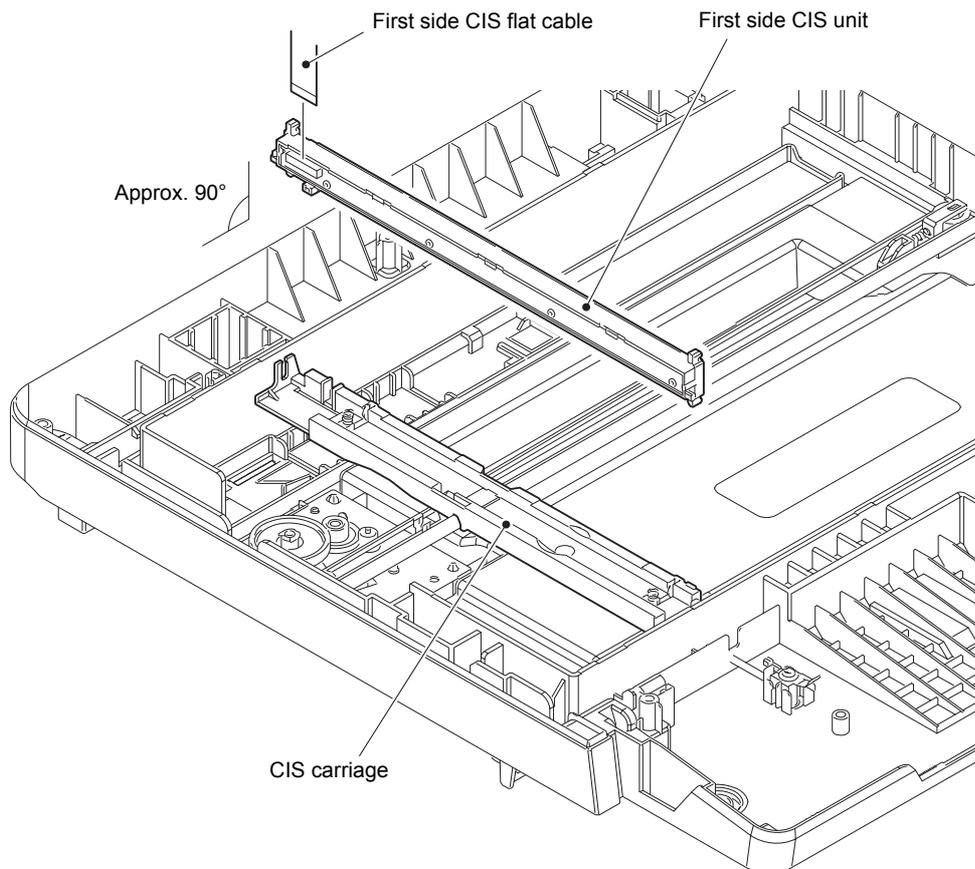


Fig. 3-46

Assembling Note:

- Acquire the white level data, and set the CIS scanning area.
(Refer to “1.3.17 Acquire white level data and set CIS scan area (Function code 55)” in Chapter 5.)

(6) Remove the First side CIS flat cable from the back of the CIS carriage.

Note:

- Be sure to replace the Double-sided tape with a new one after taking off the Double-sided tape from the CIS carriage.

(7) Remove the First side CIS flat cable from the Document scanner bottom cover ASSY.

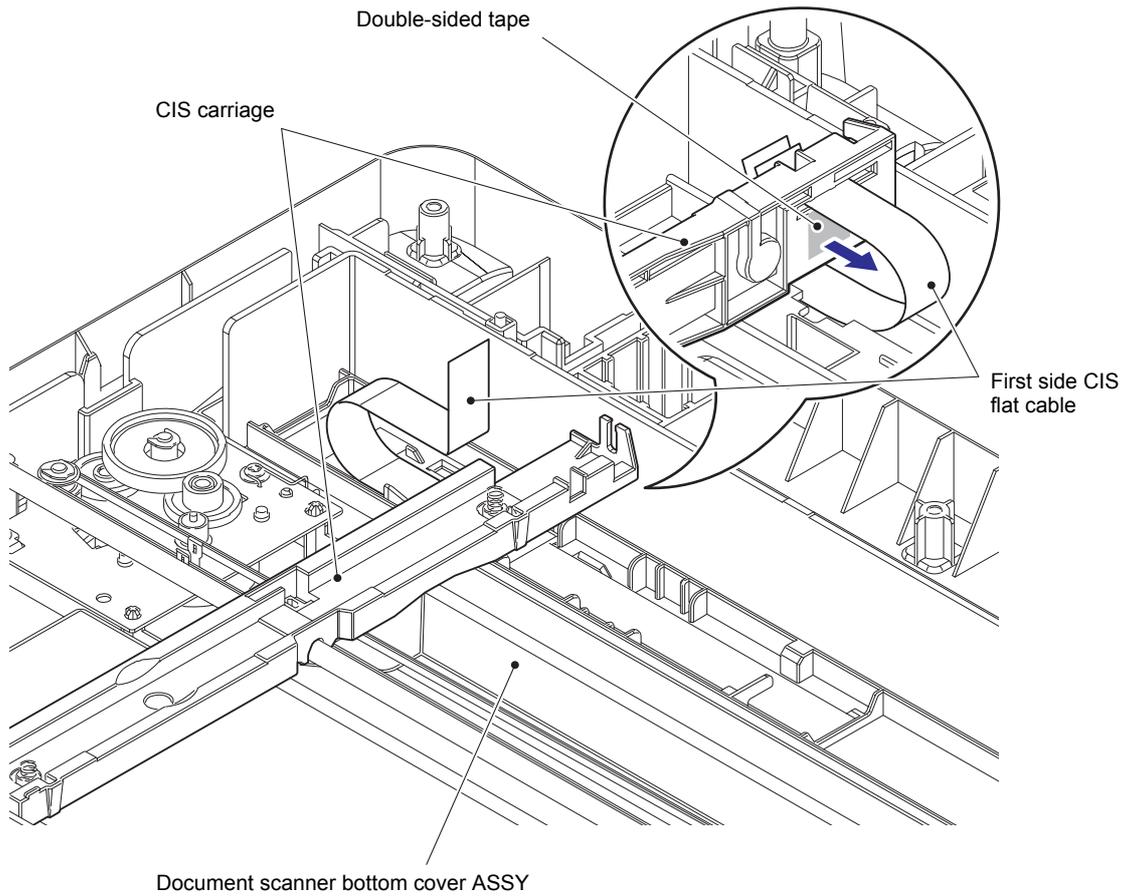


Fig. 3-47

<Attachment Procedure>

1) Fold the First side CIS flat cable as shown the figure below.

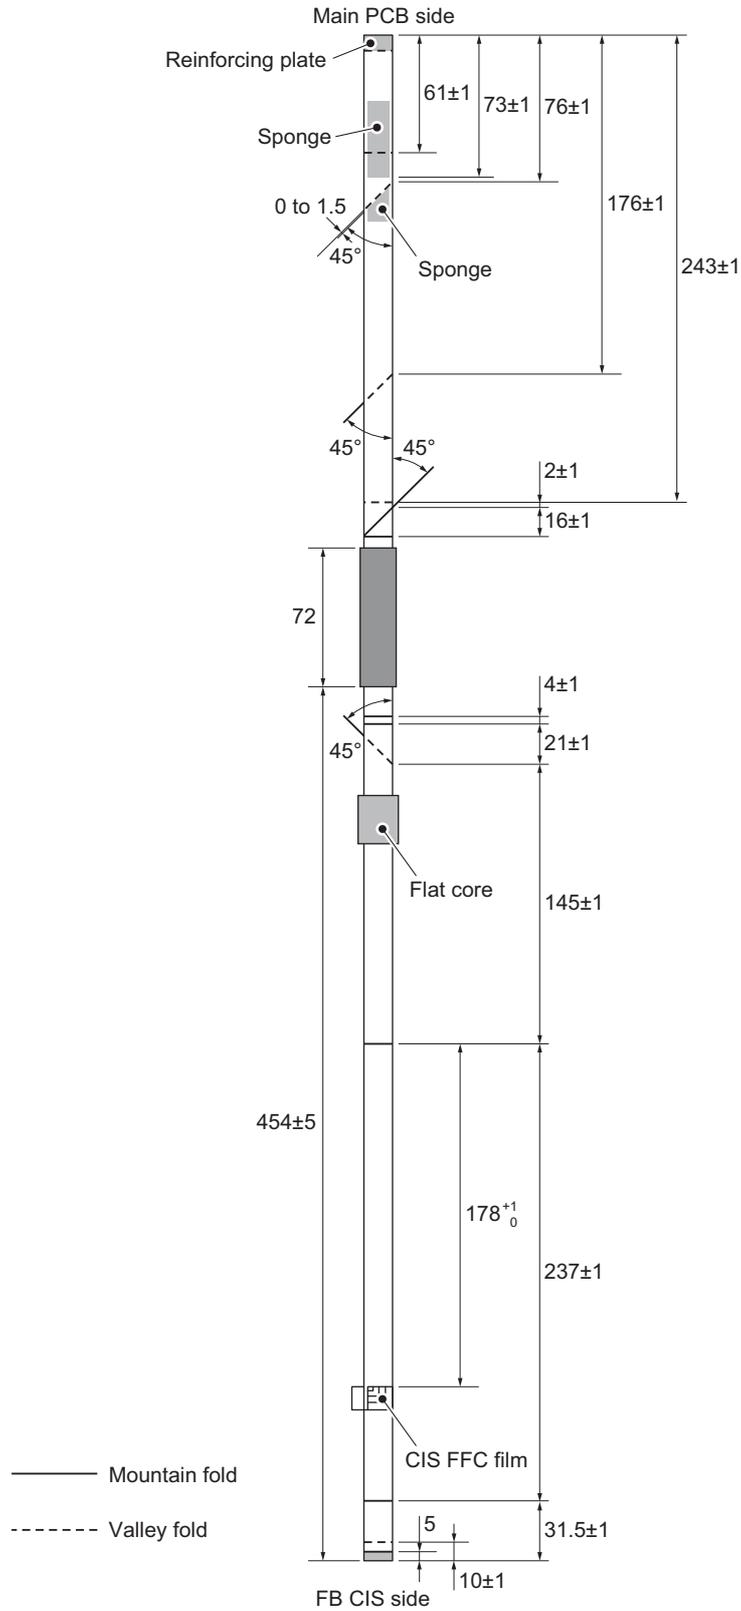


Fig. 3-48

- 2) Attach the two pieces of Double-sided tape to the Document scanner bottom cover ASSY at the positions shown in the figure below. (If the old Double-sided tape remains attached, replace it with a new one.)

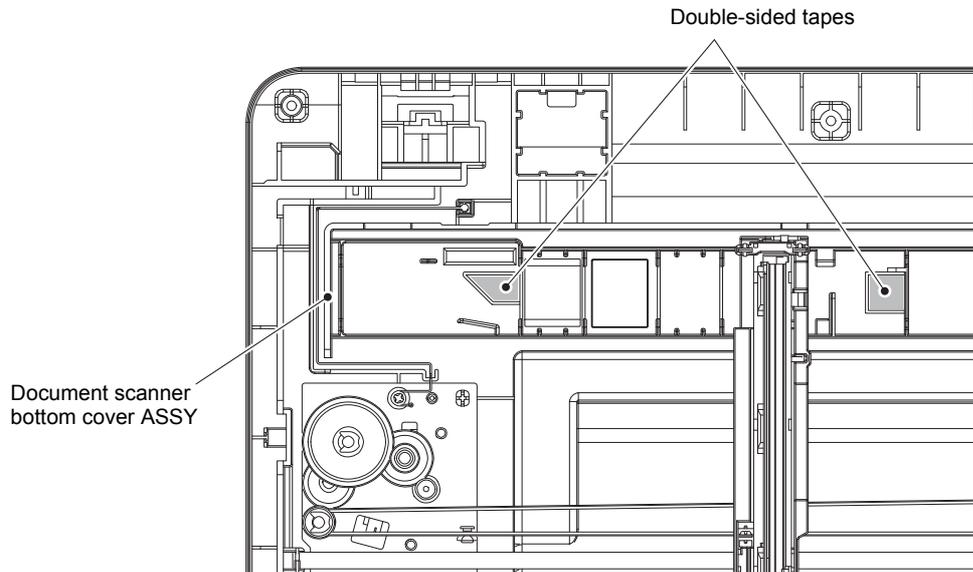


Fig. 3-49

- 3) Attach the 12 mm x 12 mm Double-sided tape to the CIS carriage at the position shown in the figure below. (If the old Double-sided tape remains attached, replace it with a new one.)
- 4) Connect the First side CIS flat cable to the First side CIS unit.
- 5) Attach the First side CIS unit to the CIS carriage.
- 6) Peel the release liner of the Double-sided tape attached to the CIS carriage, and secure the First side CIS flat cable with the tape as shown in the figure below.

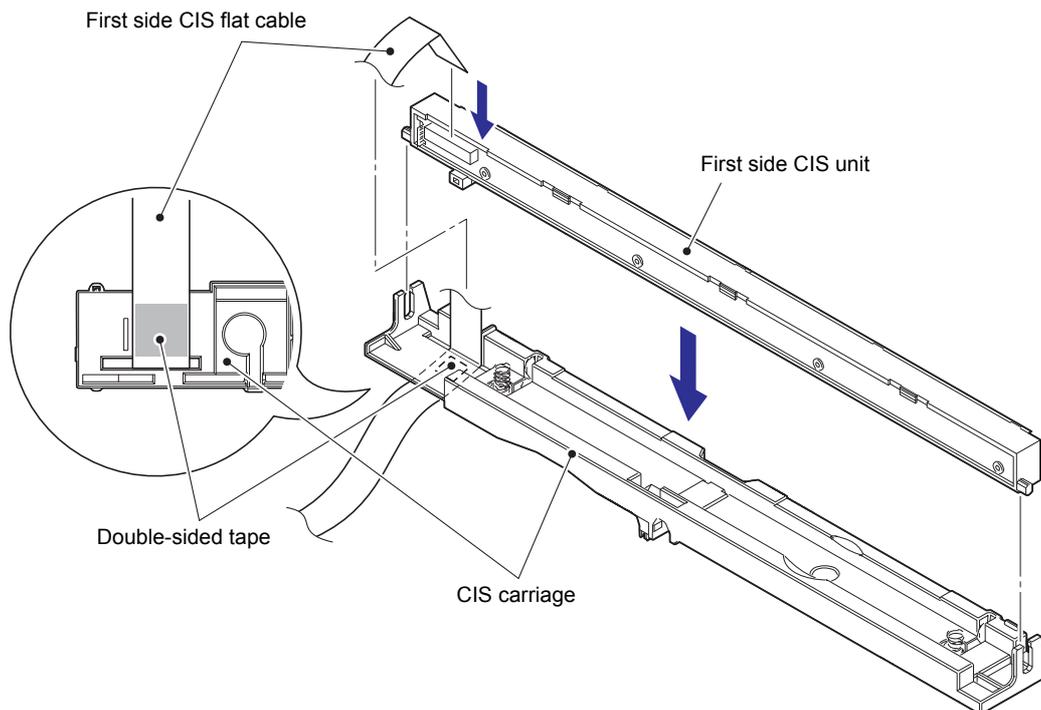


Fig. 3-50

- 7) Pass the First side CIS flat cable through the Flat core.
- 8) Peel the release liners of the two pieces of Double-sided tape attached to the Document scanner bottom cover ASSY, and secure the First side CIS flat cable with the tapes as shown in the figure below.

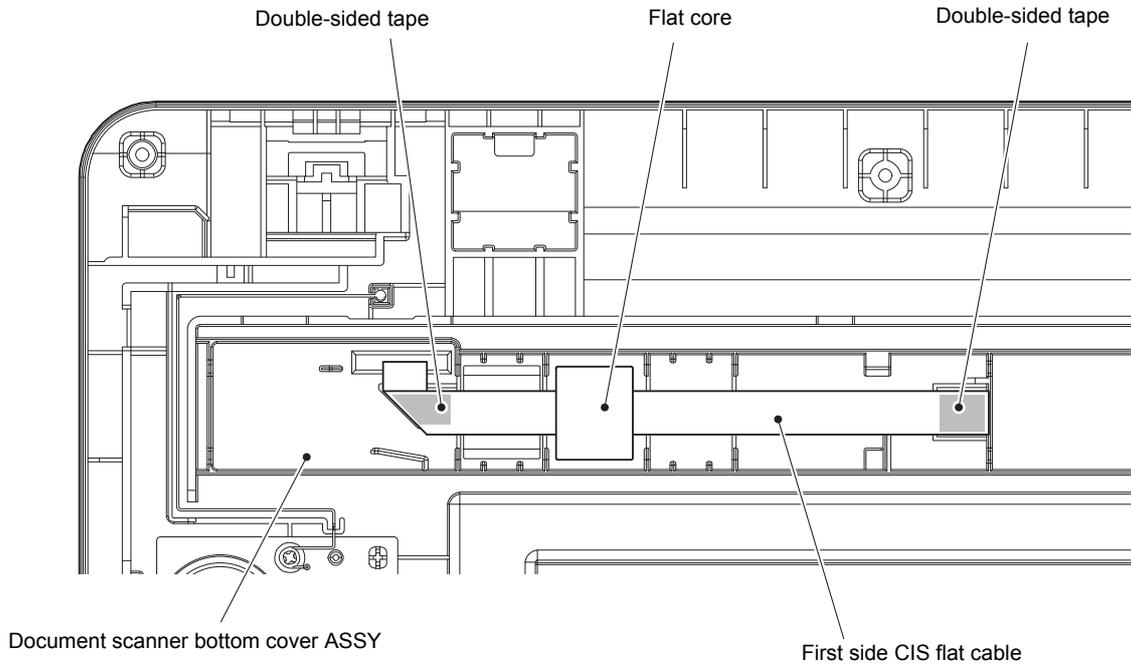


Fig. 3-51

9.15 Modem flat cable / Modem PCB

- (1) Disconnect the Modem flat cable from the Main PCB, and release it from the securing fixtures.

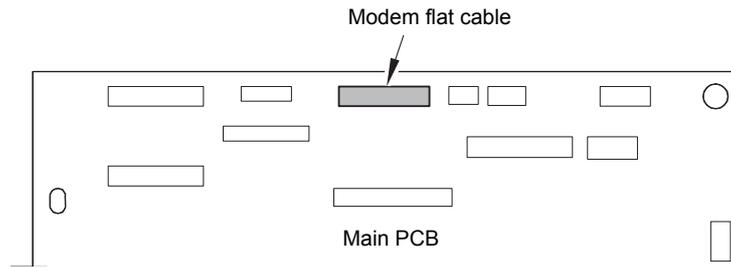


Fig. 3-52

Harness routing: Refer to “2. Top side of the machine (ADF unit, Document scanner unit, Modem unit), 8. Left side of the machine (Modem unit)”.

- (2) Remove the two Screw cup M3x8 (black) screws to remove the Modem ground wire L/R from the Modem plate.
- (3) Remove the two Taptite bind B M4x12 screws to remove the Modem plate from the Joint cover ASSY. Disconnect the Modem flat cable from the Modem PCB.
- (4) Remove the Screw cup M3x8 (black) screw to remove the Modem shield cover from the Modem plate.
- (5) Remove the three Screw cup M3x8 (black) screws to remove the Modem PCB from the Modem plate.

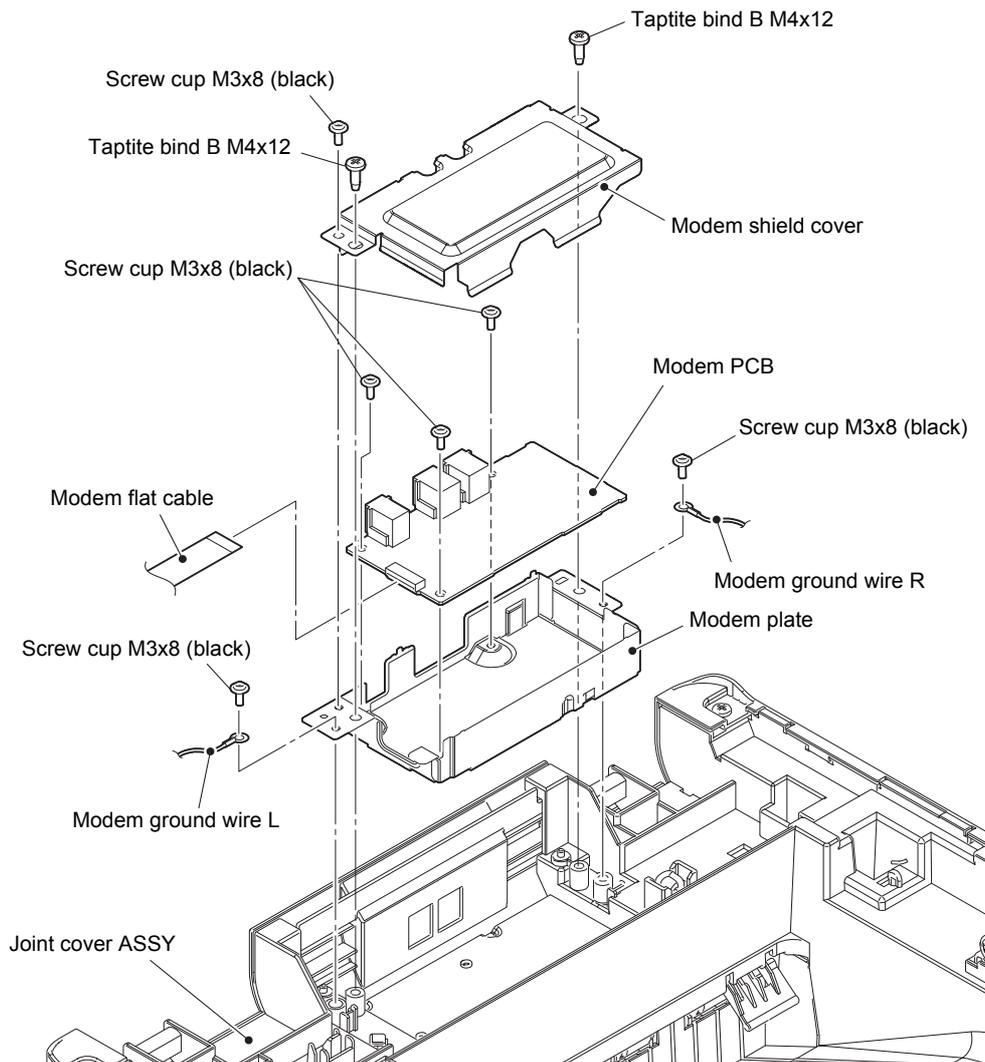


Fig. 3-53

9.16 Joint cover ASSY

- (1) Open the Joint cover ASSY.
- (2) Remove the Taptite pan (washer) B M4x12DA screw to remove the LED ground wire. Pull out the LED ground wire through the Hole of the Side frame R.
- (3) Release each Hook to remove the Arm R from the Joint cover ASSY.

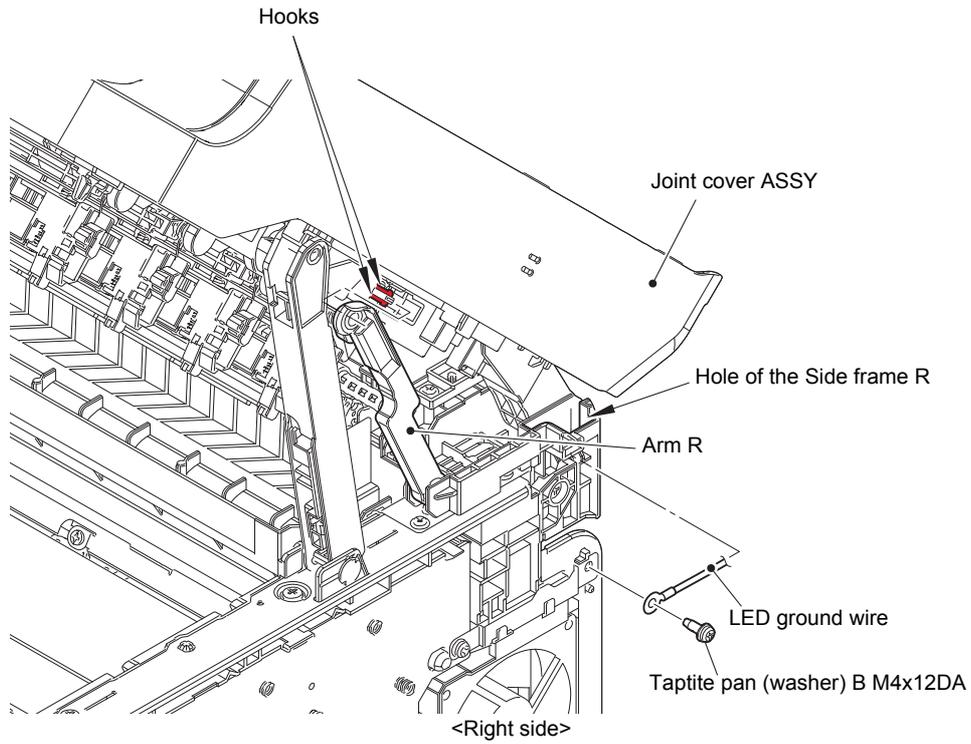


Fig. 3-54

- (4) Disconnect the Speaker harness from the Main PCB, and release it from the securing fixtures.

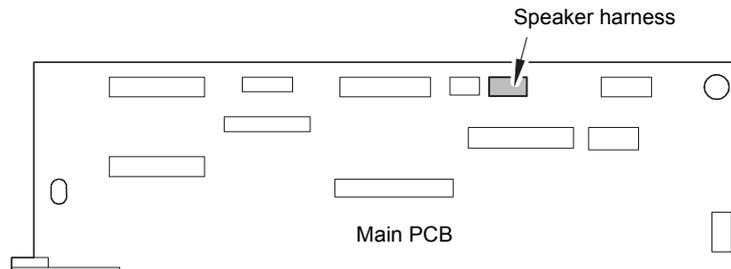


Fig. 3-55

- (5) Remove the Screw cup M3x8 (black) screw to release the Modem ground wire L from the securing fixtures.
- (6) Disconnect the LED control flat cable from the Main PCB. Remove the LED control flat cable from the Double-sided tape on the FFC guide and then release it from the securing fixtures.
- (7) Disconnect the NFC flat cable from the Main PCB. Release each Hook to remove the Flat core. Remove the NFC flat cable from the Double-sided tape to release it from the securing fixtures.

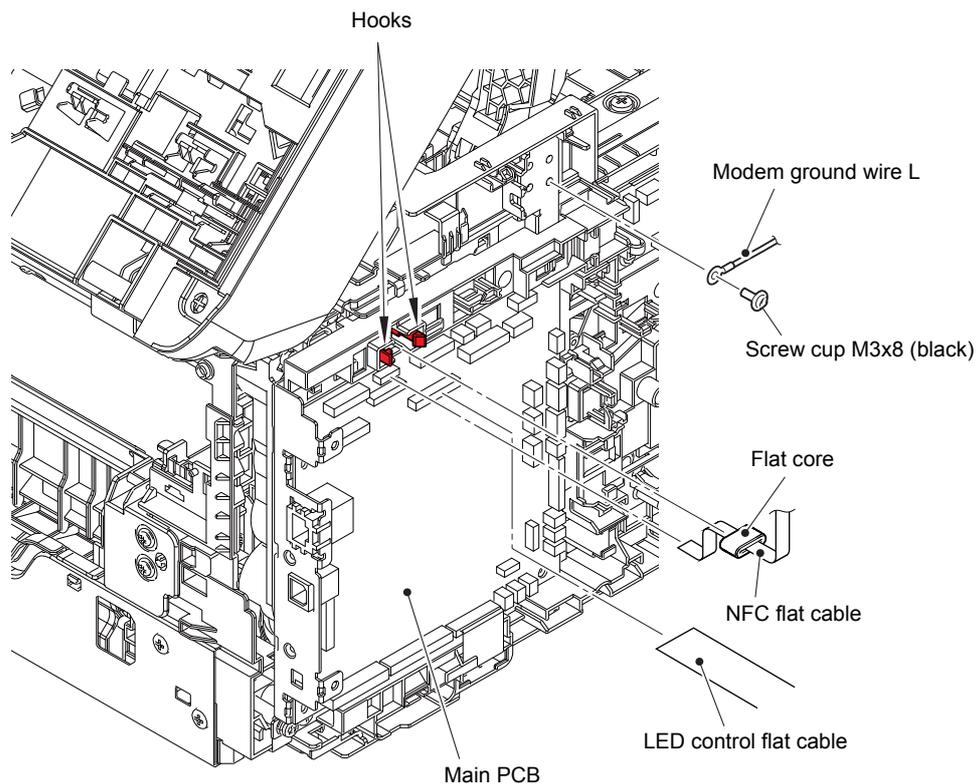


Fig. 3-56

Harness routing: Refer to "7. Left side of the machine (LED unit, NFC PCB), 8. Left side of the machine (Modem unit), 10. Main PCB, Cartridge sensor relay PCB".

- (8) Remove the Joint arm L from the Arm guide L.
- (9) Remove the Joint arm R from the Arm guide R.
- (10) Open the Joint cover ASSY approximately 90 degrees to remove it upward.

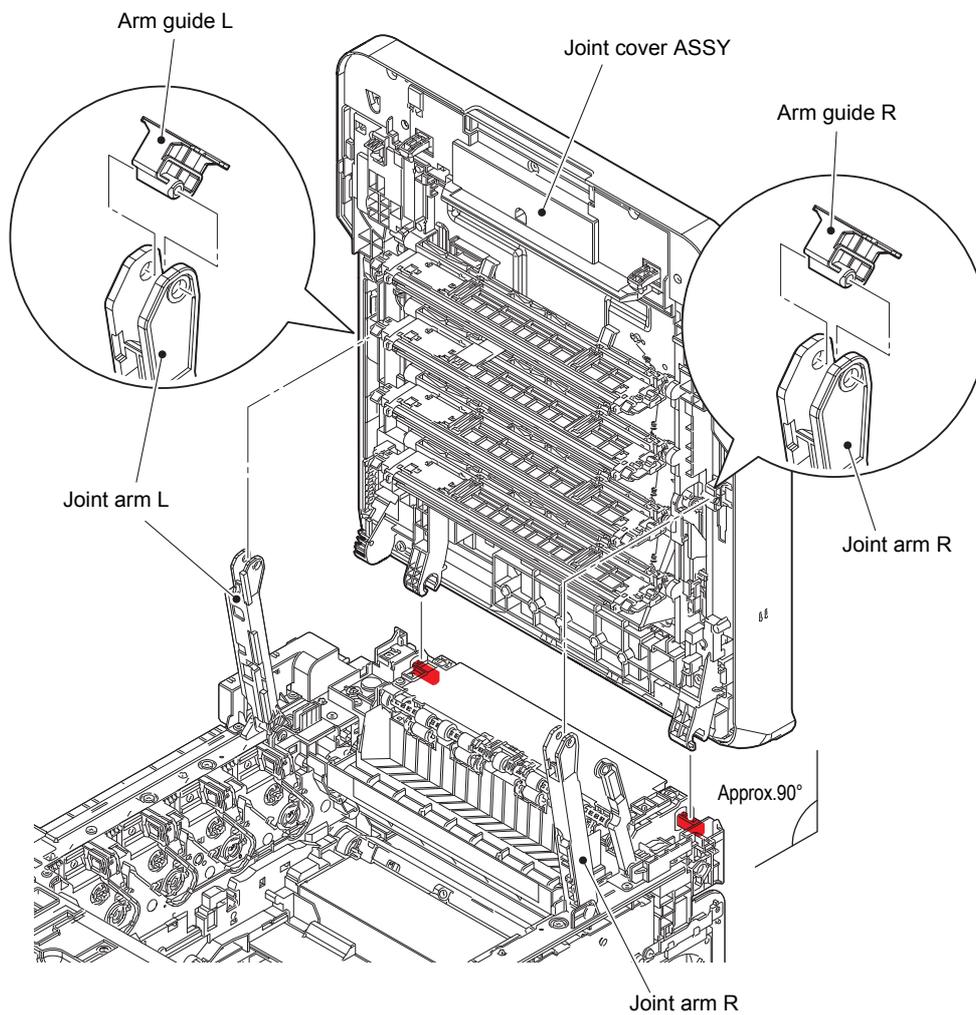


Fig. 3-57

9.17 LED unit

- (1) Remove the eight Taptite bind B M4x12 screws to remove the Open button cover from the Joint cover ASSY.

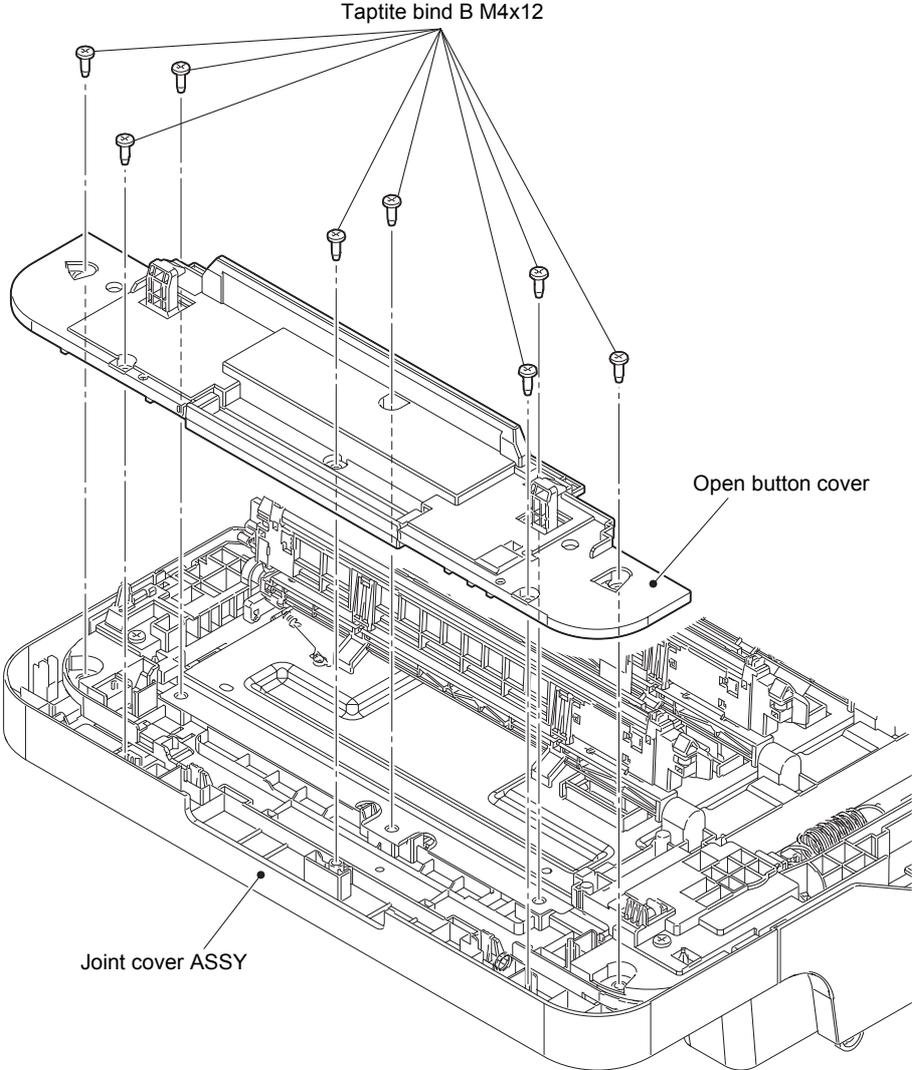


Fig. 3-58

- (2) Slide the Push arm in the direction of the arrow to raise the LED ASSYs.
- (3) Remove the Taptite cup S M3x8 SR screw to remove the Modem ground wire R from the LED unit.
- (4) Remove the five Taptite bind B M4x12 screws. Release the Hook to remove the LED unit from the Joint cover ASSY. Release the NFC flat cable and the Modem ground wire R from the securing fixtures.

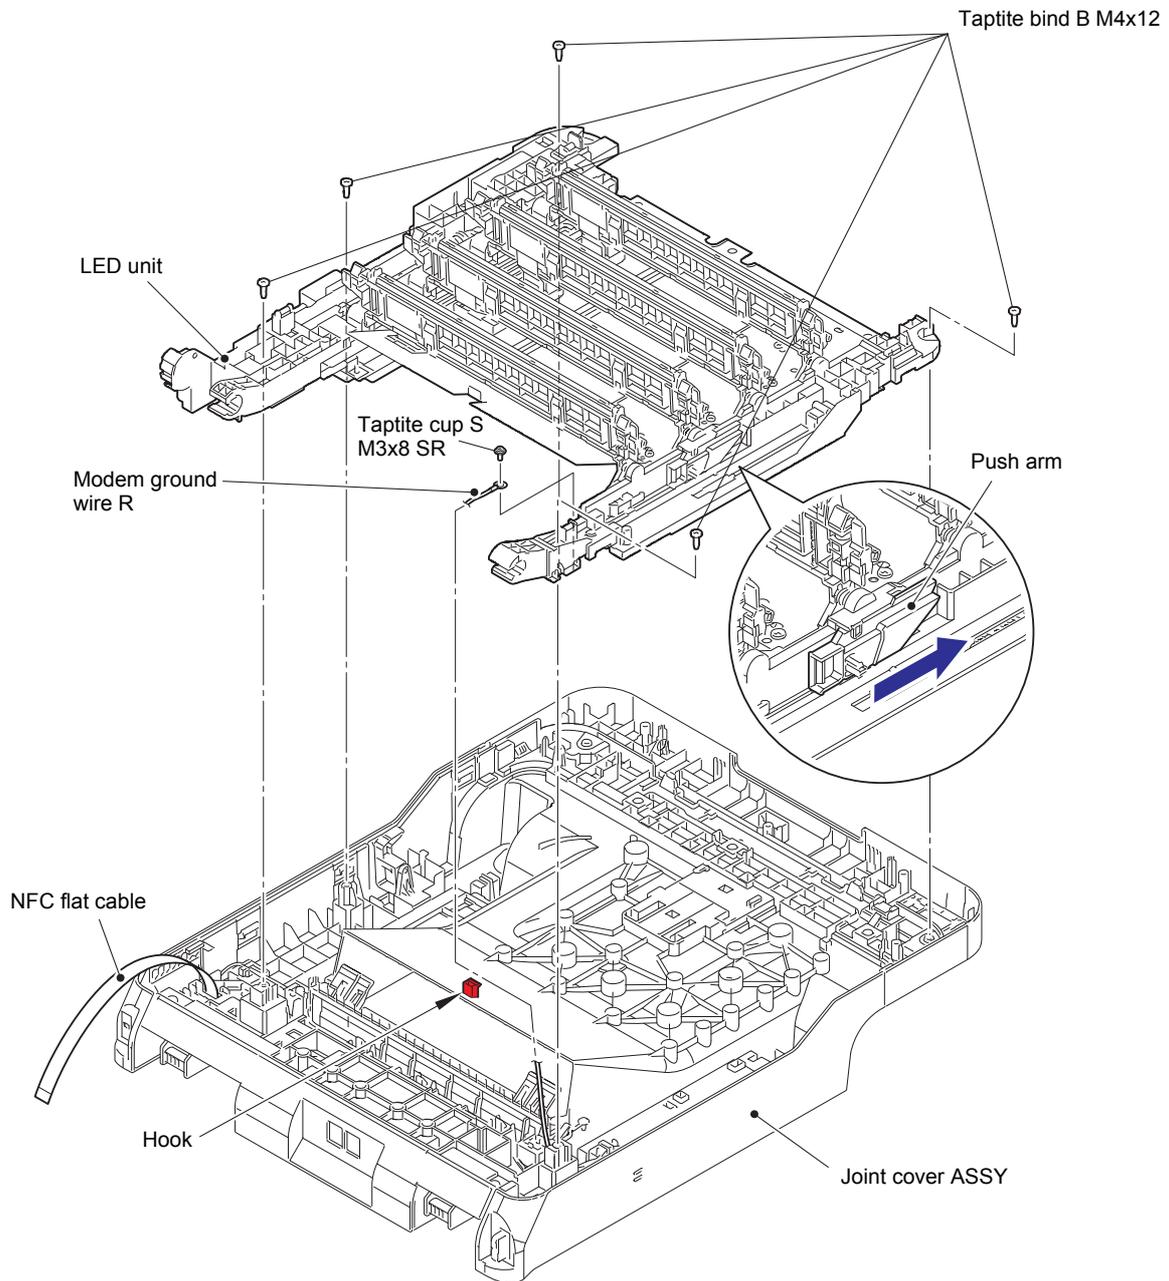


Fig. 3-59

Harness routing: Refer to "7. Left side of the machine (LED unit, NFC PCB), 9. Back side of Joint cover ASSY."

9.18 Speaker unit

- (1) Release the Speaker harness from the securing fixtures.
- (2) Remove the two Taptite bind B M4x12 screws to remove the Joint side cover R from the Joint cover ASSY.
- (3) Remove the Speaker spring to remove the Speaker unit from the Joint side cover R.

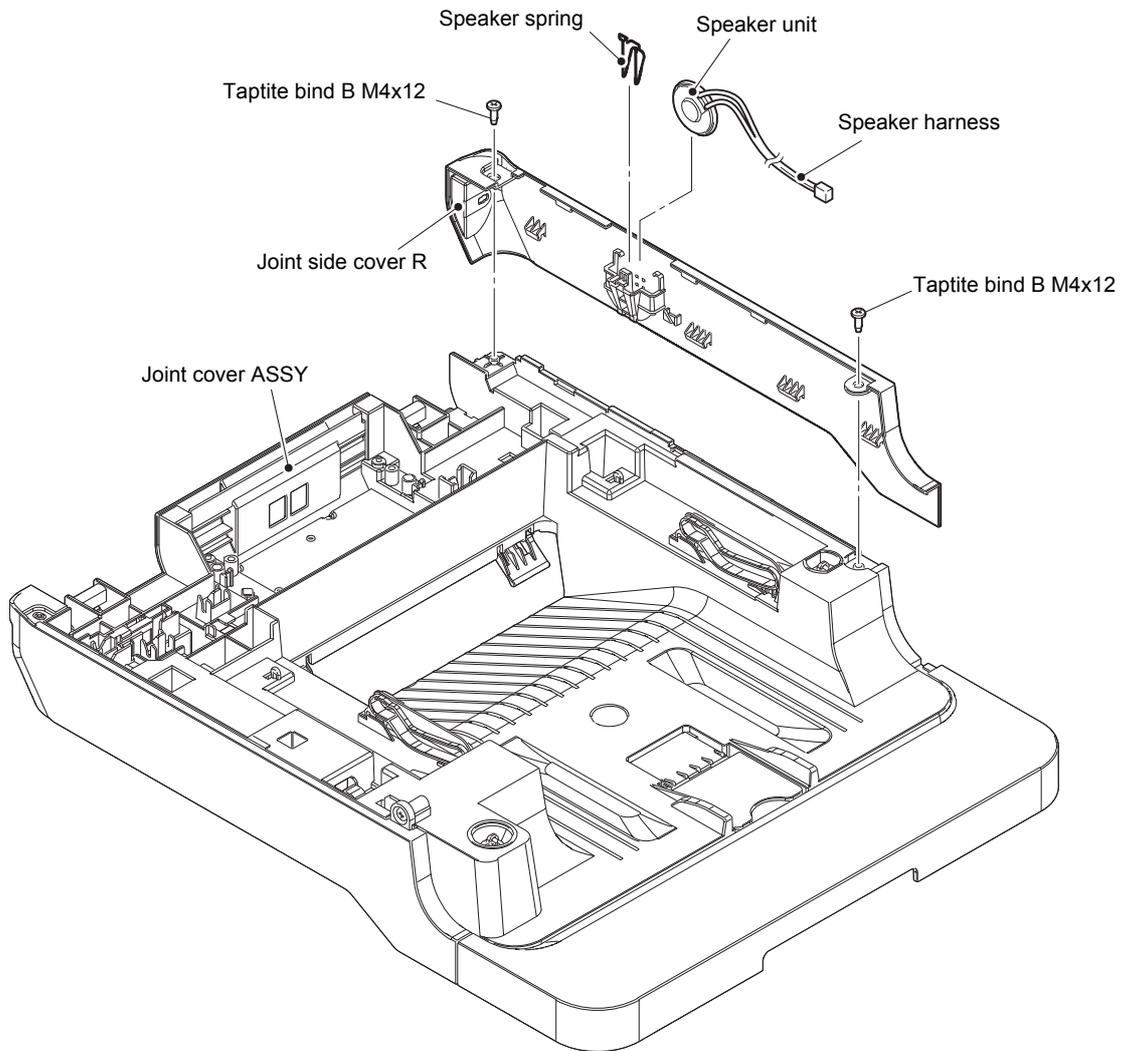


Fig. 3-60

Harness routing: Refer to "9. Back side of Joint cover ASSY".

9.19 NFC PCB

- (1) Remove the Taptite bind B M4x12 screw. Release the Hook A, and the Hooks B and C in this order to remove the Joint side cover L from the Joint cover ASSY.

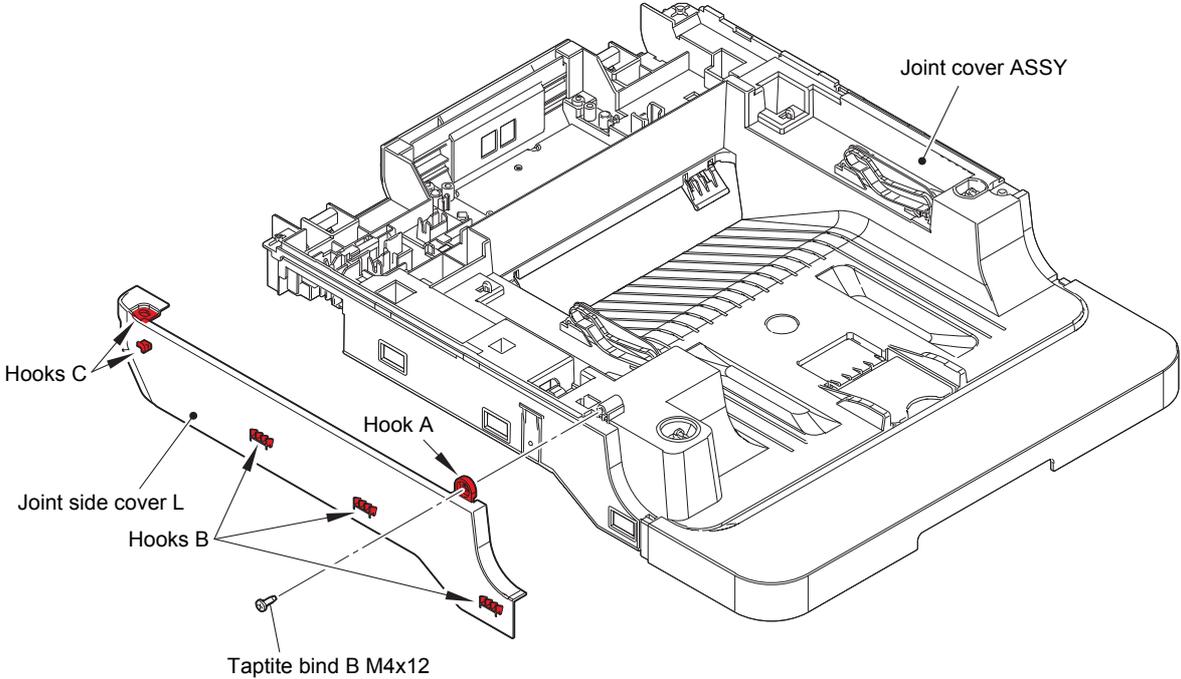


Fig. 3-61

- (2) Disconnect the NFC flat cable from the NFC PCB, and then release the NFC flat cable from the securing fixtures.
- (3) Release each Hook to remove the Front joint cover from the Joint cover ASSY.
- (4) Release the Hook to remove the NFC PCB from the Front joint cover.
- (5) Remove the two Taptite bind B M4x12 screws to remove the Joint back cover from the Joint cover ASSY.

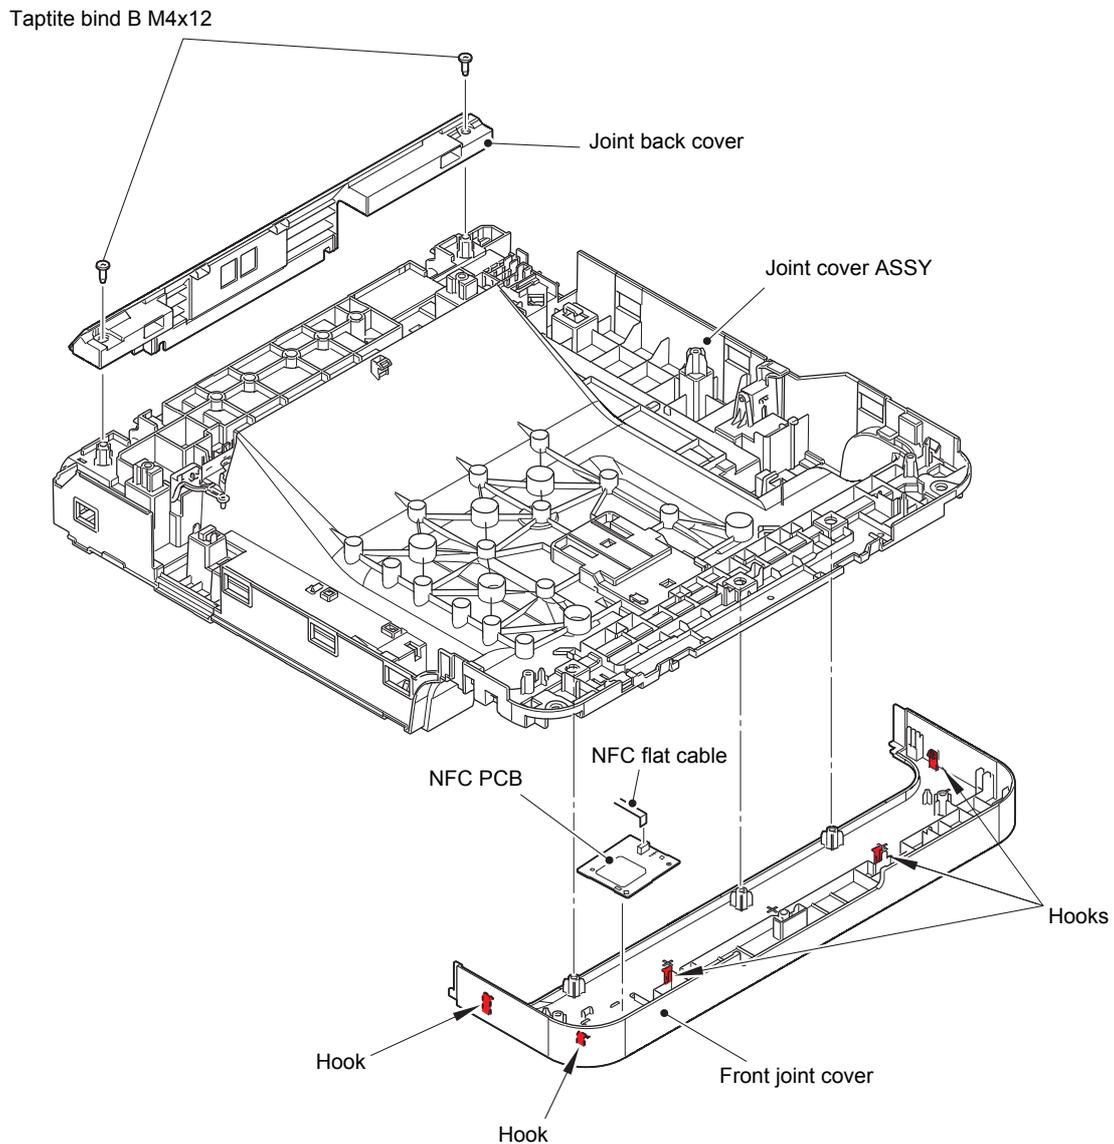


Fig. 3-62

Harness routing: Refer to “9. Back side of Joint cover ASSY”.

9.20 LED control flat cable / LED control PCB

Note:

- When disassembling/assembling the LED unit, attach it to the machine to prevent breakage of the LED ASSYs.

(1) Remove the three Screw cup M3x8 SR screws to remove the LED PCB shield plate.

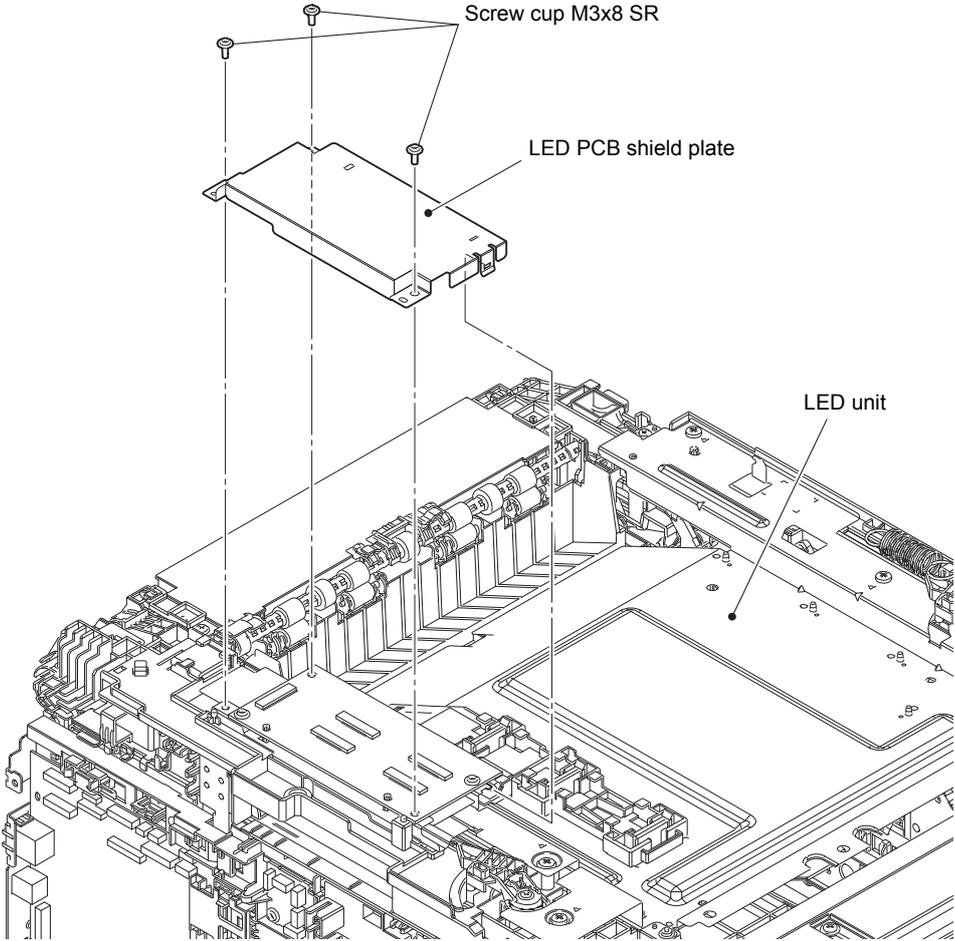


Fig. 3-63

- (2) Release the Lock to disconnect the LED control flat cable from the LED control PCB. Release the LED control flat cable from the securing fixtures.
- (3) Release each Lock to disconnect the LED ASSY flat cable C, the LED ASSY flat cable K, the LED ASSY flat cable M, and the LED ASSY flat cable Y from the LED control PCB. Release each LED ASSY flat cable from the securing fixtures.

Note:

- Remove the LED ASSY flat cable K from the Double-sided tape.

- (4) Remove the two Screw cup M3x8 SR screws to remove the LED control PCB and the LED PCB insulation sheet from the LED unit.
- (5) Remove the LED unit from the machine.

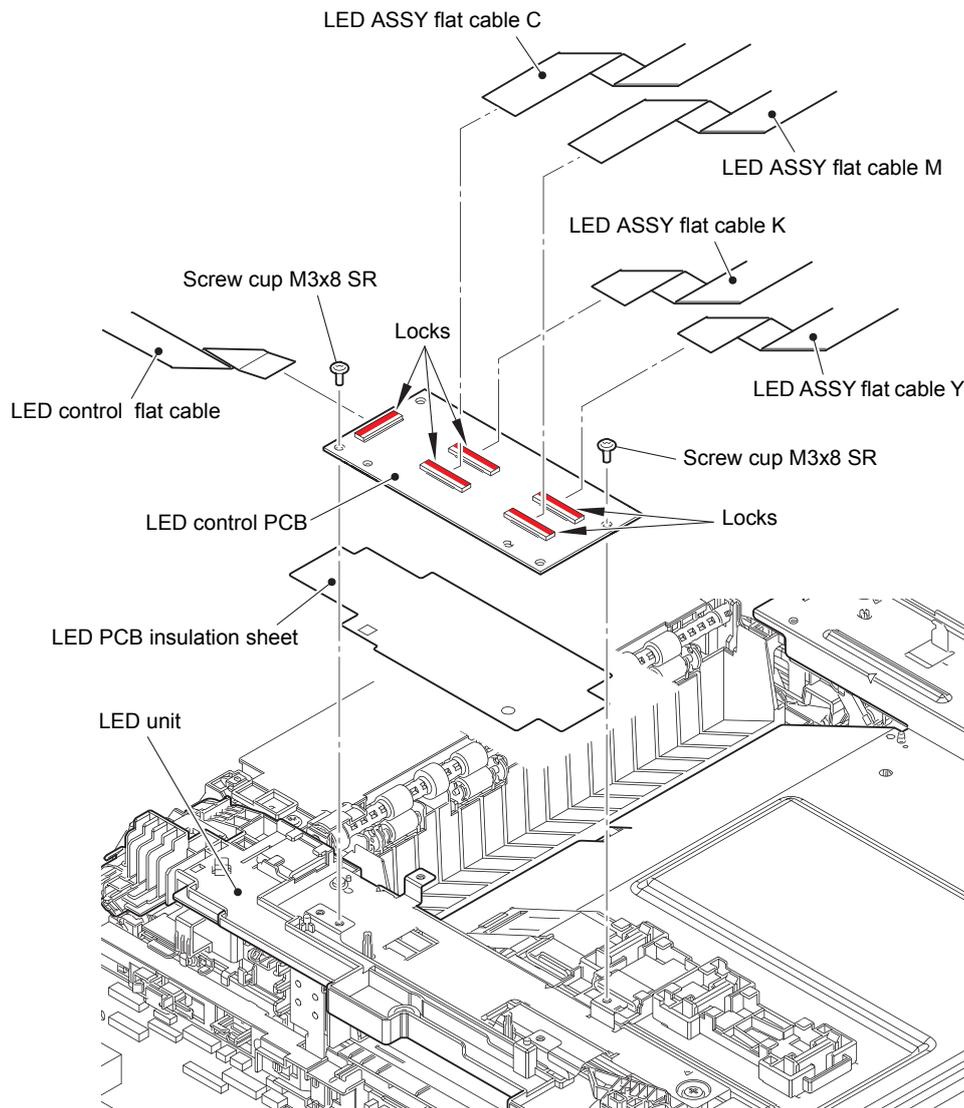


Fig. 3-64

Harness routing: Refer to "12. LED unit".

Assembling Note:

Fold the LED control flat cable at the positions described below.

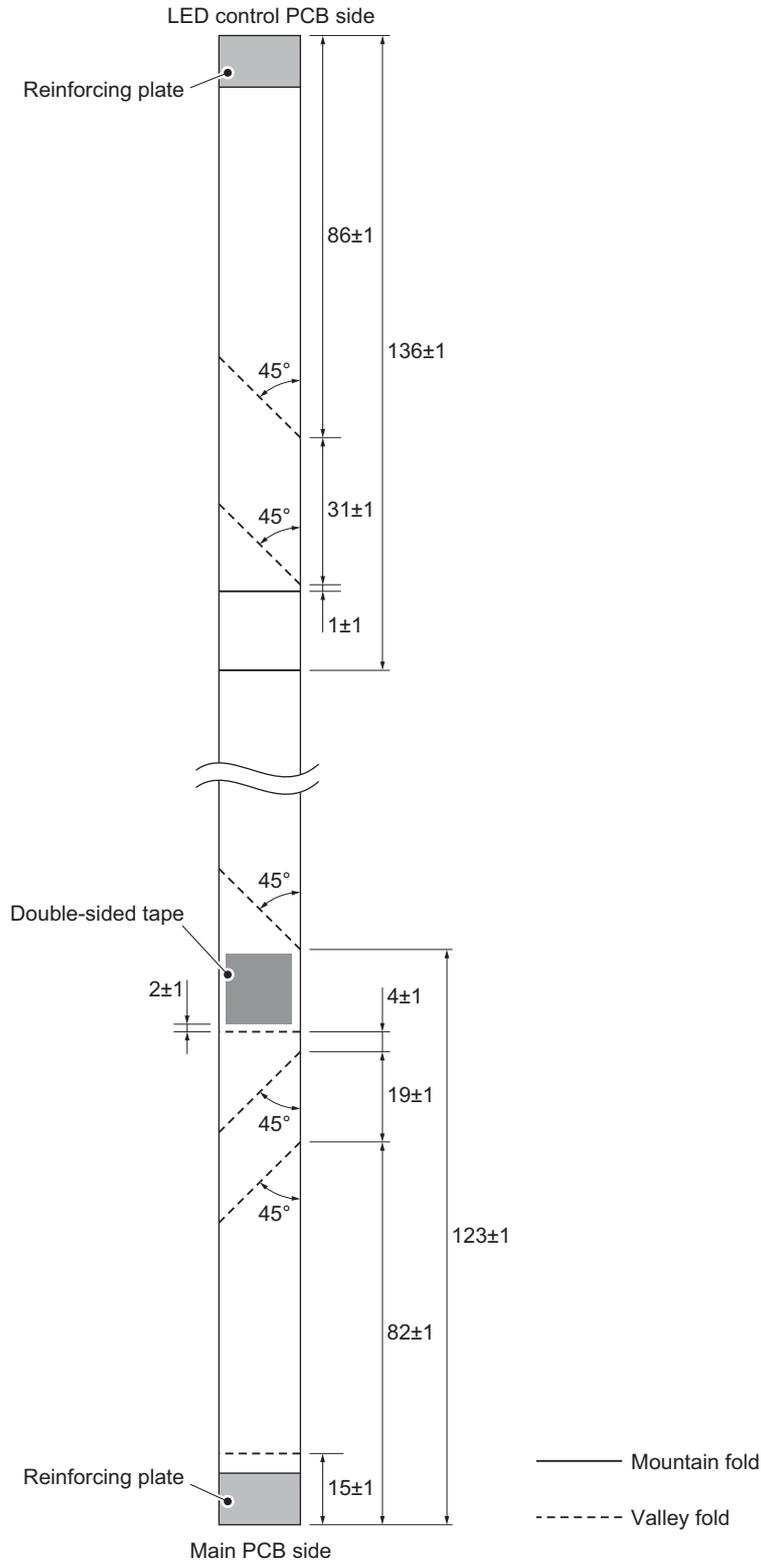


Fig. 3-65

9.21 LED ASSY (Y/M/C/K) / LED ASSY flat cable (Y/M/C/K)

- (1) Release each Hook to remove the two Holder hooks from the LED ASSY.

Assembling Note:

- When assembling the Holder hook, make sure to insert the Hook A of the Holder hook into the groove of the LED ASSY first, and then assemble the Hook B of the Holder hook.
- After assembling, make sure to check that the Hook A is firmly engaged to the LED ASSY. If the Holder hook is not engaged firmly, it might cause an image failure.

- (2) Remove the LED ASSY, and pull out the LED ASSY flat cable through the Flat core on the LED unit.

Note:

- The LED ASSY flat cable K does not pass through the Flat core.

Assembling Note:

- When assembling the LED ASSY, insert the two Springs A into each Boss of the LED ASSY and insert the tip end of Spring B in the Hole of the LED ASSY.

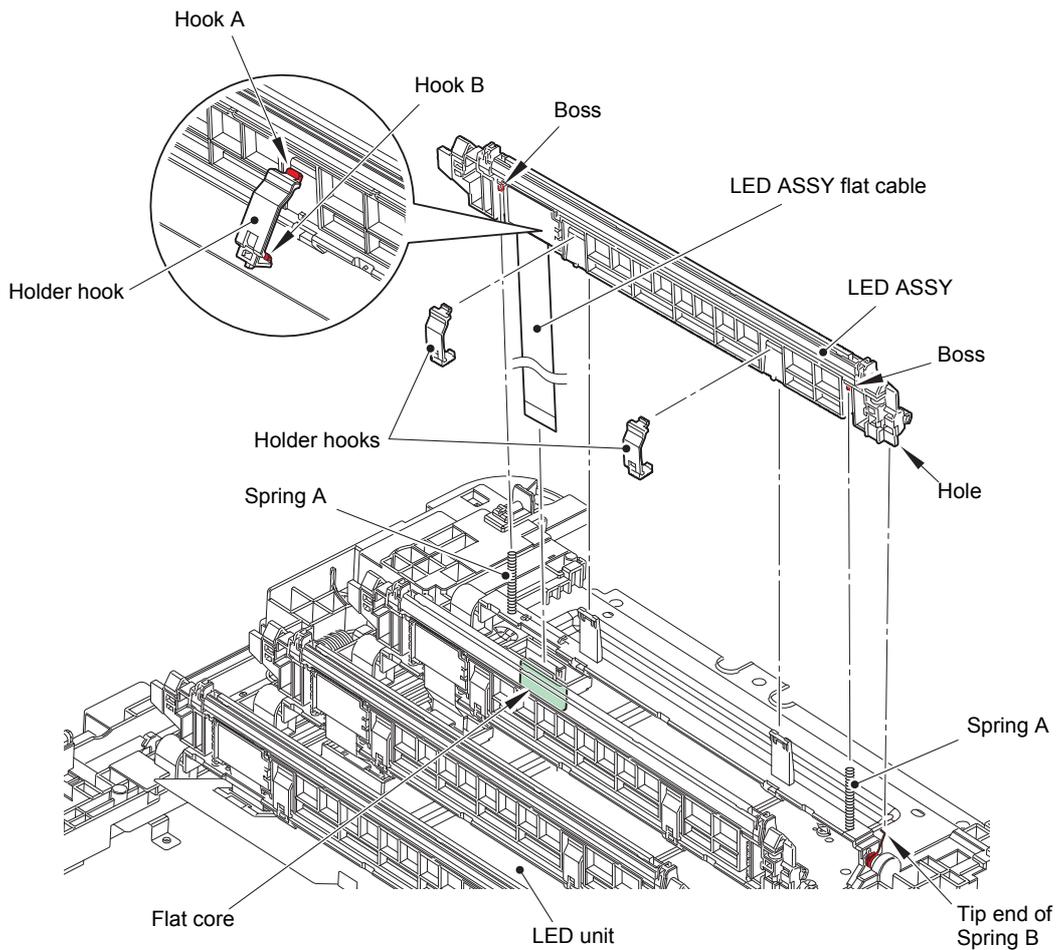


Fig. 3-66

- (3) Release each Hook to remove the FFC cover from the LED ASSY.
- (4) Release the Lock to disconnect the LED ASSY flat cable from the LED ASSY.

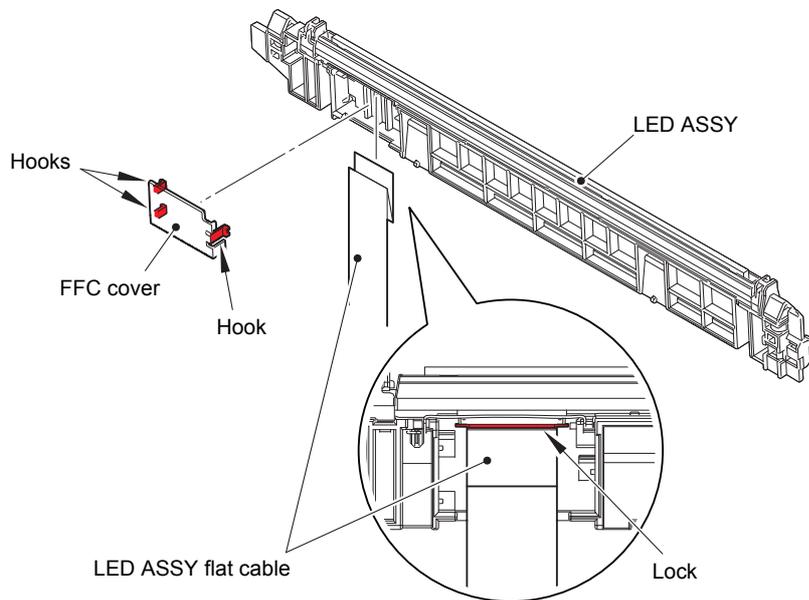


Fig. 3-67

Assembling Note:

- The LED parts of the LED ASSY for replacement are covered with protection tapes. Make sure not to remove the protection tapes until assembling of the LED ASSY is completed. After it is assembled, make sure to remove the protection tapes.
- If the LED parts get smeared, make sure to wipe smears on the LED parts with a clean and soft cloth.

Assembling Note:

- Fold each LED ASSY flat cable at the positions described below.

———— Mountain fold

----- Valley fold

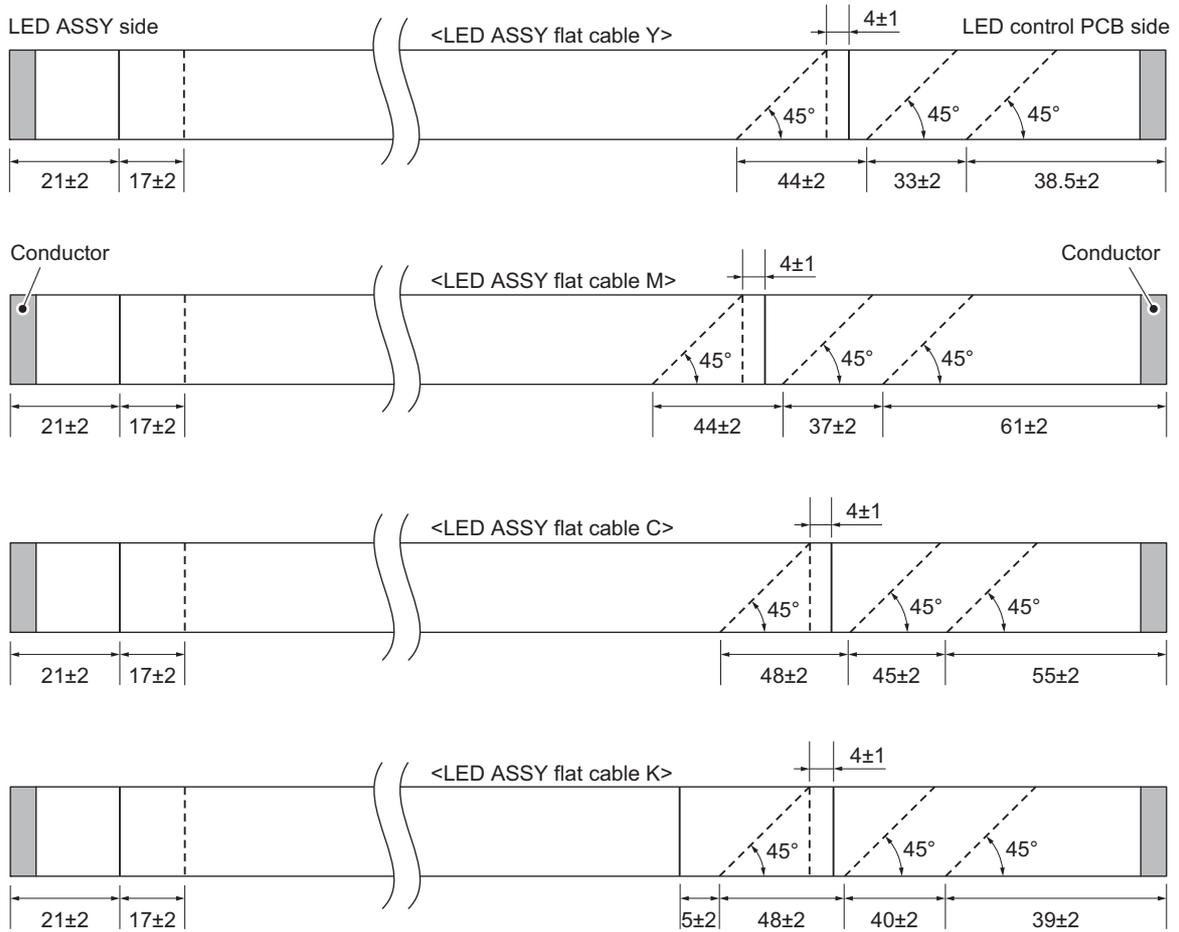


Fig. 3-68

9.22 MP paper guide ASSY / MP cover ASSY / USB host PCB (Only for MP models)

- (1) Open the MP cover ASSY.
- (2) Release each Boss of the MP paper guide ASSY from each Rib of the MP cover ASSY. Pull the MP paper guide ASSY to remove it in the direction of the arrow.

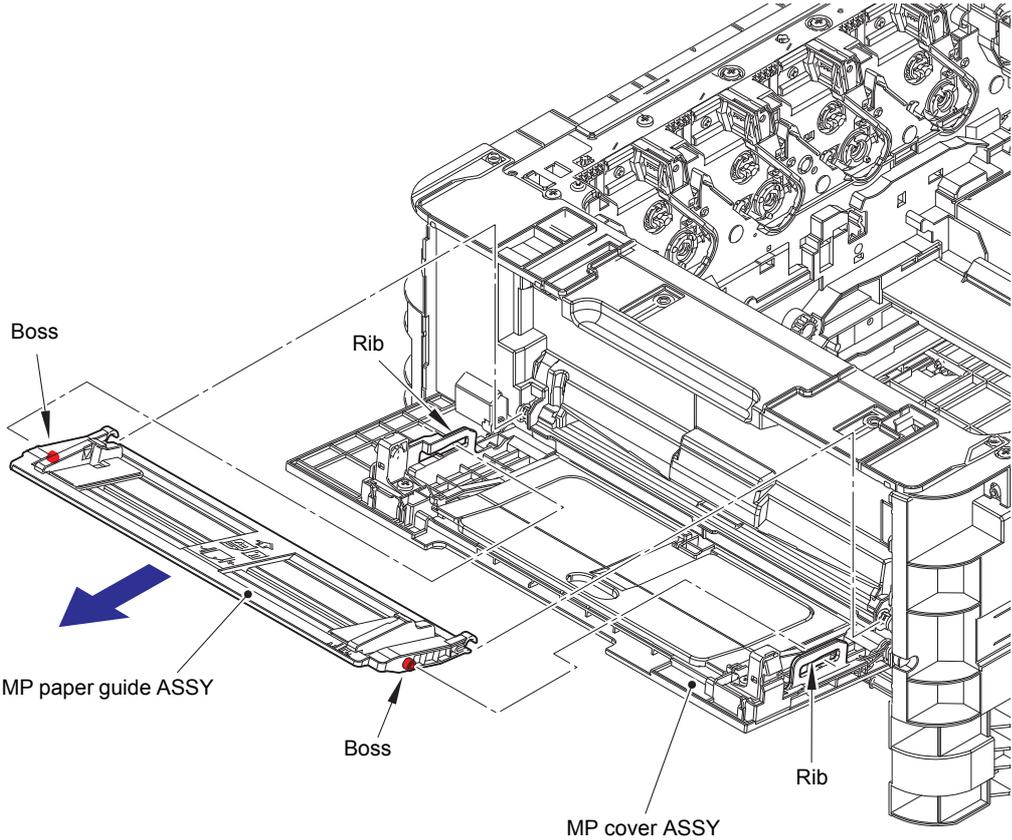


Fig. 3-69

- (3) Remove the Hook part of the MP damper spring from the MP cover ASSY.
- (4) Release the Boss on the left side of the MP cover ASSY, and remove the MP cover ASSY in the direction of the arrow.

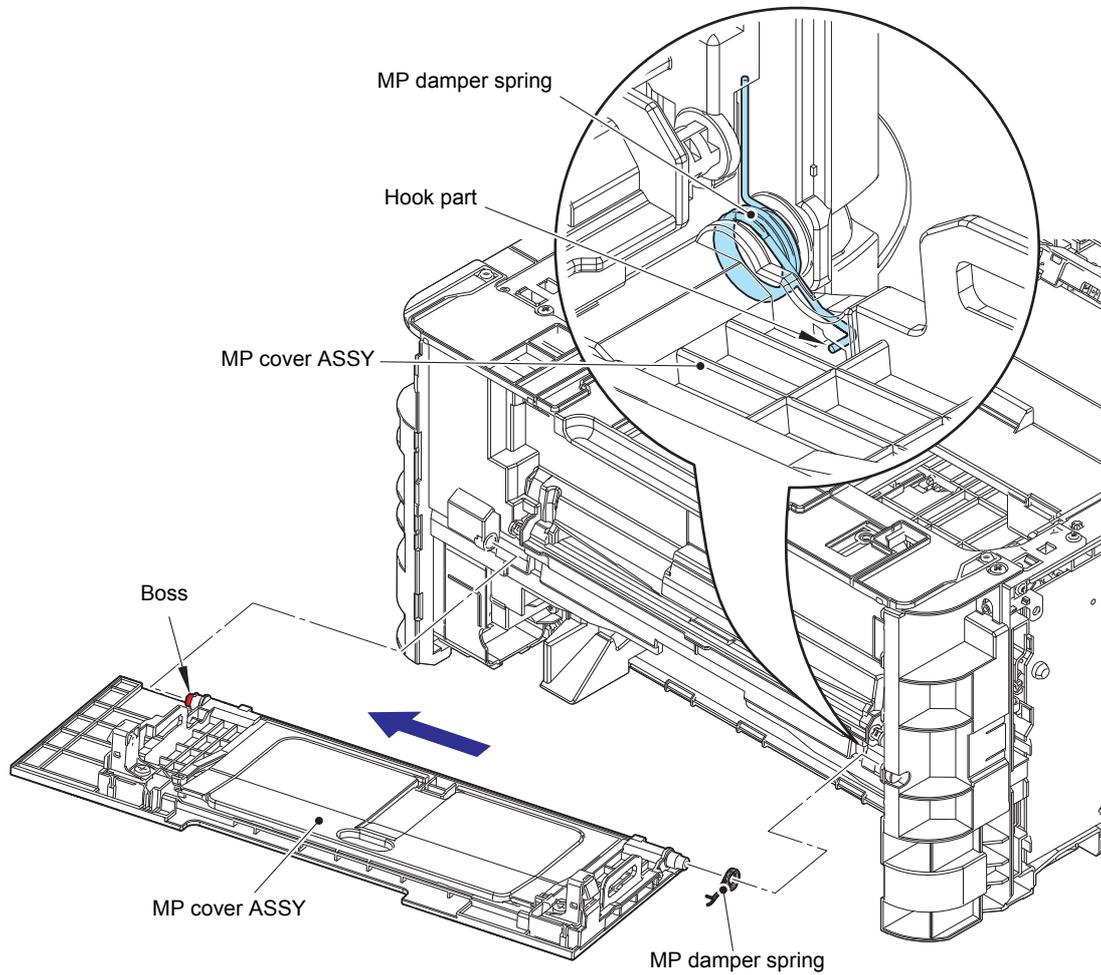


Fig. 3-70

- (5) Disconnect the USB host harness from the Main PCB, and release it from the securing fixtures.

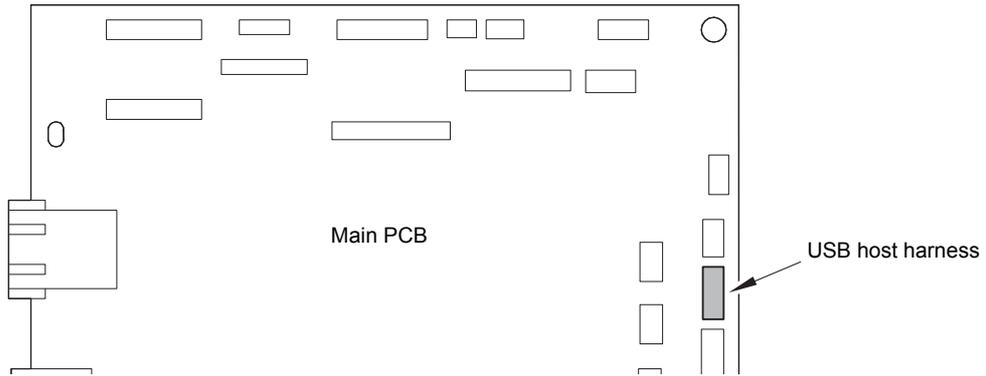


Fig. 3-71

Harness routing: Refer to **"10. Main PCB, Cartridge sensor relay PCB"**.

- (6) Remove the two Taptite pan B M4x14 screws to remove the MP maintenance cover from the Inner front cover.
- (7) Disconnect the USB host harness from the USB host PCB.
- (8) Remove the Taptite pan (washer) B M4x12DA screw and the two Taptite bind B M4x12 screws. Release each Hook to remove the Inner front cover.

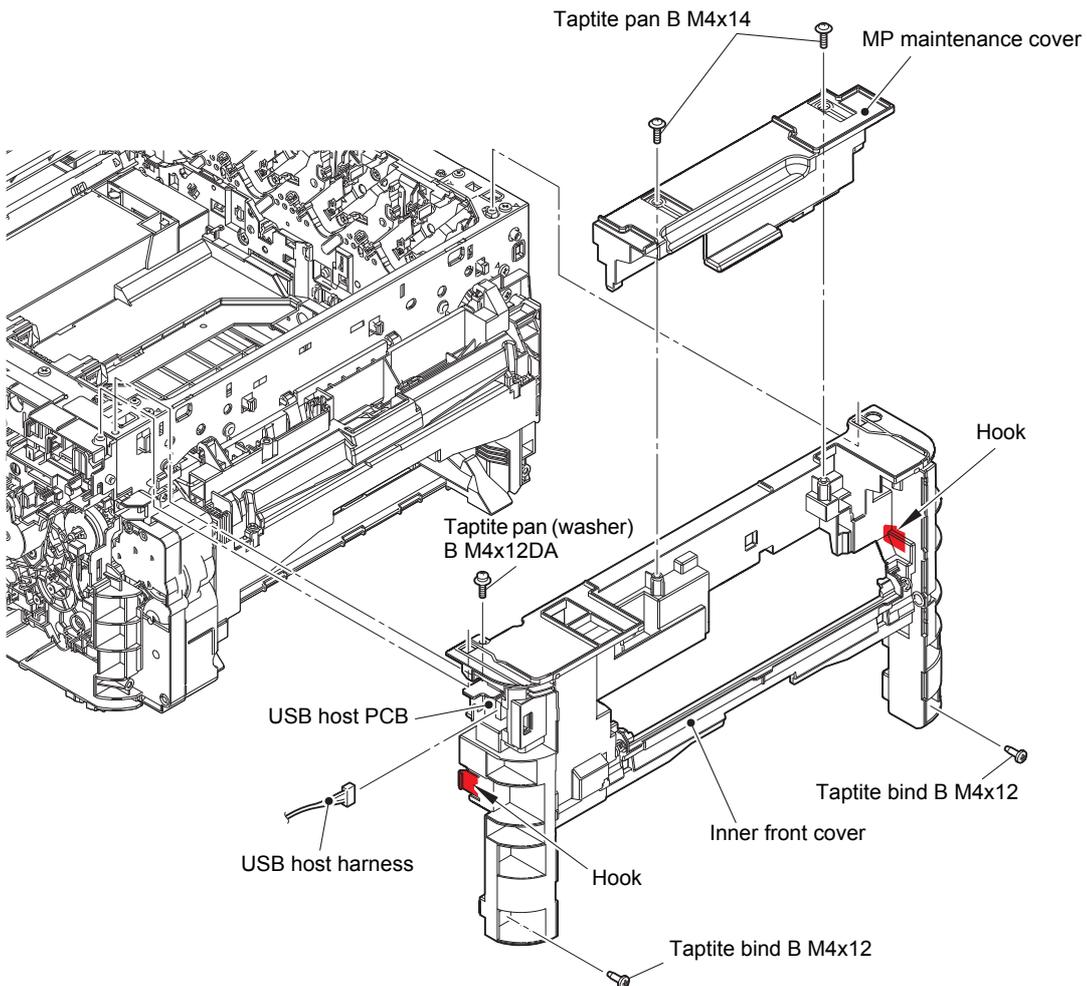


Fig. 3-72

- (9) Remove the USB ground plate from the Boss of the Inner front cover. Remove the two Taptite bind B M3x10 screws to remove the USB holder ASSY from the Inner front cover.
- (10) Remove the two Screw pan (S/P washer) M3x12DB screws to remove the USB host PCB and the USB ground plate from the USB holder ASSY.

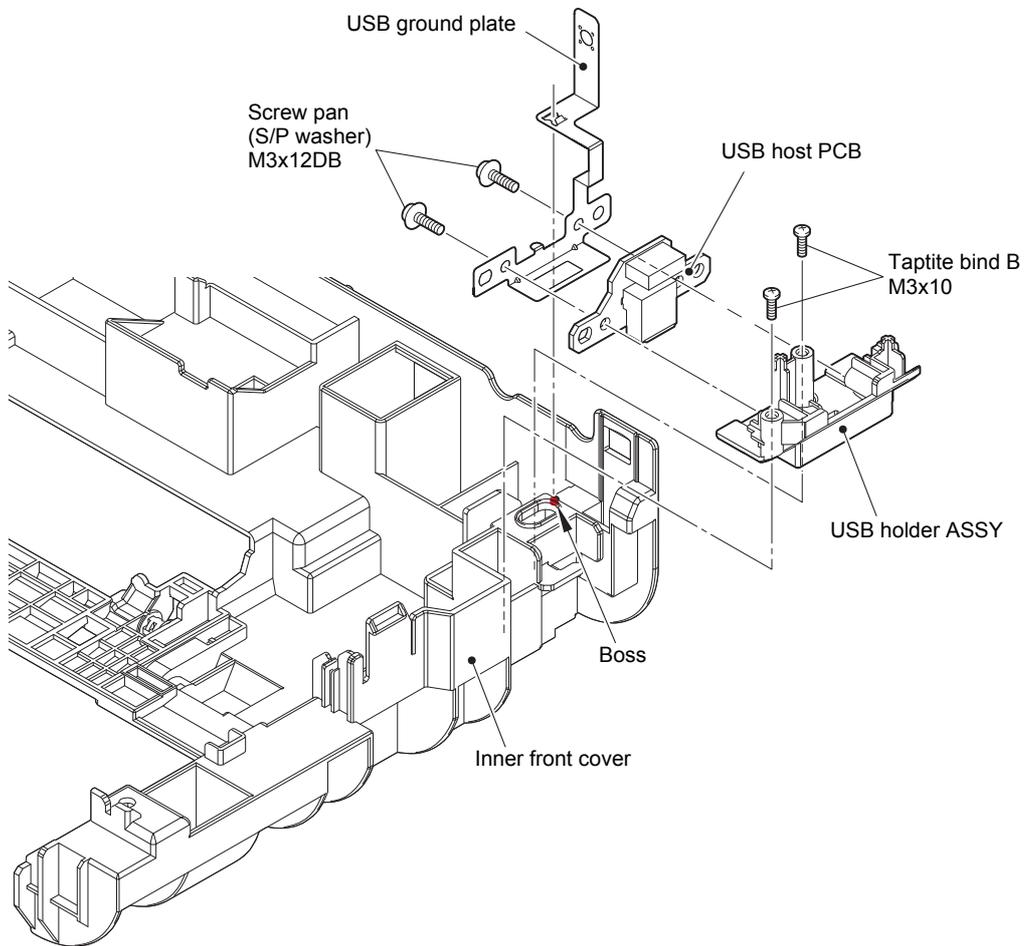


Fig. 3-73

9.23 MP roller holder ASSY (Only for MP models)

- (1) Release the Hook, and slide the MP holder bushing in the direction of arrow 1a.
- (2) Slide the MP roller holder ASSY in the direction of arrow 2b, and rotate it in the direction of arrow 2c to remove it upward.

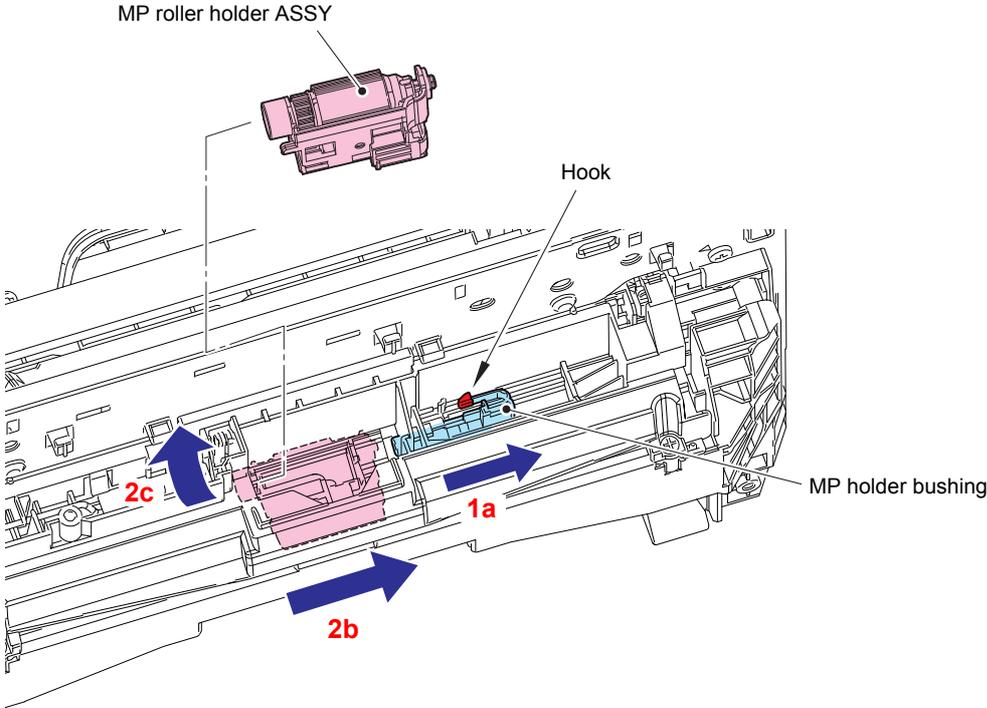


Fig. 3-74

- (3) Remove each hook, and turn the MP separation pad ASSY upright to remove it upward.
- (4) Remove the MP separation pad spring from each Pin.

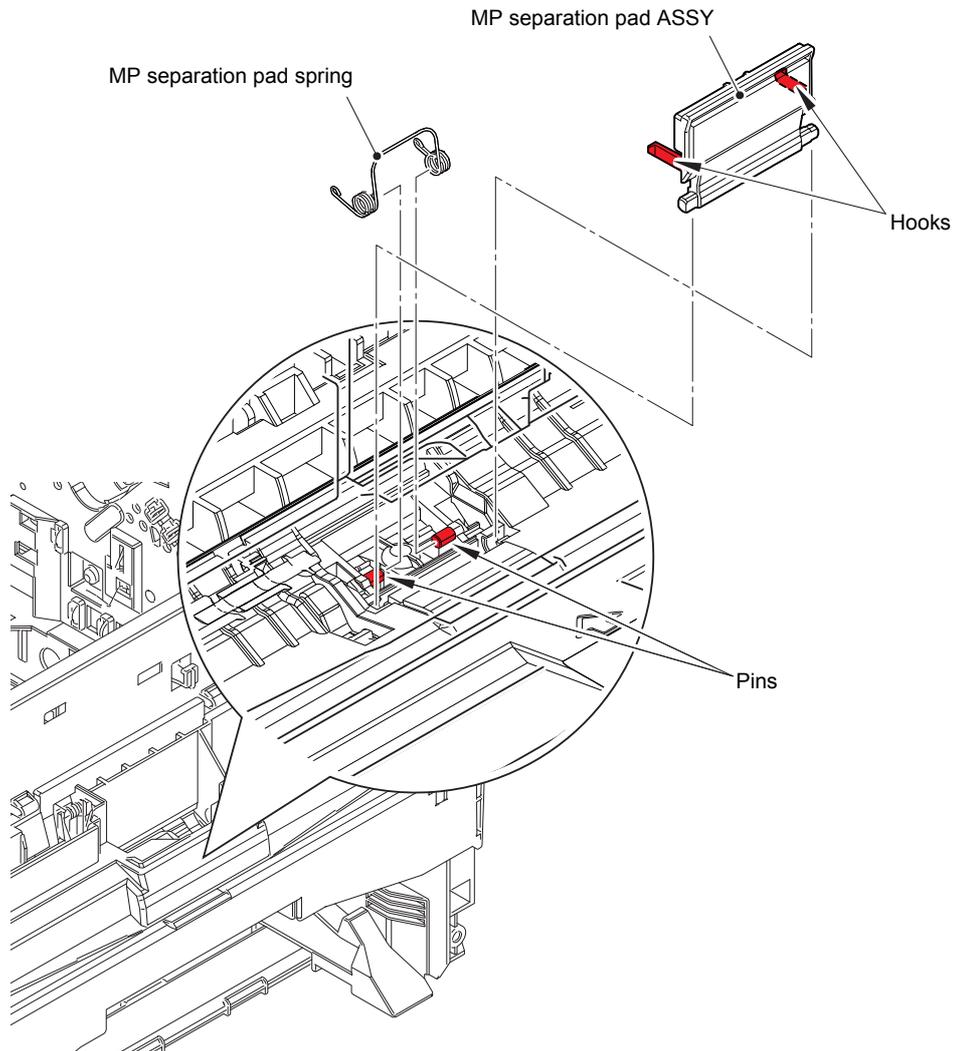


Fig. 3-75

9.24 MP unit (Only for MP models)

- (1) Disconnect the MP paper empty sensor harness, the MP registration sensor harness, and the MP solenoid harness from the Main PCB, and release them from the securing fixtures.

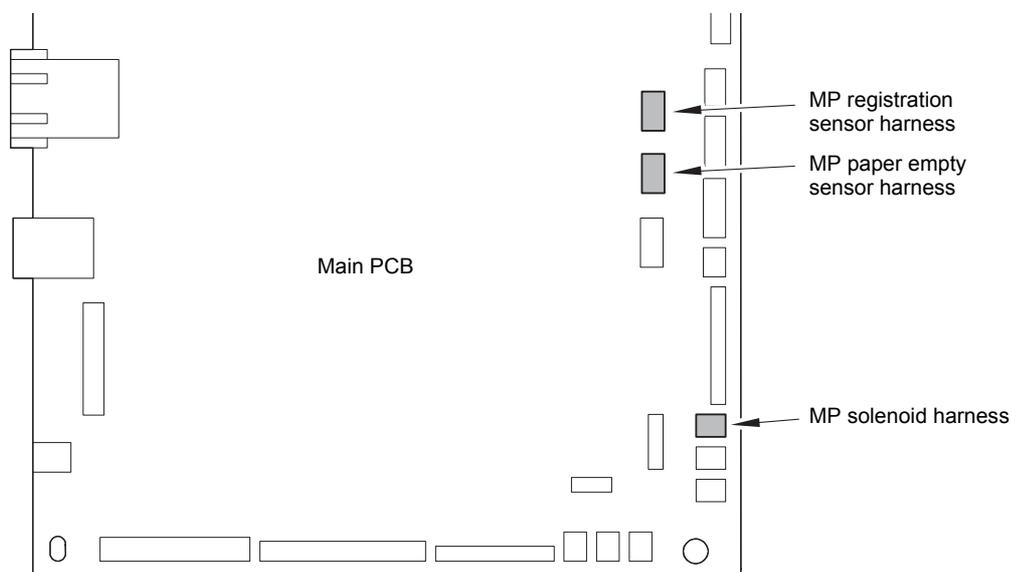


Fig. 3-76

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

- (2) Remove the two Taptite bind B M4x12 (black) screws. Release each Hook to remove the T1 paper feed guide from the MP unit.
- (3) Remove the four Taptite bind B M4x12 screws. Release each Hook to remove the MP unit.

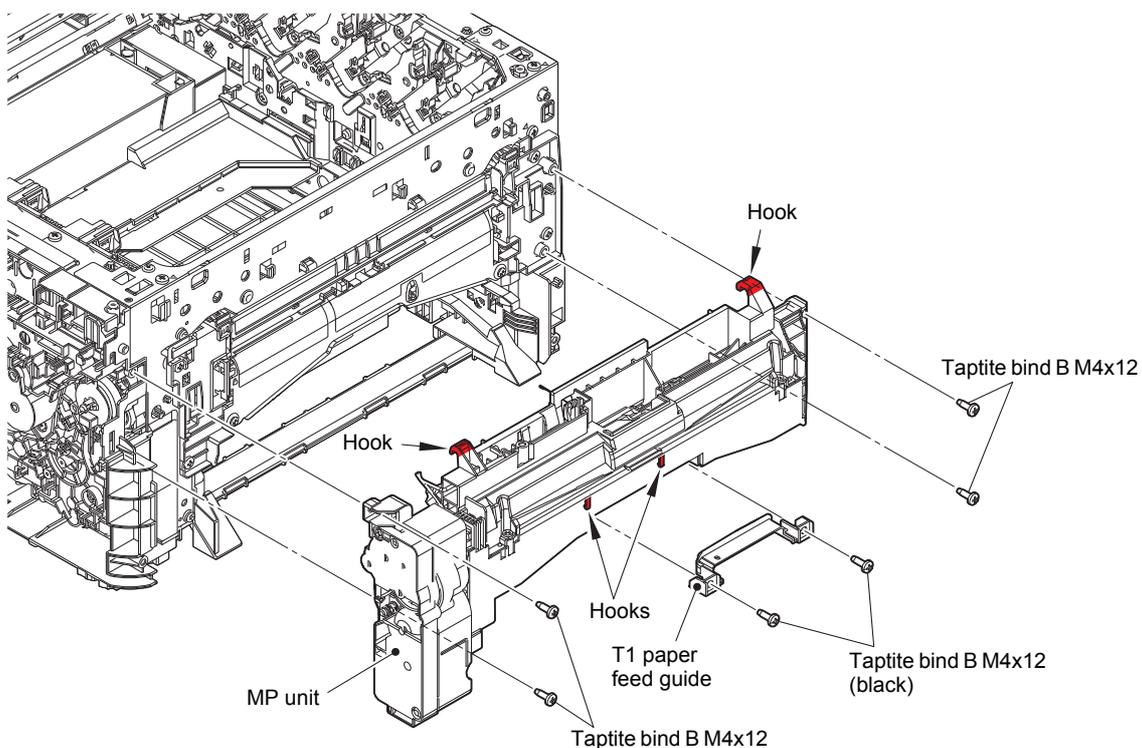


Fig. 3-77

9.25 Manual feed cover ASSY / USB host PCB

(Only for Manual feed models)

- (1) Disconnect the USB host harness from the Main PCB, and release it from the securing fixtures.
- (2) Disconnect the USB host harness from the USB host PCB.

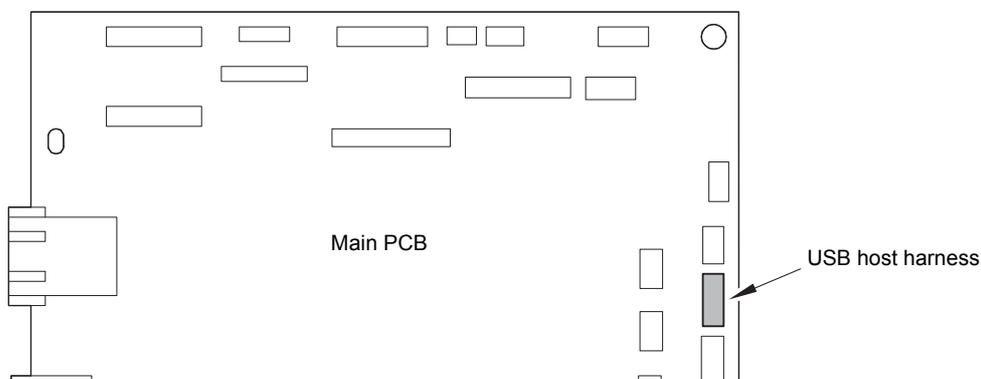


Fig. 3-78

- (3) Release each Hook to remove the Inner front cover from each Boss of the machine.

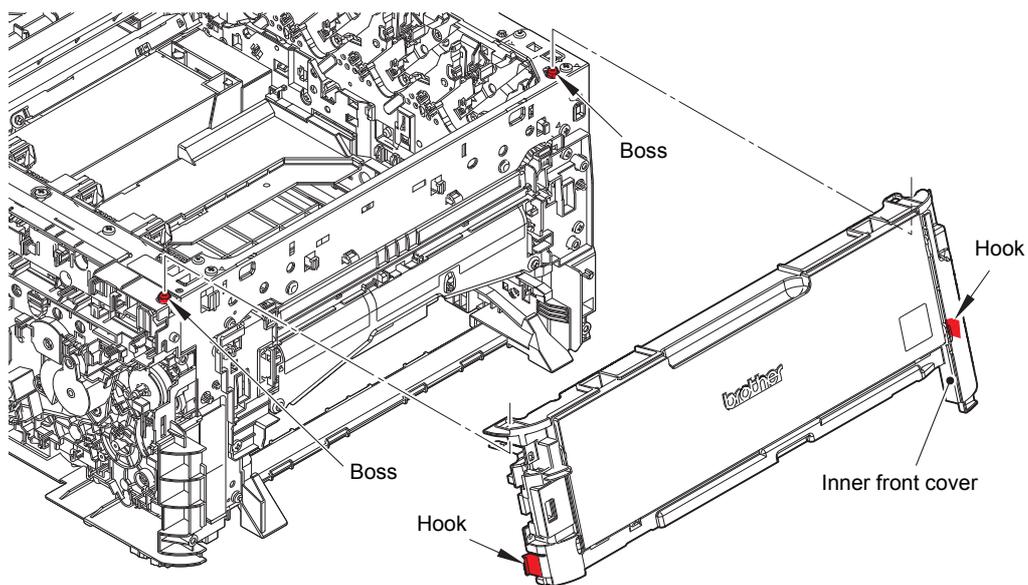


Fig. 3-79

- (4) Open the Manual feed cover ASSY. Release each Boss to remove the Manual feed cover ASSY from the Inner front cover.

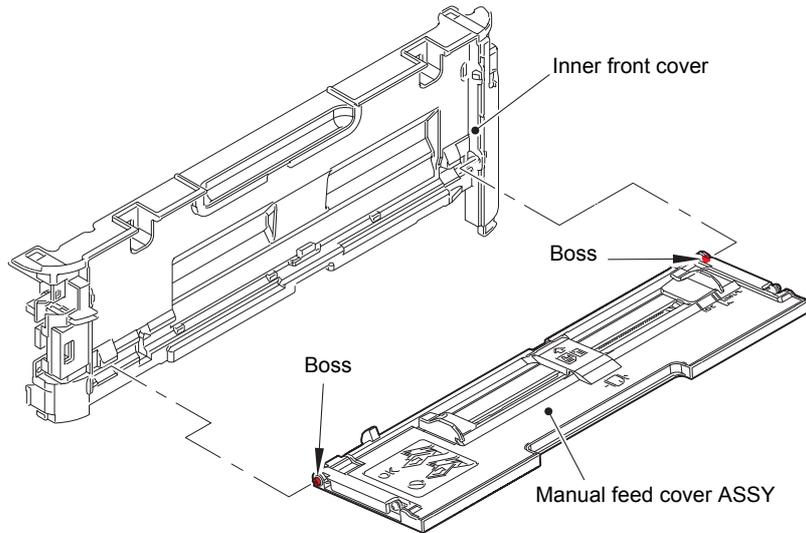


Fig. 3-80

- (5) Remove the two Taprite bind B M3x10 screws to remove the USB holder ASSY from the Inner front cover.
- (6) Remove the two Screw pan (S/P washer) M3x12DB screws to remove the USB ground plate and the USB host PCB from the USB holder ASSY.

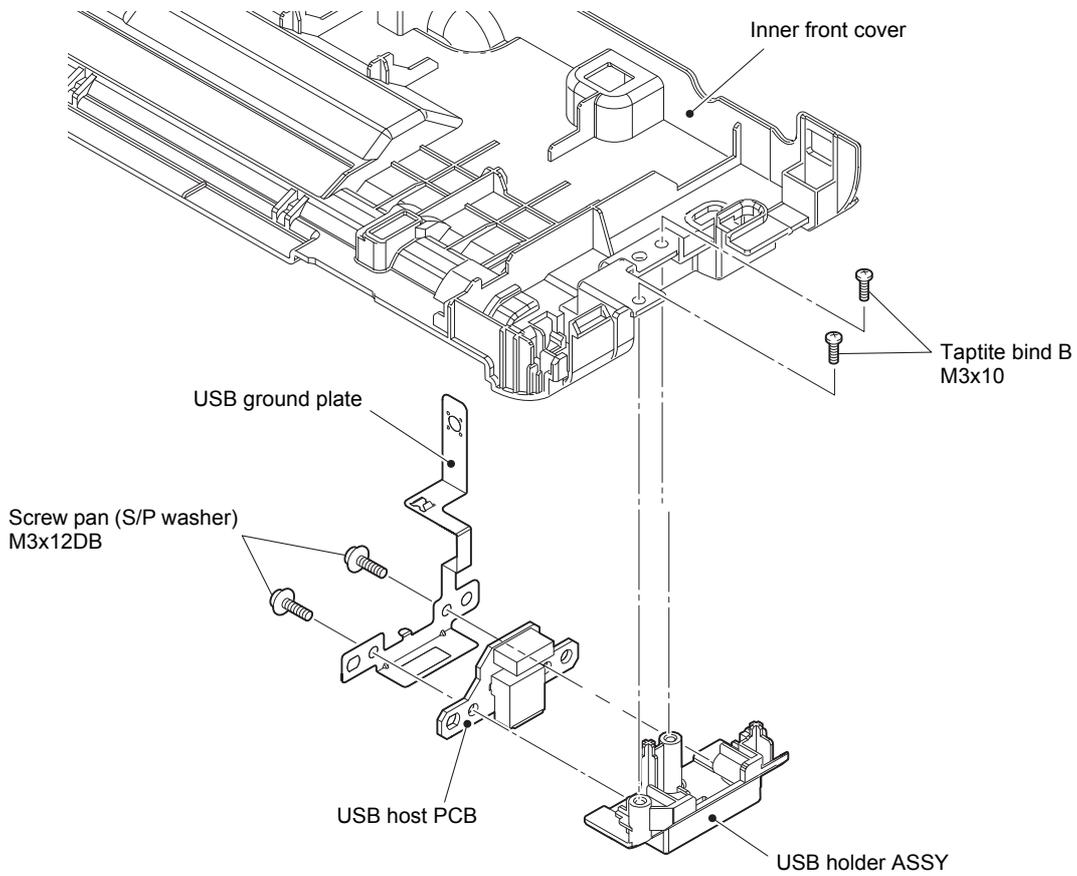


Fig. 3-81

9.26 High-voltage power supply PCB / Develop release sensor PCB

- (1) Release the Hook to slide the HVPS FFC cover in the direction of arrow A, and release each Rib to remove the HVPS FFC cover in the direction of arrow B.

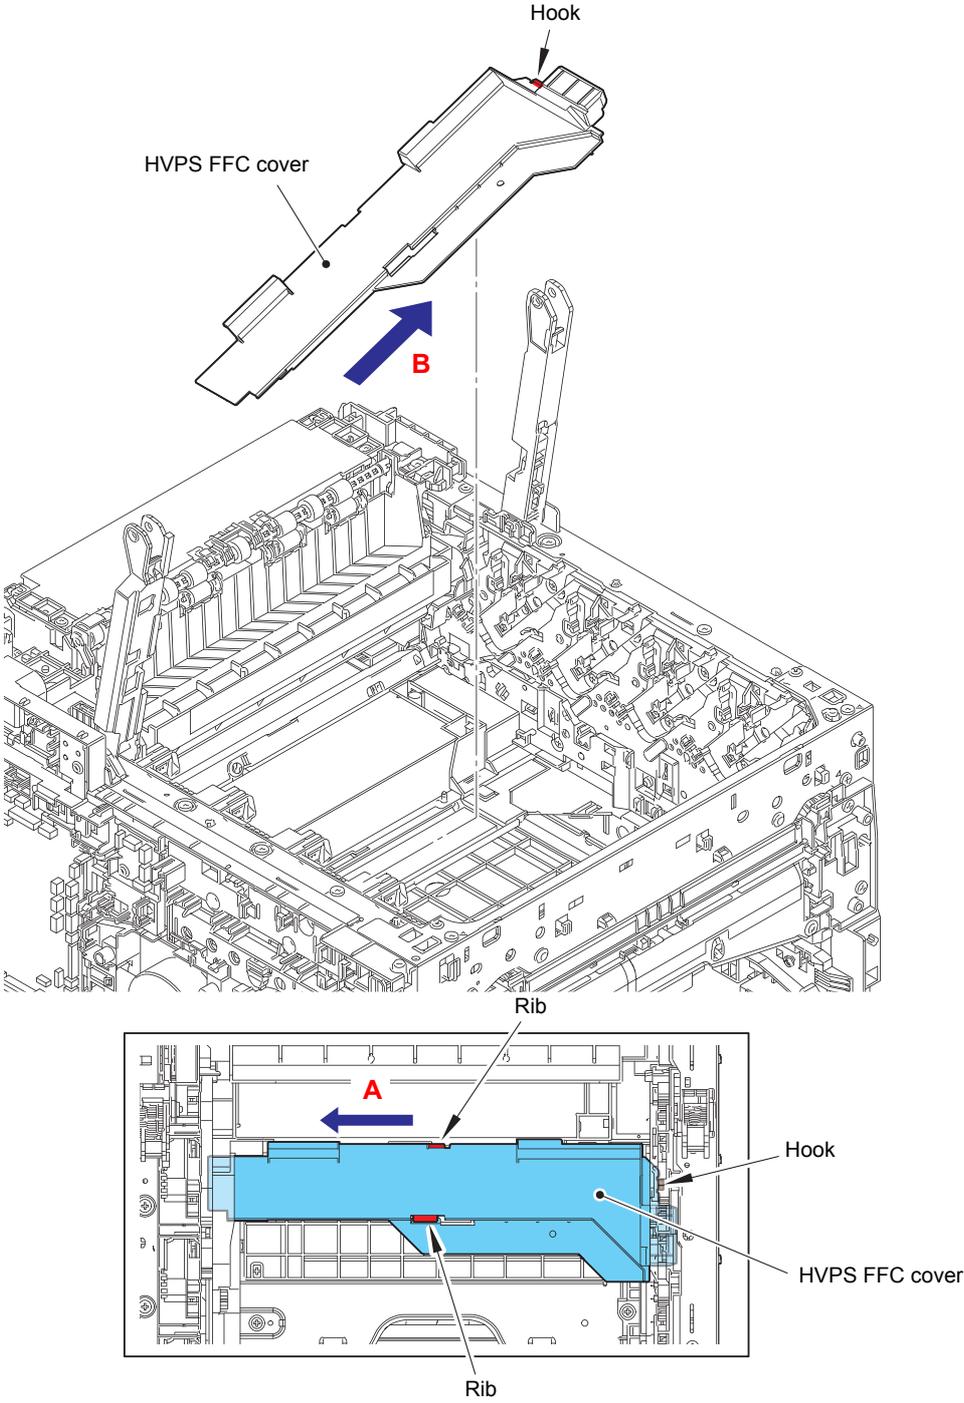


Fig. 3-82

- (2) Remove the four HVPS chips.
- (3) Remove the Taptite pan (washer) B M4x12DA screw and the Taptite cup S M3x8 SR screw to remove the HVPS ground plate front.
- (4) Remove the Taptite pan (washer) B M4x12DA to remove the HVPS ground plate rear.

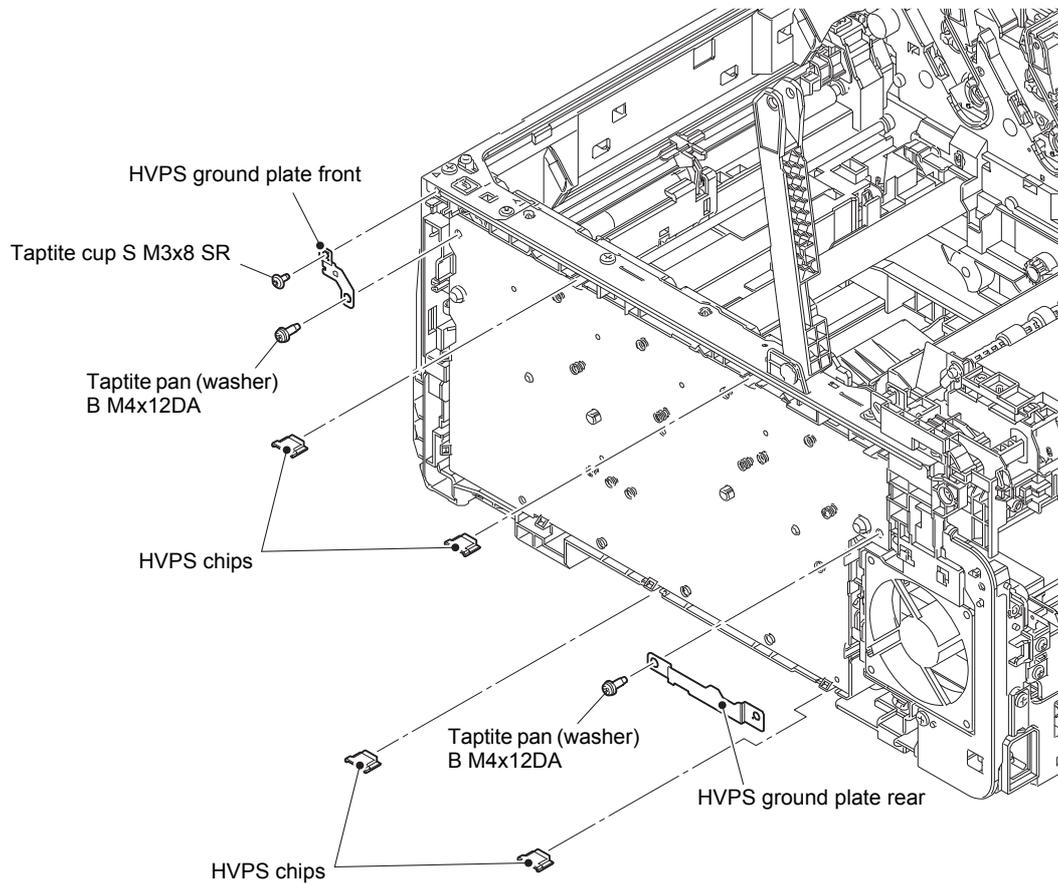


Fig. 3-83

- (5) Release the High-voltage power supply flat cable from the securing fixtures inside the machine and extend the folds. Remove the two Taptite bind B M4x12 screws. Release each Hook to remove the High-voltage power supply PCB. Disconnect the HVPS harness, the Develop release sensor harness, and the Fan harness from the High-voltage power supply PCB. Disconnect the High-voltage power supply flat cable from the High-voltage power supply PCB.
- (6) Release the Hook to remove the Develop release sensor PCB.

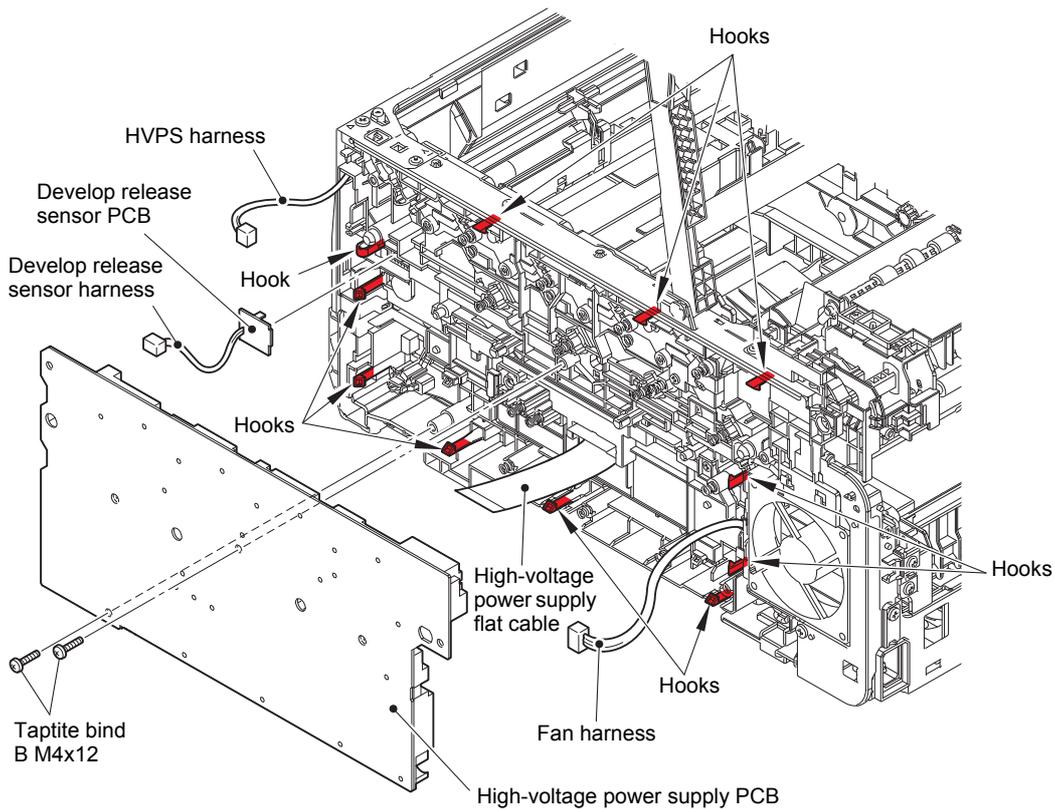


Fig. 3-84

Harness routing: Refer to ["11. High-voltage power supply PCB, Fan harness, LED ground wire"](#).

Assembling Note:

- After attaching the High-voltage power supply PCB, check whether the Electrodes inside the machine are not dropping or not get caught by pushing the Electrodes inside the machine.
- When connecting the High-voltage power supply flat cable, pull out the High-voltage power supply flat cable from the machine and then connect it to the High-voltage power supply PCB. Then, attach the High-voltage power supply PCB to the machine while pulling the High-voltage power supply flat cable to the machine side (Refer to ["13. High-voltage power supply flat cable"](#).)

9.27 Fan

- (1) Release the Fan harness from the securing fixtures. Release each Hook to remove the Fan.

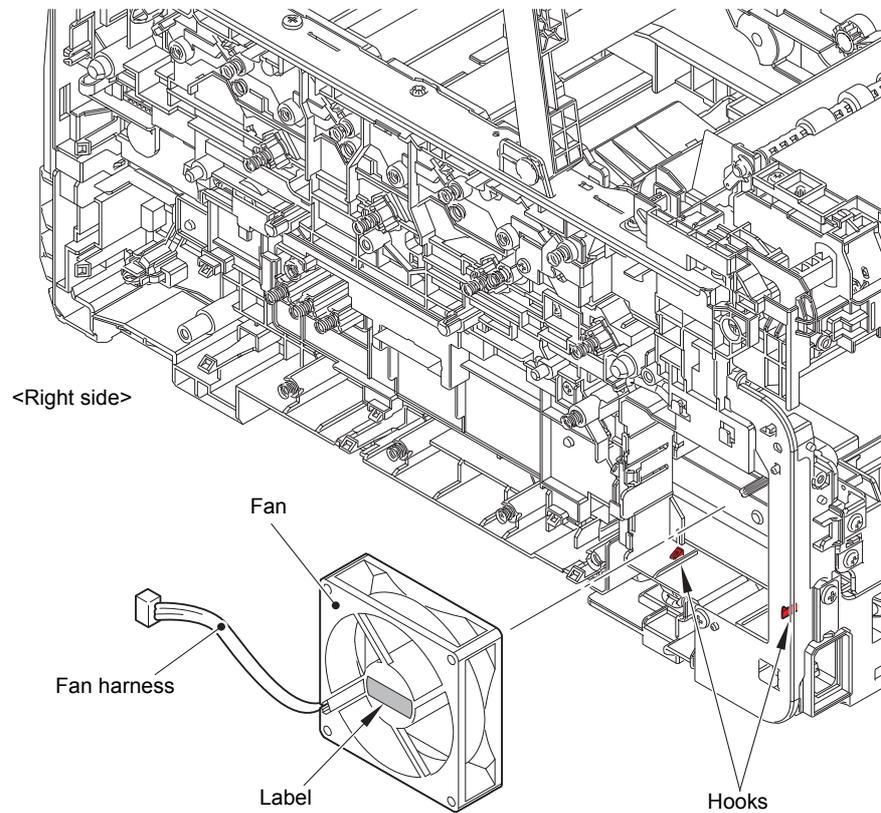


Fig. 3-85

Harness routing: Refer to "11. High-voltage power supply PCB, Fan harness, LED ground wire".

Assembling Note:

- When assembling the Fan, be sure to assemble it in a way that the Label side faces out.

9.28 WLAN PCB

- (1) Release each Hook to remove the WLAN cap from the Line holder upper.
- (2) Disconnect the WLAN PCB from the Main PCB.

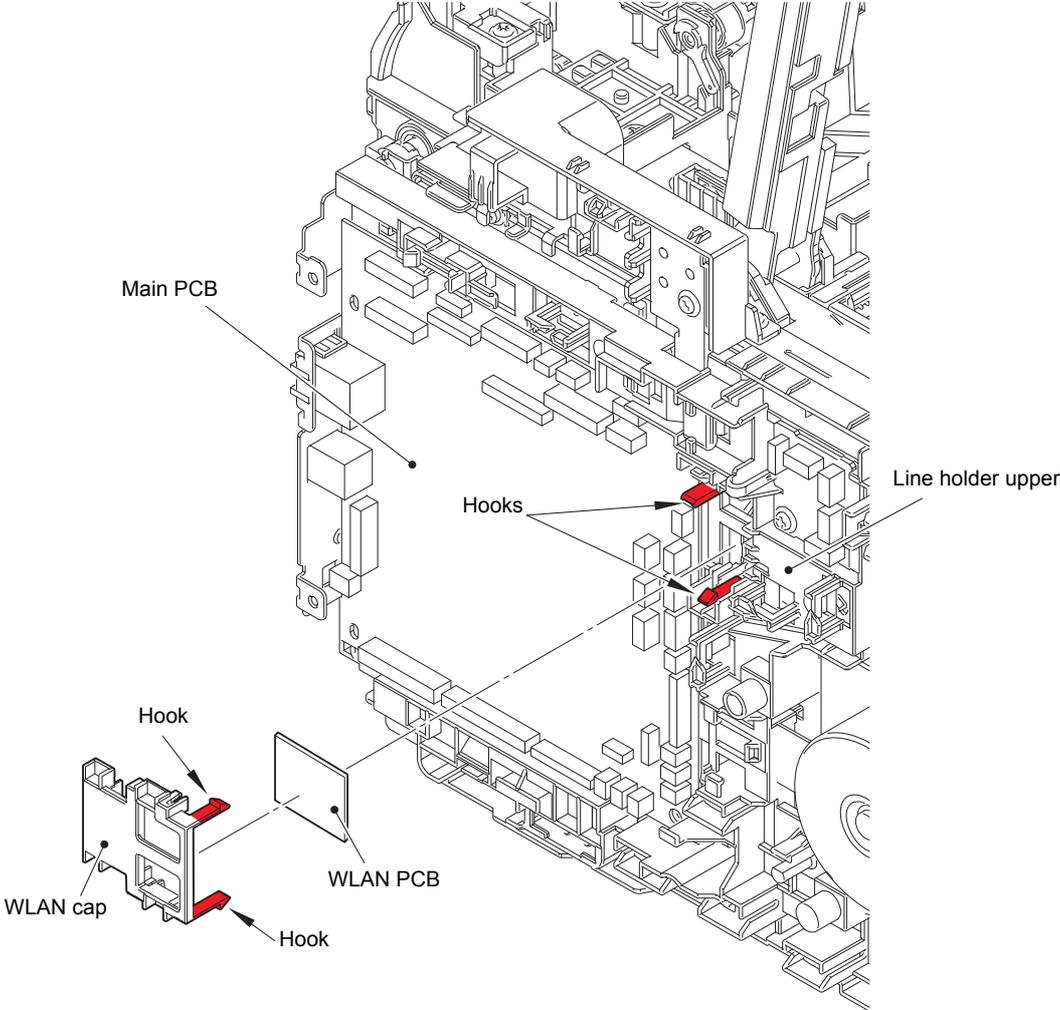


Fig. 3-86

9.29 Main PCB

(1) Disconnect all the Harnesses and all the Flat cables that are connected to the Main PCB.

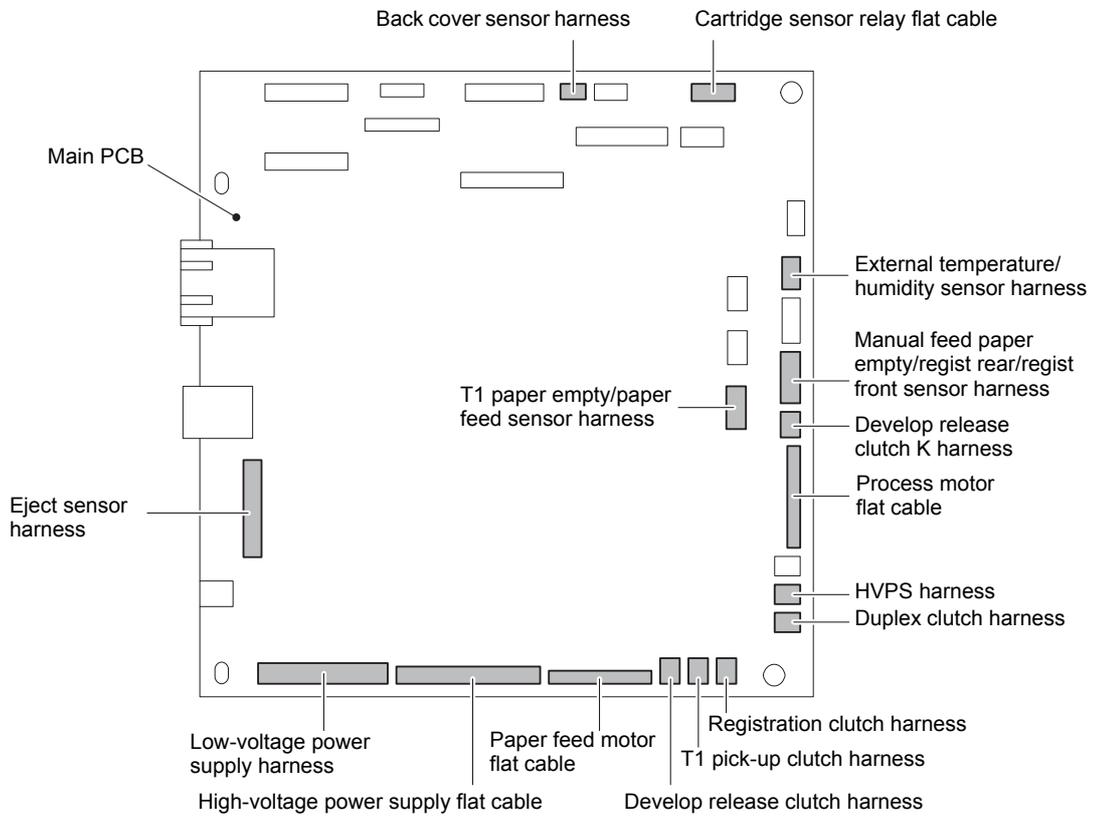


Fig. 3-87

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

- (2) Remove the three Screw cup M3x8 (black) screws to remove the Main PCB from the Process drive plate.
- (3) Remove the Main PCB insulation sheet from the Process drive plate.

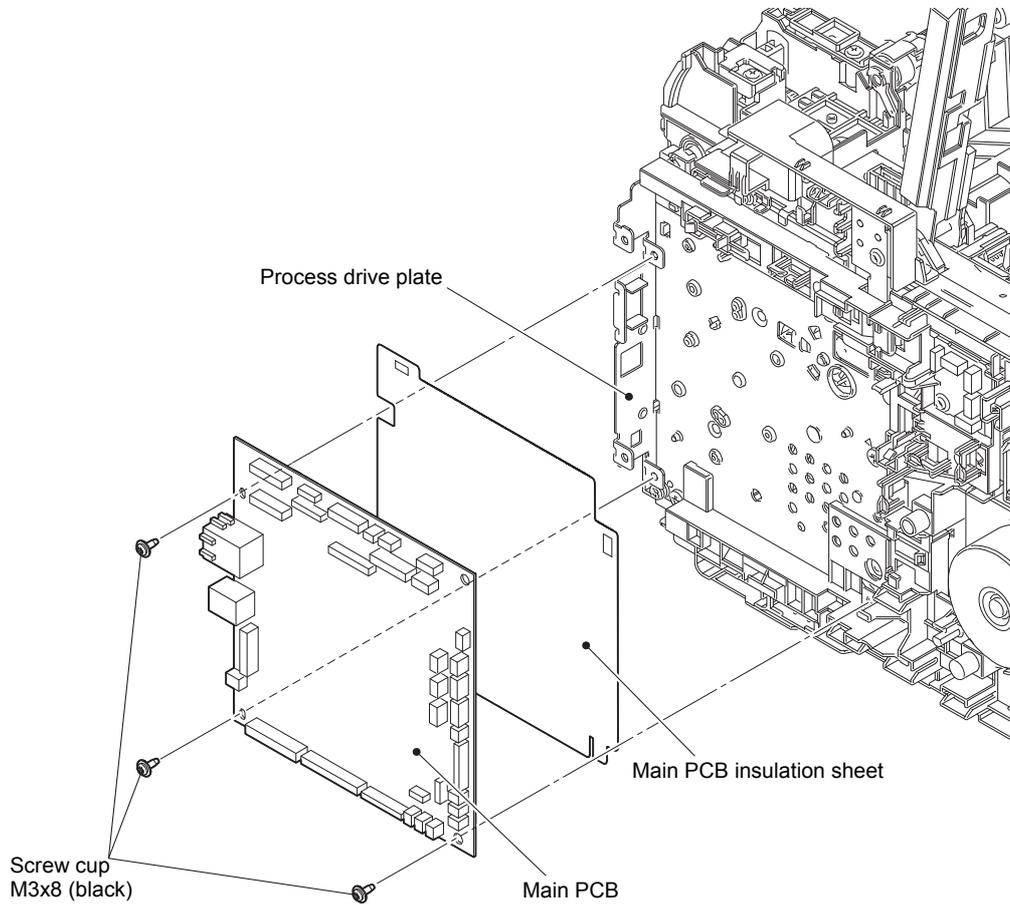


Fig. 3-88

9.30 Cartridge sensor relay flat cable

- (1) Release the Cartridge sensor relay flat cable from the securing fixtures. Disconnect the Cartridge sensor relay flat cable from the Cartridge sensor relay PCB.
- (2) Disconnect all the Harnesses that are connected to the Cartridge sensor relay PCB.
- (3) Remove the Screw cup M3x8 (black) screw. Release the Hook to remove the Cartridge sensor relay PCB from the Line holder upper.

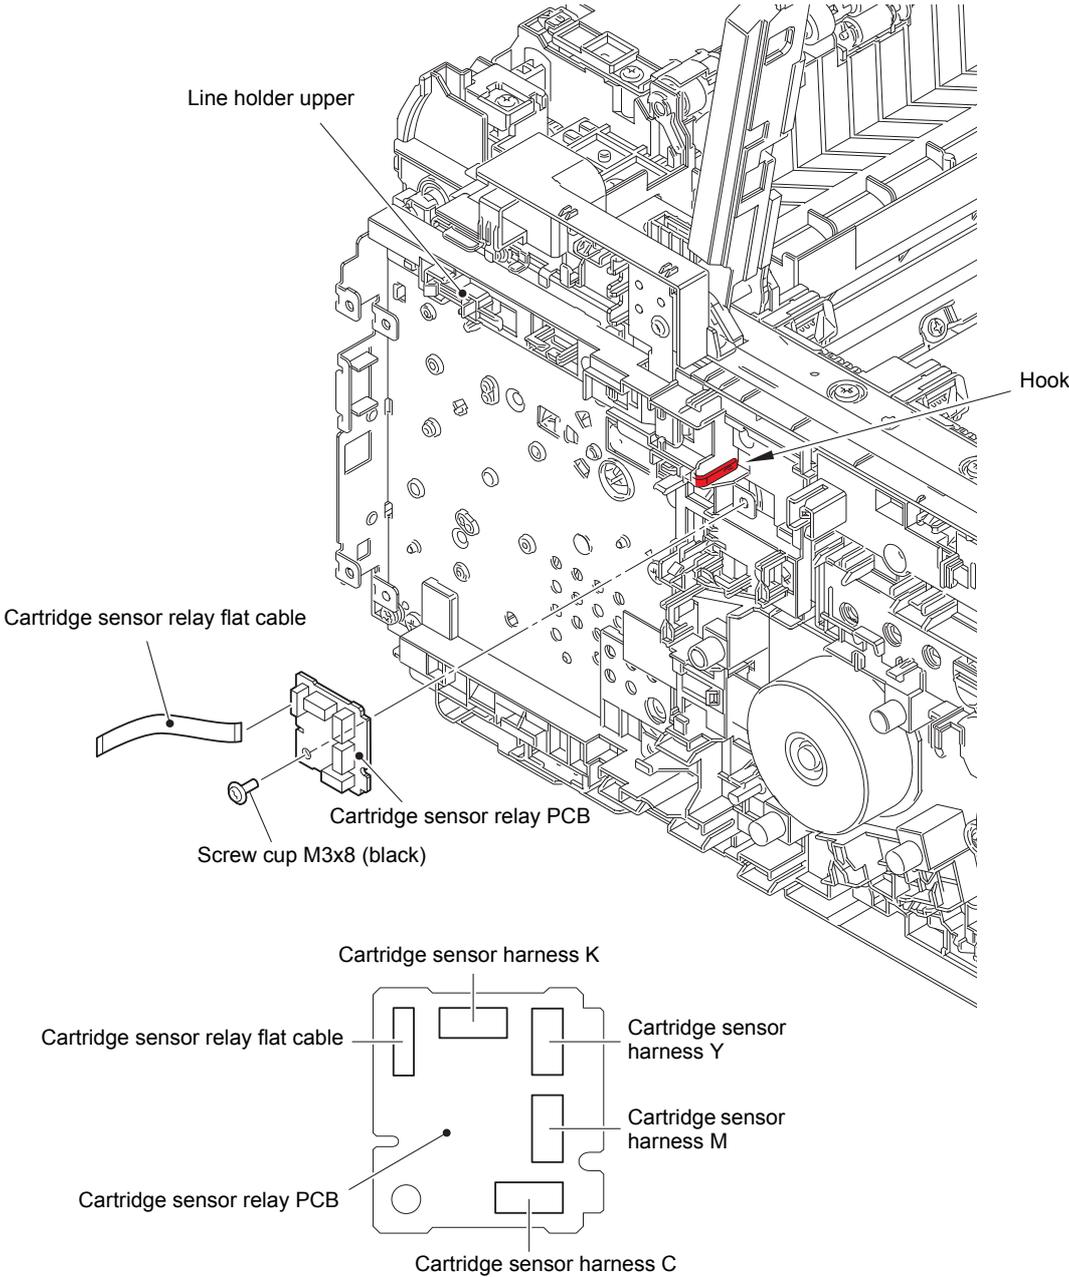


Fig. 3-89

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

9.31 Develop release clutch / Process drive unit / High-voltage power supply flat cable / Process motor flat cable / Paper feed motor flat cable

- (1) Release the Back cover sensor harness, the Cartridge sensor harness K, the Develop release clutch K harness, the External temperature/humidity sensor harness, the T1 paper empty/paper feed sensor harness, and the Manual feed paper empty/regist rear/regist front sensor harness from the Line holder upper.
- (2) Release each Hook to remove the Line holder upper in the direction of the arrow.

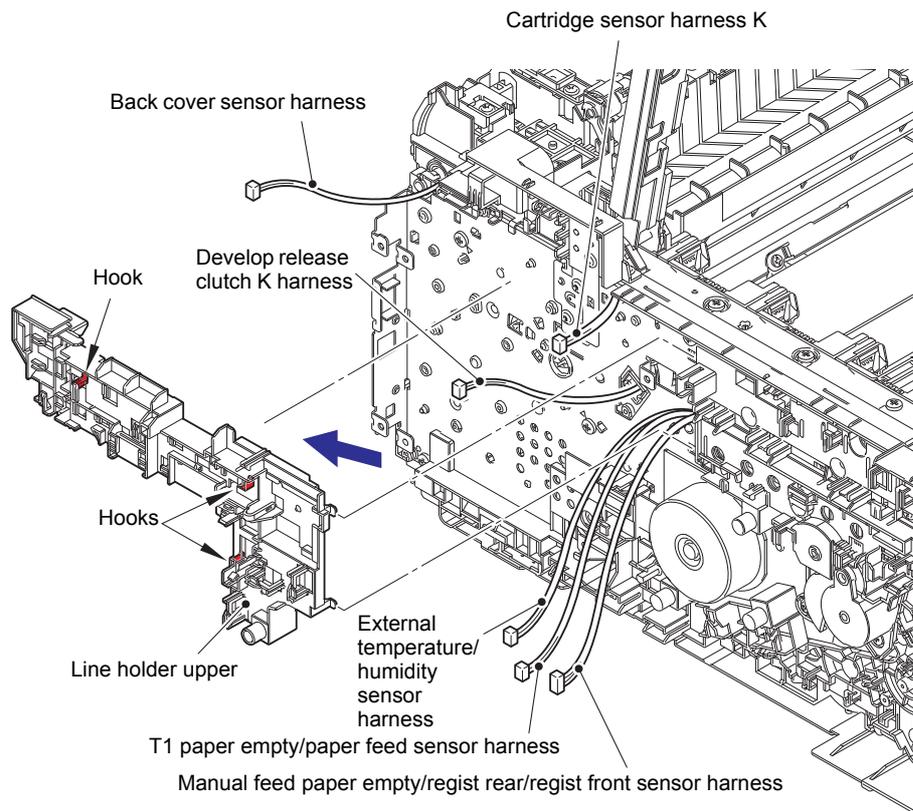


Fig. 3-90

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

- (3) Release the Duplex clutch harness, the Develop release clutch harness, the HVPS harness, the T1 pick-up clutch harness, and the Registration clutch harness from the Line holder lower.

Assembling Note:

- When wiring the Duplex clutch harness, make sure that the clutch connection part of the Duplex clutch harness does not stretch by pulling too much.

- (4) Release the Hook to remove the Line holder lower in the direction of the arrow. Pull out the Process motor flat cable and the Paper feed motor flat cable through each Flat core on the Line holder lower.

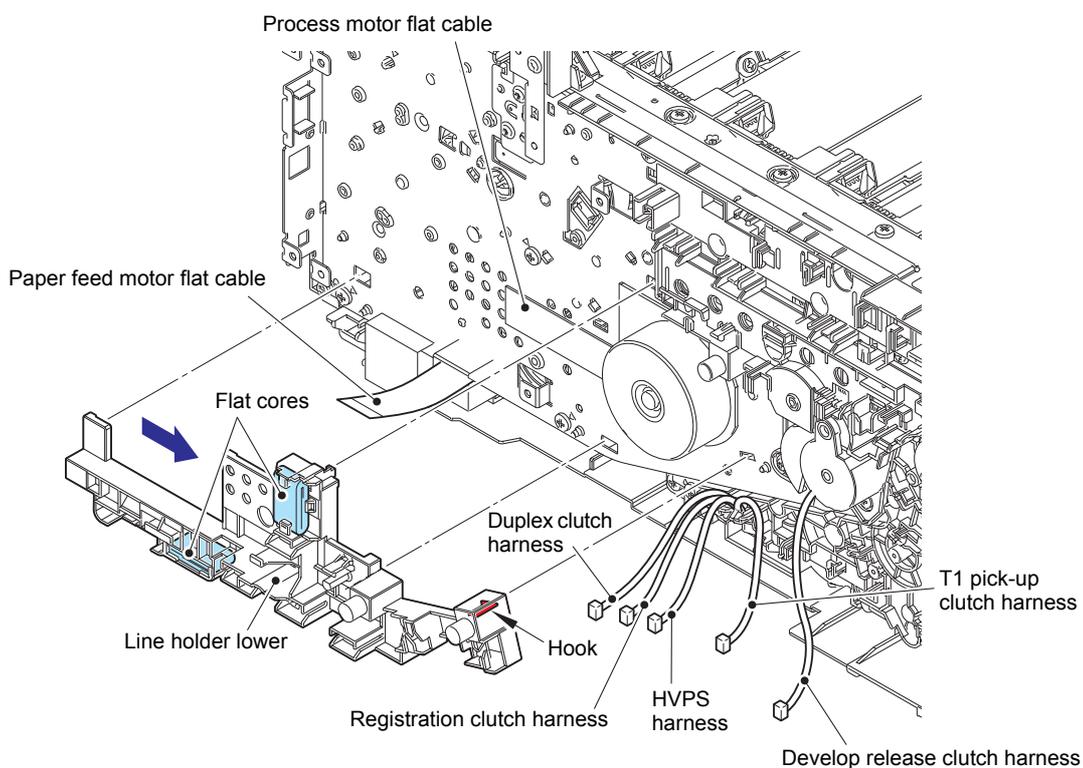


Fig. 3-91

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

- (5) Remove the Taptite cup S M3x8 SR screw. Release the Hook to remove the DEV clutch cover. Remove the DEV release drive gear Z33 and the Develop release clutch.

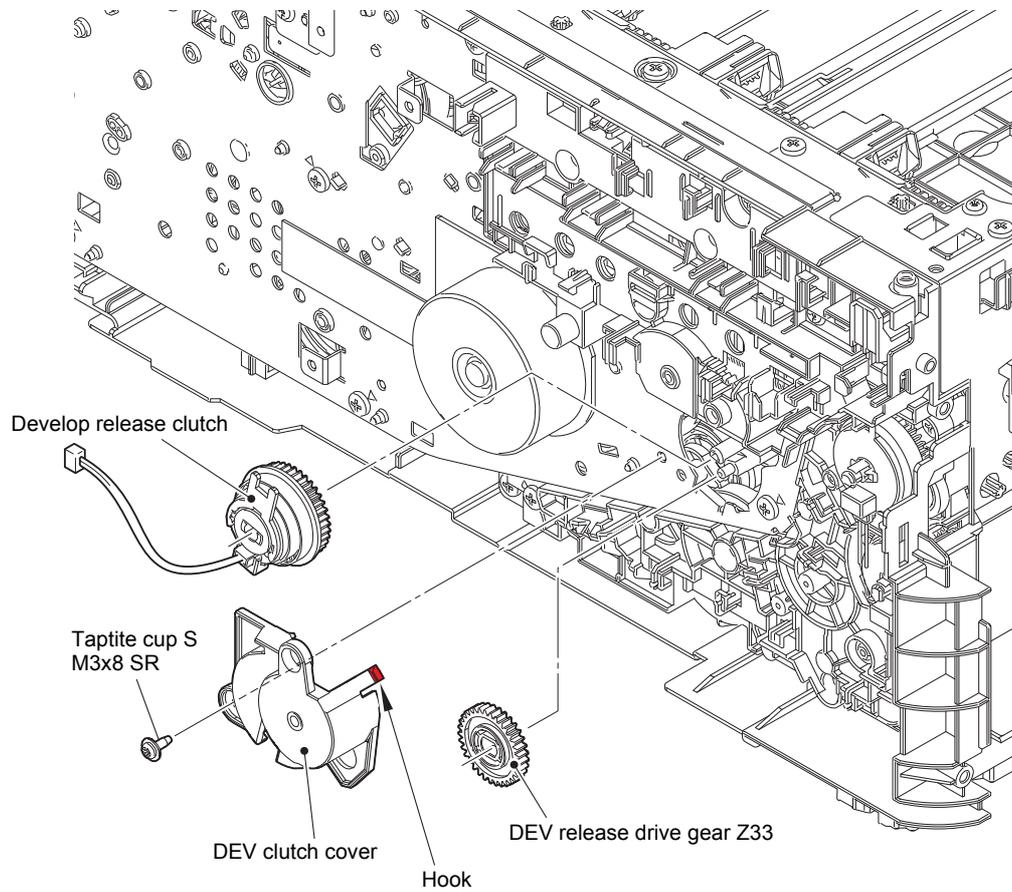


Fig. 3-92

Assembling Note:

- Raise the Damper L ASSY. Rotate the DEV release gear Z34 counterclockwise until it stops. Align the end of the DEV clutch cam with the reference line of the DEV cam cover, and then attach the DEV release drive gear Z33. If you neglect to do this, the error code 6E00 occurs.

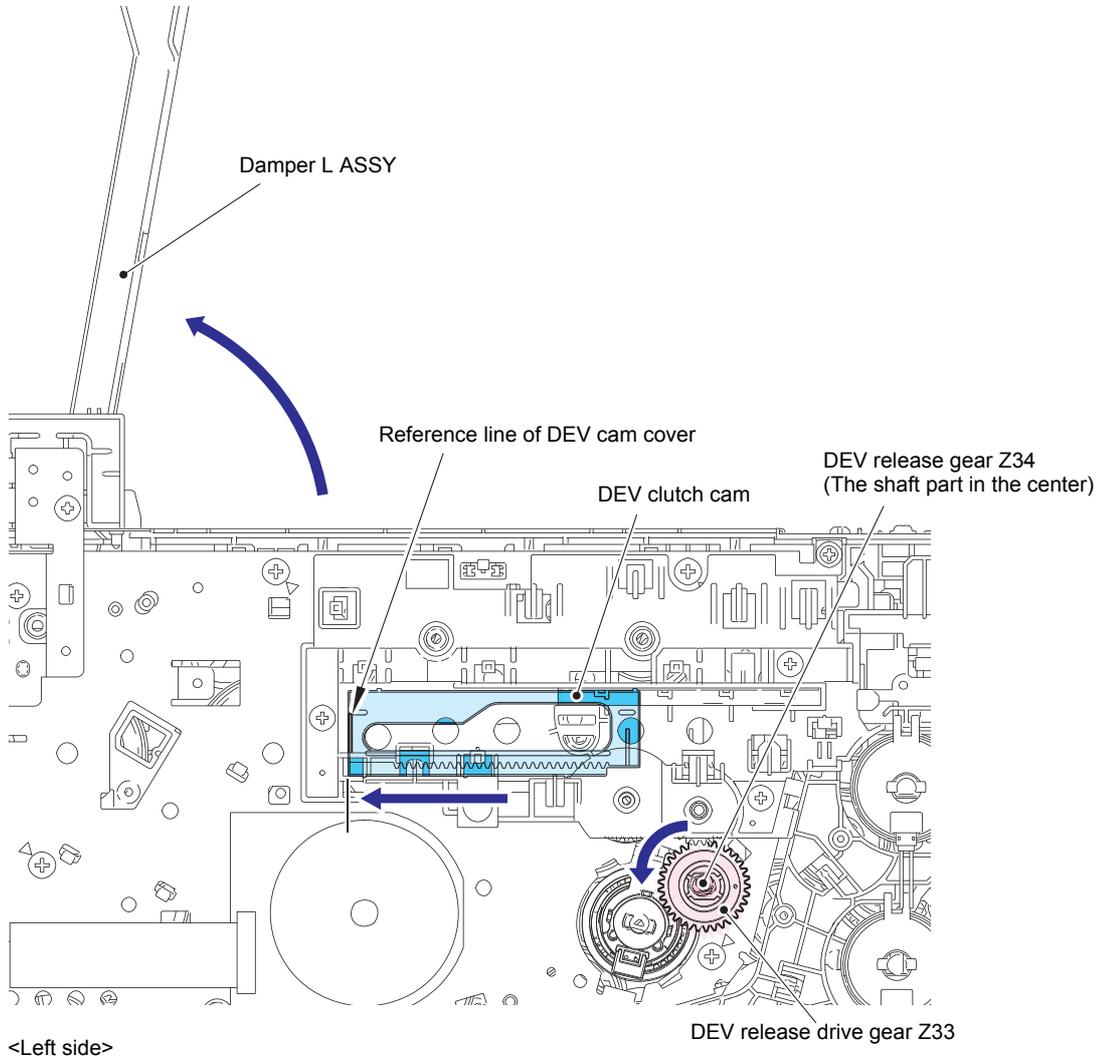


Fig. 3-93

- (6) Release the Cartridge sensor harness C/M/Y, the HVPS harness, the External temperature/humidity sensor harness, the T1 paper empty/paper feed sensor harness, and the Manual feed paper empty/regist rear/regist front sensor harness from the securing fixtures.
- (7) Remove the two Taptite cup S M3x8 SR screws, the Taptite pan (washer) B M4x12DA screw, the six Taptite bind B M4x12 (A) screws, and the Taptite bind B M4x12 (B) screw.
- (8) Raise the Damper L ASSY to remove the Process drive unit.
- (9) Release the High-voltage power supply flat cable from the securing fixtures and then remove it from the machine.
- (10) Release the Lock to disconnect the Process motor flat cable from the Process motor.

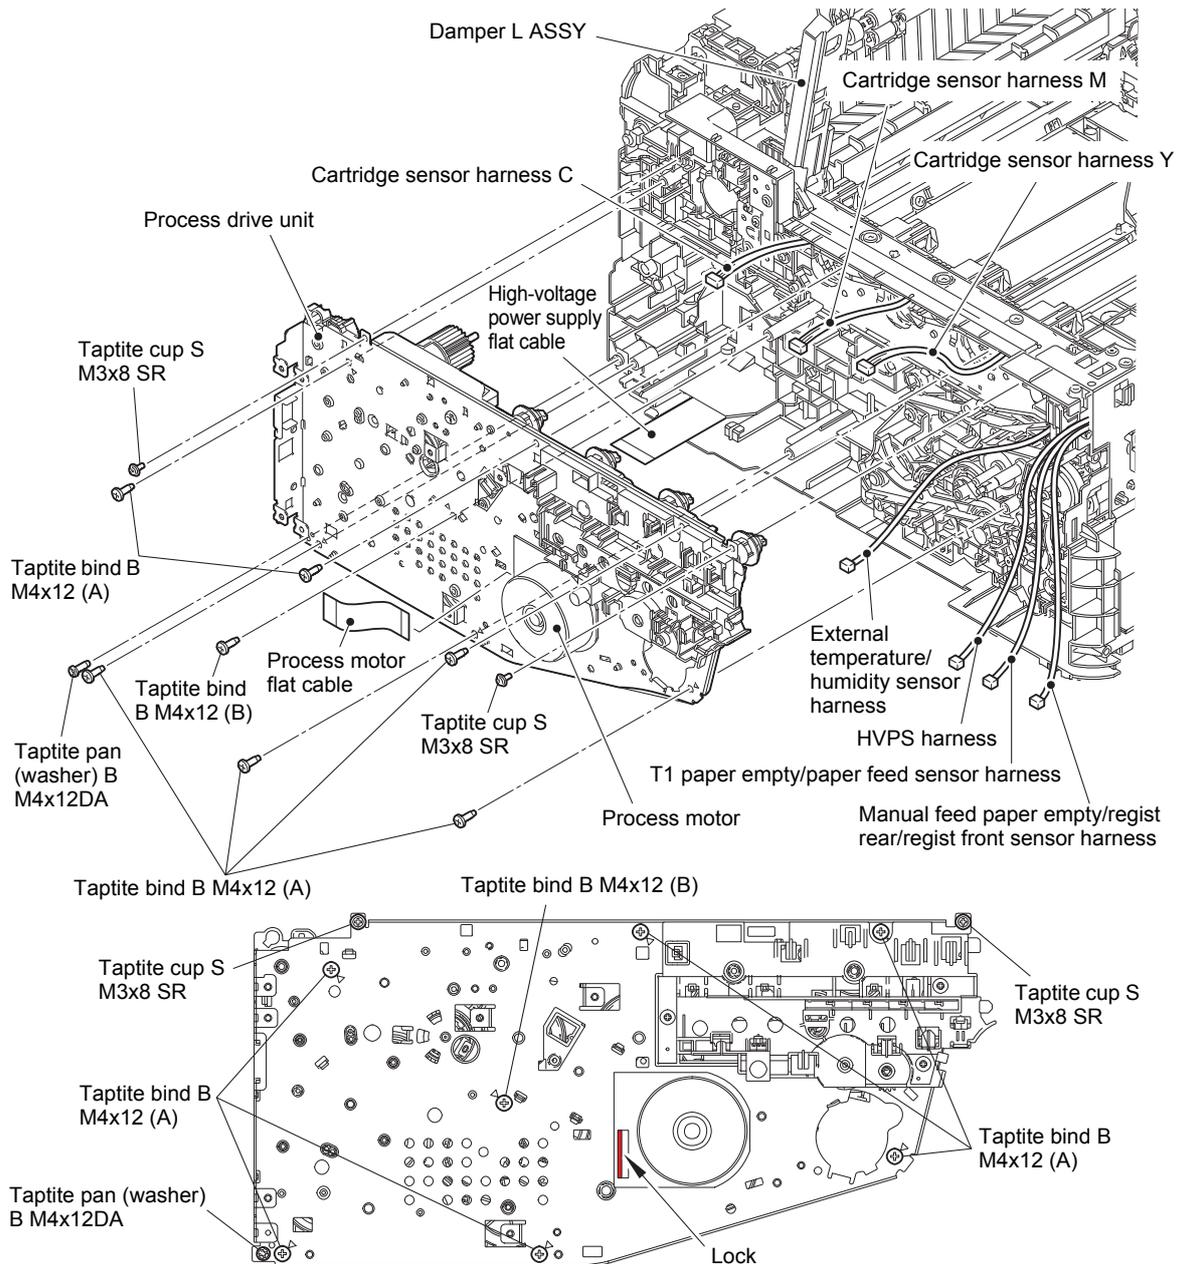


Fig. 3-94

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB, 13. High-voltage power supply flat cable".

Assembling Note:

- When attaching the Process drive unit, tighten the Taptite bind B M4x12 (B) screw first.

Assembling Note:

Fold the High-voltage power supply flat cable at the positions described below.

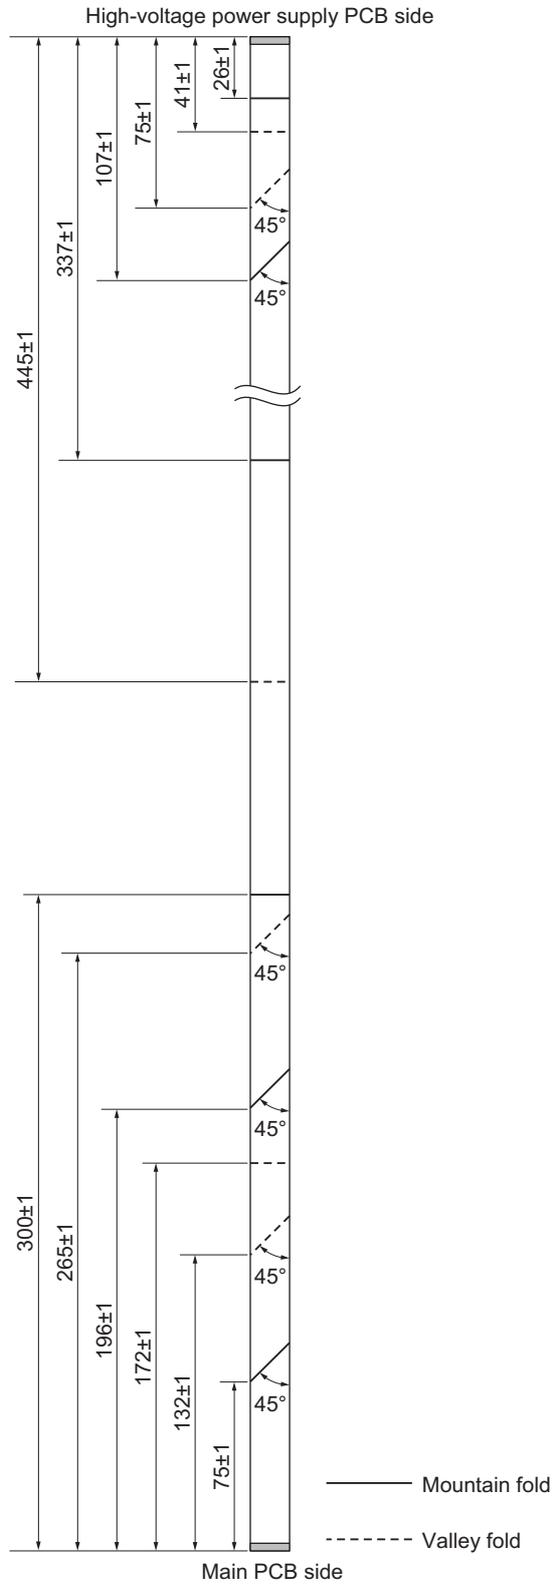


Fig. 3-95

Assembling Note:

- If you removed the Process drive unit while the Fuser unit was attached on the machine, remove the Fuser unit once (refer to “9.5 Fuser cover ASSY / Fuser unit”) and reattach it after attaching the Process drive unit.
The Conductive leaf spring of the Fuser unit may be deformed by the Calking shaft.

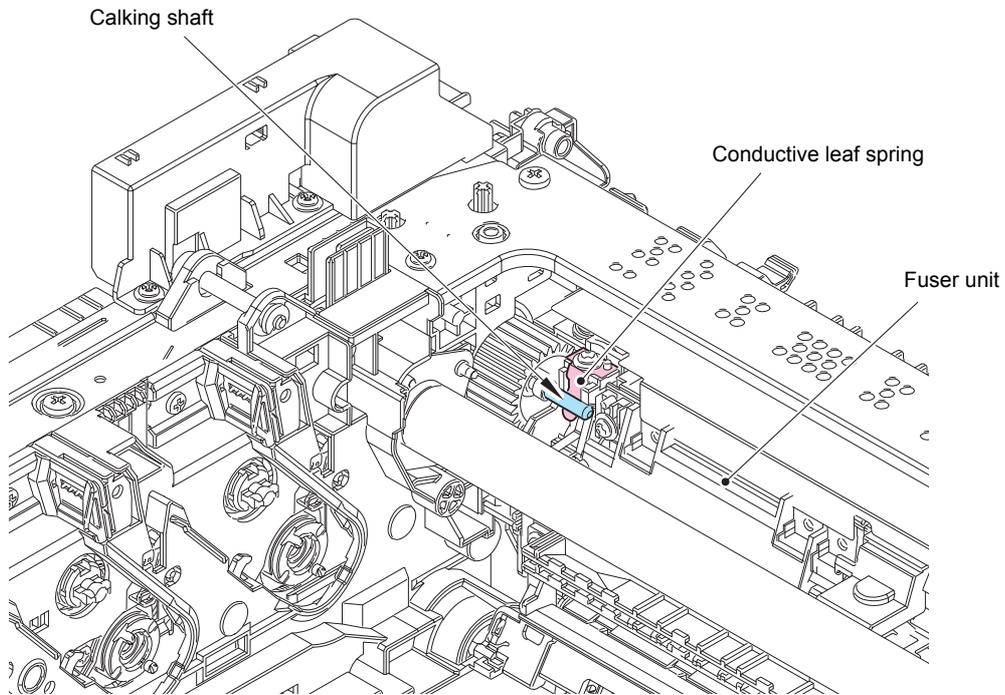


Fig. 3-96

- (11) Release the Hook to remove the Fuser drive gear Z25 from the Process drive unit.
- (12) Release the Hook to open the Paper feed motor FFC holder. Release the Paper feed motor flat cable from the securing fixtures. Release the Lock to disconnect the Paper feed motor flat cable from the Paper feed motor.

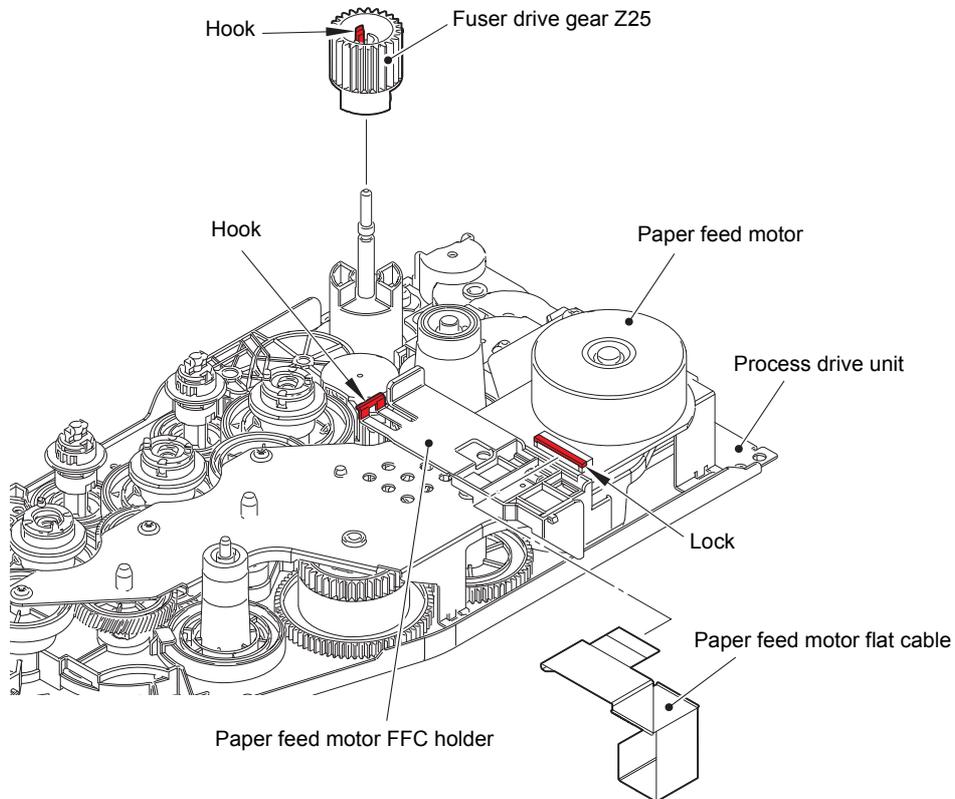


Fig. 3-97

Harness routing: Refer to "14. Process drive unit".

Assembling Note:

Fold the Paper feed motor flat cable at the positions described below.

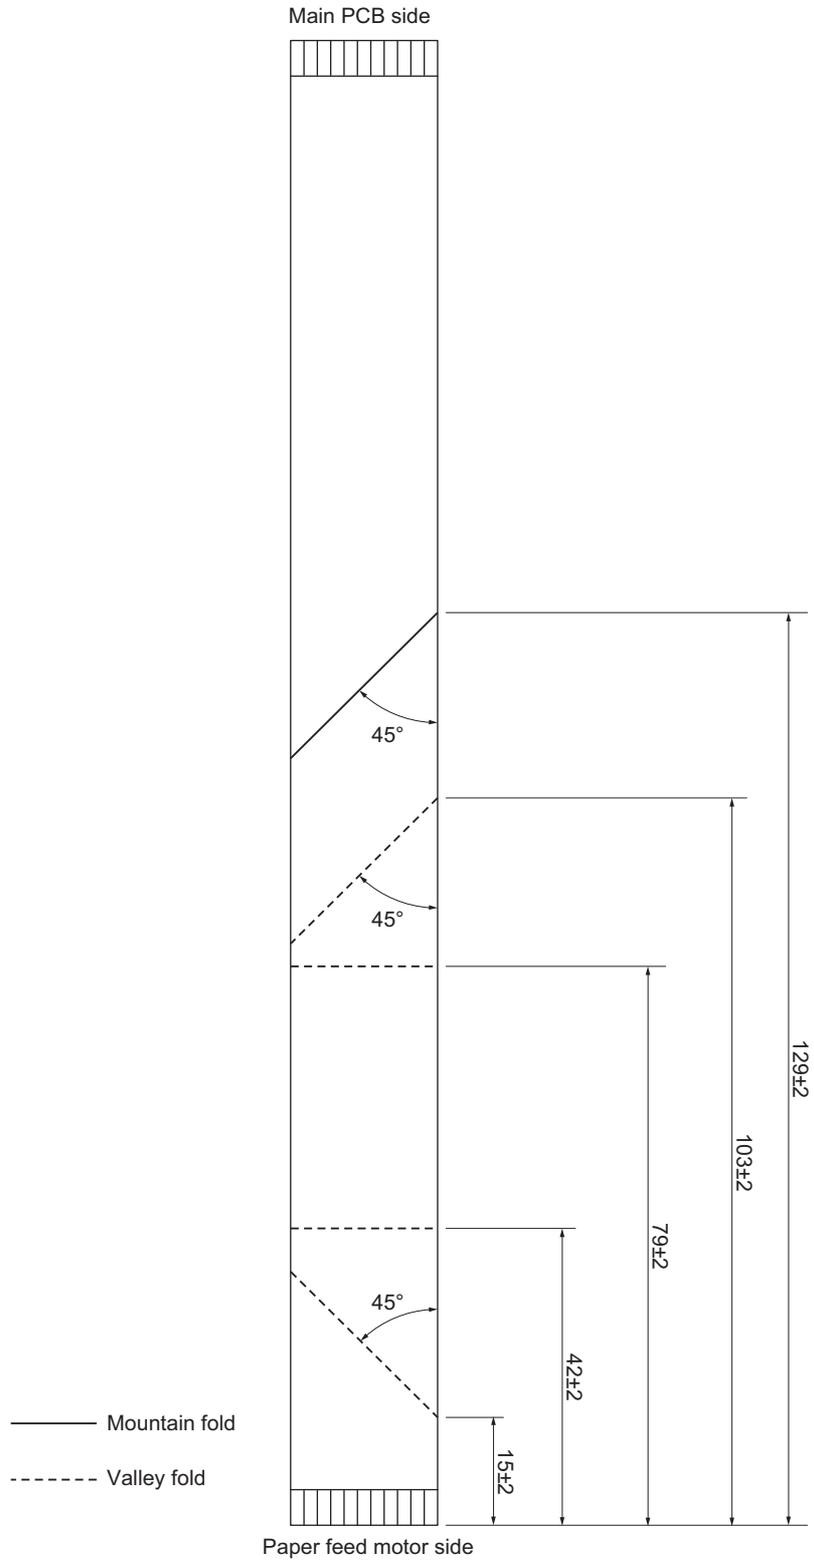


Fig. 3-98

9.32 T1 pick-up clutch / Registration clutch / Paper feed drive unit

- (1) Release the T1 pick-up clutch harness from the securing fixtures. Release the Hook to remove the T1 pick-up clutch.
- (2) Release the Hook of the T1 bearing 6, and then rotate it in the direction of the arrow to pull out the Sep roller drive joint. Remove the T1 bearing 6 from the Sep roller drive joint.
- (3) Release the Registration clutch harness from the securing fixtures. Release the Hook to remove the Registration clutch.
- (4) Release the Hook of the Regi joint bearing, and then rotate it in the direction of the arrow to pull out the PF regi drive joint. Remove the Regi joint bearing from the PF regi drive joint.
- (5) Release the Hook to remove the PF bearing 5. Pull out the Feed roller drive shaft.

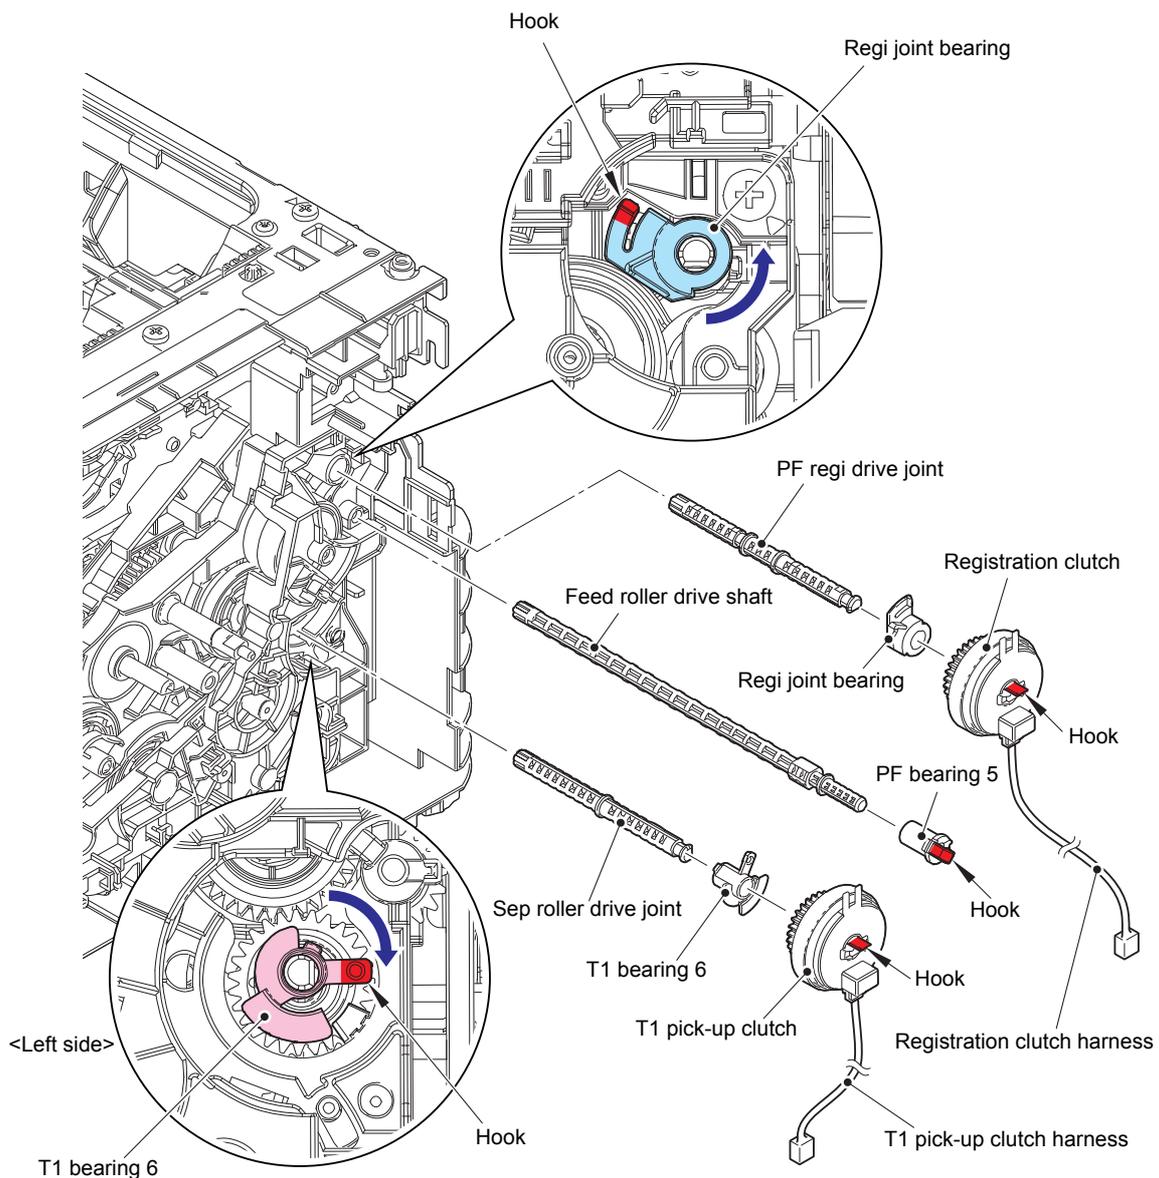


Fig. 3-99

Harness routing: Refer to "10. Main PCB, Cartridge sensor relay PCB".

Assembling Note:

- When wiring the T1 pick-up clutch harness and the Registration clutch harness, make sure that the clutch connection part of each harness does not stretch by pulling too much.

- (6) Remove the five Taptite bind B M4x12 screws to remove the Paper feed drive unit.
- (7) Release the hook to remove the External temperature/humidity sensor PCB from the Paper feed drive unit.

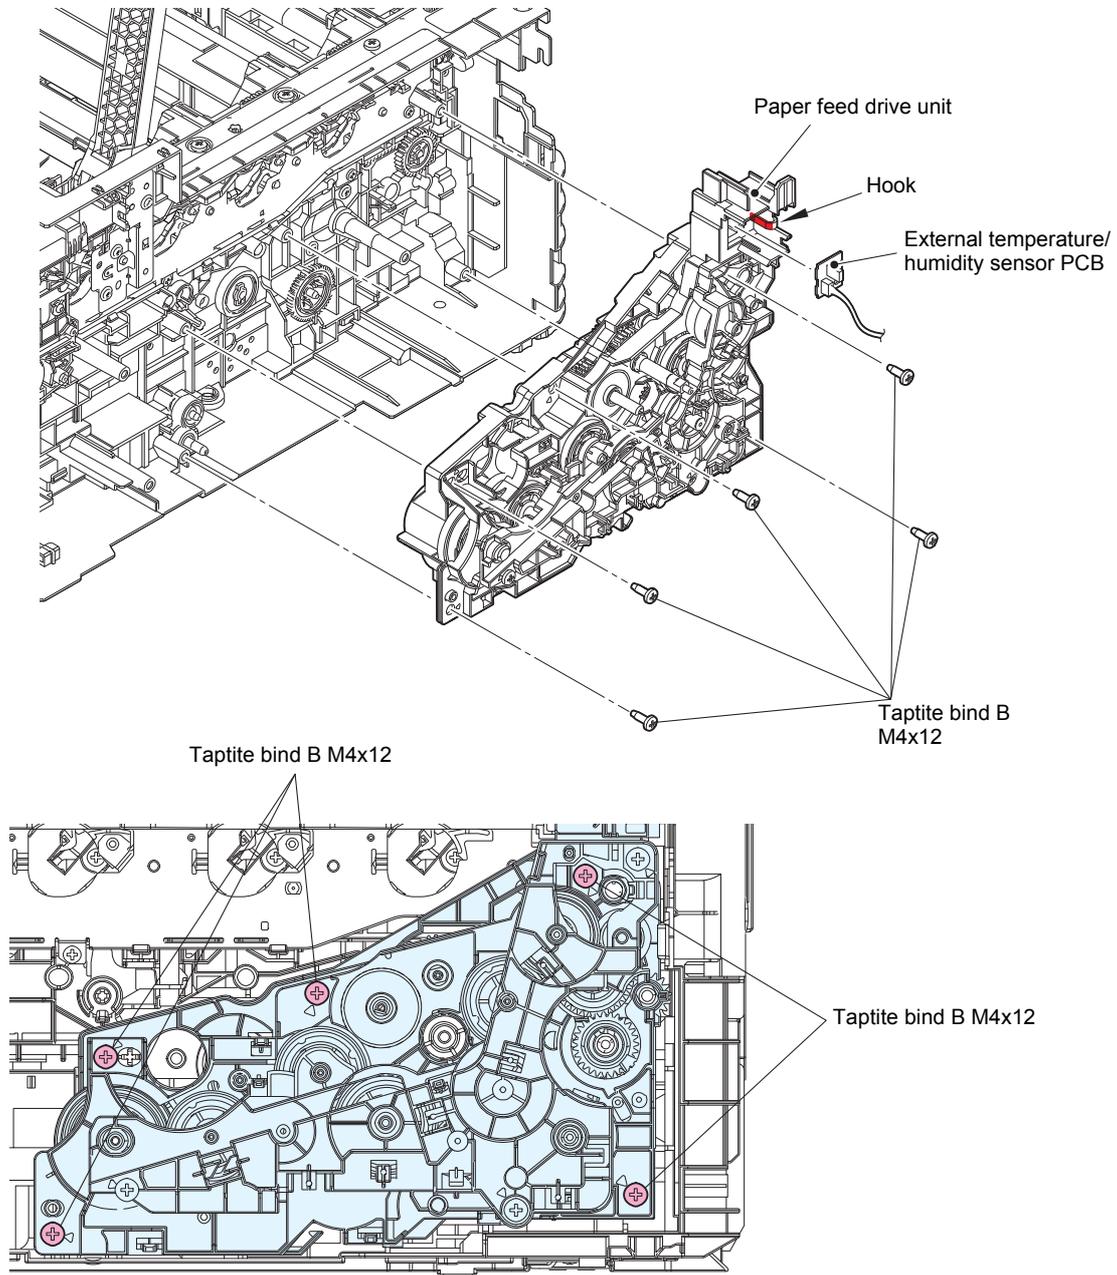


Fig. 3-100

9.33 Eject sensor PCB

- (1) Disconnect the Registration mark sensor L harness, the Registration mark sensor R harness, and the Internal temperature sensor harness from the Eject sensor PCB.
- (2) Release the Eject sensor harness from the securing fixtures. Release the Hook to remove the Eject sensor PCB. Disconnect the Eject sensor harness from the Eject sensor PCB.

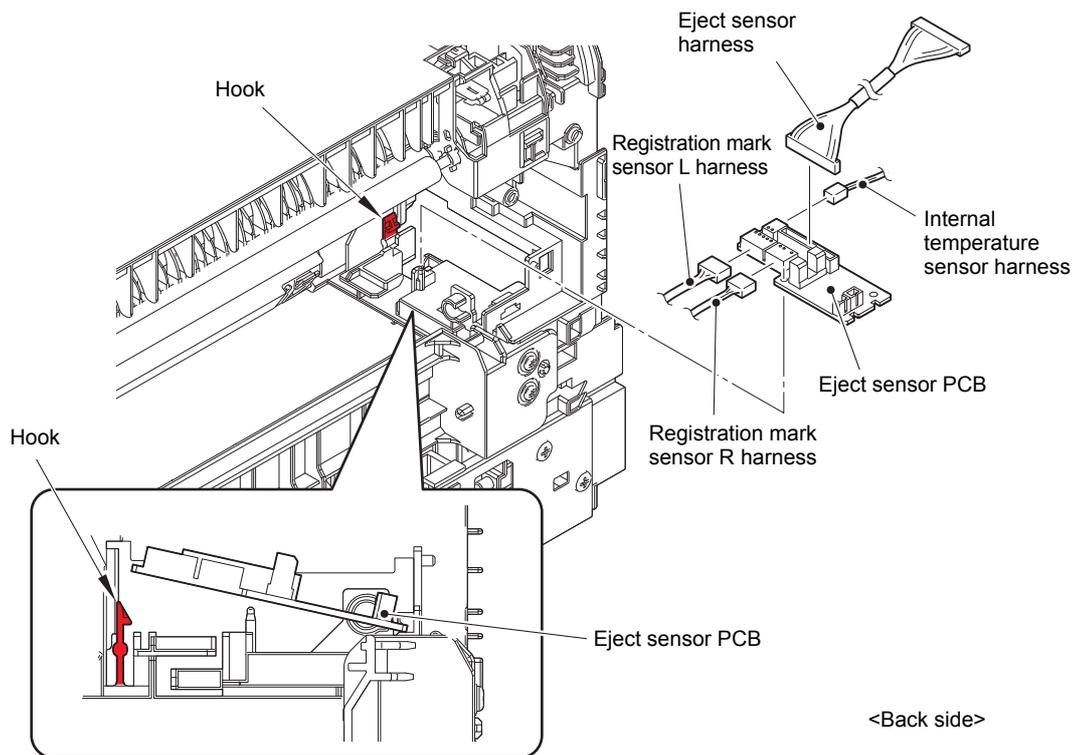


Fig. 3-101

Harness routing: Refer to "15. Registration mark sensor ASSY, Eject sensor PCB".

9.34 Roller holder ASSY

- (1) Turn the machine upside down.

Note:

- When turning the machine upside down, make sure to lay down the Damper L/R ASSY to prevent breakage of the Damper L/R ASSY.

- (2) Push the Lift arm in the direction of arrow A, and rotate the Roller holder ASSY to release the Boss. Slide the Roller holder ASSY in the direction of arrow B to remove it from the Shaft, and remove the Roller holder ASSY from the machine.

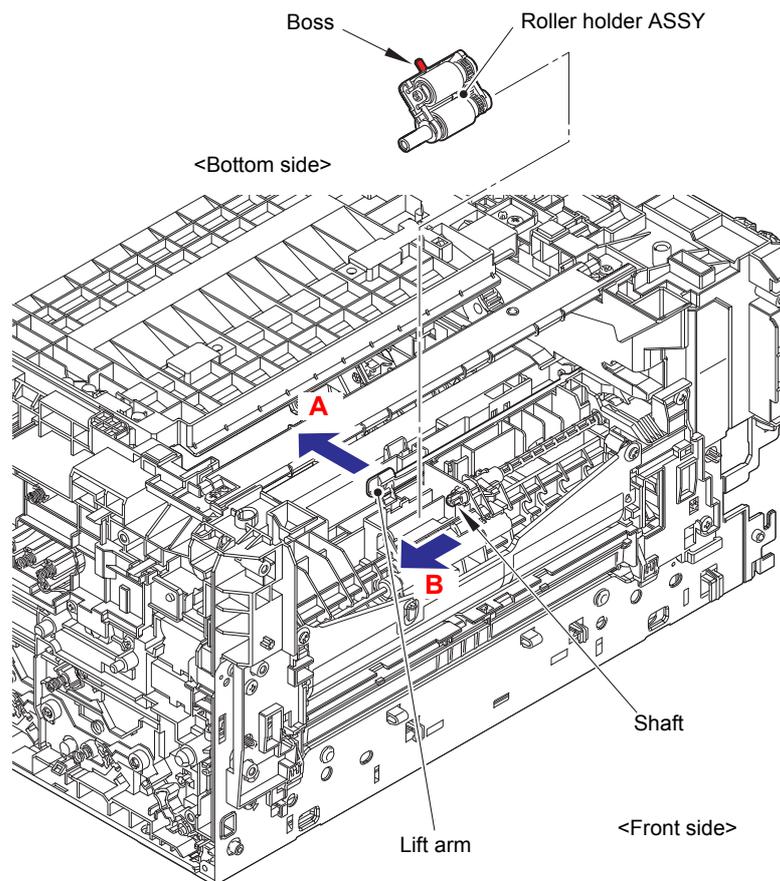


Fig. 3-102

9.35 Paper feed unit

- (1) Remove the Lift arm from the Boss while bending it in the direction of arrow 1a to slide the Lift arm in the direction of arrow 1b.

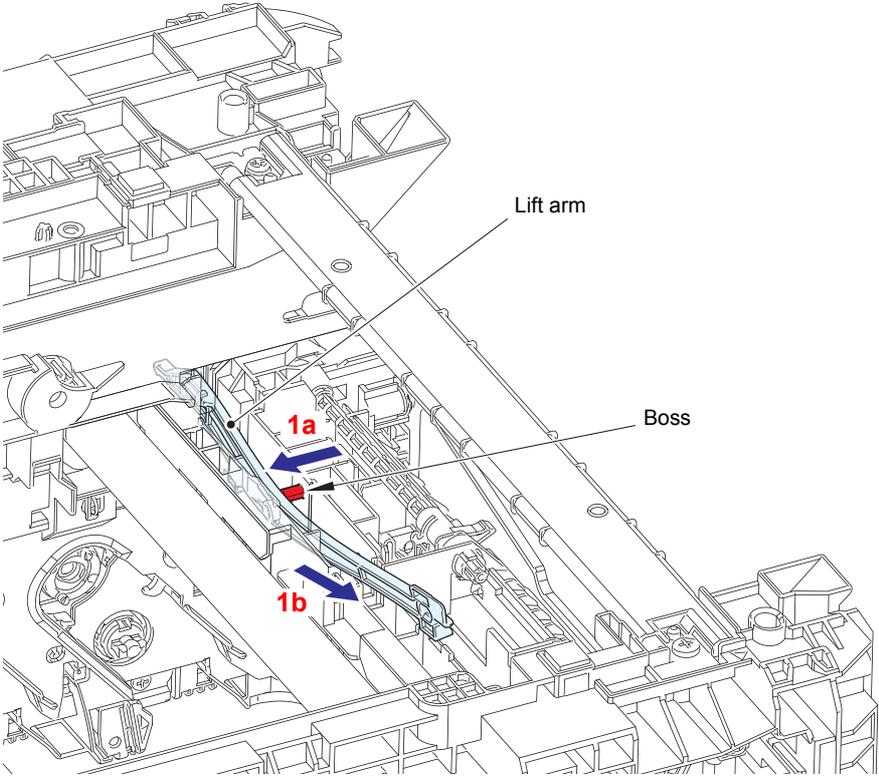


Fig. 3-103

- (2) Turn the machine face up.
- (3) Release the HVPS harness from the Hook A and the Hook B.
- (4) Release the T1 paper empty/paper feed sensor harness and the Manual feed paper empty/regist rear/regist front sensor harness from the Hook A.
- (5) Remove the four Taptite bind B M4x12 screws to remove the Paper feed unit.

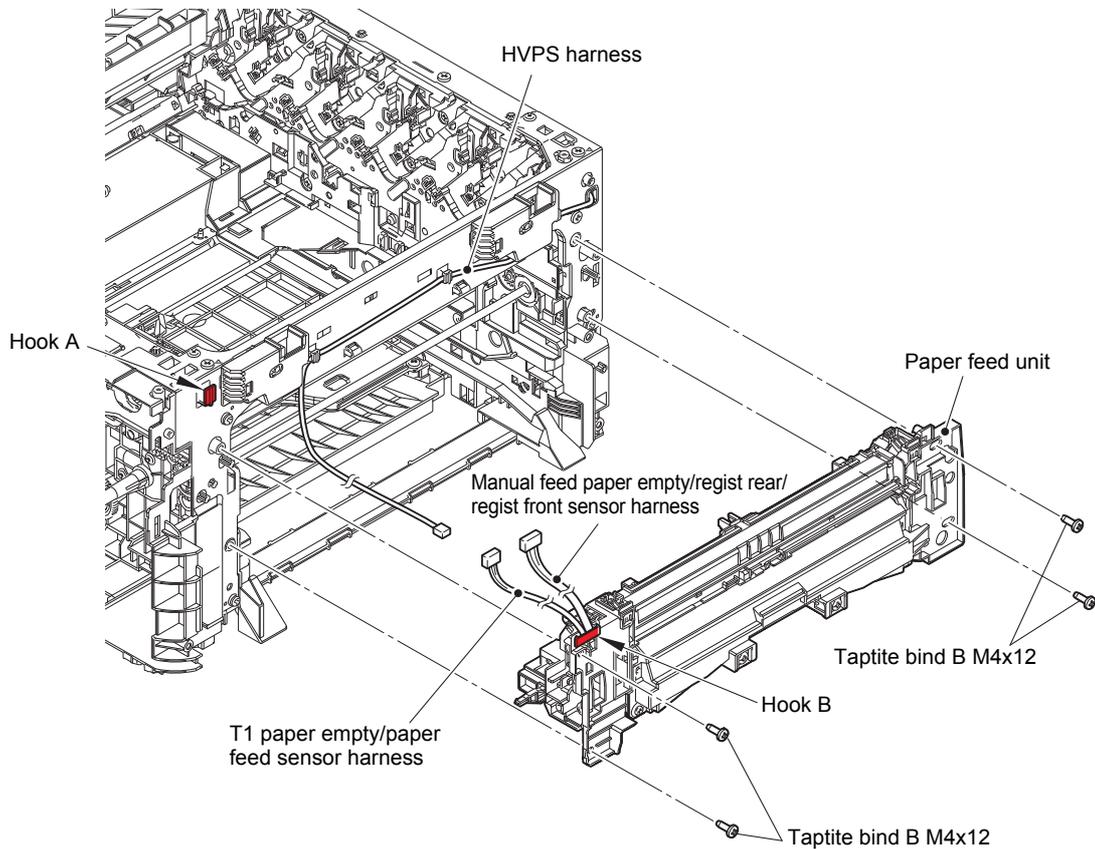


Fig. 3-104

Harness routing: Refer to ["16. Front side of the machine"](#).

9.36 Paper eject ASSY

- (1) Raise the Arm R approximately 135 degrees to remove it from the Paper eject ASSY.
- (2) Pull out the Eject gear shaft.
- (3) Remove the three Taptite bind B M4x12 screws. As shown in the figure, use a screwdriver to release the Boss on the right side of the Paper eject ASSY, and then remove the Paper eject ASSY.

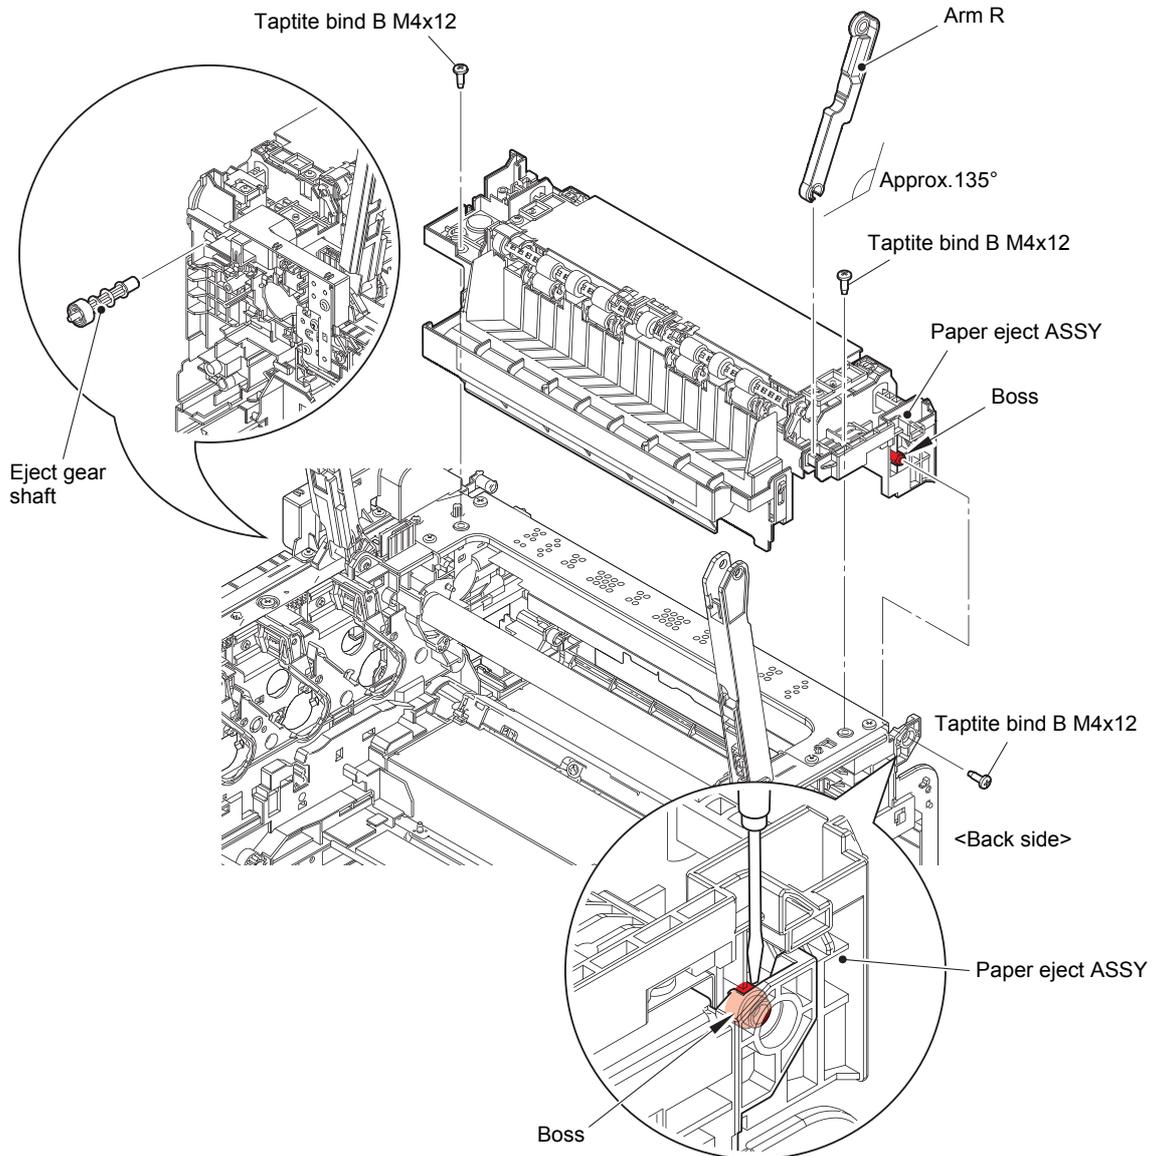


Fig. 3-105

9.37 Duplex tray

- (1) Turn the machine upside down.

Note:

- When turning the machine upside down, make sure to lay down the Damper L/R ASSY to prevent breakage of the Damper L/R ASSY.

- (2) Remove the Taptite bind B M4x12 screw to remove the DX drive cover.
- (3) Slide the DX input gear Z15 and the DX drive coupling in the direction of the arrow a.
- (4) Remove the two Taptite bind B M4x12 screws. Lift the A part of the Duplex tray to remove it in the direction of arrow b.

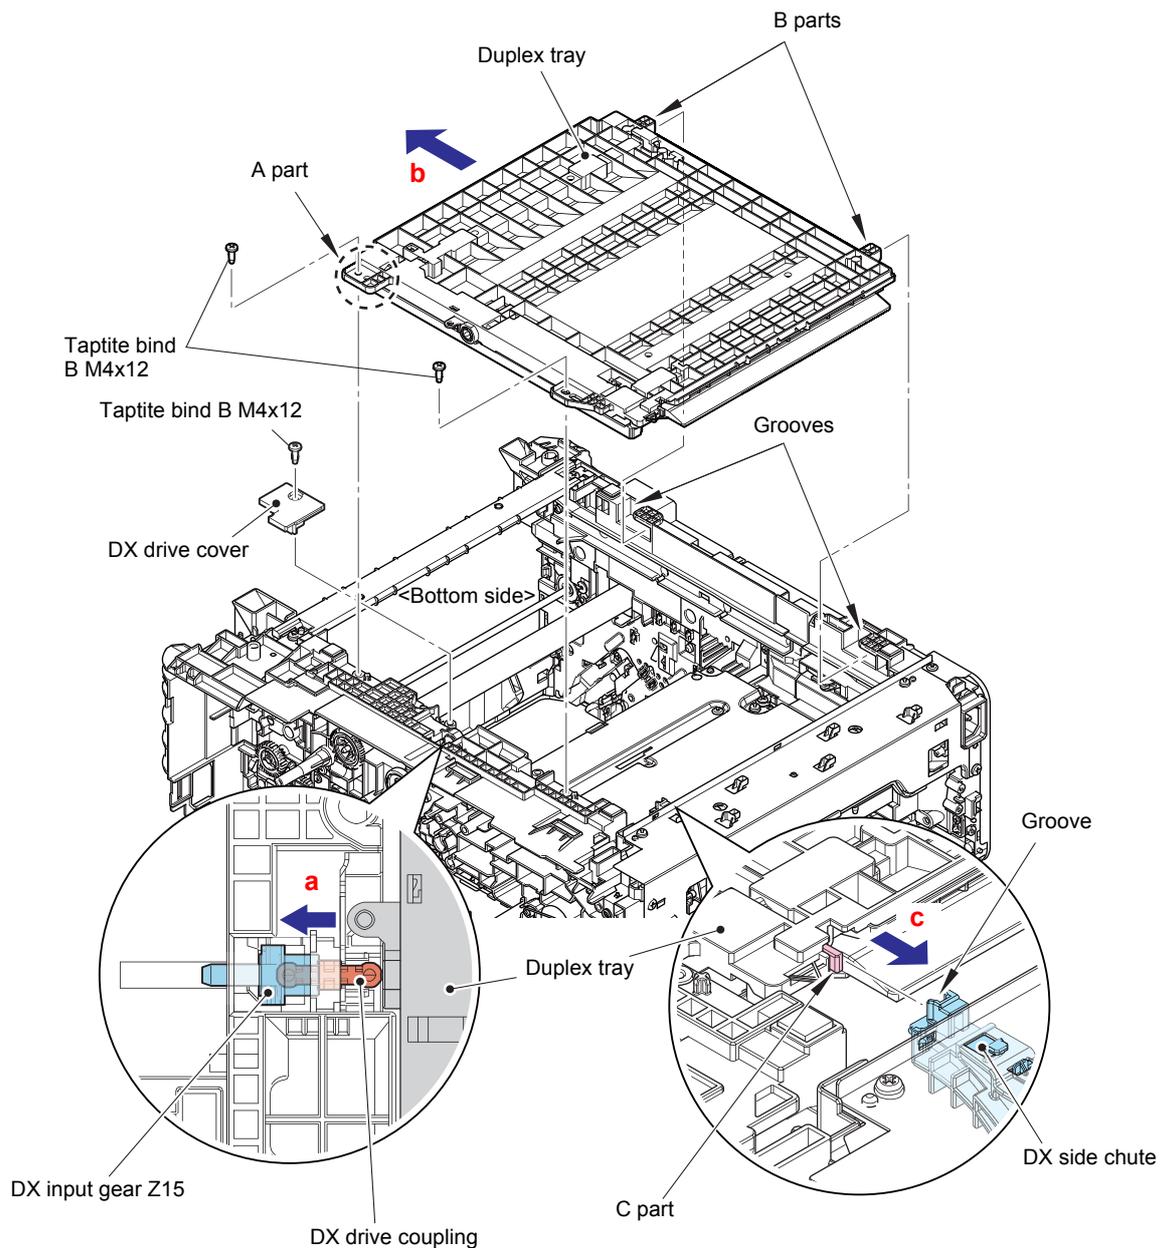


Fig. 3-106

Assembling Note:

- When assembling the Duplex tray, engage the two B parts with the two grooves of the machine and slide the Duplex tray in the direction of arrow c, and then insert the C part into the groove of the DX side chute.

9.38 Low-voltage power supply PCB



WARNING

When removing the Low-voltage power supply PCB, do not touch it within **3 minutes** after disconnecting the AC cord as it may cause an electric shock due to the electric charge accumulated in the capacitor.

- (1) Remove the Taptite bind B M4x12 screw to remove the Wire cover.
- (2) Remove the Taptite pan (washer) B M4x12DA screw, the Taptite cup S M3x8 SR screw, and the two Taptite bind B M4x12 screws to remove the Cover plate.
- (3) Open the two Ribs outward to remove the Wire cap.

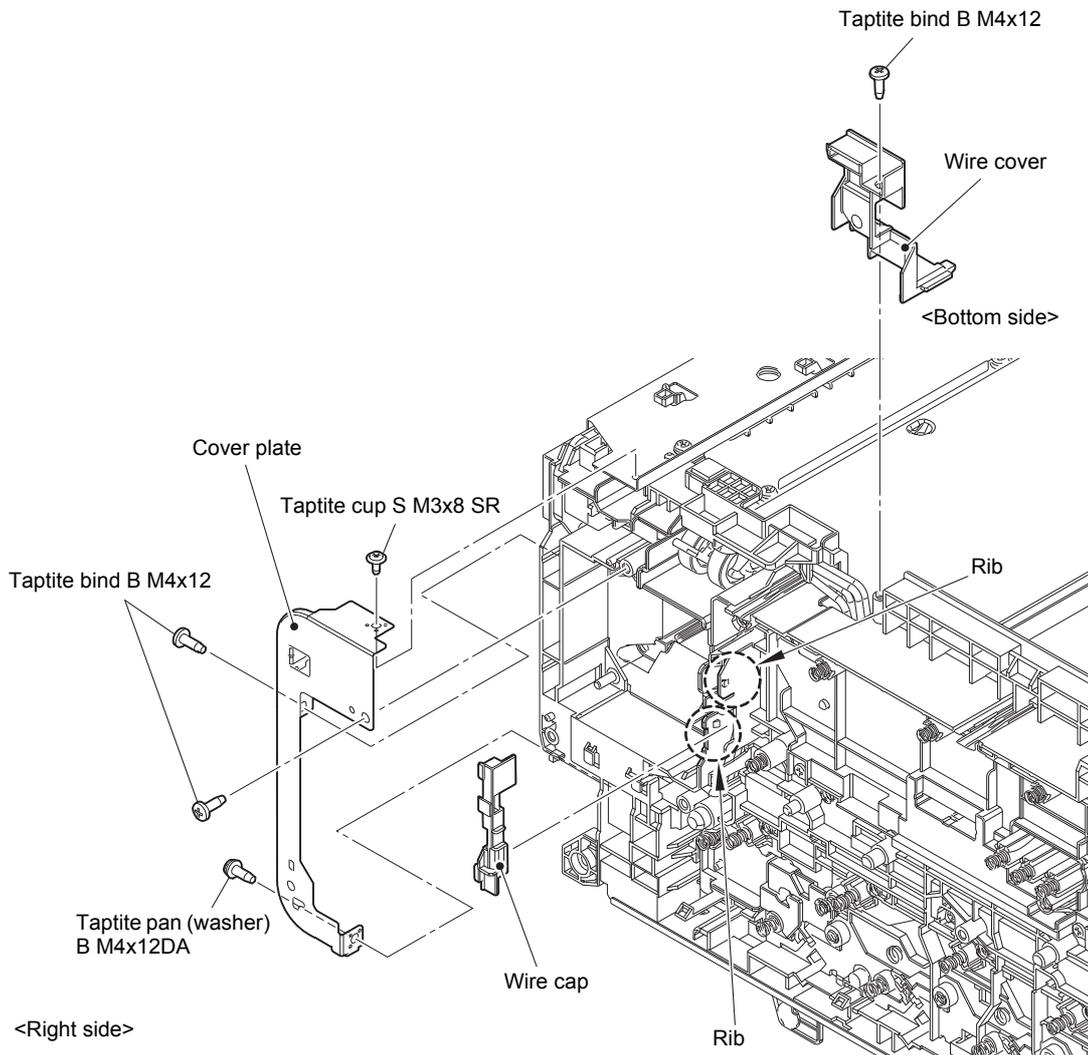


Fig. 3-107

- (4) Remove the Screw pan M4x8 screw, the Washer spring 2-4, and the Washer 5 to remove the LVPS ground wire from the LVPS plate lower ASSY.
- (5) Remove the Inlet to release the Inlet harness ASSY from the securing fixtures.
- (6) Release the LVPS heater harness from the securing fixtures.
- (7) Remove the four Taptite pan (washer) B M4x12DA screws and the two Taptite cup S M3x8 SR screws from the LVPS plate lower ASSY.

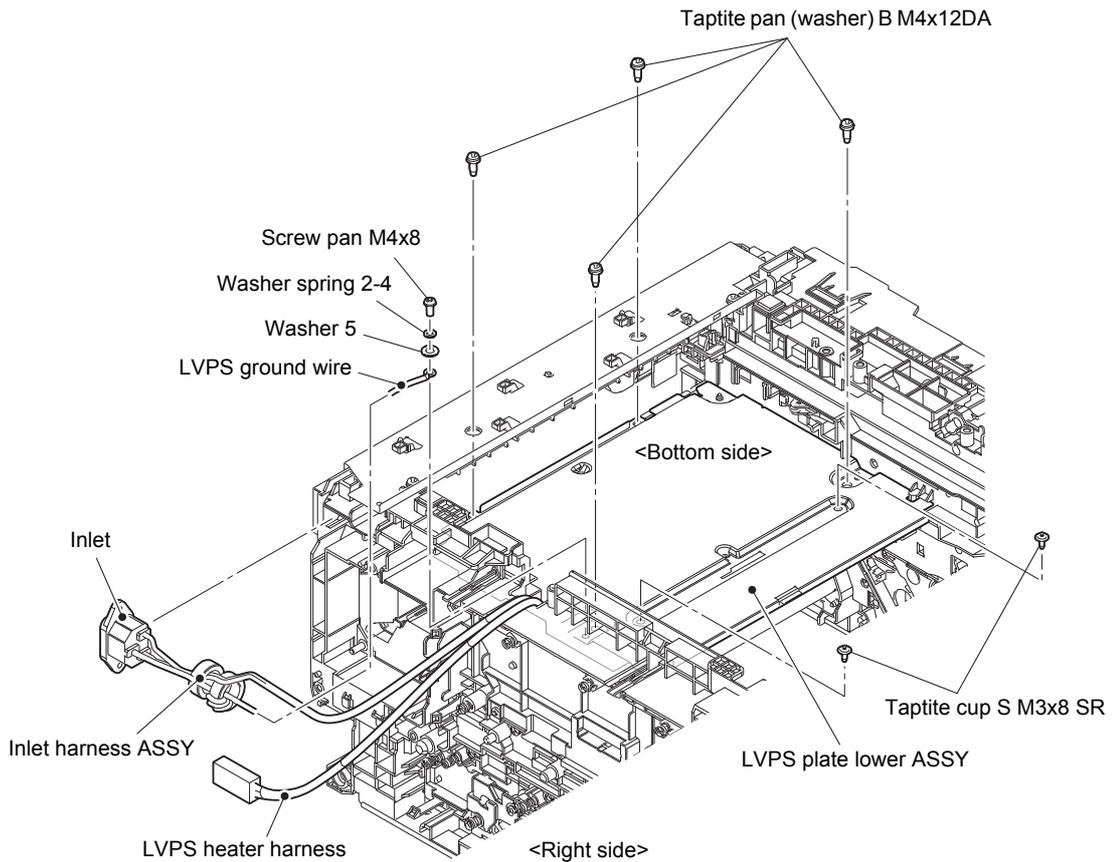


Fig. 3-108

Harness routing: Refer to "17. LVPS".

Assembling Note:

- For safety purposes, follow the figure above to attach the Washer spring 2-4 and the Washer 5 and secure them with the screw properly.

- (8) Release the Low-voltage power supply harness from the securing fixtures.
- (9) Remove the LVPS plate lower ASSY.

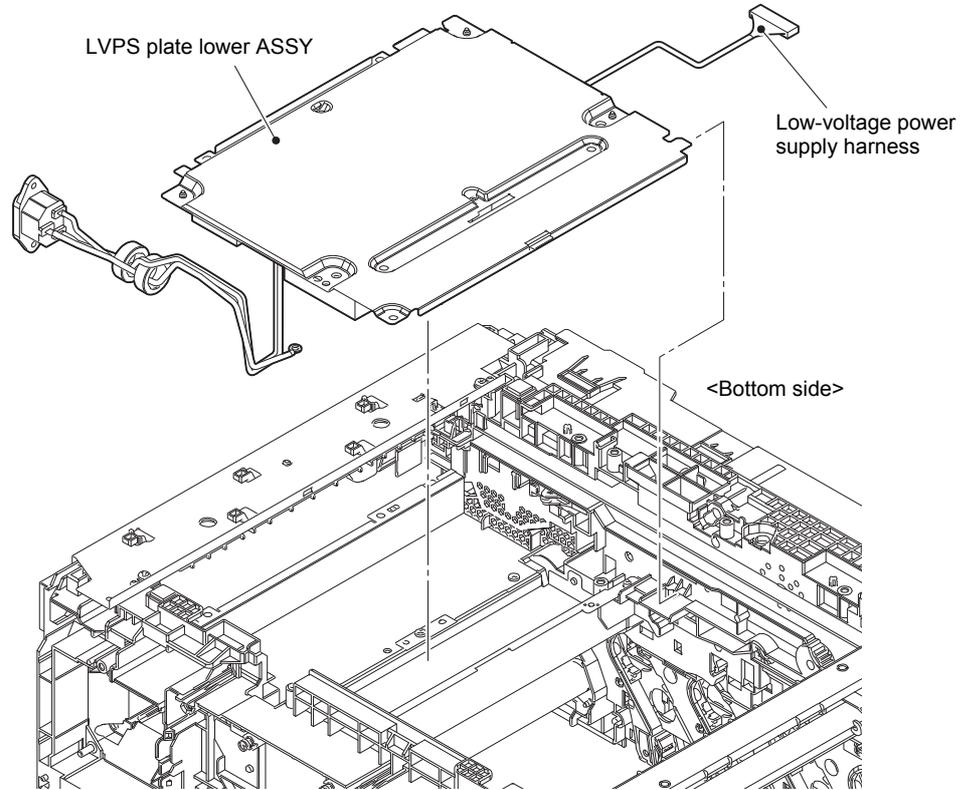


Fig. 3-109

Harness routing: Refer to "17. LVPS".

- (10) Disconnect the Low-voltage power supply harness from the Low-voltage power supply PCB.
- (11) Remove the three Taptite cup S M3x6 SR screws to remove the Low-voltage power supply PCB and the LVPS insulation sheet from the LVPS plate lower ASSY.

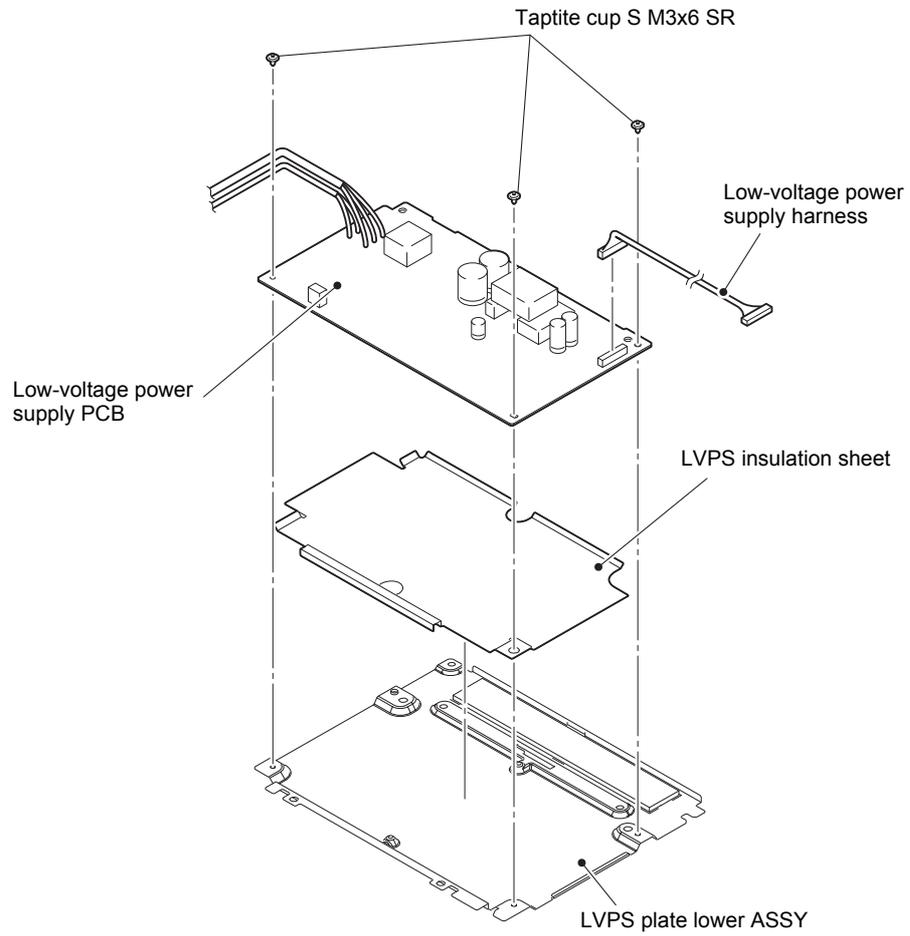


Fig. 3-110

9.39 Registration mark sensor L PCB / Registration mark sensor R PCB

- (1) Turn the machine face up.
- (2) Release the Registration mark sensor L harness and the Registration mark sensor R harness from the securing fixtures.
- (3) Release the Hook, and then remove the REGI stopper from the Registration mark sensor ASSY in the direction of the arrow.
- (4) Remove the Taptite bind S M3x5 screw to remove the Registration mark sensor ASSY.

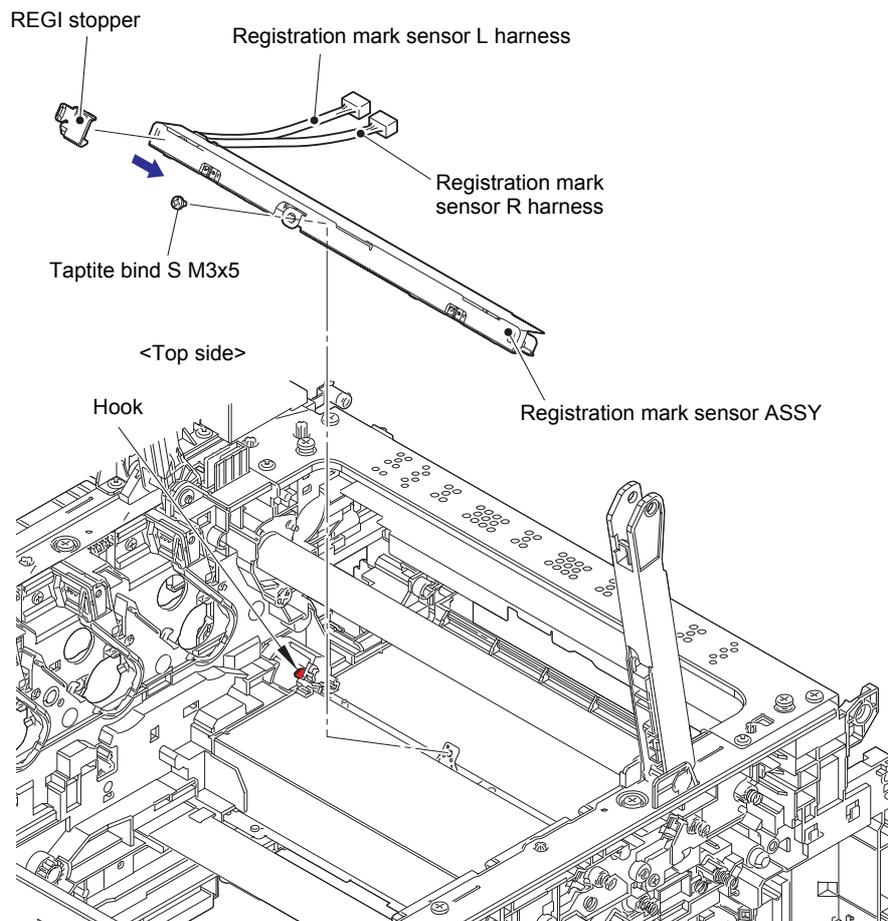


Fig. 3-111

Harness routing: Refer to "15. Registration mark sensor ASSY, Eject sensor PCB".

- (5) Slide the Registration sensor film in the direction of the arrow to remove it from the Registration mark sensor ASSY.
- (6) Release the Registration mark sensor L harness from the securing fixtures. Slide the Registration mark sensor L PCB in the direction of the arrow while pushing the Boss to remove it from the Registration mark sensor ASSY.
- (7) Release the Registration mark sensor R harness from the securing fixtures. Slide the Registration mark sensor R PCB in the direction of the arrow while pushing the Boss to remove it from the Registration mark sensor ASSY.

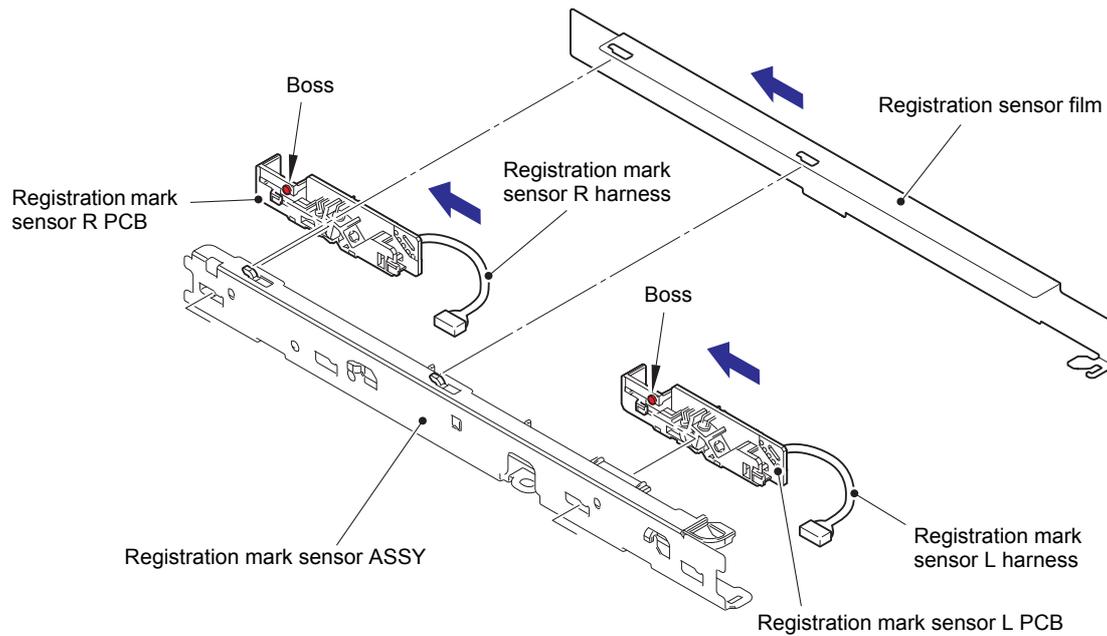


Fig. 3-112

Harness routing: Refer to "15. Registration mark sensor ASSY, Eject sensor PCB".

CHAPTER 4 ADJUSTMENTS AND UPDATING OF SETTINGS, REQUIRED AFTER PARTS REPLACEMENT

1. IF YOU REPLACE THE MAIN PCB

■ What to do after replacement

- Configure for Country/Region and Model (Function code 74)
- Installing the Firmware (Sub Firmware and Main Firmware)
- Initializing the EEPROM of the Main PCB (Function code 01)
- Adjusting Touch Panel (Function code 61)
- Continuous Adjustments of Density and Registration Sensor (Function code 73)
- Acquisition of White Level Data (Function code 55)
- Setting the Serial Number (Function code 80)

■ What you need to prepare

- (1) USB flash memory
- (2) One USB cable
(Only when installing the firmware and setting the Serial Number using computer.)
- (3) Create a temporary folder on the C drive of the computer (Windows® XP or later).
- (4) Service setting tool (SvSettingTool)
(Only when setting the Serial Number using computer.)
Copy it into the temporary folder that has been created in the C drive.
- (5) Download utility (Filedg32.exe)
(Only when installing the firmware using computer.)
Copy it into the temporary folder that has been created in the C drive.
- (6) Maintenance printer driver (Maintenance_driver.zip)
(Only when installing the firmware and setting the Serial Number using computer.)
When the maintenance printer driver is not installed, copy this file into the temporary folder created on the C drive, and extract the copied file. Refer to **“APPENDIX 3 INSTALLING THE MAINTENANCE PRINTER DRIVER”** to install the driver.
- (7) Firmware

Sub firmware	djf or upd file (ex. *****_A.djf or *****_A.upd)
Main firmware	djf or upd file (ex. *****_A.djf or *****_A.upd)

- (8) Touch pen

1.1 Configure for Country/Region and Model (Function code 74)

Perform settings for a country/region as described in “1.3.28 Configure for country/region and model (Function code 74)” in Chapter 5.

1.2 Installing the Firmware (Sub Firmware and Main Firmware)

1.2.1 Checking firmware version

Check whether the firmware installed on the machine is the latest version. If it is the latest version, there is no need to install the firmware. If it is not, be sure to install the firmware to the machine as described in “1.2.2 Installing firmware” in this chapter.

<How to check firmware version>

- (1) Press and hold the  for approximately five seconds while the machine is in the ready state.
- (2) Press the blank field at the bottom.
- (3) Press the [*], [2], [8], [6], and [4] on the LCD in this order, and the machine enters into maintenance mode.
- (4) Press the [2], and then the [5] in the initial state of maintenance mode. Then, the Main firmware version information is displayed on the LCD.
- (5) Next, press the [Start] or [Mono Start] to display the version information of the Sub firmware on the LCD and check the information.

Memo:

You can also check the Sub firmware and Main firmware version by implementing “Print maintenance information (Function code 77)” (refer to “1.3.29 Print maintenance information (Function code 77)” in Chapter 5).

1.2.2 Installing firmware

■ Firmware installation using USB flash memory

Memo:

- Firmware installation using USB flash memory is inoperable when the machine is in deep sleep mode. Release the deep sleep mode by opening / closing the top cover before the operation.
- Be sure to reinstall the sub firmware and then the main firmware in this order.
- Do not disconnect the power cord, USB flash memory from the machine or computer during installing.
- When the firmware installation using USB flash memory is failed and the error message or no character appears on the LCD, refer to “■ Firmware installation using PC” in this chapter to install firmware using PC.

<Operating procedure>

■ Firmware files installation for some models selecting manually

- (1) Save the program files (ex: *****_A.djf) which are necessary for installing the firmware to just below the USB flash memory.
- (2) While the machine is in the ready state, connect the USB flash memory drive to the USB direct interface on the front of the machine.
- (3) When the machine detects the USB flash memory, the program names are displayed on the LCD. Press the [▲] or [▼] to display the program name that you want to install.
- (4) Press the program name that you want to install on the LCD to start installing.
- (5) When installation is completed, the machine automatically restarts.
- (6) Repeat the procedures (3) to (5) to install necessary firmware.
- (7) When all firmware installation has been completed, remove the USB flash memory from the USB direct interface.

■ Firmware files installation for one model automatically

Memo:

You can install simultaneously the Sub firmware and Main firmware for one model. However, if you save firmware for some different models to the USB flash memory, an error will be occurred.

- (1) Create and save a file for automatic firmware update under the USB flash memory. Create a blank file of text format and title the file name “_@\$UPD\$OP0.8080”.
- (2) Create the “FIRM” folder under the USB flash memory, and save the program file needed for firmware install (ex: *****_A.djf) in the “FIRM” folder.
- (3) Connect the USB flash memory to the USB flash memory port at the side of the machine while the machine is in the ready state. “Program Updating.Do not turn off.” appears on the LCD and installation starts automatically. Back light blinks during the installation.
- (4) When installing is completed, the machine restarts automatically and “Completed...” appears on the LCD. Remove the USB flash memory. If multiple program files are saved in the USB flash memory, other installations start automatically after the restart. If the installation fails, “Unable to Update:***” appears on the LCD. (“***” indicates the error code.) Refer to the remedy and eliminate the error. Then reboot the machine and start from the procedure (1).

■ Firmware installation using PC

Memo:

- Be sure to reinstall the sub firmware and then the main firmware in this order.
- Do not disconnect the power cord, USB flash memory or USB cable from the machine or computer during installing.

<Operating procedure>

- (1) If the computer and machine are connected with a USB cable, disconnect the USB cable and enter the maintenance mode. (Refer to [“1.1 How to Enter Maintenance Mode” in Chapter 5.](#))
- (2) Connect the computer to the machine with the USB cable.
- (3) Open the temporary folder, double-click the “Filedg32.exe” to start, and select “Brother Maintenance USB Printer”.
- (4) Drag and drop a necessary program file (ex: *****_A.djf) located in the same folder to the Brother Maintenance USB Printer icon located within the FILEDG32 screen. The files are sent to the machine and installation into the flash ROM is started.
- (5) When installation is completed, the machine reboots and returns to the ready state.
- (6) Turn OFF the power of the machine, and repeat the procedures (1) to (5) to install necessary firmware.
- (7) Turn OFF the power of the machine, and disconnect the USB cable.

<Firmware installation failure>

If the firmware installation fails due to “a power blackout during installing” or “the USB cable was disconnected during installing”, turn OFF the machine and turn it back on. Then repeat the procedure from (1) of <Operating procedure> above.

1.3 Initializing the EEPROM of the Main PCB (Function code 01)

Initialize the EEPROM of the main PCB in accordance with “1.3.1 Initialize EEPROM parameters (Function code 01, 91)” in Chapter 5.

1.4 Adjusting Touch Panel (Function code 61)

Perform adjustment of touch panel in accordance with “1.3.19 Adjust touch panel (Function code 61)” in Chapter 5.

1.5 Continuous Adjustments of Density and Registration Sensor (Function code 73)

Perform continuous adjustments of density and registration sensor in accordance with “1.3.27 Continuous adjustments of density / registration sensor (Function code 73)” in Chapter 5.

1.6 Acquisition of White Level Data (Function code 55)

Perform acquisition of white level data in accordance with “1.3.17 Acquire white level data and set CIS scan area (Function code 55)” in Chapter 5.

1.7 Setting the Serial Number (Function code 80)

<Operating procedure>

- (1) Press the [8], and then the [0] in the initial state of maintenance mode. “MACERR_01:****” is displayed on the LCD.
- (2) Press the [Start] or [Mono Start] several times until “USB:*****” is displayed on the LCD.
- (3) Press the [9], [4], [7], and [5] in this order to enter the edit mode.
- (4) Use the keypad to enter the first digit of the serial number. The second digit starts to flash. Enter the second digit to the 15th digit similarly.

Memo:


When you enter alphanumeric characters other than A, B, C, D, E and F, see the right table and press the corresponding key until the desired character is displayed.

Keypad	Assigned characters
4	4 → G → H → I
5	5 → J → K → L
6	6 → M → N → O
7	7 → P → Q → R → S
8	8 → T → U → V
9	9 → W → X → Y → Z

- (5) Press the [SET], and the new serial number is saved. The machine returns to the initial state of maintenance mode.

Serial number can also be configured through the service setting tool (SvSettingTool.exe). Follow the procedure below:


- (1) Enter the maintenance mode.
- (2) Connect the machine to your computer using the USB cable.
- (3) Open the temporary folder and double-click "MemoryAccessTool.exe". The screen shown on the right appears.
- (4) Click the [Execute] and close the Maintenance Exception Tool screen. Wait for 5 seconds or longer and then proceed to the next step.

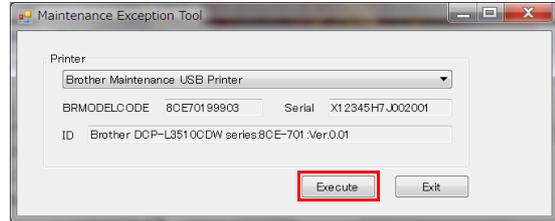


Note:

- If the [Execute] on the Memory access tool is pressed once, the serial number written to the machine is valid as long as the machine does not quit the maintenance mode.
- If the BRMODELCODE, the Serial, and the ID fields display abnormally, quit the maintenance mode and then restart from step (1). When they display abnormally, the machine is still in the state that the serial number cannot be written even if the [Execute] is clicked.

- (5) Open the temporary folder and double-click the "SvSettingTool.exe". The screen shown on the right appears.
- (6) Check that the USB port connected with the machine is displayed in the box (A).
- (7) Enter the model name in the box (B) and press the [Find a model]. Series name and model name are displayed in the box (C).

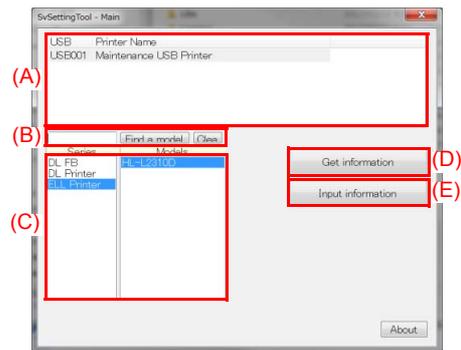


- (8) Click the [Input information] shown as (E). The Input Information screen shown on the right appears.
- (9) Click the [Serial No.] in the box (F). Set Serial No. screen appears.

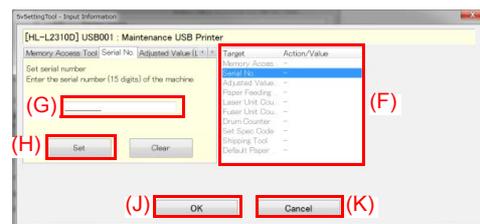

- (10) Enter the serial number (15 digits) of the machine in the box (G), and click the [Set] shown as (H). "Set[*****]" and entered value appear on the [Serial No.] line in the box (F). ("*****" indicates the serial number entered.)

- (11) Click the [OK] shown as (J). The Execute Setting screen shown on the right appears and the serial number is written to the machine.


- (12) Click the [OK] shown as (L) and close the Execute Setting screen.
- (13) Click the [Cancel] shown as (K) and close the Input Information screen.

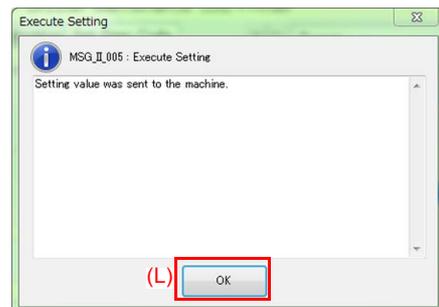

- (14) Click the [Get information] shown as (D).
The Get Information screen shown on the right appears.

Memo:

You can check the serial number you entered even if function code 80 is executed.
Refer to "1.3.32 Display machine log information (Function code 80)".

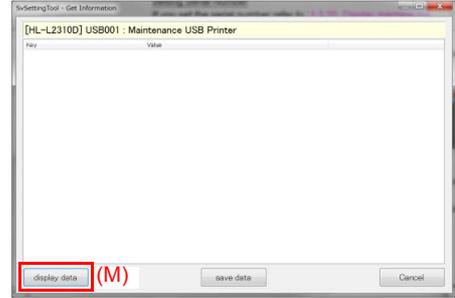

- (15) Click the [display data] shown as (M).
The machine maintenance information appears.

- (16) In the maintenance information, check that the serial number in the [Serial] field is same as the value entered in the procedure (10).

- (17) Click the [Cancel] shown as (N) and close the Get Information screen.

- (18) Turn OFF the power switch of the machine and disconnect the USB cable from the machine and computer.



Memo:

Refer to "APPENDIX 1 SERIAL NUMBERING SYSTEM" for how to check the serial number.

2. IF YOU REPLACE THE REGISTRATION MARK SENSOR ASSY OR LED ASSY

■ What to do after replacement

- Continuous Adjustments of Density and Registration Sensor (Function code 73)

■ What you need to prepare

None

2.1 Continuous Adjustments of Density and Registration Sensor (Function code 73)

Perform continuous adjustments of density and registration sensor in accordance with [“1.3.27 Continuous adjustments of density / registration sensor \(Function code 73\)”](#) in Chapter 5.

3. IF YOU REPLACE THE LOW-VOLTAGE POWER SUPPLY PCB

■ What to do after replacement

- Resetting Irregular Power Supply Counter of the Low-voltage Power Supply PCB (Reset counters for consumable parts (Function code 88))

■ What you need to prepare

None

3.1 Resetting Irregular Power Supply Counter of the Low-voltage Power Supply PCB (Reset counters for consumable parts (Function code 88))

Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5 to reset the irregular power supply counter of the low-voltage power supply PCB.

4. IF YOU REPLACE THE LCD, PANEL UNIT OR PANEL PCB

■ What to do after replacement

- Adjusting Touch Panel (Function code 61) (Touch panel models only)
- Checking LCD Operation (Function code 12)

■ What you need to prepare

- (1) Touch pen

4.1 Adjusting Touch Panel (Function code 61) (Touch panel models only)

Adjust the touch panel as described in “1.3.19 Adjust touch panel (Function code 61)” in Chapter 5.

4.2 Checking LCD Operation (Function code 12)

Check LCD operation as described in “1.3.6 Check LCD operation (Function code 12)” in Chapter 5.

5. IF YOU REPLACE THE ADF UNIT, FIRST SIDE CIS UNIT, SECOND SIDE CIS UNIT OR DOCUMENT SCANNER UNIT

■ What to do after replacement

- Acquisition of White Level Data (Function code 55)
- Scanning and Printing Check

■ What you need to prepare

None

5.1 Acquisition of White Level Data (Function code 55)

Perform acquisition of white level data in accordance with “1.3.17 Acquire white level data and set CIS scan area (Function code 55)” in Chapter 5.

5.2 Scanning and Printing Check

Scan the proper document on the scanner glass and the ADF unit, and check if there is any problem on the printed image.

Check if there is any problem on the document scanner unit, the ADF unit and the performance of recording part.

6. IF YOU REPLACE THE FUSER UNIT

■ What to do after replacement

- Resetting Printed Pages Counter of the Fuser Unit
(Reset counters for consumable parts (Function code 88))

■ What you need to prepare

None

6.1 Resetting Printed Pages Counter of the Fuser Unit (Reset counters for consumable parts (Function code 88))

Refer to [“1.3.36 Reset counters for consumable parts \(Function code 88\)”](#) in Chapter 5 to reset the printed pages counter of the fuser unit.

7. IF YOU REPLACE A PF KIT

■ What to do after replacement

- Resetting Printed Pages Counter of a PF Kit
(Reset counters for consumable parts (Function code 88))

■ What you need to prepare

None

7.1 Resetting Printed Pages Counter of a PF Kit (Reset counters for consumable parts (Function code 88))

Refer to [“1.3.36 Reset counters for consumable parts \(Function code 88\)”](#) in Chapter 5 to reset the printed pages counter of the appropriate PF kit.

CHAPTER 5 SERVICE FUNCTIONS

1. MAINTENANCE MODE

Maintenance mode is exclusively designed for checking, setting and adjusting the machine using the keys on the control panel. Using maintenance mode functions, you can conduct operational checks of sensors or test printing, display the log information or error codes, and change the worker switches (WSW) etc.


1.1 How to Enter Maintenance Mode

1.1.1 Method of entering maintenance mode for service personnel


< Operating Procedure >

For models with touch panel


- (1) Press and hold the  for approximately five seconds while the machine is in the ready state. The display shown on the right appears on the LCD.

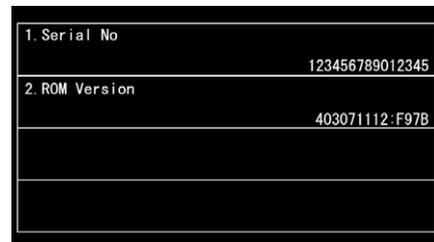

- (2) Press the blank field at the bottom. The display shown on the right appears on the LCD.

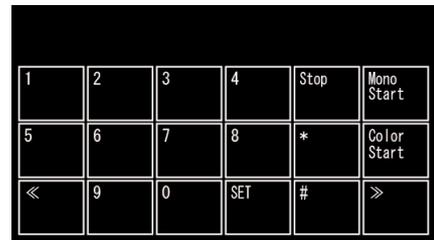

- (3) Press the [*], [2], [8], [6], and [4] in this order. The display shown on the right appears on the LCD, and the machine enters into maintenance mode.
- (4) To select any of the maintenance mode functions shown in the “1.2 List of Maintenance Mode Functions”, use the keypad to enter the maintenance mode function code to be executed.

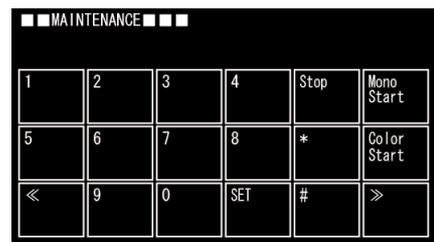

For models without touch panel

- (1) Press the [Menu] and then the [Start] while the machine is in the ready state. Then, press the [▲] four times. “■■ MAINTENANCE ■■■” appears on the LCD and the machine enters the maintenance mode.
- (2) To select any of the maintenance mode functions shown in the “1.2 List of Maintenance Mode Functions”, use the keypad to enter the function code to be executed.
For models without keypad, press the [▲] or [▼] to display any of the maintenance mode functions shown in the “1.2 List of Maintenance Mode Functions” on the LCD and select it by pressing the [OK].


1.1.2 Method of entering end-user accessible maintenance mode

The maintenance mode functions should only be accessed by service personnel. However, end users are allowed to use some of these functions under the guidance of service personnel over the phone. End users can only use the functions shaded in the table “1.2 List of Maintenance Mode Functions” (Function code 09, 10, 11, 12, 18, 25, 43, 45, 53, 54, 61, 66, 68, 71, 72, 77, 79, 80, 82, 87, 91).


< Operating Procedure >

For models with touch panel

- (1) Press and hold the  for approximately five seconds while the machine is in the ready state. The display shown on the right appears on the LCD.

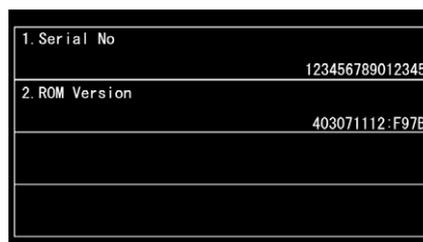

- (2) Press the blank field at the bottom on the LCD. The display shown on the right appears on the LCD.
- (3) Press the [*], [0], and [#] on the LCD in this order and “0” is displayed on the LCD. The machine enters into ready state to accept function code entry, so press the function code you want to execute.

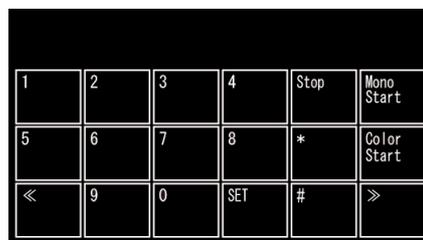

- (4) Each time the selected maintenance mode function is completed, the machine returns to the ready state automatically.

For models without touch panel

- (1) Press the [Menu], [Start], and [Menu] in this order while the machine is in the ready state. “0” is displayed on the LCD.
- (2) To select any of the maintenance mode functions, use the keypad to enter the function code to be executed.
For models without keypad, press the [▲] or [▼] to display the function code you want to execute on the LCD and press the [OK].
- (3) Each time the selected maintenance mode function is completed, the machine returns to the ready state automatically. However, for function codes 12, 25, 45, 80, and 82, pressing the [Stop/Exit] returns the machine to the ready state.

1.2 List of Maintenance Mode Functions

Function code	Function	Refer to:
01	Initialize EEPROM parameters	1.3.1 (5-4)
03	Transition to shipping state	1.3.2 (5-5)
08	ADF performance test	1.3.3 (5-6)
09	Monochrome print quality test pattern	1.3.4 (5-7)
10	Set worker switches (WSW)	1.3.5 (5-8)
11	Print worker switch (WSW) setting data	1.3.5 (5-11)
12	Check LCD operation	1.3.6 (5-12)
13	Check control panel key operation	1.3.7 (5-14)
18	Save the NetConfig information	1.3.8 (5-15)
25	Display software version	1.3.9 (5-16)
32	Check sensor operation	1.3.10 (5-17)
33	Display LAN connection status	1.3.11 (5-20)
43	Set PC-Print functions	1.3.12 (5-21)
45	Change USB No. return value / Switching Dither Pattern / Change ON/OFF setting of Direct Print Color mode-Improve Gray Color / Switching of timing to execute Auto Registration / Adjust left-end print position / Adjust upper-end print position / Change of the transfer current setting / Change of ghost reduction setting / Change of function switch / Change of drum developing bias correction value in endurance deterioration of drum / Switching of black toner discharge compensation	1.3.13 (5-24)
46	Adjust printable range for each speed level	1.3.14 (5-33)
53	Transfer received fax data / log information (fax models only)	1.3.15 (5-35)
54	Fine-tune scanning position	1.3.16 (5-37)
55	Acquire white level data and set CIS scan area	1.3.17 (5-38)
57	Check consumables function	1.3.18 (5-39)
61	Adjust touch panel	1.3.19 (5-46)
66	Adjustment of color registration (Adjustment of inter-color position alignment)	1.3.20 (5-47)
67	Continuous print test	1.3.21 (5-52)
68	LED ASSY test pattern print	1.3.22 (5-56)
69	Print frame pattern (1-sided printing)	1.3.23 (5-57)
70	Print frame pattern (2-sided printing)	1.3.24 (5-58)
71	Color test pattern	1.3.25 (5-59)
72	Sensitivity adjustment of density sensor	1.3.26 (5-62)
73	Continuous adjustments of density / registration sensor	1.3.27 (5-63)
74	Configure for country / region and model	1.3.28 (5-64)
77	Print maintenance information	1.3.29 (5-69)
78	Check fan operation	1.3.30 (5-71)
79	Delete fax data	1.3.31 (5-72)
80	Display machine log information	1.3.32 (5-73)
82	Display machine error code	1.3.33 (5-78)
83	Developing bias voltage correction	1.3.34 (5-79)
87	Send communication log information to telephone line	1.3.35 (5-80)
88	Reset counters for consumable parts	1.3.36 (5-81)
91	Initialize EEPROM parameters	1.3.1 (5-4)
99	Quit maintenance mode	1.3.37 (5-82)

* The maintenance mode functions shaded in the table can be used by end users.

1.3 Details of Maintenance Mode Functions

1.3.1 Initialize EEPROM parameters (Function code 01, 91)

< Function >

This function is used to initialize the setting values for operation parameters, user switches, and worker switches (WSW) registered in the EEPROM. Entering function code 01 initializes most EEPROM areas. Entering function code 91 initializes only the specified areas as shown in the table below.

Data item	01	91
Printer switch (Counter information)	Areas not to be initialized	Areas not to be initialized
Error history		
Mac Address (Ethernet Address)		
Continuity counter		
Password for control panel operation lock	Areas to be initialized	
Telephone function registration/ Telephone book		
Clock (RTC)		
Worker switches		
Secure function lock		
User switches (items initialized when Factory Reset is executed)		
Function settings except user switches (settings not subject to "Factory Reset")		
• Language	Areas to be initialized	
• Interface		
LAN setting		
PCL core area (Emulation setting values)		

< Operating Procedure >

(1) For models with touch panel

Press the [0], and then the [1] (or press the [9], and then the [1] as required) in the initial state of maintenance mode. "SELECT 01?" (or "SELECT 91?") is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 01" (or "MAINTENANCE 91" as needed) on the LCD, and press the [OK]. "SELECT 01?" (or "SELECT 91?") is displayed on the LCD.

(2) Press the [Mono Start] or [OK]. "PARAMETER INIT" is displayed on the LCD.

(3) When initializing parameters is completed, the machine returns to the initial state of maintenance mode.

Note:

Function code 01 is for service personnel. Function code 91 is for user support.

1.3.2 Transition to shipping state (Function code 03)

This function contains display soft switch Check SUM, change ON/OFF setting of special function at start up and transfer to the shipping state. Display soft switch Check SUM is function for sales correspondence or production process and not used for the service. Only change ON/OFF setting of special function at start up and transfer to the shipping state can used for the service.

■ Display soft switch Check SUM

< Function >

This function is to display soft switch check SUM such as FSW/USW/WSW etc. Only for soft switch display and not used for the service.

This function is displayed on LCD after enter function code 03 as “1.SWSUM?”.

■ Change ON/OFF setting of special function at start up

< Function >

When this parameter is [FUNC_DISABLE], perform switching the shipping state from OFF to ON (“ Transfer to the shipping state”). When this parameter is [FUNC_ENABLE], the shipping state cannot be switched to ON. Originally, during product manufacturing, this function switches whether to enable or disable the menu function displayed by the special function at start up, and it is invalid ([FUNC_DISABLE]) when the users use the machine.

< Operating Procedure >

(1) For models with touch panel

Press the [0], and then the [3] in the initial state of maintenance mode. “1.SWSUM?” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 03” on the LCD, and press the [OK]. “1.SWSUM?” is displayed on the LCD.

(2) Press the [▲] or [▼] to select “2.PowerOnFunc ?” and then press the [Start] or [Mono Start]. “FUNC_ENABLE” or “FUNC_DISABLE” is displayed on the LCD.

(3) If “FUNC_DISABLE” appears on the LCD, the machine's state is switchable to the factory shipping state. Press the [X] or [Stop] to return the machine to the initial state of maintenance mode.

If “FUNC_ENABLE” appears on the LCD, press the [▲] or [▼] to select “FUNC_DISABLE”, and press the [SET] or [OK].

The setting is written into the machine, and the machine returns to the initial screen of the function code 03.

■ Transfer to the shipping state

< Function >

This function is to transfer the machine to the shipping state when used new spare Main PCB for repair, etc. When not perform this function to the new spare Main PCB and leave, some software will be unavailable such as MPS applications or BrAdmin tool. Also, the machine keeps poor state of security such as risk of leaking private information. Do not forget to perform this function after replacing the new spare Main PCB. However, this product does not have function for place back to the pre-shipping state from the shipping state.

< Operating Procedure >

Note:

Be careful that if the special function at start up in the preceding item is a valid state ([FUNC_ENABLE]), it is unable to transfer the machine to the shipping state. Be sure to operate after changing to an invalid state ([FUNC_DISABLE]).

(1) For models with touch panel

Press the [0], and then the [3] in the initial state of maintenance mode. "1.SWSUM?" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 03" on the LCD, and press the [OK]. "1.SWSUM?" is displayed on the LCD.

(2) Press the [▲] or [▼] to select "3.ShippingStat?" and then press the [Start] or [Mono Start]. "ON" or "OFF: Change OK?" is displayed on the LCD.

(3) When "ON" is displayed on the LCD, the machine is at shipping state. Press the [X] or [Stop] to return to the initial state of the maintenance mode.

When "OFF: Change OK?" is displayed on the LCD, press the [SET]. The machine will transfer to the shipping state and returns to the initial state of the maintenance mode.

1.3.3 ADF performance test (Function code 08)

< Function >

This function is used to test the performance of the automatic document feeder (ADF). The scanned pages of the documents fed by the ADF are counted and the result is displayed on the LCD.

< Operating Procedure >

(1) Set the documents in the ADF unit. "DOC. READY" is displayed on the LCD.

(2) For models with touch panel

Press the [0], and then the [8] in the initial state of maintenance mode. "ADF CHECK P.**" is displayed on the LCD, and the documents are ejected while the scanned pages are counted. (** indicates the current count of the scanned pages.)

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 08" on the LCD, and press the [OK]. "ADF CHECK P.**" is displayed on the LCD, and the documents are ejected while the scanned pages are counted. (** indicates the current count of the scanned pages.)

(3) When the [X] or [Stop] is pressed, the machine returns to the initial state of maintenance mode.

1.3.4 Monochrome print quality test pattern (Function code 09)

< Function >

This function is used to print test patterns to check any missing image and print quality.

< Operating Procedure >

- (1) For models with touch panel

Press the [0], and then the [9] in the initial state of maintenance mode. "MAINTENANCE 09" is displayed on the LCD, and the machine starts printing the monochrome print quality test pattern (refer to the figure below).

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 09" on the LCD, and press the [OK]. "MAINTENANCE 09" is displayed on the LCD, and the machine starts printing the monochrome print quality test pattern (refer to the figure below).

- (2) When printing is completed, the machine returns to the initial state of maintenance mode.

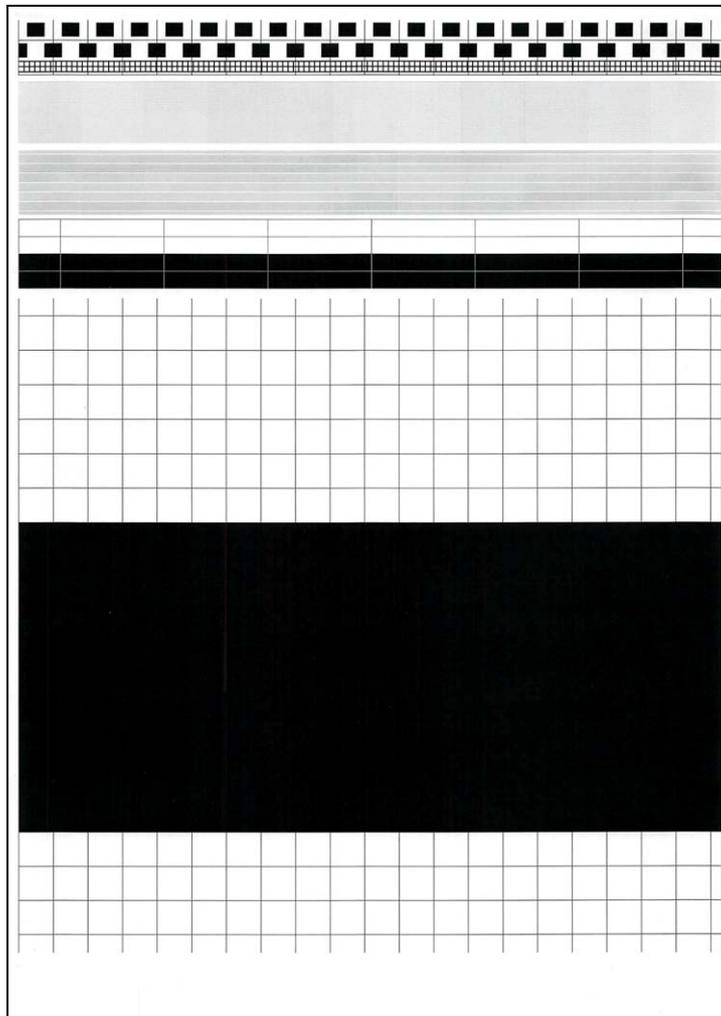


Fig. 5-1

Note:

This print is available even Cyan, Magenta and Yellow toner cartridge is empty or "No toner" status.

1.3.5 Set worker switches (WSW) and print worker switch setting data (Function code 10, 11)

[1] Set worker switches (Function code 10)

< Function >

The worker switches shown in the table below can be used to set the function to satisfy various requirements. These switch settings can be changed using the keys on the control panel. The worker switches are factory set to conform to the laws and regulations of the country the machine is shipped to. Do not change these settings unless necessary.

WSW No.	Function	WSW No.	Function
WSW01	Dial pulse setting	WSW34	Function setting
WSW02	Tone signal setting	WSW35	Function setting
WSW03	PABX mode setting	WSW36	Function setting
WSW04	Transfer facility setting	WSW37	Memory operation
WSW05	1st dial tone and busy tone detection	WSW38	V.34 transmission settings
		WSW39	V.34 transmission speed
WSW06	[Redial/Pause] and 2nd dial tone detection	WSW40	V.34 modem settings
		WSW41	ON-duration of the scanning light source
WSW07	Dial tone setting 1	WSW42	Internet mail settings
WSW08	Dial tone setting 2	WSW43	Function setting
WSW09	Protocol definition 1	WSW44	Speeding up scanning-1
WSW10	Protocol definition 2	WSW45	Function setting
WSW11	Busy tone setting	WSW46	PC power monitoring and parallel port settings
WSW12	Signal detection condition setting		
WSW13	Modem setting	WSW47	Switching between high- and full-speed USB
WSW14	AUTO ANS facility setting		
WSW15	Redial facility setting	WSW48	USB setup latency
WSW16	Function setting	WSW49	End-of-copying beep
WSW17	Function setting	WSW50	SDAA setting
WSW18	Function setting	WSW51	Function setting
WSW19	Transmission speed setting	WSW52	Function setting
WSW20	Overseas communication mode setting		
WSW21	TAD setting 1	WSW53	Function setting
WSW22	ECM and call waiting caller ID communication setting	WSW54	Function setting
WSW23	Communication setting	WSW56	Function setting
WSW24	TAD setting 2		
WSW25	TAD setting 3	WSW57	Function setting
WSW26	Function setting	WSW58	Function setting
WSW27	Function setting	WSW59	Function setting
WSW28	Function setting	WSW60	Function setting
WSW29	Function setting	WSW61	Scanning light intensity to judge to be stable 1
WSW30	Function setting		
WSW31	Function setting	WSW62	Reading motor temperature counter / Submission confirmation when IFAX / Scan to Email is set.
WSW32	Function setting		
WSW33	Function setting	WSW63	Function setting

WSW No.	Function	WSW No.	Function
WSW64	Language / default paper size setting	WSW81	Changing emulation function enable/disable setting
WSW65	Paper support setting	WSW82	AirPrint Icon No. setting
WSW66	Change of the setting is prohibited	WSW83	Change of the setting is prohibited
WSW67	Change of the setting is prohibited	WSW84	Change of the setting is prohibited
WSW68	Change of the setting is prohibited	WSW85	Function setting
WSW69	Change of the setting is prohibited	WSW86	Change of the setting is prohibited
WSW70	Change of the setting is prohibited	WSW87	Change of the setting is prohibited
WSW71	Change of the setting is prohibited	WSW88	Detection of the threshold of remaining T1 amount
WSW72	Change of the setting is prohibited		
WSW73	Change of the setting is prohibited	WSW89	Change of the setting is prohibited
WSW74	Low power mode	WSW90	Detection of the threshold of remaining T2 amount
WSW75	Change of the setting is prohibited		
WSW76	Function setting	WSW91	Change of the setting is prohibited
		WSW92	Change of the setting is prohibited
		WSW93	Detection of the threshold of remaining T3 amount
WSW77	Change of the setting is prohibited	WSW94	Detection of the threshold of remaining T4 amount
		WSW95	Detection of the threshold of remaining T5 amount
WSW78	Function setting	WSW96	Change of the setting is prohibited
		WSW97	Font type in Remote Setup display
WSW79	Function setting	WSW98	Function setting
WSW80	Copying speed control function	WSW99	Change of the setting is prohibited

< Operating Procedure >

(1) For models with touch panel

Press the [1], and then the [0] in the initial state of maintenance mode. "WSW00" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 10" on the LCD, and press the [OK]. "WSW00" is displayed on the LCD.

(2) For models with touch panel

Enter the worker switch number that you want to change the setting. The following display appears on the LCD.

For models without touch panel

Press the [▲] or [▼] to display the worker switch number for which you want to change the setting on the LCD and press the [OK]. The following display appears on the LCD.

Selector No.1	Selector No.8
↓	↓
WSWXX = <u>0</u> 0 0 0 0 0 0 0	

(3) For models with touch panel

Press the [◀] or [▶] to move the cursor to the desired selector, and change the setting by pressing the [1] or [0].

For models without touch panel

Pressing the [▲] enters "1" and pressing the [▼] enters "0". Press the button of the number that you want to enter to Selector No.1. The underline cursor moves to the next digit. Use the [▲] or [▼] to keep entering numbers until the Selector No.8 is entered in the procedures from (2) to (5).

- (4) When changing the setting is completed, press the [SET] or [OK]. The new selector setting value is stored in the EEPROM, and the LCD returns to the ready state for worker switch number entry ("WSW00").
- (5) When all switch setting is completed, press the [X] or [Stop] to return the machine to the initial state of maintenance mode.

Note:

- To cancel operation and return to the initial state of maintenance mode, press the [X] or [Stop].
- If there is no entry for one minute or longer on 2-digit worker switch number selection after the first digit was entered, the machine returns to the initial state of maintenance mode automatically.

[2] Print worker switch (WSW) setting data (Function code 11)

< Function >

This function is used to print the worker switch settings and details.

< Operating Procedure >

- (1) For models with touch panel

Press the [1] twice in the initial state of maintenance mode.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 11" on the LCD, and press the [OK].

- (2) "PRINTING" is displayed on the LCD, and printing the CONFIGURATION LIST (refer to the figure below) starts.
- (3) When printing is completed, the machine returns to the initial state of maintenance mode.

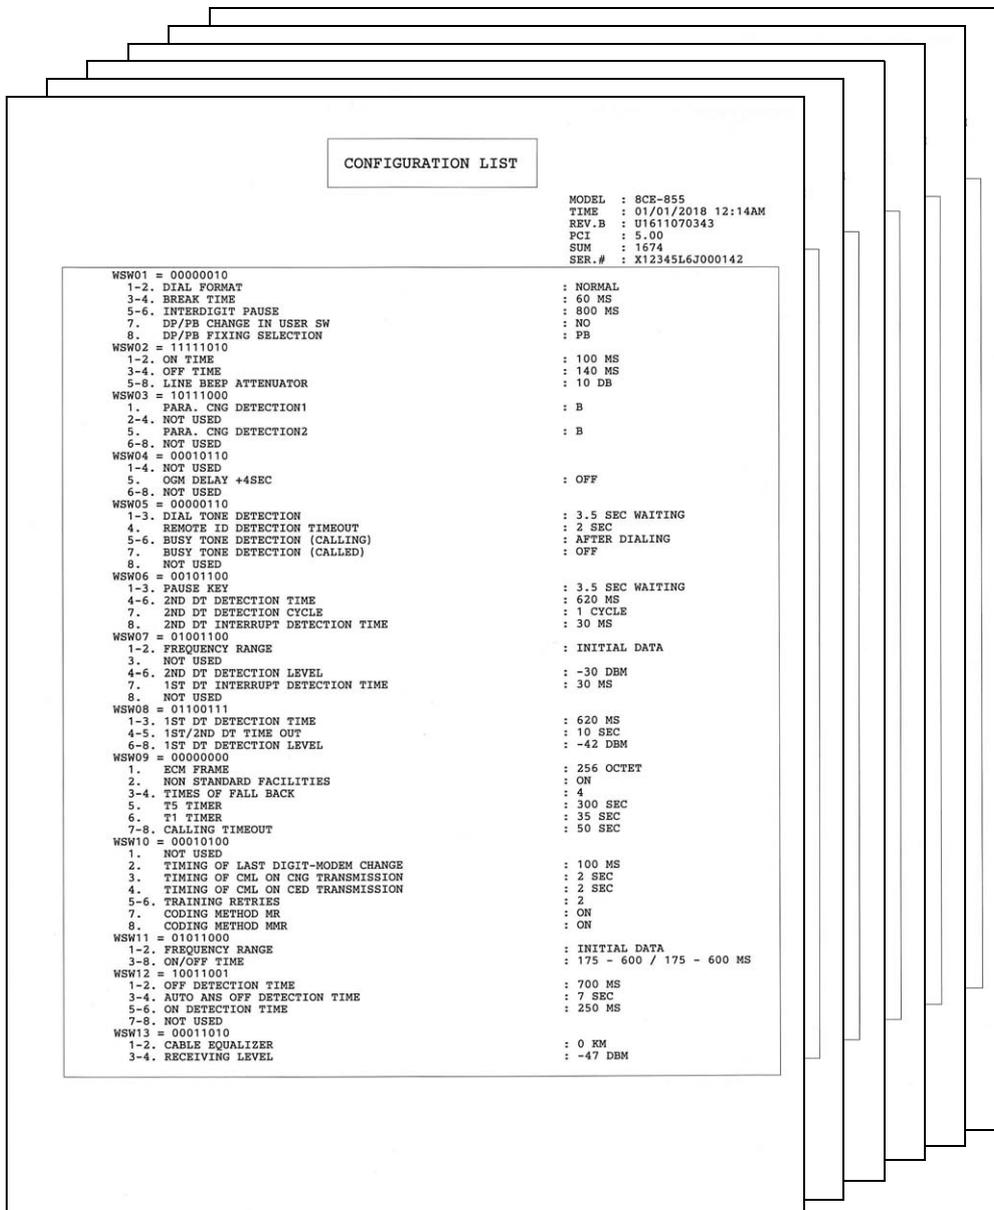


Fig. 5-2

1.3.6 Check LCD operation (Function code 12)

< Function >

This function is used to check that the LCD on the control panel is operating normally.

< Operating Procedure >

For models with touch panel

(1) Press the [1], and then the [2] in the initial state of maintenance mode. LCD displays shown as the chart below.

(2) Press the  to switch the display column A and display column B.

By pressing the , LCD moves to the next display of the each column according to the chart. When you press the  at the Display B-7 of the each column, LCD returns to display B-1. Press the  to return to the last LCD display.

Note:

At <Display A-7>, you cannot switch the display to column B even press the .

(3) When you press the [X] or [Stop] at the Display A-7 or B-1 to 7, the machine returns to the initial state of the maintenance mode.

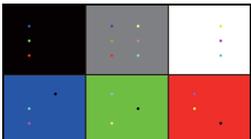
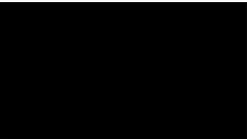
<Display A-1> all white		<Display B-1> bright point/ down point	
<Display A-2> all black		<Display B-2> bright point	
<Display A-3> all gray		<Display B-3> white gradual	
<Display A-4> all red		<Display B-4> red gradual	
<Display A-5> all green		<Display B-5> green gradual	
<Display A-6> all blue		<Display B-6> blue gradual	
<Display A-7> picture data		<Display B-7> Displays BMP file in the Media by rotation	

Fig. 5-3

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 12" on the LCD, and press the [OK]. Displays shown in the figure below appear on the LCD.
- (2) Each press of the [Start] cycles through the displays as shown in the figure below.
- (3) Press the [Stop], and the machine returns to the initial state of maintenance mode.

Non-China model

China model

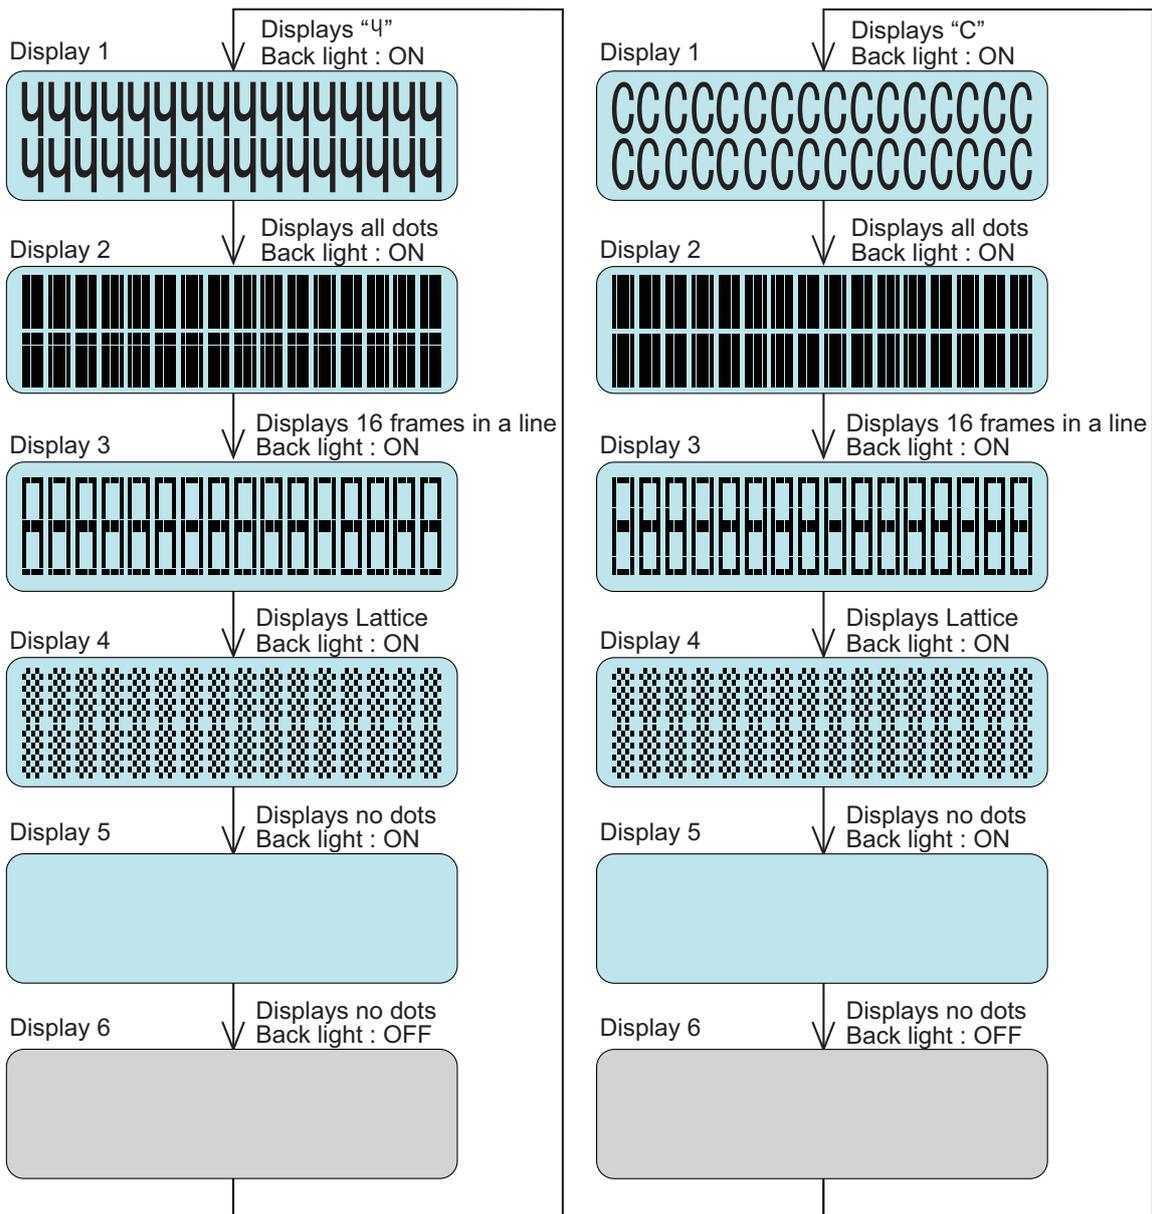


Fig. 5-4

1.3.7 Check control panel key operation (Function code 13)

< Function >

This function is used to check that keys on the control panel are operating normally.

< Operating Procedure >

- (1) For models with touch panel

Press the [1], and then the [3] in the initial state of maintenance mode. "00" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 13" on the LCD, and press the [OK]. "00" is displayed on the LCD.

- (2) Press the keys on the control panel according to the numbers provided in the figure below. Each time the key is pressed, the corresponding figure is displayed on the LCD in decimal notation. Check that the number displayed on the LCD matches the number assigned to the key that has been pressed. If the keys are pressed in the incorrect order, "INVALID OPERATE" is displayed on the LCD. Press the [X] or [Stop] and try again with the correct key.
- (3) When the key operation is normal, the machine returns to the initial state of maintenance mode when the last key is pressed. To cancel operation and return to the initial state of maintenance mode, press the [X] or [Stop].

■ Order of pressing keys

For models without touch panel



For models with touch panel



Fig. 5-5

1.3.8 Save the NetConfig information (Function code 18)

< Function >

This function is to save the NetConfig information to USB flash memory.

< Operating Procedure >

- (1) Press the [1], and then the [8] in the initial state of maintenance mode. "NETCONFIG" is displayed on the LCD.
- (2) Set the USB flash memory to the USB host terminal.
- (3) Press the [SET]. "SAVE TO USB" is displayed on the LCD.
- (4) Press the [SET]. "USB SAVING" is displayed on the LCD and "NetConfig" folder is created in the USB flash memory. NetConfig information is saved as "CFG-PAGE_**.txt" in the folder and returns to the initial state of maintenance mode.

"**" in the file name is the number of NetConfig information appearance in the folder.

If there are no NetConfig information in the folder, the file will be saved as "00" and if the same name is already in it, the file will be made as "01".

1.3.9 Display software version (Function code 25)

< Function >

This function is used to check the version information of the firmwares and programs, or check sum information.

< Operating Procedure >

(1) For models with touch panel

Press the [2], and then the [5] in the initial state of maintenance mode. "TOTAL: Ver **" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 25" on the LCD, and press the [OK]. "TOTAL: Ver A" is displayed on the LCD.

(2) Pressing the [Start] or [Mono Start] changes the display to the next item.

(3) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

LCD	Description
TOTAL: Ver A * ¹	Main firmware version information
SUB1 : Ver1.00 (P) * ¹	Sub firmware version information ((P): Identifier for PCL/PS) * ²
ENG : Ver1.00	Engine program version information
NET : Ver1.00	Network program version information
SUB5 :1.00(1.00a) * ¹	Sub 5 firmware version information
i0801170900:0000	I-FAX version information
B1712312359:1234 * ¹	Boot program creation date and check sum information
U1712312359:1234 * ¹	Main firmware creation date and check sum information
C1706021159:1234	UI custom data version information and check sum information
P1712271602:BD40 * ¹	Sub firmware (PCL/PS) creation date and check sum information
e1712312359:1234	Sub 5 firmware creation date and check sum information
ROM Check Sum	Check sum self-diagnosis function * ³

*¹ How to display the check sum information
You can check the check sum information by pressing the [SET] or [OK] while each version is displayed. When the [SET] or [OK] is pressed again, the LCD returns to the version display.

*² (P), (G), or (-) is displayed at the place of (P).
(P): Supports PCL/PS, (G): Supports GDI, (-): Unrecognized

*³ There are two types of check sum information that can be checked with this function. This function checks if the two types of check sum information match each other. When the [SET] or [OK] is pressed while "ROM Check Sum" is displayed, check is automatically conducted for each ROM of each software part. When the check sum matches, "OK" is displayed on the LCD. When all ROMs result in "OK", "ROM Check Sum OK" is displayed at the end, and the operation is finished. When the check sum of any ROM does not match, "NG" is displayed, and the display stops.

1.3.10 Check sensor operation (Function code 32)

< Function >

This function is used to check whether the sensors are operating normally.

< Operating Procedure >

(1) For models with touch panel

Press the [3], and then the [2] in the initial state of maintenance mode. Following example is displayed on the LCD.

e.g.) RCNKNCNMNYCV****

The speaker makes buzzing sound continuously.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 32” on the LCD, and press the [OK]. Following example is displayed on the LCD.

e.g.) RCNKNCNMNYCV****

The speaker makes buzzing sound continuously.

Note:

Press the [SET] or [OK] to stop the buzzing sound from the speaker.

- (2) Pressing the [Start] or [Mono Start] changes the display to the next item.
- (3) Change the conditions subject to sensor detection shown below and check that the display on the LCD changes depending on the sensor status. For example, feed the paper through the registration front/rear sensor, open the top cover or back cover, remove the toner cartridge, or create paper jam at the exit.
- (4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

<Sensor check>

The table below summarizes the displays on the LCD, sensor names and detection status.

LCD	Sensor name	Detection status	
		With display	No display
RC	Back cover sensor	Back cover closed	Back cover open
CV	Top cover sensor	Top cover closed	Top cover open
C1	T1 paper feed sensor	T1 closed	T1 open
MP	MP paper empty sensor / Manual feed paper empty sensor	No paper	Paper set
MR	MP registration front sensor	No paper	Paper set
PO	Eject sensor	No paper	Paper set
RM	Registration front sensor	No paper	Paper set
RA	Registration rear sensor	No paper	Paper set
MACxx	Internal temperature sensor	XX °C	NG
OTxx	External temperature sensor	XX °C	NG
OHxx	External humidity sensor	XX%	NG
DF	Document detection sensor	No document	Document set
DR	Document scanning position sensor	No document	Document set
AC	ADF cover sensor	ADF cover closed	ADF cover open

Note:

If the temperature/humidity sensor detects the unusual value, the machine displays “NG” on the LCD.

■ Location of sensors

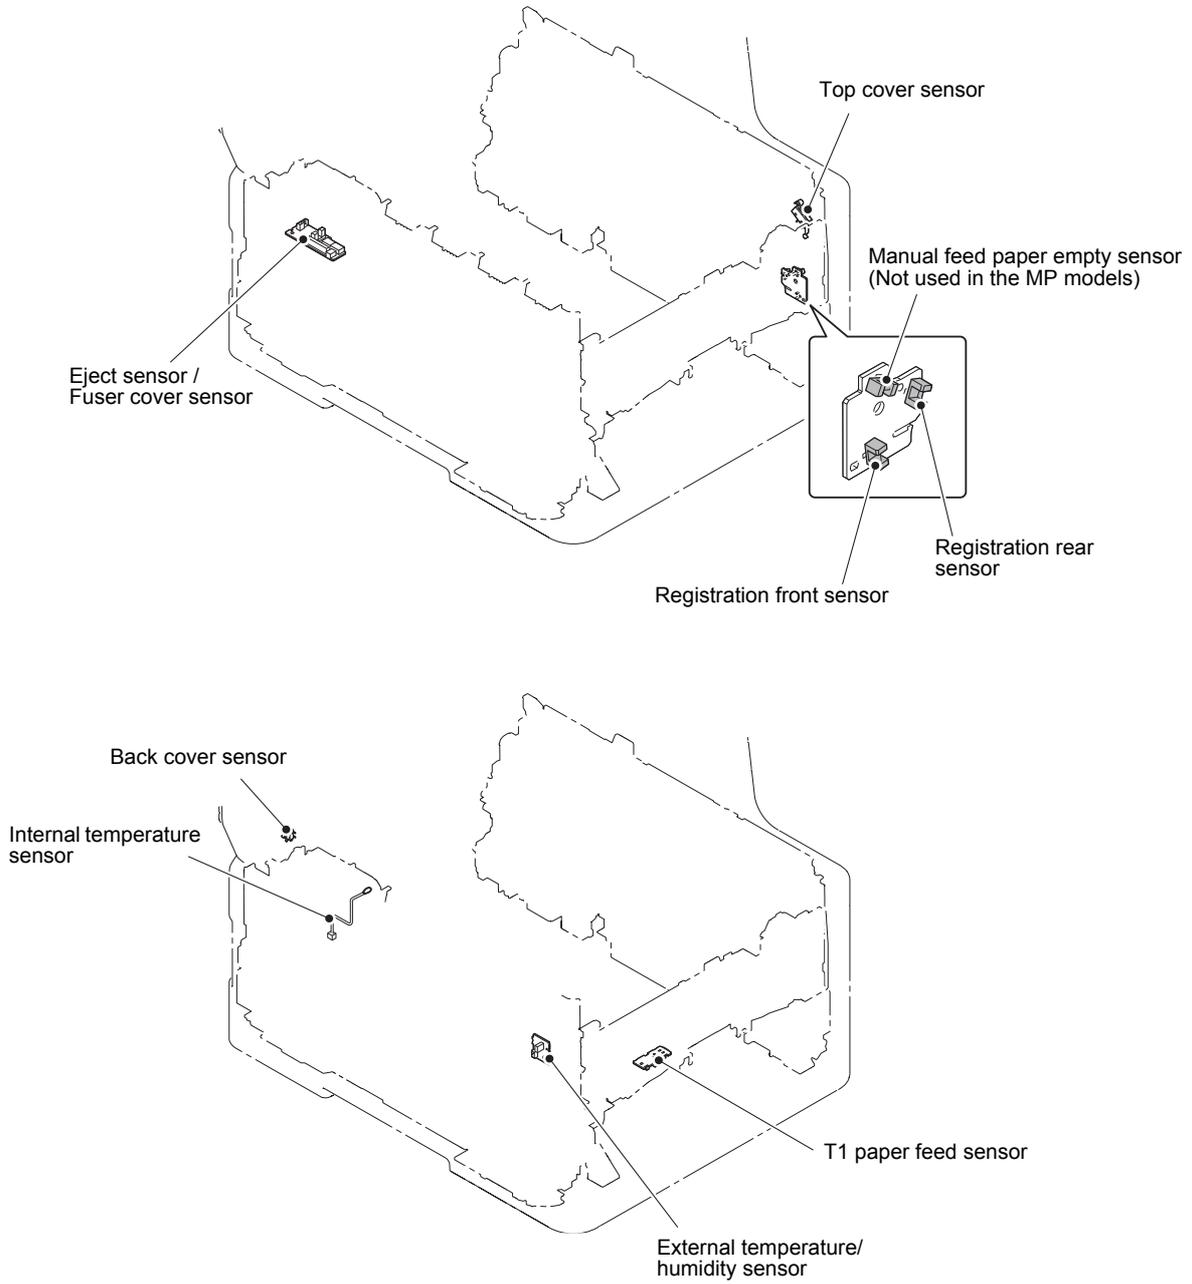


Fig. 5-6

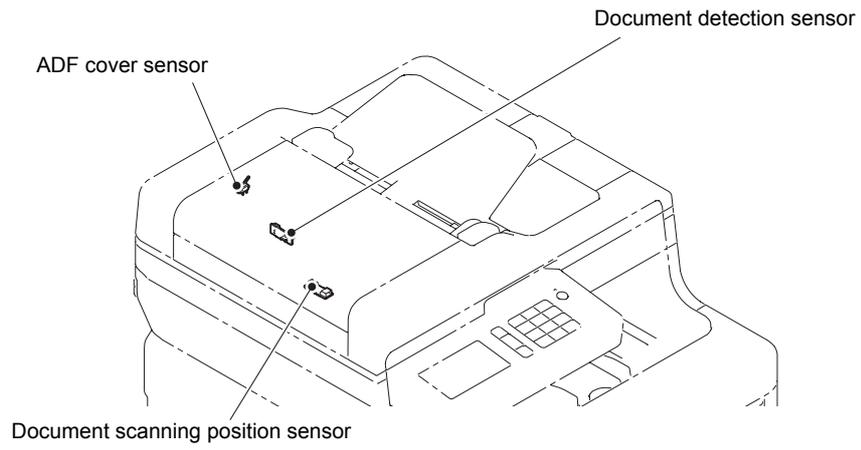


Fig. 5-7

1.3.11 Display LAN connection status (Function code 33)

< Function >

This function is used to check the connection status of the wired LAN.

< Operating Procedure >

- (1) For models with touch panel

Press the [3] twice in the initial state of maintenance mode.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 33" on the LCD, and press the [OK].

- (2) One of the items in the following table is displayed on the LCD depending on the wired LAN connection of the machine.
- (3) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

LCD	LAN connection status
Active 100B-FD	100B-FD
Active 100B-HD	100B-HD
Active 10B-FD	10B-FD
Active 10B-HD	10B-HD
Inactive	Not connected

1.3.12 Set PC-Print functions (Function code 43)

< Function >

This function is used to change the settings of the various print functions summarized in the table below.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [3] in the initial state of maintenance mode. "Manual Feed" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 43" on the LCD, and press the [OK]. "Manual Feed" is displayed on the LCD.

(2) Press the [▲] or [▼] to display the function you want to change the setting of, and press the [SET] or [OK].

(3) For fixed parameters (On/Off, etc.), press the [▲] or [▼] to display the setting you want to apply, and press the [SET] or [OK].

For parameters requiring numerical value entry

For models with touch panel, use the keypad to enter a numerical value directly, and press the [SET].

For models without touch panel, press the [▲] or [▼] to change the selected number (0 to 9).

(4) When the [X] or [Stop] is pressed, the machine returns to the initial state of maintenance mode.

■ Setting functions

LCD	Description	Set value	Default
Manual Feed	Manual feed setting	On/Off	Off
Resolution	Print resolution	300/600/1200 dpi	600 dpi
Toner Save	Toner save mode setting	On/Off	Off
Density	Print density level	-6 to 6	0
JB-Can Time	Time until host timeout after a job is canceled	0 to 255 seconds	10 seconds
Sleep Time	Time until sleep mode is entered	0 to 99 minutes	1 minute
Page Protection	Page memory setting	Off/LTR/A4/LGL/Auto	Auto
Emulation	Emulation (print language) setting	Auto/PCL/PS	Auto
Auto I/F Time	Interface open time setting	1 to 99 seconds	5 seconds
Media Type	Paper type setting	Thin/Plain/Thick/Thicker/ *Trans/Recycled/Bond/Env/ EnvThin/EnvThick	Plain or Thin
Paper Size	Image development area setting	Letter/Legal/A4/Exec/ISOB5/ JISB5/A5/ISOB6/A6/ Monarch/C5/COM10/DL/ DLL/A4Long/Hagaki/Folio	Letter or A4
Copies	Number of copies	1 to 99 copies	1 copy
Orientation	Print direction setting	Portrait/Landscape	Port/Land
P-Pos X-Offset	Print position offset in X (landscape) direction	-500 to 500 (1/300 dpi)	0 (1/300 dpi)

* When Trans is displayed on the menu, the setting is ignored because of the paper not within the specification.

LCD	Description	Set value	Default
P-Pos Y-Offset	Print position offset in Y (portrait) direction	-500 to 500 (1/300 dpi)	0 (1/300 dpi)
Auto FF	Auto Form Feed setting	On/Off	Off
Auto FF Time	Time until Auto Form Feed timeout	1 to 99 seconds	5 seconds
FF Suppress	Blank page skip setting	On/Off	Off
Auto LF	Auto linefeed (LF) setting	On/Off	Off
Auto CR	Auto carriage return (CR) setting	On/Off	Off
Auto WRAP	Auto CRLF by print width	On/Off	Off
Auto Skip	Back end / tip skip setting	On/Off	On
Left Margin	Left margin setting	0 to 145 columns	0 column
Right Margin	Right margin setting	10 to 155 columns	80 columns
Top Margin	Top margin setting	0 to 2.00 inches	0.5 inches
Bottom Margin	Bottom margin setting	0 to 2.00 inches	0.5 inches
Lines	Text lines per page	5 to 128 lines	60 lines
Error Print	Error Print setting in the event of PostScript error	On/Off	On

■ Detail description

LCD	Detail description
Manual Feed	Valid for printing from the computer, and for printing NetWorkConfig, TestPrint, Fontlist, or Configuration from the panel. When the tray is selected on the computer, the setting on the computer supersedes the setting on the LCD.
Resolution	Valid for printing from the computer only. When the resolution is set on the computer, the setting on the computer supersedes the setting on the LCD.
Toner Save	Valid for all types of printing except copy, and the Function Menu setting will also be changed. When the TonerSave is set on the computer, the setting on the computer supersedes the setting on the LCD.
Density	Valid for printing from the computer, and for printing NetWorkConfig, TestPrint, Fontlist, or Configuration from the panel. Linked with the Toner Save setting, and the density is determined based on both settings. When the Density is set on the computer, the setting on the computer supersedes the setting on the LCD.
JB-Can Time	Sets the time until the host timeout after a job is canceled. The setting unit is on the second time scale.
Sleep Time	Sets the time until the sleep mode is entered. The Function Menu setting will also be changed.
Page Protection	Sets the page memory to be secured for data processing before printing in the computer. As this is a setting in the PCL-Core, this does not affect the memory management of the machine.
Emulation	Changes the print language. The Function Menu setting becomes valid. For data with ENTERLANGUAGE, this setting supersedes the setting on the LCD.

LCD	Detail description
Auto I/F Time	Change the interface open time. This setting becomes valid when PC-Print is instructed, and becomes invalid when PC-Scan or Remote-SetUp is instructed.
Media Type	Valid for printing from the computer only. When the Paper type is set on the computer, the setting on the computer supersedes the setting on the LCD. The default varies depending on the country setting. "Thin" is the default for China and "Plain" is the default for other countries.
Paper Size	Changes the image development area. Sets the drawing size for PC-Print, instead of the setting for Paper Size in the menu. When the Paper size is set on the computer, the setting on the computer supersedes the setting on the LCD. The default varies depending on the country setting. "Letter" is the default for U.S.A. / Canada and "A4" is the default for other countries.
Copies	Valid for printing from the computer only. When the number of copies is set on the computer, the setting on the computer supersedes the setting on the LCD.
Orientation	Changes the printing direction. Valid for printing from the computer only.
P-Pos X-Offset	Sets the print position offset in the X (landscape) direction. Valid for printing from the computer only. When the X-Offset is set on the computer, the setting on the computer supersedes the setting on the LCD.
P-Pos Y-Offset	Sets the print position offset in the Y (portrait) direction. Valid for printing from the computer only. When the Y-Offset is set on the computer, the setting on the computer supersedes the setting on the LCD.
Auto FF	Sets ON or OFF for AutoFF (automatic form feed). Valid for printing from the computer only.
Auto FF Time	Sets the time until timeout after AutoFF is set to ON.
FF Suppress	Sets whether to skip blank pages. Valid for printing from the computer only. On or Off setting of the blank data for copying or faxing cannot be changed in this setting.
Auto LF	Sets the auto linefeed.
Auto CR	Sets the auto carriage return. Adds CR to the LF code.
Auto WRAP	Sets the auto CRLF by the print width.
Auto Skip	Sets whether to skip at the back end / tip of paper. Adds a blank space.
Left Margin	Sets the column space at the left side.
Right Margin	Set the column space at the right side.
Top Margin	Sets the space at the top.
Bottom Margin	Sets the space at the bottom.
Lines	Sets the number of lines in the PCL.
Error Print	Sets the Error Print in the event of a BR-Script 3 error.

1.3.13 Change USB No. return value / Switching Dither Pattern / Switching of ON/OFF of DirectPrint Color mode-Improve Gray Color / Switching of timing to execute Auto Registration / Adjust left-end print position / Adjust upper-end print position / Change of the transfer current setting / Change of ghost reduction setting / Change of function switch / Change of drum developing bias correction value in endurance deterioration of drum / Switching of black toner discharge compensation (Function code 45)

■ Change USB No. return value

< Function >

When the operating system (OS) installed on the computer is Windows Vista[®], and the machine is connected to this computer using USB2.0FULL, the OS may not be able to obtain the USB device serial number depending on the computer and USB device. If the serial number cannot be obtained, the number of devices increases each time the device is connected to the computer. To avoid this problem, set this function to “USBNo.=ON” and fix the USB No. return value to “0”.

LCD	Description
USBNo. =ON	Returns the serial number of the machine. (default)
USBNo. =OFF	Returns “0”.

The setting currently selected is marked “*” at the end of the display.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [SET] or [OK]. “USBNo.=OFF” is displayed on the LCD.
- (3) Press the [▲] or [▼] to select “USBNo.=ON” or “USBNo.=OFF”, and then press the [SET] or [OK].
- (4) “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.
- (5) Turn the power switch OFF.

Note:

This setting is applied after the power switch is turned OFF and then ON again.

■ Switching Dither Pattern

< Function >

This function is to switch the dither pattern when printed letters and/or slanted lines are not smooth, and thin lines are rough or uneven.

LCD	Description
PS.DitherType=0	Dither Pattern 0 is selected. (A dither pattern which improves roughness of letters and slanted lines) (default)
PS.DitherType=1	Dither Pattern 1 is selected. (A dither pattern which alleviates banding)

“**” is displayed at the end of the currently specified function in the LCD display.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [▲] or [▼] to display “PS.DitherType” on the LCD, and press the [SET] or [OK].
- (3) Press the [▲] or [▼] to select “PS.DitherType = 0” or “PS.DitherType = 1” on the LCD, and press the [SET] or [OK].
- (4) “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

■ Switching of ON/OFF of DirectPrint Color mode-Improve Gray Color

< Function >

This function is to switch ON/OFF of the print control for the gray color when other colors are slightly blended in the gray color or the gray color is uneven upon printing.

LCD	Description
DP.ImpGray=ON	DirectPrint Color mode - Improve Gray Color. (Print control for gray color) ON (Improves the symptom that other colors are slightly blended in the gray color.) (default)
DP.ImpGray=OFF	DirectPrint Color mode - Improve Gray Color. (Print control for gray color) OFF (Improves the unevenness of the gray color.)

“**” is displayed at the end of the currently specified function in the LCD display.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [▲] or [▼] to display “DP.ImpGray” on the LCD, and press the [SET] or [OK].
- (3) Press the [▲] or [▼] to select “DP.ImpGray = ON” or “DP.ImpGray = OFF” on the LCD, and press the [SET] or [OK].
- (4) “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

■ Switching of timing to execute Auto Registration

< Function >

Relative displacement between Cyan, Magenta, Yellow, and Black is detected using the registration mark sensor, and the Auto Registration is executed at the timing when the displacement value exceeds the stipulated threshold value.

This function is to switch the threshold value which is used as the timing to execute Auto Registration. The threshold value can be switched in three phases between High, Mid, and Low.

LCD	Description
Regi Freq=Mid	The frequency to execute Auto Registration is middle. (default)
Regi Freq=High	The frequency to execute Auto Registration is high.
Regi Freq=Low	The frequency to execute Auto Registration is low.

“*” is displayed at the end of the currently specified function in the LCD display.

Note:

It can be set regardless of the Auto Registration switching function in the function menu. Even if this function is switched, it does not affect the timing to execute Auto Registration in the function menu.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [▲] or [▼] to select “Regi Freq = Low” on the LCD, and press the [SET] or [OK].
- (3) “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

■ Adjust left-end print position

< Function >

In the event that the left-end print start position deviates, use this function to adjust the position left and right. The adjustable range is -100 to 750 (1 unit = 0.084 mm = 300 dpi).

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. "USBNo." is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 45" on the LCD, and press the [OK]. "USBNo." is displayed on the LCD.

- (2) Press the [▲] or [▼] to display "X Adjust" on the LCD, and press the [SET] or [OK]. "XAdjust MP" is displayed on the LCD.
- (3) Refer to <Adjustment option table> in the table below, press the [▲] or [▼] to select from the adjustment options, and press the [SET]. "XAdj. **= 0*" is displayed on the LCD. (Selected option is shown for **.)
- (4) To shift the writing start position to the left, press the [▼] to decrease the value. To shift the position to the right, press the [▲] to increase the value.
- (5) Press the [SET] or [OK] after adjusting the value. "Accepted" is displayed on the LCD.
- (6) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

<Adjustment option table>

1-sided printing

Adjustment option	LCD
MP tray first side	X Adjust MP
T1 first side	X Adjust T1
N/A (disabled)	X Adjust DX
N/A (disabled)	X Adjust DXMP

2-sided printing

Adjustment option	LCD
MP tray second side	X Adjust MP
T1 second side	X Adjust T1
*1	X Adjust DX
MP tray first side	X Adjust DXMP
T1 first side	X Adjust DXT1

- *1 Adjusts first side print start position of all tray (T1 and MP tray). Value of X Adjust DX is added to each tray adjustment value.
For example, when printing from the T1, it adjusts as "X Adjust DXT1 value" + "X Adjust DX value" and print. Besides, when the added value is over than the adjustable range (-100 to 750), adjusted value will be for minimum -100 and maximum 750 and does not become out of adjustable range.

■ Adjust upper-end print position

< Function >

In the event that the upper-end print start position deviates, use this function to adjust the position up and down. Adjustable range is -50 to 50 (1 unit = 0.084 mm = 300 dpi).

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. "USBNo." is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 45" on the LCD, and press the [OK]. "USBNo." is displayed on the LCD.

- (2) Press the [▲] or [▼] to display "Y Adjust" on the LCD, and press the [SET] or [OK]. "YAdjust MP" is displayed on the LCD.
- (3) Refer to <Adjustment option table> in the table below, press the [▲] or [▼] to select from the adjustment options, and press the [SET] or [OK]. "YAdj. **= 0*" is displayed on the LCD. (Selected option is shown for **.)
- (4) To shift the writing start position down, press the [▲] to increase the value. To shift the position up, press the [▼] to decrease the value.
- (5) Press the [SET] or [OK] after adjusting the value. "Accepted" is displayed on the LCD.
- (6) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

<Adjustment option table>

1-sided printing

Adjustment option	LCD
MP tray first side	Y Adjust MP
T1 first side	Y Adjust T1
*1	Y Adjust TRAY
N/A (disabled)	Y Adjust DX
N/A (disabled)	Y Adjust DXMP
N/A (disabled)	Y Adjust DXT1

2-sided printing

Adjustment option	LCD
MP tray second side	Y Adjust MP
T1 second side	Y Adjust T1
*2	Y Adjust TRAY
*1	Y Adjust DX
MP tray first side	Y Adjust DXMP
T1 first side	Y Adjust DXT1

*1 Adjusts first side print start position of all tray (T1 and MP tray). Value of Y Adjust TRAY and Y Adjust DX is added to each tray adjustment value.
For example, when printing from the T1, it adjusts as "Y Adjust T1 value" + "Y Adjust TRAY value" or "Y Adjust DXT1 value" + "Y Adjust DX value" and print. Besides, when the added value is over than the adjustable range (-50 to 50), adjusted value will be for minimum -50 and maximum 50 and does not become out of adjustable range.

*2 Adjusts second side print start position of all tray (T1 and MP tray). Value of Y Adjust TRAY is added to each tray adjustment value.
For example, when printing from the T1, it adjusts as "Y Adjust T1 value" + "Y Adjust TRAY value" and print. Besides, when the added value is over than the adjustable range (-50 to 50), adjusted value will be for minimum -50 and maximum 50 and does not become out of adjustable range.

■ Change of the transfer current setting (Only for Japan models)

< Function >

Dots appeared when hagaki printing is performed can be alleviated by changing the transfer current setting.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. "USBNo." is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 45" on the LCD, and press the [OK]. "USBNo." is displayed on the LCD.

- (2) Press the [▲] or [▼] to display "Special Printing" on the LCD, and press the [SET] or [OK]. "default" is displayed on the LCD.
- (3) Press the [▲] or [▼] to change the setting, and press the [SET] or [OK]. There are four setting options: "default", "HAGAKI1", "HAGAKI2", and "HAGAKI3". ("*" is displayed at the end of the currently specified function in the LCD display. The initial value is "default".)
- (4) "Accepted" is displayed on the LCD, and the machine returns to the initial state of maintenance mode.
- (5) Perform hagaki printing again to check if the dot symptom is improved.
- (6) If not, repeat the steps (1) to (4) to set an optimum option, and then perform hagaki printing.

■ Change of ghost reduction setting

< Function >

This function is a mode to reduce the level of ghost when it appears in low temperature and high humidity environment. If this function is turned ON, however, spots and dirt may appear on print.

LCD	Description
ON	Turn ON the ghost reduction function.
OFF	Turn OFF the ghost reduction function. (default)

“*” is displayed at the end of the currently specified function in the LCD display.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [▲] or [▼] to display “Ghost Reduction” and then press the [SET] or [OK].
- (3) Press the [▲] or [▼] to select “ON” or “OFF”, and press the [SET] or [OK].
- (4) “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

■ Change of function switch

< Function >

This function is used to stop the soft switch function, so it is the function that is not used for the service but for the designers.

■ Change of drum developing bias correction value in endurance deterioration of drum

< Function >

When the print image becomes light at the end of use of the drum unit, changes the setting value and responses it. Resetting the drum counter returns to the default (Normal).

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. “USBNo.” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] to display “MAINTENANCE 45” on the LCD, and press the [OK]. “USBNo.” is displayed on the LCD.

- (2) Press the [▲] or [▼] to display “light band” on the LCD, and press the [SET] or [Start]. “Normal*” is displayed on the LCD.
- (3) Press the [▲] or [▼] to select any level, and press the [SET] or [Start]. “Accepted” is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

■ Switching of black toner discharge compensation

< Function >

When this setting is ON, in order to improve the fogging of the black printing, if a certain number of sheets are printed after replacing the black toner cartridge, the black toner is discharged at the next printing and before printing. When this setting is OFF, the discharge is not executed.

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [5] in the initial state of maintenance mode. "USBNo." is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 45" on the LCD, and press the [OK]. "USBNo." is displayed on the LCD.

(2) Press the [▲] or [▼] to display "Purge K toner" on the LCD, and press the [SET] or [OK]. "PurgeKtoner ON*" or "PurgeKtoner OFF*" is displayed on the LCD.

(3) Press the [▲] or [▼] to select "ON" or "OFF" on the LCD, and press the [SET] or [OK]. "Accepted" is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

1.3.14 Adjust printable range for each speed level (Function code 46)

< Function >

This function is to adjust the printing position in horizontal / vertical direction.

Position can be adjusted in 11 steps from -0.5% to 0.5% (Printing width gets smaller when the value is negative).

< Operating Procedure >

(1) For models with touch panel

Press the [4], and then the [6] in the initial state of maintenance mode. "MAIN SIZE SET" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 46" on the LCD, and press the [OK]. "MAIN SIZE SET" is displayed on the LCD.

(2) Press the [▲] or [▼] to display "PRINT TEST PTN" on the LCD, and press the [SET] or [OK]. "PRINTING" is displayed on the LCD, and the print adjustment test pattern (refer to the [next page](#)) is printed on a sheet of paper.

(3) Adjust the line so that the width is 10 mm in horizontal / vertical direction. Press the [▲] or [▼] to display desired direction on the LCD.

- Horizontal direction→ "MAIN SIZE SET"

- Vertical direction→ "SUB SIZE SET"

Press the [SET] or [OK]. "SET: 0.0 %" is displayed on the LCD.

(4) To make the print width smaller, press the [▼] to decrease the value. Press the [SET] or [OK] after adjusting the value.

(5) After adjustment, repeat the procedure (2) to check if the adjustment was correctly done. When you want to return to the factory shipping state, press the [▲] or [▼] to display "RESET PARAMETER" on the LCD, and press the [SET] or [OK].

(6) Press the [X] or [Stop] to return the machine to the initial state of maintenance mode after adjusting the value.

■ Print adjustment test pattern

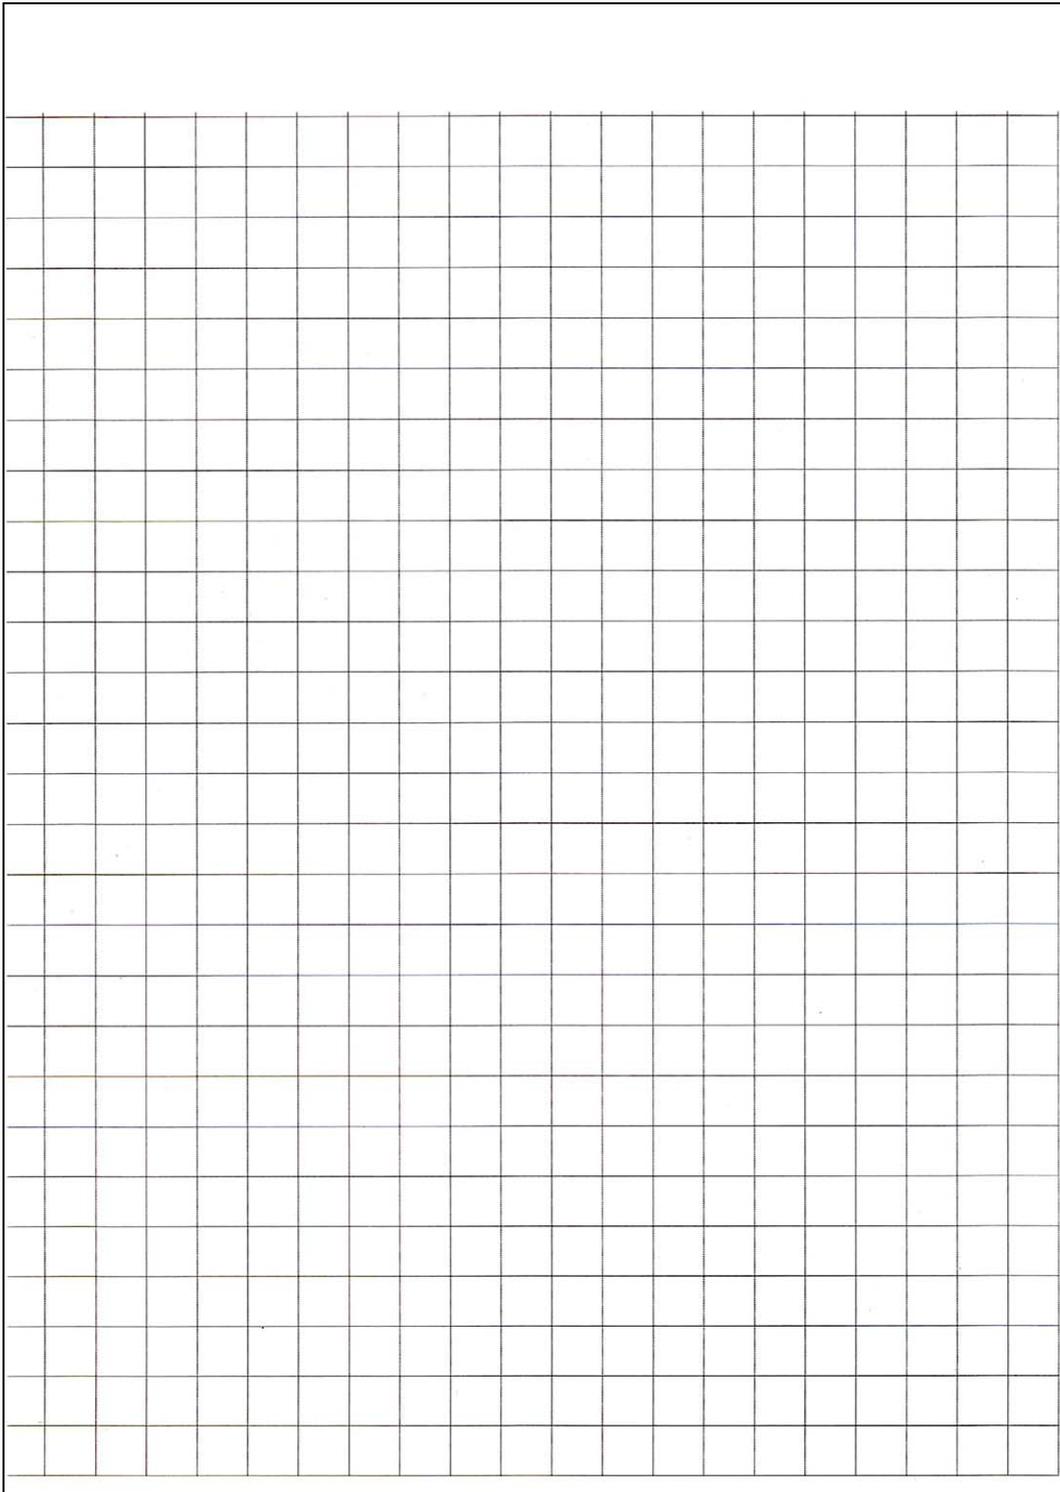


Fig. 5-8

1.3.15 Transfer received fax data / log information (fax models only) (Function code 53)

< Function >

When the machine is unable to print the received fax data due to an error in the printing mechanism, this function is used to transfer the data to another machine. The communication management report, communication list, or machine log information can also be transferred.

Note:

- The number of files that can be transferred in one operation is up to 99. When there are 100 or more files, the operation procedure below must be performed several times to transfer all files.
- When there are both color data files and monochrome data files, monochrome data files are transferred first. When the color function is not supported by the receiver machine, color data files cannot be transferred and an error occurs.

< Operating Procedure >

- (1) Press the [5], and then the [3] in the initial state of maintenance mode. "FAX TRANSFER" is displayed on the LCD.
 - To check the number of files received, press the [1].
"1. NO. OF JOBS" is displayed on the LCD.
Press the [SET], and the number of files received is displayed, for example, "NO. OF JOBS: 10".
 - To transfer only the communication management report, press the [2].
"2. ACTIVITY" is displayed on the LCD.
 - To transfer the received data, press the [3].
(The communication management report is also transferred.)
"3. DOCUMENTS" is displayed on the LCD. If there are no received files, "NO DOCUMENTS" is displayed.
 - To transfer the communication list (latest communication information), press the [4].
"4. COM.LIST (NEW)" is displayed on the LCD.
 - To transfer the communication list (information for the past three errors), press the [5].
"5. COM.LIST (ERR3)" is displayed on the LCD.
 - To transfer the maintenance information (list printed by function code 77), press the [6].
"6. MNT77LIST" is displayed on the LCD.
- (2) Press the [SET] while either "2.ACTIVITY", "3.DOCUMENTS", "4.COM.LIST (NEW)", "5.COM.LIST (ERR3)", or "6.MNT77LIST" is displayed on the LCD. "ENTER NO. & SET" is displayed on the LCD.
- (3) Enter the telephone number of the receiver machine, and press the [SET] again.
- (4) "Accepted" is displayed for approximately two seconds, and the machine starts dialing to transfer the received data.

Note:

- Be sure to enter the telephone number directly using the numerical keys. One-touch dialing is not allowed in this procedure.
- No station ID will be attached to the data to be transferred. Instead, a cover page and end page as shown on the [next page](#) will be automatically attached.

■ Cover page example

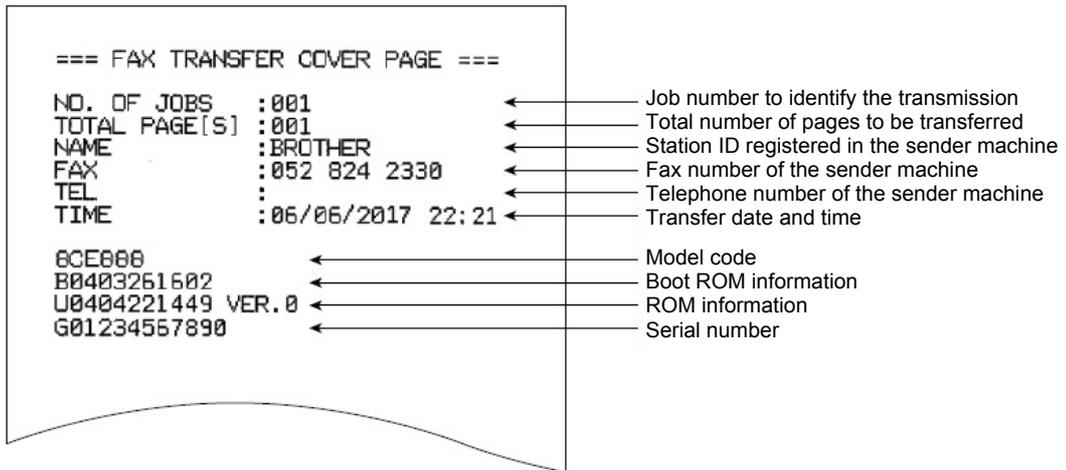


Fig. 5-9

■ End page example

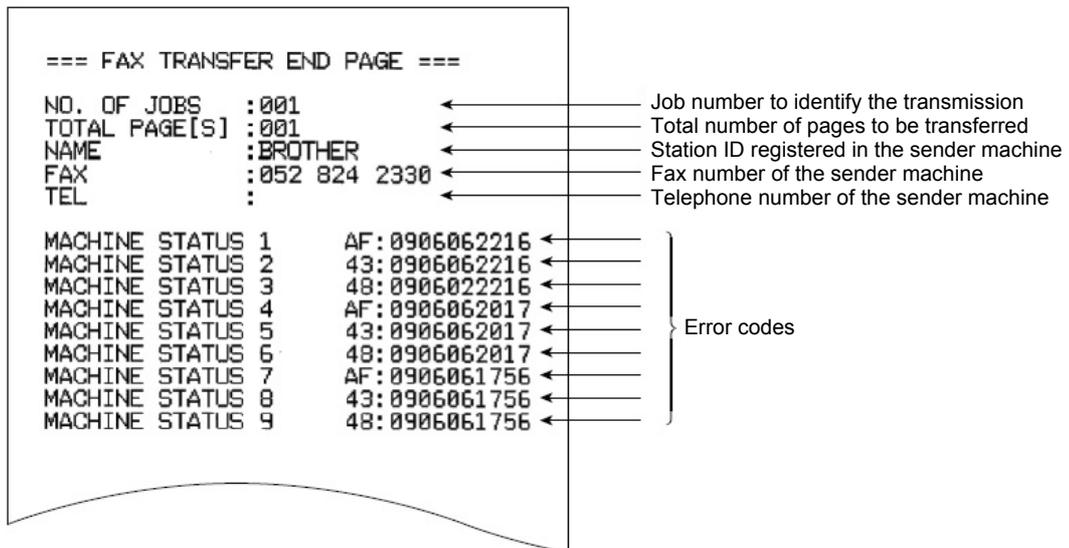


Fig. 5-10

1.3.16 Fine-tune scanning position (Function code 54)

<Function>

This function is used to adjust the scanning start/end positions.

<Operating Procedure>

(1) For models with touch panel

Press the [5], and then the [4] in the initial state of maintenance mode. "SCAN START ADJ" is displayed for two seconds, and then "0: ADF 1: FB" is displayed on the LCD. To adjust the ADF scanning position, press the [0] and proceed to the procedure (2). To adjust the FB scanning position, press the [1] and proceed to the procedure (3).

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 54" on the LCD, and press the [OK]. "SCAN START ADJ" is displayed for two seconds, and then "▲: ADF ▼: FB" is displayed on the LCD. To adjust the ADF scanning position, press the [▲] and proceed to the procedure (2). To adjust the FB scanning position, press the [▼] and proceed to the procedure (3).

- (2) "0:MAIN 1:TP 2:HP" is displayed on the LCD. Press the [0] to adjust the main scanning. Press the [1] to adjust the vertical scanning. Press the [2] to adjust the rear end side of the vertical scanning.
- For duplex scanning models
"0:FRONT 1:BACK" is displayed on the LCD. Press the [0] to adjust the first side. Press the [1] to adjust the second side.
 - For single-side scanning models
Proceed to the procedure (4).
- (3) "0:MAIN 1:SUB" is displayed on the LCD. Press the [0] to adjust the main scanning. Press the [1] to adjust the vertical scanning, and proceed to the procedure (4).
- (4) The currently set value is displayed on the LCD. To increase the adjustment value, press the [▲]. To decrease the adjustment value, press the [▼]. (Refer to the figure below)

Note:

When the [X] or [Stop] is pressed, the machine stops correcting the adjusting value and returns to the initial state of maintenance mode.

- (5) Press the [SET] or [OK] after adjusting the value. "Accepted" is displayed on the LCD, and the machine returns to the initial state of maintenance mode.

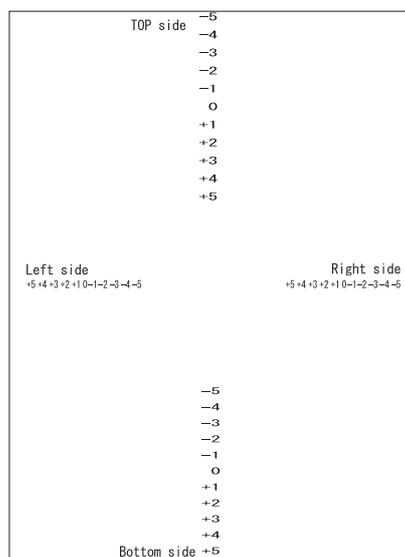


Fig. 5-11

1.3.17 Acquire white level data and set CIS scan area (Function code 55)

<Function>

This function is used to acquire the white level of the CIS unit, and store this data and the scan area in the EEPROM of the main PCB.

<Operating Procedure>

(1) For models with touch panel

Press the [5] twice in the initial state of maintenance mode. "Press START" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 55" on the LCD, and press the [OK]. "Press START" is displayed on the LCD.

(2) Press the [Start] or [Mono Start]. "SCANNER AREA SET" is displayed on the LCD, and the white level data is obtained.

(3) After several seconds, the compensation value for the white level data/scanning width is stored in the EEPROM, and the machine returns to the initial state of maintenance mode. If any error is detected during this operation, "SCANNER ERROR" is displayed on the LCD for single-side scanning models, and "SCANNER ERR ADF" or "SCANNER ERR FB" is displayed for duplex scanning models.

Pressing the [X] or [Stop] in this occasion returns the machine to the initial state of maintenance mode.

1.3.18 Check consumables function (Function code 57)

<Function>

This function is used to determine whether the toner cartridge is supported, cartridge's color, destination, and size with the cartridge sensor.

<Operating Procedure>

■ Whether the toner cartridge is supported or not

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [1]. "IC_ACT ALL" is still displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.
If you want to select all colors: "IC_ACT ALL"
If you want to select black: "IC_ACT BLACK"
If you want to select magenta: "IC_ACT MAGENTA"
If you want to select cyan: "IC_ACT CYAN"
If you want to select yellow: "IC_ACT YELLOW"
If you want to select the toner sensor on the machine: "IC_ACT MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_ACT OK" is displayed on the LCD.
If the authorization failed, "IC_ACT NG**" is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table below to solve it.

<Error display>

LCD	Description
NG0 to NG99	Failed to communicate with the cartridge sensor on the machine.
NG100 to NG199	Failed to communicate with the cartridge sensor on the cartridge.
NG200 to NG299	Installed toner cartridge is not recognized by the cartridge sensor.
NG300 to NG399	Communication succeeded but the cartridge data was deemed incompatible.

Memo:

When NG was displayed after performing the "IC_ACT ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display “MAINTENANCE 57” on the LCD, and press the [OK]. “IC_ACT ALL” is displayed on the LCD.
 - (2) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.

If you want to select all colors:	“IC_ACT ALL”
If you want to select black:	“IC_ACT BLACK”
If you want to select magenta:	“IC_ACT MAGENTA”
If you want to select cyan:	“IC_ACT CYAN”
If you want to select yellow:	“IC_ACT YELLOW”
If you want to select the toner sensor on the machine:	“IC_ACT MAIN”
 - (3) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, “IC_ACT OK” is displayed on the LCD.
If the authorization failed, “IC_ACT NG**” is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table on the previous page to solve it.
- Memo:**
When NG was displayed after performing the “IC_ACT ALL”, which color cartridge had error cannot be determined. In that case, select the color individually and perform.
- (4) Press the [Stop]. The machine returns to the initial state of maintenance mode.

■ Check toner cartridge's color

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [2]. "IC_COL ALL" is displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.

If you want to select all colors:	"IC_COL ALL"
If you want to select black:	"IC_COL BLACK"
If you want to select magenta:	"IC_COL MAGENTA"
If you want to select cyan:	"IC_COL CYAN"
If you want to select yellow:	"IC_COL YELLOW"
If you want to select the toner sensor on the machine:	"IC_COL MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_COL OK" is displayed on the LCD.
If the authorization failed, "IC_COL NG**" is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_COL ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 57" on the LCD, and press the [OK]. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [OK]. "IC_COL ALL" is displayed on the LCD.
- (3) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.

If you want to select all colors:	"IC_COL ALL"
If you want to select black:	"IC_COL BLACK"
If you want to select magenta:	"IC_COL MAGENTA"
If you want to select cyan:	"IC_COL CYAN"
If you want to select yellow:	"IC_COL YELLOW"
If you want to select the toner sensor on the machine:	"IC_COL MAIN"
- (4) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_COL OK" is displayed on the LCD.
If the authorization failed, "IC_COL NG**" is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_COL ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [Stop]. The machine returns to the initial state of maintenance mode.

■ Check toner cartridge's destination

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [3]. "IC_AREA ALL" is displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.

If you want to select all colors:	"IC_AREA ALL"
If you want to select black:	"IC_AREA BLACK"
If you want to select magenta:	"IC_AREA MAGENTA"
If you want to select cyan:	"IC_AREA CYAN"
If you want to select yellow:	"IC_AREA YELLOW"
If you want to select the toner sensor on the machine:	"IC_AREA MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_AREA OK" is displayed on the LCD.
If the authorization failed, "IC_AREA NG**" is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_AREA ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 57" on the LCD, and press the [OK]. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [OK] several times. "IC_AREA ALL" is displayed on the LCD.
- (3) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.

If you want to select all colors:	"IC_AREA ALL"
If you want to select black:	"IC_AREA BLACK"
If you want to select magenta:	"IC_AREA MAGENTA"
If you want to select cyan:	"IC_AREA CYAN"
If you want to select yellow:	"IC_AREA YELLOW"
If you want to select the toner sensor on the machine:	"IC_AREA MAIN"
- (4) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_AREA OK" is displayed on the LCD.
If the authorization failed, "IC_AREA NG**" is displayed on the LCD.
(* indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_AREA ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [Stop]. The machine returns to the initial state of maintenance mode.

■ Check toner cartridge's size

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [4]. "IC_SIZE ALL" is displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.
If you want to select all colors: "IC_SIZE ALL"
If you want to select black: "IC_SIZE BLACK"
If you want to select magenta: "IC_SIZE MAGENTA"
If you want to select cyan: "IC_SIZE CYAN"
If you want to select yellow: "IC_SIZE YELLOW"
If you want to select the toner sensor on the machine: "IC_SIZE MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_SIZE OK" is displayed on the LCD.
If the authorization failed, "IC_SIZE NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_SIZE ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 57" on the LCD, and press the [OK]. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [OK] several times. "IC_SIZE ALL" is displayed on the LCD.
- (3) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.
If you want to select all colors: "IC_SIZE ALL"
If you want to select black: "IC_SIZE BLACK"
If you want to select magenta: "IC_SIZE MAGENTA"
If you want to select cyan: "IC_SIZE CYAN"
If you want to select yellow: "IC_SIZE YELLOW"
If you want to select the toner sensor on the machine: "IC_SIZE MAIN"
- (4) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_SIZE OK" is displayed on the LCD.
If the authorization failed, "IC_SIZE NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_SIZE ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [Stop]. The machine returns to the initial state of maintenance mode.

■ Check cartridge sensor's version

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [5]. "IC_VER BLACK" is displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.

If you want to select black:	"IC_VER BLACK"
If you want to select magenta:	"IC_VER MAGENTA"
If you want to select cyan:	"IC_VER CYAN"
If you want to select yellow:	"IC_VER YELLOW"
If you want to select the toner sensor on the machine:	"IC_VER MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_VER □□" is displayed on the LCD. (□□ indicates a version.)
If the authorization failed, "IC_VER NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the [<Error display>](#) table on 5-39 to solve it.
- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 57" on the LCD, and press the [OK]. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [OK] several times. "IC_VER BLACK" is displayed on the LCD.
- (3) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.

If you want to select black:	"IC_VER BLACK"
If you want to select magenta:	"IC_VER MAGENTA"
If you want to select cyan:	"IC_VER CYAN"
If you want to select yellow:	"IC_VER YELLOW"
If you want to select the toner sensor on the machine:	"IC_VER MAIN"
- (4) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_VER □□" is displayed on the LCD. (□□ indicates a version.)
If the authorization failed, "IC_VER NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the [<Error display>](#) table on 5-39 to solve it.
- (5) Press the [Stop]. The machine returns to the initial state of maintenance mode.

■ Check toner cartridge's communication

For models with touch panel

- (1) Press the [5], and then [7] in the initial state of maintenance mode. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [0]. "IC_TX ALL" is displayed on the LCD.
- (3) Press the [◀] or [▶] to display the toner cartridge to be authorized on the LCD.
If you want to select all colors: "IC_TX ALL"
If you want to select black: "IC_TX BLACK"
If you want to select magenta: "IC_TX MAGENTA"
If you want to select cyan: "IC_TX CYAN"
If you want to select yellow: "IC_TX YELLOW"
If you want to select the toner sensor on the machine: "IC_TX MAIN"
- (4) Press the [Mono Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_TX OK" is displayed on the LCD.
If the authorization failed, "IC_TX NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_TX ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [X]. The machine returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 57" on the LCD, and press the [OK]. "IC_ACT ALL" is displayed on the LCD.
- (2) Press the [OK] several times. "IC_TX ALL" is displayed on the LCD.
- (3) Press the [▲] or [▼] to display the toner cartridge to be authorized on the LCD.
If you want to select all colors: "IC_TX ALL"
If you want to select black: "IC_TX BLACK"
If you want to select magenta: "IC_TX MAGENTA"
If you want to select cyan: "IC_TX CYAN"
If you want to select yellow: "IC_TX YELLOW"
If you want to select the toner sensor on the machine: "IC_TX MAIN"
- (4) Press the [Start]. Selected toner cartridge will be authorized.
If it is authorized, "IC_TX OK" is displayed on the LCD.
If the authorization failed, "IC_TX NG**" is displayed on the LCD.
(** indicates an error number.) Refer to the <Error display> table on 5-39 to solve it.

Memo:

When NG was displayed after performing the "IC_TX ALL", which color cartridge had error cannot be determined. In that case, select the color individually and perform.

- (5) Press the [Stop]. The machine returns to the initial state of maintenance mode.

1.3.19 Adjust touch panel (Function code 61)

< Function >

This function is used to adjust the touch panel.

Note:

This adjustment requires a touch pen with a thin tip. A commercially available touch pen designed for electronic dictionaries or personal digital assistance (PDA) can be used. If one is not available at hand, order a "Touch pen" from Brother's parts list.

< Operating Procedure >

- (1) Press the [6], and then the [1] in the initial state of maintenance mode. The adjustment screen shown below appears on the LCD.
- (2) Use a touch pen and touch the center on the mark at the upper left corner of the screen. The mark disappears when touched, then touch the mark at the lower left. Similarly touch the mark at the lower right, upper right and center.

Note:

- Do not use any tools other than a touch pen. In particular, never use a pointed tool (e.g., screwdriver). Using such a tool will damage the touch panel.
- Do not touch the touch panel with your fingers. The contact area of a finger is too large to adjust the touch panel precisely.
- If no operation is performed for one minute or the [X] is pressed, the machine returns to the initial state of maintenance mode.

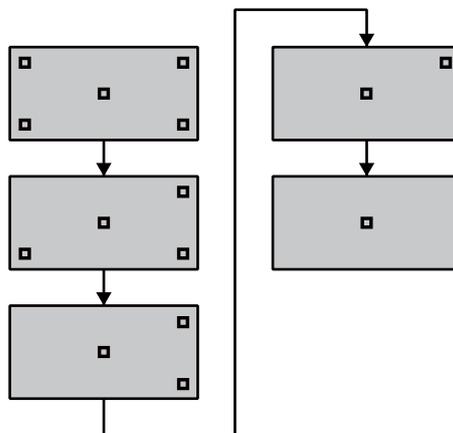


Fig. 5-12

- (3) When the center (the 5th mark) is touched, "OK" is displayed on the LCD if the specified area is adjusted correctly. The machine returns to the initial state of maintenance mode.

Note:

If "NG" is still displayed on the LCD even after this operation is repeated two to three times, check the connection of the touch panel flat cable. If the LCD keeps displaying "NG" even there is no problem, replace the panel PCB.

1.3.20 Adjustment of color registration (Adjustment of inter-color position alignment) (Function code 66)

< Function >

This function allows service personnel to forcibly activate the adjustment of color registration (adjustment of inter-color position alignment) function which is usually executed automatically under a specified condition. If adjustment of inter-color position alignment (auto) fails because toner reaches its life, etc., you can adjust inter-color position alignment manually. The end users are allowed to perform “Adjustment of inter-color position alignment without registration sensor calibration (auto)” only.

Note:

If an error occurs after executing function code 66, upgrade the firmware to the latest one. (Refer to “1.2 Installing the Firmware (Sub Firmware and Main Firmware)” in Chapter 4.) After upgrading the firmware, execute function code 66 again.

This function has the following functions.

Function	Description	LCD
Adjustment of inter-color position alignment without registration sensor calibration (auto)	Automatically correct misregistration between colors that occurs as the number of printed pages increases and time passes.	REGISTRATION
Adjustment of inter-color position alignment (manual)	Using the chart, manually correct misregistration between colors that occurs as the number of printed pages increases and time passes. This is performed when automatic adjustment fails.	SET REGISTRATION
Printing of misregistration correction chart	Print the chart that you check for an input value when manually correcting misregistration between colors.	PRINT CHART
Adjustment of inter-color position alignment including registration sensor calibration (auto)	After the sensitivity adjustment of registration sensor, correct misregistration between colors that occurs as the number of printed pages increases and time passes.	ADD REGISTRATION

■ Adjustment of inter-color position alignment without registration sensor calibration (auto)

< Operating Procedure >

(1) For models with touch panel

Press the [6] twice in the initial state of the maintenance mode. "REGISTRATION" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 66" on the LCD, and press the [OK]. "REGISTRATION" is displayed on the LCD.

- (2) Press the [SET] or [OK]. "PLS WAIT 66-1" is displayed on the LCD, and adjustment of inter-color position alignment is automatically done.
- (3) When this operation is completed without an error, "COMPLETED" is displayed on the LCD.
- (4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If the Adjustment of inter-color position alignment without registration sensor calibration (auto) fails while being in process, "ERROR 66-1" is displayed on the LCD. Press the [▼] to see the details of the error, and refer to the error message list in the table on [next page](#) for the troubleshooting.

■ Error message list

Error message	Remedy
FAILED REGIST	Press the [Start] or [Mono Start] to clear the error. Perform the Adjustment of inter-color position alignment (auto) again. If the error recurs, clean the belt unit and the drum unit and then perform the adjustment again. If the error still recurs, replace the belt unit and the drum unit.
ERR_REG_AB_MA_LY	
ERR QUI_VS_NOR	
FAILED REGPITCH	
TONER EMPTY # *	Replace the [Start] or [Mono Start] to clear the error. Perform the Adjustment of inter-color position alignment (auto) again.
NG L:C080 R:M105	Press the [Start] or [Mono Start] to clear the error. Perform the Adjustment of inter-color position alignment (auto) again.
NG R-L:C030	
NG PWM L120 R180	
NG PWM R-L:080	
NG CNT R100 L100	
NG S-POSI R:080	
NG SKEW:C0120	
NG PWM R-P L:080	
NG XMARGIN:M191	
K** Y** M** C**	
Cover is Open	

* # indicates the toner color (Y, M, or C) of which cartridge became empty.

■ Adjustment of inter-color position alignment (manual)

< Operating Procedure >

- (1) For models with touch panel
Press the [6] twice in the initial state of the maintenance mode. "REGISTRATION" is displayed on the LCD.

For models without touch panel
Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 66" on the LCD, and press the [OK]. "REGISTRATION" is displayed on the LCD.
- (2) Press the [▲] or [▼] to display "SET REGISTRATION" on the LCD.
- (3) Press the [SET] or [OK]. "1. MAGENTA=0" is displayed on the LCD. Using the misregistration correction chart printed by "■ Printing of misregistration correction chart", identify the numeric value whose color is the darkest in the pattern of ① (Magenta Left). Press the [▲] or [▼] to display the identified numeric value.
- (4) Press the [SET] or [OK], and enter each numeric value of the patterns ② to ⑨ in the same way.
- (5) When you enter the numeric value of the pattern ⑨ (Yellow Right), "COMPLETED" is displayed on the LCD.
- (6) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

■ Printing of misregistration correction chart

< Operating Procedure >

- (1) For models with touch panel

Press the [6] twice in the initial state of the maintenance mode. "REGISTRATION" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 66" on the LCD, and press the [OK]. "REGISTRATION" is displayed on the LCD.

- (2) Press the [▲] or [▼] to display "PRINT CHART" on the LCD.
- (3) Press the [SET] or [OK]. "PRINTING" is displayed on the LCD, and misregistration correction chart (see the figure below) is printed. When printing is finished, "PRINT CHART" is displayed on the LCD.
- (4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

■ Misregistration correction chart

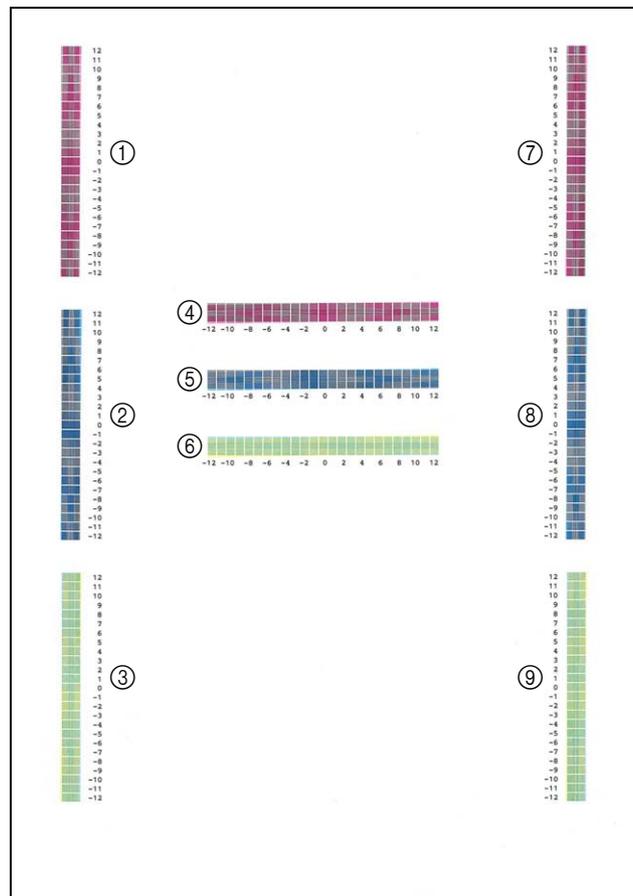


Fig. 5-13

■ Adjustment of inter-color position alignment including registration sensor calibration (auto)

< Operating Procedure >

(1) For models with touch panel

Press the [6] twice in the initial state of the maintenance mode. "REGISTRATION" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 66" on the LCD, and press the [OK]. "REGISTRATION" is displayed on the LCD.

(2) Press the [▲] or [▼] to display "ADD REGISTRATION" on the LCD.

(3) Press the [SET] or [OK]. "PLS WAIT 66-1" is displayed on the LCD and sensitivity adjustment of registration sensor and adjustment of inter-color position alignment are performed automatically.

(4) When this operation is completed without an error, "COMPLETED" is displayed on the LCD.

(5) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If the Adjustment of inter-color position alignment including registration sensor calibration (auto) fails while being in process, "ERROR 66-1" is displayed on the LCD. Press the [▼] to display the details of the error. Refer to the error message list on (P5-49) for the troubleshooting.

1.3.21 Continuous print test (Function code 67)

< Function >

This function is used to conduct paper feed and eject tests while printing patterns.

< Operating Procedure >

- (1) For models with touch panel
Press the [6], and then the [7] in the initial state of maintenance mode. "SELECT: K 100%" is displayed on the LCD.
For models without touch panel
Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 67" on the LCD, and press the [OK]. "SELECT: K 100%" is displayed on the LCD.
- (2) Refer to the <Print pattern> table, press the [▲] or [▼] to select the print pattern, and press the [SET] or [OK]. "SELECT: A4" is displayed on the LCD.
- (3) Refer to the <Paper size> table, press the [▲] or [▼] to select the paper size, and press the [SET] or [OK]. "SELECT: PLAIN" is displayed on the LCD.
- (4) Refer to the <Print specification> table, press the [▲] or [▼] to select the media specification, and press the [SET] or [OK]. "SELECT: TRAY1 SX" is displayed on the LCD.
- (5) Refer to the <Print type> table, press the [▲] or [▼] to select the print type, and press the [SET] or [OK]. "SELECT:1 PAGE" is displayed on the LCD.
- (6) Refer to the <Print page> table, press the [▲] or [▼] to select the pages printing, and press the [SET] or [OK]. For intermittent pattern printing, "SELECT: 1P/JOB" is displayed on the LCD. For other printings, or move on to the procedure (8).
- (7) Refer to the <Number of pages per job> table, press the [▲] or [▼] to select the number of pages for 1 job, and press the [SET] or [OK]. (Only for intermittent pattern printing)
- (8) "PAPER FEED TEST" is displayed on the LCD, and printing test pattern starts using the selected conditions.
- (9) When you press the [X] or [Stop], test pattern printing is stopped, and the machine returns to the initial state of maintenance mode.

<Print pattern>

LCD	Description
SELECT: K 100%	Black 100% solid print
SELECT: C 100%	Cyan 100% solid print
SELECT: M 100%	Magenta 100% solid print
SELECT: Y 100%	Yellow 100% solid print
SELECT: W 100%	White 100% solid print
SELECT: R 100%	Red 100% solid print
SELECT: G 100%	Green 100% solid print
SELECT: B 100%	Blue 100% solid print
SELECT: KCMY1%	Black/Cyan/Magenta/Yellow 1% intermittent pattern print ^{*1}
SELECT: KCMY5%	Black/Cyan/Magenta/Yellow 5% intermittent pattern print ^{*1}
SELECT: Lattice	Lattice print
SELECT: Total	Total pattern print ^{*2}

^{*1} Up to 500 sheets in 1-sided printing and 1,000 sheets in 2-sided printing in the case of job printing.

^{*2} Printing method and number of sheets to be printed are not selectable when the general pattern printing is chosen.

<Paper size>

LCD	Description
SELECT: A4	A4
SELECT: LETTER	Letter
SELECT:ISOB5	ISO B5
SELECT:JISB5	JIS B5
SELECT:A5	A5
SELECT:A5L	A5L
SELECT:JISB6	JIS B6
SELECT:A6	A6
SELECT:EXECUTE	Executive size
SELECT:LEGAL	Legal size
SELECT:FOLIO	Folio size
SELECT:HAGAKI	Postcard size *

* Supports only for TRAY1 SX, MP TRAY SX and AUTO SX.

<Print specification>

LCD	Description
SELECT: PLAIN	Plain paper
SELECT: THIN	Plain paper (thin)
SELECT: THICK	Plain paper (thick)
SELECT:THICKER	Plain paper (thicker)
SELECT:RECYCLED	Recycled paper
SELECT:BOND	Bond paper
SELECT:LABEL	Label
SELECT:ENVELOPE	Envelope
SELECT:ENVTHIN	Envelope (thin)
SELECT:ENVTHICK	Envelope (thick)
SELECT:GLOSSY	Glossy paper
SELECT:HAGAKI	Postcard*

* Display appears on LCD, but it is not available.

<Print type>

LCD	Description
SELECT: TRAY1 SX	1-sided printing from T1
SELECT: MP SX ^{*1}	1-sided printing from MP tray
SELECT: MF SX ^{*1}	1-sided printing from manual feed slot
SELECT: TRAY1 DX ^{*2}	2-sided printing from T1
SELECT: MP DX ^{*1 *2}	2-sided printing from MP tray
SELECT: MF DX ^{*1 *2}	2-sided printing from manual feed slot
SELECT: AUTO SX	1-sided printing to automatically selected tray
SELECT: AUTO DX ^{*2}	2-sided printing to automatically selected tray

^{*1} Selectable only by support models.

^{*2} Supports paper size only for A4, Letter, Legal and Folio.

<Print page>

LCD	Description
SELECT: 1PAGE	1-page printing
SELECT: CONTINUE	Continuous printing
SELECT: JOB	Intermittent printing per job *

* Selectable only when the printing pattern is set to "KCMY1%" or "KCMY5%", and the print type is not set to the manual feed slot.

<Number of pages per job> (Only for intermittent pattern printing)

LCD	Description
SELECT: 1P/JOB	Prints 1 page per job ^{*1}
SELECT: 2P/JOB	Prints 2 pages per job ^{*1}
SELECT: 5P/JOB	Prints 5 pages per job ^{*1}
SELECT: 10P/JOB	Prints 10 pages per job ^{*1}
SELECT: 2I/JOB	Prints 2 images per job ^{*2}
SELECT: 5I/JOB	Prints 5 images per job ^{*2 *3}
SELECT: 10I/JOB	Prints 10 images per job ^{*2}
SELECT: 20I/JOB	Prints 20 images per job ^{*2}

^{*1} Selectable only when SX is selected as print type.

^{*2} Selectable only when DX is selected as print type.

^{*3} 1-sided printing for the 5th page.

■ **Print pattern**

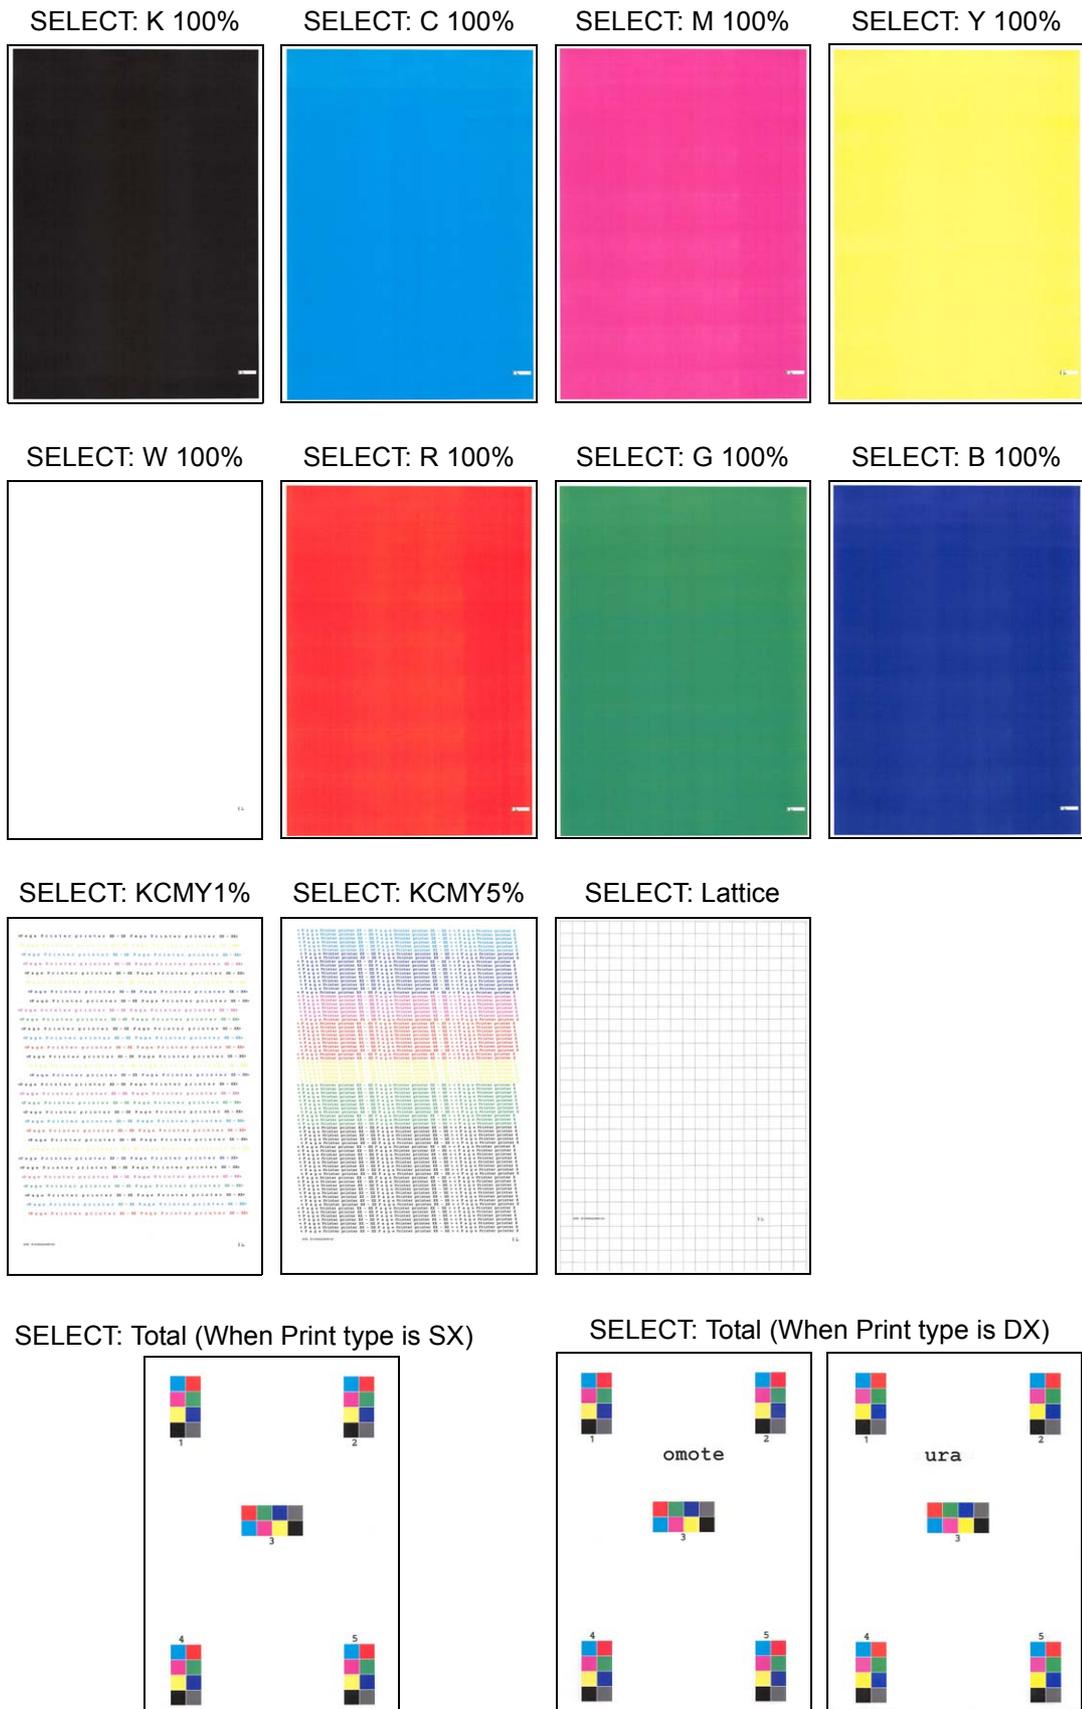


Fig. 5-14

1.3.22 LED ASSY test pattern print (Function code 68)

< Function >

This function is used to print the LED ASSY test patterns and check if there is any failure in the LED ASSY.

< Operating Procedure >

(1) For models with touch panel

Press the [6] and [8] in this order in the initial state of the maintenance mode. "PRINTING" is displayed on the LCD, and one LED ASSY test pattern (see the figure below) is printed.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 68" on the LCD, and press the [OK]. "PRINTING" is displayed on the LCD, and one LED ASSY test pattern (see the figure below) is printed.

(2) When this operation is completed without an error, "OK" is displayed on the LCD.

(3) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

When printing fails, the following error indications are displayed on the LCD. When the error factors are removed, press the [Start] or [Mono Start], and the machine automatically recovers to the re-executable state. "PRINTING" is displayed on the LCD, and the LED ASSY test pattern is printed on a sheet.

Error display	Remedy
Replace Toner #*	Replace the toner cartridge and press the [Start] or [Mono Start] to release the error.
Cover is Open	Close the top cover.
No Paper	Refill the paper, close the T1 and press the [Start] or [Mono Start] to release the error.
Jam Tray1	Remove the jammed paper, then close the T1 and all covers, press the [Start] or [Mono Start] to release the error.
Jam Rear	

* # indicates the toner color (K, Y, M, or C) of which cartridge became empty.

■ LED ASSY test pattern

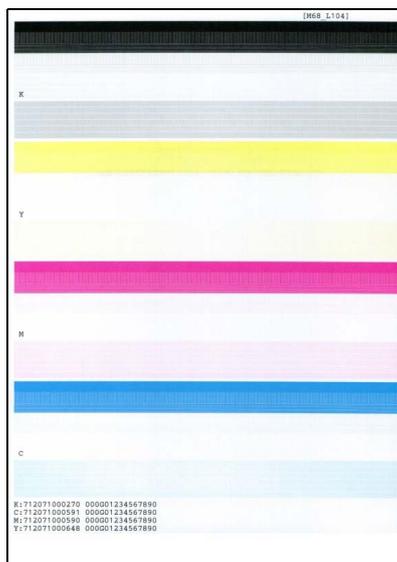


Fig. 5-15

1.3.23 Print frame pattern (1-sided printing) (Function code 69)

< Function >

This function is used to print the frame pattern on single side of the paper to check for printing flaws and omission.

< Operating Procedure >

- (1) Set the paper specified in the default paper settings (A4 or Letter) to the T1.
- (2) For models with touch panel
Press the [6], and then the [9] in the initial state of maintenance mode. "PRINTING" is displayed on the LCD, and the frame pattern (refer to the figure below) is printed on single side of the paper.

For models without touch panel
Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 69" on the LCD, and press the [OK]. "PRINTING" is displayed on the LCD, and the frame pattern (refer to the figure below) is printed on single side of the paper.
- (3) When printing is completed, "WAKU SX" is displayed on the LCD.
- (4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If printing fails, printing is stopped with displaying any of the errors shown in the table below. To retry printing, refer to the "Remedy" in the table below and eliminate the error cause and press the [Start] or [Mono Start]. "PRINTING" is displayed on the LCD, and the frame pattern is printed on a single sheet of paper.

Error display	Remedy
Replace Toner	Replace the toner cartridge and press the [Start] or [Mono Start] to release the error.
Cover is Open	Close the top cover.
No Paper	Refill the paper, close the T1 and press the [Start] or [Mono Start] to release the error.
Jam Tray1	Remove the jammed paper, then close the T1 and all covers, press the [Start] or [Mono Start] to release the error.
Jam Rear	

■ Frame pattern

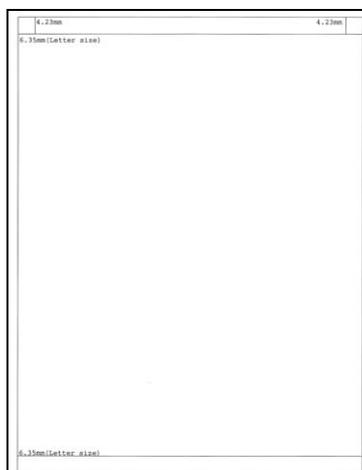


Fig. 5-16

1.3.24 Print frame pattern (2-sided printing) (Function code 70)

< Function >

This function is used to print the frame pattern on both sides of the paper to check for printing flaws and omission.

< Operating Procedure >

- (1) Set the paper specified in the default paper settings (A4 or Letter) to the T1.
- (2) For models with touch panel
Press the [7], and then the [0] in the initial state of maintenance mode. "PRINTING" is displayed on the LCD, and the frame pattern (refer to the figure below) is printed on both sides of the paper.

For models without touch panel
Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 70" on the LCD, and press the [OK]. "PRINTING" is displayed on the LCD, and the frame pattern (refer to the figure below) is printed on both sides of the paper.
- (3) When printing is completed, "WAKU DX" is displayed on the LCD.
- (4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If printing fails, printing is stopped with displaying any of the errors shown in the table below. To retry printing, refer to the "Remedy" in the table below and eliminate the error cause and press the [Start] or [Mono Start]. "PRINTING" is displayed on the LCD, and the frame pattern is printed on both sides of a sheet of paper.

Error display	Remedy
Replace Toner	Replace the toner cartridge and press the [Start] or [Mono Start] to release the error.
Cover is Open	Close the top cover.
No Paper	Refill the paper, close the T1 and press the [Start] or [Mono Start] to release the error.
Jam Tray1	Remove the jammed paper, then close the T1 and all covers, press the [Start] or [Mono Start] to release the error.
Jam Rear	
Jam Duplex	
Duplex Disabled	Refill the paper, then close the T1 and all covers, press the [Start] or [Mono Start] to release the error.

■ Frame pattern

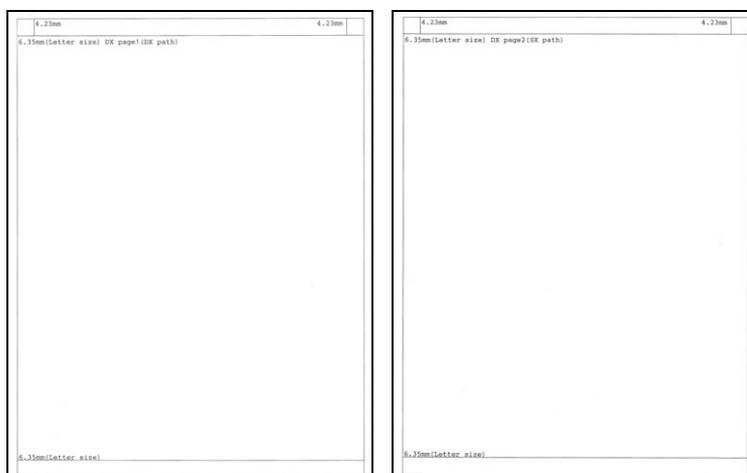


Fig. 5-17

1.3.25 Color test pattern (Function code 71)

< Function >

This function is used to print the test pattern to check whether the develop roller or exposure drum is dirty or damaged.

< Operating Procedure >

(1) For models with touch panel

Press the [7], and then the [1] in the initial state of maintenance mode.
“K/W/Y/M/C” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display
“MAINTENANCE 71” on the LCD, and press the [OK].
“K/W/Y/M/C” is displayed on the LCD.

- (2) Refer to the <Print pattern> table, press the [▲] or [▼] to select the desired print pattern and press the [SET] or [OK]. When “K/W/Y/M/C” is selected, “PRINTING” is displayed on the LCD and test pattern printing is started. When a print pattern other than “MCKY V” is selected, “SELECT: LETTER” is displayed on the LCD. (Following steps (3) to (6) described below, select an option in each item and perform test pattern printing.)
- (3) Refer to the <Paper size> table, press the [▲] or [▼] to select the paper size, and press the [SET] or [OK]. “SELECT: PLAIN” is displayed on the LCD.
- (4) Refer to the <Print specification> table, press the [▲] or [▼] to select the media specification, and press the [SET] or [OK]. “SELECT: SX” is displayed on the LCD.
- (5) Refer to the <Print type> table, press the [▲] or [▼] to select the print type, and press the [SET] or [OK]. “SELECT: 1PAGE” is displayed on the LCD.
- (6) Refer to the <Print page> table, press the [▲] or [▼] to select the pages printing, and press the [SET] or [OK]. “PRINTING” is displayed on the LCD, and printing test pattern starts using the selected conditions.
- (7) When printing is completed, “OK” is displayed on the LCD.
Press the [Start] or [Mono Start] to perform this again and it returns to the printing pattern display.
- (8) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If printing fails, printing is stopped with displaying any of the errors shown in the <Error display> table. To retry printing, refer to the “Remedy” in the table, eliminate the error cause and press the [Start] or [Mono Start]. “PRINTING” is displayed on the LCD, and the test pattern is printed.

<Print pattern>

LCD	Description
K/W/Y/M/C	Total five sheets of one sheet for each color with full page print mode
M	Magenta
K	Black
C	Cyan
Y	Yellow
MCYK H	4-color horizontal band
MCYK V	4-color vertical band

<Paper size>

LCD	Description
SELECT: LETTER	Letter
SELECT: A4	A4
SELECT: ISOB5	ISO B5
SELECT: JISB5	JIS B5
SELECT: A5	A5
SELECT: A5L	A5L
SELECT: JISB6	JIS B6
SELECT: A6	A6
SELECT: EXECUTE	Executive size
SELECT: LEGAL	Legal size
SELECT: FOLIO	Folio size
SELECT: HAGAKI	Postcard size

<Print specification>

LCD	Description
SELECT: PLAIN	Plain paper
SELECT: THICK	Plain paper (thick)
SELECT: THIN	Plain paper (thin)
SELECT: THICKER	Plain paper (thicker)
SELECT: RECYCLED	Recycled paper
SELECT: BOND	Bond paper
SELECT: LABEL	Label
SELECT: ENVELOPE	Envelope
SELECT: ENVTHIN	Envelope (thin)
SELECT: ENVTHICK	Envelope (thick)
SELECT: GLOSSY	Glossy paper
SELECT: HAGAKI	Postcard

<Print type>

LCD	Description
SELECT: SX	1-sided printing from T1
SELECT: DX *	2-sided printing from T1

* Supports paper size only for A4, Letter, Legal, and Folio in 2-sided printing.

<Print page>

LCD	Description
SELECT: 1PAGE	1-page printing
SELECT: CONTINUE	Continuous printing *


* Press the [X] or [Stop] to end the continuous printing.

<Error display>

Error display	Remedy
Replace Toner	Replace the toner cartridge and press the [Start] or [Mono Start] to release the error.
Cover is Open	Close the top cover.
No Paper	Refill the paper, close the T1 and press the [Start] or [Mono Start] to release the error.
Jam Tray1	Remove the jammed paper, then close the T1 and all covers, press the [Start] or [Mono Start] to release the error.
Jam Rear	

■ Color test pattern


K/W/Y/M/C

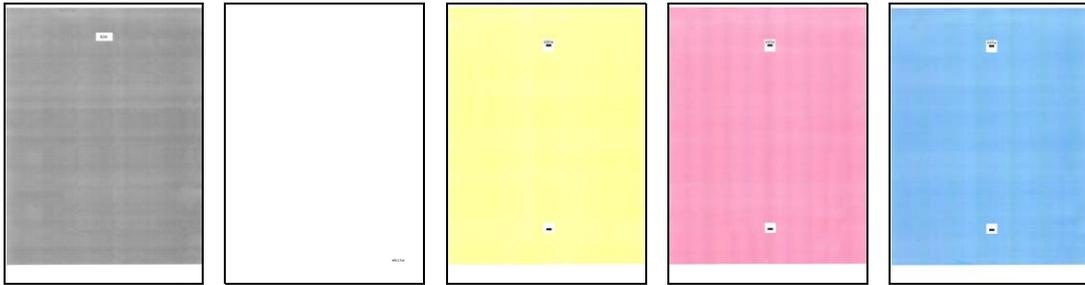

M



K

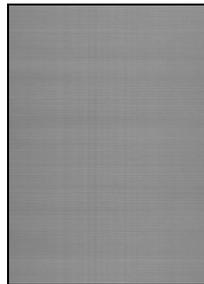

C



Y



MCYK H



MCYK V

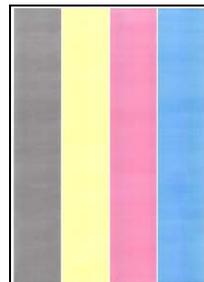


Fig. 5-18

1.3.26 Sensitivity adjustment of density sensor (Function code 72)

< Function >

This function is used to print the patch data for density sensor sensitivity adjustment on the belt unit and measure the density with the density sensor. The characteristics of the density sensor are calculated based on the value measured by the density sensor, and the parameter for correcting developing bias voltage is adjusted.

< Operating Procedure >

- (1) For models with touch panel
Press the [7] and [2] in this order in the initial state of the maintenance mode. "PLS WAIT 72" is displayed on the LCD and performs the sensitivity adjustment of the density sensor.
For models without touch panel
Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 72" on the LCD, and press the [OK]. "PLS WAIT 72" is displayed on the LCD and performs the sensitivity adjustment of the density sensor.
- (2) When this operation is completed without errors, "OK" is displayed on the LCD.
- (3) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Note:

If the sensitivity adjustment of the density sensor fails, "ERROR 72" is displayed on the LCD. Display the error message by pressing the [▼], and take the following remedy that corresponds to the error message.

Error display	Remedy
dens_l_drk_err	<ul style="list-style-type: none"> • Reconnect the harness of the eject sensor PCB. • Replace the registration mark sensor ASSY. • Replace the main PCB.
belt_err	<ul style="list-style-type: none"> • Replace the belt unit. • Replace the waste toner box. • Replace the registration mark sensor ASSY. • Replace the main PCB.
dens_pat_err dens_calc_err	<ul style="list-style-type: none"> • Check if the toner cartridges are set in the correct order of colors. • Replace the toner cartridges and drum unit. • Replace the registration mark sensor ASSY. • Replace the main PCB.
dens_led_adj_err	<ul style="list-style-type: none"> • Replace the belt unit. • Replace the waste toner box. • Replace the registration mark sensor ASSY. • Replace the main PCB.
lph_calc_err	<ul style="list-style-type: none"> • Replace the toner cartridges and drum unit. • Securely close the top cover. • Wipe the LED ASSY with a soft, lint-free cloth. (Refer to Fig. 2-15 (P2-118).) • Re-assemble the LED ASSY.
TONER EMPTY # *	Replace the empty toner cartridge and press the [Start] or [Mono Start] to clear the error. Perform the sensitivity adjustment of the density sensor again.
Cover is Open	Close the top cover.
Replace Toner	Replace the black toner cartridge and press the [Start] or [Mono Start] to clear the error. Perform the sensitivity adjustment of the density sensor again.

* # indicates the toner color (Y, M, or C) of which cartridge became empty.

1.3.27 Continuous adjustments of density / registration sensor (Function code 73)

< Function >

This function is used to perform the following functions consecutively:

Sensitivity adjustment of density sensor (Function code 72), Developing bias voltage correction (Function code 83), and Adjustment of color registration (Adjustment of inter-color position alignment) including registration sensor calibration (Function code 66).

< Operating Procedure >

(1) For models with touch panel

Press the [7] and [3] in this order in the initial state of the maintenance mode. "72/83/66-1" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 73" on the LCD, and press the [OK]. "72/83/66-1" is displayed on the LCD.

(2) Press the [SET] or [OK]. "PLS WAIT 72" is displayed on the LCD and each adjustment is performed in the following order.

1) Sensitivity adjustment of density sensor (Function code 72)
LCD: PLS WAIT 72

2) Developing bias voltage correction (Function code 83)
LCD: PLS WAIT 83

3) Adjustment of color registration (Adjustment of inter-color position alignment) including registration sensor calibration (Function code 66)
LCD: PLS WAIT 66-1

(3) When all operations are completed, "COMP" is displayed on the LCD. Pressing the [▼], and then the [X] or [Stop]. The machine returns to the initial state of the maintenance mode.

Note:

If each adjustment fails, "ERROR**" is displayed on the LCD and the adjustment is stopped. If you press the [▼] with "ERROR**" displayed, the details of the error are shown. "***" in "ERROR **" displayed on the LCD indicates corresponding function code number. Make sure to take an appropriate remedy after checking the remedy provided in each function code.

1.3.28 Configure for country/region and model (Function code 74)

< Function >

This function is used to customize the machine according to language, function settings, and worker switch settings.

< Operating Procedure >

For models with touch panel

- (1) Press the [7], and then the [4] in the initial state of maintenance mode. The spec code currently set is displayed on the LCD.
- (2) Enter the spec code (four digits) you want to set.
- (3) Press the [Mono Start] to save the new setting, and "PARAMETER INIT" is displayed on the LCD. The machine then returns to the initial state of maintenance mode.

For models without touch panel

- (1) Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 74" on the LCD, and press the [OK]. The spec code currently set is displayed on the LCD.
- (2) Enter the first two digits of the spec code. Press the [▲] or [▼] to select the first digit, and press the [OK]. The cursor moves to the second digit. Press the [▲] or [▼] to select the second digit, and press the [OK]. The cursor moves to the fourth digit.
- (3) Press the [▲] or [▼] to select the third digit and the fourth digit (skip the invalid number selected), and press the [OK].
- (4) Press the [Start] to save the new setting, and "PARAMETER INIT" is displayed on the LCD. The machine then returns to the initial state of maintenance mode.

Note:

If there is no entry for one minute or longer, the machine returns to the initial state of maintenance mode automatically, regardless of the display status.

■ Setting by spec code list

MODEL	Country Code		Country Code (Detail)	
DCP-9030CDN	China	0220	---	---
DCP-L3510CDW	Australia	0006	---	---
	CEE-General	1004	---	---
	France/Belgium/Netherlands	1058	Belgium	1008
			France	7004
			Netherlands	9004
			Others	1004
	Germany	0053	Austria	0014
			Germany	0003
	Gulf	0074	Gulf	0041
			South Africa	0024
			Turkey	0025
Italy/Iberia	1004	---	---	
Switzerland	3004	---	---	
UK	1004	---	---	
DCP-L3517CDW	Pan-Nordic	1004	---	---

MODEL	Country Code		Country Code (Detail)	
DCP-L3550CDW	CEE-General	1104	---	---
	France/Belgium/Netherlands	1158	Belgium	1108
			France	7104
			Netherlands	9104
			Others	1104
	Germany	0153	Austria	0114
			Germany	0103
	Italy/Iberia	1104	---	---
	Pan-Nordic	1104	---	---
	Russia	5148	---	---
Switzerland	3104	---	---	
UK	1104	---	---	
DCP-L3551CDW	Brazil	0142	---	---
	Chile	0136	---	---
	Gulf	0174	Gulf	0141
			South Africa	0124
			Turkey	0125
	India	0145	---	---
	New Zealand	0127	---	---
Singapore	0140	---	---	
HL-L3290CDW	U.S.A	0001	---	---
	Canada	0001	---	---
MFC-9150CDN	China	0520	---	---
MFC-9350CDW	China	0820	---	---
MFC-L3710CW	Canada	0301	---	---
	France/Belgium/Netherlands	0358	Belgium	0308
			France	0305
			Netherlands	0309
			Others	0350
	Germany	0353	Austria	0314
			Germany	0303
	Italy/Iberia	0366	Italy	0316
			Portugal	0318
			Spain	0315
New Zealand	0327	---	---	
U.S.A	0301	---	---	
UK	0304	---	---	

MODEL	Country Code		Country Code (Detail)	
MFC-L3730CDN	CEE-General	0488	Bulgaria	0432
			Croatia	0481
			Czech	0437
			Hungary	0438
			Poland	0439
			Romania	0433
			Slovakia	0486
			Slovenia	0482
			Others	0450
	France/Belgium/Netherlands	0458	Belgium	0408
			France	0405
			Netherlands	0409
			Others	0450
	Germany	0453	Austria	0414
			Germany	0403
	Italy/Iberia	0466	Italy	0416
			Portugal	0418
			Spain	0415
	Pan-Nordic	0457	Denmark	0413
			Finland	0412
Norway			0407	
Sweden			0426	
Switzerland	3410	---	---	
UK	0404	---	---	
MFC-L3735CDN	Asia	0540	---	---
	India	0545	---	---
MFC-L3745CDW	Australia	0606	---	---

MODEL	Country Code		Country Code (Detail)	
MFC-L3750CDW	Australia	0706	---	---
	Brazil	0742	---	---
	Canada	0701	---	---
	Chile	0736	---	---
	France/Belgium/Netherlands	0758	Belgium	0708
			France	0705
			Netherlands	0709
			Others	0750
	Germany	0753	Austria	0714
			Germany	0703
	Gulf	0774	Gulf	0741
			South Africa	0724
			Turkey	0725
	Italy/Iberia	0766	Italy	0716
			Portugal	0718
			Spain	0715
	Korea	0744	---	---
	Pan-Nordic	0757	Denmark	0713
			Finland	0712
			Norway	0707
			Sweden	0726
			Others	0750
	Singapore	0740	---	---
Switzerland	3710	---	---	
Taiwan	0723	---	---	
U.S.A	0701	---	---	
UK	0704	---	---	

MODEL	Country Code		Country Code (Detail)	
MFC-L3770CDW	Australia	0806	---	---
	Canada	0801	---	---
	CEE-General	0888	Bulgaria	0832
			Croatia	0881
			Czech	0837
			Hungary	0838
			Poland	0839
			Romania	0833
			Slovakia	0886
			Slovenia	0882
			Others	0850
	France/Belgium/Netherlands	0858	Belgium	0808
			France	0805
			Netherlands	0809
			Others	0850
	Germany	0853	Austria	0814
			Germany	0803
	Italy/Iberia	0866	Italy	0816
			Portugal	0818
			Spain	0815
New Zealand	0827	---	---	
Philippines	0821	---	---	
Russia	0848	---	---	
Singapore	0840	---	---	
Switzerland	3810	---	---	
U.S.A	0801	---	---	
UK	0804	---	---	

Note:

- The spec code list above is current as of March 2018.
- Please contact Brother distributors for the latest information.

1	Model name	30	Total fax pages Color / Mono (Total / Duplex)
2	Serial number	31	Total pages printed by other methods Color / Mono (Total / Duplex)
3	Model code	32	Accumulated average coverage by each toner cartridge
4	Spec code	33	Average coverage by current each toner cartridge
5	Switch check sum (factory use) and comparison of default / current value	34	Average coverage by the previous each toner cartridge
6	Main firmware version	35	Latest job average coverage by each toner cartridge
7	Sub firmware version	36	Drum page count / Rotations of the drum
8	Sub 5 firmware version	37	Total rotations of the develop roller (currently use / previously used toner cartridge)
9	Boot ROM version	38	Total printed pages per paper tray / paper size / paper type
10	Engine archive version	39	Printed pages per toner cartridge (current / previous)
11	ROM check sum	40	Number of pages printed from the waste toner box
12	RTC (Real Time Clock) check	41	Total rotations of the develop roller (currently use / previously used toner cartridge)
13	RTC (Real Time Clock) backup	42	Total number of paper jams / Paper jams by sections of the product
14	RAM size	43	Function information
15	Memory version	44	Machine error log / Total pages printed at the time of the error / Temperature and humidity
16	USB ID code	45	Number of times each consumable has been replaced
17	Result of function code 05 / Result of function code 72 / Wireless LAN setting by country / Wireless LAN output peak / WLAN Setup YES/NO setting / Product inspection ID / Toner type CMYK (current) / Toner type CMYK (previous)	46	Scanned pages
18	Main PCB inspection log / High voltage inspection log / The number of times that the discharge error / Fuser unit error / Process status / Irregular power supply detection error occurred	47	Number of fax transmission times
19	Auto registration / Developing bias voltage correction / Gamma correction / Auto registration (user) / Developing bias voltage correction (user) / Gamma correction (user) / Registration error / Color calibration flag	48	Communication error log
20	Not necessary for maintenance (ADF sensor log)	49	Each developing bias voltage value
21	Estimated remaining toner amount	50	Engine sensor log (Not necessary for maintenance)
22	Remaining life of drum unit	51	Status log (Not necessary for maintenance)
23	Remaining life of belt unit	52	Home position detection / Home position error display
24	Remaining life of fuser unit	53	Current temperature / Highest and lowest temperature in the past
25	Remaining life of PF kit MP	54	Current humidity / Highest and lowest humidity in the past
26	Remaining life of PF kit 1	55	Total power distribution time / The number of times that the power is turned ON
27	Total printed pages Color / Mono (Total / Duplex)	56	Start date for machine operation / Initial set date of RTC
28	Total copied pages Color / Mono (Total / Duplex)	57	Latest paper type used
29	Total PC printed pages Color / Mono (Total / Duplex)	58	New toner cartridge detection log

1.3.30 Check fan operation (Function code 78)

< Function >

This function is used to check that the fan is operating normally. Switch the setting among rotation speed 100%, 67%, 50%, and OFF.

LCD	Name	Description
F	Fan	Emits the heat in the fuser unit.

< Operating Procedure >

(1) For models with touch panel

Press the [7], and then the [8] in the initial state of maintenance mode. "F100" is displayed on the LCD and the fan rotates at 100% speed.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 78" on the LCD, and press the [OK]. "F100" is displayed on the LCD and the fan rotates at 100% speed.

- (2) By pressing the [Start] or [Mono Start], "F67" is displayed on the LCD and the fan rotates at 67% speed.
- (3) By pressing the [Start] or [Mono Start], "F50" is displayed on the LCD and the fan rotates at 50% speed.
- (4) By pressing the [Start] or [Mono Start], "F 0" is displayed on the LCD and the fan stops.
- (5) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

■ Location of fan

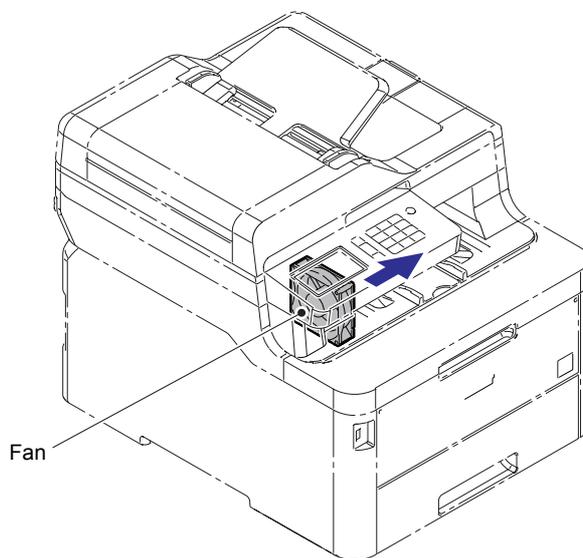


Fig. 5-20

1.3.31 Delete fax data (Function code 79)

< Function >

This function is used to delete fax data in the machine memory.

< Operating Procedure >

- (1) Press the [7], and then the [9] in the initial state of maintenance mode. "BACKUP CLEAR" is displayed on the LCD and fax data in the machine memory is deleted.
- (2) When deleting is completed, the machine returns to the initial state of maintenance mode.

1.3.32 Display machine log information (Function code 80)

< Function >

This function is used to display the log information on the LCD.

< Operating Procedure >

(1) For models with touch panel

Press the [8], and then the [0] in the initial state of maintenance mode. "MACERR_01:****" is displayed on the LCD (**** indicates error code).

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 80" on the LCD, and press the [OK]. "MACERR_01:****" is displayed on the LCD (**** indicates error code).

- (2) Press the [Start] or [Mono Start], then the next item is displayed. Press the [▲] to go back to the previous item.
- (3) Press the [X], and the machine returns to the initial state of maintenance mode.

■ Maintenance information

LCD	Description
MACERR_##:0000	Machine error log (last ten errors) *1
USB:000G8J000166	Serial number *2
MAC:008077112233	MAC address
PCB:	Main PCB serial number *3
FSR:12345678A	Fuser unit serial number
CTN_ERM:78%	Amount of remaining cyan toner estimated from coverage
CTN_RRM:67%	Amount of remaining cyan toner estimated from the number of develop rotations
MTN_ERM:78%	Amount of remaining magenta toner estimated from coverage
MTN_RRM:67%	Amount of remaining magenta toner estimated from the number of develop rotations
YTN_ERM:78%	Amount of remaining yellow toner estimated from coverage
YTN_RRM:67%	Amount of remaining yellow toner estimated from the number of develop rotations
KTN_ERM:87%	Amount of remaining black toner estimated from coverage
KTN_RRM:67%	Amount of remaining black toner estimated from the number of develop rotations
CDRM_PG:00000000	Printed pages for cyan drum unit
MDRM_PG:00000000	Printed pages for magenta drum unit
YDRM_PG:00000000	Printed pages for yellow drum unit
KDRM_PG:00000000	Printed pages for black drum unit
PFMP_PG:00000000	Pages fed from PF kit MP (MP models only)
PFK1_PG:00000000	Pages fed from PF kit 1
FUSR_PG:00000000	Printed pages on fuser unit
BELT_PG:00000000	Printed pages on belt unit
TTL_PG:00000000	Total number of pages printed

LCD	Description
DX_PG:00000000	Paper input for duplex tray
TTL_CO:00000000	Total number of color pages printed
TTL_MO:00000000	Total number of monochrome pages printed
DX_CO:00000000	Total number of two-sided color pages printed
DX_MO:00000000	Total number of two-sided monochrome pages printed
TTLCOPY:00000000	Total pages copied
DX_COPY:00000000	Total pages copied on both sides
CL_COPY:00000000	Total number of color pages copied
MN_COPY:00000000	Total number of monochrome pages copied
DX_CCPY:00000000	Total number of two-sided pages copied
DX_MCPY:00000000	Total number of two-sided monochrome pages printed
TTLPCPT:00000000	Total number of pages printed via PC
DX_PCPT:00000000	Total number of two-sided pages printed via PC
CL_PCPT:00000000	Total number of color pages printed via PC
MN_PCPT:00000000	Total number of monochrome pages printed via PC
DX_CPCP:00000000	Total number of two-sided color pages printed via PC
DX_MPCP:00000000	Total number of two-sided monochrome pages printed via PC
TTLFAX:00000000	Total List / Fax pages printed (For models with FAX only)
DX_FAX:00000000	Total List / Fax pages printed on both sides (For models with FAX only)
CL_FAX:00000000	Total List / Fax pages color printed (For models with FAX only)
MN_FAX:00000000	Total List / Fax pages monochrome printed (For models with FAX only)
DX_CFAX:00000000	Total List / Fax pages color printed on both sides (For models with FAX only)
DX_MFAX:00000000	Total List / Fax pages monochrome printed on both sides (For models with FAX only)
TTL_OTH:00000000	Total number of pages printed by other methods
DX_OTH:00000000	Total number of two-sided pages printed by other methods
CL_OTH:00000000	Total number of color pages printed by other methods
MN_OTH:00000000	Total number of monochrome pages printed by other methods
DX_COTH:00000000	Total number of two-sided color pages printed by other methods
DX_MOTH:00000000	Total number of two-sided monochrome pages printed by other methods
CCVRGUSI:4.32%*	Average coverage by the current cyan toner cartridge
CCVRGACC:3.47%	Accumulated average coverage of cyan toner cartridge
MCVRGUSI:4.32%*	Average coverage by the current magenta toner cartridge
MCVRGACC:3.47%	Accumulated average coverage of magenta toner cartridge
YCVRGUSI:4.32%*	Average coverage by the current yellow toner cartridge
YCVRGACC:3.47%	Accumulated average coverage of yellow toner cartridge
KCVRGUSI:4.32%*	Average coverage by the current black toner cartridge
KCVRGACC:3.47%	Accumulated average coverage of black toner cartridge
CDRUM:00000000	Number of cyan drum rotations
MDRUM:00000000	Number of magenta drum rotations
YDRUM:00000000	Number of yellow drum rotations

LCD	Description
KDRUM:00000000	Number of black drum rotations
CTN_RND: 00000000	Number of cyan develop roller rotations
MTN_RND: 00000000	Number of magenta develop roller rotations
YTN_RND: 00000000	Number of yellow develop roller rotations
KTN_RND: 00000000	Number of black develop roller rotations
MP_PG:00000000	Paper input for MP tray (MP models only)
MN_PG:00000000	Paper input for manual feed slot (Manual feed models only)
TR1_PG:00000000	Paper input for T1
DX_PG:00000000	Paper passed through duplex tray
A4+LTR:00000000	Total paper input for A4 and Letter
LG+FOL:00000000	Total paper input for Legal and Folio
B5+EXE:00000000	Total paper input for B5 and Executive
ENVLOP:00000000	Paper input for Envelope
A5 :00000000	Paper input for A5 (including A5 Landscape)
OTHER :00000000	Paper input for other sizes
PLTNRE:00000000	Total printed pages of plain, thin, and recycled paper
TKTRBD:00000000	Total printed pages of thick, thicker, and bond paper
ENVTYP:00000000	Total printed pages of envelope, thick envelope, and thin envelope
COLOR:00000000	Full-color printed pages
LTHD:00000000	Printed pages on letter head
LABEL:00000000	Printed pages on label
HAGAKI:00000000	Printed pages on postcard
GLOSSY:00000000	Printed pages on glossy paper
TTL_JAM:00000000	Total paper jams that have occurred
MP_JAM:00000	Paper jams that have occurred in the MP tray (MP models only)
MN_JAM:00000	Paper jams that have occurred in the manual feed slot (Manual feed models only)
TR1_JAM:00000000	Paper jams that have occurred in T1
IN_JAM:00000000	Paper jams that have occurred in the machine
RE_JAM:00000000	Paper jams that have occurred at the ejecting section or back cover
DX_JAM:00000000	Paper jams that have occurred in the duplex tray
POWER:00000375	Total power distribution time (unit: hour)
PWRCNT:00000001	Number of times that the power is turned ON
CTN_CH:0000	Number of times that the cyan toner cartridge has been replaced *4
MTN_CH:0000	Number of times that the magenta toner cartridge has been replaced *4
YTN_CH:0000	Number of times that the yellow toner cartridge has been replaced *4
KTN_CH:0000	Number of times that the black toner cartridge has been replaced *4
CDRM_CH:0000	Number of times that the cyan drum unit has been replaced *4
MDRM_CH:0000	Number of times that the magenta drum unit has been replaced *4
YDRM_CH:0000	Number of times that the yellow drum unit has been replaced *4
KDRM_CH:0000	Number of times that the black drum unit has been replaced *4
WTNR_CH:0000	Number of times that the waste toner box has been replaced *4

LCD	Description
BELT_CH:0000	Number of times that the belt unit has been replaced ^{*4}
FUSR_CH:0000	Number of times that the fuser unit has been replaced ^{*4}
PFMP_CH:0000	Number of times that the PF kit MP has been replaced ^{*4}
PFK1_CH:0000	Number of times that the PF kit 1 has been replaced ^{*4}
CTN_PG1:00000000	Number of pages printed from the currently installed cyan toner cartridge
CTN_PG2:00000000	Number of pages printed from the previous installed cyan toner cartridge
MTN_PG1:00000000	Number of pages printed from the currently installed magenta toner cartridge
MTN_PG2:00000000	Number of pages printed from the previous installed magenta toner cartridge
YTN_PG1:00000000	Number of pages printed from the currently installed yellow toner cartridge
YTN_PG2:00000000	Number of pages printed from the previous installed yellow toner cartridge
KTN_PG1:00000000	Number of pages printed from the currently installed black toner cartridge
KTN_PG2:00000000	Number of pages printed from the previous installed black toner cartridge
WTNR_PG:00000000	Number of pages printed with the current waste toner box
SCN_PG:00000000	The number of scanned pages (except Fax and Copy)
ADTL_PG:00000000	Total pages of ADSX_PG and ADDX_PG
ADSX_PG:00000000	ADF single-side scanned pages
ADDX_PG:00000000	ADF double-side scanned pages
FB_PG:000000	Total FB scanned pages
ADSX_JAM:000000	Document jams that have occurred on ADF single-side scanning
ADDX_JAM:000000	Document jams that have occurred on ADF duplex scanning (duplex scanning models only)
FXTX_PG:00000000	The number of faxed pages
COMERR#:00000000	Communication error log (past three errors) ^{*5}
CDEV_BIAS:400V	Cyan developing bias voltage
MDEV_BIAS:400V	Magenta developing bias voltage
YDEV_BIAS:400V	Yellow developing bias voltage
KDEV_BIAS:400V	Black developing bias voltage value
ENGERR##:000000	Engine error log (last ten errors) ^{*6}
HODN_ER:0000	The number of discharge errors occurred
FUSR_ER:0000	The number of fuser unit errors occurred
DEVSTATUS ##:00	Log for design analysis ^{*7}
FUNC1:0000000000	Function information

^{*1} 01 to 10 will be displayed for “##” in chronological order. Pressing the [SET] or [OK] while the machine error log is displayed shows “PGCNT:00000000” (total pages printed at the time of the error) on the LCD, and pressing the [SET] or [OK] again shows “TMP:000 HUM:000” (TMP: temperature at the time of the error (°C), HUM: humidity at the time of the error (%)) on the LCD.

- *2 Last 12 digits of the serial number are displayed.
The serial number can be changed according to the procedures below.

For models with touch panel

- 1) While the serial number is displayed, press the [9], [4], [7], and [5] in this order to enter the edit mode.
- 2) Use the keypad to enter the first digit of the serial number. The second digit starts to flash. Enter the second digit to the 15th digit similarly.

<Entry method of alphanumeric characters>

See the table below and press the corresponding key until the desired character is displayed.

Keypad	Assigned characters
2	2 → A → B → C
3	3 → D → E → F
4	4 → G → H → I
5	5 → J → K → L
6	6 → M → N → O
7	7 → P → Q → R → S
8	8 → T → U → V
9	9 → W → X → Y → Z

- 3) Press the [Mono Start]. The serial number is saved and the machine returns to the initial state of maintenance mode.

For models without touch panel

- 1) While “USB:*****” is displayed on the LCD, press the [▲] or [▼] to display “9”.
- 2) Press the [OK]. “USB:*****” is displayed on the LCD again.
- 3) Repeat the procedures 1) and 2) to enter “4”, “7”, and “5” respectively.
- 4) When a cursor appears at the first digit of the serial number on the LCD display, the edit mode is entered.
- 5) Press the [▲] or [▼] to enter the first digit of the serial number.
- 6) Press the [OK]. The cursor moves to the second digit. Likewise, repeatedly enter the 15-digit serial number from the second digit to the last.
- 7) Press the [Start]. The serial number is saved and the machine returns to the initial state of maintenance mode.

- *3 Pressing the [SET] or [OK] while “PCB:” is displayed shows the serial number of the main PCB on the LCD.

- *4 Pressing the [SET] or [OK] while the number of each consumable part had replaced is displayed shows “DATE_XX:000000” (XX: each consumable part) and the replaced date on the LCD.

- *5 Pressing the [SET] or [OK] while the communication error is displayed shows “DATE:0000000000” and the date of replacement on the LCD.

- *6 01 to 10 will be displayed for “##” in chronological order. Pressing the [SET] or [OK] while the engine error log is displayed shows “TM:00000 BT:000” (TM: the minutes passed from the previous error, BT: the number of times that the power is turned ON/OFF) on the LCD.

- *7 01 to 10 will be displayed for “##” in chronological order. Pressing the [SET] or [OK] while log for design analysis is displayed shows “PGCNT:00000000” (total pages printed at the time of the error) on the LCD.

1.3.33 Display machine error code (Function code 82)

< Function >

This function is used to display the latest error code on the LCD.

< Operating Procedure >

(1) For models with touch panel

Press the [8], and then the [2] in the initial state of maintenance mode.
“MACHINE ERR XXXX” is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display
“MAINTENANCE 82” on the LCD, and press the [OK].
“MACHINE ERR XXXX” is displayed on the LCD.

(2) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

1.3.34 Developing bias voltage correction (Function code 83)

< Function >

This function performs developing bias voltage correction to fix the density of each color toner when printed color is not correct.

Note:

Before this function is performed, there is a need that the "1.3.26 Sensitivity adjustment of density sensor (Function code 72)" in this chapter has been done more than once. When performing this function code 83 after replacing the main PCB, make sure to perform the "1.3.26 Sensitivity adjustment of density sensor (Function code 72)" in this chapter first.

< Operating Procedure >

(1) For models with touch panel

Press the [8] and [3] in this order in the initial state of the maintenance mode. The machine displays "PLS WAIT 83" on the LCD and starts the developing bias voltage correction.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 83" on the LCD, and press the [OK]. The machine displays "PLS WAIT 83" on the LCD and starts the developing bias voltage correction.

- (2) When developing bias voltage correction is completed, "MODE KYMC ****" is displayed on the LCD. When you press the [Start] or [Mono Start], the machine returns to the initial state of the maintenance mode. (* represents any number from 0 to 3.)

Note:

If developing bias voltage correction fails, "ERROR 83" is displayed on the LCD. Display the error message by pressing the [▼], and take the following remedy that corresponds to the error message.

Error display	Remedy
FAILED DEVBIAS	Remove the error cause with the following operations and press the [Start] or [Mono Start] to clear the error. <ul style="list-style-type: none">• Re-insert the toner cartridge in the correct position.• Replace the toner cartridge.• Replace the drum unit.• Replace the waste toner box.• Replace the belt unit.• Replace the registration mark sensor ASSY.
TONER EMPTY # *	Replace the empty toner cartridge and press the [Start] or [Mono Start] to clear the error. After the sensitivity adjustment of the density sensor (Function code 72) is performed, the developing bias voltage value is compensated again.
Cover is Open	Close the top cover.
Replace Toner	Replace the black toner cartridge and press the [Start] or [Mono Start] to clear the error. After the sensitivity adjustment of the density sensor (Function code 72) is performed, the developing bias voltage value is compensated again.

* # indicates the toner color (Y, M, or C) of which cartridge became empty.

1.3.35 Send communication log information to telephone line (Function code 87)

< Function >

This function is used to send the error list to service personnel at a remote service station when a fax communication problem has occurred in the user's machine. Receiving the error list allows the service personnel to analyze the problem current in the user's machine.

< Operating Procedure >

- Service side
 - (1) Make a call from the service side equipment to the user side equipment.
- User side
 - (2) Press the [8] and [7] in this order. "SENDING P.01" is displayed on the LCD and sending error list starts. When the error list is sent, the machine returns to the ready state.
- Service side
 - (3) Once the user side equipment started sending the error list, press the [Start] or [Mono Start].
"Send or Receive? / 1.Send 2.Receive" is displayed on the LCD.
 - (4) Press the [2]. Receiving the error list starts.

1.3.36 Reset counters for consumable parts (Function code 88)

< Function >

This function is performed to reset the counter for each consumable part in the main PCB after that has been replaced.

< Operating Procedure >

(1) For models with touch panel

Press the [8] twice in the initial state of maintenance mode. "Reset-Fuser Unit" is displayed on the LCD.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 88" on the LCD, and press the [OK]. "Reset-Fuser Unit" is displayed on the LCD.

(2) Press the [▲] or [▼] to display the part with the counter to be reset on the LCD, and press the [Start] or [Mono Start].

Enter the type selection of fuser unit only when the "Reset-Fuser Unit" is selected. After selecting the "Reset-Fuser Unit", press the [▲] or [▼] to select the last digit value of the serial number of fuser unit, and press the [Start] or [Mono Start].

(3) "*****OK?" is displayed on the LCD. Press the [Start] or [Mono Start] to reset the counter for the selected part and return the display to the procedure (2). (***** represents the name of the selected part)

(4) Press the [X] or [Stop], and the machine returns to the initial state of maintenance mode.

Selectable parts are shown in the table below.

Error display	Part name	Counter to be reset
Reset-Fuser Unit	Fuser unit	Printed pages counter
Reset-PF Kit T1	PF kit 1	Printed pages counter
Reset-PF Kit MP	PF kit MP	Printed pages counter
Reset-LVPS	Low-voltage power supply PCB	Irregular power supply detection counter

1.3.37 Quit maintenance mode (Function code 99)

< Function >

This function is used to quit the maintenance mode, restart the machine, and return it to the ready state. Also forcefully close the fuser unit error.

< Operating Procedure >

(1) For models with touch panel

Press the [9] twice in the initial state of maintenance mode. The machine quits the maintenance mode and returns to the ready state.

For models without touch panel

Press the [▲] or [▼] in the initial state of maintenance mode to display "MAINTENANCE 99" on the LCD, and press the [OK]. The machine quits the maintenance mode and returns to the ready state.

2. OTHER SERVICE FUNCTIONS

2.1 Change ON/OFF setting of color registration

< Function >

Situation and timing of adjustment of color registration is decided by machine features of each models, and it will be performed by the decided timing. This function switches the registration starts automatically or not. However, registration will be performed when the machine cannot print normally even the auto registration is OFF.

< Operating Procedure >

- (1) Press the  in the ready state and press the [Printer] on the LCD.
- (2) Press the [^] or [v] to display “Color Correction” on the LCD then press it.
- (3) Press the [Calibration] on the LCD.
- (4) Press the [*] for five seconds or more to display “Auto Calibration?”.
- (5) Press the [On] when enabling this function or [Off] when disabling this function and return the display to step (3).
- (6) Press the , the machine returns to the ready state.

2.2 Print Communication Error List


< Function >

This function is used to print the communication error list (Communication List).

< Operating Procedure >

For models with touch panel


- (1) Press and hold the  for approximately five seconds while the machine is in the ready state.
- (2) Press the blank field at the bottom on the LCD. The display shown on the right appears on the LCD.

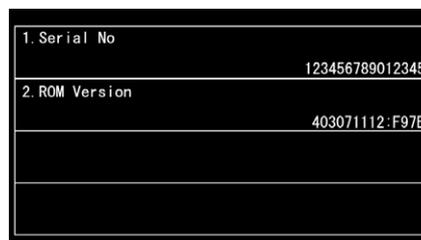

The LCD display shows a communication error list with two entries:

1. Serial No	123456789012345
2. ROM Version	403071112:F97B

- (3) Press the [#], [1], [0], [4], [1], and [4] in this order in approximately two seconds.
- (4) Communication error list (Communication List) is printed. Press the [X] or [Stop], the machine returns to the ready state.

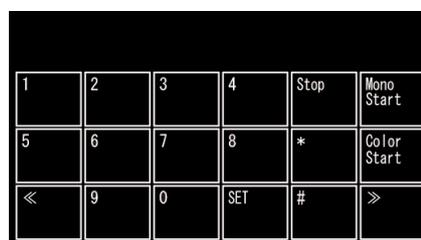

The LCD keypad layout is as follows:

1	2	3	4	Stop	Mono Start
5	6	7	8	*	Color Start
<<	9	0	SET	#	>>

For models without touch panel

- (1) Press the [Menu], [#], [1], [0], [4], [1], and [4] in this order in approximately two seconds while the machine is in the ready state. Communication error list (Communication List) is printed. When printing is completed, the machine returns to the ready state.


CHAPTER 7 PERIODICAL MAINTENANCE

1. PRECAUTIONS

To avoid creating secondary problems by mishandling, follow the warnings and precautions below during maintenance work.

 **WARNING**

Some parts inside the machine are extremely hot immediately after the machine is used. When opening the Top cover or Back cover to access any parts inside the machine, never touch the shaded parts shown in the following figures.

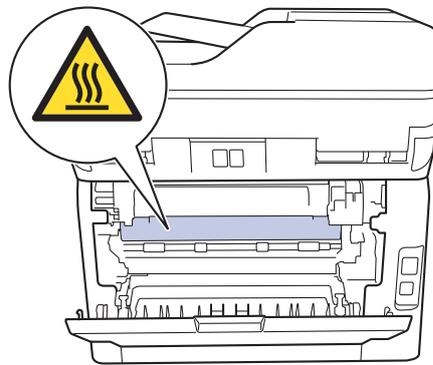

- Be careful not to lose screws, washers, or other parts removed.
- Be sure to apply grease to the applicable positions specified in [Chapter 3](#).
- When using soldering irons or other heat-generating tools, take care not to accidentally damage parts such as wires, PCBs and covers.
- Static electricity charged in your body may damage electronic parts. When transporting PCBs, be sure to wrap them in conductive sheets.
- When replacing the PCBs and all the other related parts, put on a grounding wrist band and perform the job on a static mat. Also take care not to touch the conductor sections on the flat cables or on the wire harnesses.
- After disconnecting flat cables, check that each cable is not damaged at its end or shortcircuited.
- When connecting flat cables, do not insert them at an angle. After insertion, check that the cables are not at an angle.
- When connecting or disconnecting harnesses, hold the connector body, not the cables. If the connector has a lock, release the connector lock first to release it.
- After a repair, check not only the repaired portion but also harness treatment. Also check that other related portions are functioning properly.
- There must be no damage in the Insulation sheet.
- After a repair, update the firmware to the latest version.
- Violently closing the Top cover without mounting the Toner cartridge and the Drum unit can damage the machine.
- When replacing the PCBs, check that there is no foreign object on the parts surface of the PCBs or on the soldering surface.

2. PERIODICAL REPLACEMENT PARTS

2.1 Preparation

■ Disconnecting cables and removing accessories

Prior to proceeding with the disassembly procedure,

- (1) Unplug
 - the AC cord,
 - the USB cable, if connected,
 - the LAN cable, if connected,
 - the USB flash memory drive, if connected, and
 - the Line cord, if connected.
- (2) Remove
 - the Toner cartridge & Drum unit,
 - the Belt unit,
 - the Waste toner box,
 - the Paper tray,
 - the LAN port cap, and
 - the EXT cap.

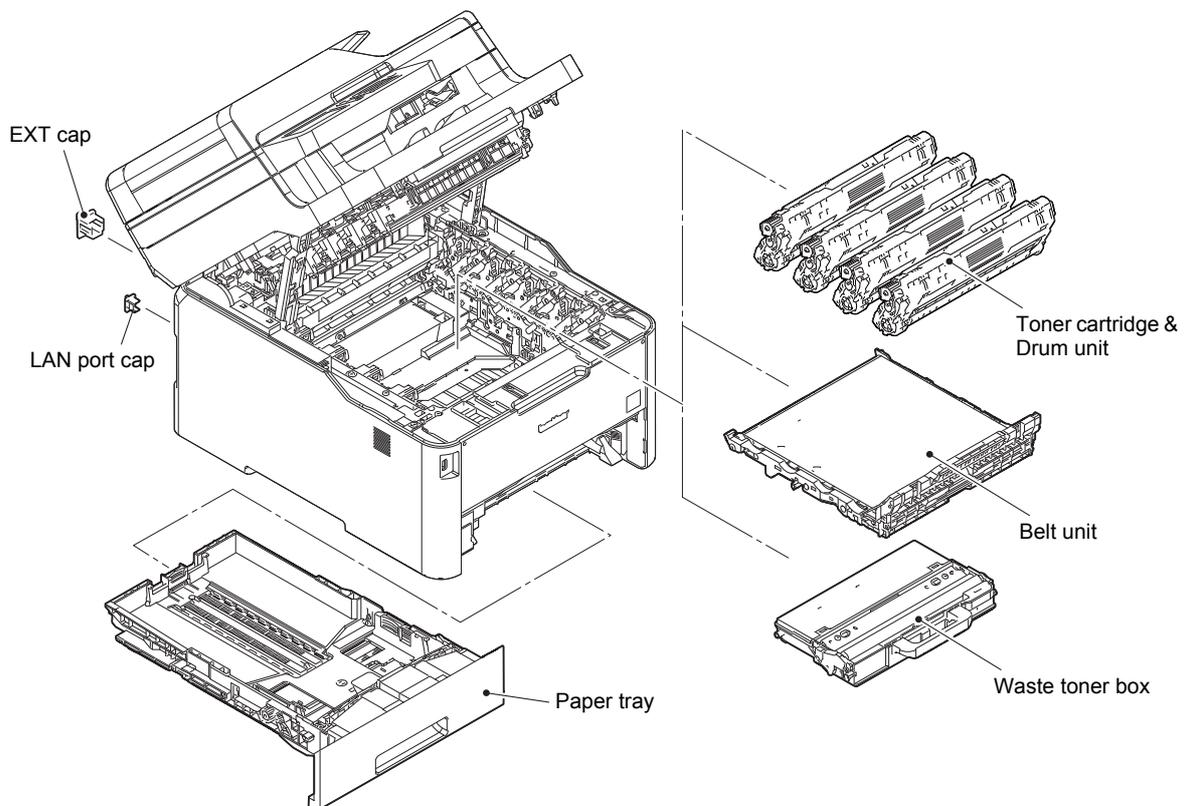


Fig. 7-1

2.2 Fuser unit

- (1) Open the Back cover ASSY.
- (2) Remove the Back cover stopper arm L/R from the A part.

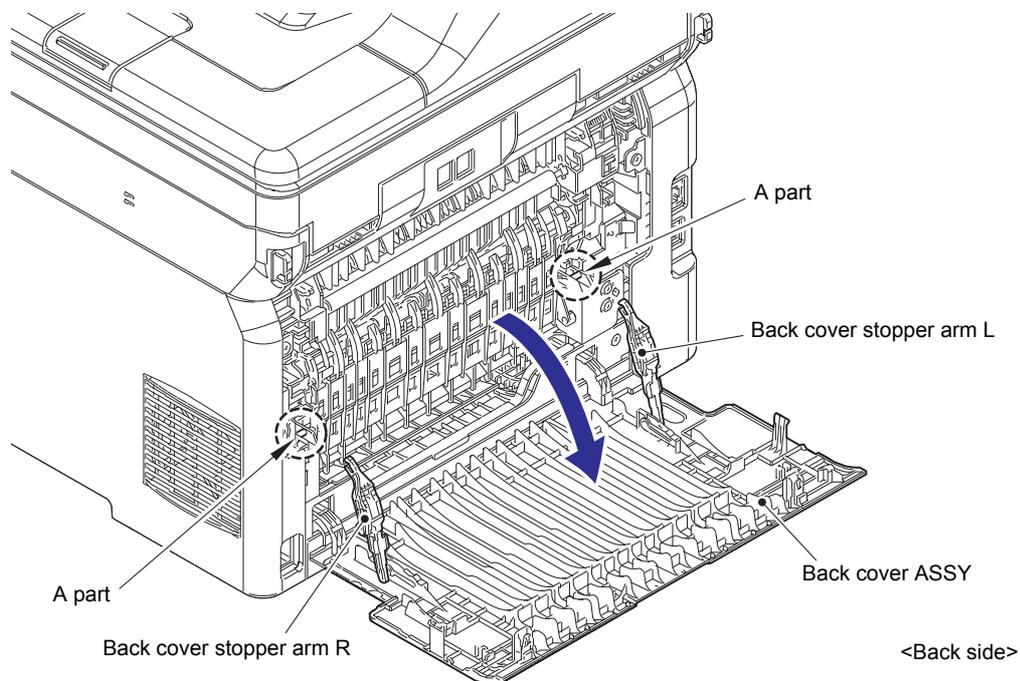


Fig. 7-2

- (3) Release the Boss of the Back cover ASSY from the Bush on the Frame L to remove the Back cover ASSY. (3a → 3b)

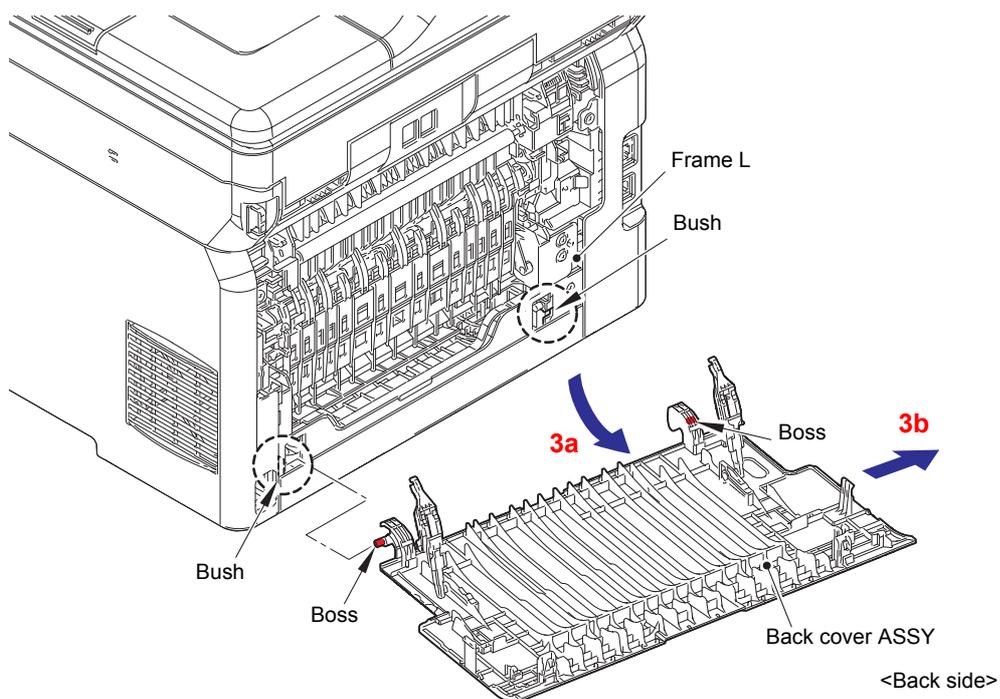


Fig. 7-3

(4) Remove the Rear flapper sub ASSY from each Boss.

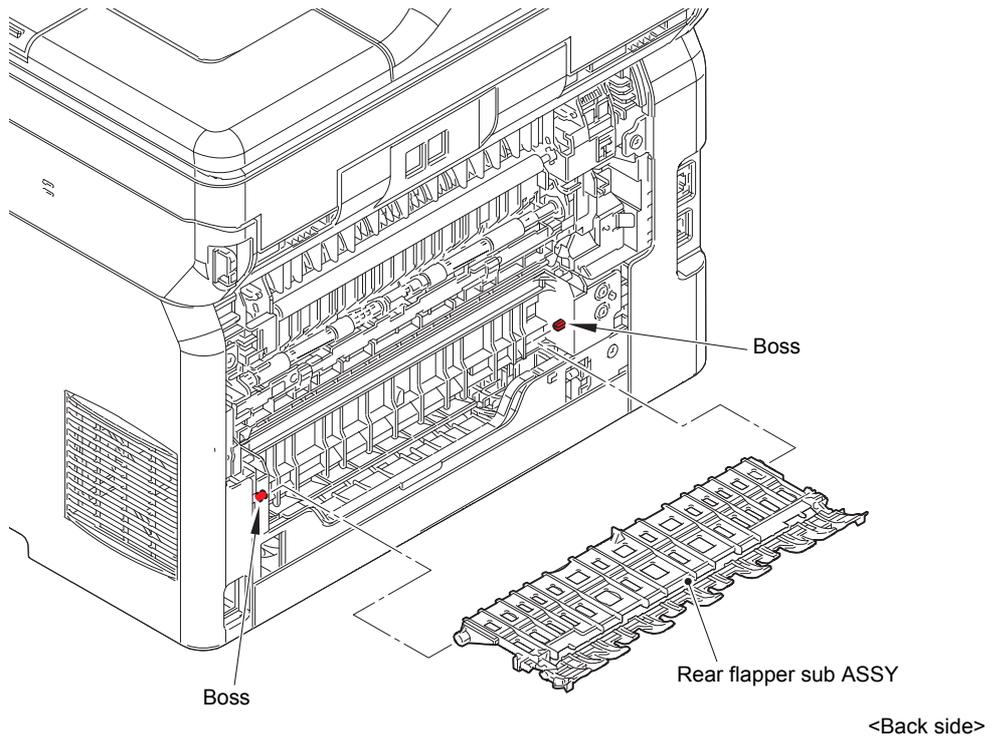


Fig. 7-4

(5) Remove the Taptite bind B M3x10 screw to remove the Fuser cover L.

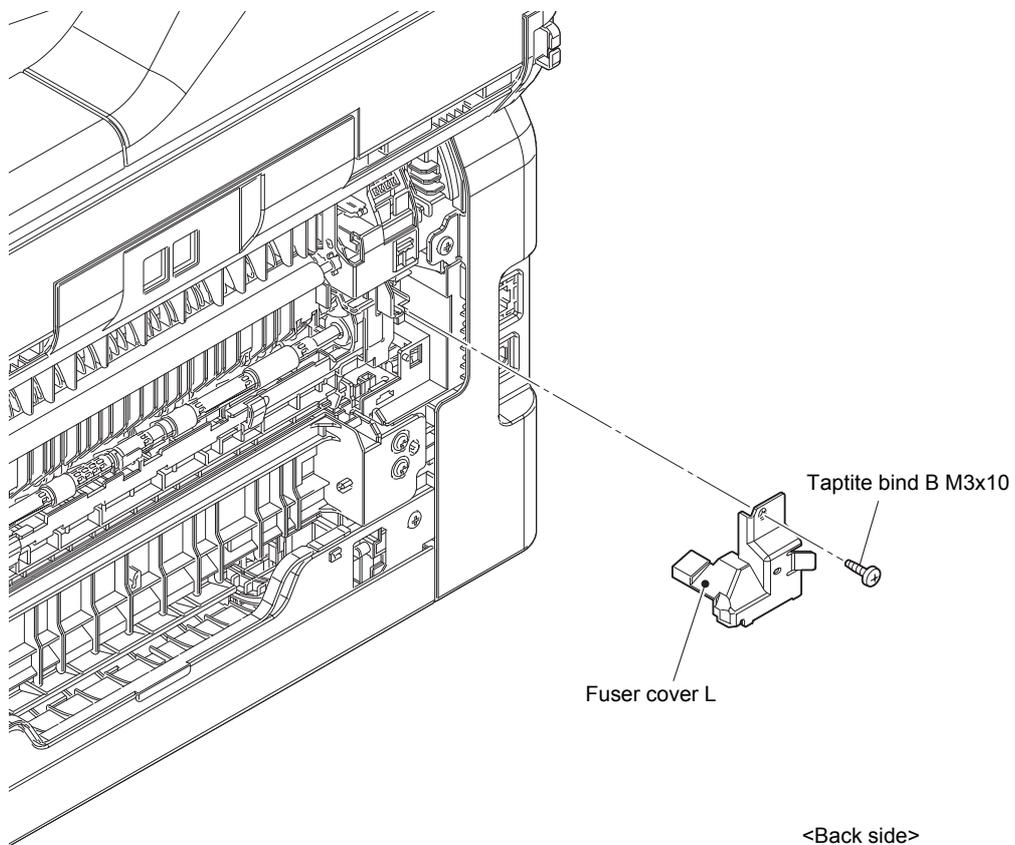


Fig. 7-5

Assembling Note:

- When attaching the Fuser cover L, tighten the screw while pushing the Fuser cover L in the direction of the arrow. When the Fuser cover L is attached without pushing it, the Boss of the Frame L may come off.

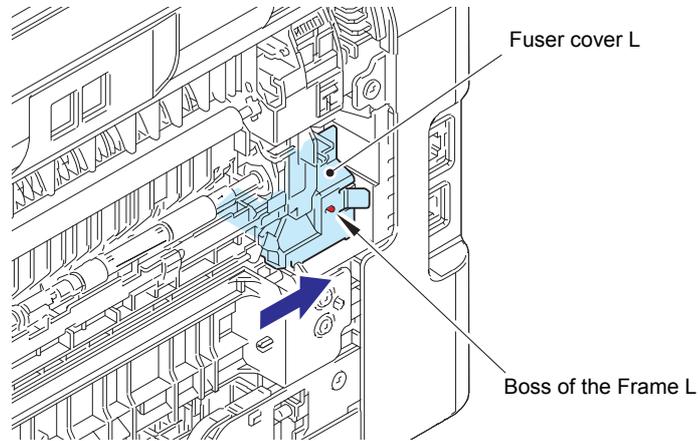


Fig. 7-6

- (6) Release the lock of the Fuser cover lock lever L/R to open the Fuser cover ASSY.

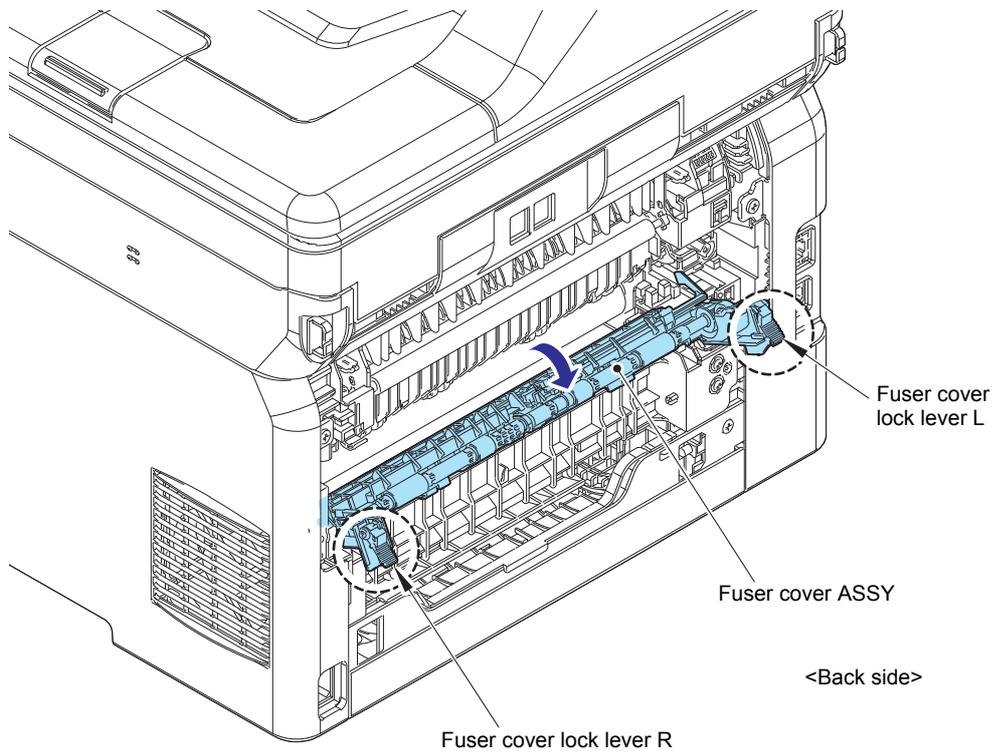


Fig. 7-7

- (7) Slide the Fuser cover ASSY in the direction of the arrow and remove it to the front.

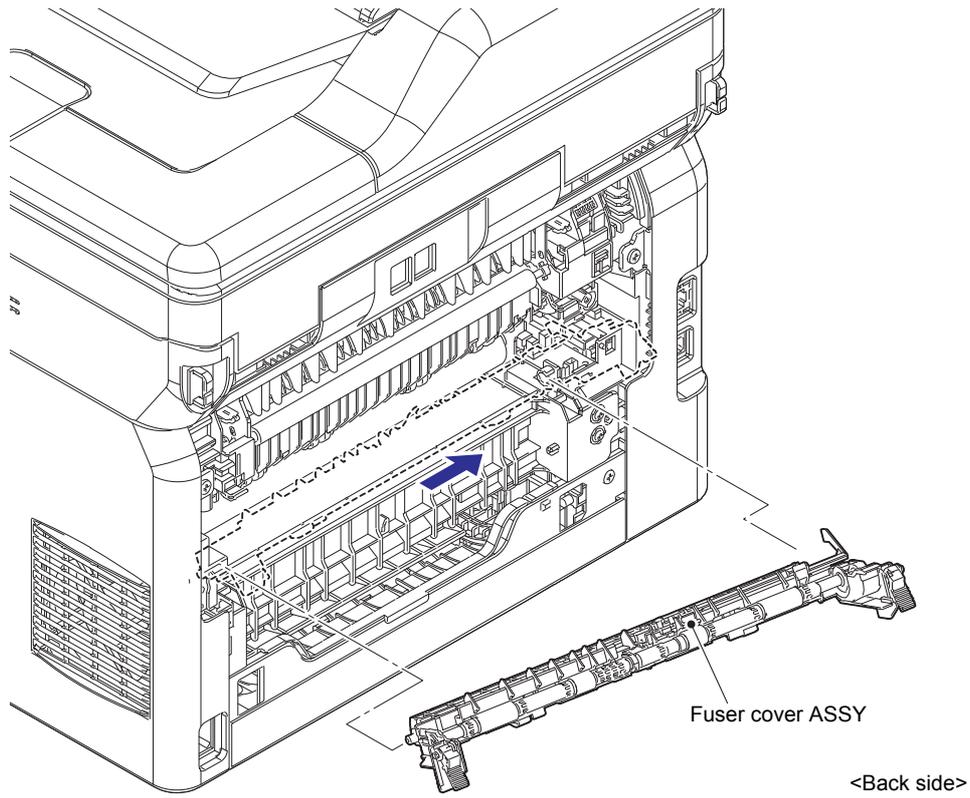


Fig. 7-8

- (8) Remove the Taptite bind B M3x10 screw to remove the Fuser cover R.

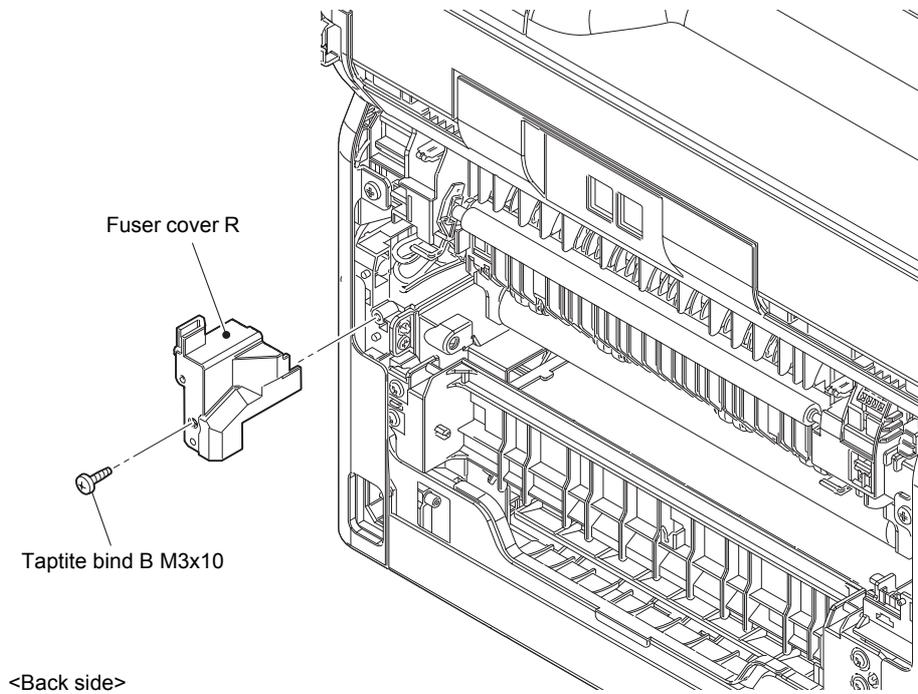


Fig. 7-9

- (9) Disconnect the Center thermistor harness and the Side thermistor harness from the Eject sensor PCB.

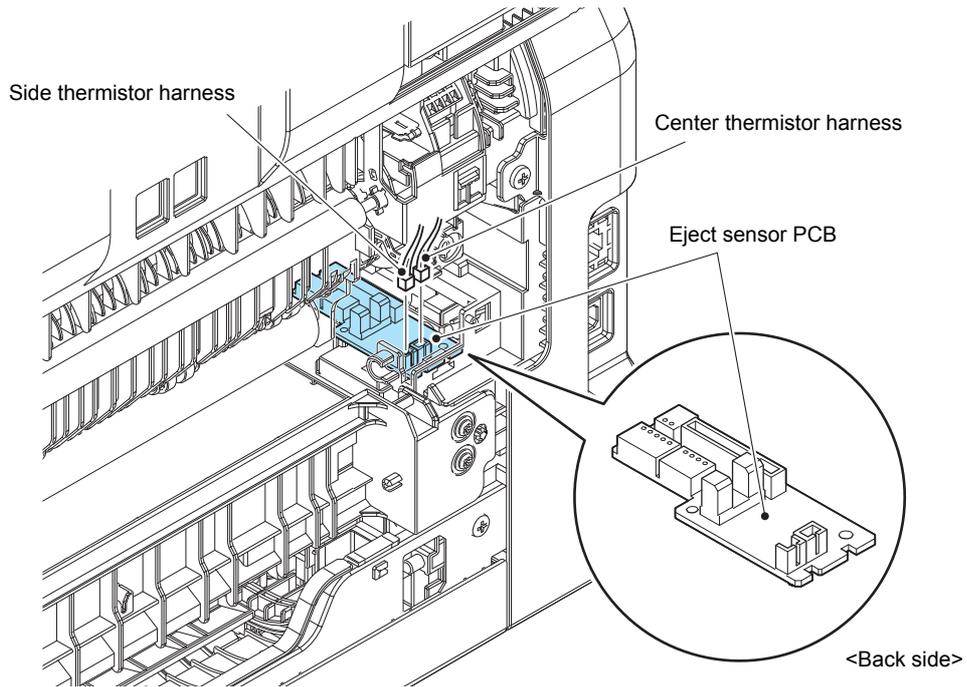


Fig. 7-10

- (10) Remove the two Taptite pan (washer) B M4x12DA screws. Pull out the Fuser unit on the Frame L side in the direction of arrow 10a and then remove it in the direction of arrow 10b.
- (11) Disconnect the Heater harness of the Fuser unit from the LVPS heater harness.

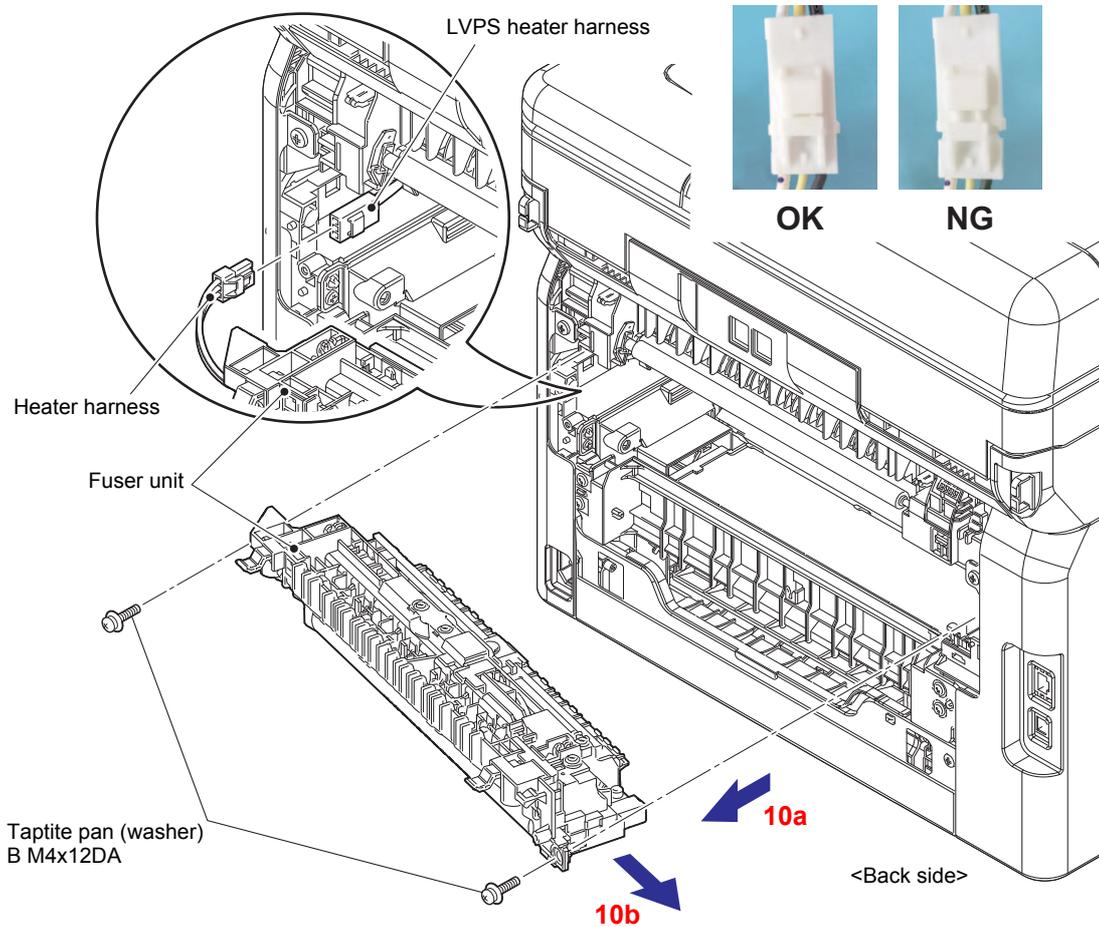


Fig. 7-11

Assembling Note:

- After connecting the Heater harness, pull the Connector on the Heater harness side while holding the Connector on the LVPS heater harness side to make sure it is locked.

Note:

- Do not apply a physical impact or vibration to the Fuser unit.

Assembling Note:

- After connecting the Heater harness of the Fuser unit to the LVPS heater harness, the Heater harness is housed so that it does not come out of the Frame R.

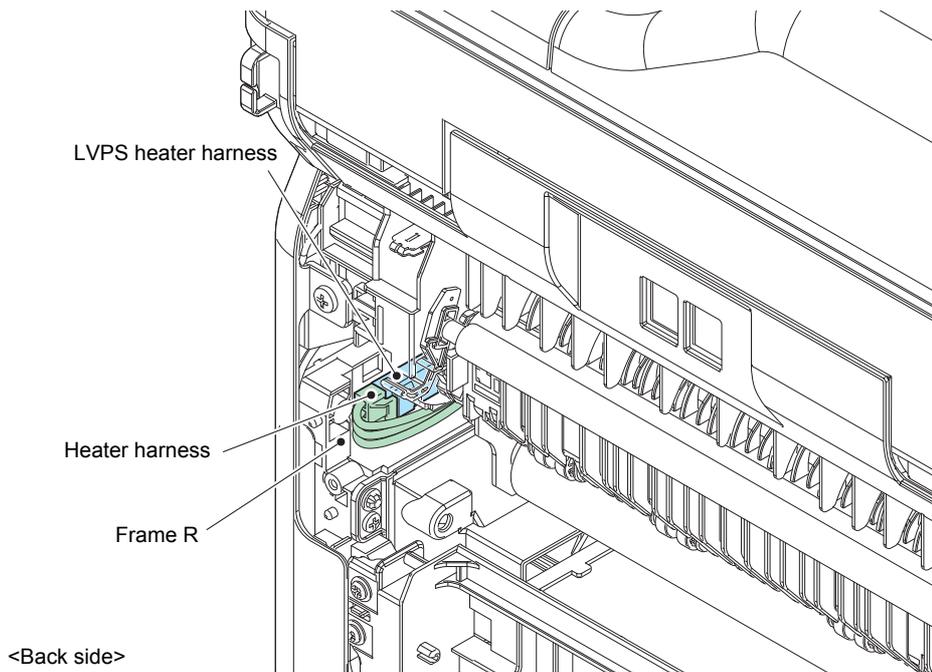


Fig. 7-12

(12) After replacing the Fuser unit, reset the counter.

(Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5.)

2.3 PF kit 1

- (1) Release each Hook of the T1 separation pad ASSY from the Paper tray.
- (2) Push both side Arms on the T1 separation pad ASSY inwards to remove the Pins, and remove the T1 separation pad ASSY from the Paper tray.
- (3) Remove the Separation pad spring from the Paper tray.

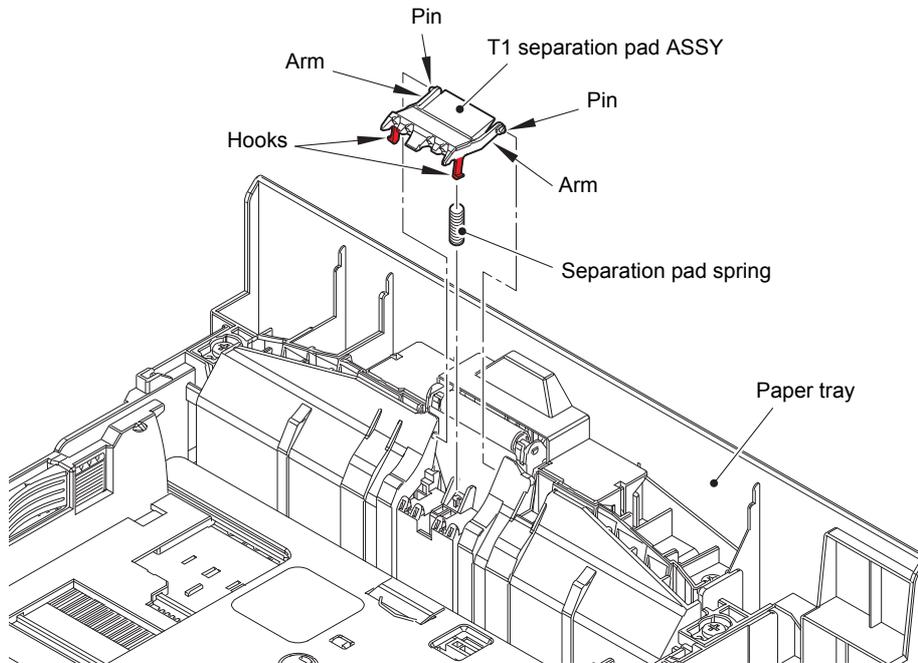


Fig. 7-13

- (4) Push the Lift arm in the direction of arrow A, and rotate the Roller holder ASSY to release the Boss. Slide the Roller holder ASSY in the direction of arrow B to remove it from the Shaft, and remove the Roller holder ASSY from the machine.

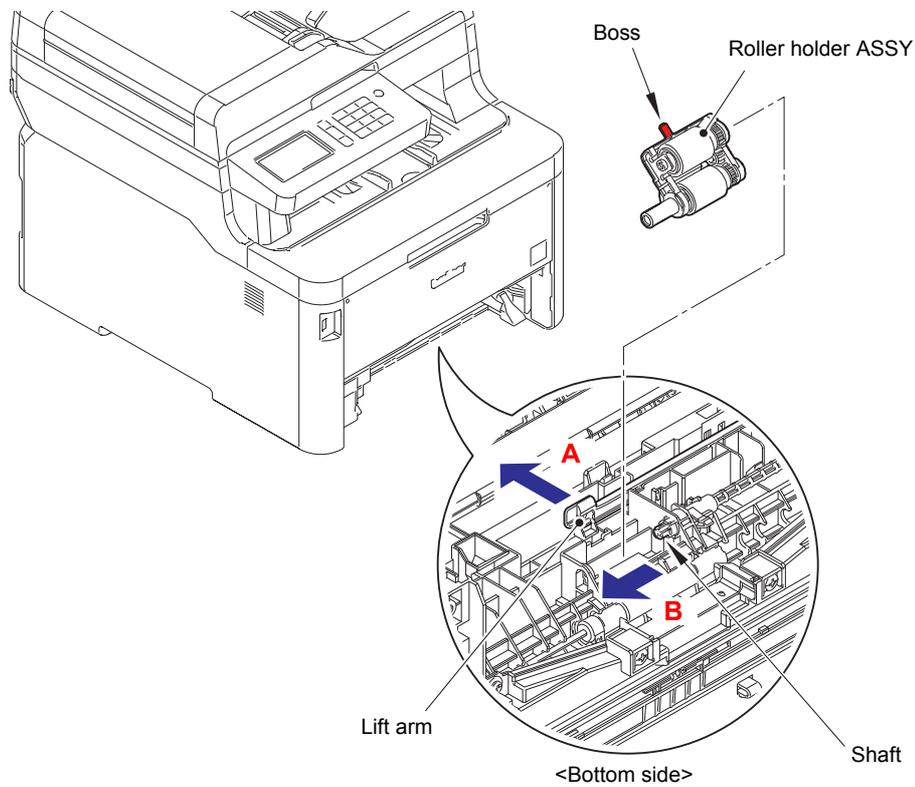


Fig. 7-14

- (5) After replacing the PF kit 1, reset the counter.
(Refer to "1.3.36 Reset counters for consumable parts (Function code 88)" in Chapter 5.)

2.4 PF kit MP

- (1) Open the Top cover and the MP cover ASSY.
- (2) Remove the two Taptite pan B M4x14 screws, and remove the MP maintenance cover from the Inner front cover.

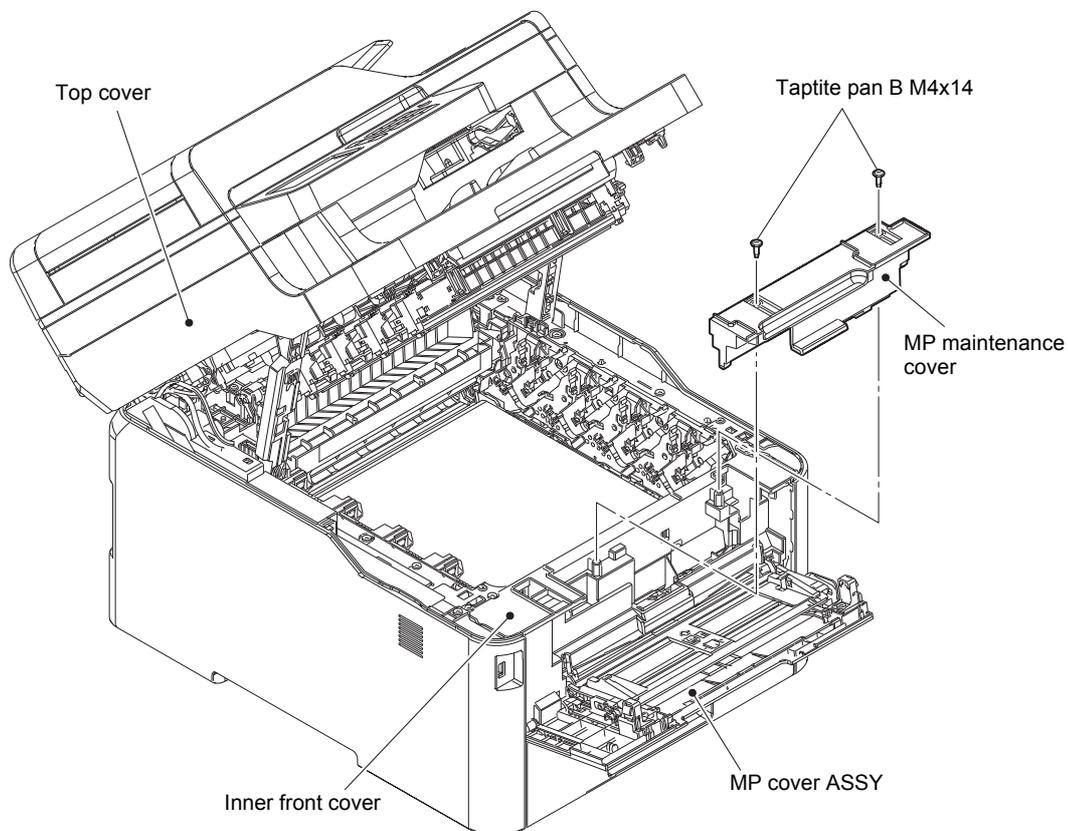


Fig. 7-15

- (3) Release the Hook, and slide the MP holder bushing in the direction of arrow A.
- (4) Slide the MP roller holder ASSY in the direction of arrow B, and rotate it in the direction of arrow C to remove it upward.

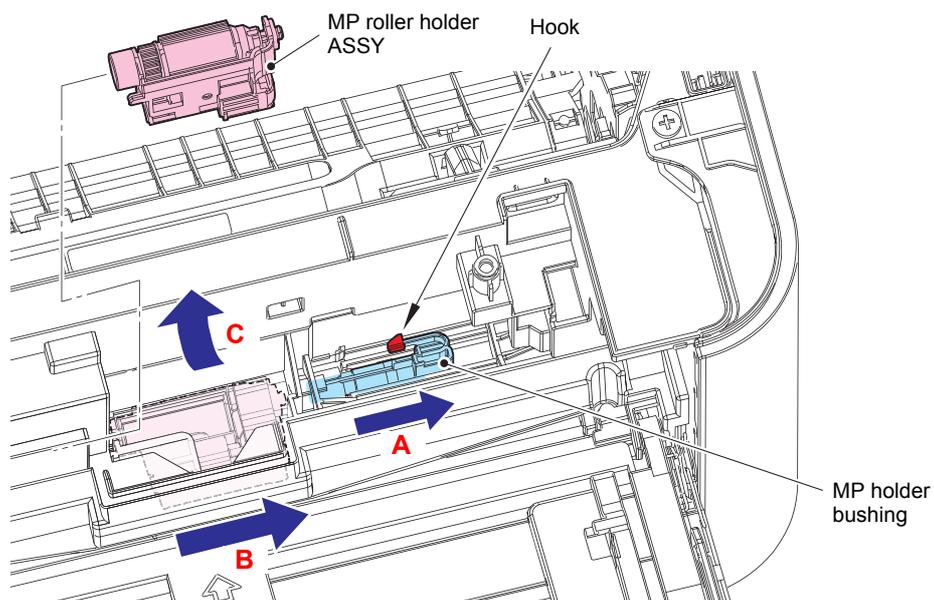


Fig. 7-16

- (5) Remove each Hook, and turn the MP separation pad ASSY upright to remove it upward.
- (6) Remove the MP separation pad spring from each Pin.

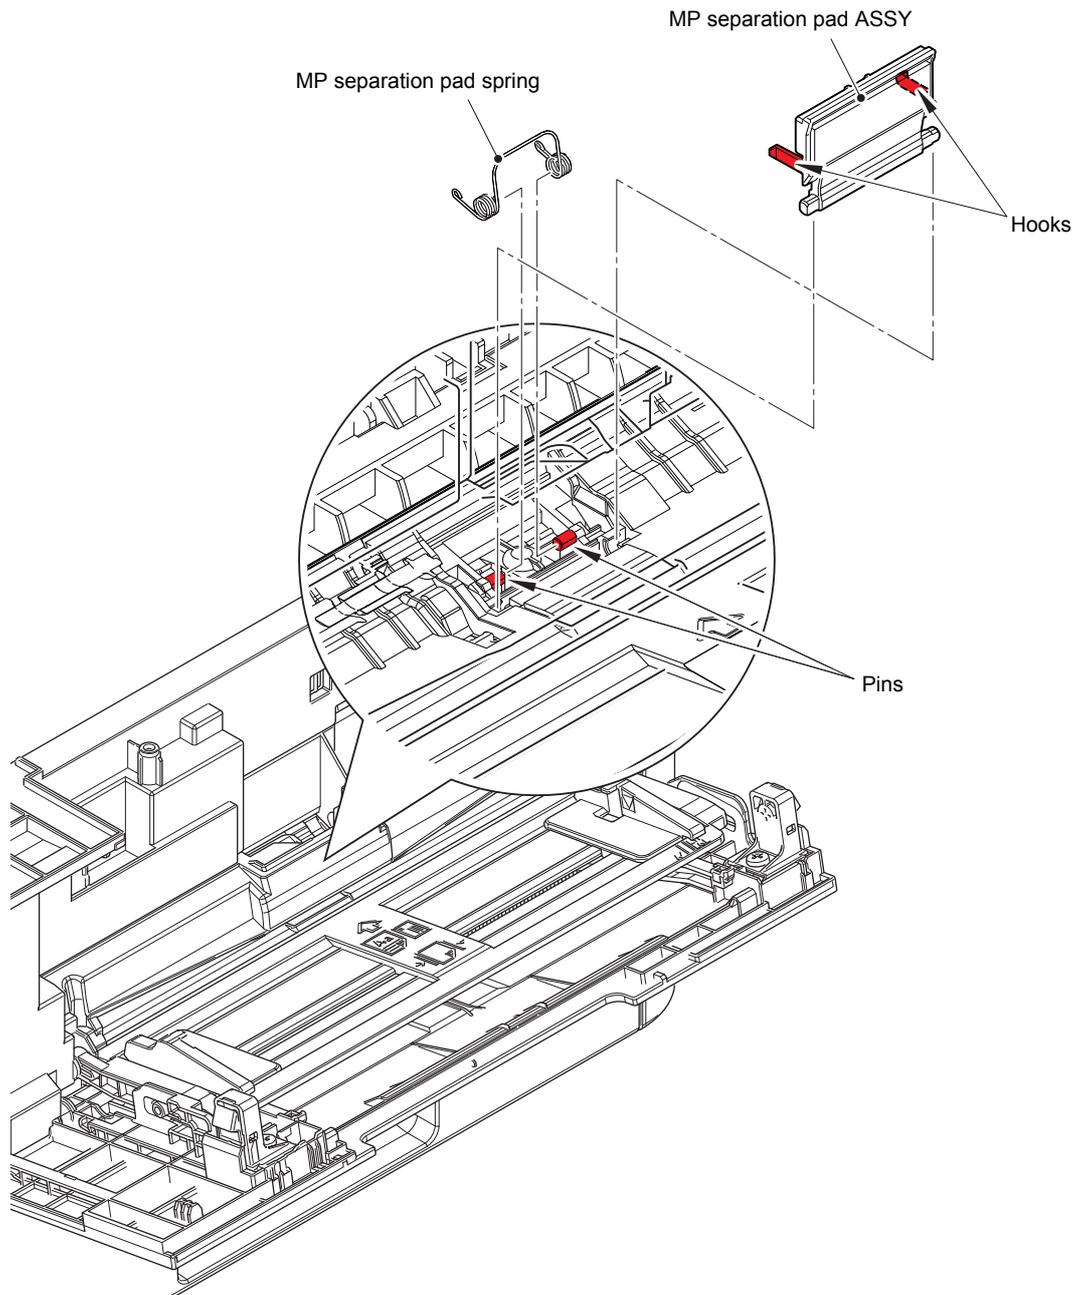


Fig. 7-17

- (7) After replacing the PF kit MP, reset the counter.
(Refer to [“1.3.36 Reset counters for consumable parts \(Function code 88\)”](#) in Chapter 5.)

APPENDIX 1 SERIAL NUMBERING SYSTEM

Serial number labels on the printer

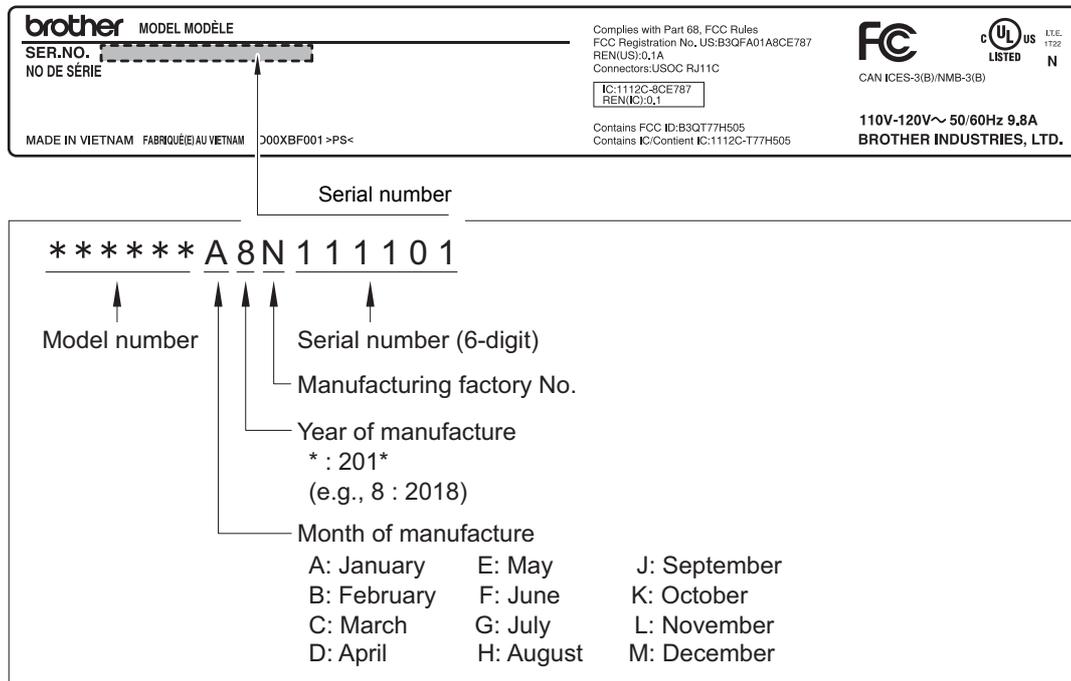


Fig. App 1-1

<Location>

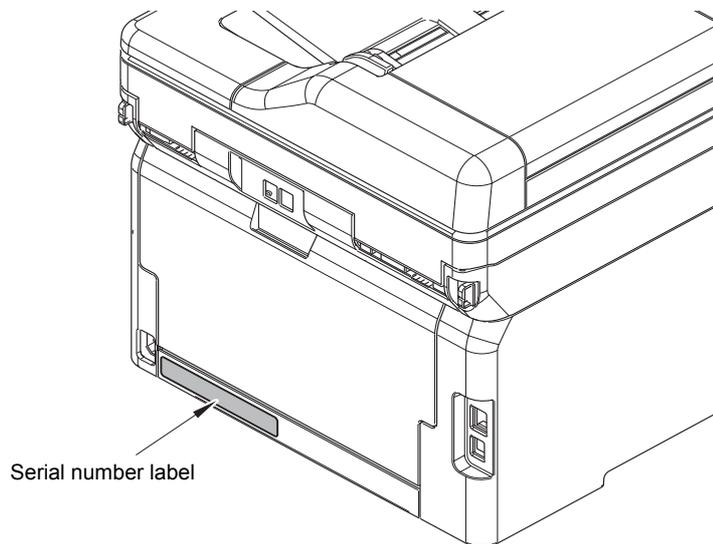


Fig. App 1-2

APPENDIX 2 DELETING USER SETTING INFORMATION

The user setting information for the machine is stored in the main PCB. You can return this to the default settings by following the procedure below.

<Operating Procedure>

HL-L3290CDW/DCP-L3551CDW (For models without touch panel)

- (1) Press the [Menu].
- (2) Press the [▲] or [▼] to display the “Initial Setup” option, and then press the [OK].
- (3) Press the [▲] or [▼] to display the “Reset” option, and then press the [OK].
- (4) Press the [▲] or [▼] to choose the type of Factory Reset you want to perform, and then press the [OK].

Note:

Subdivided reset functions are not available for some models.

- (5) Press the option in the table to reset the machine or to exit the process.

Option	Description
▲	Reset the machine.
▼	The machine will exit and cancel the reset menu.

The LCD displays “Reboot OK?”.

- (6) Press the option in the table to reboot the machine or to exit the process.

Option	Description
▲	Reboot the machine. The machine will begin the reset.
▼	The machine will exit without rebooting.

Note:

If you do not reboot your machine, the reset process will not finish and your settings will remain unchanged.

MFC-L3710CW/MFC-L3750CDW/MFC-L3770CDW (For models with touch panel)

- (1) Press the  [Settings] > [All Settings] > [Initial Setup] > [Reset] > [Factory Reset].
- (2) Swipe up or down or press the [▲] or [▼] to display the type of reset functions, and then press the reset function you want to use.

Note:

- The network settings, the security settings and address book data will not be reset by the “Machine Reset”.
- If you discard or transfer the machine, we recommend accomplishment of the “Factory Reset” to erase the personal data in the machine.

- (3) “Machine will reboot after resetting. Press [OK] for 2 seconds to confirm.” appears. Press the [OK] for two seconds to confirm.

Note:

You can also reset the Network settings by pressing the  [Settings] > [All Settings] > [Network] > [Network Reset].

The machine will restart.

APPENDIX 3 INSTALLING THE MAINTENANCE PRINTER DRIVER

To identify machines connected via USB direct interface, the computer requires the corresponding driver for the virtual USB device. If you connect any number of machines to your computer, the same number of virtual USB devices will be automatically configured on your computer. To prevent many virtual USB devices from being configured, use the unique driver installation procedure described below that enables your computer to identify terminals via one single virtual USB device.

Note:


- Once this installation procedure is carried out for a computer, no more driver/software installation will be required for that computer to identify machines. If the Brother Maintenance USB Printer driver has been already installed to your computer according to this procedure, skip this section.
- Before proceeding to the procedure given below, make sure that the Brother Maintenance USB Printer driver is stored in your computer.

■ **Windows 7/Windows 8/Windows 8.1/Windows 10**

- (1) Check that the AC cord of the machine is unplugged from the electrical outlet. Disconnect the USB cable that connects the machine with your computer.
- (2) Turn ON your computer.
- (3) Double-click Setup.exe inside the Brother Maintenance USB Printer folder that was saved in a temporary folder. The following screen appears. Click the [Next] button.



The following screen is displayed during installation.

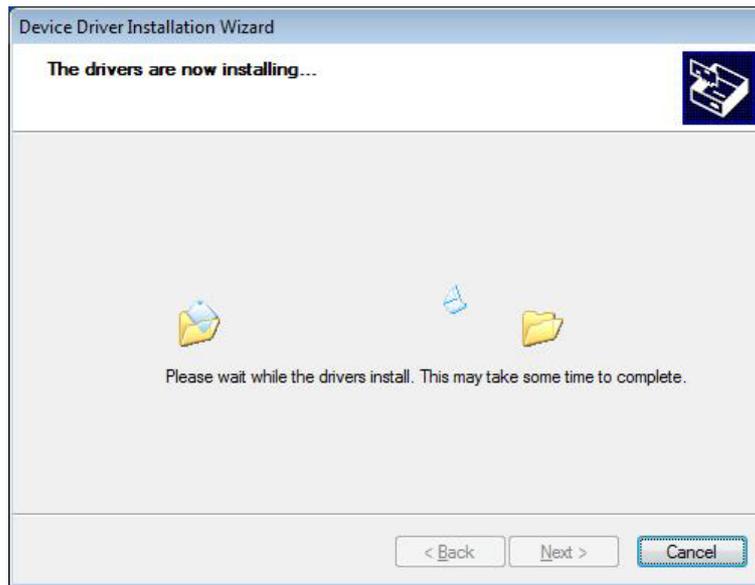

(4) Wait for the following screen to appear and click [Finish].



- (5) Plug the AC cord of the machine into an electrical outlet.
- (6) Enter the maintenance mode.
(Refer to "1.1 How to Enter Maintenance Mode" in Chapter 5.)
- (7) Connect the machine to your computer using a USB cable and the installation will be performed automatically.